Creating a Processor System Lab

Introduction

This lab introduces a design flow to generate a IP-XACT adapter from a design using Vivado HLS and using the generated IP-XACT adapter in a processor system using IP Integrator in Vivado.

Objectives

After completing this lab, you will be able to:

- Understand the steps and directives involved in creating an IP-XACT adapter from a synthesized design in Vivado HLS
- Create a processor system using IP Integrator in Vivado
- Integrate the generated IP-XACT adapter into the created processor system

The Design

The design consists of a FIR filter to filter a 4 KHz tone added to CD quality (48 KHz) music. The characteristic of the filter is as follows:

```
FS=48000 Hz

FPASS1=2000 Hz

FSTOP1=3800 Hz

FSTOP2=4200 Hz

FPASS2=6000 Hz

APASS1=APASS2=1 dB

ASTOP=60 dB
```

This lab requires you to develop a peripheral core of the designed filter that can be instantiated in a processor system. The processor system will acquire a stereo music stream using an on-board CODEC chip and I2C controller, process it through the designed filter (bandstop filter), and output back to the headphone.


Procedure

This lab is separated into steps that consist of general overview statements that provide information on the detailed instructions that follow. Follow these detailed instructions to progress through the lab.

This lab comprises 14 primary steps: You will create a new project in Vivado HLS, run simulation, synthesize the design, run RTL/C co-simulation, create a project in Project Navigator, run simulation using ISIM, setup for IP-XACT adapter in Vivado HLS, implement the design in Vivado HLS, create a processor system in Vivado using IP Integrator, create a software application in SDK, and verify the design in hardware.



General Flow for this Lab

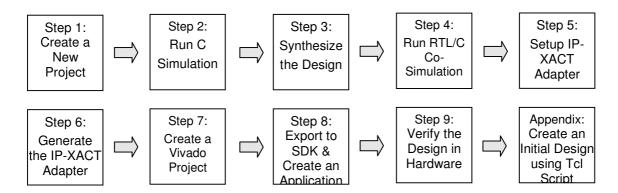

Create a New Project

Step 1

- 1-1. Create a new project in Vivado HLS targeting XC7Z020CLG484-1 (ZedBoard) or XC7Z010CLG400-1 (Zybo).
- 1-1-1. Launch Vivado HLS: Select Start > All Programs > Xilinx Design Tools > Vivado 2014.4 > Vivado HLS > Vivado HLS 2014.4

A Getting Started GUI will appear.

- **1-1-2.** In the Getting Started section, click on **Create New Project**. The New Vivado HLS Project wizard opens.
- 1-1-3. Click Browse... button of the Location field, browse to c:\xup\hls\lab4, and then click OK.
- 1-1-4. For Project Name, type fir.prj
- 1-1-5. Click Next.
- **1-1-6.** In the *Add/Remove Files* for the source files, type **fir** as the function name (the provided source file contains the function, to be synthesized, called fir).
- **1-1-7.** Click the **Add Files...** button, select *fir.c* and *fir_coef.dat* files from the **c:\xup\hls\lab\$\lab\$4** folder, and then click **Open**.
- 1-1-8. Click Next.
- **1-1-9.** In the *Add/Remove Files* for the testbench, click the **Add Files...** button, select *fir_test.c* file from the **c:\xup\hls\labs\lab4** folder and click **Open.**
- 1-1-10. Click Next.
- **1-1-11.** In the *Solution Configuration* page, leave Solution Name field as **solution1** and set the clock period as **10** (for ZedBoard) or **8** (for Zybo). Leave Uncertainty field blank as it will take 1.25 as the default value for ZedBoard and 1 for Zybo.



1-1-12. Click on Part's Browse button, and select the following filters, using the *Parts Specify* option, to select **xc7z020clg484-1** (ZedBoard) or **xc7z010clg400-1** (Zybo), and click **OK**:

Family: **Zynq**Sub-Family: **Zynq**Package: **clg484** (ZedBoard) or **clg400** (Zybo)
Speed Grade: **-1**

1-1-13. Click Finish.

You will see the created project in the Explorer view. Expand various sub-folders to see the entries under each sub-folder.

1-1-14. Double-click on the **fir.c** under the source folder to open its content in the information pane.

```
1#include "fir.h"
 2
 3 void fir (
 4 data_t *y,
 5
   data_t x
    ) {
 7
    const coef_t c[N+1]={
   #include "fir_coef.dat"
9
      };
10
11
12
   static data t shift reg[N];
13 acc_t acc;
14 int i;
15
   acc=(acc_t)shift_reg[N-1]*(acc_t)c[N];
16
17
    loop: for (i=N-1;i!=0;i--) {
      acc+=(acc_t)shift_reg[i-1]*(acc_t)c[i];
18
19
      shift_reg[i]=shift_reg[i-1];
20 }
21 acc+=(acc_t)x*(acc_t)c[0];
22 shift_reg[0]=x;
23 *y = acc >> 15;
24 }
```

Figure 1. The design under consideration

The FIR filter expects x as a sample input and pointer to the computed sample out. Both of them are defined of data type data_t. The coefficients are loaded in array c of type coef_t from the file called fir_coef.dat located in the current directory. The sequential algorithm is applied and accumulated value (sample out) is computed in variable acc of type acc_t.

1-1-15. Double-click on the fir.h in the *outline* tab to open its content in the information pane.



Figure 2. The header file

The header file includes ap_cint.h so user defined data width (of arbitrary precision) can be used. It also defines number of taps (N), number of samples to be generated (in the testbench), and data types coef_t, data_t, and acc_t. The coef_t and data_t are short (16 bits). Since the algorithm iterates (multiply and accumulate) over 59 taps, there is a possibility of bit growth of 6 bits and hence acc_t is defined as int38. Since the acc_t is bigger than sample and coefficient width, they have to cast before being used (like in lines 16, 18, and 21 of fir.c).

1-1-16. Double-click on the **fir_test.c** under the testbench folder to open its content in the information pane.

Notice that the testbench opens fir_impulse.dat in write mode, and sends an impulse (first sample being 0x8000.

Run C Simulation Step 2

- 2-1. Run C simulation to observe the expected output.
- **2-1-1.** Select **Project > Run C Simulation** or click on from the tools bar buttons, and Click **OK** in the *C Simulation Dialog* window.

The testbench will be compiled using apcc compiler and csim.exe file will be generated. The csim.exe will then be executed and the output will be displayed in the console view.



```
Starting C simulation ...
C:/Xilinx/Vivado_HLS/2014.4/bin/vivado_hls.bat C:/xup/hls/labs/lab4/fir.prj/solution1/csim.tcl
@I [LIC-101] Checked out feature [HLS]
@I [HLS-10] Running 'C:/Xilinx/Vivado_HLS/2014.4/bin/unwrapped/win64.o/vivado_hls.exe'
           for user 'parimalp' on host 'xsjparimalp30' (Windows NT_amd64 version 6.1) on Wed :
           in directory 'C:/xup/hls/labs/lab4'
@I [HLS-10] Opening project 'C:/xup/hls/labs/lab4/fir.prj'.
@I [HLS-10] Opening solution 'C:/xup/hls/labs/lab4/fir.prj/solution1'.
@I [SYN-201] Setting up clock 'default' with a period of 8ns.
@I [LIC-101] Checked out feature [HLS]
@I [HLS-10] Setting target device to 'xc7z010clg400-1'
  Compiling(apcc) ../../../fir_test.c in debug mode
@I [LIC-101] Checked out feature [HLS]
@I [HLS-10] Running 'c:/Xilinx/Vivado_HLS/2014.4/bin/unwrapped/win64.o/apcc.exe'
            for user 'parimalp' on host 'xsjparimalp30' (Windows NT_amd64 version 6.1) on Wed :
            in directory 'C:/xup/hls/labs/lab4/fir.prj/solution1/csim/build'
@I [APCC-3] Tmp directory is apcc_db
@I [LIC-101] Checked in feature [VIVADO_HLS]
   Generating csim.exe
0 -32768 378
1 0 73
2 0 -27
3 0 -170
4 0 -298
5 0 -352
6 0 -302
7 0 -168
8 0 -14
9 0 80
10 0 64
11 0 -53
12 0 -186
13 0 -216
14 0 -40
15 0 356
16 0 867
17 0 1283
18 0 1366
```

Figure 3. Initial part of the generated output in the Console view

You should see the filter coefficients being computed.

Synthesize the Design

Step 3

- 3-1. Synthesize the design with the defaults. View the synthesis results and answer the question listed in the detailed section of this step.
- **3-1-1.** Select **Solution > Run C Synthesis > Active Solution** to start the synthesis process.
- 3-1-2. When synthesis is completed, several report files will become accessible and the Synthesis Results will be displayed in the information pane.



- **3-1-3.** The Synthesis Report shows the performance and resource estimates as well as estimated latency in the design.
- **3-1-4.** Using scroll bar on the right, scroll down into the report and answer the following question.

Question 1

Estimated clock period:	
Worst case latency:	
Number of DSP48E used:	
Number of BRAMs used:	
Number of FFs used:	
Number of LUTs used:	

3-1-5. The report also shows the top-level interface signals generated by the tools.

nterrace						
∃ Summary						
RTL Ports	Dir	Bits	Protocol	Source Object	C Type	
ap_clk	in	1	ap_ctrl_hs	fir	return value	
ap_rst	in	1	ap_ctrl_hs	fir	return value	
ap_start	in	1	ap_ctrl_hs	fir	return value	
ap_done	out	1	ap_ctrl_hs	fir	return value	
ap_idle	out	1	ap_ctrl_hs	fir	return value	
ap_ready	out	1	ap_ctrl_hs	fir	return value	
у	out	16	ap_vld	у	pointer	
y_ap_vld	out	1	ap_vld	у	pointer	
Х	in	16	ap_none	х	scalar	

Figure 4. Generated interface signals

You can see the design expects x input as 16-bit scalar and outputs y via pointer of the 16-bit data. It also has ap_vld signal to indicate when the result is valid.

- 3-2. Add PIPELINE directive to loop and re-synthesize the design. View the synthesis results.
- **3-2-1.** Make sure that the **fir.c** is open in the information view.
- **3-2-2.** Select the **Directive** tab, and apply the **PIPELINE** directive to the **loop**.
- **3-2-3.** Select **Solution > Run C Synthesis > Active Solution** to start the synthesis process.
- **3-2-4.** When synthesis is completed, the Synthesis Results will be displayed in the information pane.



3-2-5. Note that the latency has reduced to 63 clock cycles. The DSP48 and BRAM consumption remains same; however, LUT and FF consumptions have slightly increased.

Run RTL/C CoSimulation

Step 4

- Run the RTL/C Co-simulation, selecting SystemC and skipping VHDL and Verilog. Verify that the simulation passes.
- **4-1-1.** Select **Solution** \rightarrow **Run C/RTL Cosimulation** or click on the \square button to open the dialog box so the desired simulations can be run.

A C/RTL Co-simulation Dialog box will open.

4-1-2. Select the *SystemC* option and click **OK**.

The Co-simulation will run, generating and compiling several files, and then simulating the design. In the console window you can see the progress. When done the RTL Simulation Report shows that it was successful and the latency reported was 63.

Setup IP-XACT Adapter

Step 5

- 5-1. Add RESOURCE directives to create AXI4LiteS adapters so IP-XACT adapter can be generated during the RTL Export step.
- **5-1-1.** Make sure that **fir.c** file is open and in focus in the information view.
- **5-1-2.** Select the **Directive** tab.
- **5-1-3.** Right-click **x**, and click on **Insert Directive...**.
- **5-1-4.** In the **Vivado HLS Directive Editor** dialog box, select *INTERFACE* using the drop-down button.
- **5-1-5.** Click on the button beside *mode (optional)*. Select **s axilite.**
- **5-1-6.** In the *bundle (optional)* field, enter **fir io** and click **OK**.



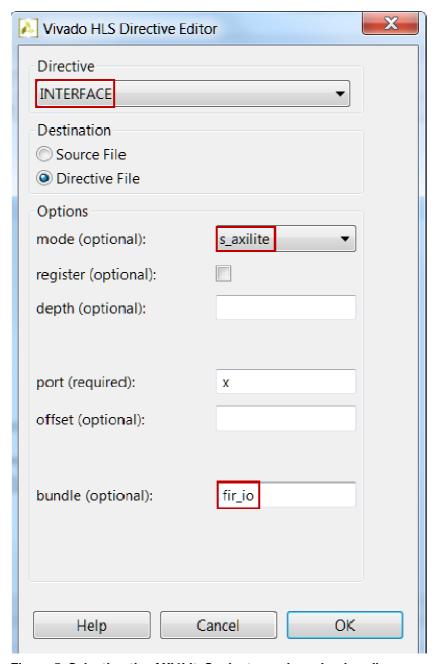


Figure 5. Selecting the AXI4LiteS adapter and naming bundle

5-1-7. Similarly, apply the **INTERFACE** directive (including bundle) to the **y** output.

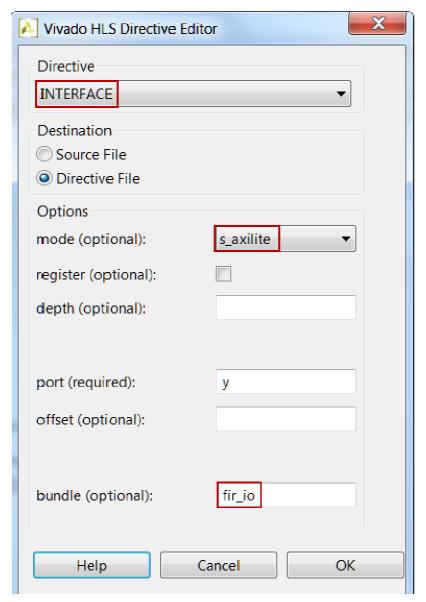


Figure 6. Applying bundle to assign y output to AXI4Lite adapter

5-1-8. Apply the **INTERFACE** directive to the top-level module **fir** to include ap_start, ap_done, and ap_idle signals as part of bus adapter (the variable name shown will be **return**). Include the bundle information too.



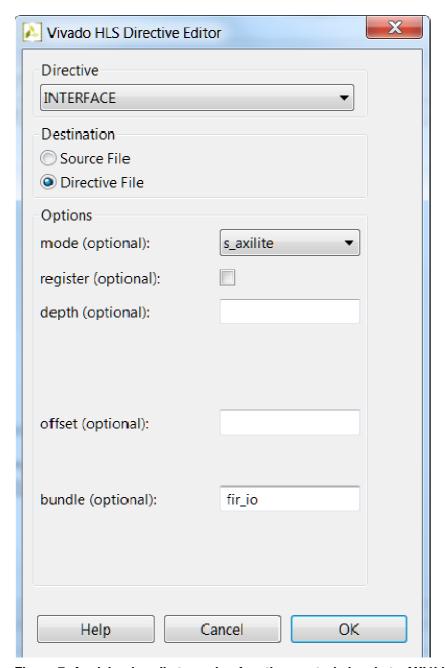


Figure 7. Applying bundle to assign function control signals to AXI4Lite adapter

Note that the above steps 5-1-3 through 5-1-8 will create address maps for x, y, ap_start ap_valid, ap_done, and ap_idle, which can be accessed via software. Alternately, ap_start, ap_valid, ap_done, ap_idle signals can be generated as separate ports on the core by not applying RESOURCE directive to the top-level module fir. These ports will then have to be connected in a processor system using available GPIO IP.

Generate IP-XACT Adapter

Step 6

- 6-1. Re-synthesize the design as directives have been added. Run the RTL Export to generate the IP-XACT adapter.
- **6-1-1.** Since the directives have been added, it is safe to re-synthesize the design. Select **Solution** > **Run C Synthesis** > **Active Solution**.
- **6-1-2.** Once the design is synthesized, select **Solution > Export RTL** to open the dialog box so the desired IP can be generated.

An Export RTL Dialog box will open.

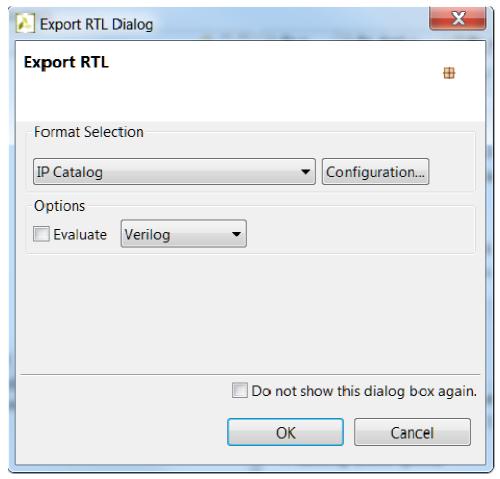


Figure 8. Export RTL Dialog

- **6-1-3.** Click **OK** to generate the IP-XACT adapter.
- **6-1-4.** When the run is completed, expand the **impl** folder in the *Explorer* view and observe various generated directories; ip, verilog and vhdl.





Figure 9. IP-XACT adapter generated

Expand the ip directory and observe several files and sub-directories. One of the sub-directory of interest is drivers directory which consists of header, c, tcl, mdd, and makefile files. Another file of interest is the zip file, which is the ip repository file that can be imported in an IP Integrator design

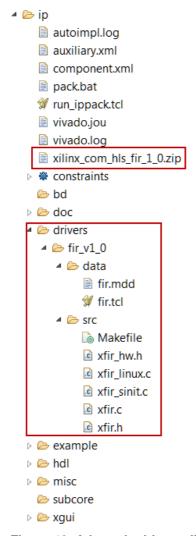


Figure 10. Adapter's drivers directory

6-1-5. Close Vivado HLS by selecting **File > Exit.**

Create a Vivado Project

Step 7

7-1. Launch Vivado Tcl Shell and run the provided tcl script to create an initial system targeting either the Zedboard (having xc7z020clg484-1 device) or Zybo (having xc7z010clg400-1 device).

If you want to create the system from scratch then follow the steps provided in Appendix and then continue from step 7-2 below.

- 7-1-1. Open Vivado Tcl Shell by selecting Start > All Programs > Xilinx Design Tools > Vivado 2014.4 > Vivado 2014.4 Tcl Shell
- 7-1-2. In the shell window, change the directory to c:/xup/hls/labs/lab4 using the cd account.
- **7-1-3.** The path for where to find the IP repository must modified if you have chosen another path to unzip the lab exercise. **Open zybo_audio_project_create.tcl or zed_audio_project_create.tcl** (**ZedBoard**) with a text editor and change the line below.

set property ip repo paths C:/xup/hls/labs/lab4/ip_repo [current project]

7-1-4. Run the provided script file to create an initial system having zed_audio_ctrl and GPIO peripherals by typing the following command:

source zed_audio_project_create.tcl for ZedBoard or

source zybo_audio_project_create.tcl for Zybo

The script will be run and the initial system, shown below, will be created.

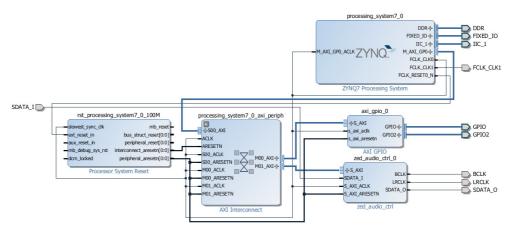


Figure 11. Block design having zed_audio_ctrl and connections made for ZedBoard



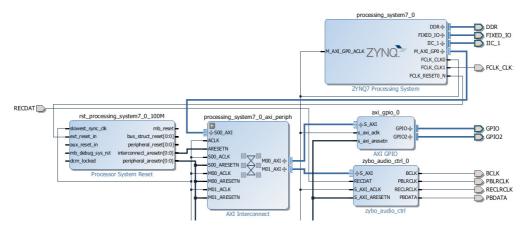


Figure 11. Block design having zybo_audio_ctrl and connections made for Zybo

7-2. Add the HLS IP to the IP Catalog

- **7-2-1.** In the *Flow Navigator* pane, click **Project Settings** under *Project Manager*.
- 7-2-2. Click the IP icon.
- **7-2-3.** Click the **Add Repository...** button. Browse to **c:\xup\hls\labs\lab4\fir.prj\solution1\impl\ip** and click **Select**.

The directory will be scanned and added in the *IP Repositories* window, and *Fir IP* entry will be displayed in the *IP in Selected Repository* window.

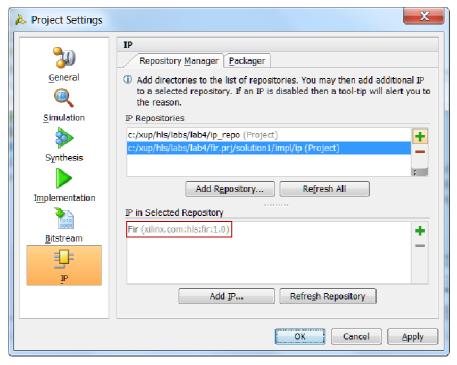



Figure 12. Setting path to IP Repositories

7-2-4. Click **OK** to accept the settings.




- 7-3. Instantiate fir_top core twice, one for each side channel, into the processing system naming the instances as fir_left and fir_right.
- **7-3-1.** Click the Add IP icon is and search for **FIR** in the catalog by typing **FIR** and double-click on the *FIR* entry to add an instance.
- 7-3-2. Click on the Add IP to Block Design button if presented.
 - Notice that the added IP has HLS logo in it indicating that this was created by Vivado HLS.
- **7-3-3.** Select the added instance in the diagram, and change its instance name to **fir_left** by typing it in the *Name* field of the *Block Properties* form in the left.
- **7-3-4.** Similarly, add another instance of the HLS IP, and name it **fir right**.
- 7-3-5. Click on Run Connection Automation, and select /fir left/s axi fir io and click OK.
- **7-3-6.** Similarly, click on **Run Connection Automation** again, and select /**fir_right**/ **s_axi_fir_io** and click **OK**.
- 7-4. Enable the PS-PL Interrupt ports > IRQ_F2P ports. Add an instance of concat IP with two single-bit input ports. Connect input ports to the interrupt ports of the two FIR instances and the output port to the IRQ_F2P port of the processing_system7_0 instance.
- **7-4-1.** Double-click on the *processing_system7_0* instance to open the re-customization form.
- 7-4-2. Select the *Interrupt* in the left pane, click on the *Fabric Interrupts* check box in the right.
- **7-4-3.** Expand *the Fabric Interrupts > PL-PS Interrupt Ports > IRQ_F2P* entry in the right, and click the check-box of *IRQ_F2P*[15:0].
- 7-4-4. Click OK.
- **7-4-5.** Add an instance of the *concat* IP.
- **7-4-6.** Connect the *interrupt* port of each of the FIR instances to the two input ports of the *xlconcat_0* instance.
- **7-4-7.** Connect the output port of the *xlconcat_0* instance to the IRQ_F2P port of the *processing_system7_0* instance.
 - At this stage the design should look like shown below (you may have to click the regenerate button).



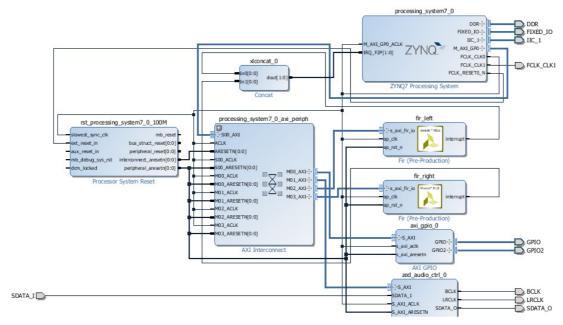

(a) ZedBoard

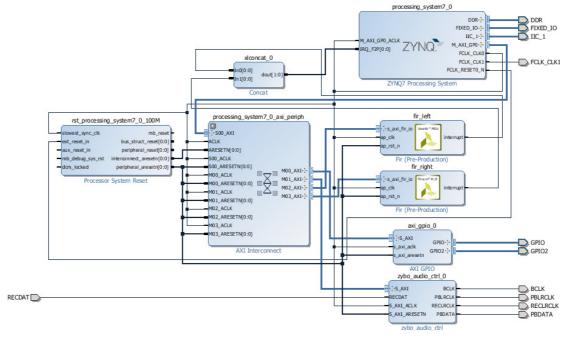


(b) Zybo


Figure 13. The complete hardware design

- 7-5. Verify addresses and validate the design. Generate the system_wrapper file, and add the provided Xilinx Design Contraints (XDC).
- 7-5-1. Click on the Address Editor, and expand the processing_system7_0 > Data if necessary.

The generated address map should look like as shown below.

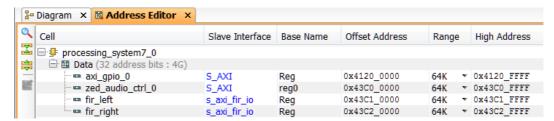

(a) ZedBoard

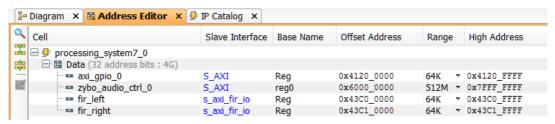

(b) Zybo

Figure 14. Generated address map

- 7-5-2. Run Design Validation (Tools > Validate Design) and verify there are no errors
- **7-5-3.** In the *sources* view, right-click on the block diagram file, **system.bd**, and select **Create HDL Wrapper** to update the HDL wrapper file. When prompted, click **OK** with the *Let Vivado manage wrapper and auto-update* option.
- **7-5-4.** Click **Add Sources** in the *Flow Navigator* pane, select **Add or Create Constraints**, and click **Next**.
- 7-5-5. Click the Add Files button, browse to the c:\xup\hls\labs\lab4 folder, select zed_audio_constraints.xdc or zybo_audio_constraints.xdc
- 7-5-6. Click Finish to add the file.
- **7-5-7.** Click on the **Generate Bitstream** in the Flow Navigator to run the synthesis, implementation, and bitstream generation processes.
- 7-5-8. Click Save and Yes if prompted.
- **7-5-9.** When the bit generation is completed, a selection box will be displayed with Open Implemented Design option selected. Click **Cancel**.



Export to SDK and create Application Project

Step 8

- 8-1. Export the hardware along with the generated bitstream to SDK.
- 8-1-1. Select File > Export > Export Hardware...
- **8-1-2.** Make sure that **Include Bitstream** option is selected and click **OK**, leaving the target directory set to local project directory.
- 8-1-3. Select File > Launch SDK
- 8-1-4. Click OK.
- 8-1-5. In SDK, select File > New > Board Support Package.
- **8-1-6.** Click **Finish** with the default settings (with standalone operating system).

This will open the Software Platform Settings form showing the OS and libraries selections.

8-1-7. Click **OK** to accept the default settings, as we want to create a **standalone_bsp_0** software platform project without requiring any additional libraries support.

- 8-1-8. Select File > New > Application Project.
- **8-1-9.** Enter **TestApp** as the *Project Name*, and for *Board Support Package*, choose **Use Existing** (*standalone_bsp* should be the only option)
- 8-1-10. Click Next, and select Empty Application and click Finish
- **8-1-11.** Select **TestApp** in the project view, right-click the *src* folder, and select **Import**.
- 8-1-12. Expand General category and double-click on File System.
- 8-1-13. Browse to c:\xup\hls\labs\lab4 folder and click OK
- **8-1-14.** Select both **zed_testapp.c** and **zed_audio.h** for ZedBoard or **zybo_testapp.c** and **zybo_audio.h** for Zybo and click **Finish** to add the file to the project.

The program should compile successfully.



Verify the Design in Hardware

Step 9

9-1. Zybo: Make sure that the JP7 is set to select USB power.

Connect a micro-usb cable between a PC and the JTAG port of the board. Connect an audio patch cable between the Line In jack and the speaker (headphone) out jack of a PC. Connect a headphone to the Line Out jack (ZedBoard) or HPH OUT (Zybo) on the board. Power ON the board.

- **9-1-1. Zybo only:** Make sure that the JP7 is set to select USB power.
- **9-1-2.** Connect a micro-usb cable between a PC and the JTAG port of the board.
- **9-1-3.** Connect an audio patch cable between the Line In jack and the speaker (headphone) out jack of a PC.
- **9-1-4.** Connect a headphone to the Line Out jack on ZedBoard or HPH Out jack on Zybo board. Power ON the board.
- 9-1-5. Select Xilinx Tools > Program FPGA.
- 9-1-6. Make sure that the system_wrapper.bit bitstream is selected and the BMM file field is blank.
- 9-1-7. Click Program.

This will configure the FPGA.

- **9-1-8.** Double-click **corrupted_music_4KHz.wav** or some other wave file of interest to play it using the installed media player. Place it in the continuous play mode.
- **9-1-9.** Right-click on the *TestApp* in the Project Explorer pane and select **Run As > Launch On Hardware (GDB)**.

The program will be downloaded and run. If you want to listen to corrupted signal then set the SW0 OFF. To listened the filtered signal set the SW0 ON.

9-1-10. When done, terminate the program by clicking the Terminate (Red square) button in the Console tab of the SDK. power OFF the board, and exit SDK and Vivado using **File > Exit**.



Conclusion

In this lab, you added RESOURCE directive to create an IP-XACT adapter. You generated the IP-XACT adapter during the implementation phase. You then created a processor system using IP Integrator, integrated the generated IP-XACT adapter, and tested the system with the provided application.

Answers

1. Answer the following questions:

Estimated clock period:	7.95 ns (ZedBoard) 6.38 ns (Zybo)		
Worst case latency:	174 clock cycles (ZedBoard) 175 clock cycles (Zybo)		
Number of DSP48E used:	3		
Number of BRAMs used:	0		
Number of FFs used:	90 168 (Zybo)		
Number of LUTs used:	77		

Appendix

Create a Project using Vivado GUI

Step 10

- 10-1. Launch Vivado and create an empty project targeting the Zedboard (having xc7z020clg484-1 device) or Zybo (having xc7z010clg400-1 device) and using the Verilog language.
- 10-1-1. Open Vivado by selecting Start > All Programs > Xilinx Design Tools > Vivado 2014.4 > Vivado 2014.4
- **10-1-2.** Click **Create New Project** to start the wizard. You will see the *Create a New Vivado Project* dialog box. Click **Next**.
- **10-1-3.** Click the Browse button of the *Project Location* field of the **New Project** form, browse to **c:\xup\hls\labs\lab4**, and click **Select**.
- **10-1-4.** Enter **audio** in the *Project Name* field. Make sure that the *Create Project Subdirectory* box is checked. Click **Next**.



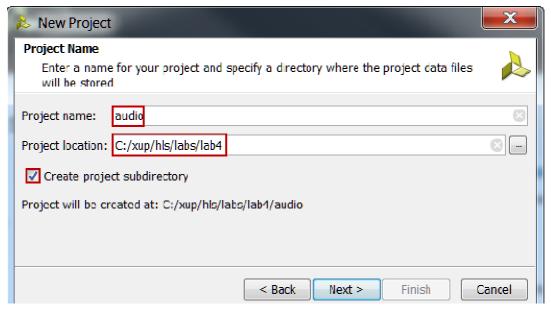


Figure A-1. Project Name entry

- **10-1-5.** Select **RTL Project** in the *Project Type* form, and click **Next**.
- **10-1-6.** Select **Verilog** as the *Target language* and *Simulator Language* in the *Add Sources* form, and click **Next**.

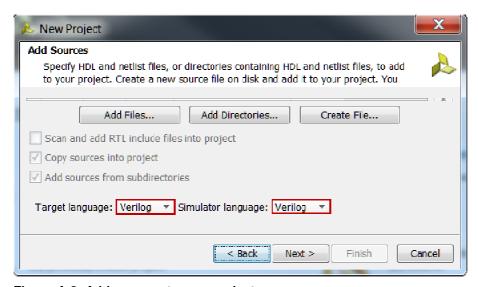


Figure A-2. Add sources to new project

- 10-1-7. Click Next two times to skip Adding Existing IP and Add Constraints dialog boxes
- **10-1-8.** In the *Default Part* form, select *Boards*, and either select **Zedboard Zynq Evaluation and Development Kit** or **Zybo**. Click **Next**.

If you don't see Zybo entry and wants to target Zybo board then please read readme_zybo.docx file and install the zybo board files in the Vivado installation directory.



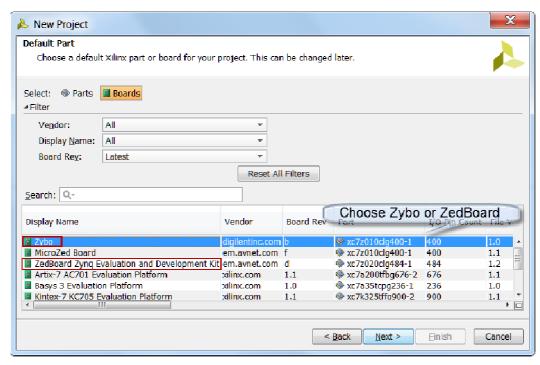


Figure A-3. Boards and Parts selection

10-1-9. Check the *Project Summary* and click **Finish** to create an empty Vivado project.

Creating the System Using the IP Integrator

Step 12

- 11-1. Use the IP Integrator to create a new Block Design, and generate the ARM Cortex-A9 processor based hardware system.
- 11-1-1. In the Flow Navigator, click Create Block Design under IP Integrator

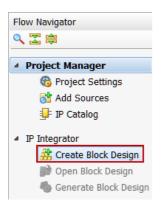


Figure A-4. Create IP Integrator Block Diagram

11-1-2. Enter system for the design name and click OK



- 11-1-3. IP from the catalog can be added in different ways. Click on <u>Add IP</u> in the message at the top of the *Diagram* panel, or click the *Add IP icon* in the block diagram side bar, press Ctrl + I, or right-click anywhere in the Diagram workspace and select Add IP.
- **11-1-4.** Once the IP Catalog is open, type "zy" into the Search bar, find and double click on **ZYNQ7 Processing System** entry, or click on the entry and hit the Enter key to add it to the design.

The Zyng block will be added.

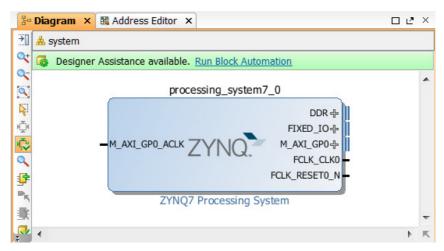


Figure A-5. The Zynq IP Block

- 11-1-5. Notice the message at the top of the Diagram window that Designer Assistance available. Click on Run Block Automation and select /processing system7 0
- 11-1-6. Click **OK** when prompted to run automation.

Notice that external ports have been automatically added for the DDR and Fixed IO once Block Automation has been complete; some of the other default ports are also added to the block.

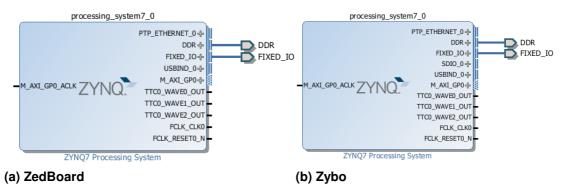


Figure A-6. Zyng Block with DDR and Fixed IO ports


11-1-7. In the block diagram, double click on the *Zynq* block to open the *Customization* window for the Zynq processing system.

A block diagram of the Zynq should now be open, showing various configurable blocks of the Processing System.




At this stage, the designer can click on various configurable blocks (highlighted in green) and change the system configuration.

- 11-2. Configure I/O Peripherals block to use UART 1 and I2C 1 peripherals, disabling other unwanted peripherals. Uncheck Timer 0. Enable FCLK_CLK1, the PL fabric clock and set its frequency either to 10.000 MHz for the ZedBoard or to 12.288 MHz for the Zybo.
- **11-2-1.** Select the *MIO Configuration* tab on the left to open the configuration form and expand *I/O Peripheral* in the right pane.
- **11-2-2.** Click on the check box of the *I2C 1* peripheral. Uncheck *USB0, SD 0, ENET 0, GPIO > GPIO MIO* as we don't need them.
- **11-2-3.** Expand the *Application Processing Unit* group in the Select the *MIO Configuration* tab and *uncheck* the **Timer 0**.
- **11-2-4.** Select the *Clock Configuration* in the left pane, expand *the PL Fabric Clocks* entry in the right, and click the check-box of *FCLK CLK1*.
- **11-2-5.** Change the *Requested Frequency* value of *FCLK_CLK1* to **10.000** MHz for the ZedBoard or **12.288** MHz for the Zybo.

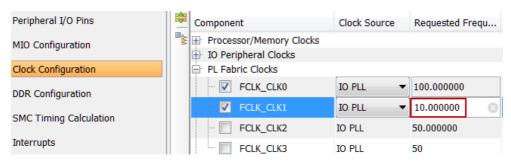

(a) ZedBoard

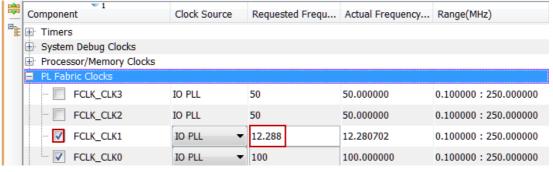

(b) Zybo

Figure A-7. Enabling and setting the frequency of FCLK CLK1

11-2-6. Click OK.



Notice that the Zynq block only shows the necessary ports.

11-3. Add the provided I2C-based either zed_audio_ctrl IP for the ZedBoard or zybo_audio_ctrl IP for the Zybo to the IP Catalog

11-3-1. In the Flow Navigator pane, click IP Catalog under Project Manager.

The IP Catalog will open.

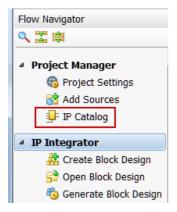


Figure A-8. Invoking IP Catalog

11-3-2. Click on the IP Settings button in the IP Catalog.

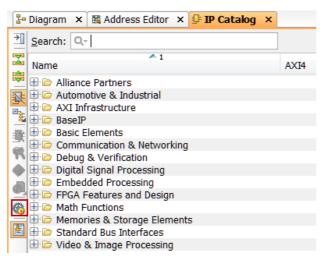


Figure A-9. Invoking IP Settings

11-3-3. Click on the Add Repository... button. Browse to c:\xup\hls\labs\lab4\ip_repo directory, and click Select.

Notice that the *zed_audio_ctrl* and the *zybo_audio_ctrl* entries are displayed in the *IP in Selected Repository* field.



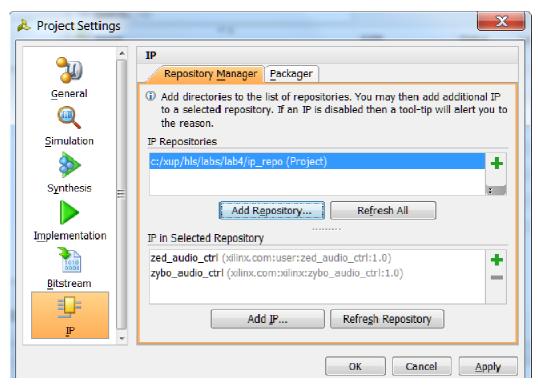


Figure A-10. Adding IP repository for the provided I2C based cores

- 11-3-4. Click **OK** to accept the settings.
- 11-4. ZedBoard: Instantiate zed_audio_ctrl and GPIO with width of 2 bits on channel 1 and width of 1 bit input only on channel 2.

Zybo: Instantiate zybo_audio_ctrl and GPIO with width of 1 bit output only on channel 1 and width of 1 bit input only on channel 2.

Run connection automation to connect them.

- 11-4-1. Click the Add IP button if the IP Catalog is not open and search for **AXI GPIO** in the catalog by typing **gpi** and double-click on the AXI GPIO entry to add an instance.
- 11-4-2. Click on the Add IP to Block Design button.
- 11-4-3. Double-click on the added instance and the **Re-Customize IP** GUI will be displayed.
- **11-4-4.** Change the *Channel 1* width to **2** for the ZedBoard or width of **1 output only** for the Zybo.
- 11-4-5. Check the *Enable Dual Channel* box, set the width to 1 input only, and click **OK**.
- **11-4-6.** Similarly add an instance of either the *zed_audio_ctrl* for the ZedBoard or the the *zybo_audio_ctrl* for the Zybo.



- 11-4-7. Notice that *Design assistance* is available. Click on **Run Connection Automation**, and select /axi gpio 0/S AXI
- 11-4-8. Click OK to connect it to the M AXI GP0 interface.

Notice two additional blocks, *Proc Sys Reset*, and *AXI Interconnect* have automatically been added to the design.

- 11-4-9. Similarly, click on Run Connection Automation, and select either /zed_audio_ctrl_0/S_AXI for the ZedBoard or the /zybo audio ctrl 0/S AXI for the Zybo and click OK.
- 11-5. Make IIC_1, GPIO, FCLK_CLK1, and either zed_audio_ctrl or zybo_audio_ctrl ports external.
- **11-5-1.** Select the **GPIO** interface of the *axi_gpio_0* instance, right-click on it and select **Make External** to create an external port. This will create the external port named *GPIO* and connect it to the peripheral.
- **11-5-2.** Select the **GPIO2** interface of the *axi_gpio_0* instance, right-click on it and select **Make External** to create the external port.
- **11-5-3.** Similarly, selecting one port at a time either of the *zed_audio_ctrl_0* instance or the *zybo audio ctrl_0* instance, make them external.
- **11-5-4.** Similarly, make the **IIC_1** interface and **FCLK_CLK1** port of the *processing_system7_0* instance external.

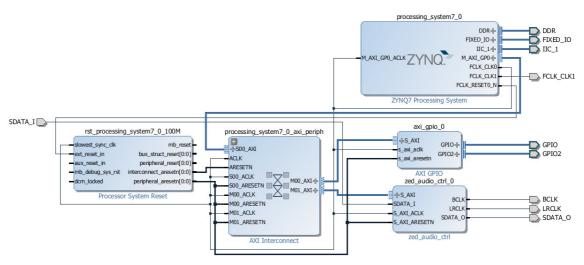


Figure A-11. Block design after I2C based zed_audio_ctrl core added and connections made for the ZedBoard



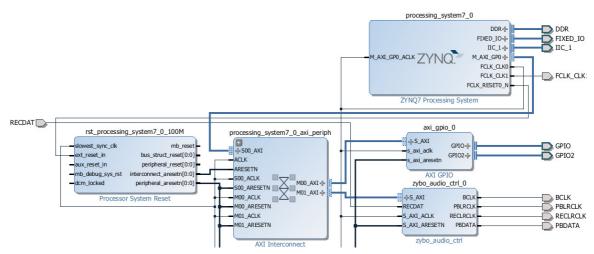


Figure A-11. Block design after I2C based zybo_audio_ctrl core added and connections made for the Zybo