

Cessna
A Textron Company

CITATION X

Illustrated normal checklist

Before Start to Shutdown

ENGINE START

- **BEFORE START** — 20 items · page 2
- **APU START** — 14 items · page 6
- **STARTING ENGINES** — 22 items · page 8
- **CROSS BLEED** — 14 items · page 12

DEPARTURE

- **BEFORE TAXI** — 12 items · page 15
- **TAXI** — 7 items · page 18
- **BEFORE TAKEOFF** — 18 items · page 19
- **TAKEOFF** — 4 items · page 23

IN FLIGHT

- **AFTER TAKEOFF** — 10 items · page 24
- **CRUISE** — 3 items · page 26
- **DESCENT** — 7 items · page 27
- **APPROACH** — 13 items · page 28

ARRIVAL

- **BEFORE LANDING** — 6 items · page 30
- **LANDING** — 6 items · page 31
- **SHUTDOWN** — 13 items · page 32

All 169 items of the FlightFX Citation X Full Checklist, with photos from the cockpit.

CREATED BY

Kazber

FlightFX Citation X · Microsoft Flight Simulator 2024

For simulator use only. Not for real-world use.

Power up





CHECKLIST · BEFORE START — ITEM · RESPONSE · HOW

1 **STBY PWR Switch** ..... **ON**
Bottom right of the DC POWER panel: switch UP.


2 **EMERG LT Switch** ..... **ARM**
Left side panel, LIGHTS: set the EMERG LT switch to ARM.


3 **BATT 1 and BATT 2 Switches** ..... **ON**
Both switches UP.

4 **EICAS POWER Switch** ..... **ON**
Right-hand switch under AVIONICS POWER: UP. This powers the engine display.

APU, avionics, IRS, FMS



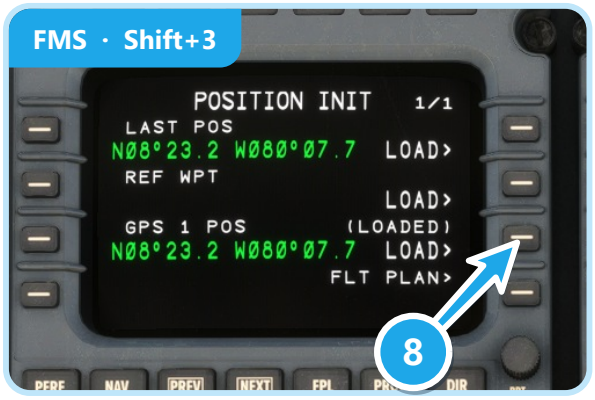

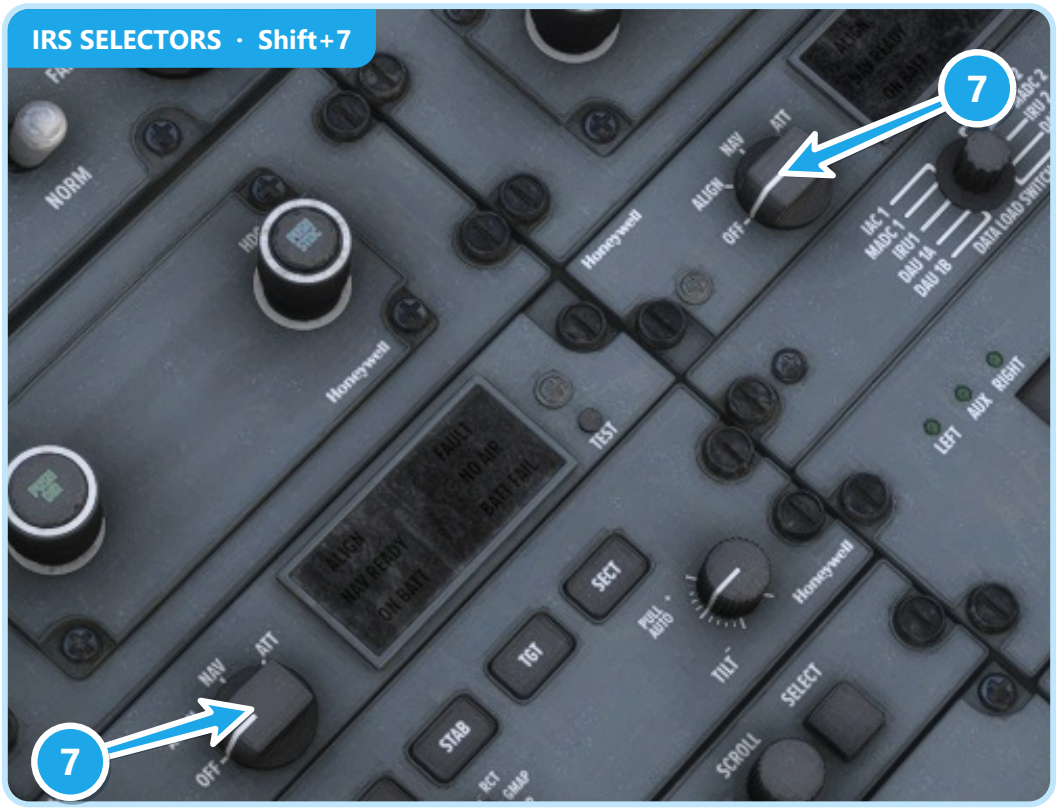

CHECKLIST · BEFORE START — ITEM · RESPONSE · HOW

5 APU START ..... **REFER TO APU START CHECKLIST**
Start the APU now: see the APU START pages.

6 AVIONICS POWER Switch ..... **ON**
Left-hand switch under AVIONICS POWER: UP. The flight displays come on.

7 IRS ..... **ALIGN / NAV**
Both IRS selectors behind the throttles to NAV. Stay parked while they align.


8 FMS ..... **INSERT PRESENT POSITION**
NAV IDENT page: right key 4 opens POSITION INIT. When GPS 1 POS shows, press right key 3 (LOAD).

Parking brake, doors, cabin

TABLET · Ground page



PARKING BRAKE · Shift+7

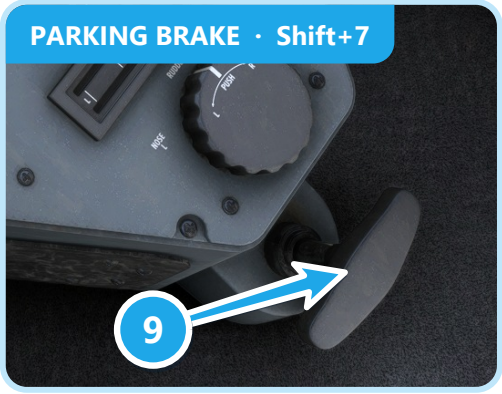

BEACON + NAV · Shift+5



CHECKLIST · BEFORE START — ITEM · RESPONSE · HOW

9 Parking Brake ..... **VERIFY SET**
T-handle at the back of the pedestal is UP. Cyan PARK BRAKE ON on EICAS.

10 Wheel Chocks ..... **REMOVED - Use Settings page in Tablet**
Tablet home, Ground: untick Chocks. Untick Instrument Covers and Engine Cover too.


11 Cabin Door ..... **CLOSE / LOCK**
Tablet, Ground: Main Door shows an empty circle (closed).

12 Passenger Briefing ..... **COMPLETED**
Nothing to click. Tick it.

13 Seats / Belts / Harnesses / Pedals ..... **ADJUST / SECURE**
Nothing to click. Tick it.


14 Exterior Lights ..... **AS REQUIRED**
NAV up. Beacon: GND REC / ANTI-COLL to the middle before the engines start.

Checks and FMS programming

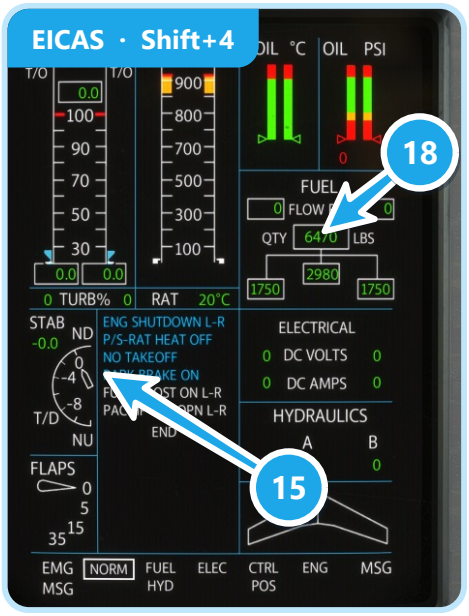





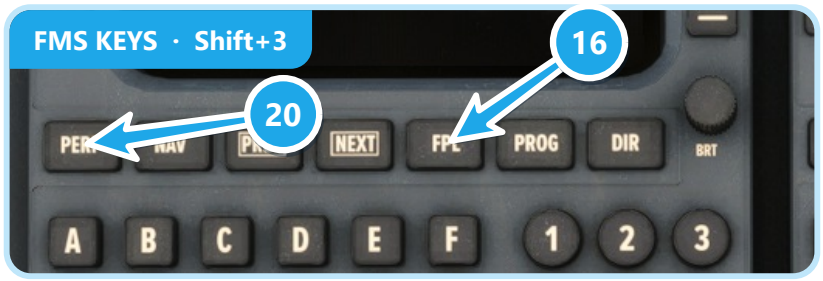

CHECKLIST · BEFORE START — ITEM · RESPONSE · HOW

15 EICAS ..... **CHECK for warnings**
Read the message list. No red messages; understand every amber one.

16 ATIS / Clearance/FMS ..... **AS REQUIRED. Program FMS**
Press FPL: origin, destination, runway, departure and route (or load from SimBrief).


17 Instruments / Avionics / FLPN
Set course bugs and pointers as required for departure. COMM/NAV/ADF radios tuned and verified. Transponder set to STBY
CRS and HDG knobs on the guidance panel. Frequencies on the radio units. Transponder in STBY for now.

18 Fuel Quantity / Balance ..... **CHECK - Maximum intentional fuel imbalance is 400 lbs**
EICAS FUEL: left and right tank figures within 400 lbs of each other.

19 CTR WING XFER Switches ..... **NORM / AS REQUIRED**
Left side panel, under FUEL: both switches DOWN to NORM.

20 V-Speeds ..... **SET - TAKEOFF DATA FMS page**
Press PERF, then TAKEOFF DATA: enter the conditions to get V1, VR, V2.

APU: power and test

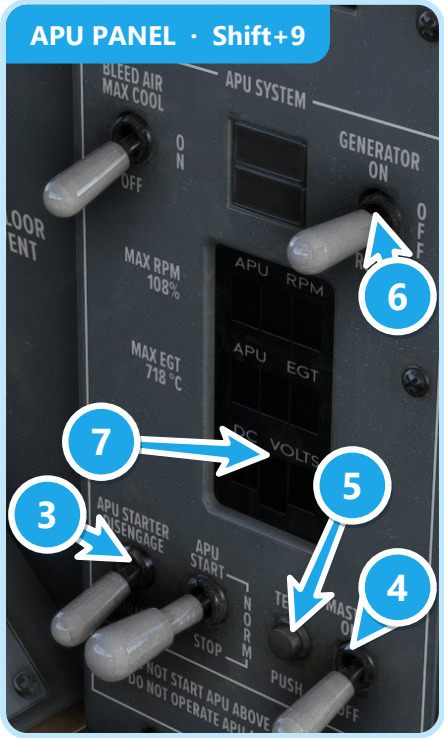



CHECKLIST · APU START — ITEM · RESPONSE · HOW

1 BATT 1 and BATT 2 Switches ..... **ON**
Already on from Before Start.

2 LH FUEL BOOST Switch ..... **NORM**
FUEL BOOST LH: DOWN to NORM. The APU feeds from the left side.

3 APU STARTER DISENGAGE Switch ..... **NORMAL**
Bottom left of the APU panel: leave in NORMAL.


4 APU MASTER Switch ..... **ON**
Bottom right of the APU SYSTEM panel: UP.


5 APU TEST ..... **PUSH**
Press the round TEST button once.


6 APU GENERATOR Switch ..... **ON**
GENERATOR switch, top right of the panel: UP.

7 APU DC VOLTS ..... **CHECK (22 volts minimum)**
Read DC VOLTS on the APU display.

APU: start and bleed air

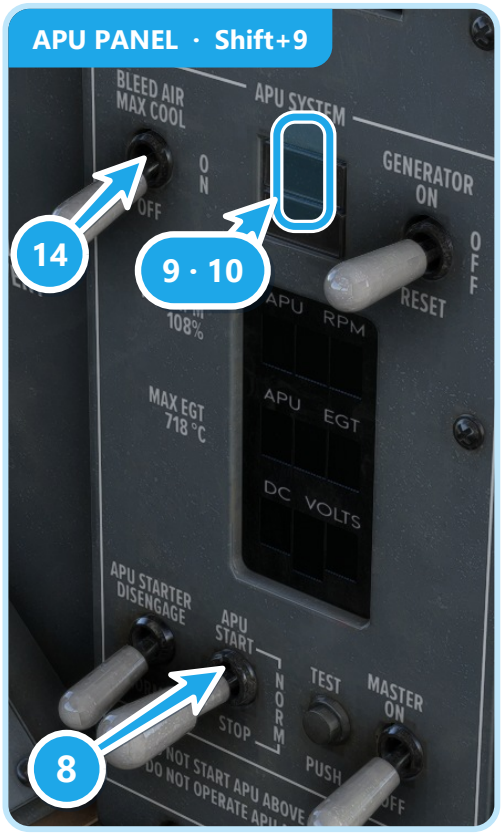

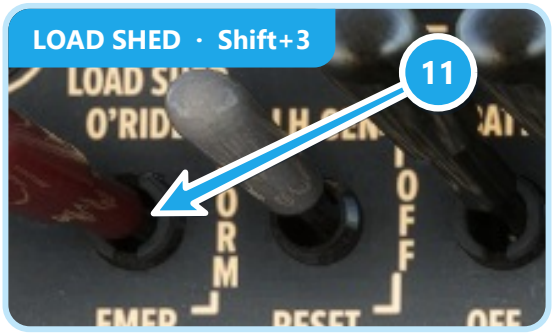

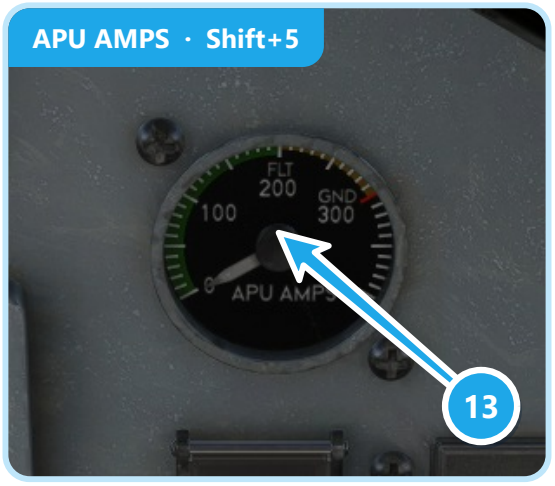

CHECKLIST · APU START — **ITEM · RESPONSE · HOW**

8 APU ..... **START**
APU START switch (bottom of the panel): UP and hold.

9 Hold APU START switch up until APU RELAY ENGAGED light illuminates ..... **APU RELAY ENGAGED light ON**
Then let go.

10 APU RELAY ENGAGED Light ..... **ON, then OFF before READY TO LOAD light ON**
Wait for READY TO LOAD before using APU power or bleed air.

11 LOAD SHED Switch ..... **NORM**
Red-capped switch, top left of the DC POWER panel: middle.


12 GPU ..... **DISCONNECT / CLEAR (if used)**
Tablet, Ground page (Before Start 3): Ground Power shows an empty circle.


13 APU Ammeter ..... **CHECK (400A max on ground/200A max in flight)**
APU AMPS gauge, right side panel.

14 APU BLEED AIR Switch ..... **ON (for engine start) AS REQUIRED (for PAC bleed)**
Top left of the APU panel: ON (middle). Not MAX COOL.

Start the right engine



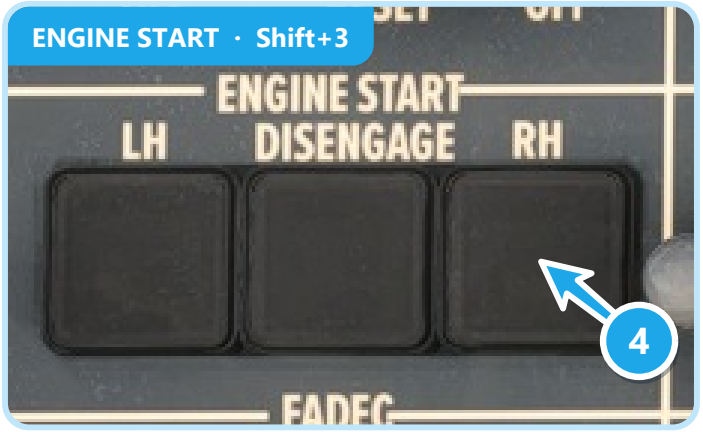

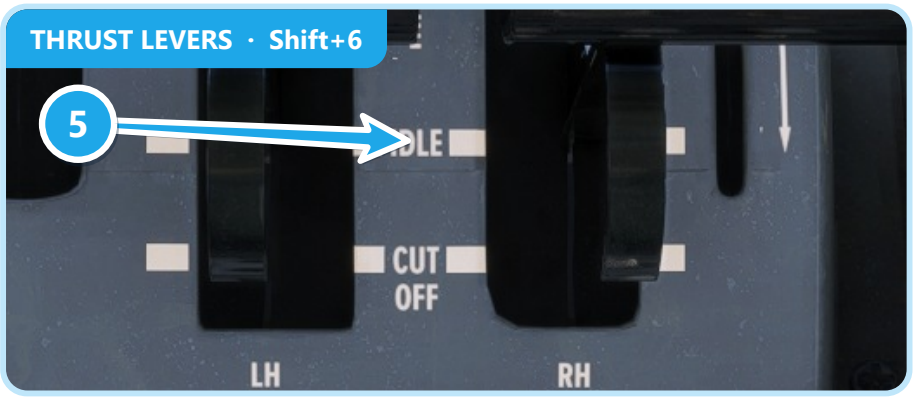



CHECKLIST · STARTING ENGINES — ITEM · RESPONSE · HOW

1. **APU START** ..... **REFER TO APU START CHECKLIST**
   APU running, READY TO LOAD, APU bleed ON.


2. **PAC ISOL VALVE Knob** ..... **CLOSED**
   ISOL VALVE knob, right lower panel: to CLSD.

3. **Start duct pressure** ..... **At least 30 PSI**
   EICAS: press the button under ENG and read START PRESS.

4. **Right Engine - START**
   ..... **PRESS (confirm START button and DISENGAGE button illuminate)**
   Right-hand of the three ENGINE START buttons.

5. **Throttle** ..... **IDLE (by 10% N2 RPM)**
   Right thrust lever from CUT OFF up to IDLE once N2 reaches 10%.

Watch the right engine start

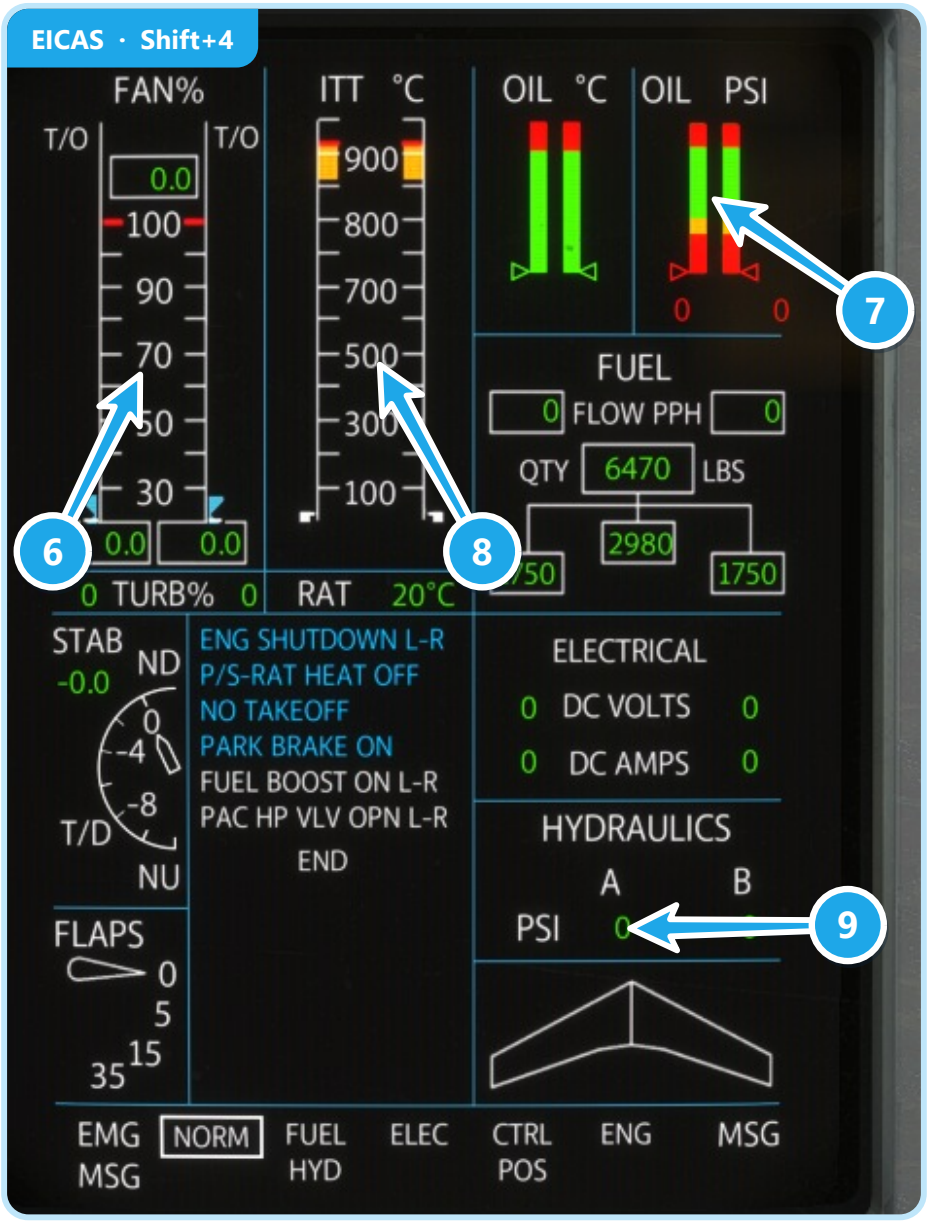

CHECKLIST · STARTING ENGINES — ITEM · RESPONSE · HOW

6 N1 Rotation ..... CONFIRM
FAN% starts to rise.


7 Oil Pressure ..... CHECK
OIL PSI rises into the green.


8 ITT ..... MONITOR
ITT stays below the red line.

9 Hydraulic Pressure ..... VERIFY
HYDRAULICS PSI rises.

Left engine and generators



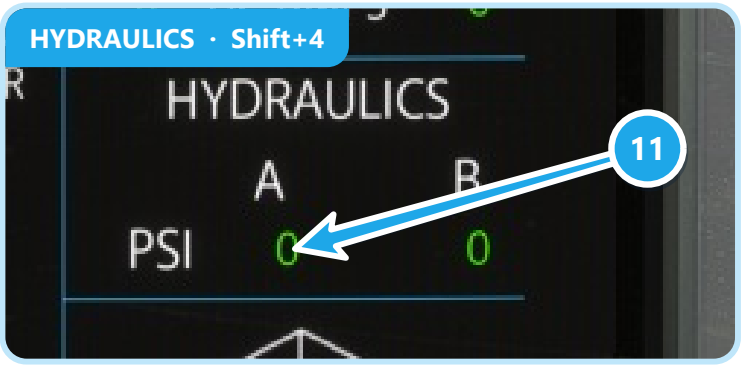

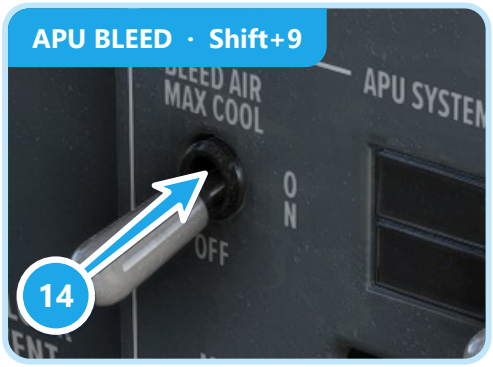

CHECKLIST · STARTING ENGINES — ITEM · RESPONSE · HOW

10 Left Engine - START ..... Same as right engine
Left START button, left lever to IDLE at 10% N2. Check N1, oil pressure, ITT.

11 Hydraulic Pressure ..... VERIFY
HYDRAULICS PSI up on both systems.

12 Generators ..... ON
LH GEN and RH GEN switches UP.

13 Ground Air Service/GPU (if used) ..... DISCONNECT
Tablet, Ground page: Ground Power off.

14 APU Bleed Air Switch ..... OFF (check bleed sources)
APU BLEED AIR switch DOWN.

Bleed air check





CHECKLIST · STARTING ENGINES — ITEM · RESPONSE · HOW

15 **Select EICAS SYS, ENG on the MFD** ..... **Duct pressure is from right engine**
MFD: button under EICAS SYS, then ENG. Watch duct pressure through items 16-21.

16 **R ENG BLD AIR Knob** ..... **OFF (pressure should be zero)**
Right knob, bottom row: OFF.

17 **PAC ISOL VALVE Knob** ..... **OPEN (pressure is from left engine)**
ISOL VALVE knob: open.

18 **L ENG BLD AIR Knob** ..... **OFF (pressure should be zero)**
Left knob, bottom row: OFF.

19 **L ENG BLD AIR Knob** ..... **HP/LP (check pressure)**
Left knob back to HP/LP.


20 **PAC ISOL VALVE Knob** ..... **CLOSED (pressure should be zero)**
ISOL VALVE knob: CLSD.


21 **R ENG BLD AIR Knob** ..... **HP/LP (check pressure)**
Right knob back to HP/LP.

22 **APU Bleed Air Switch** ..... **AS DESIRED**
APU panel (APU Start 2): normally OFF once both engines run.

Second engine by cross bleed



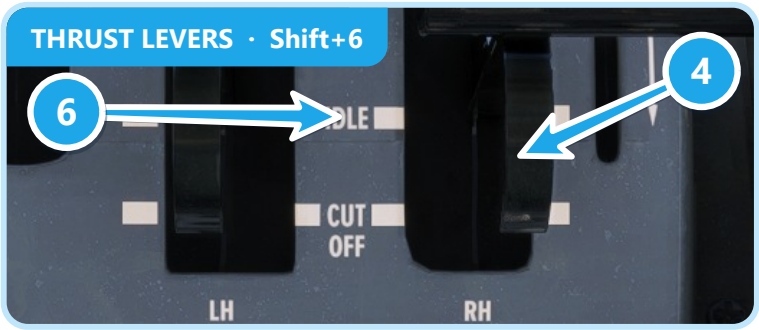

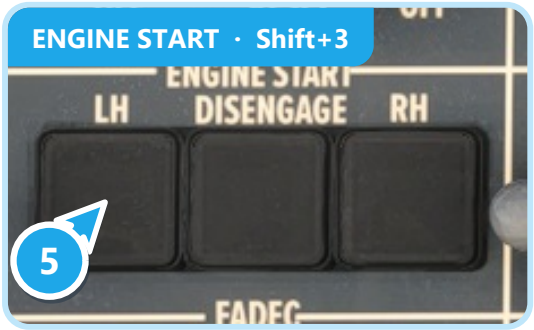

CHECKLIST · STARTING SECOND ENGINE: CROSS BLEED METHOD — ITEM · RESPONSE · HOW

1. **PAC ISOL VALVE Knob** ..... **OPEN**
   ISOL VALVE knob: open.

2. **PAC BLEED SELECT Switch** ..... **HP**
   PAC BLEED SELECT switch: UP to HP.


3. **Opposite ENG BLD AIR Knob** ..... **HP/LP**
   The running (right) engine: R ENG BLD AIR to HP/LP.


4. **Opposite Engine**
   ..... **Adjust THR maintain 30 PSI minimum start pressure (approximately 55% N1)**
   Brakes held. Advance the right thrust lever until start pressure reads 30 PSI.

5. **Left Engine - START**
   ..... **PRESS (confirm START button and DISENGAGE button illuminate)**
   Left-hand ENGINE START button.

6. **Throttle** ..... **IDLE (by 10% N2 RPM)**
   Left thrust lever from CUT OFF to IDLE at 10% N2.

Watch the left engine start

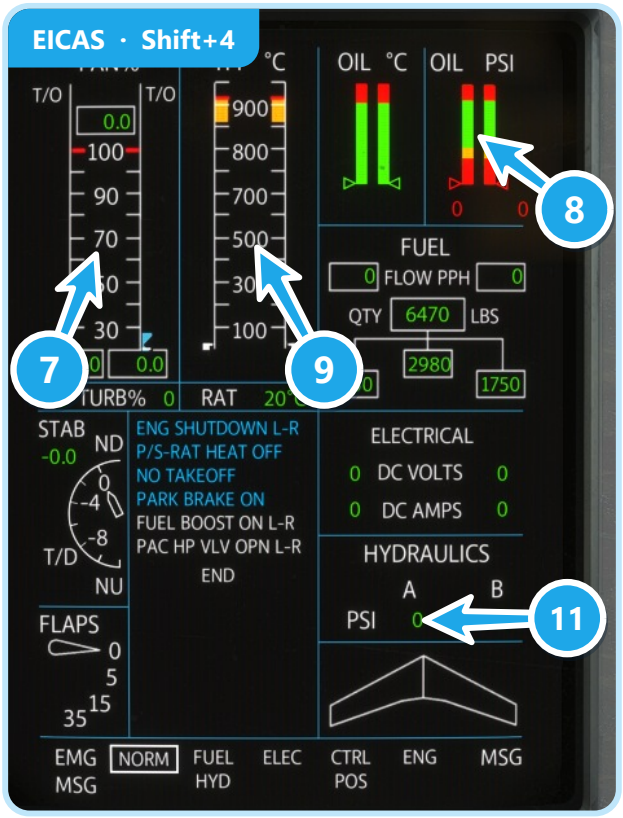

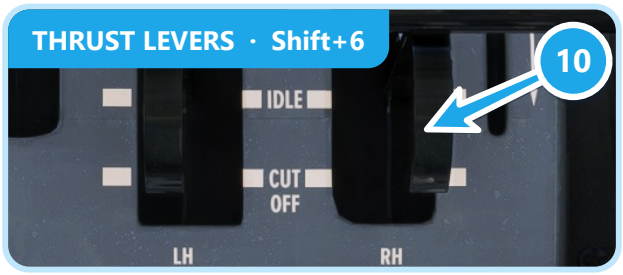

CHECKLIST · STARTING SECOND ENGINE: CROSS BLEED METHOD — **ITEM · RESPONSE · HOW**

7 N1 Rotation ..... **CONFIRM**
Left FAN% starts to rise.

8 Oil Pressure ..... **CHECK**
OIL PSI rises into the green.

9 ITT ..... **MONITOR**
ITT stays below the red line.

10 Opposite Engine ..... **IDLE**
Right thrust lever back to IDLE.

11 Hydraulic Pressure ..... **VERIFY**
HYDRAULICS PSI up on both systems.

Generators and bleed back to normal






CHECKLIST · STARTING SECOND ENGINE: CROSS BLEED METHOD — ITEM · RESPONSE · HOW


12 Generators ..... **ON**
LH GEN and RH GEN switches UP.

13 PAC BLEED SELECT Switch ..... **NORMAL**
PAC BLEED SELECT back DOWN to NORM.

14 PAC ISOL VALVE Knob ..... **CLOSED**
ISOL VALVE knob: CLSD.

Flight controls, flaps, speed brake

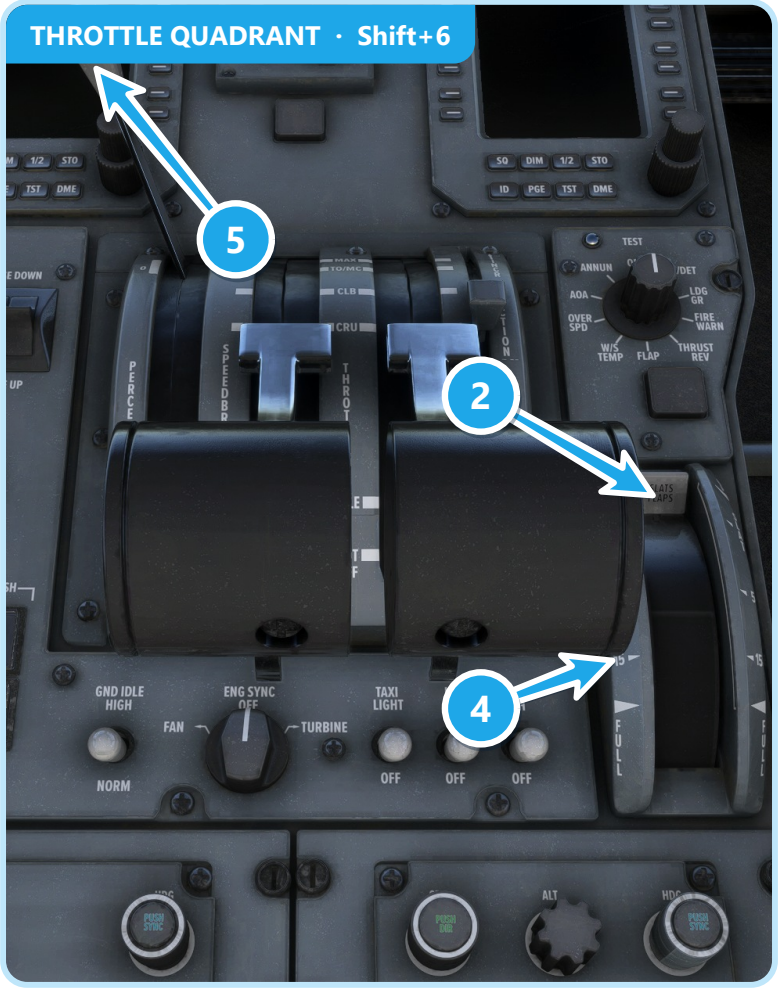

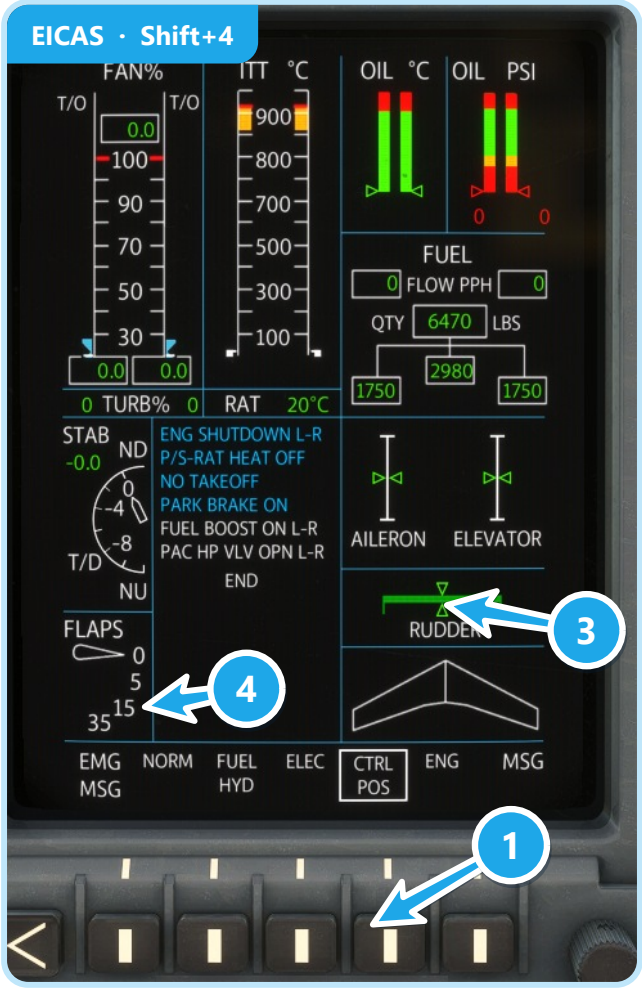

CHECKLIST · BEFORE TAXI — ITEM · RESPONSE · HOW

1 Flight Controls ..... **FREE / CORRECT EICAS INDICATIONS**

Press the bezel button under CTRL POS (4th button). Move the yoke and rudder fully each way: the AILERON, ELEVATOR and RUDDER markers follow smoothly.

2 Flaps / Slats Lever ..... **UP**

The SLATS FLAPS handle right of the throttles: fully forward.

3 Rudder Control / EICAS

..... **VERIFY UPPER RUDDER REMAINS CENTERED WITH FLAPS UP**

Feet off the pedals: the RUDDER marker on CTRL POS sits on the centre tick.

4 Flaps / Slats ..... **SET FOR TAKEOFF / CHECK EICAS INDICATIONS**


Pull the handle back to 15. EICAS FLAPS reads 15. Then press the button under NORM (1st button).


5 Speed Brakes ..... **CHECK / STOWED / EICAS INDICATIONS**

Lever left of the throttles fully forward at 0. Your CP3 speedbrake lever fully forward too.

Alignment, warnings, standby gyro



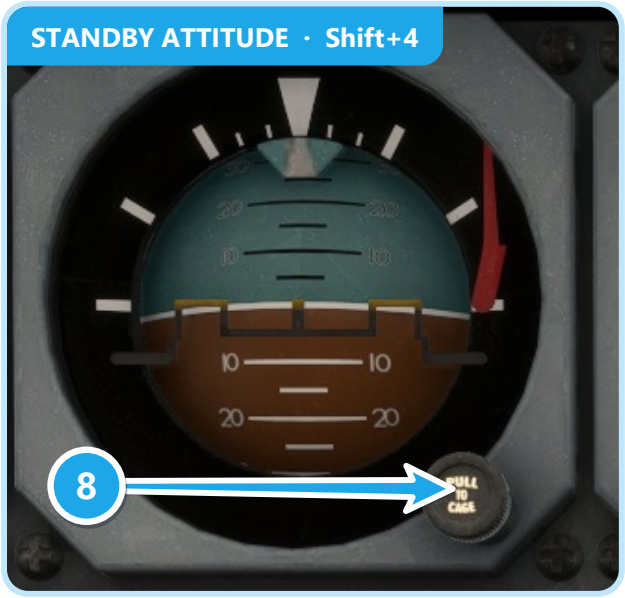

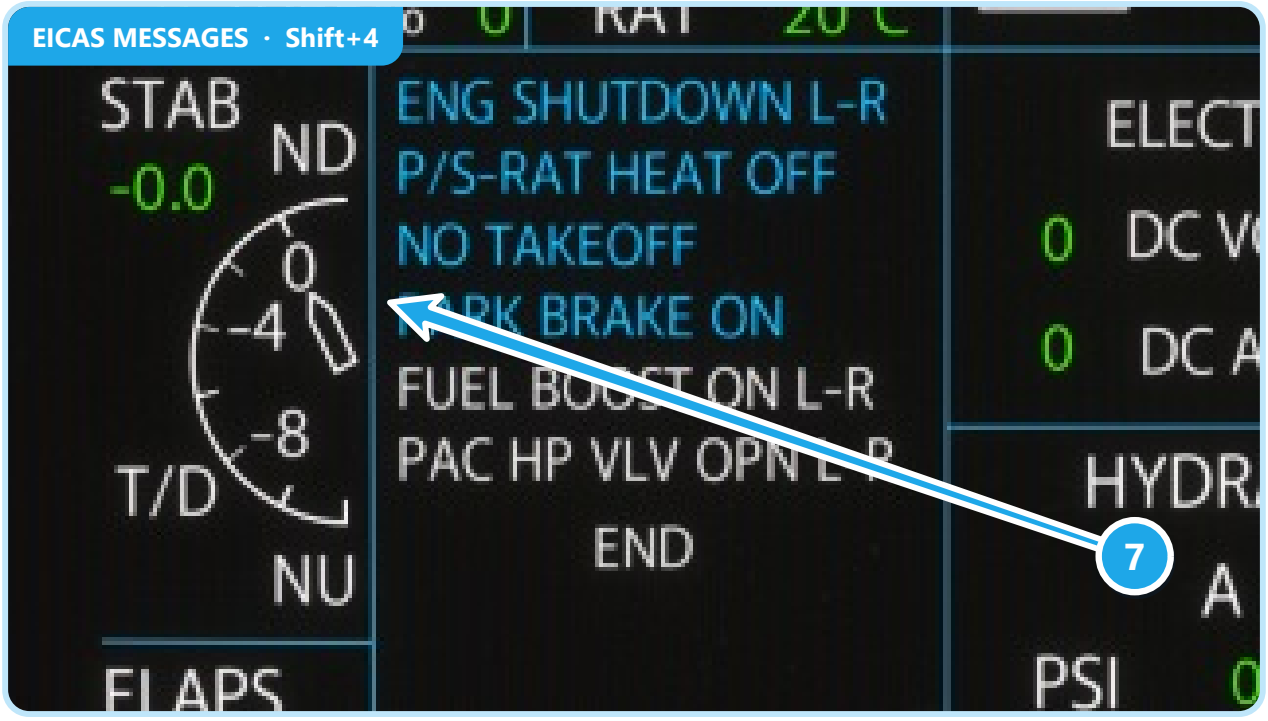

CHECKLIST · BEFORE TAXI — ITEM · RESPONSE · HOW

6 AHRS or IRS ..... **ALIGNED / NO FLAGS**

Attitude and heading showing on both PFDs. No red HDG FAIL, ATT FAIL or FD FAIL flags.

7 EICAS ..... **CHECK (all messages either normal or resolved)**

Cyan PARK BRAKE ON and NO TAKEOFF are expected at this point.

8 Standby Gyro ..... **UNCAGED**

The PULL TO CAGE knob is pushed in. No CAGE flag, horizon level.

Anti-ice, pressurization, cabin



CHECKLIST · BEFORE TAXI — **ITEM · RESPONSE · HOW**

9 Anti-Ice Systems ..... **AS REQUIRED**
Only in icing conditions: visible moisture at +10 °C or colder. The switch check is item 2 of Before Takeoff.


10 Pressurization ALT SEL ..... **NORM**
The ALT SEL switch at the bottom of the PRESSURIZATION panel: DOWN.

11 Passenger Advisory Lights ..... **PASS SAFETY**
The SEAT BELT LTS switch: DOWN. (Up = seat belts, middle = off.)

12 Seats / Seat Belts / Shoulder Harnesses/Aft Divider Sliding Doors ..... **CHECK / SECURE / LATCHED OPEN**
Nothing to click in the sim. Check it, say it, tick it.

Lights, brakes, steering



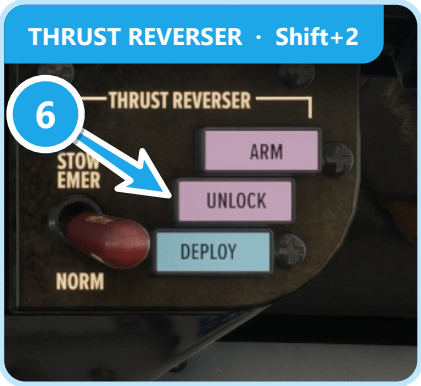







CHECKLIST · TAXI — ITEM · RESPONSE · HOW

1. **Exterior Lights** — AS REQUIRED
   TAXI LIGHT up. Beacon: GND REC / ANTI-COLL to the middle. NAV up.
2. **Brakes** — APPLY and HOLD
   Press and hold both toe brakes.
3. **Parking Brake** — RELEASE
   Push the T-handle at the back of the pedestal DOWN. PARK BRAKE ON goes out.
4. **Brakes** — CHECK
   Roll forward slowly at idle, then brake: the aircraft slows evenly.
5. **Nose Wheel Steering** — CHECK
   Steer left and right with the rudder pedals at walking pace.
6. **Thrust Reversers** — CHECK / STOWED
   ARM, UNLOCK and DEPLOY all out. Reverser levers fully down.
7. **Flight Instruments** — CHECK
   In the turns, heading moves the right way on both PFDs and the standby.

Anti-ice check (icing only)

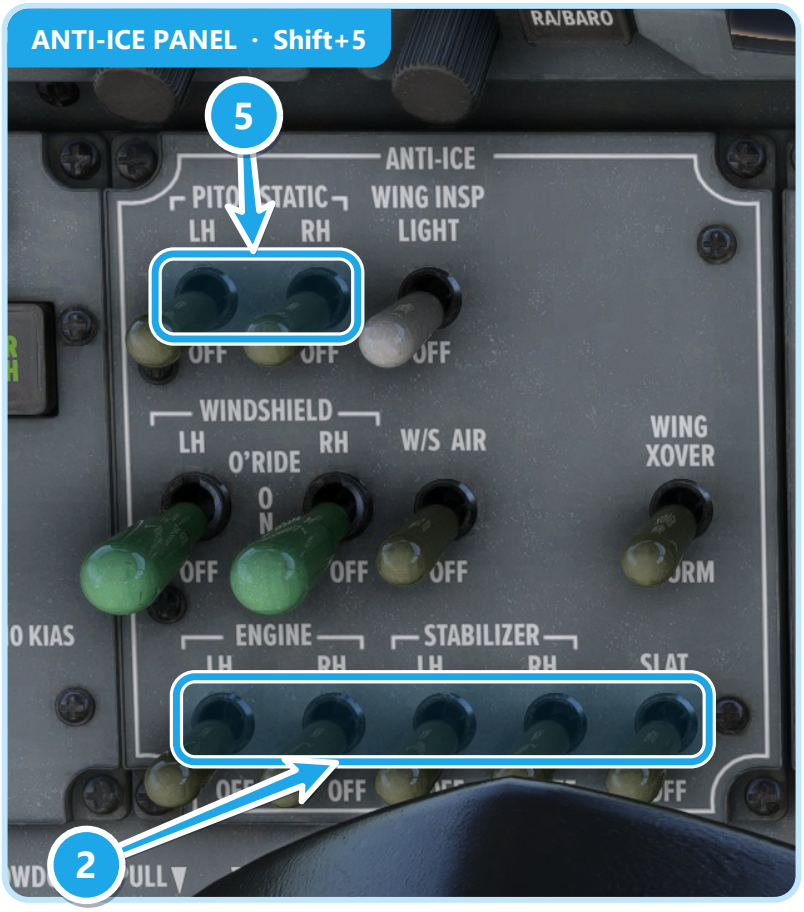

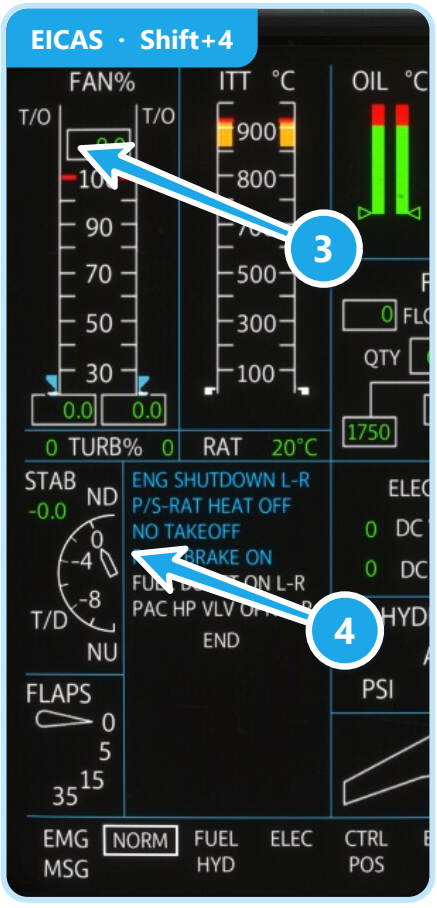

CHECKLIST · BEFORE TAKEOFF — **ITEM · RESPONSE · HOW**

1 Anti-Ice Systems (if required) ..... **CHECK**

No icing? Do item 5 only, then go to the next page.

2 LH and RH ENGINE, STABILIZER, and SLAT ANTI-ICE ..... **ON / CHECK COLD MESSAGES (2-3 minutes)**

All five switches UP. Cyan COLD messages appear on EICAS.

3 Throttles ..... **APPROXIMATELY 40% N1**

Brakes held. Advance both levers until FAN% reads about 40.

4 Check CAS ..... **COLD (messages go out, No HOT or LEAK messages)**

Watch the EICAS message list.


5 ANTI-ICE Switches ..... **AS REQUIRED. It is suggested that Pitot / Static Anti-Ice be employed for all flights**


PITOT / STATIC LH and RH up.


6 Throttles ..... **IDLE**

Both levers back to idle.

Takeoff configuration

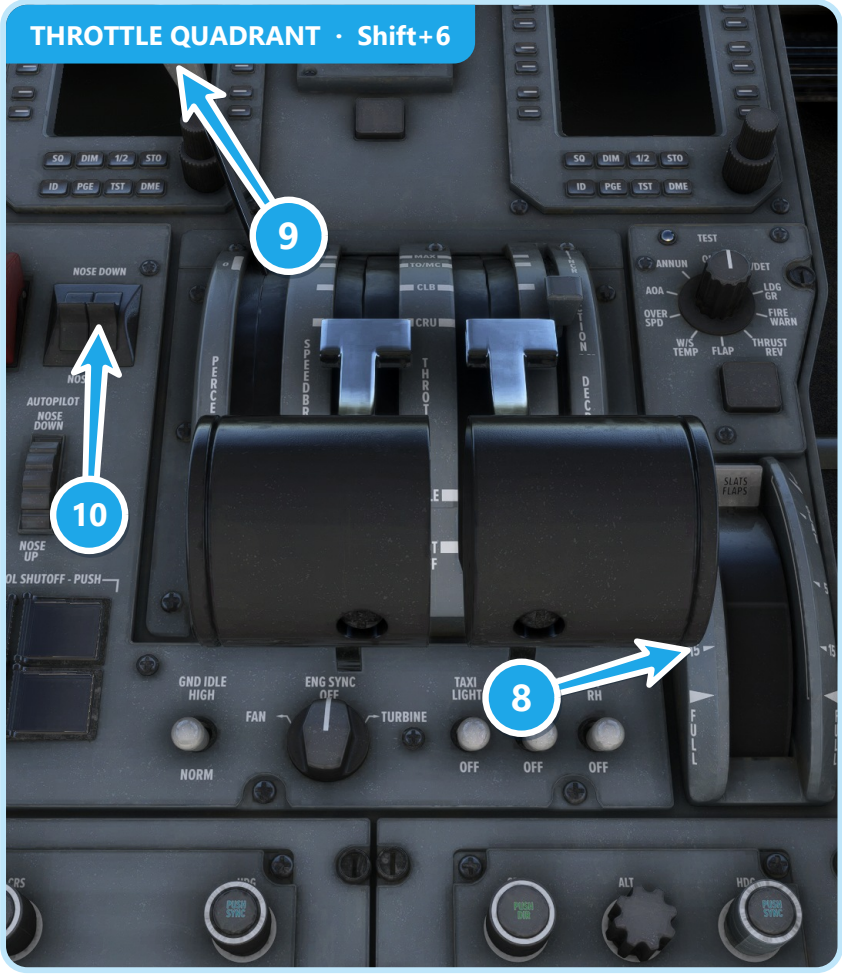

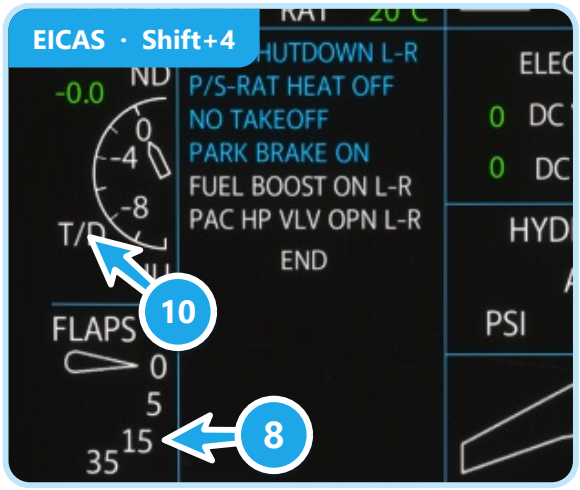

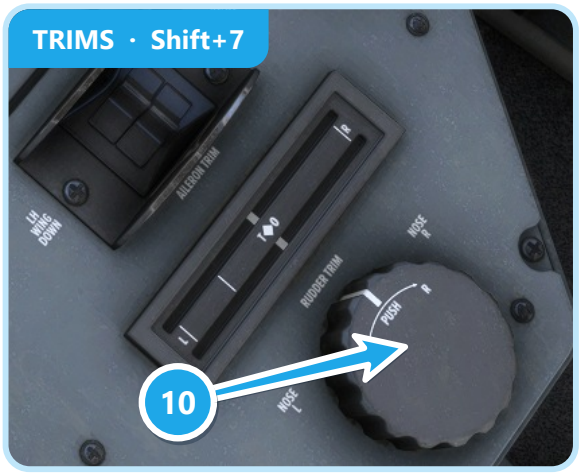

CHECKLIST · BEFORE TAKEOFF — **ITEM · RESPONSE · HOW**

7 **Seats / Seat Belts / Shoulder Harnesses/Aft Divider Sliding Doors** ..... **CHECK / SECURE / LATCHED OPEN**

Nothing to click. Tick it.

8 **Flaps / Slats** ..... **SET FOR TAKEOFF**

Handle at 15. EICAS FLAPS reads 15. V-speeds only appear with flaps 15.

9 **Speed Brakes** ..... **RETRACTED (0%)**


Lever fully forward.

10 **Trims** ..... **SET FOR TAKEOFF**

Pitch trim until the EICAS STAB pointer is in the T/O band. Rudder trim knob on its centre mark; aileron trim switch beside it centred.

Yaw damper, briefing, transponder


GUIDANCE PANEL · Shift+2

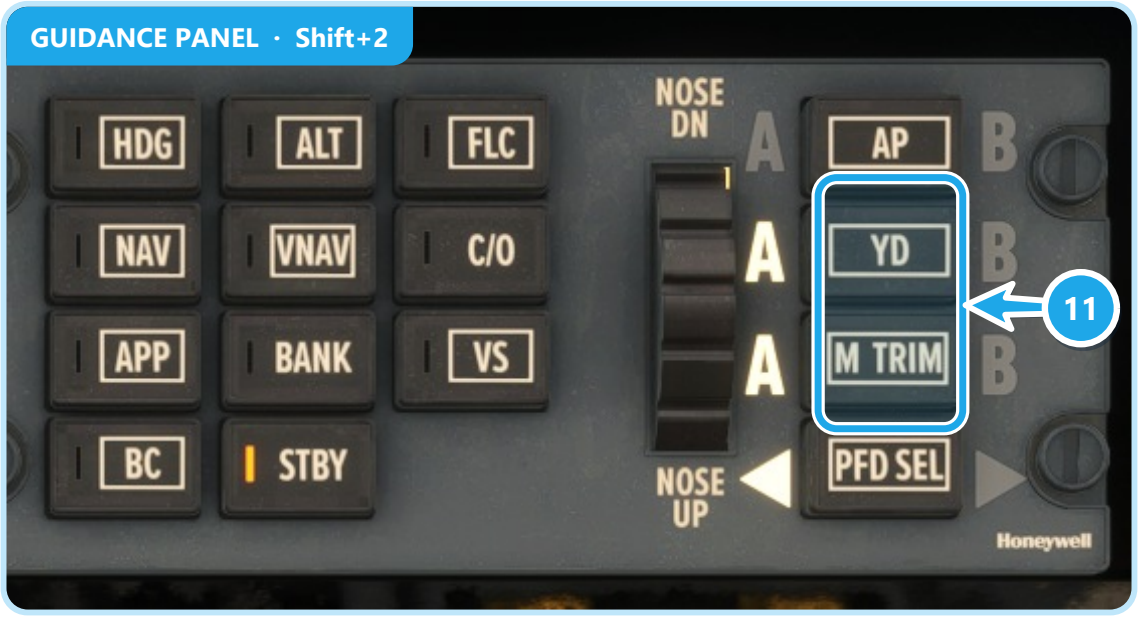

LEFT RADIO · Shift+3



PILOT MFD · Shift+4

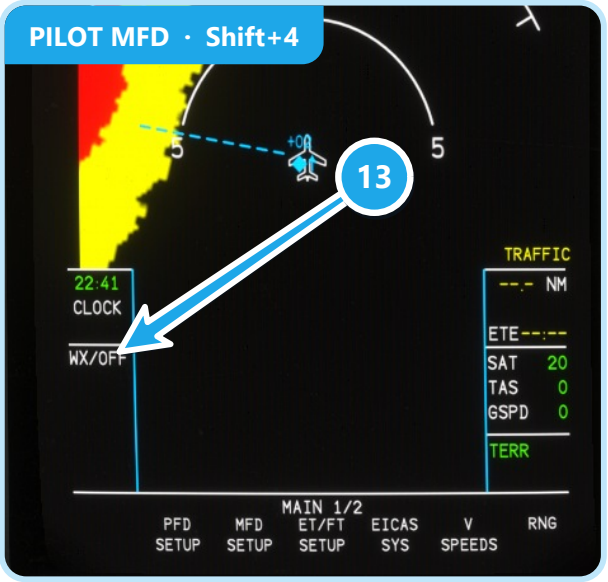

CHECKLIST · BEFORE TAKEOFF — ITEM · RESPONSE · HOW

11 Yaw Damper and Mach Trim ..... **CHECK ON**
Press YD and M TRIM: each shows its lit bar.

12 Crew Briefing ..... **COMPLETE**
Runway, departure, V1 / VR / V2, what you do if it goes wrong.


13 Radar ..... **AS REQUIRED**
Weather radar only if there is weather. The MFD shows WX/OFF when it is off.

14 Transponder ..... **TA/RA**
Press the left key level with the code (4th down), then turn the knob until TA/RA shows.

DEPARTURE | BEFORE TAXI | TAXI | BEFORE TAKEOFF | TAKEOFF

Pitot heat, lights, final check


PITOT / STATIC · Shift+5

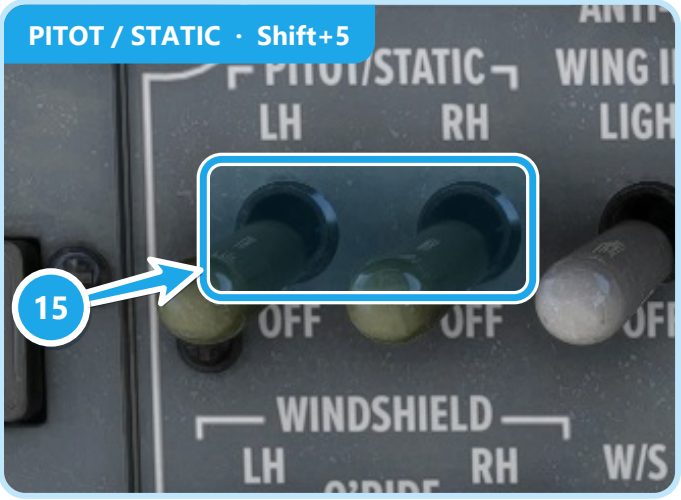

LANDING LIGHTS · Shift+6



EICAS · Shift+4

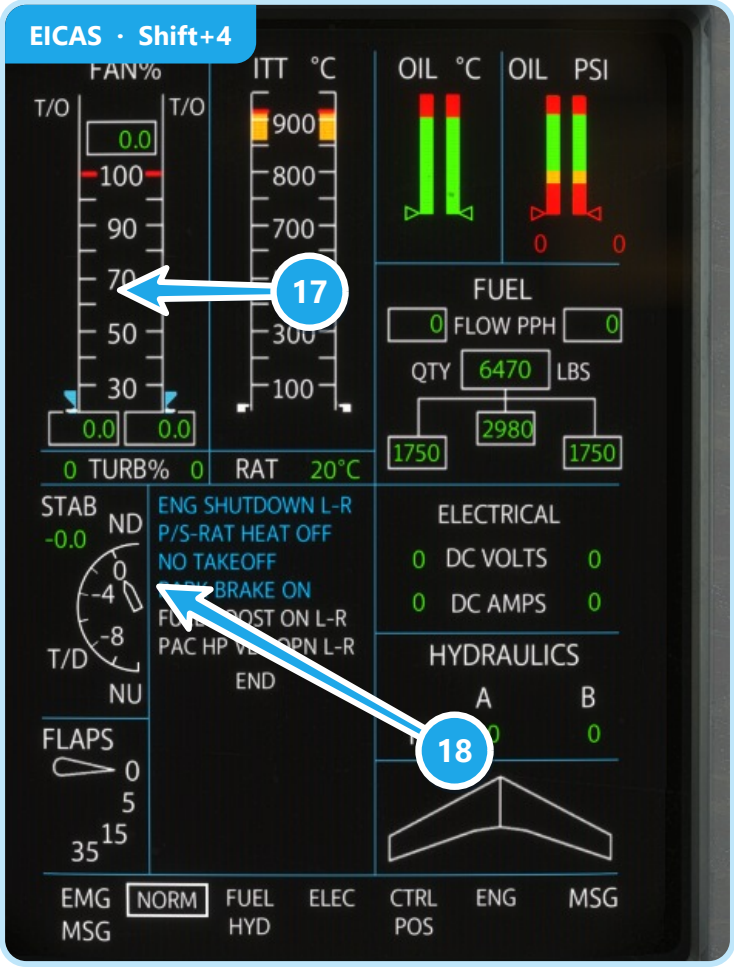

CHECKLIST · BEFORE TAKEOFF — ITEM · RESPONSE · HOW


15 LH and RH PITOT STATIC Anti Ice Switches ..... **BOTH ON**
Both switches UP.


16 Exterior Lights ..... **AS REQUIRED**
LANDING LIGHT LH and RH up. GND REC / ANTI-COLL up for strobes.

17 Engine Instruments ..... **CHECK**
FAN%, ITT, oil temperature and pressure normal on both engines.

18 EICAS ..... **CHECK**
No NO TAKEOFF, amber or red message. Ready for takeoff.

Thrust, release, rotate

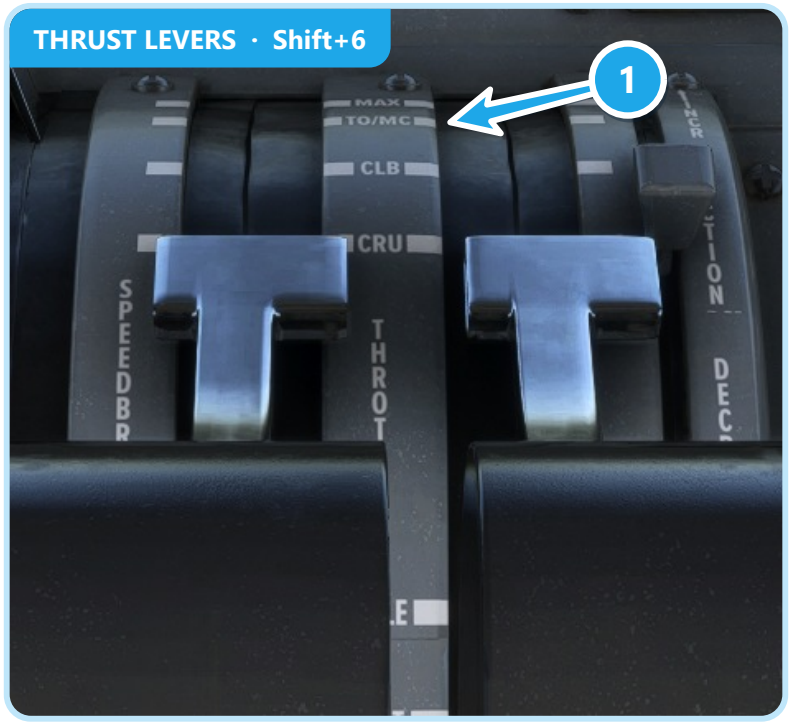

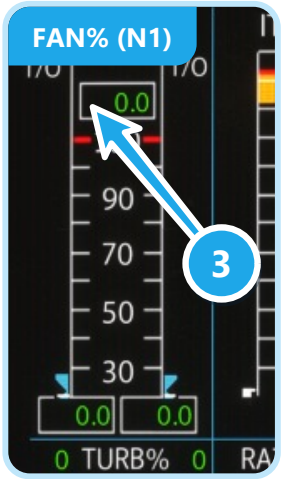



CHECKLIST · TAKEOFF — ITEM · RESPONSE · HOW

1 **Throttles** ..... **TO/MC DETENT**
Lined up and cleared: both levers forward into TO/MC, the 2nd notch (MAX, TO/MC, CLB, CRU).

2 **Brakes** ..... **RELEASE**
Let go of the toe brakes.

3 **EICAS** ..... **CHECK NORMAL INDICATIONS, N1 matches command**
FAN% rises to the T/O value shown above the tapes.


4 **Elevator Control** ..... **ROTATE AT VR to achieve 13 deg initial pitch**
At your VR (FMS TAKEOFF DATA), pull back smoothly to just above the 10° line.

Gear, flaps, climb thrust

LANDING GEAR · Shift+3



THROTTLE QUADRANT · Shift+6

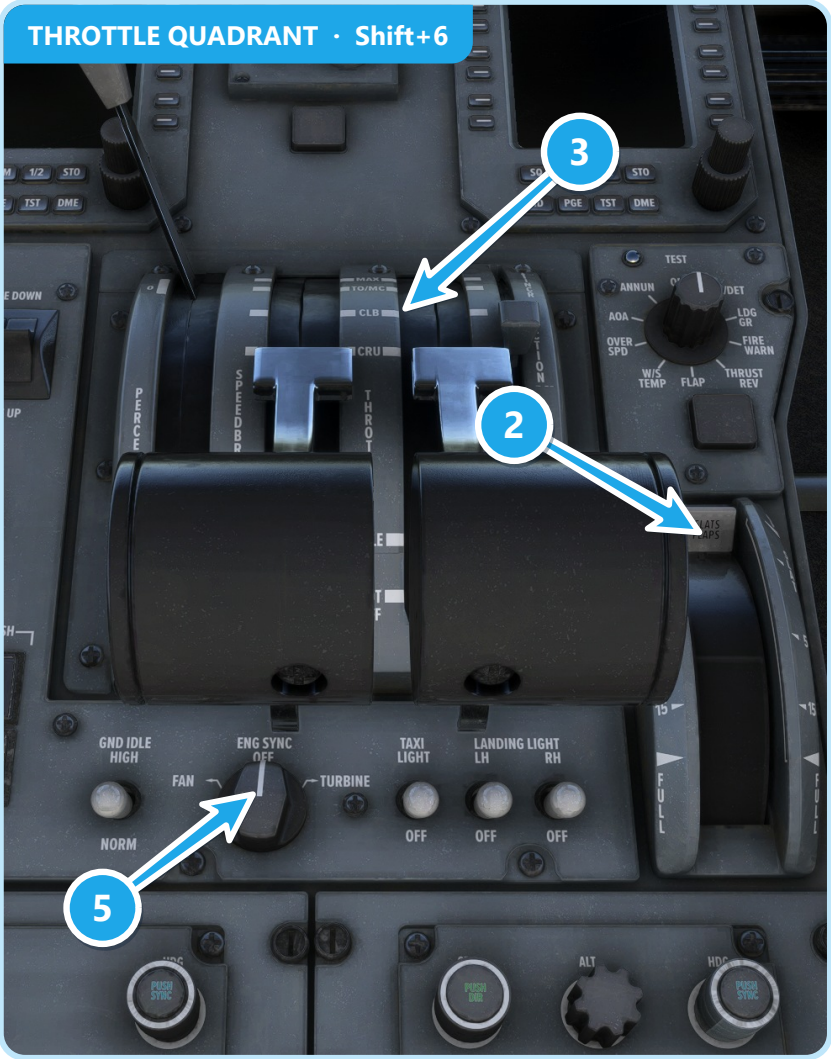

CHECKLIST · AFTER TAKEOFF/CLIMB — ITEM · RESPONSE · HOW

1. **Landing Gear** ..... **UP**
   Positive climb: gear handle UP. The three green lights go out.


2. **Flaps / Slats** ..... **UP (airspeed above 170 KIAS)**
   SLATS FLAPS handle fully forward.

3. **Throttles** ..... **CLB DETENT**
   Both levers back into CLB, the 3rd notch (MAX, TO/MC, CLB, CRU).


4. **Anti-Ice Systems** ..... **AS REQUIRED**
   Anti-ice panel switches as conditions need.

5. **ENG SYNC Knob** ..... **AS DESIRED**
   Knob below the throttles: FAN or TURBINE keeps the engines in step.

Pressurization, altimeters, APU

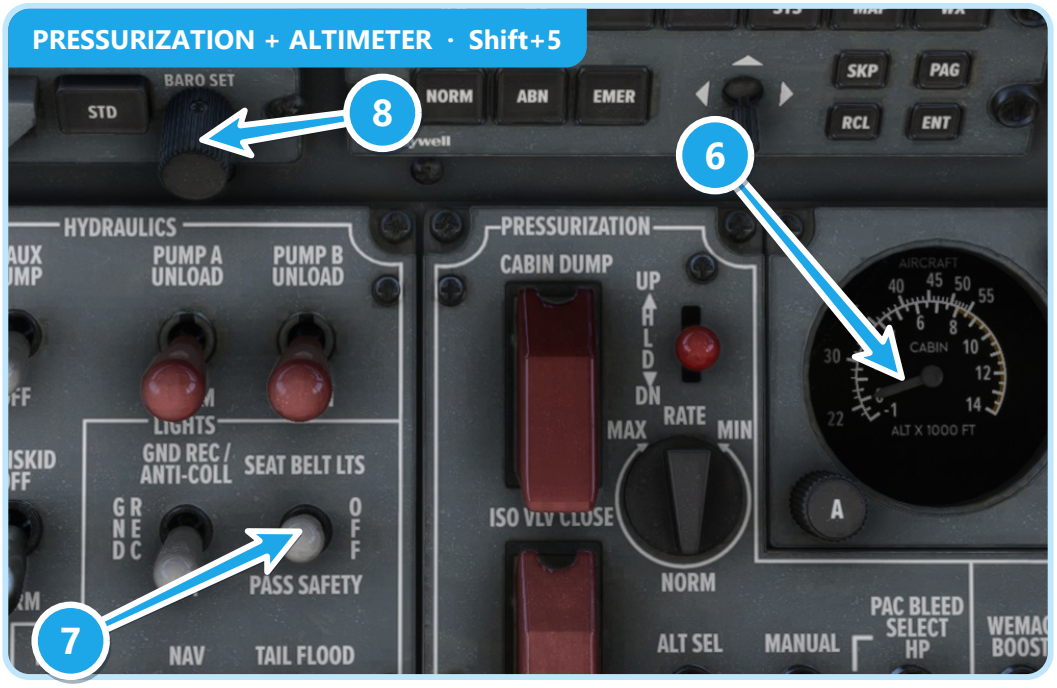



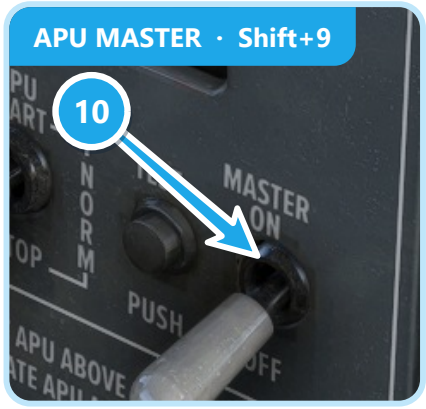

CHECKLIST · AFTER TAKEOFF/CLIMB — ITEM · RESPONSE · HOW

6 Pressurization ..... **CHECK**
CABIN gauge: cabin altitude climbing slowly. No warnings.


7 Passenger Advisory Lights ..... **AS REQUIRED**
SEAT BELT LTS switch as you wish.


8 Altimeters (transition altitude) ..... **SET**
Passing the transition altitude: press STD (1013 hPa / 29.92 inHg).


9 Exterior Lights (FL180) ..... **AS DESIRED**
Passing FL180 the landing lights may go off.

10 APU (prior to climb above FL310) ..... **OFF**
APU MASTER switch DOWN before FL310.

Cruise

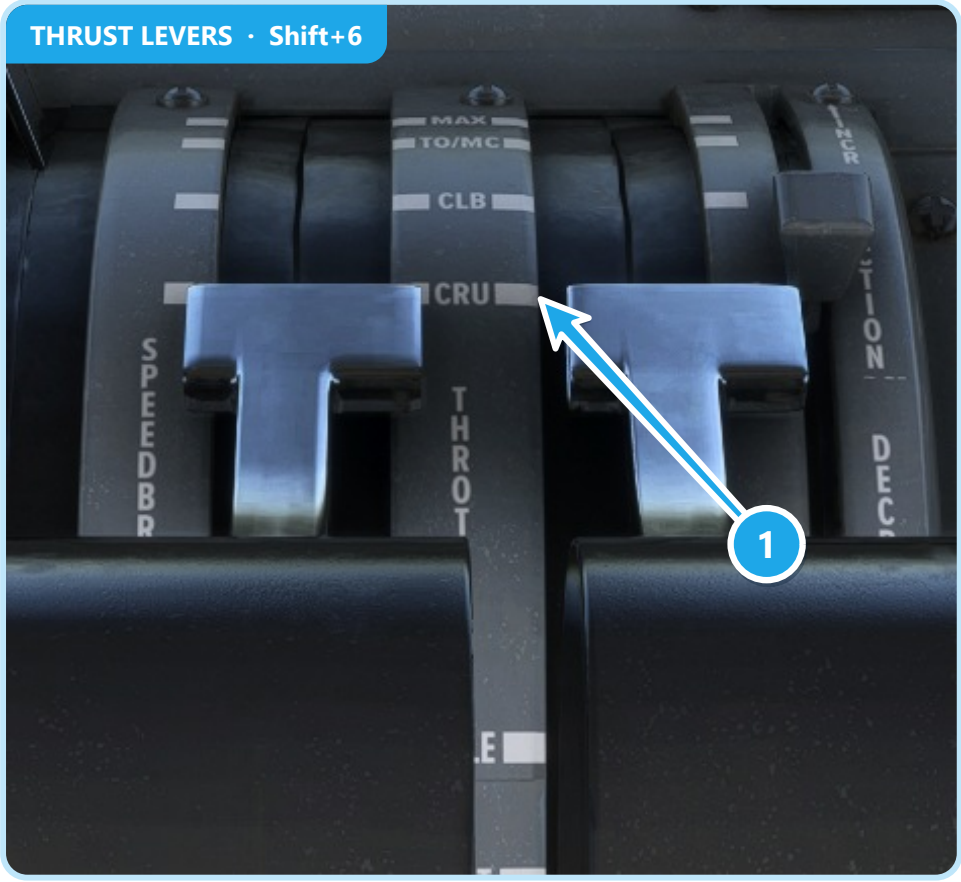

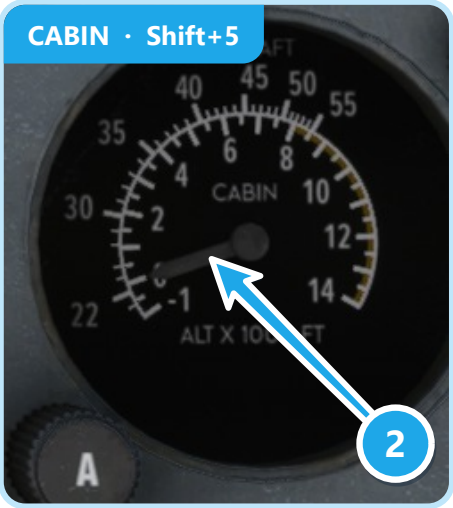

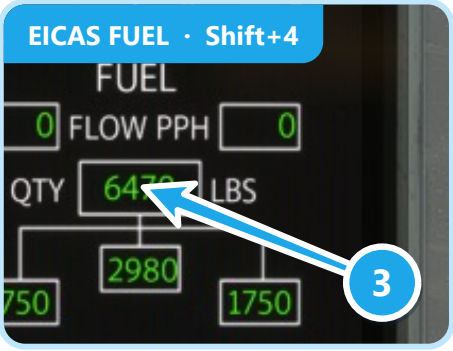


CHECKLIST · CRUISE — ITEM · RESPONSE · HOW


1. **Throttles** ..... **CRU detent or AS REQUIRED**
   Levers into CRU, the 4th notch, or as needed for your speed.


2. **Pressurization** ..... **CHECK**
   CABIN gauge steady, well below 8,000 ft.

3. **Fuel Transfer** ..... **VERIFY**
   EICAS FUEL: left and right balanced (CTR WING XFER as required).

Descent

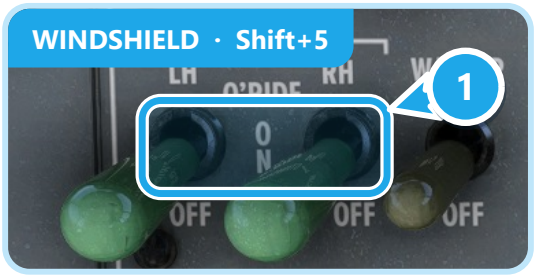

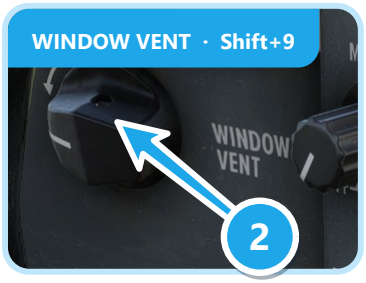

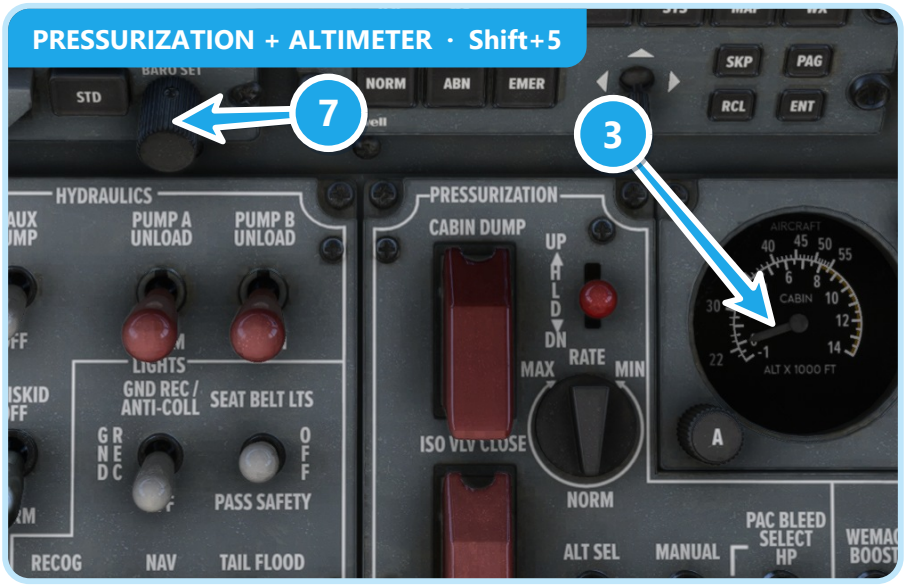

CHECKLIST · DESCENT — ITEM · RESPONSE · HOW

1. **LH and RH WINDSHIELD ANTI-ICE Switches** ..... **BOTH ON**
   WINDSHIELD LH and RH: UP.

2. **Side Window Vent Knobs** ..... **CLOSED**
   Turn the vent knob to CLOSE (one each side).

3. **Pressurization** ..... **CHECK/SET LANDING ELEVATION**
   CABIN gauge descending smoothly; landing field elevation set.


4. **ANTI-ICE Switches** ..... **AS REQUIRED**
   As conditions need.

5. **APU** ..... **AS DESIRED**
   Start it now if you want it after landing.

6. **Exterior Lights (FL180)** ..... **AS REQUIRED**
   Passing FL180: LANDING LIGHT LH and RH up.


7. **Altimeter (transition level)** ..... **SET**
   Passing the transition level: BARO SET to the destination QNH.

Landing data, minimums, fuel

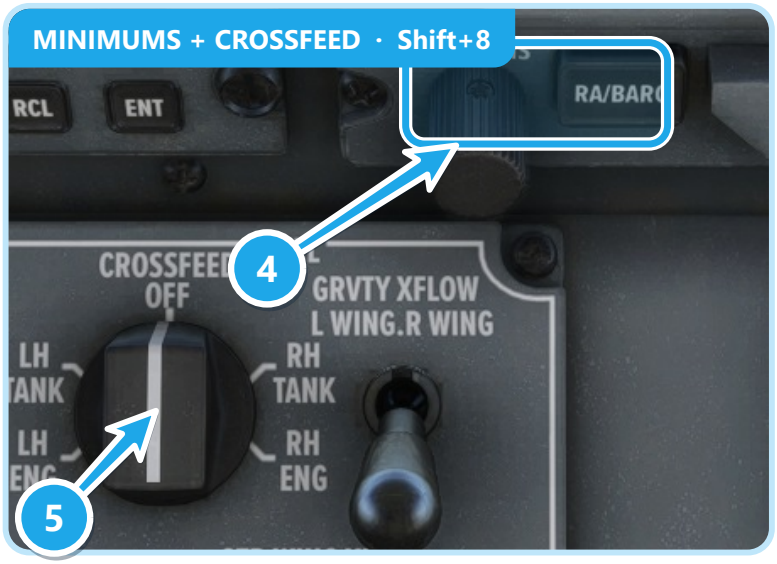





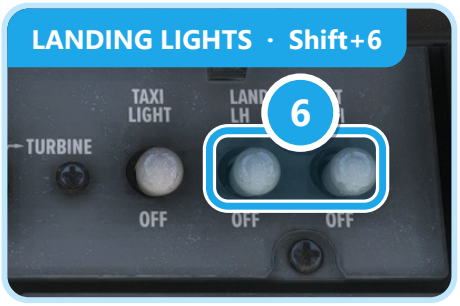


CHECKLIST · APPROACH — **ITEM · RESPONSE · HOW**

1. **Landing Data** ..... **CONFIRM**
   FMS PERF, then LANDING DATA: check VREF and landing distance.
2. **Crew Briefing** ..... **COMPLETE**
   Approach, minimums, missed approach.
3. **Avionics / Flight Instruments** ..... **CHECK/SET**
   Approach loaded, courses and frequencies set, no flags.
4. **Minimums** ..... **SET (RA/BARO)**
   RA/BARO button picks the type; MINIMUMS knob sets the value.
5. **FUEL CROSSFEED Switch** ..... **OFF**
   CROSSFEED knob on the FUEL panel: OFF (straight up).
6. **Exterior Lights** ..... **AS REQUIRED**
   LANDING LIGHT LH and RH up.
7. **Flaps / Slats** ..... **AS REQUIRED**
   SLATS FLAPS handle to 5, then 15, at the right speeds.

Cabin, ignition, engine sync





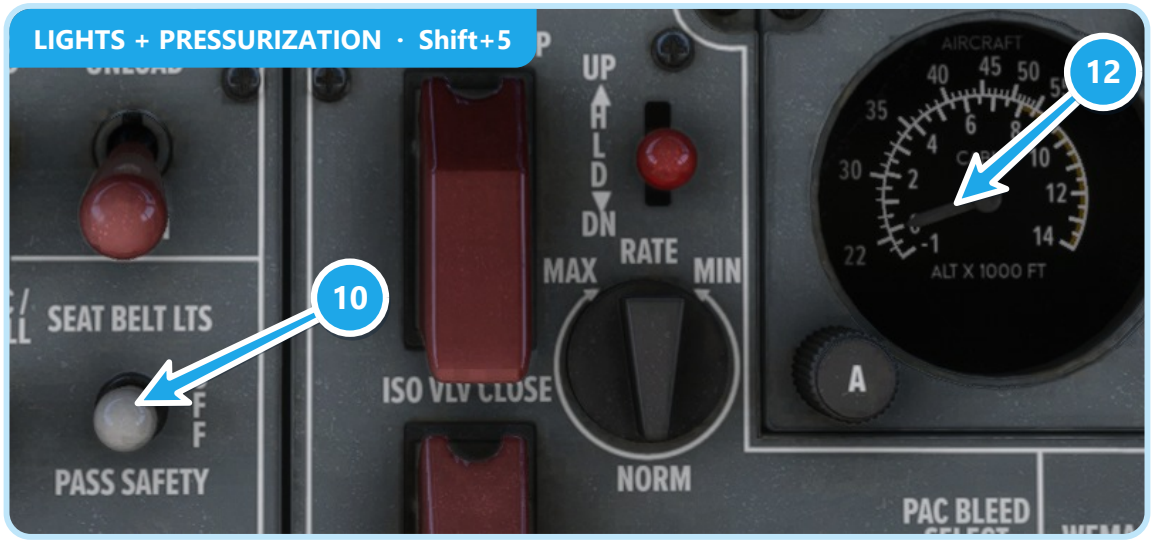

CHECKLIST · APPROACH — ITEM · RESPONSE · HOW

8 Passengers ..... **BRIEF**
Nothing to click. Tick it.

9 Seats / Seat Belts / Shoulder Harnesses/Aft Divider Sliding Doors ..... **CHECK / SECURE / LATCHED OPEN**
Nothing to click. Tick it.

10 Passenger Advisory Lights ..... **PASS SAFETY**
SEAT BELT LTS switch: DOWN.

11 LH and RH IGNITION Switches ..... **NORM**
IGNITION LH and RH: DOWN to NORM.

12 Pressurization ..... **ZERO DIFFERENTIAL at touchdown**
Cabin reaches field elevation as you land.

13 ENG SYNC Knob ..... **OFF**
ENG SYNC knob straight up: OFF.

Gear down, speed, autopilot off



CHECKLIST · BEFORE LANDING — ITEM · RESPONSE · HOW

1 Landing Gear ..... **DOWN and LOCKED (3 green lights)**
Gear handle DOWN. Three green lights above it: LH, NOSE, RH.

2 Flaps ..... **AS REQUIRED**
Landing flaps set (15 or FULL).

3 Speed Brakes ..... **RETRACTED (0%)**
Lever fully forward.


4 EICAS ..... **CHECK**
No warnings. Gear and flaps indications correct.


5 Airspeed ..... **VREF**
Hold VREF from LANDING DATA on the PFD speed tape.

6 Autopilot ..... **OFF above minimum use height**
Press AP to disconnect it in time.

Touchdown and rollout



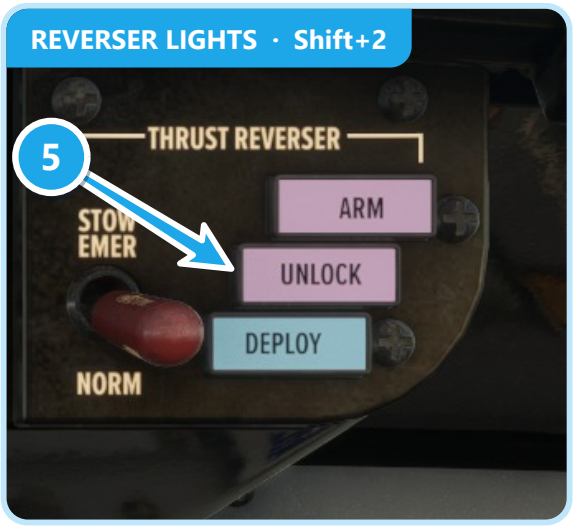

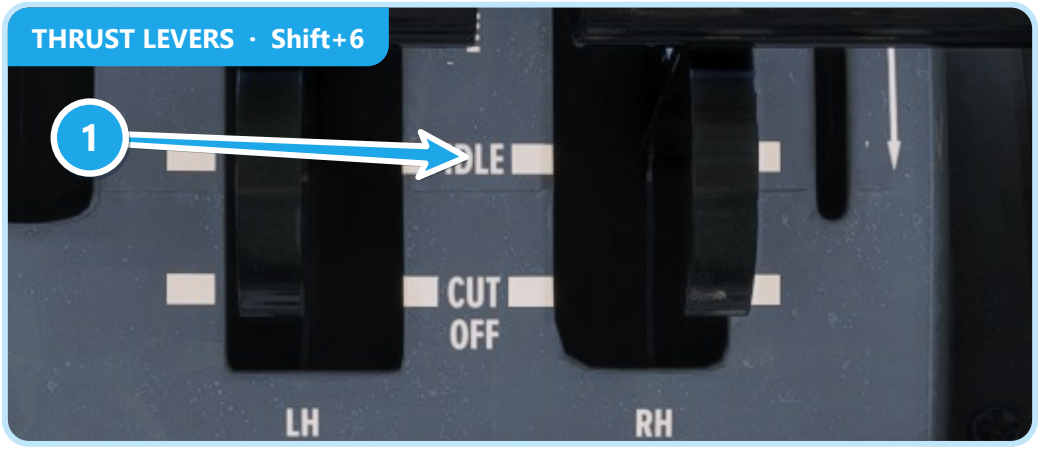



CHECKLIST · LANDING — ITEM · RESPONSE · HOW

1. **Throttles** ..... **IDLE**
   Both levers to IDLE over the threshold.
2. **Speed Brakes** ..... **EXTEND at touchdown (100%)**
   Speed brake lever fully back.
3. **Elevator Control** ..... **FORWARD PRESSURE at touchdown**
   Gentle forward pressure keeps the nose wheel down.
4. **Brakes** ..... **APPLY after nose wheel ground contact**
   Toe brakes, smoothly.
5. **Thrust Reversers** ..... **DEPLOY after nose wheel ground contact**
   Lift the reverser levers. DEPLOY lights on the glareshield.
6. **Thrust Reversers** ..... **IDLE BY 65 KIAS**
   Reverser levers back to idle reverse by 65 knots.


ARRIVAL | BEFORE LANDING | LANDING | SHUTDOWN

Shutdown: brake, anti-ice, engines, IRS

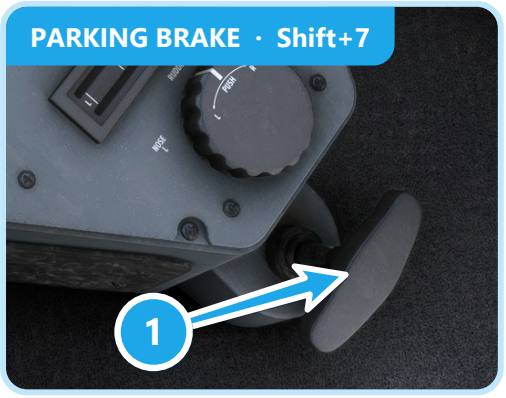

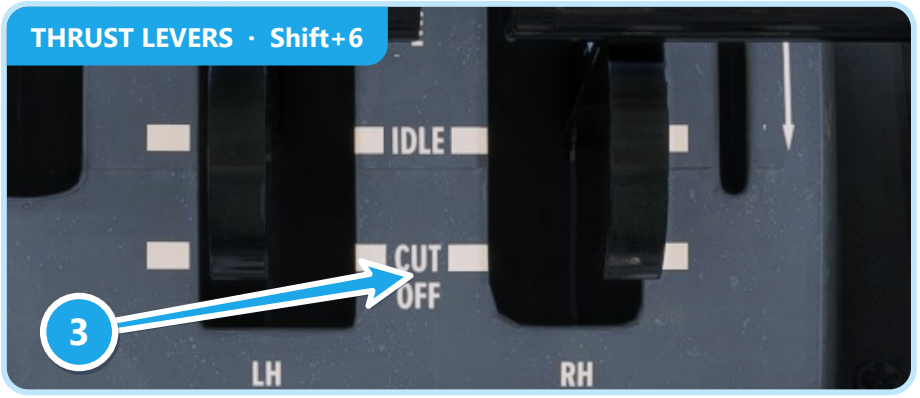




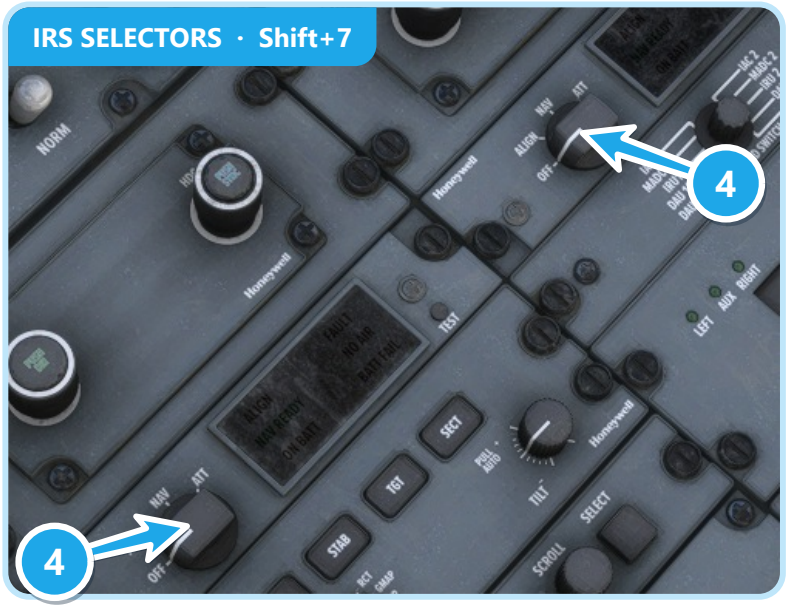



CHECKLIST · SHUTDOWN — ITEM · RESPONSE · HOW

1. **Parking Brake** ..... SET
   Pull the T-handle UP.
2. **Anti-Ice Systems** ..... ALL OFF
   Every anti-ice switch DOWN.
3. **Thrust Reversers** ..... CUTOFF
   Thrust levers back to CUT OFF: the engines stop.
4. **IRS Mode Control Knobs** ..... OFF
   Both IRS selectors to OFF.

Shutdown: cabin, gyro, power

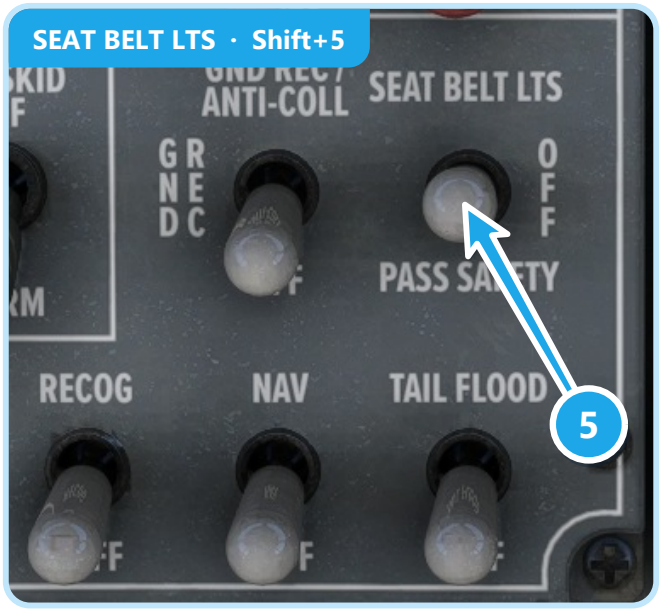

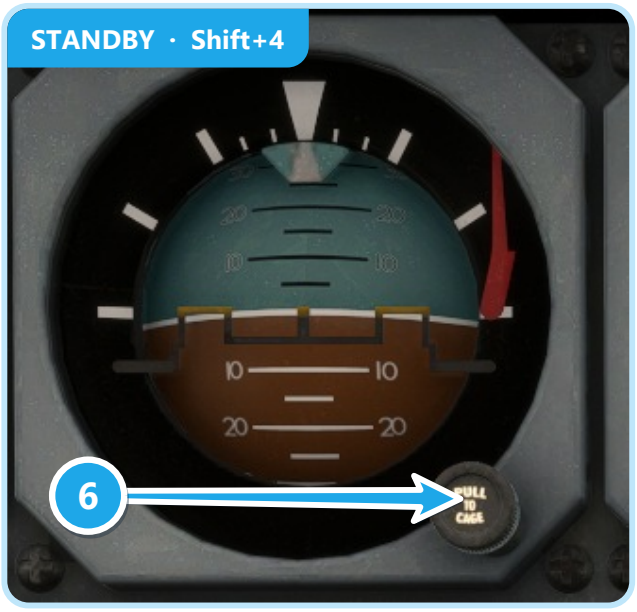

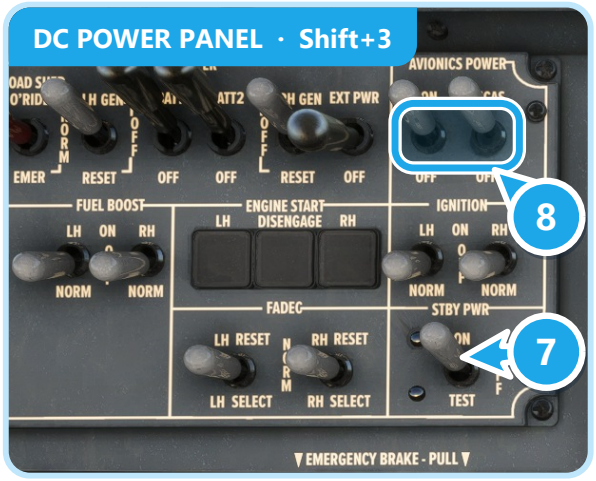



CHECKLIST · SHUTDOWN — ITEM · RESPONSE · HOW

5 Passenger Advisory Lights ..... **OFF**
SEAT BELT LTS switch: middle.

6 Standby Gyro ..... **CAGED**
Pull the PULL TO CAGE knob.

7 STBY PWR ..... **OFF**
STBY PWR switch DOWN.

8 Avionics Power / EICAS Switches ..... **OFF**
Both switches under AVIONICS POWER: DOWN.


9 EMERG LT Switch ..... **ARM**
EMERG LT switch at ARM.

Shutdown: fuel, APU, lights, batteries

FUEL · Shift+8




APU MASTER · Shift+9

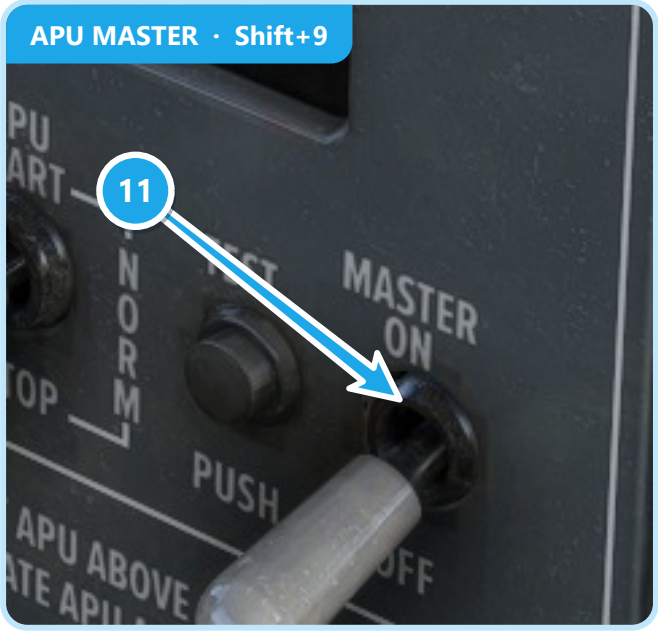

EXTERIOR LIGHTS · Shift+5



BATTERIES · Shift+3

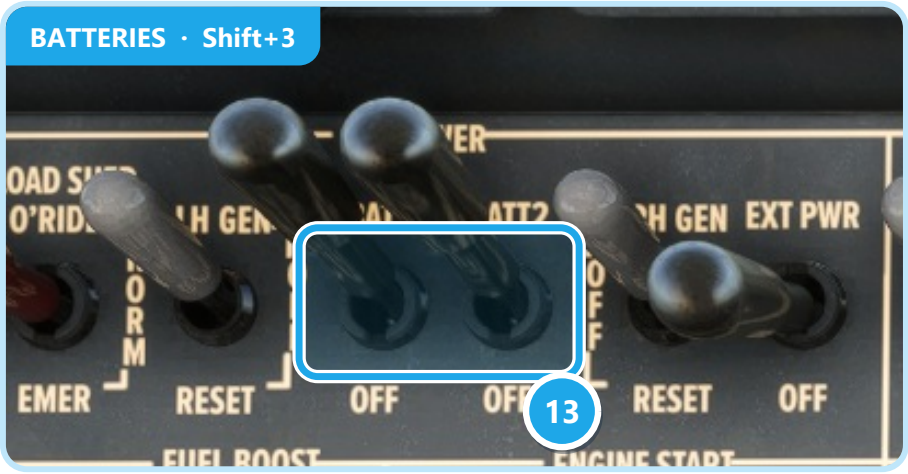

CHECKLIST · SHUTDOWN — ITEM · RESPONSE · HOW

10 GRVTY XFLOW Switch — OFF

GRVTY XFLOW switch on the FUEL panel: OFF.

11 APU MASTER Switch — OFF

APU MASTER switch DOWN (if the APU was running).

12 Exterior Lights — OFF

Beacon, NAV, taxi and landing lights: all off.

13 BATT 1 and BATT 2 Switches — OFF

Both switches DOWN. The aircraft is cold and dark.

All 169 items at a glance

BEFORE START

☐	1	STBY PWR Switch	ON
☐	2	EMERG LT Switch	ARM
☐	3	BATT 1 and BATT 2 Switches	ON
☐	4	EICAS POWER Switch	ON
☐	5	APU START	REFER TO APU START CHECKLIST
☐	6	AVIONICS POWER Switch	ON
☐	7	IRS	ALIGN / NAV
☐	8	FMS	INSERT PRESENT POSITION
☐	9	Parking Brake	VERIFY SET
☐	10	Wheel Chocks	REMOVED - Use Settings page in Tablet
☐	11	Cabin Door	CLOSE / LOCK
☐	12	Passenger Briefing	COMPLETED
☐	13	Seats / Belts / Harnesses / Pedals	ADJUST / SECURE
☐	14	Exterior Lights	AS REQUIRED
☐	15	EICAS	CHECK for warnings
☐	16	ATIS / Clearance/FMS	AS REQUIRED. Program FMS
☐	17	Instruments / Avionics / FLPN	Set course bugs and pointers as required for departure. COMM/NAV/ADF radios tuned and verified. Transponder set to STBY
☐	18	Fuel Quantity / Balance	CHECK - Maximum intentional fuel imbalance is 400 lbs
☐	19	CTR WING XFER Switches	NORM / AS REQUIRED
☐	20	V-Speeds	SET - TAKEOFF DATA FMS page

APU START

☐	1	BATT 1 and BATT 2 Switches	ON
☐	2	LH FUEL BOOST Switch	NORM
☐	3	APU STARTER DISENGAGE Switch	NORMAL
☐	4	APU MASTER Switch	ON
☐	5	APU TEST	PUSH
☐	6	APU GENERATOR Switch	ON
☐	7	APU DC VOLTS	CHECK (22 volts minimum)
☐	8	APU	START
☐	9	Hold APU START switch up until APU RELAY ENGAGED light illuminates	APU RELAY ENGAGED light ON
☐	10	APU RELAY ENGAGED Light	ON, then OFF before READY TO LOAD light ON
☐	11	LOAD SHED Switch	NORM
☐	12	GPU	DISCONNECT / CLEAR (if used)
☐	13	APU Ammeter	CHECK (400A max on ground/200A max in flight)
☐	14	APU BLEED AIR Switch	ON (for engine start) AS REQUIRED (for PAC bleed)

All 169 items at a glance

STARTING ENGINES

☐	1	APU START	REFER TO APU START CHECKLIST
☐	2	PAC ISOL VALVE Knob	CLOSED
☐	3	Start duct pressure	At least 30 PSI
☐	4	Right Engine - START	PRESS (confirm START button and DISENGAGE button illuminate)
☐	5	Throttle	IDLE (by 10% N2 RPM)
☐	6	N1 Rotation	CONFIRM
☐	7	Oil Pressure	CHECK
☐	8	ITT	MONITOR
☐	9	Hydraulic Pressure	VERIFY
☐	10	Left Engine - START	Same as right engine
☐	11	Hydraulic Pressure	VERIFY
☐	12	Generators	ON
☐	13	Ground Air Service/GPU (if used)	DISCONNECT
☐	14	APU Bleed Air Switch	OFF (check bleed sources)
☐	15	Select EICAS SYS, ENG on the MFD	Duct pressure is from right engine
☐	16	R ENG BLD AIR Knob	OFF (pressure should be zero)
☐	17	PAC ISOL VALVE Knob	OPEN (pressure is from left engine)
☐	18	L ENG BLD AIR Knob	OFF (pressure should be zero)
☐	19	L ENG BLD AIR Knob	HP/LP (check pressure)
☐	20	PAC ISOL VALVE Knob	CLOSED (pressure should be zero)
☐	21	R ENG BLD AIR Knob	HP/LP (check pressure)
☐	22	APU Bleed Air Switch	AS DESIRED

SECOND ENGINE: CROSS BLEED METHOD

☐	1	PAC ISOL VALVE Knob	OPEN
☐	2	PAC BLEED SELECT Switch	HP
☐	3	Opposite ENG BLD AIR Knob	HP/LP
☐	4	Opposite Engine	Adjust THR maintain 30 PSI minimum start pressure (approximately 55% N1)
☐	5	Left Engine - START	PRESS (confirm START button and DISENGAGE button illuminate)
☐	6	Throttle	IDLE (by 10% N2 RPM)
☐	7	N1 Rotation	CONFIRM
☐	8	Oil Pressure	CHECK
☐	9	ITT	MONITOR
☐	10	Opposite Engine	IDLE
☐	11	Hydraulic Pressure	VERIFY
☐	12	Generators	ON
☐	13	PAC BLEED SELECT Switch	NORMAL
☐	14	PAC ISOL VALVE Knob	CLOSED

All 169 items at a glance

BEFORE TAXI

☐	1	Flight Controls	FREE / CORRECT EICAS INDICATIONS
☐	2	Flaps / Slats Lever	UP
☐	3	Rudder Control / EICAS	VERIFY UPPER RUDDER REMAINS CENTERED WITH FLAPS UP
☐	4	Flaps / Slats	SET FOR TAKEOFF / CHECK EICAS INDICATIONS
☐	5	Speed Brakes	CHECK / STOWED / EICAS INDICATIONS
☐	6	AHRS or IRS	ALIGNED / NO FLAGS
☐	7	EICAS	CHECK (all messages either normal or resolved)
☐	8	Standby Gyro	UNCAGED
☐	9	Anti-Ice Systems	AS REQUIRED
☐	10	Pressurization ALT SEL	NORM
☐	11	Passenger Advisory Lights	PASS SAFETY
☐	12	Seats / Seat Belts / Shoulder Harnesses/Aft Divider Sliding Doors	CHECK / SECURE / LATCHED OPEN

TAXI

☐	1	Exterior Lights	AS REQUIRED
☐	2	Brakes	APPLY and HOLD
☐	3	Parking Brake	RELEASE
☐	4	Brakes	CHECK
☐	5	Nose Wheel Steering	CHECK
☐	6	Thrust Reversers	CHECK / STOWED
☐	7	Flight Instruments	CHECK

BEFORE TAKEOFF

☐	1	Anti-Ice Systems (if required)	CHECK
☐	2	LH and RH ENGINE, STABILIZER, and SLAT ANTI-ICE	ON / CHECK COLD MESSAGES (2-3 minutes)
☐	3	Throttles	APPROXIMATELY 40% N1
☐	4	Check CAS	COLD (messages go out, No HOT or LEAK messages)
☐	5	ANTI-ICE Switches	AS REQUIRED. It is suggested that Pitot / Static Anti-Ice be employed for all flights
☐	6	Throttles	IDLE
☐	7	Seats / Seat Belts / Shoulder Harnesses/Aft Divider Sliding Doors	CHECK / SECURE / LATCHED OPEN
☐	8	Flaps / Slats	SET FOR TAKEOFF
☐	9	Speed Brakes	RETRACTED (0%)
☐	10	Trims	SET FOR TAKEOFF
☐	11	Yaw Damper and Mach Trim	CHECK ON
☐	12	Crew Briefing	COMPLETE
☐	13	Radar	AS REQUIRED
☐	14	Transponder	TA/RA
☐	15	LH and RH PITOT STATIC Anti Ice Switches	BOTH ON
☐	16	Exterior Lights	AS REQUIRED
☐	17	Engine Instruments	CHECK
☐	18	EICAS	CHECK

TAKEOFF

☐	1	Throttles	TO/MC DETENT
☐	2	Brakes	RELEASE
☐	3	EICAS	CHECK NORMAL INDICATIONS, N1 matches command
☐	4	Elevator Control	ROTATE AT VR to achieve 13 deg initial pitch

All 169 items at a glance

AFTER TAKEOFF/CLIMB

☐	1	Landing Gear	UP
☐	2	Flaps / Slats	UP (airspeed above 170 KIAS)
☐	3	Throttles	CLB DETENT
☐	4	Anti-Ice Systems	AS REQUIRED
☐	5	ENG SYNC Knob	AS DESIRED
☐	6	Pressurization	CHECK
☐	7	Passenger Advisory Lights	AS REQUIRED
☐	8	Altimeters (transition altitude)	SET
☐	9	Exterior Lights (FL180)	AS DESIRED
☐	10	APU (prior to climb above FL310)	OFF

CRUISE

☐	1	Throttles	CRU detent or AS REQUIRED
☐	2	Pressurization	CHECK
☐	3	Fuel Transfer	VERIFY

DESCENT

☐	1	LH and RH WINDSHIELD ANTI-ICE Switches	BOTH ON
☐	2	Side Window Vent Knobs	CLOSED
☐	3	Pressurization	CHECK/SET LANDING ELEVATION
☐	4	ANTI-ICE Switches	AS REQUIRED
☐	5	APU	AS DESIRED
☐	6	Exterior Lights (FL180)	AS REQUIRED
☐	7	Altimeter (transition level)	SET

APPROACH

☐	1	Landing Data	CONFIRM
☐	2	Crew Briefing	COMPLETE
☐	3	Avionics / Flight Instruments	CHECK/SET
☐	4	Minimums	SET (RA/BARO)
☐	5	FUEL CROSSFEED Switch	OFF
☐	6	Exterior Lights	AS REQUIRED
☐	7	Flaps / Slats	AS REQUIRED
☐	8	Passengers	BRIEF
☐	9	Seats / Seat Belts / Shoulder Harnesses/Aft Divider Sliding Doors	CHECK / SECURE / LATCHED OPEN
☐	10	Passenger Advisory Lights	PASS SAFETY
☐	11	LH and RH IGNITION Switches	NORM
☐	12	Pressurization	ZERO DIFFERENTIAL at touchdown
☐	13	ENG SYNC Knob	OFF

BEFORE LANDING

☐	1	Landing Gear	DOWN and LOCKED (3 green lights)
☐	2	Flaps	AS REQUIRED
☐	3	Speed Brakes	RETRACTED (0%)
☐	4	EICAS	CHECK
☐	5	Airspeed	VREF
☐	6	Autopilot	OFF above minimum use height

All 169 items at a glance

LANDING

☐	1	Throttles	IDLE
☐	2	Speed Brakes	EXTEND at touchdown (100%)
☐	3	Elevator Control	FORWARD PRESSURE at touchdown
☐	4	Brakes	APPLY after nose wheel ground contact
☐	5	Thrust Reversers	DEPLOY after nose wheel ground contact
☐	6	Thrust Reversers	IDLE BY 65 KIAS

SHUTDOWN

☐	1	Parking Brake	SET
☐	2	Anti-Ice Systems	ALL OFF
☐	3	Thrust Reversers	CUTOFF
☐	4	IRS Mode Control Knobs	OFF
☐	5	Passenger Advisory Lights	OFF
☐	6	Standby Gyro	CAGED
☐	7	STBY PWR	OFF
☐	8	Avionics Power / EICAS Switches	OFF
☐	9	EMERG LT Switch	ARM
☐	10	GRVTY XFLOW Switch	OFF
☐	11	APU MASTER Switch	OFF
☐	12	Exterior Lights	OFF
☐	13	BATT 1 and BATT 2 Switches	OFF