

Power on

Shift + 8: left lower panel | Shift + 7: rear pedestal

LEFT LOWER PANEL / Shift + 8

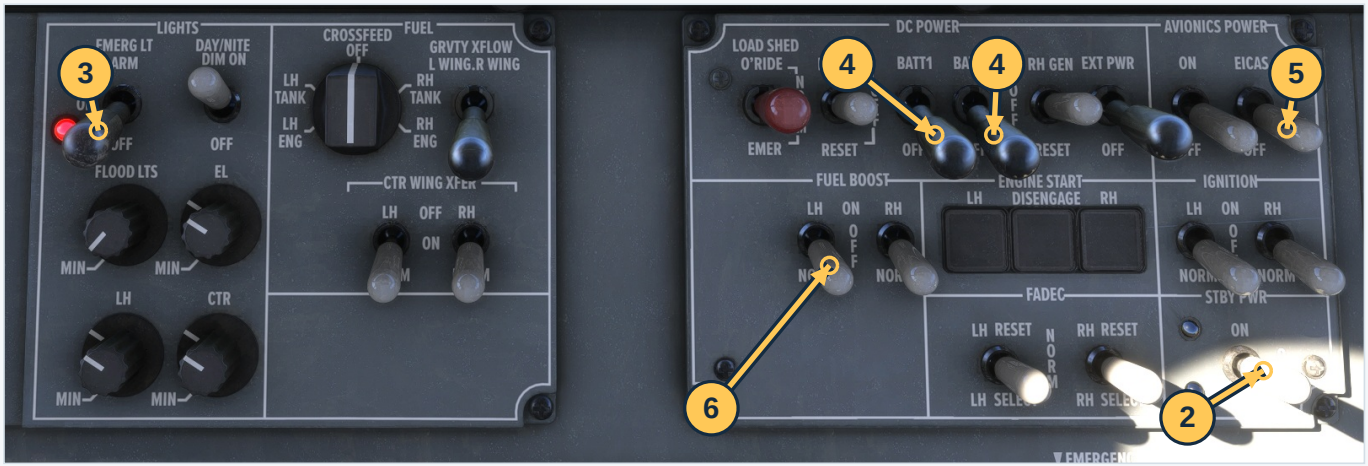

PARKING BRAKE / rear end of centre pedestal

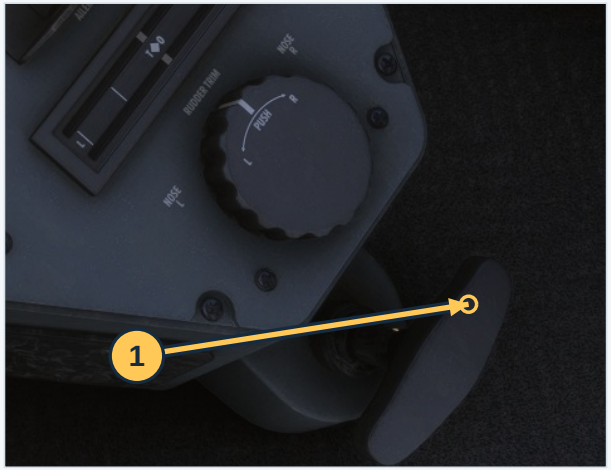

1. **Parking brake: SET**
   Pull the handle UP. Keep the aircraft parked while you work.
2. **STBY PWR: ON**
   Use the standby power switch at the bottom right of this panel.
3. **EMERG LT: ARM**
   Move the emergency-light switch to ARM.
4. **BATT 1 + BATT 2: ON**
   Turn both battery switches on.
5. **EICAS POWER: ON**
   This is the right-hand switch under AVIONICS POWER.
6. **LH FUEL BOOST: NORM**
   Use the left fuel-boost switch.


Follow the numbers. These cold-and-dark photos show WHERE controls are; set them as written.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.

Start the APU

Shift + 9: APU panel beside the co-pilot

APU PANEL / right side of cockpit

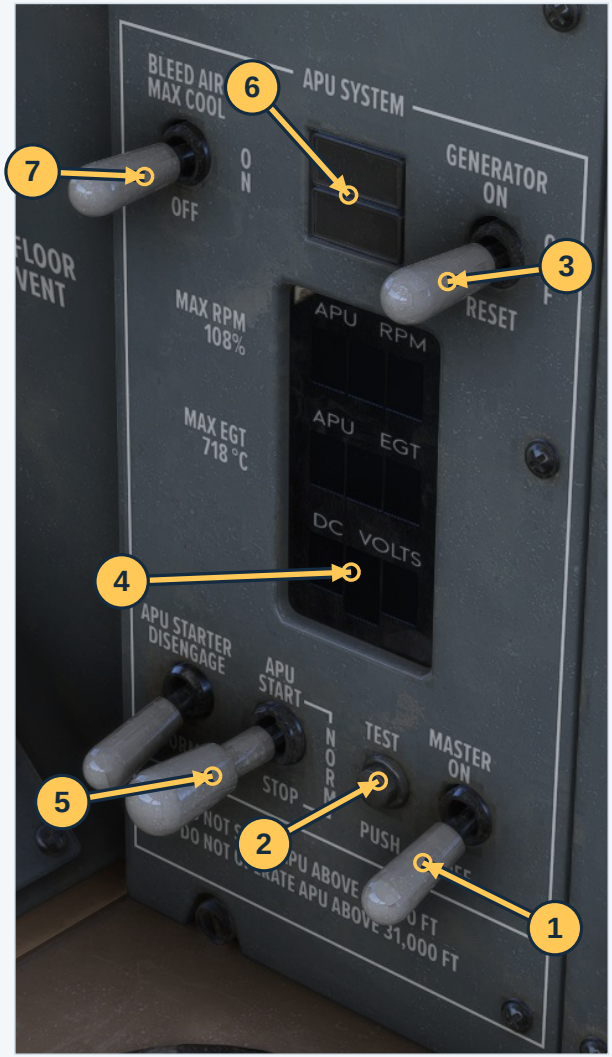

1. **MASTER: ON**
   Turn the APU master switch on.
2. **TEST: press**
   Push the round TEST button once.
3. **GENERATOR: ON**
   Turn the APU generator switch on.
4. **Check DC VOLTS**
   Read the bottom part of the APU display: at least 22 V.
5. **Hold APU START up**
   Hold until the RELAY ENGAGED light comes on, then release.
6. **Wait: READY TO LOAD**
   Wait for the start sequence to finish.
7. **BLEED AIR: ON**
   Move the bleed-air switch to ON for engine starting.

Before starting: LH fuel boost NORM (page 1); APU STARTER DISENGAGE stays NORMAL.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.


Avionics and IRS

Shift + 8: power panel | Shift + 7: IRS selectors

AVIONICS POWER / Shift + 8



TWO IRS SELECTORS / Shift + 7

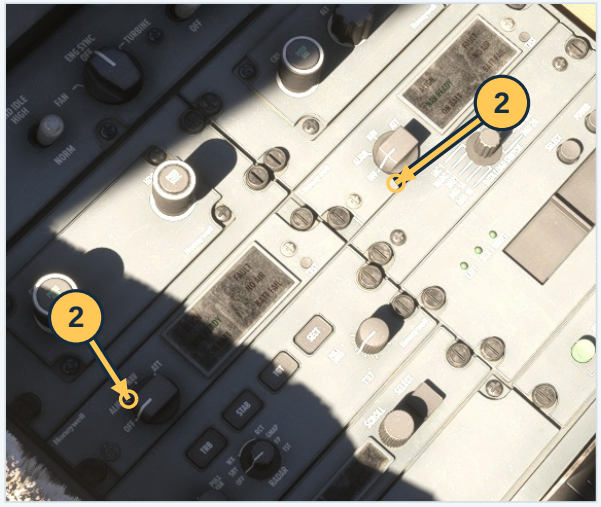

1 AVIONICS POWER: ON

Turn on the left switch under AVIONICS POWER. Leave EICAS on.

2 Both IRS selectors: NAV

Use the two rotary selectors behind the throttles.

3 Stay parked

Allow the IRS to align. Complete FMS position initialisation on the next page.

Then check the displays


Wait until the flight displays have valid attitude and position information.

IRS = the navigation/attitude reference system. NAV is marked beside each selector.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.

FMS and takeoff data

Shift + 3: the two flight management computers
LEFT FMS / buttons alongside the screen select its rows

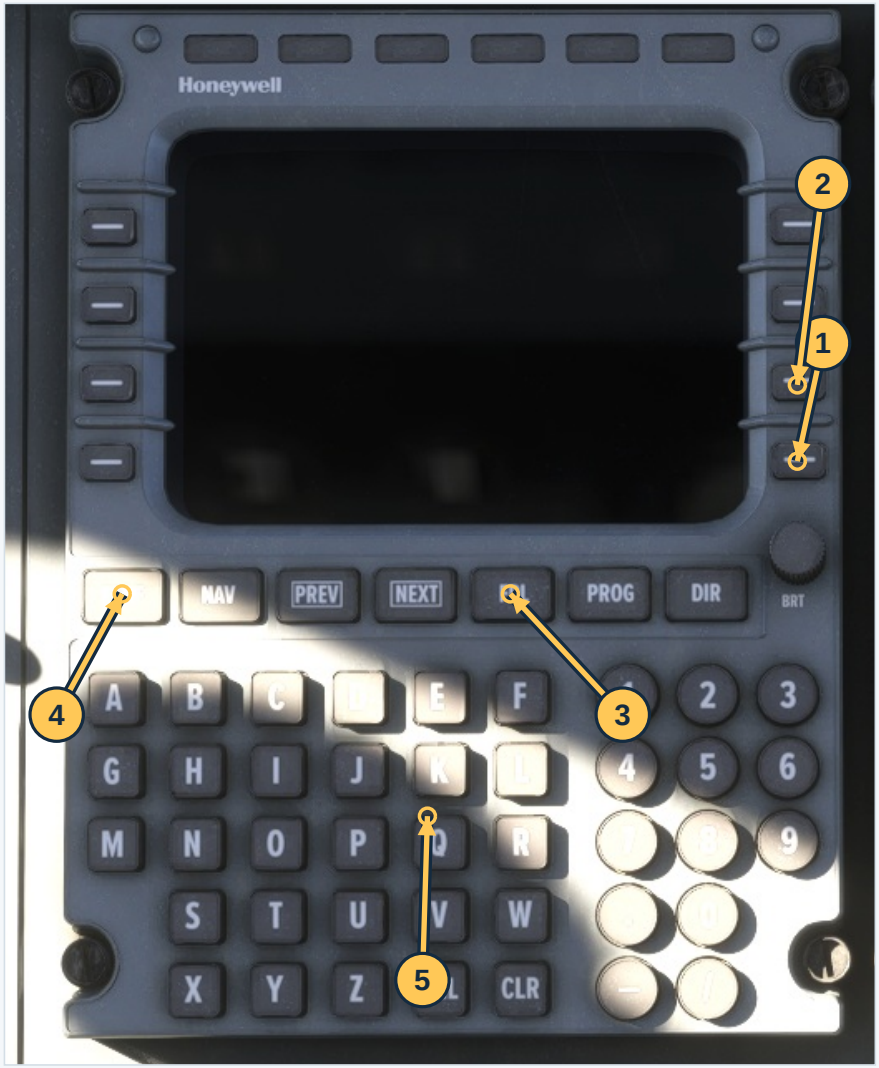

1 Open POS INIT

On initial NAV IDENT, press the fourth screen-side key down on the RIGHT.

2 Load GPS position

On POS INIT, wait for GPS 1 POS. Press the third key down on the RIGHT.

3 FPL: enter your route

Use the FPL button for the flight plan. Check departure, destination and runway.

4 PERF: takeoff data

Complete weight/runway data and use TAKEOFF DATA to obtain V1, VR and V2.

5 Type with the keypad

Then press the screen-side key next to the field you want to fill.

Set takeoff flaps to 15 before expecting V-speeds on the PFD. Use calculated speeds for your flight.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.

Prepare engine starting

Shift + 5: bleed controls | Shift + 8: start buttons

BLEED-AIR CONTROLS / Shift + 5



START BUTTONS AND GENERATORS / Shift + 8



1 PAC ISOL VALVE: CLOSED

Turn the horizontal isolation-valve control to C (closed).

Check start-air pressure

APU READY TO LOAD and bleed ON. Confirm at least 30 PSI on the engine/system display before starting.

2 RIGHT engine first

The RIGHT START button is the rightmost of the three black buttons.

3 LEFT engine second

The LEFT START button is the leftmost black button. The middle button is DISENGAGE.

4 Generators after both starts

Set LH GEN and RH GEN on when both engines are running.


Continue to page 6 for throttle timing and engine monitoring. Do not just press both start buttons.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.

Start right, then left

Shift + 6: throttles | Shift + 4: centre engine display

THROTTLES / Shift + 6

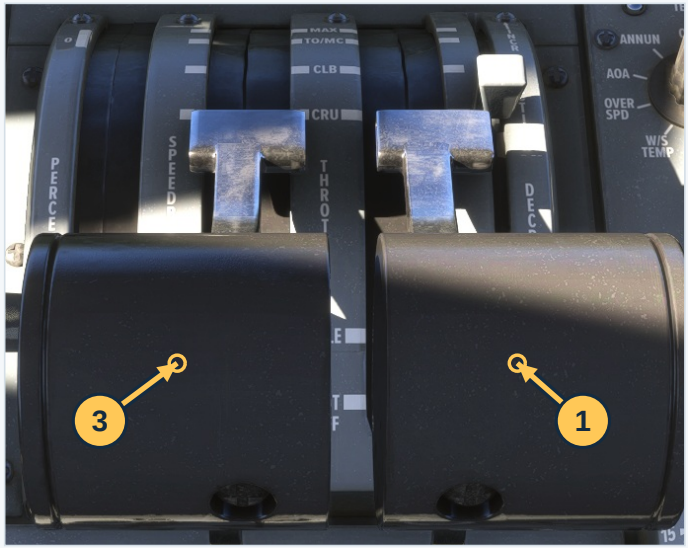

CENTRE EICAS / Shift + 4



1 Right start + right IDLE

Press RIGHT START (previous page). Move the RIGHT throttle to IDLE by 10% N2.

2 Watch EICAS

Check N1 rotation, oil pressure, ITT and hydraulic pressure as the engine starts.

3 Repeat for the left engine

When the right start is normal, press LEFT START and move the LEFT throttle to IDLE by 10% N2.

Finish the start

Both generators ON. APU bleed OFF; verify the engine bleed setup.

Stop for abnormal indications

Do not continue with abnormal starter, ITT, oil-pressure or hydraulic indications.


Display photo is unpowered: arrow 2 identifies the engine-monitoring screen, not example normal values.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.

Set up for taxi

Shift + 6: throttle quadrant | tablet: Ground Services

THROTTLE QUADRANT / viewed from above

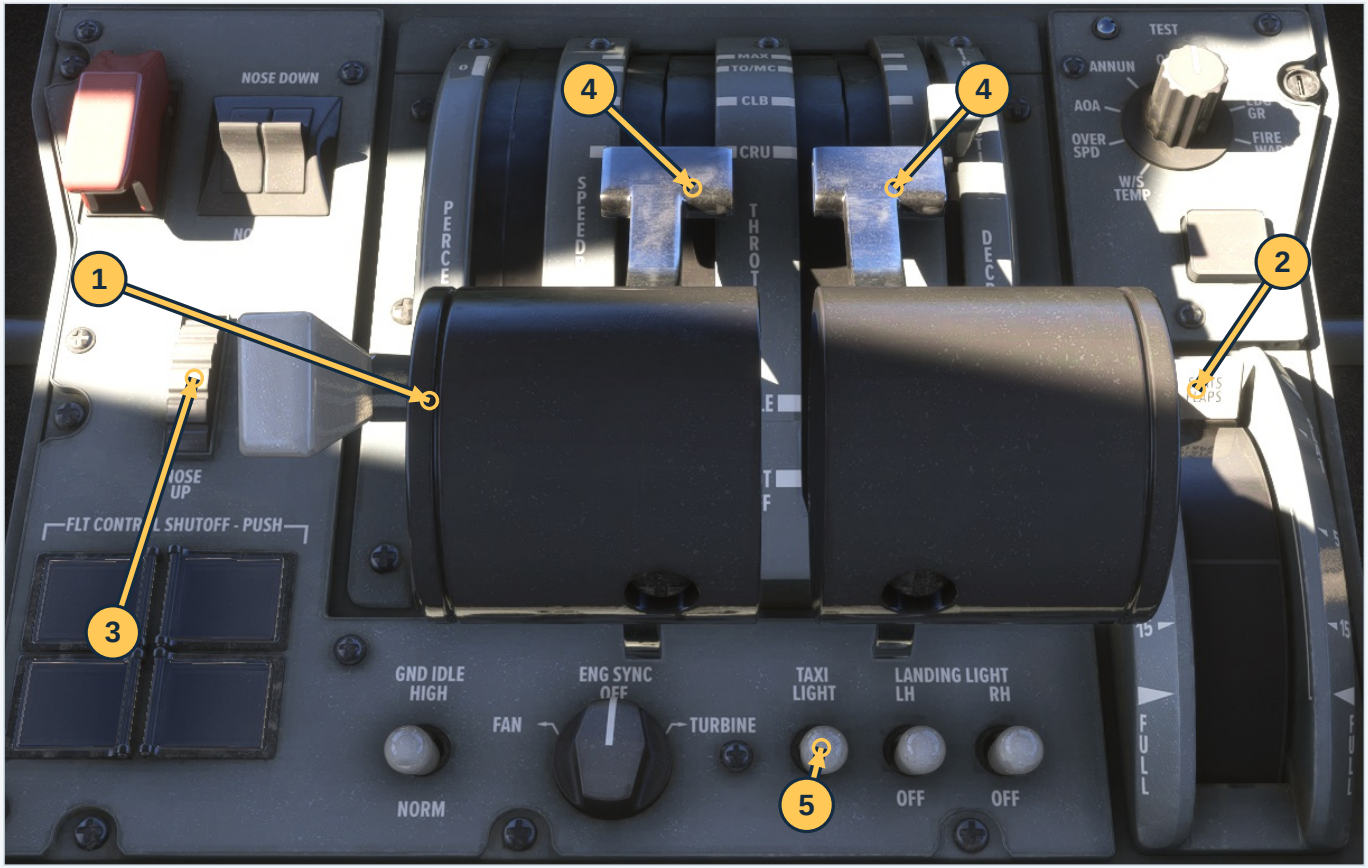

1 Speedbrake: fully STOWED

Lever on the LEFT of the throttles. Check EICAS shows 0%. Your CP3 lever must also be stowed.

2 Flaps/slats: takeoff

Use the white SLATS FLAPS handle on the RIGHT. Select takeoff 15 and check the indication.

3 Trim: takeoff band

Set elevator trim, then confirm the takeoff band on EICAS.

4 Reversers: STOWED

Check both reverser handles/indications.

5 Taxi light: as required

Use the TAXI LIGHT switch behind the throttles.

Also: controls free/correct; IRS aligned; EICAS messages resolved. Tablet > Ground Services: chocks off, door shut.

Before entering the runway

Shift + 5: pitot heat | Shift + 2: yaw damper / Mach trim

ANTI-ICE PANEL / Shift + 5



FLIGHT GUIDANCE PANEL / Shift + 2



1 Both PITOT/STATIC: ON

Switch LH and RH pitot/static heat on. Set other anti-ice for the conditions.

2 Yaw damper: ON

Use YD on the flight-guidance panel; check its indication.

3 Mach trim: ON

Use M TRIM directly below YD; check its indication.

Recheck takeoff configuration

Flaps set, trim in takeoff band, speedbrakes 0%, reversers stowed.

Set your lights

Landing-light switches are beside the taxi-light switch shown on page 7.

Next page: transponder and departure checks. Hold short until you are cleared to enter the runway.


Transponder and final check

Shift + 3: radio units | Shift + 6: departure altitude knob

LEFT RADIO UNIT / Shift + 3



ALTITUDE SELECTOR / Shift + 6

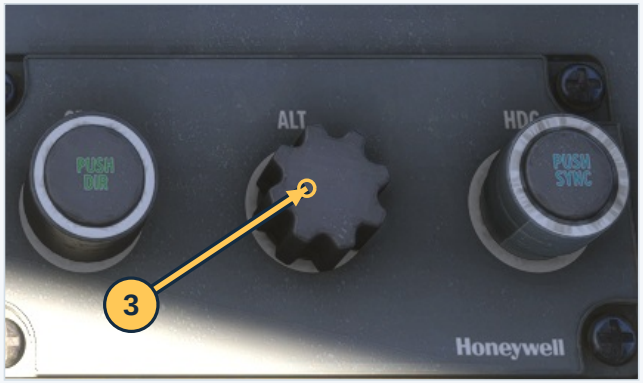

1 Transponder: TA/RA

Use the radio unit mode controls and screen-side keys to select TA/RA. Confirm the displayed mode.

2 Check the radio display

Verify the assigned squawk and the transponder mode before departure.

3 Set departure altitude

Turn the ALT knob to the cleared initial altitude and check the flight display.

Final cross-check

Confirm fuel/weight, runway, departure, flight director and calculated V1 / VR / V2.

EICAS: ready for takeoff

Resolve abnormal messages before applying takeoff thrust.


The radio screen is off in this location photo. Use its displayed menu labels once powered.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.

Takeoff and initial climb

Shift + 6: thrust / flaps | Shift + 5: landing gear

THRUST DETENTS AND FLAPS / Shift + 6

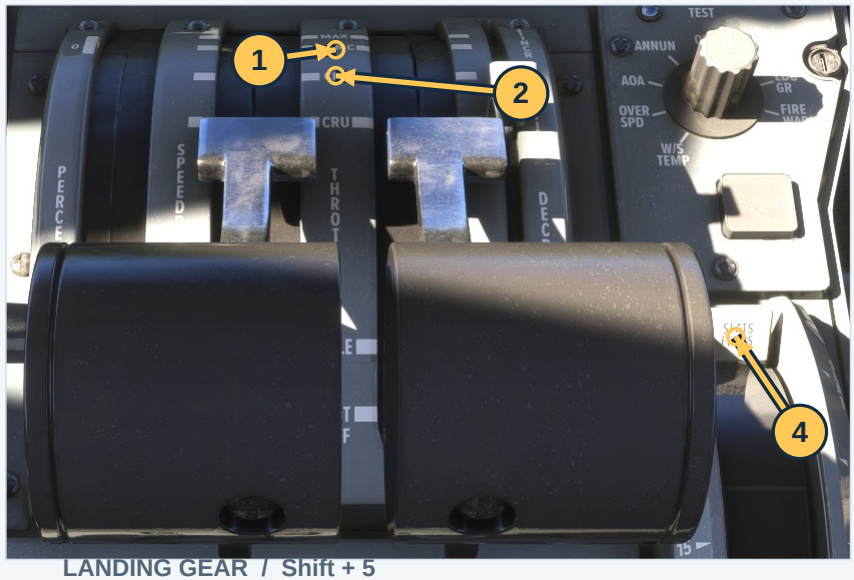

LANDING GEAR / Shift + 5



1 Takeoff thrust: TO/MC

Line up when cleared. Apply TO/MC thrust, release brakes and check engine indications.

Rotate at YOUR calculated VR

Keep the centreline. At VR, ease the nose toward about 13 degrees pitch.

3 Positive climb: gear UP

Confirm a positive climb, then raise the landing gear.

4 Flaps UP when appropriate

Retract flaps/slats above 170 KIAS when appropriate for the departure.

2 Climb thrust: CLB

Set CLB thrust. Follow the flight director and published departure.

Never use a fixed VR. The correct rotation speed depends on weight and conditions.

Source: your original quick-start guide; FlightFX manual pp. 47, 82, 99-100, 131-134, 137. Click for manual.