
Batteries and engine display

Shift + 8: left lower panel | Shift + 7: rear pedestal


POWER PANEL / switches UP to ON

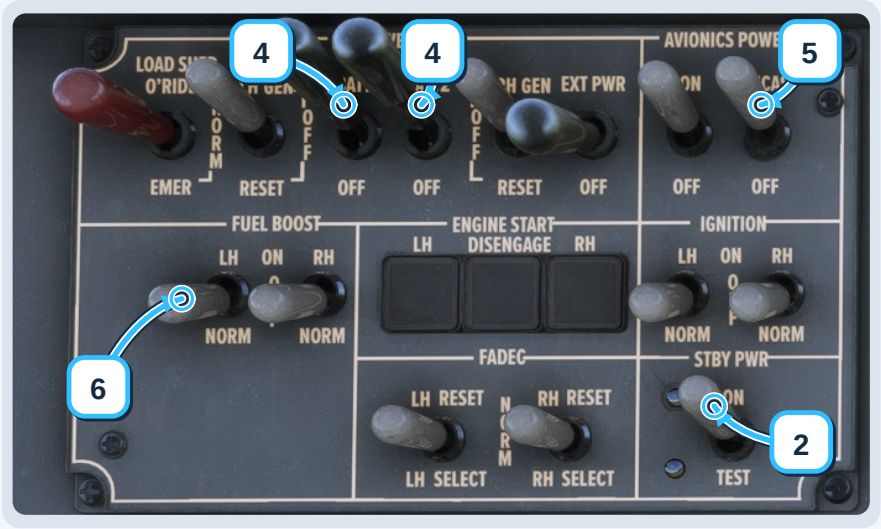

EMERGENCY LIGHTS / ARM



PARKING BRAKE / pull UP

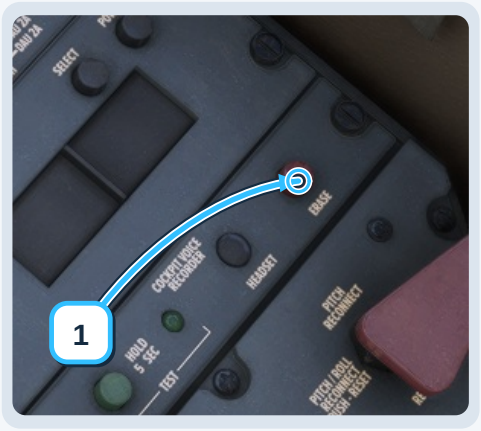

1. **Parking brake SET**
   Pull the handle up. Thrust levers at fuel CUTOFF.
2. **Standby power ON**
   STBY PWR is below the ignition switches.
3. **Emergency lights ARM**
   Set EMERG LT to ARM.
4. **Both batteries ON**
   BATT 1 and BATT 2 must both be on.
5. **EICAS POWER ON**
   Right switch under AVIONICS POWER. This powers the engine display, not the flight displays.
6. **Left fuel boost NORM**
   Needed for the APU. Continue straight to page 2.


Before starting: enough fuel loaded; engine/instrument covers removed in tablet Ground Services. Photos show control locations.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.

Start the APU and get power

Shift + 9: APU panel beside the co-pilot

APU PANEL / right side of cockpit

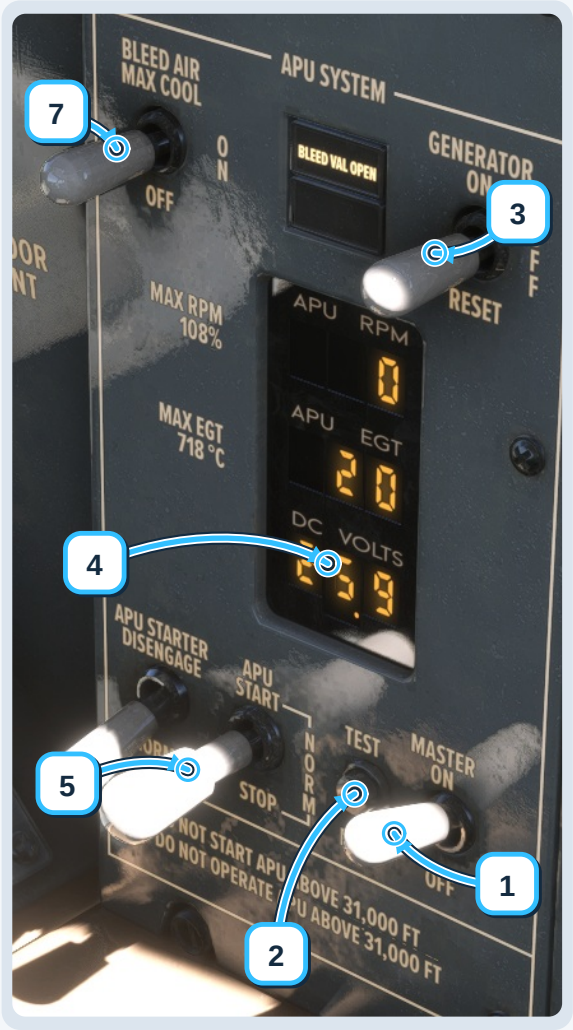

1. **APU MASTER ON**
   APU STARTER DISENGAGE stays NORMAL.
2. **Press TEST**
   Then continue with the generator switch.
3. **APU GENERATOR ON**
   The master switch alone does not select generator power.
4. **Check at least 22 V**
   Read DC VOLTS on the APU display.
5. **Hold START up; release**
   Release when RELAY ENGAGED lights.
6. **Wait for READY TO LOAD**
   Check LOAD SHED is NORM. Do not proceed just because the APU is making noise.
7. **APU BLEED AIR ON**
   Use ON for starting, not MAX COOL.

CHECK: APU READY TO LOAD illuminated, generator selected ON, bleed ON. Then turn on the flight displays (page 3).

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.


Flight displays: power, then align

Shift + 8: power switches | Shift + 7: IRS | Shift + 3: FMS

FLIGHT AVIONICS / LEFT switch UP



BOTH IRS SELECTORS

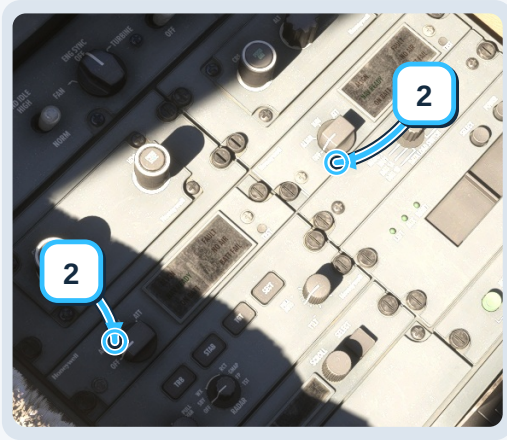

FIRST: POS INIT is RIGHT key 4



1. **Left AVIONICS switch: ON**
   Under AVIONICS POWER, move the LEFT switch up to ON. EICAS was already switched on on page 1.

2. **Both IRS selectors NAV**
   Stay parked while alignment runs.

3. **FMS: load present position**
   Press RIGHT key 4 beside POS INIT (pictured). On the next page, wait for GPS 1 POS; press RIGHT key 3 to load it.

Black flight displays?

Recheck the LEFT power switch, both batteries and APU generator. Check PFD/MFD DIM knobs are turned up.

ATT / HDG FAIL on a lit screen?

It has power. Check both IRS at NAV and present position loaded; wait for alignment. Do not taxi with invalid attitude/heading.

CHECK: flight displays and FMS lit, valid attitude/heading after alignment. EICAS alone does not prove avionics are on.


Start right engine, then left

Shift + 5: bleed air | Shift + 8: START buttons | Shift + 6: throttles


PAC ISOL VALVE



START BUTTONS / LH - DISENGAGE - RH

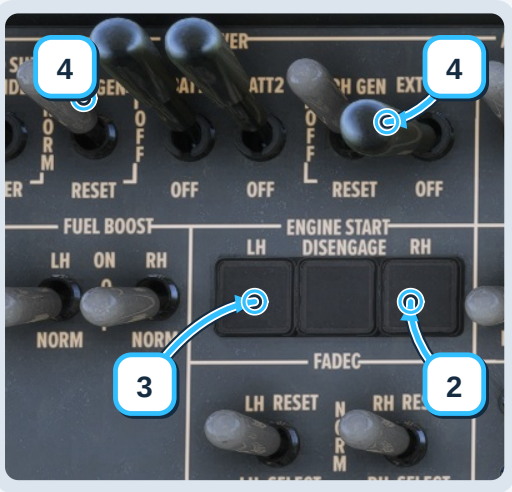

THRUST LEVERS / move from CUTOFF to IDLE

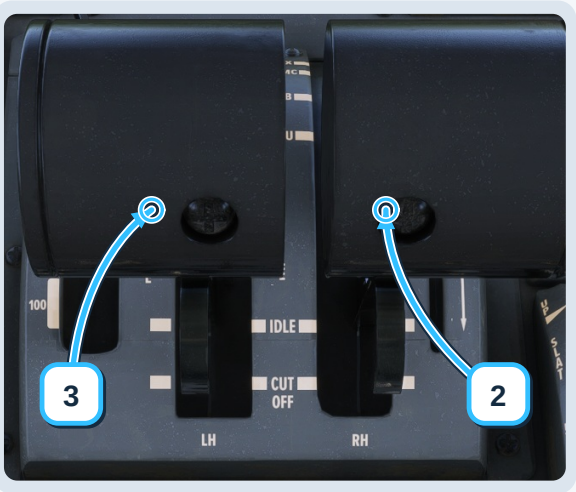

1 Start air ready

APU bleed ON; PAC ISOL VALVE CLOSED. Check duct pressure at least 30 PSI on the engine/system display.

2 RIGHT START; right lever IDLE

Rightmost start button. Move right thrust lever to IDLE by 10% N2; watch EICAS for rotation, oil pressure and ITT.

3 Then LEFT START; left IDLE

Wait for a normal right start. Repeat for the left; check both engines settle and hydraulic pressure builds.

4 Both engine generators ON

Select LH GEN and RH GEN; verify generator warnings clear. Next: set cabin air on page 5.


CM3: hard rear stop = fuel CUTOFF; idle detent = RUN/IDLE. Keep levers at idle once starting. Stop for abnormal engine indications.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.


Air pressure: a simple setup

After engine start | Shift + 5: cabin pressure / air | Shift + 8: pilot BARO SET


SWITCHES: DOWN / RATE: NORM

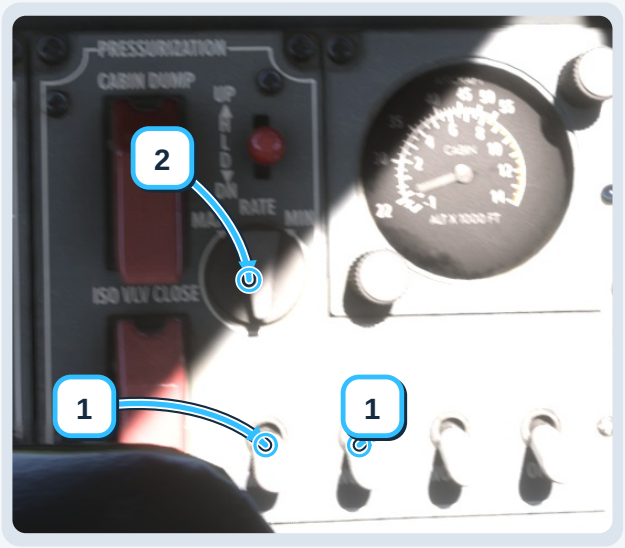

TOP PAIR: ON / BOTTOM PAIR: HP/LP

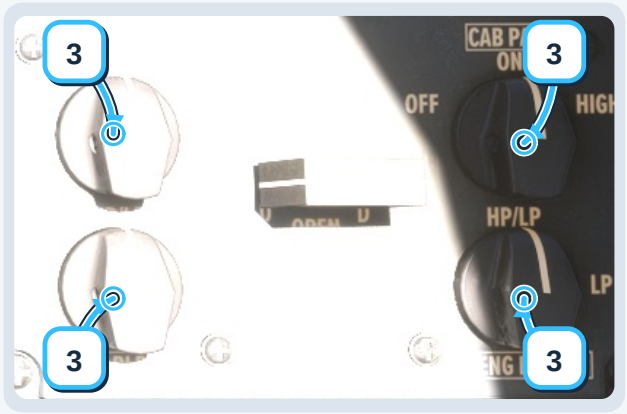

TURN BARO SET FOR QNH / PRESS STD LATER

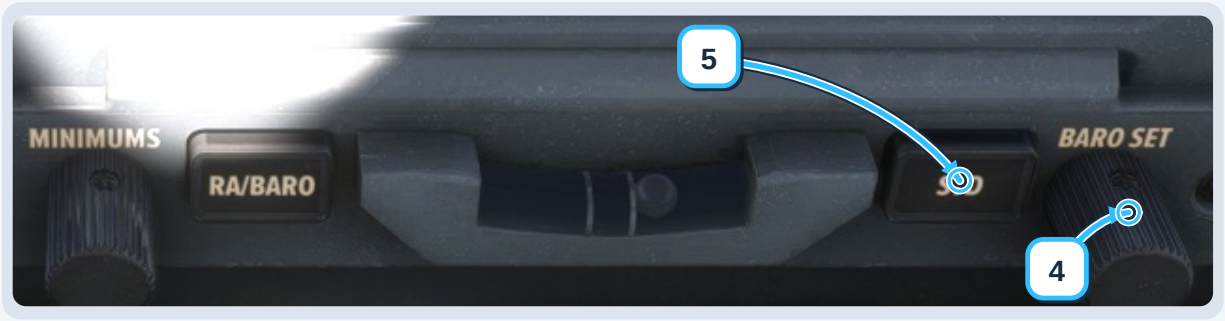

1 Both small switches DOWN: NORM

Below the RATE knob: left switch DOWN to NORM, next switch DOWN to NORM. Leave the red CABIN DUMP guard closed.

2 RATE knob: point to NORM

Turn the black RATE knob to the NORM mark. Cabin pressure then adjusts automatically.

3 Four air knobs: point UP

Top pair (CKPT PAC / CAB PAC): ON. Bottom pair (L / R ENG BLD AIR): HP/LP. PAC ISOL valve CLOSED. APU BLEED (pictured on page 2): OFF. Verify duct pressure; close the door.

4 BARO SET: local QNH

After powering the displays, turn BARO SET to the pressure from ATIS/ATC. Set both pilots and standby altimeter; check altitude roughly matches airport elevation.

5 STD: only at transition altitude

On climb, press STD when passing the published transition altitude (1013 hPa / 29.92 inHg). Reset destination QNH on descent through the transition level.


Do this page once after engine start. Blue arrows locate controls; bold instructions give the required positions. QNH comes from ATIS/ATC.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.


Ready to taxi: the essentials

Shift + 6: flaps / trim / speedbrake | Shift + 3: FMS PERF

THROTTLES, TRIM AND FLAPS / Shift + 6

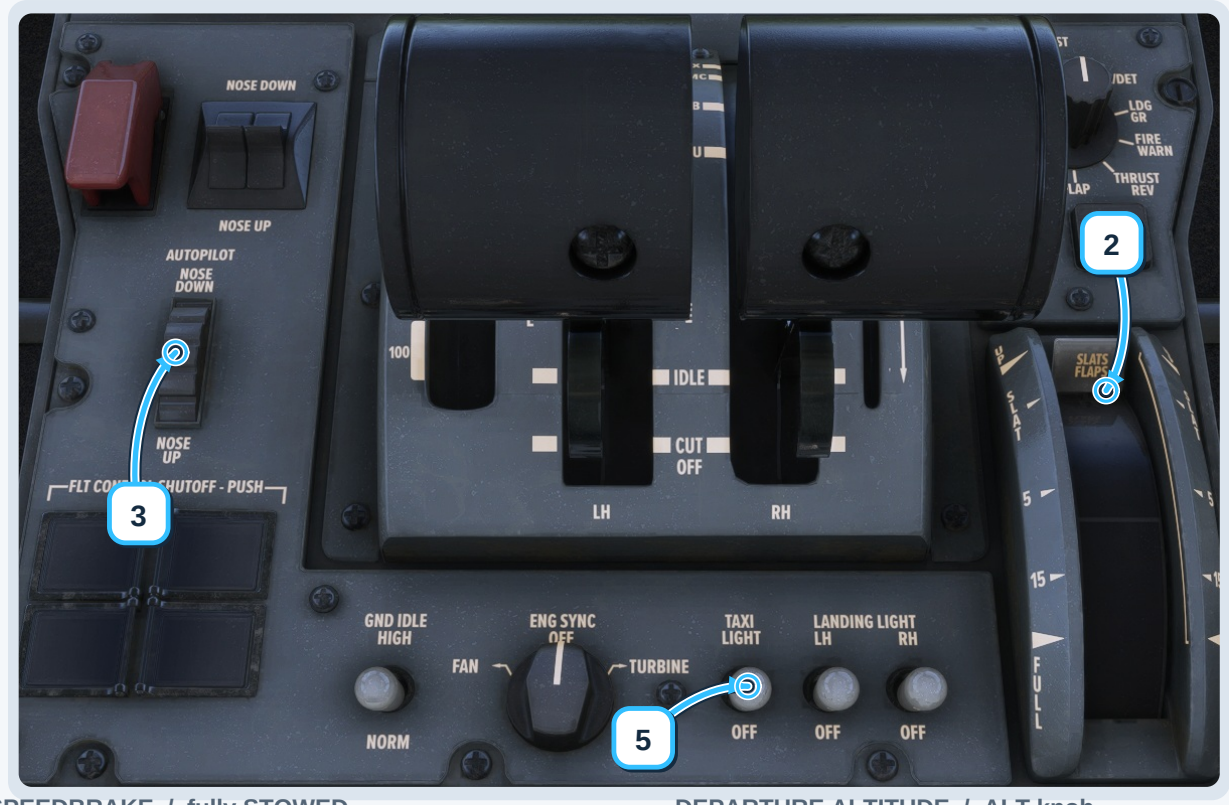

SPEEDBRAKE / fully STOWED

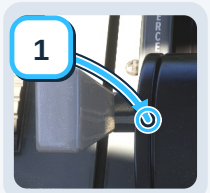

DEPARTURE ALTITUDE / ALT knob



1. **Speedbrake fully STOWED**
   EICAS must show 0%. Put the CP3 speedbrake lever fully forward too.
2. **Flaps/slats takeoff 15**
   Check the actual EICAS indication. Set before calculating takeoff speeds.
3. **Elevator trim: takeoff band**
   Confirm trim is in the takeoff band on EICAS.
4. **Reversers STOWED**
   Check reverser indications on EICAS. Both thrust levers at idle. Controls free and moving correctly; displays aligned.

FMS: takeoff speeds

PERF / TAKEOFF DATA: enter weight and runway data; obtain V1, VR, V2. Check departure route and set the cleared initial altitude.

5. **Remove chocks; taxi**
   Tablet Ground Services: remove chocks. Taxi light on; release parking brake and check brakes at low speed.


CHECK: normal engines, generator power, valid flight displays, takeoff speeds and configuration. Resolve abnormal EICAS messages.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.

Runway checks, then fly

Shift + 5: pitot heat / gear | Shift + 2: YD / M TRIM | Shift + 3: radio

PITOT / STATIC / LH + RH ON

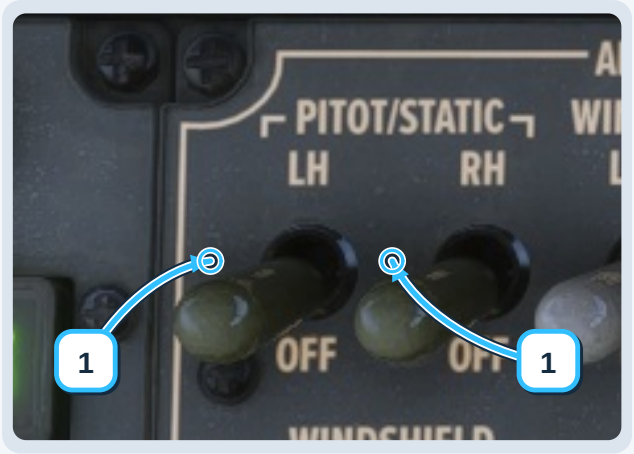

YD + M TRIM / press to engage



GEAR / UP after positive climb



RADIO / select TA/RA mode



1. **Both PITOT/STATIC ON**
   Set other anti-ice for conditions. Landing/strobe lights as required.
2. **Yaw damper + Mach trim ON**
   Press YD and M TRIM; confirm their indications.
3. **Transponder TA/RA**
   Left radio: select mode with left key 4; turn tuning knob to TA/RA. Use assigned squawk.
4. **Line up; TO/MC thrust**
   When cleared, release brakes and apply TO/MC. Check normal engine indications. Rotate at your calculated VR.
5. **Positive climb: gear UP**
   Follow the flight director/departure. Above 170 KIAS, retract flaps/slats when appropriate; select CLB thrust.

Final check: runway/departure, initial altitude, QNH, V-speeds and no unresolved warnings. This is a short simulator flow.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.