

Batteries and engine display

Shift + 8: left lower panel | Shift + 7: rear pedestal

LEFT LOWER PANEL / Shift + 8

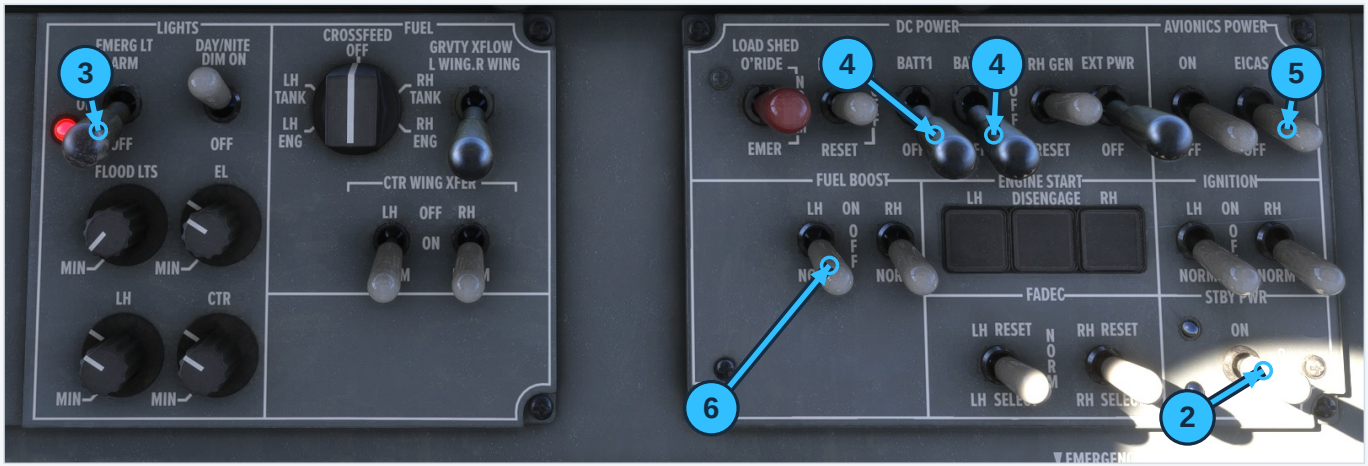

PARKING BRAKE / rear end of centre pedestal

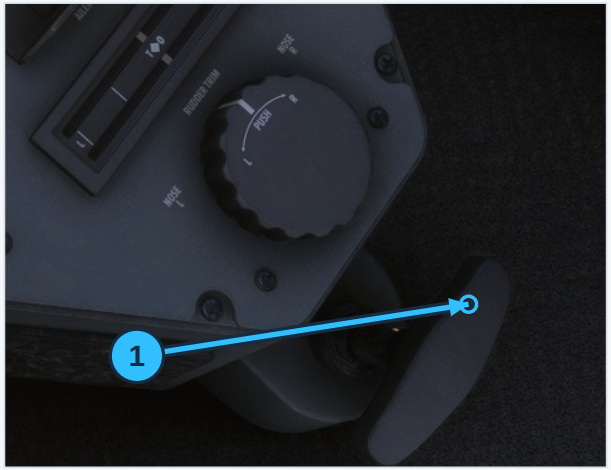

1. **Parking brake SET**
   Pull the handle up. Thrust levers at fuel CUTOFF.
2. **Standby power ON**
   STBY PWR is below the ignition switches.
3. **Emergency lights ARM**
   Set EMERG LT to ARM.
4. **Both batteries ON**
   BATT 1 and BATT 2 must both be on.
5. **EICAS POWER ON**
   Right switch under AVIONICS POWER. This powers the engine display, not the flight displays.
6. **Left fuel boost NORM**
   Needed for the APU. Continue straight to page 2.


Before starting: enough fuel loaded; engine/instrument covers removed in tablet Ground Services. Photos show control locations.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.

Start the APU and get power

Shift + 9: APU panel beside the co-pilot

APU PANEL / right side of cockpit

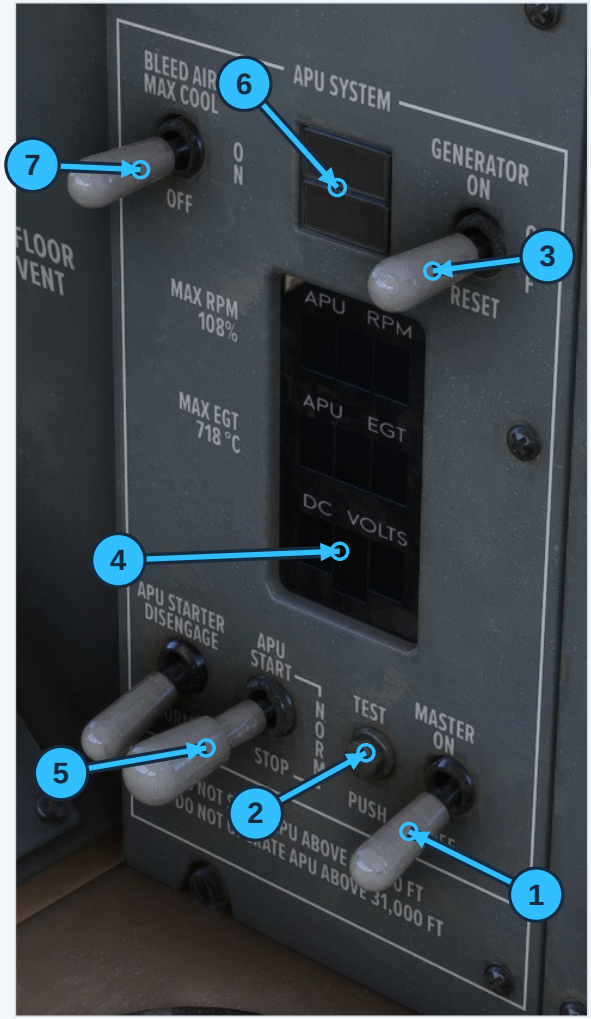

1. **APU MASTER ON**
   APU STARTER DISENGAGE stays NORMAL.
2. **Press TEST**
   Then continue with the generator switch.
3. **APU GENERATOR ON**
   The master switch alone does not select generator power.
4. **Check at least 22 V**
   Read DC VOLTS on the APU display.
5. **Hold START up; release**
   Release when RELAY ENGAGED lights.
6. **Wait for READY TO LOAD**
   Check LOAD SHED is NORM. Do not proceed just because the APU is making noise.
7. **APU BLEED AIR ON**
   Use ON for starting, not MAX COOL.

CHECK: APU READY TO LOAD illuminated, generator selected ON, bleed ON. Then turn on the flight displays (page 3).

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.


Flight displays: power, then align

Shift + 8: power switches | Shift + 7: IRS | Shift + 3: FMS

TWO SEPARATE POWER SWITCHES



BOTH IRS SELECTORS

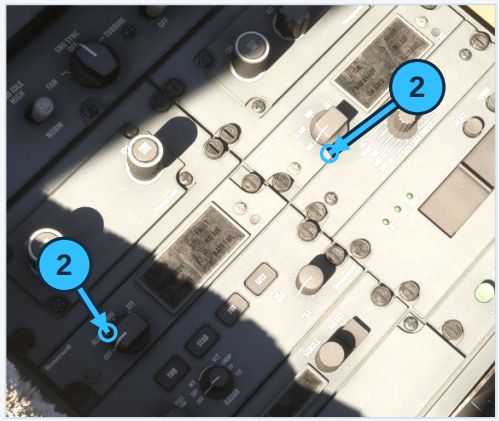

FMS: POS INIT / GPS 1 POS



1 AVIONICS ON + EICAS ON

Two switches under AVIONICS POWER: left = flight avionics; right = engine display. Both must be ON.

2 Both IRS selectors NAV

Stay parked while alignment runs.

3 FMS: load present position

NAV IDENT: right key 4 opens POS INIT. Wait for GPS 1 POS, then press right key 3 beside it.

Black flight displays?

Recheck the LEFT power switch, both batteries and APU generator. Check PFD/MFD DIM knobs are turned up.

ATT / HDG FAIL on a lit screen?

It has power. Check both IRS at NAV and present position loaded; wait for alignment. Do not taxi with invalid attitude/heading.

CHECK: flight displays and FMS lit, valid attitude/heading after alignment. EICAS alone does not prove avionics are on.

Start right engine, then left

Shift + 5: bleed air | Shift + 8: START buttons | Shift + 6: throttles


PAC ISOL VALVE



LH / DISENGAGE / RH START



RIGHT AND LEFT THRUST LEVERS

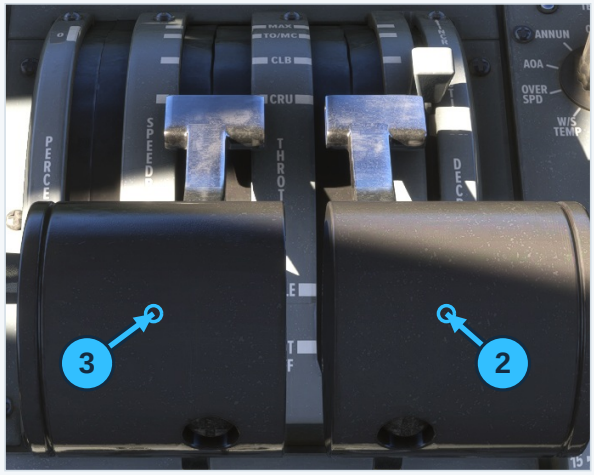

1 Start air ready

APU bleed ON; PAC ISOL VALVE CLOSED. Check duct pressure at least 30 PSI on the engine/system display.

2 RIGHT START; right lever IDLE

Rightmost start button. Move right thrust lever to IDLE by 10% N2; watch EICAS for rotation, oil pressure and ITT.

3 Then LEFT START; left IDLE

Wait for a normal right start. Repeat for the left; check both engines settle and hydraulic pressure builds.

4 Both engine generators ON

Select LH GEN and RH GEN; verify generator warnings clear.

Change to engine bleed air

Both ENG BLD AIR knobs HP/LP; PAC ISOL CLOSED. APU bleed OFF. Verify engine duct pressure.


CM3: hard rear stop = fuel CUTOFF; idle detent = RUN/IDLE. Keep levers at idle once starting. Stop for abnormal engine indications.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.

Air pressure: a simple setup

After engine start | Shift + 5: cabin pressure / air | Shift + 8: pilot BARO SET


CABIN PRESSURE / Shift + 5

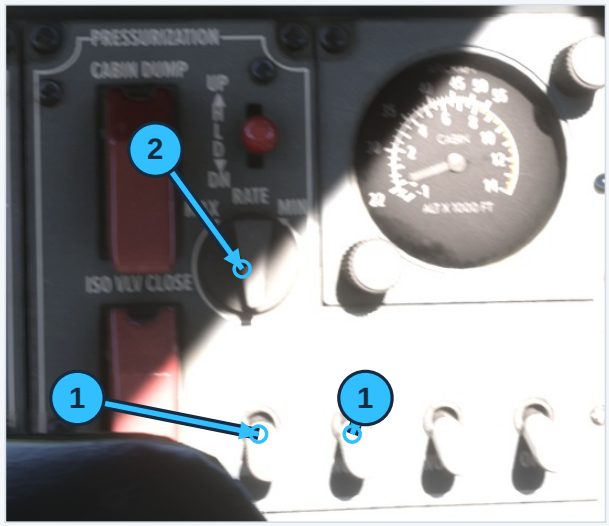

AIR SUPPLY / Shift + 5



ALTIMETER / beneath pilot flight display

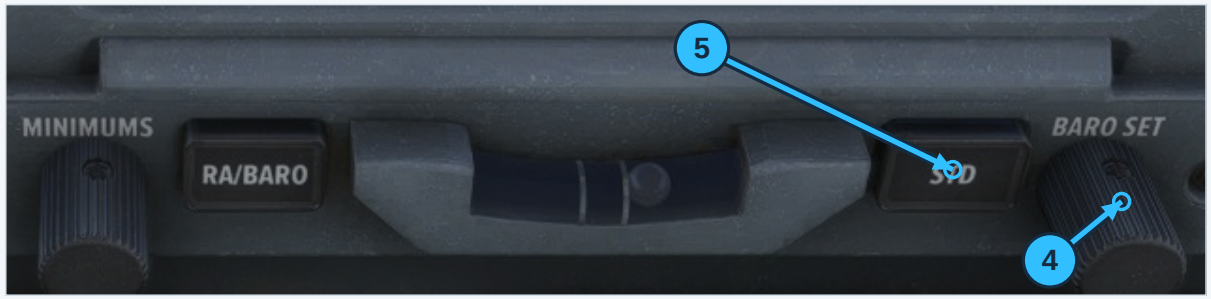

1 Cabin pressure: both NORM

ALT SEL / NORM switch: NORM. MANUAL / NORM switch: NORM. Leave the red CABIN DUMP guard closed.

2 RATE knob: white reference mark

Use the marked normal setting. Automatic mode schedules cabin pressure; do not set cabin altitude to your cruise altitude.

3 After starting: air supply ON

Both ENG BLD AIR knobs: HP/LP. CKPT PAC and CAB PAC: ON. APU bleed OFF once engine air is supplying the aircraft. Door shut.

4 BARO SET: local QNH

After powering the displays, turn BARO SET to the pressure from ATIS/ATC. Set both pilots and standby altimeter; check altitude roughly matches airport elevation.

5 STD: only at transition altitude

On climb, press STD when passing the published transition altitude (1013 hPa / 29.92 inHg). Reset destination QNH on descent through the transition level.


Cabin pressure = air inside the aircraft. QNH = altimeter setting. Photos show locations in cold-and-dark, not the required final switch positions.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.

Ready to taxi: the essentials

Shift + 6: flaps / trim / speedbrake | Shift + 3: FMS PERF

THROTTLE QUADRANT / viewed from above

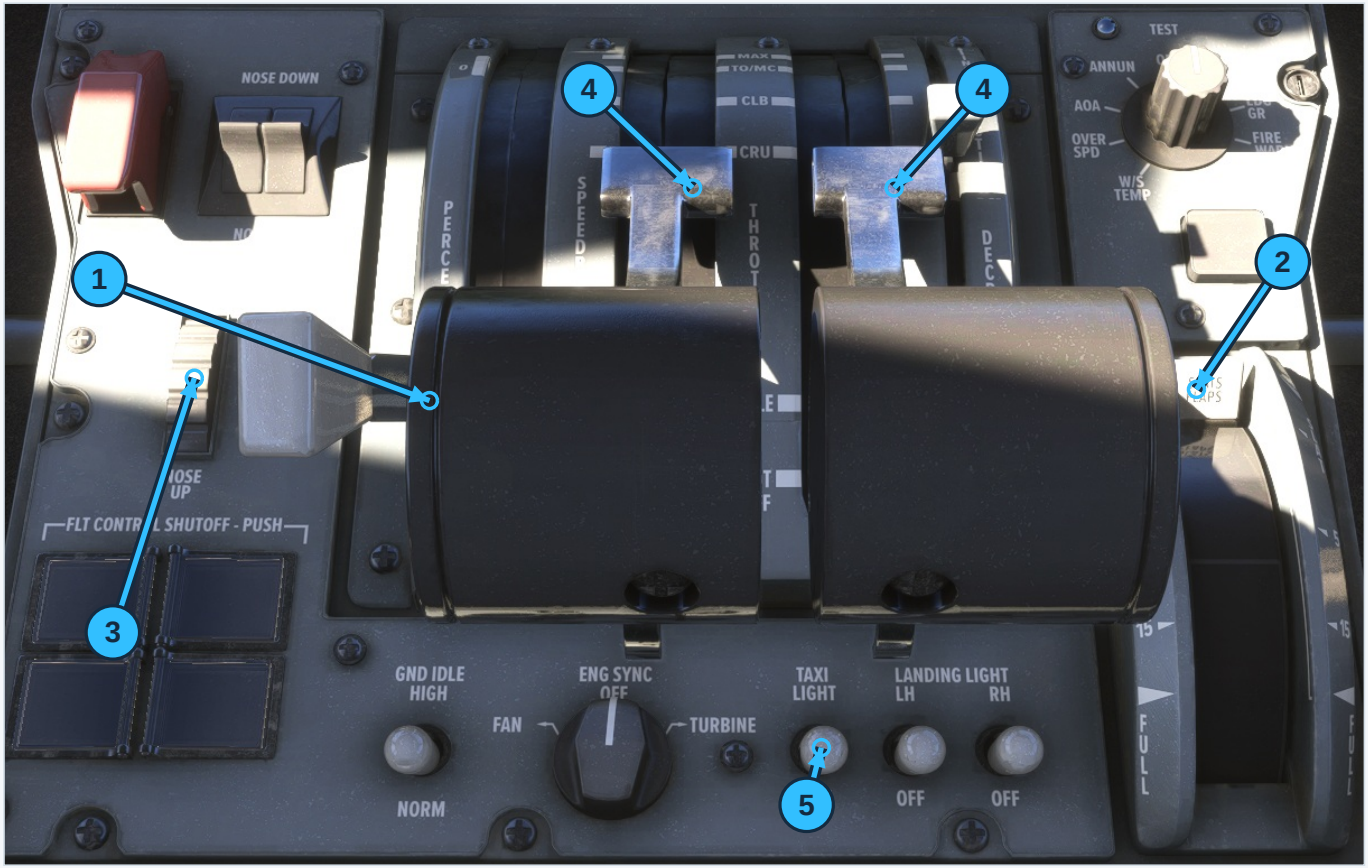

1 Speedbrake fully STOWED

EICAS must show 0%. Put the CP3 speedbrake lever fully forward too.

2 Flaps/slats takeoff 15

Check the actual EICAS indication. Set before calculating takeoff speeds.

3 Elevator trim: takeoff band

Confirm trim is in the takeoff band on EICAS.

4 Reversers STOWED

Both levers at idle. Controls free and moving correctly; displays aligned.

FMS: takeoff speeds

PERF / TAKEOFF DATA: enter weight and runway data; obtain V1, VR, V2. Check departure route, altitude and local QNH.

5 Clear the aircraft; taxi

Tablet: covers/chocks removed, doors shut. Pressurization ALT SEL NORM. Taxi light on; release parking brake and check brakes at low speed.

CHECK: normal engines, generator power, valid flight displays, takeoff speeds and configuration. Resolve abnormal EICAS messages.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.

Runway checks, then fly

Shift + 5: pitot heat / gear | Shift + 2: YD / M TRIM | Shift + 3: radio

LH + RH PITOT / STATIC



YD AND M TRIM



GEAR HANDLE



TRANSPONDER MODE



1 Both PITOT/STATIC ON

Set other anti-ice for conditions. Landing/strobe lights as required.

2 Yaw damper + Mach trim ON

Check YD and M TRIM indications. Recheck flaps 15, trim, speedbrake 0% and reversers stowed.

3 Transponder TA/RA

Left radio: select mode with left key 4; turn tuning knob to TA/RA. Use assigned squawk.

4 Line up; TO/MC thrust

When cleared, release brakes and apply TO/MC. Check normal engine indications. Rotate at your calculated VR.

5 Positive climb: gear UP

Follow the flight director/departure. Above 170 KIAS, retract flaps/slats when appropriate; select CLB thrust.

Final check: runway/departure, initial altitude, QNH, V-speeds and no unresolved warnings. This is a short simulator flow.

Sources: MSFS captures + local hardware notes; FlightFX manual pp. 48-54, 59-60, 82, 131-134, 137. Click for manual.