


SERVICE MANUAL & PARTS LIST

CTK-1300 / CTK-1300ES

DEC. 2013

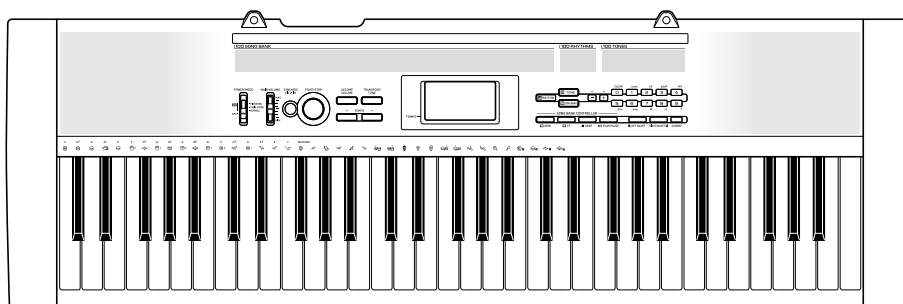

CTK-1300

<Notice>

- The printed language on the console panel is different between CTK-1300 and CTK-1300ES; therefore some button names differ.
When repairing the CTK-1300 or CTK-1300ES, be sure to read the "ABOUT THIS MANUAL".

CASIO®


ABOUT THIS MANUAL

The printed language on the console panel is different between CTK-1300 and CTK-1300ES; therefore some button names differ. The illustration of the console panel shown in this manual is of CTK-1300, unless otherwise indicated.

The button names of both models are indicated in the button operation procedures. In the procedure, the button names for CTK-1300ES are shown in parentheses.

[NOTE] The button names in parentheses appear only when the button names differ between the two models.

<Main Buttons and Buttons Names>

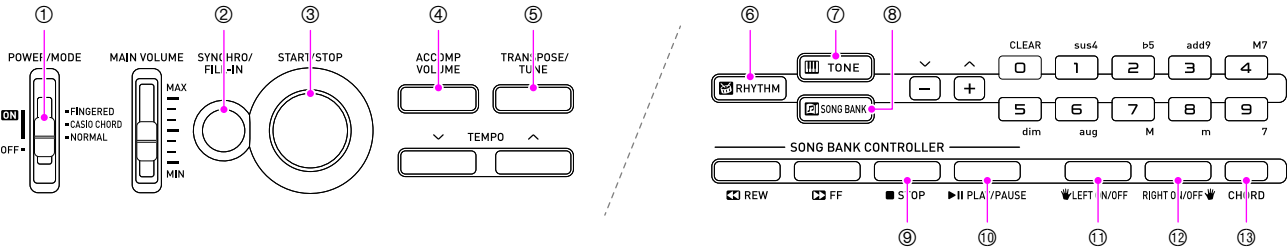

CTK-1300	No.	CTK-1300ES
POWER/MODE (FINGERED, CASIO CHORD, NORMAL)	①	ALIMENTACIÓN/MODO (DIGITACIÓN, ACORDES CASIO, NORMAL)
SYNCHRO/FILL-IN	②	SINCRO/RELLENO
START/STOP	③	INICIO/PARADA
ACCOMP VOLUME	④	VOLUMEN ACOMP
TRANSPOSE/TUNE	⑤	TRANSPOS./AFINACIÓN
RHYTHM	⑥	RITMO
TONE	⑦	TONO
SONG BANK	⑧	CANCIÓN
STOP	⑨	PARADA
PLAY/PAUSE	⑩	PLAY/PAUSA
LEFT ON/OFF	⑪	IZQ. ON/OFF
RIGHT ON/OFF	⑫	DER. ON/OFF
CHORD	⑬	ACORDES

CONTENTS

ABOUT THIS MANUAL

SPECIFICATIONS 1

BLOCK AND WIRING DIAGRAM 2

PCB INFORMATION 3

CIRCUIT DESCRIPTION 4

PRINTED CIRCUIT BOARDS 6

DISASSEMBLY 8

DIAGNOSTIC PROGRAM..... 16

EXPLODED VIEW 22


PARTS LIST..... 23

SCHEMATIC DIAGRAMS 27


SPECIFICATIONS

Keyboard	61 standard-size keys, 5 octaves
Tones	100
Polyphony	12 notes maximum (6 for certain tones)
Auto Accompaniment	
Rhythm Patterns	100
Tempo	Variable (236 steps, ♩ = 20 to 255)
Chords	2 fingering methods CTK-1300: CASIO CHORD, FINGERED CTK-1300ES: ACORDES CASIO, DIGITACIÓN
Rhythm Controller	CTK-1300: START/STOP, SYNCHRO/FILL-IN CTK-1300ES: INICIO/PARADA, SINCRO/RELLENO
Accomp Volume	0 to 9 (10 steps)
Song Bank	
Tunes	100
Controllers	CTK-1300: PLAY/PAUSE, STOP, REW, FF, LEFT ON/OFF (ACCOMP), RIGHT ON/OFF (MELODY) CTK-1300ES: PLAY/PAUSA, PARADA, REW, FF, IZQ. ON/OFF (ACCOMP), DER. ON/OFF (MELODY)
Other Functions	
Transpose	12 steps (–6 semitones to +5 semitones)
Tuning	Variable (A4 = approximately 440 Hz ± 50 cents)
Terminals	
Phones/Output Terminal	Stereo standard jack (Output is monaural.) Output Impedance: 78 Ω Output Voltage: 4 V (RMS) MAX
Power Supply Terminal	9.5 V DC
Power Supply	
Batteries	Dual power supply system 6 AA-size zinc-carbon batteries or alkaline batteries Battery Life: Approximately 2 hours continuous operation on zinc-carbon batteries
AC Adaptor	AD-E95100L
Auto Power Off	Turns power off approximately 6 minutes after last key operation.
Speaker Output	2.0 W + 2.0 W
Power Consumption	9.5 V --- 7.7 W
Dimensions	94.9 × 30.4 × 9.3 cm (37 ³ / ₈ × 11 ¹⁵ / ₁₆ × 3 ¹¹ / ₁₆ inch)
Weight	Approximately 3.3 kg (7.3 lbs) (without batteries)

BLOCK AND WIRING DIAGRAM

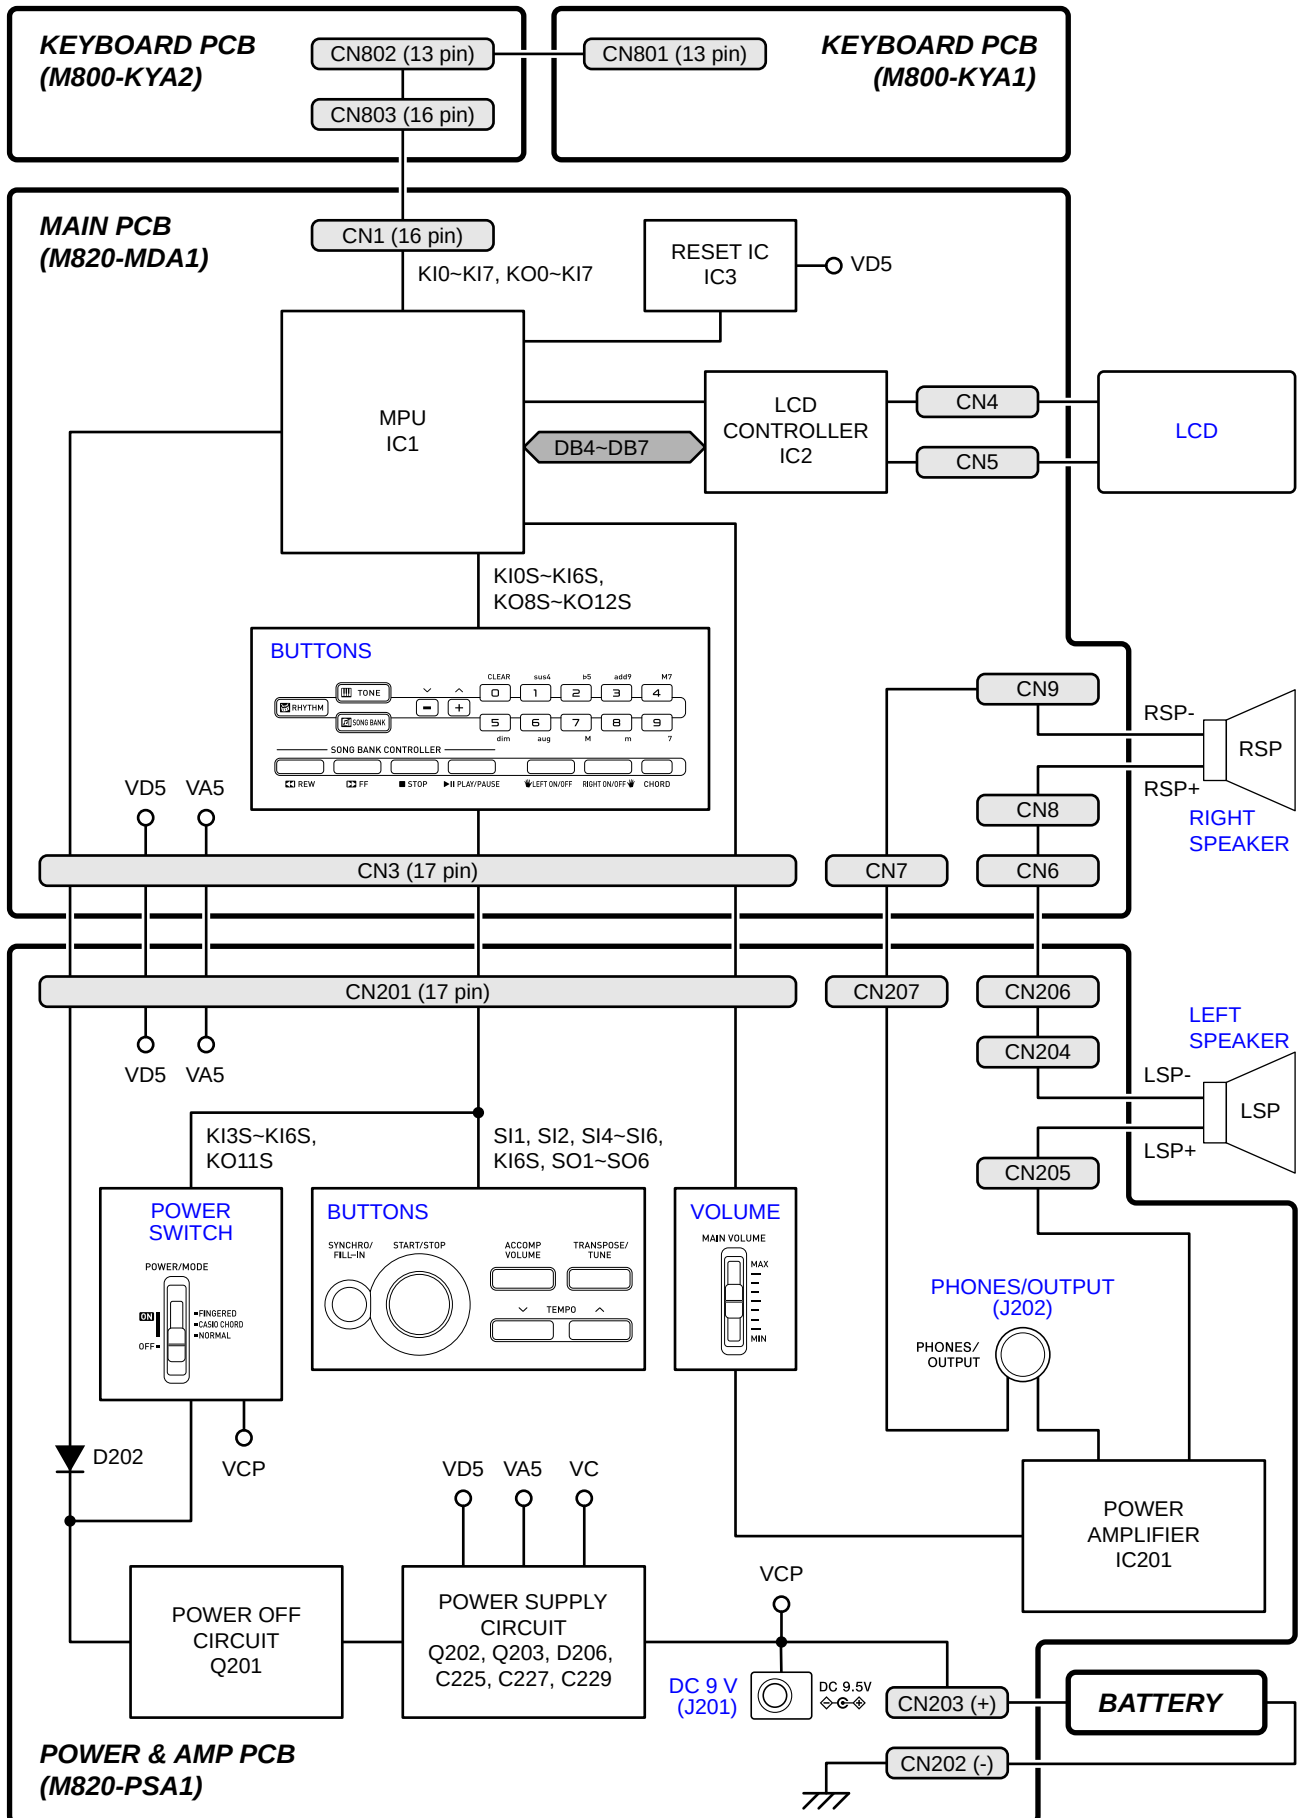


PCB INFORMATION

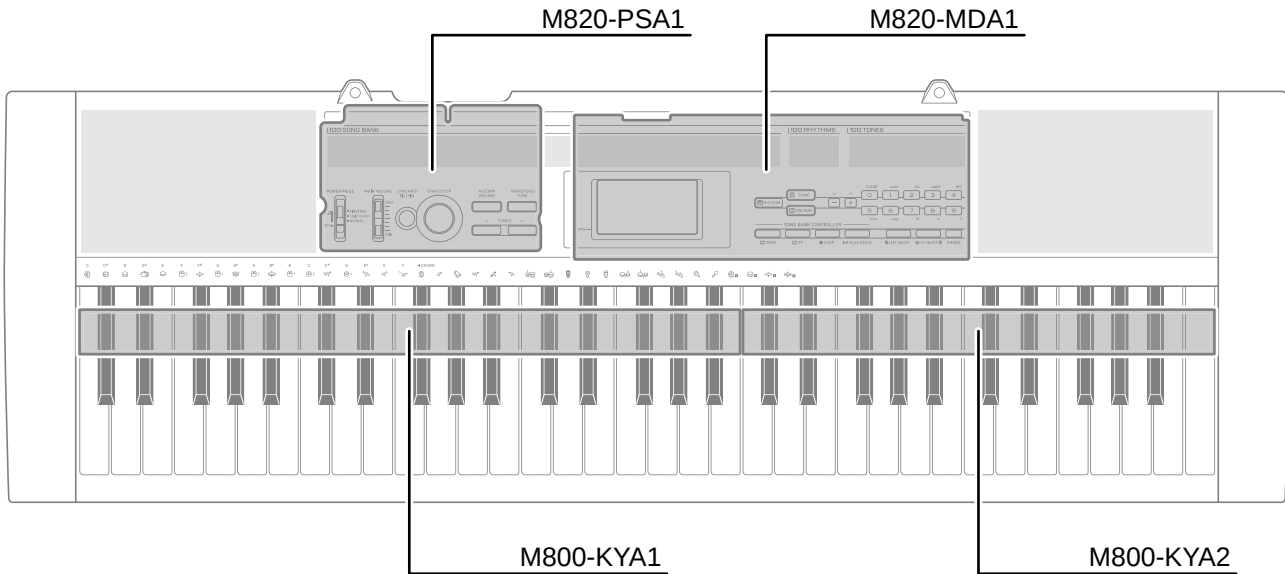

Parts Name	PCB Name	Functions
MAIN PCB		
PCB UNIT/MAIN	M820-MDA1	MPU, LCD controller, Reset IC, Buttons, Right speaker
POWER & AMP PCB		
PCB UNIT/POWER & AMP	M820-PSA1	Power supply circuit, Power amplifier, Buttons, Power switch, Volume, Left speaker, DC 9.5 V terminal, PHONES/OUTPUT jack
KEYBOARD PCB		
PCB UNIT/KYA	M800-KYA1	Keyboard
	M800-KYA2	

CIRCUIT DESCRIPTION

■ Nomenclature of Keys

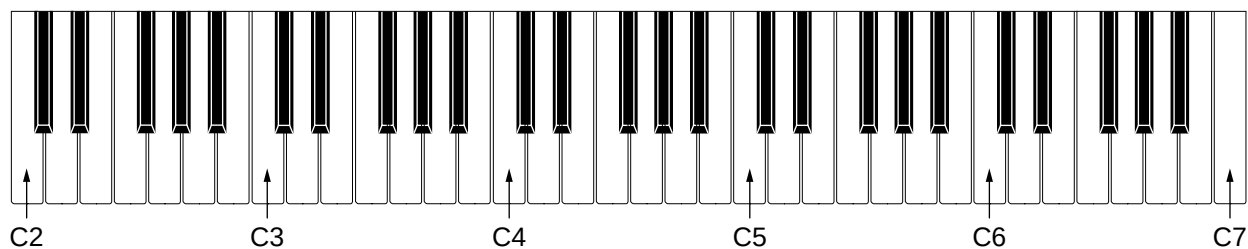

■ Key Matrix

	KC0	KC1	KC2	KC3	KC4	KC5	KC6	KC7
KI0	C2	C2#	D2	D2#	E2	F2	F2#	G2
KI1	G2#	A2	A2#	B2	C3	C3#	D3	D3#
KI2	E3	F3	F3#	G3	G3#	A3	A3#	B3
KI3	C4	C4#	D4	D4#	E4	F4	F4#	G4
KI4	G4#	A4	A4#	B4	C5	C5#	D5	D5#
KI5	E5	F5	F5#	G5	G5#	A5	A5#	B5
KI6	C6	C6#	D6	D6#	E6	F6	F6#	G6
KI7	G6#	A6	A6#	B6	C7			


■ Button Matrix

[NOTE] The first line is for CTK-1300, the second line is for CTK-1300ES. (Only when the button name is different by the model)




	KO8S	KO9S	KO10S	KO11S	KO12S
KI0S	-	3	6	9	FF
KI1S	+	2	5	8	RIGHT ON/OFF DER. ON/OFF
KI2S	0	1	4	7	PLAY/PAUSE PLAY/PAUSA
KI3S	TEMPO ▼	START/STOP INICIO/PARADA	TRANPOSE/TUNE TRANSPOS./AFINACIÓN	FINGERED (POWER/MODE) DIGITACIÓN (ALIMENTACIÓN/MODO)	STOP PARADA
KI4S	TEMPO ▲	SYNCHRO/FILL-IN SINCRO/RELLENO	SONG BANK CANCIÓN	CASIO CHORD (POWER/MODE) ACORDES CASIO (ALIMENTACIÓN/MODO)	LEFT ON/OFF IZQ. ON/OFF
KI5S		CHORD ACORDES	RHYTHM RITMO	NORMAL (POWER/MODE) NORMAL (ALIMENTACIÓN/MODO)	REW
KI6S		ACCOMP VOLUME VOLUMEN ACOMP	TONE TONO	OFF (POWER/MODE) OFF (ALIMENTACIÓN/MODO)	

PRINTED CIRCUIT BOARDS


MAIN PCB: M820-MDA1

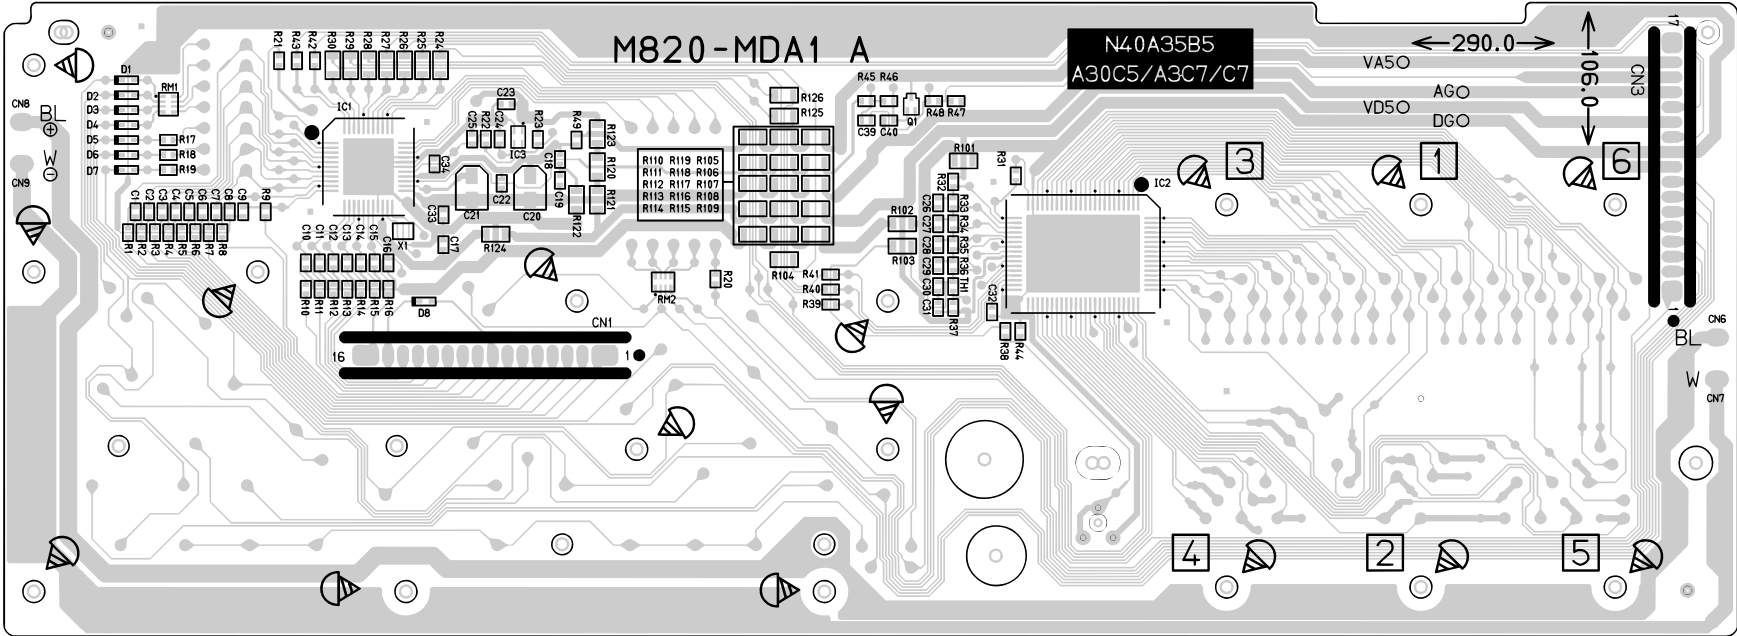


POWER & AMP PCB: M820-PSA1

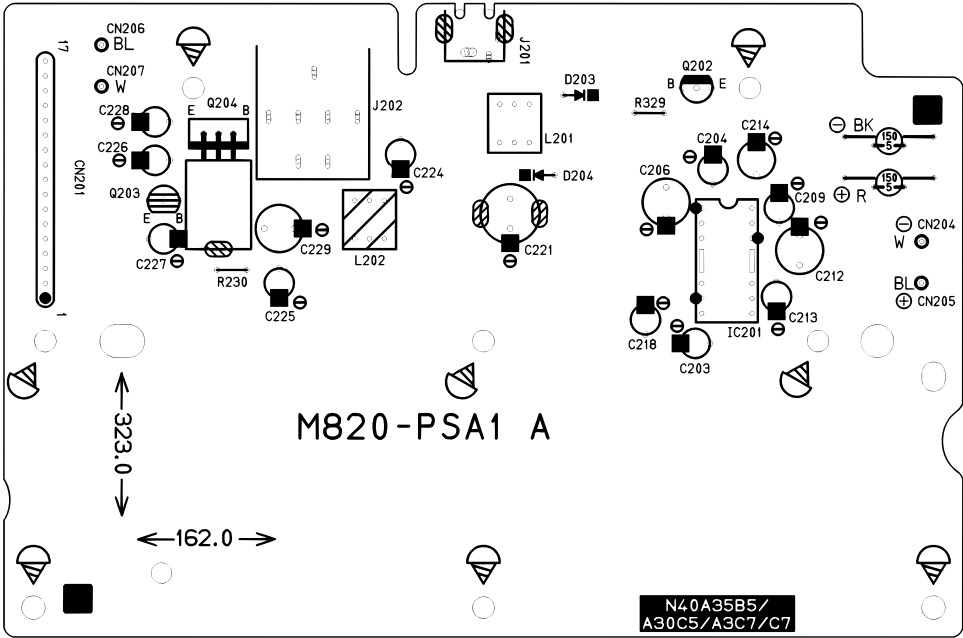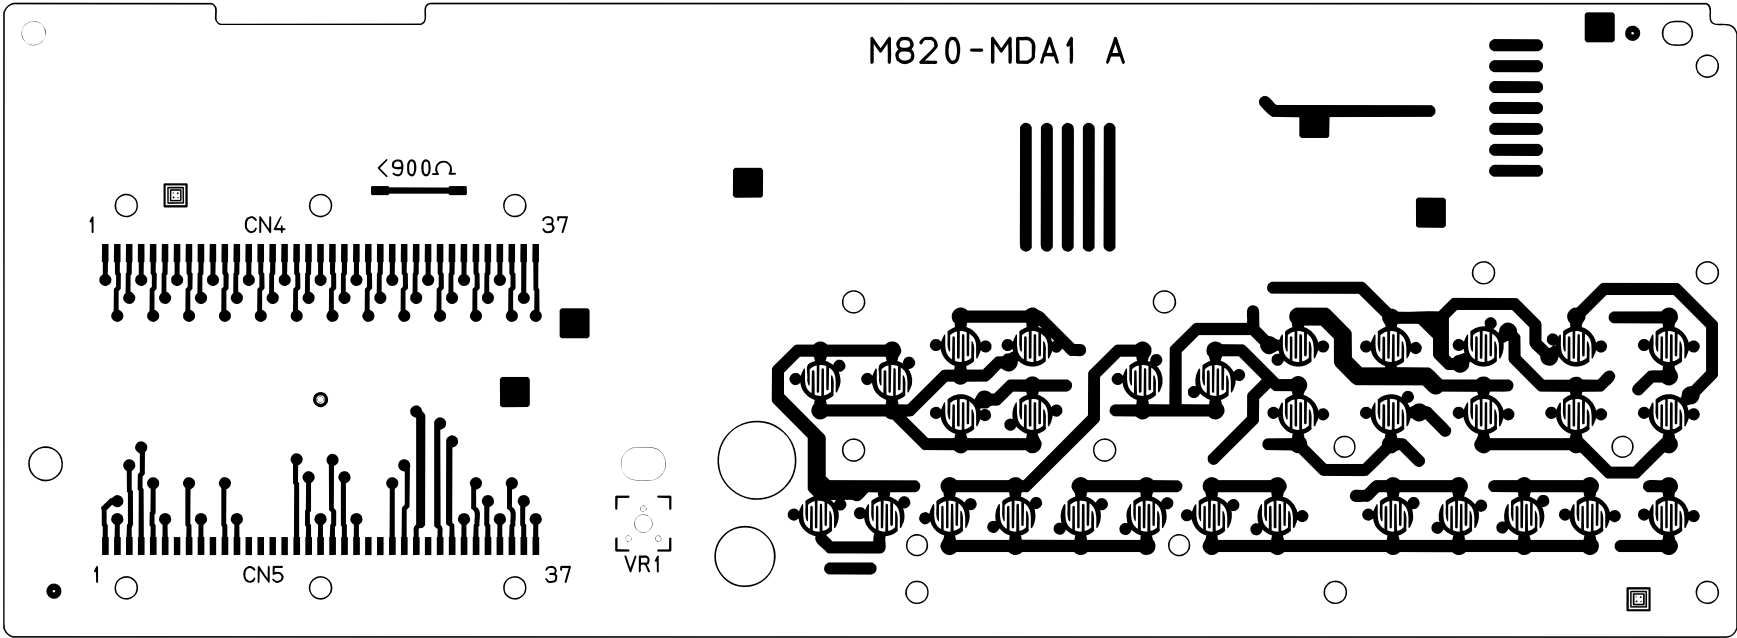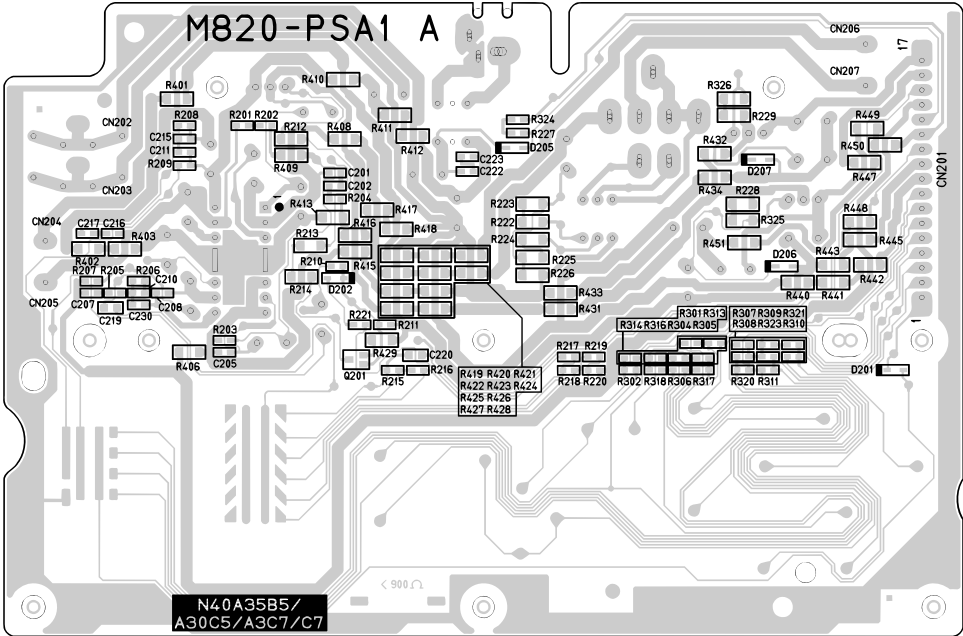

KEYBOARD PCB: M800-KYA1

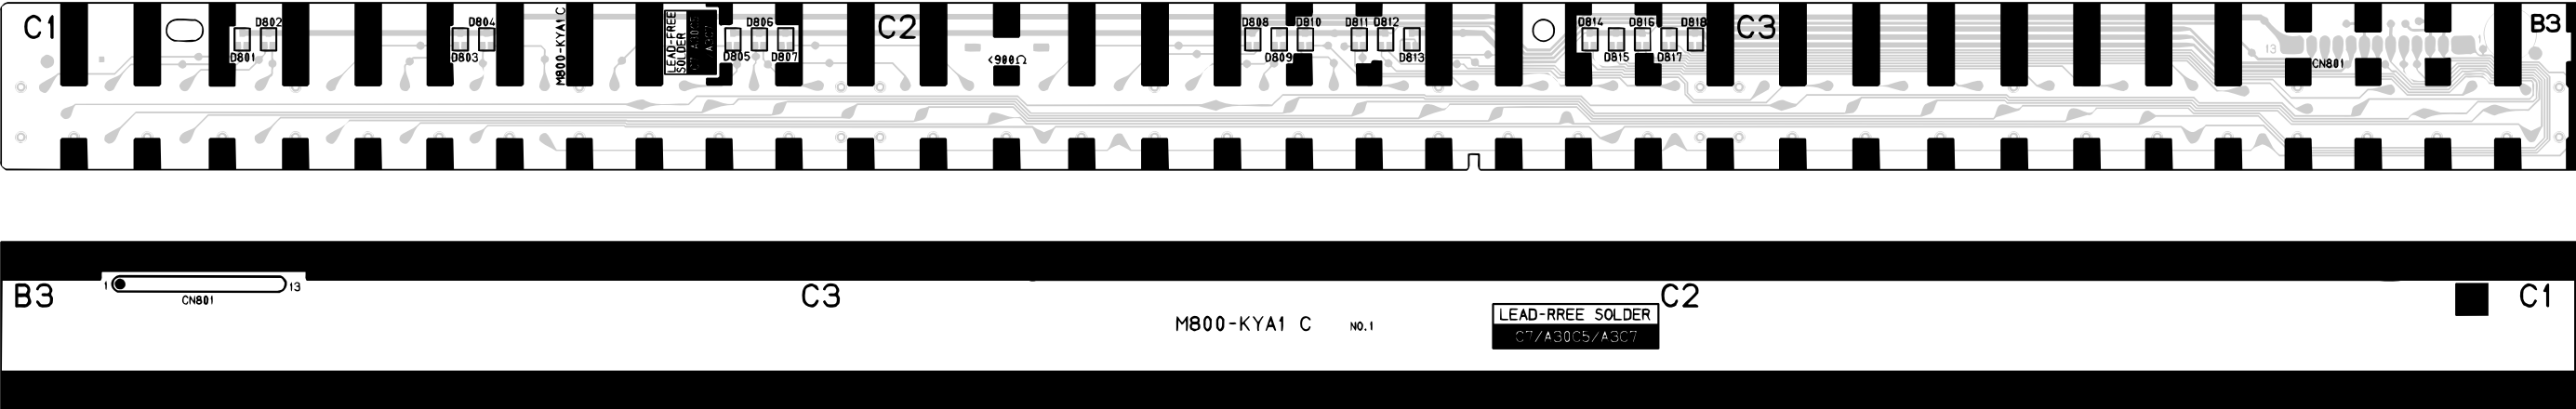


KEYBOARD PCB: M800-KYA2

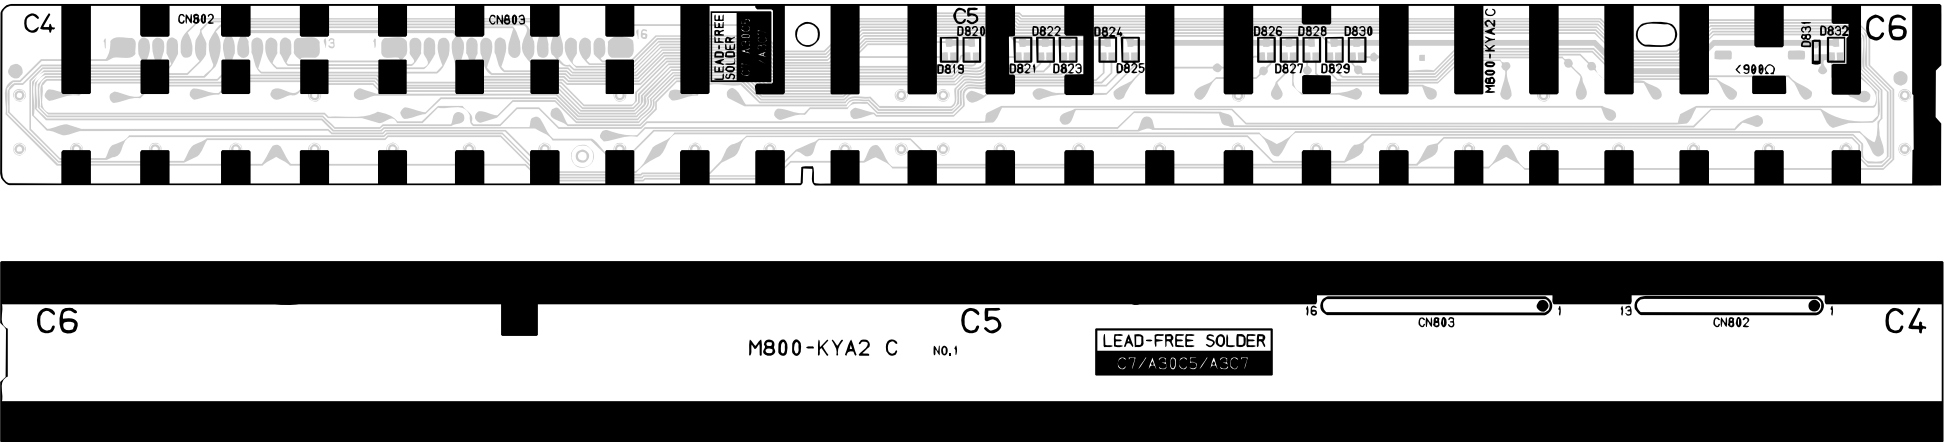

DISASSEMBLY

■ About Repair

- The photos show a prototype. The appearance of the instrument, such as color, may differ from the actual model.
- To avoid damages to the instrument and floor, lay the instrument on a mattress or blanket before starting disassembling.
- There are several kinds of screws. Be sure to use the correct type of screws when reassembling. It is advisable to sort the screws as shown below after removing them.

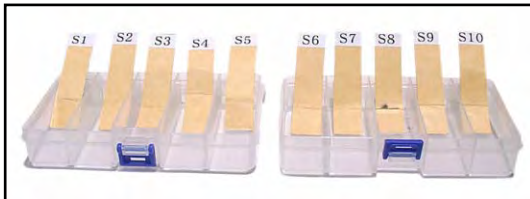


- If a screw cap is attached to the screw, remove it. Be sure to reattach the screw cap when assembling.
- Check how cables are wired before removing cables. Be sure to wire the cables in the same manner as they were before disassembly.
- In case cables are secured with cable ties, securing bands, clips, or tapes, remove them first. Be sure to secure the cables in place in the same manner as they were before disassembly.

■ Before Starting Repair or Servicing

- Remove the AC adaptor, AC cord or batteries.
- Remove accessories such as the music stand.


■ Flowchart

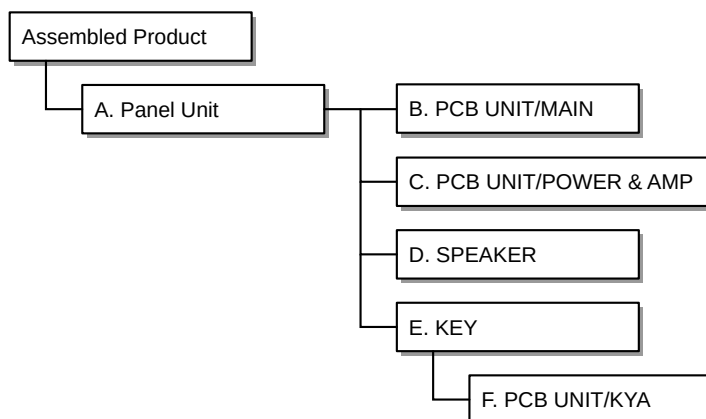

■ Disassembly Procedure

A. Remove the Panel Unit


A-1. Undo 11 screws on the bottom surface.

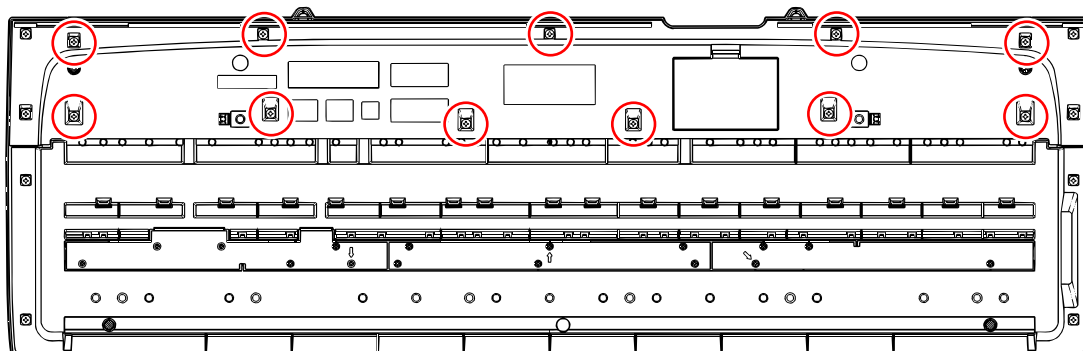


A-2. Place the digital keyboard with keyboard facing up.

A-3. Turn over the Panel Unit.

[NOTE] The Panel Unit is connected to lower case with the cables. Use caution when turn over the Panel Unit.

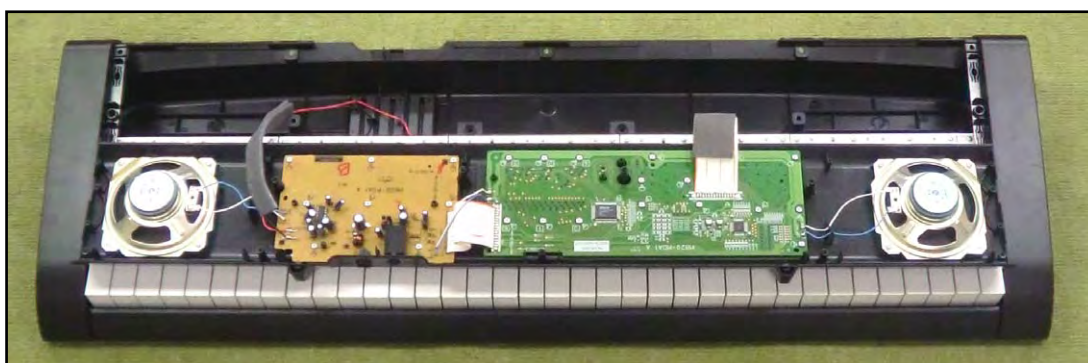


A-4. Unsolder two battery lead wires and one ribbon cable to then remove the Panel Unit.

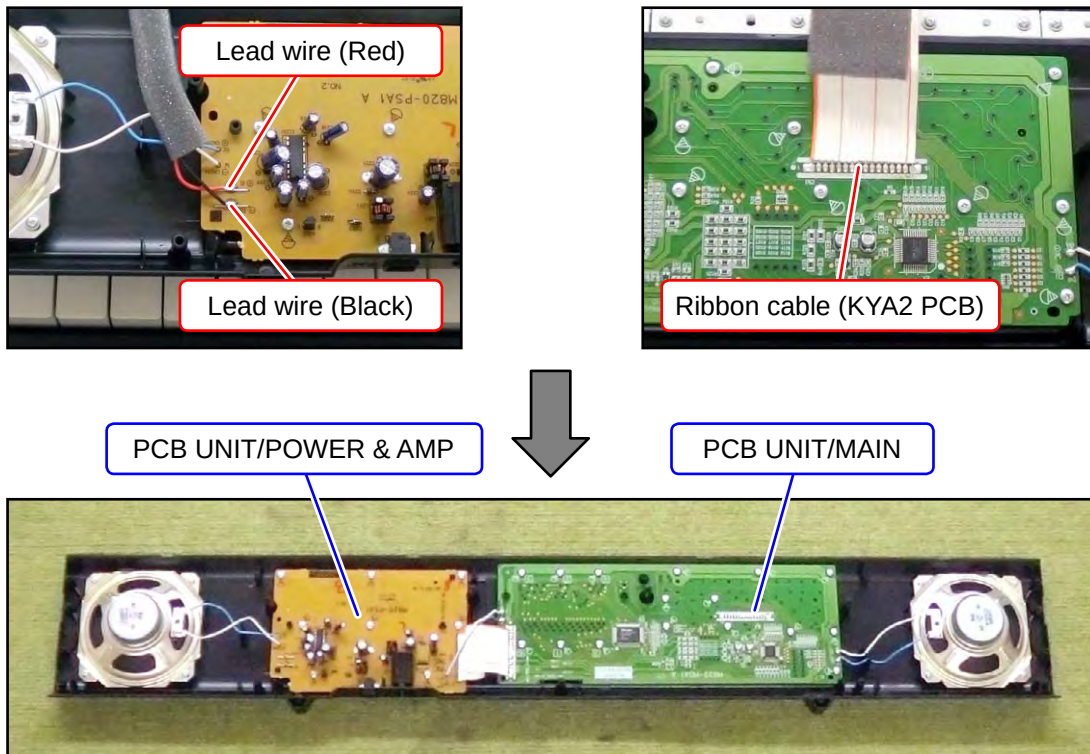


B. Remove the PCB UNIT/MAIN


B-1. Unsolder one ribbon cable.

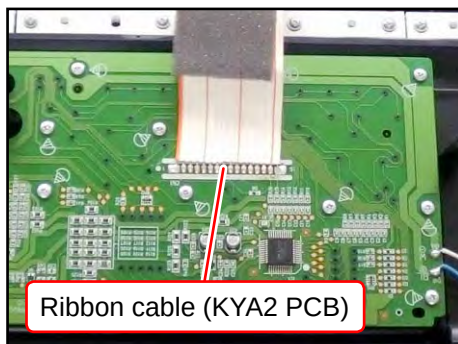


B-2. Unsolder two lead wires and one ribbon cable.

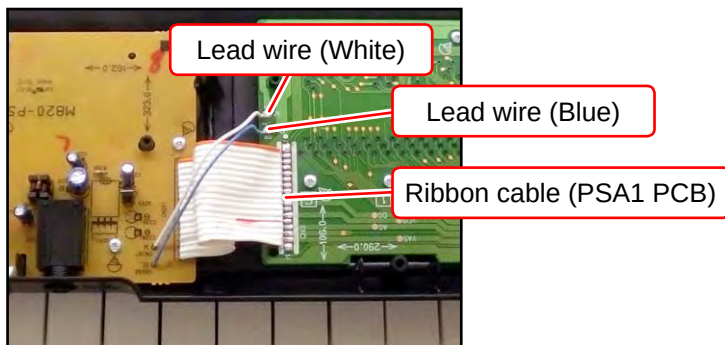

B-3. Unsolder two lead wires from the right speaker.

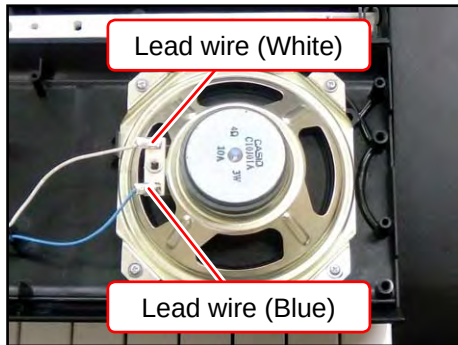


B-4. Undo 16 screws and then remove the PCB UNIT/MAIN, four RUBBER KEY, and LCD components.

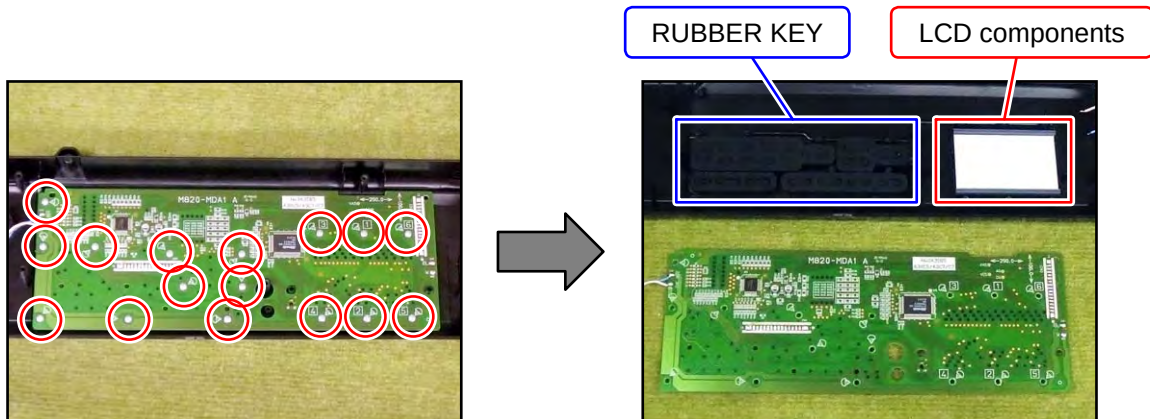


<Notes on Assembly>

- To install the MDA1 PCB, tighten the screws for the LCD part in the order indicated with the numbers below. If not tighten correctly, it may cause the LCD display errors.

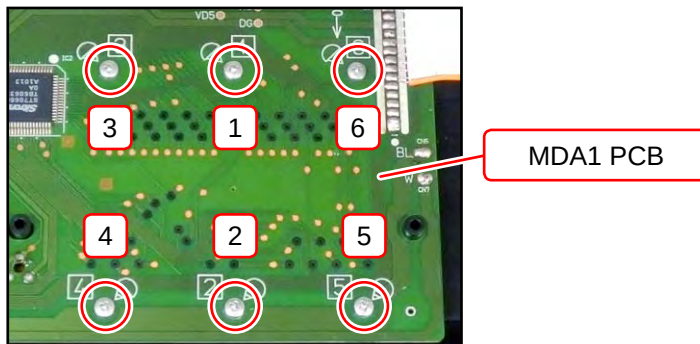


C. Remove the PCB UNIT/POWER & AMP


C-1. Unsolder two lead wires and one ribbon cable from the MDA1 PCB.

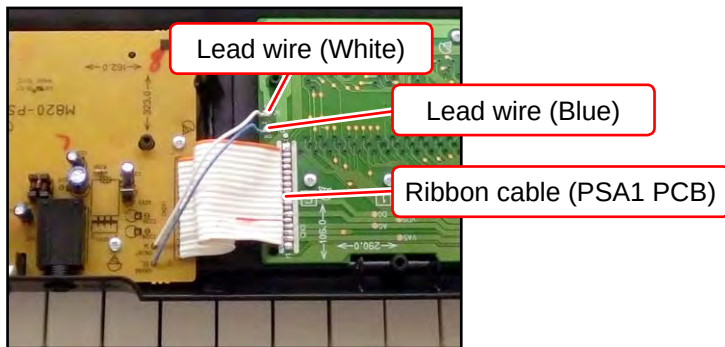

C-2. Unsolder two lead wires from the left speaker.

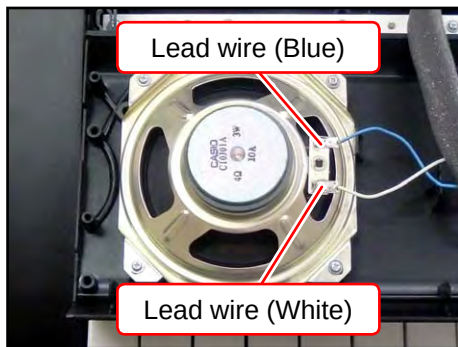


C-3. Undo eight screws and then remove the PCB UNIT/POWER & AMP, two RUBBER KEY, and two CONTACT/SLIDE SWITCH.

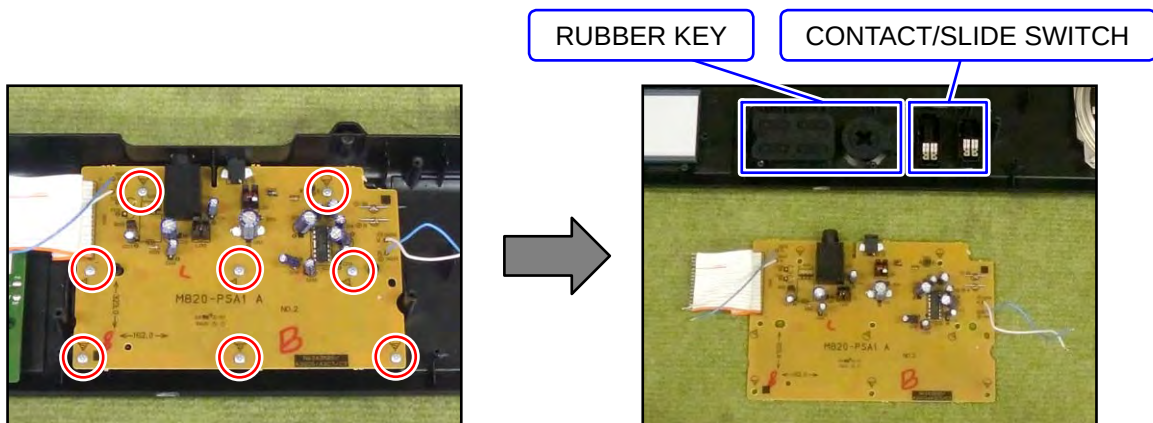

D. Remove the SPEAKER


D-1. Unsolder two lead wires.

D-2. Undo four screws and then remove the SPEAKER.


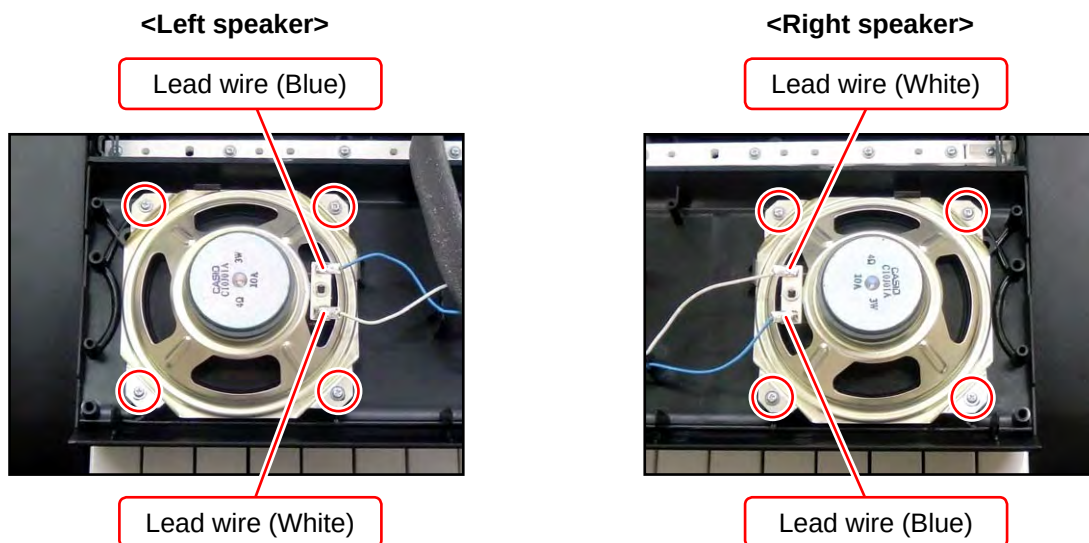


E. Remove the KEY

E-1. Undo eight screws and then remove two SIDE PANEL.

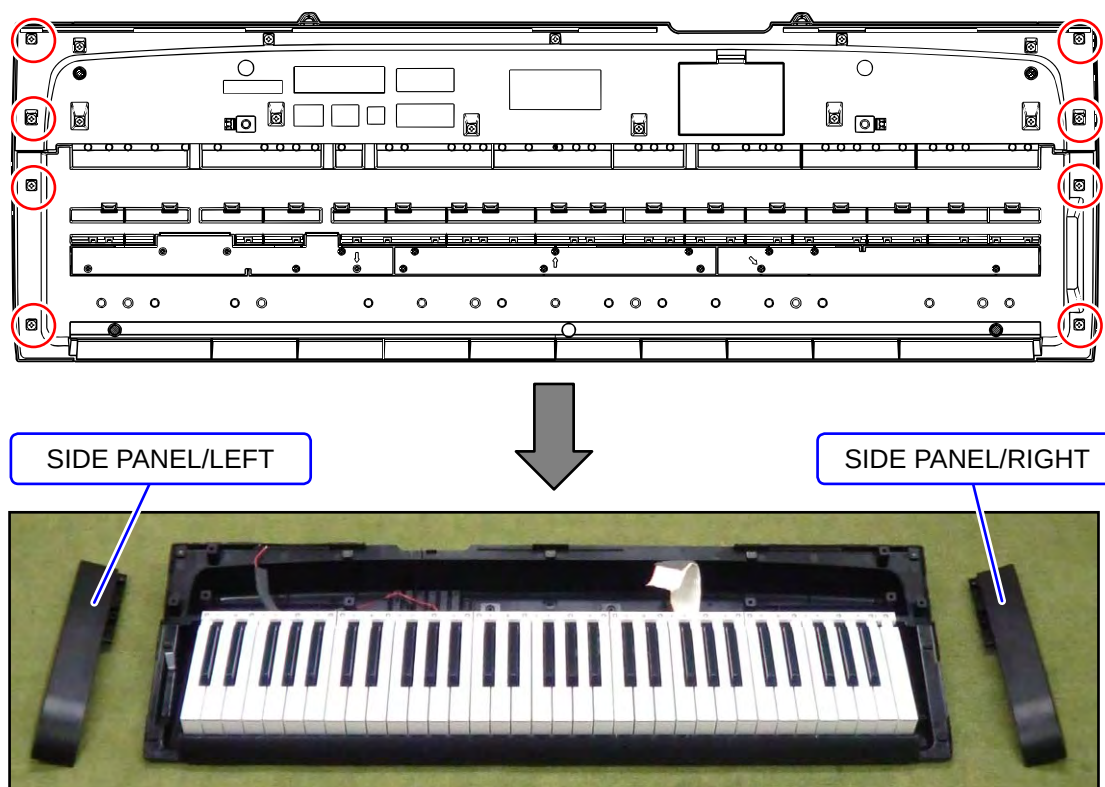


E-2. Undo 21 screws and then remove the KEY.

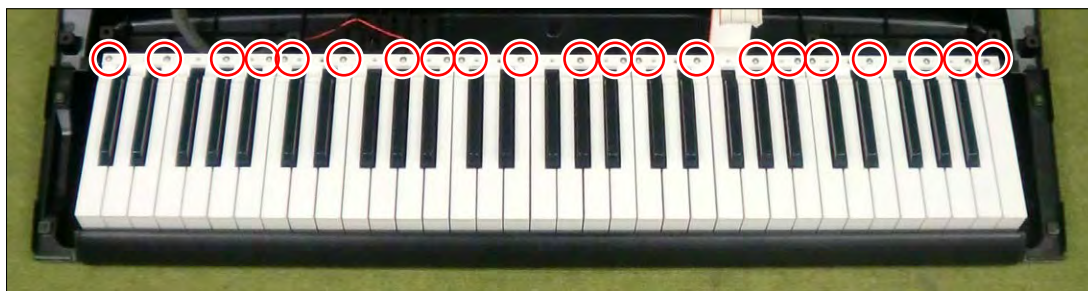


F. Remove the PCB UNIT/KYA

F-1. Unsolder one ribbon cable from the MDA1 PCB.


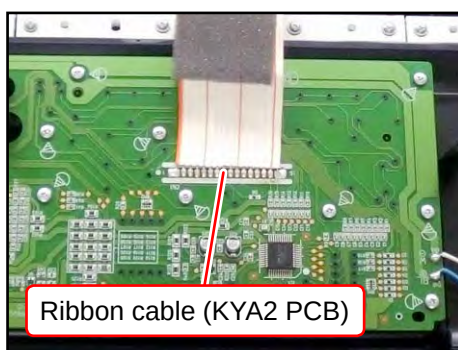


F-2. Disengage the hooks and then remove the PCB UNIT/KYA.

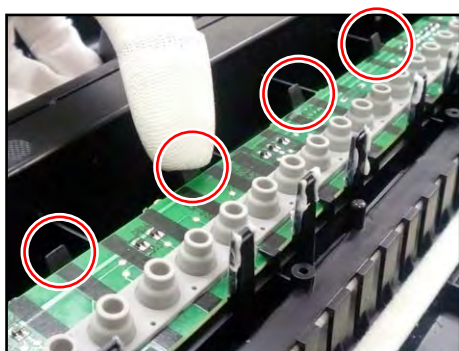


F-3. Remove five RUBBER CONTACT.

[NOTE] The RUBBER CONTACT/CS differs from the others in length.

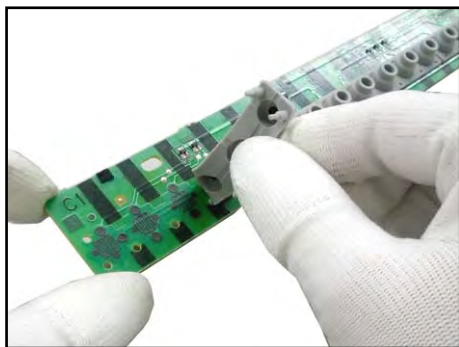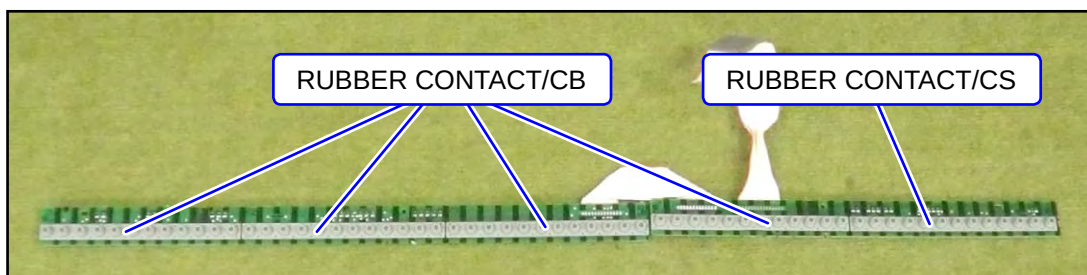

<How to Install RUBBER CONTACT>

- Lightly insert the tip of a RUBBER CONTACT into the PCB. Pull the tip from the back of the PCB and install it using a tool such as tweezers. Do not forcibly pull it.

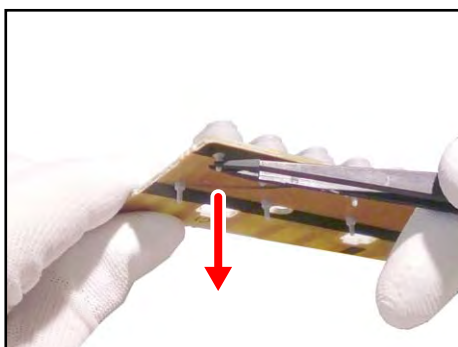

DIAGNOSTIC PROGRAM

<Notice>

- The button names of both CTK-1300 and CTK-1300ES are indicated in the button operation procedures. In the procedure, the button names for CTK-1300ES are shown in parentheses.
- [NOTE]** The button names in parentheses appear only when the button names differ between the two models.
- [NOTE]** For details, refer to the “ABOUT THIS MANUAL”.

■ Preparation

- Connect the AC adaptor.

[NOTE] The AC adaptor (AD-E95100L) for the CTK-1300_DI/EU/UK and CTK-1300ES_DI/EU is sold separately and does not come with the product. If you do not have the AC adaptor, use six AA-size dry batteries with enough capacity.


- Adjust the main volume so that it is at about 1/3 of the full volume.

■ How to Start the Diagnostic Program


- Hold down the [0] and [START/STOP (INICIO/PARADA)] buttons at the same time to turn the power ON.

[NOTE] Set the mode switch to the [NORMAL].

[NOTE] Be sure to turn off the power when the test is finished.

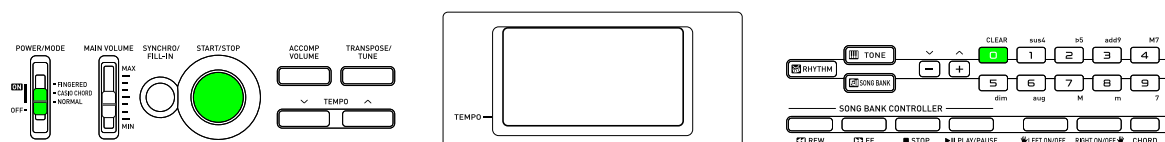

- Release the [0] and [START/STOP (INICIO/PARADA)] buttons. After the diagnostic program is launched, the test menu appears.

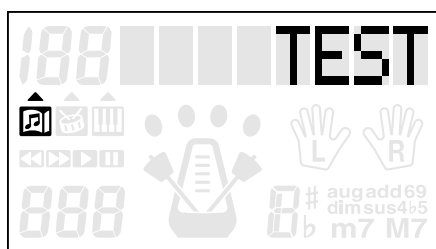

■ Test Items

Pressing a test button enables the corresponding test item to be tested.

Test Items	Buttons	Note
A. Mode Switch Check		
B. Button Check	0	
C. ROM Version Check	1	
D. LCD Check	TONE (TONO)	
E. Auto Power OFF Check	STOP (PARADA)	







This diagnostic program does not test the following items.
Check the functions with regular power-on state.

Test Items	Buttons	Note
F. Key Check		
G. Headphones Check		Headphones

■ Test Procedure

A. Mode Switch Check


A-1. Switch the mode switch and then check that the following screen appears.

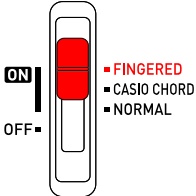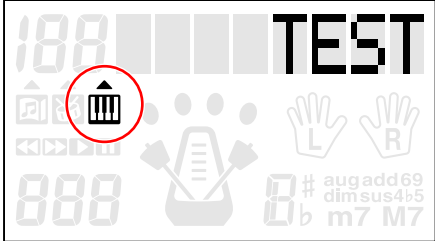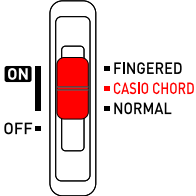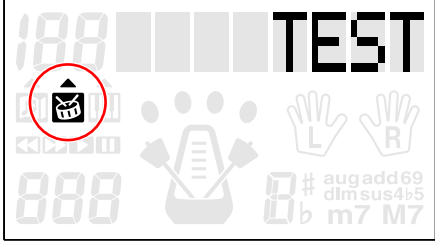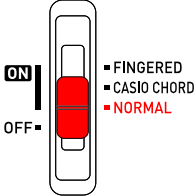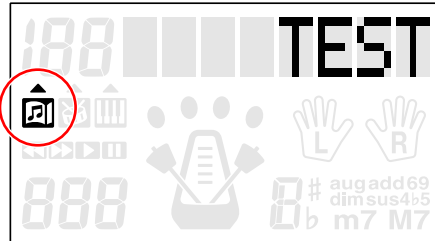Mode Switch	LCD
FINGERED (DIGITACIÓN) POWER/MODE 	
CASIO CHORD (ACORDES CASIO) POWER/MODE 	
NORMAL POWER/MODE 	


B. Button Check

[NOTE] You cannot cancel this check procedure mid-way.

B-1. Press the [0] button to select the “Button Check”.

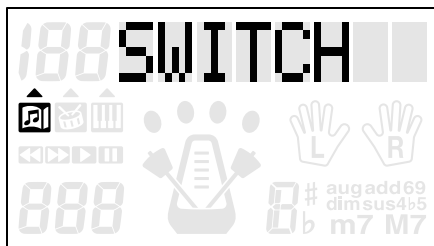

B-2. Press the buttons in the order of the numbers shown below.

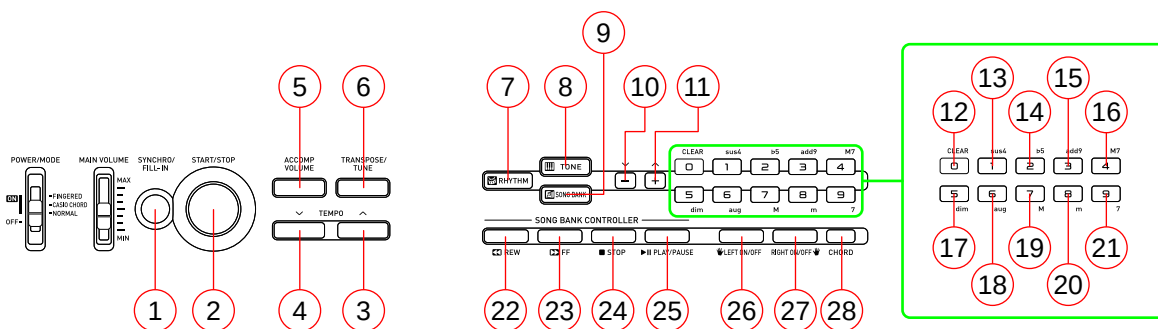


If the result passes (OK):

- The confirmation tone sounds, and the button number and “OK” appear.

If the result fails (NG):

- If there is a button failure or the buttons are pressed in a wrong sequence, the error tone sounds, and the number of the button which you pressed and “NG” will be appear.

B-3. When press the [CHORD (ACORDES)] button at the end, check that the confirmation tone sounds and also that the following screen appears.

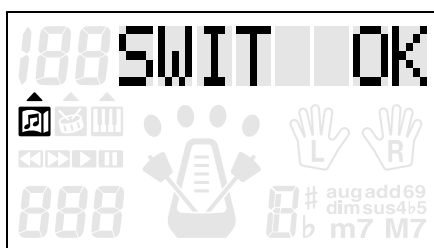

C. ROM Version Check

(This section describes how to identify the ROM version, not to test it.)


- C-1. When you press the [1] button, the ROM version appears as shown below.

<Example>




D. LCD CHECK


- D-1. Press the [TONE (TONO)] button to select the "LCD Check".

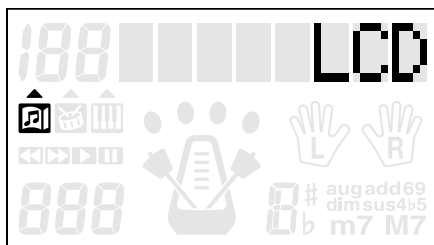

- D-2. Press the [TONE (TONO)] button and then check that the confirmation tone sounds and also that all segments are lit.

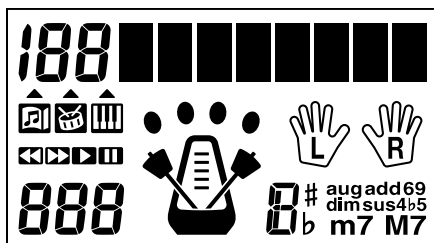

- D-3. Press the [TONE (TONO)] button and then check that the confirmation tone sounds and also that all segments are turned OFF.

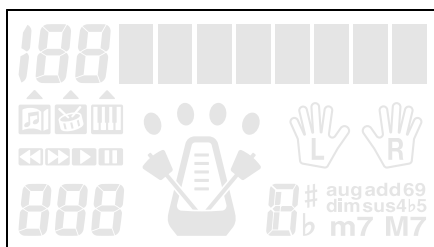

E. Auto Power OFF Check


- E-1. Press the [STOP (PARADA)] button to perform the “Auto Power OFF Check”.
- E-2. Check that the power supply is turned OFF and no screen appears.
- [NOTE]** After checking, be sure to turn the mode switch to “OFF”.

F. Key Check

[NOTE] Perform the tests with regular power-on state.

- F-1. Check the following points by pressing all keys.
- The tones sound correctly by hitting keys.
 - The pitch of the sound corresponding to a key is correct.
 - Hitting a key does not produce two tones or make sounds twice.
 - The stroke and the load of keys are normal.
 - The difference in height and the gap between keys are even.

[NOTE] Press the keys in the order shown in the figure below.

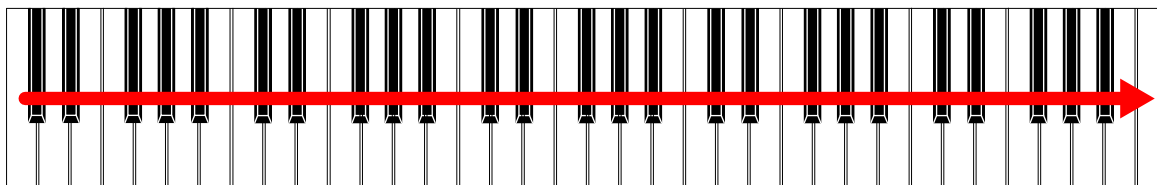


G. Headphones check

[NOTE] Perform the tests with regular power-on state.

- G-1. Connect the headphones to the PHONES/OUTPUT jack.
- G-2. Press any key and then check that you can hear the sound through the headphones.
- G-3. Remove the headphones.
- G-4. Press any key and then check that sounds come out from the speakers.

EXPLODED VIEW

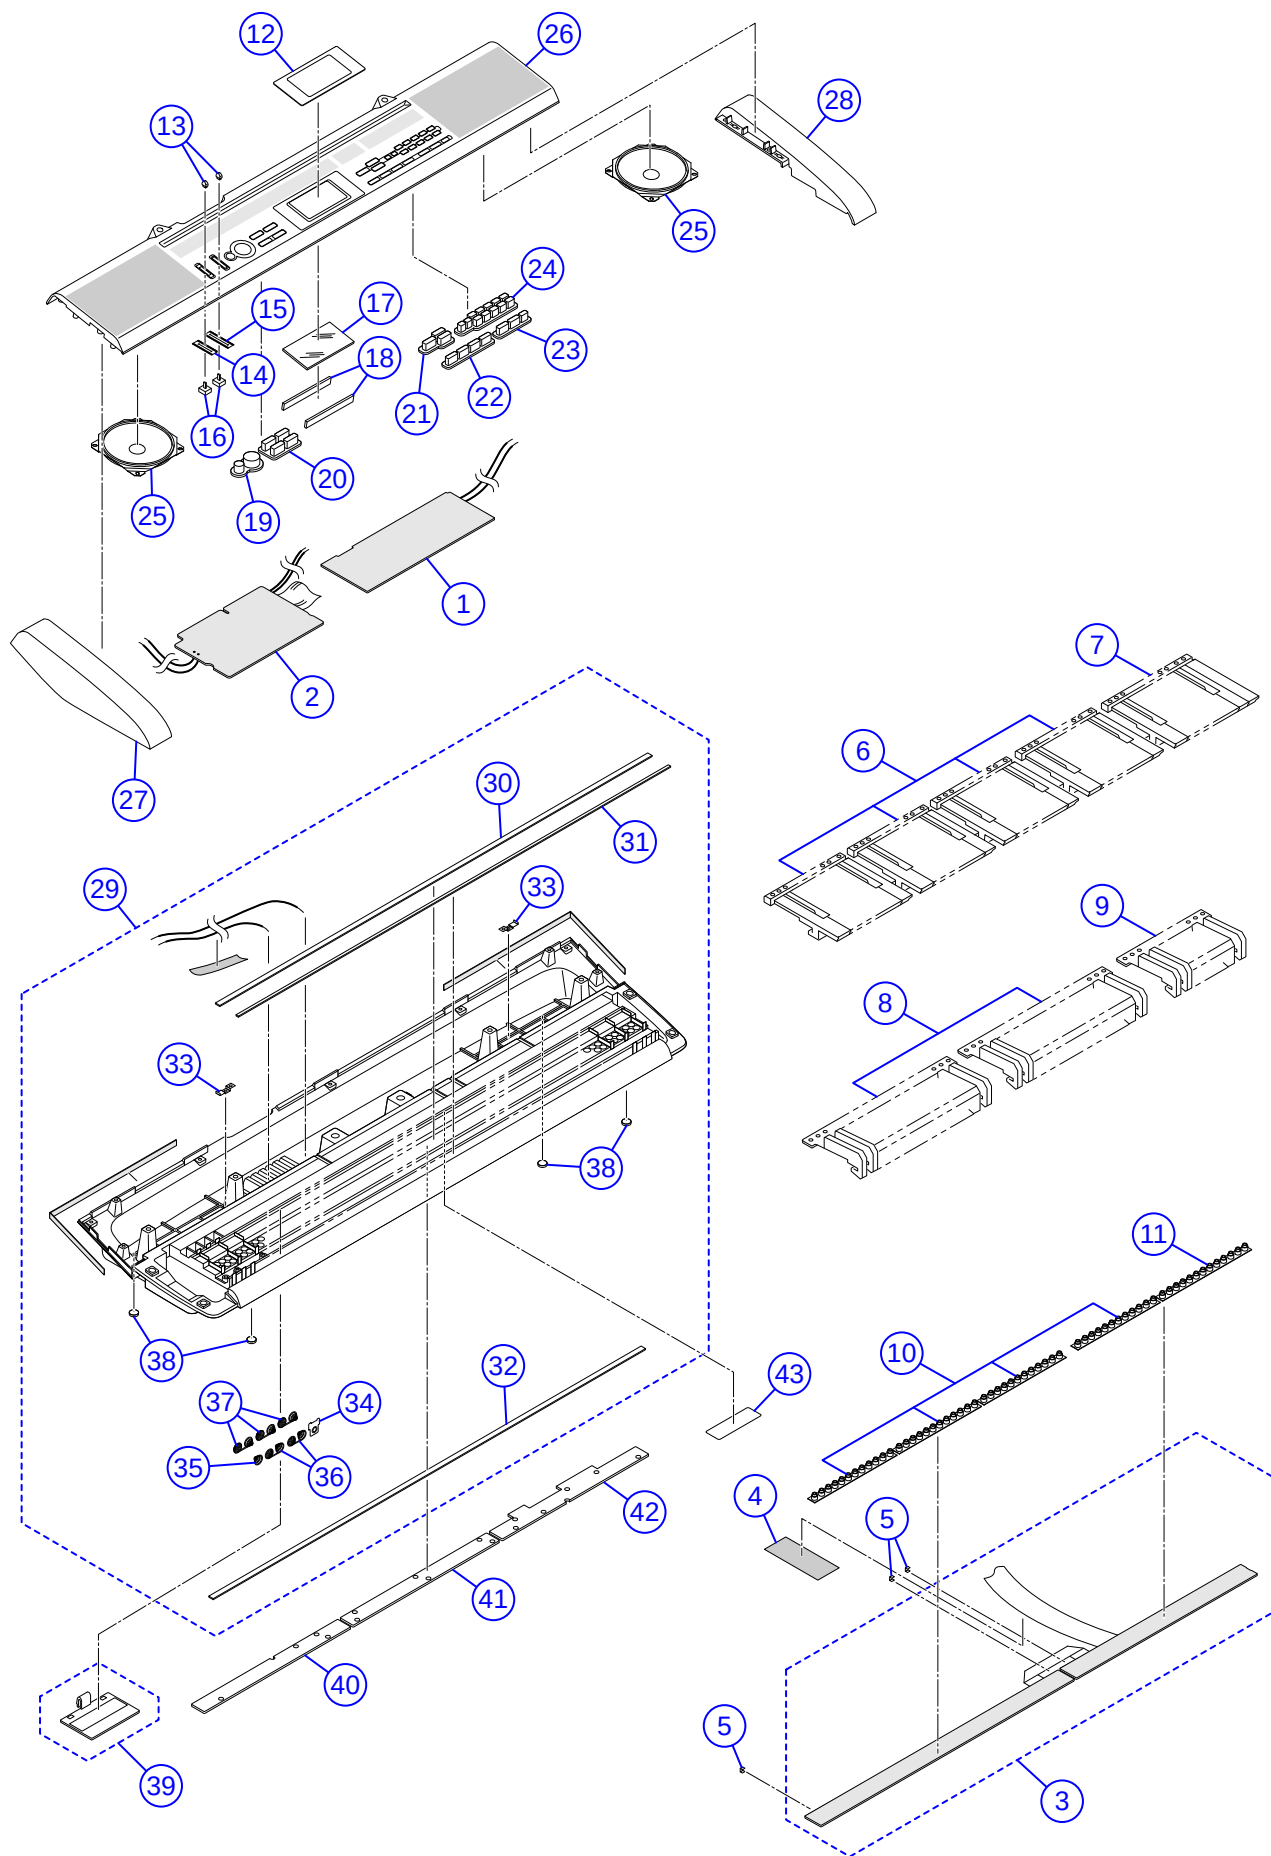

PARTS LIST

CTK-1300 / CTK-1300ES

[Notes]

1. Prices and specifications are subject to change without prior notice.
2. Refer to the latest "Parts Price Code" at "PARTS FINDER" on the Casio Service WEB site (<https://www.servicecasio.com>).
3. As for spare parts order and supply, refer to the "GUIDEBOOK for Spare Parts Supply", published separately.
4. The numbers in item column correspond to the same numbers in drawing.

1: CTK-1300_DI
2: CTK-1300_EU
3: CTK-1300_UK
4: CTK-1300_US

5: CTK-1300ES_DI
6: CTK-1300ES_EU
7: CTK-1300ES_US

N	Item	Code No.	Parts Name	Specification	Q'ty							R	Remarks
					1	2	3	4	5	6	7		
MAIN PCB													
	1	10368206	PCB UNIT/MAIN	TK-RJM510415*001	1	1	1	1	1	1	1	B	MDA1
	CN8	10178633	WIRE/BLUE	1007TASC24100B4040	1	1	1	1	1	1	1	X	for Speaker (+)
	CN9	10366747	WIRE/WHITE	1007TASC24100W4040	1	1	1	1	1	1	1	X	for Speaker (-)
	VR1	69304870	VARIABLE R	EVND8AA03B53	1	1	1	1	1	1	1	X	for LCD contrast
	D1-D8	10276977	DIODE	L1SS400T1G	8	8	8	8	8	8	8	X	
	IC3	10240586	IC	XC6109N40ANR	1	1	1	1	1	1	1	X	
	IC1	10363061	LSI	ML6756B31GAZ03A114	1	1	1	1	1	1	1	C	
	IC2	10222381	LSI	ST7066U-0A-QG	1	1	1	1	1	1	1	C	
	Q1	69300298	TRANSISTOR	2SC4081T106R	1	1	1	1	1	1	1	X	
	TH1	10245365	THERMISTOR	TSM1A103J34D3RZ	1	1	1	1	1	1	1	X	
	X1	10070555	RESONATOR	CSTCW20M0X51-R0	1	1	1	1	1	1	1	X	
POWER & AMP PCB													
	2	10368207	PCB UNIT/POWER & AMP	TK-RJM510417*001	1	1	1	1	1	1	1	C	PSA1
	CN205,CN206	10178633	WIRE/BLUE	1007TASC24100B4040	2	2	2	2	2	2	2	X	for Speaker (+)
	CN204,CN207	10366747	WIRE/WHITE	1007TASC24100W4040	2	2	2	2	2	2	2	X	for Speaker (-)
	J201	35015103	JACK/DC	HEC3110-01-010	1	1	1	1	1	1	1	B	
	J202	10305218	JACK/PHONES	JY-6316B*01-070	1	1	1	1	1	1	1	C	
	IC201	10300598	IC	TA8227APL-D12-H-T	1	1	1	1	1	1	1	X	
	L202	10231919	COIL	RB53-856396NP	1	1	1	1	1	1	1	X	
	L201	10231920	COIL	RB53-856397NP	1	1	1	1	1	1	1	X	
	D203,D204	10261170	DIODE	SRT14-A2	2	2	2	2	2	2	2	X	
	D206	79114195	DIODE	UDZSTE-175.6B	1	1	1	1	1	1	1	X	
	D201,D202	10371167	DIODE	L1SS355T1G	2	2	2	2	2	2	2	X	
	Q201	69300298	TRANSISTOR	2SC4081T106R	1	1	1	1	1	1	1	X	
	Q202	10217742	TRANSISTOR	KTA1270-Y-AT/P	1	1	1	1	1	1	1	X	
	Q203	10209015	TRANSISTOR	KTD863-GR-AT/P	1	1	1	1	1	1	1	X	

1: CTK-1300_DI
2: CTK-1300_EU
3: CTK-1300_UK
4: CTK-1300_US

5: CTK-1300ES_DI
6: CTK-1300ES_EU
7: CTK-1300ES_US

N	Item	Code No.	Parts Name	Specification	Q'ty							R	Remarks
					1	2	3	4	5	6	7		
KEYBOARD PCB													
	3	10368208	PCB UNIT/KYA	TK-RJM508609*002	1	1	1	1	1	1	1	C	KYA1/KYA2
	D801-D830,D832	10301580	DIODE	LM1MA142WAT1G	31	31	31	31	31	31	31	X	
	4	10078918	SPONGE/40X100	M440962-001V01	1	1	1	1	1	1	1	X	
	5	69268840	FABRIC TAPE/4X10	M440684-1	3	3	3	3	3	3	3	X	
KEYBOARD UNIT													
	6	10304687	WHITE KEY/CB	TK-RJM507243*002	4	4	4	4	4	4	4	C	
	7	10304688	WHITE KEY/CS	TK-RJM507244*002	1	1	1	1	1	1	1	C	
	8	10274032	BLACK KEY/10P	RJM506595-001V02	2	2	2	2	2	2	2	C	
	9	10274160	BLACK KEY/5P	RJM506595-002V02	1	1	1	1	1	1	1	C	
	10	10163902	RUBBER CONTACT/CB	RJM503854-001V01	4	4	4	4	4	4	4	B	
	11	10163903	RUBBER CONTACT/CS	RJM503855-001V01	1	1	1	1	1	1	1	B	
PANEL UNIT													
N N	12	10371164	PLATE/DISPLAY	RJM510316-001V02	1	1	1	1	1	1	1	X	
	13	10199714	KNOB/SLIDE SWITCH	RJM503803-002V01	2	2	2	2	2	2	2	X	
	14	10417026	FABRIC TAPE	RJM511849-001V01	1	1	1	1	1	1	1	X	
	15	10417025	FABRIC TAPE	RJM511833-001V01	1	1	1	1	1	1	1	X	
	16	69095890	CONTACT/SLIDE SWITCH	CSB-12D	2	2	2	2	2	2	2	X	
	17	10367051	LCD	SDT-M8934-RP-0	1	1	1	1	1	1	1	X	
	18	10366853	RUBBER CONNECTOR	RJM510317-001V01	2	2	2	2	2	2	2	X	
	19	10366836	RUBBER KEY/A	RJM510262-001V01	1	1	1	1	1	1	1	X	
	20	10366837	RUBBER KEY/B	RJM510264-001V01	1	1	1	1	1	1	1	X	
	21	10467005	RUBBER KEY/C	RJM510282-010V01	1	1	1	1				X	
	21	10467012	RUBBER KEY/C	RJM510282-011V01					1	1	1	X	
	22	10366845	RUBBER KEY/D	RJM510283-001V01	1	1	1	1	1	1	1	X	
	23	10366849	RUBBER KEY/E	RJM510284-001V01	1	1	1	1	1	1	1	X	
	24	10366850	RUBBER KEY/G	RJM510286-001V01	1	1	1	1	1	1	1	X	
	25	10264808	SPEAKER	C10J01A	2	2	2	2	2	2	2	X	


1: CTK-1300_DI
2: CTK-1300_EU
3: CTK-1300_UK
4: CTK-1300_US

5: CTK-1300ES_DI
6: CTK-1300ES_EU
7: CTK-1300ES_US

N	Item	Code No.	Parts Name	Specification	Q'ty							R	Remarks
					1	2	3	4	5	6	7		
N	26	10467004	PANEL	RJM510265-011V03	1	1	1	1				X	
N	26	10467011	PANEL	RJM510265-012V03					1	1	1	X	
	27	10366841	SIDE PANEL/LEFT	RJM510267-001V01	1	1	1	1	1	1	1	X	
	28	10366842	SIDE PANEL/RIGHT	RJM510268-001V01	1	1	1	1	1	1	1	X	
MAIN CASE UNIT													
	29	10368209	CASE UNIT/MAIN	TK-RJM510380*001	1	1	1	1	1	1	1	X	
	30	10301471	FELT/LOWER LIMIT/KEYBOARD	RJM508593-001V01	1	1	1	1	1	1	1	X	
	31	10317116	FELT/DAMPER/KEYBOARD	RJM509138-001V01	1	1	1	1	1	1	1	X	
	32	10205015	FELT/UPPER LIMIT/KEYBOARD	M440342-001V02	1	1	1	1	1	1	1	X	
	33	10284332	BRACKET/for Stand	M440866-001V02	2	2	2	2	2	2	2	X	
	34	69271080	BATTERY SPRING/(+)	M440112-1	1	1	1	1	1	1	1	X	
	35	10274835	BATTERY SPRING/(-)	M440002-001V02	1	1	1	1	1	1	1	X	
	36	69271060	BATTERY SPRING/A	M440676-1	2	2	2	2	2	2	2	X	
	37	69271070	BATTERY SPRING/B	M440677-1	3	3	3	3	3	3	3	X	
	38	69226920	RUBBER FOOT	M41361-6	4	4	4	4	4	4	4	X	
	39	10243428	BATTERY COVER	TK-M340884*020	1	1	1	1	1	1	1	X	
	40	10329837	LOWER COVER/A	RJM508655-001V03	1	1	1	1	1	1	1	X	
	41	10329838	LOWER COVER/B	RJM508656-001V03	1	1	1	1	1	1	1	X	
	42	10329839	LOWER COVER/C	RJM508657-001V03	1	1	1	1	1	1	1	X	
N	43	10466998	LABEL/RATING	RJM513003-007V01	1	1	1	1				X	
N	43	10467008	LABEL/RATING	RJM513003-008V01					1	1	1	X	
ACCESSORIES													
	-	10366857	MUSIC STAND	RJM510426-001V01	1	1	1	1	1	1	1	C	
	-	10408260	AC ADAPTOR	AD-E95100LU-P2				1			1	B	for US

SCHEMATIC DIAGRAMS

MAIN PCB: M820-MDA1

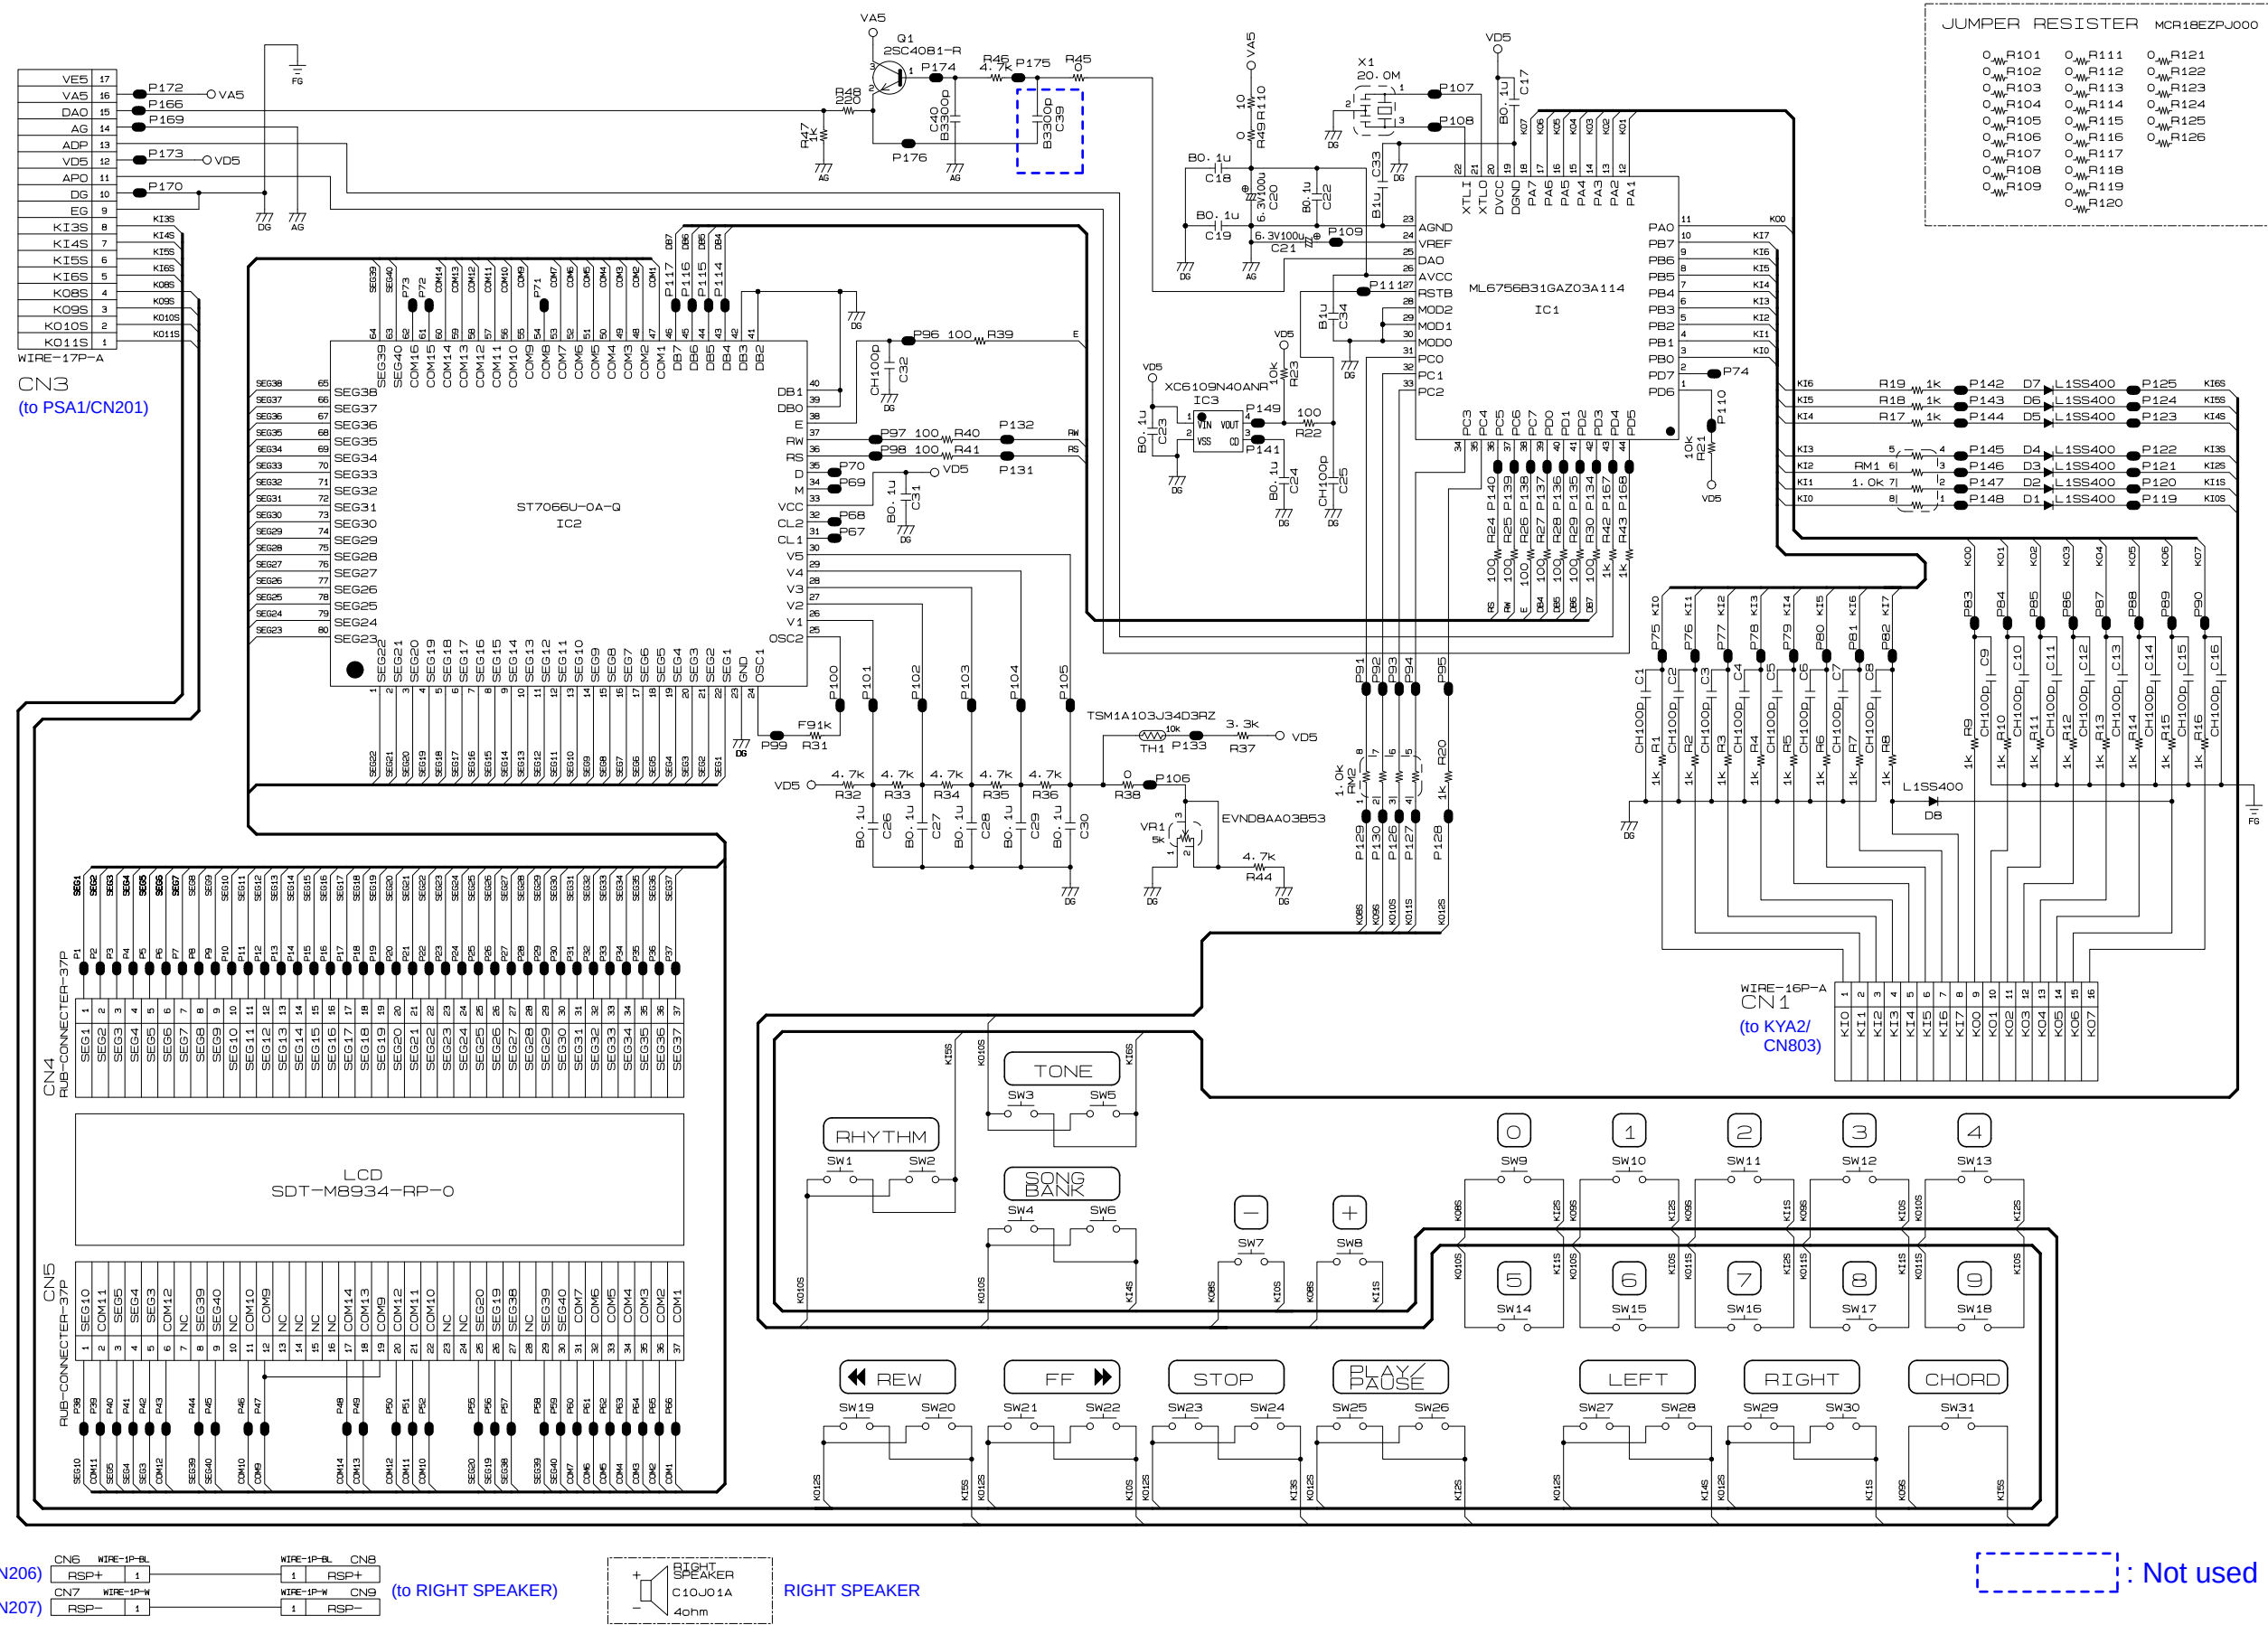





CASIO COMPUTER CO., LTD.

CS Technical Department

TOKYO, JAPAN