
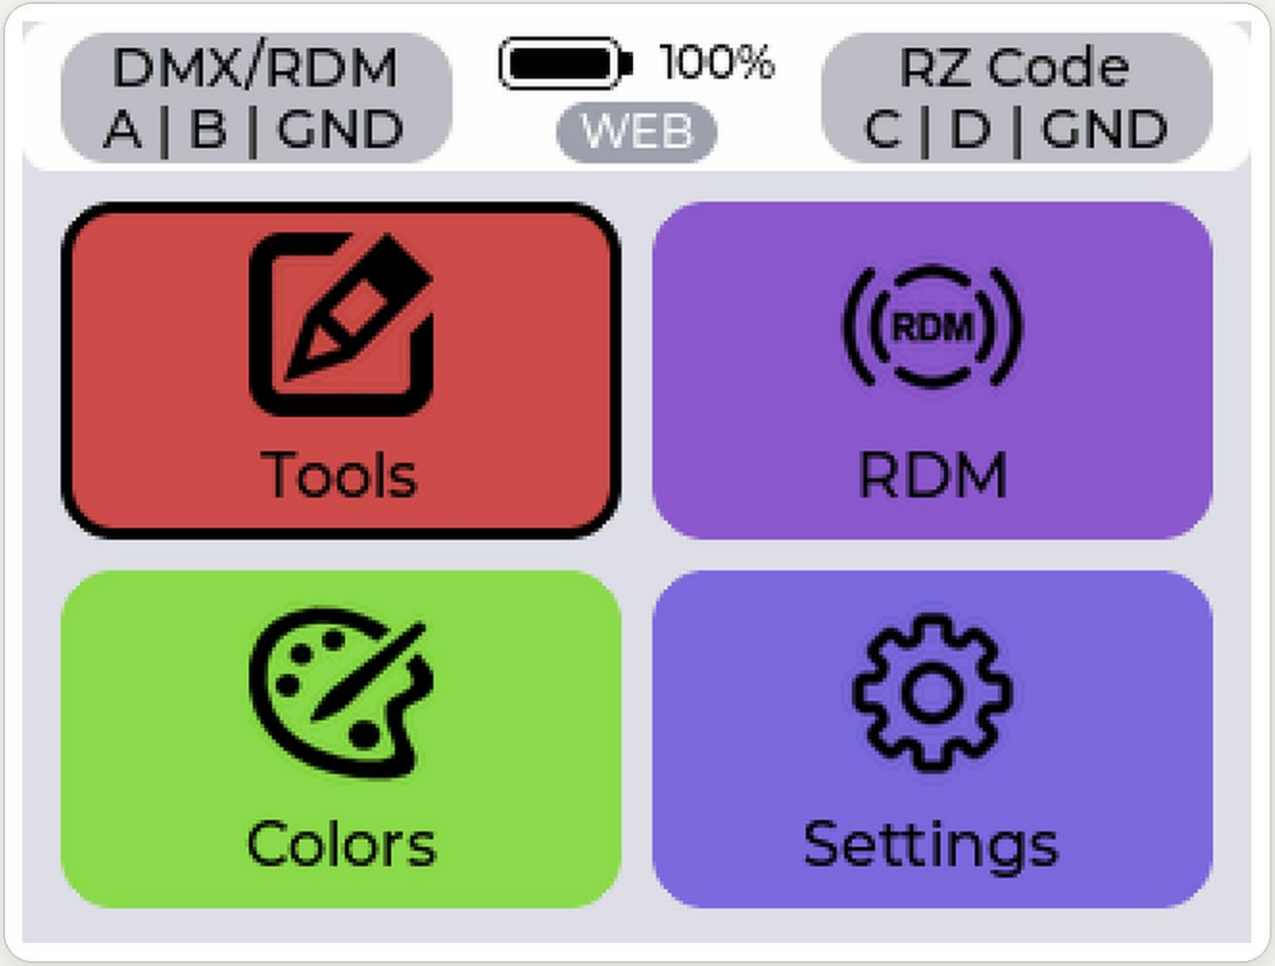


HOME

Choose a screen

KNOB	Turn the knob to move the outline. Four tiles are on screen. Keep turning and the view slides to the other two. English order is DMX ADDR, DMX IC, COLORS, RDM, TOOLS, SETTINGS. Chinese is 写地址, 芯片, 调色, 发现, 调试, 设置. This picture shows the earlier four-tile home.
PLUGS	DMX/RDM is A, B, and GND. RZ Code is C, D, and GND. Those names are on this screen. The green plugs are blank.
STATUS	WEB means a browser can open the console. The battery icon shows the cell level.
BACK	A long press of the knob returns home from any screen.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

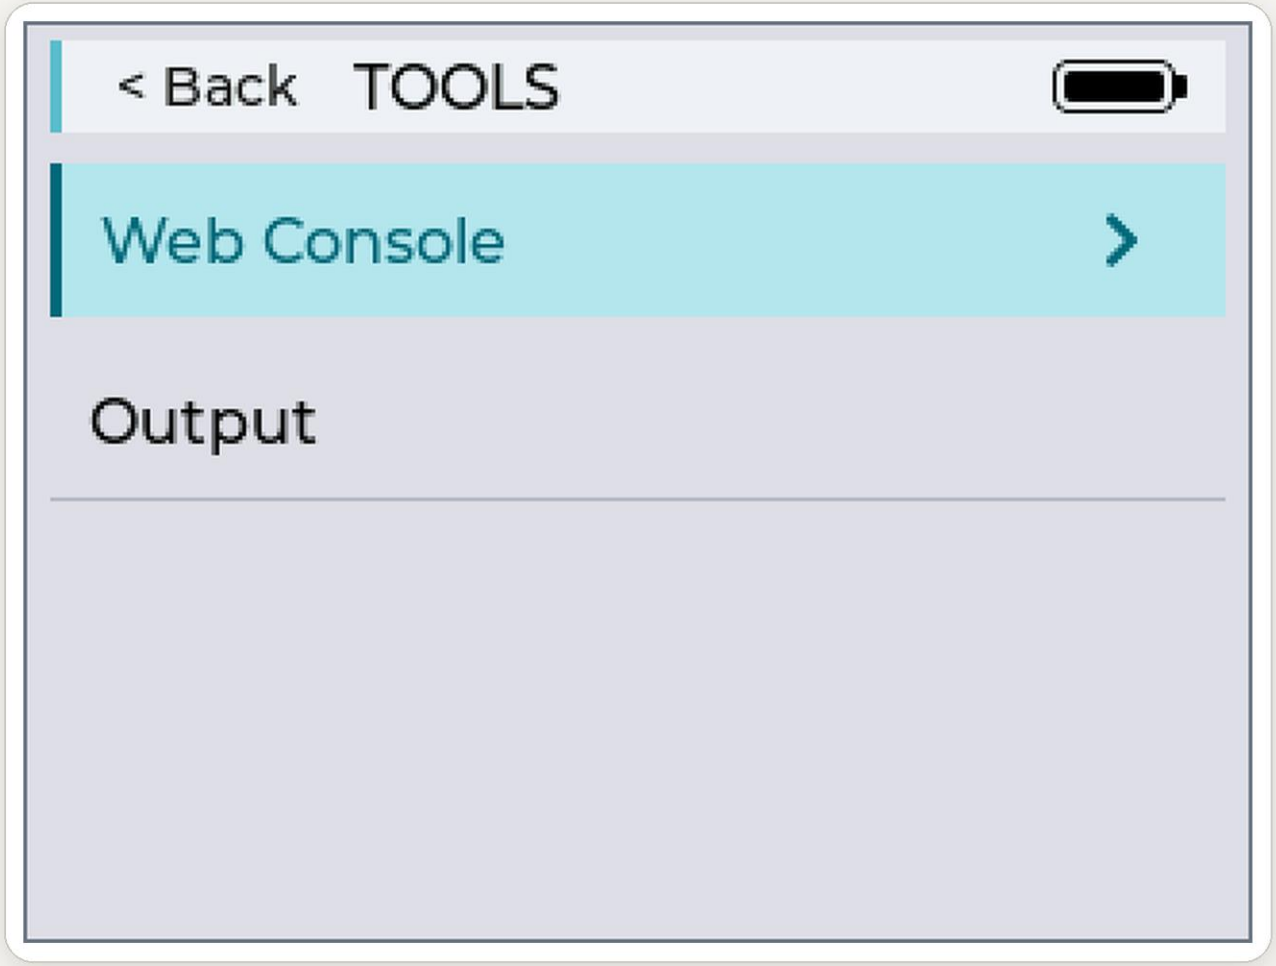


TOOLS

Console and live output

WEB	Opens the Web Console page. That page shows the address. Press the URL row there to open the code.
OUTPUT	Opens the live port: where the levels come from, whether a color test is holding the line, and the frame rate.
BACK	Press Back, or turn to Back and press, to return home.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

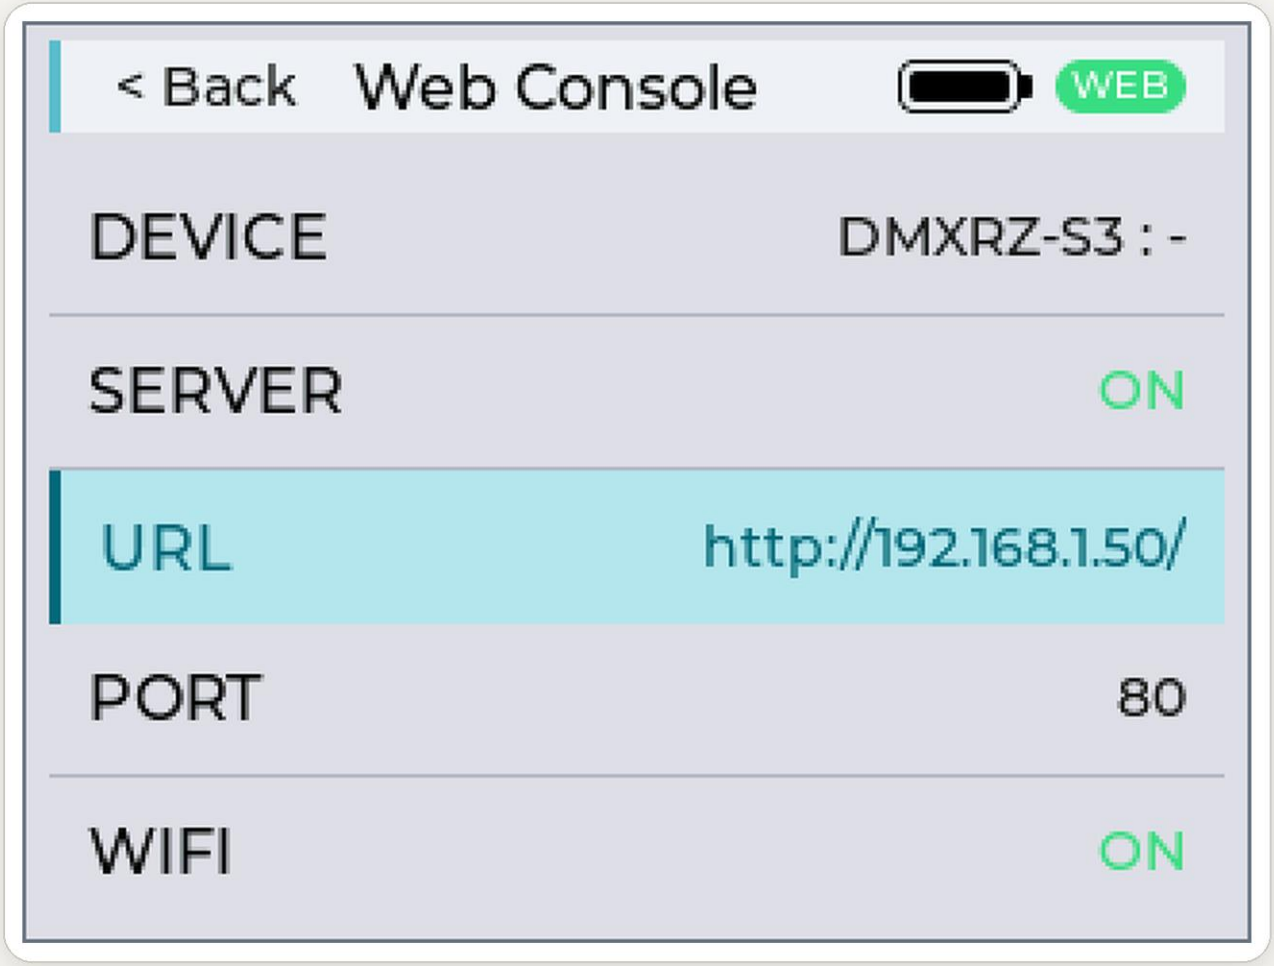

CONSOLE

The address of this unit

ROWS	DEVICE is the model and name. SERVER and WIFI should both read ON. PORT is 80. The address on this picture is an example.
URL	Press the URL row. That is the row that opens the code. One row below, HINT reads URL->QR.
NEED	If WIFI is not ON, join a network under Settings first. Without an address, the phone has nothing to open.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.



CODE

Scan to open the console

PHONE
Scan the code with a phone on the same network. The browser opens the Web Console. Typing the address under the code does the same thing.

HOTSPOT
The phone can be the network. Join that hotspot from Settings, then scan with the same phone.

CLOSE
Tap the screen, or press Back, to leave the code. This code opens the console. The Help code, under Settings, opens the user guide.



OUTPUT


What is leaving the port

SOURCE — NONE, Art-Net, USB, or COLOR. COLOR means a color test is making the levels.

HOLD — OFF means an external source can drive the port. COLOR means a test is holding Art-Net.

RATE — FPS is the rate actually leaving the controller. NONZERO is how many of the 512 channels are above 0.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

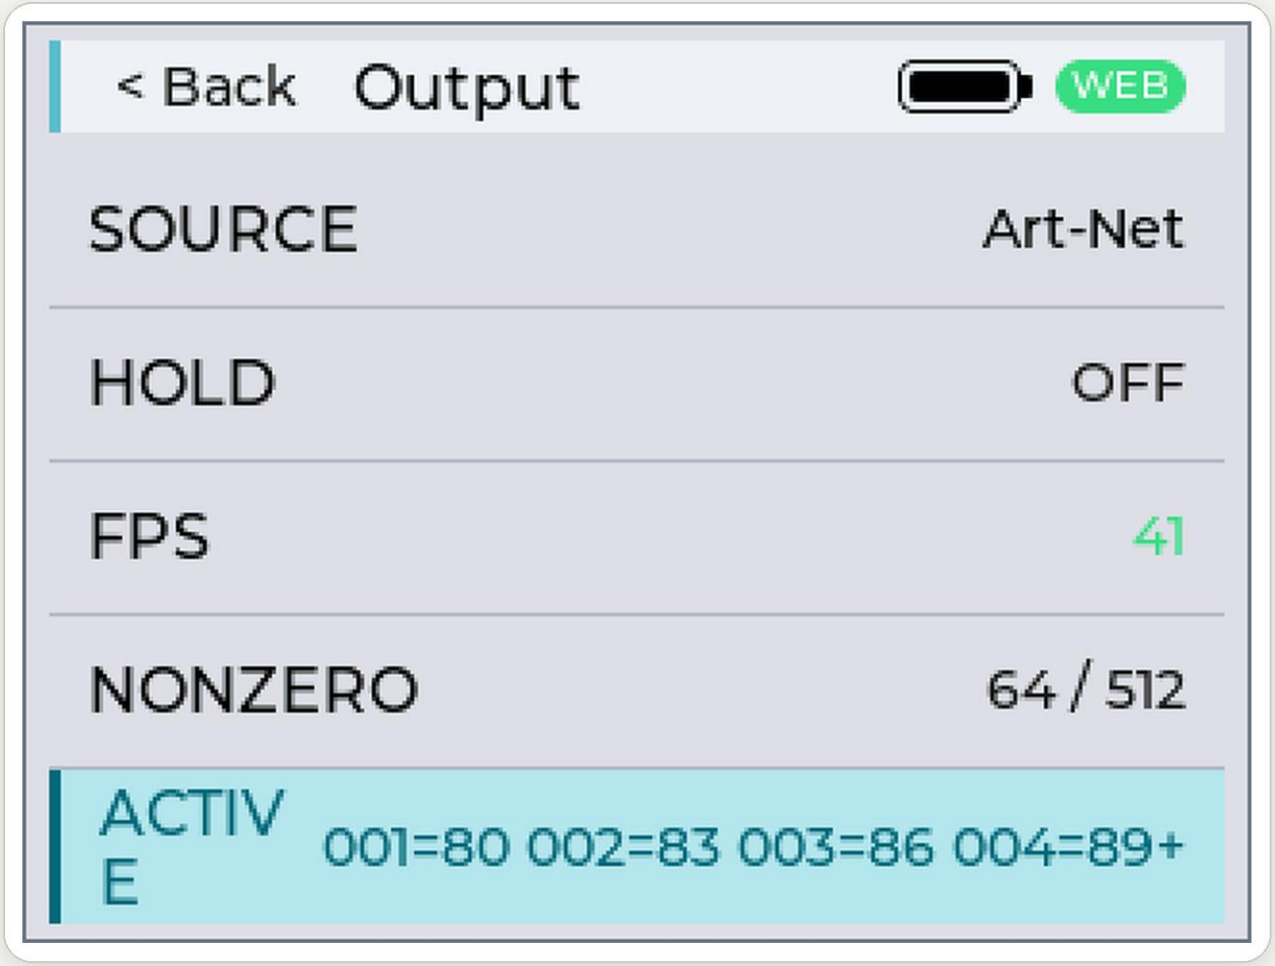

LEVELS


Which channels are on

ACTIVE Turn down to ACTIVE. It lists the first live channels as address=level. A plus means more channels are above 0.

UNI UNIVERSE is the last row. 1 on this screen is Art-Net universe 0. The range is 1 to 4.

READ This page does not edit levels. Color test and the web console do.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

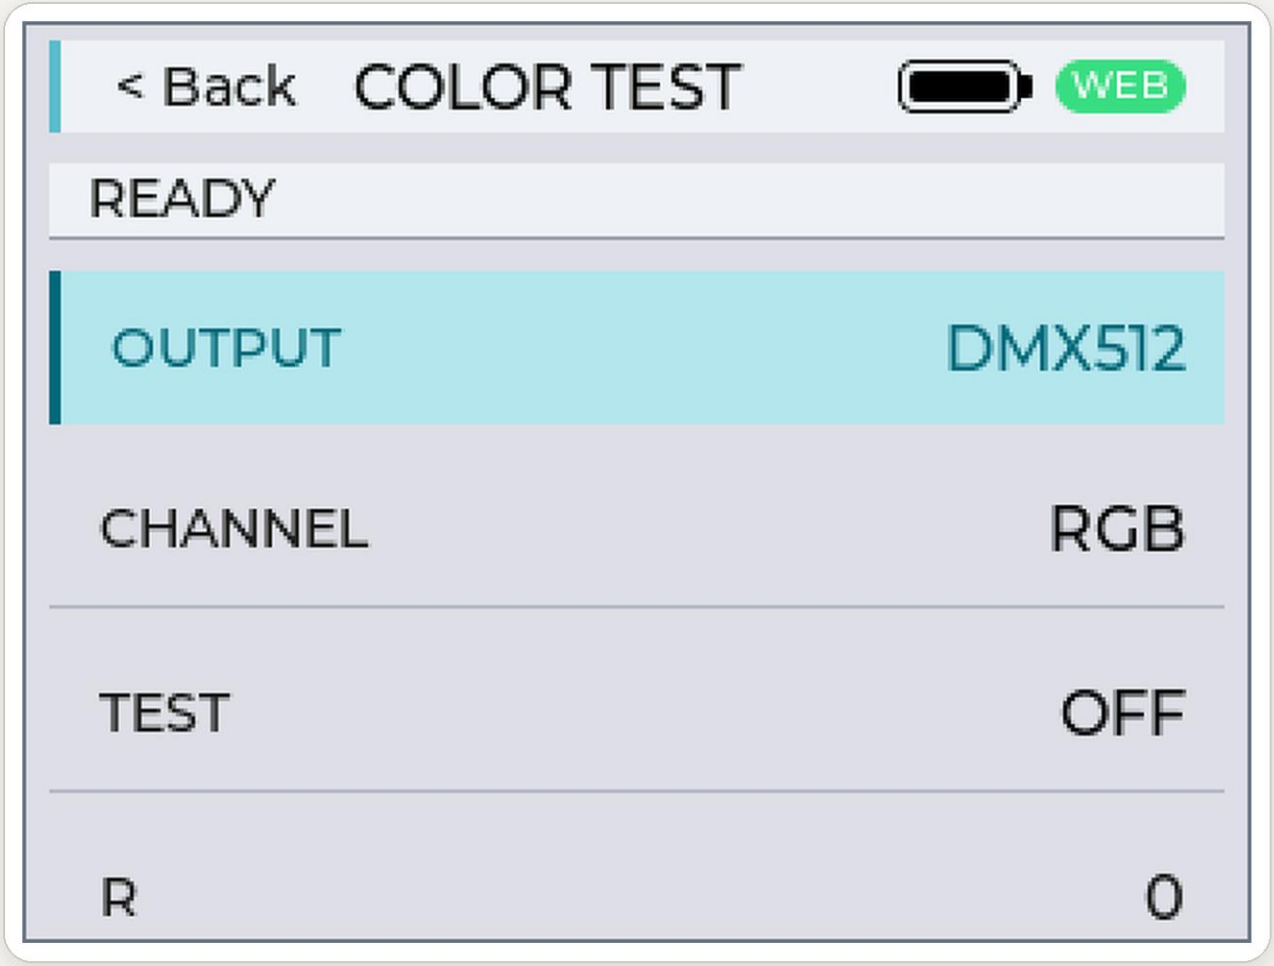


COLORS

Color test

OUTPUT	DMX512, RZ Code, or DMX + RZ. This is the same output target as Settings.
CHANNEL	Slots per pixel. Factory RGB uses three: channels 1-3 are the first pixel. Groups are R, RG, RGB, RGBW, and RGBWYZ.
TEST	Stays OFF until you start a pattern: COLOR, RAINBOW, CHASE, BREATH, CH TEST, or CONSOLE. A pattern holds Art-Net until you return to OFF.
LEVELS	Turn the knob to reach the rows under the mode. The next pages are each mode.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

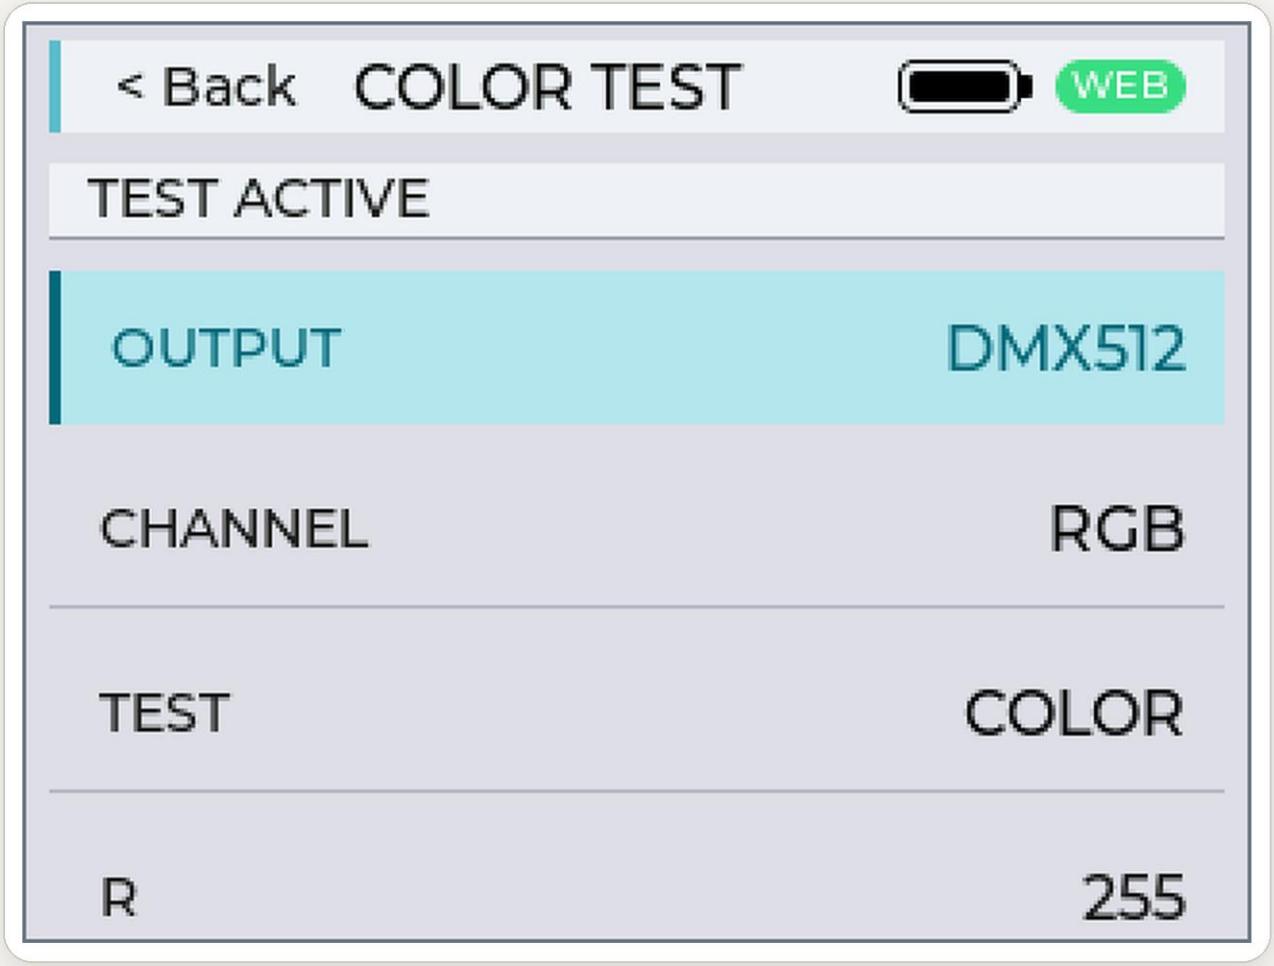


COLOR

One steady color

LEVELS	RGB shows R, then G, then B. Press a level and turn. W, Y, and Z appear when CHANNEL is RGBW or RGBWYZ.
HOLD	TEST ACTIVE means Art-Net is held. The fixtures follow this color, not an external console.
STOP	Set TEST back to OFF to release the port.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

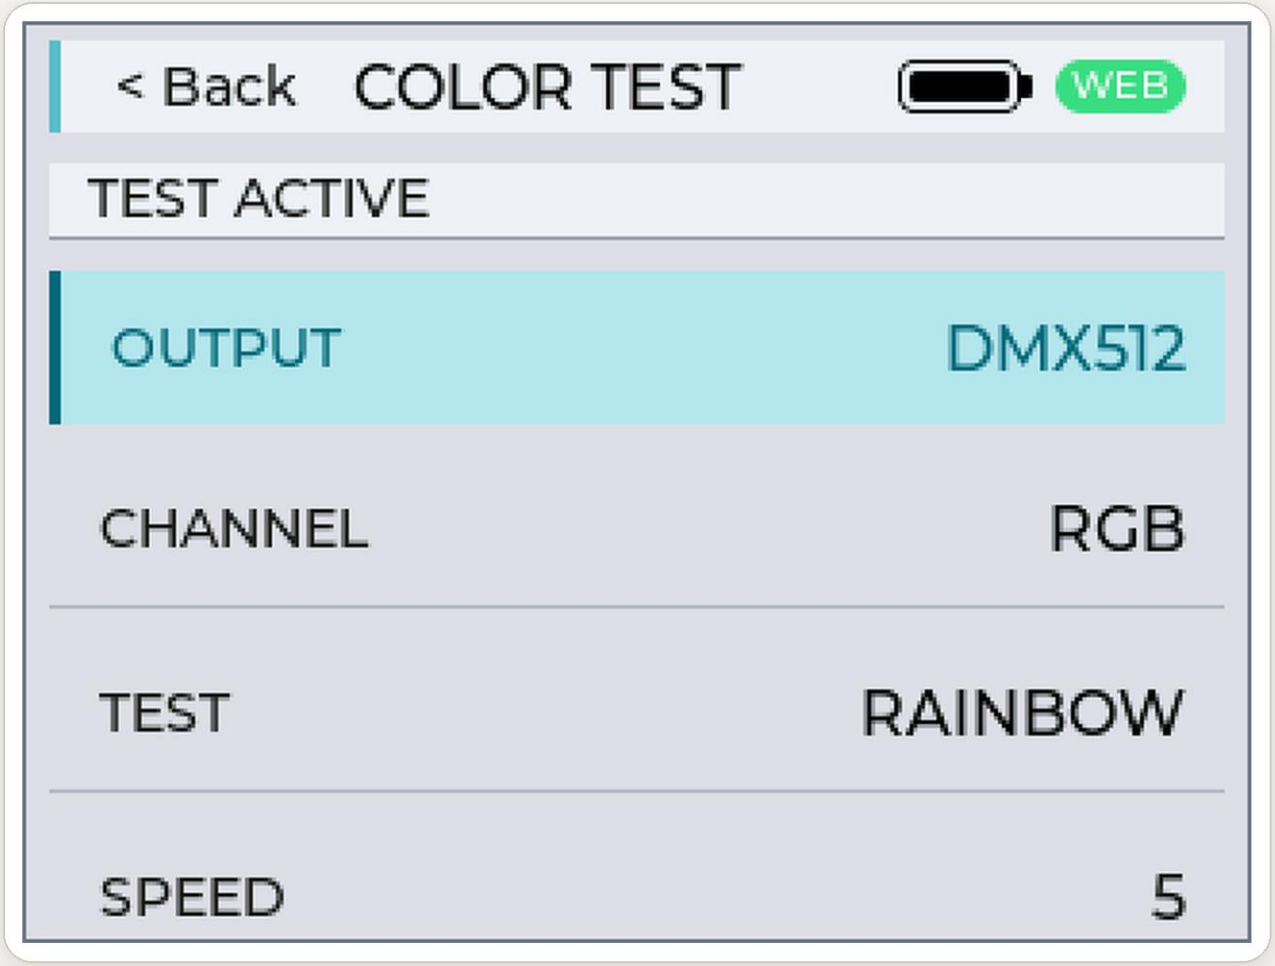


RAINBOW

A moving rainbow

SPEED	Press SPEED and turn. 1 is slow. 10 is fast. The pattern starts as soon as TEST is RAINBOW.
HOLD	TEST ACTIVE holds Art-Net until you return TEST to OFF.
SAME	CHASE uses this same speed row. Only the pattern changes.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

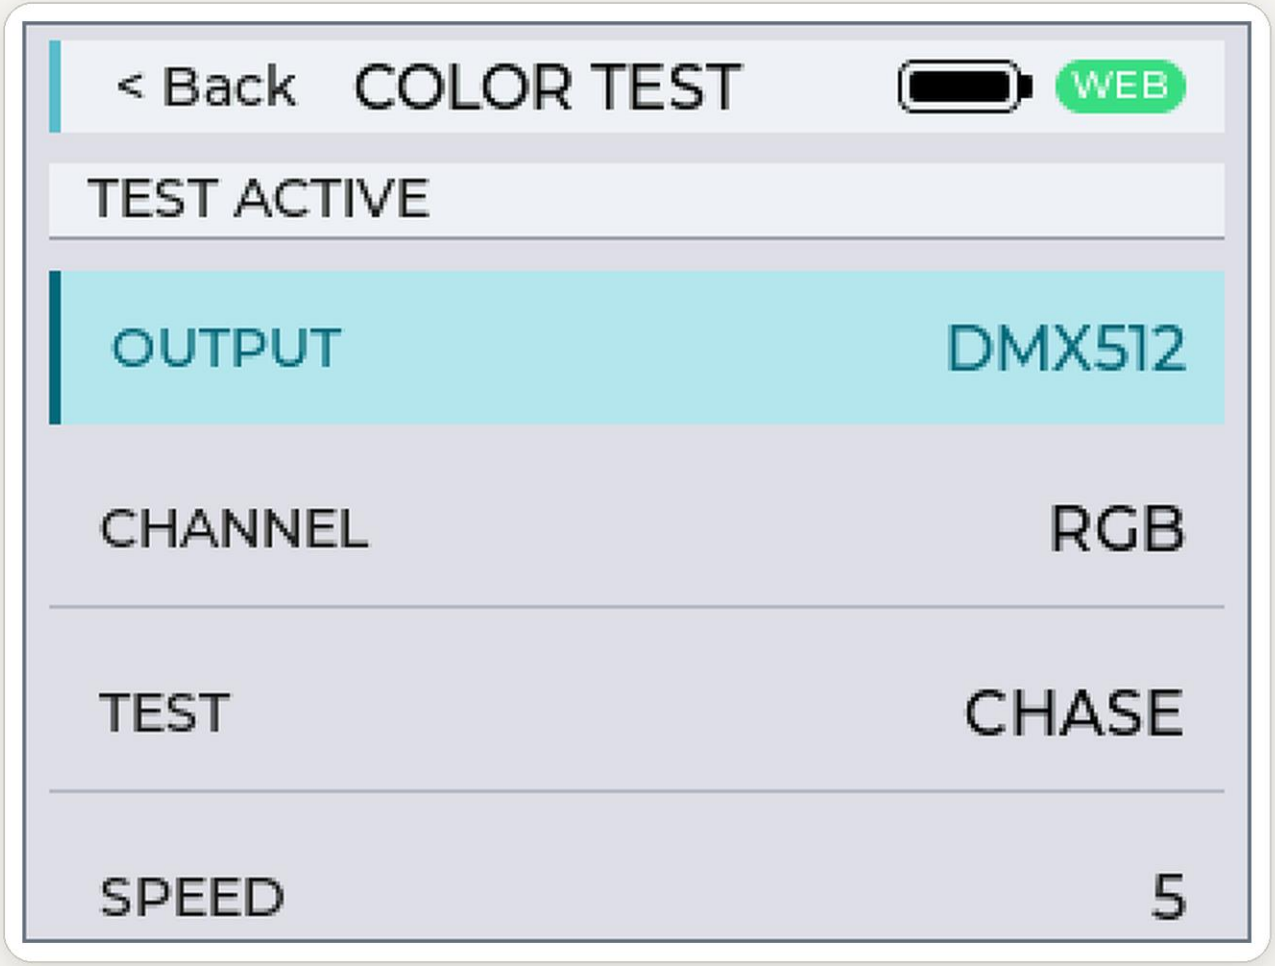


CHASE

A chase across pixels

SPEED — SPEED is 1 to 10, the same control as RAINBOW. CHANNEL still sets how many slots make one pixel.

HOLD — The chase holds Art-Net. Set TEST to OFF before an external console should drive the port.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

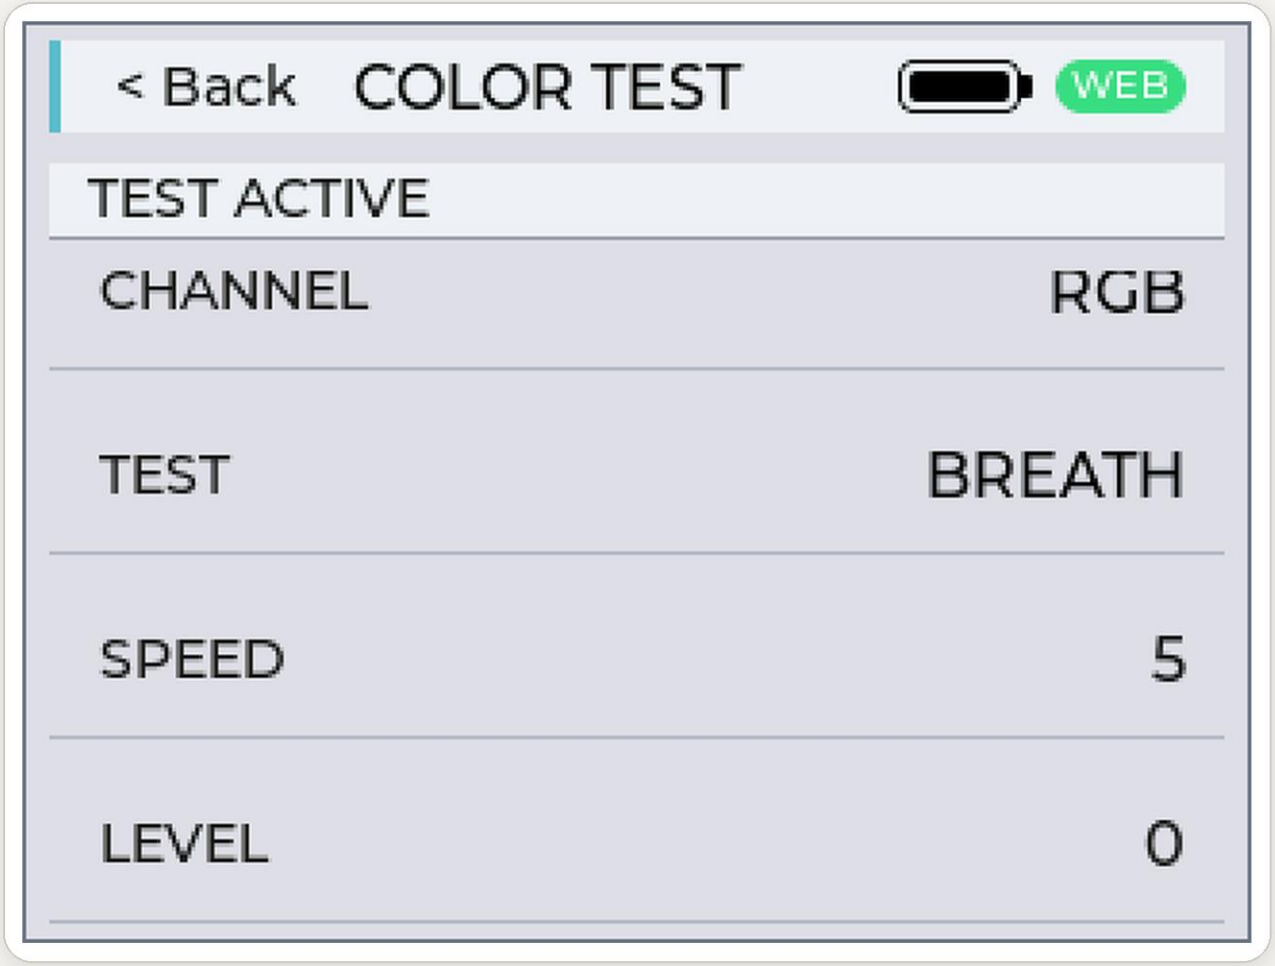


BREATH

A fade up and down

SPEED	SPEED sets how fast the fade repeats. 1 is slow. 10 is fast.
LEVEL	LEVEL is the brightness of the fade right now. It moves on its own. You cannot edit it.
HOLD	TEST ACTIVE holds Art-Net until TEST is OFF.


Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

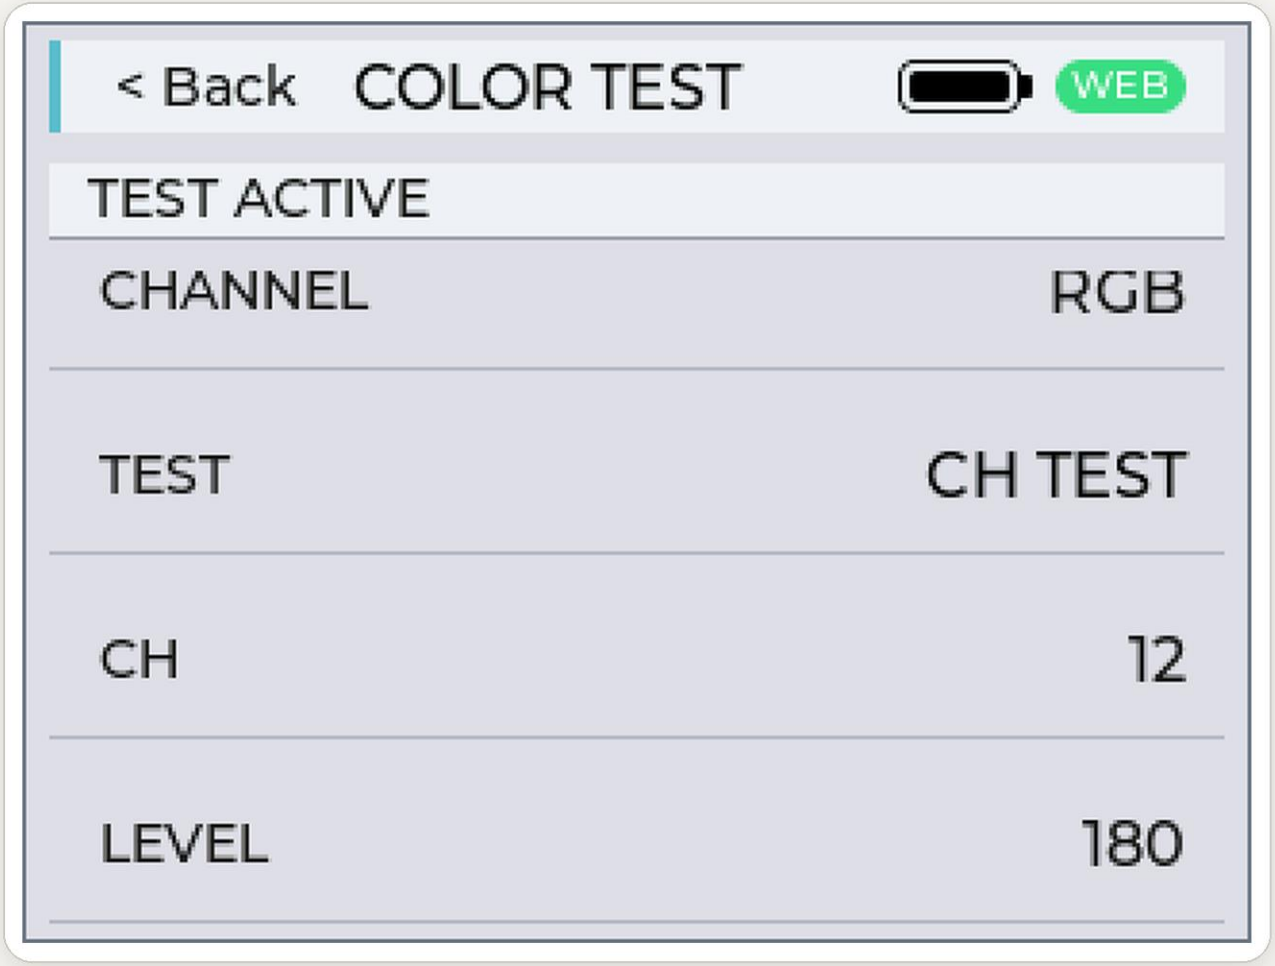

CH TEST

One channel at a time

ONE	CH is the DMX address, from 1 to 512. LEVEL is 0 to 255. Only that channel moves.
USE	Use it to find one dimmer, one relay, or one color slot without lighting the rest of the rig.
GROUP	CHANNEL stays on screen, but this mode does not build pixels from it. TEST ACTIVE still holds Art-Net.

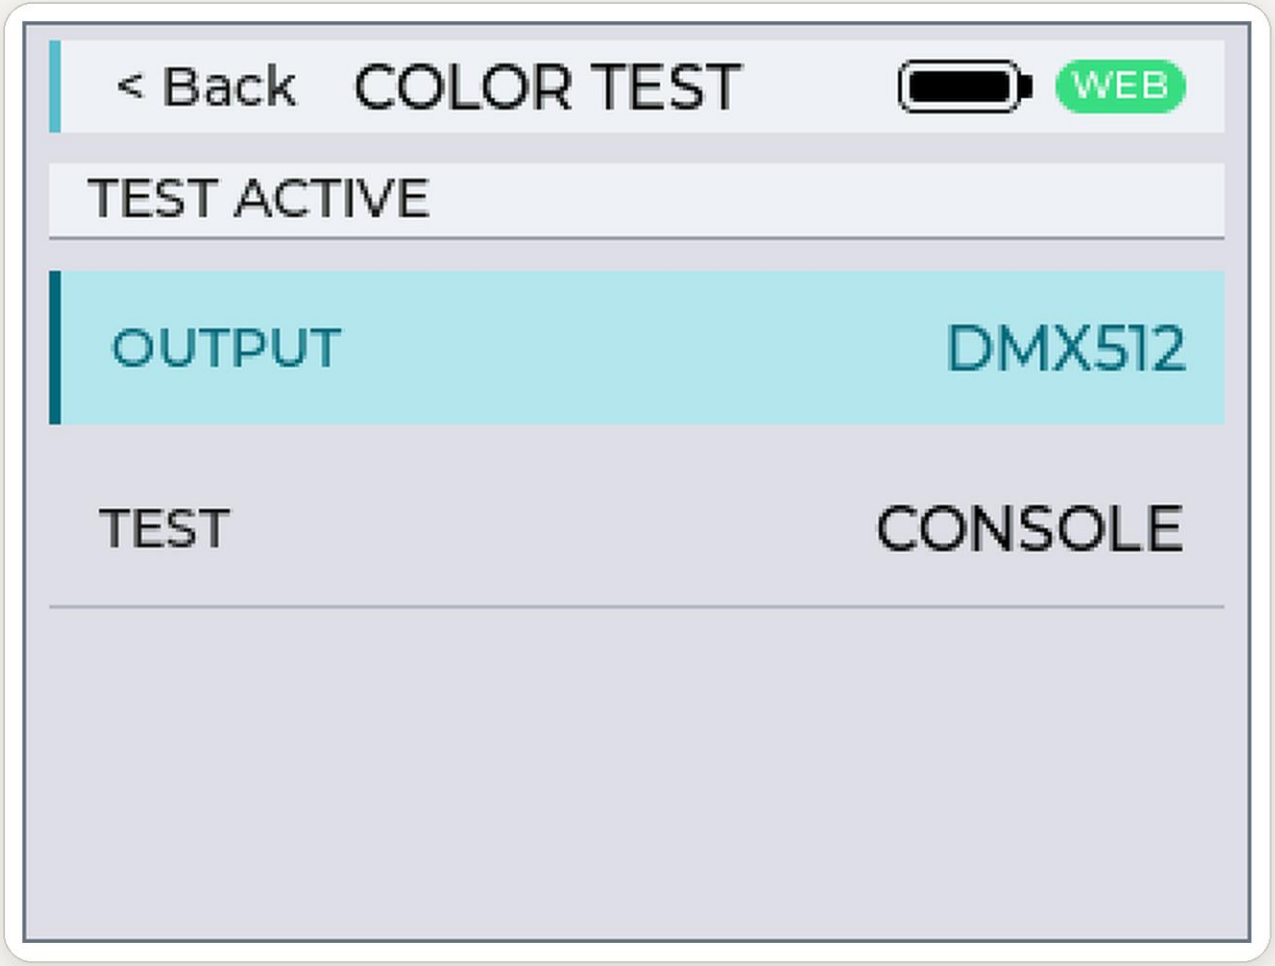

CONSOLE


The 512 editor is on the web

HOLD CONSOLE holds Art-Net. This screen only shows that the test is on. It does not list the 512 levels.

EDIT Open the Web Console and choose CONSOLE there to set every channel. The small screen cannot edit all 512 slots.

STOP Set TEST to OFF, or stop the color test on the web page, before an external console should drive the port.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

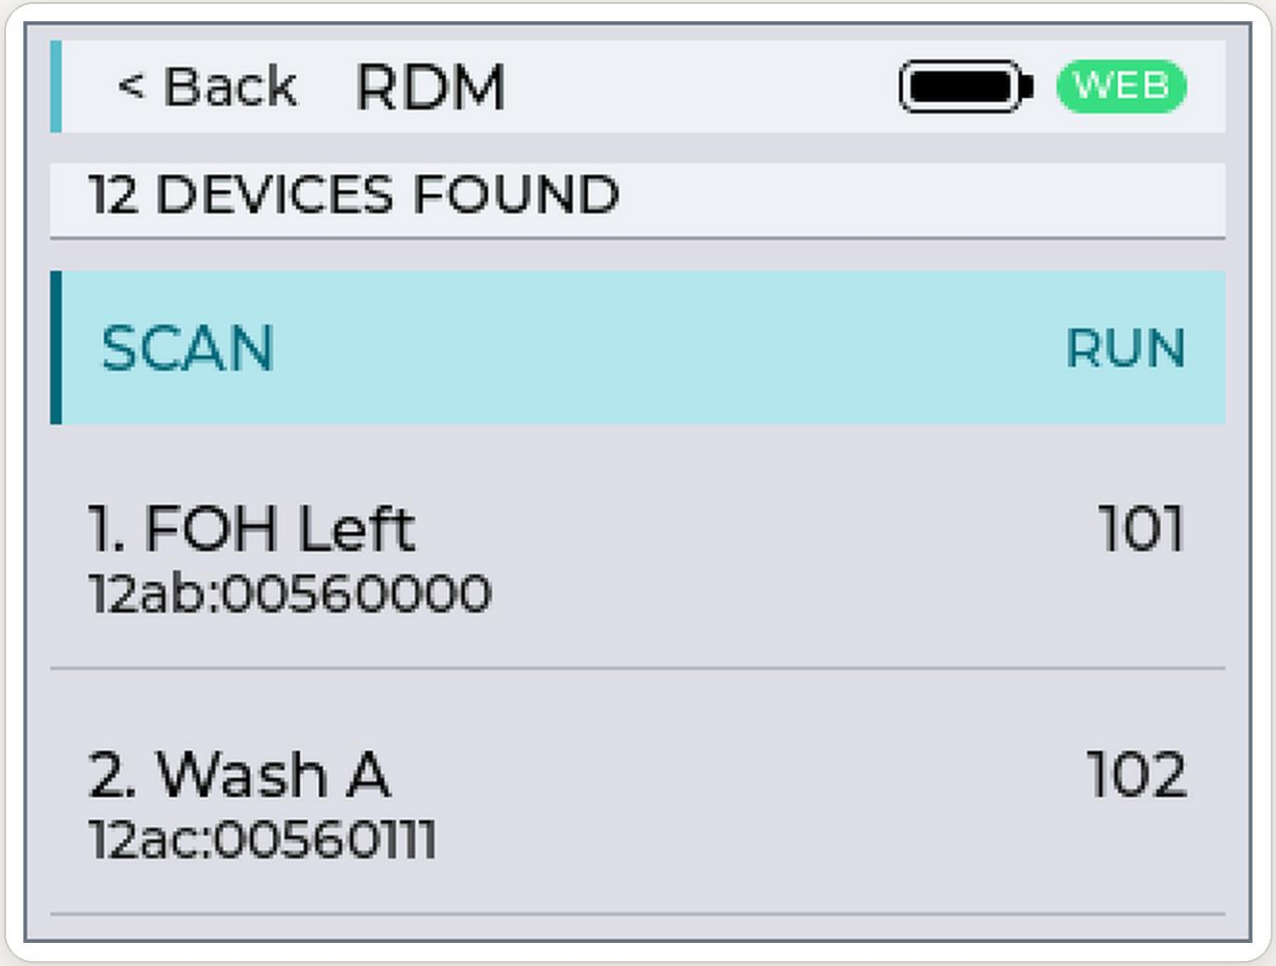


RDM

Find fixtures

SCAN	Press RUN to scan the DMX line.
FIXTURE	Press a row to open that fixture. The next pages are its address, sensors, and driver info.
EXAMPLE	Names and addresses on this picture are examples. A live scan lists the fixtures that answer.
PORT	RDM needs the output target to include DMX512. Leaving this screen returns the DMX port to Art-Net or color test.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

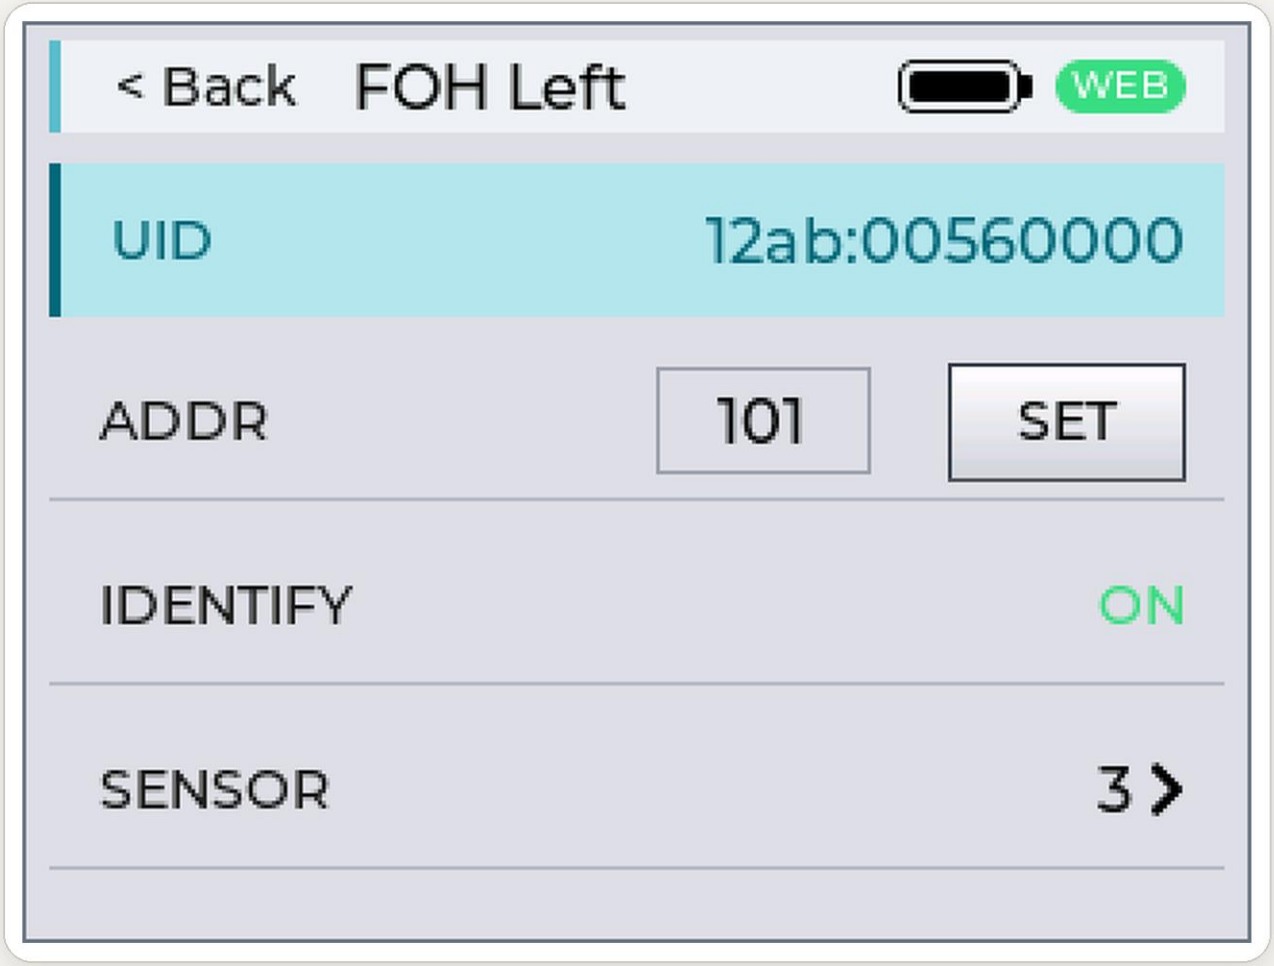

FIXTURE


One discovered fixture

ADDR — Turn to the address, press, and turn the number. Press SET to send it. The range is 1 to 512.

IDENTIFY — Opening the fixture turns Identify on, so that fixture can flash. Press the row again to turn it off.

MORE — SENSOR opens the sensor list when the count is not zero. DRIVER INFO and REFRESH are the next rows. REFRESH reads the fixture again.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

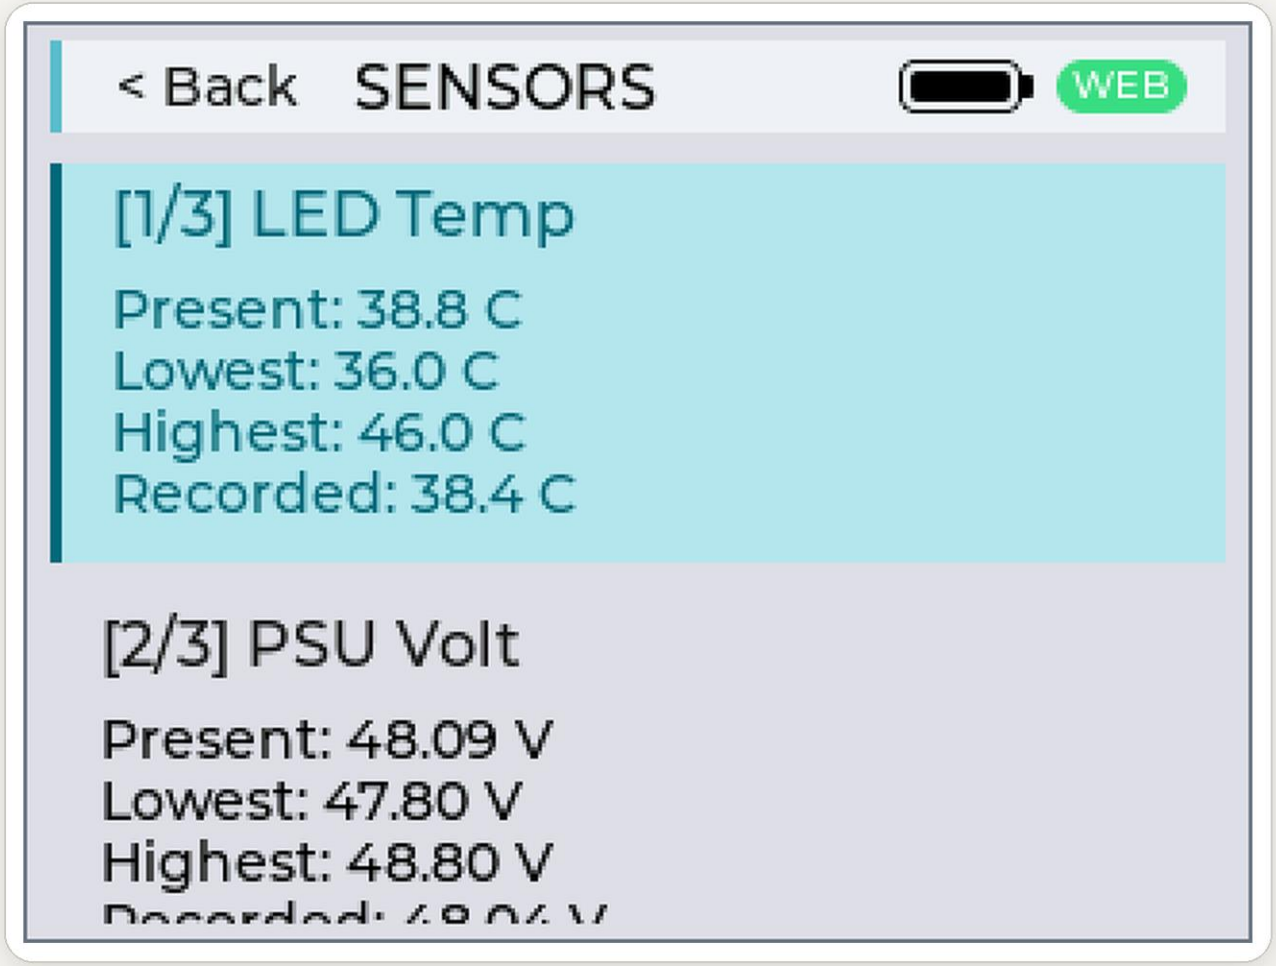


SENSORS

What the fixture is measuring

ROW	Each block is one sensor. It shows the present value, the lowest, the highest, and the recorded value.
TURN	Turn the knob to reach the sensors below the first. The names and numbers come from the fixture.
NONE	If the fixture reports no sensors, the device page says NONE and this page does not open.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

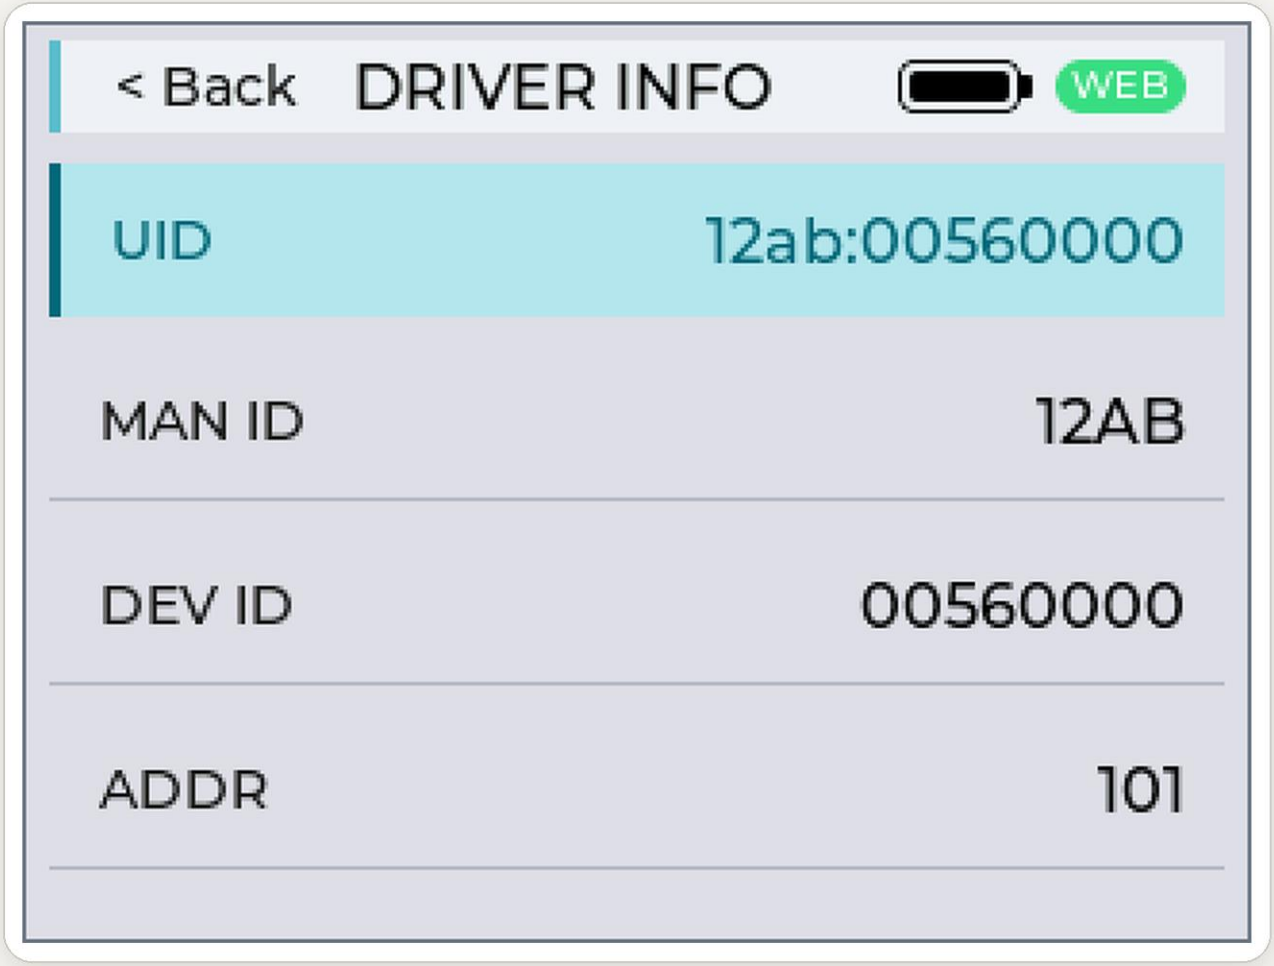


DRIVER

Identity from the fixture

IDS	UID, manufacturer ID, device ID, and the DMX address. These are the values the fixture sent.
READ	This page is read-only. Change the address, or Identify, on the fixture page.
MORE	Turn down for footprint, model, labels, sensor count, hours, and status.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

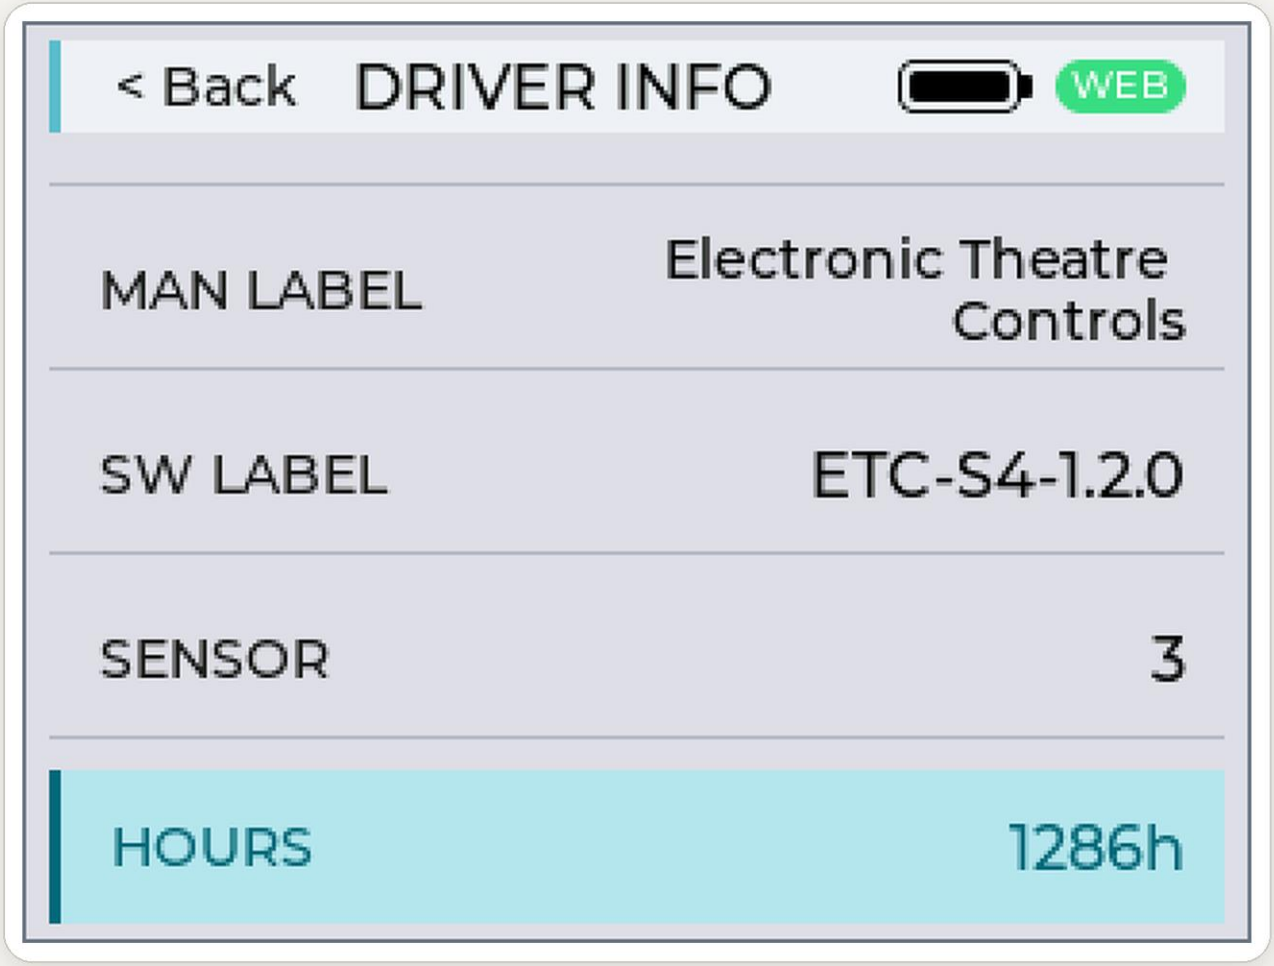


HOURS

Labels, sensors, and hours

LABELS	MAN LABEL is the manufacturer name. SW LABEL is the fixture software. DEVICE LABEL is the name on the list.
HOURS	HOURS is lamp or device hours when the fixture supports them. STATUS is the fixture's own status, on the next row.
EXAMPLE	The names and the hour count on this picture are examples.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

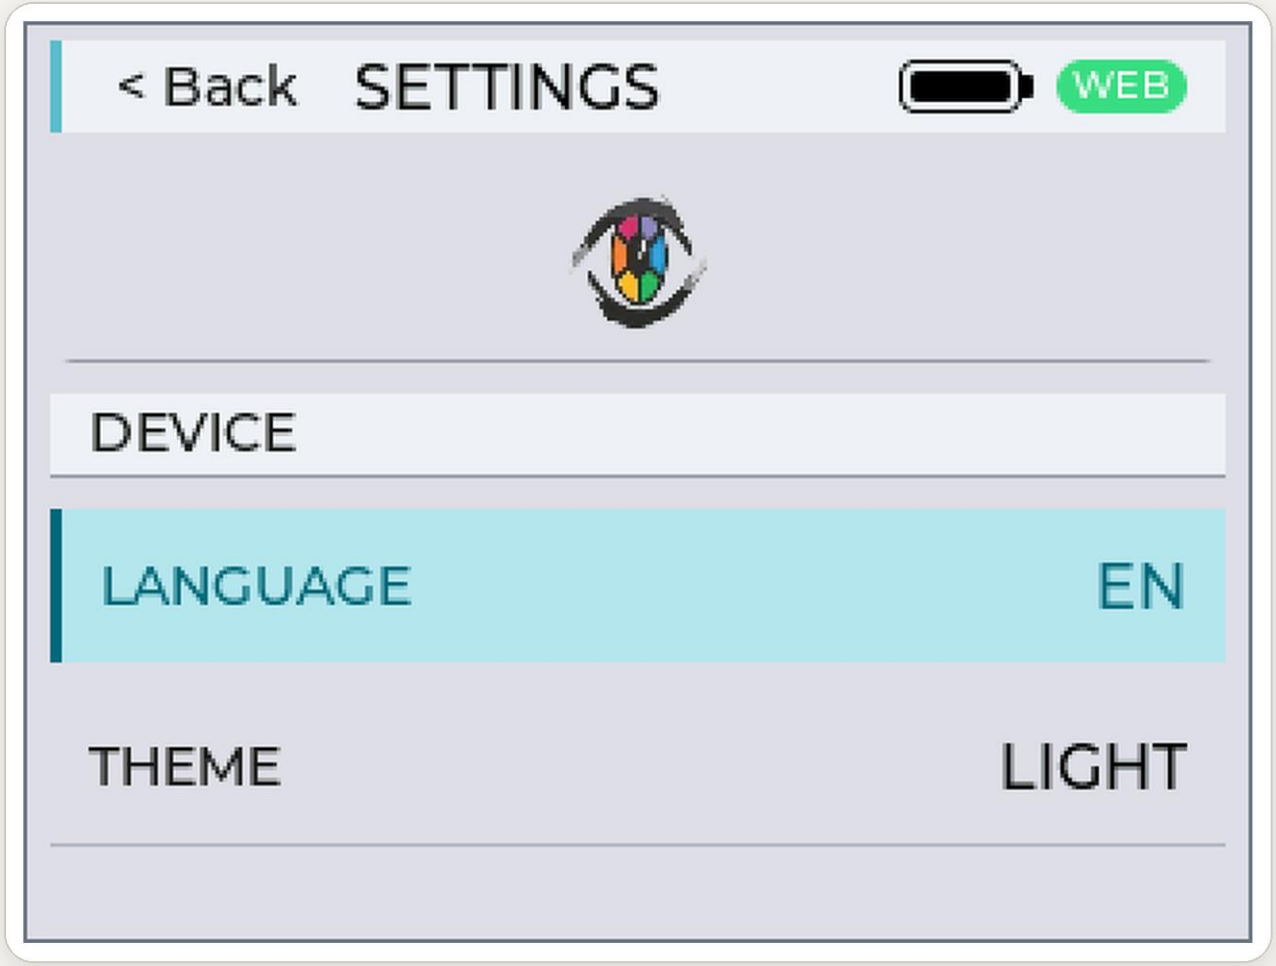


SETTINGS

Language and theme

LIST	Settings is one long list. This is the top. Turn the knob to reach backlight, ports, and About.
LANGUAGE	Press LANGUAGE and turn to choose EN or Chinese. The labels on the unit follow that choice.
THEME	LIGHT or DARK. Press the row and turn. The change is kept.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

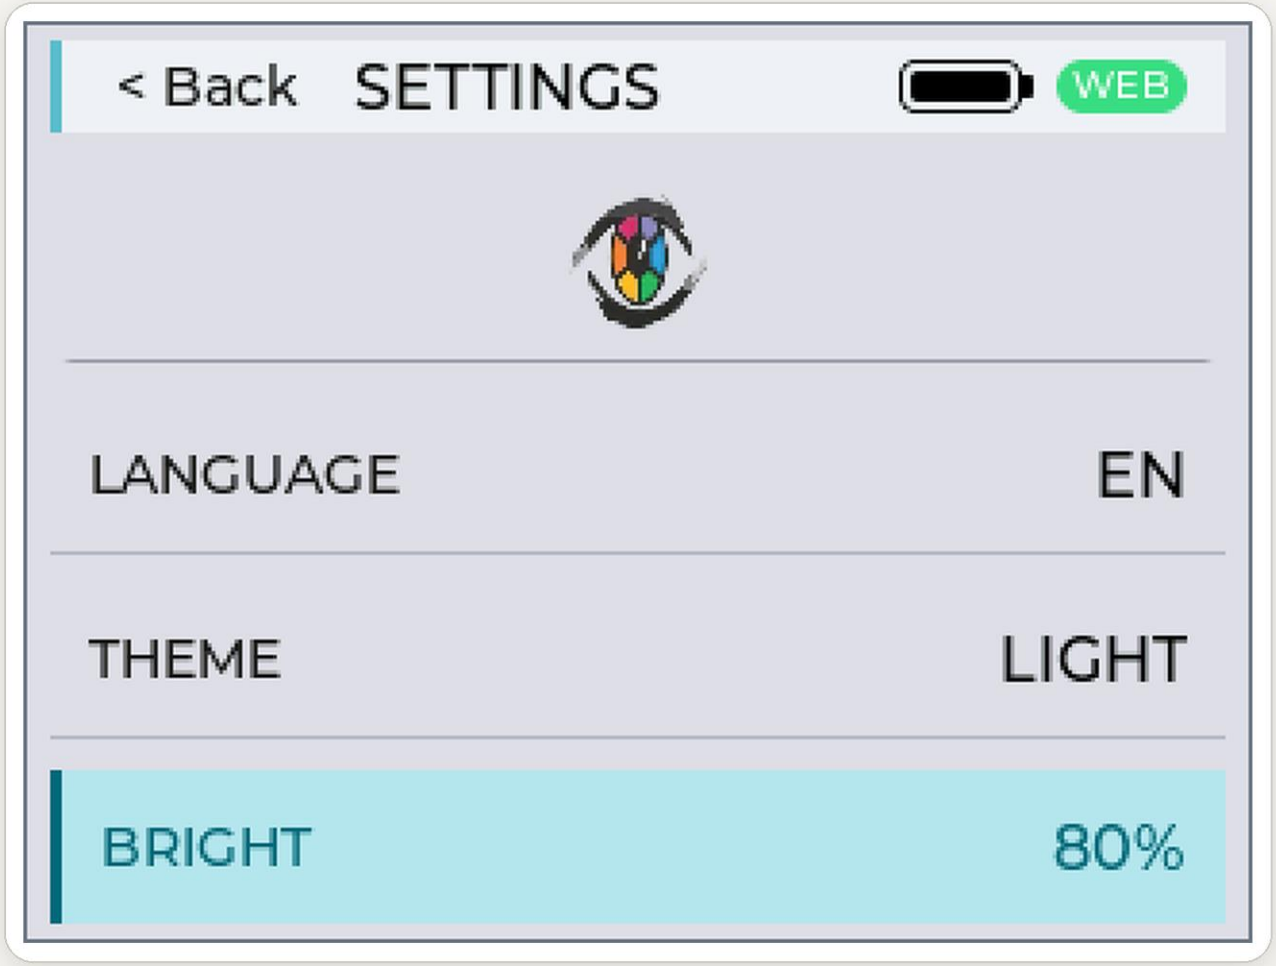


SCREEN

Backlight and beep

BRIGHT	Press BRIGHT and turn. It moves in steps of 5, from 30% to 100%.
BEEP	BEEP is the next row. ON clicks when you press the knob. OFF is silent.
KEEP	Language, theme, backlight, and beep are saved on the unit.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

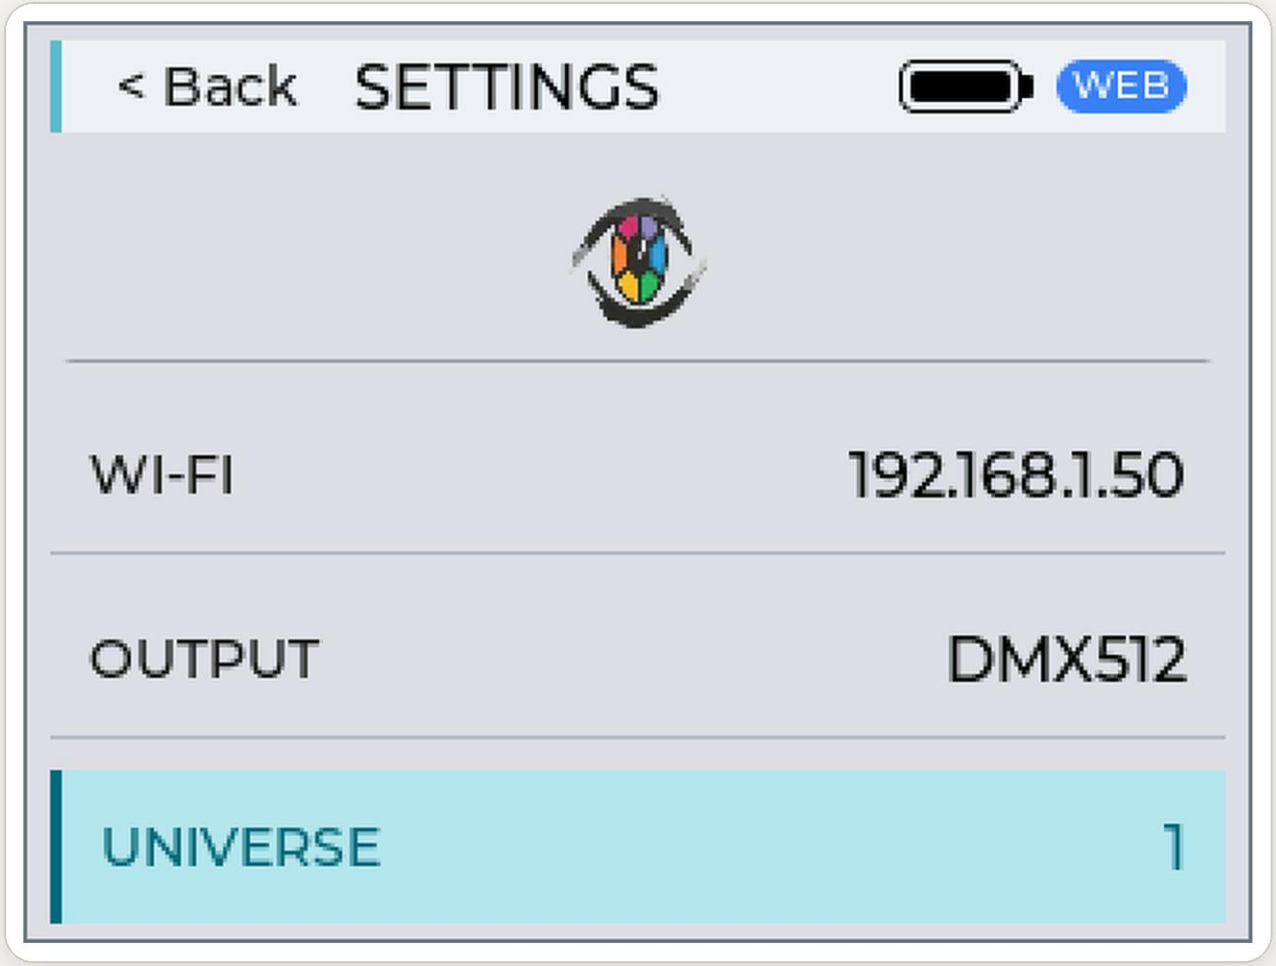

PORTS


Wi-Fi, output, and universe

WIFI The address means the unit is on the network. Press WI-FI to open the network list. The address here is an example.

OUTPUT DMX512, RZ Code, or DMX + RZ. Factory output is DMX512. RDM needs a target that includes DMX512.

UNI Universe 1 to 4 is Art-Net universe 0 to 3. USB is further down. ON makes USB-C a disk and the debug port steps aside. OFF brings that port back.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

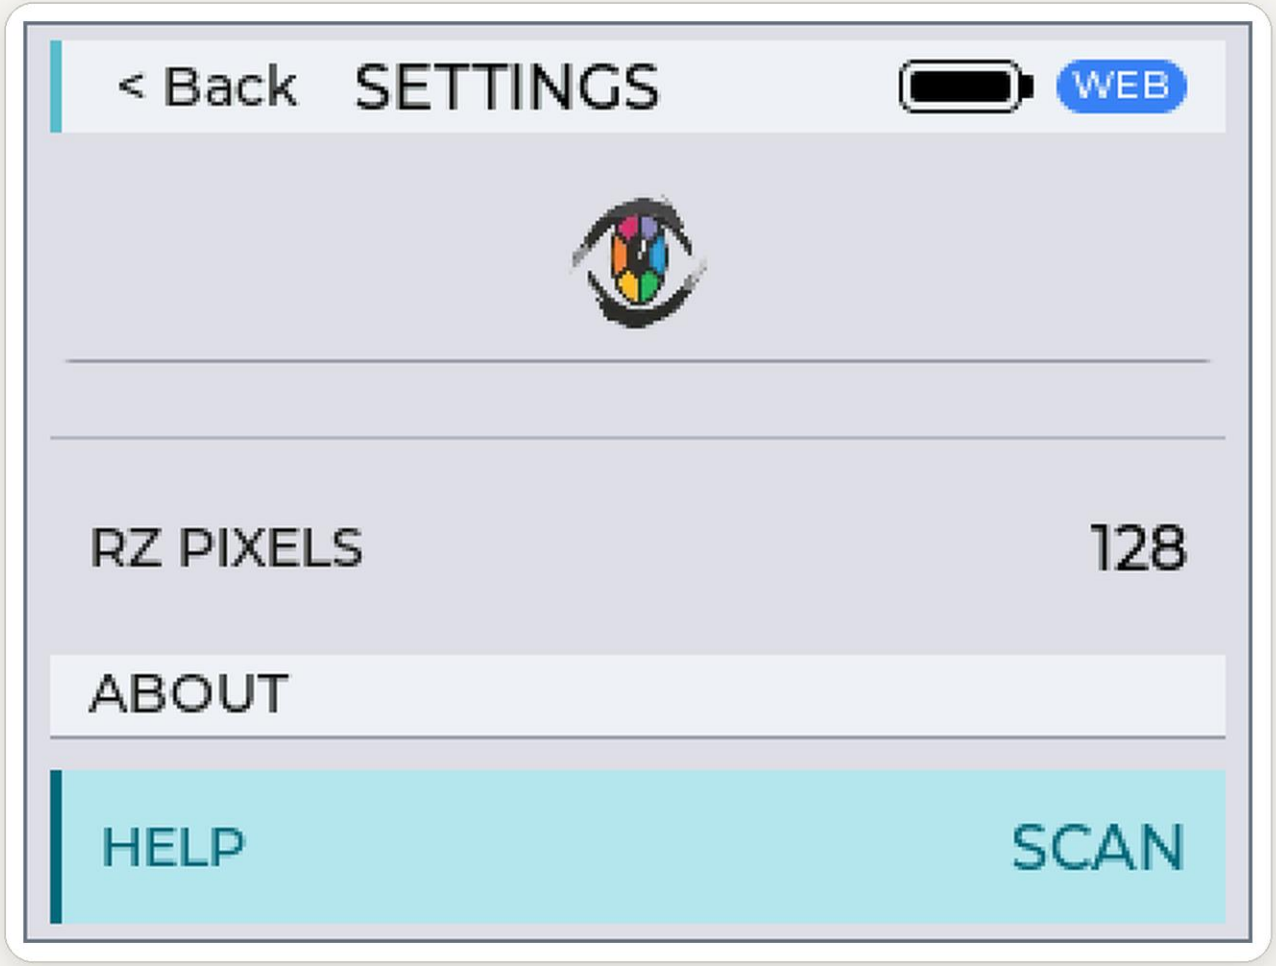

ABOUT

Pixels, help, and version

RZ	RZ WIRE is CLK+DATA or WS2812. Factory wire is CLK+DATA. RZ PIXELS is 1 to 1024. Factory count is 128.
HELP	SCAN means Wi-Fi is up. Press HELP to open the user-guide code. WiFi OFF means join a network first.
REST	VERSION and RESET DEF are below HELP. Design by F111 Studio sits at the bottom and cannot be selected.


Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.



RESET

Restore factory defaults

OPEN	Press RESET DEF. This question opens. NO is selected first.
YES	Turn to YES and press. That restores language, theme, backlight, beep, output, universe, and RZ settings, and turns the USB disk off.
WIFI	The saved Wi-Fi network is cleared too. The activation license stays. The reset button only reboots. Press NO to leave the settings as they are.

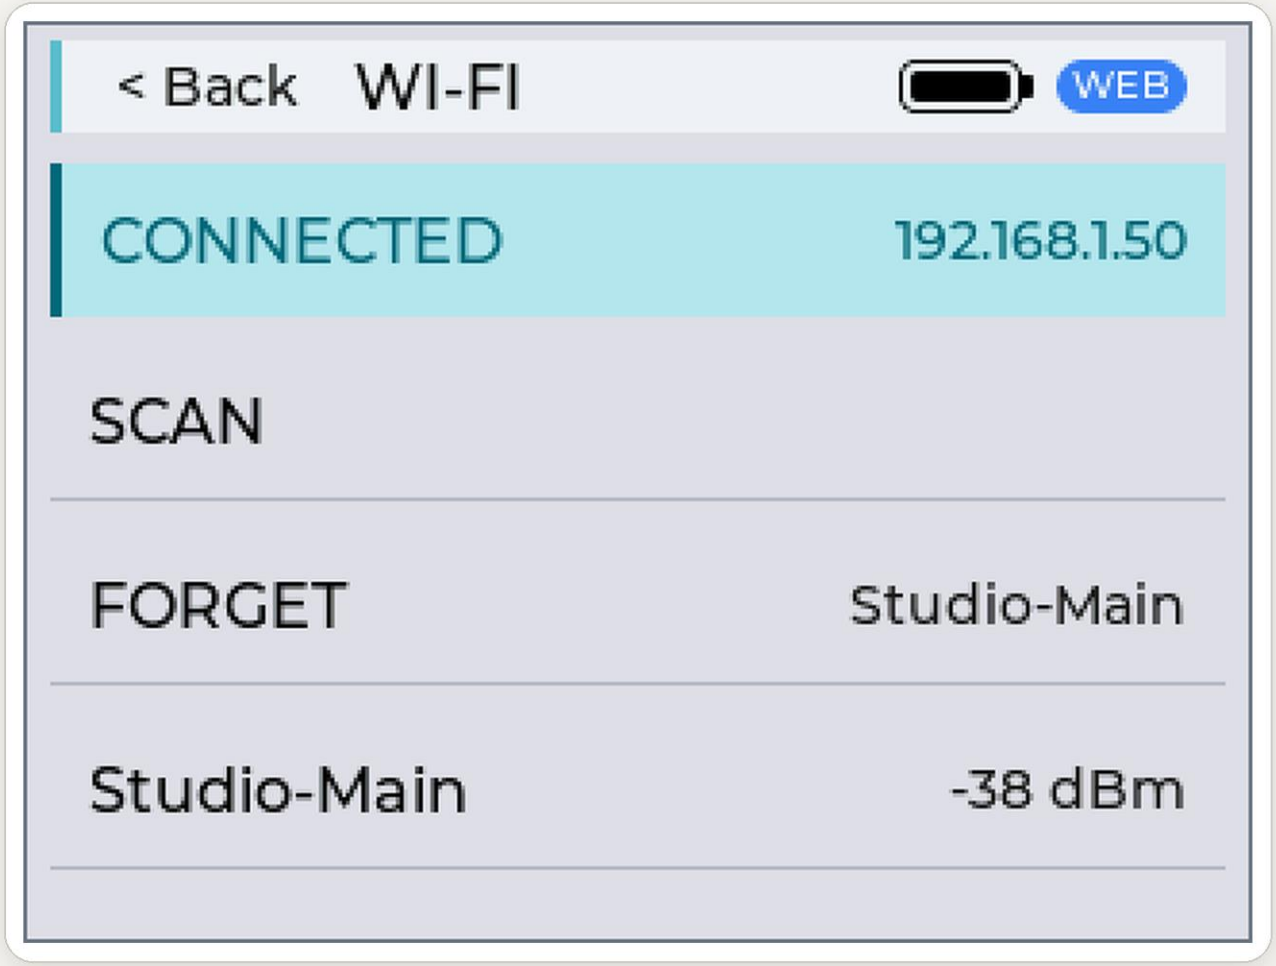

WI-FI

Join a network

LINK	CONNECTED and an address mean the unit is on the network. The address on this picture is an example.
SCAN	Press SCAN to look again. A locked network opens the password page. An open network joins as soon as you pick it.
FORGET	FORGET clears the saved network. Use it before joining a different router or a phone hotspot.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.



PASSWORD


Enter the network key

TYPE The name at the top is the network you picked. Turn to a key and press it. The password is hidden as you type.

JOIN Press CONNECT, or the check key. Back returns to the list and does not join.

WAIT The list returns while the unit joins. Stay there until the top row shows CONNECTED and an address.

Interface illustration. Fixture names, addresses, and the battery reading on these pages are examples.

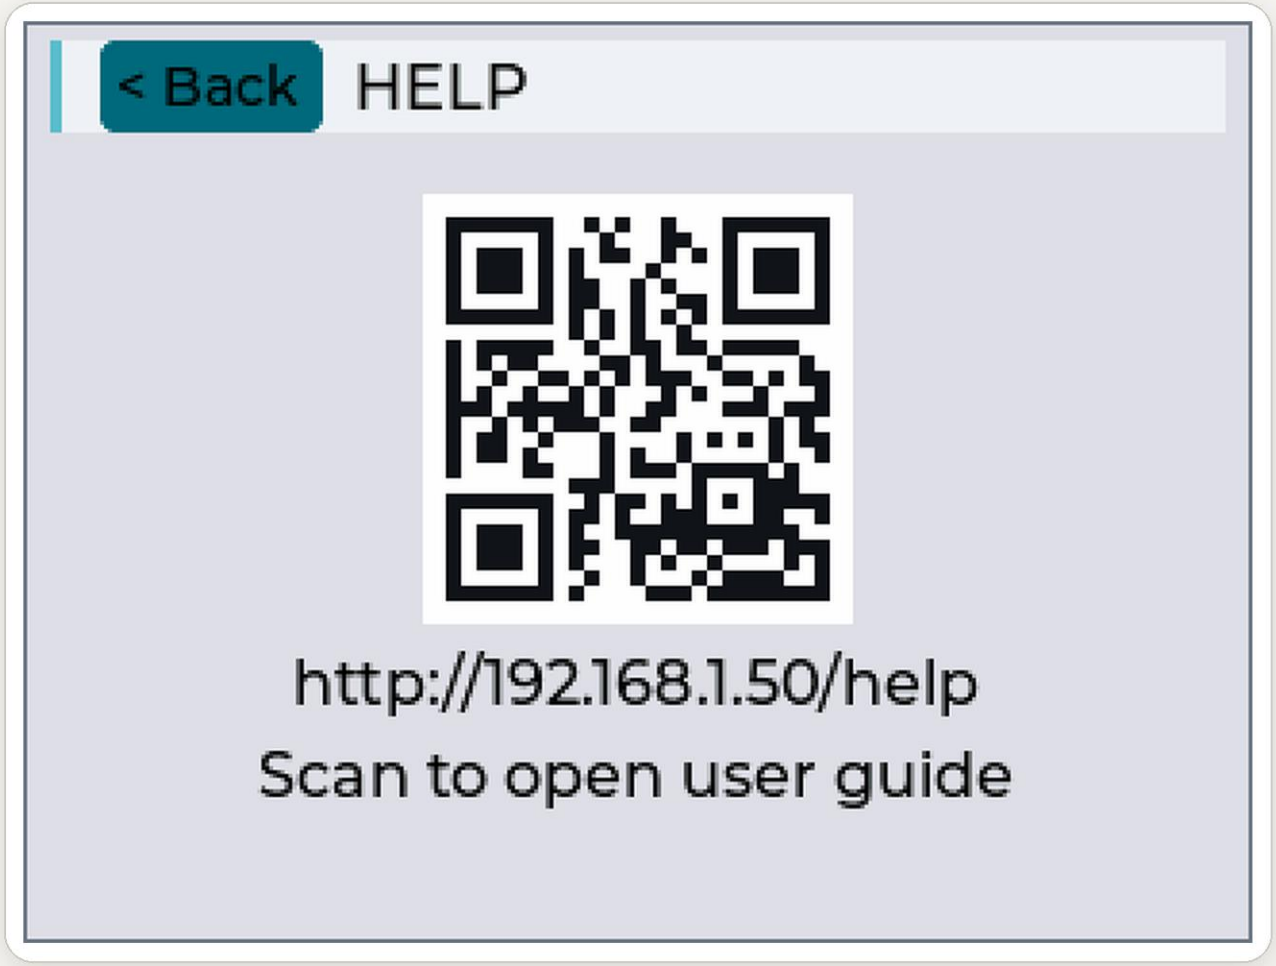

HELP

The user guide on a phone

SCAN	Scan this code with a phone on the same network. The browser opens the user guide at /help.
OTHER	This is not the Web Console code under Tools. That code opens the console. This one opens the guide.
CLOSE	Press Back to return to Settings. If the row said WiFi OFF, join a network before trying again.