
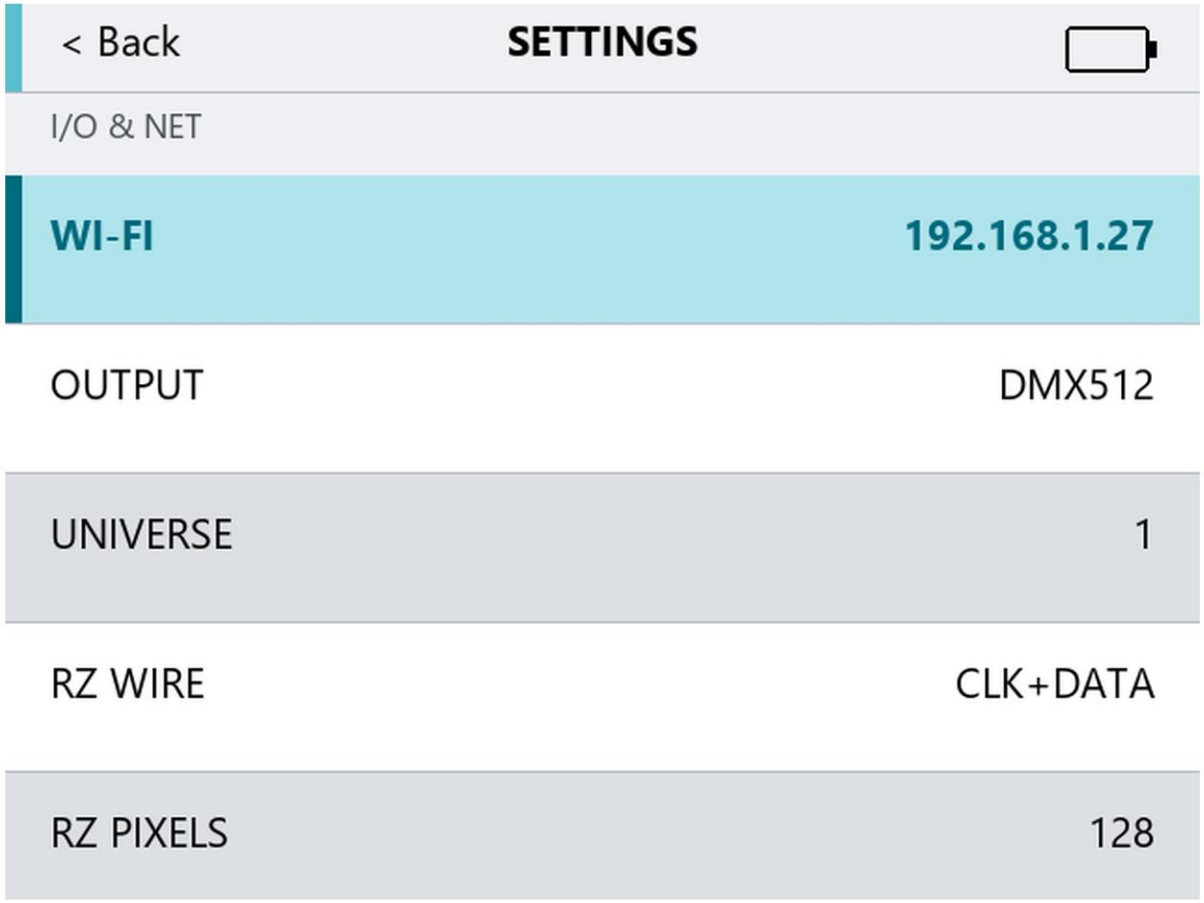


WI-FI

Connect before you scan


SETTINGS	From Home, open Settings and turn to WI-FI. Press it. The picture is that list, scrolled to the network rows.
ADDRESS	When WI-FI shows an address, the controller is on the network. 192.168.1.27 on this page is an example.
NEXT	Only then open the code. Without an address, the phone has nothing to open.

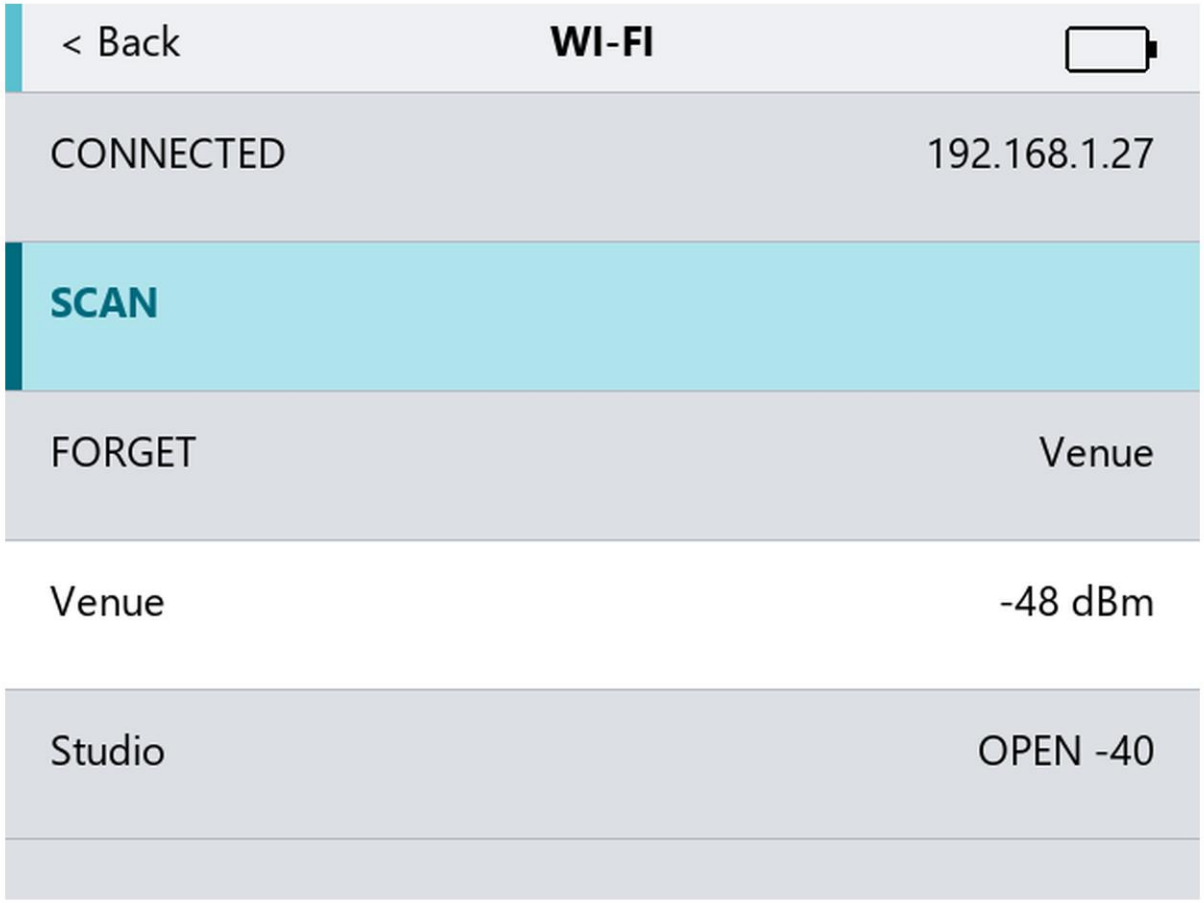

SCAN

Join a network


SCAN	Press SCAN. Pick the network. An open network joins at once. A locked network opens the password page.
HOTSPOT	The phone can turn on its own hotspot. SCAN that name and join it the same way. The controller is then on the phone's network.
FORGET	FORGET clears the saved network. Use it when you want to join a different router or hotspot.

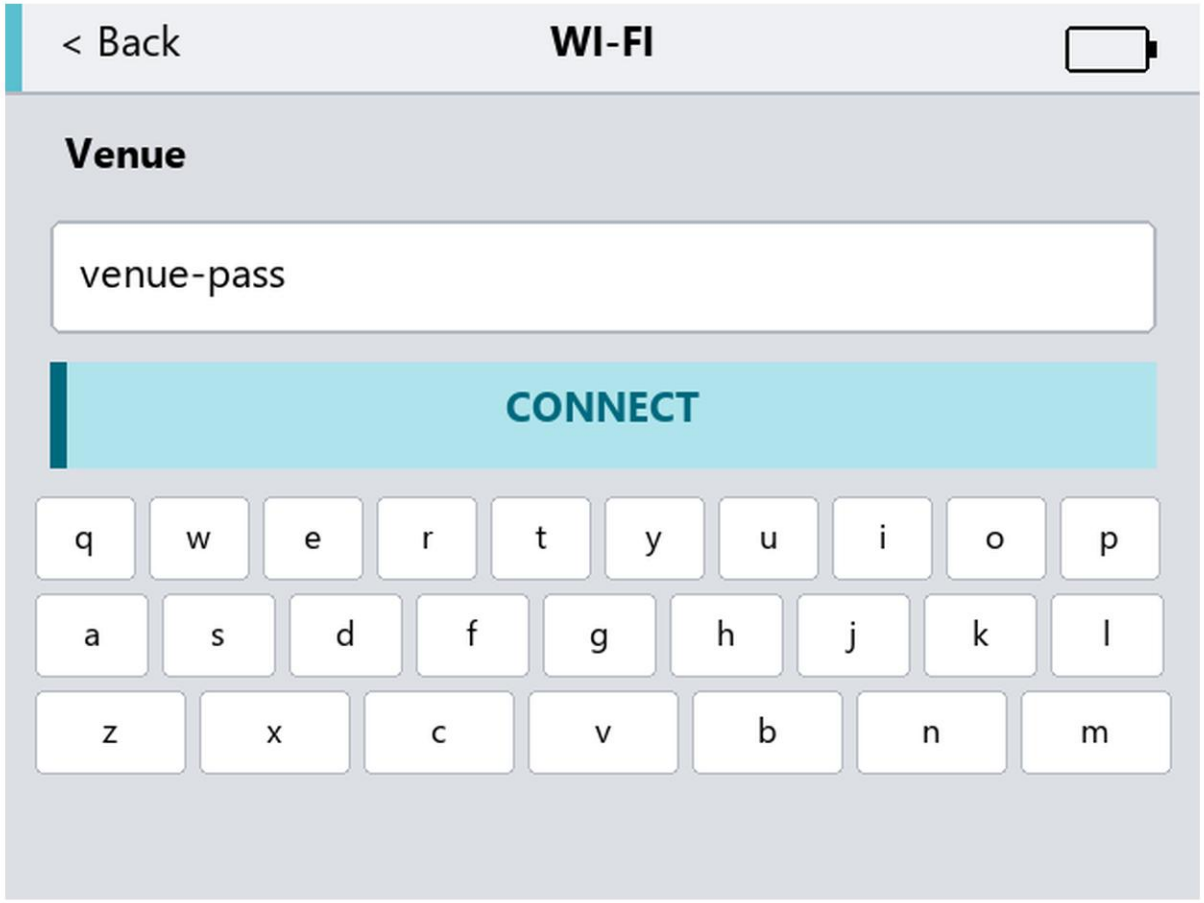

PASSWORD

Enter the network key

TYPE	The name at the top is the network you picked. Type the password on the keyboard. The example here is venue-pass.
JOIN	Press CONNECT, or the keyboard OK key. Back returns to the list and does not join.
WAIT	The list returns while the controller joins. Stay there until the top row shows CONNECTED and an address.

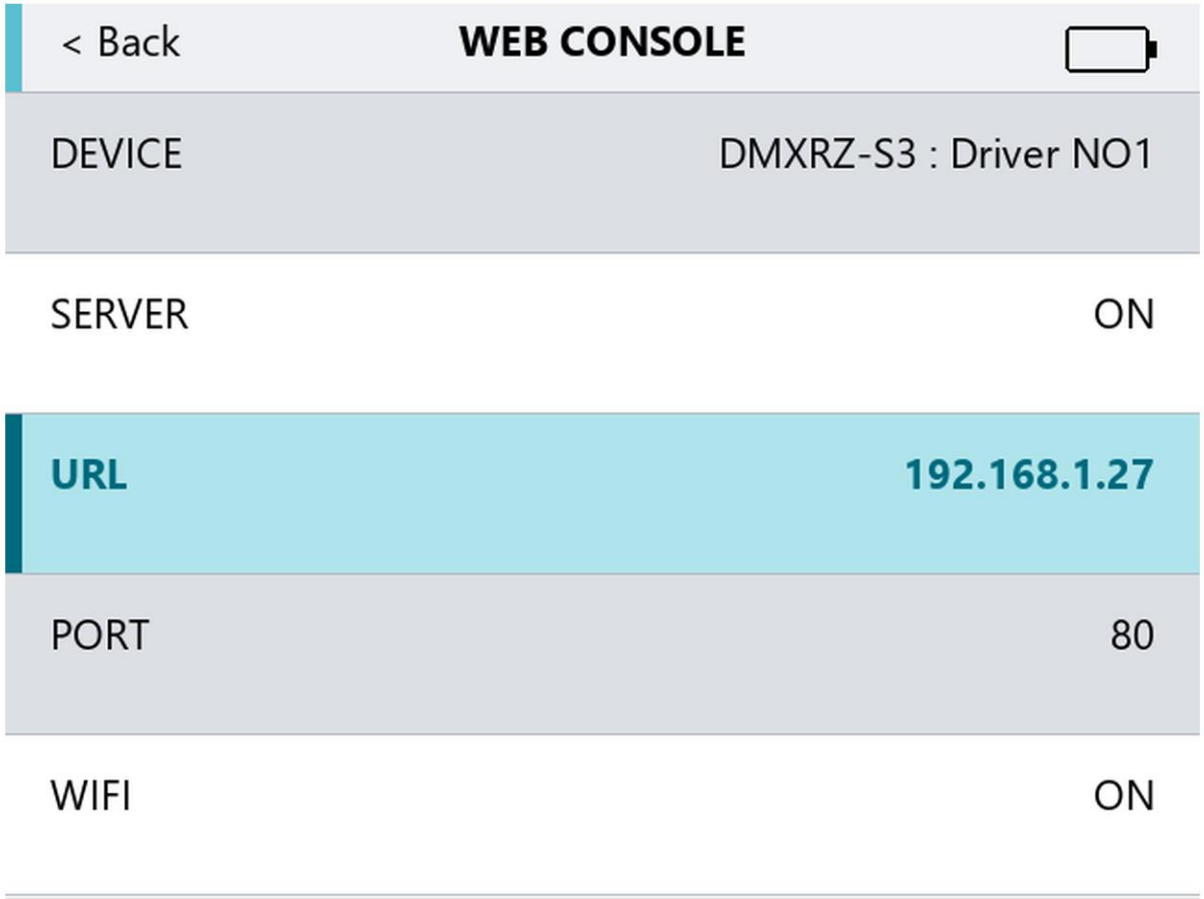


ENTRY

Open Web Console on the unit

PATH After Wi-Fi shows an address, open Tools, then Web Console. This page is the status of the built-in server.

URL Press the URL row. That is the row that opens the code. The address on it is the address the phone will open.


CHECK SERVER and WIFI should both read ON. PORT is 80. The HINT row, one step down, reads URL->QR.

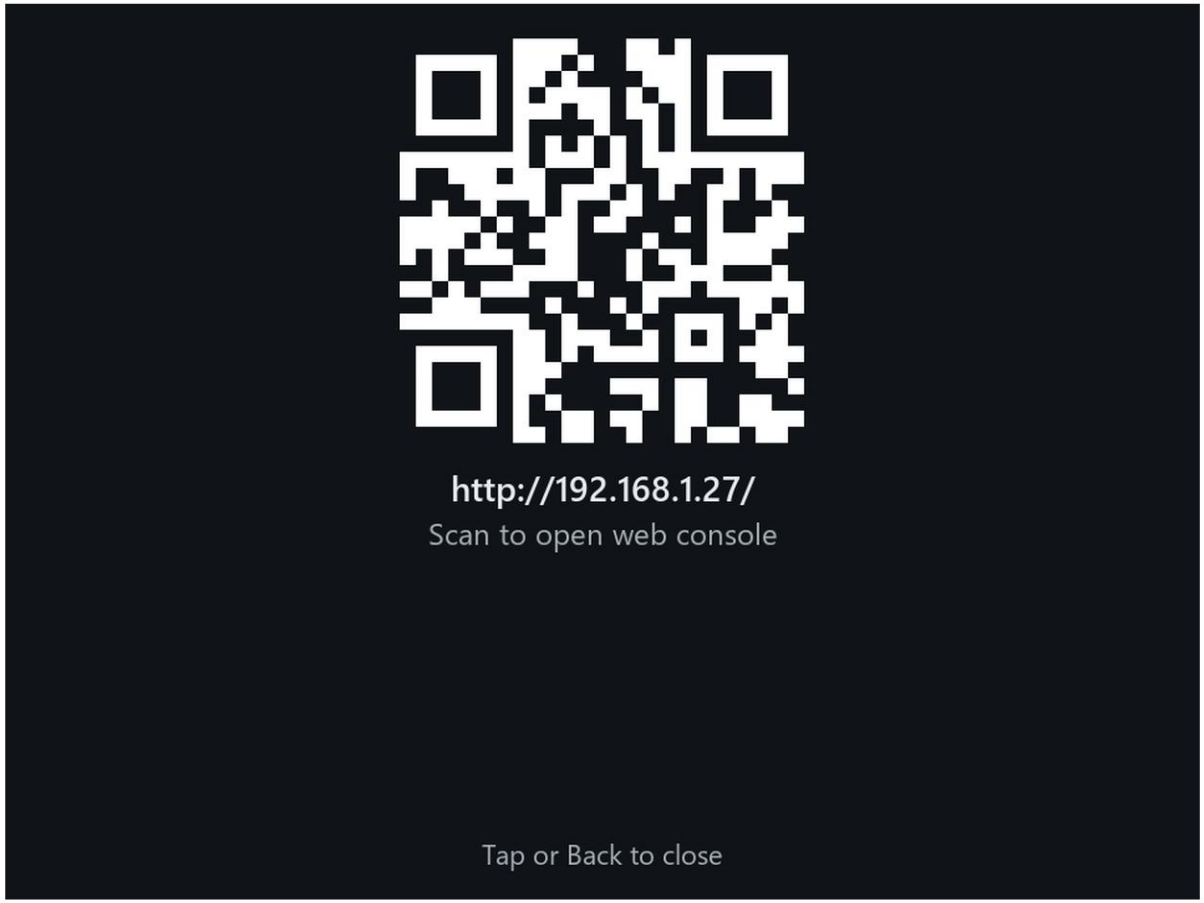

CODE

Open the code and scan


ENTRY	After Wi-Fi is connected, open Tools, then Web Console, and press the URL row. This code page opens.
PHONE	On the phone, scan the code. The browser opens the Web UI. Typing the address under the code does the same thing.
HOTSPOT	If the controller joined the phone hotspot, scan with that same phone. The browser opens the Web UI without another router.
CLOSE	Tap the screen, or press Back, to leave the code.

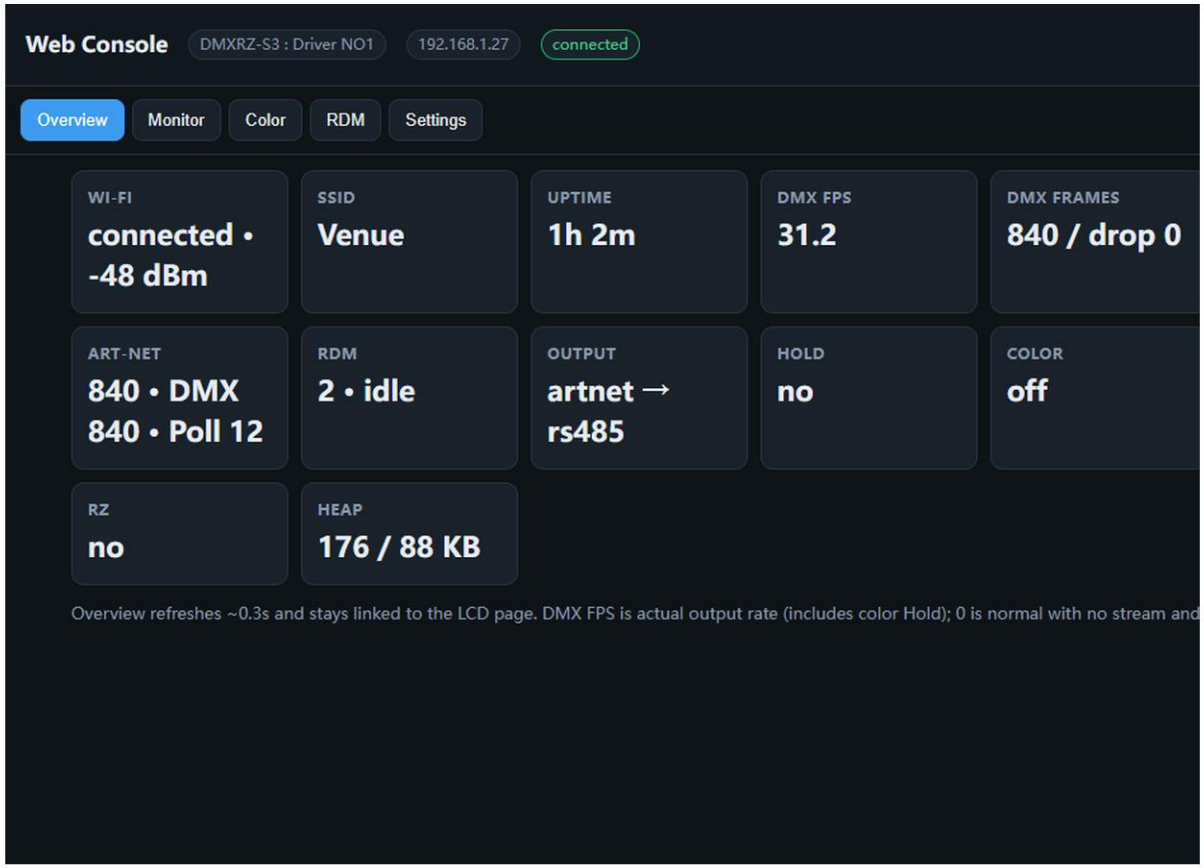

OVERVIEW

What the unit is doing

LINK	The header shows the device name, the IP address, and Wi-Fi. The bar is Overview, Monitor, Color, RDM, DMX IC Config, and Settings. Help opens the user guide.
CARDS	Wi-Fi, SSID, uptime, DMX frame rate, Art-Net counts, RDM, the live output, Hold, color test, universe, RZ, and free memory.
SYNC	This page stays linked with the screen on the unit. Universe 1 here is Art-Net universe 0.
FPS	DMX FPS is the rate actually leaving the controller. It can be 0 when nothing is sending and color test is off.

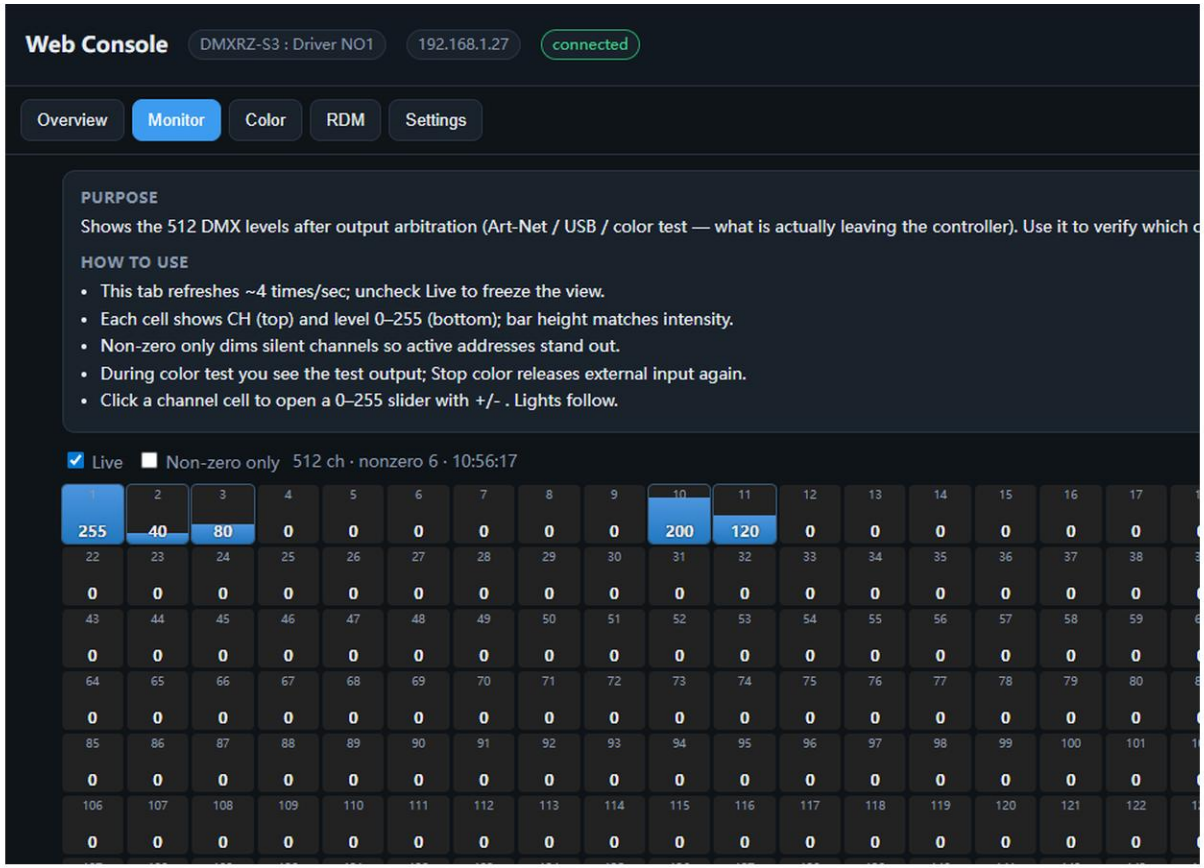


MONITOR

The 512 levels going out

LEVELS Each cell is one DMX channel after arbitration: Art-Net, USB, or a color test. The number is 0-255. The bar is the same level.

LIVE Live refreshes several times a second. Turn it off to freeze the picture. Non-zero only dims the silent channels.


EDIT Click a cell to open the channel editor. The same editor is used on CONSOLE. The fixtures follow. The small screen does not edit these cells.

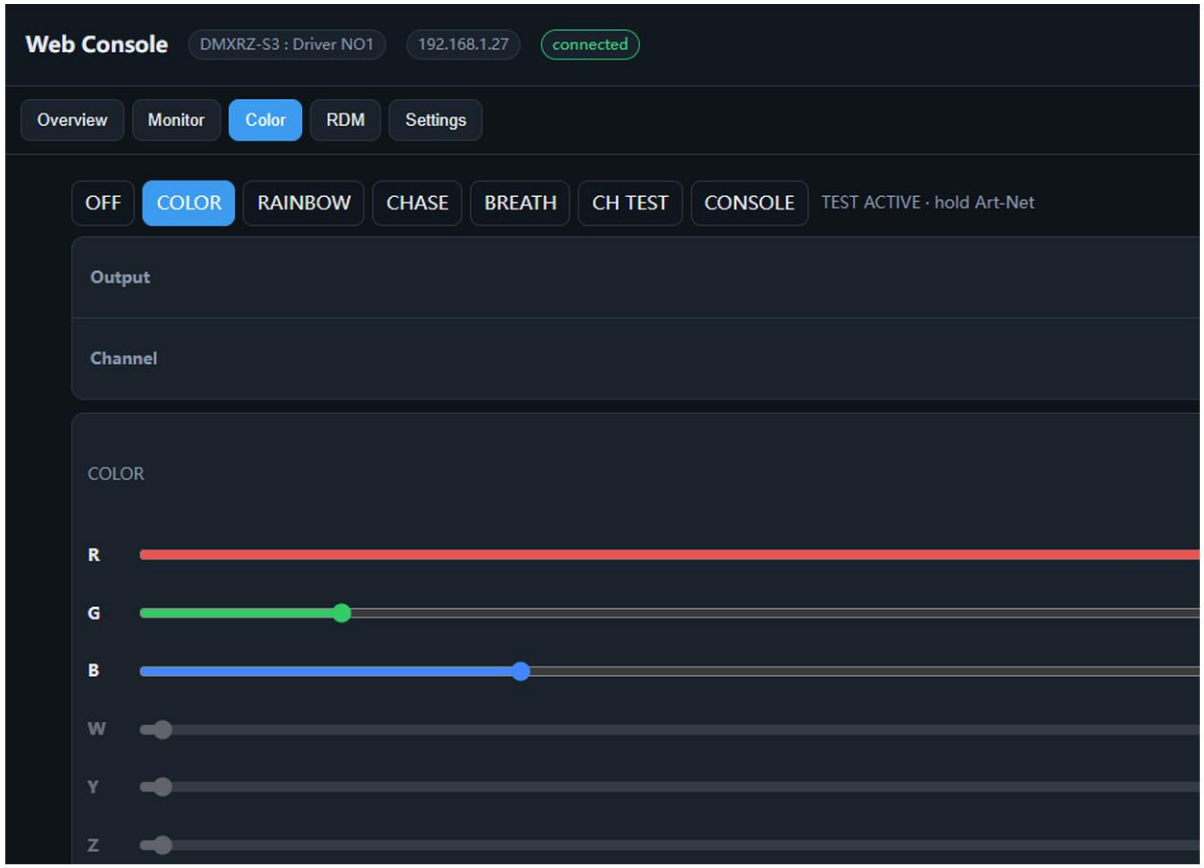

COLOR

Run a color test


OUTPUT	DMX512, RZ Code, or DMX + RZ. This is the same output target as Settings.
CHANNEL	How many slots make one pixel. Factory RGB uses three: channels 1-3 are the first pixel. Groups are R, RG, RGB, RGBW, and RGBWYZ.
MODES	COLOR, RAINBOW, CHASE, BREATH, and CH TEST. Any mode other than OFF holds Art-Net until you choose OFF or Stop color.
SLIDERS	COLOR shows R, G, and B. W, Y, and Z appear when the group includes them. Changes apply immediately.

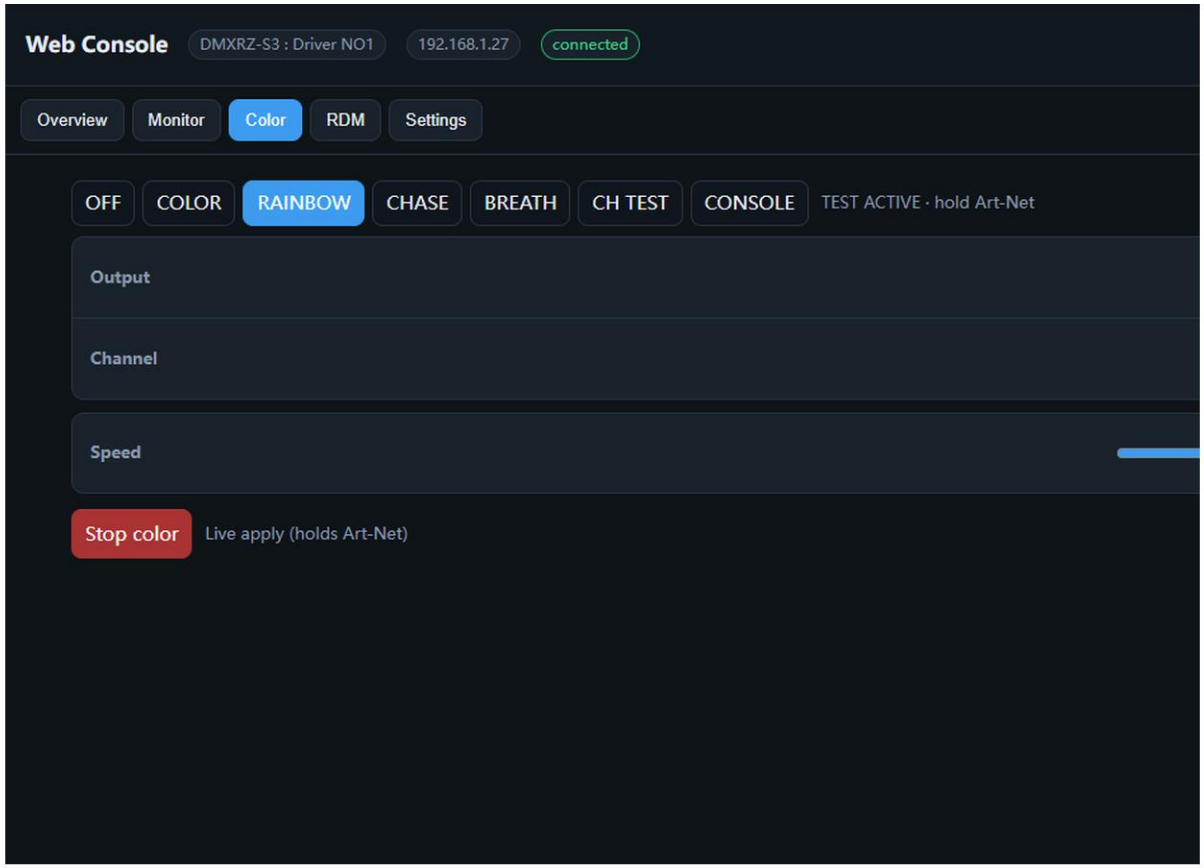

SPEED

Rainbow, chase, and breath

SPEED	RAINBOW, CHASE, and BREATH share this speed control. 1 is slow. 10 is fast. The pattern starts as soon as you choose the mode.
HOLD	TEST ACTIVE means Art-Net is held. The fixtures follow the pattern, not an external console.
STOP	Stop color, or OFF, releases the hold. The unit's color test screen uses the same speed control.

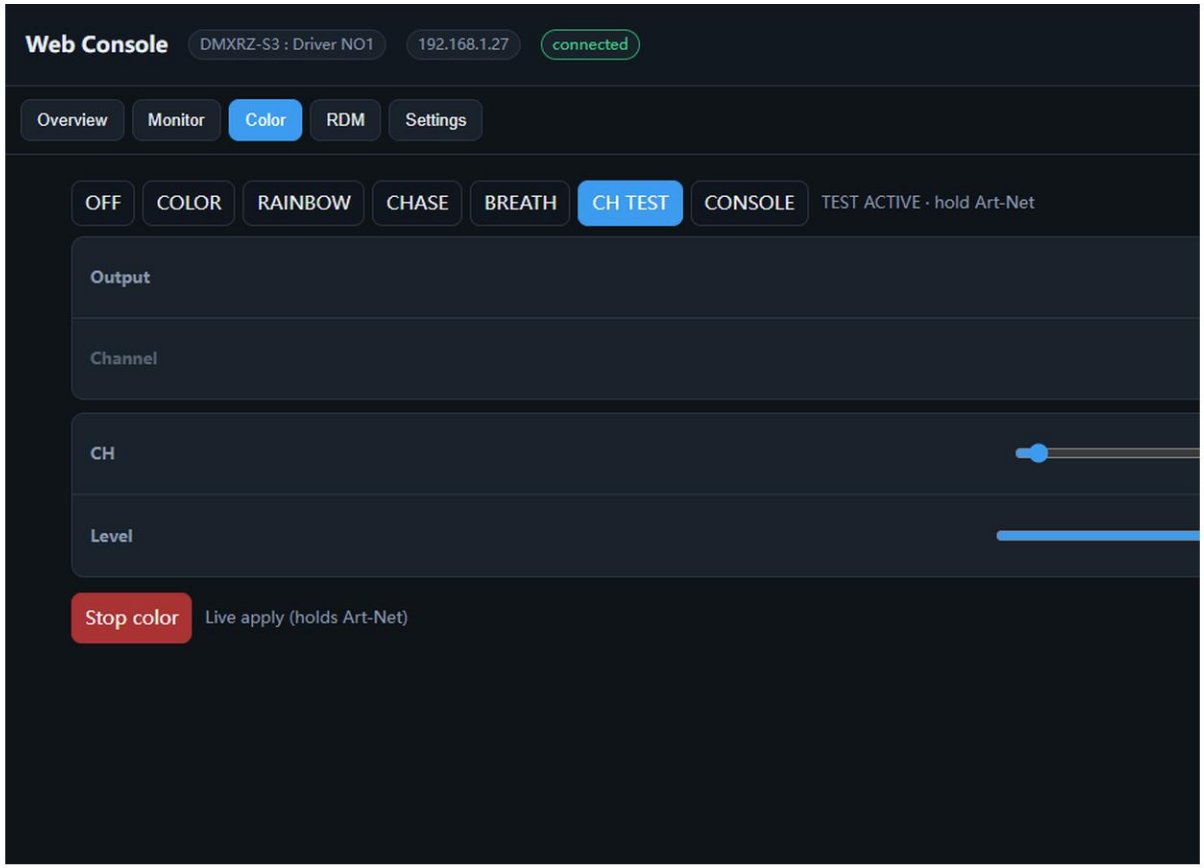


CH TEST

One channel at a time

ONE CH is the DMX address, from 1 to 512. Level is 0 to 255. Only that channel moves.

USE Use it to find one dimmer, one relay, or one color slot without lighting the rest of the rig.

HOLD This mode holds Art-Net until you choose OFF or Stop color. Channel grouping is not used here.

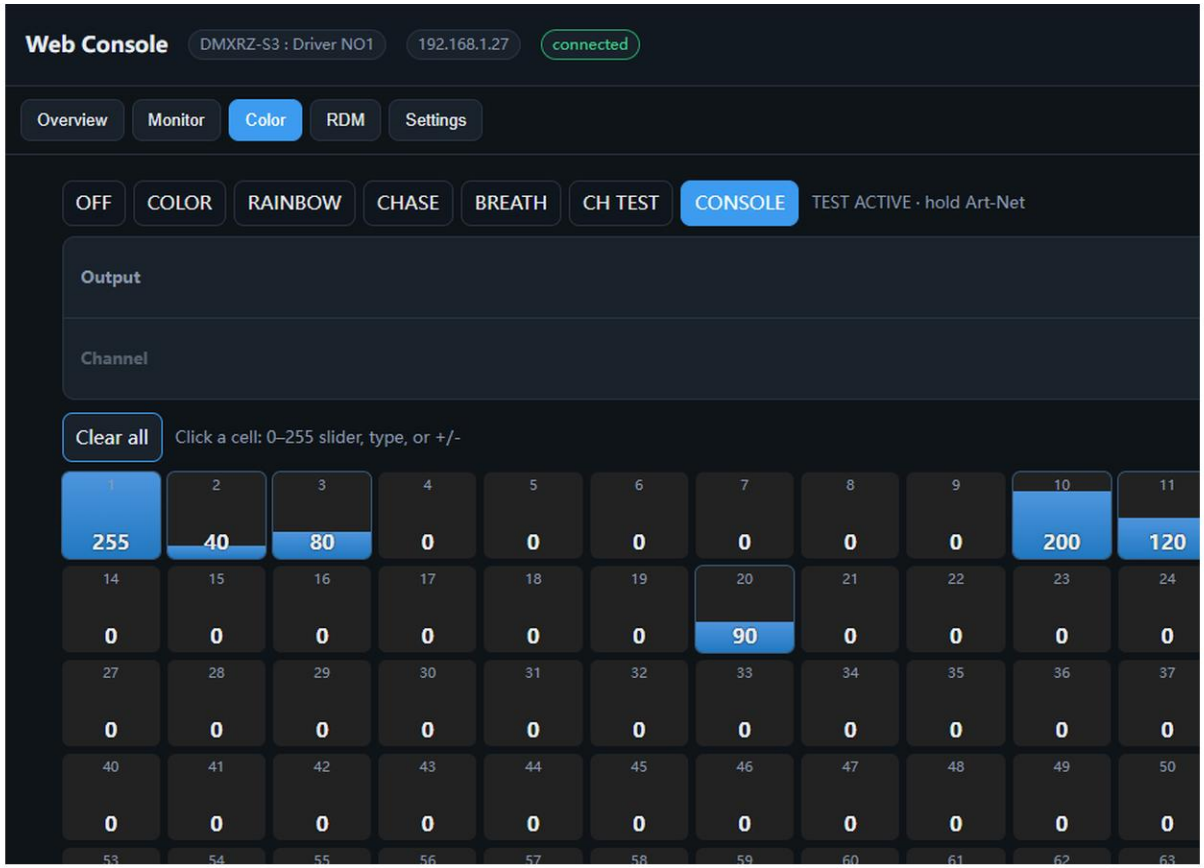


CONSOLE

Edit all 512 slots

GRID CONSOLE is the full 512-slot editor. Click a cell for a slider, a typed number, or plus and minus.

CLEAR Clear all sets every slot to 0. The small screen does not edit all 512 slots. This page does.

HOLD While CONSOLE is selected, the test holds Art-Net. Choose OFF, or Stop color, before an external console should drive the port again.

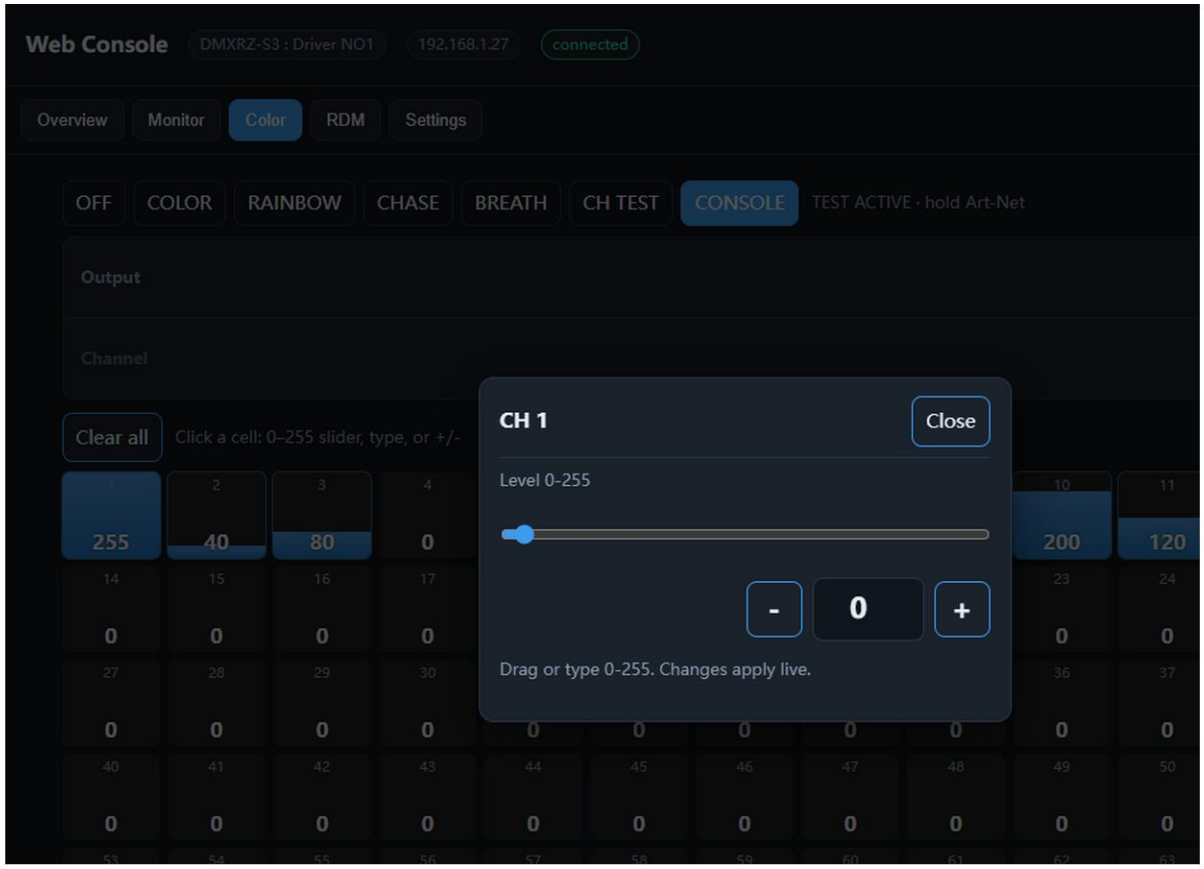


EDITOR

Set one channel

OPEN On Monitor or CONSOLE, click a cell. This editor opens for that address. The title is the channel number.

SET Drag the slider, type a number, or use + and -. The lights follow. Close, or press Esc, leaves the editor.

RANGE The value is 0 to 255. The cell behind the editor updates with it. Clear all, on the CONSOLE page, sets every cell to 0.

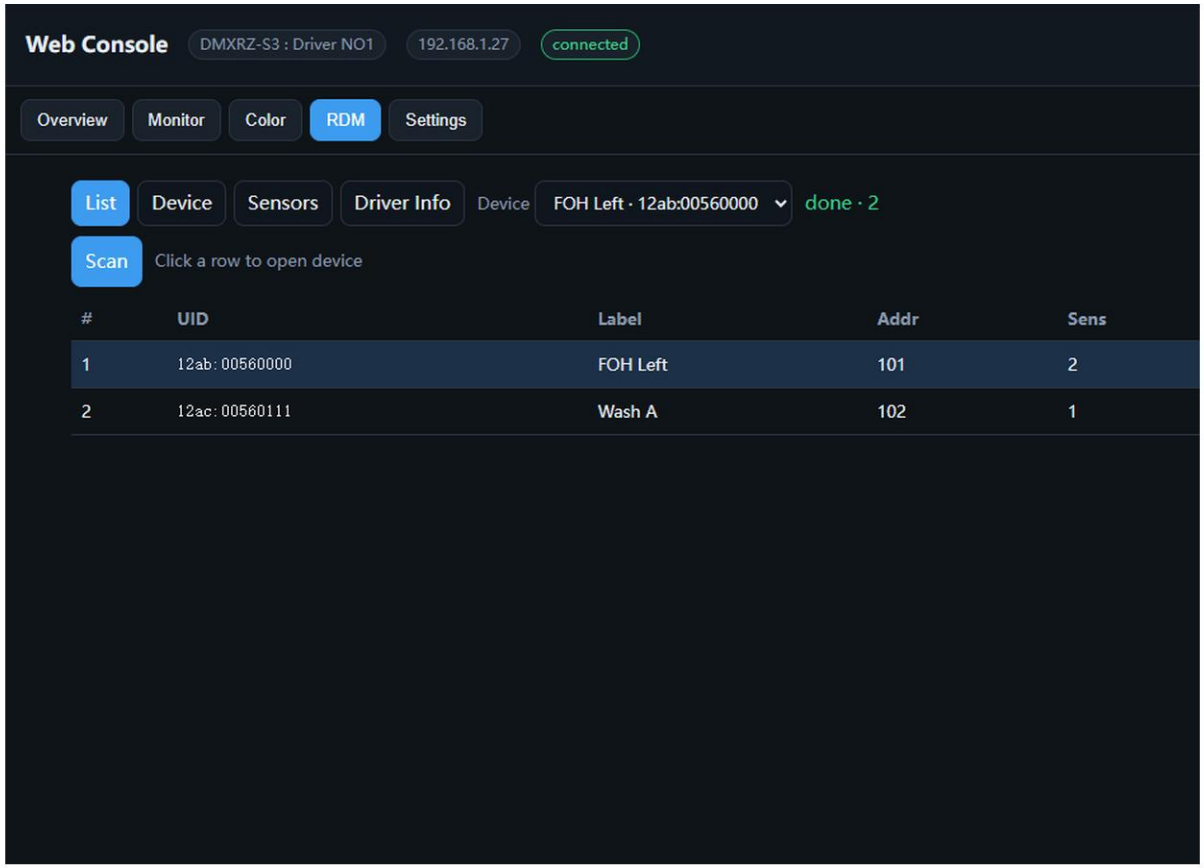


RDM

Find and edit fixtures

SCAN Scan searches the DMX line. Click a row to open that fixture. The names and addresses on this picture are examples.

DEVICE Click a row to open that fixture. The next pages are the device page, its sensors, and its driver info.


PORT RDM needs the output target to include DMX512. The DMX port is shared with Art-Net and color test while this page is open.

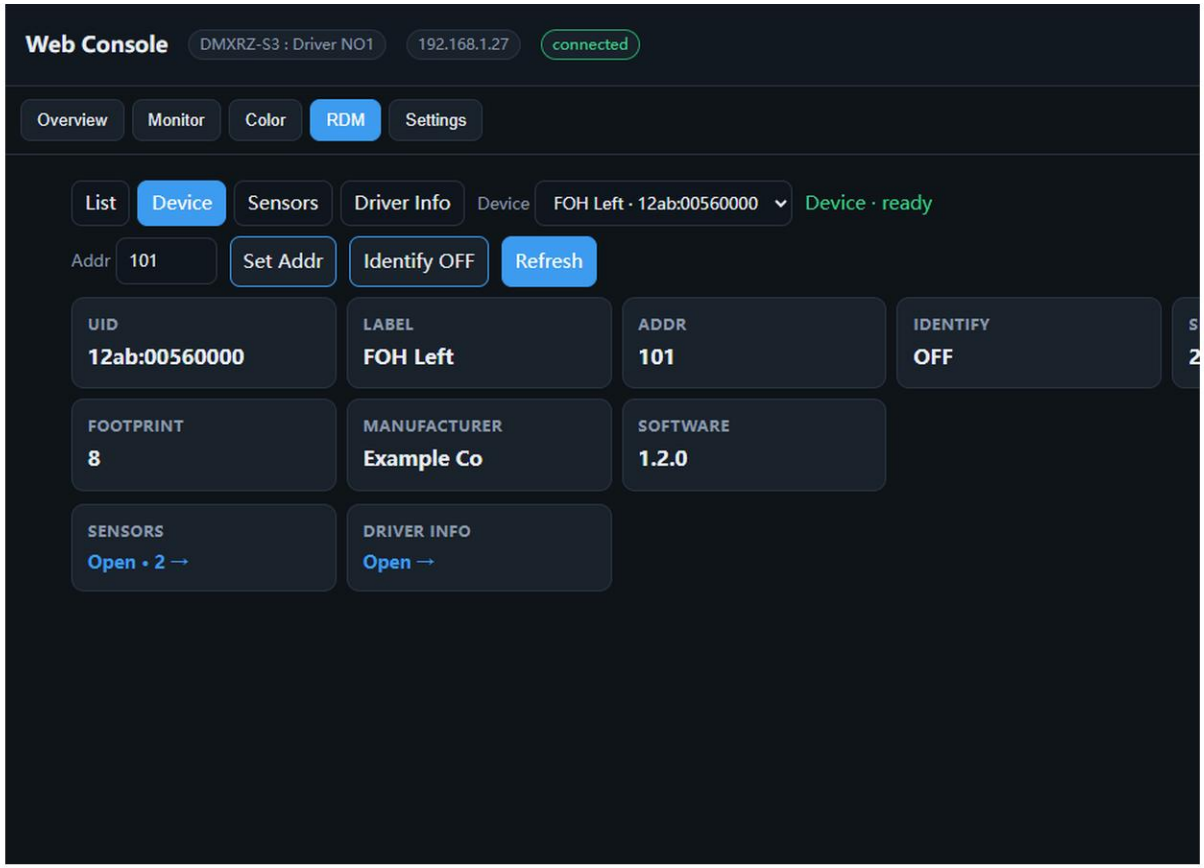

FIXTURE

One discovered fixture

OPEN	This page is one fixture from the list. The label, UID, and address here are examples.
ADDR	Type a start address from 1 to 512 and press Set Addr. Identify ON makes that fixture flash. Refresh reads it again.
DEEPER	Open Sensors when the fixture reports any. Open Driver Info for the manufacturer IDs, hours, and status.

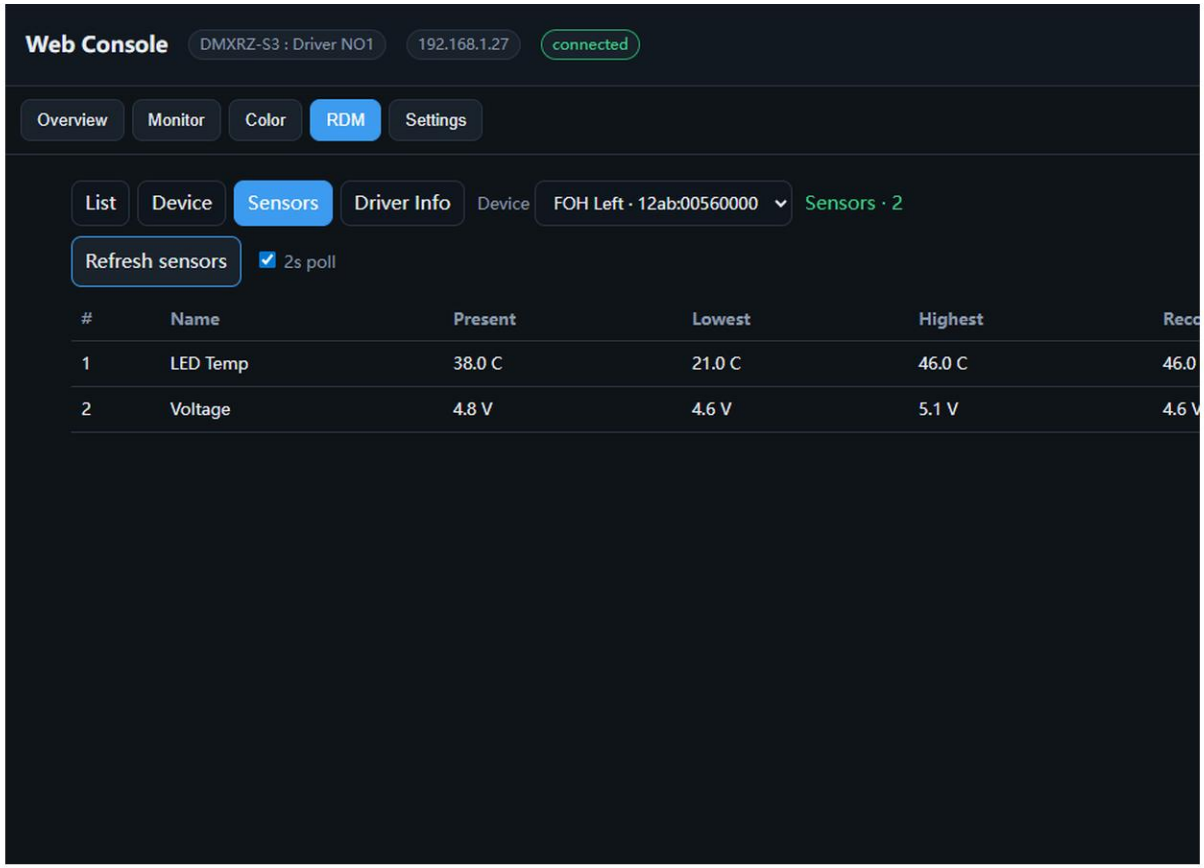


SENSORS

Live sensor values

TABLE Each row is one sensor. The columns are the present value, the lowest, the highest, and the recorded value.

LIVE 2s poll reads them again every two seconds. Refresh sensors reads once now. Turn the poll off to hold the numbers.

NEED This page is available only when the fixture answered with at least one sensor.

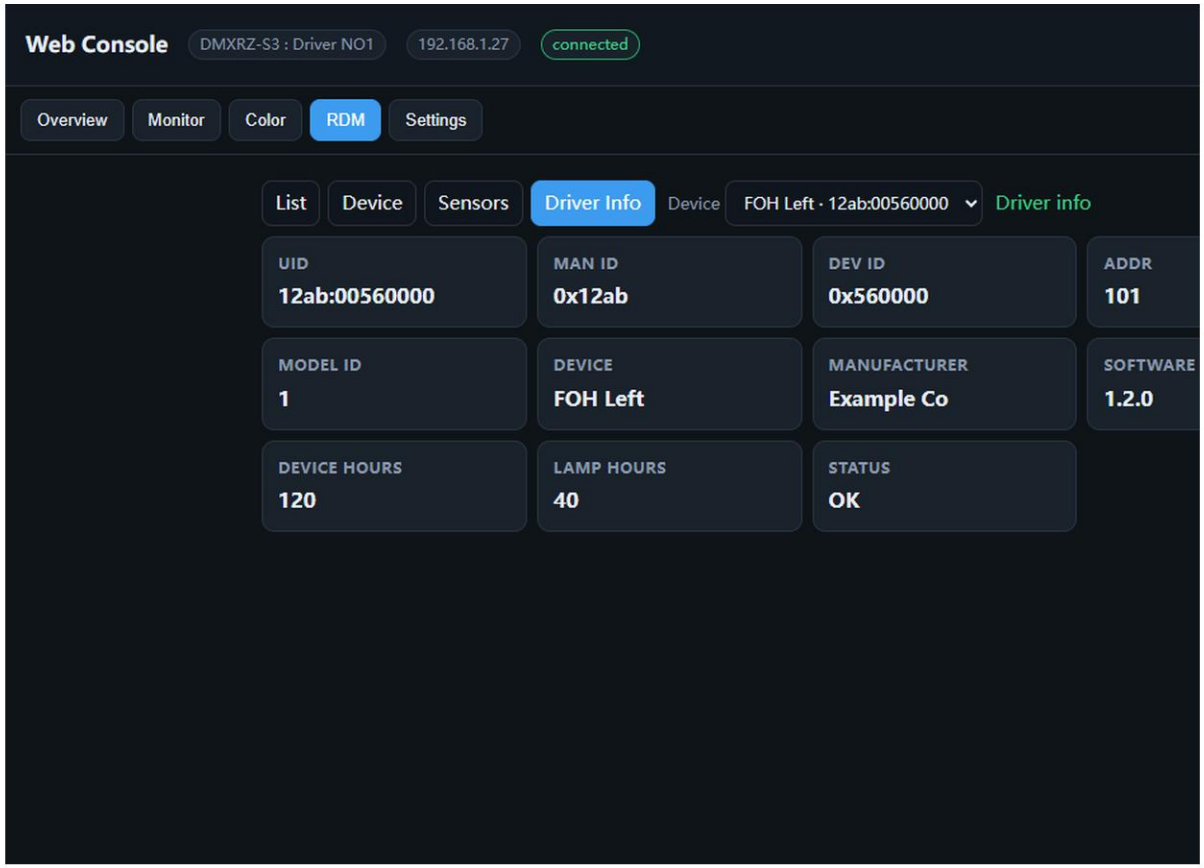


DRIVER

What the fixture reported

IDS UID, manufacturer ID, device ID, model, address, footprint, and software. These are the values the fixture sent.

HOURS Device hours and lamp hours appear when the fixture supports them. Status is the fixture's own status.

READ This page is read-only. Change the address, or Identify, on the Device page.

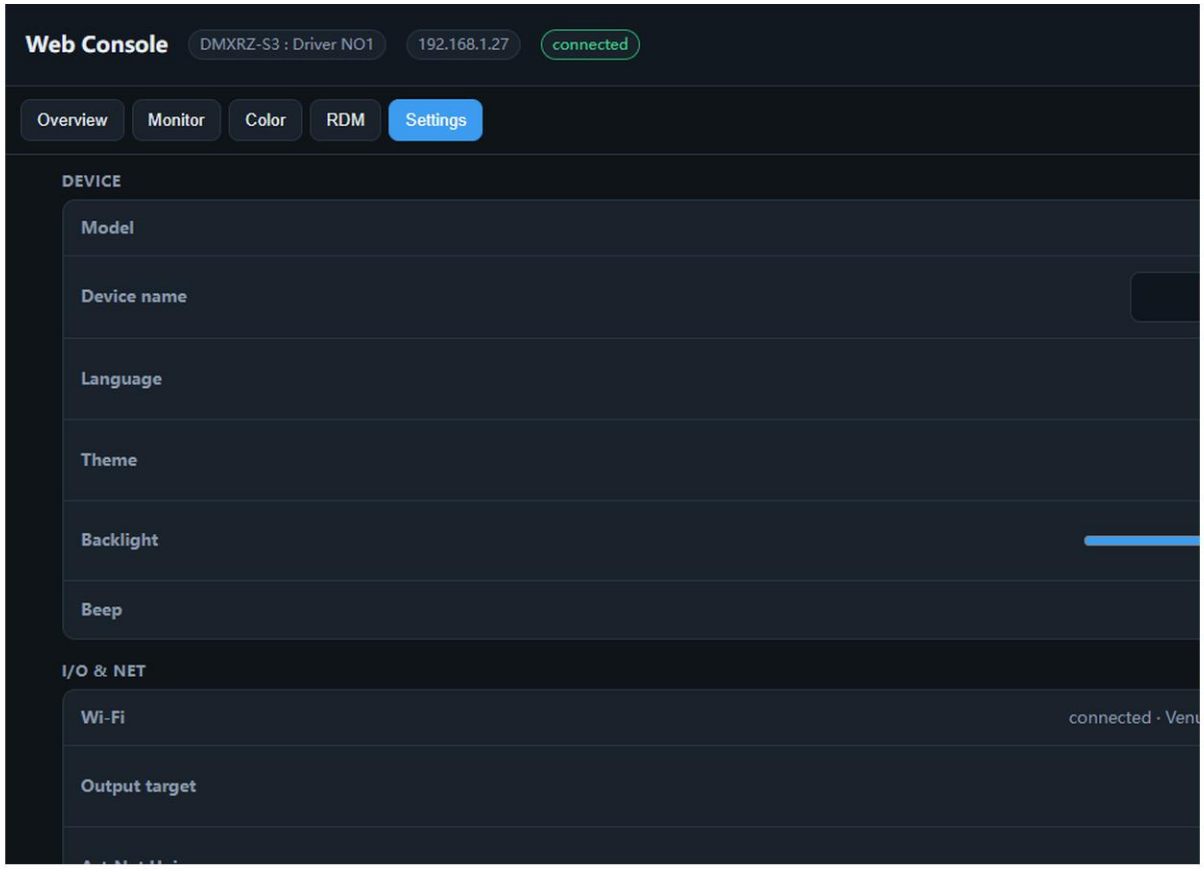


SETTINGS

Name, screen, and ports

DEVICE	Model, device name, language, theme, backlight, and beep. The name is ASCII only: A-Z, 0-9, space, and . _ - . The header shows Model : Name.
WIFI	Wi-Fi is joined on the controller, under Settings. This page shows the network. It does not enter the password.
PORTS	Output target, Art-Net universe, RDM, RZ, RZ wire, and RZ pixels. Universe 1-4 on this page is Art-Net universe 0-3. Factory output is DMX512, wire is CLK+DATA, and the pixel count is 128.
SAVE	Changes save immediately and stay in step with the screen on the unit.

English web console. Addresses, fixture names, and channel levels on these pages are examples.

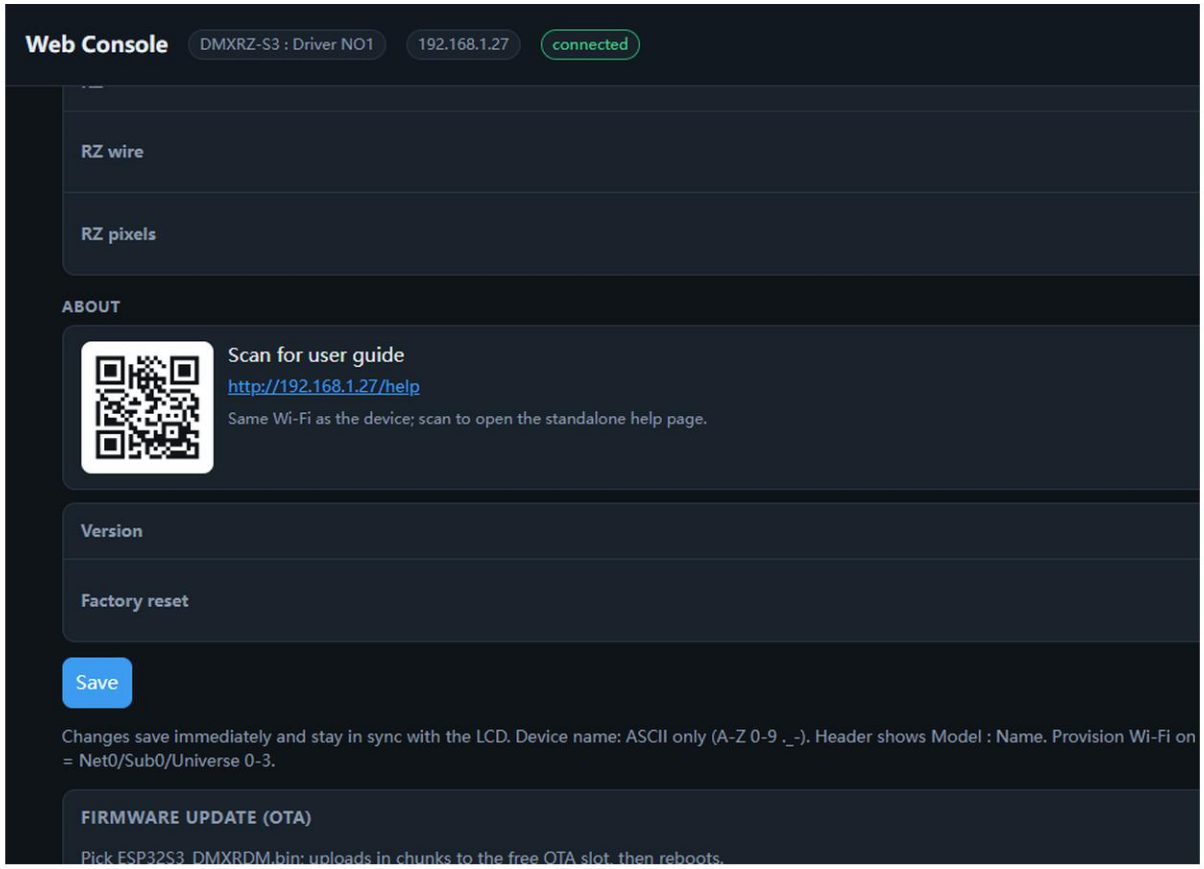

UPDATE

Guide, reset, and firmware

GUIDE	Scan for user guide opens http://<ip>/help. That code is not the Web Console code under Tools. The console code opens the page in the pictures above.
RESET	Factory reset restores the device defaults and clears the saved Wi-Fi network. The activation license stays. The USB disk switch returns to OFF.
FILE	Firmware update takes the signed file ESP32S3_DMXRDM.bin. It uploads to the spare slot. The unit reboots when the file is in place.
ABORT	Abort stops an upload that has not finished. A failed update leaves the unit on the firmware it was already running.
JSON	Advanced diagnostics opens the live status as text. It is for support. Everyday setup does not need it.