
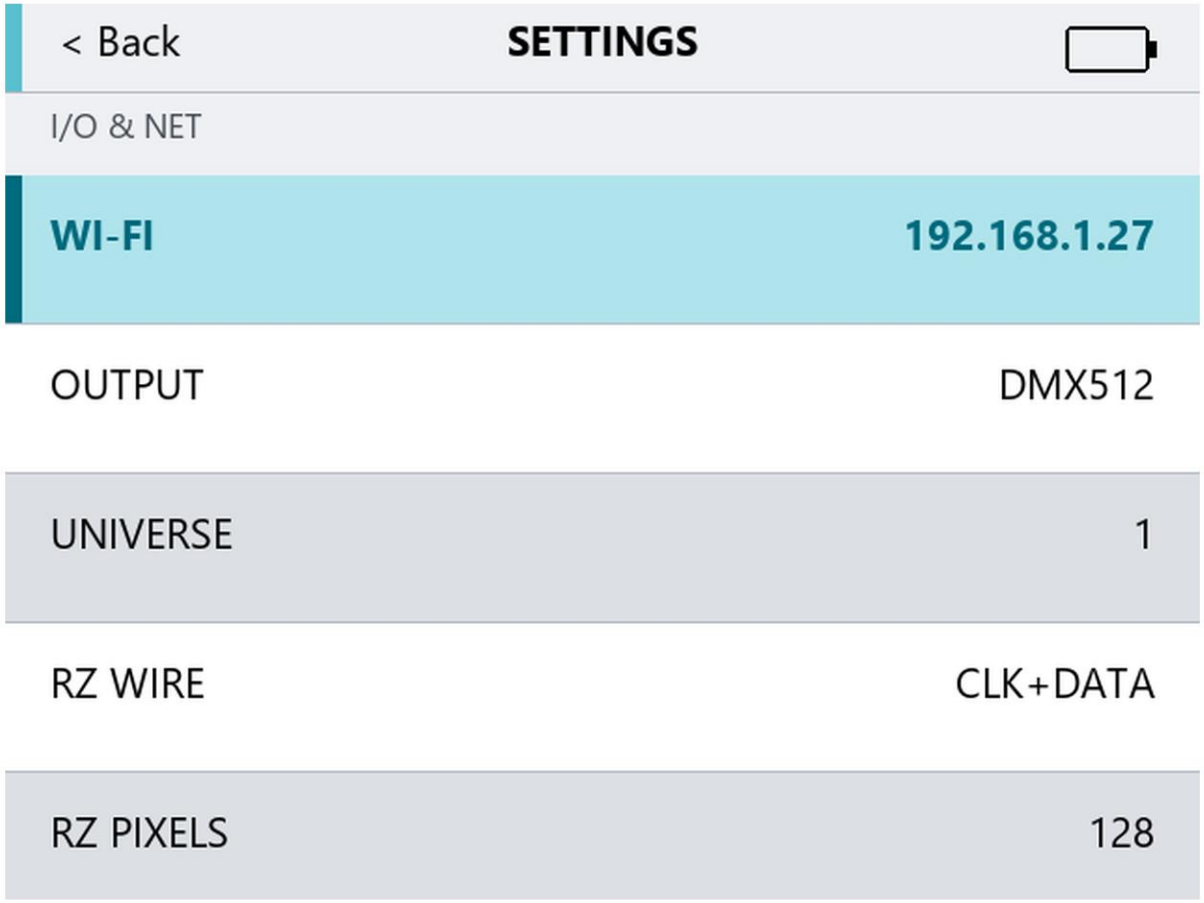



WI-FI

## Open Wi-Fi on the unit


| | |
|---|---|
| HOME | Turn the knob to Settings and press. On the Chinese home that tile is 设置. Four tiles show at a time. Keep turning to reach Settings. |
| ROW | Turn to WI-FI and press. This list is the Wi-Fi page. The address on the picture is an example. |
| NEED | The phone and the computer must join this same router. Client isolation must be off. |

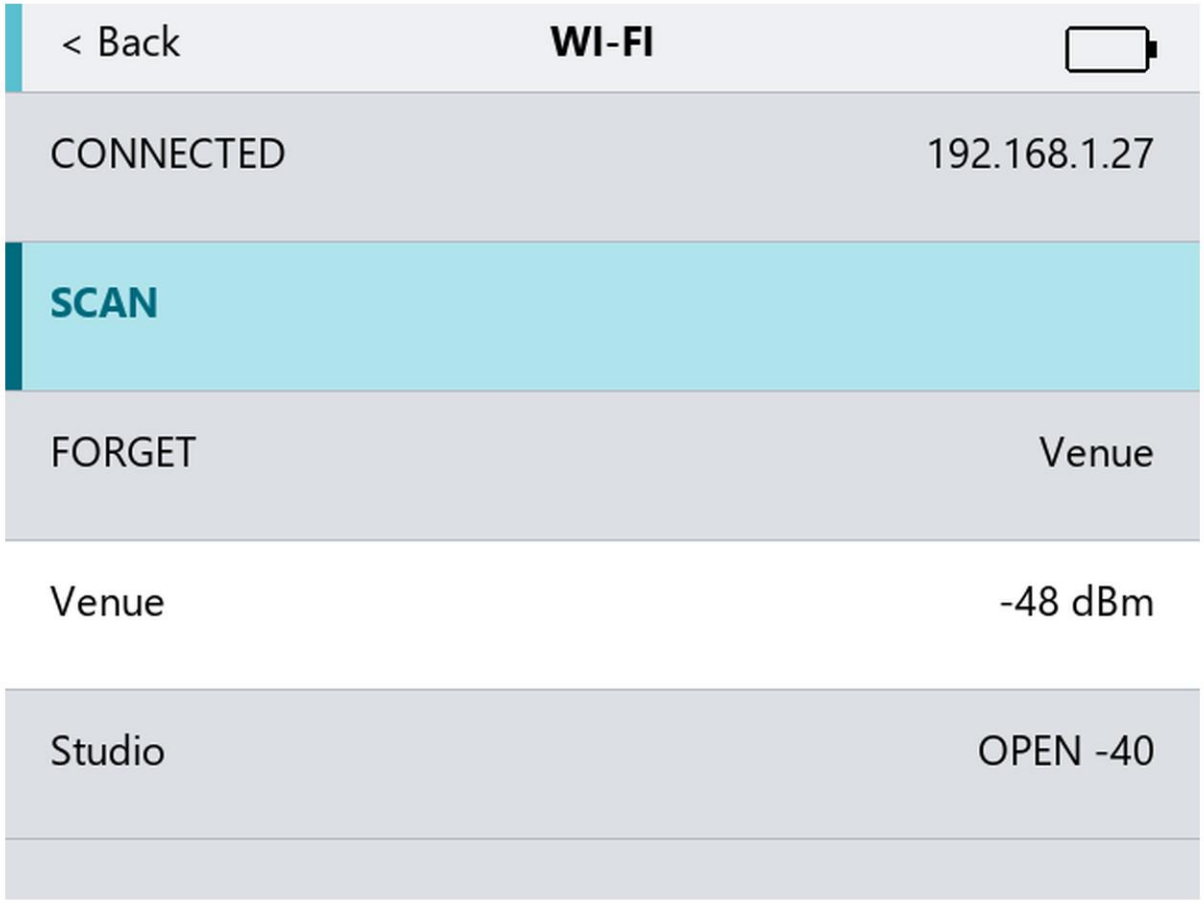


SCAN

## Find the router

| | |
|---|---|
| SCAN | Press SCAN. The row reads SCANNING... until the names appear. |
| PICK | Turn to the router name and press. An open network joins at once. A locked network opens the password page. |
| HOTSPOT | A phone hotspot works the same way. Scan its name and join it. |

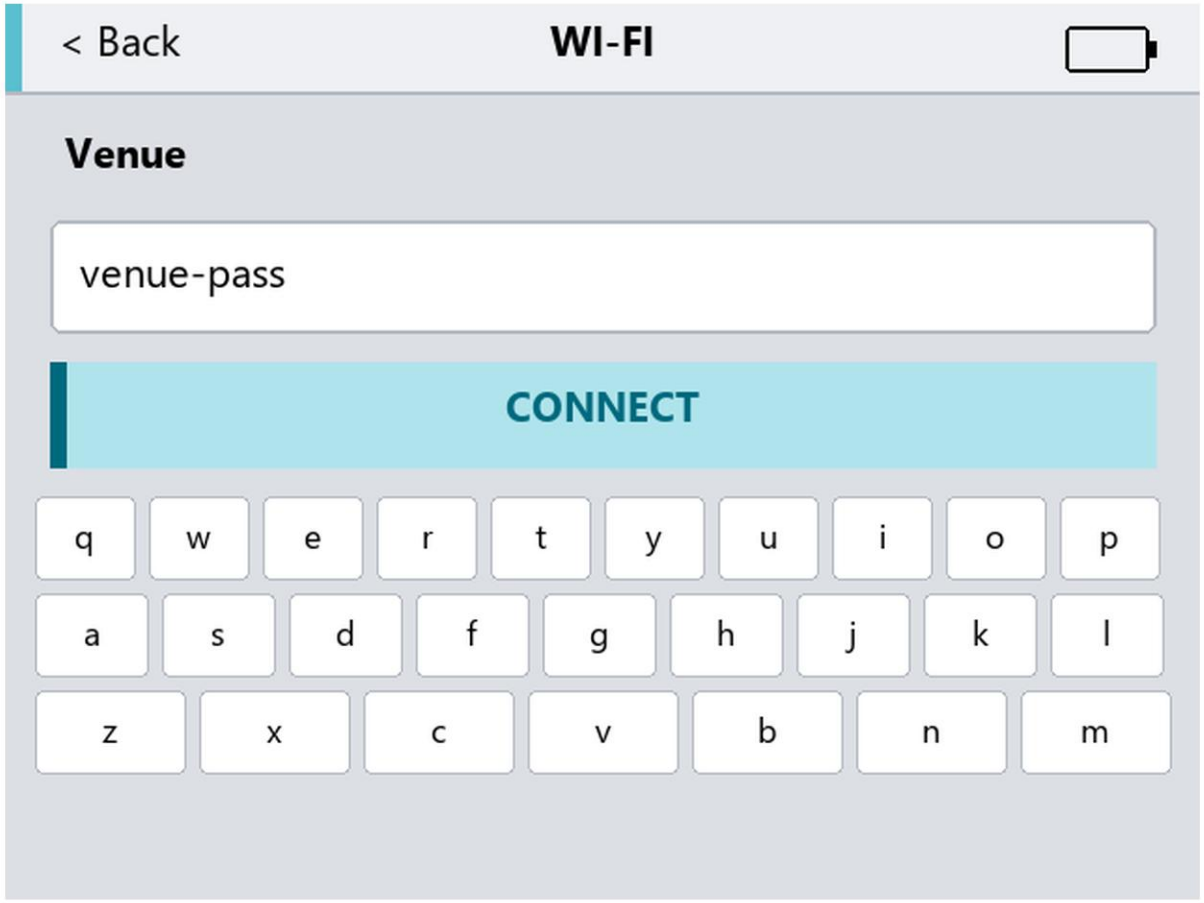



PASSWORD

## Type the key and join

**TYPE** The name at the top is the network you picked. Type the password on the keyboard. venue-pass on this picture is an example.

**JOIN** Press CONNECT, or the keyboard OK key. Back returns to the list and does not join.

**WAIT** Stay on the list until the top row shows CONNECTED and an address such as 192.168.1.27.

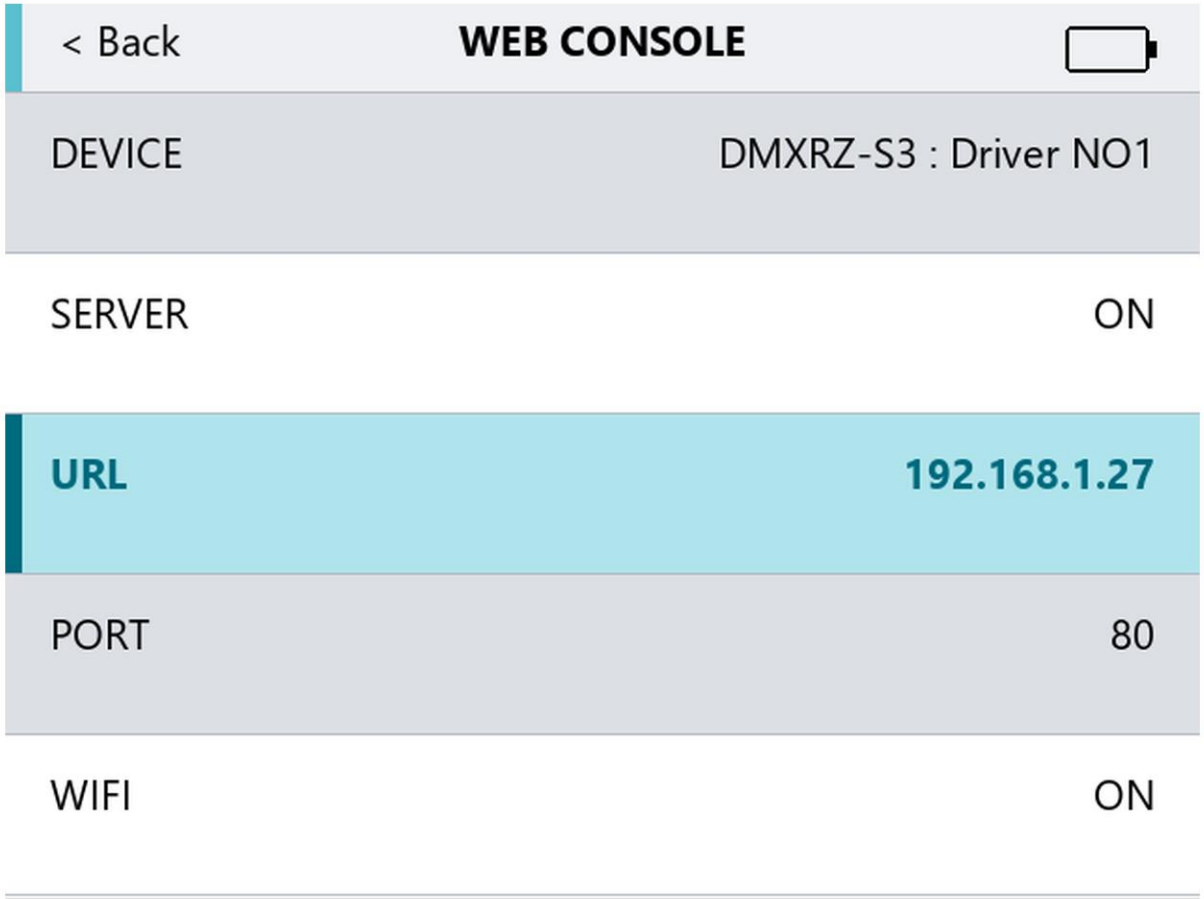



ENTRY

## Read the address

**PATH** Hold the knob about 2 seconds to go home. Open Tools, then Web Console. In Chinese that path is 调试, then Web.

**URL** This page shows the address the browser will open. Press the URL row to open the code.


**CHECK** SERVER and WIFI should both read ON. PORT is 80. Without an address, stop here and rejoin Wi-Fi.

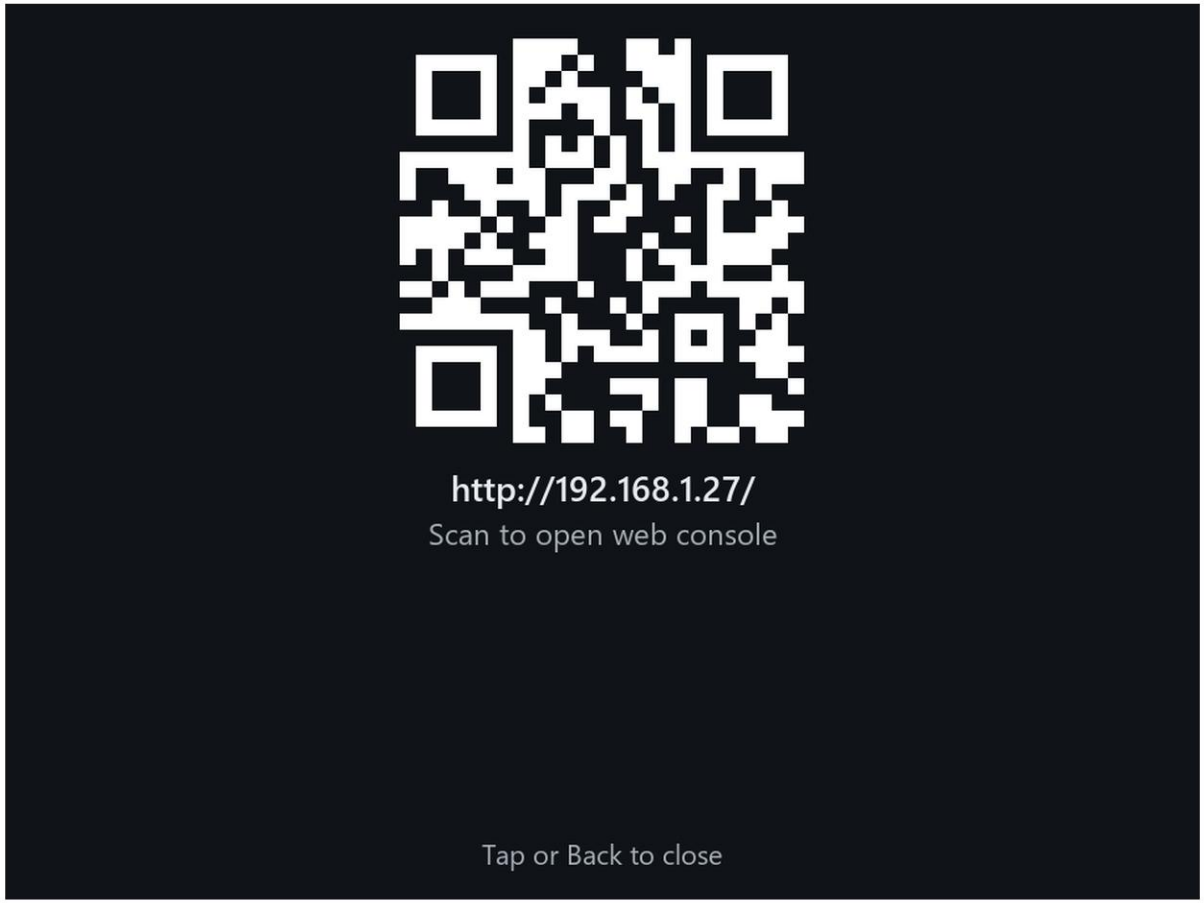


CODE

## Open the console


| | |
|---|---|
| PHONE | The phone or computer must be on the same Wi-Fi. Scan this code, or type http:// and the address under it. |
| NOT | This code opens the Web Console. The code under Settings, About, Help opens /help. That page cannot update firmware. |
| CLOSE | Tap the screen, or press Back, to leave the code. The browser can stay open. |

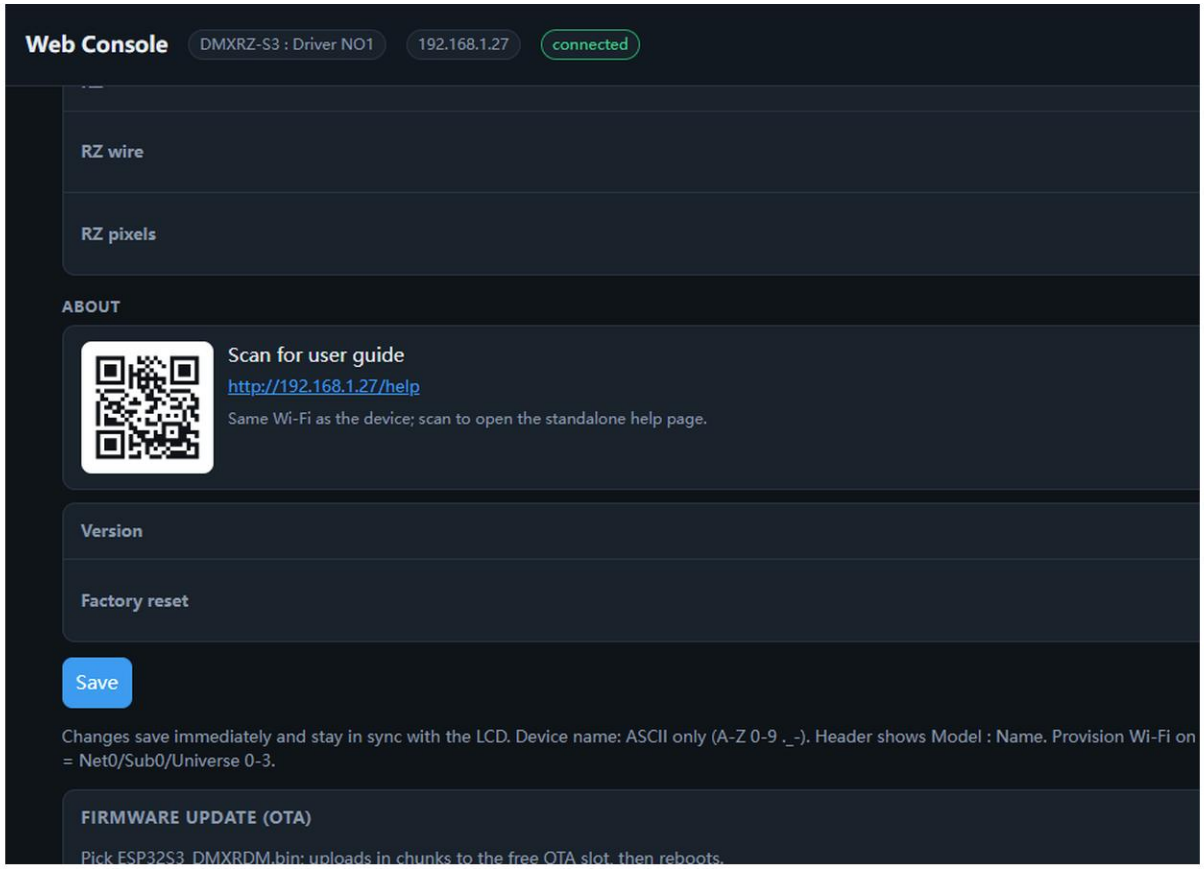


PAGE

## Scroll to Firmware update


| | |
|---|---|
| TAB | In the browser, click Settings. Do not click Help. Help is the corner guide, not an update page. |
| DOWN | Scroll past Save. The next block is Firmware update (OTA). The picture is cut off at that heading. |
| FILE | The file is the signed ESP32S3_DMXRDM.bin for this product. An unsigned file is rejected. |

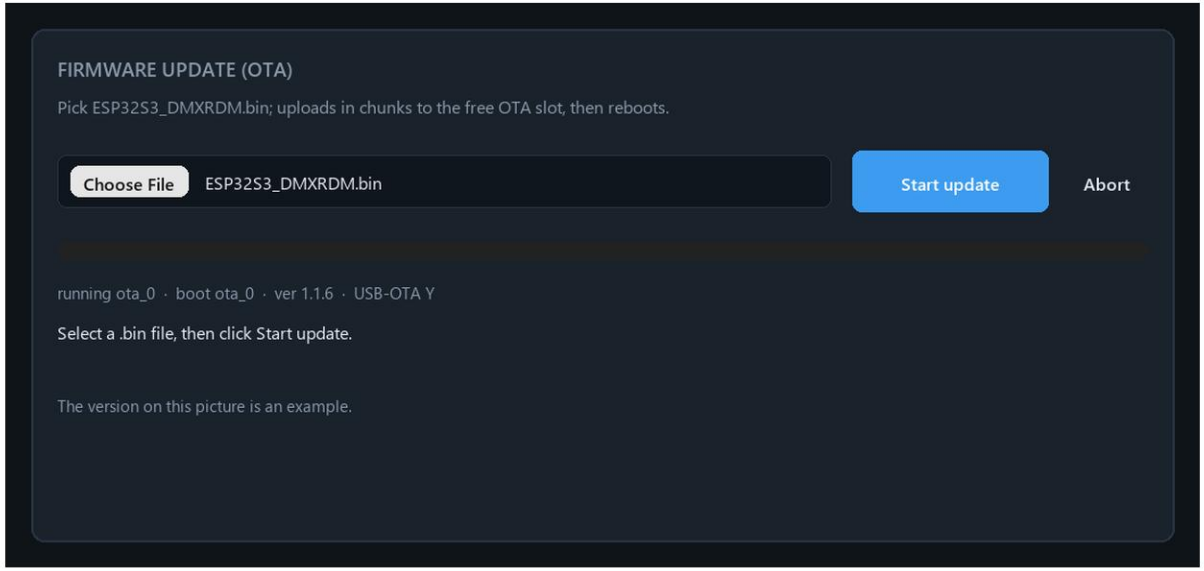


FILE

## Choose the file and start

| | |
|---|---|
| PICK | Click the file control and choose ESP32S3_DMXRDM.bin. Then click Start update. |
| ASK | The browser asks: Upload firmware and reboot the device? Click OK. Cancel leaves the unit as it is. |
| WORDS | The line under the bar reads Hashing..., then Preparing..., then Uploading... with a percent. |

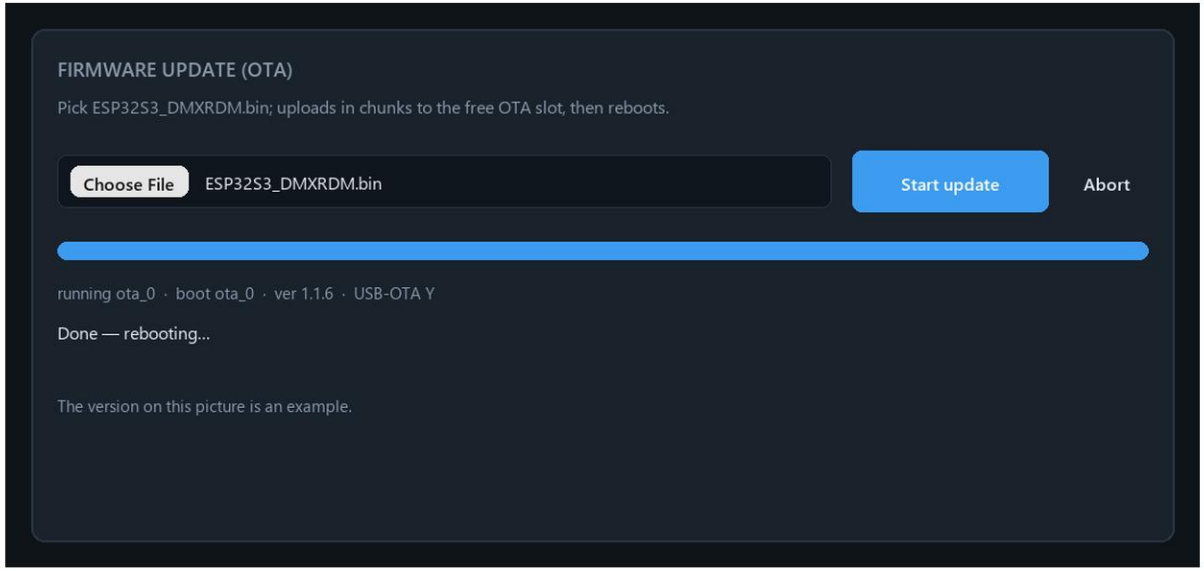


DONE

## Wait for the reboot

**END** At 100% the line reads Done — rebooting…. About one second later the unit restarts. The browser disconnects. That is normal.

**POWER** Do not unplug USB or the router before that line. Abort, before 100%, keeps the old firmware.

**CHECK** When the screen is back, open Settings and read Version, or reopen the web Settings page. The number is the firmware you just installed.