


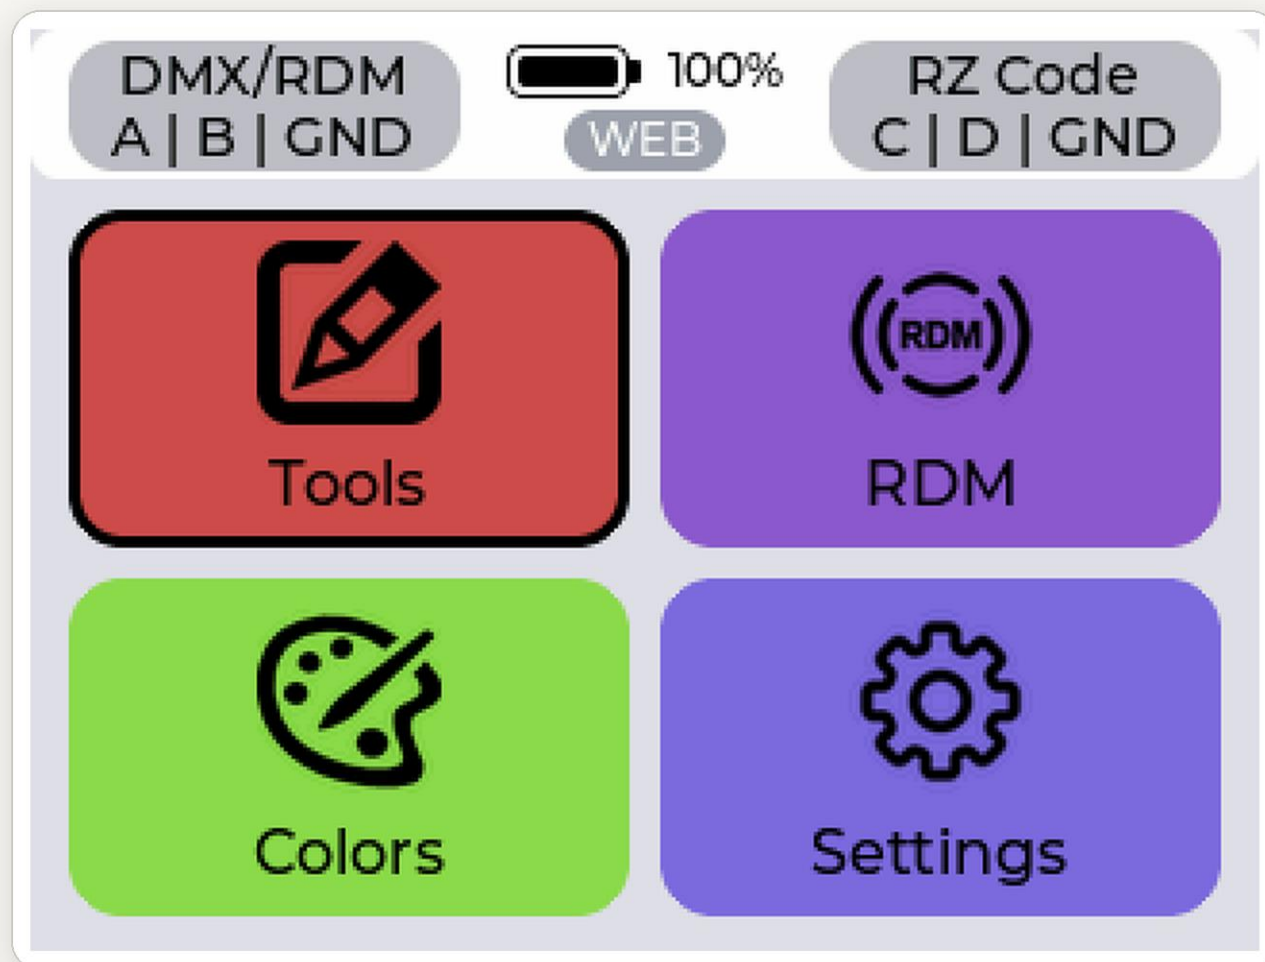

HOME

Choose a screen

KNOB

Turn the knob to move the outline. Press it to open that tile. The four tiles are Tools, RDM, Colors, and Settings.

PLUGS


DMX/RDM is A, B, and GND. RZ Code is C, D, and GND. Those names are on this screen. The green plugs are blank.

STATUS

WEB means a browser can open the console. The battery icon shows the cell level.

BACK

A long press of the knob returns home from any screen.

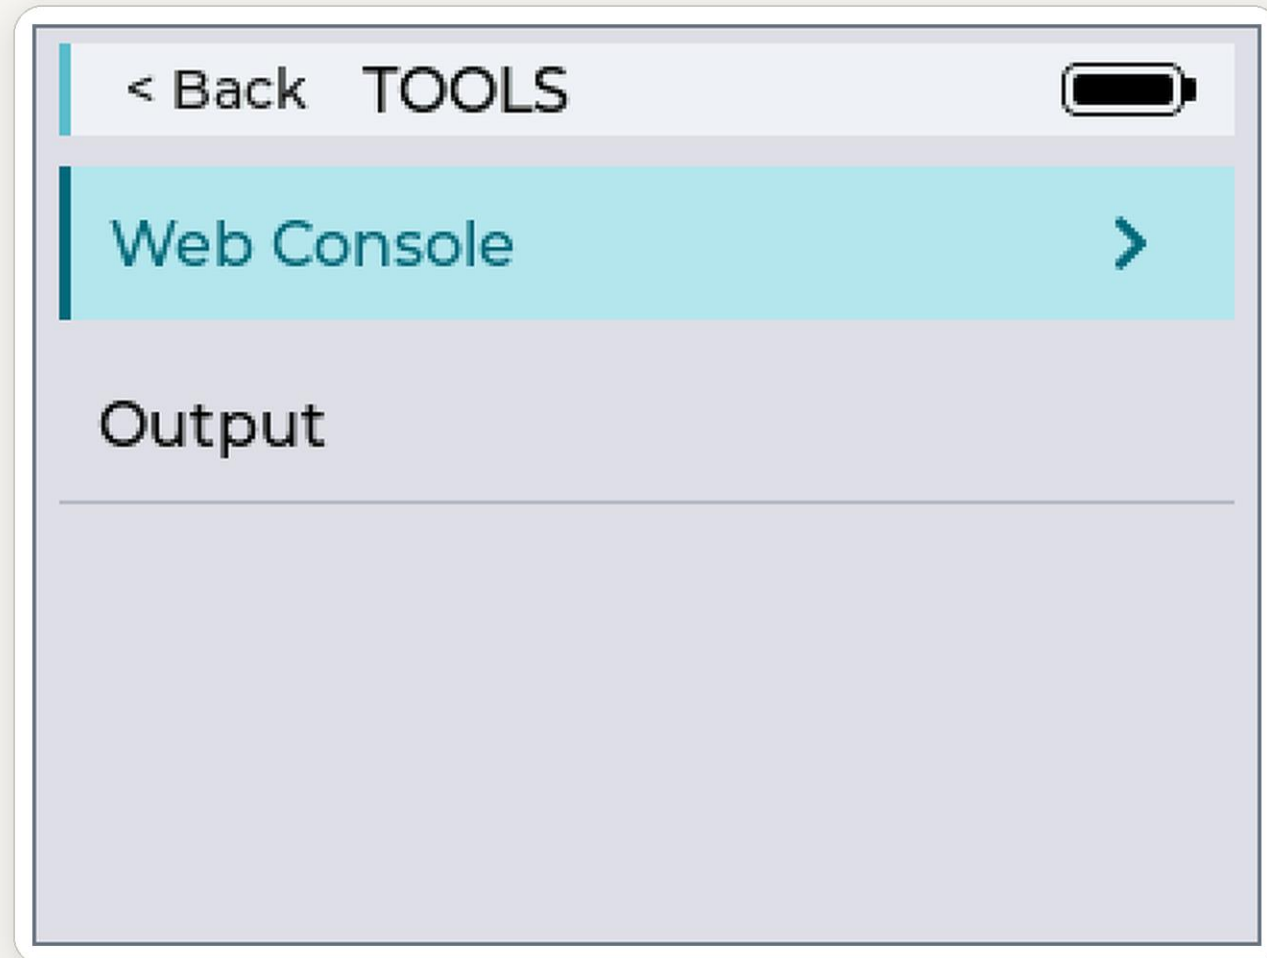

TOOLS

Console and live output

WEB


Opens the Web Console page. That page shows the address. Press the URL row there to open the code.

OUTPUT

Opens the live port: where the levels come from, whether a color test is holding the line, and the frame rate.

BACK

Press Back, or turn to Back and press, to return home.

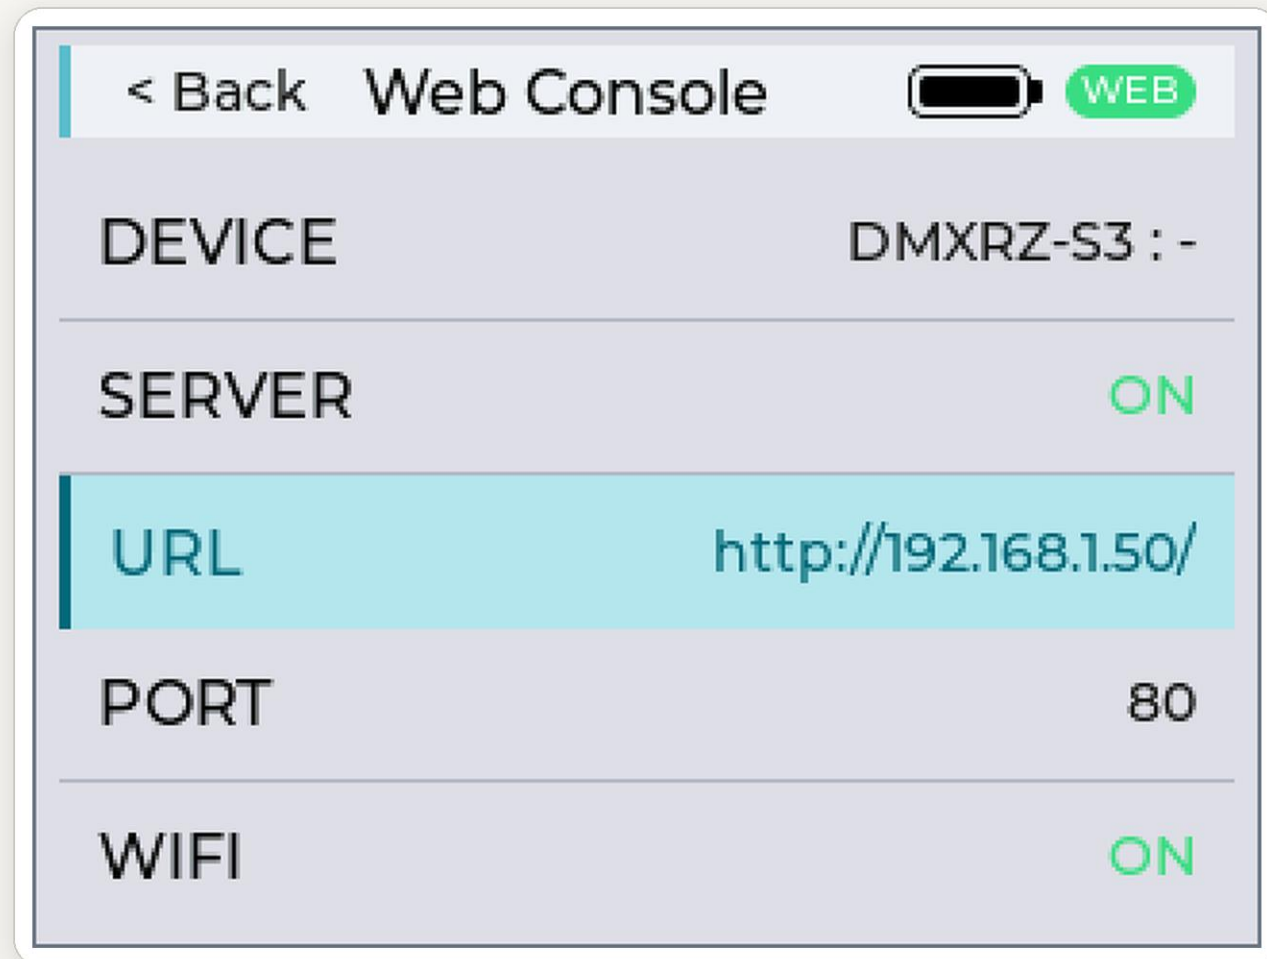

CONSOLE

The address of this unit

ROWS

DEVICE is the model and name. SERVER and WIFI should both read ON. PORT is 80. The address on this picture is an example.

URL

Press the URL row. That is the row that opens the code. One row below, HINT reads URL->QR.

NEED

If WIFI is not ON, join a network under Settings first. Without an address, the phone has nothing to open.



CODE

Scan to open the console

PHONE


Scan the code with a phone on the same network. The browser opens the Web Console. Typing the address under the code does the same thing.

HOTSPOT


The phone can be the network. Join that hotspot from Settings, then scan with the same phone.

CLOSE

Tap the screen, or press Back, to leave the code. This code opens the console. The Help code, under Settings, opens the user guide.

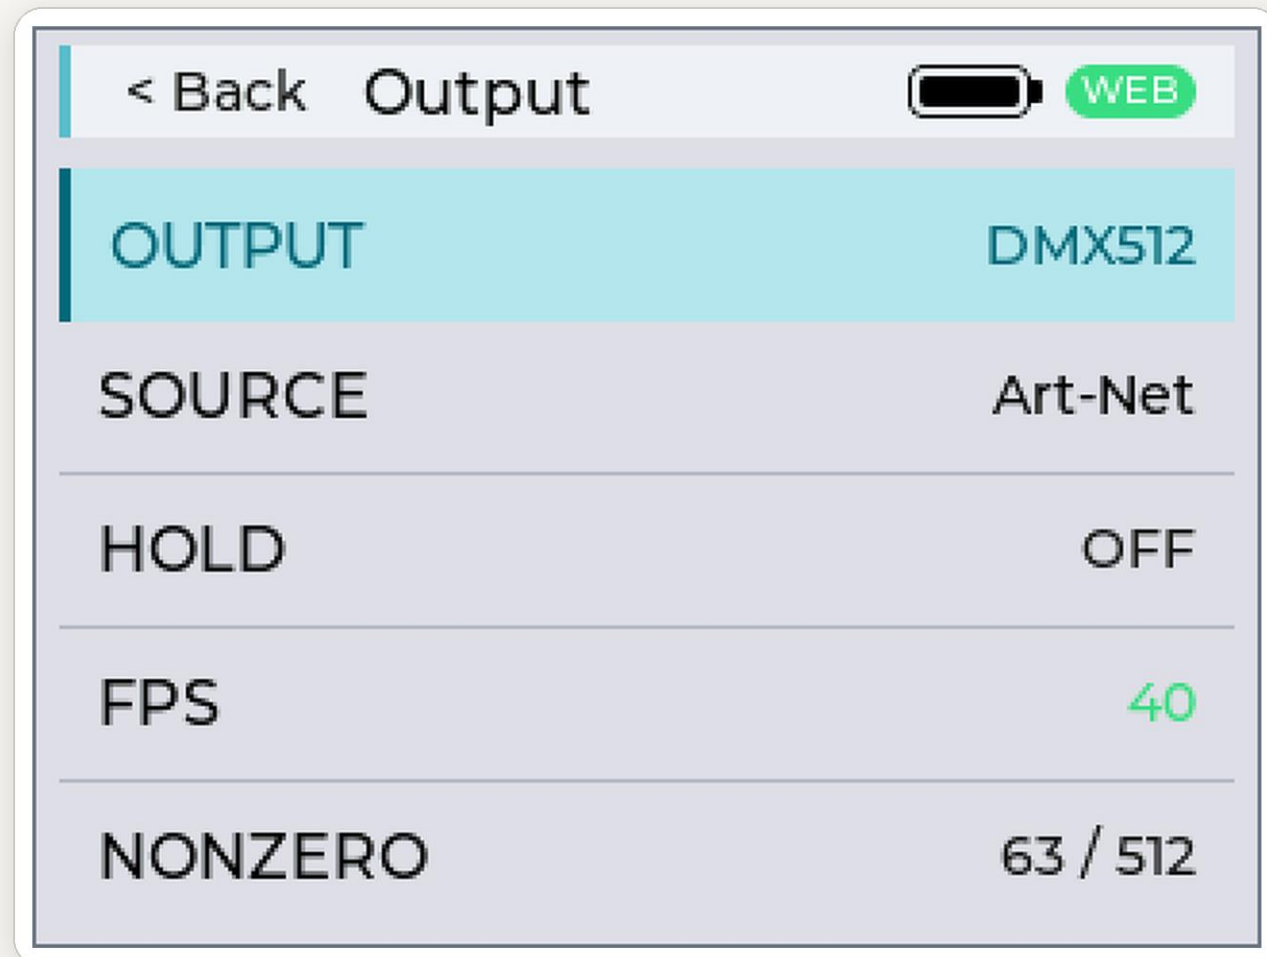**OUTPUT****What is leaving the port**

- SOURCE** NONE, Art-Net, USB, or COLOR. COLOR means a color test is making the levels.
- HOLD** OFF means an external source can drive the port. COLOR means a test is holding Art-Net.
- RATE** FPS is the rate actually leaving the controller. NONZERO is how many of the 512 channels are above 0.

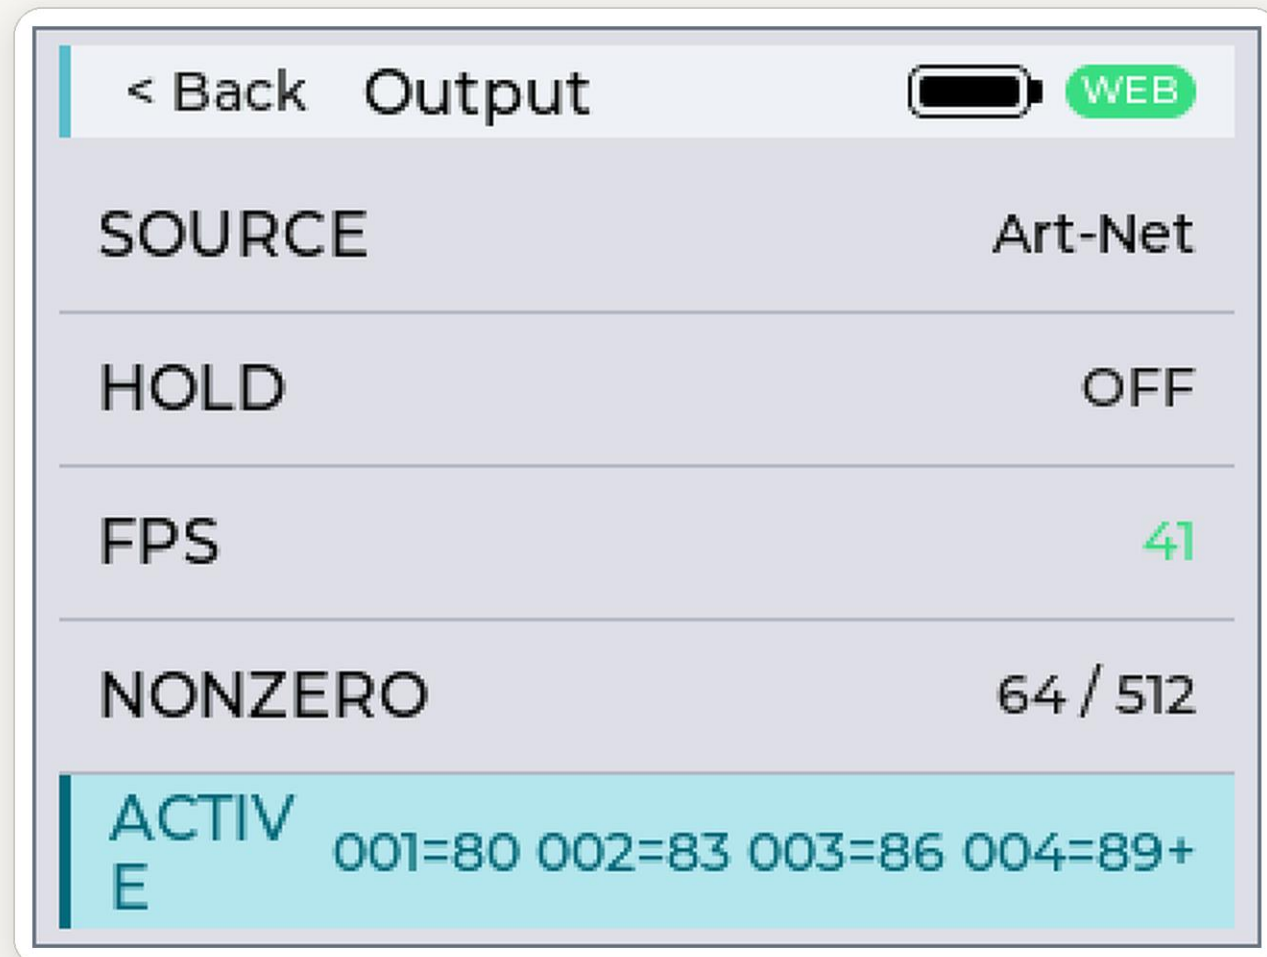

LEVELS

Which channels are on

ACTIVE


Turn down to ACTIVE. It lists the first live channels as address=level. A plus means more channels are above 0.

UNI

UNIVERSE is the last row. 1 on this screen is Art-Net universe 0. The range is 1 to 4.

READ

This page does not edit levels. Color test and the web console do.

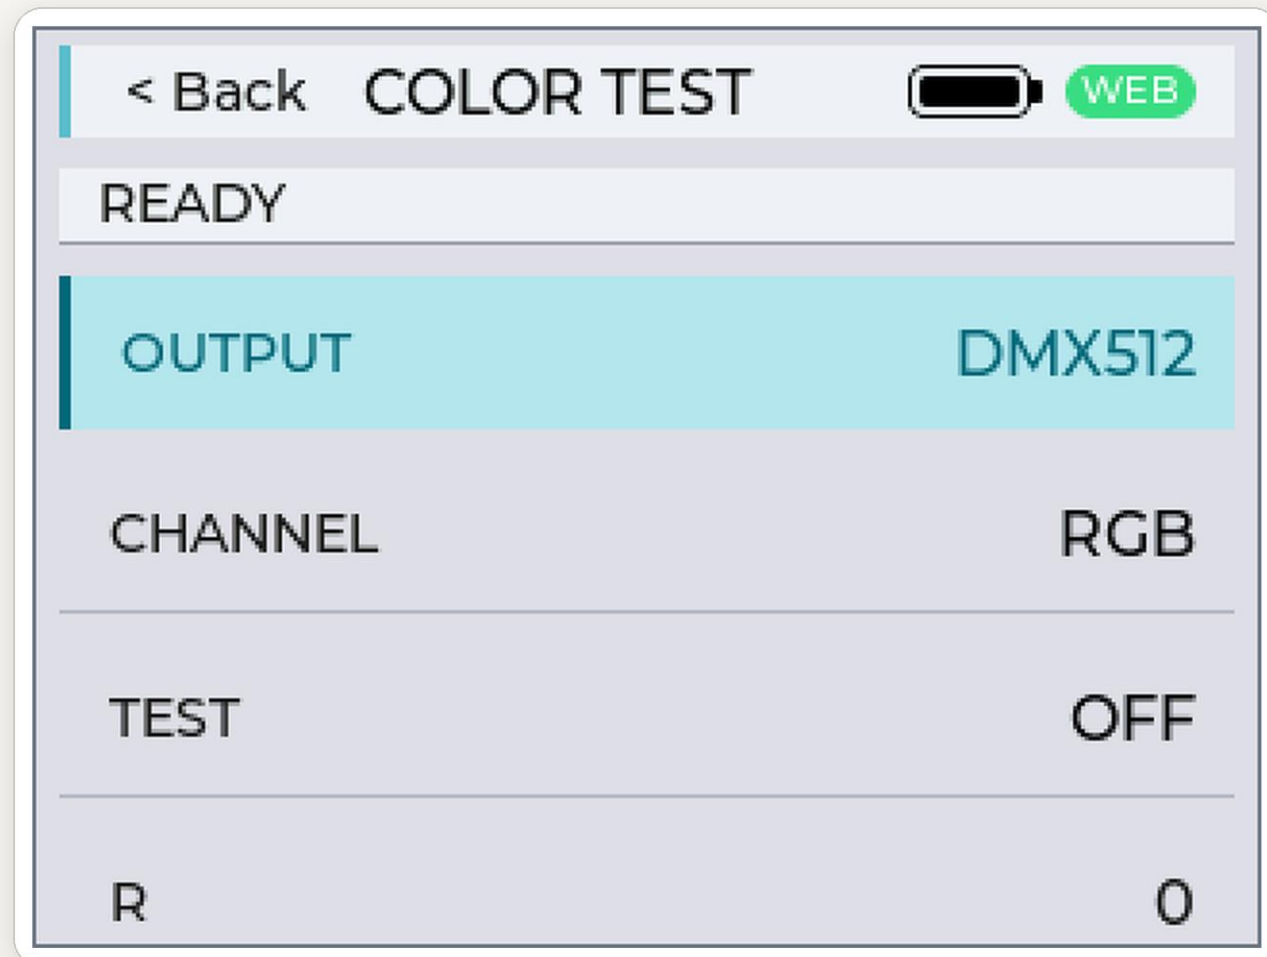

COLORS

Color test

- OUTPUT** DMX512, RZ Code, or DMX + RZ. This is the same output target as Settings.
- CHANNEL** Slots per pixel. Factory RGB uses three: channels 1-3 are the first pixel. Groups are R, RG, RGB, RGBW, and RGBWYZ.
- TEST** Stays OFF until you start a pattern: COLOR, RAINBOW, CHASE, BREATH, CH TEST, or CONSOLE. A pattern holds Art-Net until you return to OFF.
- LEVELS** Turn the knob to reach the rows under the mode. The next pages are each mode.

< Back

COLOR TEST

WEB

TEST ACTIVE

OUTPUT

DMX512

CHANNEL

RGB

TEST

COLOR

R

255

COLOR

One steady color

LEVELS

RGB shows R, then G, then B. Press a level and turn. W, Y, and Z appear when CHANNEL is RGBW or RGBWYZ.

HOLD

TEST ACTIVE means Art-Net is held. The fixtures follow this color, not an external console.

STOP

Set TEST back to OFF to release the port.

< Back

COLOR TEST



WEB

TEST ACTIVE

OUTPUT

DMX512

CHANNEL

RGB

TEST

RAINBOW

SPEED

5

RAINBOW

A moving rainbow

SPEED

Press SPEED and turn. 1 is slow. 10 is fast. The pattern starts as soon as TEST is RAINBOW.

HOLD

TEST ACTIVE holds Art-Net until you return TEST to OFF.

SAME

CHASE uses this same speed row. Only the pattern changes.

< Back

COLOR TEST



WEB

TEST ACTIVE

OUTPUT

DMX512

CHANNEL

RGB

TEST

CHASE

SPEED

5

CHASE

A chase across pixels

SPEED

SPEED is 1 to 10, the same control as RAINBOW. CHANNEL still sets how many slots make one pixel.

HOLD

The chase holds Art-Net. Set TEST to OFF before an external console should drive the port.

[< Back](#) COLOR TEST  [WEB](#)

TEST ACTIVE

CHANNEL	RGB
TEST	BREATH
SPEED	5
LEVEL	0

BREATH

A fade up and down

SPEED

SPEED sets how fast the fade repeats. 1 is slow. 10 is fast.

LEVEL

LEVEL is the brightness of the fade right now. It moves on its own. You cannot edit it.

HOLD

TEST ACTIVE holds Art-Net until TEST is OFF.

[< Back](#) COLOR TEST  [WEB](#)


TEST ACTIVE

CHANNEL	RGB
TEST	CH TEST
CH	12
LEVEL	180

CH TEST

One channel at a time

- ONE** CH is the DMX address, from 1 to 512. LEVEL is 0 to 255. Only that channel moves.
- USE** Use it to find one dimmer, one relay, or one color slot without lighting the rest of the rig.
- GROUP** CHANNEL stays on screen, but this mode does not build pixels from it. TEST ACTIVE still holds Art-Net.

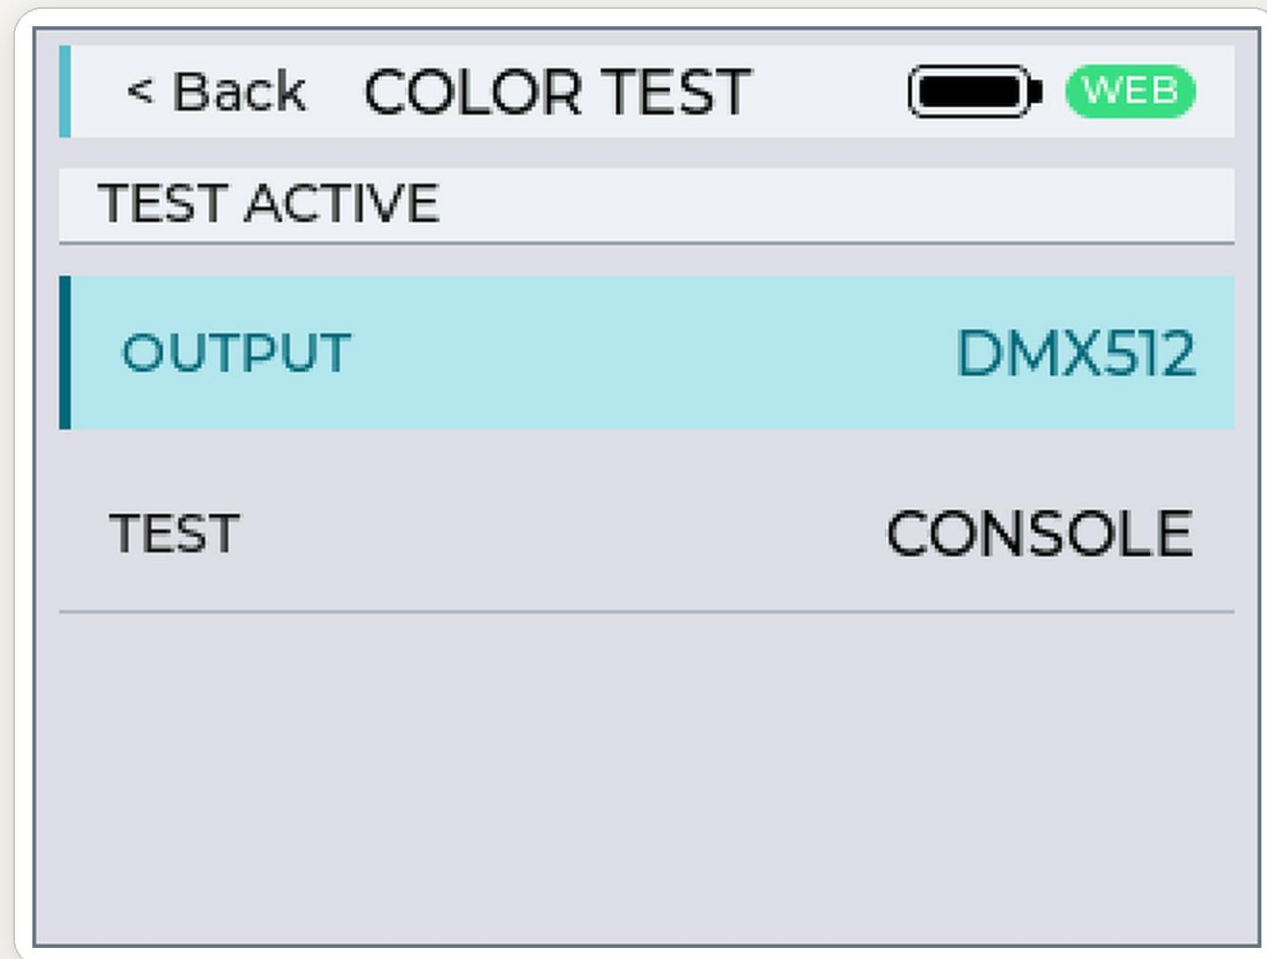

CONSOLE

The 512 editor is on the web

HOLD

CONSOLE holds Art-Net. This screen only shows that the test is on. It does not list the 512 levels.

EDIT

Open the Web Console and choose CONSOLE there to set every channel. The small screen cannot edit all 512 slots.

STOP

Set TEST to OFF, or stop the color test on the web page, before an external console should drive the port.



RDM

Find fixtures

SCAN

Press RUN to scan the DMX line.

FIXTURE

Press a row to open that fixture. The next pages are its address, sensors, and driver info.

EXAMPLE

Names and addresses on this picture are examples. A live scan lists the fixtures that answer.

PORT

RDM needs the output target to include DMX512. Leaving this screen returns the DMX port to Art-Net or color test.

< Back

FOH Left

WEB

UID

12ab:00560000

ADDR

101

SET

IDENTIFY

ON

SENSOR

3 >

FIXTURE

One discovered fixture

ADDR


Turn to the address, press, and turn the number. Press SET to send it. The range is 1 to 512.

IDENTIFY

Opening the fixture turns Identify on, so that fixture can flash. Press the row again to turn it off.

MORE

SENSOR opens the sensor list when the count is not zero. DRIVER INFO and REFRESH are the next rows. REFRESH reads the fixture again.

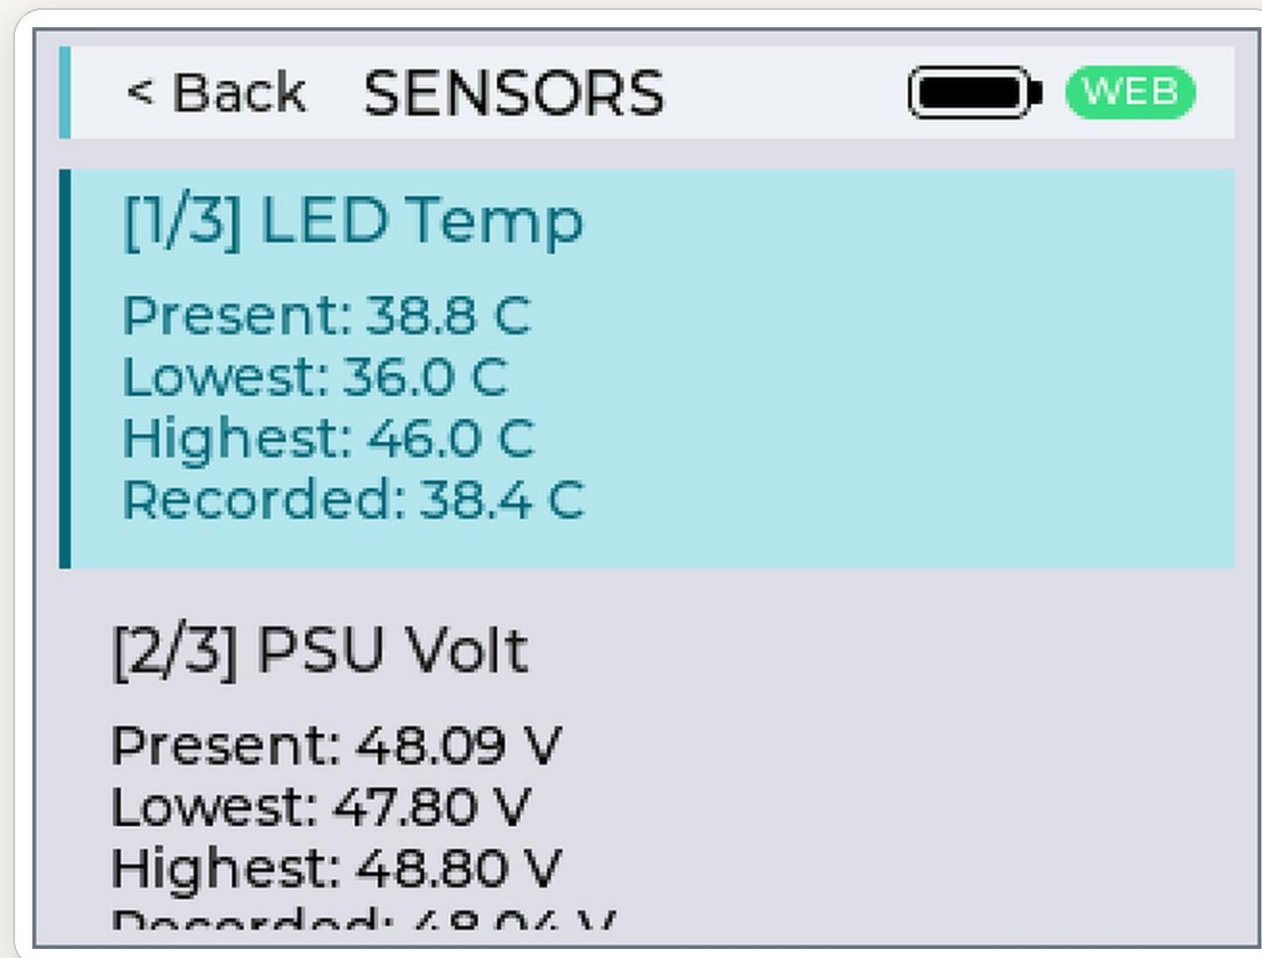

SENSORS

What the fixture is measuring

ROW

Each block is one sensor. It shows the present value, the lowest, the highest, and the recorded value.

TURN

Turn the knob to reach the sensors below the first. The names and numbers come from the fixture.

NONE

If the fixture reports no sensors, the device page says NONE and this page does not open.

[< Back](#) DRIVER INFO  WEB

UID	12ab:00560000
MAN ID	12AB
DEV ID	00560000
ADDR	101

DRIVER

Identity from the fixture

IDS


UID, manufacturer ID, device ID, and the DMX address. These are the values the fixture sent.

READ

This page is read-only. Change the address, or Identify, on the fixture page.

MORE

Turn down for footprint, model, labels, sensor count, hours, and status.

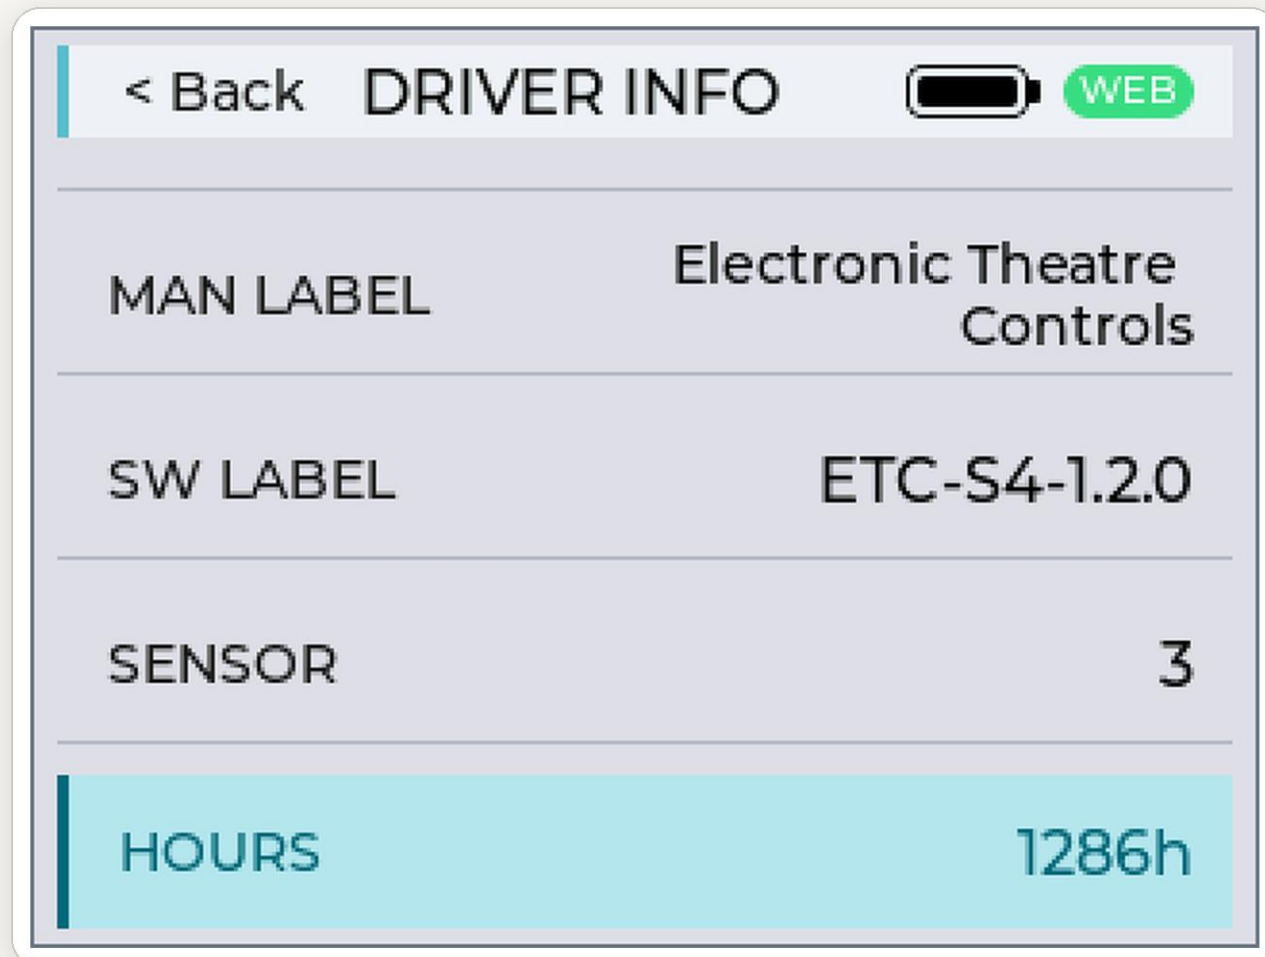

HOURS

Labels, sensors, and hours

LABELS


MAN LABEL is the manufacturer name. SW LABEL is the fixture software. DEVICE LABEL is the name on the list.

HOURS

HOURS is lamp or device hours when the fixture supports them. STATUS is the fixture's own status, on the next row.

EXAMPLE

The names and the hour count on this picture are examples.

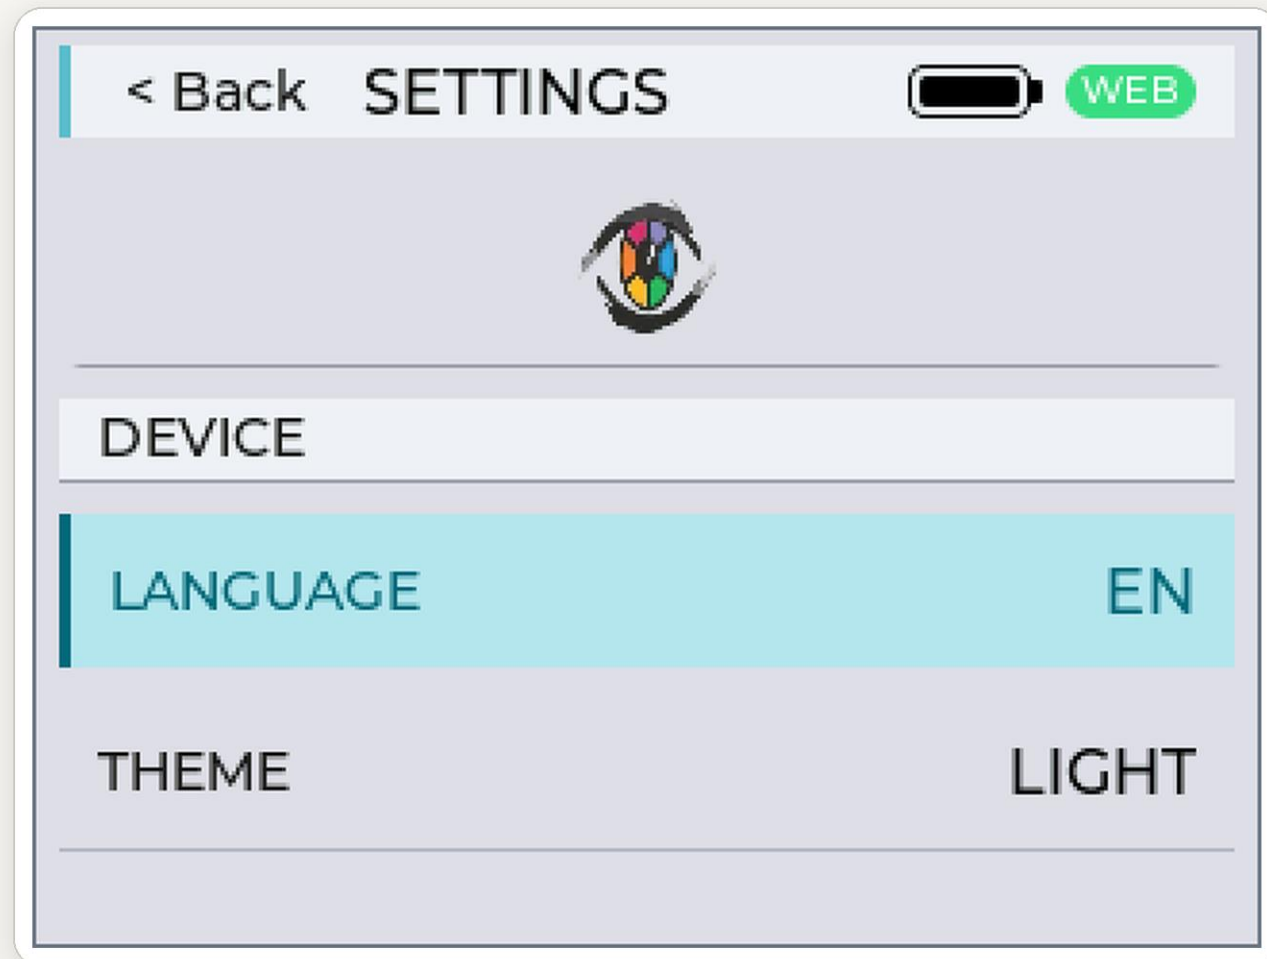

SETTINGS

Language and theme

LIST


Settings is one long list. This is the top. Turn the knob to reach backlight, ports, and About.

LANGUAGE

Press LANGUAGE and turn to choose EN or Chinese. The labels on the unit follow that choice.

THEME

LIGHT or DARK. Press the row and turn. The change is kept.

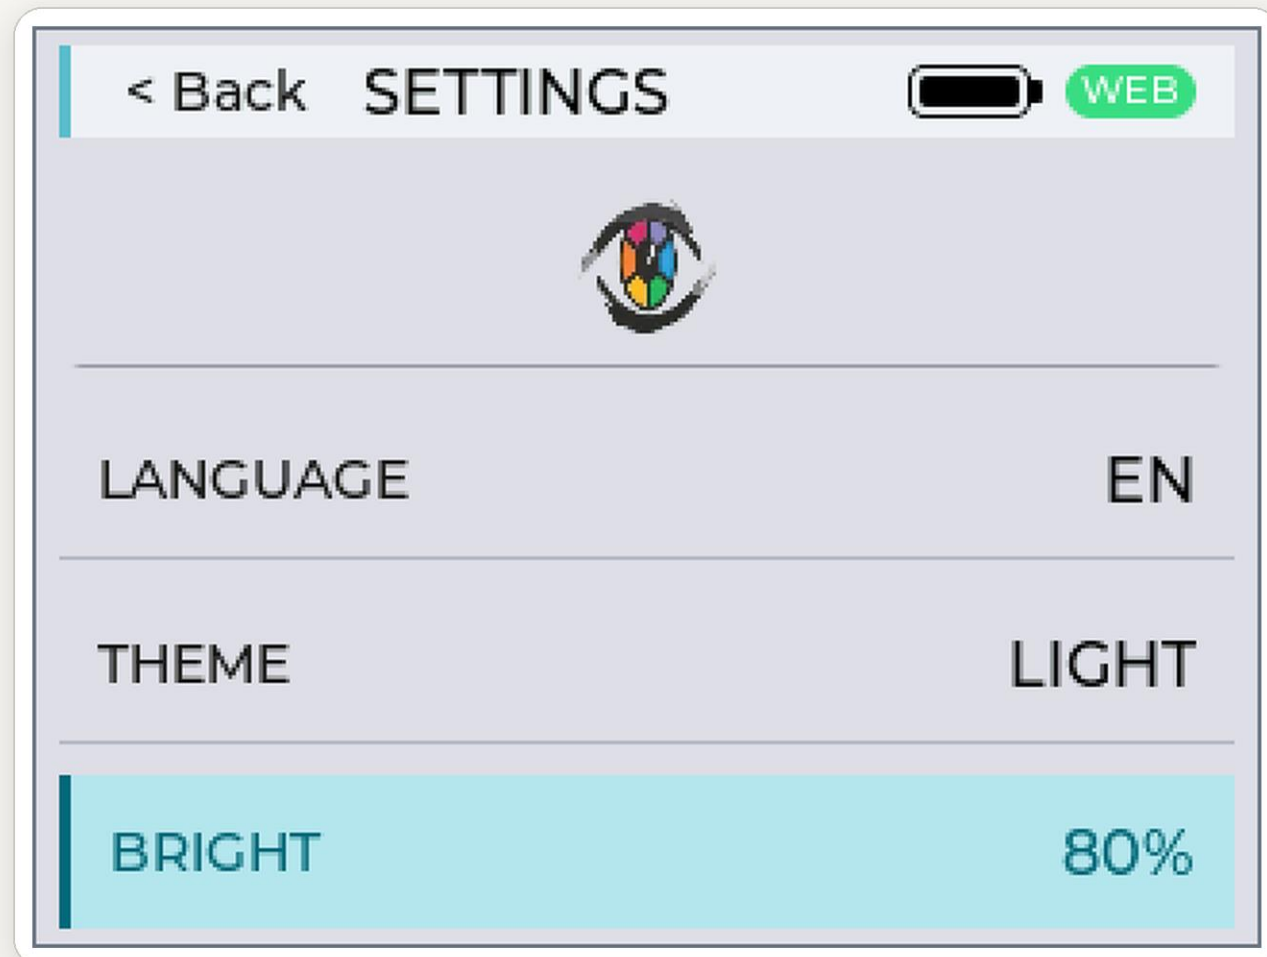

SCREEN

Backlight and beep

BRIGHT


Press BRIGHT and turn. It moves in steps of 5, from 30% to 100%.

BEEP

BEEP is the next row. ON clicks when you press the knob. OFF is silent.

KEEP

Language, theme, backlight, and beep are saved on the unit.

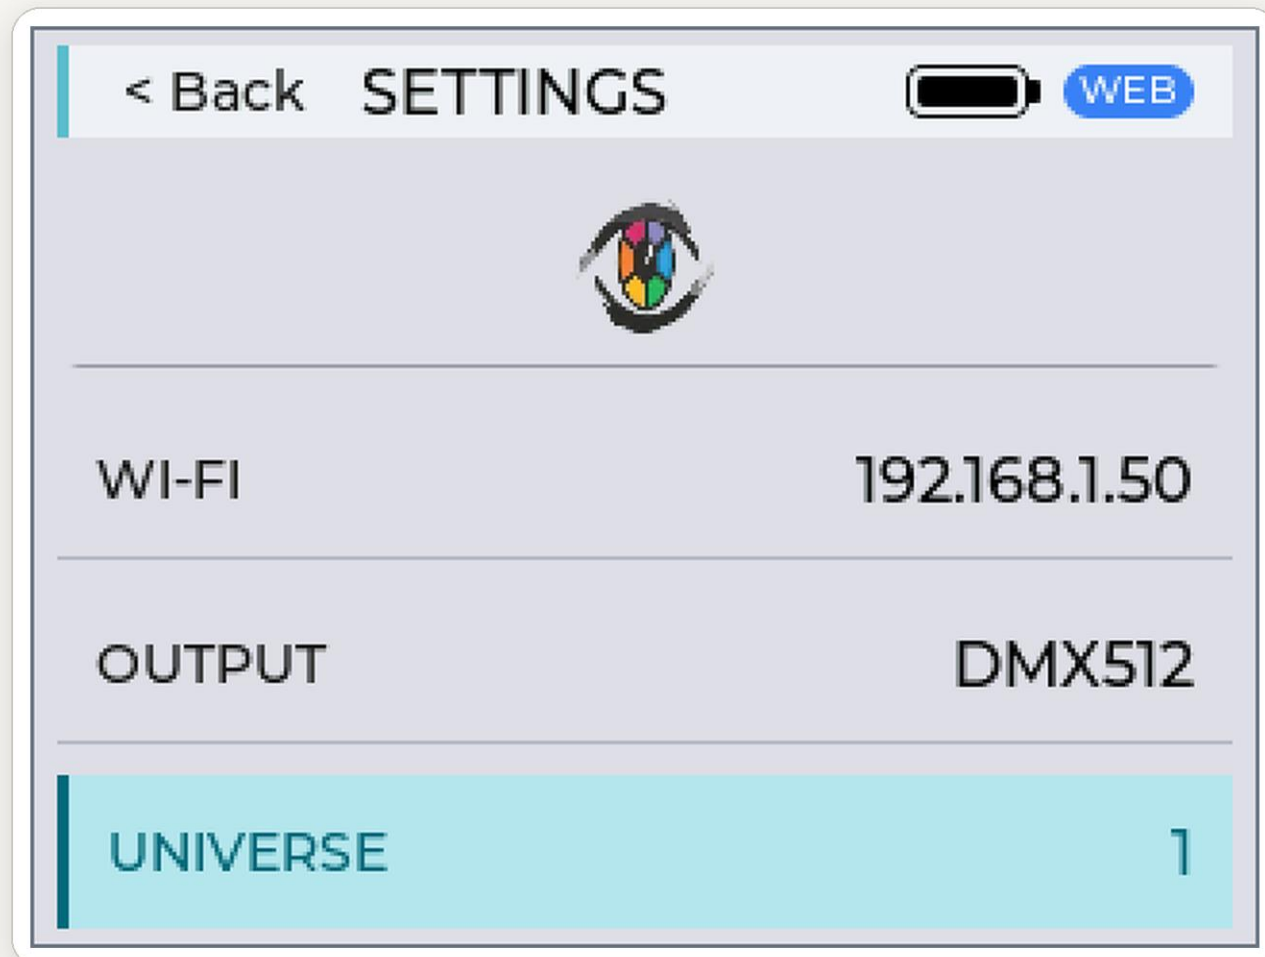

PORTS

Wi-Fi, output, and universe

WIFI


The address means the unit is on the network. Press WI-FI to open the network list. The address here is an example.

OUTPUT

DMX512, RZ Code, or DMX + RZ. Factory output is DMX512. RDM needs a target that includes DMX512.

UNI

Universe 1 to 4 on this screen is Art-Net universe 0 to 3. RZ WIRE and RZ PIXELS are the next rows.

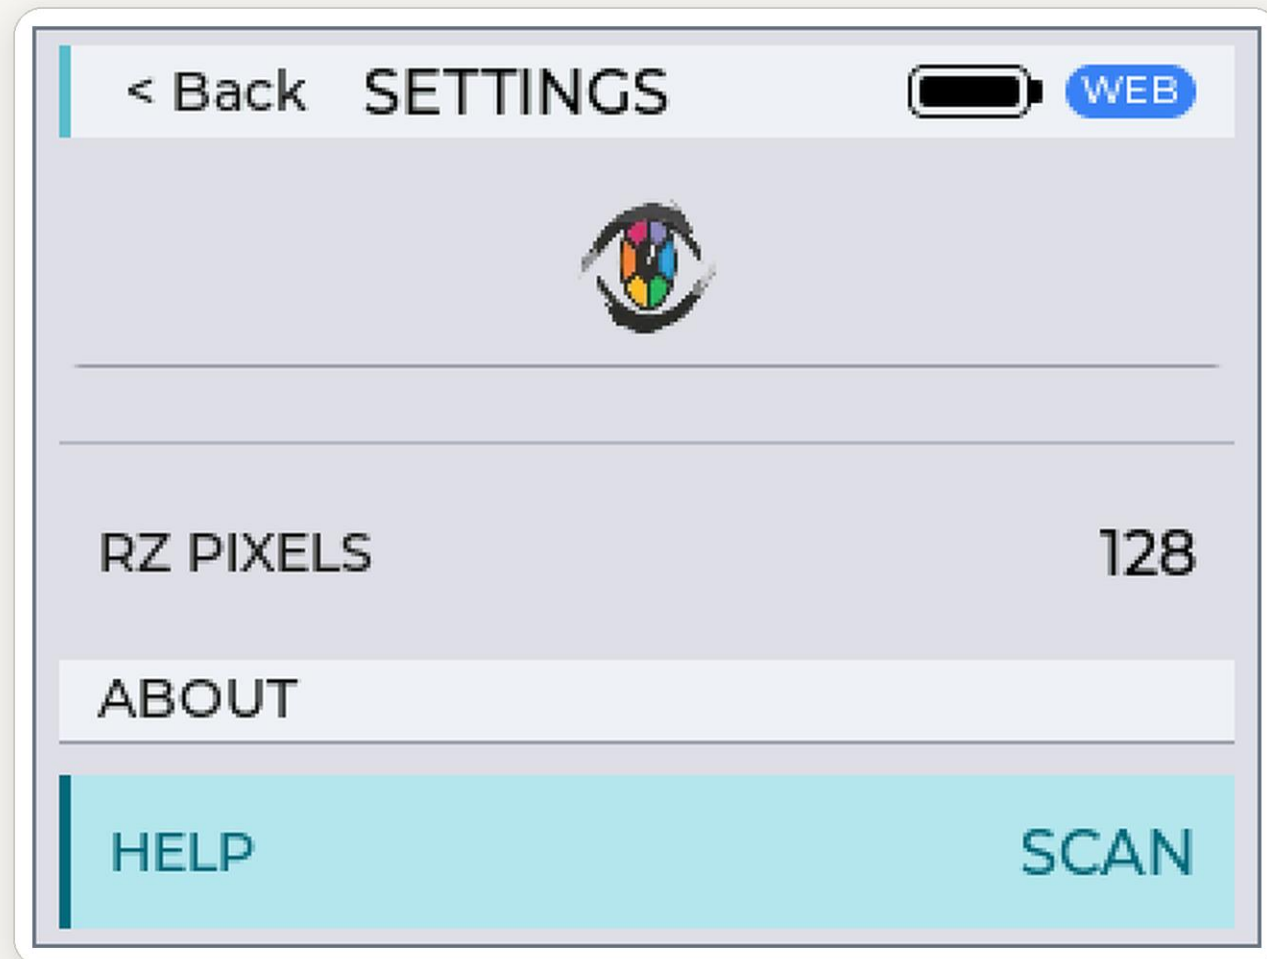

ABOUT

Pixels, help, and version

RZ


RZ WIRE is CLK+DATA or WS2812. Factory wire is CLK+DATA. RZ PIXELS is 1 to 1024. Factory count is 128.

HELP

SCAN means Wi-Fi is up. Press HELP to open the user-guide code. WiFi OFF means join a network first.

REST

VERSION and RESET DEF are below HELP. Design by F111 Studio sits at the bottom and cannot be selected.

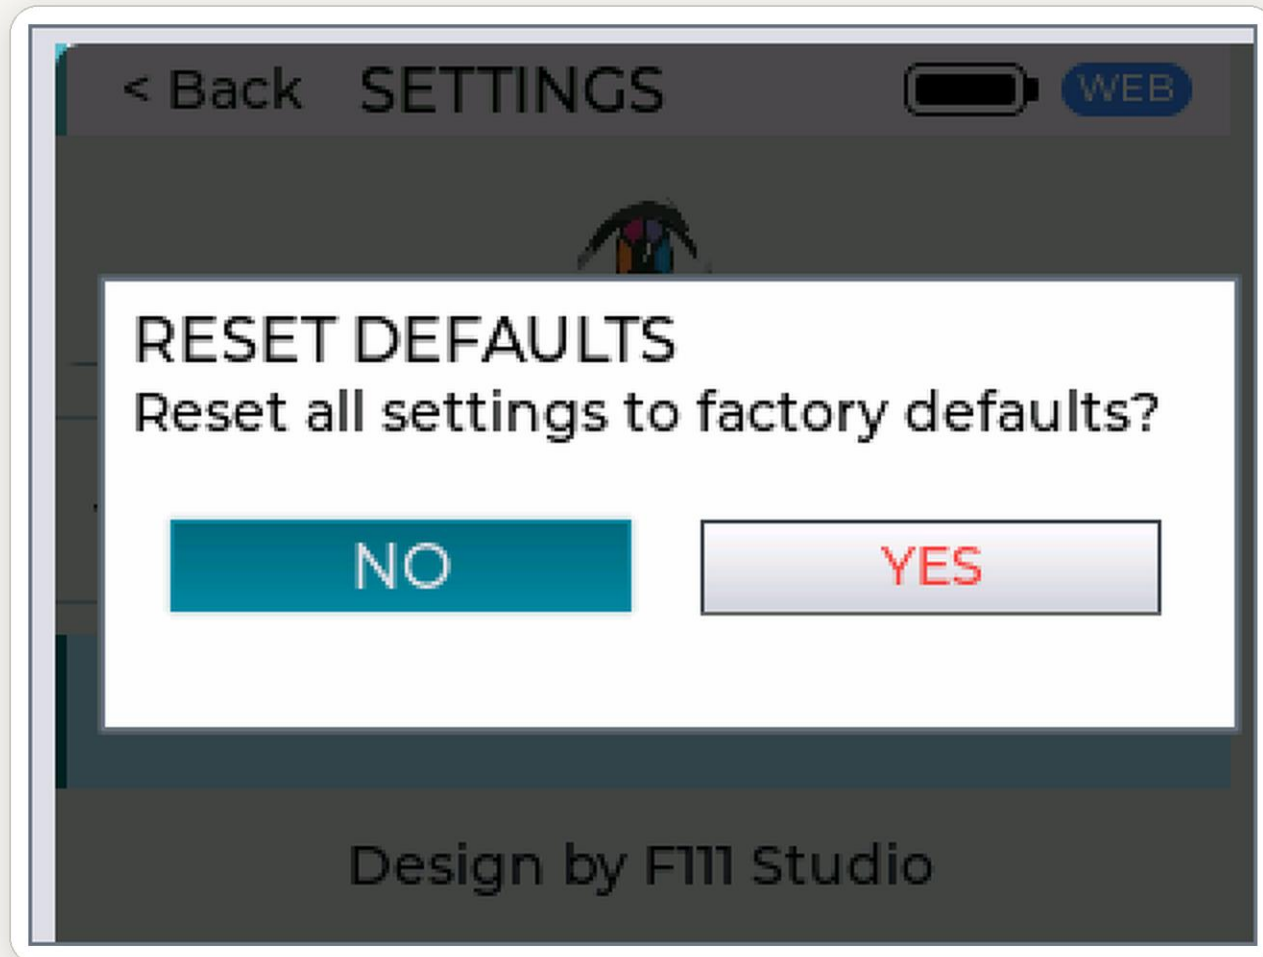

RESET

Restore factory defaults

OPEN


Press RESET DEF. This question opens. NO is selected first.

YES

Turn to YES and press to restore language, theme, backlight, beep, output, universe, and RZ settings.

WIFI

The saved Wi-Fi network stays. FORGET, on the Wi-Fi screen, is what clears it. Press NO to leave the settings as they are.

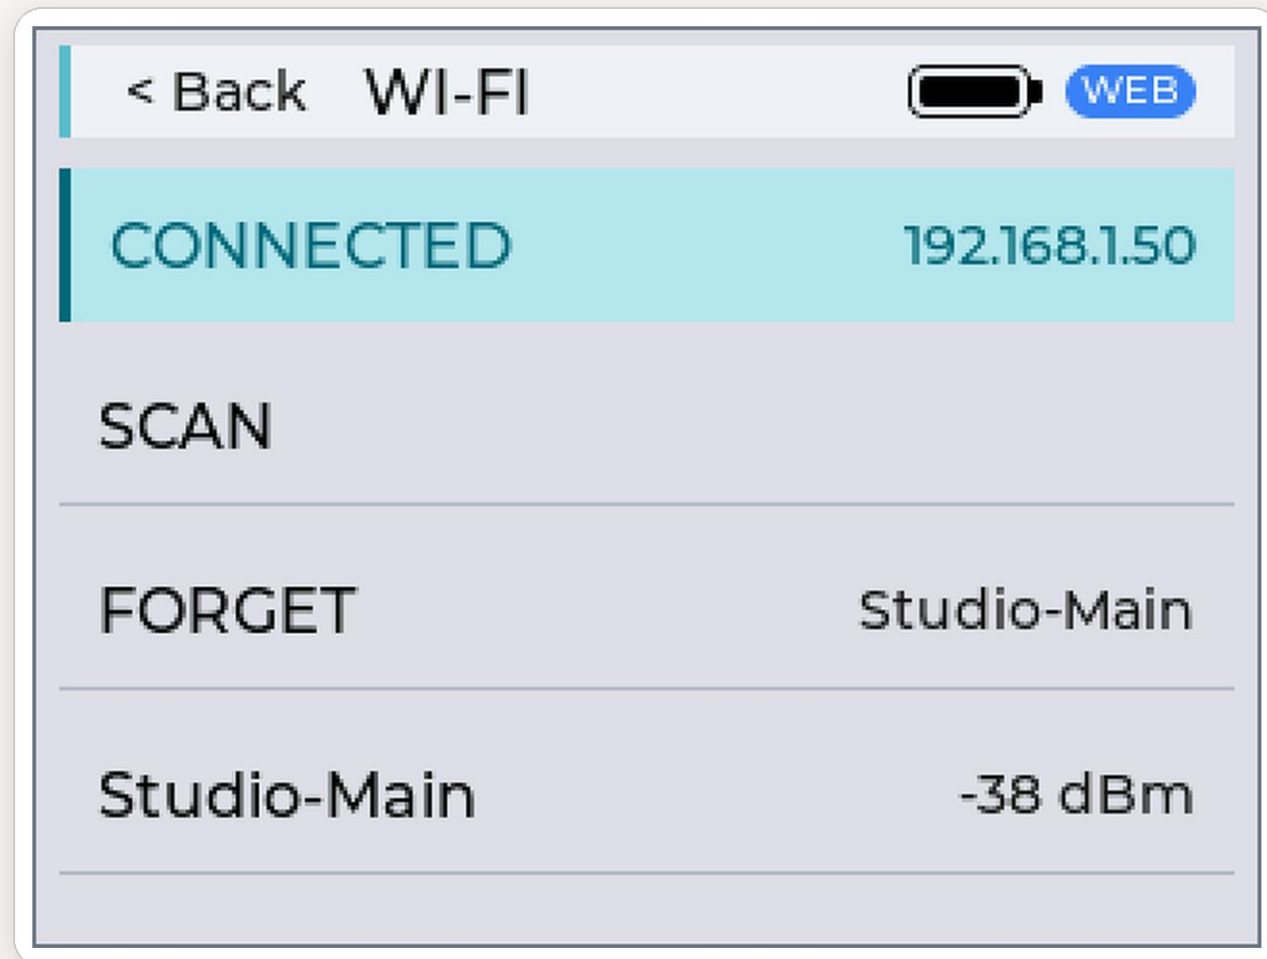

WI-FI

Join a network

LINK

CONNECTED and an address mean the unit is on the network. The address on this picture is an example.

SCAN

Press SCAN to look again. A locked network opens the password page. An open network joins as soon as you pick it.

FORGET

FORGET clears the saved network. Use it before joining a different router or a phone hotspot.



PASSWORD

Enter the network key

TYPE

The name at the top is the network you picked. Turn to a key and press it. The password is hidden as you type.

JOIN

Press CONNECT, or the check key. Back returns to the list and does not join.

WAIT

The list returns while the unit joins. Stay there until the top row shows CONNECTED and an address.

< Back

HELP



<http://192.168.1.50/help>
Scan to open user guide

HELP

The user guide on a phone

SCAN

Scan this code with a phone on the same network.
The browser opens the user guide at /help.

OTHER

This is not the Web Console code under Tools. That
code opens the console. This one opens the guide.

CLOSE

Press Back to return to Settings. If the row said WiFi
OFF, join a network before trying again.