

< Back

SETTINGS



I/O & NET

WI-FI

192.168.1.27

OUTPUT

DMX512

UNIVERSE

1

RZ WIRE

CLK+DATA

RZ PIXELS

128

WI-FI

Connect before you scan

- SETTINGS** From Home, open Settings and turn to WI-FI. Press it. The picture is that list, scrolled to the network rows.
- ADDRESS** When WI-FI shows an address, the controller is on the network. 192.168.1.27 on this page is an example.
- NEXT** Only then open the code. Without an address, the phone has nothing to open.

< Back	WI-FI	
CONNECTED	192.168.1.27	
SCAN		
FORGET	Venue	
Venue	-48 dBm	
Studio	OPEN -40	

SCAN

Join a network

SCAN

Press SCAN. Pick the network. An open network joins at once. A locked network opens the password page.

HOTSPOT

The phone can turn on its own hotspot. SCAN that name and join it the same way. The controller is then on the phone's network.

FORGET

FORGET clears the saved network. Use it when you want to join a different router or hotspot.

< Back

WI-FI



Venue

venue-pass

CONNECT

q

w

e

r

t

y

u

i

o

p

a

s

d

f

g

h

j

k

l

z

x

c

v

b

n

m

PASSWORD

Enter the network key

- TYPE** The name at the top is the network you picked. Type the password on the keyboard. The example here is venue-pass.
- JOIN** Press CONNECT, or the keyboard OK key. Back returns to the list and does not join.
- WAIT** The list returns while the controller joins. Stay there until the top row shows CONNECTED and an address.

< Back	WEB CONSOLE	
DEVICE	DMXRZ-S3 : Driver NO1	
SERVER	ON	
URL	192.168.1.27	
PORT	80	
WIFI	ON	

ENTRY

Open Web Console on the unit

- PATH** After Wi-Fi shows an address, open Tools, then Web Console. This page is the status of the built-in server.
- URL** Press the URL row. That is the row that opens the code. The address on it is the address the phone will open.
- CHECK** SERVER and WIFI should both read ON. PORT is 80. The HINT row, one step down, reads URL->QR.




<http://192.168.1.27/>
Scan to open web console

Tap or Back to close

CODE

Open the code and scan

- ENTRY** After Wi-Fi is connected, open Tools, then Web Console, and press the URL row. This code page opens.
- PHONE** On the phone, scan the code. The browser opens the Web UI. Typing the address under the code does the same thing.
- HOTSPOT** If the controller joined the phone hotspot, scan with that same phone. The browser opens the Web UI without another router.
- CLOSE** Tap the screen, or press Back, to leave the code.

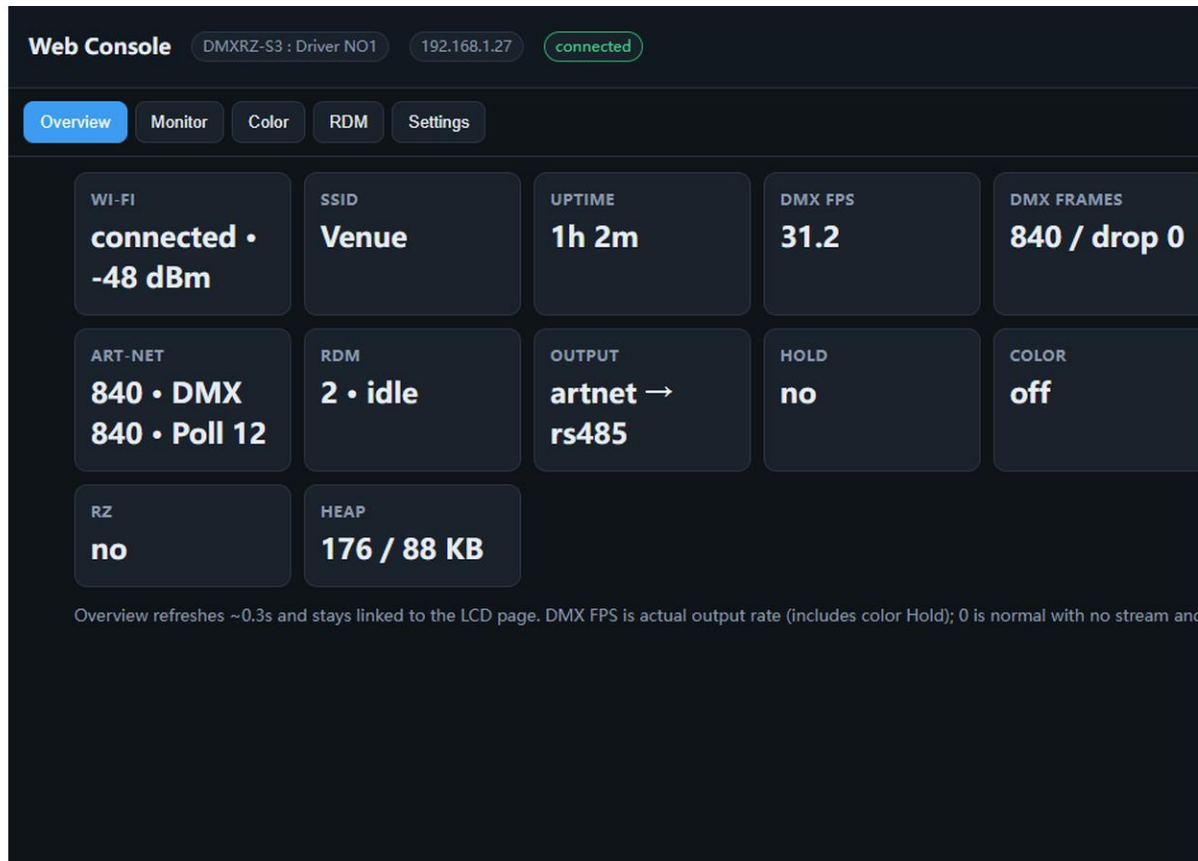

OVERVIEW

What the unit is doing

- LINK** The header shows the device name, the IP address, and whether Wi-Fi is connected. Help in the corner opens the user-guide page.
- CARDS** Wi-Fi, SSID, uptime, DMX frame rate, Art-Net counts, RDM, the live output, Hold, color test, universe, RZ, and free memory.
- SYNC** This page stays linked with the screen on the unit. Universe 1 here is Art-Net universe 0.
- FPS** DMX FPS is the rate actually leaving the controller. It can be 0 when nothing is sending and color test is off.

Web Console

DMXRZ-S3 : Driver NO1

192.168.1.27

connected

Overview

Monitor

Color

RDM

Settings

PURPOSE

Shows the 512 DMX levels after output arbitration (Art-Net / USB / color test — what is actually leaving the controller). Use it to verify which c

HOW TO USE

- This tab refreshes ~4 times/sec; uncheck Live to freeze the view.
- Each cell shows CH (top) and level 0–255 (bottom); bar height matches intensity.
- Non-zero only dims silent channels so active addresses stand out.
- During color test you see the test output; Stop color releases external input again.
- Click a channel cell to open a 0–255 slider with +/- . Lights follow.

☒ Live

☐ Non-zero only

512 ch · nonzero 6 · 10:56:17

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
255	40	80	0	0	0	0	0	0	200	120	0	0	0	0	0	0	0	0	0
22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

MONITOR


The 512 levels going out

- LEVELS

Each cell is one DMX channel after arbitration: Art-Net, USB, or a color test. The number is 0-255. The bar is the same level.
- LIVE

Live refreshes several times a second. Turn it off to freeze the picture. Non-zero only dims the silent channels.
- EDIT


Click a cell to open the channel editor. The same editor is used on CONSOLE. The fixtures follow. The small screen does not edit these cells.

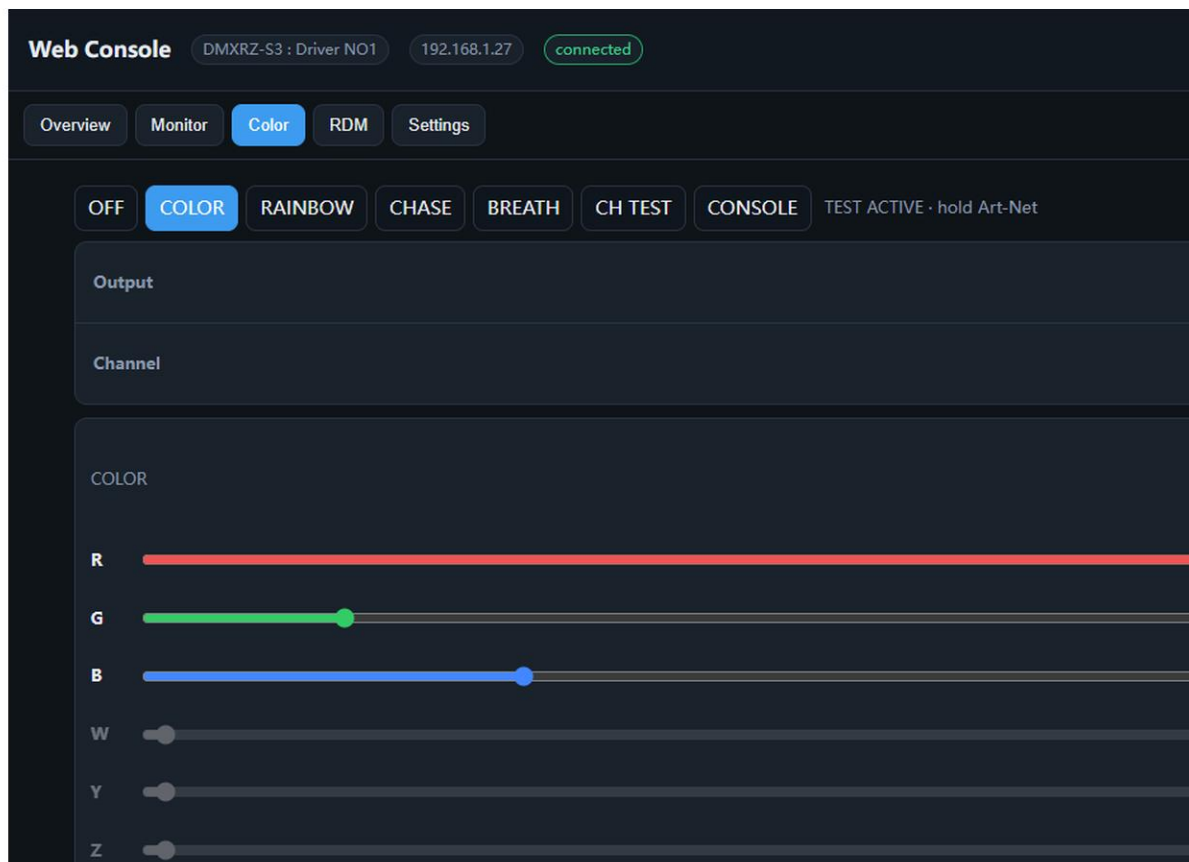

COLOR

Run a color test

- OUTPUT** DMX512, RZ Code, or DMX + RZ. This is the same output target as Settings.
- CHANNEL** How many slots make one pixel. Factory RGB uses three: channels 1-3 are the first pixel. Groups are R, RG, RGB, RGBW, and RGBWYZ.
- MODES** COLOR, RAINBOW, CHASE, BREATH, and CH TEST. Any mode other than OFF holds Art-Net until you choose OFF or Stop color.
- SLIDERS** COLOR shows R, G, and B. W, Y, and Z appear when the group includes them. Changes apply immediately.

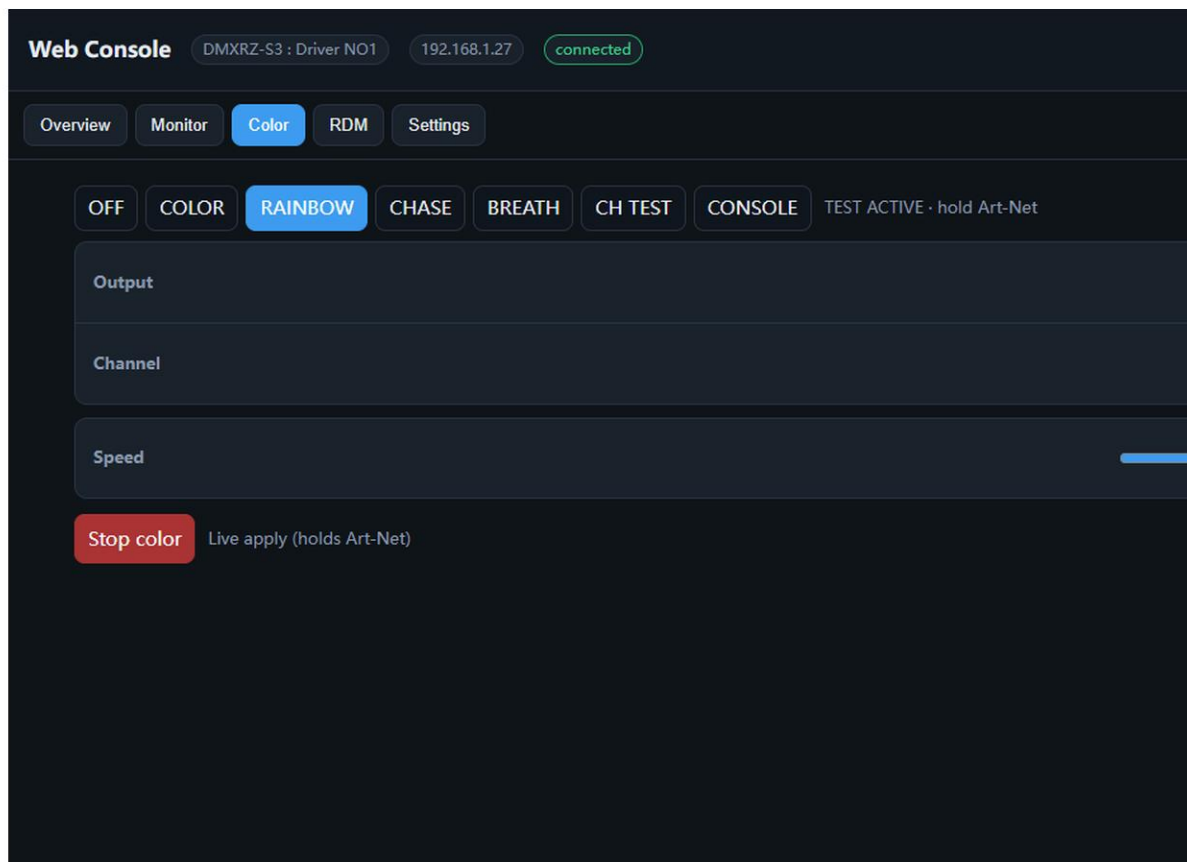

SPEED

Rainbow, chase, and breath

SPEED


RAINBOW, CHASE, and BREATH share this speed control. 1 is slow. 10 is fast. The pattern starts as soon as you choose the mode.

HOLD

TEST ACTIVE means Art-Net is held. The fixtures follow the pattern, not an external console.

STOP

Stop color, or OFF, releases the hold. The unit's color test screen uses the same speed control.

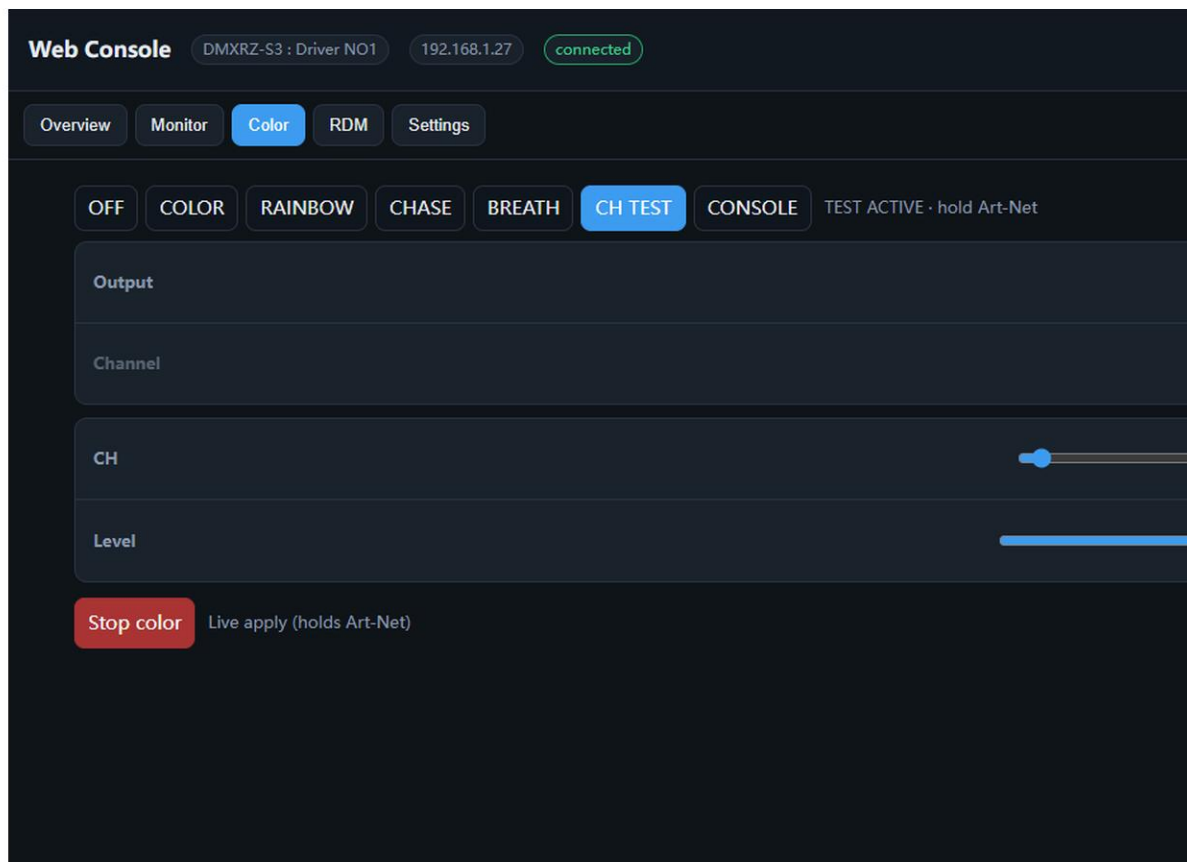

CH TEST

One channel at a time

- ONE** CH is the DMX address, from 1 to 512. Level is 0 to 255. Only that channel moves.
- USE** Use it to find one dimmer, one relay, or one color slot without lighting the rest of the rig.
- HOLD** This mode holds Art-Net until you choose OFF or Stop color. Channel grouping is not used here.

Web Console

DMXRZ-S3 : Driver NO1

192.168.1.27

connected

Overview

Monitor

Color

RDM

Settings

OFF

COLOR

RAINBOW

CHASE

BREATH

CH TEST

CONSOLE

TEST ACTIVE · hold Art-Net

Output

Channel

Clear all

Click a cell: 0–255 slider, type, or +/-

1	2	3	4	5	6	7	8	9	10	11
255	40	80	0	0	0	0	0	0	200	120
14	15	16	17	18	19	20	21	22	23	24
0	0	0	0	0	0	90	0	0	0	0
27	28	29	30	31	32	33	34	35	36	37
0	0	0	0	0	0	0	0	0	0	0
40	41	42	43	44	45	46	47	48	49	50
0	0	0	0	0	0	0	0	0	0	0
53	54	55	56	57	58	59	60	61	62	63

CONSOLE


Edit all 512 slots

- GRID

CONSOLE is the full 512-slot editor. Click a cell for a slider, a typed number, or plus and minus.
- CLEAR

Clear all sets every slot to 0. The small screen does not edit all 512 slots. This page does.
- HOLD

While CONSOLE is selected, the test holds Art-Net. Choose OFF, or Stop color, before an external console should drive the port again.

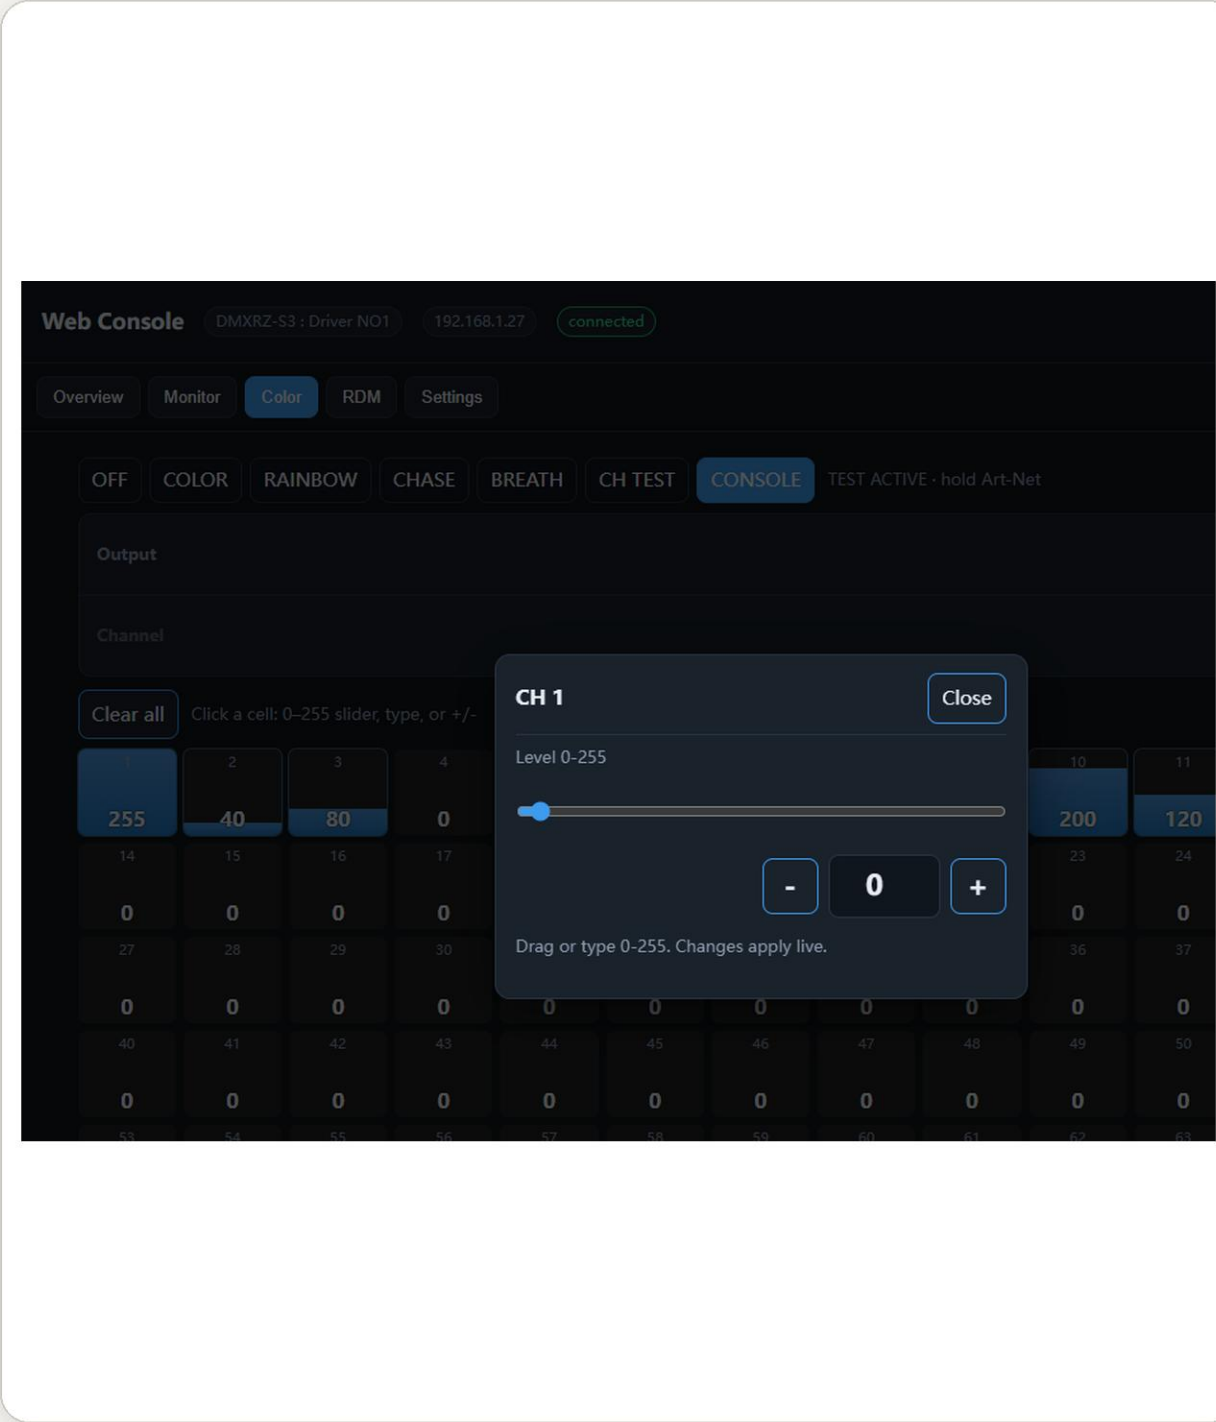

EDITOR

Set one channel

- OPEN** On Monitor or CONSOLE, click a cell. This editor opens for that address. The title is the channel number.
- SET** Drag the slider, type a number, or use + and -. The lights follow. Close, or press Esc, leaves the editor.
- RANGE** The value is 0 to 255. The cell behind the editor updates with it. Clear all, on the CONSOLE page, sets every cell to 0.


The screenshot shows the 'Web Console' interface for 'DMXRZ-S3 : Driver NO1' at IP '192.168.1.27', which is 'connected'. The 'RDM' tab is selected. Below the navigation bar, there are buttons for 'List', 'Device', 'Sensors', and 'Driver Info'. The 'List' button is active. A 'Scan' button is also present with the text 'Click a row to open device'. A dropdown menu shows 'Device: FOH Left · 12ab:00560000' and a green status 'done · 2'. Below this is a table with the following data:

#	UID	Label	Addr	Sens
1	12ab:00560000	FOH Left	101	2
2	12ac:00560111	Wash A	102	1

RDM

Find and edit fixtures

- SCAN** Scan searches the DMX line. Click a row to open that fixture. The names and addresses on this picture are examples.
- DEVICE** Click a row to open that fixture. The next pages are the device page, its sensors, and its driver info.
- PORT** RDM needs the output target to include DMX512. The DMX port is shared with Art-Net and color test while this page is open.

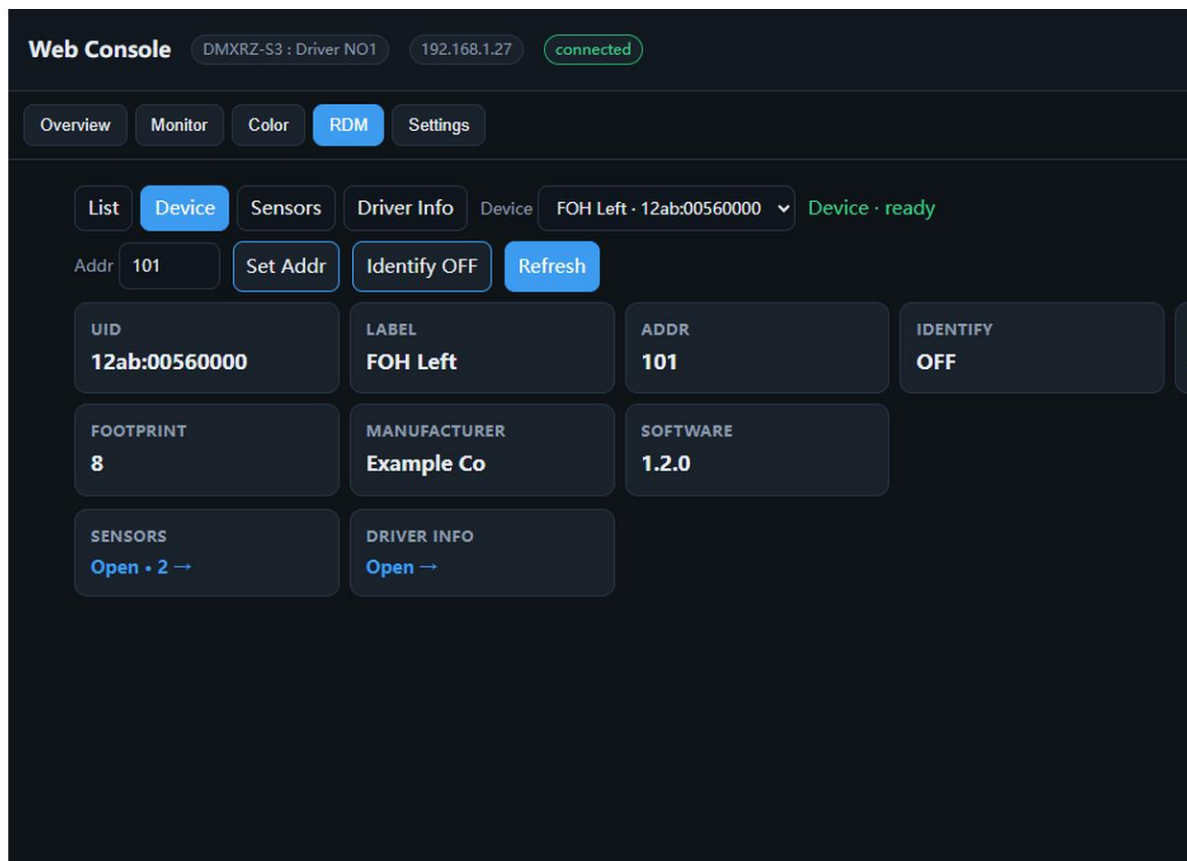

FIXTURE

One discovered fixture

- OPEN** This page is one fixture from the list. The label, UID, and address here are examples.
- ADDR** Type a start address from 1 to 512 and press Set Addr. Identify ON makes that fixture flash. Refresh reads it again.
- DEEPER** Open Sensors when the fixture reports any. Open Driver Info for the manufacturer IDs, hours, and status.

Web Console

DMXRZ-S3 : Driver NO1

192.168.1.27

connected

Overview

Monitor

Color

RDM

Settings

List

Device

Sensors

Driver Info

Device

FOH Left · 12ab:00560000

Sensors · 2

Refresh sensors

☒ 2s poll

#	Name	Present	Lowest	Highest	Recc
1	LED Temp	38.0 C	21.0 C	46.0 C	46.0
2	Voltage	4.8 V	4.6 V	5.1 V	4.6 V

SENSORS


Live sensor values

- TABLE

Each row is one sensor. The columns are the present value, the lowest, the highest, and the recorded value.
- LIVE

2s poll reads them again every two seconds. Refresh sensors reads once now. Turn the poll off to hold the numbers.
- NEED


This page is available only when the fixture answered with at least one sensor.

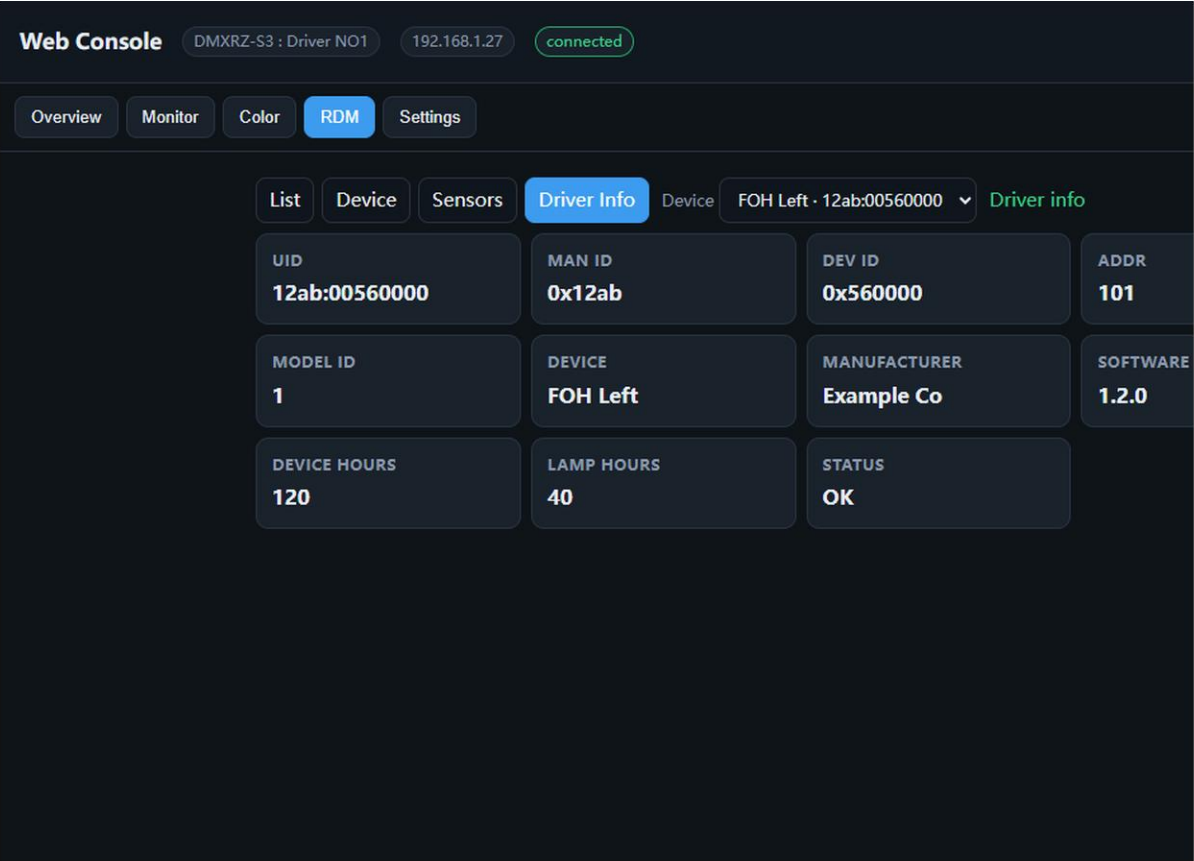

DRIVER

What the fixture reported


- IDS** UID, manufacturer ID, device ID, model, address, footprint, and software. These are the values the fixture sent.
- HOURS** Device hours and lamp hours appear when the fixture supports them. Status is the fixture's own status.
- READ** This page is read-only. Change the address, or Identify, on the Device page.

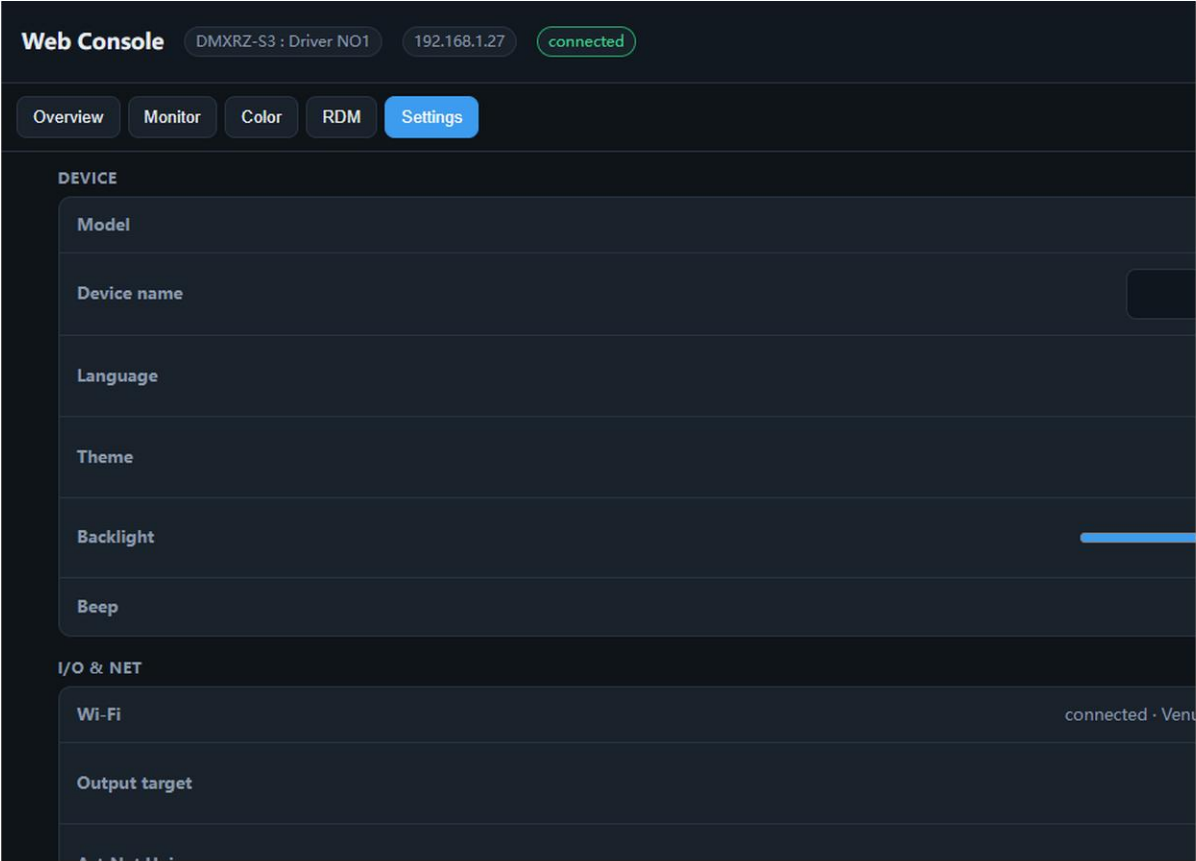

SETTINGS

Name, screen, and ports

- DEVICE** Model, device name, language, theme, backlight, and beep. The name is ASCII only: A-Z, 0-9, space, and . _ - . The header shows Model : Name.
- WIFI** Wi-Fi is joined on the controller, under Settings. This page shows the network. It does not enter the password.
- PORTS** Output target, Art-Net universe, RDM, RZ, RZ wire, and RZ pixels. Universe 1-4 on this page is Art-Net universe 0-3. Factory output is DMX512, wire is CLK+DATA, and the pixel count is 128.
- SAVE** Changes save immediately and stay in step with the screen on the unit.

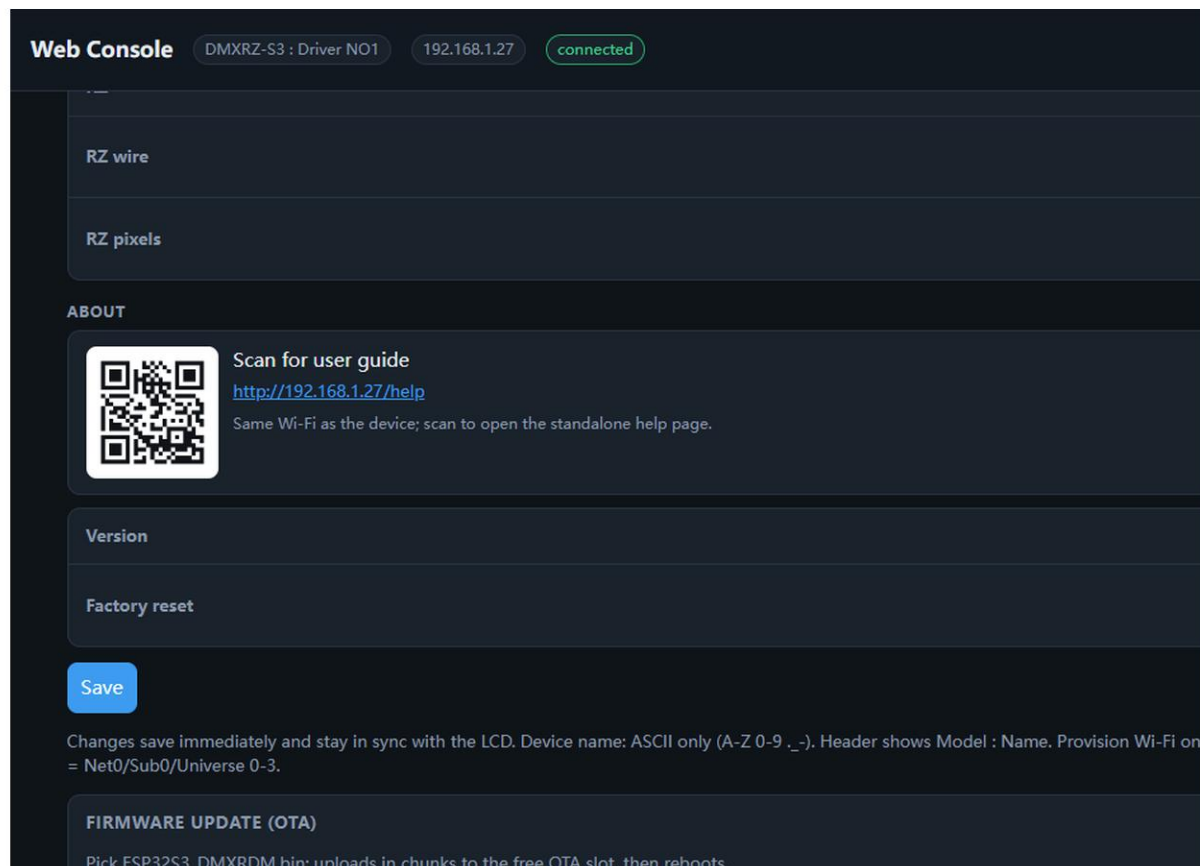

UPDATE

Guide, reset, and firmware

- GUIDE** Scan for user guide opens `http://<ip>/help`. That code is not the Web Console code under Tools. The console code opens the page in the pictures above.
- RESET** Factory reset restores the device defaults. It leaves the saved Wi-Fi network in place. Forget, on the controller Wi-Fi screen, clears that.
- FILE** Firmware update takes the signed file `ESP32S3_DMXRDM.bin`. It uploads to the spare slot. The unit reboots when the file is in place.
- ABORT** Abort stops an upload that has not finished. A failed update leaves the unit on the firmware it was already running.
- JSON** Advanced diagnostics opens the live status as text. It is for support. Everyday setup does not need it.