


PETROPHYSICS SOFTWARE WORKFLOW

TABLE OF CONTENTS


- ❑ IMPORT LOGS/DATASETS
- ❑ QC LOGS
- ❑ PLOT LOGS
- ❑ HCDP
- ❑ NEW ZONATION
- ❑ VSHALE ESTIMATION
- ❑ POROSITY ESTIMATION
- ❑ PERMEABILITY ESTIMATION
- ❑ SATURATION ESTIMATION
- ❑ SATURATION HEIGHT MODELING
- ❑ SUMMARIES
- ❑ EXPORT

IMPORT LOGS/DATASETS

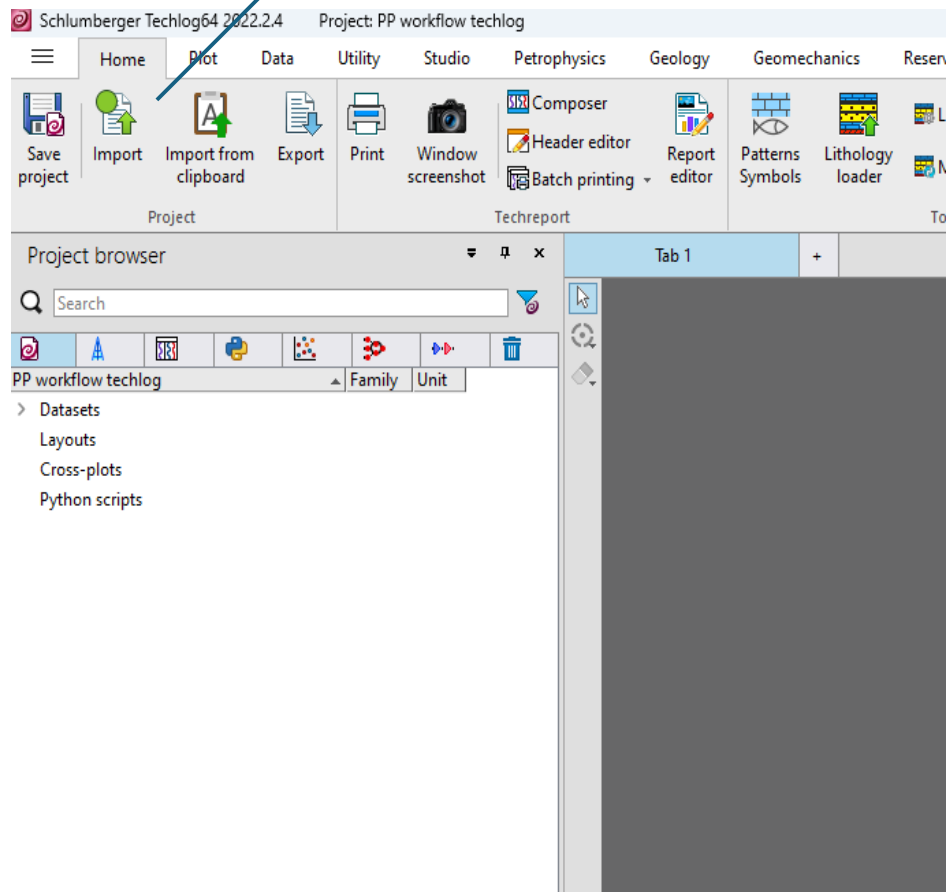

ON THE HOME TAB,
CLICK ON IMPORT

THIS OPENS THE
IMPORT WINDOW

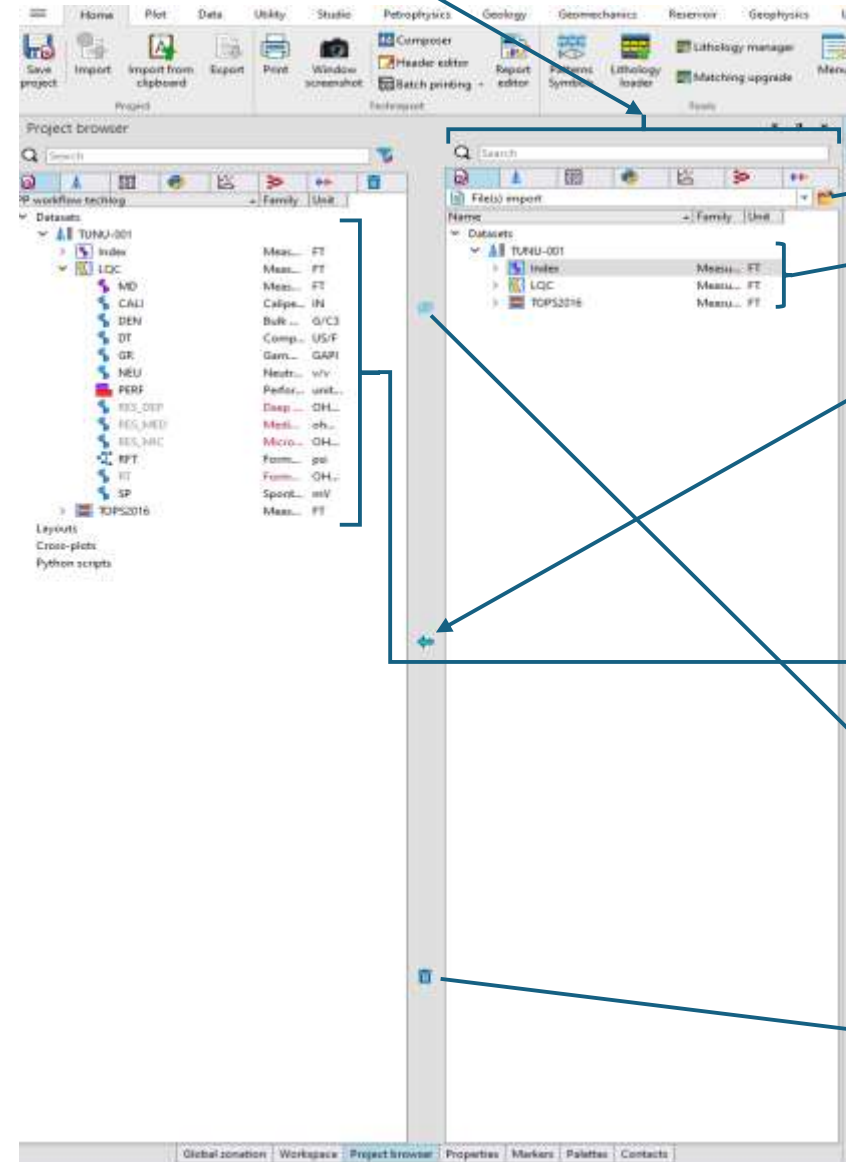

BROWSE AND
SELECT LOGS
FROM FILES


DATASET
LOADS UP LIKE
SO. SELECT
THE DATASETS
AND CLICK ON
THE "ARROW"
TO IMPORT TO
PROJECT

DATASET
LOADS UP LIKE SO ON
THE PROJECT
BROWSER

CLICK ON THE
"EYE-LIKE" ICON
TO CLOSE THE
IMPORT WINDOW
WHEN DONE
IMPORTING


TO DELETE A
DATASET, SELECT
ON IT AND CLICK
ON THE "TRASH"
ICON

QC LOGS

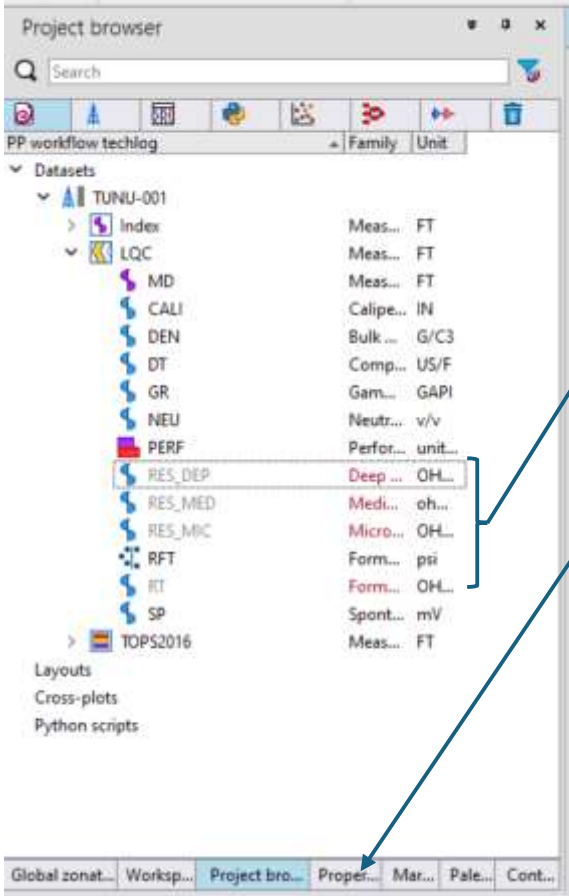


LOGS WITH SUCH APPEARANCE MEAN THE PARAMETERS WERE NOT CORRECTLY LOADED



SELECT SUCH LOGS AND CLICK ON THE PROPERTIES PANE

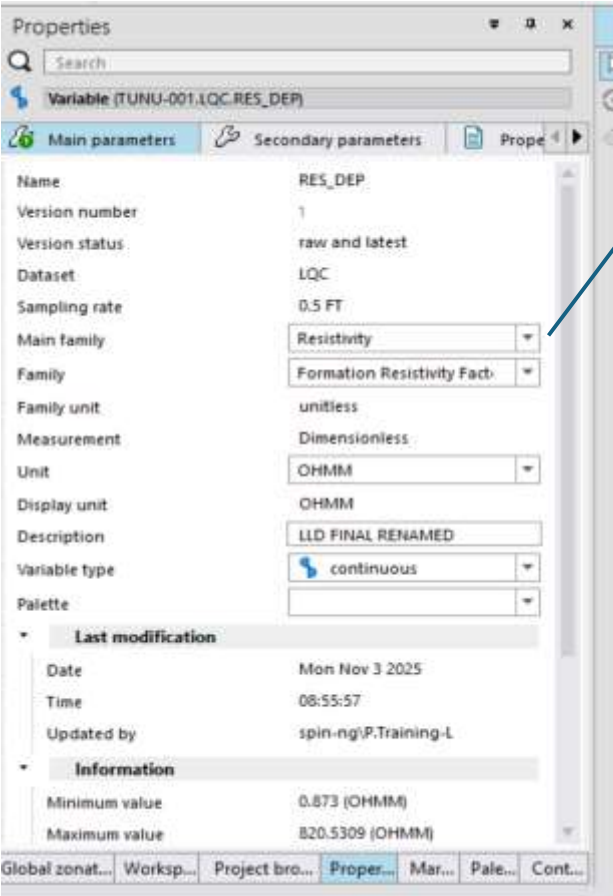

ON THE PROPERTIES WINDOW, SELECT THE APPROPRIATE FAMILIES FOR EACH LOG AND THEY SHOULD DISPLAY PROPERLY ON THE PROJECT BROWSER

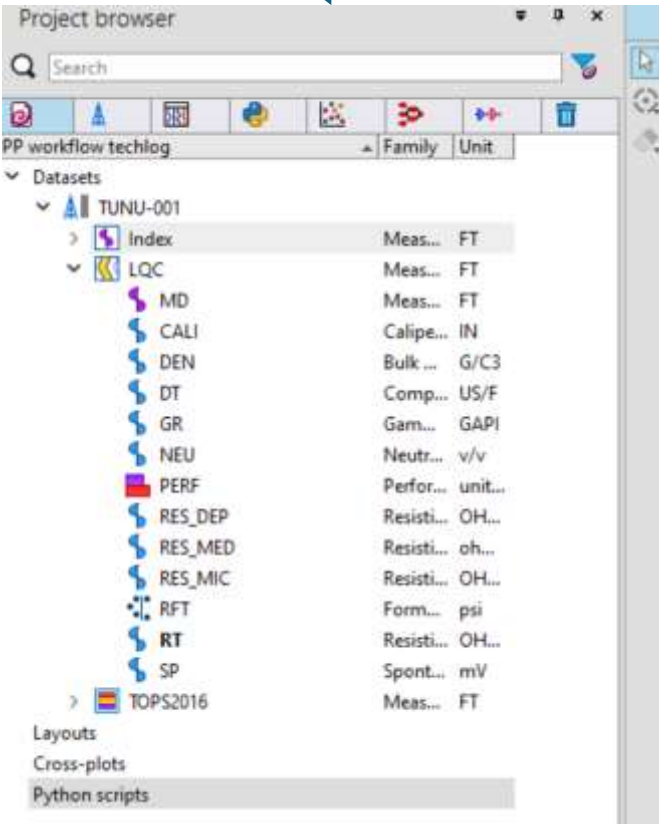


PLOT LOGS

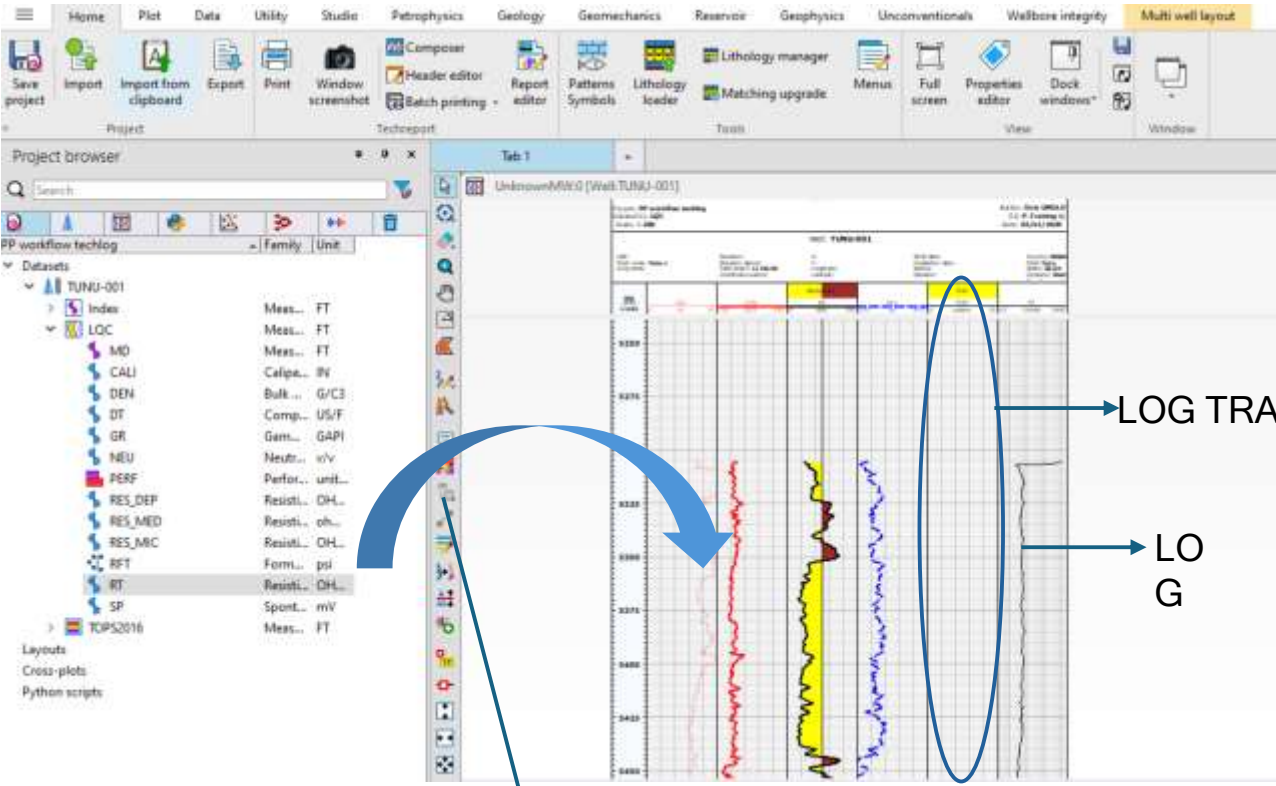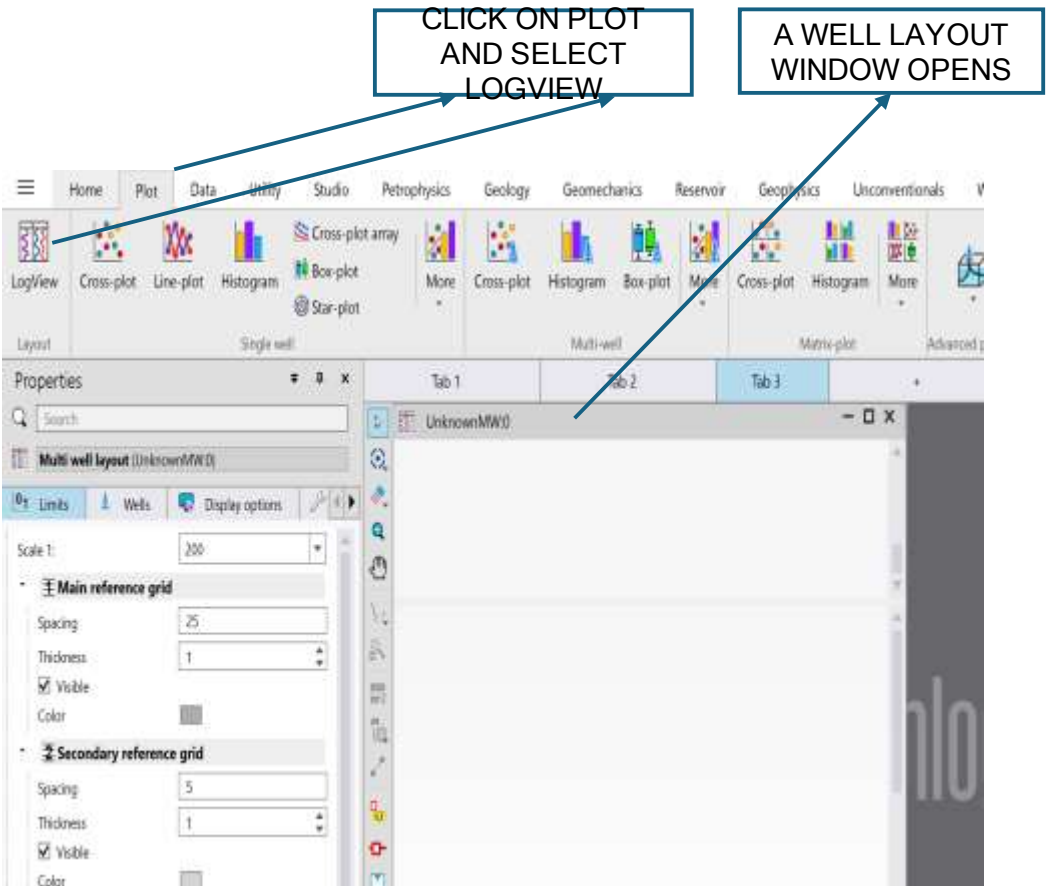

DRAG AND DROP THE LOGS IN THE WELL LAYOUT WINDOW

PLOT LOGS (2)

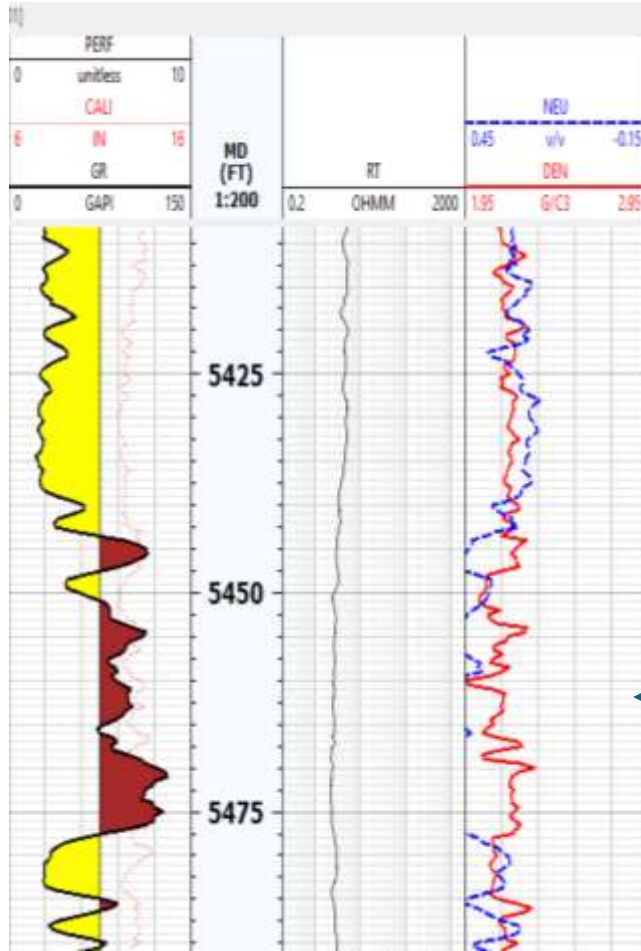


CLICK ON LOGS AND USE THE DIRECTIONS BOTTOM TO MOVE LOGS UNTO THEIR DESIRED TRACKS.

CLICK ON LOG TRACKS AND USE THE DIRECTIONS BOTTOM TO MOVE LOGS UNTO THEIR DESIRED LOCATION TO GET A LOG VIEW LIKE SO.

SELECT ON THE MD LOG AND COPY AND PASTE. THIS CREATES A NEW MD TRACK RIGHT NEXT TO IT.

CLICK ON THE NEW MD TRACK GO TO THE PROPERTIES WINDOW TO CHANGE THE REFERENCE DEPTH TO TRUE VERTICAL DEPTH SUBSEA



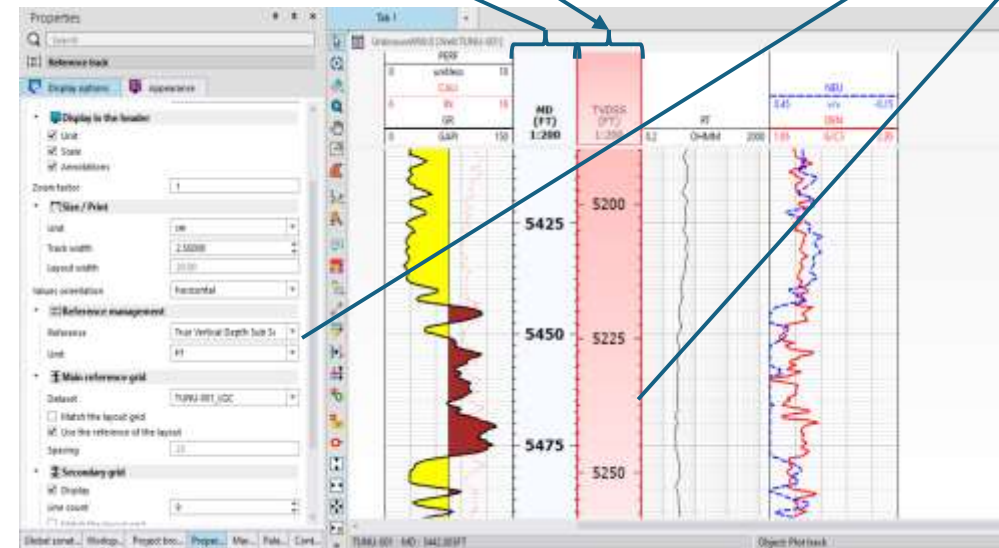


PLOT LOGS (3)

RIGHT CLICK AND SELECT
THIS ICON TO CREATE A
ZONATION TRACK

CLICK ON THE GLOBAL
ZONATION WINDOW AND
SELECT THE RESERVOIR
OF INTEREST

WELL LOG
LAYOUT
DISPLAYS LIKE
SO

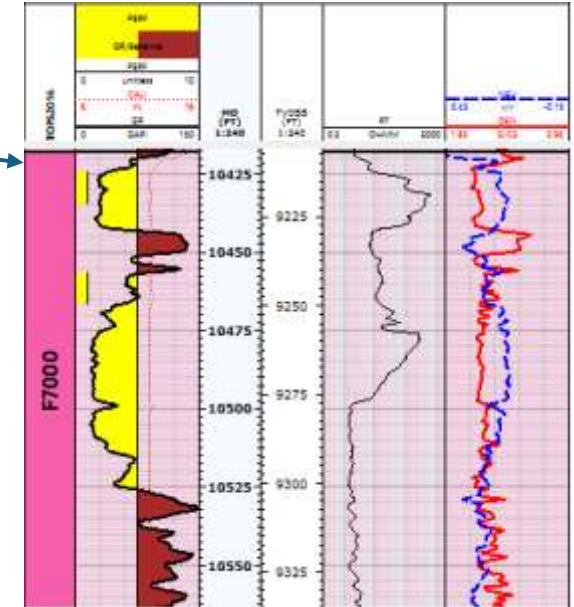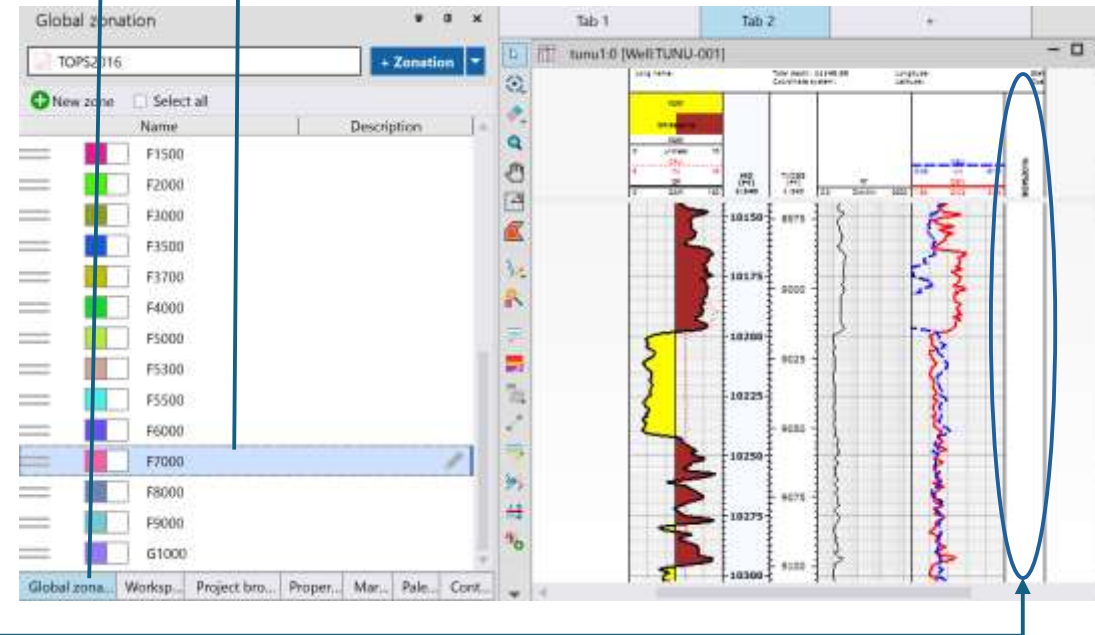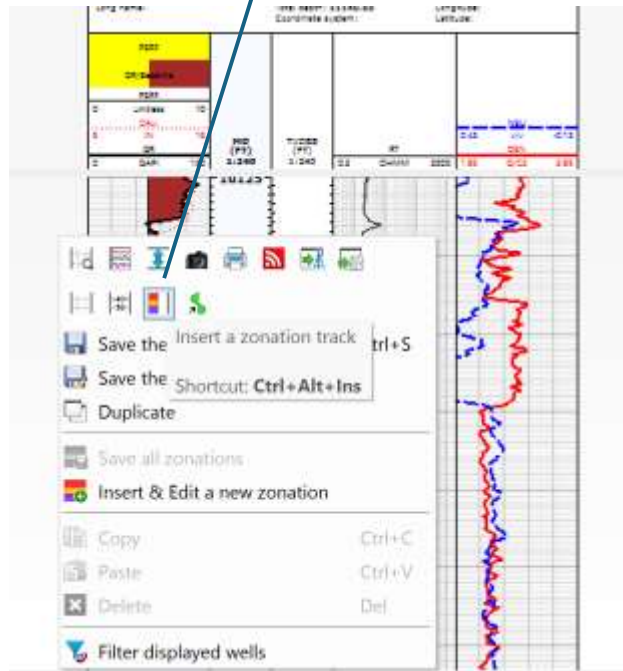

PLOT LOGS (4)

AFTER IDENTIFYING HYDROCARBON ZONES AND WATER ZONES, CLICK ON THIS SELECTION ICON TO HIGHLIGHT THE ZONES ON THE LOGS


CLICK ON DATA AND SELECT DATA EDITOR. A DATA EDITOR WINDOW SHOWS UP.

DRAG AND DROP ANY OF THE LQC DATASET IN THE DATA EDITOR WINDOW

ON THE FORMULA BAR, INPUT "FLD=FLD" AND PRESS ENTER TO CREATE A NEW LOG COLUMN FOR FLUID DISTRIBUTION

THE HIGHLIGHTED SECTION SHOWS UP ON THE DATA EDITOR WINDOW. INPUT THE FLUID CODES BASED ON WATER, OIL OR GAS. (1 FOR WATER, 2 FOR OIL AND 3 FOR GAS)


CLICK ON DATA EDITOR AND CLICK ON SAVE ALL MODIFIED VARIABLES TO SAVE THE FLD LOG

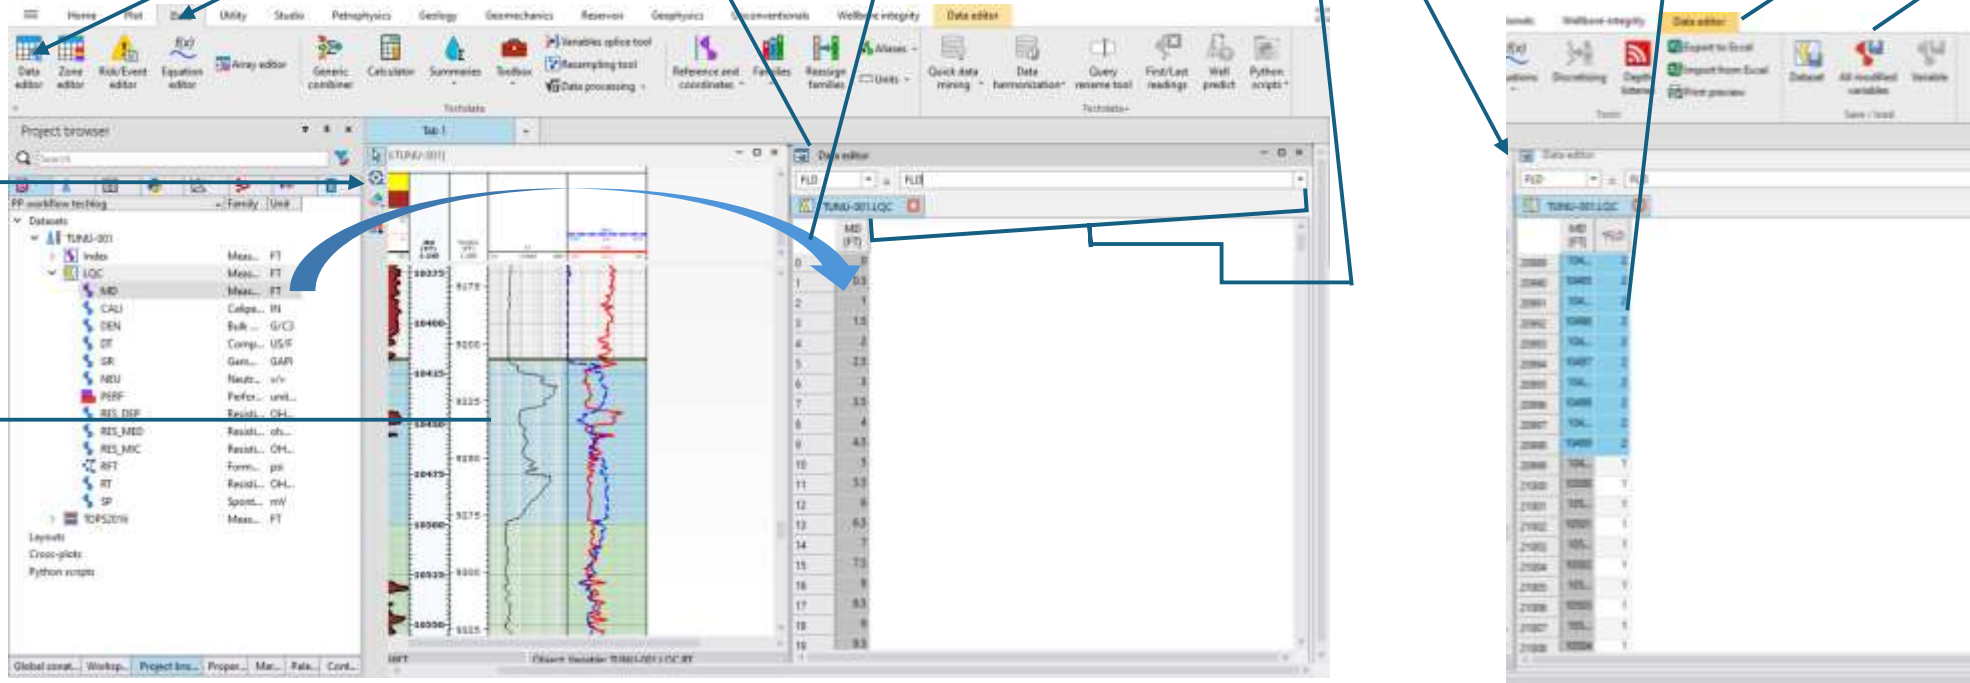

PLOT LOGS (5)

FLD LOG SHOWS UP ON THE PROJECT BROWSER BUT PARAMETERS ARE NOT CORRECT (HENCE, ITS APPEARANCE DIFFERENT FROM THE OTHER LOGS). SELECT THE FLD LOG AND CLICK ON PROPERTIES. ON THE PROPERTIES WINDOW, SELECT THE APPROPRIATE UNIT FOR THE LOG (IN THIS CASE, "unitless")

DRAG AND DROP THE FLD LOG
ON THE WELL LOG LAYOUT
AND YOU SHOULD HAVE A
LAYOUT LIKE THIS.

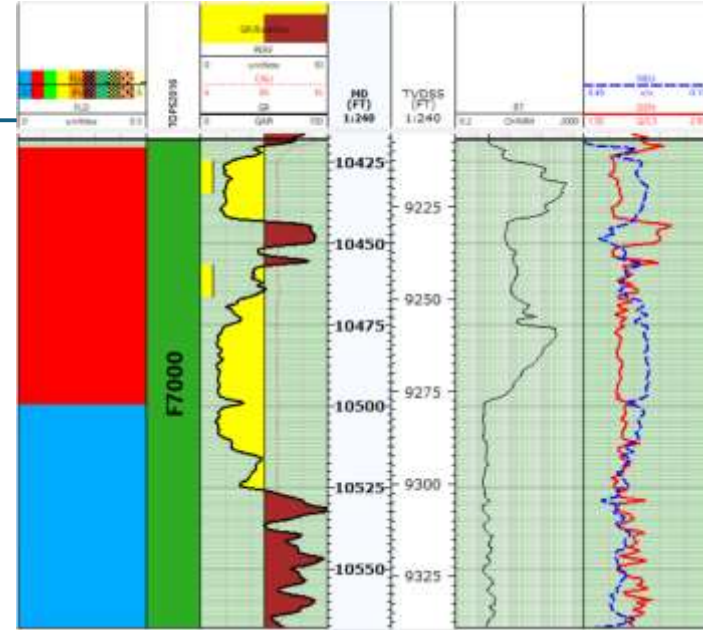

CLICK ON MULTI WELL
LAYOUT AND CLICK ON SAVE
TO SAVE THE WELL LOG
LAYOUT THAT HAS BEEN
CREATED

Project browser

Search

PP workflow technol Family Unit

Datasets

- TUNU-001
 - Index
 - LQC
 - MD
 - CALI
 - DEN
 - DT
 - FLD
 - GR
 - NEU
 - PERF
 - RES_DEP
 - RES_MED
 - RES_MIC
 - RFT
 - RT
 - SP
- TOPS2016

Meas... FT

Meas... FT

Meas... FT

Calipe... IN

Bulk... G/C3

Comp... US/F

Fluid...

Gam... GAPI

Neutr... v/v

Perfor... unit...

Resisti... OH...

Resisti... oh...

Resisti... OH...

Resisti... OH...

Form... psi

Resisti... OH...

Spont... mV

Meas... FT

Layouts

Cross-plots

Python scripts

Properties

Search

Variable (TURNU-CP1.LQC.FLD)

Main parameters Secondary parameters Properties

Name	FLD
Version number	1
Version status	raw and latest
Dataset	LQC
Sampling rate	0.5 PT
Main family	Flag
Family	Fluid Code
Family variable type	blocked curve
Family unit	unitless
Measurement	Dimensionless
Unit	unitless
Display unit	unitless
Description	
Variable type	blocked curve
Palette	

Last modification

Date	Mon Nov 3 2025
Time	09:24:49
Updated by	spin-ng/P.Training-L

Information


Minimum value	1 (unitless)
---------------	--------------

Global zonat... Worksp... Project bro... **Proper...** Mar... Pale... Cont...


The screenshot shows the Petrophysics software interface. The top menu bar includes Home, Plot, Data, Utility, Studio, Petrophysics, Geology, Geomechanics, Reservoir, Geophysics, Unconventional, Wellbore integrity, and Multi well layout. The 'Multi well layout' menu is highlighted, and a context menu is open, showing options: Save... (Ctrl+S), Save the layout as..., Save as a template... (Ctrl+Shift+S), and Save as layout of TUBO-201. The main workspace displays a well schematic with a wellbore and a wellhead.

HCDP

ANOTHER WELL LAYOUT CAN BE CREATED PUTTING THE RESISTIVITY LOG, GR LOG, PERF LOG AND FLD LOG ON THE SAME TRACK NEXT TO A TVDSS LOG TO HAVE A SIMPLE VIEW OF FLUID DISTRIBUTION IN THE WELL

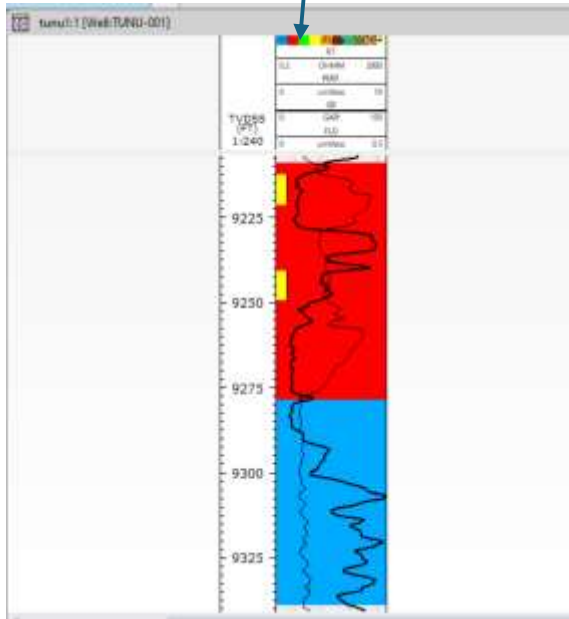

STEPS FROM SLIDE 4 THROUGH 8 CAN BE REPEATED FOR OTHER WELLS. AND THE FLUID DISTRIBUTION LOGS CAN ALL BE PLACED ON THE SAME WELL LOG LAYOUT TO HAVE A HYDROCARBON DISTRIBUTION PLOT

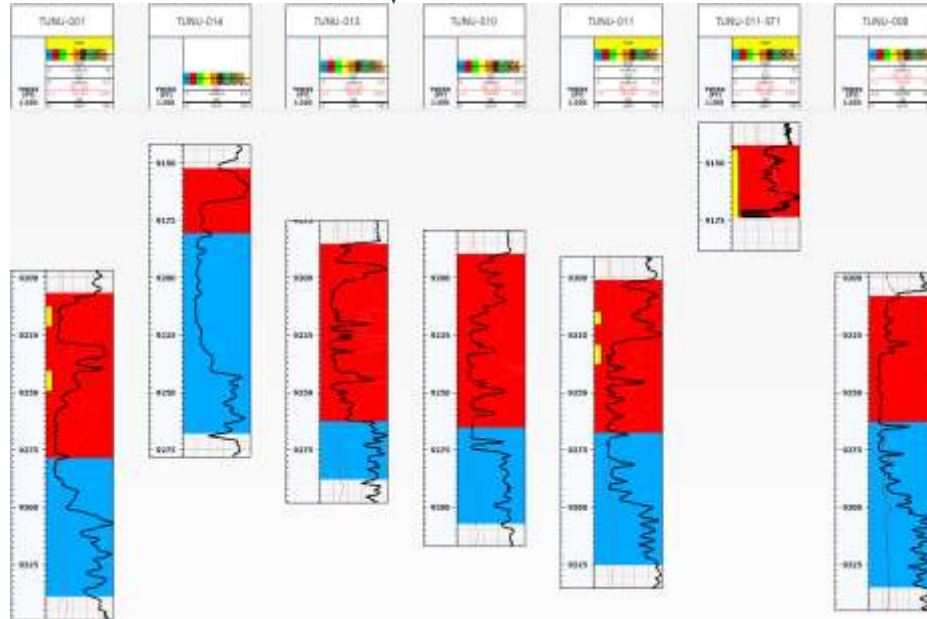

*NOTE: TO DELETE A LOG, TRACK OR BASELINE IN WELL LOG WINDOW, SIMPLY CLICK ON IT AND PRESS DELETE ON YOUR KEYBOARD

NEW ZONATION

RIGHT CLICK ON THE WELL LOG LAYOUT AND CLICK ON THIS OPTION TO CREATE A NEW ZONATION

USE THE CURSOR TO SELECT AND HIGHLIGHT NEW ZONES BASED ON FLUID FILL AND TOP AND BOTTOM SHALE. CLICK ON NEW ZONE AFTER HIGHLIGHTING EACH ZONE

CLICK ON THIS ICON TO EDIT THE ZONE NAME AND COLOUR

Edit zone properties



Name: F7000_OIL

Color:

Pattern:

Description:

OK Cancel

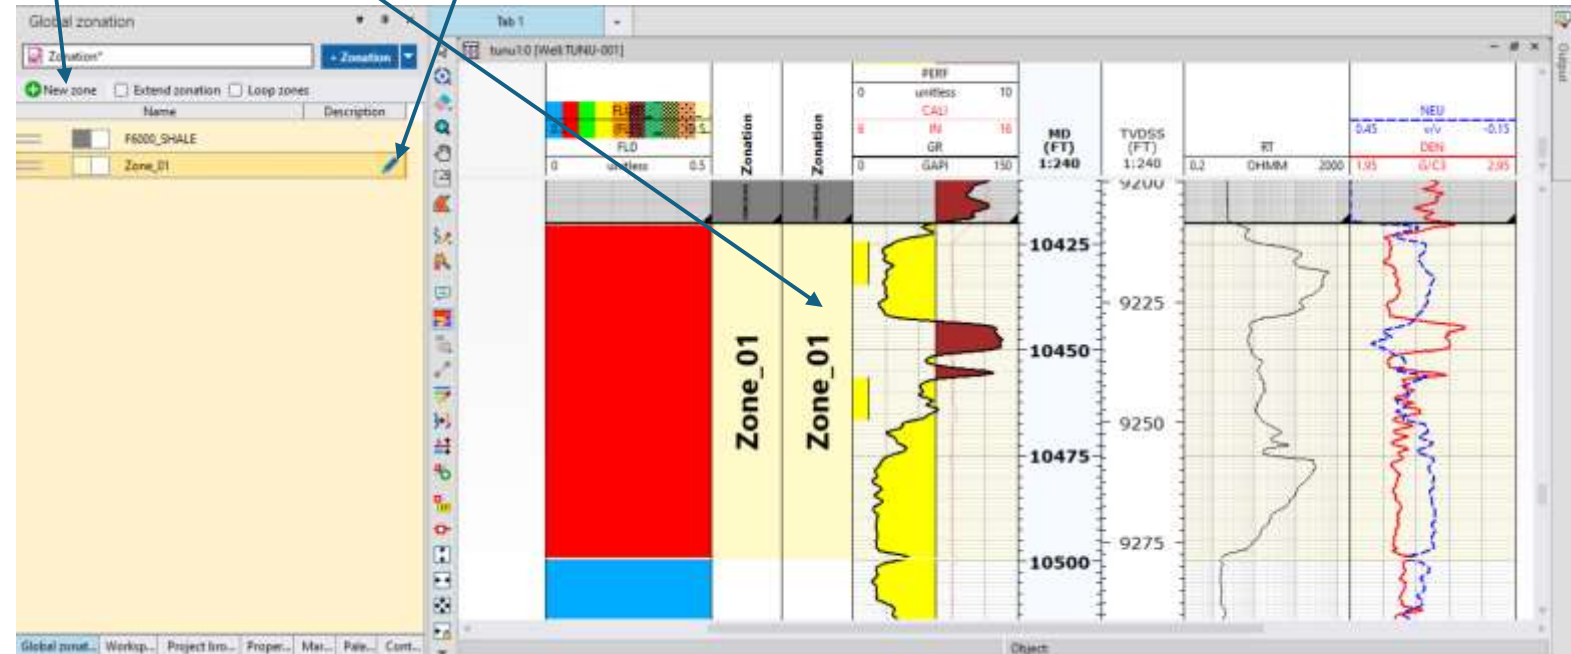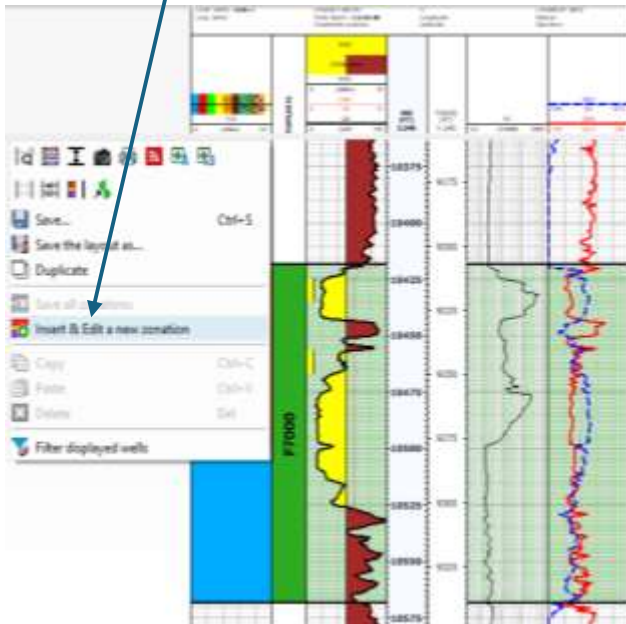


NEW ZONATION (2)

CLICK ON MULTI WELL LAYOUT AND CLICK ON SAVE THE ZONATION TO SAVE THE NEW ZONATION JUST CREATED




INPUT A NAME FOR THE ZONATION AND CLICK OKAY

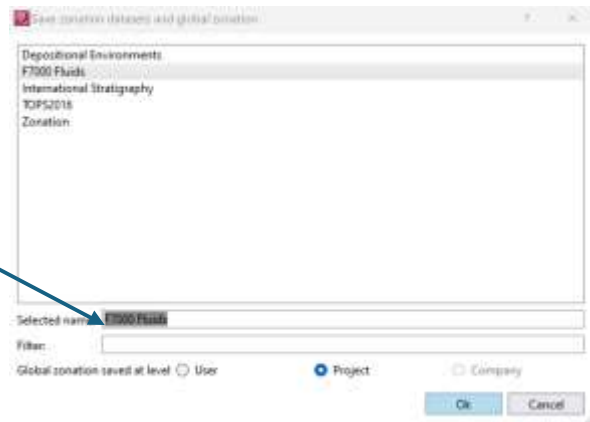

TO QC THE NEW ZONATION CREATED, DRAG AND DROP THE NEW ZONATION FROM THE PROJECT BROWSER TO DATA EDITOR



SELECT AND RIGHT CLICK ON THE ZONATIONS AND A ROW BETWEEN ALL ZONES

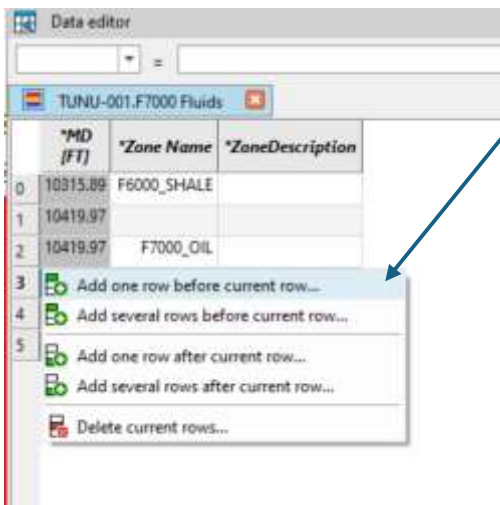


ON THE MD COLUMN, INPUT THE DEPTH VALUE FOR NEXT ROW ON EACH ROWS IN BETWEEN ZONES CREATED. SAVE THE MODIFIED VARIABLES AFTER THIS STEP


TUNU-001.F7000 Fluids		
*MD [FT]	*Zone Name	*ZoneDescription
0 10315.89	F6000_SHALE	
1 10419.97		
2 10419.97	F7000_OIL	
3 10499.28		
4 10499.28	F7000_WATER	
5 10568.36		
6 10568.36	F8000_SHALE	
7 10611.11		

VSHALE ESTIMATION


CLICK ON
PETROPHYSICS,
SELECT SHALE
VOLUME AND
NAVIGATE TO GAMMA
RAY

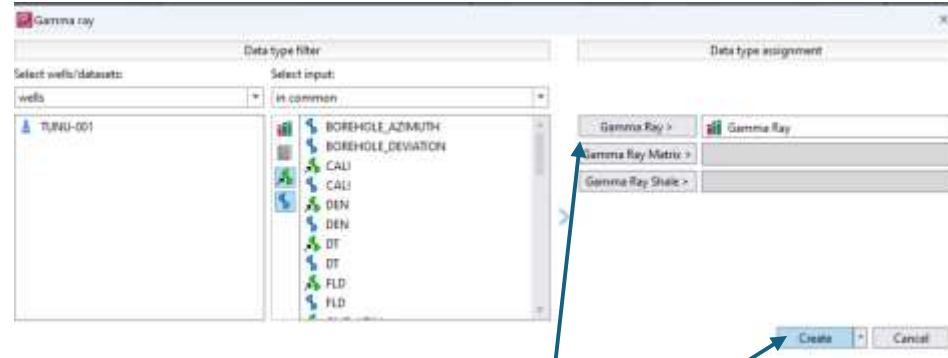

SELECT GAMMA RAY FROM
THE INPUT WINDOW AND
CLICK ON GAMMA RAY TO
INPUT THE LOG AND CLICK
ON CREATE

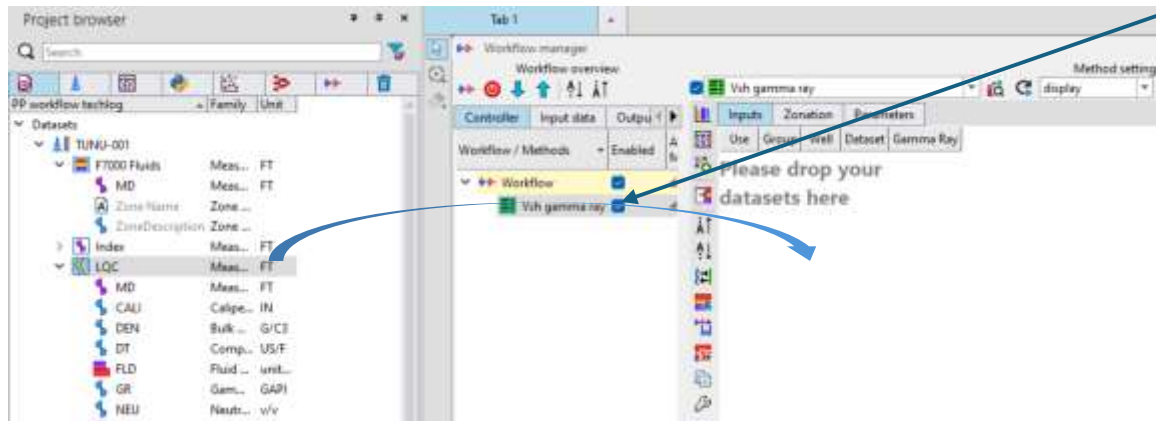

DRAG AND DROP
LQC

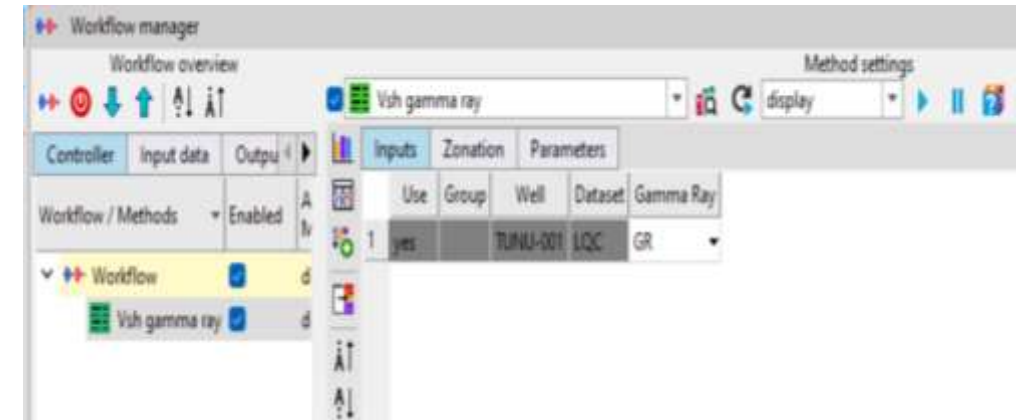

VSHALE ESTIMATION (2)

ON THE GLOBAL ZONATION WINDOW, SELECT THE NEWLY CREATED ZONATION AND SELECT ALL THE ZONES






CLICK ON THIS ICON TO INSERT THE SELECTED ZONES

CLICK PLAY TO RUN THE ESTIMATION

CLICK ON THIS ICON TO DISPLAY ENDPONTS ON THE GAMMA RAY LOG. THIS WAY THE END POINTS CAN BE MANUALLY DRAGGED AND PLACED AT THE PROPER VALUES ON THE GAMMA RAY LOG



RESULT SHOWING VSHALE

GO TO PARAMETERS

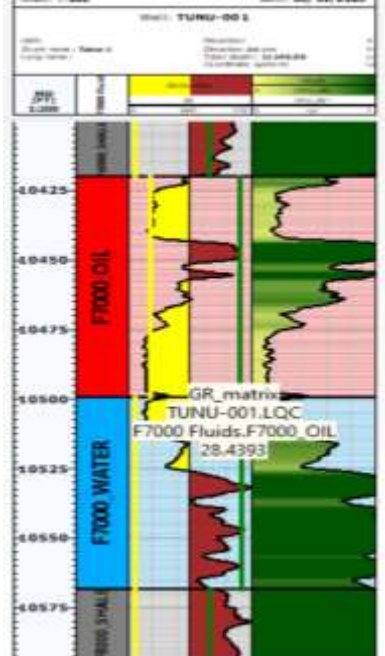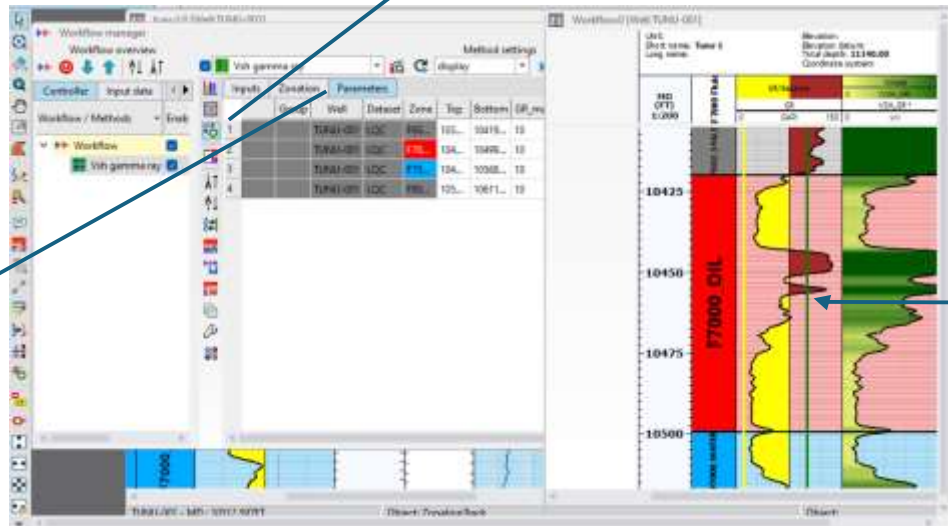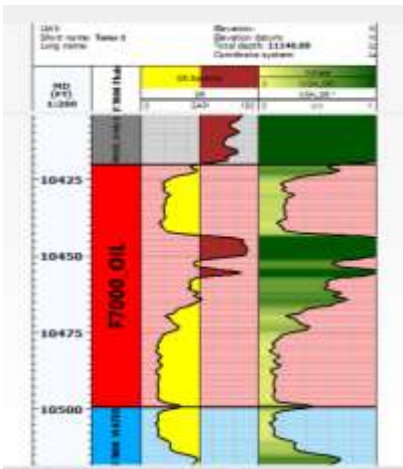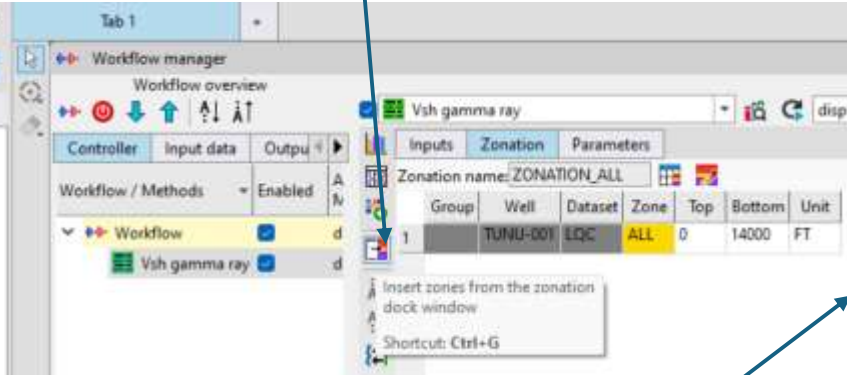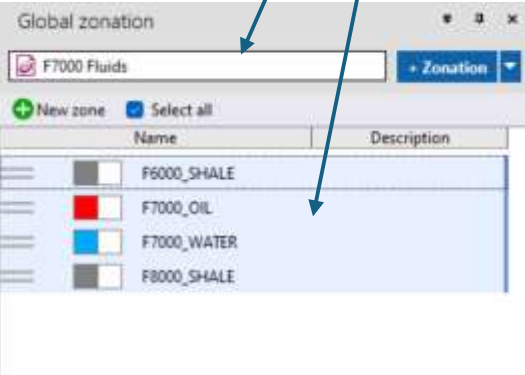

VSHALE ESTIMATION (3)

MAKE SURE
THE ENDPOINT
VALUES ARE
THE SAME FOR
ALL THE
ZONES

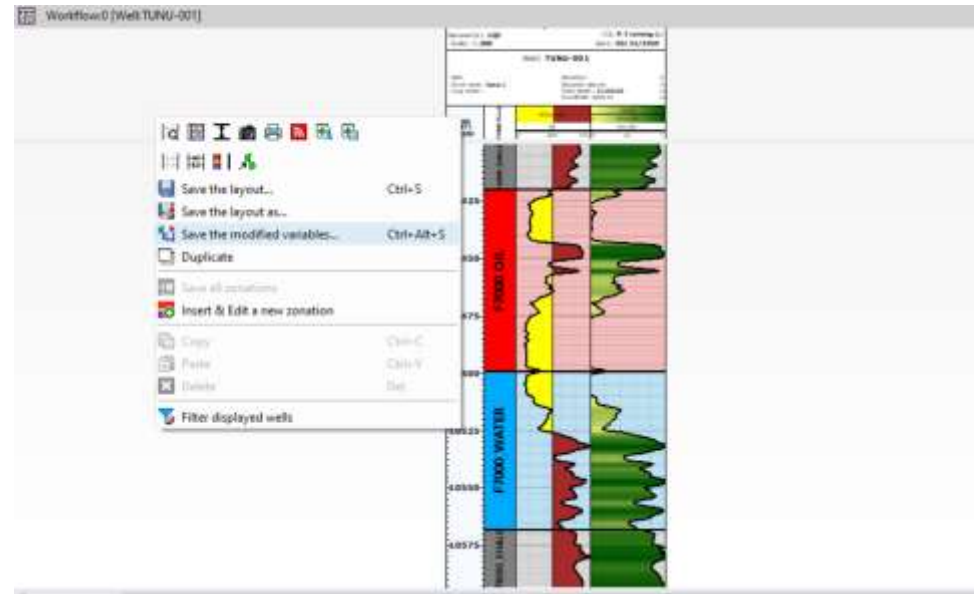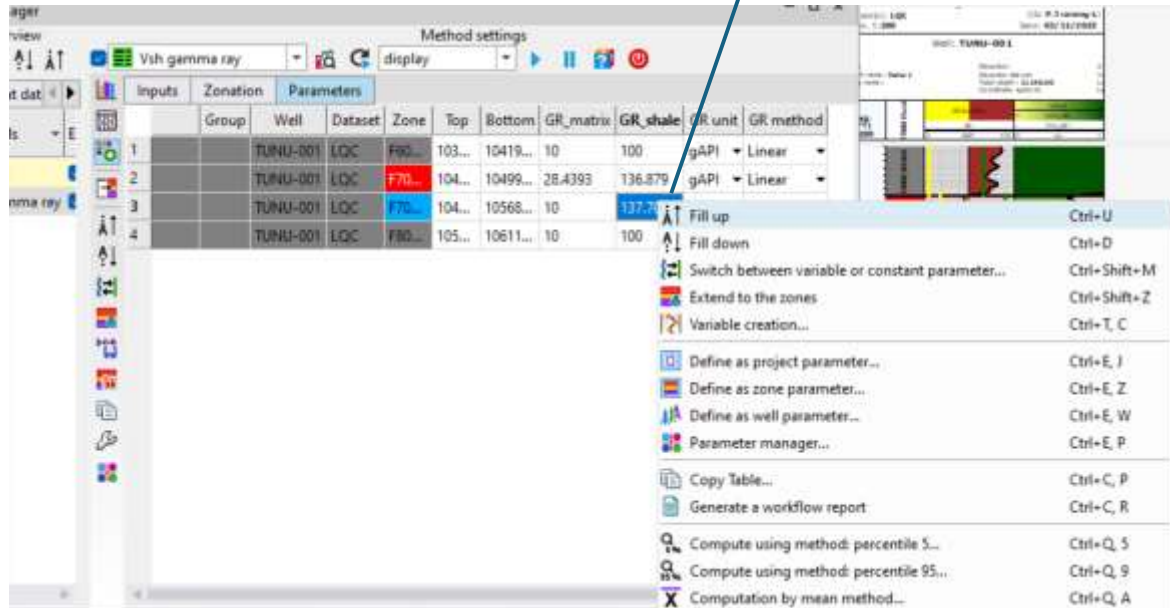

TO SAVE THE
VSHALE LOG, RIGHT
CLICK ON THE
LAYOUT AND SAVE
THE MODIFIED
VARIABLES



Variable save

Save the variable VSH_GR

Save options

- ☐ Save as new version of VSH_GR
- ☒ Save with suffix
- ☐ Overwrite the existing variable VSH_GR

Save extension:


OK Cancel

POROSITY [RFT]



ON OUR WELL LAYOUT, DRAG AND DROP RFT LOG AND TVDSS ON DATA EDITOR

DRAG AND DROP RFT LOG AND TVDSS ON DATA EDITOR

HIGHLIGHT THE OIL ZONE SO THE PRESSURE POINTS OF INTEREST SHOW UP ON THE DATA EDITOR

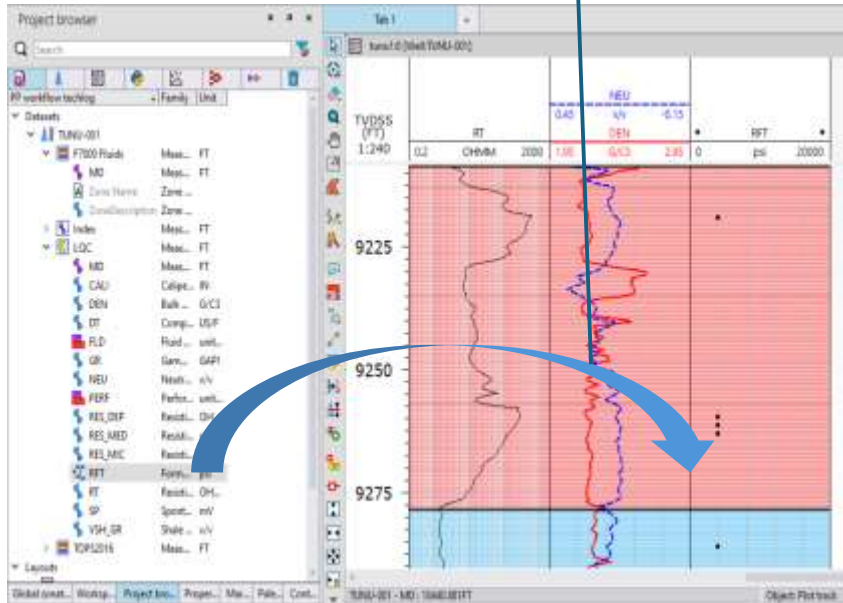

TRANSFER POINTS TO EXCEL AND PLOT. SLOPE OF EQUATION IS THE OIL GRADIENT

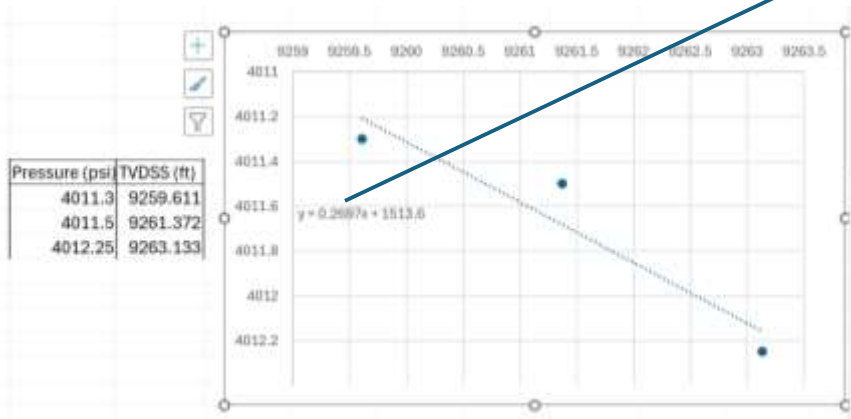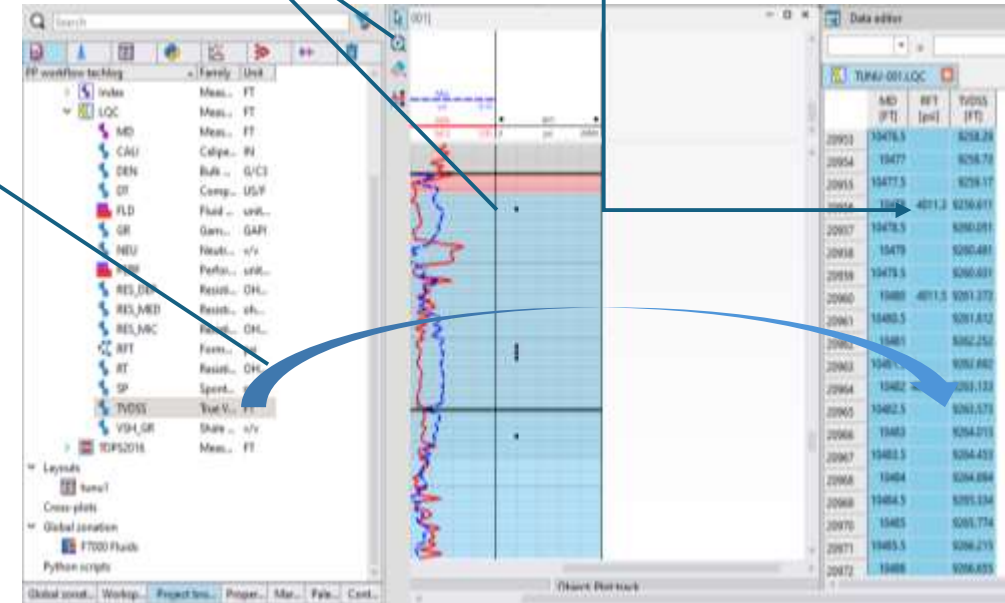

$$\rho_{OIL} = \frac{OIL\ GRADIENT}{WATER\ GRADIENT}$$

$$\rho_{FLUID} = \rho_{OIL} \times 0.5 + \rho_{WATER} \times 0.5$$

USING THE ABOVE EQUATIONS, THE DENSITY NEEDED TO ESTIMATE OUR POROSITY CAN BE CALCULATED. IN THIS CASE, IT WAS 0.8114g/cc


NOTE: WATER GRADIENT=0.433psi/ft, $\rho_{WATER} = 1g/cc$
INVASION FACTOR OF 50% WAS ASSUMED IN THE SECOND EQUATION HENCE THE 0.5 VALUE


POROSITY [RFT] (2)


ON THE PETROPHYSICS TAB, NAVIGATE AND SELECT DENSITY POROSITY

INSERT THE BULK DENSITY AND CLICK ON CREATE


INSERT ONLY THE WATER AND OIL ZONES. INPUT THE CALCULATED DENSITY AND LEAVE WATER DENSITY AS 1G/CC. RUN THE EVALUATION

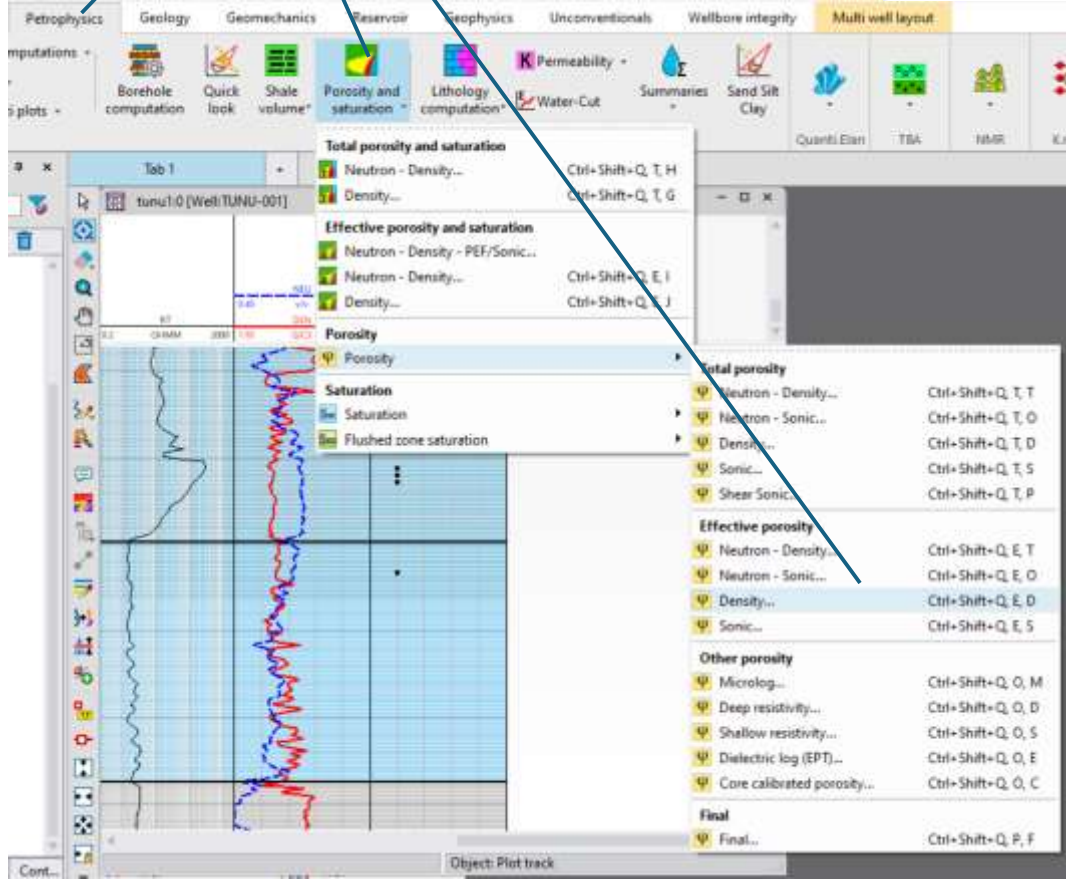

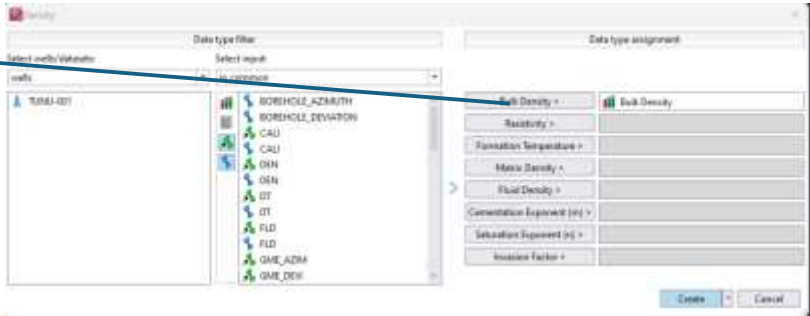

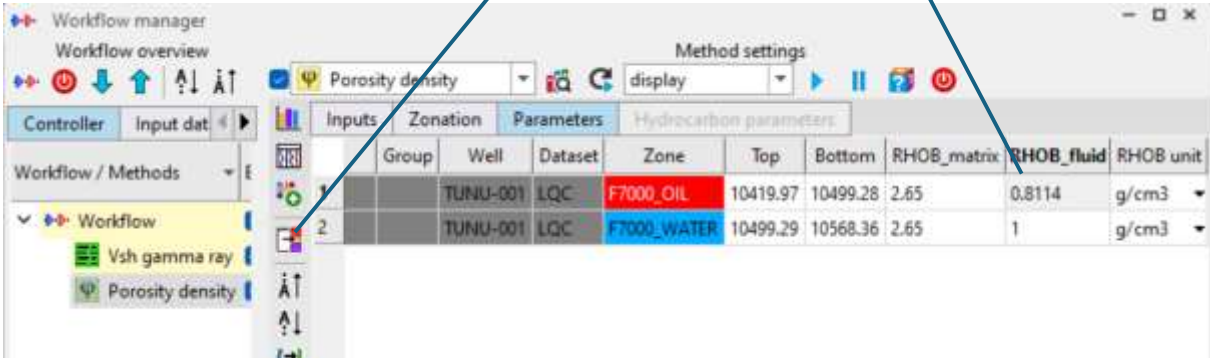


Group	Well	Dataset	Zone	Top	Bottom	RHOB_matrix	RHOB_fluid	RHOB unit
1	TUNU-001	LQC	F7000_OIL	10419.97	10499.28	2.65	0.8114	g/cm3
2	TUNU-001	LQC	F7000_WATER	10499.29	10568.36	2.65	1	g/cm3

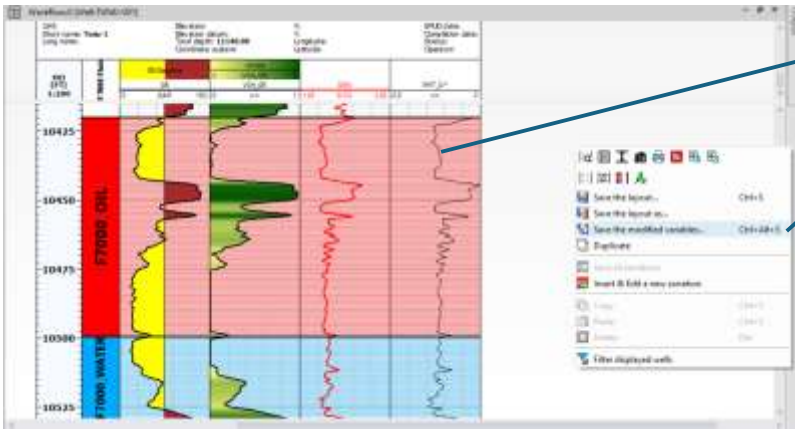


RESULT LOG DISPLAYED. SAVE THE MODIFIED VARIABLE (LOG)

POROSITY [QUICK LOOK]

ALTERNATIVELY, A QUICK LOOK EVALUATION METHOD CAN BE USED TO ESTIMATE POROSITY IN A CASE RFT LOG MAY NOT BE AVAILABLE. EVALUATE POROSITY FROM DENSITY JUST LIKE IN THE PREVIOUS SLIDE INSTEAD USING 1G/CC FOR THE FLUID DENSITY. INPUT THE FOLLOWING EQUATION IN DATA EDITOR AND PRESS ENTER. A POROSITY LOG FROM THE DENSITY POROSITY AND NEUTRON LOG WILL BE CREATED

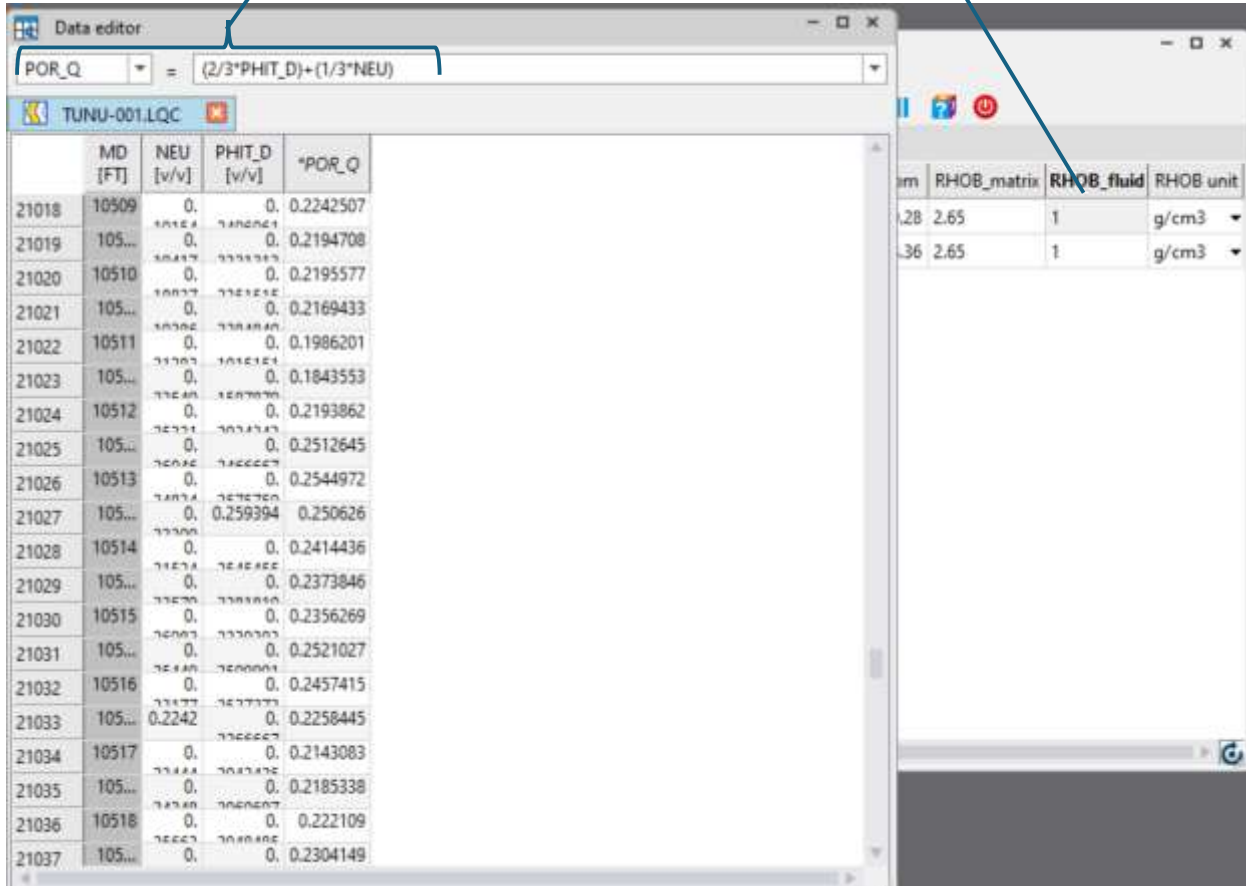


RESULTS SHOW THAT THE QUICK LOOK POROSITY AND THE RFT POROSITY TRACK EACH OTHER EXCEPT FOR THE SHALE INTERVALS.

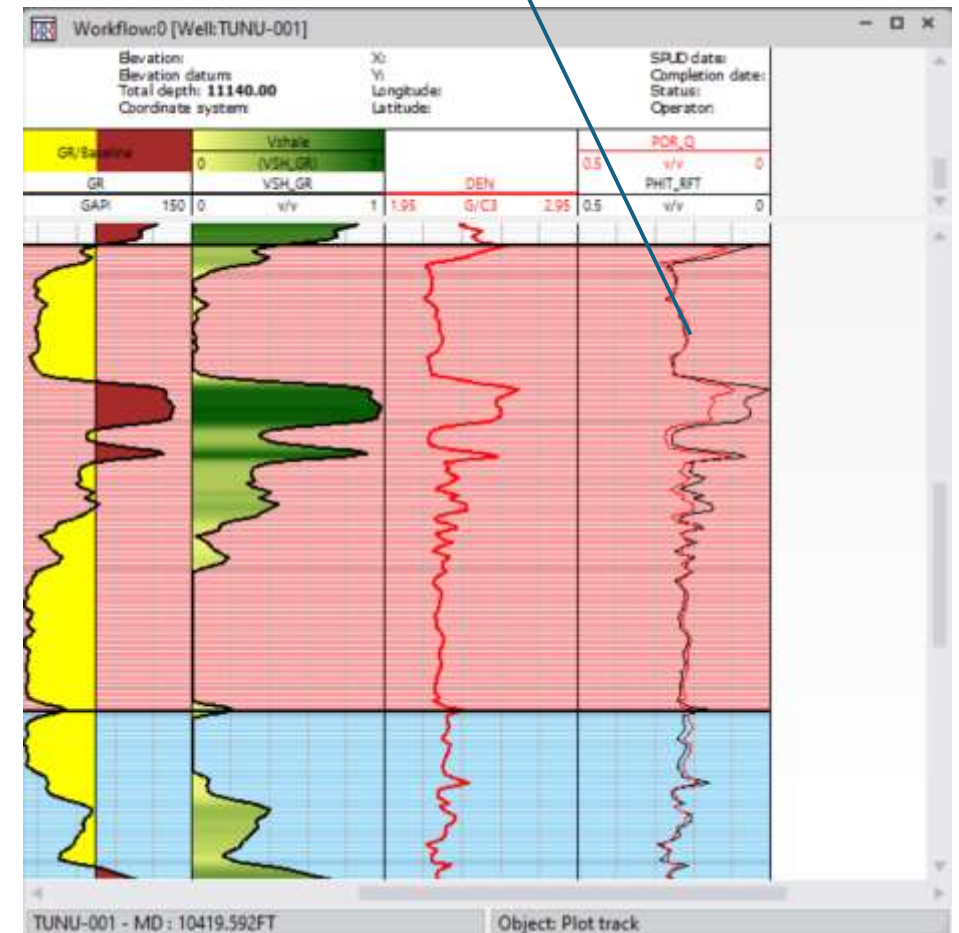


POROSITY [QUICK LOOK] (2)

THE SHALE INTERVALS ARE NOT SUPPOSED TO BE CORRECTED FOR SO WE GO BACK TO OUR DATA EDITOR AND INPUT THE SAME VALUES FOR THE DENSITY POROSITY IN OUR NEWLY CREATED POR_Q LOG IN THE SHALE INTERVALS.

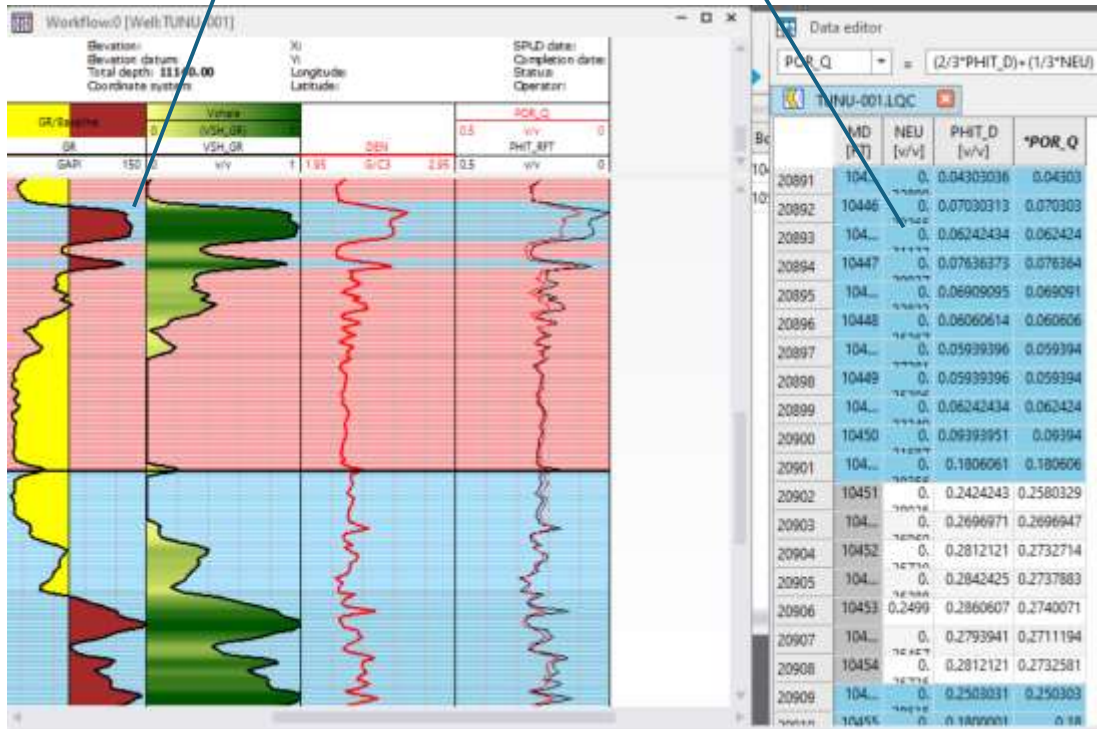


OUR QUICK LOOK EVALUATED POROSITY MATCHES WITH OUR POROSITY EVALUATED FROM RFT DATA SO EITHER LOG CAN BE USED

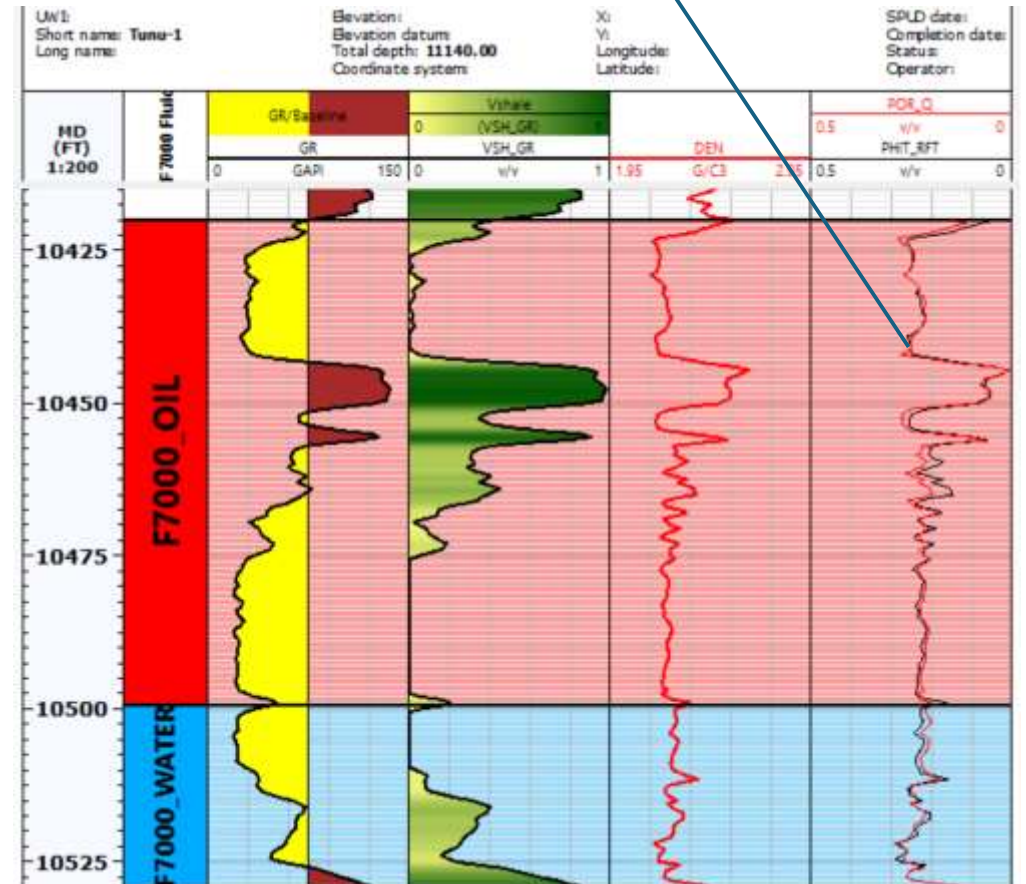


PERMEABILITY

ON THE PLOT TAB, CLICK ON CROSS PLOT. DRAG AND DROP PERMEABILITY AND POROSITY CORE LOGS

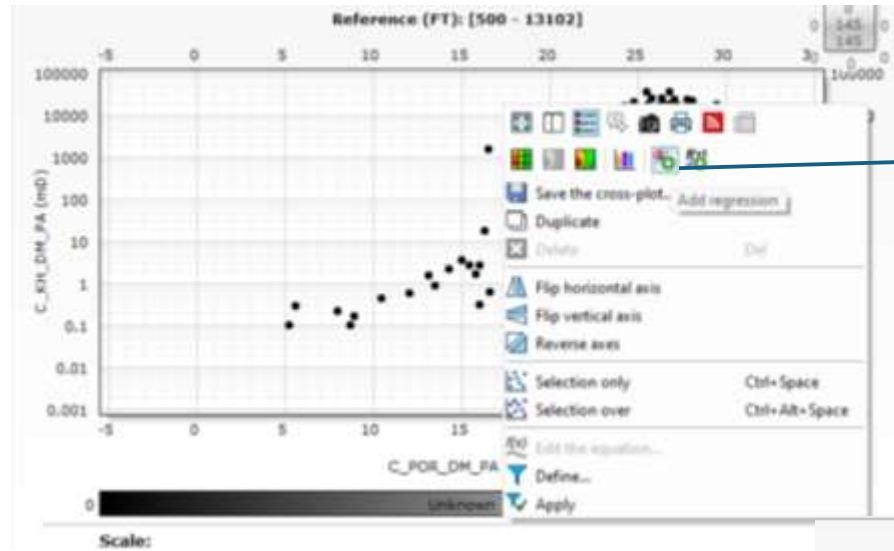

RIGHT CLICK ON THE CROSS PLOT AND SELECT THIS ICON TO ADD A REGRESSION LINE

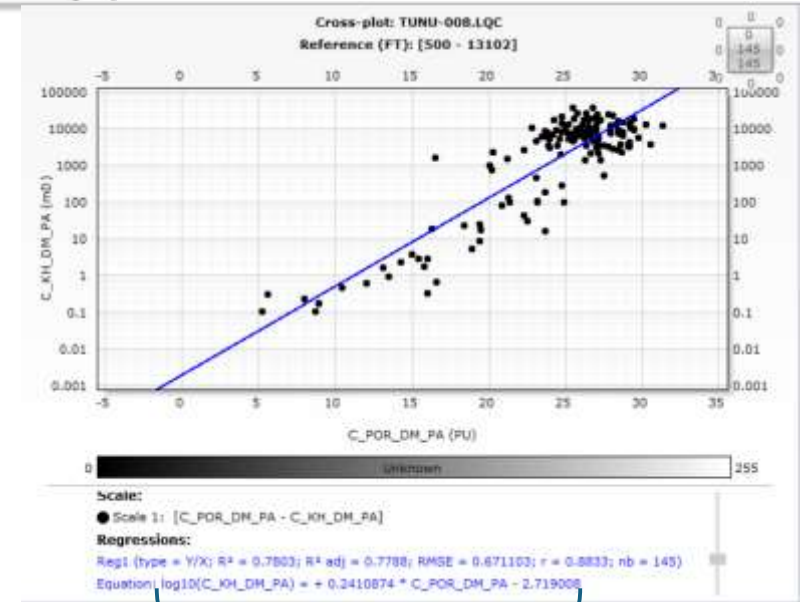

EQUATION DEFINING THE RELATIONSHIP BETWEEN POROSITY AND PERMEABILITY FROM CORE ANALYSIS

PERMEABILITY (2)

INPUT THE PERMEABILITY EQUATION FROM THE CROSS PLOT ON DATA EDITOR AND PRESS ENTER TO CREATE A PERMEABILITY LOG


Data editor

PERM = $10^{((0.2410874 \cdot \text{PHIT_RFT} \cdot 100) - 2.719008)}$

TUNU-001.LQC

	MD [FT]	*PERM	PHIT_RFT [v/v]
20891	10445.5	0.01629238	0.03861639
20892	10446	0.06339433	0.06309158
20893	10446.5	0.04281412	0.05602097
20894	10447	0.08573849	0.06853049
20895	10447.5	0.05967934	0.06200374
20896	10448	0.03910651	0.05438928
20897	10448.5	0.03681483	0.05330145
20898	10449	0.03681483	0.05330145
20899	10449.5	0.04281412	0.05602097
20900	10450	0.2057977	0.08430339
20901	10450.5	15.43597	0.1620799
20902	10451	335.7486	0.2175569
20903	10451.5	1306.412	0.2420321
20904	10452	2218.549	0.2623659


SAVE MODIFIED VARIABLE AND DISPLAY PERMEABILITY LOG ON WELL LAYOUT

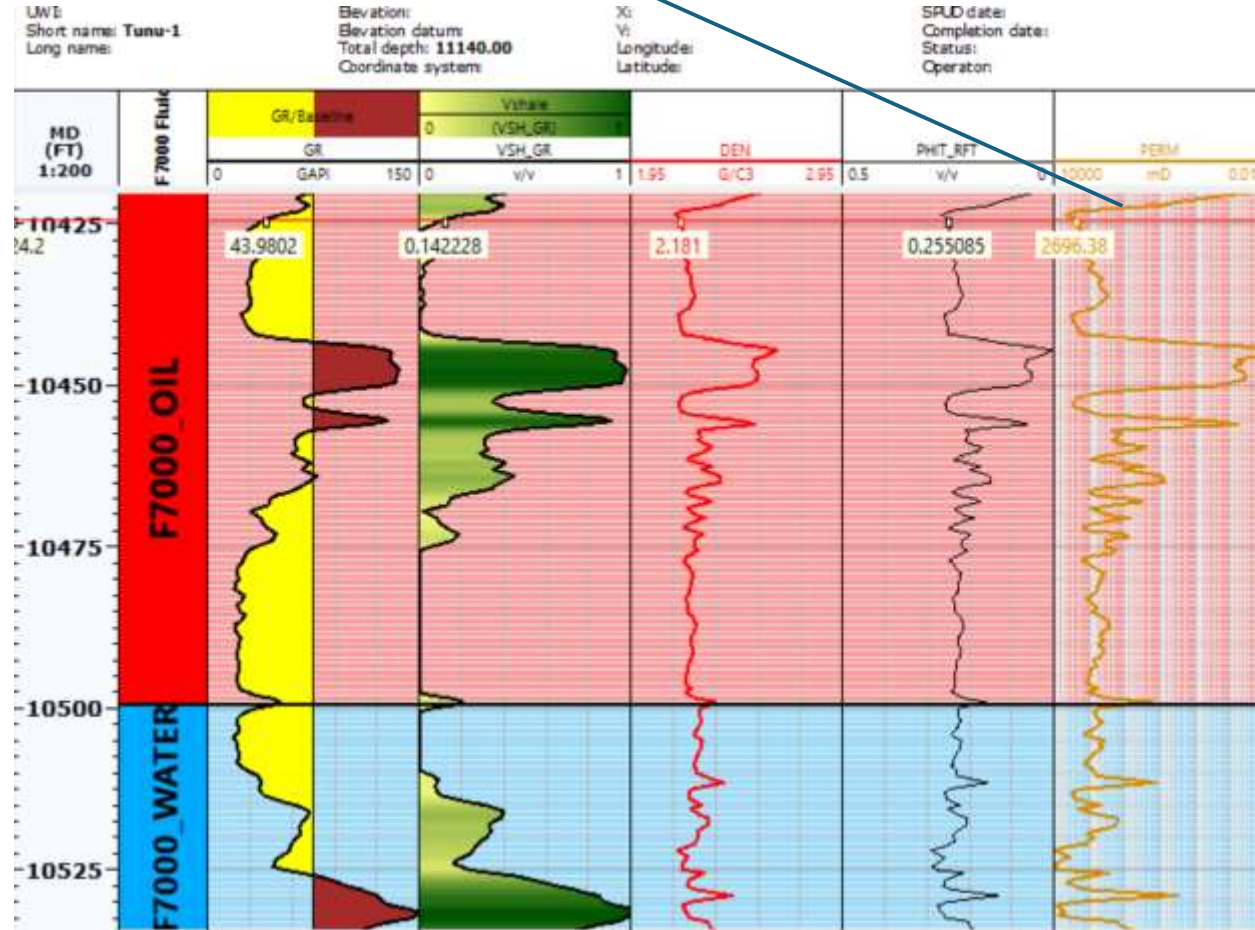

SATURATION


ON THE PETROPHYSICS TAB, CLICK ON QUANTI PLOTS AND SELECT PICKETT PLOT (RESISTIVITY)

SELECT THE INPUTS AND CLICK ON CREATE

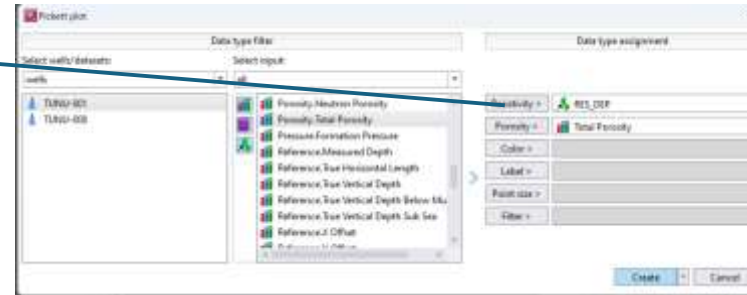

RIGHT CLICK ON THE PICKETT PLOT AND CLICK ON SELECTION ONLY. THIS WILL SHOW ONLY HIGHLIGHTED POINTS ON THE PLOT. MAKE SURE TO RIGHTLIGHT THE CLEAN SAND INTERVALS IN THE WATER LEG


SELECT PARTICULAR LOG TO BE USED FOR THE EVALUATION

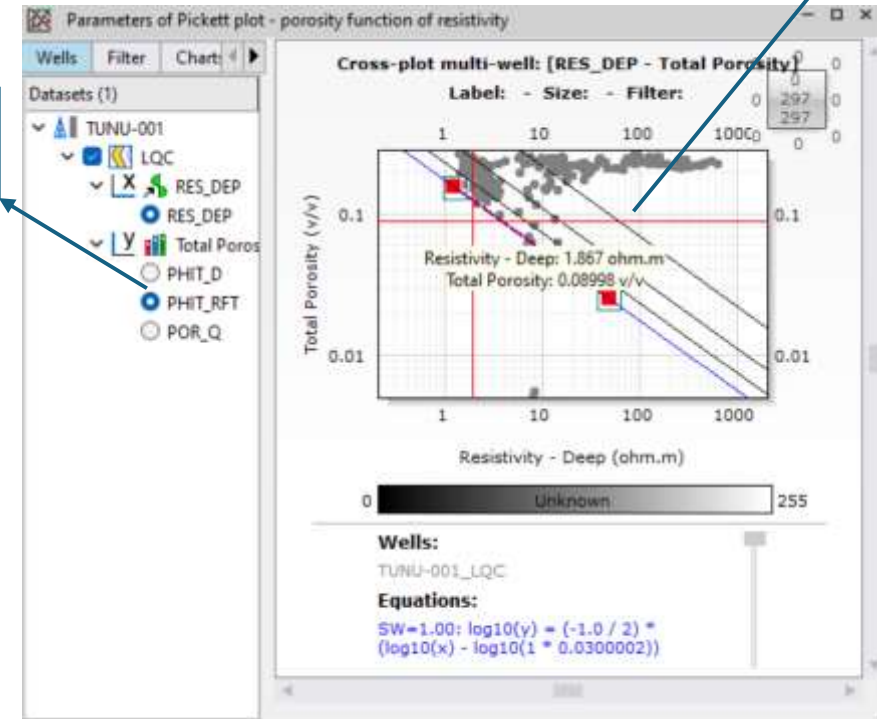

SATURATION (2)

SET m AND n VALUES AT
1.8 AND 1.9
RESPECTIVELY (NIGER
DELTA VALUES)


ADJUST R_w VALUE UNTIL
THE 100% SATURATION LINE
(THE BLUE LINE)
IS IN LINE
WITH THE SELECTED
POINTS ON THE PICKETT
PLOT

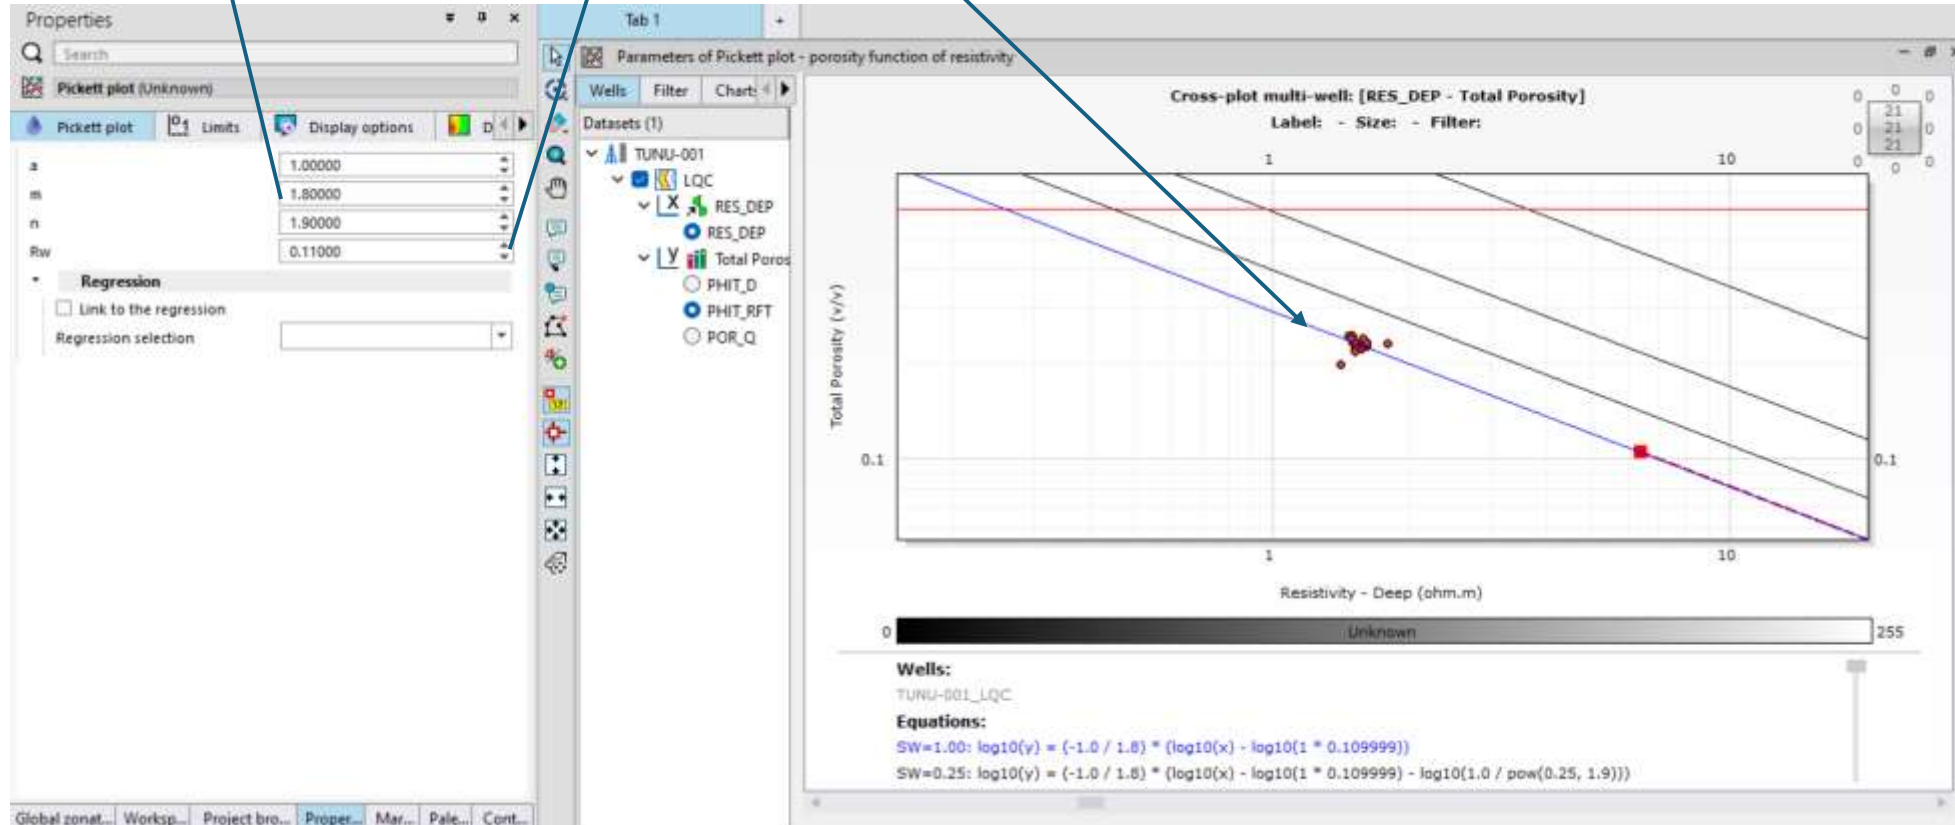


SATURATION (3)

ON THE PETROPHYSICS TAB, NAVIGATE AND SELECT ARCHIE SATURATION

SELECT THE INPUTS AND CLICK ON CREATE

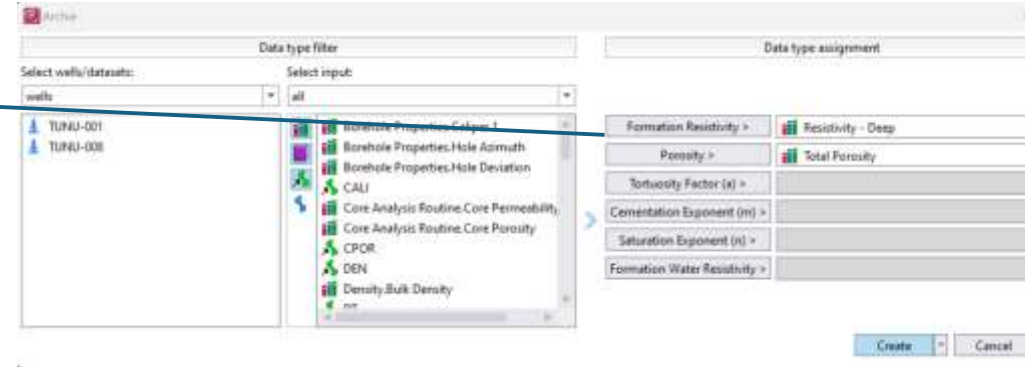

FILL IN m AND n PARAMETERS AND INPUT R_w VALUE GOTTEN FROM PICKET PLOT AND RUN EVALUATION

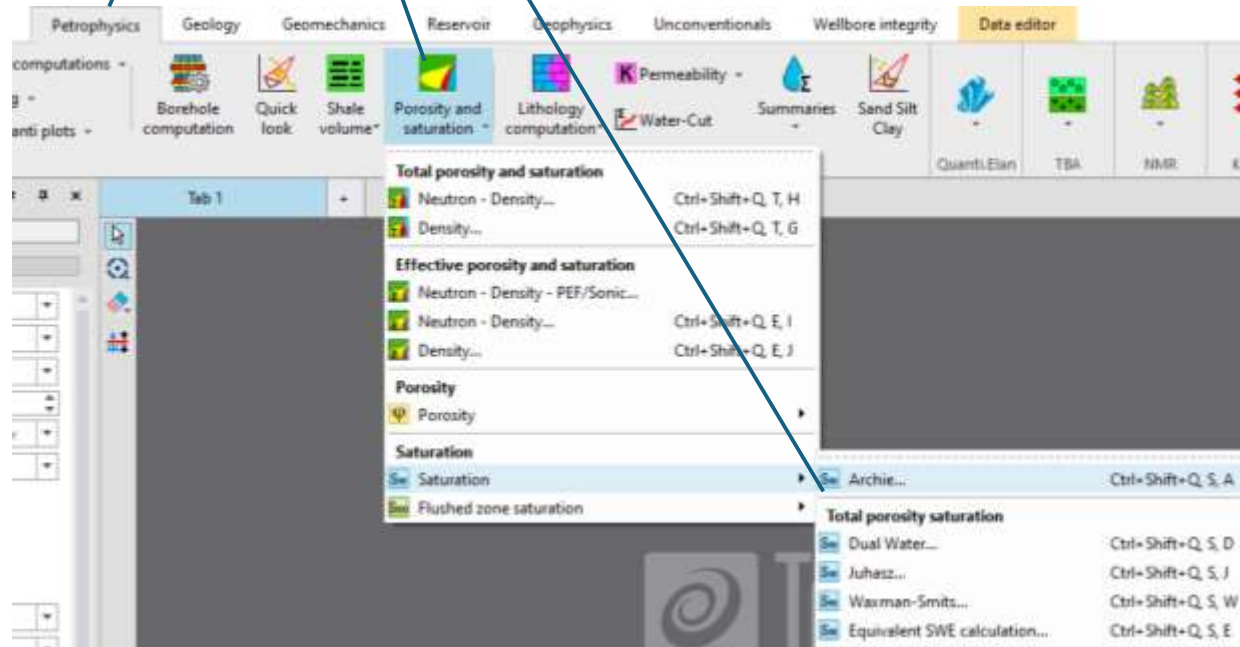


Workflow manager

Method settings

Controller Input data Parameters

Workflow / Methods	Group	Well	Dataset	Zone	Top	Bottom	a	m	n	Rw (ohm.m)
1		TUNU-001	LQC	F7000_OIL	10419.97	10499.28	1	1.8	1.9	0.11
2		TUNU-001	LQC	F7000_WATER	10499.29	10568.36	1	1.8	1.9	0.11

RESULTANT SW LOG. SAVE ALL MODIFIED VARIABLES

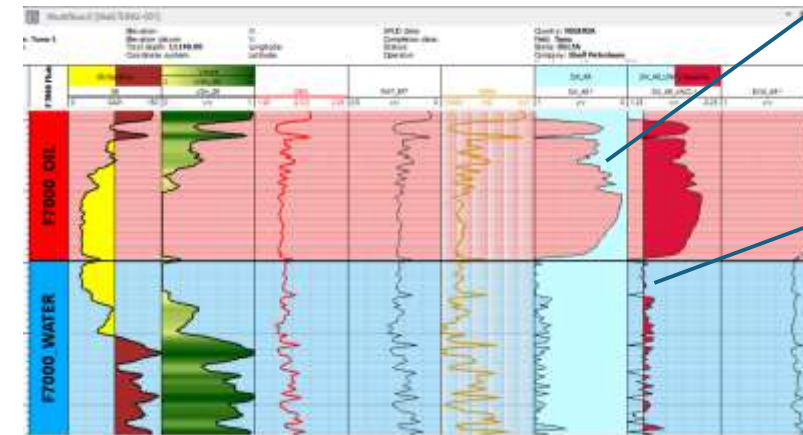

THE UNLIPPED SATURATION LOG SHOULD TRACK OR BE AS CLOSE AS POSSIBLE TO THE 100% BASELINE IN THE CLEAN SAND INTERVAL. USE THIS TO QC YOUR EVALUATED SATURATION

SATURATION HEIGHT MODEL

ON THE RESERVOIR TAB, CLICK ON LOG APPLY MODEL




SELECT THE INPUTS AND CLICK ON CREATE

INSERT THE RESERVOIR ZONE IN THIS CASE

INPUT PARAMETERS, OIL WATER CONTACT CAN BE READ FROM THE LOGS



ON THE DEFAULT TAB, FUNCTIONS AND CONSTANTS CAN BE ADJUSTED UNTIL IT MATCHES WITH OUR WELL

ALTERNATIVELY, IF SHM IS AVAILABLE FOR AN ANALOG WELL, RIGHT CLICK AND LOAD THE MODEL AND ADJUST THE CONSTANTS UNTIL IT MATCHES OUR WELL

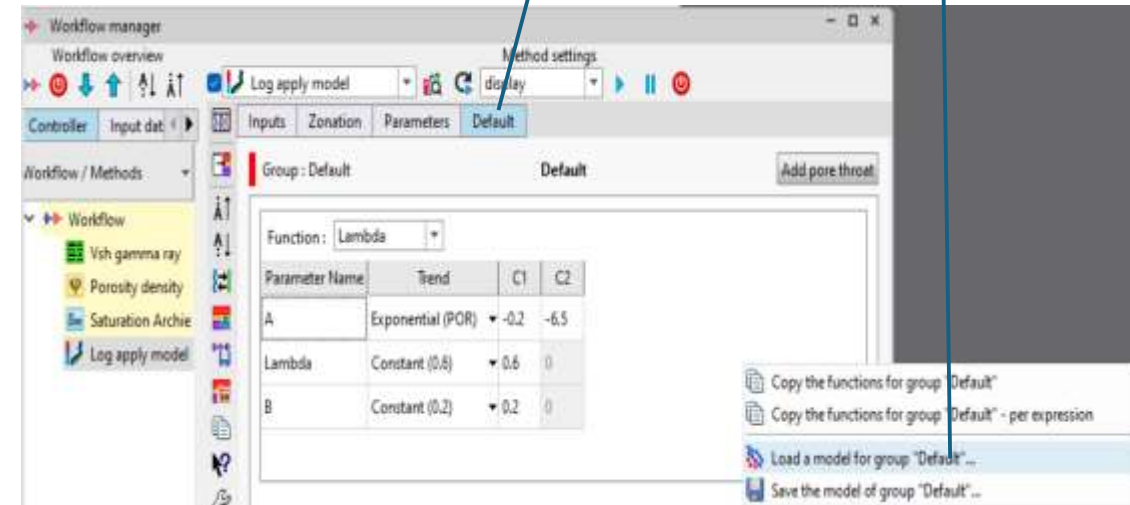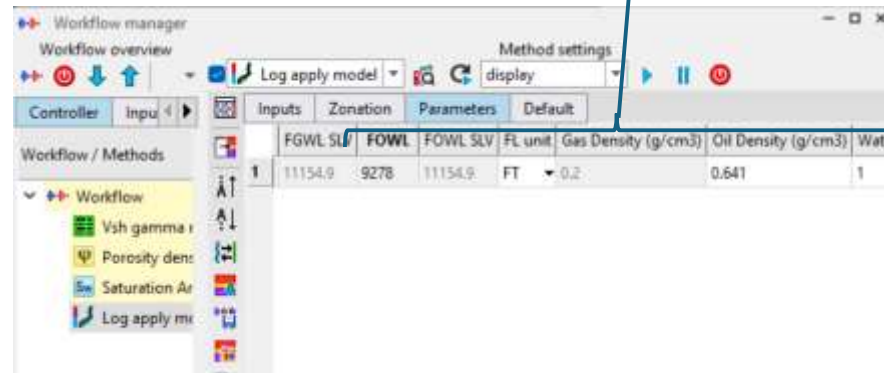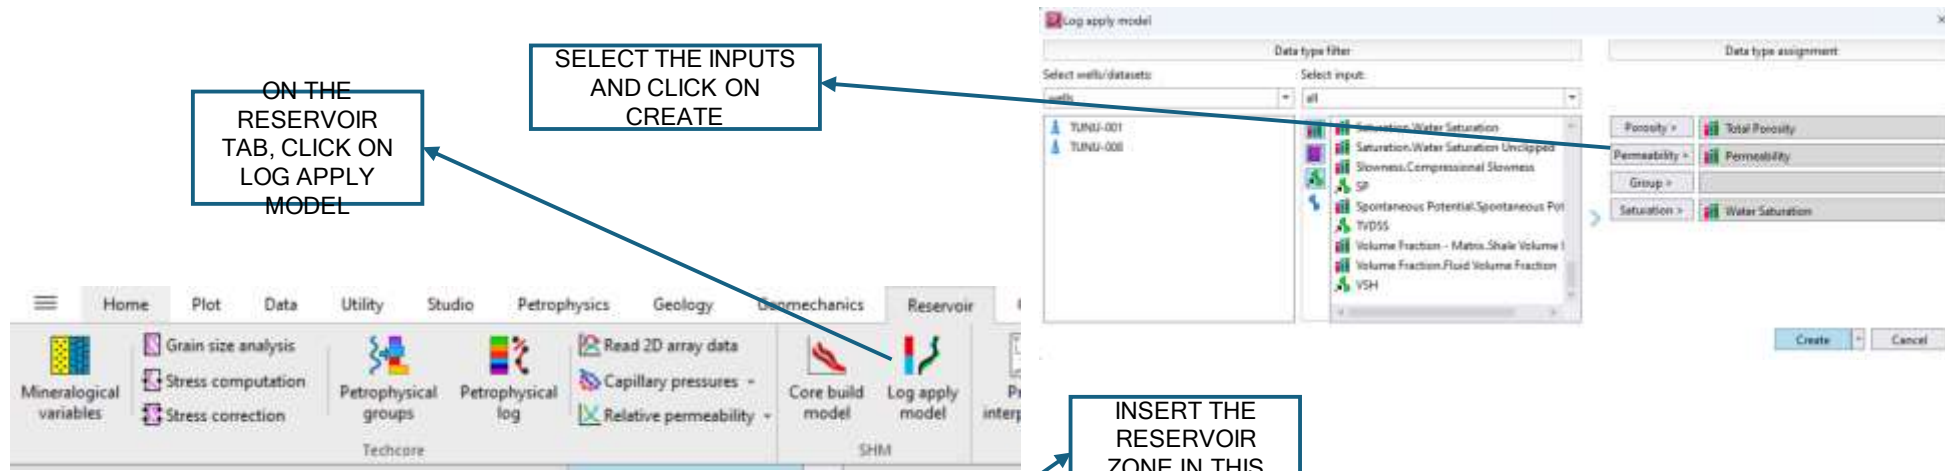

SATURATION HEIGHT MODEL (2)

ADJUST
CONSTANTS AND
KEEP RUNNING THE
EVALUATION UNTIL
THE S_w AND THE
SHM MATCH AS
CLOSE AS
POSSIBLE

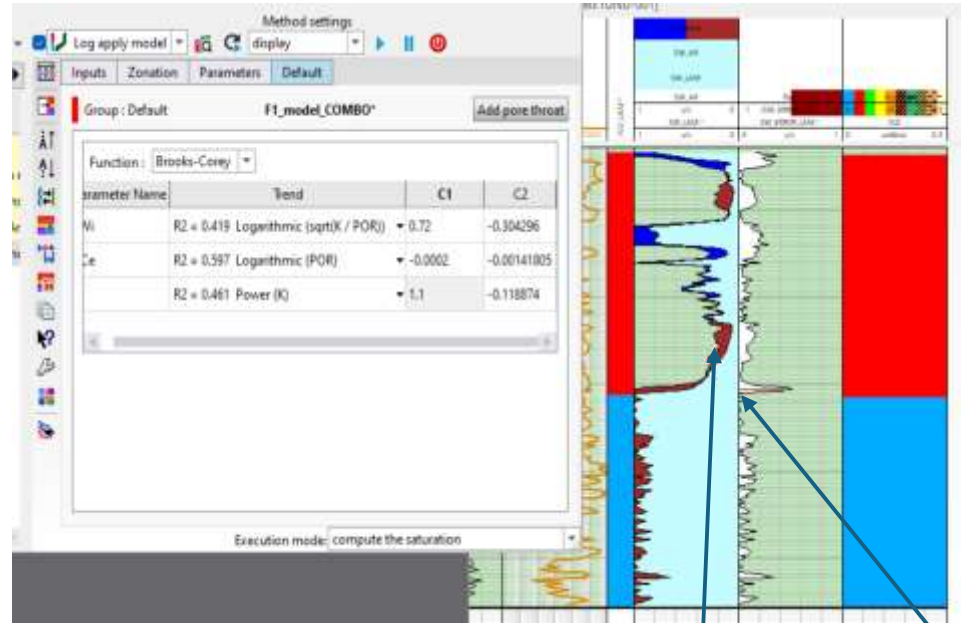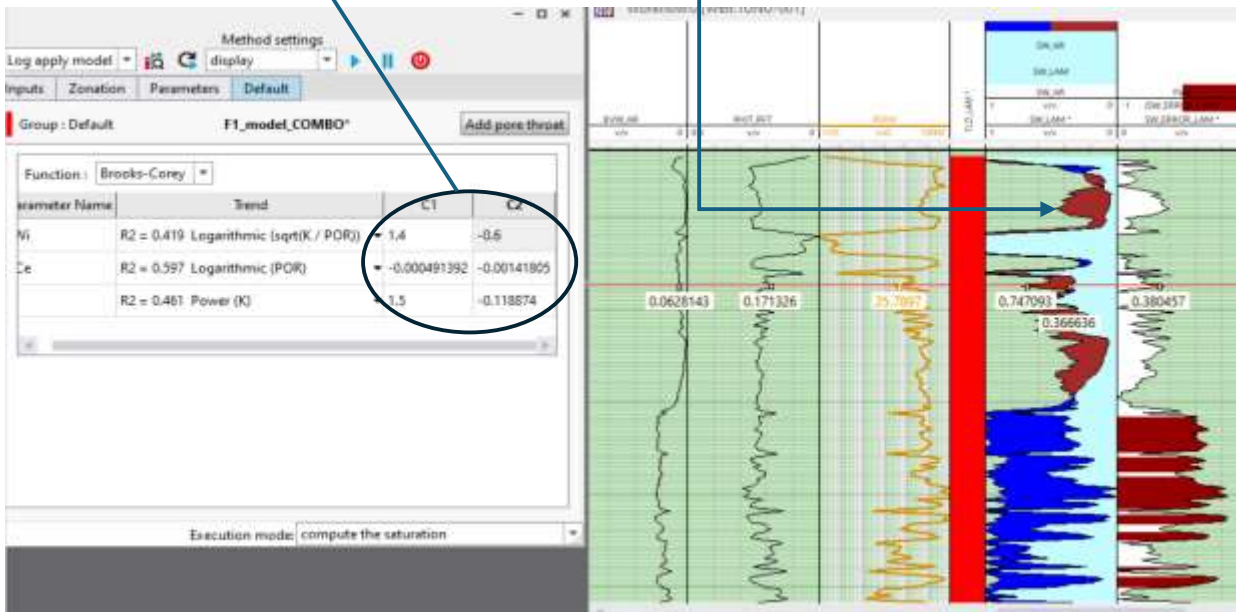

CLOSE ENOUGH
MATCH. RIGHT CLICK
AND SAVE THE
MODIFIED VARIABLES

ERROR LOG
SHOULD BE AS
LOW AS
POSSIBLE. USE
THIS TO QC
RESULT

NOTE: SHM SHOULD BE EVALUATED USING PRE-
PRODUCTION WELLS AND CAN THEN BE APPLIED
TO OTHER WELL TO SEE ORIGINAL FLUID
DISTRIBUTION.

SUMMARIES

ON THE PETROPHYSICS TAB, SELECT SUMMARIES





SELECT THE INPUTS AND CLICK ON CREATE

SELECT VARIABLE LOG INPUTS

SELECT AND REMOVE OTHER FLAGS, ONLY KEEP ONE FLAG


SELECT THE INPUT AND ON THE PROPERTIES WINDOW, SELECT SENSITIVITY AND CHECK ONLY SHALE VOLUME SENSITIVITY

CLICK ON THIS ICON TO RUN SHALE VOLUME SENSITIVITY

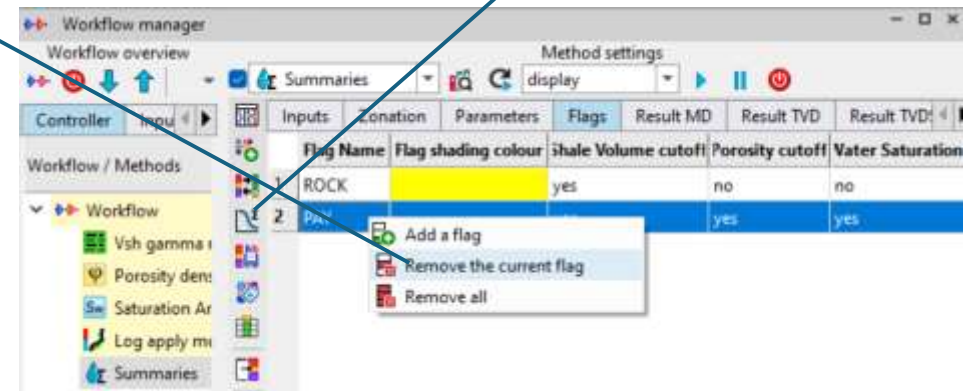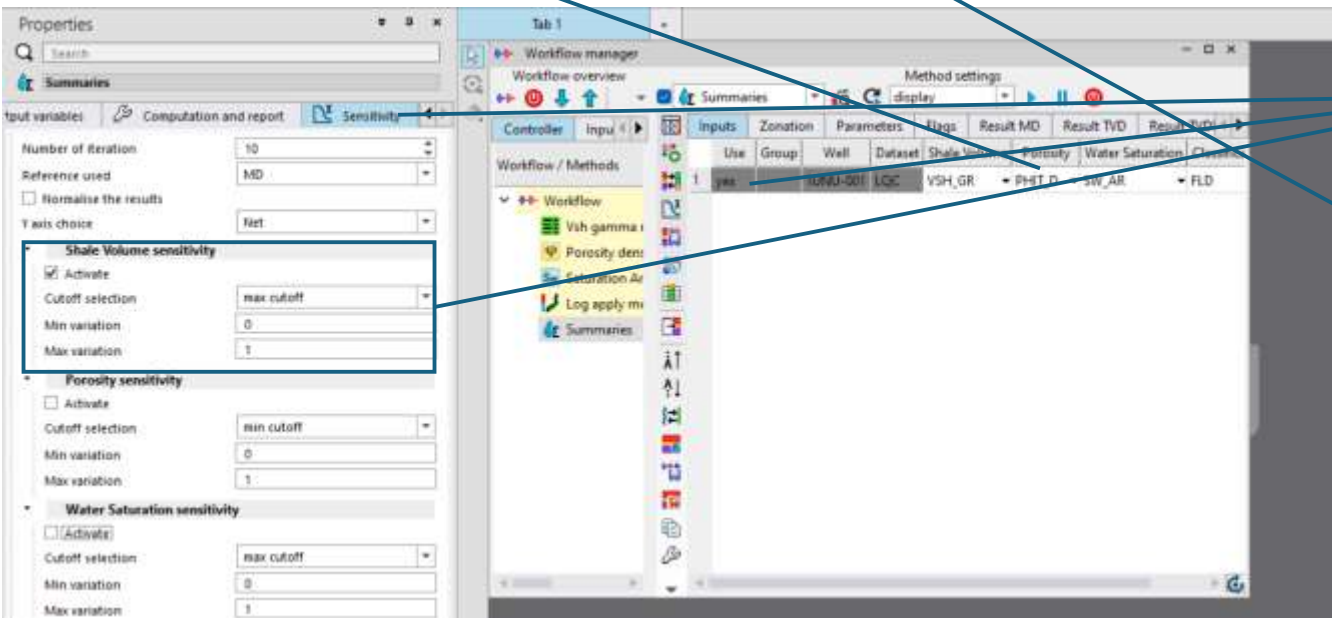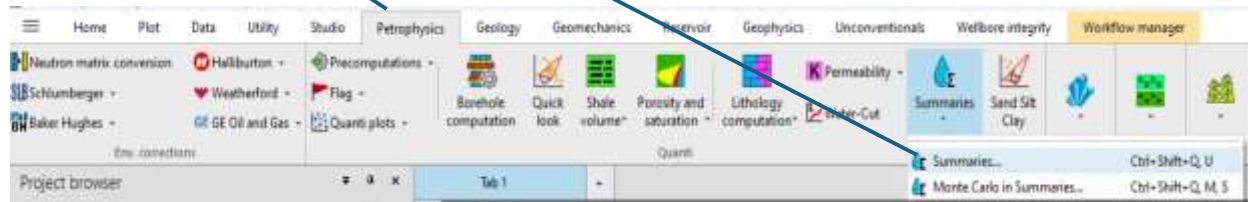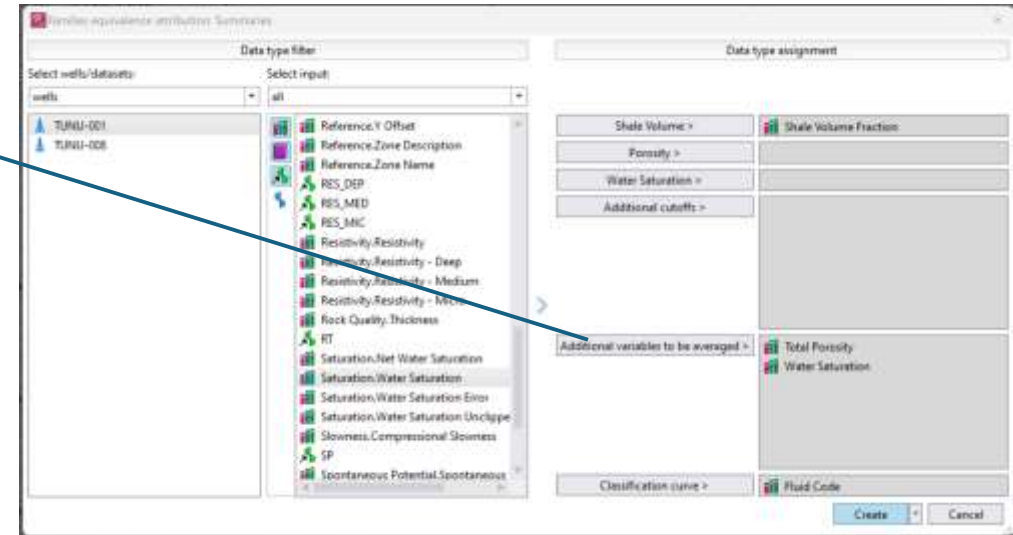


SUMMARIES (ERROR-SKIP IF NO ERROR)

IF NOTHING HAPPENS,
CHECK OUTPUT WINDOW
IF THIS ERROR SHOWS
UP

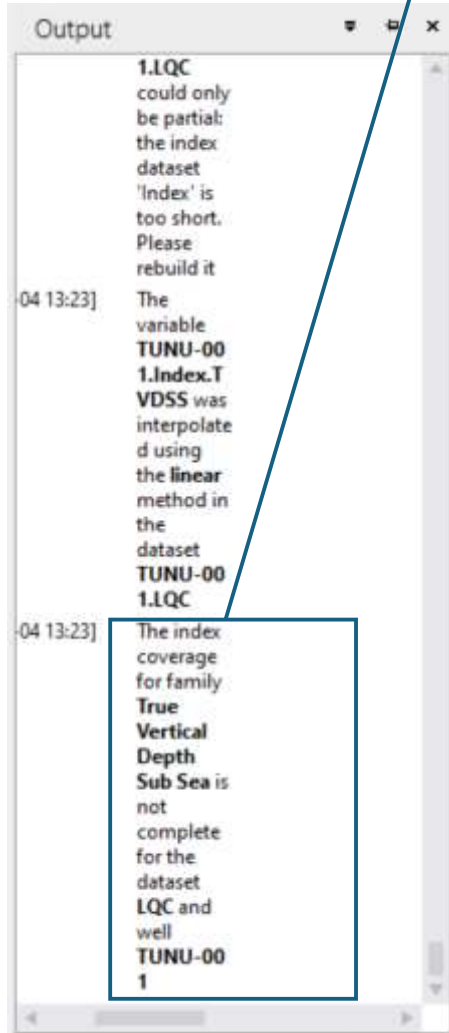


TO FIX THIS, SELECT LQC AND
INDEX ON THE PROJECT
BROWSER, GO TO PROPERTIES
AND CHANGE THE DATASET
TYPE TO POINT DATA

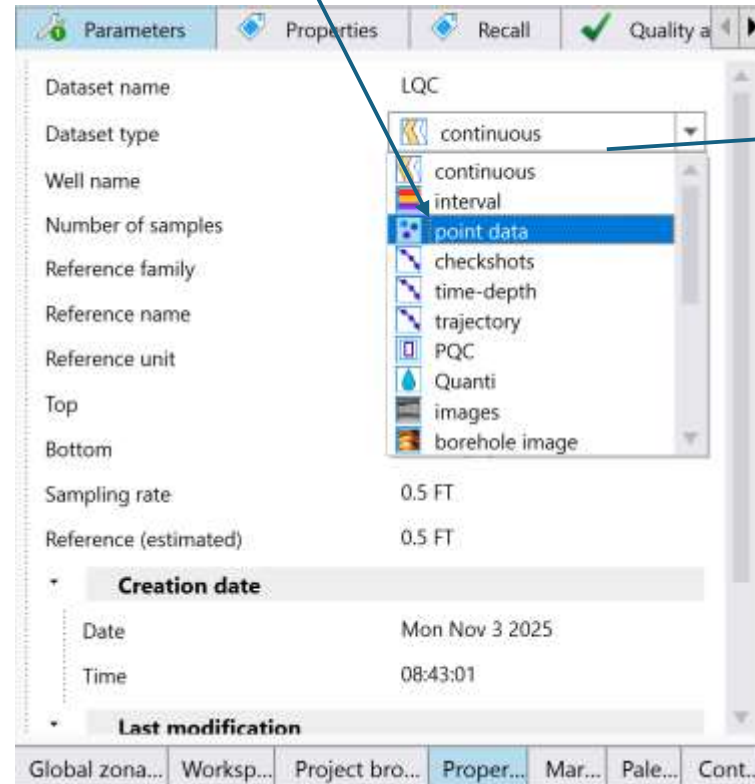

PUT THE LQC AND INDEX ON
DATA EDITOR, CHECK THE
DEPTH DIFFERENCE AND MAKE
SURE THEY HAVE THE SAME
DEPTH OR LQC IS LESS THAN
INDEX DEPTH. SELECT ALL
ENTRIES OF DEPTHS GREATER
THAN INDEX ON THE LQC DATA
EDITOR, RIGHT CLICK AND
SELECT DELETE CURRENT
ROWS. SAVE ALL MODIFIED


VARIABLES

CHANGE LQC AND INDEX
BACK TO CONTUOUS

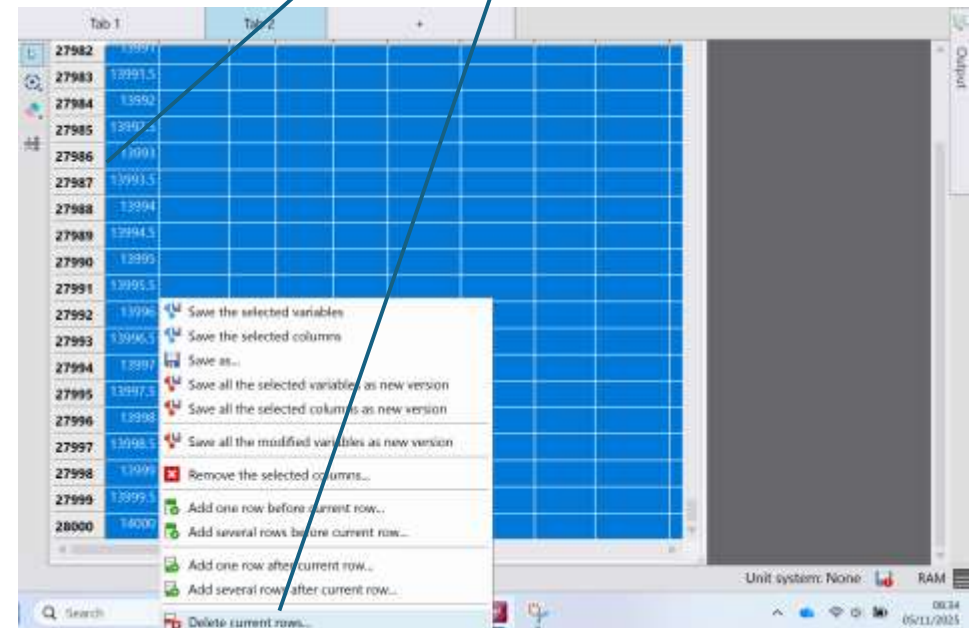

SUMMARIES (2)

FROM THE SHALE SENSITIVITY PLOT, SELECT A VALUE ON THE X-AXIS THAT DOES NOT PRODUCE SIGNIFICANT CHANGE ON THE Y-AXIS. INPUT THAT VALUE IN THE PARAMETERS

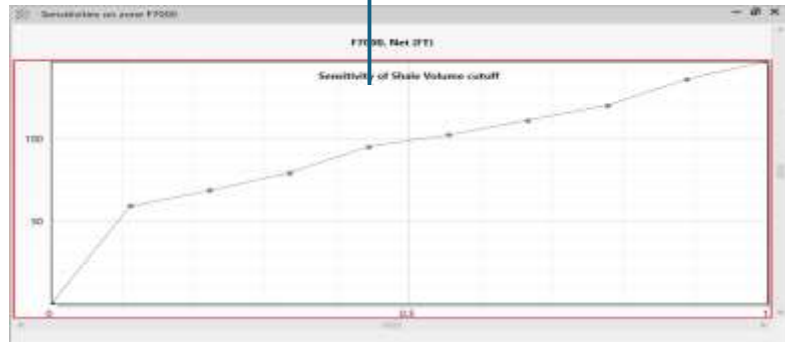

anager

overview

Method settings

display

Summaries

Inputs Zonation Parameters Flags Result MD Result TVD Result TVDSS Result TST


	Well	Dataset	Zone	Top	Bottom	Shale Volume_Min	Shale Volume_Max	Shale Volume_Unit	Shale Volume_bounds
1	NU-001	LQC	F70...	10...	1056...	0	0.5	v/v	min <= val < max

CLICK ON RESULTS TO VIEW THE

CLICK ON RESULTS TO VIEW THE AVERAGES

RUN THE SUMMARIES EVALUATION AND WE SHOULD HAVE OUR NET FLAG (N/G). SAVE ALL MODIFIED VARIABLES

CLICK ON THIS ICON TO COPY THE RESULTS TABLE

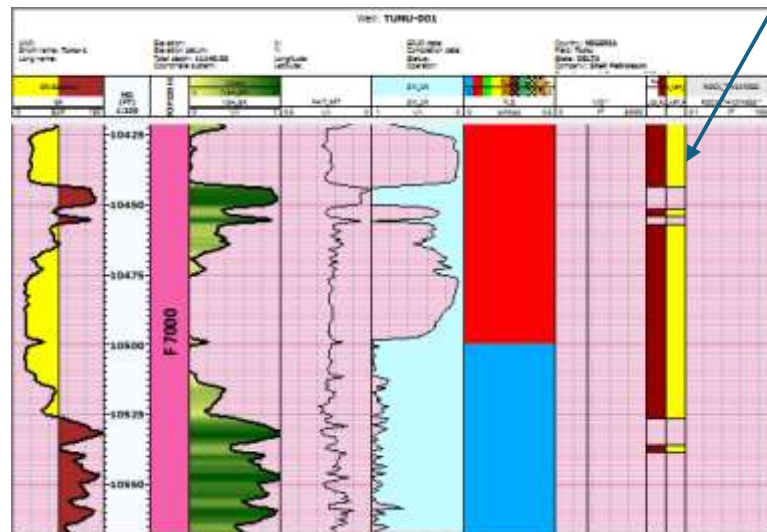

Workflow manager

Workflow overview


Method settings

display

Inputs	Zonation	Parameters	Flags	Result MD	Result TVD	Result TVDSS	Result TST
Top	Bottom	Reference unit	Gross (FT)	Net (FT)	Net Net (FT)	Unknown	
1	545	9338.893	FT	60.348	25.986	34.361	0.000
2	1020	9278.545	FT	69.525	59.848	9.678	0.000

SUMMARIES (3)

PASTE THE RESULT
TABLE IN EXCEL AND
ARRANGE IT IN YOUR
DESIRED FORMAT FOR
PRESENTATION

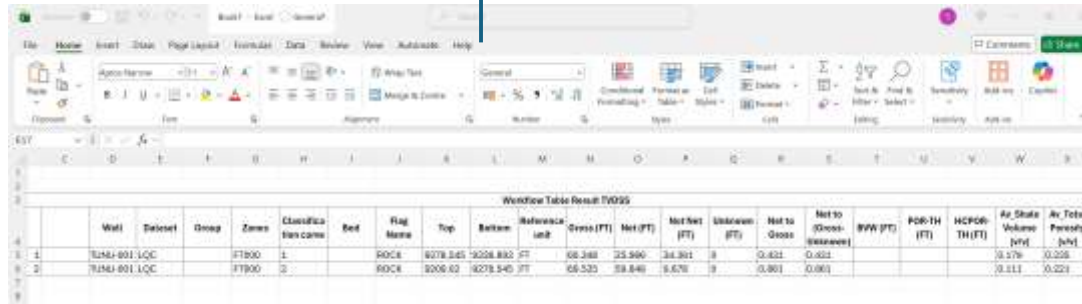


The screenshot shows an Excel spreadsheet with a table titled "Workflow Table Result IV095". The table has columns for Well, Dataset, Group, Zones, Classification, Bed, Flag Name, Top, Bottom, Reference, Gross (FT), Net (FT), Net Net (FT), Unknown (FT), Net to Gross, Net to Gross (assumed), PWW (FT), POR-TH (FT), HCPOR-TH (FT), Av. Shale Volume (mV), and Av. Total Porosity (mV). The table contains two rows of data for well TUNJ-601.LQC.

	Well	Dataset	Group	Zones	Classification	Bed	Flag Name	Top	Bottom	Reference	Gross (FT)	Net (FT)	Net Net (FT)	Unknown (FT)	Net to Gross	Net to Gross (assumed)	PWW (FT)	POR-TH (FT)	HCPOR-TH (FT)	Av. Shale Volume (mV)	Av. Total Porosity (mV)
1	TUNJ-601.LQC			ITB00	1	ROCK		6278.345	5008.892	FT	68.348	25.990	34.301	9	0.821	0.821				0.179	0.208
2	TUNJ-601.LQC			ITB00	2	ROCK		5008.892	6278.345	FT	68.525	59.846	8.678	9	0.901	0.901				0.111	0.221

LOW AND HIGH CASE
POROSITY LOGS CAN BE
CREATED BY SUBTRACTING
AND ADDING 0.03 (3%
ASSUMED) TO THE POROSITY
LOG AND THEIR
CORRESPONDING
PERMEABILITY LOGS CAN BE
CREATED USING THE SAME
EQUATION USED EARLIER,
THIS TIME USING THE LOW
AND HIGH CASE POROSITY

ALL PETROPHYSICAL
PROPERTIES LOGS HAVE
BEEN SAVED AND READY
FOR EXPORT TO THE
PRODUCTION GEOLOGIST
AND THE RESERVOIR
ENGINEER

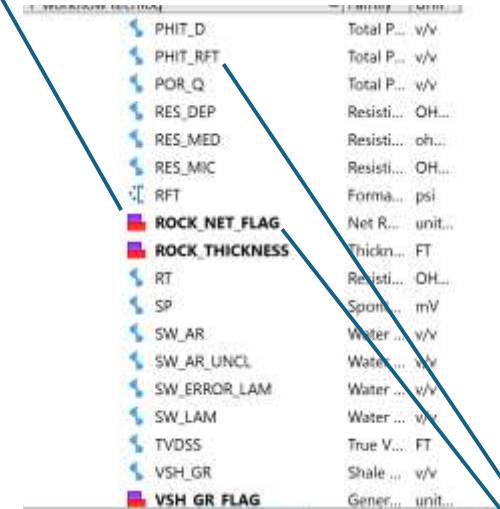

The screenshot shows a petrophysical log data editor window with a list of logs on the left and their corresponding units on the right. The logs listed are PHIT_D, PHIT_RFT, POR_Q, RES_DEP, RES_MED, RES_MIC, RFT, ROCK_NET_FLAG, ROCK_THICKNESS, RT, SP, SW_AR, SW_AR_UNCL, SW_ERROR_LAM, SW_LAM, TVDSS, VSH_GR, and VSH GR FLAG. The units listed are Total P... v/v, Total P... v/v, Total P... v/v, Resist... OH..., Resist... oh..., Resist... OH..., Forma... psi, Net R... unit..., Thickn... FT, Resist... OH..., Spont... mV, Water... v/v, Water... v/v, Water... v/v, Water... v/v, True V... FT, Shale... v/v, and Gener... unit....


Log Name	Unit
PHIT_D	Total P... v/v
PHIT_RFT	Total P... v/v
POR_Q	Total P... v/v
RES_DEP	Resist... OH...
RES_MED	Resist... oh...
RES_MIC	Resist... OH...
RFT	Forma... psi
ROCK_NET_FLAG	Net R... unit...
ROCK_THICKNESS	Thickn... FT
RT	Resist... OH...
SP	Spont... mV
SW_AR	Water... v/v
SW_AR_UNCL	Water... v/v
SW_ERROR_LAM	Water... v/v
SW_LAM	Water... v/v
TVDSS	True V... FT
VSH_GR	Shale... v/v
VSH GR FLAG	Gener... unit...

A NET POROSITY AND NET
PERMEABILITY LOG CAN
ALSO BE CREATED BY
MULTIPLYING POROSITY
AND PERMEABILITY BY THE
NET FLAG IN DATA EDITOR


EXPORT RESULTS

ON THE HOME
TAB, CLICK ON
EXPORT


SELECT THE LOGS YOU
WISH TO EXPORT AND
CLICK ON THE ARROW
TO MOVE THEM TO THE
EXPORT WINDOW

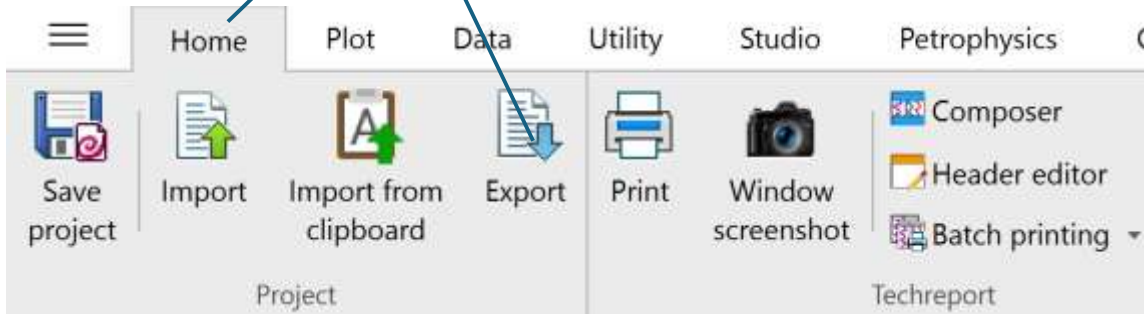

SELECT THE
DESIRED FORMAT
AND CLICK ON
SAVE TO SELECT A
FOLDER TO SAVE
ON PC

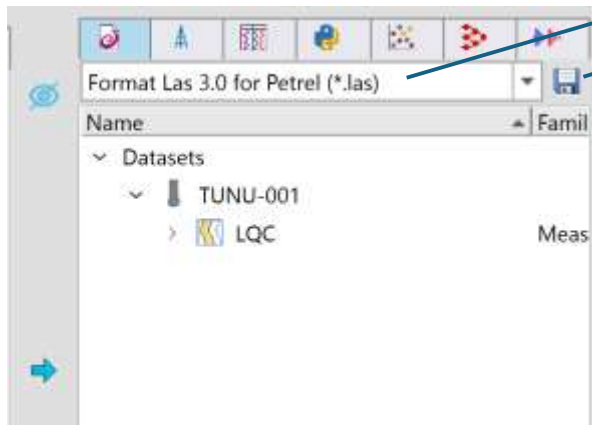

NOW YOUR
OUTPUTS ARE
READY TO BE
RECEIVED

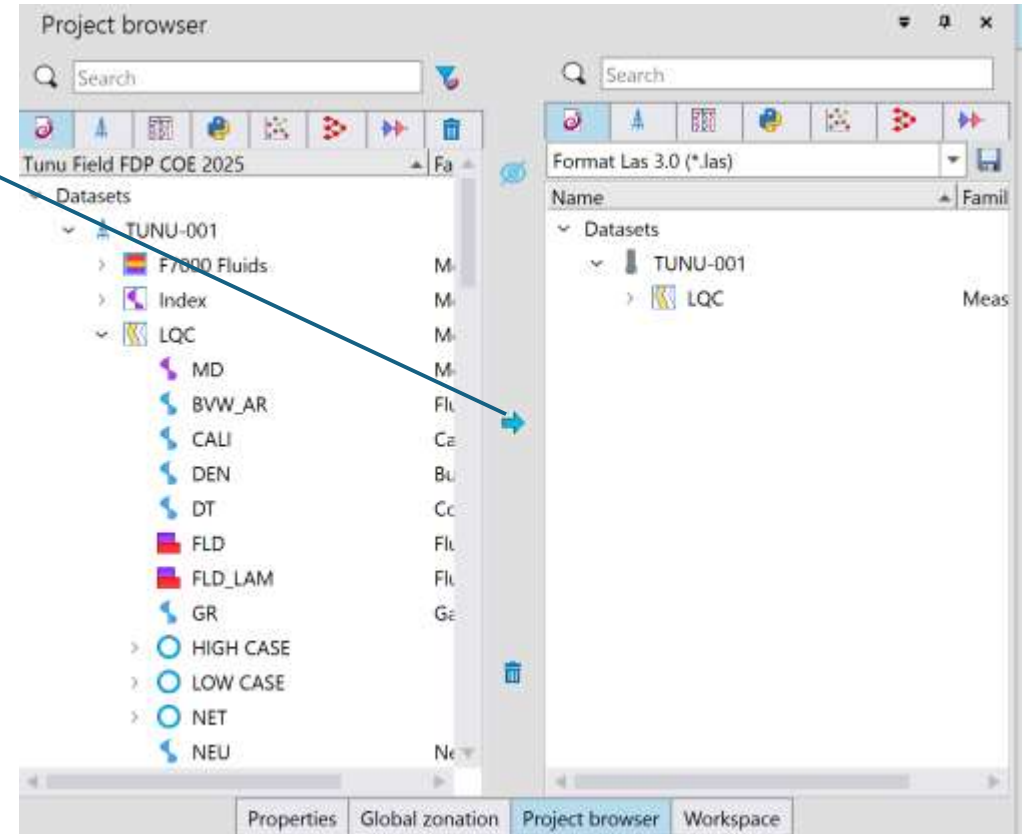

NOTE: SATURATION HEIGHT
MODEL GOES TO THE
RESERVOIR ENGINEER WHILE
THE LOGS GO TO THE
PRODUCTION GEOLOGIST