E1: conservation and boundary mismatch against zero

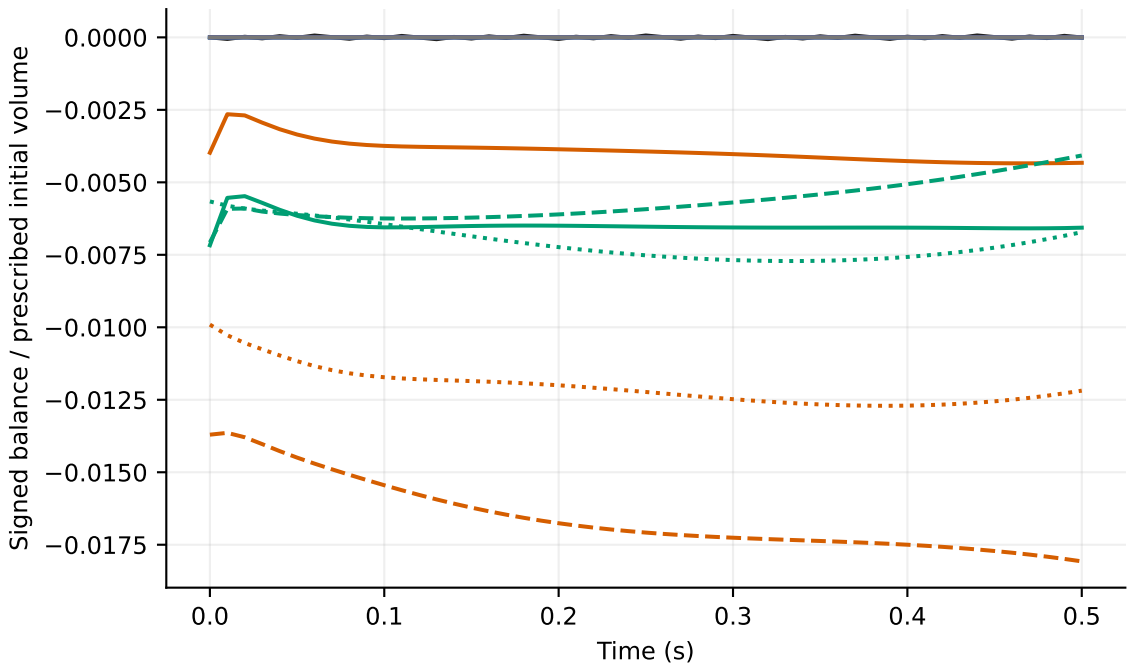

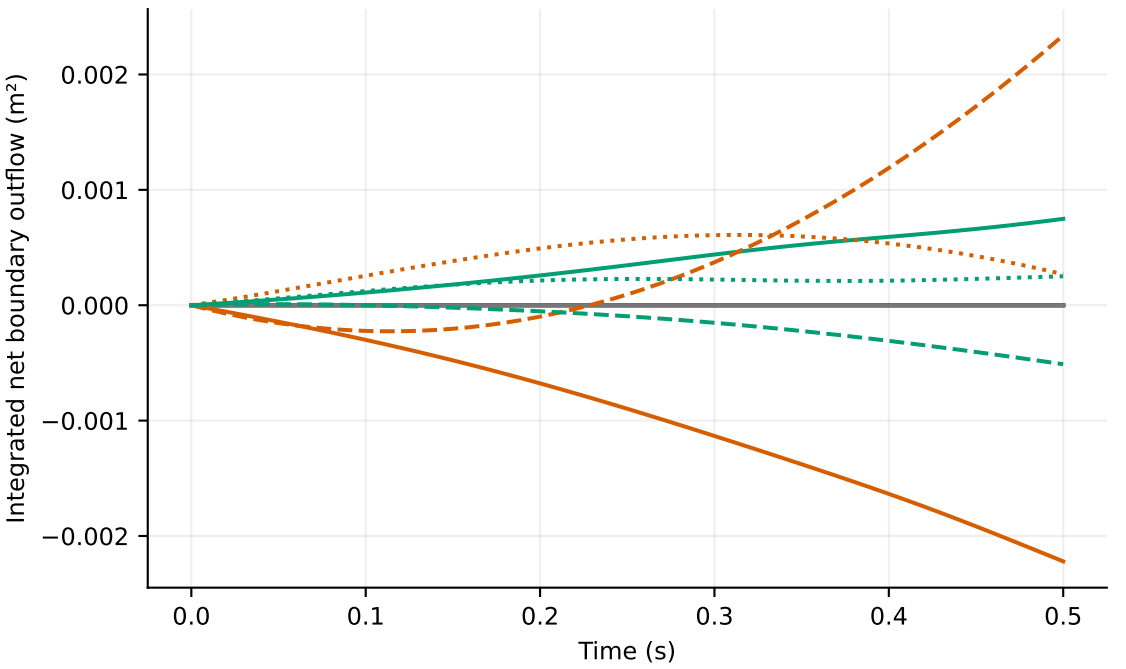

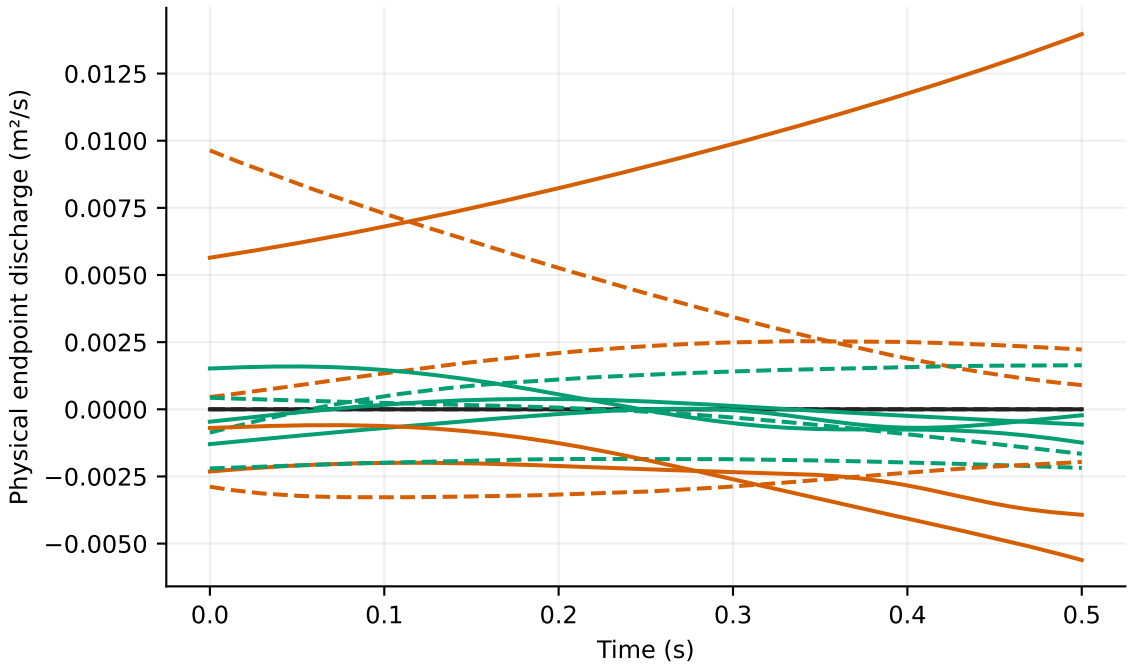

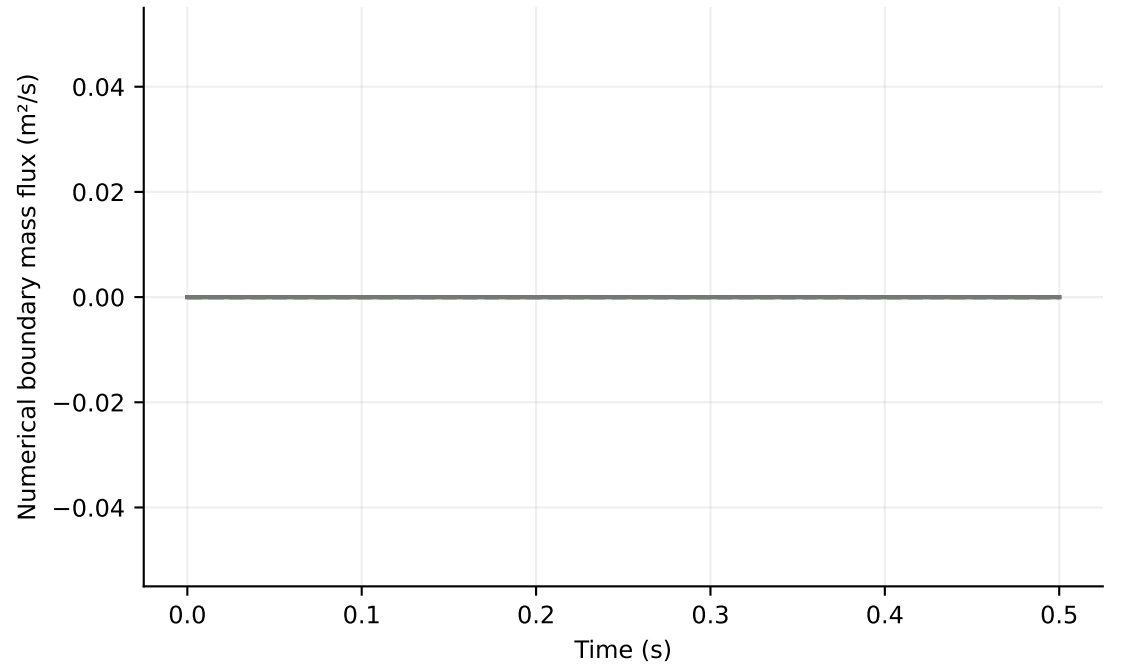

Signed balance / prescribed initial volume

- Analytical reference
- Lax–Wendroff N=100
- Lax–Wendroff N=200
- Lax–Wendroff N=400
- Lax–Wendroff N=800
- PINN baseline seed 11
- PINN adaptive seed 11
- PINN baseline seed 22
- PINN adaptive seed 22
- PINN baseline seed 33
- PINN adaptive seed 33

Physical endpoint discharge (m²/s)

- Analytical reference, left
- Analytical reference, right
- PINN baseline seed 11, left
- PINN baseline seed 11, right
- PINN adaptive seed 11, left
- PINN adaptive seed 11, right
- PINN baseline seed 22, left
- PINN baseline seed 22, right
- PINN adaptive seed 22, left
- PINN adaptive seed 22, right
- PINN baseline seed 33, left
- PINN baseline seed 33, right
- PINN adaptive seed 33, left
- PINN adaptive seed 33, right

Numerical boundary mass flux (m²/s)

- Lax–Wendroff N=100, left
- Lax–Wendroff N=100, right
- Lax–Wendroff N=200, left
- Lax–Wendroff N=200, right
- Lax–Wendroff N=400, left
- Lax–Wendroff N=400, right
- Lax–Wendroff N=800, left
- Lax–Wendroff N=800, right

```
Run: core-v1-pilot-a03-e1-adaptive-s11-predict
Run: core-v1-pilot-a03-e1-adaptive-s22-predict
Run: core-v1-pilot-a03-e1-adaptive-s33-predict
Run: core-v1-pilot-a03-e1-baseline-s11-predict
Run: core-v1-pilot-a03-e1-baseline-s22-predict
Run: core-v1-pilot-a03-e1-baseline-s33-predict
Run: core-v1-pilot-a03-e1-reference
Run: core-v1-pilot-a03-e1-solve-n100
Run: core-v1-pilot-a03-e1-solve-n200
Run: core-v1-pilot-a03-e1-solve-n400
Run: core-v1-pilot-a03-e1-solve-n800
```