

# Keysight Open RAN Simulators, Cloud Edition 5.0

LoadCore

User Guide

# Notices

## Copyright Notice

© Keysight Technologies 2019–2024

No part of this document may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

## Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Keysight disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Keysight shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Keysight and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly,

Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of those rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data. 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

## Contacting us

---

### Keysight headquarters

1400 Fountaingrove Parkway  
 Santa Rosa, CA 95403-1738  
 Email address: [support@keysight.com](mailto:support@keysight.com)  
 Website: <https://support.ixiacom.com/contact>

### Support

Location	Phone number	Local time
<i>Americas</i>		
US, Canada	1-888-829-5558	8h00 – 17h00
Brazil	0800-892-0522	8h00 – 17h00
Mexico	001-888-829-5558	8h00 – 17h00
Other	+1-719-273-6516	8h00 – 17h00
<i>EMEA</i>		
Belgium	0800-18686	8h30 – 17h30
Finland	0800-913-352	8h30 – 17h30
France	0800-917228	8h30 – 17h30
Germany	0800-0824099	8h30 – 17h30
India	1800-18-02552	8h30 – 17h30
Ireland	1800-949245	8h30 – 17h30
Israel	1-809-454975	8h30 – 17h30
Italy	0800-790571	8h30 – 17h30
Luxembourg	0800-25112	8h30 – 17h30
Netherlands	0800-022-9086	8h30 – 17h30

Romania	0213 015 699	8h30 – 17h30
Spain	800-654386	8h30 – 17h30
Sweden	0201-202266	8h30 – 17h30
United Kingdom	0800-0293882	8h30 – 17h30
<i>Asia and Australia</i>		
Australia	1-800-370-558	8h30 – 17h00
China Mainland	800-810-0005	8h30 – 17h30
	400-810-0005	8h30 – 17h30
Hong Kong	800-931-613	9h00 – 18h00
Japan	0120-421-621	9h00 – 17h30
Malaysia	1800-819 092	8h30 – 17h30
South Korea	080-770-0800	8h30 – 17h30
Singapore	800-101-3797	8h30 – 17h30
Taiwan	0800-699-880	9h00 – 18h00
Other	+65 6215 7600	8h30 – 17h30 (Singapore)

Last updated: 1 August 2024

# Table of Contents

---

<b>Contacting us .....</b>	<b>3</b>
<b>Chapter 1 Introduction .....</b>	<b>26</b>
<b>Chapter 2 Web Interface .....</b>	<b>27</b>
Access LoadCore Web UI .....	27
LoadCore Web UI .....	29
<b>Chapter 3 How Do I... .....</b>	<b>32</b>
Configure and run a test .....	33
Search Parameter .....	39
Manage and use test sessions .....	41
Save test sessions .....	42
Manage test sessions .....	42
Import and export sessions .....	45
Delete configs and sessions .....	46
Upgrade the MiddleWare VM .....	47
Configure Dashboard general settings .....	49
Work with Statistics .....	52
Debug .....	58
View Notifications and Test Events .....	58
Manage Test Results .....	60
Troubleshooting .....	61
<b>Chapter 4 Assign and manage agents .....</b>	<b>63</b>
About traffic agents .....	63
Assigning agents to nodes .....	63
Agent management .....	65
Network Management .....	68
Distribution Mode feature .....	69

<b>Chapter 4 Work with the Resource Library .....</b>	<b>72</b>
Import Captures .....	72
Create Custom Applications from Imported Captures .....	73
Edit Custom Applications .....	74
Export Custom Applications .....	75
Import Custom Applications .....	75
Export Other Resources .....	75
Import Resources .....	76
<b>Chapter 5 Full Core tests: configuration settings .....</b>	<b>77</b>
Global Settings .....	85
Global Settings panel .....	87
Node Start/Stop Rates .....	87
DNS Settings .....	88
Advanced Settings .....	88
DNNs panel .....	92
DNN configuration settings .....	94
Session AMBR configuration settings .....	97
ePCO configuration settings .....	98
Traffic Control Settings configuration .....	99
Impairment .....	100
QoS Flows panel .....	101
QoS Flow configuration settings .....	102
QoS Flow Packet Filter configuration settings .....	105
QoS Flow Max Packet Loss Rate settings .....	106
QoS Flow ARP configuration settings .....	106
QoS Flow MBR configuration settings .....	107
QoS Flow GBR configuration settings .....	107
CA Certificates .....	107
Milenage .....	108
Customer Parameters .....	109
External Stats Server .....	109

UE configuration settings .....	117
UE Ranges panel .....	119
UE Range panel .....	120
Range Settings .....	122
UE Identification settings .....	123
UE Security settings .....	123
UE Settings settings .....	127
UE Shared Data IDs .....	135
UE Subscribed AMBR settings .....	135
Service Area Restriction settings .....	135
Forbidden Areas .....	137
DNNs Config .....	138
Notifications .....	141
SMS Configuration .....	141
Equipment Status .....	144
Converged Charging .....	144
Spending Limit Control .....	145
Internal Group IDs .....	148
Network Slicing settings .....	149
UE NSSAI settings .....	150
UDM Default NSSAI settings .....	151
UDM SNSSAI Mappings .....	151
UDR SNSSAI Settings .....	152
Objectives .....	153
Control Plane Objective .....	154
User Plane Objectives .....	170
AMF configuration settings .....	236
AMF Ranges panel .....	237
AMF Range settings .....	238
AMF node settings .....	239
AMF N2 interface settings .....	242

AMF Namf interface settings .....	243
AMF N26 Interface Settings .....	244
AMF remote SBA nodes .....	246
AUSF configuration settings .....	253
AUSF Ranges panel .....	254
AUSF Range panel .....	254
AUSF node settings .....	255
AUSF Nauf interface settings .....	256
AUSF Remote SBA Nodes .....	258
CHF configuration settings .....	260
CHF Ranges panel .....	260
CHF Range settings .....	261
CHF node settings .....	262
CHF Nchf interface settings .....	263
CHF remote SBA nodes .....	263
DN configuration settings .....	265
DN Ranges panel .....	266
DN Range panel .....	266
DN N6 interface settings .....	267
DN routes settings .....	268
DN User Plane .....	269
DN Stateless UDP Traffic .....	270
DN Data Traffic .....	272
DN Voice Traffic .....	274
DN Video OTT Traffic .....	285
DN DNS Server Traffic .....	288
DN Predefined Applications Traffic .....	291
DN Capture Replay .....	291
DN Synthetic .....	293
DN UDG .....	295
DN Throttling settings .....	297

DNS Server configuration settings .....	298
DNS Server Ranges panel .....	298
DNS Server Range panel .....	298
DNS Server Ndnsserver interface settings .....	299
DNS Server Traffic Flow settings .....	300
EASDF configuration settings .....	303
EASDF Ranges panel .....	303
EASDF Range panel .....	304
EASDF Node settings .....	305
EASDF Neasdf interface settings .....	305
EASDF N6 interface settings .....	306
EASDF UE routes settings .....	307
EASDF DNS Server Settings .....	308
IMS configuration settings .....	310
CSCF Range panel .....	310
CSCF N6 interface settings .....	311
CSCF Rx interface settings .....	312
CSCF UE routes settings .....	313
Media Function Range panel .....	314
MME configuration settings .....	316
MME Ranges panel .....	317
MME Range panel .....	318
MME node settings .....	319
MME S11 Interface Settings .....	321
MME N26 Interface Settings .....	322
MME S1 Interface Settings .....	324
MME S6a Interface Settings .....	325
MME Diameter settings .....	326
NEF configuration settings .....	328
NEF Ranges panel .....	328
NEF Range panel .....	329

NEF Nnef interface settings .....	330
NEF Remote SBA Nodes .....	332
NRF configuration settings .....	335
NRF Ranges panel .....	336
NRF Range panel .....	336
NRF node settings .....	337
NRF Nnrf interface settings .....	338
NRF Remote SBA Nodes .....	339
NSSF configuration settings .....	341
NSSF Ranges panel .....	342
NSSF Range panel .....	342
NSSF node settings .....	343
Nnssf Interface Settings .....	344
Remote SBA nodes .....	345
NSSF Restricted NSSAIs .....	346
NSSF Network Slices .....	347
NSSF Configured NSSAI .....	348
PCF/PCRF configuration settings .....	350
PCF/PCRF Ranges panel .....	351
PCF Range panel .....	352
PCF Node settings .....	353
PCRF Node settings .....	354
PCF service area restrictions .....	357
PCF Npcf interface settings .....	358
PCF remote SBA nodes .....	360
RAN configuration settings .....	362
gNodeB .....	363
gNodeB Ranges panel .....	364
gNodeB Range settings .....	369
gNodeB node settings .....	370
gNodeB NSSAI settings .....	372

gNodeB N2 interface settings .....	373
gNodeB N3 interface settings .....	375
eNodeB .....	378
eNodeB Ranges panel .....	379
eNodeB Range Settings .....	383
eNodeB Node Settings .....	383
Passthrough interface settings .....	385
SBI Fuzzer configuration settings .....	387
SBI Fuzzer Ranges panel .....	387
SBI Fuzzer Range panel .....	388
SBI Fuzzer interface settings .....	389
SBI Fuzzer Target Node .....	390
SCP configuration settings .....	392
SCP Ranges panel .....	392
SCP Range panel .....	393
SCP Nscp interface settings .....	394
SCP Remote SBA Nodes .....	395
SEPP configuration settings .....	397
SEPP Ranges panel .....	397
SEPP Range panel .....	398
SEPP Nsepp interface settings .....	400
SEPP Remote SBA Nodes .....	401
SGW configuration settings .....	403
SGW Ranges panel .....	404
SGW Range panel .....	405
SGW S1-U Interface Settings .....	406
SGW S5-C Interface Settings .....	407
SGW S5-U Interface Settings .....	408
SGW S11 Interface Settings .....	409
SGW DUT S11 Interface Settings .....	410
SMF/PGW-C configuration settings .....	411

SMF/PGW-C Ranges panel .....	412
SMF/PGW-C Range settings .....	413
SMF node settings .....	414
SMF N4/Sx interface settings .....	415
SMF Nsmf interface settings .....	417
SMF Gx Interface settings .....	418
SMF S5-c interface settings .....	421
SMF remote SBA nodes .....	422
SMF Uplink Paths settings .....	427
SMF Slice and UPF Mapping settings .....	427
SMF EAS Deploy Subscription settings .....	428
SMF EAS Procedures Settings .....	429
SMSF configuration settings .....	431
SMSF Ranges panel .....	431
SMSF Range panel .....	432
SMSF node settings .....	433
SMSF Nsmsf interface settings .....	433
SMSF Remote SBA Nodes .....	434
UDM/HSS configuration settings .....	438
UDM/HSS Ranges panel .....	439
UDM/HSS Range panel .....	440
UDM Range Settings .....	440
UDM Settings .....	441
UDM Node Settings .....	442
UDM Nudm Interface Settings .....	444
UDM Remote SBA Nodes .....	446
HSS Range Settings .....	448
HSS Settings .....	448
HSS Node Settings .....	449
HSS S6a Interface Settings .....	450
UDM and HSS Range Settings .....	451

UDR configuration settings .....	452
UDR Ranges panel .....	452
UDR Range panel .....	453
UDR Nudr interface settings .....	454
UDR Remote SBA Nodes .....	455
UPF/PGW-U configuration settings .....	457
UPF/PGW-U Ranges panel .....	458
UPF/PGW-U Range panel .....	458
UPF node settings .....	460
UPF N3 interface settings .....	460
UPF N4 interface settings .....	461
UPF N6 interface settings .....	463
UPF N9 interface settings .....	463
UPF Nupf Interface Settings .....	465
UPF Remote SBA Nodes .....	466
UPF Slice Mapping settings .....	467
5G-EIR configuration settings .....	468
5G-EIR Ranges panel .....	468
5G-EIR Range panel .....	469
5G-EIR node settings .....	469
5G-EIR N5g-eir interface settings .....	470
5G-EIR Remote SBA Nodes .....	471
NF Discovery service .....	472
<b>Chapter 6 NG-RAN Simulation tests .....</b>	<b>474</b>
<b>Chapter 7 SBA tests: configuration settings .....</b>	<b>475</b>
SBA Tester overview .....	479
UE configuration settings .....	480
UE Ranges panel .....	481
UE Range panel .....	481
Range Settings .....	482
UE Identification .....	483

UE Security .....	484
UE Settings .....	486
UE SDF settings .....	487
Shared Data IDs .....	488
UE Subscribed AMBR settings .....	488
Service Area Restrictions .....	489
Forbidden Areas .....	490
Notifications .....	490
SMS Configuration .....	491
Network Slicing .....	493
UDM Default NSSAI settings .....	494
UDM SNSSAI Mappings .....	494
UDR SNSSAI Settings .....	495
Charging Function .....	496
Converged Charging .....	496
Spending Limit Control .....	497
Objectives .....	500
Primary Objective .....	501
Secondary Objectives .....	540
SBA Tester Global Settings panel .....	567
Connection Settings .....	568
Advanced Settings .....	568
Impairment .....	570
DNNs panel .....	571
DNN configuration settings .....	572
DNN GBR configuration settings .....	573
Session AMBR configuration settings .....	574
QoS Flows panel .....	575
QoS Flow configuration settings .....	576
QoS Flow Packet Filter configuration settings .....	578
QoS Flow Maximum Packet Loss configuration settings .....	579

QoS Flow ARP configuration settings .....	579
QoS Flow MBR configuration settings .....	580
QoS Flow GBR configuration settings .....	580
SBA Tester Simulated Nodes panel .....	581
AMF configuration settings .....	581
SMF configuration settings .....	587
PCF configuration settings .....	592
AF configuration settings .....	597
SBA Tester Remote SBA Nodes .....	603
SBA Tester Remote Nodes .....	605
AUSF configuration settings .....	607
AUSF Ranges panel .....	608
AUSF Range panel .....	608
AUSF node settings .....	609
AUSF Nausf interface settings .....	610
AUSF remote SBA nodes .....	611
CHF configuration settings .....	613
CHF Ranges panel .....	613
CHF Range panel .....	614
CHF node settings .....	614
CHF Nchf interface settings .....	615
CHF remote SBA nodes .....	616
NRF configuration settings .....	617
NRF Ranges panel .....	617
NRF Range panel .....	617
NRF node settings .....	618
NRF Nnrf interface settings .....	619
NSSF configuration settings .....	621
NSSF Ranges panel .....	622
NSSF Range panel .....	622
NSSF node settings .....	623

Nnssf Interface Settings .....	624
Remote SBA nodes .....	625
NSSF Restricted NSSAIs .....	626
NSSF Network Slices .....	627
NSSF Configured NSSAI .....	628
PCF configuration settings .....	629
PCF Ranges panel .....	629
PCF Range panel .....	629
PCF node settings .....	630
PCF service area restrictions .....	632
PCF Npcf interface settings .....	633
PCF remote SBA nodes .....	634
SCP configuration settings .....	635
SCP Ranges panel .....	635
SCP Range panel .....	636
SCP Nscp interface settings .....	637
SCP Remote SBA Nodes .....	638
SMSF configuration settings .....	639
SMSF Ranges panel .....	639
SMSF Range panel .....	640
SMSF node settings .....	641
SMSF Nsmsf interface settings .....	641
SMSF Remote SBA Nodes .....	642
UDM configuration settings .....	645
UDM Ranges panel .....	645
UDM Range panel .....	646
UDM node settings .....	647
UDM Nudm interface settings .....	650
UDM remote SBA nodes .....	651
UDR configuration settings .....	652
UDR Ranges panel .....	652

UDR Range panel .....	653
UDR Nudr interface settings .....	655
UDR remote SBA nodes .....	656
<b>Chapter 8 UPF Isolation tests: configuration settings .....</b>	<b>657</b>
Global Settings panel .....	659
DNS Settings .....	660
Advanced Settings .....	660
Impairment .....	662
QoS Flows panel .....	663
QoS Flow configuration settings .....	663
Reporting Settings .....	665
UE configuration settings .....	666
UE Ranges panel .....	667
UE Range panel .....	668
UE range settings .....	669
Objectives .....	675
Control Plane Objective .....	675
User Plane Objectives .....	688
RAN configuration settings .....	736
RAN Ranges panel .....	737
RAN Range settings .....	737
RAN N3 interface settings .....	738
Passthrough interface settings .....	739
SMF configuration settings .....	740
SMF Ranges panel .....	741
SMF Range settings .....	741
SMF N4 interface settings .....	742
SMF Uplink Paths .....	744
UPF configuration settings .....	746
UPF Ranges panel .....	747
UPF Range panel .....	747

UPF N3 interface settings .....	748
UPF N4 interface settings .....	750
UPF N6 interface settings .....	751
UPF N9 interface settings .....	752
UPF N4u interface settings .....	754
<b>DN configuration settings .....</b>	<b>756</b>
DN Ranges panel .....	756
DN Range panel .....	757
DN N6 Interface settings .....	758
DN routes settings .....	759
DN User Plane .....	760
DN Stateless UDP Traffic .....	761
DN Data Traffic .....	762
DN Voice Traffic .....	765
DN Video OTT Traffic .....	777
DN DNS Server Traffic .....	779
DN Predefined Applications Traffic .....	782
DN Capture Replay .....	782
DN Synthetic .....	784
DN UDG .....	786
DN Throttling settings .....	788
<b>Chapter 9 IP Endpoints tests: configuration settings .....</b>	<b>790</b>
Global Settings .....	792
DNS Settings .....	792
Advanced Settings .....	793
UDP Buffer Settings .....	795
Impairment .....	795
Milenage .....	795
IP Client configuration settings .....	797
IP Client Ranges panel .....	797
IP Client Range panel .....	798

IP Client interface settings .....	799
IP Client Timeline .....	800
IP Client User Plane .....	800
Stateless UDP Traffic .....	801
Data Traffic .....	802
Voice Traffic .....	806
Video OTT Traffic .....	819
DNS Client Traffic .....	823
ICMP Client .....	826
Capture Replay .....	827
Synthetic .....	828
UDG .....	830
Triple Play Server configuration settings .....	835
CSCF Range panel .....	835
Media Function Range panel .....	836
Data/Video configuration settings .....	837
Data/Video Ranges panel .....	838
Data/Video Range panel .....	838
Data/Video interface settings .....	839
Data/Video User Plane .....	840
Data/Video Throttling settings .....	867
<b>Chapter 10 IPsec NG-RAN tests: configuration settings .....</b>	<b>868</b>
Global Settings .....	870
Global Settings panel .....	872
Node Start/Stop Rates .....	872
DNS Settings .....	873
Advanced Settings .....	873
DNNs panel .....	876
DNN configuration settings .....	877
Session AMBR configuration settings .....	880
ePCO configuration settings .....	881

Traffic Control Settings configuration .....	882
Impairment .....	883
QoS Flows panel .....	884
QoS Flow configuration settings .....	885
QoS Flow Packet Filter configuration settings .....	888
QoS Flow Max Packet Loss Rate settings .....	889
QoS Flow ARP configuration settings .....	889
QoS Flow MBR configuration settings .....	890
QoS Flow GBR configuration settings .....	890
Milenage .....	891
Customer Parameters .....	891
CA Certificates .....	891
UE configuration settings .....	892
UE Ranges panel .....	893
UE Range panel .....	893
Range Settings .....	895
UE Identification settings .....	895
UE Settings settings .....	896
UE Security settings .....	918
UE Subscribed AMBR settings .....	922
DNNs Config .....	922
SMS Configuration .....	925
Untrusted WiFi Settings .....	926
Network Slicing settings .....	928
UE NSSAI settings .....	928
UDM SNSSAI Mappings .....	929
Objectives .....	930
Control Plane Objective .....	930
User Plane Objectives .....	942
DN configuration settings .....	989
DN Ranges panel .....	990

DN Range panel .....	990
DN N6 interface settings .....	991
DN routes settings .....	992
DN User Plane .....	993
DN Stateless UDP Traffic .....	994
DN Data Traffic .....	996
DN Voice Traffic .....	998
DN Video OTT Traffic .....	1009
DN DNS Server Traffic .....	1012
DN Predefined Applications Traffic .....	1015
DN Capture Replay .....	1015
DN Synthetic .....	1017
DN Throttling settings .....	1019
IMS configuration settings .....	1019
CSCF Range panel .....	1020
Media Function Range panel .....	1021
RAN/Untrusted AP configuration settings .....	1021
gNodeB .....	1022
gNodeB Ranges panel .....	1022
gNodeB Range settings .....	1026
gNodeB node settings .....	1027
gNodeB NSSAI settings .....	1029
gNodeB N2 interface settings .....	1031
gNodeB N3 interface settings .....	1035
eNodeB .....	1039
eNodeB Ranges panel .....	1039
eNodeB Range Settings .....	1043
eNodeB Node Settings .....	1043
S1-U Interface Settings .....	1045
S1-MME Interface Settings .....	1046
UNAP .....	1047

UNAP Ranges panel .....	1048
UNAP Range Settings .....	1048
Passthrough interface settings .....	1050
SEG/N3IWF & Core configuration settings .....	1052
Core settings .....	1053
N6/SGi interface settings .....	1054
Core Ranges settings .....	1055
AMF Ranges configuration settings .....	1056
UPF Ranges configuration settings .....	1063
MME Ranges configuration settings .....	1065
SGW Ranges configuration settings .....	1072
SEG Ranges configuration settings .....	1074
SEG interface settings .....	1078
N3IWF Ranges configuration settings .....	1079
N3IWF interface settings .....	1086
<b>Chapter 10 RuSIM tests: configuration settings .....</b>	<b>1091</b>
Global Settings .....	1093
Global Settings panel .....	1095
Node Start/Stop Rates .....	1095
DNS Settings .....	1095
Advanced Settings .....	1096
DNNs panel .....	1099
DNN configuration settings .....	1099
Session AMBR configuration settings .....	1102
ePCO configuration settings .....	1102
Traffic Control Settings configuration .....	1104
Impairment .....	1105
QoS Flows panel .....	1106
QoS Flow configuration settings .....	1106
QoS Flow Packet Filter configuration settings .....	1110
QoS Flow Max Packet Loss Rate settings .....	1111

QoS Flow ARP configuration settings .....	1111
QoS Flow MBR configuration settings .....	1112
QoS Flow GBR configuration settings .....	1112
CA Certificates .....	1112
Customer Parameters .....	1113
External Stats Server .....	1113
Global Playlists .....	1120
UE Global Parameters .....	1120
UE configuration settings .....	1121
UE configuration panel .....	1121
UE Subscribers panel .....	1122
Range Settings .....	1124
Test Procedures .....	1143
UE Devices panel .....	1182
Device Settings .....	1182
Basic Parameters .....	1183
Radio Capability settings .....	1183
Cyphering settings .....	1185
LADPm settings .....	1185
PSL1-L2 settings .....	1186
Layer 3 Signaling .....	1188
User Plane .....	1190
Physical Layer Parameters settings .....	1191
NR Physical Layer Parameters .....	1197
5GMM Parameters settings .....	1219
EMM Parameters settings .....	1219
Additional Capabilities .....	1223
AMM Panel .....	1224
AMM Settings .....	1224
Mobility Environment settings .....	1225
DN configuration settings .....	1225

DN Ranges panel .....	1226
DN Range panel .....	1226
DN N6 interface settings .....	1227
DN routes settings .....	1228
DN User Plane .....	1229
Data Traffic .....	1230
DN Stateless UDP Traffic .....	1234
DN UDG .....	1235
DN Video OTT Traffic .....	1239
DN Voice Traffic .....	1244
DN Throttling settings .....	1254
Core configuration settings .....	1255
Core settings .....	1255
N6/SGi interface settings .....	1256
Core Ranges settings .....	1258
AMF Ranges configuration settings .....	1258
UPF Ranges configuration settings .....	1264
MME Ranges configuration settings .....	1266
SGW Ranges configuration settings .....	1270
SEG Ranges configuration settings .....	1273
SEG interface settings .....	1277
IMS configuration settings .....	1277
CSCF Range panel .....	1278
Media Function Range panel .....	1280
RU configuration settings .....	1281
RU Ranges panel .....	1281
RU Range Settings .....	1282
General Settings .....	1282
M-Plane settings .....	1284
S-Plane settings .....	1285
Compression settings .....	1286

<b>Chapter 11 Manage LoadCore licenses .....</b>	<b>1290</b>
Licensing Requirements .....	1290
License Manager .....	1290
License Server .....	1292
Licensed Test Configs .....	1293
<b>Chapter 12 Manage LoadCore users .....</b>	<b>1312</b>
Reset Password for Regular Users .....	1314
Configure LoadCore with LDAP/AD .....	1316
<b>Chapter 13 Passthrough testing .....</b>	<b>1322</b>
Overview of passthrough testing .....	1323
Passthrough test configuration notes .....	1324
<b>Appendix A 5G abbreviations .....</b>	<b>1326</b>
<b>Appendix B Predefined Applications .....</b>	<b>1332</b>
<b>Appendix C Application Actions .....</b>	<b>1346</b>
<b>Index .....</b>	<b>1402</b>


## CHAPTER 1

# Introduction



LoadCore simulates real-world subscriber models, enabling carriers and network equipment manufacturers to check the performance and reliability of data services on 5G Core (5GC) networks. Centered around realistic UE behavior simulation in various 5G deployments, several test topologies are available. You can alternatively deploy a full 5GC topology or opt for node isolation, interface testing, or service validation. Using the web-based interface, you can configure and execute capacity tests, detail a device's throughput, and model a wide variety of mobility scenarios.

Example test topology window for a UPF isolation test:

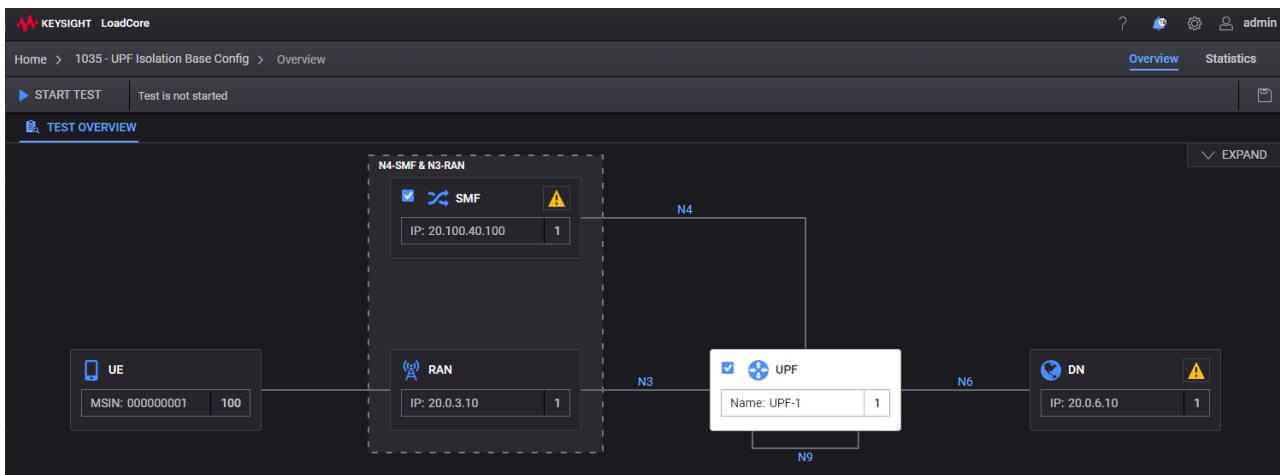

*CHAPTER 2*

## Web Interface

---

The LoadCore solution offers a simple Web UI that allows users to configure and run tests on their 5G network and also to manage tests results .

In this chapter:

<b>Access LoadCore Web UI .....</b>	<b>27</b>
<b>LoadCore Web UI .....</b>	<b>29</b>

### Access LoadCore Web UI

This chapter describes the actions that are required the first time you log in to LoadCore as the application administrator, following deployment.

- [Required information below](#)
- [Initial login and password change below](#)
- [Activate licenses using License Manager on the next page](#)
- [Configure the License Server on page 29](#)
- [Create regular user accounts on page 29](#)

#### Required information

- The IP address that you set for the LoadCore web interface during deployment.
- The IP address of the license server.  
The license server is shipped as a separate .ova file. After deploying the .ova file, you can access it using a web browser.
- Your LoadCore license activation codes (or entitlement codes).

#### Initial login and password change

LoadCore provides a default administrator account, and you will use that account on your initial login and for subsequent administrative tasks.

To log in as the administrator:

1. Enter the IP address of your deployed LoadCore instance in your browser's address field.  
LoadCore opens the Keysight login page.
2. Enter the default administrator login credentials:
  - user ID: **admin**
  - password: **admin**


3. Click **Login**.

Because this is the initial login, LoadCore requires that you change the password for the admin account.

4. Review and accept the Keysight Software End User License Agreement.

5. Change the default **admin** user password:

- Click your account name (*admin*) in the LoadCore title bar.

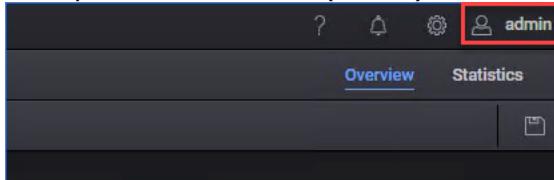

LoadCore opens the **Edit Account** page in a new browser tab.

- Click **Password** in the navigation pane.
- Enter the current password and your new password.
- Click **Save**.

Next steps:

- Activate licenses
- Configure your license server
- Create user accounts

### Activate licenses using License Manager

Once you have completed the initial admin login, you need to activate the licenses for this LoadCore deployment.

To activate your licenses:

- Select **Administration** from the setup menu (⚙).
  - Select **License Manager** from the **Administration** menu. LoadCore opens the **License Manager** page.
  - To activate your licenses:
    - Select **Activate licenses**.  
LoadCore opens the **Activate Licenses** dialog.
    - Enter your license data in the dialog box.  
You can use either activation codes or entitlement codes (one or more ).
    - Select **Load Data**, indicate the number of licenses you want to activate, then click **Activate**.
- Your new licenses—which should now be listed in the **License Manager** page—are now available for running tests.

## Configure the License Server

If you are using an external License server, then you need to select and configure your license provider:

1. Select **Applications Settings** from the setup menu (⚙).  
LoadCore opens the **Application Settings** dialog.
2. Select your **License Provider** from the drop-down list:
  - **Legacy License Server** - this option is set by default on LoadCore (using the old LicenseManager).
  - **External License Server** - select this option to set an external license server (using the new LicenseManager 1.7).
  - **Embedded License Server** - the license server that is included in the middleware.
3. Enter the **License Server IP** address (see [Required information on page 27](#), above).
4. Click **Update**.

## Create regular user accounts

Before you and other members of your organization start building and running tests, it is recommended that you—logged in as the administrator—create a *regular user account* for each individual (including yourself). Further, it is recommended that you use the admin account only for administrative activities.

Refer to [Manage CoreSIM users](#) for detailed information about user account management.

## LoadCore Web UI

After a successful authentication, the Dashboard page opens. On the top-right side of the Dashboard page, the user currently logged in LoadCore is displayed.

The LoadCore dashboard is split into several sections from where you can initiate and configure new tests or just manage previously configured test sessions and their results.

The following sections are displayed on the LoadCore Dashboard:

Section	Description
General Settings Menu	<p>The General Settings Menu is located on the top right corner of the Dashboard page. It contains the following menus:</p> <p>The <b>Help Menu</b> can be accessed by selecting the question mark icon on the top right corner of the Dashboard page. Here you can do the following actions:</p>

Section	Description
	<ul style="list-style-type: none"> <li>Access <b>LoadCoreHelp</b> where you can find info about the official LoadCore documentation and access the Rest API Browser.</li> <li>Access <b>Technical Support</b> section, where you can do the following: <ul style="list-style-type: none"> <li><b>Contact Keysight</b></li> <li><b>Collect diagnostics</b> - for more details refer to <a href="#">Collect Diagnostics</a>.</li> <li><b>EULA</b> - select this option to revisit and accept Keysight Software End User License agreement.</li> <li>Access <b>My software support...</b></li> <li><b>About LoadCore...</b> - this option displays details regarding the LoadCore software version.</li> </ul> </li> </ul> <p>The <b>Events Menu</b> can be accessed by selecting the bell icon on the top right corner of the Dashboard page. Here you can <a href="#">view notifications and test events</a>.</p> <p>The <b>Settings Menu</b> can be accessed by selecting the wheel icon on the top right corner of the Dashboard page. Here you can do the following actions:</p> <ul style="list-style-type: none"> <li><b>License Manager</b> - select this option to open the <a href="#">License Manager</a> section.</li> <li><b>Agent Management</b> - select this option to open the <a href="#">Traffic agents management</a> section.</li> <li><b>Software Updates</b> - select this option to open the <a href="#">Software Updates</a> section.</li> <li><b>Application settings</b> - select this option set or update the license server IP. For more details, refer to <a href="#">Dashboard General Settings</a>.</li> <li><b>Logs Level</b> - select this option to collect logs info. For more details, refer to <a href="#">Dashboard General Settings</a>.</li> <li><b>Data migration</b> - select this option to open the data migration tool. For more details, refer to <a href="#">Dashboard General Settings</a>.</li> <li><b>System Monitor</b> - select this option to open the system monitor tool. For more details, refer to <a href="#">Dashboard General Settings</a>.</li> <li><b>User Management</b> - select this option to open the <a href="#">Access Control</a> section. This section handles server administration security configuration and also all the users settings. For more information on the Access Control options and configuration, refer to the official <a href="#">Keycloak documentation</a>.</li> </ul> <p>The <b>User Profile Menu</b> can be accessed by selecting the user icon on the top right corner of the Dashboard page. Here you can:</p> <ul style="list-style-type: none"> <li>Access and review your user profile.</li> <li>Change LoadCore Dashboard theme. For more details, refer to <a href="#">Dashboard General Settings</a>.</li> <li><b>Log Out</b> - select this option to log out of LoadCore. For more details, refer to <a href="#">Dashboard General Settings</a>.</li> </ul>
Test sessions	This section displays your current test sessions. Each test session can be accessed by selecting it.

<b>Section</b>	<b>Description</b>
Create New Test	<p>This section allows you to create test sessions based on your test objectives. To create a new test session, select one of the following options:</p> <ul style="list-style-type: none"> <li>• Core topology: <ul style="list-style-type: none"> <li>▪ Wireless Full Core</li> <li>▪ Wireless IP Endpoints</li> <li>▪ Wireless IPsec NG-RAN</li> <li>▪ Wireless UPF Isolation</li> <li>▪ Wireless SBA</li> <li>▪ Wireless NG-RAN Simulation</li> </ul> </li> </ul> <p>Selecting one of the options above will create a new session with that type of topology loaded. The steps required for configuration are described in the <a href="#">Configure and run a test</a> section.</p>
Browse Configs	<p>This section allows you to manage previously configured test sessions. By selecting the <b>Browse Configs</b> button, you can perform additional test related actions:</p> <ul style="list-style-type: none"> <li>• open a new base configuration test</li> <li>• delete test configurations</li> <li>• save test configurations</li> <li>• import and export test configurations</li> </ul> <p>This section contains base test configurations plus previously loaded configurations. If you access one of the configurations (by selecting it), a new session is created with this configuration loaded inside of it.</p>
Browse Results	<p>This section allows you to access previous sessions results, view detailed reports and export results.</p>
Online resources	<p>This section contains links to the official LoadCore documentation.</p>

*CHAPTER 3***How Do I...**

**IMPORTANT** All the procedures presented in this section assume that you have successfully logged in to LoadCore. For more details, refer to [Access the Web UI](#).

You can perform the following actions from LoadCore:

<b>Configure and run a test</b> .....	<b>33</b>
Search Parameter .....	39
<b>Manage and use test sessions</b> .....	<b>41</b>
Save test sessions .....	42
Manage test sessions .....	42
Import and export sessions .....	45
Delete configs and sessions .....	46
<b>Upgrade the MiddleWare VM</b> .....	<b>47</b>
<b>Configure Dashboard general settings</b> .....	<b>49</b>
<b>Work with Statistics</b> .....	<b>52</b>
<b>Debug</b> .....	<b>58</b>
View Notifications and Test Events .....	58
Manage Test Results .....	60
Troubleshooting .....	61

## Configure and run a test

Based on your test objectives, you can perform the following test types:

- [Configure a Wireless Full Core test](#)
- [Configure a Wireless IP Endpoints test](#)
- [Configure a Wireless UPF Isolation test](#)
- [Configure a Wireless SBA test](#)
- [Configure Wireless NG-RAN Simulation test](#)
- [Configure Wireless IPsec NG-RAN test](#)

**IMPORTANT**

It is recommended that you decide on an IP addressing scheme before you start configuring a test. Otherwise, you can determine the IP addressing as you configure the test settings. Although you may choose to completely configure each node one at a time (including IP addresses), it is recommended that you start by configuring the IP addresses for the entire test topology. Because the 5G Core includes a large number of interfaces, systematically configuring them all at once tends to be less error-prone than configuring the addresses while configuring the other test settings.

### Configure a Wireless Full Core test

To configure this test, do the following:

1. On the LoadCore Dashboard page, under the Create New Test section, select **Wireless Full Core**.  
The Test Scenario page appears.
2. On the Test Overview panel configure Global Settings. These settings become immediately available for selection in several of the node configuration windows. You define them once and reuse them multiple times.  
For more details about Global Settings configuration, refer to [Global Settings panel](#).
3. Select the services and nodes that the LoadCore will simulate. Select any or all of the other (non-DUT) nodes and services for testing (they are all selected by default, so you can simply deselect any that you do not require for a test). LoadCore will simulate these elements during testing.
4. Configure the test settings for the simulated nodes and services. You can configure the nodes in any order, but it may be helpful to work outwards from the DUTs.

You can click on a node, select one of the ranges (this is a per-range option) and by enabling the **Device Under Test** option, that node will no longer be simulated by our LoadCore. You still need to configure the IP addresses of the DUT so the nodes simulated by LoadCore know who they need to communicate with.

For each node configuration, refer to its dedicated section, as follows:

- [Access and Mobility Management Function \(AMF\)](#)
- [Authentication Server Function \(AUSF\)](#)
- [Charging Function \(CHF\)](#)
- [Data Networks \(DN\)](#)

- [DNS Server](#)
- [Equipment Identity Register \(5G-EIR\)](#)
- [IP Multimedia Subsystem \(IMS\)](#)
- [Mobility Management Entity \(MME\)](#)
- [Network Exposure Function \(NEF\)](#)
- [Network Repository Function \(NRF\)](#)
- [Network Slice Selection Function \(NSSF\)](#)
- [Policy Control Function \(PCF/PCRF\)](#)
- [Radio Access Network \(RAN\)](#)
- [SBI Fuzzing](#)
- [Service Communication Proxy \(SCP\)](#)
- [Security Edge Protection Proxy \(SEPP\)](#)
- [Serving Gateway \(SGW\)](#)
- [Session Management Function \(SMF/PGW-C\)](#)
- [Short Message Service Function \(SMSF\)](#)
- [Unified Data Management \(UDM/HSS\)](#)
- [Unified Data Repository \(UDR\)](#)
- [User Plane Function \(UPF/PGW-U\)](#)

To locate specific parameters within the test session, use the [Search](#) functionality.

5. Select the number of traffic agents for each LoadCore node. For more details, refer to [Traffic Agents](#).
6. Configure the test settings for the simulated UEs. While there are a large number of UE configuration settings, you can often use the default values with little or no modification. For UE configuration, refer to [User Equipment \(UE\)](#).
7. On the [User Equipment \(UE\)](#), configure the test objectives. The test *Objectives* determine the behavior of the simulated UEs. The User Plane Objectives determine the volume and rate of data traffic, and The Control Plane Objectives determine the volume and rate of control plane procedures.
8. Start the test. When you click or tap the **Start Test** button, LoadCore begins the registration procedure, any other configuring or occurring control plane procedure and traffic generation.
9. Evaluate the results. Once the test is running, you can click or tap **Statistics** to start monitoring the progress of the test.

**TIP**

If there are multiple test sessions, you can quickly switch between them by selecting the small green triangle next to the name of the current test session. A drop-down list will displays all your current test sessions and allows you to change to a specific test session by selecting it.

## Configure Wireless IP Endpoints test

To configure this test, do the following:

1. On the LoadCore Dashboard page, under the Create New Test section, select **Wireless IP Endpoints**.  
The Test Scenario page appears.
2. On the Test Overview panel configure Global Settings. These settings become immediately available for selection in several of the node configuration windows. You define them once and reuse them multiple times.  
For more details about Global Settings configuration, refer to [Global Settings panel](#).
3. Select the services and nodes that the LoadCore will simulate. Select any or all of the other (non-DUT) nodes and services for testing (they are all selected by default, so you can simply deselect any that you do not require for a test). LoadCore will simulate these elements during testing.
4. Configure the test settings for the simulated nodes and services. You can configure the nodes in any order, but it may be helpful to work outwards from the DUTs.

You can click on a node, select one of the ranges (this is a per-range option) and by enabling the **Device Under Test** option, that node will no longer be simulated by our LoadCore. You still need to configure the IP addresses of the DUT so the nodes simulated by LoadCore know who they need to communicate with.

For each node configuration, refer to its dedicated section, as follows:

- [Triple Play Server](#)

To locate specific parameters within the test session, use the [Search](#) functionality.

5. Select the number of traffic agents for each LoadCore node. For more details, refer to [Traffic Agents](#).
6. Configure the test settings for the simulated IP clients. While there are a large number of IP clients configuration settings, you can often use the default values with little or no modification.  
For IP clients configuration, refer to [IP Clients](#).
7. On the [IP Clients](#), configure the test objectives.  
The User Plane Objectives determine the behavior of the simulated IP clients.
8. Start the test. When you click or tap the **Start Test** button, LoadCore begins the registration procedure, any other configuring or occurring control plane procedure and traffic generation.
9. Evaluate the results.  
Once the test is running, you can click or tap **Statistics** to start monitoring the progress of the test.

**TIP**

If there are multiple test sessions, you can quickly switch between them by selecting the small green triangle next to the name of the current test session. A drop-down list will displays all your current test sessions and allows you to change to a specific test session by selecting it.

## Configure a Wireless UPF Isolation test

To configure this test, do the following:

1. On the LoadCore Dashboard page, under the Create New Test section, select **Wireless UPF Isolation**.  
The Test Scenario page appears.
2. On the Test Overview panel configure Global Settings. These settings become immediately available for selection in several of the node configuration windows. You define them once and reuse them multiple times.  
For more details about Global Settings configuration, refer to [Global Settings panel](#).
3. Select the services and nodes that the LoadCore will simulate. Select any or all of the other (non-DUT) nodes and services for testing (they are all selected by default, so you can simply deselect any that you do not require for a test). LoadCore will simulate these elements during testing.
4. Configure the test settings for the simulated nodes and services. You can configure the nodes in any order, but it may be helpful to work outwards from the DUTs.

You can click on a node, select one of the ranges (this is a per-range option) and by enabling the **Device Under Test** option, that node will no longer be simulated by our LoadCore. You still need to configure the IP addresses of the DUT so the nodes simulated by LoadCore know who they need to communicate with.

For each node configuration, refer to its dedicated section, as follows:

- [Data Networks \(DN\)](#)
- [Radio Access Network \(RAN\)](#)
- [Session Management Function \(SMF\)](#)
- [User Plane Function \(UPF\)](#)

To locate specific parameters within the test session, use the [Search](#) functionality.

5. Select the number of traffic agents for each LoadCore node. For more details, refer to [Traffic Agents](#).
  6. Configure the test settings for the simulated UEs. While there are a large number of UE configuration settings, you can often use the default values with little or no modification.  
For UE configuration, refer to [User Equipment \(UE\)](#).
  7. On the [User Equipment \(UE\)](#), configure the test objectives.  
The test *Objectives* determine the behavior of the simulated UEs. The User Plane Objectives determine the volume and rate of data traffic, and The Control Plane Objectives determine the volume and rate of control plane procedures.
  8. Start the test. When you click or tap the **Start Test** button, LoadCore begins the registration procedure, any other configuring or occurring control plane procedure and traffic generation.
  9. Evaluate the results.
- Once the test is running, you can click or tap **Statistics** to start monitoring the progress of the test.

**TIP**

If there are multiple test sessions, you can quickly switch between them by selecting the small green triangle next to the name of the current test session. A drop-down list will displays all your current test sessions and allows you to change to a specific test session by selecting it.

## Configure a Wireless SBA test

To configure this test, do the following:

1. On the LoadCore Dashboard page, under the Create New Test section, select **Wireless SBA**. The Test Scenario page appears.
2. On the Test Overview panel configure Global Settings. These settings become immediately available for selection in several of the node configuration windows. You define them once and reuse them multiple times.  
For more details about Global Settings configuration, refer to [Global Settings panel](#).
3. Select the services and nodes that the LoadCore will simulate. Select any or all of the other (non-DUT) nodes and services for testing (they are all selected by default, so you can simply deselect any that you do not require for a test). LoadCore will simulate these elements during testing.
4. Configure the test settings for the tested nodes and services. You can configure the nodes in any order, but it may be helpful to work outwards from the DUTs.

You can click on a node, select one of the ranges (this is a per-range option) and by enabling the **Device Under Test** option, that node will no longer be simulated by our LoadCore. You still need to configure the IP addresses of the DUT so the nodes simulated by LoadCore know who they need to communicate with.

For each node configuration, refer to its dedicated section, as follows:

- [Authentication Server Function \(AUSF\)](#)
- [Charging Function \(CHF\)](#)
- [Network Repository Function \(NRF\)](#)
- [Network Slice Selection Function \(NSSF\)](#)
- [Policy Control Function \(PCF\)](#)
- [Service Communication Proxy \(SCP\)](#)
- [Short Message Service Function \(SMSF\)](#)
- [Unified Data Management \(UDM\)](#)
- [Unified Data Repository \(UDR\)](#)

To locate specific parameters within the test session, use the [Search](#) functionality.

5. Configure the test settings for the SBA tester node and simulated nodes. For more details, refer to SBA tests: configuration settings.
6. Select the number of traffic agents for each LoadCore node. For more details, refer to [Traffic Agents](#).
7. Configure the test settings for the simulated UEs. While there are a large number of UE configuration settings, you can often use the default values with little or no modification.  
For UE configuration, refer to [User Equipment \(UE\)](#).
8. On the [User Equipment \(UE\)](#), configure the test objectives.

The test *Objectives* determine the behavior of the simulated UEs. The User Plane Objectives determine the volume and rate of data traffic, and The Control Plane Objectives determine the volume and rate of control plane procedures.

9. Start the test. When you click or tap the **Start Test** button, LoadCore begins PDU session establishment and traffic generation.
10. a. Evaluate the results.

Once the test is running, you can click or tap **Statistics** to start monitoring the progress of the test.

**TIP**

If there are multiple test sessions, you can quickly switch between them by selecting the small green triangle next to the name of the current test session. A drop-down list will displays all your current test sessions and allows you to change to a specific test session by selecting it.

## Configure Wireless NG-RAN Simulation test

The NG-RAN simulation test is a Full Core test topology simulation that has all the nodes disabled, except NG-RAN, and the AMF and UPF nodes are configured as DUTs. You can enable other nodes based on your test objectives.

To configure this test, on the LoadCore Dashboard page, under the Create New Test section, select **Wireless NG-RAN Simulation**. The Test Scenario page appears.

The Test Scenario configuration is similar with the Full Core test one, so for more details regarding the test set-up work-flow, refer to [Configure a Wireless Full Core test](#).

## Configure Wireless IPsec NG-RAN test

To configure this test, do the following:

1. On the LoadCore Dashboard page, under the Create New Test section, select **Wireless IPsec NG-RAN**.  
The Test Scenario page appears.
2. On the Test Overview panel configure Global Settings. These settings become immediately available for selection in several of the node configuration windows. You define them once and reuse them multiple times.  
For more details about Global Settings configuration, refer to [Global Settings panel](#).
3. Select the services and nodes that the LoadCore will simulate. Select any or all of the other (non-DUT) nodes and services for testing (they are all selected by default, so you can simply deselect any that you do not require for a test). LoadCore will simulate these elements during testing.
4. Configure the test settings for the simulated nodes and services. You can configure the nodes in any order, but it may be helpful to work outwards from the DUTs.

You can click on a node, select one of the ranges (this is a per-range option) and by enabling the **Device Under Test** option, that node will no longer be simulated by our LoadCore. You still need to configure the IP addresses of the DUT so the nodes simulated by LoadCore know who they need to communicate with.

For each node configuration, refer to its dedicated section, as follows:

- [SEG & Core](#)
- [Data Networks \(DN\)](#)
- [IP Multimedia Subsystem \(IMS\)](#)
- [Radio Access Network \(RAN\)](#)

To locate specific parameters within the test session, use the [Search](#) functionality.

5. Select the number of traffic agents for each LoadCore node. For more details, refer to [Traffic Agents](#).
6. Configure the test settings for the simulated UEs. While there are a large number of UE configuration settings, you can often use the default values with little or no modification. For UE configuration, refer to [User Equipment \(UE\)](#).
7. On the [User Equipment \(UE\)](#), configure the test objectives.  
The test *Objectives* determine the behavior of the simulated UEs. The User Plane Objectives determine the volume and rate of data traffic, and The Control Plane Objectives determine the volume and rate of control plane procedures.
8. Start the test. When you click or tap the **Start Test** button, LoadCore begins the registration procedure, any other configuring or occurring control plane procedure and traffic generation.
9. Evaluate the results.


Once the test is running, you can click or tap **Statistics** to start monitoring the progress of the test.

**TIP**

If there are multiple test sessions, you can quickly switch between them by selecting the small green triangle next to the name of the current test session. A drop-down list will displays all your current test sessions and allows you to change to a specific test session by selecting it.

## Search Parameter

The Search option is situated adjacent to the Test Overview tab within the application's user interface.

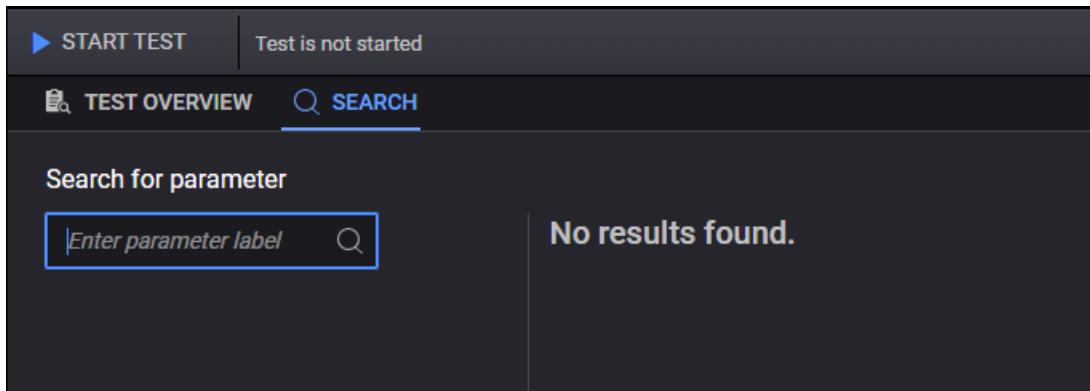

The parameter Search functionality enables users to locate specific parameters within a test session. This feature assists in identifying paths where a parameter is configured, aiding navigation and configuration processes.

**IMPORTANT**

This functionality is exclusive to the test session level and does not extend its search functionality to other sessions or topologies open in the application.

To use the Search functionality, select the **Search** tab and specify the name of the parameter into the **Search for parameter** field.

Upon entering the parameter name (for example, *plmn*), the search generates a list of paths where the parameter is configured within the topology.

The screenshot shows a search interface with a search bar containing 'plmn'. Below the search bar, it says '(37 results)'. To the right, there is a list of 5 search results, each with a small icon and a path description:

- RAN → gNodeB → ranges → [1] → Node Settings → PLMN MCC
- RAN → eNodeB → ranges4G → [100000] → Node Settings → PLMN MCC
- AMF → ranges → [1] → Node Settings → PLMN MCC
- AMF → ranges → [1] → Remote SBA Nodes → PLMN MCC
- SMF/PGW-C → ranges → [1] → Node Settings → PLMN MCC

Each result displays the path(s) within the topology where the parameter can be configured.


Clicking on any of the displayed paths enables users to navigate directly to that specific path within the topology.

The screenshot shows the RAN configuration interface for a gNodeB. On the left, a sidebar lists 'gNodeB' (selected), 'eNodeB', and 'Passthrough Interface Settings'. The main area is titled 'Ranges Connectivity' and shows a 'RANGES' section with a single entry: 'Name: gNodeB-1'. To the right, there are several configuration tabs:

- RANGE**: Device Under Test (switch off), Range Count (1).
- Range Settings**: Node Settings (selected), NSSAI, N2 Interface Settings, N3 Interface Settings.
- Node Settings**: Name (gNodeB-1), PLMN MCC (226), PLMN MNC (04), Tracking Area Code (1011), gNodeB ID (78), gNodeB ID Length (22), Cell ID (1), Connection Timeout (ms) (1000), Perform Load Balancing (switch off).
- EPS Fallback Settings**: Enable EPS Fallback (unchecked), User Plane Security (unchecked), Public Warning System (unchecked).

## Limitations


- **Search Functionality:** Supports searching for parameters to be configured but not for the values of those parameters. For example, searching for the value 226 will not return any results.

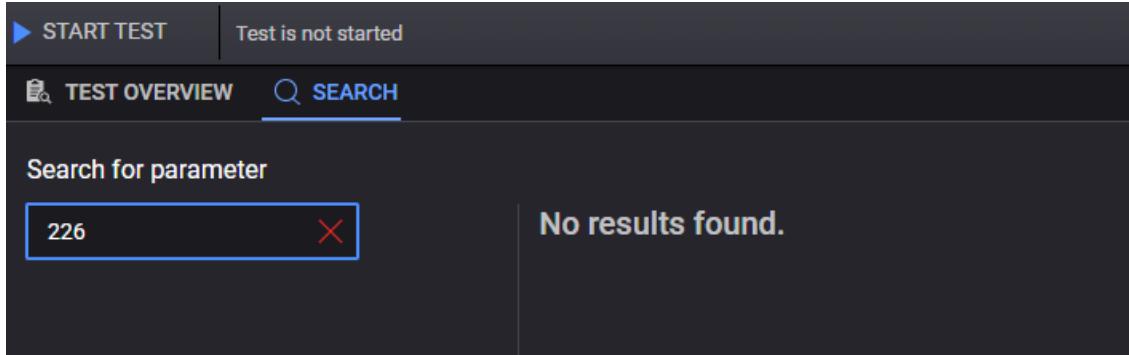

- **Highlighting:** The searched parameter within the search results or selected path is not highlighted.

## Additional Information

- **Matched Results Display:** The number of matched results is exhibited below in the search field.
- **Lists and Indices:** In cases of lists, the index displayed in the result path corresponds to the id of the object, mirroring the value found in the exported configuration or obtained from the REST API.



- **Search Mechanism:** The search mechanism operates in two steps: finding matching results and navigating to the matched result. However, note that navigating to the matched result might not be supported for complex custom components or specific corner case paths.
- **Non-Editing Functionality:** The Search tool functions solely to display results and does not facilitate inline editing of parameter values.

## Manage and use test sessions

When you create a new test, LoadCore establishes a *test session* which remains available until such time as you decide to delete it (if ever). This way, you can access existing test configurations to change the settings and to view details, or to re-run a test session.

### Chapter contents:


<b>Save test sessions</b>	42
<b>Manage test sessions</b>	42
<b>Import and export sessions</b>	45
<b>Delete configs and sessions</b>	46

## Save test sessions


Once a test is configured, you can record its configuration as a session, edit and save it for future use.

To save a configuration file, do the following:

1. Click the **Save** icon from the upper-right corner of the **Test Overview** page.
2. Click **Save config** to quickly save your test configuration.

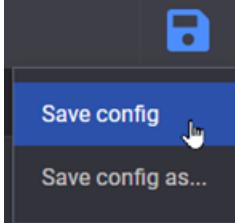


3. Click **Save config as** to save your test configuration with a specific name.
4. Provide the name for the test configuration in the **Save config as** window and click the **Save as** button.

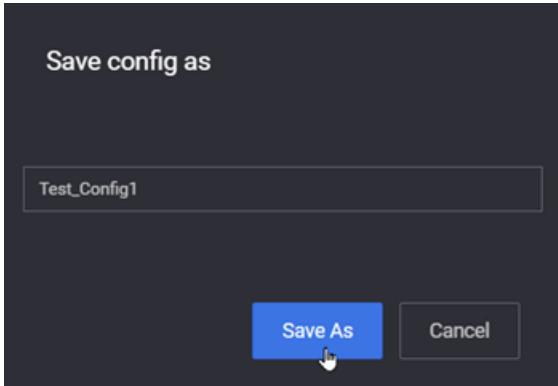

## Manage test sessions

Managing saved tests is done on the **Browse Configs** page. To access the page, click the **Browse Configs** button from the main LoadCore Dashboard.

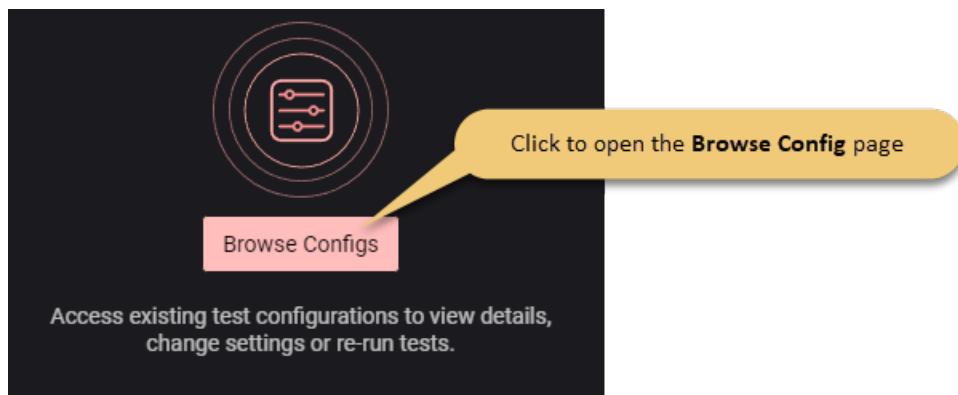

The **Recent Configs** list contains default configurations plus previously loaded configurations. If you select one of the configurations (by clicking it) a new session is created with this configuration loaded inside of it.


**NOTE** If the selected configuration is already opened in an existing session, a message is displayed allowing you to open that session or to create a new session based on the selected test configuration.

The **Browse Configs** page is split into two main sections, each one having a specific role in handling your tests configurations:

- [View configuration categories on the facing page](#)
- [Manage configurations on the facing page](#)

## View configuration categories

The **Config Categories** area allows you to switch between displaying your recent test configurations or displaying them based on their category.

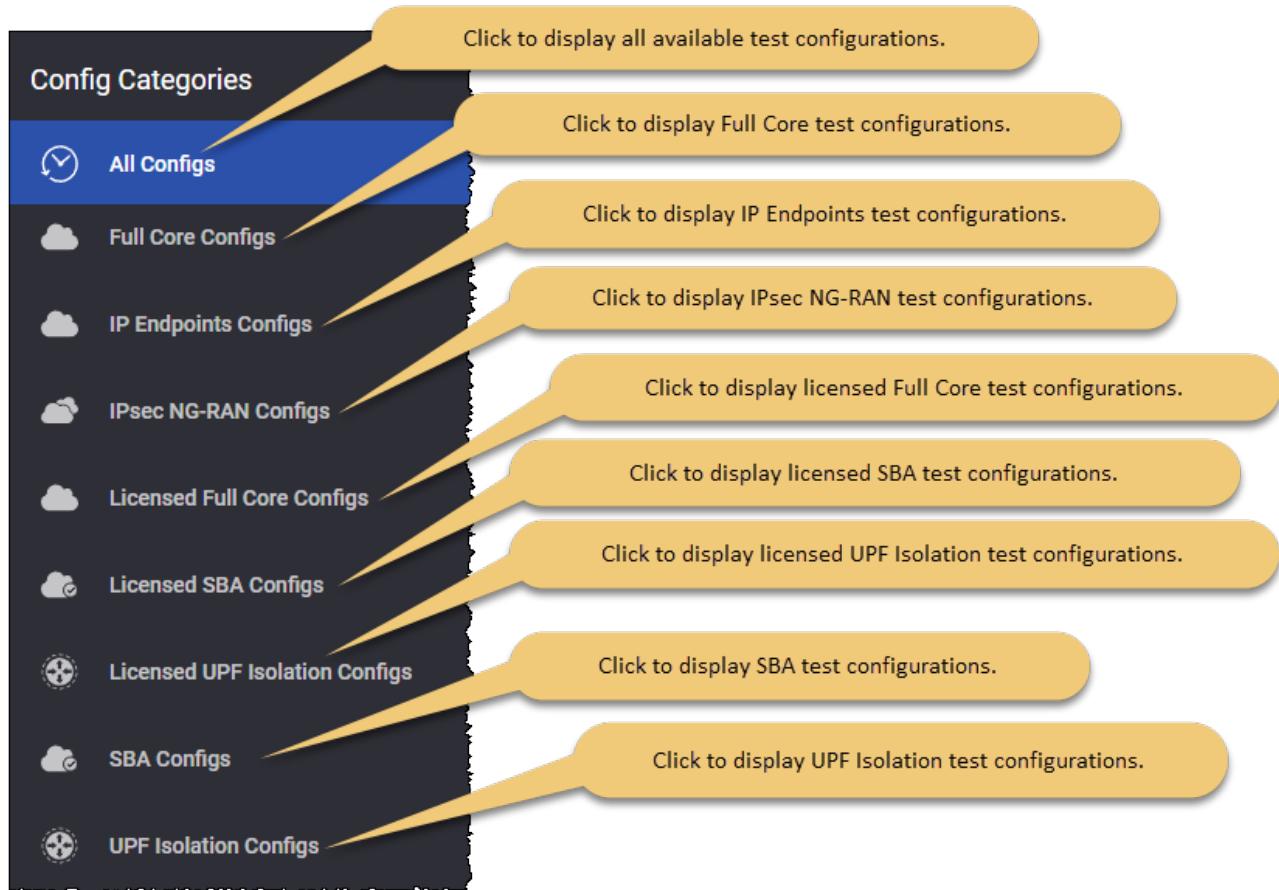

## Manage configurations

On this section, LoadCore displays your test configurations suite, offering you details on the specific test configuration and allowing you search for a specific configuration, delete it or to export it.

The screenshot shows a table of test configurations with the following columns:

1	2	3	4
Config Name	Last accessed	Application	Config Type
5 Full Core New	May 11, 2023, 12:55:29 PM	Full Core	admin@example.org
6 Full Core Base Config	May 11, 2023, 12:55:07 PM	Full Core	system

Callouts numbered 1 through 9 point to specific elements:

- Details on the test name.
- Timestamp of the last test session.
- Application column header.
- Config Type column header.
- Config Name column header.
- Checkmark next to the selected configuration.
- Lock icon next to the configuration name.
- Delete button.
- Export button.

1	Details on the test name.
2	Timestamp of the last test session.

3	Indicates the test type.
4	Indicates the test owner.
5	Click the name link. You can open the current session from here or can create a new session based on this configuration.
6	Use to select a test configuration.
7	Indicates a base configuration <b>NOTE</b> For the base configurations, the test owner is <i>system</i> .
8	Click the button to delete the test configuration.
9	Click the button to export the test configuration.

## Import and export sessions

You can import and export test configurations by clicking the **Import** or **Export all** buttons which are found on the **Config Categories** area of the **Browse Configs** page.

If you want to export only a specific configuration, select it from the configuration list and select **Export**.

### Import test configurations

To import a saved test configuration from disk, do the following:

1. From the **Dashboard** page, click the **Browse Configs** button. The **Browse Configs** page appears.
2. From the **Test Categories** section, click the **Import** button.
3. Select the test configuration you want to import from the ones available at your download location.
4. Click **Open** to add the test configuration to the dashboard.

If a test is imported twice with the same name, the second time the test name will be displayed with details about the date and time of the import.

Config Name	Last accessed	Application	Config Type	Owner
Full Core New (copy from May 11 10:03:44)	May 11, 2023, 1:03:44 PM	Full Core	admin@example.org	
Full Core New	May 11, 2023, 12:55:29 PM	Full Core	admin@example.org	
Full Core Base Config		Full Core	system	

**NOTE** By default, when you import a new test, the displayed name is the name you have in the JSON file under `displayName` - in this case, the `displayName` is Full Core Base Config. The second time it is imported, the test name is concatenated with `<date> <time>`.

## Export a saved test configuration

To export a saved configuration, do the following:

1. From the **Dashboard** page, click the **Browse Configs** button. The **Browse Configs** page appears.
2. From the **Test Categories** section, select the category containing the test to be downloaded.
3. Select the test configuration you want to download and click the **Export** button. When in tile view mode, click the **Download** button from the test tile.
4. Specify the download file name and select the download location.
5. Click **OK** to download the test configuration.

**NOTE**

The configuration file is exported as a JSON file.


## Delete configs and sessions

The terms *test config* and *test session* are not entirely synonymous. A "config" refers to a configuration definition file (JSON format), whereas a "session" is an instance of that file that is loaded in memory and is capable of being run.

### How to delete a LoadCore config

To delete a saved configuration from the **Browse Configs** page, do the following:

1. From the **Dashboard** page, click the **Browse Configs** button. The **Browse Configs** page appears.
2. From the **Test Categories** section, select the category containing the test to be deleted.
3. Select the test configuration you want to delete and click the **Delete** button.

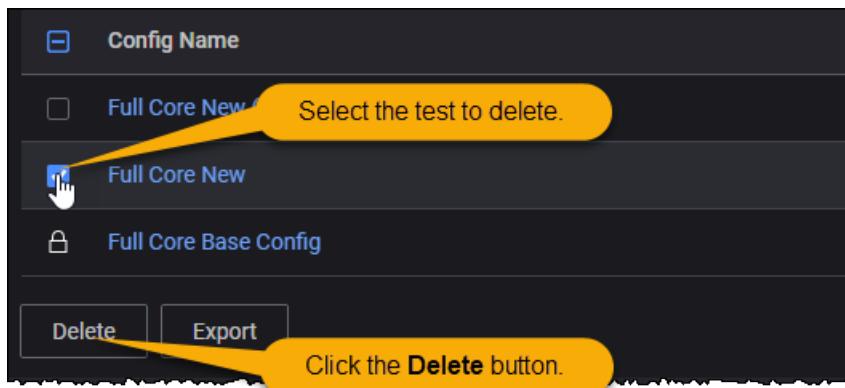

This will delete the configuration from the database, but not the session itself.

### Important notes

Before deleting a session, be aware of the following application behaviors:


- The session will be permanently removed and cannot be recovered.
- However, when you delete a session, the session's config is not deleted. Therefore, you can create new sessions based on that config.

- If you have a session open, and you delete the config upon which the session is based, the session is not deleted. Therefore, you can open the session and save a new config from it.

## How to delete a Keysight Open RAN Simulators, Cloud Edition 5.0 session

You can also delete a test session from the Dashboard:

1. Go to the **Dashboard**.
2. Locate the tile for the session that you plan to delete, then click the **X** in the upper right corner.  
LoadCore opens a confirmation dialog.

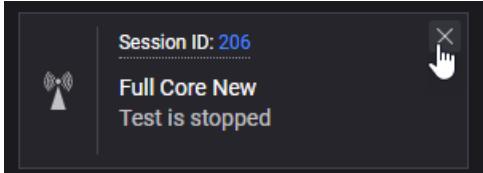


3. Select **Delete** to confirm the action.

## Upgrade the MiddleWare VM

To upgrade the LoadCore MiddleWare VM, do the following:

1. Download the latest upgrade file from LoadCore dedicated section on Keysight Software Manager:  
<https://ksm.software.keysight.com>  
**NOTE** You will need to login with the account for which the licenses have been assigned/generated.
2. Before initiating the upgrade, make sure all the sessions are closed and the configs have been exported.
3. From the Settings Menu (⚙️), select **Software Updates**.

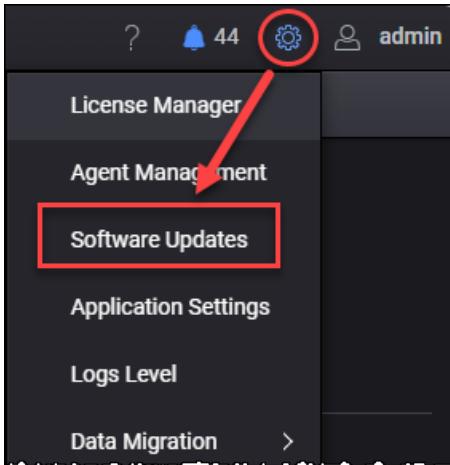

4. Use the **Select packages for upload** button to choose the file that was downloaded at [step 1](#).

**Installed Software:**

ATI Update 23.4.4	KCOS Framework 0.38.3	Ready to be installed: There is no software ready to be installed.
KCOS Host System 0.33.5	KCOS Keycloak Operator CRDs 17.0.0-ks0.4.16	
KCOS local storage 0.38.3	KCOS SSO 0.15.28	
<b>Keysight Open RAN Simulators, Keysight Nimbus Mosaic</b> <b>Cloud Edition</b> 0.1.0 4.2.0-3747-346		
Keysight NimbusMosaic 0.9.33-23-1	WAP 1.0.11483+releaseloadcore42	

**Select packages for upload**

**Start update**   **Reset current changes**

Wait for the upload to finish. The new version will show highlighted in green on the right. Select **Start update**.

**NOTE**

The upgrade process can take up to 30 minutes. It is recommended that the Middleware should not be used during this time.

Alternatively the upgrade can be done from the command line (after following [step 1](#) and [step 2](#)):

3. Copy the previously downloaded upgrade file (for example, `LoadCore-MDW-4.3.0-1310-459.tar`) to the home folder `/home/admin`.
4. To start the upgrade process run the command:

```
kcov deployment offline-install MDW-xxx-xxxx-xxx.tar (replace with the appropriate version)
```

For this example, the command is:

```
kcov deployment offline-install MDW-4.3.0-1310-459.tar
```

# Configure Dashboard general settings

## Access Control

This section handles server administration security configuration and also all the [users settings](#).

For more information on the Access Control options and configuration, refer to the official Keycloak [documentation](#).

For more details about LDAP configuration, refer to [Configure LDAP](#).

For more details about password reset for regular users, refer to [Password Reset](#).

## Software Updates


This section displays info related to the current installed software version of LoadCore.

To update to a newer version, do the following:

1. Select the wheel icon > **Software Updates**.
2. Select **Select Packages For Upload** and open the folder containing the upgrade file.
3. Select the upgrade file and select **Open**.
4. Select **Start Update** to initiate the update process.
5. If needed, you can remove the update packages from the update section by selecting **Reset Current Changes**.

## Application settings

This sections allows you to select the license provider and, if needed, update the license server IP address.

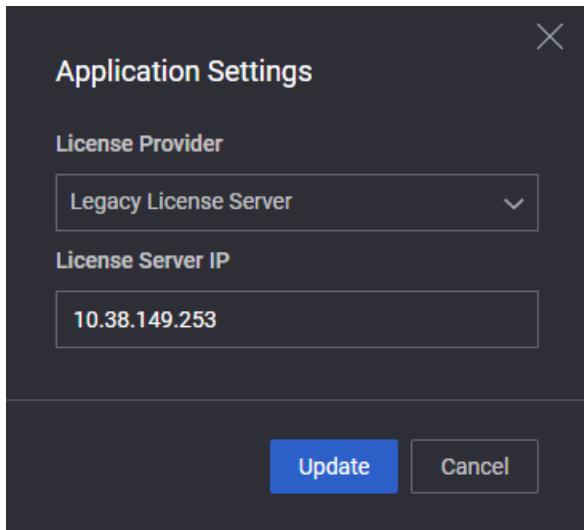

The following options are available for License Provider:

- **Legacy License Server** - this option is set by default on LoadCore (using the old LicenseManager).


- **External License Server** - select this option to set an external license server (using the new LicenseManager 1.7 available with the LoadCore 3.2 release).
- **Embedded License Server** - the license server that is included in LoadCore MW.

## Collect Diagnostics

LoadCore diagnostics tool is used to collect debug logs and other information needed in troubleshooting any encountered issues.

To collect diagnostics, do the following:

1. Select the Help menu (question mark icon) > **Collect Diagnostics**. The Diagnostics window appears.

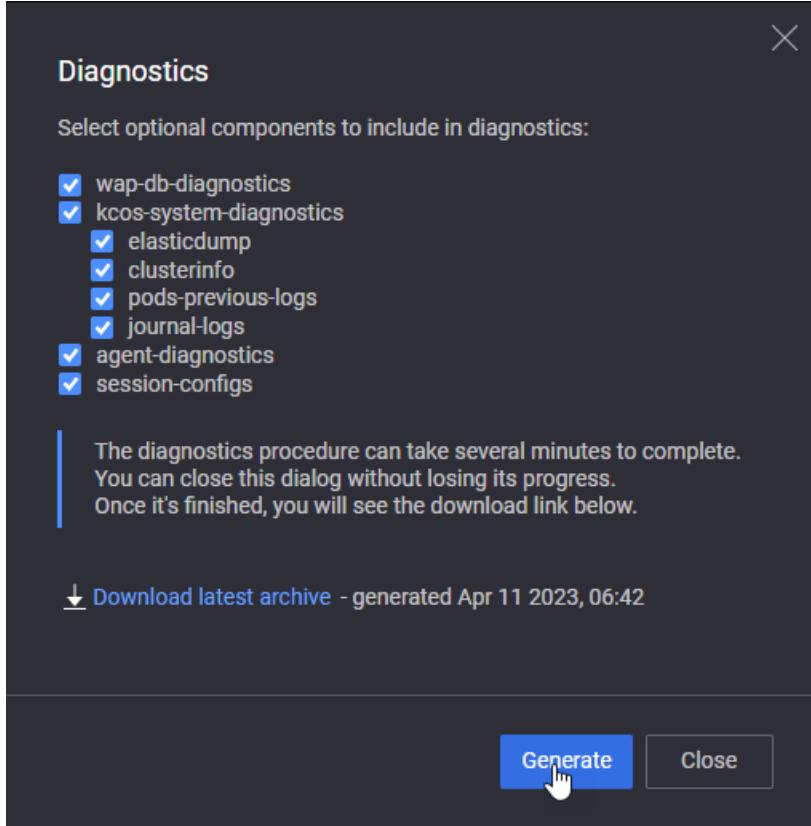

2. If needed, select the optional components to include in the diagnostics report.
3. Select **Generate**. The diagnostics procedure can take several minutes to complete. Once it is finished, a download link will be displayed.
4. Select the download link in order to retrieve the diagnostics report.

## Collect Logs

To collect logs info, do the following:

1. Click on **Logs Level** in the **Settings** menu. The Controller Logs Level window appears.
2. Select the log level used to collect diagnostics. Available options are:

- **ERROR**- Designates messages indicating that an error has occurred that impacts application stability.
  - **WARN** - Designates messages indicating that an error has occurred that potentially impacts application stability.
  - **INFO** - Designates informational messages that highlight the progress of the application at coarse-grained level.
  - **DEBUG** - Designates fine-grained informational events that are most useful for debugging the application.
4. Click **Generate**. The diagnostics procedure can take several minutes to complete. Once it is finished, a download link will be displayed.
  5. Select the download link in order to retrieve the diagnostics report.

## System Monitor

LoadCore system monitor tool is used to check the controller health and review the used resources and their availability. Also, it allows to perform a system cleanup:

1. Click on **System Monitor** in the **Settings** menu.
2. Select the required option:
  - **Controller Health** - this will open the Controller Health dashboard, where the available controller resources are displayed.
  - **System Cleanup** - this will open the System Cleanup window where the size of the following items are displayed: **Logs size**, **Diagnostics size**, **Migration size**. Use the **Delete** button to delete the archives.

## Data Migration

LoadCore data migration tool allows you to migrate controller data from one setup to another. You can export authentication data and other data (such as configurations, external license servers, controller proxies, and results) from a source controller, which you can then import to a new target controller. When the import procedure is complete, the resources that you imported from the source controller will have replaced all the existing data on the target controller.

**IMPORTANT** The export procedure cannot run when the available controller disk space is lower than 50%. To free up disk space by removing diagnostics, logs, or migration archives, use the **System cleanup** option under the **Settings** menu > **System Monitor**.

To export data from the source controller:

1. From the **Settings** menu, select **Data Migration** > **Export Controller**. The **Export Controller Data** window opens informing you of the components to be exported.
2. Click the **Start** button. A notification at the bottom of the screen informs you that the migration package is being queued in preparation for export, and the **Export Controller Data** will automatically close.

When all the export resources are collected and available on your local system, a notification informs you that the export package was created.

The export package is downloaded on your local system in the form of a compressed .zip file, under your usual downloads location (for example, C:\Users\<user name>\Downloads\migrate\_package1676028828)

To import data on the target controller:

1. From the **Settings** menu, select **Data Migration > Import Controller**.  
The **Import Controller Data** window opens.
2. Click **Select migrate package for upload**, and select the migration package that you exported from the source controller, and click **Open**.  
A warning is displayed informing you that the import procedure cannot be canceled or reverted after it is initiated.
3. Confirm acknowledgment of data loss by selecting the **I understand this will wipe existing data** check box.
4. Click the **Start** button.  
The import procedure initiates. The application screen is grayed out during import and will become active again when the import procedure is complete.
5. After the import procedure is finished, close the **Import Controller Data** window.
6. Log out of the web UI, and log in again to see the newly imported controller data.

## Change Dashboard theme

By default, the LoadCore Dashboard theme is set to Dark theme.

To change the dashboard theme, do the following:

1. Select the user profile icon on the top right corner of the Dashboard page. The user settings menu appears.
2. From the user settings menu, select **Preferences > Switch Theme**.

## Log out

To log out of the LoadCore browser-based Web UI, select the user profile menu from the upper-right corner of the Dashboard page and select **Log Out**. You will be redirected to the log in page.

## Work with Statistics

The **Statistics** page has several panels, which can be dragged and dropped and rearranged on the dashboard. They can also be duplicated or removed, and there are a wide variety of formatting options for each panel.


### NOTE

LoadCore presents a default statistics dashboard, which is based on Grafana. You can change the dashboard to accommodate your own needs and select from many Key Performance Indicators (KPIs) that the agent exposes towards the middleware.

### Filter Per UE Statistics

Select the drop-down menu (1) on the top left and switch between **Global Statistics** to **Per UE statistics**.

By default the UEs will be displayed in IMSI ascending order and will be split in pages of 10 each:

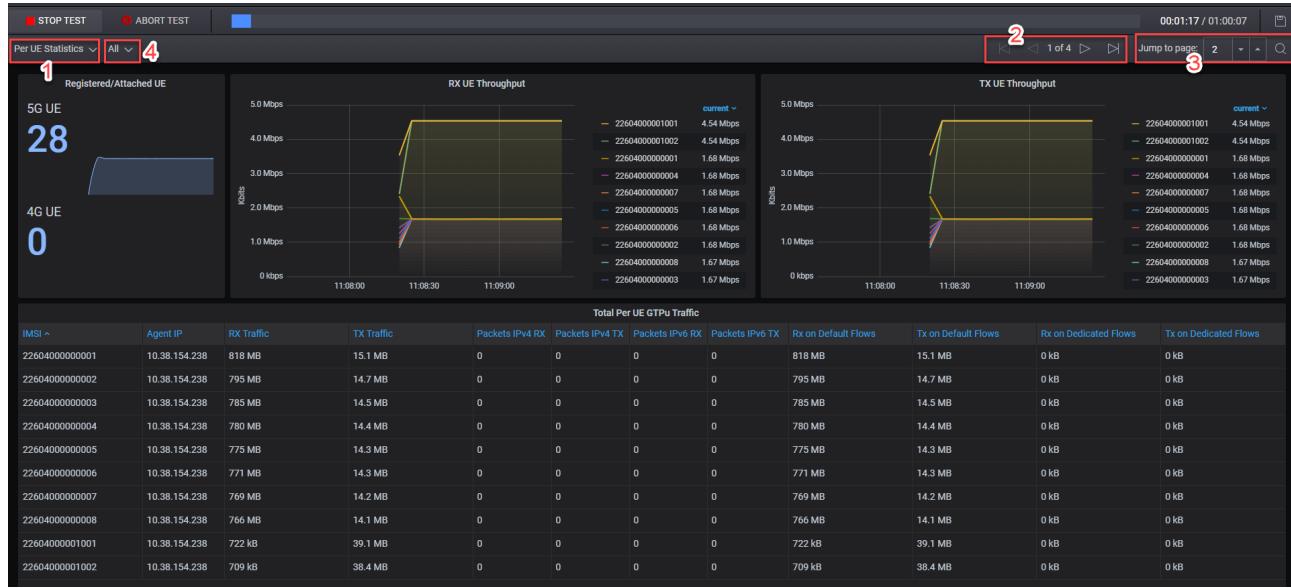

The arrow buttons (2) on the upper right can be used to switch between pages, one by one.


Type in a number in the **Jump to page** field (3) and then click the magnifying glass button to jump directly to the chosen page.

Expand the **All** drop-down menu (4) and select **Filtered**. To view and change the filter conditions click on the switch button (5).


You can add multiple groups and conditions. You can change the operator from **AND** to **OR** by clicking on the respective button (6).

Select the **Filter** button (7) on the top right to apply the chosen parameters. Wait a few seconds for the filter to take effect.


**NOTE** After a filter is applied, only the first 10 results are displayed (even though the filtered data produce more than 10 results).

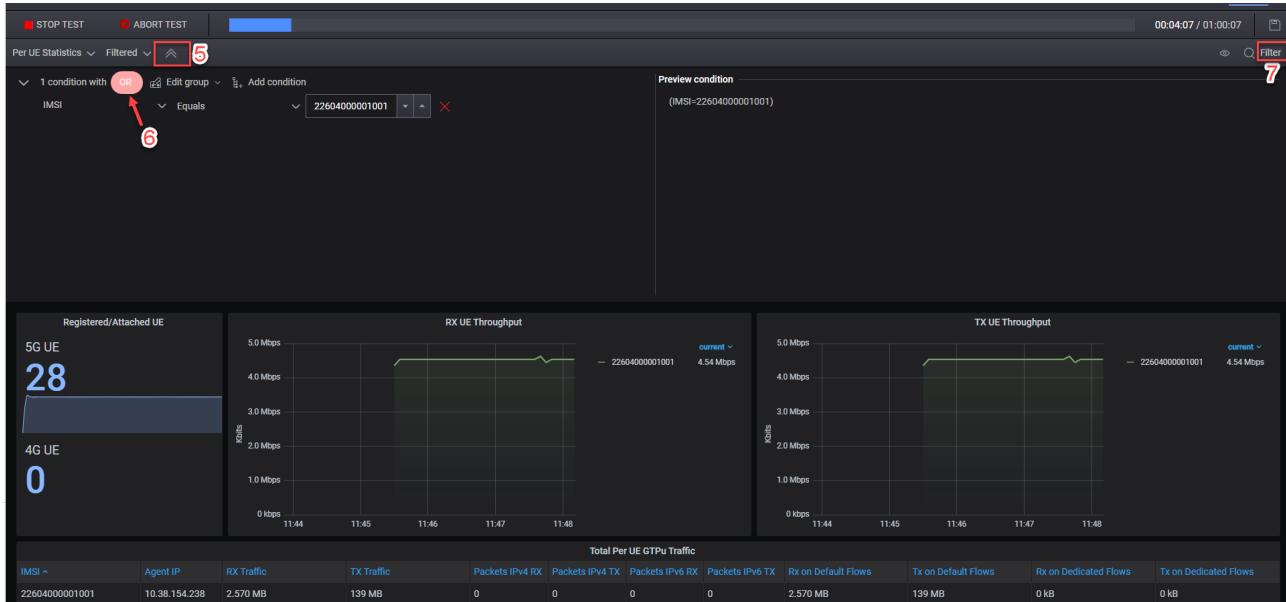


It can be searched and applied a condition for every per UE statistic (8) that is generated in the test: IMSI, IP, registration success/failed, N2 handover, number of bytes or packets, NSSAIs, etc.

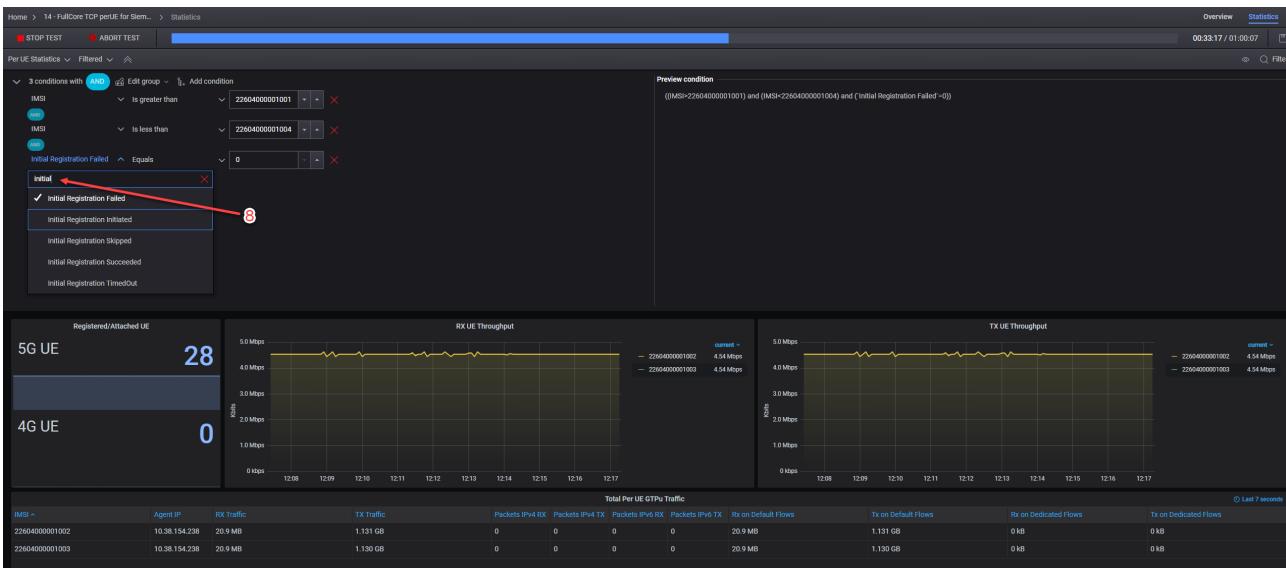


The relational operator (9) can also be changed as needed.

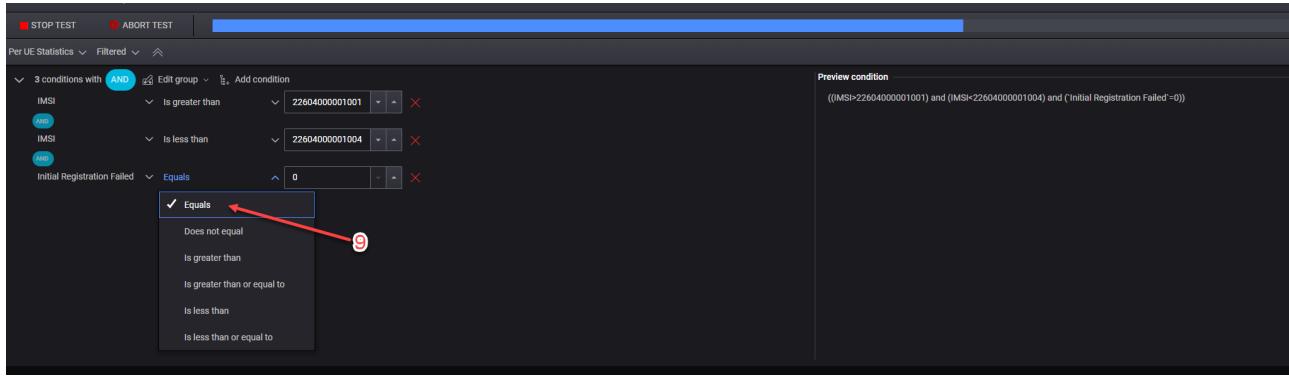

If the **AND/OR** button is clicked, it will change for all conditions in the group, so groups are needed for different logical operators. In the below image there is one group with just one IMSI and another group with 2 IMSI conditions.

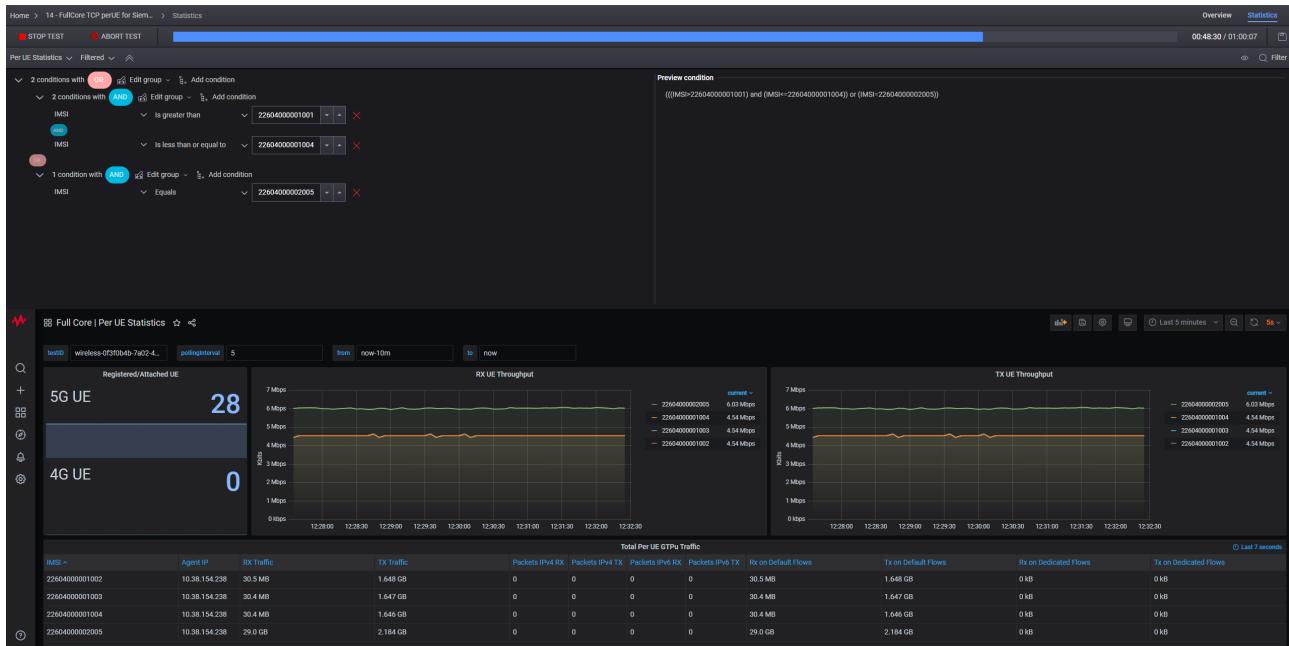


The filter conditions can also be seen and changed from its respective json, by clicking the eye button (**10**). This can also be used to copy/paste a filter from a different test.

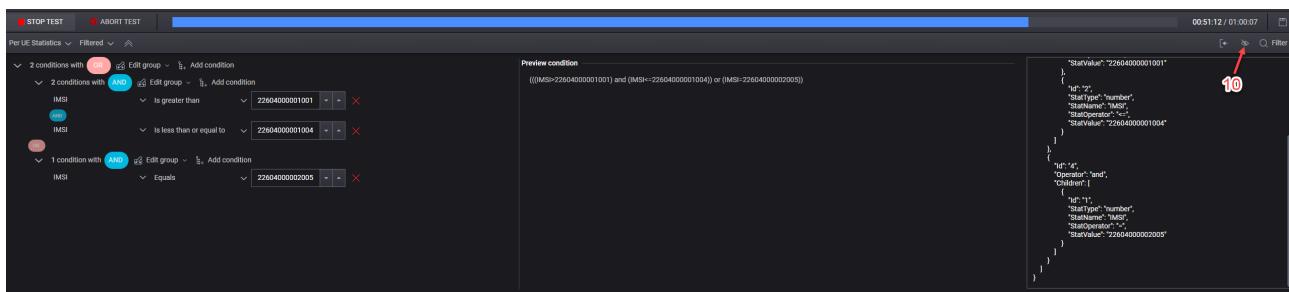

## Filter Per PDU Statistics

Select the the drop-down menu (1) on the top left and switch between **Global Statistics** to **Per PDU Statistics**.

By default on each page there are showed first in IMSI order and then in PDU order the first 10 results. For example, below it displays the first 5 IMSIs, each having 2 PDUs:

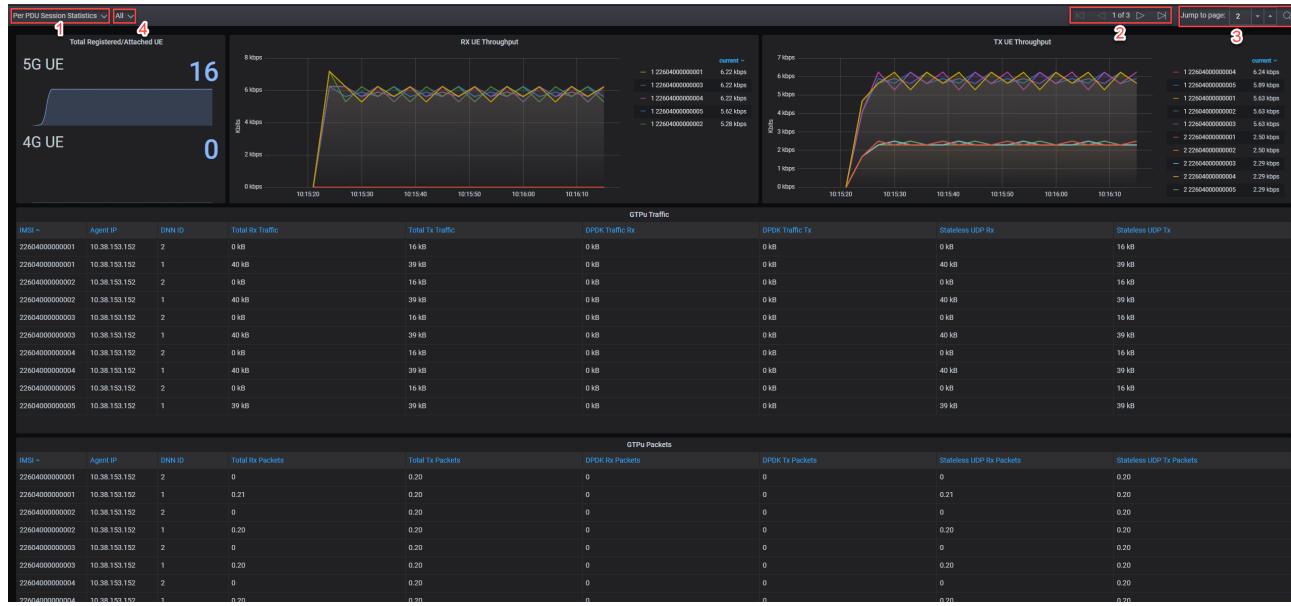


Same as in per UE statistics, the arrow buttons (2) on the upper right can be used to switch between pages, one by one.

Type in a number in the **Jump to page** field (3) and then click the magnifying glass button to jump directly to the chosen page.

Expand the **All** drop-down menu (4) and select **Filtered**. To view and change the filter conditions click on the switch button (5).


Filtering works the same as in Per UE statistics, only the conditions/statistics that can be selected are slightly different. Below it was filtered only by DNN 2, which does only uplink traffic:

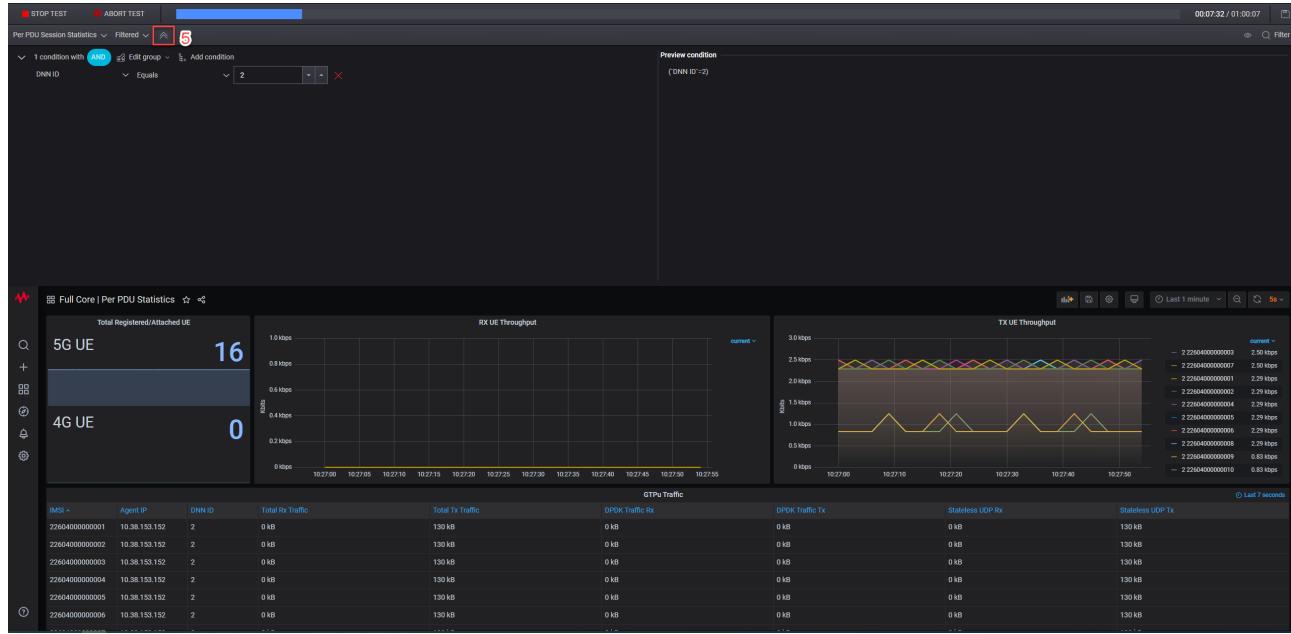

## Filter Per QoS Statistics

Select the drop-down menu (1) on the top left and switch between **Global Statistics** to **Per QoS Statistics**.

By default on each page there are showed first in IMSI order and then in QoS order the first 10 results. For example, below it displays the first 3 IMSIs each with 3 QoS flows and then the 4th IMSI with its 1st QoS flow. Only the 1st and 2nd QoS flow are used for downlink traffic:

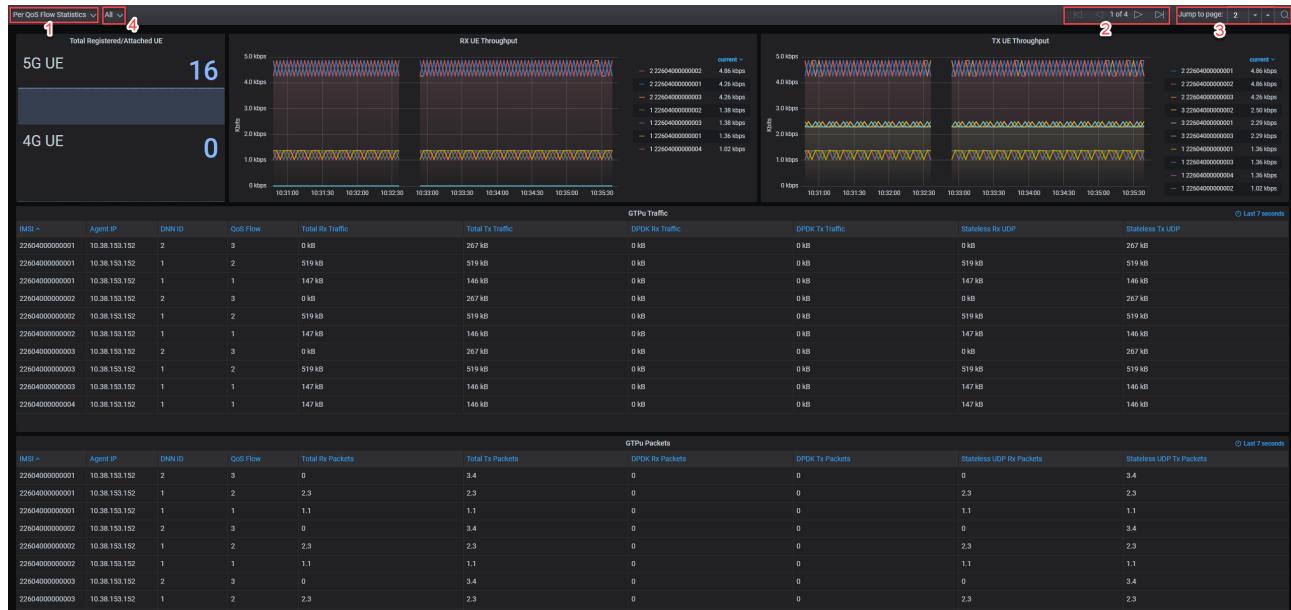


Same as in per UE and per PDU statistics, the arrow buttons (2) on the upper right can be used to switch between pages, one by one.

Type in a number in the **Jump to page** field (**3**) and then click the magnifying glass button to jump directly to the chosen page.

Expand the **All** drop-down menu (**4**) and select **Filtered**. To view and change the filter conditions click on the switch button (**5**).

Filtering works the same as in Per UE and per PDU statistics, only the conditions/statistics that can be selected are slightly different. Below it was filtered by QoS flow 3, and IMSI:

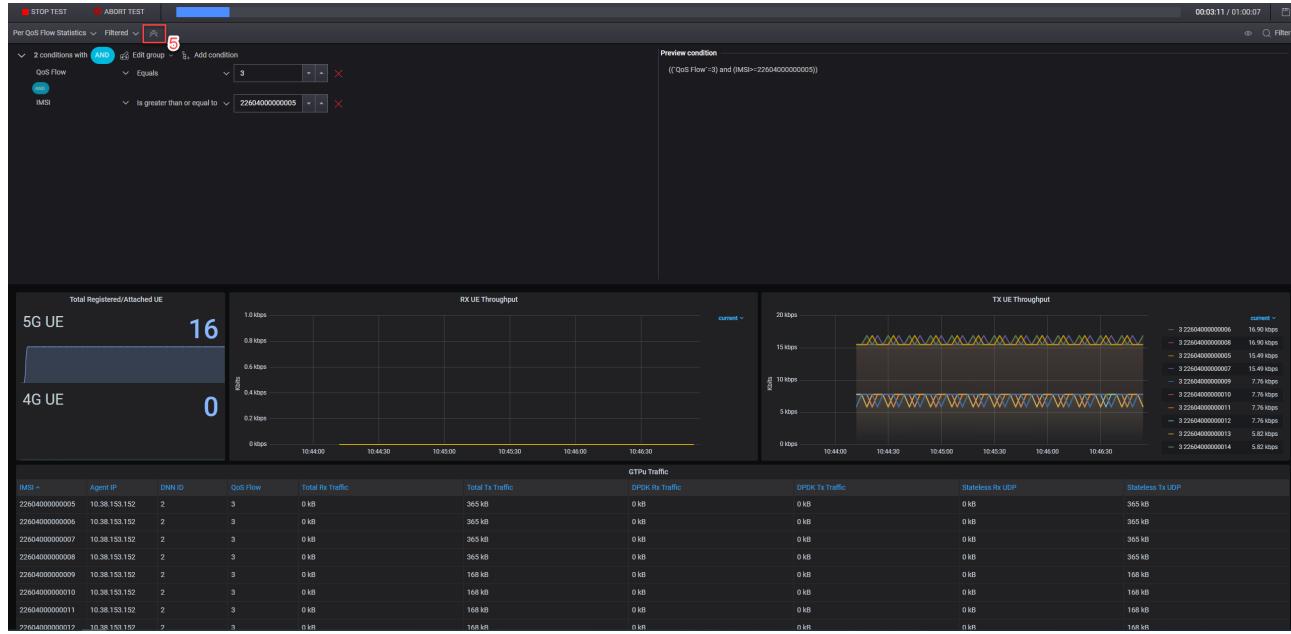

## Debug

LoadCore offers support for debugging capabilities.


In this section:

<b>View Notifications and Test Events</b>	<b>58</b>
<b>Manage Test Results</b>	<b>60</b>
<b>Troubleshooting</b>	<b>61</b>

## View Notifications and Test Events

The navigation bar displays a notifications icon and a counter showing the total number of triggered notifications since the counter was last reset for the current LoadCore instance. The icon and the counter are visible from all the pages of the LoadCore web UI. The notification icon (🔔) indicates in real-time the number of registered events.

When a notification is triggered, a color-coded banner is displayed when you hover over the notification icon:

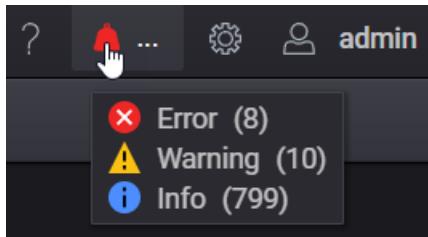

- **Blue**- for informational messages
- **Orange** - for messages informing you of actions you are not allowed to perform
- **Red** - for error messages

#### Types of events:

- **ERROR** - An *error* notification indicates that an error has occurred that impacts application stability. The application is possibly in an unstable or indeterminate state, and should either be restarted or should carry out error recovery or re-initialization routines.
- **INFO** - An *info* notification indicates a general-purpose notification, such as logging data or a heartbeat indicator.
- **WARNING** - A *warning* notification indicates an error has occurred that potentially impacts application stability.

To view more details on the triggered events, select the notifications icon. The **Events** window is displayed.

Events		
	Type	Message
Apr 11, 2023, 9:41:39 AM	✖ ERROR	PDF report generation failed
Apr 11, 2023, 9:41:37 AM	ℹ INFO	Generating PDF report for wireless-566c8b5a-47a6-41ba-b0bf-5602...
Apr 11, 2023, 3:04:06 AM	ℹ INFO	Sessions configs upgraded successfully. Refresh is needed on GUI.
Apr 11, 2023, 3:04:01 AM	ℹ INFO	A new ATI Updates version was installed. The new version is 23.3.33.
Apr 11, 2023, 3:03:39 AM	ℹ INFO	Update finished successfully
Apr 10, 2023, 7:07:23 PM	ℹ INFO	[Throughput 10G] Acquired 1 WRLS-5GC-UPTPUT-10G licenses for t...

[Go to events page](#) [Close](#)

Here you can view details on the registered events regarding the logging date, their severity type and description. You can choose to display all events or certain types of events, based on their severity, by selecting or clearing the associated check-box.

To view the events page, click the **Go to Events Page** button. Here you can search for events based on the available filtering criteria, like date, message, or event type.

The screenshot shows the 'Events' page with the following interface elements:


- Header:** Home > Events
- Section:** Filter events by
- Message Filter:** Type keywords (input field) with a magnifying glass icon.
- Date Filter:** Date range input fields labeled 'From' and 'To' with calendar icons.
- Notification type:** Checkboxes for All (checked), Info (checked), Warning (checked), and Error (checked).
- Table:** A list of log entries with columns: Date, Type, and Message.

Date	Type	Message
Apr 11, 2023, 9:41:39 AM	✖ ERROR	PDF report generation failed
Apr 11, 2023, 9:41:37 AM	ℹ INFO	Generating PDF report for wireless-566c8b5a-47a6-41ba-b0bf-56021902eb01.
Apr 11, 2023, 3:04:06 AM	ℹ INFO	Sessions configs upgraded successfully. Refresh is needed on GUI.
Apr 11, 2023, 3:04:01 AM	ℹ INFO	A new ATI Updates version was installed. The new version is 23.3.33.
Apr 11, 2023, 3:03:39 AM	ℹ INFO	Update finished successfully

## Manage Test Results

The Browse Results section can be accessed in order to retrieve the test results, packet captures and logs, and export them.

To access the Test Results window, select **Browse Results**.

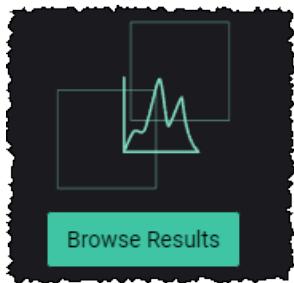

This Test Results window displays details about each test that was previously ran regarding the name and the test configuration, the status and the start time of the test, along with the test duration and the user that initiated the test.

On this section, the following actions are possible:

- Search for the results of a specific test.
- Load the test configuration in a new session, by selecting the **Load** button.
- Download the test results and packet captures, by selecting **Download**:

- **CSV** - download the test results as a CSV.
- **Report** - download the test results as a pdf file.
- **Captures & Logs** - download an archive containing both MW and Agent logs.

**NOTE**

To download the captures you need to enable traffic capture on the test agents.

- Delete the test results, by selecting the **Delete** button.

**NOTE**


At this moment, LoadCore does not have an automatic mechanism to delete old results, therefore this operation must be done manually in order to prevent MW disk to become full (especially running long duration tests).

## Troubleshooting


This section presents the most common errors or issues and their associated resolution (if available).

### NTP issue

If you are experiencing issues with UI statistics appearing delayed or not showing at all, the cause might be related to NTP.

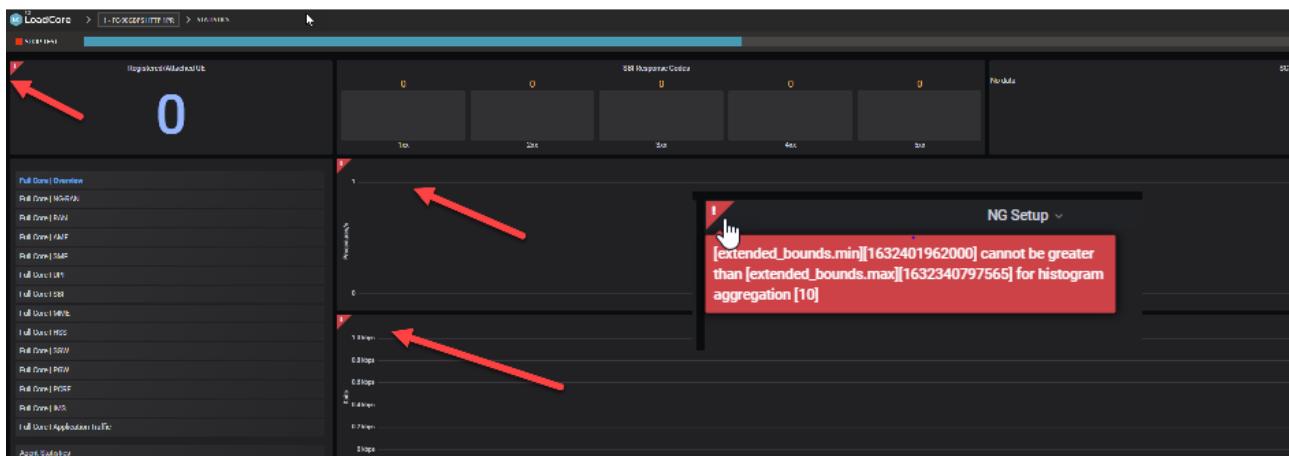

If you are using ESX make sure the NTP server is set:

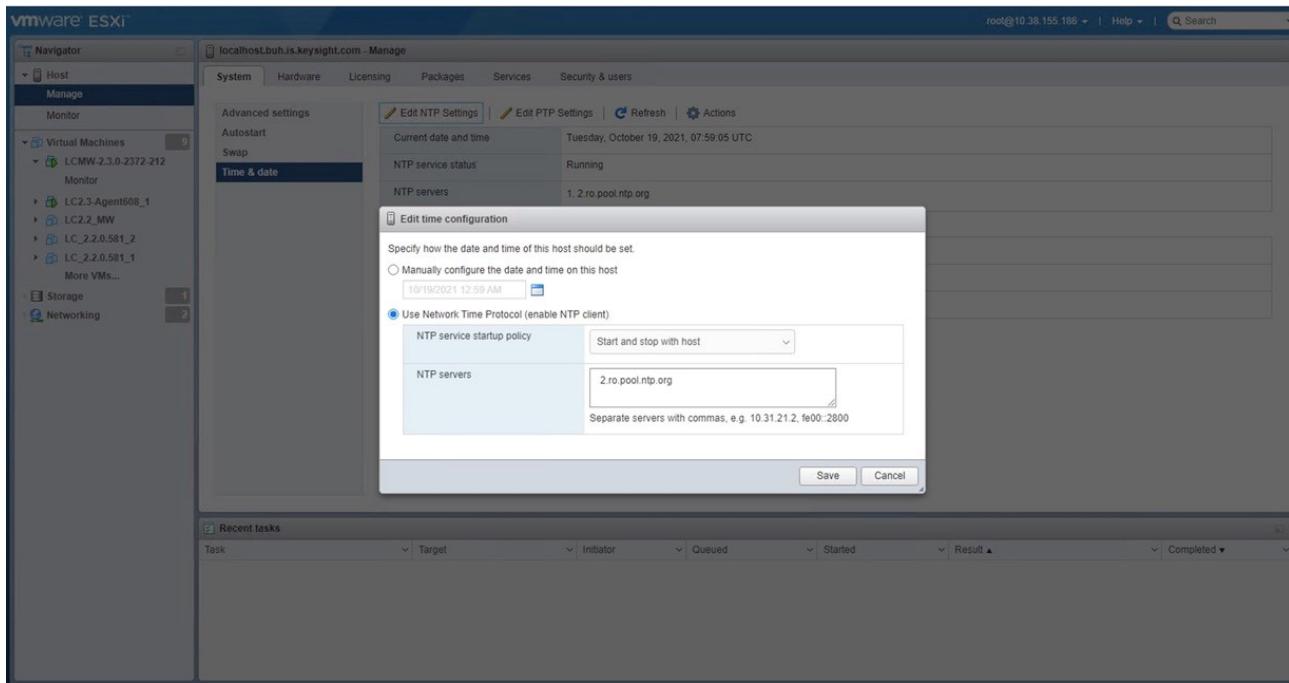

To check if the time is in sync on the middleware and agents, you can run the following commands:

- on agents:

```
date
ntpq -p
sudo systemctl status ntp
```

- on middleware:

```
date
kcctl date-time time-zone show
kcctl date-time ntp-servers show
```

You can also try to disable and enable NTP settings on the middleware:

```
kcctl date-time ntp disable
```

```
kcctl date-time ntp enable
```

The default NTP for LoadCore Middleware is [ntp.ubuntu.com](http://ntp.ubuntu.com). If you are using a local or another NTP server it is best to change it with:

```
kcctl date-time ntp-servers set (it should also be the same as the one set in ESX)
```

**IMPORTANT**

Start the NTP service on the agents (usually done when `agent-setup.sh` is run) only after setting the clock/NTP server on the middleware. Setting the clock on the middleware after the `btpservice` started on the agents can lead to it panicking (agent side) on big adjustments on sync. Restarting ntp agent side (`sudo systemctl restart ntp`) should fix this.

**CHAPTER 4**

## Assign and manage agents

A LoadCore *agent* is the virtual machine or docker container on which the application traffic and control plane procedure simulation is performed. Assigning and managing traffic agents is one of the essential and required aspects of creating and executing simulation tests.

**Chapter contents:**

<b>About traffic agents</b> .....	<b>63</b>
<b>Assigning agents to nodes</b> .....	<b>63</b>
<b>Agent management</b> .....	<b>65</b>
<b>Network Management</b> .....	<b>68</b>
<b>Distribution Mode feature</b> .....	<b>69</b>

## About traffic agents

LoadCore tests require the use of *agents* to generate traffic for both UP (user plane) and CP (control plane). The containers and virtual machines that act as agents can be horizontally scaled to support a very high level of application traffic throughput and control plane procedure rates.

Tags provide a flexible and simple method of assigning metadata to agents. There are two types of tags:

Type	Color	Description
System tag	Blue	These tags are defined by LoadCore. You can hover over the system tag icon to display the tag information.
User-defined tags	Gray	You can add custom tags from the Agent Management window. These are tags that you create; they are free-form, which gives you the ability to categorize or mark agents in any way that supports your test requirements. Refer to <a href="#">Agent management on page 65</a> for instructions.

## Assigning agents to nodes

You cannot run a LoadCore test until you have assigned agents to all of the test nodes. To assign an agent to a node:

1. In the topology window, select the traffic agent icon on the top right corner of the node.  
The icon that represents the agent can be any of the following:

 — No agents are assigned to the node.

 — One or more agents are assigned.

LoadCore opens the **Agents Assignment** window, which presents a list of agents. If the list has no filters set, then all agents are listed.

2. Assign specific agents or all available agents to the node:

- To assign specific agents (one or more) to the node, select the check box next to the agent's IP address.
- To assign all available agents to the node, select the **Select Agent** check box (located in the table header).

Note that you can display the agent ID by hovering over the IP address.

### Agent Assignments window

The following table describes the content of each column displayed on the **Agents Assignment** window.

Column	Description
Owner	<p>Hover over the <b>Owner</b> icon to see the current agent ownership and status, which will be one of the following:</p> <ul style="list-style-type: none"> <li>• The agent is owned by the user whose email address is listed. In this case, the agent is not available for assignment.</li> <li>• The agent is offline. In this case, the agent is not available for assignment.</li> <li>• The agent is available for assignment.</li> </ul>
Select Agent	<p>Use the check box next to the IP address to select that agent for assignment. You can also select all available agents by selecting the <b>Select Agent</b> check box (in the table header).</p>
Tags	<p>This column displays the tags associated with each agent. Each tag indicates the number of agents to which it is associated.</p> <p>Refer to <a href="#">About traffic agents</a> for more information about tags.</p>
Connections	<p>The table displays the available interface and the MAC address for each wireless connection. The interface can be selected from the drop-down list.</p> <p><b>NOTE</b> For the LoadCore nodes that have multiple interfaces, for each interface, you can change the interface type using the drill-down option.</p>

### Quick Interface Mapping

The Quick Interface Mapping table allows you to easily assign multiple interfaces to multiple agents. First, select two or more agents to set, then decide over the next **Action**:

Setting	Description
Action	<p>There are two actions available:</p> <ul style="list-style-type: none"> <li>• <b>Set</b> - select an Agent Device and one or multiple Agent IPs as Source, while selecting the desired interfaces as Destination.</li> <li>• <b>Copy</b> - select as one or more interfaces and one Agent IP as Source, and one or more Agents as Destination.</li> </ul>

Setting	Description
	Depending on the action selected, the rest of the table headers will change to meet the rules.
<i>Set configuration:</i>	
Device	List the devices available for the filtered and enabled Agents.
Destination	Includes two expandable lists: <ul style="list-style-type: none"> <li>• <b>Interfaces</b> - expand to see the selectable list of Interfaces available on all nodes. You can select one, more or All interfaces, depending on your configuration needs.</li> <li>• <b>IPs</b> - expand to see and select the IPs applicable for your interface selection. Note that in this case you can select more than one IP.</li> </ul>
<i>Copy configuration:</i>	
Source	Includes two expandable lists: <ul style="list-style-type: none"> <li>• <b>Interfaces</b> - expand to see the selectable list of Interfaces available on all nodes. You can select one, more or All interfaces, depending on your configuration needs.</li> <li>• <b>IP</b> - selected by default, it will show only the IPs applicable for your interface selection. Note that in this case you can select only one IP.</li> </ul>
Destination	Shows the list of all filtered and enabled Agents' IPs that can be selected for this setup.
Map Interfaces button	Hover over this button for a short summary of your selection. Click to apply the best effort action.

Once these settings done, click on **Map Interfaces** to apply changes, and then press the **Apply** or **Apply & Close** buttons to save the configurations.

## Agent management

You manage your LoadCore agents from the **Agent Management** window, which is accessed from the Setting menu (⚙). This window displays detailed information for all or selected agents and provides all of the functionality needed to manage them.

- [Agent Management window below](#)
- [Selecting agents on the next page](#)
- [Search, select, and filter agent data on the next page](#)
- [Adding and removing tags on page 67](#)
- [Agent management actions on page 67](#)

### Agent Management window

The Agent Management window displays a table that shows the current status of your agents.

<b>Column</b>	<b>Description</b>
<input type="checkbox"/>	The first column in the table contains a check box that you use when selecting individual agents for various operations. Note that you can use the <i>Agent IP</i> check box in the table header to select all agents.
Agent IP	Displays the IP address of the agent. To see the Agent ID, hover over the agent's IP IP address.
Owner	Indicates whether the agent is assigned, available, or offline.
Status	Indicates the current status of the agent.
Tags	This column displays the tags associated to each agent. There are two types of tags: <ul style="list-style-type: none"> <li>• system tags (blue): these are defined by LoadCore. You can hover over a system tag to view more details.</li> <li>• user tags (gray): these are defined by LoadCore users. Refer to <a href="#">Adding and removing tags</a> for more details.</li> </ul> Each tag indicates the number of agents to which it was associated.
Test NICs	Displays the NICs for each agent and, on hover, it displays the MAC address.
Hostname	Displays the hostname.
Memory	Displays the amount of RAM memory allocated to the agent.
CPU info	Displays additional information about the CPU model, the frequency and the number of cores.
Last Run Data	Displays the nodes that were last run on the agent.
Last Run Timestamp	Displays the date and time of the last agent run.

## Selecting agents

You can perform management actions on individually-selected agents (one or more) or on all agents:

- To select a specific agent, select the check-box associated with the agent's IP address. (When hovering over the IP address of an agent, the agent ID is displayed.)
- To select all agents currently listed in the table, select the *Agent IP* check box in the table header.

## Search, select, and filter agent data

You can selectively locate and display agent data using the following functions:

Function	Description
Filter agents	<p>Use this option to filter the available agents by tag names:</p> <ol style="list-style-type: none"> <li>1. Select <b>Filter agents</b>.</li> <li>2. Enter the name of the tag or select it from the available list.</li> <li>3. Select <b>Close</b>.</li> </ol> <p>The content on the Agent Management window is updated with the filtering results.</p> <p>To remove the filtering results, select <b>Clear</b>.</p>
Include offline agents	Set this option to either include or exclude offline agents from the list.
Search	Search by IP, Owner, hostname, or status.

## Adding and removing tags

You can create and use tags to categorize agents in any way that suits your needs.

### Add a custom tag:

1. Select one or more agents in the table.
2. Select **Tag as**.
3. Type the name of the tag in the **Search or add tag** field, then select **Add**.
4. Select **Update** to add the tag name.

### Remove a tag:

1. Select one or more agents in the table.
2. Select **Tag as**.
3. Select **Remove tags**.
4. Use the search functionality to identify the tag name or select it from the list.
5. Select **Update** to remove the tag name.

## Agent management actions

You can perform the following actions on the agents that are currently selected (selected via the selection check box in the first column of the table):

Function	Description
Clear ownership	Releases your ownership of the selected agents.
Hard reboot	Performs a hard reboot on the agent (the agent machine is power-cycled).
Soft reboot	Performs a soft reboot on the agent (the agent system restarts without a power cycle).

Function	Description
Delete	Removes the selected agent(s) from the Agent Management list.

## Network Management

All of the agents selected in the **Agents Assignment** window are displayed on the **Network Management** window.

### Table description

The following table describes the content of each column displayed on the **Network Management** window.

Column	Description
Order	This option allows you to select the agent distribution order when running with multiple agents on the same node (when you are not using a switch to connect all agents).
Agent	Displays the agent's IP address. When hovering over the IP address of the agent, the agent ID is displayed.
Tags	This column displays the tags associated to each agent.
Impairment profile	Allows you to select an impairment profile from the drop-down list.
Agent Interface	Displays the agent's interface Name and MAC address.
Network Stack	<p>This option allows you to select the network stack used to run the test:</p> <ul style="list-style-type: none"> <li>• <b>Linux Stack</b></li> <li>• <b>IxStack over Raw Sockets</b></li> <li>• <b>IxStack over DPDK</b></li> </ul> <p>An agent compatible with IxStack is marked using an <b>IxStack: On/Off</b> system tag.</p>
SRIoV	This option is disabled when <i>Network Stack</i> is set to Linux Stack. For IxStack over Raw Sockets or IxStack over DPDK, this option is enabled based on the selection (it can be enabled or disabled based on your agent's configuration).
Traffic Capture	<p>This option allows you to enable or disable traffic capture on all or specific interfaces, based on your test configuration. This option can be used while a test is running.</p> <p>If the test was started with the capture disabled, you can enable the capture during the test. After enabling the capture, you must select <b>Apply</b> for the changes to take effect. The capture can be downloaded using the <a href="#">Download Capture</a> button. To stop the capture, you must disable the traffic capture (using the toggle</p>

Column	Description
	button) and then select <b>Apply</b> . Also, if the test was started with the traffic capture enabled, the capture can be stopped while the test is running.
Download Capture	Select to download the traffic capture. Capture needs to be stopped first (see Traffic Capture) before downloading. After it has been downloaded, capture can be resumed.
Entity	Displays the nodes on which the agent has been assigned. When hovering over the node, it displays the node's interface names.
<b>IMPORTANT</b>	To run tests using IxStack over Raw Sockets or IxStack over DPDK you need at least two agents.

## Filtering agents

You can set filters (using tag names) to determine which agents are displayed in the table:

1. Select **Filter agents**.
2. Enter the name of the tag or select it from the available list.
3. Select **Close**.

The content on the **Network Management** window is updated to show only agents that are tagged with one of the tags selected in your filter setting.

## Distribution Mode feature

### Distribution Modes for Nodes


For convenience, you are now able to see or select (if available), the way node ranges are distributed on agents. The **Distribution Mode** parameter is available even if no agents are assigned, but its value can change when assigning multiple agents and/or when adding multiple ranges.

When opening a node for configuration, the **Distribution Mode** parameter is displayed and options such as the following can be selected or observed:

Distribution Mode	Description/Example
<b>All Ranges on All Agents</b>	All ranges will be distributed on all agents and the IP addresses will be incremented.  For example, in a test with 2 agents and 3 ranges: <ul style="list-style-type: none"> <li>• range1 on agent1 and agent2</li> <li>• range2 on agent1 and agent2</li> <li>• range3 on agent1 and agent2</li> </ul>
<b>Round Robin Ranges on Agents</b>	Each range will be configured on one agent. One agent can have multiple ranges configured.  For example, in a test with 2 agents and 3 ranges:

Distribution Mode	Description/Example
	<ul style="list-style-type: none"> <li>range1 on agent1</li> <li>range2 on agent2</li> <li>range3 on agent1.</li> </ul>
<b>One Range on All Agents</b>	One range will be configured on all assigned agents. For example, in a test with 2 agents and 1 range: <ul style="list-style-type: none"> <li>range 1 on agent 1 and 2.</li> </ul>
<b>All Ranges on One Agent</b>	This mode allows only one agent in the assignment.
<b>One Range on One Agent</b>	In this mode each range requires a different agent.

For more details, refer to each node for the available distribution mode.

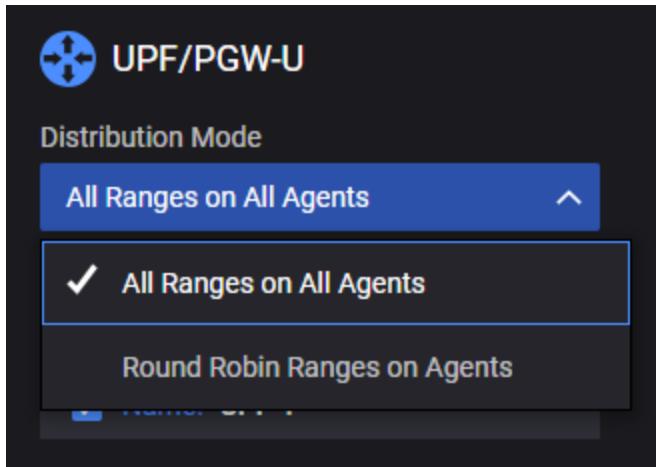


### UE-RAN Distribution Modes (configurable on UE box)

Similarly to node distribution, if multiple agents are assigned to RAN, the user can change the distribution mode from the UE box. Based on how many agents were assigned and how many UE ranges are available, the configuration page will display the **Distribution Mode** parameter and the following options can be selected from the drop-down:

Distribution Mode	Description/Example
<b>All UE Ranges and RAN Ranges on All Agents</b>	For example, for a test with 2 agents and 2 UE ranges and 2 RAN ranges: <ul style="list-style-type: none"> <li>UE range1 and UE range2 and their parent ranges as well as all RAN ranges part of Mobility Path and Secondary RAN ranges will be distributed to both agent1 and agent2</li> </ul>
<b>Round Robin UE Ranges and RAN Ranges per Agent</b>	For example, if UE range1 is distributed to agent1, parent RAN range as well as all RAN ranges part of the Mobility Path (visited gNB/eNB ranges), and the Secondary RAN ranges will also be

Distribution Mode	Description/Example
	distributed on agent1.

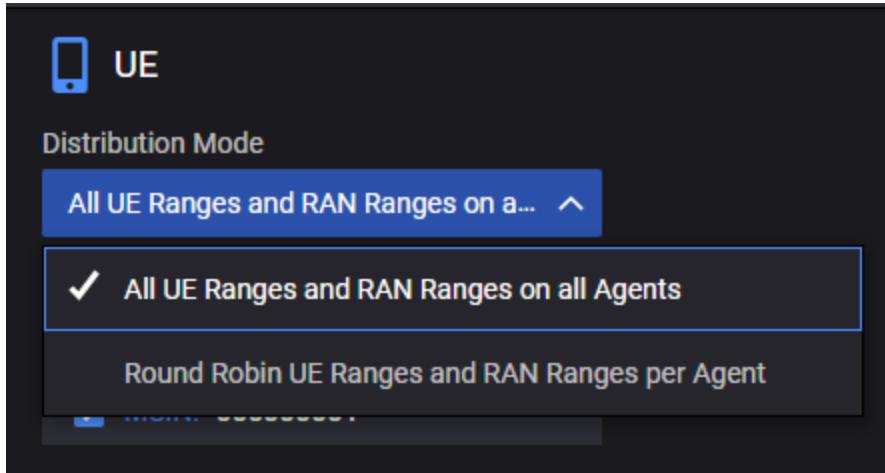

## CHAPTER 4

# Work with the Resource Library

---

LoadCore allows you to view, import and export various resources such as payloads, TLS certificates, TLS keys, TLS DHS, playlists, media files, captures and custom applications. You can access the Resource Library from the **Settings** (⚙️) menu > **Library** > **Resource Library**.

See the following sections for details on how to:

- [Import Captures](#)
- [Create Custom Applications from Imported Captures](#)
- [Edit Custom Applications](#)
- [Export Custom Applications](#)
- [Import Custom Applications](#)
- [Export Other Resources](#)

## Import Captures

You can import and view available captures from the **Settings** (⚙️) menu > **Library** > **Resource Library**. You can use imported captures to create custom applications from the LoadCore UI. The PCAP or PCAPNG file formats can be used for importing operations.

The following limitations apply when importing captures:

- Capture files must include at least one TCP flow or one UDP flow.
- The maximum capture size is 1 GB.
- The maximum number of flows per capture is 10,000 (with one exchange per flow).
- The total number of exchanges per capture is 10,000.

To import a packet capture:

1. Log in to the LoadCore UI.
2. Under the **Settings** menu, select **Library** > **Resource Library**. The Resource Library page opens.
3. Under **Browse resources**, select **Captures**.

If no captures have been imported yet, the page will be blank. If capture files have previously been imported, they will be listed on the page with a capture ID and a file name. To view more details about each capture, expand each entry by clicking the **Expand** (↗) button. You can view each flow ID, source and destination addresses, source and destination ports, transport protocol, available exchanges for each flow, including the first 1024 bytes of payload for each direction of the exchange.

4. Click **Import** in the left bottom corner of the screen.
5. Browse to the capture file you want to import and select it. Then click **Open**.

After the capture file is uploaded, it will be displayed on the list of available capture files. The time it takes to upload the capture depends on its complexity. For example, a higher number of exchanges or smaller average payload sizes will increase the upload time.

You can also delete an existing capture by selecting the capture on the list and clicking **Delete**.

See also [Create Custom Applications](#).

## Create Custom Applications from Imported Captures

After you import a capture, you can create a new custom application that you can use in your LoadCore tests.

An application can have multiple actions and one action can be created from:

- one full capture,
- a subset of flows from one or multiple captures, or
- a subset of exchanges from one or more flows and from one or multiple captures.

After the application is created it will be available in the list of applications just as the pre-canned applications.

The following limitations apply for creating custom applications from imported captures:

- HTTP transport protocol is not supported.
- Custom applications on ports 80 or 443 cannot be mixed with pre-canned web applications.
- Importing invalid packet captures will return an error message.
- Importing packet captures with unsupported IP protocols will return an error message.
- The UI displays only the first 1024 bytes of each client-to-server (C2S) and server-to-client (S2C) payload; however, the full payload size is visible.
- The total number of flows (connections) in a single application cannot be bigger than 64.
- The total number of parameters cannot be bigger than 10,000. The total number of parameters is equal to the sum of endpoints per action multiplied by the number of parameters per endpoint for the same action.

To create a custom application:

1. Log in to the LoadCore UI.
2. Under the **Settings** menu, select **Library > Resource Library**. The Resource Library page opens.
3. Under **Browse resources**, select **Captures**.  
The list of available captures opens. If no captures are displayed on the page, first [import a capture file](#).
4. Click **Create Apps** at the bottom of the screen. The Create App dialog opens.
5. Under each column on the Create App dialog, select the capture(s), flow(s) and exchanges(s) you want to use for the new application.
6. Then click the **Add**  button to add actions from the selected entries.
7. Click the **Create App** button in the bottom right corner of the dialog.  
The new application is created based on your selections and displayed under **Browse resources > Custom Applications** along with other pre-canned applications.

## Edit Custom Applications

After you create a new custom application, you can further customize it to fit the tests you want to run. After the application is created it will be available in the list of applications just as the pre-canned applications.

To edit a custom application:

1. Log in to the LoadCore UI.
  2. Under the **Settings** menu, select **Library > Resource Library**. The Resource Library page opens.
  3. Under **Browse resources**, select **Custom Applications**.
- The list of available custom applications opens. If no applications are displayed on the page, first [create a new custom application](#).
4. Click the **Expand** icon next to the application you want to edit. The available application actions are displayed.
  5. To navigate between actions, flows, or exchanges, click through each action/ flow/ exchange fly-out panel.
  6. To view the Client to Server and Server to Client payload, click the **C2S Payload** button or the **S2C Payload** button respectively.
  7. To add a new action/ flow/ exchange:
    - a. Click the **Add**  button next to the component you want to add. The **Edit App** dialog opens, listing the available captures, the application name, and the already available actions/ flows/ exchanges for the current application.
    - b. Under **Select captures**, select the capture you want to use as the basis for your action/ flow/ exchange.
    - c. Then, under **Edit App**, click the **Add**  button under the action/ flow/ exchange list to add the selected capture as a new action/ flow/ exchange. The new component is added to the list under a default name which you can update by clicking the **Rename**  button and typing a new custom name for the action/ flow/ exchange.
    - d. You can also click the **Edit**  icon to update the selected action/ flow/ exchange. For example, when clicking **Edit**, you can see the list of flows and exchanges for an action and add new flows or exchanges by clicking **Add** .
    - e. To confirm all the changes and close the Edit App dialog, click the **Edit App** button in the lower right corner of the dialog. The new action/ flow/ exchange is displayed under the custom application.
  8. To delete any action/ flow/ exchange, click the **Delete**  button next to the component you want to remove.
  9. To change the order of actions/ exchanges, click and hold the **Reorder**  button. Then, drag and drop the item in the correct position.
  10. To save all the changes you made for the selected custom application, click **Save App**.

The changes are saved on the server, and when you enter a test session you will be able to add the application you edited to your test configurations.

## Export Custom Applications

After you import a capture and create a new custom application, you can export it from the LoadCore UI.

To export a custom application:

1. Log in to the LoadCore UI.
2. Under the **Settings** menu, select **Library > Resource Library**. The Resource Library page opens.
3. Under **Browse resources**, select **Custom applications**.  
The list of available custom applications opens. If no custom applications are displayed on the page, first [create a custom application](#).
4. Select the application you want to export.
5. Click **Export** at the bottom of the applications list. The selected application is downloaded on your machine as a .zip file. You can use this downloaded archive to import the same application on other LoadCore setups for example.

You can also export multiple custom applications by clicking the **Export All** button under the **Browse resources** pane.

## Import Custom Applications

To import a custom application:

1. Log in to the LoadCore UI.
2. Under the **Settings** menu, select **Library > Resource Library**. The Resource Library page opens.
3. Under **Browse resources**, select **Custom applications**.  
The list of available applications opens.
4. Click **Import** under the **Browse resources** pane.
5. Browse to the application you want to import and select the .zip file. Then click **Open**.  
The custom application is loaded on the server and displayed under the list of **Custom Applications**.

## Export Other Resources

You can export other types of resources besides custom applications from the LoadCore UI, both system resources and custom resources (such as payloads, TLS certificates, TLS keys, TLS DHS, playlists, media files, captures).

To export resources:

1. Log in to the LoadCore UI.
2. Under the **Settings** menu, select **Library > Resource Library**. The Resource Library page opens.

3. Under **Browse resources**, select the tab corresponding to the resources you want to export (for example, **Payloads**, **TLS Certificates**, etc.).  
The list of available resources opens.
4. Select the resources you want to export by clicking the check box next to each item, or select all the resources on the page by clicking the check box next to the **Name** column.
5. Click **Export** at the bottom of the resources list. The selected resources are downloaded on your machine as a .zip file. You can use this downloaded archive to import the same resources on other LoadCore setups for example.  
You can also export all the available resources by clicking the **Export all** button under the **Browse resources** pane.

## Import Resources

You can import other types of resources besides custom applications from the LoadCore UI, both system resources and custom resources (such as payloads, TLS certificates, TLS keys, TLS DHS, playlists, media files, captures).

To import resources:

1. Log in to the LoadCore UI.
2. Under the **Settings** menu, select **Library > Resource Library**. The Resource Library page opens.
3. Under **Browse resources**, select the tab corresponding to the resources you want to export (for example, **SIP Procedures**, **Payloads**, **TLS Certificates**, etc.).  
The list of available resources opens.
4. Click **Import** at the bottom of the resources list. Select the resources to be loaded from your machine .


**TIP**

When importing a procedure or a configuration that contains procedures, if procedures with the same name and/or content are detected, the application will append a number to their name in order to have unique name for the imported JSON.

*CHAPTER 5*

## Full Core tests: configuration settings

This section provides descriptions of the configuration settings that are specific to the **Wireless Full Core** test type.



In a Full Core test, the entire test topology is available for configuration to enable your test requirements. There is no pre-established DUT: you can designate any of the topology nodes as device under test. You can enable and disable the simulated nodes as needed to customize your test configuration.

**Topics:**

<b>Global Settings</b> .....	<b>85</b>
Global Settings panel .....	87
Node Start/Stop Rates .....	87
DNS Settings .....	88
Advanced Settings .....	88
DNNs panel .....	92
DNN configuration settings .....	94
Session AMBR configuration settings .....	97
ePCO configuration settings .....	98
Traffic Control Settings configuration .....	99
Impairment .....	100
QoS Flows panel .....	101
QoS Flow configuration settings .....	102
QoS Flow Packet Filter configuration settings .....	105
QoS Flow Max Packet Loss Rate settings .....	106
QoS Flow ARP configuration settings .....	106
QoS Flow MBR configuration settings .....	107
QoS Flow GBR configuration settings .....	107

CA Certificates .....	107
Milenage .....	108
Customer Parameters .....	109
External Stats Server .....	109
<b>UE configuration settings .....</b>	<b>117</b>
UE Ranges panel .....	119
UE Range panel .....	120
Range Settings .....	122
UE Identification settings .....	123
UE Security settings .....	123
UE Settings settings .....	127
UE Shared Data IDs .....	135
UE Subscribed AMBR settings .....	135
Service Area Restriction settings .....	135
Forbidden Areas .....	137
DNNs Config .....	138
Notifications .....	141
SMS Configuration .....	141
Equipment Status .....	144
Converged Charging .....	144
Spending Limit Control .....	145
Internal Group IDs .....	148
Network Slicing settings .....	149
UE NSSAI settings .....	150
UDM Default NSSAI settings .....	151
UDM SNSSAI Mappings .....	151
UDR SNSSAI Settings .....	152
Objectives .....	153
Control Plane Objective .....	154
User Plane Objectives .....	170
<b>AMF configuration settings .....</b>	<b>236</b>
AMF Ranges panel .....	237

AMF Range settings .....	238
AMF node settings .....	239
AMF N2 interface settings .....	242
AMF Namf interface settings .....	243
AMF N26 Interface Settings .....	244
AMF remote SBA nodes .....	246
<b>AUSF configuration settings .....</b>	<b>253</b>
AUSF Ranges panel .....	254
AUSF Range panel .....	254
AUSF node settings .....	255
AUSF Nausf interface settings .....	256
AUSF Remote SBA Nodes .....	258
<b>CHF configuration settings .....</b>	<b>260</b>
CHF Ranges panel .....	260
CHF Range settings .....	261
CHF node settings .....	262
CHF Nchf interface settings .....	263
CHF remote SBA nodes .....	263
<b>DN configuration settings .....</b>	<b>265</b>
DN Ranges panel .....	266
DN Range panel .....	266
DN N6 interface settings .....	267
DN routes settings .....	268
DN User Plane .....	269
DN Stateless UDP Traffic .....	270
DN Data Traffic .....	272
DN Voice Traffic .....	274
DN Video OTT Traffic .....	285
DN DNS Server Traffic .....	288
DN Predefined Applications Traffic .....	291
DN Capture Replay .....	291
DN Synthetic .....	293

DN UDG .....	295
DN Throttling settings .....	297
<b>DNS Server configuration settings .....</b>	<b>298</b>
DNS Server Ranges panel .....	298
DNS Server Range panel .....	298
DNS Server Ndnsserver interface settings .....	299
DNS Server Traffic Flow settings .....	300
<b>EASDF configuration settings .....</b>	<b>303</b>
EASDF Ranges panel .....	303
EASDF Range panel .....	304
EASDF Node settings .....	305
EASDF Neasdf interface settings .....	305
EASDF N6 interface settings .....	306
EASDF UE routes settings .....	307
EASDF DNS Server Settings .....	308
<b>IMS configuration settings .....</b>	<b>310</b>
CSCF Range panel .....	310
CSCF N6 interface settings .....	311
CSCF Rx interface settings .....	312
CSCF UE routes settings .....	313
Media Function Range panel .....	314
<b>MME configuration settings .....</b>	<b>316</b>
MME Ranges panel .....	317
MME Range panel .....	318
MME node settings .....	319
MME S11 Interface Settings .....	321
MME N26 Interface Settings .....	322
MME S1 Interface Settings .....	324
MME S6a Interface Settings .....	325
MME Diameter settings .....	326
<b>NEF configuration settings .....</b>	<b>328</b>
NEF Ranges panel .....	328

NEF Range panel .....	329
NEF Nnef interface settings .....	330
NEF Remote SBA Nodes .....	332
<b>NRF configuration settings .....</b>	<b>335</b>
NRF Ranges panel .....	336
NRF Range panel .....	336
NRF node settings .....	337
NRF Nnrf interface settings .....	338
NRF Remote SBA Nodes .....	339
<b>NSSF configuration settings .....</b>	<b>341</b>
NSSF Ranges panel .....	342
NSSF Range panel .....	342
NSSF node settings .....	343
Nnssf Interface Settings .....	344
Remote SBA nodes .....	345
NSSF Restricted NSSAIs .....	346
NSSF Network Slices .....	347
NSSF Configured NSSAI .....	348
<b>PCF/PCRF configuration settings .....</b>	<b>350</b>
PCF/PCRF Ranges panel .....	351
PCF Range panel .....	352
PCF Node settings .....	353
PCRF Node settings .....	354
PCF service area restrictions .....	357
PCF Npcf interface settings .....	358
PCF remote SBA nodes .....	360
<b>RAN configuration settings .....</b>	<b>362</b>
gNodeB .....	363
gNodeB Ranges panel .....	364
gNodeB Range settings .....	369
gNodeB node settings .....	370
gNodeB NSSAI settings .....	372

gNodeB N2 interface settings .....	373
gNodeB N3 interface settings .....	375
eNodeB .....	378
eNodeB Ranges panel .....	379
eNodeB Range Settings .....	383
eNodeB Node Settings .....	383
Passthrough interface settings .....	385
<b>SBI Fuzzer configuration settings .....</b>	<b>387</b>
SBI Fuzzer Ranges panel .....	387
SBI Fuzzer Range panel .....	388
SBI Fuzzer interface settings .....	389
SBI Fuzzer Target Node .....	390
<b>SCP configuration settings .....</b>	<b>392</b>
SCP Ranges panel .....	392
SCP Range panel .....	393
SCP Nscp interface settings .....	394
SCP Remote SBA Nodes .....	395
<b>SEPP configuration settings .....</b>	<b>397</b>
SEPP Ranges panel .....	397
SEPP Range panel .....	398
SEPP Nsepp interface settings .....	400
SEPP Remote SBA Nodes .....	401
<b>SGW configuration settings .....</b>	<b>403</b>
SGW Ranges panel .....	404
SGW Range panel .....	405
SGW S1-U Interface Settings .....	406
SGW S5-C Interface Settings .....	407
SGW S5-U Interface Settings .....	408
SGW S11 Interface Settings .....	409
SGW DUT S11 Interface Settings .....	410
<b>SMF/PGW-C configuration settings .....</b>	<b>411</b>
SMF/PGW-C Ranges panel .....	412

SMF/PGW-C Range settings .....	413
SMF node settings .....	414
SMF N4/Sx interface settings .....	415
SMF Nsmf interface settings .....	417
SMF Gx Interface settings .....	418
SMF S5-c interface settings .....	421
SMF remote SBA nodes .....	422
SMF Uplink Paths settings .....	427
SMF Slice and UPF Mapping settings .....	427
SMF EAS Deploy Subscription settings .....	428
SMF EAS Procedures Settings .....	429
<b>SMSF configuration settings .....</b>	<b>431</b>
SMSF Ranges panel .....	431
SMSF Range panel .....	432
SMSF node settings .....	433
SMSF Nsmsf interface settings .....	433
SMSF Remote SBA Nodes .....	434
<b>UDM/HSS configuration settings .....</b>	<b>438</b>
UDM/HSS Ranges panel .....	439
UDM/HSS Range panel .....	440
UDM Range Settings .....	440
UDM Settings .....	441
UDM Node Settings .....	442
UDM Nudm Interface Settings .....	444
UDM Remote SBA Nodes .....	446
HSS Range Settings .....	448
HSS Settings .....	448
HSS Node Settings .....	449
HSS S6a Interface Settings .....	450
UDM and HSS Range Settings .....	451
<b>UDR configuration settings .....</b>	<b>452</b>
UDR Ranges panel .....	452


UDR Range panel .....	453
UDR Nudr interface settings .....	454
UDR Remote SBA Nodes .....	455
<b>UPF/PGW-U configuration settings .....</b>	<b>457</b>
UPF/PGW-U Ranges panel .....	458
UPF/PGW-U Range panel .....	458
UPF node settings .....	460
UPF N3 interface settings .....	460
UPF N4 interface settings .....	461
UPF N6 interface settings .....	463
UPF N9 interface settings .....	463
UPF Nupf Interface Settings .....	465
UPF Remote SBA Nodes .....	466
UPF Slice Mapping settings .....	467
<b>5G-EIR configuration settings .....</b>	<b>468</b>
5G-EIR Ranges panel .....	468
5G-EIR Range panel .....	469
5G-EIR node settings .....	469
5G-EIR N5g-eir interface settings .....	470
5G-EIR Remote SBA Nodes .....	471
<b>NF Discovery service .....</b>	<b>472</b>

## Global Settings

The Global Settings include parameters that either have overall applicability to the test or can be used (by reference) in the configurations of other nodes in the test topology.

To access the Global Settings:

1. Select the **Test Overview** tab:

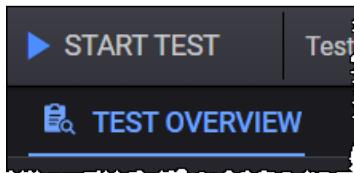

2. Click **Expand** if the Test Overview section is collapsed.
3. Click the Global Settings' **Edit** button:



LoadCore opens the **Global Settings** panel from which you can:

- Select the technical specification version from the drop-down list:



- Access and configure the following settings:

<b>Global Settings panel</b>	87
<b>Node Start/Stop Rates</b>	87
<b>DNS Settings</b>	88
<b>Advanced Settings</b>	88
<b>DNNs panel</b>	92
DNN configuration settings	94
Session AMBR configuration settings	97
ePCO configuration settings	98
Traffic Control Settings configuration	99
<b>Impairment</b>	100
<b>QoS Flows panel</b>	101
QoS Flow configuration settings	102
QoS Flow Packet Filter configuration settings	105
QoS Flow Max Packet Loss Rate settings	106

QoS Flow ARP configuration settings .....	106
QoS Flow MBR configuration settings .....	107
QoS Flow GBR configuration settings .....	107
<b>CA Certificates</b> .....	<b>107</b>
<b>Milenage</b> .....	<b>108</b>
<b>Customer Parameters</b> .....	<b>109</b>
<b>External Stats Server</b> .....	<b>109</b>

## Global Settings panel



When you open the Global Settings for editing (from the **Test Overview** section), LoadCore opens the **Global Settings** panel. That panel provides a set of global configuration settings and links to more detailed settings.

### Configuration settings

The following table describes the settings that are available on the Global Settings panel.

Setting	Description
Network Instance Format	Select the encoding format for the network instance: string or label-list. For more details, refer to <a href="#">Network Instance Format</a> .
<i>Links to detailed settings:</i>	
Node Start/Stop Rates	For more details, refer to <a href="#">Node Start/Stop Rates</a> .
DNS Settings	For more details, refer to <a href="#">DNS Settings</a> .
Advanced Settings	For more details, refer to <a href="#">Advanced Settings</a> .
DNNs	For more details, refer to <a href="#">DNNs</a> .
Impairment	For more details, refer to <a href="#">Impairment</a> .
QoS Flows	For more details, refer to <a href="#">QoS Flows</a> .
CA Certificates	For more details, refer to <a href="#">CA Certificates</a> .
Override Milenage Constants	For more details, refer to <a href="#">Milenage</a> .
Custom Parameters	For more details, refer to <a href="#">Custom Parameters</a> .
External Stats Server	For more details, refer to <a href="#">External Stats Server</a> .

### Node Start/Stop Rates

The following table describes the settings that are available on the Node Start/Stop Rates. These include settings with which you control the Stream Control Transmission Protocol (SCTP) connection rates between NG-RAN and AMF. (SCTP—which operates in the transport layer of the NG-C signaling bearer—provides for the reliable transport of signaling messages.)

Setting	Description
<i>Node Start</i>	
Rate	Set the desired start rate for SCTP connections between the NG-RAN and the AMF

<b>Setting</b>	<b>Description</b>
	(connections per second). Measured in procedures per second if Distributed over (s) is not modified.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
<i>Node Stop</i>	
Rate	Set the desired start rate for SCTP connections between the NG-RAN and the AMF (connections per second). Measured in procedures per second if Distributed over (s) is not modified.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.

## DNS Settings

The following table describes the settings required for the DNS Resolver configuration.

<b>Setting</b>	<b>Description</b>
<i>DNS Settings:</i>	
Cache Timeout (ms)	The amount of time (in milliseconds) the local DNS stores the address information.
<i>DNS Name Servers:</i>	
	Select the <b>Add DNS Name Server</b> button to add a new DNS server to your test configuration. Set the IP address of the DNS server.
	Select the <b>Delete</b> button to remove the DNS server from your test configuration.

## Advanced Settings

The following table describes the settings required to enable user plane and control plane advanced statistics.

<b>Setting</b>	<b>Description</b>
Ignore Offline Agents At Runtime	When this option is enabled, if an agent loses connection to the Middleware during a test, the test will not stop but continue without that agent.
Overwrite Capture Size for IxStack	Enable this option to overwrite the capture size for IxStack.

<b>Setting</b>	<b>Description</b>
Custom Capture Size for IxStack	Set the custom value of the capture size for IxStack.
Enable Capture Circular Buffer for IxStack	Select this option to enable circular buffer capture for IxStack.
Enable Capture On Loopback Interface	Select this option to enable packet capture on the loopback interface.
Enable Per UE Stats	Select this option to enable per UE statistics.
Enable Control Plane Advanced Stats	Select this option to enable control plane latency statistics.
Enable User Plane Advanced Stats	<p>Select an option from the drill-down list for the user plane advanced statistics:</p> <ul style="list-style-type: none"> <li>• <b>None</b> - no advanced statistics enabled.</li> <li>• <b>One Way Delay</b> - the time spent by the packet on the network from the moment it is sent until it is received.</li> <li>• <b>Delay Variation Jitter</b> - the per polling interval average delay variation jitter value calculated for all packets.</li> </ul>
Automated Polling Interval	This option is enabled by default. The statistics are retrieved based on a predefined polling interval.
Custom Polling Interval (sec)	<p>This option becomes available only when <i>Automated Polling Interval</i> option is disabled.</p> <p>It allows you to create a custom polling interval.</p>
Log Level	<p>Select one of the options:</p> <ul style="list-style-type: none"> <li>• <b>Info</b> - Designates informational messages that highlight the progress of the application at coarse-grained level.</li> <li>• <b>Debug</b> - Designates fine-grained informational events that are most useful to debug the application.</li> </ul>
Log Tags	<p>Select one or more tags from the drop-down list.</p> <p>Log Tags are used to collect specific information in the logs; they work with Debug</p>

Setting	Description
	and with Info log levels. Rather than allowing the logs to collect information about everything, you can use Log Tags to collect specific information—such as SCTP or HTTP messages—during the test. This limits the amount of information that is collected, making it easier for you to extract the data that you need.

## Traffic Settings

The following table describes the settings on the Traffic Settings pane.

Setting	Description
<i>GTPU Source Port:</i>	
Start	Indicates the source port for the GTPU tunnel. By default, the registered UDP port for GTPU is 2152.
Count	Set the count value.
<i>Reserved cores for RTP Tx:</i>	
Enable RTP	Select this option to enable RTP.
Cores	The number of cores reserved for RTP transmission.
<i>Traffic Control</i>	
Traffic Control Port	Set the traffic control port. By default, it is set to 44556.
Enable Jumbo Frame	Enable this option if your test traffic requires the use of jumbo frames (Ethernet frames with more than 1500 bytes of payload). When you enable this option, you can then configure any of the MTU parameters in the test to any valid jumbo frame size (up to 9,000 bytes).
Enable IxStack L4 Port Randomization	Select this option to enable IxStack L4 Port Randomization.
Enable UDP Port Recycling	Select this option to enable IxStack UDP Port Recycling.
Enable TCP Port Recycling	Select this option to enable IxStack TCP Port Recycling.
Enable ICMP Responses	Select this option to enable it. This will permit requests and responses to ICMP packets on subscribers addresses (it will have a significant memory impact on server nodes - AMF, UPF).

## Response Cache

During performance testing scenarios, it is possible that not all responses are received by the client. The client initiates messages retries when it is not receiving responses. When a message retry reaches the server, the response is sent again faster and no additional load is put on the server, because the response message is already stored. There is no need to construct the response message again.

A rotation interval higher than the retry timer on the client node must be configured in order to still have the responses stored when a message retry arrives on the server node.

The following table describes the settings on the Response Cache pane.

Setting	Description
Enable response cache for GTPv2 and PFCP protocols	When this option is enabled, the server node will store the GTPv2 and PFCP Response messages for a period of time equal to Rotation Interval (in seconds).
Rotation interval	The period of time (in seconds) for which the server node will store the GTPv2 and PFCP Response messages. After this interval expires, the stored messages are discarded.

## Control Plane Latency Statistics

There are two types of control plane latency statistics available:

- Control Plane HTTP Latency Statistics
- Control Plane Procedure Latency Statistics

For HTTP, the control plane latency statistics are measured per HTTP transaction. For the control plane HTTP latency statistics, on the client side, the latency measures the time between the moment when the request is sent and the moment when the answer is received. On the server side, the latency measures the time between the moment when the request is received and the moment when the answer is sent.

For NGAP, NAS and PFCP, the control plane latency statistics are measured per procedure. In this case, the control plane procedure latency value represents the time between the moment when the first message in the procedure is sent or received and the moment when the last message in the procedure is sent or received.

**IMPORTANT** The time shown in statistics may be slightly different than the time computed in any capturing tool (for example, Wireshark) because of the time when the packets are actually captured.

Latency buckets:

- 0us - 125us
- 125us - 250us
- 250us - 500us
- 500us - 1ms

- 1ms - 5ms
- 5ms - 10ms
- 10ms - 15ms
- 15ms - 20ms
- 20ms - inf

**NOTE**

If enabled, the control plane latency statistics will not be displayed in predefined dashboards in LoadCore statistics user interface. To display these statistics you will need to use custom dashboards.

## Retrieve captured packets

After enabling packet capture, and running the test, to download the generated packet captures, you need to use a SFTP client (for example, WinSCP) to retrieve the captures from `/opt/5gc-test-engine` on each of the agents.

The packet capture can be identified as follows:

- `latestCapture.pcap`, when running the test without DPDK activated.
- `latestIxStackCapture.pcap` when running the test with DPDK activated.

## DNNs panel

In the 5G architecture, a Data Network Name (DNN) serves as the identifier for a data network. It is the equivalent of an APN (Access Point Name) in an LTE network. A DNN is used when selecting an SMF and UPF for a PDU session, selecting an N6 interface for a PDU session, and determining policies to apply to a PDU session.

When setting up a LoadCore test, these DNN configurations become immediately available for selection in the UDM and UE configurations.

## Accessing the configuration settings

To access the DNN configuration settings, select **DNNs** from the the **Global Settings** panel. LoadCore opens the **DNNs** panel from which you can add and edit DNN definitions:



The properties for a DNN are organized into the following groups of configuration settings:

**DNN configuration settings** ..... **94**

**Session AMBR configuration settings** ..... **97**

<b>ePCO configuration settings .....</b>	<b>98</b>
<b>Traffic Control Settings configuration .....</b>	<b>99</b>

## DNN configuration settings

You create and manage Data Network Names (DNNs) for your test network in the **Global Settings** section of the **Test Overview**. The **DNN** panel contains the configuration settings for an individual DNN. In this panel, you can:

- Click the **Delete DNN** button to delete the DNN configuration.
- Edit the DNN settings.

The following table describes the **DNN** settings.

Setting	Description
<i>DNN:</i>	
DNN	<p>Enter the DNN value for this DNN definition. For example: <code>dnn.keysight.com</code>.</p> <p>A DNN (as is the case with an EPS APN) is composed of two parts:</p> <ul style="list-style-type: none"> <li>• A mandatory Network Identifier that defines the external network to which the UPF is connected.</li> <li>• An optional Operator Identifier that defines the PLMN backbone in which the UPF is located.</li> </ul> <p>A 5GS Data Network Name (DNN) is equivalent to an EPS APN. It is a reference to a data network, and it may be used to select an SMF or UPF for a PDU session and to determine policies applicable to the PDU session.</p> <p>The DNN field supports dynamic values. These values can be obtained with a sequence generator.</p> <p>The sequence can be added anywhere in the DNN name (beginning, middle or end). The syntax is <code>[start_value-end_value,increment]</code>.</p> <p><b>NOTE</b> The start_value and end_value must have the same length. For example, we can configure <code>dnn[008-999,1]</code> and obtain <code>dnn008,dnn009,...,dnn998,dnn999</code>. Syntaxes <code>dnn[8-999,1]</code> or <code>[008-1000,1]</code> are not valid as the start and end value lengths are different.</p> <p>The start value is mandatory. Omitting certain parameters results in behaviors as exemplified below:</p> <ul style="list-style-type: none"> <li>• <code>dnn[4-9,]</code> an implicit increment of 1 is used</li> <li>• <code>dnn[4-9]</code> as above</li> <li>• <code>dnn[4-,1]</code> is used as <code>dnn[4-9,1]</code>, 9 being the maximum value with the configured length, length of 1 in this case</li> <li>• <code>dnn[4-,]</code> as above</li> <li>• <code>dnn[4-]</code> as above</li> <li>• <code>dnn[4]</code> as above</li> </ul> <p>UEs will use the DNN values from the pool in a round robin manner.</p>

Setting	Description
	<p><b>IMPORTANT</b> If multiple sequence generators are configured and their pools overlap (for example: dnn[000-600,1].keysight.com dnn[500-999,1].keysight.com), for UEs that use the second DNN pool, the DNN generated values might not be allocated starting with the start_value (they might start with an intermediate value in the second pool).</p>
PDU Type	Select the desired PDU type: IPv4, IPv6, IPv4v6 or Ethernet.
PGW	Select an PGW range from the drop-down list. All of the SGW ranges that you have enabled for the test are available for selection. If your test configuration does not require a PGW connection for the selected DNN, then select <i>None</i> .
Allowed Session Types	Select the allowed session types from the drop-down list: IPv4 IPv6, IPv4, IPv6, UNSTRUCTURED, ETHERNET, or all.
Default Session Type	Select the default session type from the drop-down list: IPv4 IPv6, IPv4, IPv6, UNSTRUCTURED, or ETHERNET.
QoS Flows IDs	<p>Select the QoS Flows ID(s) from the drop-down list. Each DNN should contain at least the default flow (the default flow is unique per each DNN). In addition, zero or more dedicated flows can be associated to each DNN.</p> <p>For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a>.</p>
Allowed SSC Modes	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>SSC Mode 1: The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>SSC Mode 2: The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>SSC Mode 3: Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4/v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
Default SSC Mode	<p>Select the desired default SSC mode for this DNN.</p> <p>The SSC mode associated with a PDU Session does not change during the lifetime of a PDU Session.</p>
Allowed Services	Select the allowed services from the drop-down list: Service 1, Service 2, Service 3, or all. In the 5G System, the <i>allowed services</i> may comprise any number of service identifiers allowed for the subscriber in the PDU Session. The PCF maps those service identifiers into PCC rules according to local configuration and

<b>Setting</b>	<b>Description</b>
	operator policies.
Subscription Categories	<p>Select the desired Subscription Category for this range of UEs.</p> <p>Subscriber Category is an information type structured as a list of category identifiers associated with a subscriber. It may comprise any number of identifiers associated with the subscriber (such as platinum, gold, silver, bronze).</p>
IPv4 Index	The IPv4 Index value for the PDU sessions accessing this DNN. This value identifies the IP address allocation method for IPv4 addresses.
IPv6 Index	The IPv6 Index value for the PDU sessions accessing this DNN. This value identifies the IP address allocation method for IPv6 addresses.
EPS Interworking	Enable this option if the UE subscription data indicates support for interworking with EPS for this DNN.
ADC Support	Enable this option if the DNN will support PDU sessions in which application detection and control (ADC) is enabled for subscribers.
Subscriber Spending Limits	Enable this option if the DNN will support PDU session policies that are based on subscriber spending limits.
Offline	Enable this option if the DNN will support the offline charging method for PDUs sessions.
Online	Enable this option if the DNN will support the online charging method for PDUs sessions.
Is Emergency DNN	When this option is enabled, if an UE range has mapped this type of DNN, it will perform an emergency PDU Session.
MPS Priority	Enable this option if the DNN will support subscription to MPS priority service. The priority applies to all traffic on the PDU Session.
Include APN/DNN in PFCP Messages	<p>Enable this option to include APN/DNN in PFCP messages.</p> <p>By default, this option is disabled.</p>
Dual Registration Mode	When enabled, it transfers this session to the other RAT in dual registration mode. If the session does not exist, it will be created in the other RAT.
MPS Priority Level	Specify the Multimedia Priority Services (MPS) priority level. This is the relative priority level for MPS.
IMS Signaling Priority	Specify the IP Multimedia Subsystem (IMS) signaling priority. This value indicates subscription to IMS signaling priority service. The priority applies only to IMS signaling traffic.

Setting	Description
Access Network Instance	Set the access network instance. It represents the value to be sent in the Network Instance IE when the source interface is set to Access.
Core Network Instance	Set the core network instance. It represents the value to be sent in the Network Instance IE when the source interface is set to Core or SGi-LAN/N6-LAN.
Session Rule Name	Set the session rule name.
GBR	<i>Select this option to open the GBR panel.</i>
Guaranteed Bit Rate Uplink	The guaranteed bit rate (bps) for uplink traffic. This is the uplink bit rate that the QoS Flow associated with this DNN is expected to provide.
Guaranteed Bit Rate Downlink	The guaranteed bit rate (bps) for downlink traffic. This is the downlink bit rate that the QoS Flow associated with this DNN is expected to provide.
Session AMBR	<i>Select this option to open a new panel that contains the Session AMBR settings. These settings are described in <a href="#">Session AMBR configuration settings</a>.</i>
ePCO	<i>Select this option to open the extended protocol configuration options panel. These settings are described in <a href="#">ePCO configuration settings</a>.</i>
Traffic Control Settings	<i>Select this option to open the traffic control settings panel. These settings are described in <a href="#">Traffic Control Settings configuration</a>.</i>

If, for an UE range, Paging is configured and globally per DNN Traffic Control is configured, for that UE range traffic control messages will be sent before entering Idle (as per the Paging objective) but traffic control messages will be sent per DNN as configured in the **Global Settings > DNN > Remote IPv4/IPv6** and traffic will be resumed per DNN as configured in the **Global Settings > DNN > Suspend Traffic Interval (s)** field.

## Session AMBR configuration settings

Each LoadCore DNN configuration has its own unique configuration settings, which include:

- The main DNN settings, described in [DNN configuration settings](#).
- The DNN's Session AMBR settings, described below.

The following tables describes the Session AMBR configuration settings.

Parameter	Description
Session AMBR Uplink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Session AMBR Uplink unit	The unit in which the rate is expressed. The options range from bps to Tbps.

Parameter	Description
Session AMBR Downlink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) downlink rate.
Session AMBR Downlink unit	The unit in which the rate is expressed. The options range from bps to Tbps.

## ePCO configuration settings

This option refers to sending ePCO IE (extended Protocol Configuration Options IE) in PDU Session Establishment Request message, containing DNS Server Address Request and/or MTU Size Request IEs.

The following tables describes the ePCO configuration settings.

Parameter	Description
Request DNS Server IP Address	Add DNS Server IPv4 Address Request or DNS Server IPv6 Address Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message. If required, enable this option.
Request P-CSCF IP address	Add P-CSCF IPv4 Address Request or P-CSCF IPv6 Address Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message. If required, enable this option.
Request IPv4 Link MTU	Add IPv4 Link MTU Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message. If required, enable this option.
EDC Support	If enabled, indicates that the UE has Edge DNS Client functionality. <b>IMPORTANT</b> This field becomes available only if the <b>Technical Spec Version</b> from Global Settings is set to <b>R17 December 2022</b> .
DNS Server IPv4 Address	If ePCO IE was received in PDU Session Establishment Request and DNS Server IPv4 Address Request was set, send this DNS IPv4 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty. <b>NOTE</b> The DNS Server IPv4 address will be replaced in the PDU Session Establishment Accept message if SMF learns dynamically a DNS IP address during EAS Discovery. <b>NOTE</b> If this field is empty and a DNS Name Server is configured in Global Settings > DNS Settings > <a href="#">DNS Name Servers</a> , then this field will be populated with the first IPv4 address of the DNS Name Server(s) defined in Global Settings.

Parameter	Description
	<p><b>NOTE</b> This value will be populated in the ePCO IE of the PDU Session Establishment Accept only if no other value is discovered by the SMF in the Multi-access Edge Computing (MEC) EAS Discovery procedure.</p>
DNS Server IPv6 Address	<p>If ePCO IE was received in PDU Session Establishment Request and DNS Server IPv6 Address Request was set, send this DNS IPv6 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p> <p><b>NOTE</b> The DNS Server IPv6 address will be replaced in the PDU Session Establishment Accept message if SMF learns dynamically a DNS IP address during EAS Discovery.</p> <p><b>NOTE</b> If this field is empty and a DNS Name Server is configured in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a>, then this field will be populated with the first IPv6 address of the DNS Name Server(s) defined in Global Settings.</p> <p><b>NOTE</b> This value will be populated in the ePCO IE of the PDU Session Establishment Accept only if no other value is discovered by the SMF in the Multi-access Edge Computing (MEC) EAS Discovery procedure.</p>
EDC Permission	<p>The SMF indicates, at PDU Session Establishment or at PDU Session Modification, that the use of the EDC is required or allowed for the PDU Session for the specific DNN. Available options are: <b>None</b>, <b>Allowed</b> or <b>Required</b>.</p> <p><b>IMPORTANT</b> This field becomes available only if the <b>Technical Spec Version</b> from Global Settings is set to <b>R17 December 2022</b>.</p>

Known limitations:

- The options are only used for signaling, in order to avoid errors. There is no support for sending/receiving traffic according to this option.

## Traffic Control Settings configuration

The Traffic Control Settings option offers the ability to use Traffic Control on a per DNN basis.

When enabled, after the Delay Between PDU Session Establishment and Suspend Traffic timer expires, Traffic Control specific messages will be sent from the UE IP address assigned for that specific PDU Session to the configured Remote IPv4 or Remote IPv6 peer address in order to stop downlink traffic. Downlink traffic will be resumed after the configured Suspend Traffic Interval expires.

The following tables describes the Traffic Control Settings parameters.

Parameter	Description
Traffic Control Settings	By default, this option is disabled. Select the check box to enable it.

Parameter	Description
Suspend Traffic Interval(s)	Set the value (in seconds) for this parameter.
Delay Between PDU Session Establishment and Suspend Traffic	Set the value (in seconds) for this parameter.
Remote IPv4	Select: <ul style="list-style-type: none"><li>•  - Select to add the remote IPv4 address.</li><li>•  - Select to remove the remote IPv4 address.</li></ul>
Remote IPv6	Select: <ul style="list-style-type: none"><li>•  - Select to add the remote IPv6 address.</li><li>•  - Select to remove the remote IPv6 address.</li></ul>

If, for an UE range, Paging is configured and globally per DNN Traffic Control is configured, for that UE range traffic control messages will be sent before entering Idle (as per the Paging objective) but traffic control messages will be sent per DNN as configured in the **Global Settings > DNN > Remote IPv4/IPv6** and traffic will be resumed per DNN as configured in the **Global Settings > DNN > Suspend Traffic Interval (s)** field.

## Impairment

The following table describes the settings required to define the impairment profile.

Setting	Description
<i>Impairment Profiles:</i>	
	Select the <b>Add impairment profile</b> button to add a new profile to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete impairment profile</b> button to remove the profile from your test configuration.
Name	Each impairment profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Action	Select an option from the drop-down list:


Setting	Description
Type	<ul style="list-style-type: none"> <li>Custom script</li> <li>PFCP-drop message</li> </ul>
Script file	This parameter is available only when <b>Action Type</b> is set to <b>Custom script</b> . It allows you to add a custom script, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## QoS Flows panel

The 5G QoS model is based on QoS Flows. A 5G QoS Flow is the finest level of granularity for QoS forwarding treatment in the 5G System. All traffic mapped to the same 5G QoS Flow receives the same forwarding treatment.

### Accessing the configuration settings:

To access the QoS Flows configuration settings, select **QoS Flows** from the the **Global Settings** panel. LoadCore opens the **QoS Flows** panel from which you can add and edit QoS Flow definitions:

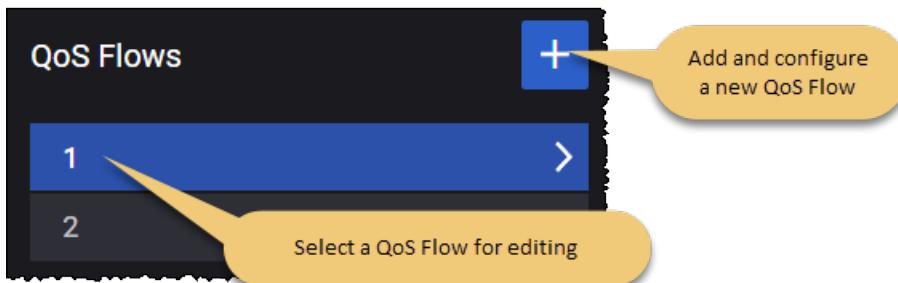

These QoS Flow configurations become immediately available for selection by other nodes in the test configuration. The properties for a QoS Flow are organized into the following groups of configuration settings:

<b>QoS Flow configuration settings</b> .....	<b>102</b>
<b>QoS Flow Packet Filter configuration settings</b> .....	<b>105</b>
<b>QoS Flow Max Packet Loss Rate settings</b> .....	<b>106</b>
<b>QoS Flow ARP configuration settings</b> .....	<b>106</b>
<b>QoS Flow MBR configuration settings</b> .....	<b>107</b>
<b>QoS Flow GBR configuration settings</b> .....	<b>107</b>

## QoS Flow configuration settings

You create and manage QoS Flows for your test network in the **Global Settings** section of the **Test Overview**. The **QoS Flow** panel contains the configuration settings for an individual QoS Flow. In this panel, you can:

- Click the **Delete QoS Flow** button to delete the QoS Flow configuration.
- Edit the QoS Flow settings.

The **QoS Flow** settings are described in the table that follows.

Setting	Description
<i>QoS Flow:</i>	
Is Default	<p>Enable this option if this QoS Flow is associated with the default QoS rule. In the 5G System, a default QoS rule is required for each UE session, and this rule will be associated with a QoS Flow.</p>
Type	<p><b>IMPORTANT</b> This parameter is available only if the <a href="#">Is Default</a> option is not selected.</p> <p>The following options are available:</p> <ul style="list-style-type: none"> <li>• <b>Data</b> - LoadCore PCF/PCRF is capable by itself to generate Packet filters for this flow/bearer. This type of flow/bearer is used for non-Voice or non-Video traffic.</li> <li>• <b>Audio</b> - LoadCorePCF/PCRF needs information related to this flow/bearer from CSCF.</li> <li>• <b>Video</b> - LoadCorePCF/PCRF needs information related to this flow/bearer from CSCF.</li> </ul>
QFI	Enter a QoS Flow Identifier (QFI) for this QoS Flow. This identifier will be used to uniquely identify a QoS Flow in the 5G System. All User Plane traffic with the same QFI within a PDU Session receives the same traffic forwarding treatment. The QFI is carried in an encapsulation header on the N3 and N9 reference points.
5QI	<p>Specify the 5QI value (decimal number).</p> <p>5G QoS Identifier (5QI) is a scalar that is used as a reference to 5G QoS characteristics defined in TS 23.501, clause 5.7.4. These are access node-specific parameters that control QoS forwarding treatment for the QoS Flow (such as scheduling weights, admission thresholds, queue management thresholds, link layer protocol configuration, among others). Standardized 5QI values have a one-to-one mapping to a standardized combination of 5G QoS characteristics as specified in TS 23.501, table 5.7.4-1.</p>
5QI Priority Level	Specify the 5QI Priority Level for this QoS Profile. 5QI Priority Level is a Policy Control parameter that accepts values from 1 through 127 (where 1 is the highest priority). It indicates a priority in scheduling resources among QoS Flows.
Resource	Select the type of resource that the QoS Flow requires: Guaranteed Bit Rate


<b>Setting</b>	<b>Description</b>
Type	(GBR), Non-Guaranteed Bit Rate (non-GBR), or Delay Critical GBR. The Resource Type determines whether or not dedicated network resources related to a QoS Flow-level Guaranteed Flow Bit Rate (GFBR) value are permanently allocated to the flow.
Averaging Window	Specify the <i>Averaging window</i> value for this 5GI. Each GBR QoS Flow is associated with an <i>Averaging window</i> . It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.
QoS Rule Precedence	Specify the desired QoS Rule Precedence value for this QFI. The QoS rule precedence value (and the PDR precedence value) determine the order in which a QoS rule or a PDR, respectively, will be evaluated. The evaluation of the QoS rules or PDRs is performed in increasing order of their precedence value.
Packet Delay Budget	The Packet Delay Budget (PDB) defines an upper bound for the time that a packet may be delayed between the UE and the PCEF. For a given QCI, the value of the PDB is the same in uplink and downlink. The purpose of the PDB is to support the configuration of scheduling and link layer functions.
Packet Error Rate	The Packet Error Rate (PER) defines the upper bound for the rate of PDUs (IP packets) that have been processed by the sender of a link layer protocol but are not successfully delivered by the corresponding receiver to the upper layer. It defines an upper bound for the rate of non-congestion related packet losses.
Max Data Burst	The Maximum Data Burst Volume is the amount of data which the RAN is expected to deliver within the part of the Packet Delay Budget allocated to the link between the UE and the radio base station.
QoS Reference	This option is used on the PCF node to identify a particular PCC Rule when QoS reference information is received from the NEF on N33 interface. <b>NOTE</b> QoS Reference is supported only when Technical Spec Version is R16 or higher.
Notification Control	Enable or disable the Notification Control parameter. When enabled, it indicates whether notifications are requested from the RAN when the GFBR can no longer be fulfilled for a QoS Flow during the QoS Flow's lifetime.
Segregation	Enable this option if the Segregation indication is to be included in a UE initiated PDU Session Modification procedure. The Segregation indication is included when the UE requests that the network bind the applicable SDF(s) on a distinct and dedicated QoS Flow.
Use Match-all Packet Filter	<b>IMPORTANT</b> This is available if <a href="#">Is Default</a> option is not enabled. If this option is not enabled, a new <a href="#">Packet Filter List</a> option appears and custom packet filter can be configured.
EPS Bearer	The EBI for the bearer associated with this QoS flow.

<b>Setting</b>	<b>Description</b>
Identifier	
PCC Rule Name	Set a value for this parameter.
Is Predefined Rule	Select the check box to enable this option.
Application Identifier	Set the application identifier value.
Send QoS Rule Precedence when Application identifier is configured	If needed, enable this option.
Move to Secondary Node	<p>If needed, enable this option.</p> <p>This option is part of the Option 3x and Dual Connectivity NR feature, for more details refer to <a href="#">UE Range Panel</a>.</p>
Packet Filter List	<p><b>IMPORTANT</b> This is available if <a href="#">Use Match-all Packet Filter</a> option is not selected.</p> <p>Refer to the following topic for a description of the Packet Filter configuration settings: <a href="#">QoS Flow Packet Filter configuration settings on the facing page</a>.</p>
Max Packet Loss Rate	Refer to the following topic for a description of the Max Packet Loss Rate configuration settings: <a href="#">QoS Flow Maximum Packet Loss configuration settings</a> .
ARP	Refer to the following topic for a description of the ARP configuration settings: <a href="#">QoS Flow ARP configuration settings</a> .
MBR	Refer to the following topic for a description of the MBR configuration settings: <a href="#">QoS Flow MBR configuration settings</a> .
GBR	Refer to the following topic for a description of the GBR configuration settings: <a href="#">QoS Flow GBR configuration settings</a> .

## QoS Flow Packet Filter configuration settings

A Packet Filter Set is used in the definition of QoS rules or packet detection rules (PDRs) to identify one or more packet flows for filtering.

You use the settings in the QoS Flow **Packet Filter List** panel to configure the packet filters associated with the current flow. You access this panel from the QoS Flow panel:

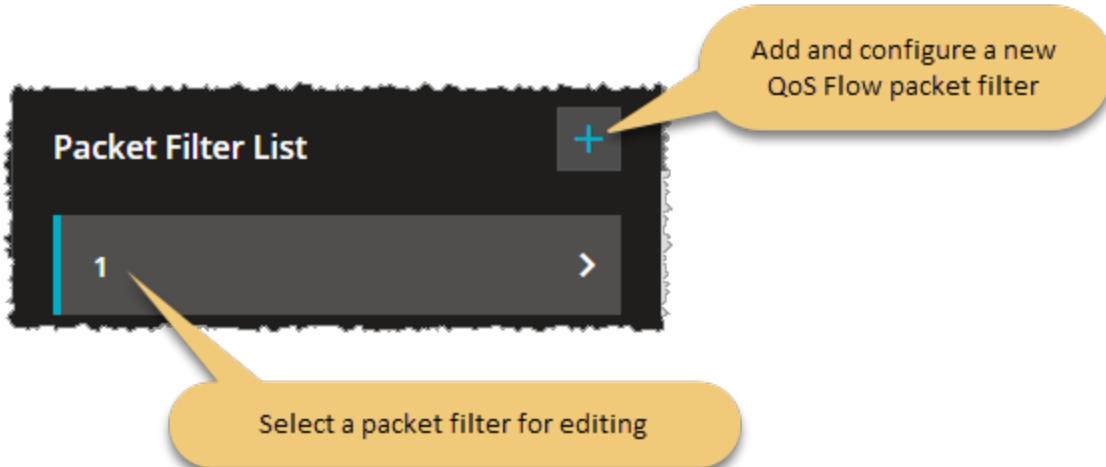

The **Packet Filter** settings are described in the following table.

Setting	Description
	Select the <b>Delete Packet Filter</b> button to delete this Packet Filter from the test configuration.
Direction	Select the direction of the data flow on which the filter is applied from the drop-down list: Uplink, Downlink, or Bidirectional.
IPv4 Remote Address and Subnet Mask	The IPv4 address of the remote node plus the subnet mask. If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
IPv6 Remote Address and Prefix Length	The IPv6 address for the remote node, expressed in CIDR notation (for example: 2001:db8::/32). If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
Protocol Identifier or Next Header	The Protocol ID of either the protocol above IP in the stack or the next header type. Examples: UDP, TCP, ESP.
Single Local Port	The local port number, if the filter specifies a single port.
Single Remote Port	The remote port number, if the filter specifies a single port.

Setting	Description
Local Port Range	The low and high limits for local port range.
Remote Port Range	The low and high limits for remote port range.
Security Parameter Index	The Security Parameters Index (SPI) for this packet filter. The SPI is a pointer that references the session key and algorithms used to protect the data being transported.
Type Of Service or Traffic Class	The IPv4 Type of Service (TOS) or the IPv6 traffic class.
Flow Label	The IPv6 Flow Label. This refers to the 20-bit Flow Label field in the IPv6 header.

## QoS Flow Max Packet Loss Rate settings

The setting establish the uplink and downlink maximum packet loss that is permitted for the QoS flow.

Setting	Description
<i>Max Packet Loss Rate:</i>	
Uplink	The maximum uplink packet loss rate (packets per second) that is permitted for the QoS Flow.
Downlink	The maximum downlink packet loss rate (packets per second) that is permitted for the QoS Flow.

## QoS Flow ARP configuration settings

The Allocation and Retention Priority (ARP) settings specify the priority level, preemption capability, and preemption vulnerability of a resource request. It is used to determine whether a new QoS Flow should be accepted or rejected—and to determine whether an existing QoS Flow can be preempted by another QoS Flow—in response to resource limitations.

The **QoS Flow ARP** settings are described in the table that follows.

Setting	Description
<i>ARP:</i>	
ARP Priority Level	<p>Specify the ARP priority level.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the</p>

Setting	Description
	home network and thus applicable when a UE is roaming.
Preemption Capability	Enable this option if the packets in this QoS Flow can preempt other flows. When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.
Preemption Vulnerability	Enable this option if the packets in this QoS Flow are candidates for being preempted by other flows. When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.

## QoS Flow MBR configuration settings

MBR indicates the maximum bit rates allowed for service data flows that are mapped to this QoS flow. Separate MBR values are configured for uplink and downlink traffic.

The **QoS Flow MBR** settings are described in the table that follows.

Setting	Description
<i>MBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the maximum bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the maximum bit rate value for downlink traffic.

## QoS Flow GBR configuration settings

GBR indicates the guaranteed bit rates for service data flows that are mapped to this QoS flow. Separate GBR values are configured for uplink and downlink traffic.

The **QoS Flow GBR** settings are described in the table that follows.

Setting	Description
<i>GBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the guaranteed bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the guaranteed bit rate value for downlink traffic.

## CA Certificates

The following table describes the settings required for CA certificates upload.

Setting	Description
<p><i>CA Certificates:</i></p>	
	Select the <b>Add CA Certificate</b> button to add a new certificate to your test configuration.
<p><i>CA Certificate:</i></p>	
	Select the <b>Delete CA Certificate</b> button to remove the certificate from your test configuration.
Name	Each certificate is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Certificate File (.zip)	It allows you to add the certificate from the storage location, using the <b>Upload</b> button. You can upload a CA certificate in CRT or ZIP format that include multiple CA certificate files grouped in a folder.
	To remove the file, select the <b>Clear</b> button.

# Milenage

The following table describes the settings required to override the milenage constants.

Setting	Description
C4	<p>Set the C4 value (string type).</p> <p>Default value: <b>0004.</b></p>
R4	<p>Set the R4 value (integer type).</p> <p>Default value: <b>64.</b></p>
C5	<p>Set the C5 value (string type).</p> <p>Default value: <b>0008.</b></p>
R5	<p>Set the R5 value (integer type).</p> <p>Default value: <b>96.</b></p>

## **Customer Parameters**

The section allows you to use custom parameters. When **Use Custom Parameters** is enabled, you can use the text section below to add the custom parameters.

## External Stats Server

If this option is selected, it will allow you to add an external statistic server.

The following table describes the settings required for the External Stats Server configuration.

Setting	Description
<i>External Stats Server:</i>	
Profile	This parameter allows you to upload or remove a stats server profile. Press <b>Upload</b> and load the preferred server profile, or <b>Clear</b> to dismiss one that is set.
Server Address	The address of the external stats server.

## **Setting up a Profile**

The External Stats Server feature allows you to forward statistic logs to an external server, thus requiring to upload a profile that defines where the stats are stored and what stats should be transferred.

**IMPORTANT** This feature is designed to support any type of external entity, but currently it supports only the Apache Kafka Plugin.

The parameters required to create the request to the external entity are configured in the **Profile** JSON file that is uploaded to Keysight Open RAN Simulators, Cloud Edition 5.0. The following structure and parameters describe the standard content of the JSON file:

Section/ Parameter	Definition	Code Sample
<i>Input section</i>		<p><i>Lists all the stats/config parameters used in the profile. All the parameters are already available in Keysight Open RAN Simulators, Cloud Edition 5.0. the following types are supported:</i></p>
stat	<p>It can be any stat supported in Keysight Open RAN Simulators, Cloud Edition 5.0. The stats can be filtered by any other stat from the stat response.</p>	<p>With filter sample:</p> <pre data-bbox="804 487 1444 846"> {   "type": "stat",   "group": "AgentStatistics",   "stat": "CPU Percent",   "name": "cpu_percent1",   "filterBy": {     "stat": "agentIP",     "value": "10.38.158.83"   } } </pre> <p>Without filter sample:</p> <pre data-bbox="804 925 1444 1210"> {   "type": "stat",   "group": "Fullcoreoverview_RegisteredAttachedUE",   "stat": "UEs Registered",   "name": "no_of_UE_Registered" } </pre>
config	<p>It can be any parameter exposed in the UI. The path is the same as the one used by the UI to set/get a parameter (see <a href="#">Parameter sample path on the facing page</a> image).</p>	<pre data-bbox="804 1262 1444 1501"> {   "type": "config",   "group": "config/nodes/ausf/ranges/1/nodeSettings",   "stat": "mcc",   "name": "mcc" } </pre>
<i>Mappings section</i>		<p><i>Mapping will use any input parameter referred by name. Mapping also supports mathematical expressions to combine stats.</i></p>
	<p>For example, Keysight Open RAN Simulators, Cloud Edition 5.0 exposes <code>stat1</code> and <code>stat2</code> but the user needs <code>user_stat</code> which comprises (<code>stat1 +</code></p>	<ul style="list-style-type: none"> <li>• one parameter sample:</li> </ul> <pre data-bbox="804 1706 1444 1854"> {   "type": "controlplane",   "from": "no_of_UE_Registered",   "to": "no_of_UE_Registered" } </pre>

Section/ Parameter	Definition	Code Sample
	<p>stat2) /100. The expression is evaluated and the result sent under user_stat name.</p>	<pre data-bbox="817 333 1449 397">}</pre> <p>OR</p> <pre data-bbox="817 481 1449 671">{     "type": "controlplane",     "from": "mcc",     "to": "MCC" }</pre> <ul style="list-style-type: none"> <li>• with mathematical expression:</li> </ul> <pre data-bbox="817 777 1449 967">{     "type": "controlplane",     "from": "cpu_percent1/(cpu_percent1 + cpu_percent2)",     "to": "agent1 cpu ratio" }</pre>

## Parameter sample path



The screenshot shows a browser window with the URL <https://10.38.157.61/api/v2/sessions/wireless-07a05ef0-a421-4894-869d-81e6e88831aa/config/config/nodes/ausf/ranges/1/nodeSettings>. The page displays a JSON object representing node settings. The JSON structure includes fields like instanceId, mcc, mnc, routingIndicators, and links. The 'mcc' field is highlighted in red, indicating it's a parameter being discussed.

```

{
  instanceId: "7ea3abc7-f0f6-435b-9154-125deddd101b",
  mcc: "226",
  mnc: "04",
  - routingIndicators: [
      1234,
      2222
    ],
  - links: [
    - {
      rel: "self",
      type: "self",
      method: "GET",
      href: "/api/v2/sessions/wireless-07a05ef0-a421-4894-869d-81e6e88831aa/config/config/nodes/ausf/ranges/1/nodeSettings"
    },
    - {
      rel: "meta",
      type: "meta",
      method: "GET",
      href: "/api/v2/sessions/wireless-07a05ef0-a421-4894-869d-81e6e88831aa/config/config/nodes/ausf/ranges/1/nodeSettings/$options"
    }
  ]
}

```

## Sample profile

```

{
  "profile": {
    "type": "kafka",
    "3gpp_scenario": "QUIC_ABR_DEBUG",
    "event_type": "ATTS-TOOLS-KEYSIGHT-EVENT",
  }
}

```

```

    "specversion": "1.1",
    "kafkatopics": "com.att.ant.stage.ATTSSKeysight.1.0",
    "kafkaschemaUrl": "https%3A%2F%2Fc1001.eastus2.uat.iebus.3pc.att.com%3A8082%2Fschemas%2Fids%2F6635&schemaId=14260",
        "kafkaHeaderBootstrapUrl": "c1001.eastus2.uat.iebus.3pc.att.com:9093",
        "kafkaHeaderSaslMechanism": "PLAIN",
        "kafkaHeaderOAuthScope": "ANT-data-feed-dev-stage",
        "kafkaUsername": "m30317@ant.att.com",
        "kafkaPassword": "August2023#",
        "input": [
            {
                "type": "stat",
                "group": "AgentStatistics",
                "stat": "CPU Percent",
                "name": "cpu_percent1",
                "filterBy": {
                    "stat": "agentIP",
                    "value": "10.38.158.83"
                }
            },
            {
                "type": "stat",
                "group": "AgentStatistics",
                "stat": "CPU Percent",
                "name": "cpu_percent2",
                "filterBy": {
                    "stat": "agentIP",
                    "value": "10.38.157.97"
                }
            },
            {
                "type": "config",
                "group": "config/nodes/ausf/ranges/1/nodeSettings",
                "stat": "mcc",
                "name": "mcc"
            },
            {
                "type": "config",
                "group": "config/nodes/ue/ranges/1/userPlane/tigerObjective/1/statelessUDP",
                "stat": "ipAddress",
                "name": "ipAddress"
            },
            {
                "type": "stat",
                "group": "Fullcoreoverview_RegisteredAttachedUE",
                "stat": "UEs Registered",
                "name": "no_of_UE_Registered"
            },
            {

```

```

        "type": "stat",
        "group": "Fullcoreoverview_PDUSessionEstablishment",
        "stat": "PDU Session Establishment Succeeded",
        "name": "no_of_PDU_Session_Established"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_UserPlaneThroughput",
        "stat": "L2-3 Device Rx Traffic",
        "name": "L3 Server::Total Bits/Sec"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_UserPlaneThroughput",
        "stat": "L2-3 Device Tx Traffic",
        "name": "L3 Client::Total Bits/Sec"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_TCPConnections",
        "stat": "TCP connections established",
        "name": "HTTP/s Handshakes Succeeded"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_TCPConnections",
        "stat": "TCP connect failed",
        "name": "HTTP/s Handshakes Failed"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_TCPConnections",
        "stat": "TCP connections closed normally",
        "name": "HTTP/s Connection Closed"
    }
],
"mappings": [
    {
        "type": "controlplane",
        "from": "cpu_percent1 + cpu_percent2",
        "to": "total cpu_percent %"
    },
    {
        "type": "controlplane",
        "from": "cpu_percent1/(cpu_percent1 + cpu_percent2)",
        "to": "agent1 cpu ratio"
    },
    {
        "type": "controlplane",
        "from": "cpu_percent2/(cpu_percent1 + cpu_percent2)",
        "to": "agent2 cpu ratio"
    }
]
}

```

```

},
{
  "type": "controlplane",
  "from": "mcc",
  "to": "MCC"
},
{
  "type": "controlplane",
  "from": "ipAddress",
  "to": "Destination IP Address"
},
{
  "type": "controlplane",
  "from": "no_of_UE_Registered",
  "to": "no_of_UE_Registered"
},
{
  "type": "controlplane",
  "from": "no_of_PDU_Session_Established",
  "to": "no_of_PDU_Session_Established"
},
{
  "type": "userplane",
  "from": "L3 Server::Total Bits/Sec",
  "to": "L3 Server::Total Bits/Sec"
},
{
  "type": "userplane",
  "from": "L3 Client::Total Bits/Sec",
  "to": "L3 Client::Total Bits/Sec"
},
{
  "type": "userplane",
  "from": "HTTP/s Handshakes Succeeded",
  "to": "HTTP/s Handshakes Succeeded"
},
{
  "type": "userplane",
  "from": "HTTP/s Handshakes Failed",
  "to": "HTTP/s Handshakes Failed"
},
{
  "type": "userplane",
  "from": "HTTP/s Connection Closed",
  "to": "HTTP/s Connection Closed"
}
]
}
}

```

**Event body sent to Kafka**

```
[
  {
    "eventBody": {
      "id": "wireless-0acbc45b-8777-4250-a3ec-4f00e47399c8_39",
      "time": "2024-02-29T13:57:35Z",
      "type": "ATTS-TOOLS-KEYSIGHT-EVENT",
      "specversion": "1.1",
      "source": "https://10.38.157.61/wireless-07a05ef0-a421-4894-869d-81e6e88831aa",
      "datacontenttype": "application/json",
      "payload": [
        {
          "type": "resource_info",
          "resource_info": {
            "simulated_tool_info": [
              {
                "tool_name": "LoadCore",
                "middleware_ip": "10.38.157.61"
              }
            ],
            "network_type": "5G",
            "3gpp_scenario": "QUIC_ABR_DEBUG"
          }
        },
        {
          "type": "test_execution_result",
          "test_execution_result": {
            "control_plane_result": {
              "Destination IP Address": "20.0.6.10",
              "MCC": "226",
              "agent1 cpu ratio": "0.455321",
              "agent2 cpu ratio": "0.544679",
              "no_of_PDU_Session_Established": "100",
              "no_of_UE_Registered": "0",
              "total cpu_percent %": "3.0902"
            },
            "userplane_plane_result": {
              "L3 Client::Total Bits/Sec": "0",
              "L3 Server::Total Bits/Sec": "0"
            }
          }
        },
        {
          "type": "test_execution_details",
          "test_execution_details": {
            "testName": "4 - Full Core Base Config",
            "testSessionID": "wireless-07a05ef0-a421-4894-869d-81e6e88831aa",
            "UserID": "admin@example.org",
            "testStatus": "STOPPING",
            "testStartTime": "2024-02-29T13:55:40Z",
            "testDuration": 105,
          }
        }
      ]
    }
  ]
]
```

```
        "testStopTime": "2024-02-29T13:57:31Z"
    }
]
},
"payloadType": "JSON",
"value": {}
}
]
```

# UE configuration settings



You use the User Equipment (UE) configuration settings to define one or more ranges of simulated UEs. Every test requires at least one range of simulated UEs. These settings define properties that are representative of real-world UEs that may access a 5G network, including UE identity, security, network slice selection, among others.

In addition, the UE settings include the configuration of test objectives; these settings direct the traffic performance and UE behavior actions during test execution.

The configuration settings are described in the topics listed below.

## Topics:

<b>UE Ranges panel</b>	<b>119</b>
<b>UE Range panel</b>	<b>120</b>
<b>Range Settings</b>	<b>122</b>
UE Identification settings	123
UE Security settings	123
UE Settings settings	127
UE Shared Data IDs	135
UE Subscribed AMBR settings	135
Service Area Restriction settings	135
Forbidden Areas	137
DNNs Config	138
Notifications	141
SMS Configuration	141
Equipment Status	144
Converged Charging	144
Spending Limit Control	145
Internal Group IDs	148
<b>Network Slicing settings</b>	<b>149</b>
UE NSSAI settings	150
UDM Default NSSAI settings	151
UDM SNSSAI Mappings	151
UDR SNSSAI Settings	152
<b>Objectives</b>	<b>153</b>
Control Plane Objective	154


User Plane Objectives .....	170
-----------------------------	-----

## UE Ranges panel

The **UE Ranges** panel opens when you select the UE node from the network topology window. You can perform the following tasks from this panel:

- Add a new UE range to your test configuration.
- Open a UE range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

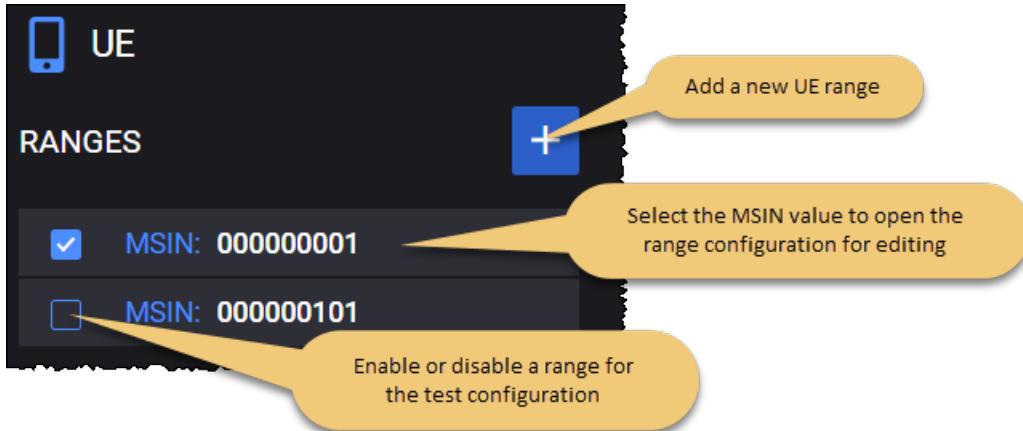

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **All UE Ranges and RAN Ranges on All Agents** - on each agent a chunk of UEs from each UE range and a chunk of RANs from each RAN range will be configured.
- **Round Robin UE Ranges and RAN Ranges per Agent** - UE ranges will be distributed round-robin on the assigned agents, and chunks from RAN ranges will be distributed on the Agents, where the UE ranges from that Agents use the RAN nodes (either as Parent Node, or in the Handover, or EPS Fallback sections).

## UE Range panel


When you select an MSIN from the UE **Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Delete the UE range from the test configuration.
- Configure the *Range Count*.
- Select the *Parent NG-RAN* for the UE range.
- Select a *Secondary Node*.
- Access the detailed UE configuration settings (Range Settings, Network Slicing, Objectives).

## UE range controls and settings

LoadCore has now support for Option 3x, on the NG-RAN, simulating Dual Connectivity radio connections, as described in 3GPP TS 36.300/38.300.

This will enable the UEs to use the radio resources for sending/receiving application traffic on both E-UTRAN and NR, as seen in the following topology.

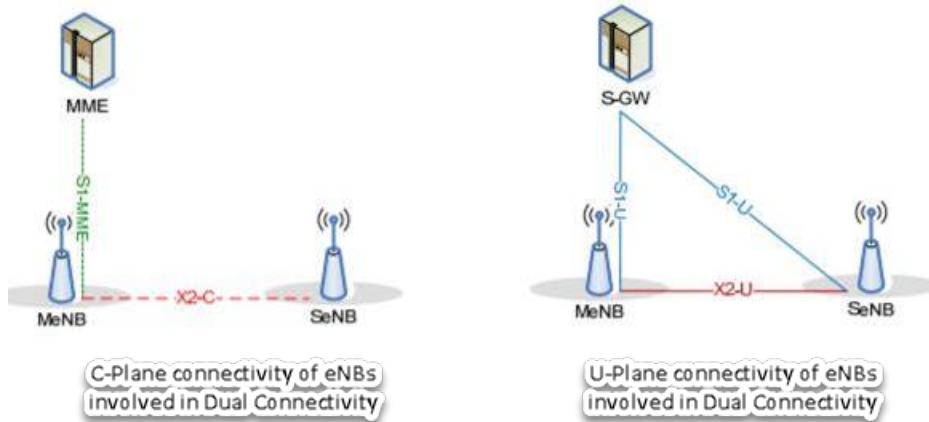

The eNodeBs and gNodeBs involved in the communication must have a X2 connection established between them.

The eNodeBs/gNodeBs involved in this communication will have two optional roles:

- a Parent Node – (only eNodeB at this point), or
- a Secondary Node (a gNodeB).

The UE will attach to a 4G eNodeB which can have a Secondary node configured, a gNodeB. This implies all the traffic or just a part of it can be sent through the NR bearer, the IP and GTP tunnel being negotiated in the E-RAB modification procedure over the S1 interface.

Through E-RAB modification LoadCore supports the following:

- SN addition
- SN change
- SN modification
- SN release

Since the UEs will be able to use both E-UTRAN and NR resources, not all the established bearers need to be moved.

In this configuration, the **Move to Secondary Node** option must be enabled on the QoS flows tab, on each bearer that needs to use the NR resources. The traffic will be moved to NR bearers as soon as the bearer configured to support is successfully setup.

Known limitations:

- Application Traffic is not supported on Dual Connectivity bearers.

The following table describes the available **Range** configuration options for each UE range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	Enter the number of simulated UEs required for the range.
Parent RAN	Select the desired parent node from the test configuration. This will be the NG-RAN through which the UEs in the range will access the 5G core network.
Secondary Node	This option is used for Option 3x and Dual Connectivity NR-NR features. Select the secondary node from the drop-down list.

## Detailed UE configuration settings

The Range panel also provides links to the detailed configuration settings:

- [UE Range settings](#)
- [Network Slicing settings](#)
- [Test Objectives](#)

## Range Settings

For each range that you add (in the [UE Ranges panel](#)), you configure the settings from the **Range** panel ([UE Range panel](#)).

The **Range Settings** are organized into the following groups:

<b>UE Identification settings</b> .....	<b>123</b>
<b>UE Security settings</b> .....	<b>123</b>
<b>UE Settings settings</b> .....	<b>127</b>
<b>UE Shared Data IDs</b> .....	<b>135</b>
<b>UE Subscribed AMBR settings</b> .....	<b>135</b>
<b>Service Area Restriction settings</b> .....	<b>135</b>
<b>Forbidden Areas</b> .....	<b>137</b>
<b>DNNs Config</b> .....	<b>138</b>
<b>Notifications</b> .....	<b>141</b>
<b>SMS Configuration</b> .....	<b>141</b>
<b>Equipment Status</b> .....	<b>144</b>
<b>Converged Charging</b> .....	<b>144</b>
<b>Spending Limit Control</b> .....	<b>145</b>
<b>Internal Group IDs</b> .....	<b>148</b>

## UE Identification settings

Each UE range has a set of Identification settings that provide basic identity values for the simulated UEs that populate the range. Some of the values (such as MCC) are shared by all of the UEs in the range, while others (such as MSIN) are unique for each individual UE in the range. The unique values are generated using an initial value plus an increment value.

The following table describes the UE **Identification Settings**.

Setting	Description
PLMN MCC	The MCC that will be assigned to each UE in this range.
PLMN MNC	The MNC that will be assigned to each UE in this range.
MSIN	<p>The MSIN value that will be assigned to the first simulated UE in the range.</p> <p><b>About MSIN ...</b></p> <p>The Mobile Subscriber Identification Number (MSIN) is a number that a wireless operator uses to uniquely identify a mobile phone. It is—at most—10-digits long. The MSIN is used (in combination with the MCC and MNC) to form the International Mobile Subscriber Identity (IMSI) number.</p>
MSIN increment	The value to use for incrementing the MSIN values for each of the UEs in the range.
IMEI	<p>The IMEI value that will be assigned to the first simulated UE in the range.</p> <p>The International Mobile Equipment Identity (IMEI) is a number used to uniquely identify 3GPP and iDEN mobile phones, as well as some satellite phones. It identifies the origin, model, and serial number of the device. It consists of either 15 digits (14 digits plus one check digit); or 16 digits (14 digits plus two software version digits). GSM networks use the IMEI number to identify valid devices, and can also use the number to prevent a stolen phone from accessing the network.</p> <p>When it includes the software version digits, it is referred to as the IMEISV.</p>
IMEI Increment	The value to use for incrementing the IMEI values for each of the UEs in the range.
Software Version	The software version number identifies the software version number of the mobile equipment. Its length is 2 digits.
MSISDN	The first Mobile Station ISDN (MSISDN) value for this range.
MSISDN Increment	The value to use for incrementing the MSISDNs in the range.

## UE Security settings

Each UE range requires security settings for subscriber authentication and subscriber privacy. In the 5G system, the SUbscription Permanent Identifier (SUPI) is a globally unique identifier allocated to each subscriber. The serving network must authenticate the SUPI in the process of authentication and key agreement between UE and network. The serving network authorizes the UE through the

subscription profile obtained from the home network; this UE authorization is based on the authenticated SUPI.

The SUPI is never transferred in clear text over the 5G-RAN; instead, the SUCI is used. The SUbscription Concealed Identifier (SUCI) is a privacy-preserving identifier containing the concealed SUPI. In the 5G core network, only the UDM has authority to deconceal the SUCI.

For detailed information, refer to 3GPP TS 33.501 (Security architecture and procedures for 5G System).

The following table describes the UE **Security Settings**.

<b>Setting</b>	<b>Description</b>
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP / OPc / TOP / TOPc	Select the operator-specific authentication value.
OP	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc	The OPc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc Increment	The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.
TOP	A 256-bit operator variant algorithm configuration field used by the TUAK authentication algorithm.
TOPc	A 256-bit value derived from TOP and K used by the TUAK authentication algorithm.
TOPc Increment	The number used to increment the TOPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same TOPc value.
SUCI Protection	The protection scheme used to generate the SUCI (for the purpose of

<b>Setting</b>	<b>Description</b>												
Scheme	<p>concealing the SUPI) for each UE in the range. The options are as follows:</p> <table border="1" data-bbox="434 318 1437 646"> <thead> <tr> <th data-bbox="434 318 556 371"><b>Scheme</b></th><th data-bbox="556 318 752 371"><b>Identifier</b></th><th data-bbox="752 318 1437 371"><b>Size of the scheme output</b></th></tr> </thead> <tbody> <tr> <td data-bbox="434 371 556 477">null-scheme</td><td data-bbox="556 371 752 477">0x0</td><td data-bbox="752 371 1437 477">Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)</td></tr> <tr> <td data-bbox="434 477 556 582">Profile-A</td><td data-bbox="556 477 752 582">0x1</td><td data-bbox="752 477 1437 582">Total of 256-bit public key, 64-bit MAC, and size of input</td></tr> <tr> <td data-bbox="434 582 556 646">Profile-B</td><td data-bbox="556 582 752 646">0x2</td><td data-bbox="752 582 1437 646">Total of 264-bit public key, 64-bit MAC, and size of input.</td></tr> </tbody> </table>	<b>Scheme</b>	<b>Identifier</b>	<b>Size of the scheme output</b>	null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)	Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input	Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.
<b>Scheme</b>	<b>Identifier</b>	<b>Size of the scheme output</b>											
null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)											
Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input											
Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.											
Home Network Public Key	The home network public key that will be used for concealing the SUPI. The USIM stores the home network public key (if provisioned by the home operator).												
Home Network Public Key ID	The Home Network Public Key Identifier that will be used to indicate which public/private key pair to use for SUPI protection and deconcealment of the SUCI.												
Ephemeral Public Key	The ephemeral public key that will be used for computing a fresh SUCI on the UE side and for deconcealing the SUCI on the home network side.												
Ephemeral Private Key	The ephemeral private key that will be used for computing a fresh SUCI on the UE side.												
Routing Indicator	<p>The Routing Indicator that is used in the construction of the SUCI.</p> <p>The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.</p>												
RAND	<p>A hexadecimal number that represents the 128-bit random challenge.</p> <p>You can accept the value generated by LoadCore, or enter of a RAND value of your own choosing.</p>												
RAND Increment	Specify the RAND increment value.												
AUTN	The AUthentication TokeN (AUTN) to use when authenticating the UEs in this range.												
Authentication Type	<p>Select the Authentication Method to use in the authentication procedures for this range of UEs.</p> <p>In the current release, <b>5G-AKA</b> is the only supported Authentication Type.</p>												
Integrity Protection Maximum Uplink Data Rate	<p>Select a value from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>64 kbps</b></li> <li>• <b>Full Data Rate</b></li> </ul>												

Setting	Description
Integrity Protection Maximum Downlink Data Rate	Select a value from the drop-down list: <ul style="list-style-type: none"> <li>• <b>64 kbps</b></li> <li>• <b>Full Data Rate</b></li> </ul>
<i>UDM User Plane Security Profile</i>	<i>With this option you can configure User Plane security profiles. See <a href="#">UDM User Plane Security Profile below</a> table for details.</i>
<i>Override UE Security Capability</i>	<i>If selected, this option will override the default UE Security Capability settings. See <a href="#">Override UE Security Capability on the facing page</a> table for details.</i>

## UDM User Plane Security Profile

The following parameters are required to configure the UDM User Plane Security Profile:

Parameter	Description
	Select the <b>Add Security Profile</b> button to add a new profile to your test configuration.
	Select the <b>Delete Profile</b> button to remove the profile from your test configuration.
SNSSAI	Select the SNSSAI slice from the drop-down list.
DNN	Select the DNN value for the drop-down list. For example: <code>dnn.keysight.com</code> .
Integrity	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>REQUIRED</b></li> <li>• <b>PREFERRED</b></li> <li>• <b>NOT-NEEDED</b></li> </ul>
Confidentiality	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>REQUIRED</b></li> <li>• <b>PREFERRED</b></li> <li>• <b>NOT-NEEDED</b></li> </ul>

When the **REQUIRED** option is selected for any of the [Integrity](#) or [Confidentiality](#) parameters and, on the NGRAN, the same option ([Enable Integrity](#) or [Enable Confidentiality](#)) is NOT selected, the NGRAN will send in *PduSessionResourceSetupResponse* message an error cause (forcing SMF to send a PDU Session establishment reject). Otherwise, for any other combinations of Integrity or Confidentiality parameters on UDM security profile and NGRAN, the flow should be successfully.

**NOTE**

User Plane Security settings are not taken into account for N2 Handover procedure.

## Override UE Security Capability

The following parameters are required to configure the Override UE Security Capability:

Parameter	Description
Include 5G UE Security Capabilities in 4G Attach	If enabled, the 4G Attach Request will contain the UE Additional Security Capability IE (5G UE Security Capability).
<i>5G Ciphering Algorithm</i>	<i>This section lists the supported 5G ciphering algorithm. By default, all settings are enabled. If required, you can disable each setting individually to avoid override.</i>
NEA0	Null ciphering algorithm (enabled by default).
NEA1	128-bit SNOW 3G based algorithm (enabled by default).
NEA2	128-bit AES based algorithm (enabled by default).
NEA3	128-bit ZUC based algorithm (enabled by default).
<i>5G Integrity Algorithm</i>	<i>This section lists the supported 5G integrity algorithm. By default, all settings are enabled. If required, you can disable each setting individually to avoid override.</i>
NIA0	Null ciphering algorithm (enabled by default).
NIA1	128-bit SNOW 3G based algorithm (enabled by default).
NIA2	128-bit AES based algorithm (enabled by default).
NIA3	128-bit ZUC based algorithm (enabled by default).

## UE Settings settings

Each UE range has a set of **Settings** that configure subscription data and PDU session data for the range.

Setting	Description
<i>Settings:</i>	
Dual Registration Mode	<p>When enabled, this option allows an UE to be registered/attached in the same time to 5GS via a gNodeB and to EPS via an eNodeB.</p> <p>The UE will activate this feature in case:</p> <ul style="list-style-type: none"> <li>• Dual Registration Mode option is enabled.</li> <li>• At least one DNN has <a href="#">Dual Registration Mode</a> option enabled.</li> <li>• It has a <a href="#">parent gNodeB</a> (<i>gNodeB-1</i> for example).</li> <li>• It has a Handover objective configured with <a href="#">visited nodes</a> (for example, primary node <i>gNodeB-1</i> and secondary node <i>eNodeB-1</i>).</li> </ul>

<b>Setting</b>	<b>Description</b>
	1).
Allow MICO Mode	<p>This option, when selected, indicates that the UEs in the range prefer Mobile Initiated Connection Only (MICO) mode during Initial Registration and Registration Update procedures.</p> <p>Applicable to simulated UDM NF.</p>
Subscribed Registration Timer (s)	<p>The Periodic Registration timer value for this range of UEs.</p> <p>The AMF allocates a periodic registration timer value to the UE based on local policies, subscription information and information provided by the UE. After the expiry of this timer, the UE performs a periodic registration.</p> <p>Applicable to simulated UDM NF.</p>
Active Time (s)	The subscribed Active Time for Power Saving Mode (PSM) UEs.
RAT Restrictions	<p>UE Mobility Restrictions include RAT restrictions, which define the 3GPP Radio Access Technologies (one or more) that a UE is not allowed to access in a PLMN. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual.</p> <p>Applicable to simulated UDM NF.</p>
PCF Subscription to UDR	<p>Select the identifier that will determine the PCF to subscribe to UDR for AF-Traffic Influence events. Options are:</p> <ul style="list-style-type: none"> <li>• SUPI</li> <li>• Internal Grup ID</li> <li>• Any UE</li> </ul>
Set ESM Information Transfer Flag	<p>By default, this option is enabled.</p> <p>This option controls the value of the <i>ESM information transfer</i> flag from InitialUEMessage/AttachRequest 4G message.</p> <p>When this option is disabled, the UE/eNodeB will set the flag <i>ESM information transfer</i> to <i>False</i> and MME will not send DonwlinkNASTransport/ESM information request.</p>
Switch Off Deregistration/Detach	<p>When this option is enabled, the Deregistration Request/Detach messages will use a deregistration/detach type of Switch-off. When the Deregistration/Detach type is switch-off, the AMF/MME does not send the Deregistration/Detach Accept message back to the UE.</p>
PDU Session Release Before Deregistration	When this option is enabled, the UE will release PDU sessions before deregistration.
Enable Periodic Registration Update/Periodic	<p>By default, this option is not enabled.</p> <p>If the periodic registration / TAU functionality is disabled, the UE will</p>

<b>Setting</b>	<b>Description</b>
Tracking Area Update	<p>ignore the T3512/T3412 timer received in the Registration Accept/TAU Accept and will not send any Periodic Registration Update/Tracking Area Update request.</p> <p>During the Initial Registration/Initial Attach, the AMF/MME sends in the Registration Accept/Attach Accept a T3512/T3412 timer, which consists of a Unit-Value pair. For example, a value of 30 and unit of 10min means 300 minutes.</p> <p>The T3512/T3412 timer can be overridden by subsequent Registration Accept/TAU Accept messages. If T3512/T3412 is 0 or Disabled, no periodic registration/periodic TAU should be performed. If no T3512/T3412 value is present in the Registration Accept /Attach Accept message, the last known T3512/T3412 value is used. If a T3512/T3412 was never transmitted by the AMF/MME, the default value of 54 minutes will be used.</p> <p>The T3512/T3412 timer is triggered when the UE enters idle. If the UE exits the idle state, the T3512/T3412 timer is stopped. When the UE enters again in idle, the T3512/T3412 timer is restarted.</p> <p>While the UE is in idle mode, when the T3512/T3412 timer expires:</p> <ul style="list-style-type: none"> <li>• If the UE is not registered/attached for emergency services, the UE initiates a Periodic Registration Update/Tracking Area Update procedure and restarts the T3512/T3412 timer.</li> <li>• If the UE is registered/attached for emergency services, the UE locally de-registers/detaches and the AMF/MME locally detaches the UE.</li> </ul>
Include UEContextRequest IE for PRU Initial UE Message	<p>If enabled, it will include the UEContextRequest IE for the PRU Initial UE Message.</p> <p><b>IMPORTANT</b> This option appears only if <b>Enable Periodic Registration Update/Periodic Tracking Area Update</b> is enabled.</p>
Delay Before PDU Session Creation (ms)	The time that will elapse before the UEs in this range begin creating PDU sessions after successful Registration.
Delay Before Deregister (ms)	The time that will elapse between PDU Session Release Complete and UE initiated Deregistration Request messages.
Delay Before Handover Notify (ms)	The time to wait before handover notification.
Check AUTN	<p>By default, this option is disabled.</p> <p>When the option is enabled, then UE will check the value of AUTN in the <i>Authentication Request</i> messages and it will reply with <i>Authentication Failure (MAC failure)</i> in case of different MAC values or with <i>Authentication Failure (Synch failure)</i> in the case the sequence number computed using the AUTN value is invalid.</p>

<b>Setting</b>	<b>Description</b>
AMF Force Identification During Registration	This option will force the AMF to always trigger the "Identification Procedure" to get the identity of the UE. When the NG-RAN node receives this request, it responds with the IMEISV or the SUCI.
Send Registration Accept in Initial Context Setup Request	If enabled, the UE will send Registration Accept in Initial Context Setup Request.
Always Include Uplink Data Status IE in Service Request Message	The UE will always include the Uplink Data Status IE for a Service Request message, not only if it has pending data.
Enable Passthrough	Select this option to enable passthrough and any interface. Applicable to all passthrough topologies (UE/gNB or UPF). Applicable to either direction: GTPu to IP or/and IP to GTPu.
Attach/Register with GUTI	When the Primary Objective type is Subscribers Per Second, enabling this option will trigger a Registration/Attach Request with the type of user identity set to temporary identity (GUTI). When option is not enabled, the type of user identity in the Registration/Attach Request will be permanent identity.
Authentication with GUTI	This option is available only when Attach/Register with GUTI option is enabled. When enabled, this option triggers authentication in case of attach (4G)/register (5G) with GUTI.
Force Emergency Registration	When this option is enabled, the UE will perform an Emergency registration (instead of Initial Registration). Only the primary objective's DNNs are taken into account when deciding if the UE performs an emergency registration. When the dnnIdsToActivate is present but empty in the primary objective, the Emergency Registration will not be performed even if there is a Secondary Objective that uses an emergency DNN.
Identity Type for Emergency Registration	Select the identity type to use from the drop-down list. Available options are: <ul style="list-style-type: none"><li>• <b>SUCI/IMSI</b> - where SUCI is used for 5G network, and IMSI for 4G network</li><li>• <b>IMEISV/IMEI</b> - where IMEISV is used for 5G network, and IMEI for 4G network.</li></ul>
Support SMS	When this is selected, a flag will be added in the Registration message advertising UE support for SMS over NAS feature. This feature is currently available on gNB N1N2 interface but not on the

<b>Setting</b>	<b>Description</b>
	Full Core AMF, so the AMF needs to be set as DUT.
Delay Before Indirect Forwarding Cleanup (ms)	The time that will elapse before indirect forwarding cleanup. The delay is calculated from the UE Context Release.
Send Native GUTI During IRAT Mobility Registration	Enable this option to send native GUTI during IRAT mobility registration.
Authentication During Mobility Registration	<p>Select a value from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Never</b>: Authentication is not performed during mobility registration.</li> <li>• <b>Always</b>: Authentication during mobility registration is always performed.</li> <li>• <b>No Native Context</b>: Authentication during mobility registration is performed only when the UE does not hold a native 5G security context.</li> </ul>
Access Class	<p>Select the Access Class of the UE from the drop-down list. The following options are available: <i>None</i>, <i>Low Priority Access</i>, <i>11 - For PLMN Use</i>, <i>12 - Security Service</i>, <i>13 - Public Utilities</i>, <i>14 - Emergency Services</i>, <i>15 - PLMN Staff</i>.</p> <div style="border: 1px solid #ccc; padding: 5px; display: inline-block;"><b>IMPORTANT</b> This option is available for 4G only.</div>
<i>Radio Capability</i>	
UE Radio Capability IE Value for LTE	The UE radio capability IE value that will be included UE Capability Info Indication message.
UE Radio Capability IE Value for NR	The UE radio capability IE value that will be included UE Capability Info Indication message.
Send UE Capability IE Indication after Initial Context Setup	Select this option to sent UE capability IE indication after initial context setup.
Replay UE Radio Capability	<p>The UE Radio Capability IE is replayed in the Initial Context Setup Request on 5G. This option is applicable for the AMF node only.</p> <div style="border: 1px solid #ccc; padding: 5px; display: inline-block;"><b>NOTE</b></div> <p>It is not applicable for Initial Context Setup Request of an inter-RAT handover procedure.</p>
<i>Location Reporting</i>	<i>Select the check box to enable location reporting as defined in TS 23.502 (supported on the AMF and NG-RAN nodes).</i>
Reporting Type	Select the value from the drop-down list. The available options are:

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Direct</b> - If the test timeline is long enough, the AMF generates <math>n</math> LocationReportingControl messages at every <math>m</math> seconds from the moment Registration Complete message is received by the AMF (<math>n</math> is the value configured for <a href="#">Number of Repeats</a> and <math>m</math> is the value of <a href="#">Interval Between Requests</a>).</li> <li>• <b>Change of Serving Cell</b> - In case of Handover with AMF change, if <b>Change of Serving Cell</b> is selected, after handover, the new AMF will send a LocationReportingControl message to the NG-RAN.</li> </ul>
Interval Between Requests (seconds)	Set the time interval between requests.
Number of Repeats	Set the number of repeats.
Start Time (seconds)	The number of seconds after successful attach when the AMF sends a LocationReportingControl message (event-type: <code>change-of-serv-cell</code> ).
Stop Time (Seconds)	The number of seconds since the <a href="#">Start Time</a> when the AMF sends LocationReportingControl message ( event-type: <code>stop-change-serving-cell</code> ).
Core Network Assistance Information For Inactive	<p><i>If enabled, the configured Core Network Assistance Information for RRC INACTIVE IE is present only in the INITIAL CONTEXT SETUP REQUEST message carrying the initial Registration Accept. It is not present in the INITIAL CONTEXT SETUP REQUESTS carrying other types of NAS messages, UE CONTEXT MODIFICATION REQUEST, HANDOVER REQUEST or PATH SWITCH REQUEST ACKNOWLEDGE. It is not present for Emergency Registration.</i></p> <p><i>This option is disabled by default. See <a href="#">Core Network Assistance Information For Inactive</a> for configuration details.</i></p>
<i>Access and Mobility Policy:</i>	
Subscription Categories	<p>Select the desired Subscription Category for this range of UEs.</p> <p><i>Subscriber Category</i> is an information type structured as a list of category identifiers associated with a subscriber. It may comprise any number of identifiers associated with the subscriber (such as platinum, gold, silver, bronze).</p> <p>Applicable to simulated UDR NF.</p>
<i>Operator Specific Data</i>	
Policy data	<i>This option allows for specific operator data to be added.</i>
Use Operator Specific Data	<p>Enable this option to use operator specific data.</p> <p>A list of objects similar with the reconfigured example is expected.</p>

<b>Setting</b>	<b>Description</b>
Operator Specific Data Policy JSON	<p>Paste the operator specific data in JSON format into the field. Format and save the JSON content by selecting the <b>Save JSON</b> button.</p> <p>Default format:</p> <pre>{     "opSpecDataName1": {         "dataType": "string",         "value": "aaaaa"     },     "opSpecDataName2": {         "dataType": "object",         "value": {             "member1": 1,             "member2": "string",             "member3": null         }     },     "opSpecDataName3": {         "dataType": "integer",         "value": 1023     },     "opSpecDataName4": {         "dataType": "array",         "value": [             {                 "member1": 1,                 "member2": "string",                 "member3": null             },             1025,             "another string"         ]     } }</pre>

## Core Network Assistance Information For Inactive

<b>Setting</b>	<b>Description</b>
<i>Core Network Assistance Information For Inactive</i>	
UE Specific DRX	<p>The UE Specific DRX value can be selected from the available options:</p> <ul style="list-style-type: none"> <li>• <b>DRX32</b></li> <li>• <b>DRX64</b> (default value)</li> <li>• <b>DRX128</b></li> <li>• <b>DRX256</b></li> <li>• <b>None</b> - if selected, this IE will not be included in the message</li> </ul>

<b>Setting</b>	<b>Description</b>
Include MICO Mode Indication	Indicates if the UE is configured with MICO Mode by the AMF. If disabled, this IE will not be included in the message.
<i>Expected UE Behaviour</i>	
Expected Handover Interval	<p>The expected time interval between inter NG-RAN node handovers. When set to <b>None</b>, this IE will not be included in the message. Select a value from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)</li> <li>• <b>Sec15</b></li> <li>• <b>Sec30</b></li> <li>• <b>Sec60</b></li> <li>• <b>Sec90</b></li> <li>• <b>Sec120</b></li> <li>• <b>Sec180</b></li> <li>• <b>Long Time</b></li> </ul>
Expected UE Mobility	<p>Indicates whether the UE is expected to be stationary or mobiles. When set to <b>None</b>, this IE will not be included in the message. Select a value from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)</li> <li>• <b>Stationary</b></li> <li>• <b>Mobile</b></li> </ul>
<i>Expected UE Activity Behaviour</i>	
Expected Activity Period	The expected activity time in seconds. Any period longer than 180 seconds is represented by the value 181. When left empty, this IE will not be included in the message.
Expected Idle Period	The expected idle time in seconds. Any period longer than 180 seconds is represented by the value 181. When left empty, this IE will not be included in the message.
Source Of UE Activity Behaviour Information	<p>Indicates the source of the UE activity behavior. When set to 'None' this IE will not be included in the message.</p> <p>Select a value from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)</li> <li>• <b>Subscription Information</b></li> <li>• <b>Statistics</b></li> </ul>

## UE Shared Data IDs

You use the **Shared Data ID** panel to create a list of shared-data-ids. These IDs are used to request the shared-data resources from the UDM.

A UE subscription may contain both individual subscription data and shared subscription data (subscription data that is shared by multiple UEs). These shared data are identified by Shared Data IDs that are listed in the UE individual data.

Use the **Add ID** button to add additional IDs to the list, and the **Delete ID** button to removed IDs from the list.

Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.

## UE Subscribed AMBR settings

Each UE range has a set of **Subscribed AMBR** settings that configure the Aggregate Maximum Bit Rate (AMBR) for which the UEs in the range are subscribed.

Setting	Description
<i>Subscribed AMBR:</i>	
Subscribed AMBR Uplink	The subscribed uplink UE AMBR value for this range of UEs. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.
Subscribed AMBR Uplink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.
Subscribed AMBR Downlink	The subscribed downlink UE AMBR value for this range of UEs. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.
Subscribed AMBR Downlink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.

## Service Area Restriction settings

A UE subscription may contain service area restrictions, which place limits on the areas in which the UE may initiate communication with the network. A Service Area Restriction definition consists of either a list of allowed Tracking Area Identities (TAIs) or a list of non-allowed TAIs and, optionally, specifies the maximum number of allowed TAIs.

Use the settings described below to configure service area restrictions for a UE range. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.

## Service Area Restrictions

Setting	Description
Restriction Type	The type of restriction to use for this range of UEs. It is either <b>Not Allowed Areas</b> or <b>Allowed Areas</b> .

Setting	Description
	<p>The list of allowed TAIs indicates the TAIs where the UE is allowed to be registered, and the list of non-allowed TAIs indicates the TAIs where the UE is not allowed to be registered.</p> <p>A Tracking Area identity (TAI) uniquely identifies a tracking area. It is constructed from the MCC (Mobile Country Code), MNC (Mobile Network Code), and TAC (Tracking Area Code).</p>
Max No. of TAs	The maximum number of allowed TAIs for this UE range.

## Areas

Each Service Area Restriction specifies one or more Areas (Allowed or Not Allowed Areas), each of which contains a list of TACs. You can add and delete areas from the Service Area Restrictions settings as needed to meet your test requirements.

Setting	Description
<i>Areas:</i>	
	Select the <b>Add Area</b> button to add a new restriction area to your configuration.
<i>Area:</i>	
	Select the <b>Delete Area</b> button to remove the restriction area from your configuration.
Area Codes	Each Area that you configure is identified by an Area Code, which is an operator-specific string value.
<i>TACs:</i>	
	<p>Select the <b>Add TAC</b> button to add a new TAC to your configuration.</p> <p>Each <b>Area</b> that you add to a UE range's Service Area Restriction contains a list of one or more TACs.</p> <p>A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).</p>
	Select the <b>Delete</b> button to remove the tracking area code from your configuration.

## Forbidden Areas

A UE subscription may include a list of Forbidden Areas. In a Forbidden Area, the UE is not permitted to initiate any communication with the network.

You use the settings described below to configure forbidden areas for a UE range (these configuration settings are also made available on the UDM). You can add and delete Forbidden Areas for the UE range as needed to meet your test requirements.

Setting	Description
<i>Forbidden Area:</i>	
	Select the <b>Delete Forbidden Area</b> button to remove this area from your configuration.
Area Codes	Each Area that you configure is identified by an Area Code, which is an operator-specific string value.
<i>TACs:</i>	
	Select the <b>Delete</b> button to remove this TAC from your configuration.
TAC	<p>Each <b>Area</b> that you add to a UE range's Forbidden Area contains a list of one or more TACs.</p> <p>A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).</p>

## DNNs Config

You use the DNNs Config panel to configure one or more Data Network Names (DNNs) for each UE range. These settings establish a mapping between DNNs and UE IPs, thereby enabling multiple PDU sessions for each UE in the range.

The following table describes the UE **DNNs Config** settings.

Setting	Description
<i>DNNs Config:</i>	
	From the panel, you can select a DNN Config for editing and also add additional DNN configurations. Select the <b>Add DNNs Config</b> button to add a new DNN configuration.
<i>DNN Config:</i>	
	Select the <b>Delete DNN Config</b> button to delete this DNN config from your test configuration.
SSC Mode	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>SSC Mode 1: The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>SSC Mode 2: The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>SSC Mode 3: Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4/v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
Session ID	Provide the session ID value.
Alternate Session ID	<p><b>IMPORTANT</b> This parameter becomes available only if <b>SSC Mode</b> is set to <i>SSC Mode 2</i> or <i>SSC Mode 3</i>.</p> <p>Provide an alternate session ID value.</p>
Reactivation Delay(s)	<p>This per DNN timer defines the interval between the moment a User Plane connection of an existing PDU Session was deactivated by the network and the moment the UE reactivates it (via Service Request). For more details, refer to TS 23502 4.2.3.2.</p> <p>This timer is applied only if the User Plane connection of an existing PDU Session was previously deactivated. Otherwise, it is ignored.</p> <p>The default value of 0 means no reactivation.</p>

<b>Setting</b>	<b>Description</b>
	<p><b>NOTE</b> The reactivation delay is deactivated if an IRAT mobility occurs before the timer expires.</p>
Default Bearer Lifetime (s)	The time to wait before doing a network initiated delete for the default bearer for this APN. A zero value means this feature is disabled.
DNN	Select one of the previously-defined DNNs from the drop-down list.
Local IPv4 Address	<p>The IPv4 address that the UE receives from the SMF during PDU Session Establishment. This address is used for L4-7 traffic (source IP for the UL traffic, destination IP for the DL traffic). It is used only when LoadCoresimulates the SMF.</p> <p>IP address is also used to create UE Routes from DN.</p>
Local IPv4 Address Increment	The value by which the IP addresses will be incremented.
Local IPv4 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Local IPv6 Address	<p>The IPv6 address that the UE receives from the SMF during PDU Session Establishment. This address is used for L4-7 traffic (source IP for the UL traffic, destination IP for the DL traffic). It is used only when LoadCoresimulates the SMF.</p> <p>IP address is also used to create UE Routes from DN.</p>
Local IPv6 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Ethernet Device Information	<p>Allows adding multiple ethernet devices per DNN with PDU type Ethernet.</p> <p><b>NOTE</b> This is applicable for the N1/N2 interface only and is not propagated beyond the AMF.</p>
Ethernet PDU config	For each ethernet device the MAC Address, IP Address, outer VLAN and inner VLAN can be configured.
Enable TSN	<p>This feature is available only for spec version newer (including) Release 16 and Ethernet PDU type sessions.</p> <p><b>NOTE</b> This is applicable for the N1/N2 interface only and is not propagated beyond the AMF.</p>
DS-TT Ethernet Port MAC Address	The device-side TSN translator port MAC address.
Configure S-NSSAI:	<i>When this checkbox is selected, you can configure which slice (S-NSSAI) to be send in PDU Session Establishment messages. If the checkbox is not selected,</i>

Setting	Description
	<p><i>the first slice from Allowed NSSAI list (received in Registration Accept) is used in PDU Session Establishment message.</i></p> <p><b>NOTE</b> <i>This is applicable for the N1/N2 interface only and is not propagated beyond the AMF.</i></p>
S-NSSAI	This list contains all the slices defined for the selected UE range. Select from the drop-down list the slice to be used in PDU Session Establishment.
Force S-NSSAI	<p>This option is used to control the behavior in case you select a slice that is not part of Allowed NSSAI received from AMF, as follows:</p> <ul style="list-style-type: none"> <li>if the checkbox is not selected, the UE will not send any slice in PDU Session Establishment message (as the slice selected from the above list is not part of Allowed NSSAI).</li> <li>if the checkbox is selected, the UE will use the slice selected from the above list, although it is not part of Allowed NSSAI.</li> </ul> <p>This option is for negative testing purposes, and it is expected the PDU Session Establishment to fail as it uses a slice that is not allowed.</p>
<i>Secondary Authentication:</i>	
Method type	<p>The following options are available:</p> <ul style="list-style-type: none"> <li><b>None</b></li> <li><b>EAP-TTLS</b> (Extensible Authentication Protocol – Tunnelled Transport Layer Security)</li> <li><b>CHAP</b> (Challenge-Handshake Authentication Protocol)</li> <li><b>PAP</b> (password Authentication Protocol)</li> </ul>
<i>EAP-TTLS Auth Method:</i>	
CA Certificate	Provide the client certificate.
Tunneled Authentication Method	Select the tunneled authentication method: <ul style="list-style-type: none"> <li><b>PAP</b></li> <li><b>CHAP</b></li> </ul>
User	Provide the user.
Password	Provide the password.
Send User Identity	<p>By default, this option is disabled.</p> <p>Enabling this option will add SM PDU DN Request Container IE (Authentication Identity) to the PDU Session Establishment Request message send by NG-RAN.</p>
<i>Chap Auth Method:</i>	

<b>Setting</b>	<b>Description</b>
User	Provide the user.
Secret	Provide the password.
<i>PAP Auth Method:</i>	
User	Provide the user.
Password	Provide the password.

## Notifications

Each UE range in the SBA topology has a set of **Notifications** values that configure Unified Data Repository (UDR) notifications for the range.

The UDR stores policy data that is used by the network service consumers (PCF, UDM, and NEF). Among the functionalities supported by the UDR is subscriptions to notification and the notification of subscribed data changes.

<b>Setting</b>	<b>Description</b>
<i>UDR Notifications:</i>	
Delay (ms)	The delay in milliseconds between Policy Data Subscriptions and Policy Data Change Notification.
<i>Policy Data:</i>	
Enable notification	Enable subscription to policy data notifications for the UE range.
SM Policy Data json	Paste your policy data JSON file into the field.
<i>Application Data:</i>	
Enable notification	Enable subscription to application data notifications for the UE range.
Application Data json	Paste your application data JSON file into the field.

## SMS Configuration

The following table describes the UE **SMS Configuration** settings.

<b>Setting</b>	<b>Description</b>
<i>Mobile Settings:</i>	
Service Center Address	The service center address used by the UE range for SMS messaging.

<b>Setting</b>	<b>Description</b>
Type of Number	<p>The type of number can be one of the following:</p> <ul style="list-style-type: none"> <li>• Unknown</li> <li>• International number</li> <li>• National number</li> <li>• Network specific number</li> <li>• Subscriber number</li> <li>• Alphanumeric</li> <li>• Abbreviated number</li> <li>• Reserved number</li> </ul>
Numbering Plan Identification	<p>The numbering plan identification can be one of the following:</p> <ul style="list-style-type: none"> <li>• Unknown</li> <li>• ISDN</li> <li>• Data numbering plan</li> <li>• Telex numbering plan</li> <li>• National numbering plan</li> <li>• Private numbering plan</li> <li>• ERMES numbering plan</li> <li>• Reserved numbering plan</li> </ul>
Character Set	<p>The character set used in the data coding scheme for the text message.</p>
Text Message	<p>The content of text message sent by the UE via SMS.</p>
Mobile Terminate SMS Delay (s)	<p>The time in seconds to wait, after the UE registers, for the AMF or SMF to initiate an MT SMS.</p>
<i>SMS Configuration:</i>	
SMS Mode	<p>Select an option from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>SMS-MO:</b> Mobile Originated. The UE range originates (sends) SMS messages.</li> <li>• <b>SMS-MT:</b> Mobile Terminated. The UE range waits for delivery of SMS messages.</li> </ul>
Enable SMS Management Subscription Get	<p>This option has effect only for technical specification Release 16. If active (default), TS 23.502 <i>Registration procedures for SMS over NAS</i> step 7b (<code>Nudm_SDM_Get</code>) is performed.</p>
<i>SMS Management Subscription Data:</i>	

<b>Setting</b>	<b>Description</b>
SMS Management Subscription Data	<p>When selected, this pane displays the following options:</p> <ul style="list-style-type: none"> <li>• <b>Subscribed for MT SMS</b> - by default, this option is enabled.</li> <li>• <b>Barred All MT SMS</b> - by default, this option is disabled.</li> <li>• <b>Barred Roaming MT SMS</b> - by default, this option is disabled.</li> <li>• <b>Subscribed for MO SMS</b> - by default, this option is enabled.</li> <li>• <b>Barred All MO SMS</b> - by default, this option is disabled.</li> <li>• <b>Barred Roaming MO SMS</b> - by default, this option is disabled.</li> </ul> <p>If technical specification Release 16 is configured in <a href="#">Global Settings</a>, the <b>Trace Data</b> option is enabled.</p>

The following table describes the **Trace Data** settings.

<b>Setting</b>	<b>Description</b>
<i>Trace Data</i>	<i>Select the check box to enable this option.</i>
Trace Reference	<p>The trace reference string should be formed as follows: the concatenation of MCC, MNC and Trace ID as follows: &lt;MCC&gt;&lt;MNC&gt;&lt;Trace ID&gt;.</p> <p>This field cannot be empty.</p>
Trace Depth	<p>Select an option from the drop-down list: <b>MINIMUM</b>, <b>MEDIUM</b>, <b>MAXIMUM</b>, <b>MINIMUM_WO_VENDOR_EXTENSION</b>, <b>MEDIUM_WO_VENDOR_EXTENSION</b>, <b>MAXIMUM_WO_VENDOR_EXTENSION</b>.</p> <p>Default value: <b>MEDIUM</b>.</p>
NE Types	<p>Configures a hexadecimal number as string, i.e. only values 0-9, a-f are allowed.</p> <p>Default value: <b>000008</b>.</p> <p>This field cannot be empty.</p>
Triggering Events	<p>Configures a hexadecimal number as string, i.e. only values 0-9, a-f are allowed.</p> <p>Default value: <b>0000</b>.</p> <p>This field cannot be empty.</p>
Trace Collection Entity IPv4 Address	<p>Provide the IPv4 address. Default value: <b>192.168.0.1</b>.</p>
Trace Collection Entity IPv6 Address	<p>Provide the IPv6 address. Default value: empty.</p>
List of Interfaces	<p>Configures a hexadecimal number as string, i.e. only values 0-9, a-f are allowed.</p> <p>Can be empty. Default value: empty.</p>

## Equipment Status

The Equipment Status lets user configure blocked or greylisted ranges of UEs using the IMEI. Applicable to simulated 5G-EIR Network Function.

The following table describes the UE **Equipment Status** settings.

Setting	Description
<i>Blocked Subscribers:</i>	
	Select the <b>Add Blocked Subscribers</b> button to add a new range of blocked IMEIs.
	Select the <b>Delete Blocked Subscribers</b> button to delete this range of blocked IMEIs from your test configuration.
Start IMEI	Set the first IMEI of the blocked subscribers range.
End IMEI	Set the last IMEI of the blocked subscribers range.
Step	Set the step for the blocked subscribers range.
<i>Greylisted Subscribers:</i>	
	Select the <b>Add Greylisted Subscribers</b> button to add a new range of greylisted IMEIs.
	Select the <b>Delete Greylisted Subscribers</b> button to delete this range of greylisted IMEIs from your test configuration.
Start IMEI	Set the first IMEI of the greylisted subscribers range.
End IMEI	Set the last IMEI of the greylisted subscribers range.
Step	Set the step for the greylisted subscribers range.

## Converged Charging

Applicable to simulated CHF Network Function. The following table describes the UE **Converged Charging** settings.

Setting	Description
Validity Time	The validity of the granted quota for a given category instance.
Quota Holding Time	A quota expiry time, when no traffic associated with the quota is observed for the value indicated by this attribute.
Time Quota Threshold	A time quota below this threshold will trigger a quota re-authorization.
Volume Quota Threshold	A volume quota below this threshold will trigger a quota re-

<b>Setting</b>	<b>Description</b>
	authorization.
Unit Quota Threshold	A units quota below this threshold will trigger a quota re-authorization.
Notification Timer	Duration in milliseconds after which the CHF will notify CTF about quota re-authorization.
Enable Subscription Termination Timer	Select this option to enable the subscription termination timer.
Trigger Subscription Termination (ms)	Set the value for this parameter.
<i>Total Available Units Per PDU Session:</i>	<i>Holds the maximum amount of units to be granted per PDU session per charging session.</i>
Total Time	Set the total time value.
Total Volume	Set the total volume value.
Total Uplink Volume	Set the total uplink volume value.
Total Downlink Volume	Set the total downlink volume value.
Total Service Specified Units	Set the total service specified units value.
<i>Default Granted Units Per Charging Data Request:</i>	
Time	Set the time value.
Volume	Set the volume value.
Uplink Volume	Set the uplink volume value.
Downlink Volume	Set the downlink volume value.
Service Specified Units	Set the service specified units value.

## Spending Limit Control

Applicable to simulated CHF Network Function. The following table describes the UE **Spending Limit Control** settings.

<b>Setting</b>	<b>Description</b>
Enable Notify Timer	Use this option to enable the notify timer.
Trigger Notify	The time interval (in milliseconds) after which CHF will notify PCF with modified

Setting	Description
Timer (ms)	policy counters.
Enable Subscription Termination Timer	Use this option to enable the subscription termination timer.
Trigger Subscription Termination (ms)	The time interval (in milliseconds) after which CHF will request PCF to terminate a subscription.
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported.
Policy Counters	<i>These settings are described <a href="#">here</a>.</i>
Notify Policy Counters	<i>These settings are described <a href="#">here</a>.</i>

## Policy Counters

Applicable to simulated CHF Network Function. The following table describes the **Policy Counters** settings.

Setting	Description
<i>Policy Counters:</i>	
	Select the <b>Add Policy Counter</b> button to add a policy counter to your test configuration.
<i>Policy Counter settings:</i>	
	Select the <b>Delete Policy Counter</b> button to delete this policy from your test configuration.
Policy Counter Id	This parameter is used to identify a policy counter. You can accept the value provided by LoadCore or overwrite it with your own value.
Current Status	Enter the policy counter status (as a string value). For example: <i>100Mbps</i> .
<i>Pending Statuses:</i>	
	Select the <b>Add Pending Status</b> button to add a pending policy counter status.

Setting	Description
<i>Pending Policy Counter Status settings:</i>	
	Select the <b>Delete Pending Policy Counter Status</b> button to remove the pending policy counter status.
Policy Counter Status	Enter the pending policy counter status (as a string value). For example: <i>100Mbps</i> .
Activation Time	Enter the activation time (as a DateTime value) for this pending status value. For example: <i>2020-12-31 11:59:59</i> .

## Notify Policy Counters

The Policy Counters notifications are messages sent by CHF whenever the policy status has changed and contain the new policy status.

The notifications are enabled only after the **Enable Notify Timer** option is selected and will be sent based on the time interval set for the **Trigger Notify Timer (ms)** parameter.

The following table describes the **Notify Policy Counters** settings.

Setting	Description
<i>Policy Counters:</i>	
	Select the <b>Add Policy Counter</b> button to add a policy counter to your test configuration for which you want to receive notifications.
<i>Policy Counter settings:</i>	
	Select the <b>Delete Policy Counter</b> button to delete this policy from your test configuration.
Policy Counter Id	This parameter is used to identify the policy counter for which to receive notifications.
Current Status	Enter the policy counter current status (as a string value). For example: <i>120Mbps</i> .
<i>Pending Statuses:</i>	
	Select the <b>Add Pending Status</b> button to add a pending policy counter status.
<i>Pending Policy Counter Status settings:</i>	
	Select the <b>Delete Pending Policy Counter Status</b> button to remove the pending policy counter status.
Policy	Enter the policy counter status (as a string value). For example: <i>120Mbps</i> .

Setting	Description
Counter Status	
Activation Time	Enter the activation time (as a DateTime value) for this status value. For example: 2020-12-31 11:59:59.

## Internal Group IDs

Applicable to simulated UDM Network Function. The following table describes the **UE Internal Group IDs** settings.

Setting	Description
	Select the <b>Add Internal Group ID</b> button to add a new internal group to your test configuration.
<i>Internal Group ID Info:</i>	
	Select the <b>Delete Internal Group ID</b> button to delete this group from your test configuration.
Internal Group ID	This parameter is used to identify an internal group. You can accept the value provided by LoadCore or overwrite it with your own value.
External Group ID	This parameter is used to identify an external group.
Shared Data ID	Select the shared data ID from the drop-down list.
DNN Name	Select the Data Network Name (DNN) value from the drop-down list.
S-NSSAI	Select the S-NSSAI slice from the drop-down list.

## Network Slicing settings

A UE may access multiple *network slices* over a single Access Network. A Network Slice is defined within a PLMN and includes the Core Network Control Plane and User Plane Network Functions. In addition, it includes the NG Radio Access Network and/or the N3IWF functions to the non-3GPP Access Network. It functions as a logical end-to-end network that runs on a shared physical infrastructure, capable of providing specific network capabilities and characteristics.

Each UE range requires at least one NSSAI (Network Slice Selection Assistance Information) range.

The **Network Slicing** settings include:

<b>UE NSSAI settings</b> .....	<b>150</b>
<b>UDM Default NSSAI settings</b> .....	<b>151</b>
<b>UDM SNSSAI Mappings</b> .....	<b>151</b>
<b>UDR SNSSAI Settings</b> .....	<b>152</b>

## UE NSSAI settings

Each UE range requires at least one NSSAI range.

An NSSAI (Network Slice Selection Assistance Information) is a collection of S-NSSAIs (Single Network Slice Selection Assistance Information). An NSSAI may be a Configured NSSAI, a Requested NSSAI, or an Allowed NSSAI. A maximum of eight S-NSSAIs can be sent in signaling messages between the UE and the Network. The Requested NSSAI signaled by the UE to the network allows the network to select the Serving AMF, Network Slice(s), and Network Slice instance(s) for the UE.

The S-NSSAI information element includes a mandatory Slice/Service Type (SST) field, an optional Slice Differentiator (SD) field, and it can also include an optional Mapped Configured SST and an optional Mapped Configured SD.

The NSSAI slices are the ones supported by UE (DNN mapping is done from here also) that will be sent in NAS messages (for example Registration, PDU Session Establishment).

The following table describes the **UE NSSAI** settings.

Setting	Description								
<i>UE NSSAI:</i>									
	Select the <b>Add UE NSSAI</b> button to add a new UE NSSAI to your test configuration.								
<i>UE NSSAI settings:</i>									
	Select the <b>Delete UE NSSAI</b> button to delete this UE NSSAI from your test configuration.								
SST	<p>The value that identifies the SST (Slice/Service Type) for this S-NSSAI. SST comprises octet 3 in the S-NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th>SST</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> </tr> <tr> <td>URLCC</td> <td>2</td> </tr> <tr> <td>MIoT</td> <td>3</td> </tr> </tbody> </table>	SST	Value	eMBB	1	URLCC	2	MIoT	3
SST	Value								
eMBB	1								
URLCC	2								
MIoT	3								
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.								
Mapped SST	The Mapped configured Slice/Service Type (SST) value for this S-NSSAI.								
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this S-NSSAI.								

## UDM Default NSSAI settings

You can add and delete UDM Default SNSSAI settings as required to meet your test objectives.

A UE Registration Request will include the Default Configured NSSAI Indication if the UE is using a Default Configured NSSAI. The Default Configured NSSAI, when configured in the UE, is used by the UE in a Serving PLMN only if the UE has no Configured NSSAI for the Serving PLMN.

The NSSAI slices are the ones supported and requested by UE (DNN mapping is done from here also) that will be sent in NAS messages (for example Registration, PDU Session Establishment).

The following table describes the UE **UDM Default NSSAI** settings.

Setting	Description
<i>UDM Default NSSAI:</i>	
	Select the <b>Add UDM Default NSSAI</b> button to add the default NSSAI to your test configuration.
<i>UDM Default NSSAI settings:</i>	
	Select the <b>Delete UDM Default NSSAI</b> button to delete this NSSAI from your test configuration.
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this S-NSSAI.
Mapped SST	The default Mapped configured Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The default Mapped configured Slice Differentiator (SD) value for this S-NSSAI.

## UDM SNSSAI Mappings

You can add and delete SNSSAI Mappings as required to meet your test objectives.

In an Initial Registration or Mobility Registration Update, the UE may include the Mapping Of Requested NSSAI, which is the mapping of each S-NSSAI of the Requested NSSAI to the HPLMN S-NSSAIs. This mapping ensures that the network can verify whether or not the S-NSSAIs in the Requested NSSAI are permitted based on the Subscribed S-NSSAIs.

The following table describes the UE **UDM SNSSAI Mapping** settings.

Setting	Description
<i>UDM SNSSAI Mapping:</i>	
	Select the <b>Add SNSSAI Mapping</b> button to add the NSSAI mapping to your test configuration.
<i>UDM SNSSAI Mapping settings:</i>	

Setting	Description
	Select the <b>Delete SNSSAI Mapping</b> button to delete this NSSAI mapping from your test configuration.
SST	The Slice/Service Type (SST) value.
SD	The Slice Differentiator (SD) value for this S-NSSAI.
Mapped SST	The Mapped Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The Mapped Slice Differentiator (SD) value for this S-NSSAI.
DNNS	The Subscription Information for each S-NSSAI may contain a Subscribed DNN list. Select all DNNs required to be activated in this S-NSSAI (via multiple PDU Sessions).

## UDR SNSSAI Settings

The following table describes the UE **UDR SNSSAI** settings.

Setting	Description
<i>UDR SNSSAI Settings:</i>	
	Select the <b>Add SNSSAI Settings</b> button to add the SNSSAI settings to your test configuration.
<i>UDR Settings:</i>	
	Select the <b>Delete SNSSAI Settings</b> button to delete this SNSSAI settings configuration from your test configuration.
SST	The Slice/Service Type (SST) value
SD	The Slice Differentiator (SD) value for this SNSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
Mapped SST	The Mapped Slice/Service Type (SST) value for this SNSSAI.
Mapped SD	The Mapped Slice Differentiator (SD) value for this SNSSAI.
DNNS	A DNN (Data Network Name) with which PDU sessions will be associated for this SNSSAI. Select one or more DNNs from the drop-down list.

## Objectives

In a LoadCore test, an *objective* is a set of performance and event targets that the test is attempting to achieve. The objectives are individually configured for a given UE range. A test, therefore, may have multiple UE ranges each of which is attempting to achieve a specific set of objectives.

### Test Objective categories:

<b>Control Plane Objective .....</b>	<b>154</b>
<b>User Plane Objectives .....</b>	<b>170</b>

## Control Plane Objective

You configure Control Plane Objectives for each individual UE range. They are structured as Primary and Secondary objectives. The focus of the primary objectives is on the establishment of subscriber PDU sessions, whereas the focus of the secondary objectives is on the achievement of specific mobile user events during those sessions.

Refer to the following topics for descriptions of the Control Plane Objective settings:

- [About primary objectives](#)
- [Primary Control Plane Objective](#)
- [Secondary Control Plane Objective](#)

### About primary objectives

In the current LoadCore release, there are two available primary objectives: *active subscribers* and *subscribers per second*. This topic gives a general description of their respective roles and behaviors.

- [Active Subscribers](#)
- [Subscribers Per Second](#)

### Active Subscribers

The active subscribers objective operates over a sequence of three phases: ramp up, sustain, and ramp down. Each of these has its own scope.

Phase	Activity during this phase
Ramp up	Registration + PDU Session Establishment (if enabled via DNNs to Activate option)
Sustain time	Traffic and/or secondary objectives are executed
Ramp down	Delete PDU Session (if enabled) + Dereistration

This can be viewed as a timeline:

|----- Ramp up -----|----- Sustain -----|----- Ramp down -----|

#### Observations:

- The duration of the ramp up phase is not directly configurable. The ramp up time is automatically computed from the total number of subscribers in the range divided by the configured Ramp-up Rate (`<number_of_subscribers_in_the_range> / <RampUpRate>`). If the ramp up rate cannot be maintained, ramp up will last longer.
- During the sustain time phase, only secondary objectives are running.
- If configured, uplink traffic will start after the ramp up stage is complete.
- Subscribers will accept any downlink traffic once they are attached (registered and PDU session established).
- The duration of ramp down is not directly configurable. The ramp down time is automatically computed from the total number of subscriber in the range divided by the configured Ramp-up Rate (`<number_of_subscribers_in_the_range> / <RampUpRate>`).

If the ramp down rate cannot be maintained, ramp down will last longer.

- All User Plane Traffic except Stateless UDP will be started during Ramp Up phase. Stateless UDP traffic starts after all UEs have Registered and Established PDU Sessions.

#### **Example:**

Consider a test with 20000 subscribers, configured with an active subscribers objective with a ramp up rate of 1000/s, a secondary objective with a rate of 2000/s, and a sustain time set for 30 seconds. Such a test will give the following results.

<i>Ramp Up Time:</i>	$20000 / 1000 = 20\text{s}$ for subscribers to register
<i>Rate in ramp up time:</i>	1000 registrations per second
<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	2000 secondary procedures per second
<i>Ramp down time:</i>	$20000 / 1000 = 20\text{s}$ for subscribers to deregister
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## **Subscribers Per Second**

The Subscribers per Second objective operates over two phases: sustain and ramp down.

<b>Phase</b>	<b>Activity during this phase</b>
Sustain time	All objectives will run: primary objective—both registration and deregistration—and all secondary objectives.
Ramp down	Deregistration will be executed for the UEs that did not complete the hold time during the sustain phase.

This can be viewed as a timeline:

|----- Sustain -----|----- Ramp down -----|

#### **Observations:**

- The duration of ramp down is equal to the value of hold time.
- During the ramp down time, only deregistration occurs.

#### **Example:**

Consider a test with 20000 subscribers, configured with: a Subscribers per Second primary objective with a rate of 1000/s and a hold time of 10s, a secondary objective with a rate of 2000/s, and a Sustain time configured for 30 seconds.

Such a test will give the following results.

<i>Sustain time:</i>	30 seconds
----------------------	------------

<i>Rate in sustain time:</i>	~4000 per second (1000 per second from registration + 1000 per second from deregistration + 2000 per second from secondary objective, because both primary and secondary objective will run at the same time)
<i>Ramp down time:</i>	10 seconds
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## Primary Control Plane Objective

Control Plane Objectives are structured as Primary and Secondary objectives. The focus of the primary objectives is on the establishment of subscriber PDU sessions.

The following table describes the **Primary** control plane objectives.

Parameter	Description
Objective Type	<p>Select the desired Primary Objective Type:</p> <ul style="list-style-type: none"> <li><b>Active Subscribers:</b> The test attempts to activate and maintain the configured objective throughout the entire sustain time. Deactivation procedures will start only at the end of the sustain time.</li> <li><b>Subscribers Per Second:</b> The test attempts to activate a specified number of subscriber sessions per second, within the rate and time parameters that you configure.</li> </ul> <p>The panel will display the settings for the selected Objective Type.</p>
<i>Active Subscribers:</i>	
Ramp-up Rate	The number of UE registrations that the test will establish per second. In the current release, each UE registration establishes exactly one PDU session.
Sustain Time (s)	The duration of time (in Seconds) that each subscriber session will be active.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
DNNs to Activate	<p>Select the DNNs to activate for this secondary objective. (These are the DNNs configured for the UE in the <b>DNNs Config</b> Range settings.)</p> <p>The choices are:</p>

Parameter	Description
	<ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> <p>The list of available DNNs include those that have not been activated for the primary objective.</p> <p>You configure DNNs for the test in the Global Settings. Refer to <a href="#">DNNs panel</a> for more information.</p>
Number of Retries	<p>This value indicates how many times UE/NRAN will retry the Register or PDU Session Establishment procedures if any message from these procedures encounters an error (timeout or an error is received).</p> <p>The available options are:</p> <ul style="list-style-type: none"> <li>• <b>-1</b> : infinite retries for entire sustain time.</li> <li>• <b>0</b> (default value) : the retry option is disabled.</li> <li>• <b>1 to 127</b>: the number of retries per UE (Register + PDU Session procedure).</li> </ul>
<i>Subscribers Per Second:</i>	
Hold Time (s)	The number of seconds that each subscriber session will remain active. This is, therefore, the amount of time that will elapse between the subscriber attach and the subscriber detach. At the end of the session hold time, the subscriber performs the detach procedure.
Rate	The number of subscriber sessions to activate per second.
Sustain Time (s)	The duration of time (in Seconds) that the specified session activation rate will be maintained.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
DNNs to Activate	<p>Select the DNNs to activate for this secondary objective. (These are the DNNs configured for the UE in the <b>DNNs Config</b> Range settings.)</p> <p>The choices are:</p> <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> <p>The list of available DNNs include those that have not been activated for the primary objective.</p> <p>You configure DNNs for the test in the Global Settings. Refer to <a href="#">DNNs panel</a> for</p>

Parameter	Description
	more information.


## Secondary Control Plane Objective

The focus of the secondary objectives is on the achievement of specific mobile user events during subscriber PDU sessions. For each primary objective that you configure for the UE range, you can select one or multiple Secondary Objectives.

**IMPORTANT**

The number of UEs must be equal to or greater than the number of secondary objectives configured, in order for all objective procedures to execute. For example, if only one UE is configured and two secondary objectives are configured (such as Handover and Enter/Exit Idle), one of the objectives will be skipped.

In this example, only Handover has been selected:

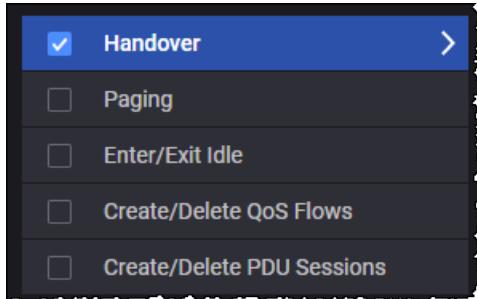

Note that:

<b>When the primary objective is:</b>	<b>then the secondary objectives will start...</b>
Active Subscribers	after all users are registered.
Subscribers Per Second	at the beginning of the test (immediately after the first user has registered).

**Refer to the following topics for descriptions of the Secondary Control Plane objectives:**

- [Handover](#)
- [Paging](#)
- [Enter/Exit Idle](#)
- [Create/Delete QoS Flows](#)
- [Create/Delete PDU Sessions](#)
- [SMS](#)

## Handover

When you configure a **Handover** secondary objective, each of the active subscribers configured for the primary objective attempts to execute the handover event defined for the objective. During a handover, the UEs in the range are moving amongst a group of NG-RANs. At the start of a handover, the UEs are registered with the Parent NG-RAN (which is configured in the [UE Range panel](#)). The UEs then traverse the NG-RANs that you configure (the *Visited NG-RAN* list).

### Handover notes

- Xn handover and N2 handover are supported.
- Xn handover is executed when the AMF serving the UE can reach the target RAN (T-RAN) and an Xn link is configured between the source RAN (S-RAN) and the target RAN (T-RAN) in the Ranges Connectivity matrix.
- X2 handover and S1 handover are supported in Connected and Idle mode on RAN only (not supported in 4G FullCore topology).
- X2 handover is executed when the MME serving the UE can reach the target RAN (T-RAN) and an X2 link is configured between the source RAN (S-RAN) and the target RAN (T-RAN) in the Ranges Connectivity matrix.

### S1/N2 handover scenarios

For S1/N2 handover there are the following scenarios:

Scenario	Description
S1/N2 handover with MME/AMF change and Direct Forwarding	This scenario is executed when the MME/AMF serving the UE cannot reach the target RAN (T-RAN) and an X2/Xn link is configured between the source RAN (S-RAN) and the target RAN (T-RAN) in the Ranges Connectivity matrix.
S1/N2 handover with MME/AMF change and Indirect Forwarding	This scenario is executed when the MME/AMF serving the UE cannot reach the target RAN (T-RAN) and an X2/Xn link is not configured between the source RAN (S-RAN) and the target RAN (T-RAN) in the Ranges Connectivity matrix.
S1/N2 handover without MME/AMF change and Indirect Forwarding	This scenario is executed when the MME/AMF serving the UE can reach the target RAN (T-RAN) but an X2/Xn link is not configured between the source RAN (S-RAN) and the target RAN (T-RAN) in the Ranges Connectivity matrix.
S1/N2 handover without MME/AMF change and Direct Forwarding	This scenario is executed when the MME/AMF serving the UE can reach the target RAN (T-RAN), <a href="#">Force S1 / N2 Handover</a> option is set and X2/Xn link is configured between the source RAN (S-RAN) and the target RAN (T-RAN) in the Ranges Connectivity matrix.

## Option 3x handover scenarios

In S1-MME RAN simulation scenarios, for Option 3x handover there is support for the following:

- X2 Handover support between eNodeBs - only S1 signaling is visible
- Option 3x handovers support:
  - Inter-Master Node handover with/without Secondary Node change (X2 handover between 2 eNodeBs that have a Secondary Node configured)
  - Master Node to eNodeB Change (X2 handover from an eNodeB with SN node to one without a SN configured)
  - eNodeB to Master Node

In 4G Full Core simulation scenarios, for Option 3x handover there is support for the following:

- Add / Remove Secondary node as long as the Master Node remains the same (no support for 4G FullCore X2 handover).

Known limitations:

- IRAT Handovers are not supported with to/from Master Nodes. If the test is configured to handover to/from a gNodeB towards a eNodeB with a gNodeB associated as a Secondary Node, it will throw an error at runtime.

## Dual Connectivity NR-NR handover scenarios

In N2N3 RAN simulation scenarios, for Dual Connectivity NR-NR handover there is support for the following:

- Xn Handover support between gNodeBs – only N2 signaling is visible
- Dual Connectivity NR-NR handovers support:
  - Inter-Master Node handover with/without Secondary Node change (Xn handover between 2 gNodeBs that have a Secondary Node configured)
  - Master Node to gNodeB Change (Xn handover from a gNodeB with SN node to one without a SN configured)
  - gNodeB to Master Node

Known limitations:

- Dual Connectivity NR-NR is supported only on Wireless Core SIM and Wireless NG-RAN Simulation topologies.
- Only Xn Handovers are supported to and from gNodeBs configured with Secondary Nodes.
- iRAT and N2 Handovers are not supported with Dual Connectivity NR feature.
- Enter/Exit Idle and Paging objectives are not supported Dual Connectivity NR feature.

## Handover configuration parameters

The following table describes these objective parameters.

Parameter	Description
<i>Handover:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which handovers are initiated, measured in procedures per second if <b>Distributed over (s)</b> is not modified.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Force S1 / N2 Handover	Enable this option to force S1 / N2 handover with direct forwarding instead of X2 / Xn handover.
Mobility for State	This option specifies in what state should the UE perform the handover objective. The following options can be selected from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Connected</b></li> <li>• <b>Idle</b></li> <li>• <b>Any</b></li> </ul> When <b>Any</b> is selected, the UE will execute the handover objective, regardless if the UE is in Connected or Idle state.
Force UE State Before Returning to Parent Node	Select an option from the drop down list: <ul style="list-style-type: none"> <li>• <b>None</b> - The UE will perform either Idle Mode Mobility or Connected Handover to parent RAN, depending on what state the UE is before executing the procedure.</li> <li>• <b>Connected</b> - The UE will perform Connected Handover from the last node in the visited gNodeBs/eNodeBs list to the parent RAN. This means that <b>if the UE was in idle state</b> before performing this mobility, the UE will <b>first perform exit idle</b>, and only after the UE is in connected state, will it initiate <b>the connected handover</b> to the parent RAN.</li> <li>• <b>Idle</b> - The UE will perform Idle Mode Mobility from the last node in the visited gNodeBs/eNodeBs list to the parent RAN. This means that if the UE was in <b>connected</b> state before performing this mobility, the UE will <b>first</b></li> </ul>

Parameter	Description
	<b>perform enter idle</b> , and only after the UE is in idle state, will it initiate the <b>idle mode mobility</b> to the parent RAN.
Send Service Request after Returning to Parent Node	By default, this option is disabled. Send Service Request immediately after Return to Parent Node Mobility if UE State was idle.
<i>Visited gNodeBs/eNodeBs : A list of the NG-RANs that UEs will visit during the test.</i>	
	Add next node to the list.
	Remove the selected node from the list.
Force UE State before Mobility	The following options can be selected from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Connected</b></li> <li>• <b>Idle</b></li> <li>• <b>Any</b></li> </ul>
Primary Node	Select the primary node from the drop-down list.
Secondary Node	Select the secondary node from the drop-down list.
Send Service Request After Mobility	By default, this option is disabled. Send Service Request immediately after Mobility if UE State was idle.

## Paging

When you configure a **Paging** secondary objective, each of the active subscribers configured for the primary objective attempts to execute the Paging event defined for the objective. Upon receiving a Paging message, each simulated UE—the UEs are in CM-IDLE state—will initiate the UE Triggered Service Request procedure (Reference: 23.502, section 4.2.3.2).

The following table describes the Paging objective parameters.

Parameter	Description
<i>Paging:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.

Parameter	Description
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Suspend Traffic Interval (s)	The time (in seconds) to suspend traffic on the remote IP address.
Remote IP Address	Set the remote IP address: <ul style="list-style-type: none"> <li>If the UPF is the DUT in the test topology, then set the <i>Remote IP Address</i> to the DN IP address.</li> <li>If the UPF is simulated in the test topology, then set the <i>Remote IP Address</i> to the N3 IP address of the UPF.</li> </ul>

**Notes:**

- Paging objective should be configured with **Stateless UDP** as User Plane.
- Enter IDLE procedure is executed for each UE after Delay(s) once DN responds to instrumentation packet sent inband by the UE. See also *Global Settings > Advanced Settings > Traffic Settings > [Traffic Control Port](#)*.
- Following Enter IDLE, Downlink User Plane traffic is suspended for *Suspend Traffic Interval (s)*.

**Enter/Exit Idle**

When you configure an **Enter/Exit Idle** secondary objective, each of the active subscribers configured for the primary objective attempts to transition between the CM-IDLE and CM-CONNECTED states.

**NOTE**

When UE is scheduled to Exit Idle but the UE state is not Idle anymore (for example Paging event occurred), the Exit Idle procedure cannot be performed, therefore the Service Request is going to be skipped and the statistics for Service Request Skipped (on NG-RAN) will be incremented accordingly.

The following table describes the objective parameters.

Parameter	Description
<i>Enter Exit Idle:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).

Parameter	Description
Rate	The rate at which procedures are initiated to transition UEs between the CM-IDLE state to the CM-CONNECTED states, measured in state transitions per second.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	The number of seconds to wait between each successive state transition.

## Create/Delete QoS Flows


When you configure a **Create/Delete QoS Flows** secondary objective, each of the active subscribers configured for the primary objective attempts to meet the requirements defined by the QoS Flow ID. The selected flows will be created following a configured *Delay* value, and deleted when the configured *Interval* expires.

### QoS flow options

There are two options for creating QoS flows:

- UE initiated - the QoS flows are initiated by the UE
- PCF Initiated - the QoS flows are network initiated

The QoS Flow panel contains the configuration settings for an individual QoS Flow (UE initiated or PCF initiated).

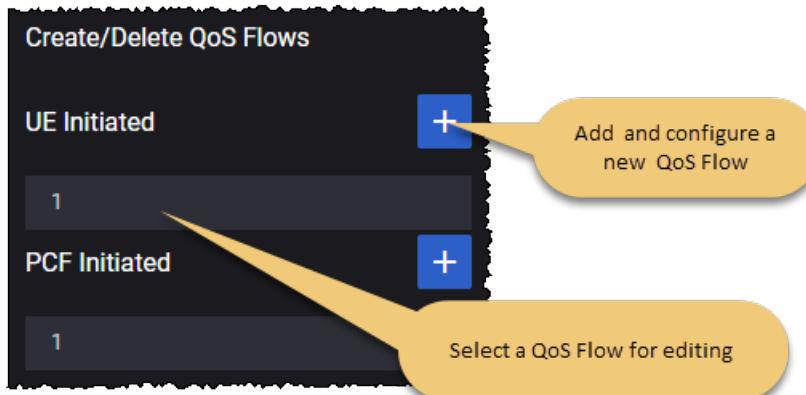

## Objective parameters

The following table describes the objective parameters (for both UE initiated QoS flows and PCF initiated QoS flows).

Parameter	Description
<i>Create/Delete QoS Flows:</i>	
	Select the <b>Add Objective</b> button to add an instance of this objective.
<i>Objective:</i>	
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second. Using higher values for this parameters requires a large number of UEs configured in the test in order to achieve the desired rate.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	Interval between the triggering of creation and deletion of the QoS flow, in seconds.
DNN	Select the DNN value for the drop-down list. For example: dnn.keysight.com.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## Support for Network Initiated QoS Flow modification

The Create/Delete QoS Flows secondary objective also provides support for Network Initiated QoS Flow modification of existing QoS flows on the N1/N2 interfaces. This support is available when all topology nodes except for **RAN** are selected as DUTs.

By triggering the Network Initiated PDU Session Modification procedure, the network can modify the following parameters of the existing QoS flows, both default and dedicated:

- ARP
- QoS flow descriptions parameters (MBR, GBR)
- Session AMBR
- QoS rules – all supported filters

Notes:

- In order to modify the default QoS flow, it needs to be configured on the DNN tab. The QoS Flows and DNNs are configured in the Global Settings.
- None of the parameters changed by the network initiated QoS flow modification will be enforced.
- The NG-RAN node supports handling the QoS flow modification procedure only for one PDU session per procedure (Create QoS Flow, Modify QoS Flow, Release QoS Flow).
- For UE Initiated dedicated QoS Flows, the interval between the creation and deletion of the QoS flow should be large enough to support the successful finalization for the modification of the existing QoS flow. (*Interval* is one of the Objective settings.)

## Create/Delete PDU Sessions

When you configure a **Create/Delete PDU Sessions** secondary objective, each of the active subscribers configured for the primary objective attempts to meet the requirements specified by the objective configuration. The PDU sessions will be created following a configured *Delay* value, and then deleted when the configured *Interval* expires.

The following table describes the objective parameters.

Parameter	Description
<i>Create/Delete PDU Sessions:</i>	
	Select the <b>Add Objective</b> button to add an instance of this objective.
<i>Objective:</i>	
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	<p>The rate at which procedures are initiated, measured in procedures initiated per second.</p> <p>Using higher values for this parameters requires a large number of UEs configured in the test in order to achieve the desired rate.</p>
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches

Parameter	Description
	this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	The interval between the triggering of creation and deletion of the PDU Session, in seconds.
DNNs to Activate	<p>Select the DNNs to activate for this secondary objective. (These are the DNNs configured for the UE in the <b>DNNs Config</b> Range settings.)</p> <p>The choices are:</p> <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> <p>The list of available DNNs include those that have not been activated for the primary objective.</p> <p>You configure DNNs for the selected UE in the <b>DNNs Config</b> Range settings. The list of available DNNs include those that have not been activated for the primary objective.</p>

## SMS

This objective will perform the procedure of sending SMS messages.

The following table describes the objective parameters.


Parameter	Description
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	<p>The rate at which procedures are initiated, measured in procedures initiated per second.</p> <p>Using higher values for this parameter requires a large number of UEs configured in the test in order to achieve the desired rate.</p>
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.

Parameter	Description
Destination MSISDN	The destination MSISDN for the SMS text message.
Destination MSISDN Increment	The increment for the destination MSISDN.

## User Plane Objectives

The User Plane Objectives focus on the rate and volume of user plane traffic that the simulated UEs are sending to the 5G network. You define separate User Plane objectives for each UE range.

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

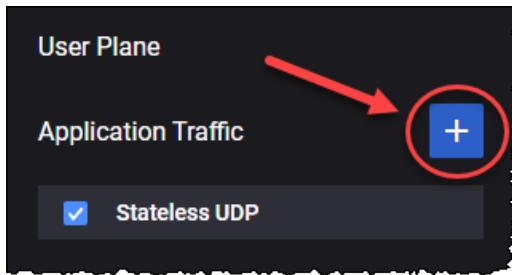

The available traffic applications are: **Stateless UDP, Data, Voice, Video OTT, DNS Client, Predefined Applications, ICMP Client, Ping, Synthetic and UDG**.

**NOTE** Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN. For the DN User Plane settings, refer to [DN User Plane](#).

The following table describes the Application Traffic generation parameters.

Parameter	Description
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"><li>• <b>Attacks</b></li><li>• <b>Stateless UDP</b></li><li>• <b>Data</b></li><li>• <b>Voice</b></li><li>• <b>Video OTT</b></li><li>• <b>DNS Client</b></li><li>• <b>Predefined Applications</b></li><li>• <b>Synthetic</b></li><li>• <b>UDG</b></li><li>• <b>Attacks</b></li></ul>
	Select this button to remove the application traffic objective from your test configuration.
Attacks	For the settings required to configure the Attacks traffic objective, refer to <a href="#">Attacks Traffic</a> .
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">Stateless UDP Traffic</a> .

Parameter	Description
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">Ott Traffic</a> .
DNS Client	For the settings required to configure the DNS Client objective, refer to <a href="#">DNS Client Traffic</a> .
Predefined Applications	For the settings required to configure the Predefined Applications objective, refer to <a href="#">Predefined Applications Traffic</a> .
Synthetic	For the settings required to configure the Synthetic objective, refer to <a href="#">Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG objective, refer to <a href="#">UDG Traffic</a> .

## Attacks

The **Attacks** objective simulates multiple type of attacks (more than 7000 of profile attacks available).

The following table describes the Attacks parameters.


Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Attacks</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	This field is set to <b>flow</b> and cannot be modified.
Attacks per second	The rate of attacks initiated per second.
Iterations	If is set to <b>0</b> , it will be iterated on continuous loop during sustain time. If set to <b>1</b> , it will be executed only one time. <b>IMPORTANT</b> Values greater than 1 are not allowed.
Delay Application Traffic Start (ms)	The time ( in milliseconds) to wait before starting the Attacks objective traffic.
Configure Attack Profiles	<i>Press the button to open the <a href="#">Attacks</a> settings page.</i>

## Attack Profiles


**IMPORTANT** Before this section to work properly, make sure you have installed the latest ATI security updates.

You can add more attack profiles as follows:

1. Select the **Open Configure Attack Profiles** button.

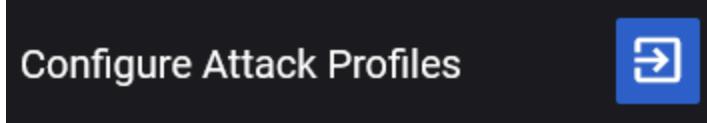

2. The Attack Profiles panel opens. Select the existent attack profile to open the **Attack Profile Configuration** panel.
3. A list with all profile attacks is displayed. Click on an the **Attacks** to open the configurator, then select the **Add** button.

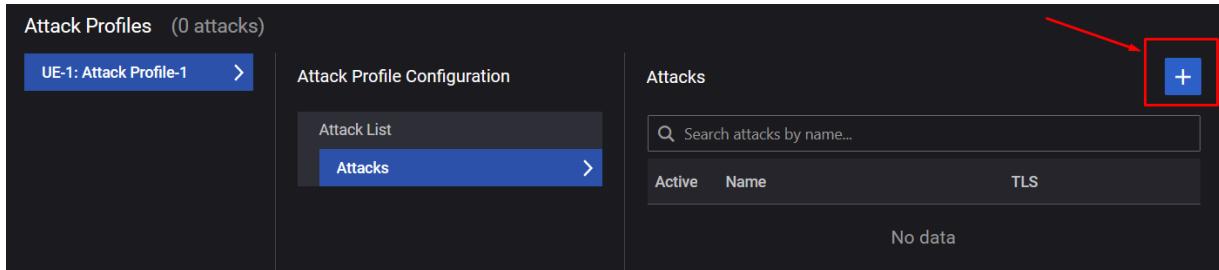

4. The **Add Attack(s)** dialog opens. Next you can select which attacks to be added to your profile:
  - use the **Attack Library** tab to select and add ready-made attacks. See [Adding attacks from the Library](#)
  - use the **Customize Attack** tab to add modified sets of attacks according to your needs. See [Adding customized attacks](#)
5. Once you complete Step 4, the attacks will be added to your list. Allow a few seconds for the list to load. Further actions include:
  - edit each attack - see [Editing attacks](#) for details.
  - add more attacks at any time, or **Edit** the list and (bulk) remove the attacks no longer required in the current profile.
6. For each **Attack Profile** added, The following section will become available and will require configuration:
  - [TCP Settings](#)
  - [TLS Settings](#)
  - [HTTP Settings](#)

### Adding attacks from the Library

In the **Attack Library** tab, you can do the following:

Panel	Description
Filter attack(s)	You can filter the attacks by category name or value.
Attacks category panel	Each category listed includes more sub-categories and the number of existing attacks per each. Select a category/sub-category check-box to see the attacks included in the main panel
Select attack(s) from the table panel	The middle panel will be populated with the results of your filtered search. More actions include: <ul style="list-style-type: none"> <li>• further filter the attacks to add the one you need.</li> <li>• expand each attack to see a complete description and details about it.</li> <li>• press the Add icon (+) at the end of the row to select the attack to your profile.</li> </ul>
Summary of added attack(s) panel	You can view and manage the list of selected attacks. Press the Delete icon (trash bin) if you want to remove any of the attacks.
Add button	Once you have finished the selection, press this button to complete your action. The attacks will be added to your profile.

**Add Attack(s)**

[ATTACK LIBRARY](#) [CUSTOMIZE ATTACK](#)

**Filter attack(s)**

Filter by category name or value

- in\_the\_wild (64)
- public\_poc (65)
- public\_details (29)
- public\_poc (209)

▼  Other

- .avi (1)
- .ppt (1)
- 0-day (3)
- 0day (4)
- 1Day (1)
- ActiveX (3)
- Apache Struts (1)
- BO (2)

>  OWASP Top 10

>  Result

>  Target

>  Type

>  Vector

[Reset filters \(463\)](#)

**Select attack(s) from table**

Filter attacks by name, description

Filter mode: AND

50 attacks on this page

Name	Severity	Strikes	Direction	Add
Firefox Browser Attacks	5 critical, 25 high...	43	s2c	(+)
Generic Attacks Batch1	14 critical, 101 hi...	131	mixed	(+)
Insecure Deserialization Attacks	6 critical, 7 high	13	c2s	(+)

**Description:**  
Deserialization is the process of taking data structured for a format and rebuilding it into an object. The features of the native deserialization mechanism can be repurposed for malicious effect when operating on untrusted data. Attacks against deserializers have been found to allow denial-of-service, access control, and remote code execution attacks. This pre canned attack contains a collection of Insecure Deserialization attacks. It will run through each of the strikes one-by-one in order to test how well your implemented security controls protect your assets against these attacks. If these strikes are not blocked, they could compromise your application and/or put your customers and data at risk.

**Direction:**  
c2s

**Severity:**  
6 critical, 7 high

**Keywords:**  
Other: netsecopen\_fp\_avail, no\_no\_net, verified, netsecopen\_public, cisa\_vuln, one\_arm  
Result: remote\_code\_execution, Remote Code Execution  
Target: web\_application, web\_server  
Likelihood: private\_poc, public\_details, public\_poc, in\_the\_wild

64 attacks < 1 2 >

**Summary of added attacks (5)**


All Encrypted Attacks	
Chrome Browser Attacks	
Critical Strikes	
Auth Bypass Attacks	
LFI Attacks	

[Add](#) [Cancel](#)

## Adding customized attacks

From the **Customize Attack** tab, you can:

Panel	Description
Select target application (optional) panel	<p>Filter by the targeted application name to narrow down the results.</p> <div style="background-color: #2e6b2e; color: white; padding: 2px 10px; display: inline-block;"> <b>TIP</b> </div> <p>If you use this filter, it will automatically add specific strikes to the Insert Strike(s) panel.</p>
Filter strikes panel	<p>You can filter the attacks by category name or value.</p> <p>Each category listed includes more sub-categories and the number of existing attacks per each.</p> <p>Select a category/sub-category check-box to see the attacks included in the main panel</p>
Select strike(s) from the list	<p>This panel will be populated with the results of your filtered search (second panel search). More actions include:</p> <ul style="list-style-type: none"> <li>• further filter the strikes to add the one you need.</li> <li>• expand each attack to see a complete description and details about it.</li> <li>• select the attacks you need</li> </ul>
Insert strike(s) panel	<p>Depending on which of the previous options you have used, inserting strikes can be done in two ways:</p> <ul style="list-style-type: none"> <li>• press the Add button (+) in the empty list to add the selected strikes (this is applicable when selecting from the category list in the second panel)</li> <li>• select an Add button under/above an application strike that is already added in the list to mark the place and the order of execution for the selected category strike.</li> </ul> <div style="background-color: #2e6b2e; color: white; padding: 2px 10px; display: inline-block;"> <b>TIP</b> </div> <p>The category strikes will appear in the list with a dark red hallow.</p>
Add button	Once you have finished the selection, press this button to complete your action. The attacks will be added to your profile.

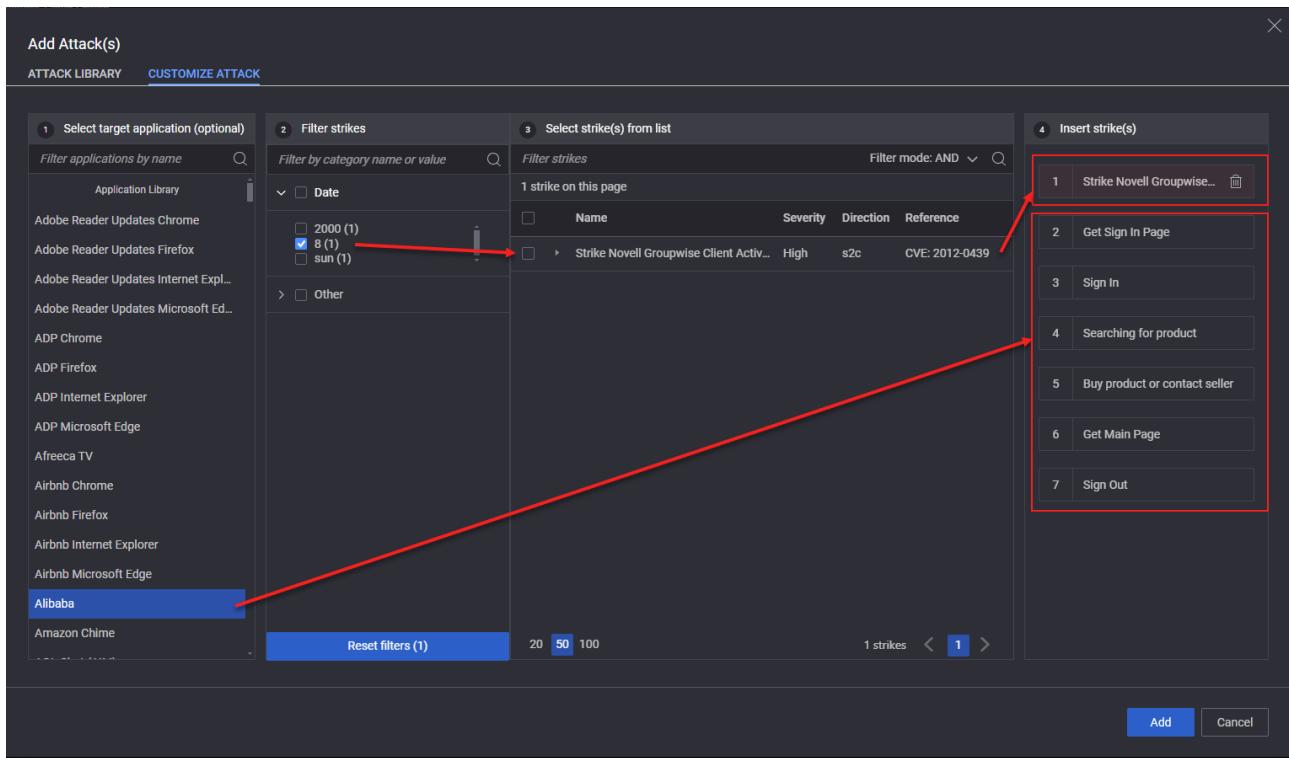

## Editing attacks

Each attack added to the list can be edited or removed. To inspect and further edit an attack:

1. Note that the attack row shows several quick action icons and details:

Icon	Action Button	Description
	Activate button	Enable/disable the attack in this profile.
	TLS	Hover over this icon to see the TLS status for this attack. You can quickly view the TLS settings behind this status. For further details on this setting, see <a href="#">Application Advanced Settings &gt; TLS Settings</a> .
	Rename	Click this icon and change the name of the attack.
	Advance Settings	Press this button to open the <a href="#">Advance Settings</a> page.
	Delete	Click to delete the attack from the list.
	Move	Drag up or down to change the item's position in the list.

2. To configure the setting, select an attack. The **Attack Settings** panel will open. Configure the parameters, or further edit the attack.

Parameter	Description
<i>Attack Settings</i>	
Destination Hostname	Destination hostname of the server.
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
<i>Attacks Strikes and Actions</i>	
Strikes and Actions	
 Edit	Edits the strikes in the list. This will enable selecting and removing the strikes from the list.
 +	Add strikes and Actions button. This will open the <b>Add strikes and Actions</b> configuration dialog, where you can select and add more attacks to the selected attack, or assign actions.
	Connect strikes to server endpoint. This will open the <b>Misc Browser Attacks - Connect Strikes to Server Endpoints</b> page, where you can select and link the strikes that need to connect to a server.
Strikes and actions list	When selecting a strike from this list, you can: <ul style="list-style-type: none"> <li>remove the strike from the list</li> <li>drag up or down to change the item order</li> <li>configure specific properties for the selected strike, in the <b>Properties</b> panel. Refer to <a href="#">Application Actions</a> appendix for further details.</li> </ul>

## Stateless UDP Traffic

The **Stateless UDP** objective generates IP packets that encapsulate dummy UDP payload. The Stateless UDP generator configuration settings for the uplink traffic are described below.

The following table describes the Stateless UDP parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>uplink</b> and can not be modified since on the UE you can only

Parameter	Description
	configure the uplink flow.
Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Delay(s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.
DNN ID	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## Data Traffic

The following table describes the Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Throughput</b> . The other options are: <b>Concurrent Connections</b> and <b>Connections Rate</b> .
Concurrent Connections	Set the number of concurrent connections. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Connection Duration (s)	Set a value for the connection duration. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Connections Rate per Second	Set the value for connections rate per second. This parameter is available only when Objective type is set to <b>Connections Rate</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.
Optimize Throughput (per UE)	Select this option to enable it.
Connection Multiplier (per UE)	Set the connection multiplier value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .

Parameter	Description
Application Traffic Flows	<p>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"><li>• To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li><li>• To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li></ul> <p>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows.</p> <p>Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>If <a href="#">Optimize Throughput (per UE)</a> option is enabled: <b>TCP</b>, <b>TLS</b>, <b>QUIC</b> or <b>UDP</b>.</li> <li>If <a href="#">Optimize Throughput (per UE)</a> option is disabled: <b>TCP</b>, <b>TLS</b> or <b>UDP</b>.</li> </ul>
Type	Select the L4/L7 protocol type from the list of pre-defined flows. The available options are: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get</b>, <b>HTTP Put</b>, <b>HTTP Post</b> and <b>FTP</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get</b>, <b>HTTPS Put</b> and <b>HTTPS Post</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Get</b>, <b>HTTP3 Put</b> and <b>HTTP3 Post</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional</b> (a flow in which a UDP client communicates with a server over a bidirectional datagram socket)</li> </ul> <p><b>NOTE</b> UDP bidirectional works for each UE by sending the number of TX packets configured in the objective (by default 8). After the packets have been received by the DN (or UPF), it sends RX packets (by default 8) to each UE. If the UEs receives the packets, they will send again the number of TX packets and so on. If the UEs did not receive downlink packets, it will send another set of TX packets after 60 seconds.</p>
Port	The port used by the flow.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). For example, a flow may have default actions: log in to a social media site, post a message, then log out. Iterations is the number of times you want this flow of actions to be executed.  Iterations number is set for each UE in the range, for example: if there is a range of 1000 UEs , and it has an objective of HTTP GET with 100 iterations, each of those UEs will get 100 HTTP pages.
Percentage	The percentage of the throughput will be of this type of flow.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.

Parameter	Description
	<p><b>NOTE</b> Setting the page size on UE side will only influence PUT objectives, like HTTP PUT, HTTPs PUT and FTP PUT. To set the page size for GET objectives, the change must be operated on DN side.</p>
Client Tx Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
Server Tx Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
URL	The URL that is being accessed by the flow's protocol.
Destination Hostname	Destination hostname of the server. If DNS hostname resolution is enabled for the flow and Name Servers are configured under Global Settings, this name will be resolved before being used as L7 destination IP for the flow and included in HTTP headers. If empty, the "Address" from the previous fly-out level will be used as L7 destination IP for the flow.
Max Transactions per Connection	Set the value for this parameter.
Enable DNS Query Per Connection	Select the check-box to process only one DNS query per TCP connection.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range settings ( <a href="#">DNNs Config</a> ).
QoS FlowID	Select a QoS Flow ID for this flow.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

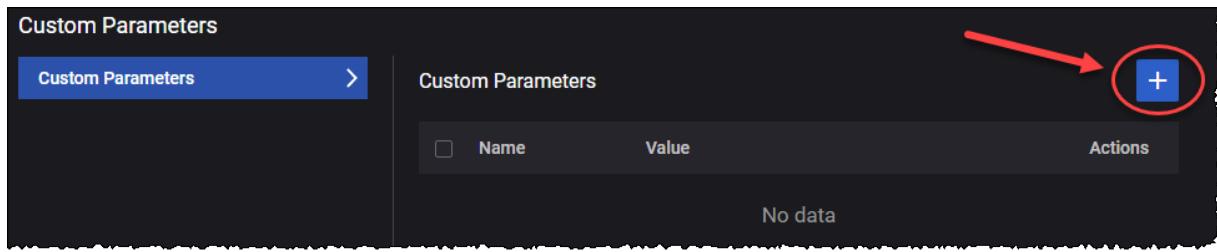

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

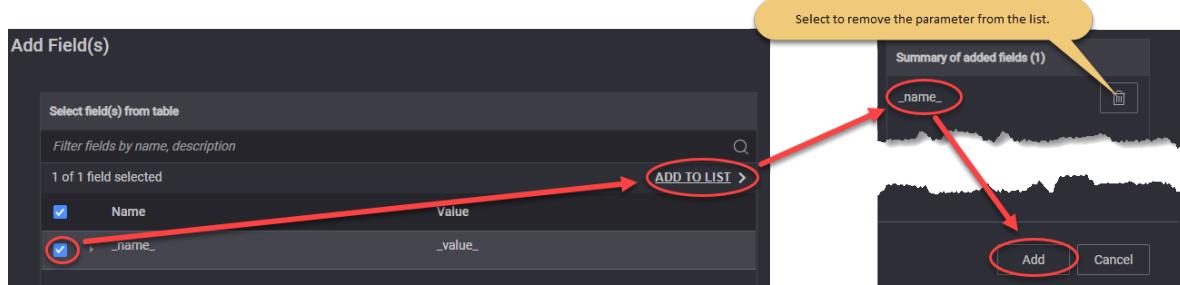

## Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Call Type	Select the type of call from the drop-down list. Available options are: <ul style="list-style-type: none"> <li><b>Basic Call</b></li> <li><b>Basic Call Mo</b> (Mobile Originated)</li> <li><b>Basic Call Mt</b> (Mobile Terminated)</li> <li><b>Custom Flow</b></li> </ul> When creating a new test or when adding a new UE range, the Call Type default

Parameter	Description
	<p>option is the <b>Basic Call</b>, which allows you to run a basic SIP call without the IMS entity and with DN simulating the Mobile Terminating (MT) side.</p> <p>When selecting <b>Basic Call MO/Basic Call MT</b>, the app will use a predefined SIP Flow intended for the use-case in which a DUT IMS or simulated IMS is involved.</p> <p>If the test requirements need an extended set of SIP flows or higher level of flexibility, it is recommended to use the <b>Custom Flow</b> Call Type, which enables the Flow Editor.</p>
<i>Flow Editor:</i>	<p><b>IMPORTANT</b> <i>This configurator becomes available only if Call Type is set to Custom Flow.</i></p> <p><i>Click to open the page and create a particular state machine for SIP calls that allows you a higher flexibility to customize the SIP message sequence and SIP headers/SDP body as desired. For settings, refer to <a href="#">Flow Editor</a> section.</i></p>
<i>Dial Plan:</i>	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<i>Sip Settings:</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Enable IPSEC	Select this option to enable IPSEC.
Domain	Provide the domain name.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Advanced SIP Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select this option in order to enable RTCP.
RTP Session Duration (ms)	Set the value for the session duration.

Parameter	Description
Audio settings:	For the configuration of audio settings, refer to <a href="#">Audio Settings</a> .
Video Settings:	For the configuration of video settings, refer to <a href="#">Video Settings</a> .
MSRP Settings:	For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a> .
Advanced Media Settings:	
Custom SDP	Select this panel to open the custom SDP settings.
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> <li>• <b>NB Codecs IPv6</b></li> <li>• <b>AMR-WB IPv6</b></li> <li>• <b>Multimedia IPv4</b></li> </ul>
QoE Settings	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Flow Editor

Press  to open the editor's window. The following settings are available:

Parameter	Description
Procedures Library	<p><b>TIP</b> This library can also be accessed from Test Overview &gt; Procedures Library, while the procedures are managed from the <a href="#">Settings &gt; Resource Library</a>.</p> <p>Select to access the Procedures Library, where you will find the following categories:</p> <ul style="list-style-type: none"> <li>• <b>SIP</b> - will include the procedures related to SIP signaling.</li> <li>• <b>Media</b> - will include the procedures related to media (audio or/and video)</li> <li>• <b>Flow</b> - will include the Start and Stop procedures used to define an iteration. The number of iterations can be configured per each UE range on the Voice objective, Dial Plan section (0 meaning infinite loops).</li> </ul>

Parameter	Description
	See <a href="#">Procedures Library</a> for more information.
Current Range	This field will be automatically populated with the name of the UE range on which the Voice application traffic is configured.
Add required procedures first > Procedures	Add the procedures required for this custom flow.
Linked Range	Select from the drop-down the UE range that will be connected. Then, add the procedures corresponding to the configuration of state machine.

Note that every procedure added under the Procedures list includes an Add + button and an **Expand** button:

- Use the Expand button to see the **Next On Success** and **Next on Error** configuration fields for the respective procedure. Proceed on setting up these fields for each procedure added.
- Use the Add button to add more steps to the procedure. Set the procedures as above.
- The red connections that appear between procedures will let you know how these are connected

## Procedures Library

Procedure Library includes predefined procedures pulled from the [Resource Library](#), or allows you to create new procedures.

**NOTE** The resource library stores all predefined or user-defined procedures. These procedures are not shared with other user-accounts from the LoadCore machine.

This section describes how to:


- [add predefined procedures](#) from the Resource Library
- [create new procedures](#) in the Procedures Library
- configure the added procedures

### Predefined Procedure


Predefined procedures will be either available upon LoadCore installation, or delivered separately and [imported in the Resource Library](#).

To add procedures from the Resource Library to the Procedures Library:


1. Go to the Test Overview page > Procedures Library, or access the [Flow Editor](#).
2. Select one of the categories available (SIP, Media or Flow).
3. To add a predefined/existing procedure, press the **Add Predefined** + button.

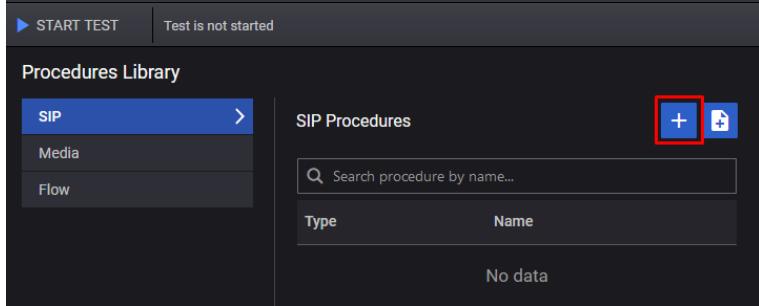

4. In the dialog window, select one or more procedures from the existing list by pressing the icon.

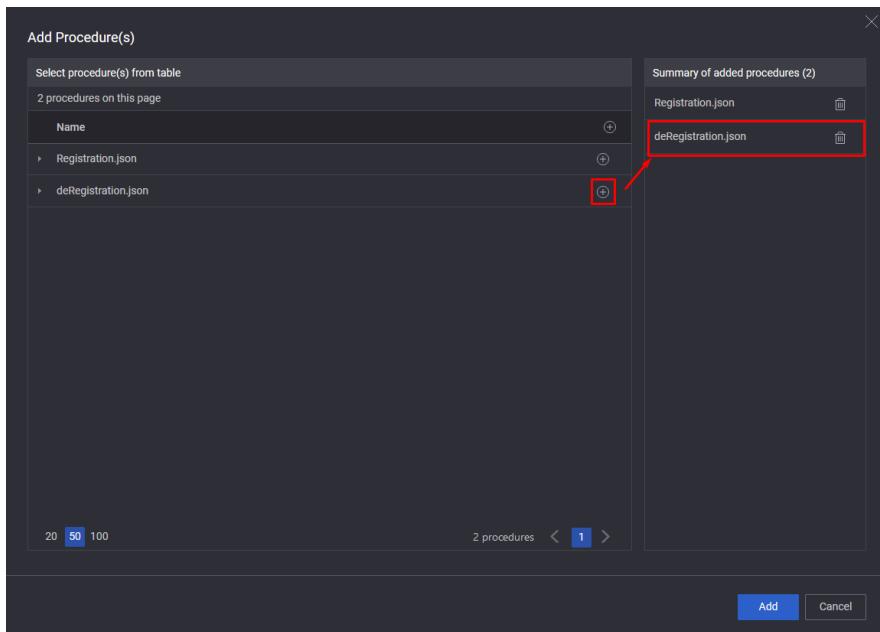

5. To complete the step, click **Add**.

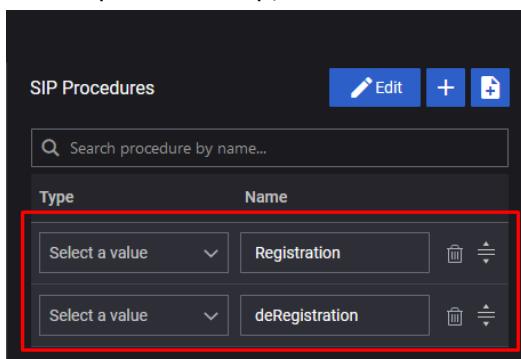

The following step is to configure the procedures.

### Create new procedures

To create new procedures directly in to the Procedures Library:

1. Go to the Test Overview page > Procedures Library, or access the [Flow Editor](#).
2. Select one of the categories available (SIP, Media or Flow).
3. Press the **Create New** button ().
4. Configure the new procedure by completing its content, defined in the following fields:

<b>Setting</b>	<b>Definition</b>																													
Type	<p>Select the type of procedure that will be later used in the Flow Editor indentation. Note that each category has its own types:</p> <table border="1" data-bbox="483 572 1437 1818"> <thead> <tr> <th data-bbox="483 572 687 625"><b>Category</b></th><th data-bbox="687 572 997 625"><b>Type Name</b></th><th data-bbox="997 572 1437 625"><b>Definition</b></th></tr> </thead> <tbody> <tr> <td data-bbox="483 625 687 868"><b>SIP</b></td><td data-bbox="687 625 997 868">Registration</td><td data-bbox="997 625 1437 868">Defines the Registration Type for <i>registrationANDSubscription</i>.</td></tr> <tr> <td data-bbox="483 868 687 941"></td><td data-bbox="687 868 997 941">Deregistration</td><td data-bbox="997 868 1437 941">Defines the Deregistration Type for <i>deregistrationANDunSubscribe</i>.</td></tr> <tr> <td data-bbox="483 941 687 1015"></td><td data-bbox="687 941 997 1015">Initiate Call</td><td data-bbox="997 941 1437 1015">Defines the Initiate Call Type for <i>MO-call-setup</i> and <i>MT-call-setup</i>.</td></tr> <tr> <td data-bbox="483 1015 687 1089"></td><td data-bbox="687 1015 997 1089">End Call</td><td data-bbox="997 1015 1437 1089">Defines the End Call Type for procedures that treat end calls.</td></tr> <tr> <td data-bbox="483 1089 687 1205"><b>Media</b></td><td data-bbox="687 1089 997 1205">MEDIA Session</td><td data-bbox="997 1089 1437 1205">Defines the procedures that contain RTP_Talk, RTP_Listen and RTP_Control commands.</td></tr> <tr> <td data-bbox="483 1205 687 1459"><b>Flow</b></td><td data-bbox="687 1205 997 1459">Start</td><td data-bbox="997 1205 1437 1459"> <p>Defines the Start procedures that contains only the Flow_Start command. It is recommended to place this type as the first procedure when configuring the flow.</p> </td></tr> <tr> <td data-bbox="483 1459 687 1554"></td><td data-bbox="687 1459 997 1554">Think</td><td data-bbox="997 1459 1437 1554">Think: procedures that contain : procedures that contain Flow_Think command.</td></tr> <tr> <td data-bbox="483 1554 687 1839"></td><td data-bbox="687 1554 997 1839">Stop</td><td data-bbox="997 1554 1437 1839"> <p>Defines the Stop procedures that contains only the Flow_Stop command. It is recommended to place this type as the last procedure in the flow.</p> </td></tr> </tbody> </table>	<b>Category</b>	<b>Type Name</b>	<b>Definition</b>	<b>SIP</b>	Registration	Defines the Registration Type for <i>registrationANDSubscription</i> .		Deregistration	Defines the Deregistration Type for <i>deregistrationANDunSubscribe</i> .		Initiate Call	Defines the Initiate Call Type for <i>MO-call-setup</i> and <i>MT-call-setup</i> .		End Call	Defines the End Call Type for procedures that treat end calls.	<b>Media</b>	MEDIA Session	Defines the procedures that contain RTP_Talk, RTP_Listen and RTP_Control commands.	<b>Flow</b>	Start	<p>Defines the Start procedures that contains only the Flow_Start command. It is recommended to place this type as the first procedure when configuring the flow.</p>		Think	Think: procedures that contain : procedures that contain Flow_Think command.		Stop	<p>Defines the Stop procedures that contains only the Flow_Stop command. It is recommended to place this type as the last procedure in the flow.</p>		
<b>Category</b>	<b>Type Name</b>	<b>Definition</b>																												
<b>SIP</b>	Registration	Defines the Registration Type for <i>registrationANDSubscription</i> .																												
	Deregistration	Defines the Deregistration Type for <i>deregistrationANDunSubscribe</i> .																												
	Initiate Call	Defines the Initiate Call Type for <i>MO-call-setup</i> and <i>MT-call-setup</i> .																												
	End Call	Defines the End Call Type for procedures that treat end calls.																												
<b>Media</b>	MEDIA Session	Defines the procedures that contain RTP_Talk, RTP_Listen and RTP_Control commands.																												
<b>Flow</b>	Start	<p>Defines the Start procedures that contains only the Flow_Start command. It is recommended to place this type as the first procedure when configuring the flow.</p>																												
	Think	Think: procedures that contain : procedures that contain Flow_Think command.																												
	Stop	<p>Defines the Stop procedures that contains only the Flow_Stop command. It is recommended to place this type as the last procedure in the flow.</p>																												

Setting	Definition
	<p><b>NOTE</b> Only the Flow &gt; Start and Flow &gt; Stop procedures are composed from only one command (<i>Flow_Start</i> and <i>Flow_Stop</i>). For the other types, the presence of both <i>Flow_Start</i> and <i>Flow_Stop</i> is mandatory.</p>
Name	<p>Add the name of the procedure. When the procedure Type is configured, the name is modified to a default value depending on the chosen type. If another name is desired, click in the field and modify the name.</p> <p><b>NOTE</b> If the name is similar to another procedure in the list, it will append a number at the end of the name.</p>
	Click to delete the procedure from the list.
	Press to drag the procedure up or down and change the order of the procedures.
<i>Procedures Settings:</i>	<i>Select the procedure to open the content configurator.</i>
	Select to delete the procedure
Import or Select Procedure	<p>Select this field if you want to import or reuse the configuration of another procedure. You can:</p> <ul style="list-style-type: none"> <li>select an existing procedure from the drop-down list</li> <li>use <b>Upload</b> to import a new procedure into the system; the new procedure will be automatically added to the Resource Library</li> </ul> <p>Use <b>Clear</b> to remove any configuration and start and add Commands from scratch.</p>
Save Changes As a New Procedure	<p>This button becomes active if you make changes to the Commands List (add or delete commands).</p> <p>Use this button to save the modified procedure with a new name.</p>
<i>Commands:</i>	<i>This section will list all the commands available for a procedure (either imported, or newly added commands).</i>
	Select the <b>Create New</b> button to add new commands to the current procedure.
	This button becomes available only if the list is already populated. Once pressed, it will allow you to search and select commands, to further delete them (either in bulk, or individually).

5. For any command added to the list, use the  con to move the command up or down and redo the order of the commands, or  to remove the command from the list.

Next step is to configure each command in the list.

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
DNN ID	Select the DNN from the drop-down list.
Iterations	The number of times the Call Type will be executed. It can be finite or infinite (set to zero).
UPDATE	Select this button in order to update IMSI and Source Phone with UE range identification settings.
IMSI	Read-only field, it displays the updated IMSI.
IMSI Phone Increment	The value by which the IMSI phone number is incremented.
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.
Source Phone Increment	The value by which the destination phone number is incremented.
Destination IP	The destination IP address.
Destination IP Increment	The value by which the destination IP is incremented.
Destination Port	The destination port number.

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
QoS Flow ID for Video	Select the QoS flow used for audio from the drop-down list.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).

Parameter	Description
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	<p>Select the audio codec from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <b>AMR</b> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <b>AMR-WB</b> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <b>EVS</b> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <b>PCMU</b></li> <li>• <b>PCMA</b></li> <li>• <b>iLBC</b></li> <li>• <b>G722</b></li> <li>• <b>G723</b></li> <li>• <b>G729</b></li> </ul> <p>The parameters of each audio codec are presented below.</p>

## AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li>• <b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li>• <b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make</li> </ul>

Parameter	Description
	implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.
Bitrate	Indicates the mode(bitrate) of the AMR codec. For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate. For AMR WB there are 9 modes available.

**EVS**

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	The following options are available: <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

**PCMU/PCMA/iLBC/G722/G723/G729**

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

**Video Settings**

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
QoS Flow ID for Voice	Select the QoS Flows ID(s) from the drop-down list.

Parameter	Description
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
QoS Flow ID for MSRP	Select the QoS Flows ID(s) from the drop-down list.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)
- [Custom Parameters](#)
- [SIP 3GPP IPSEC](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE** The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:

- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button. The Add Field(s) opens.
  - From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

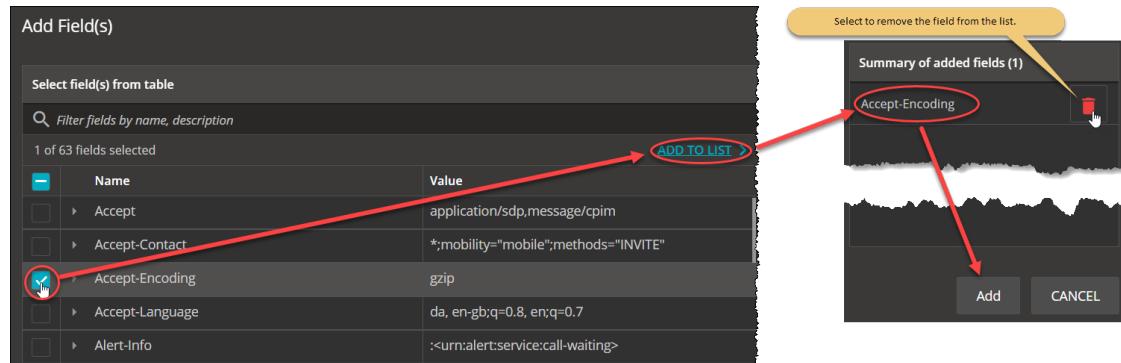

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC	conference

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	6665	
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nextnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF	reg

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	RFC 3680	
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-	IETF	sip:user2@operator3.com

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Associated-URI	RFC 7315	
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1;ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com", qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque ="";stale=FALSE,algorithm=MD5

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Proxy-Authorization	IETF RFC 3261	Digest username="Alice", realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel

Parameter	Description	Value
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.


Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or Opc	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc	The Opc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.

Parameter	Description
Opc Increment	The number used to increment the OPC value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPC value.

## Custom Parameters

You can add custom parameters as follows:


1. The Custom Parameters panel, select the **Add** button.

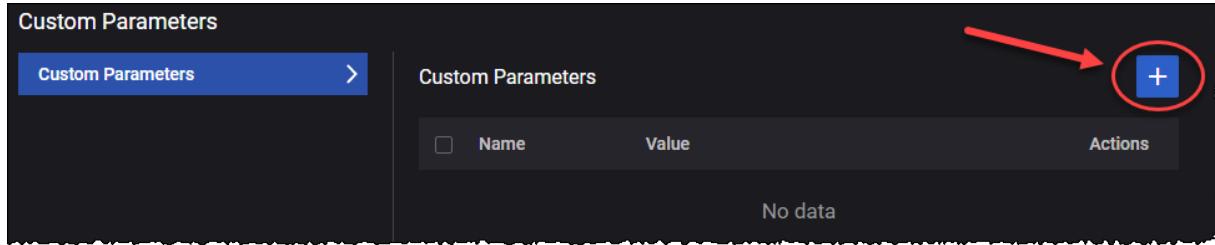

The Add Field(s) opens.

2. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

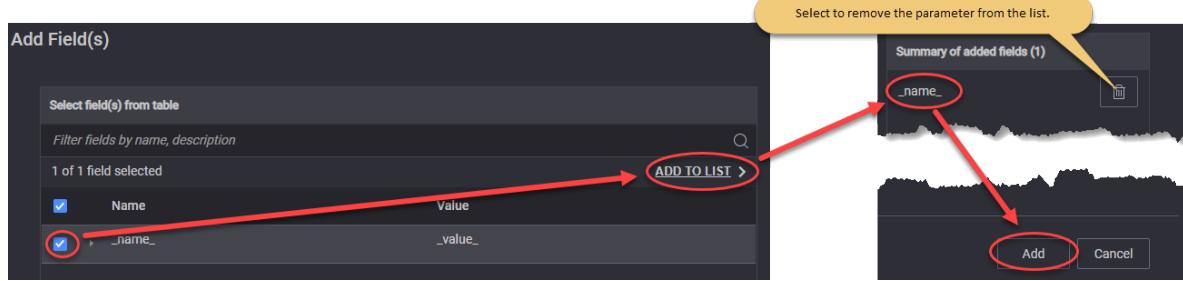

The following custom parameters are available:

Parameter	Description	Value
DelayBefore SIPInvite	Delay in milliseconds before sending SIP INVITE.	1000
DealyBeforeRTP	Delay in milliseconds before RTP session start.	0
DelayAfterRTP	Delay in milliseconds after RTP session end.	0
DeregisterLoop	Set the number of calls/loops before a SIP deregistration will be performed. Any SIP deregistration will be followed by a new SIP registration.	0
DelayBefore180	Delay in milliseconds before 180 Ringing	0

Parameter	Description	Value
	message will be sent.	
DelayBefore200INVITE	Delay in miliseconds before 200 OK message for INVITE will be sent.	0
debugIPSEC	Activate IPSEC debug. Please use debug only for a reduced number of simulated UEs.	0
timeoutSIP	Global timeout in miliseconds for any SIP message. Default is set to standard 32000ms. Use this parameter to modify the default value.	32000
MaxActiveLimit	Set maximum allowed concurrent TCP connections per CPU Core. Default it is set to 8000. Please use this parameter to modify the deafult value.	8000

### SIP 3GPP IPSEC

The parameters required for SIP 3GPP IPSEC are presented in the table below.

Parameter	Description
Port-C	Set the value for this parameter.
Port-S	Set the value for this parameter.
Authentication Algorithm	Select the authentication algorithm: <ul style="list-style-type: none"> <li>• <b>hmac-sha-1-96</b></li> <li>• <b>aes-gmac</b></li> <li>• <b>null</b></li> </ul>
Encryption Algorithm	Select the encryption algorithm: <ul style="list-style-type: none"> <li>• <b>aes-gcm</b></li> <li>• <b>aes-cbc</b></li> <li>• <b>null</b></li> </ul>

### Video OTT Traffic

The following table describes the Video OTT(Over-the-Top) traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it

Parameter	Description
	with your own value.
Objective Type	Select the value from the drop-down list: <b>Simulated Users</b> or <b>Throughput</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
Advanced OTT	Select the <b>Open Advanced OTT</b> button to enable and configure <a href="#">Advanced OTT Settings</a> .

## Advanced OTT Settings

The parameters required to configure the OTT advanced settings are presented in the table below.

Parameter	Description
Application Traffic Flow	<p>Each Application Traffic entry requires at least one Ott traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul>
<i>Flow:</i>	
	Select this button to remove this flow from your test configuration.
Type	Select the Ott traffic type from the drop-down list. Available options: <ul style="list-style-type: none"> <li><b>DASH</b></li> <li><b>HLS</b></li> </ul>

Parameter	Description
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
URL	Select the URL from the drop-down list populated with the defined on the server.
Play Until End	If this check box is selected, the Play Duration field is disabled and the original playtime is used.
Play Duration (sec)	This field is available only if the Play Until End check box is not selected. It allows you to set a custom playtime.
Transport	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero).
Percentage	The percentage of Test Objective to execute this flow.
Quality Control	These settings are presented in the <a href="#">Quality Control</a> pane.
Advanced Client settings	These settings are presented in the <a href="#">Advanced Client Settings</a> pane.

## Quality Control

The parameters required for Quality Control settings are presented in the table below.

Parameter	Description
<i>Jitter Buffer:</i>	
Initial Delay (s)	Set the number of seconds to wait before playback. The default value is 20.
Maximum Size (s)	Set the number of seconds to be buffered on the client side. The default value is 20.
MOS P.1203	Select an option from the drop-down list: <b>Disabled</b> or <b>Mode 0</b> .
.Quality Control Mode	Select the quality control mode from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Adaptive Bit Rate</b></li> <li>• <b>Quality Predefined Levels</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>Lowest Quality</b></li> <li>• <b>Highest Quality</b></li> </ul>
Number of segments	This field is available and editable only when the Quality Control Mode is set to <b>Adaptive Bit Rate</b> .
<i>Play Profiles: The following settings are available and editable only when the Quality Control Mode is set to <b>Quality Predefined Levels</b>.</i>	
	Select this button to add a predefined play profile to your test configuration.
<i>Quality Shift</i>	
	Select this button to remove this play profile from your test configuration.
Shift Type	Select the shift type from the drop-down list. Available options <ul style="list-style-type: none"> <li>• <b>Stay at Current Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lower Bitrate</b></li> <li>• <b>Change to the Higher Bitrate</b></li> </ul>
Numbers of levels to shift	This field is available and editable only when the Shift Type is set to <b>Change to Higher Bitrate</b> or <b>Change to Lower Bitrate</b> .
Play Until End	If this check box is selected, the <b>Play duration</b> field is disabled and the original playtime is used.
Play duration(sec)	This field is available only if the <b>Play Until End</b> check box is not selected. It allows you to set a custom playtime.

## Advanced Client Settings

The parameters required for Advanced Client settings are presented in the table below.


Parameter	Description
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Timeshift for Live	Set a value for this field. 0 means no timeshift.
Enable DNS Query Per Connection	Select the check box to process only one DNS query per TCP connection.

Parameter	Description
Custom parameters	For more details, refer to <a href="#">Custom parameters</a> .

## Custom Parameters

You can add custom parameters as follows:


1. Select the **Open Custom Parameters** tile. The Custom Parameters panel opens.
2. Select the **Add** button.

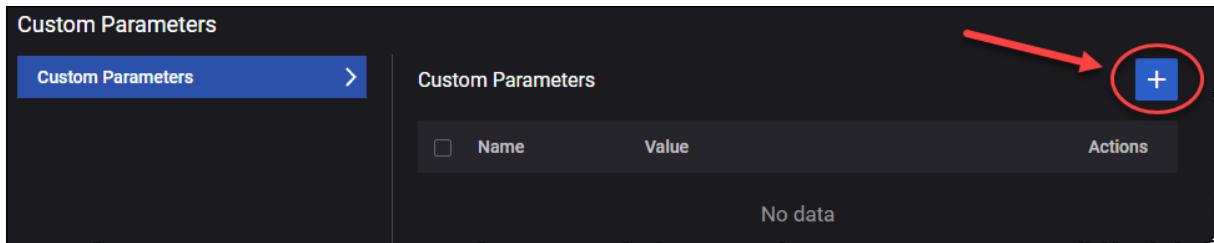

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

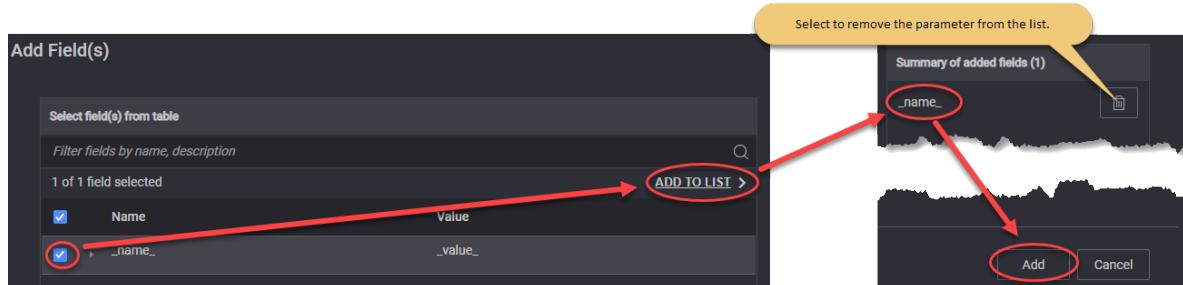

## DNS Client Traffic

The following table describes the DNS Client Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Connection multiplier (per UE)	Set the value for the connection multiplier.

Parameter	Description
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Application Traffic Flows	Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions. <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows. Also, you can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Type	By default, the type is set to <b>DNS Client</b> .
Port	The port used by the flow.
DNS Server IP	Set the DNS server IP address.
Number of DNS servers	Set the number of DNS servers.
Hostname	Set the hostname.
Query Type	Select the query type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range Settings ( <a href="#">DNNs Config</a> ).
QoS FlowID	Select a QoS Flow ID for this flow.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

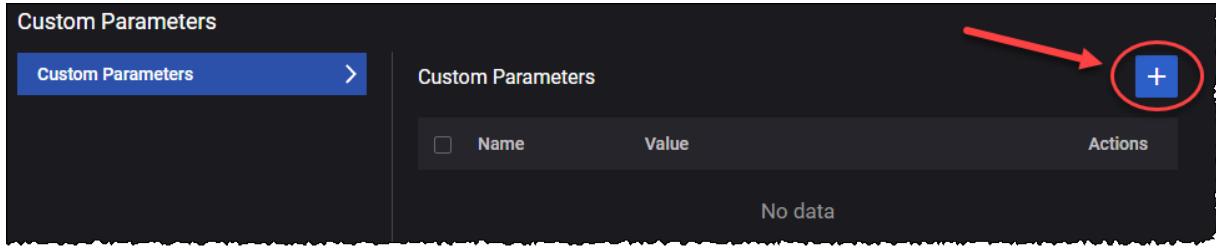

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

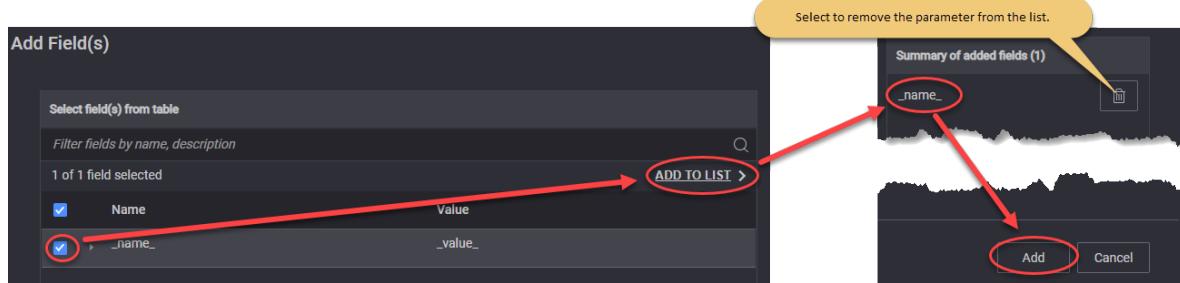

## ICMP Client

The following table describes the ICMP Client parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>ICMP Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Traffic Flow	Refer to <a href="#">Traffic Flow</a> for a description of the configuration settings for these traffic flows.

## Traffic Flow

The **Traffic Flow** parameters are described in the following table.

Parameter	Description
Destination Hostname	Set the destination hostname.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
Interval (ms)	Set the interval value.
Timeout (ms)	Set the timeout value.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range Settings ( <a href="#">DNNs Config</a> ).

## Ping Traffic

This application traffic type emulates a PING client.

The following table describes the Ping Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). For example, a flow may have default actions: log in to a social media site, post a message, then log out. Iterations is the number of times you want this flow of actions to be executed.
Destination Hostname	Destination hostname of the server. If DNS hostname resolution is enabled for the flow and Name Servers are configured under Global Settings, this name will be resolved before being used as L7 destination IP for the flow and included in HTTP headers. If empty, the “Address” from the previous fly-out level will be used as L7 destination IP for the flow.
Count	Set the count value. Default value: 4.
Interval (ms)	Set the interval value. Default value: 1000.
Timeout (ms)	Set the timeout value. Default value: 4000.

Parameter	Description
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range settings ( <a href="#">DNNs Config</a> ).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .

## Capture Replay

This page describes the settings required by the capture replay functionality. Ethernet-based packet captures (.pcap files) can be filtered and resulting packets can be replayed on top of GTPu tunnels. Packets can be replayed as Ethernet frames over Ethernet PDU sessions or as IPv4 or IPv6 frames over IP-based PDU sessions. The capture replay feature can also be used with SGi client and SGi server (DN) to replay IP and Ethernet frames without any additional encapsulation.

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate (pps)	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> miliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b> (option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).

Parameter	Description
Start Delay (s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
DNN ID	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> . Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in <code>pcap-filter</code> format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .

Parameter	Description
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).
<i>Overrides</i>	
Override QoS Flow ID	This option is available only if the <i>Role</i> is set to <b>Initiator</b> . Select the toggle button to enable it.
Qos Flow ID	This option is available only when <i>Override QoS Flow ID</i> option is enabled. Select the QoS Flows ID(s) from the drop-down list.
Override IP Address	Select the toggle button to enable it. When enabled, <i>Destination IP Address</i> and <i>Destination IP Address Count</i> fields become available.
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Address Count	The destination IP address count value.

## Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of

Parameter	Description
	the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the Traffic Flow parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: TCP or UDP.
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Client Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the server sends in a burst.
Server Burst Size (bytes)	The packet size in bytes.
Server Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that

Parameter	Description
	will be generated for this UE range, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the

Parameter	Description
	throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Out of Band Signaling	<p>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</p> <p><b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.</p>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Reconnect Timeout (ms)	The time interval after which the client attempts to reconnect after the connection was interrupted. 0 means that reconnect is disabled.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.

Parameter	Description
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

The following table describes the **UDG Traffic Parameters**.

Parameter	Description
UDG Test Type	Select the test type from the drop-down list. Available options: <b>Transmission</b> or <b>Ping-pong</b> . For each test type, the parameters are described below.
<i>Transmission</i>	
Throughput Tx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Throughput Rx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change. A corresponding server is required to achieve the displayed value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	The number of packets the server sends in a burst.
Server Burst Interval Unit	Select the server burst interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .
Server Burst Size (bytes)	The packet size in bytes.
<i>Ping-pong</i>	

Parameter	Description
Ping Direction	Set the ping direction. Available options: <b>Upstream</b> or <b>Downstream</b> .
Ping Interval	Set the ping time interval.
Ping Interval Unit	Set the ping interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .
Pong Number	Set the value for the pong number.
Client Packet Size (bytes)	The packet size in bytes.
Server Packet Size (bytes)	The packet size in bytes.

The following table describes the **Transaction** parameters.

Parameter	Description
<i>Transaction</i>	Select the check-box to enable these settings.
Duration (ms)	Transactions duration, in millisecond.
Idle interval (ms)	Idle interval between transactions, in millisecond.
Resume Mode	Side which triggers transition between the UE idle and the UE connected state. Available options: <b>User</b> or <b>Network</b> .

## Predefined Applications Traffic

The following table describes the Predefined Flows Traffic parameters.


Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Predefined Applications</b> .
Objective Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Simulated Users</b></li> <li>• <b>Throughput</b></li> <li>• <b>Connections Per Second</b></li> </ul>
Throughput (kbps)	<b>IMPORTANT</b> This parameter is available only when <u>Objective Type</u> is set to <b>Throughput</b> . The desired throughput (in kbps) for the combined traffic flows that will be generated.
Connections Per Seconds	<b>IMPORTANT</b> This parameter is available only when <u>Objective Type</u> is set to <b>Connections Per Second</b> .

<b>Parameter</b>	<b>Description</b>
	Set the number of connections.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
Configure Traffic Profiles	<p>Each Application Traffic entry requires at least one traffic profile definition, and can support multiple such definitions.</p> <p>Refer to <a href="#">Traffic Profile</a> for a description of the configuration settings for these traffic profiles.</p>

## Traffic Profile


You can configure the traffic profiles as needed to meet your test objectives. You can do this as follows:

1. Select the **Configure Traffic Profiles** button.



The Traffic Profiles section opens.

2. Select the Traffic Profiles tile.

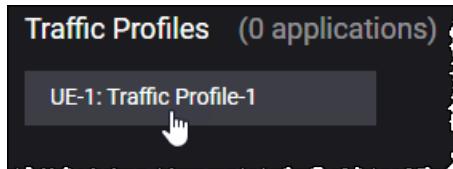

The Traffic Profile Configuration section opens.


3. From the Predefined Applications sections, you can add and configure applications by selecting the following sections:

- [Applications](#)
- [TCP Settings](#)
- [TLS Settings](#)
- [HTTP Settings](#)
- [RTP Settings](#)

## Applications

You can add or remove predefined applications from the Applications tab under the Traffic Profile Configuration section, as follows:

1. Select the **Add Application** button.

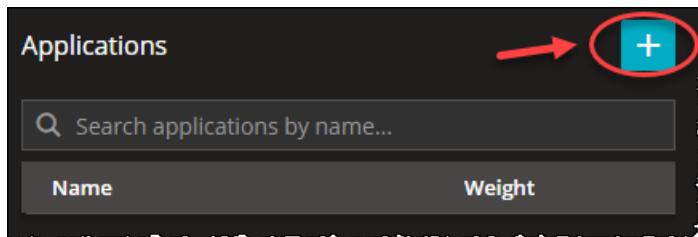

The Add Application(s) window opens.


2. From the Add Application(s), select the applications you want to add and select **ADD TO LIST** to move them to the added applications section. To add the applications to your configuration select **Add**.

**NOTE**

For the complete list of predefined applications, refer to [Predefined Applications](#).

Each predefined application flow will consume 1 WRLS-5GC-UPFLOW license feature.

### For example ...

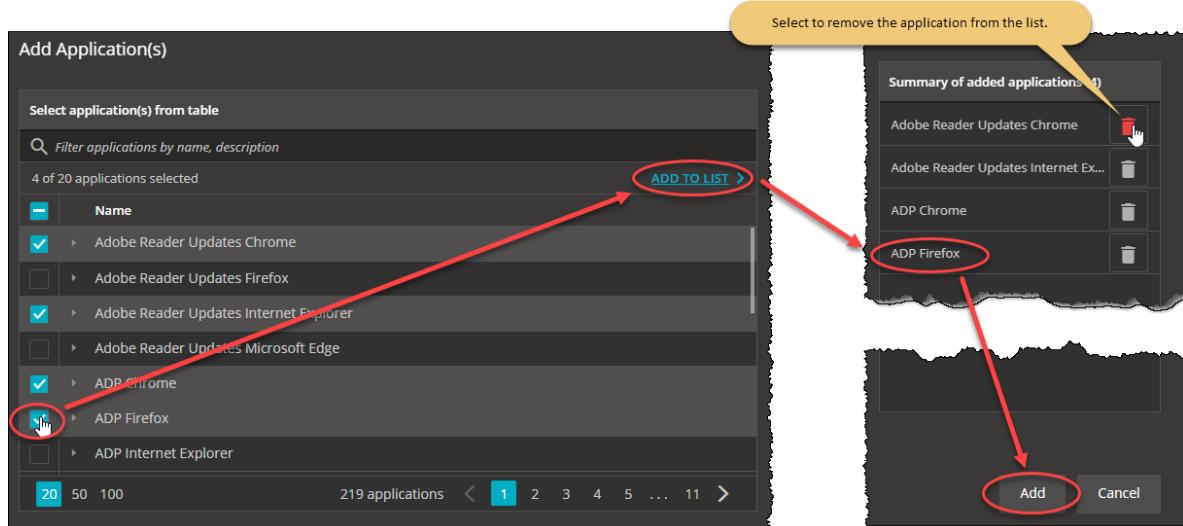

The applications are added to your configuration under the Applications section.


**For example ...**

Name	Weight	Actions
Adobe Reader Updates Chrome 1	1	
Adobe Reader Updates Internet Exp...	1	
ADP Chrome 3	1	
ADP Firefox 4	1	

3. If needed, you can select the **Edit** button to enable the bulk selection of the available applications in order to remove them from the list.

For each application added, the following elements are available in the Applications table:

Field	Description
Name	The application name.
TLS	Hover over this icon to see the TLS status for this attack. You can quickly review the TLS settings behind this status.

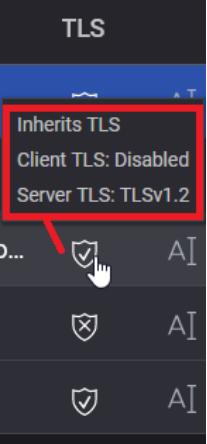Field	Description
	 <p>For further details on this setting, see <a href="#">Application Advanced Settings &gt; TLS Settings</a>.</p>
Weight	<p>Set the application weight using the adjustment button. If the primary objective of a Traffic Profile is set to <b>Throughput</b>, the selected weight distribution time depends on the types and number of applications added to the application list.</p>
Action Buttons 	<ul style="list-style-type: none"> <li>• <b>Rename</b> - Select to rename the application.</li> <li>• <b>Advanced Settings</b> - for more information, refer to <a href="#">Advanced Settings</a>.</li> <li>• <b>Delete</b> - Select to delete the application.</li> </ul>

When an application is selected from the Application table, the Application Settings and Application Actions sections are displayed.

**For example ...**

The screenshot shows the LoadCore configuration interface. On the left, the 'Applications' section lists four predefined applications with their names and weights:

Name	Weight
Adobe Reader Updates Chrome 1	1
Adobe Reader Updates Firefox 2	1
Adobe Reader Updates Internet Exp...	1
Adobe Reader Updates Microsoft E...	1

On the right, the 'Application Settings' section contains fields for Destination Hostname, DNN ID, and QoS Flow ID. Below it, the 'Application Actions' section lists actions for each application, such as 'Check For Updates' and 'Download Updates'.

## Application Settings

Under the Application Settings section, the following fields are displayed:

**NOTE** These fields under the Application Settings section are common to all predefined applications.


Field	Description
Destination Hostname	The application name.
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select a QoS Flow ID from the drop-down list.

## Application Actions

The Application Actions section lists the actions and action parameters available in LoadCore for each predefined application. For the complete list of actions and parameters, refer to [Application Actions](#).

Under the Application Actions section, you can edit or add new actions for each application:


1. Use the icons available for each icon in order to remove it or to change its position in actions list.  
**For example ...**

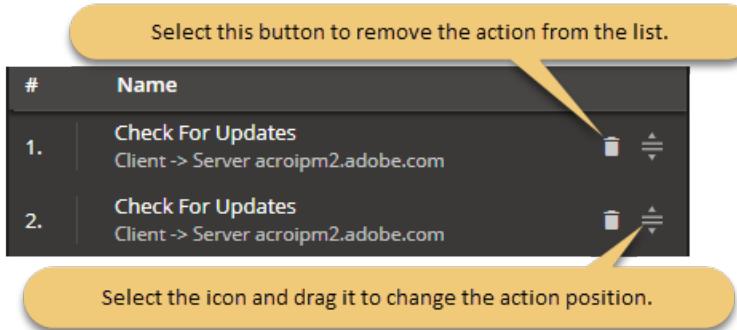

2. Select the **Add Actions** button to add new actions to the application. The Add Action(s) window opens.

Select an action from the list and then use the **Insert Actions** button to add the action in the desired position on the Insert Action(s) table. Select **Add**.

**For example ...**

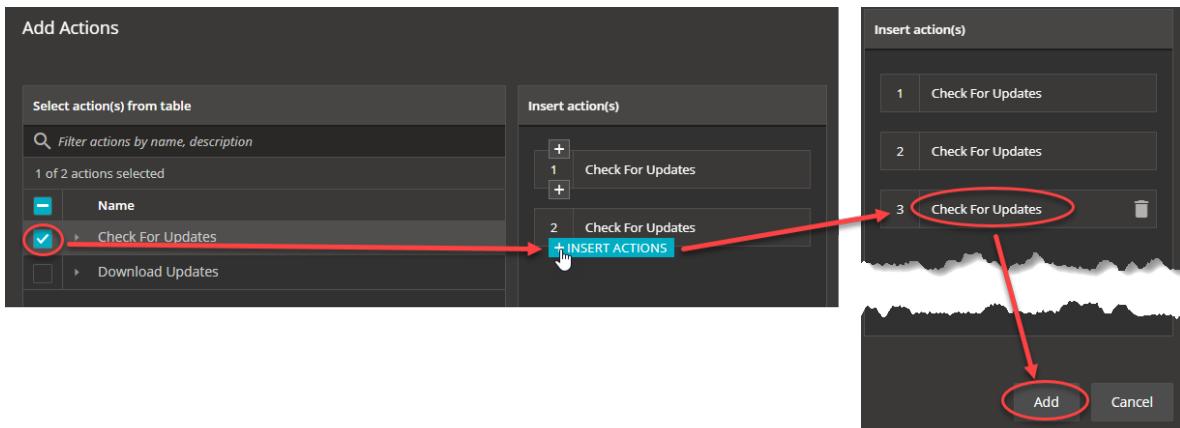

3. If needed, you can select the **Edit** button to enable the bulk selection of the available actions in order to remove them from the list.


## Application Advanced Settings

**NOTE** This section is also applicable for Attacks Settings.

For each predefined application, the Application Settings menu is displayed when the Advanced Settings button is selected. This menu contains the following settings and sections:

- **Action timeout** field - set the timeout, in seconds
- **Connections** section
- **TLS Settings**
- **HTTP Settings**
- **Other properties**

**For example ...**

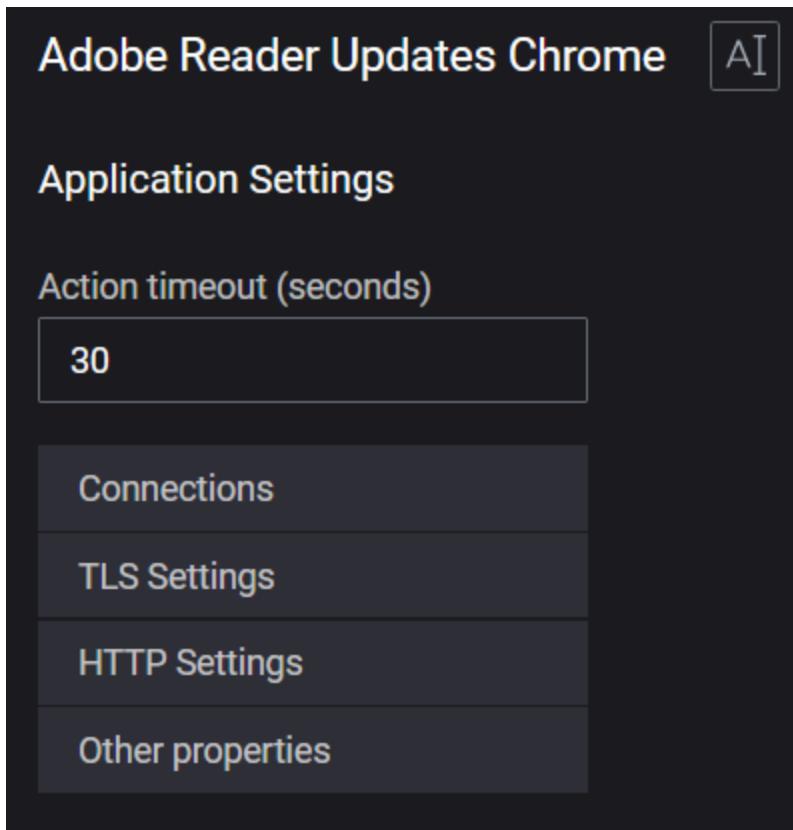

Under the **Connections** section, the Connections table is displayed. When a connection is selected, the Connections Properties fields are displayed, as follows:

Field	Description
Name	The application name.
Client Endpoint	The client endpoint.
Server Endpoint	The server endpoint.
Hostname	The hostname name. Depending on your application/attack, you may encounter two options for this parameter: <ul style="list-style-type: none"> <li>• <b>User input</b></li> <li>• <b>Playlist file</b> - allows you to add a custom playlist, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.</li> </ul>
Destination Port	The TCP source port that the client endpoint is initiating connections from.
Server Port	The TCP port that the server endpoint is accepting connections on.
Encryption	Select the check box to enable it this option.

Field	Description
disabled	

Under the **TLS Settings** section, the application/attack TLS Settings fields are displayed, as follows:

Field	Description
Inherit TLS	<p>This option is enabled by default.</p> <ul style="list-style-type: none"> <li>When Inherit TLS is <b>enabled</b>, the client and server agent inherit the SSL profile configured under the TLS Settings tab on the Application Profile or Attack Profile page.</li> <li>When Inherit TLS is <b>disabled</b>, and the <b>Client TLS</b> is <b>enabled</b>, the client receives an SSL profile for each application or attack.</li> <li>When Inherit TLS is <b>disabled</b>, and the <b>Server TLS</b> is <b>enabled</b>, the server receives a single SSL profile.</li> </ul> <p><b>NOTE</b> The server TLS settings must be identical across all profiles for the same agent. If multiple server TLS profiles are configured at different levels for the same agent, an error is triggered informing you that there are differences between the profiles.</p>
Client TLS	<p><b>IMPORTANT</b> <i>This section appears only if the <b>Inherit TLS</b> parameter is disabled.</i></p> <p><i>Click this option to open the Client TLS Settings panel. Refer to <a href="#">TLS Settings</a> for further configuration of the parameters.</i></p>
Server TLS	<p><b>IMPORTANT</b> <i>This section appears only if the <b>Inherit TLS</b> parameter is disabled.</i></p> <p><i>Click this option to open the Server TLS Settings panel. Refer to <a href="#">TLS Settings</a> for further configuration of the parameters.</i></p>

Under the **HTTP Settings** section, the application/attack HTTP fields are displayed, as follows:

Field	Description
Inherit HTTP	<p>When Inherit HTTP is enabled, the client and server agent inherit the HTTP settings configured at the traffic profile level.</p> <p>This option is enabled by default, with the following exceptions:</p> <ul style="list-style-type: none"> <li>Configuration imported from older software versions, which had different values than the default ones in the HTTP profile for the parameters in the <b>Parameters</b> section under <b>Application advanced settings</b></li> <li>Applications that come from ATI with profiles that differ from the default predefined profiles. For example: Facebook Chrome which had the Inherit HTTP option enabled, or Facebook Mozilla which had the Inherit HTTP option disabled.</li> </ul> <p>Other limitations for 3.0 and newer versions:</p> <ul style="list-style-type: none"> <li>For the <b>HTTP App</b>, the headers defined at both the application level and traffic</li> </ul>

Field	Description
	profile level will be ignored when the <b>HTTP App</b> has <i>request</i> and <i>response</i> headers that are exposed as <b>Action</b> parameters, in which case those headers will be used. Overriding this behavior and using the HTTP profile headers instead is not currently supported.
<i>Client HTTP</i>	<p><b>IMPORTANT</b> <i>This section appears only if the <b>Inherit HTTP</b> parameter is disabled.</i></p> <p><i>Click this option to open the Client HTTP Settings panel. Refer to <a href="#">HTTP Settings</a> for further configuration of the parameters.</i></p>
<i>Server TLS</i>	<p><b>IMPORTANT</b> <i>This section appears only if the <b>Inherit HTTP</b> parameter is disabled.</i></p> <p><i>Click this option to open the Server HTTP Settings panel. Refer to <a href="#">HTTP Settings</a> for further configuration of the parameters.</i></p>


Under the **Other properties** section, the application/attack settings properties fields are displayed, as follows:

Field	Description
Name	The application name.
Iterations	Set the value for the number of iterations.
Max Transactions	The maximum amount of transactions an application can make.
Client HTTP profile	<p>Select the client HTTP profile from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• Chrome</li> <li>• Firefox</li> <li>• Opera</li> <li>• Microsoft Edge</li> <li>• Internet Explorer</li> <li>• Safari</li> <li>• Android</li> </ul>
Action Timeout (seconds)	Set the action timeout in seconds.
Connection Persistence	<p>Select an option for the connection persistence:</p> <ul style="list-style-type: none"> <li>• <b>Standard</b> - inherits the behavior with respect to the HTTP version (1.0 or 1.1).</li> <li>• <b>Disabled</b> - enforces connection closing following every HTTP message.</li> <li>• <b>Enabled</b> - enforces connection persistence through explicit keep-</li> </ul>

Field	Description
	alive.
HTTP Version	Select the HTTP version used: <ul style="list-style-type: none"> <li>• <b>HTTP/1.0</b></li> <li>• <b>HTTP/1.1</b></li> </ul>
Receive retries	The number of times the receive will be retried.
Receive timeout	The receive timeout used for the UDP connection.

## TCP Settings

The following UI elements are available on the TCP Settings tab under the Traffic Profile/Attack Profile Configuration section.

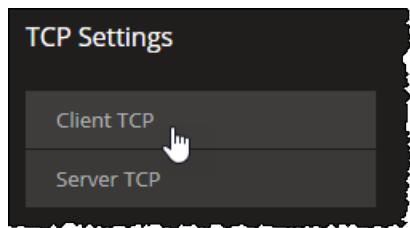


These parameters are configurable for both **Client** and **Server** settings, as presented in the following table.

Parameter	Description
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value. The default Min value is 2000 milliseconds and the permissible range of values is between 50 to 120000 milliseconds.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to. The default value is 3200 milliseconds and the permissible range of values is between 1000 to 120000 milliseconds.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number). The default value is 1024.
Max source port	The Max value specifies the upper bound (the highest permissible port number). The default value is 65535.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on

Parameter	Description
	your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
RFC1323 TCP timestamps enabled	Enable or disable the stamp using the toggle button. If enabled, the client or server inserts an RFC 1323 timestamp into each packet. <p><b>NOTE</b> Enabling the TCP Timestamp option adds 12 bytes to the TCP header. This reduces the effective configured MSS.</p>
Selective acknowledgments	When enabled, the data receiver can inform the sender about all segments that have arrived successfully. Therefore, the sender will retransmit only the segments that have actually been lost. When disabled, the exchange of selective acknowledgments between the endpoints is no longer permitted. This is the default value. <p><b>IMPORTANT</b> Must be enabled for both client and server, to take effect. When running a mix of apps and attacks, attack profile's settings will be applied to both profiles, since it has the higher precedence.</p>

## TLS Settings

The following UI elements are available on the TLS Settings tab under the Traffic Profile/Attack profile Configuration section.

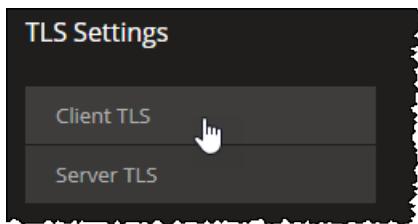

**NOTE** TLS multi version support is available, you can configure both TLS 1.2 and TLS 1.3 from **Client TLS Settings**. You can choose multiple ciphers for each different version. The Client sends these versions and ciphers in the Client Hello and the Server chooses one of the versions and ciphers and replies back with Server Hello. The Client then proceeds with the handshake.

**NOTE** Once you select either of the two Session Reuse Methods below for the **Client TLS Settings**, you can specify how many simultaneous connections can share the same Session ID or Ticket through the **Session Reuse Count** option for **TLSv1.2**.

These parameters are configurable for both **Client** and **Server** settings, as presented in the following tables.

### Client TLS Settings

Parameter	Description
	Select this button to apply the client TLS settings configured at the currently selected application or attack level to the other existing application or attack profiles. When selecting this button, you are prompted to choose one or multiple client TLS profiles from the current configuration to which the current TLS settings will be applied.
Enable TLS traffic	<p><b>IMPORTANT</b> For Attacks traffic Profiles only.</p> <p>If enabled, the client will initiate all connections to the destination over TLS, based on the settings below. If disabled, connections will be established in plaintext.</p> <p>Even if Enable TLS traffic is not active, the client agent may use the TLS settings based on responses it receives from the server. For example, if the server sends an HTTP Redirect (3xx) response with a https:// URL, when the client agent follows that redirect, it will initiate a TLS connection based on the configured TLS settings.</p>
TLSv1.2	<p>Select the check box to enable it.</p> <p>The following options became available:</p>
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>IMPORTANT</b> Session reuse method is available only if TLSv1.2 is enabled.</p>
Session reuse count	<p>The number of simultaneous connections that can share the same Session ID or Session ticket.</p> <p><b>IMPORTANT</b> This option appears only if client TLSv1.2 is enabled, and the <b>Session reuse method</b> is set to either the <b>Session ticket</b> or the <b>Session ID method</b>.</p>
Immediate close	If enabled, the endpoint closes the TCP connection immediately after sending the TLS CLOSE message (i.e., the endpoint does not wait for a confirmation from the other end).
Send close notify	If enabled, it will send a close notify message.
TLSv1.3	Select the check box to enable it.

Parameter	Description
	<i>The following options became available:</i>
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibility	This option is enabled by default. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	If enabled, the endpoint closes the TCP connection immediately after sending the TLS CLOSE message (i.e., the endpoint does not wait for a confirmation from the other end).
Send close notify	If enabled, it will send a close notify message.


### Server TLS Settings

Parameter	Description
	Select this button to apply the client TLS settings configured at the currently selected application or attack level to the other existing application or attack profiles. When selecting this button, you are prompted to choose one or multiple client TLS profiles from the current configuration to which the current TLS settings will be applied.
<i>TLSv1.2</i>	<i>Select the check box to enable it.</i> <i>The following options became available:</i>
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	Select the Session Reuse Method from the drop-down list: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>NOTE</b> Session reuse method is available only if TLSv1.2 is selected.</p>
Immediate close	If enabled, the endpoint closes the TCP connection immediately after sending the TLS CLOSE message (i.e., the endpoint does not wait for a confirmation from the other end).
Send close notify	If enabled, it will send a close notify message.
<i>TLSv1.3</i>	<i>Select the check box to enable it.</i> <i>The following options became available:</i>

Parameter	Description
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibility	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	Select the check box to enable it.
Send close notify	If enabled, it will send a close notify message.
<i>SNI Enabled</i>	<i>Select the toggle button to enable the server name indicator. If enabled, the following <b>SNI Settings</b> become available for each server name selected:</i>
Certificate file	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.
Key file	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key file password	Enter your key file password.
DH file Traffic	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.
<i>Certificate file</i>	<i>Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.</i>
<i>Key file</i>	<i>Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.</i>
<i>Key file password</i>	<i>Enter your key file password.</i>
<i>DH file Traffic</i>	<i>Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.</i>

## HTTP Settings

The following UI elements are available on the HTTP Settings tab under the Traffic Profile/Attack Profile Configuration section.

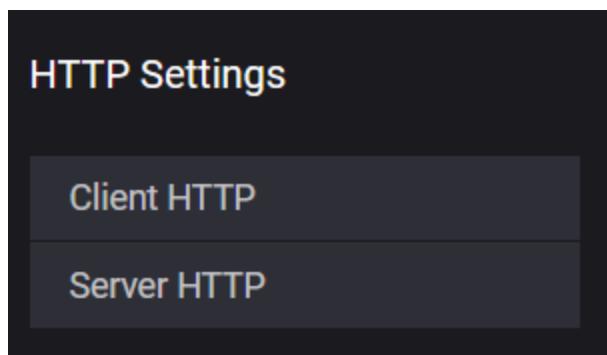

**NOTE**

HTTP settings can be configured both at the traffic profile level for all the available applications or attacks, and at a per-application or per-attack level.

These parameters are configurable for both **Client** and **Server** settings, as presented in the following tables.

### **Client HTTP Settings**

Parameter	Description
<i>Client HTTP Settings</i>	
HTTP profile	Select the client HTTP profile from the available options: <ul style="list-style-type: none"> <li>• <b>Android</b></li> <li>• <b>Chrome</b></li> <li>• <b>Microsoft Edge</b></li> <li>• <b>Firefox</b></li> <li>• <b>Internet Explorer</b></li> <li>• <b>Opera</b></li> <li>• <b>Safari</b></li> <li>• <b>Custom client profile</b></li> </ul>
Max Transactions	The maximum number of application iterations per connection. The default value is <b>1</b> .
HTTP version	Select the version of the HTTP protocol to be used on the client side from the available options: <ul style="list-style-type: none"> <li>• <b>HTTP/1.1 (default option)</b></li> <li>• <b>HTTP/1.0</b></li> <li>• <b>HTTP/2</b></li> </ul>

Parameter	Description
	<p><b>NOTE</b> The HTTP/2 version is supported only for the HTTP App. It is not supported for the other types of applications, nor for attacks.</p> <p>To configure HTTP/2 version for the HTTP App, select the HTTP/2 version at the application profile level (<b>Application Profile Configuration &gt; HTTP Settings &gt; HTTP Version</b>). To run a test with applications that have both HTTP/2 version (for the HTTP App) and HTTP/1.X version enabled (for other applications), make sure the <b>Inherit HTTP</b> option is disabled at the level of the other applications. To disable the <b>Inherit HTTP</b> option at an application level:</p> <ol style="list-style-type: none"> <li>1. Under <b>Application Profile Configuration</b>, select the <b>Applications</b> tab.</li> <li>2. Select the <b>Advanced Settings</b> gear menu (⚙️) for the other application(s) used in the test.</li> <li>3. On the <b>Application Settings</b> page that opens, under the <b>HTTP Settings</b> tab, disable the <b>Inherit HTTP</b> option using the toggle.</li> </ol>
Connection persistence	Configure the connection persistence mode. The available options are: <ul style="list-style-type: none"> <li>• <b>Standard</b> (default option) - This mode inherits the behavior as described by the selected HTTP version standard.</li> <li>• <b>Disabled</b> - This mode forces the connection to close after every HTTP message.</li> <li>• <b>Enabled</b> - This mode enforces connection persistence through explicit keep-alive frames.</li> </ul>
Headers	Add, delete, or customize the headers that the client will send.

## Server HTTP Settings

Parameter	Description
<i>Server HTTP Settings</i>	
HTTP profile	Select the server HTTP profile from the available options: <ul style="list-style-type: none"> <li>• <b>Apache</b> (default option)</li> <li>• <b>IIS</b></li> <li>• <b>nginx</b></li> <li>• <b>Custom server profile</b></li> </ul>
HTTP version	Select the version of the HTTP protocol to be used on the client side from the available options:

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>HTTP/1.1 (default option)</b></li> <li>• <b>HTTP/1.0</b></li> <li>• <b>HTTP/2</b></li> </ul> <p><b>NOTE</b> The HTTP/2 version is supported only for the HTTP App. It is not supported for the other types of applications, nor for attacks.</p> <p>To configure HTTP/2 version for the HTTP App, select the HTTP/2 version at the application profile level (<b>Application Profile Configuration &gt; HTTP Settings &gt; HTTP Version</b>). To run a test with applications that have both HTTP/2 version (for the HTTP App) and HTTP/1.X version enabled (for other applications), make sure the <b>Inherit HTTP</b> option is disabled at the level of the other applications. To disable the <b>Inherit HTTP</b> option at an application level:</p> <ol style="list-style-type: none"> <li>1. Under <b>Application Profile Configuration</b>, select the <b>Applications</b> tab.</li> <li>2. Select the <b>Advanced Settings</b> gear menu (⚙️) for the other application(s) used in the test.</li> <li>3. On the <b>Application Settings</b> page that opens, under the <b>HTTP Settings</b> tab, disable the <b>Inherit HTTP</b> option using the toggle.</li> </ol>
Connection persistence	Configure the connection persistence mode. The available options are: <ul style="list-style-type: none"> <li>• <b>Standard</b> (default option) - This mode inherits the behavior as described by the selected HTTP version standard.</li> <li>• <b>Disabled</b> - This mode forces the connection to close after every HTTP message.</li> <li>• <b>Enabled</b> - This mode enforces connection persistence through explicit keep-alive frames.</li> </ul>
Additional headers	Configure other headers that will be sent alongside the application specific headers.
Use application server headers	This option is enabled by default. When enabled, all the servers to which the current profile applies will use their specific headers from the ATI definition. When disabled, the servers will use the list of headers specified in the <b>Headers</b> parameter.
Headers	Add, delete, or customize the headers that the server will send. This section appears only if <b>Use application server headers</b> is <b>disabled</b> .

## AMF configuration settings



Access and Mobility Management Function (AMF) is one of the fundamental components of the 5G core architecture. It provides UE-based authentication, authorization, and mobility management services. Some of the key AMF services include registration, connection, reachability, and mobility management. It also serves as termination points for RAN control-plane interface. It also supports transport of session management messages between UE and SMF.

AMF interacts with the RAN over the N2 reference point and makes its services available to other network functions through the Namf service-based interface.

The configuration settings are described in the topics listed below.

### Topics:

<b>AMF Ranges panel</b> .....	<b>237</b>
<b>AMF Range settings</b> .....	<b>238</b>
<b>AMF node settings</b> .....	<b>239</b>
<b>AMF N2 interface settings</b> .....	<b>242</b>
<b>AMF Namf interface settings</b> .....	<b>243</b>
<b>AMF N26 Interface Settings</b> .....	<b>244</b>
<b>AMF remote SBA nodes</b> .....	<b>246</b>


## AMF Ranges panel

The **AMF Ranges** panel opens when you select the AMF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new AMF range to your test configuration.
- Open an AMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

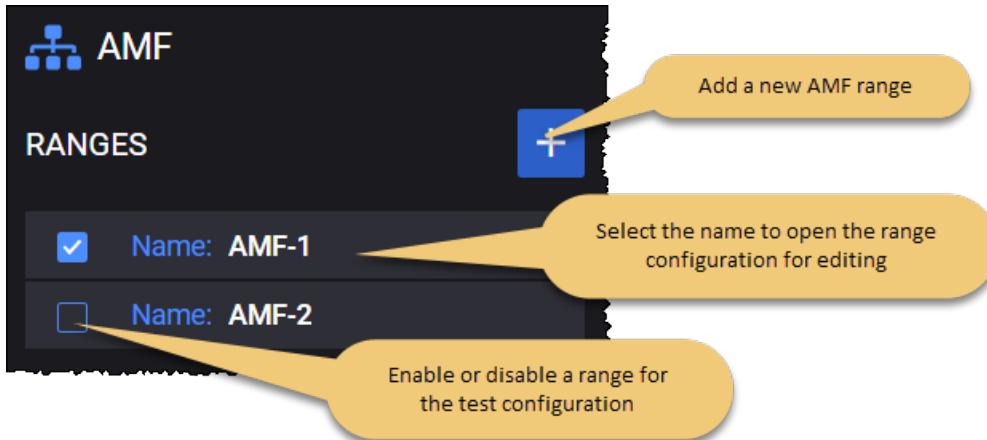

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **All Ranges on All Agents** - This setting will configure all AMF ranges on all agent. It will increment IP addresses, AMF pointer, NF ID, etc. for each agent.

## AMF Range settings

You add and select AMF ranges from the AMF Ranges panel. When you select the name of an AMF, LoadCore opens the **Range** panel, from which you can:

- Delete the AMF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the AMF range.

### AMF range controls and settings

Each AMF range is identified by a unique name. You can add and delete AMF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each AMF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your AMF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the AMF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each AMF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">AMF node settings</a> .
N2 Interface Settings	Each AMF range requires the configuration of N2 interface settings, through which a AMF instance interacts with RAN in a 5G network. These settings are described in <a href="#">AMF N2 interface settings</a> .
Namf Interface Settings	Each AMF range requires the configuration of Namf interface settings, through which a AMF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">AMF Namf interface settings</a> .
N26 Interface Settings	In a 5G network, N26 is the interface between the MME and the AMF. These settings are described in <a href="#">AMF N26 Interface Settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">AMF remote SBA nodes</a> .

## AMF node settings

Each AMF range includes a set of Node Settings.

### Node Settings

Each AMF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	<p>Multiple AMF instances may be deployed in the 5G network.</p> <p>Each AMF instance is uniquely identified by an <i>Instance ID</i>. You can accept the value provided by LoadCore or overwrite it with your own value.</p>
Name	The name uniquely identifies each AMF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	<p>The PLMN MCC for this AMF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this AMF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Region ID	<p>An AMF Region consists of one or multiple AMF Sets.</p> <p>The AMF Region ID to use for this simulated AMF node. This ID identifies the region in which the node resides. The AMF Region ID addresses the case that there are more AMFs in the network than the number of AMFs that can be supported by AMF Set ID and AMF Pointer. It allows operators to re-use the same AMF Set IDs and AMF Pointers in different regions.</p>
Set ID	<p>An AMF Set consists of some AMFs that serve a given area and Network Slice. Multiple AMF Sets may be defined per AMF Region and Network Slice(s).</p> <p>The AMF Set ID to use for this simulated AMF node. The Set ID uniquely</p>

<b>Setting</b>	<b>Description</b>
	identifies the AMF Set within the AMF Region.
Pointer	The AMF Pointer to use for this simulated AMF node. The AMF Pointer identifies one or more AMFs within the AMF Set.
Relative Capacity	Set the relative capacity value.
Ciphering Algorithm	Allows to select the supported 5G ciphering algorithm: <ul style="list-style-type: none"> <li>• NEA0 - Null ciphering algorithm</li> <li>• NEA1 - 128-bit SNOW 3G based algorithm</li> <li>• NEA2 - 128-bit AES based algorithm</li> </ul>
Integrity Algorithm	Allows to select the supported 5G integrity protection algorithm: <ul style="list-style-type: none"> <li>• NIA0 - Null Integrity Protection algorithm</li> <li>• NIA1 - 128-bit SNOW 3G based algorithm</li> <li>• NIA2 - 128-bit AES based algorithm</li> </ul>
HTTP Connections	The number of HTTP connections between two nodes.
Request N2 SM Information	Enable this option to request N2 SM Information again instead of using the existing one.
Establish UE Policy Association	Enable this option to trigger Establishment of UE Policy Association to PCF. <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid #ccc; padding: 2px 10px; margin-right: 10px;">NOTE</div> <div>UE Policy Association is not supported in tests configured with Idle or Handover objectives.</div> </div> <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid #ccc; padding: 2px 10px; margin-right: 10px;">NOTE</div> <div>Establish UE Policy Association is supported only when Technical Spec Version is R16 or higher.</div> </div>
Prefer AMF Change	Enable this option to change the AMF for an N2 handover even when the target RAN(T-RAN) is connected to the serving AMF.
Roaming Type	Select the roaming type option from the drop-down list: <b>None</b> or <b>Home-Routed</b> . Default value: <b>None</b> .
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
Cache NRF Response	<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid #ccc; padding: 2px 10px; margin-right: 10px;"><b>IMPORTANT</b></div> <div>This option appears only if the NRF node is enabled and the <b>Peer NRF</b> value under <a href="#">Remote SBA Nodes &gt; NRF Connections Settings</a> is set.</div> </div> <p>Select from the drop-down for how long to save/remember the peer SBA nodes that are discovered via NRF:</p> <ul style="list-style-type: none"> <li>• <b>Cache Permanently</b> (default)</li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li><b>Don't Cache Responses</b></li> </ul>
<i>T3512: Select the check-box to open T3512 Settings and configure the T3512 timer.</i>	
NOTE	If disabled, a value of 50 minutes (Value 5 X Unit 10 minutes) is sent for T3512.
Value	Set the value for this parameter. The accepted values are between 0-31.
Unit	Select the unit size for this parameter from the drop-down list. The available options are: 2s, 30s, 1m, 10m, 1h, 10h and Deactivated.
NSSAI	<i>These settings are described <a href="#">below</a>.</i>
TAI	<i>These settings are described <a href="#">below</a>.</i>

## NSSAI

The following table describes the configuration settings that are required for NSSAI.

Setting	Description												
<i>NSSAI:</i>													
	Select the Add NSSAI button to add a new NSSAI to your test configuration.												
<i>NSSAI settings:</i>													
	Select the Delete NSSAI button to delete this NSSAI from your test configuration.												
SST	<p>The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th>SST</th> <th>Value</th> <th>Suitable for handling:</th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> <td>5G enhanced Mobile Broadband</td> </tr> <tr> <td>URLCC</td> <td>2</td> <td>ultra-reliable low-latency communications</td> </tr> <tr> <td>MIoT</td> <td>3</td> <td>massive IoT</td> </tr> </tbody> </table>	SST	Value	Suitable for handling:	eMBB	1	5G enhanced Mobile Broadband	URLCC	2	ultra-reliable low-latency communications	MIoT	3	massive IoT
SST	Value	Suitable for handling:											
eMBB	1	5G enhanced Mobile Broadband											
URLCC	2	ultra-reliable low-latency communications											
MIoT	3	massive IoT											
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.												

## TAI

The following table describes the configuration settings that are required for TAI.

<b>Setting</b>	<b>Description</b>
<i>TAI:</i>	
	Select the Add TAI button to add a new TAI (Tracking Area Identity) to your test configuration.
<i>TAI settings:</i>	
	Select the Delete TAI button to delete this TAI from your test configuration.
PLMN ID: Set the values for the PLMN identifier.	
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the TAI.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the TAI.
<i>TAC:</i>	
	Select the Add TAC button to add a new TAC (Tracking Area Code) to your test configuration.
<i>Settings:</i>	
	Select the Delete TAC button to delete this TAC from your test configuration.
TAC	The Tracking Area Code (TAC) used in the construction of the TAI.

## AMF N2 interface settings

N2 is the service-based interface through which a AMF instance interacts with RAN in a 5G network.

The following **Connectivity Settings** enable the necessary N2 connectivity and service interaction.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>

<b>Connectivity Settings</b>	<b>Description</b>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## AMF Namf interface settings

Namf is the service-based interface through which a AMF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Namf connectivity and service interaction.


<b>Connectivity Settings</b>	<b>Description</b>
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost

<b>Connectivity Settings</b>	<b>Description</b>
	bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
mTLS Server Settings	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## AMF N26 Interface Settings

In a 5G network, N26 is the interface between the MME and the AMF. It supports interworking requirements between the EPC and the NG core.

You can enable or disable the N26 interface, as required by your test configuration. For example:



## N26 Interface Settings

Setting	Description
Peer MME	Select the peer MME with which this AMF range will communicate over the N26 interface. All of the MME node ranges that you have enabled in the test are available for selection.
GTP-C UDP port	The UDP port to use for GTP-C messages. The default port is 2123, but you can use a different port.
GTP-C Destination UDP Port	Specify the UDP port that will be used for GTP-C message transmission. Value should be in range of 1024 to 65535.

## Connectivity Settings

The following **Connectivity Settings** enable the necessary N26 connectivity between the AMF and the MME.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## AMF remote SBA nodes

### AMF Connection Settings

N14 is the service-based interface through which an AMF instance interacts with another AMF instance in a 5G network, as described in TS 29518.

The N14 interface exposes the following messages associated to the N2 Handover with AMF change procedure:

- Namf\_Communication\_CreateUEContext Request / Namf\_Communication\_CreateUEContext Response
- Namf\_Communication\_N2InfoNotify / Namf\_Communication\_N2InfoNotify Ack

Currently, the N14 communication is supported only between two AMFs. Each of the configured AMF ranges has an implicit and unexposed count of 1 (this behavior is inherited).

One of the configured AMFs is emulated and the second AMF is configured as DUT (their order in the configuration is irrelevant).

AMFs have the possibility to configure a Peer AMF by selecting an option for the Peer AMF Type field:

- **None** - no N14 interface between AMFs (this is the default option)
- **Preset** - this option allows manually configuration of a peer AMF.

**IMPORTANT** If this option is selected, you can add **ONLY** one peer AMF.

This option requires the configuration of the peer AMF, as follows:

Setting	Description
<i>AMF Peers:</i>	
	Select this button to add the peer AMF to your test configuration.
<i>AMF Peer:</i>	
	Select this button to delete the peer AMF from your test configuration.
Peer AMF	Select the peer AMF from the drop-down list.
Protocol	The protocol to use for Namf communications. It can be either HTTP or HTTPS.
Port	The AMF port number to use for Namf communications. The default is port 80, but you can choose a different port number.

- **Discover** - this option relies on the NRF to assign the correct Peer AMF during the handover procedure. For this, AMFs must first register to the NRF using their [NSSAIs](#) and [TAIs](#).

**NOTE** For legacy configurations, the NSSAI and TAI will be empty lists. In N14 tests, NSSAI and TAI configuration is mandatory. In order to have successful UE registrations, make sure the NSSAIs configured on the UE and AMF match.

**IMPORTANT** The DUT AMF must have the correct GUAMI value configured (it should match the one configured on the actual AMF DUT). Otherwise, the N14 connection will not be established.

## AUSF Connection Settings

To connect to the AUSF node, the following configuration settings are required.

Setting	Description
<i>AUSF Connectivity Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer AUSF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer AUSF	Select the peer AUSF using either of the following methods: <ul style="list-style-type: none"> <li>Select the IP address of the AUSF node. This is the destination address of the AUSF node to which the packets are sent over the Nausf interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service. Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</li> </ul>
Protocol	The protocol to use for Nausf communications. It can be either HTTP or HTTPS.
Port	The AUSF port number to use for Nausf communications. The default is port 80, but you can choose a different port number.
Indirect Communication without Delegated Discovery	<b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings. Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a> .
Indirect Communication with Delegated Discovery	<b>IMPORTANT</b> This option is visible only when Peer AUSF is set to <b>Discover</b> and SCP is selected in SCP Connection Settings. Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a> .

## UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

Setting	Description
<i>UDM Connectivity Settings:</i>	
Use SBI Fuzzing	<p>Use the toggle button to enable this option.</p> <p>When enabled, the <i>Peer UDM</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.</p>
SBI Fuzzer	Select the node from the drop-down list.
Peer UDM	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>Select the IP address of the UDM node. This is the destination address of the UDM node to which the packets are sent over the Nudm interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Protocol	The protocol to use for Nudm communications. It can be either HTTP or HTTPS.
Port	The UDM port number to use for Nudm communications. The default is port 80, but you can choose a different port number.
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a>.</p>
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer UDM is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a>.</p>

## PCF Connection Settings

To connect to the PCF node, the following configuration settings are required.

Setting	Description
<i>PCF Connectivity Settings:</i>	
Use SBI Fuzzing	<p>Use the toggle button to enable this option.</p> <p>When enabled, the <i>Peer PCF</i> drop-down is hidden and a new drop-down called <i>SBI</i></p>

Setting	Description
	<i>Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer PCF	<p>Select the peer PCF using either of the following methods:</p> <ul style="list-style-type: none"> <li>Select the IP address of the PCF node. This is the destination address of the PCF node to which the packets are sent over the NPCf interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Protocol	The protocol to use for Npcf communications. It can be either HTTP or HTTPS.
Port	The PCF port number to use for Npcf communications. The default is port 80, but you can choose a different port number.

## SMF Connection Settings

To connect to the SMF node, the following configuration settings are required.

Setting	Description
<i>SMF Connectivity Settings:</i>	
Use SBI Fuzzing	<p>Use the toggle button to enable this option.</p> <p>When enabled, the <i>Peer SMF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.</p>
SBI Fuzzer	Select the node from the drop-down list.
Peer SMF	<p>Select the peer SMF using either of the following methods:</p> <ul style="list-style-type: none"> <li>Select the IP address of the SMF node. This is the destination address of the SMF node to which the packets are sent over the Nsmf interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Protocol	The protocol to use for Nsmf communications. It can be either HTTP or HTTPS.
Port	The SMF port number to use for Nsmf communications. The default is port 80, but you can choose a different port number.
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect</a></p>

Setting	Description
	<a href="#"><u>Communication without Delegated Discovery.</u></a>
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer SMF is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#"><u>Indirect Communication with Delegated Discovery.</u></a></p>

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.

Setting	Description
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

For several SBA nodes, if SCP is selected in SCP Connection Settings, new options will be available:

- **Indirect Communication without Delegated Discovery** or
- **Indirect Communication with Delegated Discovery**

If Indirect Communication with or without Delegated Discovery option is enabled for one or more nodes from Remote SBA Nodes, then only the messages for the interface on which this option is enabled will be forwarded to the SCP. In the case of Indirect Communication with Delegated Discovery, SCP will also perform delegated discovery.

## SEPP Connection Settings

To connect to the Security Edge Protection Proxy (SEPP) node, the following configuration settings are required.

Setting	Description
<i>SEPP Connection Settings:</i>	
Peer SEPP	Select either the IP address of a SCP node from your test network or <i>None</i> if you are not using one in your test configuration.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.
Sepp Communication Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Telescopic FQDN</b></li> <li>• <b>Target API Root</b></li> </ul>

## Home PLMN for Inter-PLMN Routing

The following configuration settings are required.

PLMN MCC	<p>Provide the PLMN MCC value.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the</p>
----------	---

	country of domicile of the mobile subscriber.
PLMN MNC	<p>Provide the PLMN MNC value.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>

# AUSF configuration settings



Authentication Server Function (AUSF) is the 5G core network service that handles authentication requests for 3GPP access and non-3GPP access networks. The AUSF serves as the termination point of user plane (UP) security, while providing the necessary authentication and authorization processes. It makes its services available to other network functions through the Nausf service-based interface. Multiple instances of AUSF may be deployed, with each instance storing specific data.

The configuration settings are described in the topics listed below.

## Topics:

<b>AUSF Ranges panel</b> .....	<b>254</b>
<b>AUSF Range panel</b> .....	<b>254</b>
<b>AUSF node settings</b> .....	<b>255</b>
<b>AUSF Nausf interface settings</b> .....	<b>256</b>
<b>AUSF Remote SBA Nodes</b> .....	<b>258</b>


## AUSF Ranges panel

The **AUSF Ranges** panel opens when you select the AUSF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new AUSF range to your test configuration.
- Open a AUSF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

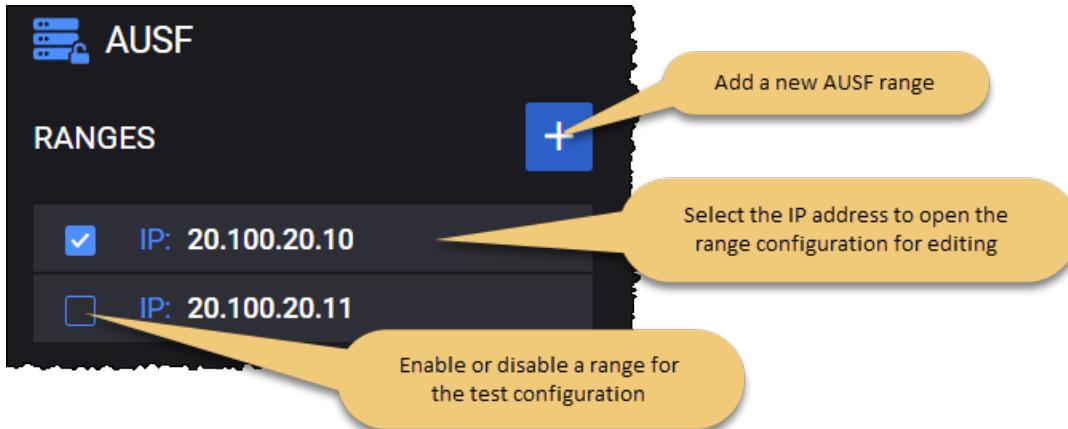

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT** Only one AUSF range can be configured on one agent:

- in case of multiple ranges, it will require one agent for each range;
- in case one range and multiple agents, each agent will create a different AUSF NF, with incremented IP address and NF ID, and whole UE range.

## AUSF Range panel

You add and select AUSF ranges from the AUSF Ranges panel. When you select the IP address of an AUSF , LoadCore opens the **Range** panel, from which you can:

- Delete the AUSF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the AUSF range.

## AUSF range controls and settings

Each AUSF range is identified by a unique IP address. You can add and delete AUSF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each AUSF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your AUSF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the AUSF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each AUSF range includes the configuration of an associated set of Node Settings, which are described in <a href="#">AUSF node settings</a> .
Nausf Interface Settings	Each AUSF range requires the configuration of Nausf interface settings, through which a AUSF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">AUSF Nausf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">AUSF remote SBA nodes</a> .

## AUSF node settings

Each AUSF range includes a set of Node Settings plus one or more associated Routing Indicators.

### Node Settings

Each AUSF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	The Instance ID uniquely identifies each AUSF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	<p>Set the mobile country code.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>Set the mobile network code.</p> <p><b>About PLMN MNC ...</b></p>

Setting	Description
	The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## Routing Indicators

The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.

You can add as many Routing Indicators as necessary to support your test objectives.

Setting	Description
	Select the <b>Add Routing Indicator</b> button to add a routing indicator for the AUSF range.
	Select the <b>Delete</b> button to remove the routing indicator from the AUSF range.

## AUSF Nausf interface settings

Nausf is the service-based interface through which a AUSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nausf connectivity and service interaction.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).

<b>Connectivity Settings</b>	<b>Description</b>
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
<i>mTLS Server Settings</i>	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
<i>mTLS Client Settings</i>	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>

<b>Connectivity Settings</b>	<b>Description</b>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## AUSF Remote SBA Nodes

### UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>UDM Connectivity Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer UDM</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer UDM	Select the peer UDM using either of the following methods: <ul style="list-style-type: none"> <li>Select the IP address of the UDM node. This is the destination address of the UDM node to which the packets are sent over the Nudm interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service. Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</li> </ul>
Protocol	The protocol to use for Nudm communications. It can be either HTTP or HTTPS.
Port	The UDM port number to use for Nudm communications. The default is port 80, but you can choose a different port number.
Indirect Communication without Delegated Discovery	<b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings. Select the option to enable it.
Indirect Communication with Delegated Discovery	<b>IMPORTANT</b> This option is visible only when Peer UDM is set to <b>Discover</b> and SCP is selected in SCP Connection Settings. Select the option to enable it.

**NOTE**

If Indirect Communication with or without Delegated Discovery option is enabled for one or more nodes from Remote SBA Nodes, then only the messages for the interface on which this option is enabled will be forwarded to the SCP. In the case of Indirect Communication with Delegated Discovery, SCP will also perform delegated discovery.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

## CHF configuration settings



The Charging Function (CHF) allows charging services to be offered to authorized network functions. Policy and Charging Control plays a very critical role in the 5G ecosystem. It provides control and transparency over the consumption of Network resources during real-time service delivery.

LoadCore charging supports the collection and reporting of charging information for network resource usage using the CHF (Charging Function) node. The CHF enables charging services to be offered to authorized network functions (NFs).

LoadCore supports the Spending Limit Control Service functionality. The service enables the NF service consumer to retrieve policy counter status information—per UE—from the CHF by subscribing to spending limit reporting (that is, notifications of policy counter status changes). The following operations are supported by the service:

- **Subscribe:** This service operation is used by an NF service consumer to subscribe to notification of changes in the status of the policy counters available and retrieval of the status of the policy counters for which subscription is accepted.
- **Unsubscribe:** This service operation is used by an NF service consumer to send a request to the CHF to unsubscribe from notification of changes in the status of all policy counters.
- **Notify:** This service operation is used by the CHF in any of the following ways:
  - To notify the NF service consumers about the change of the status of the subscribed policy counters.
  - To provide one or more pending statuses for a subscribed policy counter, together with the time they shall be applied.
  - To send a notification to the NF service consumer requesting the termination of the subscription of status changes for all policy counters for a subscriber (for example: the subscriber is removed from the CHF system).

Converged Charging is a process where online and offline charging are combined. The charging information is utilized by CCS(Converged Charging System) in one converged charging service which offers charging with and without quota management, as well as charging information record generation.

### Topics:

<b>CHF Ranges panel</b>	<b>260</b>
<b>CHF Range settings</b>	<b>261</b>
<b>CHF node settings</b>	<b>262</b>
<b>CHF Nchf interface settings</b>	<b>263</b>
<b>CHF remote SBA nodes</b>	<b>263</b>


### CHF Ranges panel

The **CHF Ranges** panel opens when you select the CHF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new CHF range to your test configuration.
- Open an CHF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

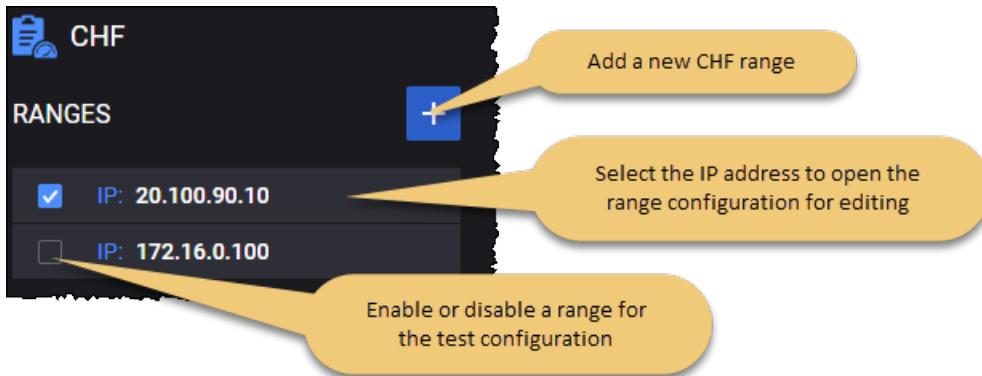

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT** Only one CHF range can be configured on one agent:

- in case of multiple ranges, it will require one agent for each range;
- in case one range and multiple agents, each agent will create a different CHF NF, with incremented IP address and NF ID, and whole UE range.

## CHF Range settings

You add and select CHF ranges from the CHF Ranges panel. When you select the IP address of CHF NRF range, LoadCore opens the **Range** panel, from which you can:

- Delete the CHF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the CHF range.

### CHF range controls and settings

Each CHF range is identified by a unique IP address. You can add and delete CHF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each CHF range.

Setting	Description
Range:	

Setting	Description
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your CHF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the CHF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each CHF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">CHF node settings</a> .
Nchf Interface Settings	Each CHF range requires the configuration of Nchf interface settings, through which a CHF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">CHF Nchf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">CHF remote SBA nodes</a> .

## CHF node settings

Each CHF range includes a set of Node Settings.

### Node Settings

Each CHF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple CHF instances may be deployed in the 5G network. Each CHF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## CHF Nchf interface settings

Nchf is the service-based interface through which a CHF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nchf connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## CHF remote SBA nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option.

<b>Setting</b>	<b>Description</b>
	When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

### SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

# DN configuration settings



Data Networks (DN) represents one of the entities in the 5G core network architecture. DN interfaces with UPF over the N6 reference point, enabling access to the public Internet, operator services, and other external data networks.

The configuration settings are described in the topics listed below.

## Topics:


<b>DN Ranges panel</b>	<b>266</b>
<b>DN Range panel</b>	<b>266</b>
<b>DN N6 interface settings</b>	<b>267</b>
<b>DN routes settings</b>	<b>268</b>
<b>DN User Plane</b>	<b>269</b>
DN Stateless UDP Traffic	270
DN Data Traffic	272
DN Voice Traffic	274
DN Video OTT Traffic	285
DN DNS Server Traffic	288
DN Predefined Applications Traffic	291
DN Capture Replay	291
DN Synthetic	293
DN UDG	295
<b>DN Throttling settings</b>	<b>297</b>

## DN Ranges panel

The **DN Ranges** panel opens when you select the DN node from the network topology window. You can perform the following tasks from this panel:

- Add a new DN range to your test configuration.
- Open a DN range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

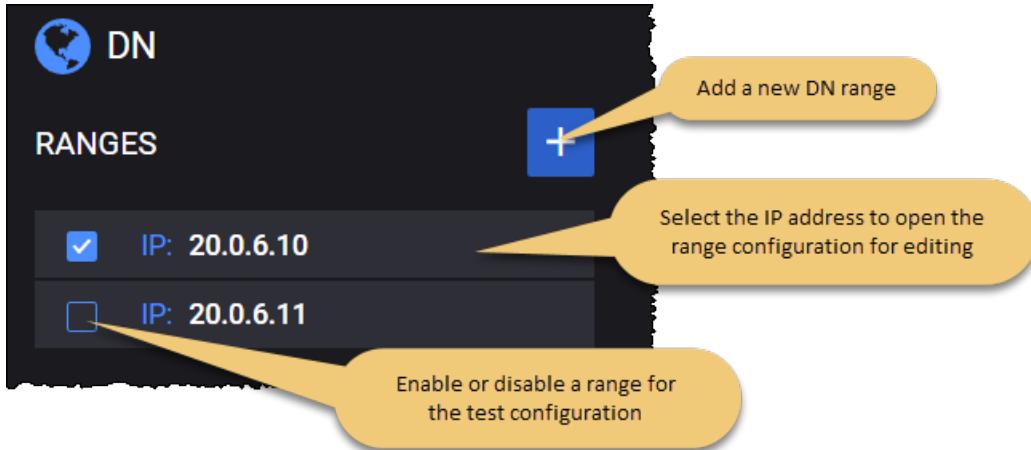

If multiple agents are assigned to the DN node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents**

## DN Range panel

You add and select DN ranges from the DN Ranges panel. When you select a DN's IP address from the **UDR Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the DN range from the test configuration.
- Select **Range Settings** to configure the node and connectivity settings for the DN range.
- Select **Routes Settings** to configure the route to an UE or custom range.
- Select **User Plane** to configure the traffic generators.

## DN range controls and settings

Each DN range is identified by a unique IP address. You can add and delete DN ranges as necessary to support your test objectives. For example, a test may require a range of UEs to concurrently access multiple data networks (for example, local and central DNs) using a single or multiple PDN sessions. In this case, you would create one DN range for each of those data networks.

The following table describes the available **Range** configuration options for each DN range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	The number of DNs in the DN range.
<i>Range Settings:</i>	
N6 Interface Settings	Each DN range requires the configuration of N6 interface settings, through which a DN instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">DN N6 interface settings</a> .
Routes Settings	These settings are described in <a href="#">DN routes settings</a> .
User Plane	These settings are described in <a href="#">DN User Plane</a> .
Throttling Settings	These settings are described in <a href="#">DN Throttling settings</a> .

## DN N6 interface settings

N6 is the interface between the Data Network (DN) and the UPF.

The following table describes the **Connectivity Settings** that you configure for each DN range.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP

<b>Connectivity Settings</b>	<b>Description</b>
	segment that the IP device can transmit as a single, unfragmented unit.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier..
VLAN TPID	VLAN tag protocol ID.

## DN routes settings

**IMPORTANT** This configuration set appears only if an agent is assigned to the DN node (if possible).


The following table describes the **Route Settings** that you need to configure in order to create the route to an UE or custom range.

<b>Settings</b>	<b>Description</b>
<i>Routes Config:</i>	
	Select this button to add a new route to a specific UE range or a custom one.
<i>UE Routes Config:</i>	
	Select this button to remove the route.
Route Type	Select the route type from the drop-down list. Available options: <b>UE</b> or <b>Custom</b> .
UE Range MSIN	Select the MSIN of the UE range from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .

Settings	Description
Peer UPF	Select the UPF node connected to DN over the N6 interface from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Gateway Address	The IP address assigned as gateway address.
DNN(s)	Select the DNNs from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> This parameter is available only when the route type is set to <b>UE</b> .
Destination Subnet Address	Set the destination subnet address. This parameter is available only when the route type is set to <b>Custom</b> .
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address. This parameter is available only when the route type is set to <b>Custom</b> .

## DN User Plane

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

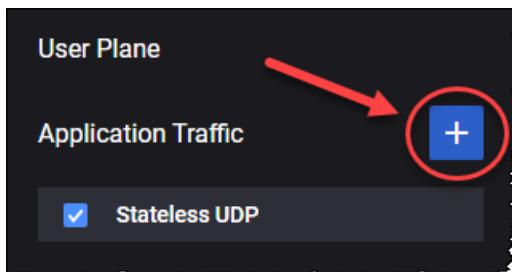

**NOTE**

Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN. For the UE User Plane settings, refer to [UE User Plane](#).

Parameter	Description
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"> <li>• <b>Stateless UDP</b></li> <li>• <b>Data</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>Voice</b></li> <li>• <b>Video OTT</b></li> <li>• <b>DNS Server</b></li> <li>• <b>Predefined Applications</b></li> <li>• <b>Synthetic</b></li> <li>• <b>UDG</b></li> </ul>
	Select this button to remove the application traffic objective from your test configuration.
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">DN Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">DN Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">DN Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">DN Video OTT Traffic</a> .
DNS Server	For the settings required to configure the DNS Server objective, refer to <a href="#">DN DNS Client Traffic</a> .
Predefined Applications	For the settings required to configure the Predefined Applications objective, refer to <a href="#">DN Predefined Applications Traffic</a> .
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#">DN Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">DN UDG Traffic</a> .

## DN Stateless UDP Traffic

Use the **Stateless UDP** generator if you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings for the dowlink traffic are described below.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>dowlink</b> and can not be modified since on the DN you can only

Parameter	Description
	configure the downlink flow.
Packet Rate	The rate at which the test generates downlink packets, measured in packets per second (pps).
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.
Destination UE Range	Select the destination UE range from the drop-down list.
DNN	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## DN Data Traffic

The following table describes the DN Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Application Servers	<p>Each Application Traffic entry requires an application server definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>• To select an existing application server definition, click its name to open the Server panel where you can view and modify the server settings.</li> <li>• To add another application server, click the <b>Add Server</b> button. LoadCore will open the Server panel where you will select the server type and configure the server settings.</li> </ul> <p>Refer to <a href="#">Server</a> (below) for a description of the configuration settings required by the application server.</p> <p>Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Server

You can add and delete application servers as needed to meet your test objectives. The **Server** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Server</b> button to remove the application server from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> , <b>TLS</b> , <b>QUIC</b> or <b>UDP</b> .
Type	Select the L4/L7 protocol type from the list of pre-defined application servers. The available types include: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get Responder</b>, <b>HTTP Put Responder</b>, <b>HTTP Post Responder</b>, <b>HTTP Server</b> and <b>FTP Responder</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get Responder</b>, <b>HTTPS Put Responder</b>, <b>HTTPS Post Responder</b> and <b>HTTPS Server</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Server</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional Responder</b>.</li> </ul>
Port	The port used by the application server.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server. <div style="margin-left: 20px;"> <b>NOTE</b> Setting the page size on DN side will only influence GET objectives, like HTTP GET, HTTPs GET and FTP. To set the page size for PUT objectives, the change must be operated on UE side.           </div>
QoS FlowID	Select a QoS Flow ID for this application server.
Client Tx Count	This parameter is available only when the application server type is set to UDP Bidirectional.
Server Tx Count	This parameter is available only when the application server type is set to UDP Bidirectional.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

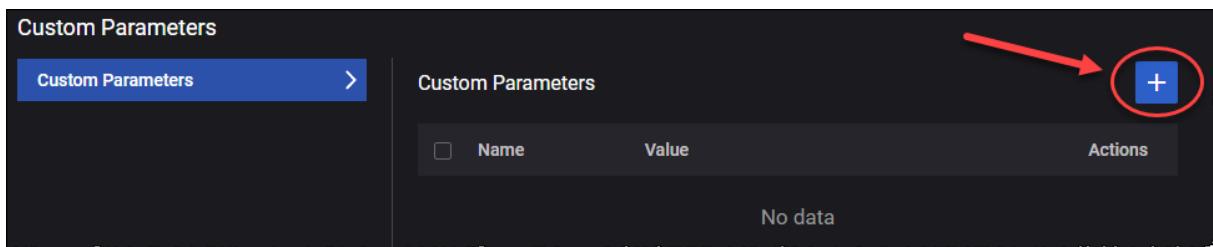

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

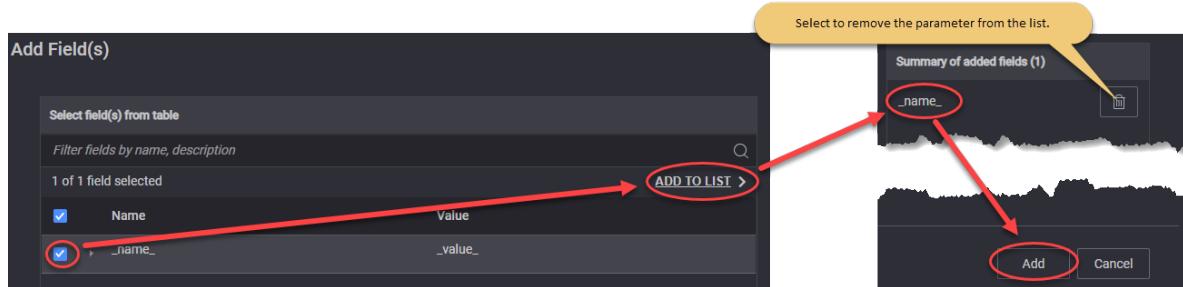

## DN Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Call Type	Select the type of call from the drop-down list.
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
Sip Settings:	

Parameter	Description
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPSEC	Select this option to enable IPSEC.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Media Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select the check box in order to enable this option.
Audio settings:	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
Video Settings:	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
MSRP Settings:	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
Advanced Media Settings:	
Custom SDP	<i>Select this panel to open the custom SDP settings.</i>
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>NB Codecs IPv6</b></li> <li><b>AMR-WB IPv6</b></li> <li><b>Multimedia IPv4</b></li> </ul>
<i>QoE Settings</i>	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.

## Audio Settings

The parameters required for media settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
QoS Flow ID for Video	Select the QoS flow used for audio from the drop-down list.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <ul style="list-style-type: none"> <li><b>AMR</b> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>AMR-WB</b> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <b>EVS</b> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <b>PCMU</b></li> <li>• <b>PCMA</b></li> <li>• <b>iLBC</b></li> <li>• <b>G722</b></li> <li>• <b>G723</b></li> <li>• <b>G729</b></li> </ul> <p>The parameters of each audio codec are presented below.</p>

### AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li>• <b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li>• <b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

### EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	The following options are available: <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

### PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

### Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
QoS Flow ID for Voice	Select the QoS Flows ID(s) from the drop-down list.
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.

Parameter	Description
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
QoS Flow ID for MSRP	Select the QoS Flows ID(s) from the drop-down list.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)


### SIP Custom Headers

From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE** The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:

- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

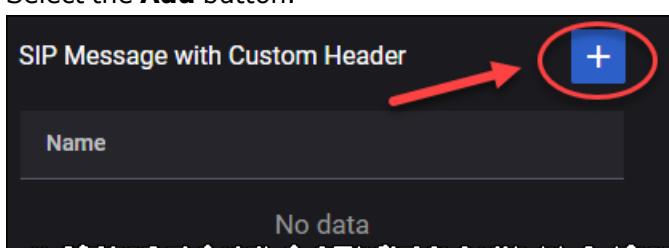

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**



The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nexnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associate-d-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmTEL
Priority	IETF RFC 3261	emergency

Parameter	Description	Value
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com",qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque="",stale=FALSE, algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice",realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>, <sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2

Parameter	Description	Value
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>AKAv2</b></li> <li><b>ProxyDefined</b></li> </ul>
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPc	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc	The Opc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc Increment	The number used to increment the Opc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same Opc value.

## DN Video OTT Traffic

The following table describes the Video OTT Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>

Parameter	Description
<i>OTT Servers:</i>	
	Select this button to add an OTT server to your test configuration.
	Select this button to remove the OTT server from the test configuration.
Server Name	Set the server name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Streams	Refer to <a href="#">Streams</a> (below) for descriptions of the OTT server streams settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Streams

To open the OTT Server Streams panel, select the **Open Streams** button.



The OTT Server Streams parameters are described in the following table.

Parameter	Description
	Select this button to add a stream to your test configuration.
	Select this button to remove the stream from the test configuration.
Stream Name	Set the stream name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
URL	Set the URL path.
Type	Select the stream type from the drop-down list:

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>Real</b></li> <li>• <b>Synthetic</b></li> </ul>
Protocol	<p>Select the protocol from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Apple HLS</b></li> <li>• <b>DASH</b>.</li> </ul> <p>If the stream type is set to <b>Synthetic</b>, you can choose one protocol from list. If the stream type is set to <b>Real</b>, you will see the protocol of real stream loaded.</p>
Stream Duration	<p>If the stream type is set to <b>Synthetic</b>, you can configure the stream duration in seconds.</p> <p>If the stream type is set to <b>Real</b>, you will see the real stream duration.</p>
Segment Duration	<p>If the stream type is set to <b>Synthetic</b>, you can configure the segment duration in seconds.</p> <p>If the stream type is set to <b>Real</b>, you will see the real segment duration.</p>
Quality Levels:	<i>Set the quality value for each level.</i>
	Select this button to add a quality level to your test configuration.
	Select this button to remove the quality level from the test configuration.
Bitrate (kbps)	Set the value of the bitrate.
Resolution	Select the resolution from the drop-down list. Available options: <b>QCIF, 240p, nHD, 480, WXGA, FHD, QHD, 4K, 8K</b> .
Frames per second	Set the number of frames per second.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

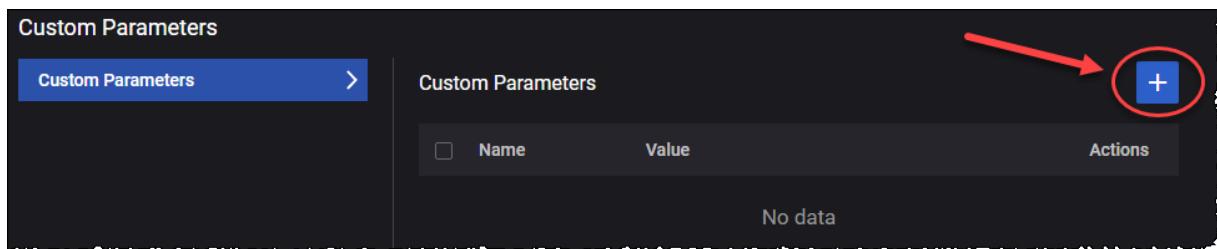

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

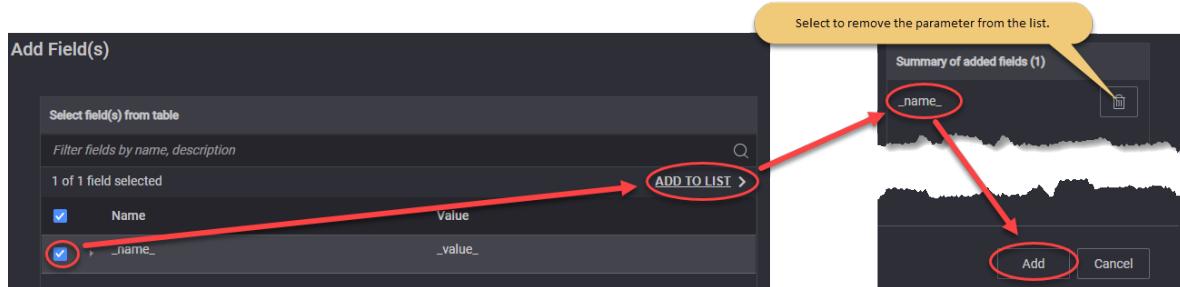

## DN DNS Server Traffic

The following table describes the DNS Server Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Server</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>DNS Servers:</i>	
<b>+</b>	Select this button to add an DNS server to your test configuration.

Parameter	Description
	Select this button to remove the DNS server from the test configuration.
Type	Select the type from the available options.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Zone Manager	<i>Refer to <a href="#">Zone Manager</a> (below) for descriptions of the DNS server zones settings.</i>
Custom Parameters	<i>You can add <a href="#">custom parameters</a>, based on your test configuration requirements.</i>

## Zone Manager

To open the DNS Server Zones panel, select the **Open Zones** button.



The DNS Server Zones parameters are described in the following table.

Parameter	Description
	Select this button to add a zone to your test configuration.
	Select this button to remove the zone from the test configuration.
Zone Name	Set the zone name. Each zone is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Master Server	Provide the value for the master server.
Resource Records (RRs)	
	Select this button to add a resource record to your test configuration.
	Select this button to remove the resource record from the test configuration.
Type	Select the type from the drop-down list. The available options are:
	<ul style="list-style-type: none"> <li>• A</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Hostname	Set the hostname.
Address	Provide the address.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

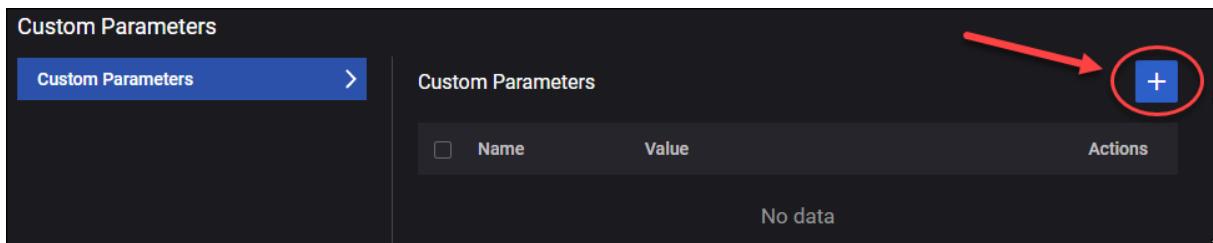

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

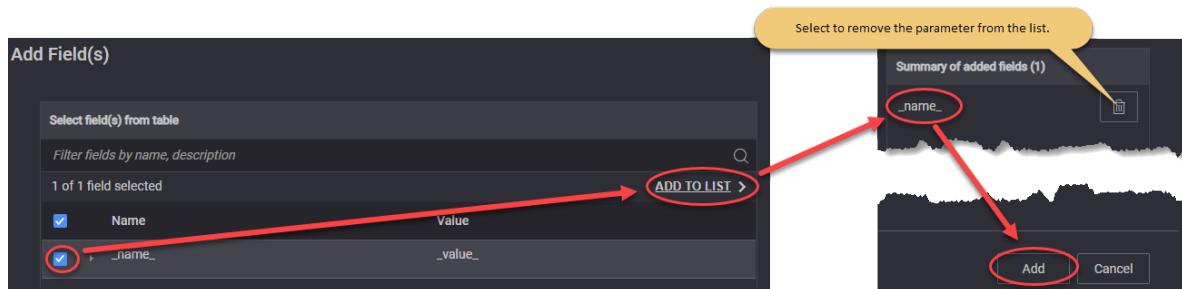

## DN Predefined Applications Traffic

The following table describes the Predefined Applications parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Predefined Applications</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Predefined Traffic Profiles	Select the traffic profile from the available options.

## DN Capture Replay

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> milliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b>

Parameter	Description
	(option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).
Start Delay (s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
DNN ID	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> .

Parameter	Description
	Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in pcap-filter format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).
<i>Overrides</i>	
Override QoS Flow ID	This option is available only if the <i>Role</i> is set to <b>Initiator</b> . Select the toggle button to enable it.
Qos Flow ID	This option is available only when <i>Override QoS Flow ID</i> option is enabled. Select the QoS Flows ID(s) from the drop-down list.
Override IP Address	Select the toggle button to enable it. When enabled, <i>Destination IP Address</i> and <i>Destination IP Address Count</i> fields become available.
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Address Count	The destination IP address count value.

## DN Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of

Parameter	Description
	the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the Traffic Flow parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## DN UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.

Parameter	Description
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
<i>Out of Band Signaling</i>	Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a> .  <b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

## DN Throttling settings

Throttling can be enabled from this menu per DN range (by selecting the corresponding check box), and matching user plane traffic over TCP, UDP or both.

Throttling can be useful, for example, when the local network interface that is generating downlink traffic has a higher speed than the radio interface between the UE and the GNB. If the traffic generated from either direction is bursty, the throttling mechanism will, instead of dropping packets, add them in a queue and spread them throughout a second according to the configured bit rate.

**NOTE**

The throttling options only work for interfaces that are running IxStack, either over DPDK or over raw sockets, depending on where the traffic is terminated (if agent is present on DN/SGi server then its N6 interface should be IxStack; if there is no agent on DN/SGi, than N3 interface should be IxStack on UPF/CoreSim agent).

The following table describes the **Throttling Settings** that you can configure for each DN range.

Settings	Description
Bit Rate (mbps)	Can be set between 10 and 10000. Represents the value at which the traffic will be throttled, and it will become the enforced maximum bit rate.
Throttle TCP Traffic	Select the check box to throttle UP traffic over TCP.
Throttle UDP Traffic	Select the check box to throttle UP traffic over UDP.

## DNS Server configuration settings



LoadCore includes simulation and isolation for DNS Server node.

The configuration settings are described in the topics listed below.

### Topics:


<b>DNS Server Ranges panel</b>	<b>298</b>
<b>DNS Server Range panel</b>	<b>298</b>
<b>DNS Server Ndnsserver interface settings</b>	<b>299</b>
<b>DNS Server Traffic Flow settings</b>	<b>300</b>

### DNS Server Ranges panel

The **DNS Servers** panel opens when you select the DNS node from the network topology window. You can perform the following tasks from this panel:

- Add a new DNS Server range to your test configuration.
- Open a DNS Server range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

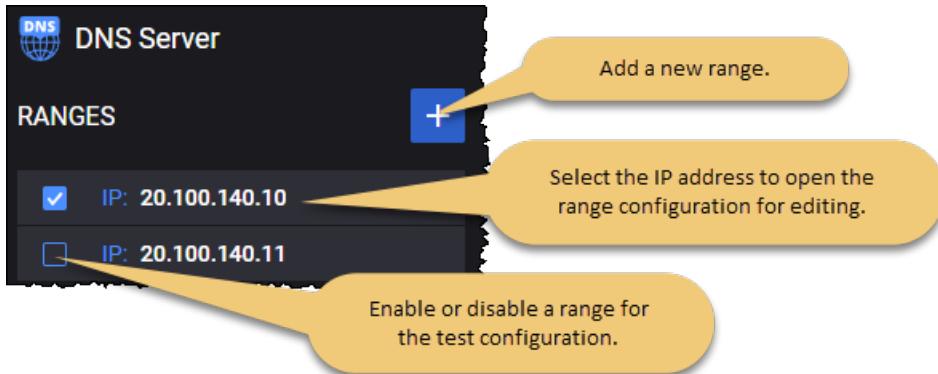

### DNS Server Range panel

You add and select DNS ranges from the DNS Server Ranges panel. When you select the IP address from the **DNS Server Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the DNS Server range from the test configuration.
- Designate the range as a **Device Under Test**.
- Use the **Range Settings** to configure the node and connectivity settings for the DNS Server range.

## DNS Server range controls and settings

Each DNS Server range is identified by a unique IP address. You can add and delete DNS Server ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each DNS Server range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your DNS Server is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the DNS Server functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Ndnsserver Interface Settings	Each DNS Server range requires the configuration of an interface necessary for connectivity. These settings are described in <a href="#">DNS Server Ndnsserver interface settings</a> .
Traffic Flow Settings	These settings are described in <a href="#">DNS Server Traffic Flow settings</a> .

## DNS Server Ndnsserver interface settings

The following **Connectivity Settings** enable the necessary DNS Server connectivity.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.

<b>Connectivity Settings</b>	<b>Description</b>
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## DNS Server Traffic Flow settings

The following table describes the DNS Server Traffic Flow parameters.

<b>Parameter</b>	<b>Description</b>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Zone Manager	Refer to <a href="#">Zone Manager</a> (below) for descriptions of the DNS server zones settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Zone Manager

To open the DNS Server Zones panel, select the **Open Zones** button.



The DNS Server Zones parameters are described in the following table.

Parameter	Description
	Select this button to add a zone to your test configuration.
	Select this button to remove the zone from the test configuration.
Zone Name	Set the zone name. Each zone is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Master Server	Provide the value for the master server.
<i>Resource Records (RRs)</i>	
	Select this button to add a resource record to your test configuration.
	Select this button to remove the resource record from the test configuration.
Type	Select the type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Hostname	Set the hostname.
Address	Provide the address.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

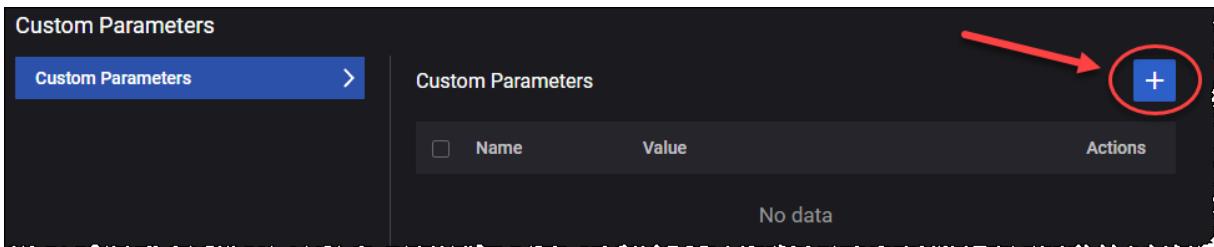


The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

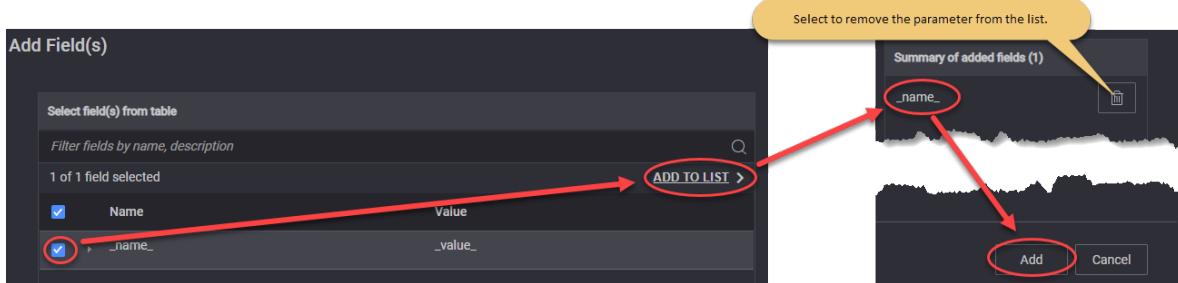

# EASDF configuration settings



Edge Application Server Discovery Function (EASDF) is the application by which a UE discovers the IP address(es) of a suitable Edge Application Server(s) using Domain Name System (DNS).

Within the 5GC, the EASDF offers services to the SMF via the Neasdf service based interface (see 3GPP TS 23.548 [14], 3GPP TS 23.501 [2] and 3GPP TS 23.502 [3]).

**IMPORTANT** EASDF is disabled by default in the topology. When enabled, make sure that **Technical Spec version** is set to **R17 December 2022** in Global Settings .

The configuration settings are described in the topics listed below.

## Topics:


<b>EASDF Ranges panel</b>	<b>303</b>
<b>EASDF Range panel</b>	<b>304</b>
<b>EASDF Node settings</b>	<b>305</b>
<b>EASDF Neasdf interface settings</b>	<b>305</b>
<b>EASDF N6 interface settings</b>	<b>306</b>
<b>EASDF UE routes settings</b>	<b>307</b>
<b>EASDF DNS Server Settings</b>	<b>308</b>

## EASDF Ranges panel

The **EASDF Ranges** panel opens when you select the node from the network topology window. You can perform the following tasks from this panel:

- Add a new EASDF range to your test configuration.
- Open an EASDF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

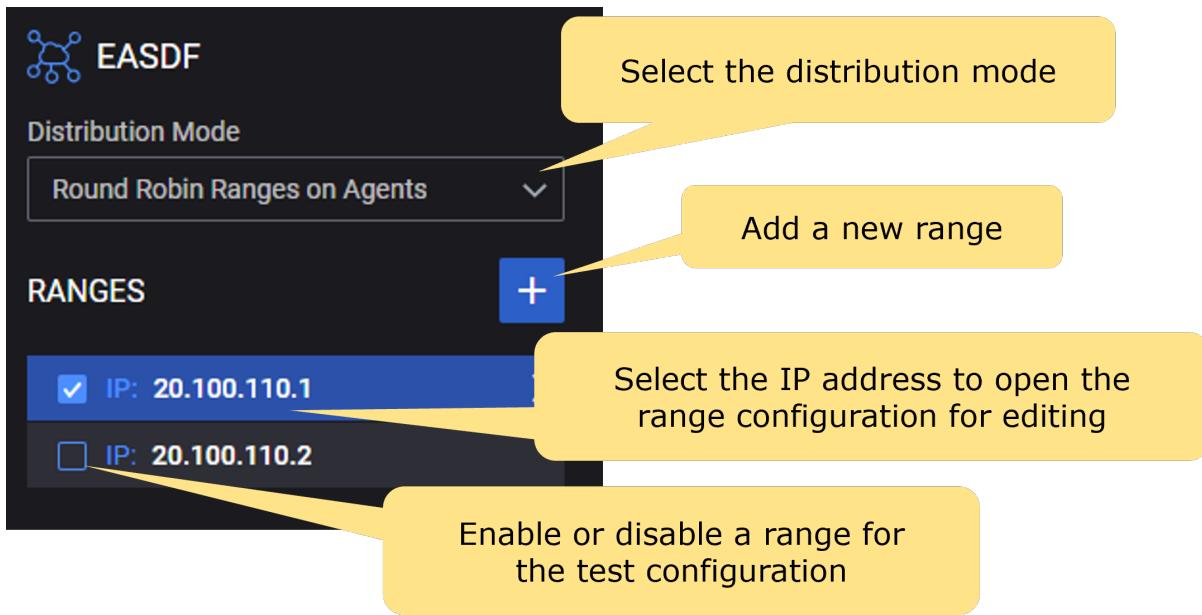

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on One Agent** - This mode allows only one agent in the assignment.

**IMPORTANT** The number of enabled EASDF ranges must be equal to the number of assigned agents.

## EASDF Range panel

You add and select EASDF ranges from the EASDF Ranges panel. When you select a EASDF's IP address from the **EASDF Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected EASDF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the EASDF range.

### EASDF range controls and settings

Each EASDF range is identified by a unique IP address. You can add and delete EASDF ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each EASDF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your EASDF is a DUT in this test configuration.

Setting	Description
	When this option is not enabled, the LoadCore will simulate the EASDF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each range requires the configuration of an associated set of Node Settings, which are described in <a href="#">EASDF Node settings</a> . <b>IMPORTANT</b> If the range is set as <b>Device Under Test</b> , this setting will not be available.
Neasdf Interface Settings	Each EASDF range requires the configuration of Neasdf interface settings, through which an EASDF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">EASDF Neasdf interface settings</a> .
N6 Interface Settings	The EASDF range requires the configuration of N6 interface settings. These settings are described in <a href="#">EASDF N6 interface settings</a> .
UE Routes Settings	These settings are described in <a href="#">EASDF UE routes settings</a> .
DNS Server Settings	These settings are described in <a href="#">EASDF DNS Server Settings</a> .

## EASDF Node settings

Each EASDF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple node instances may be deployed in the 5G network. Each instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## EASDF Neasdf interface settings

Neasdf is the interface from other SBA nodes towards the EASDF node.

The following table describes the **Connectivity Settings** that you configure for each EASDF range.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either <b>HTTP</b> or <b>HTTPS</b> .
Port	The port number to use for Neasdf communications. The default is port 80, but you can choose a different port number.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier..

## EASDF N6 interface settings

The following table describes the **Connectivity Settings** that you configure for each EASDF range.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address of the proxy DNS Server to which the Edge DNS Client UEs will send DNS queries. The proxy DNS Server will forward the queries to a local DNS Server as instructed by AF/SMF.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway	The IP address assigned as gateway address.

<b>Connectivity Settings</b>	<b>Description</b>
Address	
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Port	DNS Server's port. The default value is 53, but you can configure a different value.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier..

## EASDF UE routes settings

The following table describes the **Route Settings** that you need to configure in order to create the route to an UE range, or manually define the route(s).

<b>Settings</b>	<b>Description</b>
<i>Routes Config:</i>	
	Select this button to add a new route to a specific UE range or a custom one.
<i>UE Routes Config:</i>	
	Select this button to remove the route.
Route Type	Select the route type from the drop-down list. Available options: <b>UE</b> or <b>Custom</b> .
UE Range MSIN	Select the MSIN of the UE range from the drop-down list.
Peer UPF	Select from the drop-down list the UPF node connected to EASDF over the N6 interface.
Gateway Address	The IP address assigned as gateway address.
Destination	Set the destination subnet address.

Settings	Description	
Subnet Address	<b>IMPORTANT</b>	This parameter is available only when the route type is set to <b>Custom</b> .
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.	<b>IMPORTANT</b> This parameter is available only when the route type is set to <b>Custom</b> .

## EASDF DNS Server Settings

The DNS Server Settings parameters are described in the following table.

Parameter	Description
<i>DNS Servers:</i>	
	Select this button to add a server to your test configuration.
<i>DNS Server:</i>	
	Select this button to remove the server from the test configuration.
IP Address	The IP address of the local DNS Server to which the proxy DNS Server will forward the DNS queries on behalf of Edge DNS Client UEs, as instructed by AF/SMF.
<i>DNS Server Zones</i>	<i>Select to configure the DNS server zones for this range.</i>
<i>Zones:</i>	
	Select this button to add a zone to your test configuration.
<i>Zone:</i>	
	Select this button to remove the selected zone from the test configuration.
Zone Name	Set the zone name. Each zone is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
<i>Resource Records (RRs)</i>	
	Select this button to add a resource record to your test configuration.

Parameter	Description
<i>Resource Record</i>	
	Select this button to remove the resource record from the test configuration.
Type	Select the type from the drop-down list. The available options are: <ul style="list-style-type: none"><li>• <b>A</b></li><li>• <b>AAAA</b></li></ul>
Hostname	Set the hostname for this resource.
Address	Provide the address of this resource.

## IMS configuration settings

The IP Multimedia Subsystem (IMS) is a standards-based architectural framework for delivering multimedia communications services such as voice, video and text messaging over IP networks. IMS enables secure and reliable multimedia communications between diverse devices across diverse networks.

In LoadCore, IMS has two important components:

- Call Session Control Function (CSCF) – the core of the IMS architecture, responsible for controlling sessions between endpoints (referred to as terminals in the IMS specifications) and applications.
- Media Function

The configuration settings for these two components are described in the topics listed below.

### Topics:

<b>CSCF Range panel</b>	<b>310</b>
CSCF N6 interface settings	311
CSCF Rx interface settings	312
CSCF UE routes settings	313
<b>Media Function Range panel</b>	<b>314</b>

### CSCF Range panel

When you select a CSCF's IP address from the **CSCF Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Designate the range as a **Device Under Test**.
- Select **CSCF Settings** to configure the node and connectivity settings for the CSCF range.

### CSCF range controls and settings

The following table describes the available **Range** configuration options for the CSCF range.

Setting	Description
<i>Range:</i>	
Device Under Test	Enable this option if your CSCF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the CSCF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
P-CSCF Node Settings	
Domain	Set the domain name.

<b>Setting</b>	<b>Description</b>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Force IPsec Null Encryption	If enabled, it forces IPsec null encryption, therefore not encrypting the ESP traffic.
<i>Authentication Settings</i>	
Enable Authentication	Select this option to enable authentication.
Realm	Set the realm. Default value: <b>keysight.com</b> .
Algorithm Type	Select the algorithm type from the drop-down list. Available options: <b>Digest</b> , <b>AKAv2</b> or <b>AKAv1</b> .
Algorithm	Select the algorithm from the drop-down list. Available options: <b>MD5</b> , <b>MD5-Sess</b> , <b>SHA256</b> or <b>SHA256-Sess</b> .
Quality of Protection	Select an option from the drop-down list: <b>auth</b> or <b>auth-init</b> .
<i>AF Node Settings</i>	
Hostname	Set the hostname.
Realm	Set the realm. Default value: <b>keysight.com</b> .
<i>N6 Interface Settings</i>	<i>The CSCF range requires the configuration of N6 interface settings (this interface is used for SIP). These settings are described in <a href="#">CSCF N6 interface settings</a>.</i>
<i>Rx Interface Settings</i>	<i>The CSCF range requires the configuration of Rx interface settings (this interface is used for Diameter). These settings are described in <a href="#">CSCF Rx interface settings</a>.</i>
<i>UE Routes Settings</i>	<i>These settings are described in <a href="#">CSCF UE routes settings</a>.</i>
<i>Remote SBA Nodes</i>	
Peer PCRF	Select the IP address of the PCRF node.

## CSCF N6 interface settings

N6 is the service-based interface through which a CSFC instance makes its services available to other services in a 5G network.

## Interface Settings

The following settings are required to enable N6 interface transmission.

Interface setting	Description
Domain	Set the domain served by the SIP proxy.
Port	Set the SIP port number for the proxy.
Support TLS Transport	Select this check box to enable TLS transport.

The following **Connectivity Settings** enable the necessary CSCF N6 connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## CSCF Rx interface settings

Rx is the service-based interface through which a P-CSCF instance makes its services available to other services in a 5G network.

## Interface Settings

The following settings are required to enable message transmission between the P-CSCF and PCRF.

Interface setting	Description
Hostname	Set the hostname.
Realm	Set the realm. Default value: <b>keysight.com</b> .

The following **Connectivity Settings** enable the necessary Rx connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## CSCF UE routes settings

The following table describes the **UE Route Settings** that you need to configure in order to create the route to an UE range.

Settings	Description
<i>UE Routes Config:</i>	
	Select this button to add a new route to a specific UE range.

Settings	Description
<i>UE Routes Config:</i>	
	Select this button to remove the route to the UE range.
UE Range MSIN	Select the MSIN of the UE range from the drop-down list.
Peer UPF	Select the UPF node connected to DN over the N6 interface from the drop-down list.
Gateway Address	The IP address assigned as gateway address.

## Media Function Range panel

When you select a Media Function's IP address from the **Media Function Ranges** panel, LoadCore opens the **Range** panel, from which you can configure the node and connectivity settings for the Media Function range.

### Media Function range controls and settings

The following **Connectivity Settings** enable the necessary connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

Connectivity Settings	Description
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

## MME configuration settings



In 4G EPC networks, the MME (Mobility Management Entity) manages UE session states, paging, mobility, roaming, and other bearer management functions. It is also the control node for the LTE access network, performing essential services such as bearer activation/deactivation, SGW selection for UEs, user authentication, idle mode tracking and paging, among other functions.

In the Full Core test topology, it communicates with the AMF over the N26 interface, with the RAN over the S1 interface, and with the SGW over the S11 interface.

The configuration settings are described in the topics listed below.

### Topics:

<b>MME Ranges panel</b> .....	<b>317</b>
<b>MME Range panel</b> .....	<b>318</b>
<b>MME node settings</b> .....	<b>319</b>
<b>MME S11 Interface Settings</b> .....	<b>321</b>
<b>MME N26 Interface Settings</b> .....	<b>322</b>
<b>MME S1 Interface Settings</b> .....	<b>324</b>
<b>MME S6a Interface Settings</b> .....	<b>325</b>
<b>MME Diameter settings</b> .....	<b>326</b>


## MME Ranges panel

The **MME** panel opens when you select the MME node from the network topology window.

You can perform the following tasks from this panel:

- Select the grouping type.
- Add a new MME range to your test configuration.
- Open the MME range configuration (for editing or viewing).
- Enable or disable the MME range for the test configuration.

**For example...**

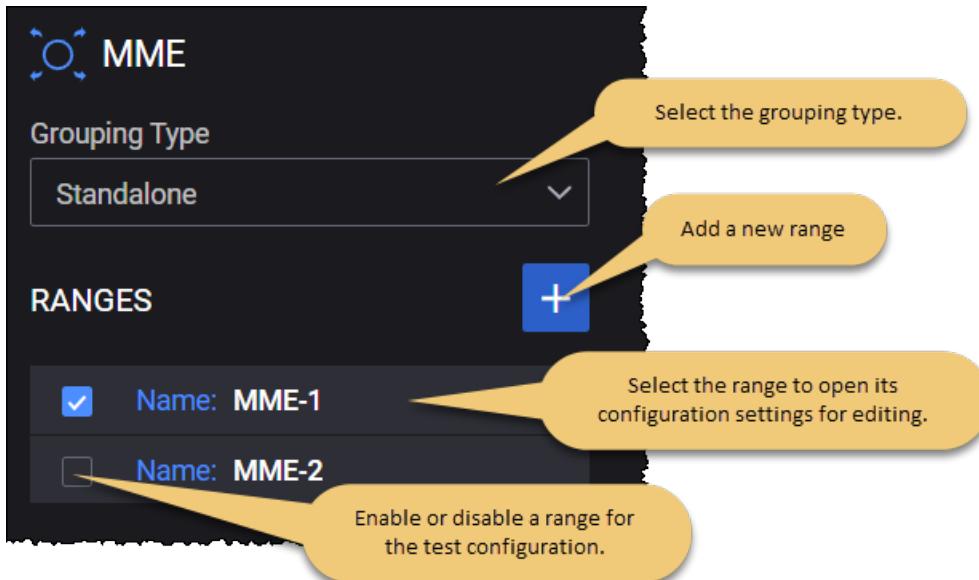

The following configuration option is available on this panel:

Option	Description
Grouping Type	<p>This option determines the exposed simulated interfaces:</p> <ul style="list-style-type: none"> <li>• <b>Standalone:</b> When selected, the topology exposes traffic sent over the S1-MME interface, capturing S1AP/NAS messages.</li> </ul> <p><b>IMPORTANT</b> If Grouping Type is set to <b>Standalone</b> for the MME, an agent must be assigned.</p> <ul style="list-style-type: none"> <li>• <b>With RAN</b></li> </ul>
<b>IMPORTANT</b>	To run a test using Standalone MME Grouping Type, the SGW Grouping Type must be set to <b>With SMF</b> or <b>Standalone</b> . For more details about SGW grouping, refer to <a href="#">SGW Ranges panel</a> .
<b>IMPORTANT</b>	All the interfaces are enabled automatically if the MME Grouping Type is set to <b>Standalone</b> and the S1 interface IP configuration becomes mandatory.

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All RAN Agents** - This option is available only if **Grouping Type** is set as **With RAN**, and the **N26 Interface** is disabled. Only one MME range grouped with RAN can be configured. This MME range will distribute on all agents by incrementing IP address, etc.
- **Round Robin Ranges on Agents** - This option is available only if the **Grouping Type** is set to **Standalone**, the **N26 Interface** is disabled, and multiple ranges are configured. Each MME Standalone range will require a separate agent.
- **One Range on All Agents** - This option is available only if the **Grouping Type** is set to **Standalone**, and the **N26 Interface** is **disabled**, and only if a single range is configured. Each MME Standalone range will require a separate agent.
- **One Range on One Agent** - This option is available no matter of the **Grouping Type** selection, if the **N26 Interface** is **enabled**, and only if a single range is configured. Each MME Standalone range will require a separate agent.

## MME Range panel

You add and select MME ranges from the **MME Ranges** panel. When you select an MME range name, LoadCore opens the **Range** panel, from which you can:

- Delete the selected MME range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select among the **Range Settings** to configure the node and interface settings for the MME range.

### MME range controls and settings

Each MME range is identified by a unique range name. You can add and delete MME ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each MME range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your MME is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the MME functionality (if it is selected in the Topology window).
Range Count	The number of MMEs in the range.
<i>Range Settings:</i>	
Node Settings	Each MME range the configuration of an associated set of Node Settings, which are described in <a href="#">MME node settings</a> .

<b>Setting</b>	<b>Description</b>
S11 Interface Settings	Each MME range requires the configuration of S11 interface settings, through which an MME instance enables connectivity and interaction with SGW instances in the network. These settings are described in <a href="#">MME S11 Interface settings</a> .
N26 Interface Settings	If your test requires 5G/4G interworking, then each MME range requires the configuration of N26 interface settings, through which an MME instance enables connectivity and interaction with AMF instances in the network. These settings are described in <a href="#">MME N26 Interface settings</a> .
S1 Interface Settings	These settings are described in <a href="#">MME S1 Interface settings</a> .
S6a Interface Settings	These settings are described in <a href="#">MME S6a Interface settings</a> .
Diameter Settings	These settings are described in <a href="#">MME Diameter settings</a> .

## MME node settings

Each MME range includes a set of Node Settings.

### Node Settings

Each MME instance (that is, each range) is identified by the following node settings.

<b>Setting</b>	<b>Description</b>
Name	A name uniquely identifies each MME range. You can accept the value provided by LoadCore or overwrite it with your own value.
Group ID	The MME Group Identifier to which this MME is assigned. The MME Group Identifier is a 16-bit value that is unique within a PLMN. The valid range of Group numbers is from 1 through 65535.
Code	The MME Code assigned to this MME. The MME Code is an 8-bit value that uniquely identifies an MME within an MME Group. The valid range of MME Code numbers is from 1 through 255.
PLMN MCC	The PLMN MCC for this MME range. <b>About PLMN MCC ...</b> A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.

Setting	Description
	The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.
PLMN MNC	<p>The PLMN MNC for this MME range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Ciphering Algorithm	<p>The supported 4G ciphering algorithm:</p> <ul style="list-style-type: none"> <li>• EEA0 - Null ciphering algorithm</li> <li>• EEA1 - 128-bit SNOW 3G based algorithm</li> <li>• EEA2 - 128-bit AES based algorithm</li> </ul>
Integrity Algorithm	<p>The supported 4G integrity algorithm:</p> <ul style="list-style-type: none"> <li>• EIA0 - Null Integrity Protection algorithm</li> <li>• EIA1 - 128-bit SNOW 3G based algorithm</li> <li>• EIA2 - 128-bit AES based algorithm</li> </ul>
Relative Capacity	Set the relative capacity value.
Support for Modify Access Bearers Request Feature	<p><b>IMPORTANT</b> This option appears only if the <b>Grouping Type</b> on the MME node is set to <b>Standalone</b>.</p> <p>In case of Option 3x scenario, it sends the Modify Access Bearers Request message instead of Modify Bearer Request.</p>
T3412	<p><b>IMPORTANT</b> This option appears only if the <b>Grouping Type</b> on the MME node is set to <b>Standalone</b>.</p> <p>Select the check box to enable this option. If enabled, it allows the configuration of the T3412 timer. If disabled, a value of 50 minutes (Value 5 x Unit 10 minutes) is sent for T3412.</p>
Value	Set the value for this parameter. Accepted values are between <b>0</b> and <b>31</b> .
Unit	<p>Select from the drop-down the unit to use for T3412 timer calculation. Supported values are:</p> <ul style="list-style-type: none"> <li>• if <i>Support Extended Timer</i> is <b>enabled</b>, units are <b>2 seconds</b>, <b>30 seconds</b>, <b>1 minute</b>, <b>10 minutes</b>, <b>1 hour</b>, <b>10 hours</b>, <b>320 hours</b>, <b>Deactivated</b>.</li> <li>• if <i>Support Extended Timer</i> is <b>disabled</b>, units are <b>2 seconds</b>, <b>30 seconds</b>,</li> </ul>

Setting	Description
<b>1 minute, 1 decihour, 10 minutes, 1 hour, 10 hours, Deactivated.</b>	
Support Extended Time	If enabled (default), it sets the T3412 extended value as described in the TS 24301, chapter 8.2.1.12.

## MME S11 Interface Settings

S11 is the control plane interface between an MME and an SGW.

You can enable or disable the S11 interface, as required by your test configuration. For example:



S11 Interface Settings

### Interface Settings

The following settings are required to enable message transmission between this MME range and a selected SGW range.

Interface setting	Description
Peer SGW	Select an SGW range from the drop-down list. All of the SGW ranges that you have enabled for the test are available for selection.
GTP-C UDP port	Specify the UDP port number that will be used for GTP-C message transmission and receipt. The default port number is 2123, but you can select a different port as required by your test network.
GTP-C Destination UDP Port	Specify the UDP port that will be used for GTP-C message transmission. Value should be in range of 1024 to 65535.

### Connectivity Settings

The following **Connectivity Settings** enable S11 connectivity between MME and SGW ranges.


Connectivity setting	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.

<b>Connectivity setting</b>	<b>Description</b>
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## MME N26 Interface Settings

In a 5G network, N26 is the interface between the MME and the AMF. It supports interworking requirements between the EPC and the NG core.

You can enable or disable the N26 interface, as required by your test configuration. For example:



### Interface Settings

The following settings are required to enable message transmission between this MME range and a selected AMF range.

<b>Interface setting</b>	<b>Description</b>
Peer AMF	Select an AMF range from the drop-down list. All of the AMF ranges that you have enabled for the test are available for selection.
GTP-C UDP port	Specify the UDP port number that will be used for GTP-C message transmission and receipt. The default port number is 2123, but you can select a different port as required by your test network.
GTP-C	Specify the UDP port that will be used for GTP-C message transmission. Value

Interface setting	Description
Destination UDP Port	should be in range of 1024 to 65535.

## Connectivity Settings

The following **Connectivity Settings** enable N26 connectivity between MME and AMF ranges.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity setting	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected. Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.

## MME S1 Interface Settings

The MME S1 interface IP configuration becomes mandatory when the MME Grouping Type is set to **Standalone**.

The following settings are required for the MME S1 interface:

S1 Interface setting	Description
Local SCTP port	The local SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.

## Connectivity Settings

Connectivity setting	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.

Connectivity setting	Description
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.

## MME S6a Interface Settings

S6a is a control-signaling interface that lies between the MME and the HSS. It enables transfer of subscription and authentication data for authenticating/authorizing user access to the evolved system (AAA interface) between the MME and HSS (as described in 3GPP TS 23.401).

You can enable or disable the S6a interface, as required by your test configuration. For example:



S6a Interface Settings

### Interface Settings

The following settings are required to enable message transmission between this MME range and a selected HSS range.

Interface setting	Description
Peer UDM/HSS	Select the UDM/HSS range from the drop-down list. All of the UDM/HSS ranges that you have enabled for the test are available for selection.
Local SCTP port	The local SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port.
Remote SCTP port	The remote SCTP port.

### Connectivity Settings

The following **Connectivity Settings** enable S6a connectivity between MME and HSS ranges.


**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

<b>Connectivity setting</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## MME Diameter settings

You can enable or disable Diameter, as required by your test configuration. For example:



The following settings are required to configure Diameter after enabling it.

<b>Setting</b>	<b>Description</b>
Origin Host Prefix	Set the origin host prefix. Default value: <b>host</b> .
Origin Realm	Set the origin realm. Default value: <b>keyesight.com</b> .
Destination Host	Set the destination host prefix.

<b>Setting</b>	<b>Description</b>
Destination Realm	Set the destination realm.

# NEF configuration settings



Network Exposure Function (NEF), located between the 5G core network and external third-party application functionaries, is responsible for managing the external open network data. All external applications that want to access the internal data of the 5G core must pass through the NEF.

**IMPORTANT** NEF simulation is not supported when Technical Spec Version is **R15 September 2019**.

## Topics:


<b>NEF Ranges panel</b>	<b>328</b>
<b>NEF Range panel</b>	<b>329</b>
<b>NEF Nnrf interface settings</b>	<b>330</b>
<b>NEF Remote SBA Nodes</b>	<b>332</b>

## NEF Ranges panel

The **NEF Ranges** panel opens when you select the NEF node from the network topology window. You can perform the following tasks from this panel:

- Add a new NEF range to your test configuration.
- Open a NEF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

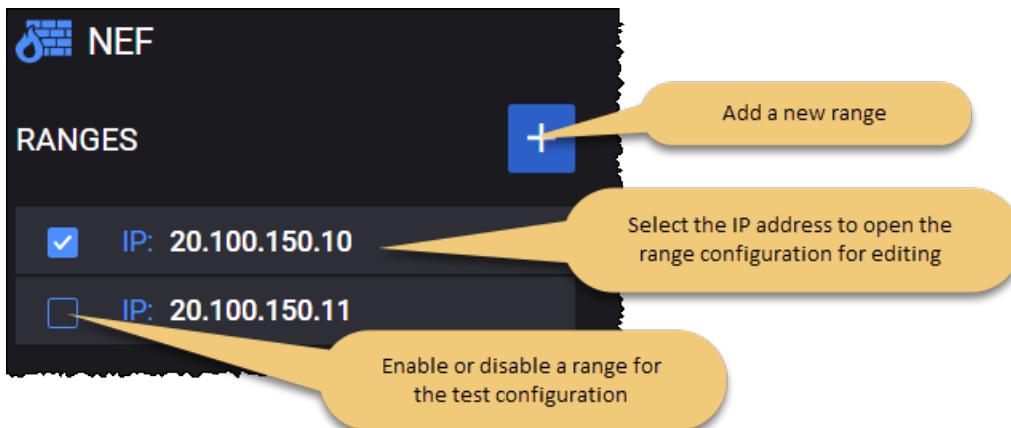

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents** - Only one NEF Range is supported in a test. The range can be configured on multiple agents. IP addresses and NF IDs will increment on each agent.

## NEF Range panel

You add and select NEF ranges from the NEF Ranges panel. When you select a NEF's IP address from the **NEF Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected NEF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the NEF range.

### NEF range controls and settings

Each NEF range is identified by a unique IP address. You can add and delete NEF ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each NEF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your NEF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the NEF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each AMF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">NEF node settings</a> .
Nnef Interface Settings	Each NEF range requires the configuration of Nnefinterface settings, through which a NEF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">NEF Nnef interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">NEF Remote SBA Nodes</a> .
AF ID to ASP ID	<i>The AF ID to ASP ID map settings are described in <a href="#">AF ID to ASP ID</a>.</i>

### NEF Node Settings

The following table describes the available NEF Node Settings.

Setting	Description
Instance ID	Each NEF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN MCC for this NEF range.

<b>Setting</b>	<b>Description</b>
	<p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this NEF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP2 User Agent	<p>User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.</p>

## AF ID to ASP ID

The following table describes the available AF ID to ASP ID settings.

<b>Setting</b>	<b>Description</b>
<i>AF ID to ASP ID Map</i>	
	Select the <b>Add AF ID to ASP ID Map</b> button to add a map to your test configuration.
<i>AF ID to ASP ID</i>	
	Select the <b>Delete AF ID to ASP ID</b> button to delete this map from your test configuration.
AF ID	
ASP ID	

## NEF Nnef interface settings

Nnef is the service-based interface through which a NEF instance makes its services available to other services in a 5G network. The following **Connectivity Settings** enable the necessary Nnef connectivity and service interaction.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

Connectivity Settings	Description
mTLS Server Settings	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## NEF Remote SBA Nodes

**IMPORTANT** If on the NEF node either UDM or UDR is selected but the other one is set to **None** (for example, UDM is set to a node but UDR is set to **None**), LoadCore shows this as a configuration error. When UDR is selected, the UDM needs to be set and vice versa.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can

Setting	Description
	choose a different port number.

## PCF Connection Settings

To connect to the PCF node, the following configuration settings are required.

Setting	Description
<i>PCF Connectivity Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer PCF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer PCF	Select the peer PCF using either of the following methods: <ul style="list-style-type: none"> <li>Select the IP address of the PCF node. This is the destination address of the PCF node to which the packets are sent over the NPCf interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service. Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</li> </ul>
Protocol	The protocol to use for Npcf communications. It can be either HTTP or HTTPS.
Port	The PCF port number to use for Npcf communications. The default is port 80, but you can choose a different port number.

## UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

Setting	Description
<i>UDM Connectivity Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer UDM</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer UDM	Select either the IP address of an UDM from your test network or <i>None</i> if you are not using an UDM in your test configuration. The IP address is the destination address of the UDM node to which the packets are sent over the Nudm interface.

Setting	Description
Protocol	The protocol to use for Nudm communications. It can be either HTTP or HTTPS.
Port	The UDM port number to use for Nudm communications. The default is port 80, but you can choose a different port number.

## UDR Connection Settings

To connect to the UDR node, the following configuration settings are required.

Setting	Description
<i>UDR Connectivity Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer UDR</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer UDR	Select either the IP address of an UDR from your test network or <i>None</i> if you are not using an UDR in your test configuration. The IP address is the destination address of the UDR node to which the packets are sent over the Nudr interface.
Protocol	The protocol to use for Nudr communications. It can be either HTTP or HTTPS.
Port	The UDR port number to use for Nudr communications. The default is port 80, but you can choose a different port number.

# NRF configuration settings



Network Repository Function (NRF) is the 5G core network service that allows every network function to discover the services offered by other network functions. It supports the service discovery function by maintaining the set of NF profiles and the set of available NF instances. It makes its services available to other network functions through the Nnrf service-based interface. Multiple instances of NRF may be deployed, with each instance storing specific data.

## Topics:

<b>NRF Ranges panel</b> .....	<b>336</b>
<b>NRF Range panel</b> .....	<b>336</b>
<b>NRF node settings</b> .....	<b>337</b>
<b>NRF Nnrf interface settings</b> .....	<b>338</b>
<b>NRF Remote SBA Nodes</b> .....	<b>339</b>


## NRF Ranges panel

The **NRF Ranges** panel opens when you select the NRF node from the network topology window. Each NRF range is identified by a unique IP address that you configure.

You can perform the following tasks from this panel:

- Add a new NRF range to your test configuration.
- Open a NRF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

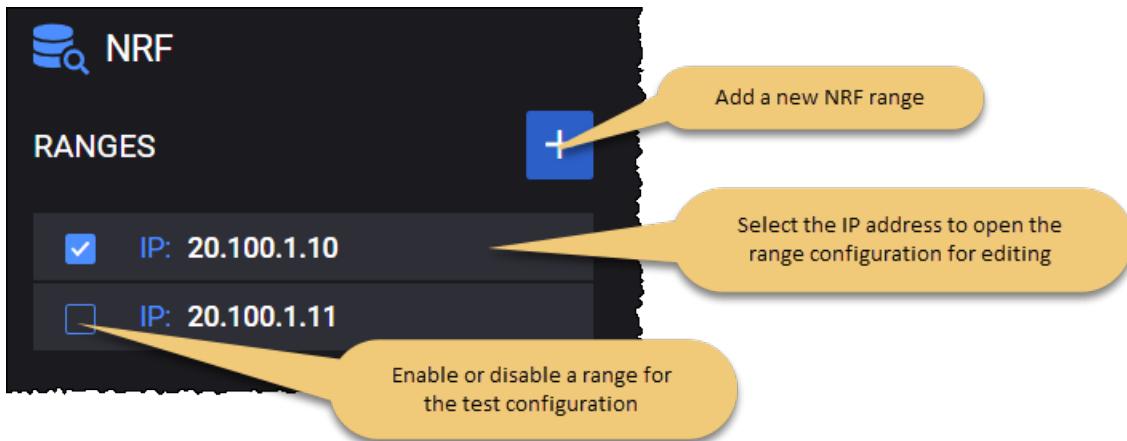

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **All Ranges on All Agents**
- **Round Robin Ranges on Agents**

## NRF Range panel

When you select the IP address of a NRF range from the NRF Ranges panel, LoadCore opens the **Range** panel for that selected NRF. From that Range panel you can:

- Delete the selected NRF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the NRF range.

### NRF range controls and settings

Each NRF range is identified by a unique IP address. You can add and delete NRF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each NRF range.

Setting	Description
Range:	

Setting	Description
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your NRF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the NRF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each NRF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">NRF node settings</a> .
Nnrf Interface Settings	Each NRF range requires the configuration of Nnrf interface settings, through which a NRF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">NRF Nnrf interface settings</a> .

## NRF node settings

Each NRF range includes a set of Node Settings.

### Node Settings

Each NRF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple NRF instances may be deployed in the 5G network. Each NRF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Name	The name of the NRF range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
PLMN MCC	Set the mobile country code.
PLMN MNC	Set the mobile network code.
Heartbeat Interval(s)	Time in seconds expected between 2 consecutive heartbeat messages from an NF Instance to the NRF.

## NRF Nnrf interface settings

Nnrf is the service-based interface through which a NRF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nnrf connectivity and service interaction.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>

Connectivity Settings	Description
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
mTLS Server Settings	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## NRF Remote SBA Nodes

### Remote SEPP

To connect to the peer Security Edge Protection Proxy (SEPP) node, the following configuration settings are required.

Setting	Description
Peer SEPP	Select either the IP address of a SCP node from your test network or <i>None</i> if you are not using one in your test configuration.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.
Sepp Communication Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Telescopic FQDN</b></li> <li>• <b>Target API Root</b></li> </ul>


Setting	Description
Force FQDN Mapping	Select this option to enable it.

## Remote NRFs

The following configuration settings are required.

Setting	Description
<i>Remote NRFs :</i>	
	Select the <b>Add Remote NRF</b> button to add a new remote NRF to your test configuration.
<i>Remote NRF:</i>	
	Select the <b>Delete Remote NRF</b> button to delete the remote NRF range from your test configuration.
Peer NRF	Select the IP address of the peer NRF.
FQDN	<p>The value has the following form:  <code>&lt;instanceID&gt;.5gc.mnc&lt;value1&gt;.mcc&lt;value2&gt;.3gppnetwork.org</code>:</p> <ul style="list-style-type: none"> <li><code>instanceID</code> of the selected remote NRF</li> <li><code>value1</code> is the PLMN MNC of the selected remote NRF and should always have 3 digits, padded with zeros (04 should be 004)</li> <li><code>value2</code> is the PLMN MCC of the selected remote NRF</li> </ul>
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

# NSSF configuration settings



The Network Slice Selection Function (NSSF) selects Network Slice Instances (NSIs) based on information provided during UE attach. The NSSF offers services to the AMF (and to NSSFs to different PLMNs) via the Nnssf service based interface. N22 is the reference point between AMF and NSSF, and N31 is the reference point between the NSSF in the visited network and the NSSF in the home network.

The NSSF supports the following functionality:

- Selecting the set of Network Slice instances serving the UE
- Determining the Allowed NSSAI and, if needed, the mapping to the Subscribed S-NSSAIs
- Determining the Configured NSSAI and, if needed, the mapping to the Subscribed S-NSSAIs
- Determining the AMF Set to be used to serve the UE

## Topics:

<b>NSSF Ranges panel</b>	<b>342</b>
<b>NSSF Range panel</b>	<b>342</b>
<b>NSSF node settings</b>	<b>343</b>
<b>Nnssf Interface Settings</b>	<b>344</b>
<b>Remote SBA nodes</b>	<b>345</b>
<b>NSSF Restricted NSSAIs</b>	<b>346</b>
<b>NSSF Network Slices</b>	<b>347</b>
<b>NSSF Configured NSSAI</b>	<b>348</b>


## NSSF Ranges panel

The **NSSF Ranges** panel opens when you select the NSSF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new NSSF range to your test configuration.
- Open an NSSF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

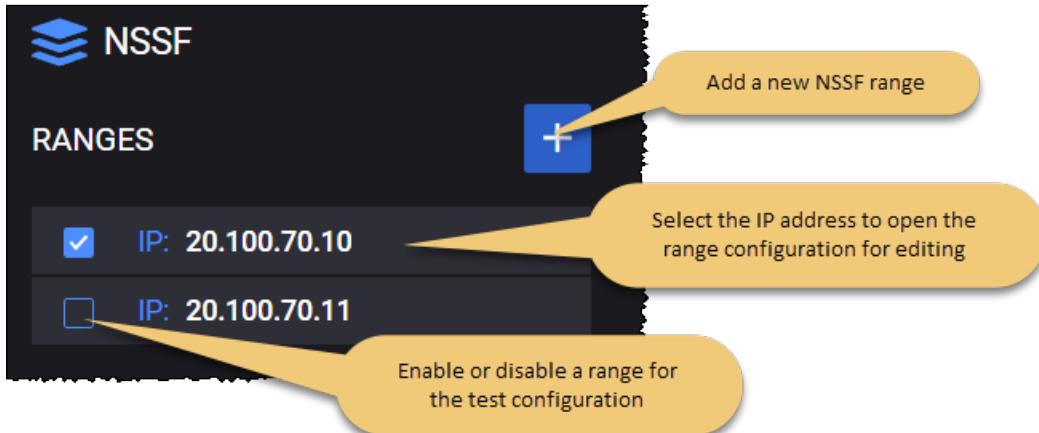

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT** Only one NSSF Range can be configured on one agent.

- in case of multiple ranges it will require one agent for each range;
- in case of one range and multiple agents, each agent will create a different NSSF NF, with incremented IP address and NF ID, and a whole UE range.

## NSSF Range panel

Selecting an IP address from the NSSF **Ranges** panel provides access to the configuration settings on the **Range** panel. From the NSSF **Range** panel, you can:

- Delete the NSSF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node, Nnssf interface, and remote SBA nodes.
- Select **Network Slicing** to configure restricted NSSAIs, network slices, and configured NSSAIs.

## NSSF range controls and settings

Each NSSF range is identified by a unique IP address. You can add and delete NSSF ranges as necessary to support your test requirements. The following table describes the **Range Settings** that

you need to configure for each NSSF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your NSSF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the NSSF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each NSSF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">NSSF node settings</a> .
Nnssf Interface Settings	Each NSSF range requires the configuration of Nnssf interface settings, through which a NSSF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">Nnssf Interface Settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">Remote SBA nodes</a> .
<i>Network Slicing:</i>	
Restricted NSSAIs	These settings are described in <a href="#">NSSF Restricted NSSAIs</a> .
Network Slices	These settings are described in <a href="#">NSSF Network Slices</a> .
Configured NSSAIs	These settings are described in <a href="#">NSSF Configured NSSAI</a> .

## NSSF node settings

Each NSSF range includes a set of Node Settings. Each NSSF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple NSSF instances may be deployed in the 5G network. Each NSSF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	Set the mobile country code. <b>About PLMN MCC ...</b>

<b>Setting</b>	<b>Description</b>
	<p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>Set the mobile network code.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP2 User Agent	<p>User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.</p>

## Nnssf Interface Settings

Nnssf is the service-based interface through which an NSSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nnssf connectivity and service interaction.

<b>Connectivity Setting</b>	<b>Description</b>
<i>IP:</i>	
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The length of the IP prefix for this interface.
Gateway Address	The gateway address through which other servers will access this NSSF instance.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.

<b>Connectivity Setting</b>	<b>Description</b>
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>Outer VLAN:</i>	
Outer VLAN	Enable this option if you are using VLANs on this interface.
VLAN ID	The outer VLAN identifier.
<i>Inner VLAN:</i>	
Inner VLAN	Enable this option if you are using VLANs on this interface and you need to configure inner VLANs. The Inner VLAN configuration settings are available only when <i>Outer VLAN</i> is enabled.
VLAN ID	The inner VLAN identifier.

## Remote SBA nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of

Setting	Description
	the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

## NSSF Restricted NSSAIs

The AMF uses the NSSAI Availability Service to update the S-NSSAIs that the AMF supports on a per-TA basis on the NSSF and to subscribe and notify any status changes, on a per-TA basis, of the S-NSSAIs available per TA (unrestricted) and the restricted S-NSSAI(s) per PLMN in that TA in the serving PLMN of the UE.

You use the **NSSF Restricted NSSAIs** settings to define the Restricted NSSAIs for your test. For each Restricted NSSAI in your configuration, you will configure one or more Restricted S-NSSAIs.

Setting	Description
<i>Restricted NSSAIs:</i>	
	Select the <b>Add a restricted NSSAI</b> button to add a restricted NSSAI to your test configuration.
<i>Restricted NSSAI settings:</i>	
	Select the <b>Delete Restricted NSSAI</b> button to delete this NSSAI from your test configuration.
<i>Tracking Area Identity (TAI):</i>	

Setting	Description
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>Restricted S-NSSAIs:</i>	
	Select the <b>Add NSSAI</b> button to add a Restricted A-NSSAI to your test configuration.
<i>NSSAI Settings:</i>	
	Select the <b>Delete NSSAI</b> button to delete this NSSAI from your test configuration.
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
Mapped SST	The default Mapped configure Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The default Mapped configured Slice Differentiator (SD) value for this S-NSSAI.

## NSSF Network Slices

You use the **NSSF Network Slices** settings to configure one or more network slices for use in your test. A network slice is a 5G logical network that provides specific network capabilities and network characteristics.

Setting	Description
<i>Network Slices:</i>	
	Select the <b>Add a Network slice</b> button to add a network slice to your test configuration.
<i>Network Slice settings:</i>	
	Select the <b>Delete a Network Slice</b> button to remove this network slice from your test configuration.
Slice Name	Each network slice is uniquely identified by a <i>Slice Name</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
<i>Slice NRF (Network Repository Function):</i>	

Setting	Description
Slice NRF host	The identifier (IP address) of the Network Repository Function (NRF) host to be used to select services within a Network Slice instance.
Protocol	The protocol used for communications. You can choose either HTTP or HTTPS.
Port	The port number used for communications. The default is port 80, but you can choose a different port number.
<i>Tracking Areas:</i>	
	Select the <b>Add Tracking Area</b> button to add a Tracking Area (TA) to your test configuration.
<i>Tracking Area Indication (TAI) settings:</i>	
	Select the <b>Delete TAI</b> button to delete this TAI from your test configuration.
MCC	The Mobile Country Code (MCC) used in the construction of the TAI.
MNC	The Mobile Network Code (MNC) used in the construction of the TAI.
TAC	The Tracking Area Code (TAC) used in the construction of the TAI.

## NSSF Configured NSSAI

You use the **NSSF Configured NSSAI** settings to define one or more Configured NSSAIs for your test configuration. A Configured NSSAI is an NSSAI with which the PLMN may configure a UE, in which case the UE will use it as the default NSSAI.

Setting	Description
<i>Configured NSSAI:</i>	
	Select the <b>Add a Configured NSSAI</b> button to add a Configured NSSAI to your test configuration.
<i>Configured SNSSAI settings:</i>	
	Select the <b>Delete a Configured NSSAI</b> button to remove this NSSAI from your test configuration.
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
Mapped SST	The default Mapped configure Slice/Service Type (SST) value for this NSSAI.

Setting	Description
Mapped SD	The default Mapped configured Slice Differentiator (SD) value for this NSSAI.
Slice names	Select from among the available slice names (the slices that you defined using the <b>NSSF Network Slices</b> settings). There is also an option to select all of the slices.

## PCF/PCRF configuration settings



Policy Control Function (PCF) is the 5G core network component that governs the network behavior by supporting unified policy framework. It provides policy rules to Control Plane function(s). This includes network slicing, roaming, and mobility management. Also, it accesses subscription information for policy decisions taken by the UDR. It makes its services available to other network functions through the Npcf service-based interface. Multiple instances of PCF may be deployed, with each instance storing specific data.

Policy and Charging Rules Function (PCRF) is the software node designated in real-time to determine policy rules in a multimedia network. It operates at the network core and accesses subscriber databases and other specialized functions, such as a charging system, in a centralized manner.

The configuration settings are described in the topics listed below.

### Topics:

<b>PCF/PCRF Ranges panel</b> .....	<b>351</b>
<b>PCF Range panel</b> .....	<b>352</b>
<b>PCF Node settings</b> .....	<b>353</b>
<b>PCRF Node settings</b> .....	<b>354</b>
<b>PCF service area restrictions</b> .....	<b>357</b>
<b>PCF Npcf interface settings</b> .....	<b>358</b>
<b>PCF remote SBA nodes</b> .....	<b>360</b>


## PCF/PCRF Ranges panel

The **PCF/PCRF Ranges** panel opens when you select the PCF/PCRF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new range to your test configuration.
- Open a range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

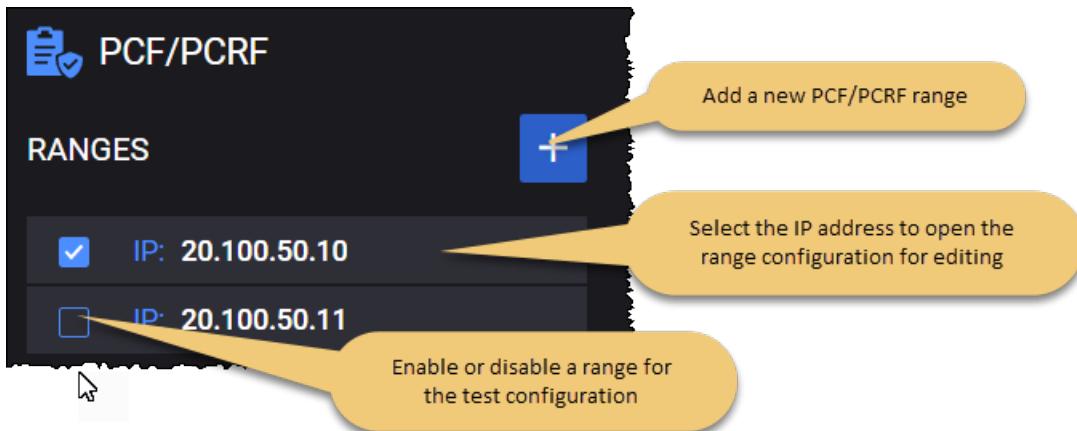

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT** Only one PCF range can be configured on one agent:

- in case of multiple ranges, it will require one agent for each range.
- in case one range and multiple agents, each agent will create a different PCF NF, with incremented IP address and NF ID, and whole UE range.

## PCF Range panel

You add and select PCF ranges from the PCF Ranges panel. When you select the IP address of an PCF , LoadCore opens the **Range** panel, from which you can:

- Delete the PCF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the PCF range.

### PCF range controls and settings

Each PCF range is identified by a unique IP address. You can add and delete PCF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you need to configure for each PCF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your PCF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the PCF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
RAT Type	This option allows you to enable only the functionalities specific to the selected Radio Access Technology type (RAT). Options available are: <b>5G</b> , <b>4G</b> , or <b>5G and 4G</b> .  <b>NOTE</b> Only the 4G option supports Gx Interface for 4G Stand Alone Core Network. The other options use the Dual Core Network which uses SBA interface between SMF/(S)PGW-C and PCF.
Node Settings	Each PCF range the configuration of an associated set of Node Settings, which are described in <a href="#">PCF node settings</a> .
PCRF Node Settings	These settings are described in <a href="#">PCRF node settings</a> .
Service Area Restrictions	Each PCF range requires the configuration of the service area restrictions. The settings are described in <a href="#">PCF service area restrictions</a> .
Npcf Interface Settings	Each PCF range requires the configuration of Npcf interface settings, through which a PCF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">PCF Npcf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">PCF remote SBA nodes</a> .

**NOTE**

In case of [Home-Routed](#) roaming there are two PCF nodes involved, one in visited PLMN and one in home PLMN. The LoadCore agent allows only one PCF node configuration, thus when multiple PCF nodes are configured in LoadCoreUI, multiple [agents](#) need to be configured as well with a 1:1 ratio.

## PCF Node settings

Each PCF range includes a set of Node Settings.

### Node Settings

Each PCF instance (that is, each range) is identified by the following node settings.

Setting	Description
Instance ID	Multiple PCF instances may be deployed in the 5G network. Each PCF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Name	The name of the PCF range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
PLMN MCC	The PLMN MCC for this PCF range. <b>About PLMN MCC ...</b> A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001. The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.
PLMN MNC	The PLMN MNC for this PCF range. <b>About PLMN MNC ...</b> The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.
RFSP	The value of RAT/Frequency Selection Priority (RFSP) index.
Include Request in Response	Enable this option to include the request in the response message.
Default Charging Method Offline	If needed, enable this option.

Setting	Description
Default Charging Method Online	If needed, enable this option.
Retrieve Operator Specific Data	Retrieve Operator Specific Data from UDR during SM Policy Establishment.
Triggers	<p>Request Triggers to which the PCF subscribes. The allowed values are:</p> <ul style="list-style-type: none"> <li>• Location Change (tracking area). The tracking area of the UE has changed.</li> <li>• PRA Change (change of UE presence in PRA). The UE is entering/leaving a Presence Reporting Area.</li> </ul> <p>Both values can be selected simultaneously.</p>
Ask Result Notification from SMF for Create/Delete QoS Flow	If needed, enable this option.
Retrieve AM Policy Data	If enabled, the PCF will retrieve AM Policy data from UDR.
RAT Type Awareness	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Ignore</b></li> <li>• <b>5G Only</b></li> <li>• <b>4G Only</b></li> </ul>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## PCRF Node settings

The following settings are required to configure the PCRF node.

Settings	Description
Rx Interface Settings	Select the check-box to enable this option, and then open the <a href="#">Rx Interface Settings</a> panel for editing.
Gx Interface Settings	<p><b>IMPORTANT</b> This menu is available only if <b>RAT Type</b> value under <a href="#">PCF Range panel</a> is set to <b>4G</b>.</p> <p>Select to open the <a href="#">Gx Interface Settings</a> panel for editing.</p>

## Rx/Gx Interface Settings

The following settings are available to configure the Rx/Gx Interface.

<b>Settings</b>	<b>Description</b>
<i>Diameter Settings</i>	<i>Select to open the Diameter settings panel.</i>
<i>Origin Host Prefix</i>	Set the origin host prefix. Default value: <b>host</b> .
<i>Origin Realm</i>	Set the origin realm. Default value: <b>keysight.com</b> .
<i>Local SCTP Port</i>	The local SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.
<i>SCTP Parameters</i>	<i>Select to open the configuration panel.</i>
<i>Avoid Bundling of Data Chunks</i>	Select this option to enable it. It turns on/off any Nagle-like algorithm. This means that packets are generally sent as soon as possible and no unnecessary delays are introduced, at the cost of more packets in the network.
<i>Minimum Retransmission Timeout (ms)</i>	Set the minimum retransmission timeout value, in milliseconds.
<i>Maximum Retransmission Timeout (ms)</i>	Set the maximum retransmission timeout value, in milliseconds.
<i>Initial Retransmission Timeout (ms)</i>	Set the initial retransmission timeout value, in milliseconds.
<i>Maximum Retransmission per Association</i>	Set the maximum retransmissions value per association.
<i>Maximum Retransmission per Path</i>	Set the maximum retransmissions value per path.
<i>Heartbeat Interval (ms)</i>	Set the heartbeat interval value, in milliseconds.
<i>SACK Delay (ms)</i>	Set the delayed selective ACK timeout value.
<i>SACK Frequency</i>	Set the delayed selective ACK frequency value.
<i>SCTP Buffers</i>	<i>Select to open the configuration panel.</i>
<i>Tx Buffers</i>	The size (in bytes) of transmit buffers for the SCTP sockets.

<b>Settings</b>	<b>Description</b>
(bytes)	
Rx Buffers (bytes)	The size (in bytes) of receive buffers for SCTP sockets.
<i>Connectivity Settings</i>	
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i>

Settings	Description
	Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.

## PCF service area restrictions

The policy information sent from the PCF to AMF may contain service area restrictions for the UE. This means that the UE's access to the network resources can be restricted or limited.

The following configuration settings are required in order to define service area restrictions.

Setting	Description
<i>Service Area Restrictions:</i>	
Restriction type	Set the restriction type attribute: <ul style="list-style-type: none"> <li>• Allowed Areas</li> <li>• Not Allowed Areas</li> </ul>
Max No. Of TAs	The maximum number of allowed TAs that can be traversed.

## Areas

The following configuration settings are required in order to define the tracking area identities.

For each PCF range in your test configuration, you can add and delete AREAS as required to meet your test objectives.

Setting	Description
<i>Areas:</i>	
	Select the <b>Add Area</b> button to add a new restriction area to your configuration.
<i>Area:</i>	
	Select the <b>Delete Area</b> button to remove the restriction area from your configuration.
Area Codes	Set the area code. Location Area Code (LAC) is a fixed length code (two octets) identifying a location area within a PLMN.
<i>TACS:</i>	
	This represents the Tracking Area Code (TAC) for this eNodeB. Select the <b>Add TAC</b> button to add a new TAC to your configuration.

Setting	Description
	A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).
	Select the <b>Delete</b> button to remove the tracking area code from your configuration.

After configuring it, the Service Area Restriction information consists of:

- either:
  - the maximum number of allowed TAs that can be traversed encoded as Max No. Of TAs attribute, and/or
  - both of :
    - a list of allowed Tracking Area Identities (TAIs) encoded as TACS attributes within the AREA attribute
    - the restriction type attribute set to Allowed Areas
- or:
  - a list of not allowed Tracking Area Identities (TAIs) encoded as TACS attributes within the AREA attribute, and
  - the restriction type attribute set to Not Allowed Areas

## PCF Npcf interface settings

Npcf is the service-based interface through which a PCF instance makes its services available to other services in a 5G network. The following **Connectivity Settings** enable the necessary Npcf connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either

<b>Connectivity Settings</b>	<b>Description</b>
	HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
<i>mTLS Server Settings</i>	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
<i>mTLS Client Settings</i>	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and	You can use the <b>Upload</b> button to add the archive that contains an equal

<b>Connectivity Settings</b>	<b>Description</b>
Private Keys (.zip )	number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## PCF remote SBA nodes

### UDR Connection Settings

The Unified Data Repository (UDR) stores policy data that is used by the PCF.

To connect to the UDR node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>UDR Connectivity Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer UDR</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer UDR	Select the peer UDR using either of the following methods: <ul style="list-style-type: none"> <li>Select the IP address of the UDR node. This is the destination address of the UDR node to which the packets are sent over the Nudr interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service.</li> </ul> Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.
Protocol	The protocol to use for Nudr communications. It can be either HTTP or HTTPS.
Port	The UDR port number to use for Nudr communications. The default is port 80, but you can choose a different port number.


### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI	Select the node from the drop-down list.

Setting	Description
Fuzzer	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## RAN configuration settings



In wireless networks, a Radio Access Network (RAN) is the network that enables user endpoints, such as mobile phones, to communicate and access core network resources. The Full Core test topology supports both the 5G gNodeB and the 4G eNodeB. In each case, the RAN provides access and coordinates the management of resources across the radio sites. Multiple instances of RAN may be deployed.


The configuration settings are described in the topics listed below.

### Topics:

<b>gNodeB .....</b>	<b>363</b>
gNodeB Ranges panel .....	364
gNodeB Range settings .....	369
gNodeB node settings .....	370
gNodeB NSSAI settings .....	372
gNodeB N2 interface settings .....	373
gNodeB N3 interface settings .....	375
<b>eNodeB .....</b>	<b>378</b>
eNodeB Ranges panel .....	379
eNodeB Range Settings .....	383
eNodeB Node Settings .....	383
<b>Passthrough interface settings .....</b>	<b>385</b>

## gNodeB

To configure one or more gNodeB ranges for a test, select gNodeB from the RAN panel.

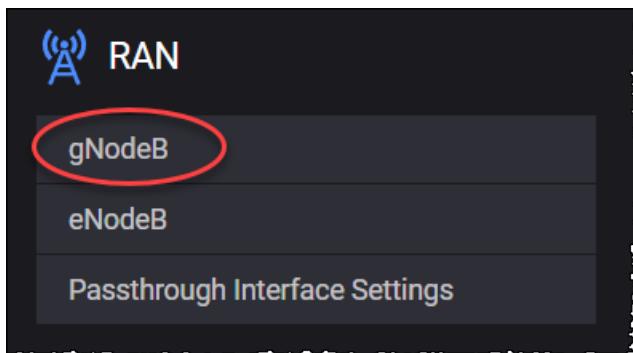

The following topics describe the gNodeB configuration settings:

<b>gNodeB Ranges panel</b> .....	<b>364</b>
<b>gNodeB Range settings</b> .....	<b>369</b>
<b>gNodeB node settings</b> .....	<b>370</b>
<b>gNodeB NSSAI settings</b> .....	<b>372</b>
<b>gNodeB N2 interface settings</b> .....	<b>373</b>
<b>gNodeB N3 interface settings</b> .....	<b>375</b>

## gNodeB Ranges panel


The **gNodeB Ranges** panel opens when you select **gNodeB** from the RAN pane. It consists of two main section: Ranges and Ranges Connectivity.

### Ranges

On the Ranges section, you can perform the following task:


- Add a new gNodeB range to your test configuration.
- Open a gNodeB range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

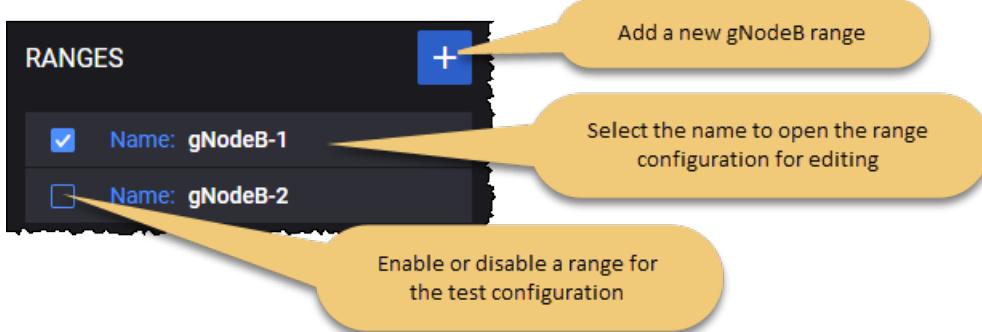


### Ranges Connectivity

The Ranges Connectivity section allows you to configure Xn links between gNodeB ranges for handovers. This section is displayed as a matrix of check-boxes, each selected check-box represents an Xn link between ranges on the line and the range on the column.

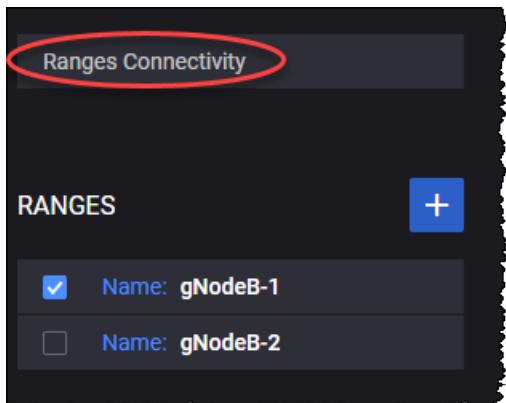

Note that to configure the Xn links between gNodeB ranges, you need to add at least two gNodeB ranges. If there are fewer than two gNodeB ranges, LoadCore displays the following message: "Two or more ranges are required to configure Xn links".

Due to the fact that the Xn links are bidirectional the Range Connectivity matrix is only half full of check-boxes.

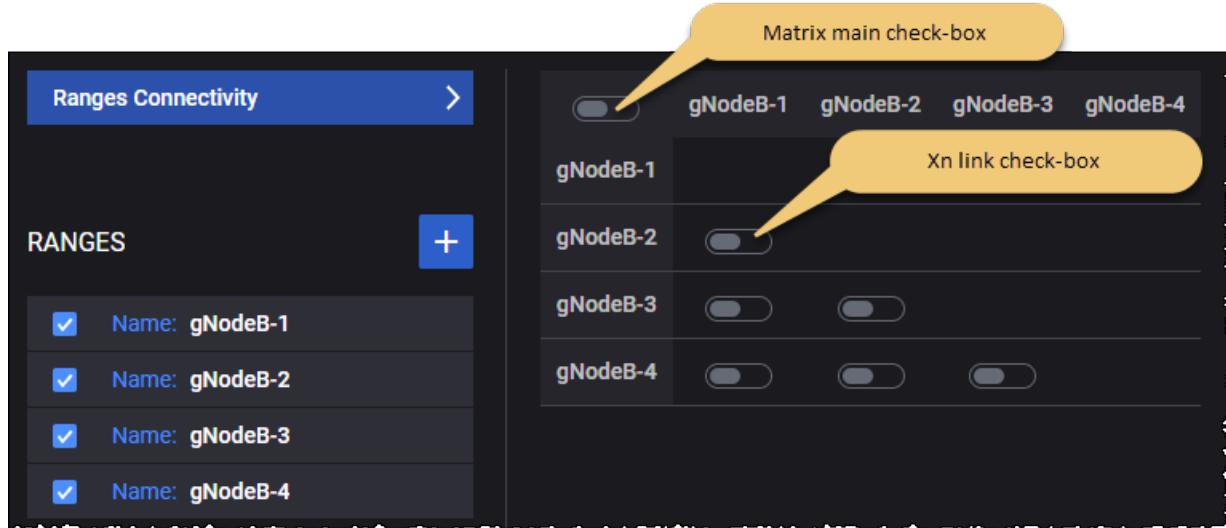

Each Xn link check-box can have one of the following states:

State	Description
Selected and blue color	An Xn link connection is established between enabled gNodeB ranges.
Selected and grey color	An Xn link connection is established between disabled gNodeB ranges.
Unselected	No Xn link connection between gNodeB ranges.

To see all the Xn links for a particular gNodeB range, you need to read the line of that range and then the column of that range.

If none of the links is marked as an Xn link then only N2 handovers will be performed.

Hovering over a specific gNodeB range from the Ranges Connectivity matrix highlights the row and displays more details about the connectivity/range status.

When a gNodeB range is disabled you are not able to select any Xn link for that specific gNodeB range.

The screenshot shows the 'Ranges Connectivity' configuration screen. On the left, under 'RANGES', there is a list of gNodeB ranges: gNodeB-1, gNodeB-2, gNodeB-3, gNodeB-4 (disabled), gNodeB-5, and gNodeB-6. The 'gNodeB-4' range is circled in red. On the right, a grid shows connections between these ranges. The columns are labeled gNodeB-1, gNodeB-2, gNodeB-3, gNodeB-4, gNodeB-5, and gNodeB-6. The rows are also labeled gNodeB-1 through gNodeB-6. A red box highlights the row for 'gNodeB-4'. Arrows point from the circled 'gNodeB-4' in the list to the highlighted row in the grid, and from the highlighted row in the grid to the 'gNodeB-4' row in the list.

If there was an Xn link between two gNodeB ranges and now one of them is disabled, the check-box will become greyed out and cannot be unselected.

**NOTE**

None of the Xn links that are part of disabled gNodeB ranges are sent to the traffic agent.

**For example ...**

1. The disabled range gNodeB-4 had an Xn link with gNodeB-3. The selected check-box is greyed out. This Xn link will not be sent to the traffic agent.

This screenshot shows the same 'Ranges Connectivity' interface after some changes. The 'RANGES' list now includes gNodeB-1, gNodeB-2, gNodeB-3, gNodeB-4 (disabled), gNodeB-5 (enabled), and gNodeB-6. The 'gNodeB-4' range is circled in red. In the grid, the connection between gNodeB-3 and gNodeB-4 is now greyed out (indicated by a greyed-out checkmark). The connection between gNodeB-3 and gNodeB-6 is also greyed out. The 'gNodeB-5' and 'gNodeB-6' rows in the grid have blue checkmarks in their first two columns, while the last four columns are greyed out.

2. The gNodeB-3 range was enabled on previous step and there were selected Xn links between gNodeB-3/gNodeB-4 and gNodeB-3/gNodeB-6. Due to the fact that gNodeB-3 is now disabled, the check-box for Xn links between gNodeB-3 and gNodeB-6 have become greyed out.

	gNodeB-1	gNodeB-2	gNodeB-3	gNodeB-4	gNodeB-5	gNodeB-6	gNodeB-7
gNodeB-1	<input type="checkbox"/>						
gNodeB-2	<input checked="" type="checkbox"/>	<input type="checkbox"/>					
gNodeB-3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>				
gNodeB-4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
gNodeB-5	<input checked="" type="checkbox"/>	<input type="checkbox"/>					
gNodeB-6	<input checked="" type="checkbox"/>	<input type="checkbox"/>					
gNodeB-7	<input checked="" type="checkbox"/>						

The first cell of matrix contains a main check-box that displays the state of the matrix and perform operations.

State	Description	Operation
Selected	All connected.	If the main check-box is Selected, you can undo the selection to change the state to Unselected and all Xn links from the connectivity matrix will become unselected (none connected).
Unselected	None connected.	If the main check-box is Unselected, you can select it to change the state to Checked and all Xn links from the connectivity matrix will become selected (all connected).

When the main matrix check-box is selected all the Xn link check-boxes from the matrix become selected.

	gNodeB-1	gNodeB-2	gNodeB-3	gNodeB-4	gNodeB-5	gNodeB-6	gNodeB-7
gNodeB-1	<input checked="" type="checkbox"/>						
gNodeB-2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>					
gNodeB-3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				
gNodeB-4	<input checked="" type="checkbox"/>						
gNodeB-5	<input checked="" type="checkbox"/>						
gNodeB-6	<input checked="" type="checkbox"/>						
gNodeB-7	<input checked="" type="checkbox"/>						

Even the Xn link check-boxes for disabled gNodeB ranges are selected since the Xn links for disabled gNodeB ranges are not sent to the traffic agent. This way, when the disabled gNodeB range is

enabled, you will not have to manually select the Xn link check-boxes for that particular gNodeB range.

## gNodeB Range settings

You add and select gNodeB ranges from the gNodeB Ranges panel. When you select the name of an gNodeB range, LoadCore opens the **Range** panel, from which you can:

- Delete the gNodeB range from the test configuration.
- Designate the range as a **Device Under Test**.
- Specify the number of gNodeB nodes to configure for the range.
- Select **Range Settings** to configure the node and connectivity settings for the gNodeB range.

## gNodeB range controls and settings

Each gNodeB range is identified by a unique name. You can add and delete ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each gNodeB range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your gNodeB is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the gNodeB functionality (if it is selected in the Topology window).
Range Count	The number of gNodeBs in the gNodeB range.
<i>Range Settings:</i>	
Node Settings	Each gNodeB range requires the configuration of an associated set of Node Settings, which are described in <a href="#">gNodeB node settings</a> .
NSSAI	Each gNodeB range requires the configuration of at least one NSSAI, and may specify multiple NSSAIs. These settings are described in <a href="#">gNodeB NSSAI settings</a> .
N2 Interface Settings	Each gNodeB range requires the configuration of N2 interface settings, through which a gNodeB instance enables connectivity and interaction with the AMF component in the 5G network. These settings are described in <a href="#">gNodeB N2 interface settings</a> .
N3 Interface Settings	Each gNodeB range requires the configuration of N3 interface settings, through which a gNodeB instance enables connectivity and interaction with the UPF component in the 5G network. These settings are described in <a href="#">gNodeB N3 interface settings</a> .

## gNodeB node settings

Each gNodeB range includes a set of Node Settings.

### Node Settings

Each gNodeB instance (that is, each range) is identified by the following node settings.

Setting	Description
Name	Multiple gNodeB instances may be deployed in the 5G network. Each gNodeB instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN MCC for this gNodeB range.
PLMN MNC	The PLMN MNC for this gNodeB range.
Tracking area code	The Tracking Area Code to use for the nodes in this range.
gNodeB ID	The gNodeB Identifier. It is used to uniquely identify each gNodeB within a PLMN. The gNodeB ID is contained within the NCI of its cells. When the gNodeB <i>Range Count</i> setting is greater than 1, LoadCore increments the <i>gNodeB ID</i> setting for each gNodeB.
gNodeB ID Length	The number of bits from the Cell Identity to use as the gNodeB ID.
Cell ID	The NR Cell Identity (NCI) for the cell associated with this node range.
Connection Timeout (ms)	The S1AP connection timeout.
Perform Load Balancing	Select the option to enable it. Performs load balancing between MMEs from the same MME group for initial attach.
Dynamic RAN UE NGAP/S1AP ID	If enabled, it will allocate dynamic RAN UE NGAP/S1AP ID values at Service Request.

### EPS Fallback Settings

The **Enable EPS Fallback** check box enables the UE to switch from the 5G core network (5GC) to a LTE/EPS connection in order to avoid bad connection quality. This is done using a 5G to 4G inter-RAT handover (during which the session management and user plane tunnels in the core network are handed over from SMF/UPF to MME/S-GW).

The following parameters are required to configure the EPS fallback:

Setting	Description
Enable EPS Fallback	Select the check box to enable this option.
5QI	Select the 5G QoS identifier that will trigger the EPS fallback procedure. (The 5QI must be defined on the <a href="#">QoS Flow configuration settings on page 102</a> panel in the <b>Global Settings</b> .) When a request is received for this 5QI to create a dedicated QoS flow, the RAN will reject the request, which will trigger the EPS fallback procedure.
Associated ENB	Select the eNodeB used for handover.
Secondary Node	Select the secondary node from the drop-down list. This option is used for EPS fallback to an eNodeB associated to a gNodeB using Option 3x.
EPS Fallback Mobility	Type of mobility to EPS during EPS fallback. Select an option from the drop down list: <ul style="list-style-type: none"> <li>• <b>Handover to 4G</b></li> <li>• <b>Inter-System Redirection to 4G</b></li> </ul>
EPS Fallback Return Mobility	Type of mobility that occurs after the deletion of the dedicated bearer that triggered EPS fallback. Select an option from the drop down list: <ul style="list-style-type: none"> <li>• <b>None</b> - After the dedicated bearer is deleted in 4G, the UE will not initiate any procedure.</li> <li>• <b>Connected Mode Handover to 5G</b> (default value) - After the dedicated bearer is deleted in 4G, the UE will initiate a 4G to 5G Connected Mode Handover.</li> <li>• <b>Idle Mode Mobility to 5G</b> - After the dedicated bearer is deleted in 4G, the UE will perform an Enter Idle procedure in 4G, followed by a 4G to 5G iRAT Idle Mode Mobility.</li> </ul>
Send Service Request After EPS Fallback Return Mobility	By default, this option is disabled. Send Service Request immediately after returning to 5G when Idle Mode Mobility to 5G was performed.

The following options can be enabled under the **User Plane Security** pane:

- Enable Integrity ( by default, this option is disabled)
- Enable Confidentiality ( by default, this option is disabled)

**NOTE** User Plane Security settings are not taken into account for N2 Handover procedure.

The following parameters are required under the **Public Warning System** pane:

Setting	Description
Public Warning System	Select the check box to enable this option.
PWS Restart Timer (s)	Duration in seconds after which PWS Restart Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38413 , 8.9.3 PWS Restart Indication</i> .
PWS Failure Timer (s)	Duration in seconds after which PWS Failure Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38413 , 8.9.4 PWS Failure Indication</i> .

**NOTE**

If the *Public Warning System* option is enabled and both PWS Restart and PWS Failure procedures are configured to be initiated (non-zero timers), the timers should be different.

## gNodeB NSSAI settings

Each UE range requires at least one NSSAI range.

NSSAI (Network Slice Selection Assistance Information) includes one or more NSAAIs. Each network slice is uniquely identified by a specific NSSAI.

The slice assistance information comprises a list of one or more NSSAIs, where an NSSAI is a combination of:

- An 8-bit mandatory SST (Slice/Service Type) field, which identifies the slice type.
- An SD (Slice Differentiator) field, which differentiates among Slices that have the same SST field and consist of 24 bits.

An NSSAI information element identifies a network slice. In addition to the SST and SD, it can also include an optional Mapped Configured SST and an optional Mapped Configured SD.

For each gNodeB range in your test configuration, you can add and delete NSSAIs (NASSAI 1, NSSAI 2,...NSSAI X) as required to meet your test objectives.

The gNodeB NSSAI slices are the ones supported per TA level, that will be sent in NGAP messages (for example NG Setup).

The following table describes the configuration settings that are required for each NSSAI.

Setting	Description
<i>NSSAI:</i>	
	Select the Add NSSAI button to add a new NSSAI to your test configuration.
<i>NSSAI settings:</i>	
	Select the Delete NSSAI button to delete this NSSAI from your test configuration.

<b>Setting</b>	<b>Description</b>														
SST	The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:														
	<table border="1"> <thead> <tr> <th><b>SST</b></th> <th><b>Value</b></th> <th><b>Suitable for handling:</b></th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> <td>5G enhanced Mobile Broadband</td> </tr> <tr> <td>URLCC</td> <td>2</td> <td>ultra-reliable low-latency communications</td> </tr> <tr> <td>MIoT</td> <td>3</td> <td>massive IoT</td> </tr> </tbody> </table>			<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>	eMBB	1	5G enhanced Mobile Broadband	URLCC	2	ultra-reliable low-latency communications	MIoT	3	massive IoT
<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>													
eMBB	1	5G enhanced Mobile Broadband													
URLCC	2	ultra-reliable low-latency communications													
MIoT	3	massive IoT													
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.														
Mapped SST	The Mapped configured Slice/Service Type (SST) value for this specific NSSAI.														
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this specific NSSAI.														

## gNodeB N2 interface settings

N2 is the user plane interface between the gNodeB and the AMF.

When the gNodeB node is used as secondary node on a UE Range (either in the Parent RAN > [Secondary Node](#) section or in the [Handover](#) objective), the option to enable/disable the N2 interface is displayed.

By default, the N2 interface check box is enabled.

When the gNodeB node is used only as secondary node on a UE Range (either in the Parent RAN > [Secondary Node](#) section or in the [Handover](#) objective), the option to enable/disable the N2 interface is displayed.

The following configuration settings are required by each gNodeB N2 range.

### N2 Interface Settings

<b>Settings</b>	<b>Description</b>
Peer AMF	The IP address of the AMF node connected to gNodeB over the N2 interface.
Destination port	The destination Stream Control Transmission Protocol (SCTP) port for control plane messages (NG-AP signaling messages) on the N2 interface.
SCTP source port	The source SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport

<b>Settings</b>	<b>Description</b>
	addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.
<i>SCTP Parameters</i>	
Avoid Bundling of Data Chunks	Select this option to enable it. It turns on/off any Nagle-like algorithm. This means that packets are generally sent as soon as possible and no unnecessary delays are introduced, at the cost of more packets in the network.
Minimum Retransmission Timeout (ms)	Set the minimum retransmission timeout value, in milliseconds.
Maximum Retransmission Timeout (ms)	Set the maximum retransmission timeout value, in milliseconds.
Initial Retransmission Timeout (ms)	Set the initial retransmission timeout value, in milliseconds.
Maximum Retransmission per Association	Set the maximum retransmissions value per association.
Maximum Retransmission per Path	Set the maximum retransmissions value per path.
Heartbeat Interval (ms)	Set the heartbeat interval value, in milliseconds.
SACK Delay (ms)	Set the delayed selective ACK timeout value.
SACK Frequency	Set the delayed selective ACK frequency value.

## Connectivity Settings

<b>Settings</b>	<b>Description</b>
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.

Settings	Description
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Emulated Router Address	Set the IPv4 or IPv6 address for the emulated router. This allows to hide all messages from the interface behind a MAC address.  NOTE      This option can be used only with IxStack stack.
Emulated Router Address Prefix Length	Set the IP network mask for the emulated router.
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	 IMPORTANT <i>This option is visible only when the Outer VLAN is selected.</i>  <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID..

## gNodeB N3 interface settings

N3 is the user plane interface between the gNodeB and the UPF.

The following configuration settings are required by each gNodeB N3 range.


NOTE      The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Emulated Router Address	Set the IPv4 or IPv6 address for the emulated router. This allows to hide all messages from the interface behind a MAC address. <b>NOTE</b> This option can be used only with IxStack stack.
Emulated Router Address Prefix Length	Set the IP network mask for the emulated router.
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

<b>Connectivity Settings</b>	<b>Description</b>
VLAN TPID	VLAN tag protocol ID..

## eNodeB

To configure one or more eNodeB ranges for a test, select **eNodeB** from the RAN panel.

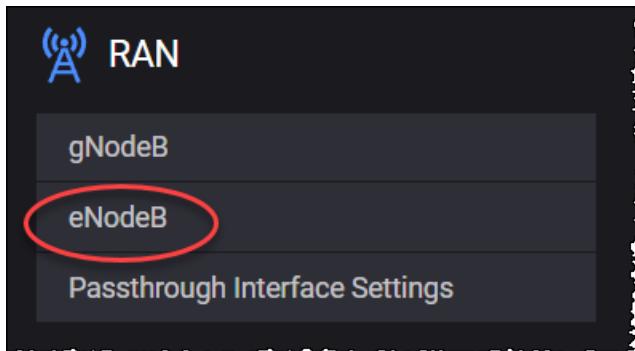

The following topics describe the eNodeB configuration settings:


<b>eNodeB Ranges panel</b> .....	<b>379</b>
<b>eNodeB Range Settings</b> .....	<b>383</b>
<b>eNodeB Node Settings</b> .....	<b>383</b>

## eNodeB Ranges panel

The **eNodeB Ranges** panel opens when you select the **eNodeB** node from the **RAN** pane. On the Ranges panel, you can perform the following task:

- Add a new eNodeB range to your test configuration.
- Open a eNodeB range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

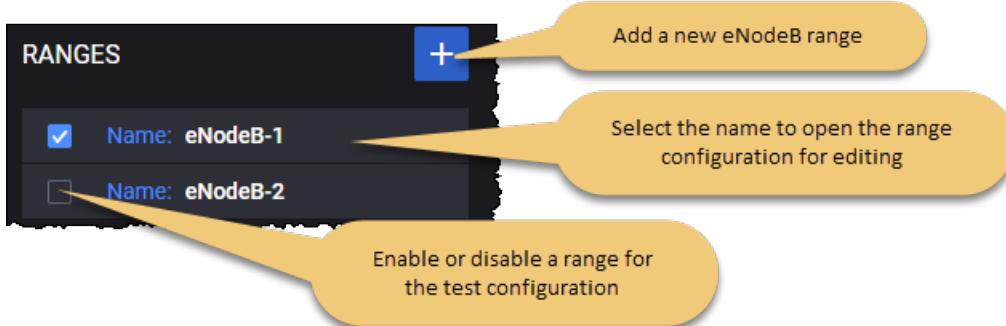


## Ranges Connectivity

The Ranges Connectivity section allows you to configure X2 links between eNodeB ranges for handovers. This section is displayed as a matrix of check-boxes, each selected check-box represents an X2 link between ranges on the line and the range on the column.

Note that to configure the X2 links between eNodeB ranges, you need to add at least two eNodeB ranges. If there are fewer than two eNodeB ranges, LoadCore displays the following message: "Two or more ranges are required to configure X2 links".

Due to the fact that the X2 links are bidirectional the Range Connectivity matrix is only half full of check-boxes.

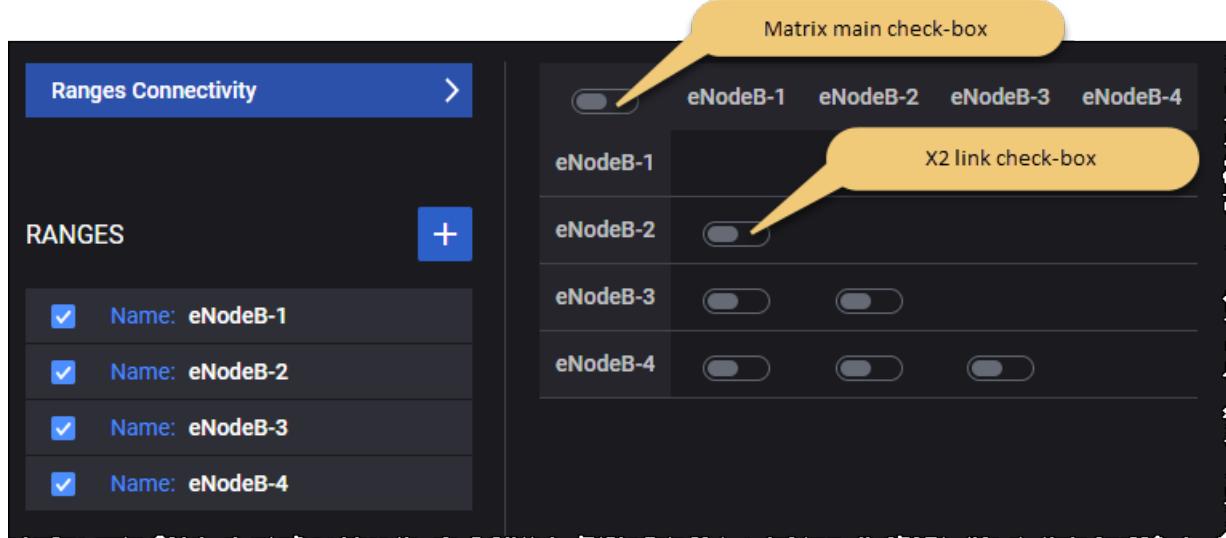

Each X2 link check-box can have one of the following states:


State	Description
Selected and blue color	An X2 link connection is established between enabled eNodeB ranges.
Selected and grey color	An X2 link connection is established between disabled eNodeB ranges.
Unselected	No X2 link connection between eNodeB ranges.

To see all the X2 links for a particular eNodeB range, you need to read the line of that range and then the column of that range.

If none of the links is marked as an X2 link then only S1 handovers will be performed.

Hovering over a specific eNodeB range from the Ranges Connectivity matrix highlights the row and displays more details about the connectivity/range status.

When a eNodeB range is disabled you are not able to select any X2 link for that specific eNodeB range.

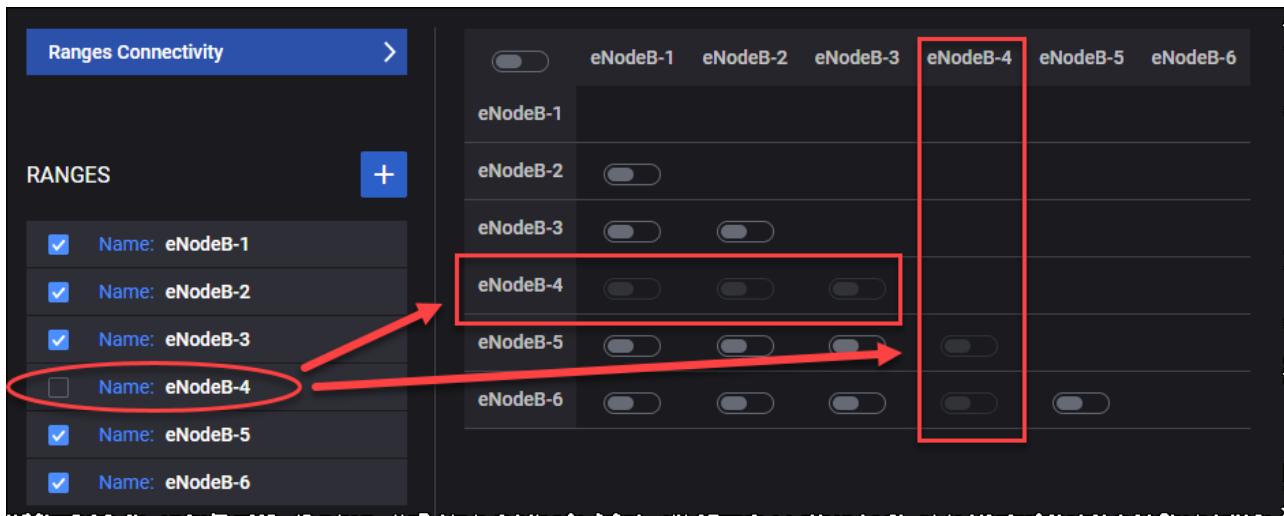


If there was an X2 link between two eNodeB ranges and now one of them is disabled, the check-box will become greyed out and cannot be unselected.

**NOTE** None of the X2 links that are part of disabled eNodeB ranges are sent to the traffic agent.

### For example ...

1. The disabled range eNodeB-4 had an X2 link with eNodeB-3. The selected check-box is greyed out. This X2 link will not be sent to the traffic agent.

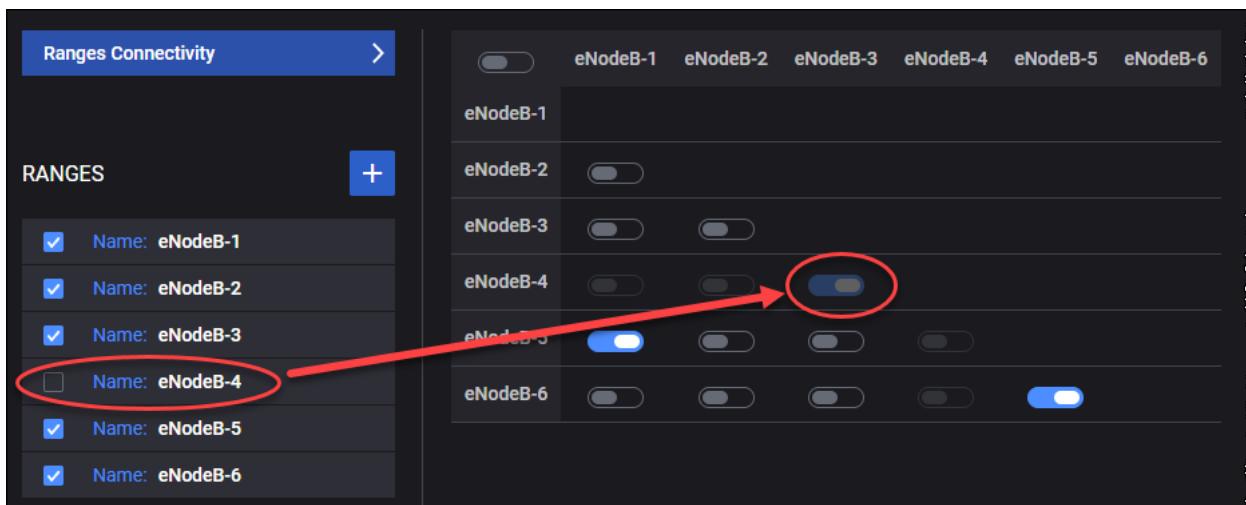

2. The eNodeB-3 range was enabled on previous step and there were selected X2 links between eNodeB-3/eNodeB-4 and eNodeB-3/eNodeB-6. Due to the fact that eNodeB-3 is now disabled, the check-box for X2 links between eNodeB-3 and eNodeB-6 have become greyed out.

The screenshot shows the 'Ranges Connectivity' interface. On the left, there's a list of 'RANGES' with checkboxes next to each entry. The entries are:

- Name: eNodeB-1
- Name: eNodeB-2
- Name: eNodeB-3
- Name: eNodeB-4
- Name: eNodeB-5
- Name: eNodeB-6
- Name: eNodeB-7

To the right is a 7x7 matrix of checkboxes, with the columns and rows labeled from eNodeB-1 to eNodeB-7. The first column contains a main checkbox at the top, followed by individual checkboxes for each row. The matrix shows various states of connectivity between the nodes.

The first cell of matrix contains a main check-box that displays the state of the matrix and perform operations.

State	Description	Operation
Selected	All connected.	If the main check-box is Selected, you can undo the selection to change the state to Unselected and all X2 links from the connectivity matrix will become unselected (none connected).
Unselected	None connected.	If the main check-box is Unselected, you can select it to change the state to Checked and all X2 links from the connectivity matrix will become selected (all connected).

When the main matrix check-box is selected all the X2 link check-boxes from the matrix become selected.

This screenshot is similar to the one above, but the main matrix checkbox at the top-left of the matrix is now highlighted with a red circle. All other checkboxes in the matrix are also highlighted in blue, indicating they are now selected.

Even the X2 link check-boxes for disabled eNodeB ranges are selected since the X2 links for disabled eNodeB ranges are not sent to the traffic agent. This way, when the disabled eNodeB range is

enabled, you will not have to manually select the X2 link check-boxes for that particular eNodeB range.

## eNodeB Range Settings

Each eNodeB range is identified by a unique name. You can add and delete ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each eNodeB range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	The number of eNodeBs in the range.
<i>Range Settings:</i>	
Node Settings	Each eNodeB range requires the configuration of an associated set of Node Settings, which are described in <a href="#">eNodeB node settings</a> .

## eNodeB Node Settings

Each eNodeB instance (that is, each range) is identified by the following node settings.

Setting	Description
Name	The name of this eNodeB range. Multiple eNodeB instances (ranges) may be deployed in the test network. Each eNodeB instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN MCC for this eNodeB range.
PLMN MNC	The PLMN MNC for this eNodeB range.
Tracking area code	The Tracking Area Code to use for the nodes in this range.
eNodeB ID	The eNodeB ID uniquely identifies an eNodeB within a Public Land Mobile Network (PLMN). When the eNodeB <i>Range Count</i> setting is greater than 1, LoadCore increments the <i>eNodeB ID</i> setting for each eNodeB.
eNodeB ID Length	The number of bits to use for the eNodeB ID. It can have either 20 bits or 28 bits.
Cell ID	The Cell Identifier for this eNodeB range. The Cell Identifier is an 8-bit value that

Setting	Description
	identifies a cell within the eNodeB. The same Cell Identifier is used for each eNodeB defined in a range.
Connection Timeout (ms)	The S1AP connection timeout.
Perform Load Balancing	Select the option to enable it. Performs load balancing between MMEs from the same MME group for initial attach.
Dynamic RAN UE NGAP/S1AP ID	If enabled, it will allocate dynamic RAN UE NGAP/S1AP ID values at Service Request.

The following parameters are required under the **Public Warning System** pane:


Setting	Description
Public Warning System	Select the check box to enable this option.
PWS Restart Timer (s)	Duration in seconds after which PWS Restart Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38.413, 8.9.3 PWS Restart Indication</i> . Values should be in range 0-86400. Default value: <b>0</b> .
PWS Failure Timer (s)	Duration in seconds after which PWS Failure Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38.413, 8.9.4 PWS Failure Indication</i> . Values should be in range 0-86400. Default value: <b>0</b> .

**NOTE**

If the *Public Warning System* option is enabled and both PWS Restart and PWS Failure procedures are configured to be initiated (non-zero timers), the timers should be different.

## Passthrough interface settings

To configure the passthrough interface settings, select **Passthrough Interface Settings** from the RAN panel.

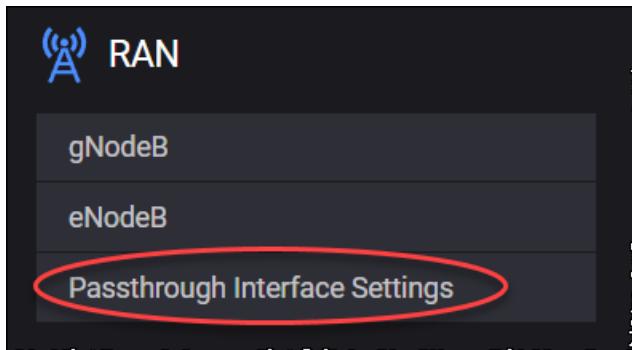

The configuration of the passthrough interface is required when passthrough is enabled in the UE settings. This interface will wait for an external traffic source.

The following settings are required for the passthrough interface configuration.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address assigned as the gateway address for the external traffic source.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
<i>Outer VLAN</i>	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.

Connectivity Settings	Description
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

# SBI Fuzzer configuration settings



SBI Fuzzer intercepts requests and responses from a node and applies different modification algorithms to the message's body. SBI Fuzzer only modifies messages that contain a JSON body (content-type: application/json).

The configuration settings are described in the topics listed below.

## Topics:


<b>SBI Fuzzer Ranges panel</b>	<b>387</b>
<b>SBI Fuzzer Range panel</b>	<b>388</b>
<b>SBI Fuzzer interface settings</b>	<b>389</b>
<b>SBI Fuzzer Target Node</b>	<b>390</b>

## SBI Fuzzer Ranges panel

The **SBI Fuzzer Ranges** panel opens when you select the SBI Fuzzer node from the network topology window. You can perform the following tasks from this panel:

- Add a new SBI Fuzzer range to your test configuration.
- Open a SBI Fuzzer range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

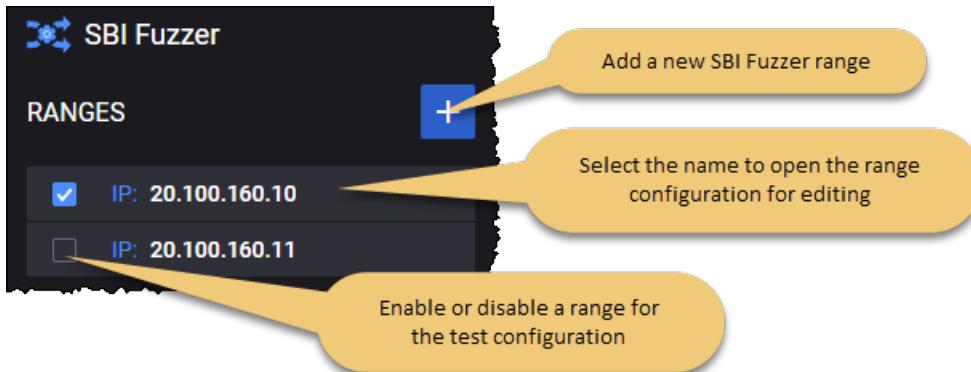

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**
- **All Ranges on One Agent**



Distribution modes change based on the number of ranges and agents configured on this node.

## SBI Fuzzer Range panel

You add and select SBI Fuzzer ranges from the SBI Fuzzer Ranges panel. When you select a SBI Fuzzer's IP address from the **SBI Fuzzer Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected SBI Fuzzer range from the test configuration.
- Use the **Range Settings** to configure the node and connectivity settings for the SBI Fuzzer range.

### SBI Fuzzer range controls and settings

Each SBI Fuzzer range is identified by a unique IP address. You can add and delete SBI Fuzzer ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each SBI Fuzzer range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
Node Settings	Each SBI Fuzzer range requires the configuration of an associated set of Node Settings, which are described in <a href="#">SBI Fuzzer node settings</a> .
Interface Settings	These settings are described in <a href="#">SBI Fuzzer interface settings</a> .
Target Nodes	The target node settings are described in <a href="#">SBI Fuzzer target nodes</a> .

## SBI Fuzzer Node Settings

The following table describes the available SBI Fuzzer Node Settings.

Setting	Description
Instance ID	Each SBI Fuzzer instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Fuzzed Messages	Select from the drop-down the type of HTTP message the fuzzing algorithm should be applied to. Available options: <ul style="list-style-type: none"> <li>• <b>Requests Only</b></li> <li>• <b>Responses Only</b></li> <li>• <b>Requests and Responses</b></li> </ul>

Setting	Description
Fuzzing Algorithm	Select the fuzzing algorithm type from the drop-down list. Available options: <ul style="list-style-type: none"> <li><b>Forward Unchanged</b> - does not modify the original body.</li> <li><b>Duplicated JSON Values</b> - duplicates a random key-value pair from the original body.</li> <li><b>Extra JSON Values</b> - adds extra key-value pairs that are generated randomly to the original body.</li> <li><b>Extra Spaces</b> - adds extra spaces.</li> <li><b>Integer Overflow</b> - modifies integer value to an overflow value.</li> <li><b>Duplicated JSON Entries With Wrong Values</b> - duplicates a random key from the original body and modifies its value to a random string.</li> </ul>
NOTE	Although <code>content-type: multipart/related</code> may contain JSON parts, this type of message will not be fuzzed.
NOTE	SBI Fuzzer cannot be used in combination with SCP or SEPP.
NOTE	Messages with <code>content-type: application/problem+json</code> will not be modified.
NOTE	Impairment script cannot be applied to the agent on which SBI Fuzzer runs on.

## SBI Fuzzer interface settings

The following **Connectivity Settings** enable the necessary SBI Fuzzer connectivity.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.

<b>Connectivity Settings</b>	<b>Description</b>
Additional Routes	<i>The additional route is needed if the source IP is not of a node simulated in LoadCore.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
mTLS Server Settings	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.


## SBI Fuzzer Target Node

To connect to the target node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
SBA Peer	Select the peer node from the drop-down list. Available options: <b>None</b> (default value), <b>NRF</b> , <b>AUSF</b> , <b>PCF</b> , <b>UDR</b> , <b>NSSF</b> , <b>SMSF</b> , <b>EIR</b> , <b>CHF</b> , <b>SEPP</b> , <b>AMF</b> , <b>UDM</b> , <b>NEF</b> , <b>SMF</b> , <b>SCP</b> .

Setting	Description
IP Address	Set the IP address of the peer node.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.

## SCP configuration settings



Service Communication Proxy (SCP) allows the user to use Indirect Communication between SBA nodes. As of now, only model C is supported which uses the `3gpp-Sbi-Target-apiRoot` custom header. Spec version R16 September 2020 is required to use this feature.

The Service Communication Proxy (SCP) enables an important role within the 5G Service Based Architecture (SBA), providing functions ranging from simplifying network topology by applying signaling aggregation and routing, to overload handling, message parameter harmonization and load balancing.

The configuration settings are described in the topics listed below.

### Topics:


<b>SCP Ranges panel</b>	<b>392</b>
<b>SCP Range panel</b>	<b>393</b>
<b>SCP Nscp interface settings</b>	<b>394</b>
<b>SCP Remote SBA Nodes</b>	<b>395</b>

### SCP Ranges panel

The **SCP Ranges** panel opens when you select the SCP node from the network topology window. You can perform the following tasks from this panel:

- Add a new SCP range to your test configuration.
- Open a SCP range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

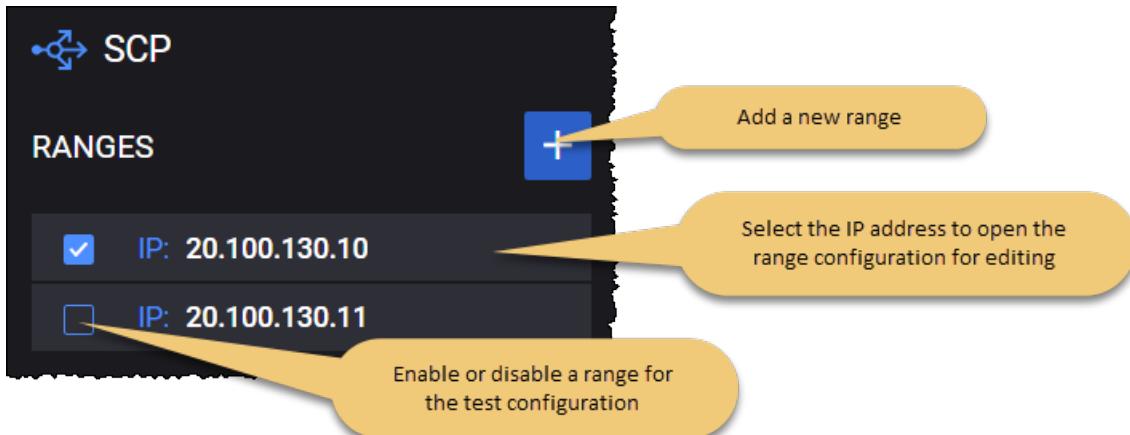

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **All Ranges on All Agents**

## SCP Range panel

You add and select SCP ranges from the SCP Ranges panel. When you select a SCP's IP address from the **SCP Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected SCP range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the SCP range.

### SCP range controls and settings

Each SCP range is identified by a unique IP address. You can add and delete SCP ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each SCP range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SCP is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SCP functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each SCP range requires the configuration of an associated set of Node Settings, which are described in <a href="#">SCP Node Settings</a> .
SCP Interface Settings	Each SCP range requires the configuration of an interface necessary for SCP connectivity and use of indirect communication. These settings are described in <a href="#">SCP interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">SCP Remote SBA Nodes</a> .

### Node Settings

The following table describes the available SCP Node Settings.

Setting	Description
Instance ID	Each SCP instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Forward to Another SCP	Select this option to enable SCP Chaining. The SCP will be able to forward the messages it receives to a different SCP.
Enable	Select this option to enable delegated discovery.

Setting	Description
Delegated Discovery	
HTTP Connections	The number of HTTP connections between two nodes.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## SCP Nscp interface settings

The following **Connectivity Settings** enable the necessary SCP connectivity and use of indirect communication.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.

<b>Connectivity Settings</b>	<b>Description</b>
Gateway Address	The IP address assigned as gateway address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i>  <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
mTLS Server Settings	<b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i>  <i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## SCP Remote SBA Nodes

### Peer SCP Type

<b>Setting</b>	<b>Description</b>
None	When this option is selected, the SCP chaining is not used.
Preset	Select this option in order to use a specific IP for next SCP hop.
Discover	When this option is selected the SCP will send a request to NRF to discover the next hop SCP.

### SCP Connection Settings

**IMPORTANT** These settings are available only when **Peer SCP Type** is set to **Preset**.

<b>Setting</b>	<b>Description</b>
Peer SCP	Select the IP address of the SCP node used as next hop.
Protocol	The protocol to use for communications. It can be either HTTP or HTTPS.
Port	The port number to use for communications. The default is port 80, but you can choose a different port number.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

# SEPP configuration settings



The Security Edge Protection Proxy (SEPP) enables secure interconnect between 5G networks. The SEPP ensures end-to-end confidentiality and/or integrity between source and destination network for all 5G interconnect roaming messages.

The Security Edge Protection Proxy (SEPP) is a non-transparent proxy and supports the following functionality:

- Message filtering and policing on inter-PLMN control plane interfaces.

**NOTE**

The SEPP protects the connection between Service Consumers and Service Producers from a security perspective, i.e. the SEPP does not duplicate the Service Authorization applied by the Service Producers as specified in clause 7.1.4 (TS 23 501).

- Topology hiding.

Detailed functionality of SEPP, related flows and the N32 reference point, are specified in TS 33.501.

The configuration settings are described in the topics listed below.

**Topics:**


<b>SEPP Ranges panel</b> .....	<b>397</b>
<b>SEPP Range panel</b> .....	<b>398</b>
<b>SEPP Nsepp interface settings</b> .....	<b>400</b>
<b>SEPP Remote SBA Nodes</b> .....	<b>401</b>

## SEPP Ranges panel

The **SEPP Ranges** panel opens when you select the SEPP node from the network topology window. You can perform the following tasks from this panel:

- Add a new SEPP range to your test configuration.
- Open a SEPP range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

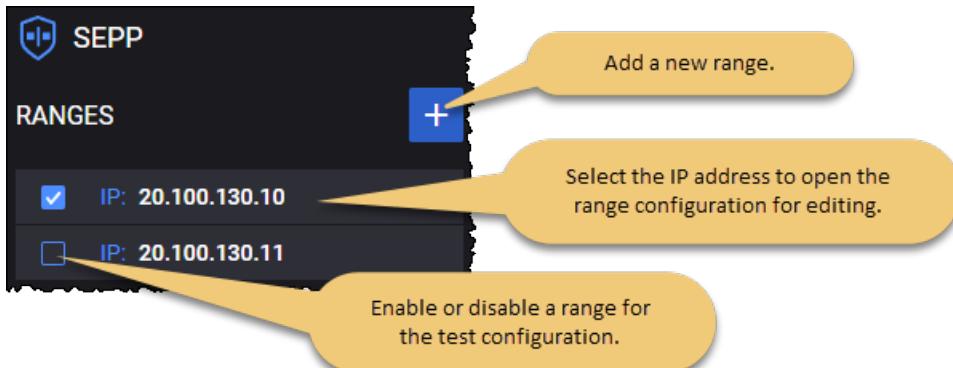

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on One Agent**

**IMPORTANT** The number of enabled SEPP ranges must be equal to the number of assigned agents.

## SEPP Range panel

You add and select SEPP ranges from the SEPP Ranges panel. When you select a SEPP's IP address from the **SEPP Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected SEPP range from the test configuration.
- Designate the range as a **Device Under Test**.
- Use the **Range Settings** to configure the node and connectivity settings for the SEPP range.

### SEPP range controls and settings

Each SEPP range is identified by a unique IP address. You can add and delete SEPP ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each SEPP range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SEPP is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SEPP functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each SEPP range requires the configuration of an associated set of Node Settings, which are described <a href="#">SEPP Node Settings</a> .
Nsepp Interface Settings	Each SEPP range requires the configuration of an interface necessary for SEPP connectivity. These settings are described in <a href="#">SEPP interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">SEPP Remote SBA Nodes</a> .

## SEPP Node Settings

The following table describes the available SEPP Node Settings.

Setting	Description
Instance ID	Each SEPP instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Fully Qualified Domain Name	<p><b>IMPORTANT</b> This parameter becomes visible only if SEPP is enabled as device under test (DUT) (see <b>Range</b> configuration settings above).</p> <p>This option allows you to set the Fully Qualified Domain Name (FQDN) of the SEPP DUT.</p>
Name	The name of the SEPP range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
PLMN MCC	<p>The PLMN MCC for this range.</p> <p><b>About PLMN MCC ...</b>  A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.  The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this range.</p> <p><b>About PLMN MNC ...</b>  The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP Connections	The number of HTTP connections between two nodes.
Use 3gpp-sbi-target-apiroot	Select this option to enable it.
Handle HTTP As HTTPS	Select this option to enable it. This is used to debug the HTTPS messages that are forwarded by SEPPs.
DNS Entry Cache Expiry (s)	The interval (in seconds) after which the cached DNS entries will be deleted; the DNS resolving of producer FQDN will be performed again. A zero value means this setting is disabled.

Setting	Description
HTTP2 User Agent	User Agent header in HTTP2 requests initiated from this node. See 3GPP TS 29500, Table 5.2.2.2-1 for more information.

## SEPP Nsepp interface settings

The following **Connectivity Settings** enable the necessary SEPP connectivity.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

Connectivity Settings	Description
mTLS Server Settings	<b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i>  <i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## SEPP Remote SBA Nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## Peer SEPP Nodes

Setting	Description
<i>Peer SEPP Nodes:</i>	
	Select the <b>Add Peer SEPP</b> button to add a new peer SEPP to your test configuration.
<i>Peer SEPP:</i>	
	Select the <b>Delete Peer SEPP</b> button to delete the peerSEPP range from your test configuration.
Peer SEPP	Select the IP address of the peer SEPP.
Initiate Handshake	Select this option to enable it.

## DNS Server Connection Settings

**IMPORTANT** These settings are available only when **Peer SCP Type** is set to **Preset**.

Setting	Description
Peer DNS	Select the IP address of the peer DNS server.
Protocol	The protocol to use for communications. It can be either TCP or UDP.
Port	The port number to use for communications.

# SGW configuration settings



In 4G EPC networks, the SGW (Serving Gateway) is the user plane node responsible for forwarding and routing packets between the eNodeB and the packet data network gateway (PGW). It also serves as the local mobility anchor for mobility between 3GPP networks and for inter-eNodeB handovers.

In the Full Core test topology, it communicates with the SMF/PGW-C node over the S5-c interface, with the UPF/PGW-U over the S5-u interface, with the RAN over the S1-u interface, and with the MME over the S11 interface.

The configuration settings are described in the topics listed below.

## Topics:

<b>SGW Ranges panel</b> .....	<b>404</b>
<b>SGW Range panel</b> .....	<b>405</b>
<b>SGW S1-U Interface Settings</b> .....	<b>406</b>
<b>SGW S5-C Interface Settings</b> .....	<b>407</b>
<b>SGW S5-U Interface Settings</b> .....	<b>408</b>
<b>SGW S11 Interface Settings</b> .....	<b>409</b>
<b>SGW DUT S11 Interface Settings</b> .....	<b>410</b>

## SGW Ranges panel

The **SGW Ranges** panel opens when you select the SGW node from the network topology window.


The following configuration option is available on this panel:

Option	Description
Grouping Type	<p>This option determines the exposed simulated interfaces:</p> <ul style="list-style-type: none"> <li>• <b>With RAN</b>: When selected, the topology exposes the S5-c and S5-u interfaces.</li> <li>• <b>With SMF</b>: When selected, the topology exposes the S11 interface.</li> <li>• <b>Standalone</b>: When selected, the topology exposes: <ul style="list-style-type: none"> <li>▪ DUT S11 interface if the SGW range is placed under test (<b>Device Under Test</b> check-box is selected).</li> <li>▪ S1-u, S5-c, S5-u and S11 interfaces if the SGW range is simulated (<b>Device Under Test</b> check-box is NOT selected).</li> </ul> </li> </ul>

In addition, you can perform the following tasks from this panel:

- Add a new SGW range to your test configuration.
- Open an SGW range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example...**

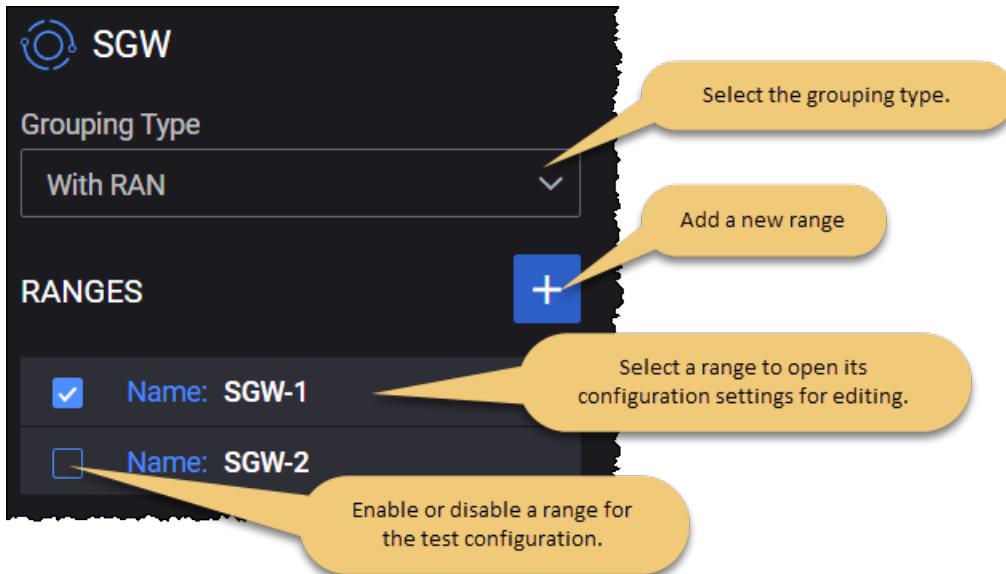

**IMPORTANT**

A Middleware validation prevents the user to run a configuration where any of the following secondary objectives: **Handover**, **Paging**, **Enter/Exit Idle**, **SMS**, are used in a test with SGW standalone (DUT or simulated).

## SGW Range panel

You add and select SGW ranges from the **SGW Ranges** panel. When you select an SGW range name, LoadCore opens the **Range** panel, from which you can:

- Delete the selected SGW range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select among the **Range Settings** to configure the node and interface settings for the SGW range.

### SGW range controls and settings

Each SGW range is identified by a unique range name. You can add and delete SGW ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each MME range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SGW is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SGW functionality (if the SGW range is selected in the Topology window).
<i>Range Settings:</i>	
UDP Rx Buffer (bytes)	<p><b>IMPORTANT</b> This field is available only when the <a href="#">Grouping Type</a> is set to <b>Standalone</b> and the SGW range is simulated.</p> <p>Size of receive buffers for UDP sockets:</p> <ul style="list-style-type: none"> <li>• minimum: 212992 #The default Linux buffer size</li> <li>• maximum: 134217728 #128MB</li> <li>• default: 12582912 #12MB</li> </ul>
UDP Tx Buffer (bytes)	<p><b>IMPORTANT</b> This field is available only when the <a href="#">Grouping Type</a> is set to <b>Standalone</b> and the SGW range is simulated.</p> <p>Size of transmit buffers for UDP sockets:</p> <ul style="list-style-type: none"> <li>• minimum: 212992 # The default Linux buffer size</li> <li>• maximum: 134217728 #128MB</li> <li>• default: 2097152 #2MB</li> </ul>
S1-u Interface Settings	These settings are described in <a href="#">SGW S1-U interface settings</a> .
S5-c	Each SGW range requires the configuration of the S5-C interface, over which an

<b>Setting</b>	<b>Description</b>
Interface Settings	SGW-C instance communicates with a PGW-C instance in the network. These settings are described in <a href="#">SGW S5-C interface settings</a> .
S5-u Interface Settings	Each SGW range requires the configuration of the S5-U interface, over which an SGW-U instance communicates with a PGW-U instance in the network. These settings are described in <a href="#">SGW S5-U interface settings</a> .
S11 Interface Settings	These settings are described in <a href="#">SGW S11 interface settings</a> .
DUT S11 Interface Settings	These settings are described in <a href="#">SGW DUT S11 interface settings</a> .

SGW-C and SGW-U, introduced in 3GPP Release 14 as part of the Control and User Plane Separation strategy (CUPS), respectively handle the control plane and user plane forwarding responsibilities in 4G networks.

## SGW S1-U Interface Settings

The S1 user plane external interface (S1-U) connects the eNodeB to the Serving Gateway (SGW) and is used to transmit user data on to the Packet Gateway and the internet.

### Connectivity Settings

The following **Connectivity Settings** enable S1-U interface connectivity in your test network.

<b>Connectivity setting</b>	<b>Description</b>
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.

<b>Connectivity setting</b>	<b>Description</b>
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.

## SGW S5-C Interface Settings

S5-C is the interface between the SGW-C node and PGW-C node in a 3GPP Release 14 network.

### Interface Settings

The following settings are required to enable message transmission between the selected SGW range and MME.

<b>Interface setting</b>	<b>Description</b>
GTP-C UDP port	Specify the UDP port number that will be used for GTP-C message transmission and receipt. The default port number is 2123, but you can select a different port as required by your test network.
GTP-C Destination UDP Port	Specify the UDP port that will be used for GTP-C message transmission. Value should be in range of 1024 to 65535.

### Connectivity Settings

The following **Connectivity Settings** enable S5-C interface connectivity in your test network.

<b>Connectivity setting</b>	<b>Description</b>
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway	The IP address assigned as gateway address.

<b>Connectivity setting</b>	<b>Description</b>
Address	
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SGW S5-U Interface Settings

S5-U is the interface between the SGW-U node and PGW-U node in a 3GPP Release 14 network.

### Connectivity Settings

The following **Connectivity Settings** enable S5-U interface connectivity in your test network.

<b>Connectivity setting</b>	<b>Description</b>
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).

<b>Connectivity setting</b>	<b>Description</b>
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SGW S11 Interface Settings

S11 is the control plane interface between an MME and an SGW.

### Interface Settings

The following settings are required to enable message transmission between the selected SGW range and MME.

<b>Interface setting</b>	<b>Description</b>
GTP-C UDP port	Specify the UDP port number that will be used for GTP-C message transmission and receipt. The default port number is 2123, but you can select a different port as required by your test network.
GTP-C Destination UDP Port	Specify the UDP port that will be used for GTP-C message transmission. Value should be in range of 1024 to 65535.

## Connectivity Settings

The following **Connectivity Settings** enable S11 connectivity between MME and SGW ranges.

Connectivity setting	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.

## SGW DUT S11 Interface Settings

S11 is the control plane interface between an MME and an SGW.

### Interface Settings

The following settings are required to enable message transmission between the selected SGW range and MME.

Interface setting	Description
S11 IP Address	The IP address from your test network to use for traffic on this interface.

# SMF/PGW-C configuration settings



Session Management Function (SMF), as the name implies, handles management of UE sessions while also allocating IP addresses to UEs. It also selects and controls the UPF for data transfer. Per-session SMFs may be allocated to UEs with multiple sessions. It also interacts with the User Plane Function (UPF) for efficient routing of the user's packets.

SMF interacts with the UPF over the N4 reference point and makes its services available to other network functions through the Nsmf service-based interface.

The PGW-C controls the functionality performed by the assigned PGW-U when Control and User Plane Separation (CUPS) is in place. When a subscriber establishes an EPS (Evolved Packet System) bearer to a given PDN, the PGW-C selects and controls the point of attachment to that PDN for the life of the EPS bearer. Responsibilities include resource management for bearer resources, bearer binding, subscriber IP address management and mobility support.

The configuration settings are described in the topics listed below.

## Topics:

<b>SMF/PGW-C Ranges panel</b>	<b>412</b>
<b>SMF/PGW-C Range settings</b>	<b>413</b>
<b>SMF node settings</b>	<b>414</b>
<b>SMF N4/Sx interface settings</b>	<b>415</b>
<b>SMF Nsmf interface settings</b>	<b>417</b>
<b>SMF Gx Interface settings</b>	<b>418</b>
<b>SMF S5-c interface settings</b>	<b>421</b>
<b>SMF remote SBA nodes</b>	<b>422</b>
<b>SMF Uplink Paths settings</b>	<b>427</b>
<b>SMF Slice and UPF Mapping settings</b>	<b>427</b>
<b>SMF EAS Deploy Subscription settings</b>	<b>428</b>
<b>SMF EAS Procedures Settings</b>	<b>429</b>


## SMF/PGW-C Ranges panel

The **SMF/PGW-C Ranges** panel opens when you select the SMF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new SMF range to your test configuration.
- Open a SMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

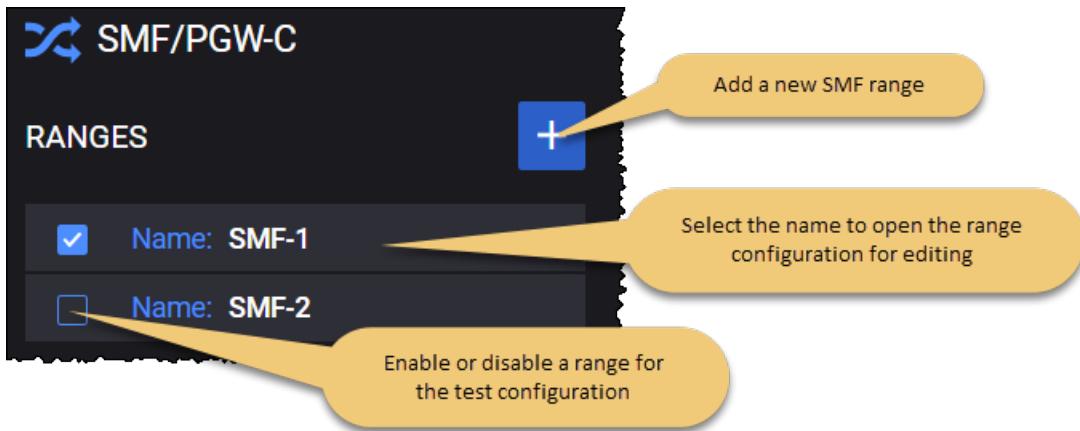

If multiple agents are assigned to the SMF node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT** Only one SMF range can be configured on one agent.

- in case of multiple agents assigned and one Range defined, the range will be configured on each agent.
- in case of multiple agents and multiple ranges, each range can be configured on one agent.

## SMF/PGW-C Range settings

You add and select SMF ranges from the SMF/PGW-C Ranges panel. When you select the name of a SMF, LoadCore opens the **Range** panel, from which you can:

- Delete the SMF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the SMF range.

### SMF range controls and settings

Each SMF range is identified by a unique name. You can add and delete SMF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each SMF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SMF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SMF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
RAT Type	This option allows you to enable only the functionalities specific to the selected Radio Access Technology type (RAT). Options available are: <b>5G</b> , <b>4G</b> , or <b>5G and 4G</b> . <div style="margin-top: 10px;"> <b>NOTE</b> Only the 4G option supports Gx Interface for 4G Stand Alone Core Network. The other options use the Dual Core Network which uses SBA interface between SMF/ (S)PGW-C and PCF.           </div>
Node Settings	Each SMF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">SMF node settings</a> .
N4/Sx Interface Settings	Each SMF range requires the configuration of N4 interface settings, through which a SMF instance interacts with UPF in a 5G network. These settings are described in <a href="#">SMF N4 interface settings</a> .
Nsmf Interface Settings	Each SMF range requires the configuration of Nsmf interface settings, through which a SMF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">SMF Nsmf interface settings</a> .
S5-c Interface Settings	This interface is enabled only if the associated checkbox is selected. S5-c is the interface between the S-GW and P-GW. The interface settings

Setting	Description
	are described in <a href="#">SMF S5-c interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">SMF remote SBA nodes</a> .
Uplink Paths	These settings are described in <a href="#">SMF Uplink Paths settings</a> .
Slice and UPF Mapping	These settings are described in <a href="#">SMF Slice and UPF Mapping settings on page 427</a> .
EAS Deploy Subscription	These settings are described in <a href="#">SMF EAS Deploy Subscription settings</a> <b>IMPORTANT</b> This option is available only if the <b>Technical Version Spec</b> from Global Settings is set to <b>R17 December 2022</b> .
EAS Procedures Settings	These settings are described in <a href="#">SMF EAS Procedures Settings</a> . <b>IMPORTANT</b> This option is available only if the <b>Technical Version Spec</b> from Global Settings is set to <b>R17 December 2022</b> .

## SMF node settings

Each SMF range includes a set of Node Settings and SMF NSSAI settings.

### Node Settings

Each SMF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple SMF instances may be deployed in the 5G network. Each SMF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Name	The name uniquely identifies each SMF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN Mobile Country Code (MCC) for this SMF range.
PLMN MNC	The PLMN Mobile Network Code (MNC) for this SMF range.
HTTP Connections	The number of HTTP connections between two nodes.
Mapped SGW Range	Select the mapped serving gateway from the drop-down list.

Setting	Description
PGW FQDN	Specify the PDN Gateway FQDN (Fully Qualified Domain Name).
Subscribe for AMF Events	Select the check box in order to enable this option.
Request Shared Data	If enabled, the SMF will send a GET request to UDM for /nudm-sdm/v2/shared-data?shared-data-ids=12345-id (where 12345-id will be replaced with the value of shared data ID received in response to GET /nudm-sdm/v2/[SUPI]/sm-data).
UDP Buffer Size RX	The size in bytes of the receive buffers for UDP sockets: <ul style="list-style-type: none"> <li>minimum: 212992</li> <li>maximum: 134217728</li> <li>default: 12582912</li> </ul>
UDP Buffer Size TX	The size in bytes of the transmit buffers for UDP sockets: <ul style="list-style-type: none"> <li>minimum: 212992</li> <li>maximum: 134217728</li> <li>default: 2097152</li> </ul>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
Cache NRF Response	<p><b>IMPORTANT</b> This option appears only if the NRF node is enabled and the <b>Peer NRF</b> value under <a href="#">Remote SBA Nodes &gt; NRF Connections Settings</a> is set.</p> <p>Select from the drop-down for how long to save/remember the peer SBA nodes that are discovered via NRF:</p> <ul style="list-style-type: none"> <li><b>Cache Permanently</b> (default)</li> <li><b>Don't Cache Responses</b></li> </ul>

## SMF N4/Sx interface settings

N4 is the service-based interface through which a AMF instance interacts with UPF in a 5G network.

The following **Connectivity Settings** enable the necessary N4 connectivity and service interaction.

Setting	Description
<i>N4/Sx Interface Settings:</i>	
Include 3GPP Interface Type	Select this check box to include the 3GPP interface type in PFCP messages.
Peer UPF	Select the UPF node or UPF nodes connected to SMF over the N4 interface.

Setting	Description
	<p>Available options include:</p> <ul style="list-style-type: none"> <li>• <b>Discover</b> - visible only if the <b>RAT Type</b> is set to <b>5G</b> or <b>5G and 4G</b>. It will invoke the <a href="#">NF Discovery service</a>. Also, the NRF node must be selected in Remote SBA Nodes.</li> <li>• Select the IP address of the UPF node - This is the destination address of the UPF node to which the packets are sent over the Nupf interface.</li> <li>• <b>Select All</b> - used in case this SMF range connects to all defined UPF ranges.</li> </ul>

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to the node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ).
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SMF Nsmf interface settings

Nsmf is the service-based interface through which a SMF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nsmf connectivity and service interaction.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>

<b>Connectivity Settings</b>	<b>Description</b>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
mTLS Server Settings	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## SMF Gx Interface settings

**IMPORTANT** This menu is available only if **RAT Type** value under [SMF/PGW-C Range settings](#) is set to **4G**.

<b>Setting</b>	<b>Description</b>
<i>Gx Interface Settings</i>	
Peer PCRF	Select the IP address of the PCRF node.
Diameter Settings	<i>Select to open the Diameter settings panel.</i>
Origin Host Prefix	Set the origin host prefix. Default value: <b>host</b> .
Origin Realm	Set the origin realm. Default value: <b>keysight.com</b> .
Destination Host	Set the destination host prefix.
Destination Realm	Set the destination realm.


<b>Setting</b>	<b>Description</b>
Local SCTP Port	The local SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.
Destination SCTP Port	The destination Stream Control Transmission Protocol (SCTP) port for control plane messages (NG-AP signaling messages) on the Gx interface.
<i>SCTP Parameters</i>	<i>Select to open the configuration panel.</i>
Avoid Bundling of Data Chunks	Select this option to enable it. It turns on/off any Nagle-like algorithm. This means that packets are generally sent as soon as possible and no unnecessary delays are introduced, at the cost of more packets in the network.
Minimum Retransmission Timeout (ms)	Set the minimum retransmission timeout value, in milliseconds.
Maximum Retransmission Timeout (ms)	Set the maximum retransmission timeout value, in milliseconds.
Initial Retransmission Timeout (ms)	Set the initial retransmission timeout value, in milliseconds.
Maximum Retransmission per Association	Set the maximum retransmissions value per association.
Maximum Retransmission per Path	Set the maximum retransmissions value per path.
Heartbeat Interval (ms)	Set the heartbeat interval value, in milliseconds.
SACK Delay (ms)	Set the delayed selective ACK timeout value.
SACK Frequency	Set the delayed selective ACK frequency value.
<i>SCTP Buffers</i>	<i>Select to open the configuration panel.</i>
Tx Buffers (bytes)	The size (in bytes) of transmit buffers for the SCTP sockets.
Rx Buffers (bytes)	The size (in bytes) of receive buffers for SCTP sockets.

Setting	Description
<i>Connectivity Settings</i>	
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SMF S5-c interface settings

The S5 interface provides user plane tunneling and tunnel management between Serving GW and PDN GW. It is used for Serving GW relocation due to UE mobility and if the Serving GW needs to connect to a non-collocated PDN GW for the required PDN connectivity.

You can enable or disable the S5-c interface, as required by your test configuration. For example:



### Interface Settings

The following settings are required to enable message transmission between the selected SGW range and MME.

Interface setting	Description
GTP-C UDP port	Specify the UDP port number that will be used for GTP-C message transmission and receipt. The default port number is 2123, but you can select a different port as required by your test network.
GTP-C Destination UDP Port	Specify the UDP port that will be used for GTP-C message transmission. Value should be in range of 1024 to 65535.

### Connectivity Settings

The following **Connectivity Settings** are required for the S5-c interface.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>

Connectivity Settings	Description
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.

## SMF remote SBA nodes

### AMF Connection Settings

Setting	Description
<i>AMF Connectivity Settings:</i>	
Peer AMF Type	<p>Select one of the available options:</p> <ul style="list-style-type: none"> <li>• <b>Preset</b></li> <li>• <b>Discover</b></li> </ul> <p>More details <a href="#">below</a>.</p>
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a>.</p>
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer AMF Type is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a>.</p>

The SMF can learn about the AMFs it serves, by selecting one of the following options for the Peer AMF type field:

- **Preset** - this option allows manually configuration of a peer AMF.

This option requires the configuration of the peer AMF, as follows:

Setting	Description
<i>AMF Peers:</i>	
	Select this button to add a peer AMF to your test configuration.

Setting	Description
<i>AMF Peer:</i>	
	Select this button to delete the peer AMF from your test configuration.
Peer AMF	Select the peer AMF from the drop-down list.
Protocol	The protocol to use for Namf communications. It can be either HTTP or HTTPS.
Port	The AMF port number to use for Namf communications. The default is port 80, but you can choose a different port number.

- **Discover** - select this option to invoke the NF discovery service (it relies on the NRF to assign the correct Peer AMF during the handover procedure).

Refer to [NF Discovery service](#) for the steps required to use the discovery service.

## UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

Setting	Description
<i>UDM Connectivity Settings:</i>	
Use SBI Fuzzing	<p>Use the toggle button to enable this option. When enabled, the <i>Peer UDM</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.</p>
SBI Fuzzer	Select the node from the drop-down list.
Peer UDM	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>• Select the IP address of the UDM node. This is the destination address of the UDM node to which the packets are sent over the Nudm interface.</li> <li>• Select <b>Discover</b> to invoke the NF discovery service.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Protocol	The protocol to use for Nudm communications. It can be either HTTP or HTTPS.
Port	The UDM port number to use for Nudm communications. The default is port 80, but you can choose a different port number.

## PCF Connection Settings

To connect to the PCF node, the following configuration settings are required.

Setting	Description
<i>PCF Connectivity Settings:</i>	

Setting	Description
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer PCF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer PCF	Select the peer PCF using either of the following methods: <ul style="list-style-type: none"> <li>Select the IP address of the PCF node. This is the destination address of the PCF node to which the packets are sent over the NPCf interface.</li> <li>Select <b>Discover</b> to invoke the NF discovery service. Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</li> </ul>
Protocol	The protocol to use for Npcf communications. It can be either HTTP or HTTPS.
Port	The PCF port number to use for Npcf communications. The default is port 80, but you can choose a different port number.

## EASDF Connection Settings

**IMPORTANT** This option becomes available only if the **Technical Spec Version** from Global Settings is set to **R17 December 2022**.

To connect to the EASDF node, the following configuration settings are required.

Setting	Description
<i>EASDF Connection Settings:</i>	
Peer EASDF	Select either the IP address of an EASDF from your test network or <i>None</i> if you are not using an EASDF in your test configuration. The IP address is the destination address of the EASDF node to which the packets are sent over the Neasdf interface.
Protocol	The protocol to use for Neasdf communications. It can be either HTTP or HTTPS.
Port	The EASDF port number to use for Neasdf communications. The default is port 80, but you can choose a different port number.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option.

Setting	Description
	When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## NEF Connection Settings

**IMPORTANT** This option becomes available for configuration only if the **Technical Spec Version** from Global Settings is set to **R17 December 2022**.

To connect to the Network Exposure Function (NEF) node, the following configuration settings are required.

Setting	Description
<i>NEF Connection Settings:</i>	
Peer NEF	Select either the IP address of an NEF from your test network or <i>None</i> if you are not using an NEF in your test configuration. The IP address is the destination address of the NEF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnef communications. It can be either <b>HTTP</b> or <b>HTTPS</b> .
Port	The port number to use for Nnef communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.

Setting	Description
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

For several SBA nodes, if SCP is selected in SCP Connection Settings, new options will be available:

- **Indirect Communication without Delegated Discovery** or
- **Indirect Communication with Delegated Discovery**

If Indirect Communication with or without Delegated Discovery option is enabled for one or more nodes from Remote SBA Nodes, then only the messages for the interface on which this option is enabled will be forwarded to the SCP. In the case of Indirect Communication with Delegated Discovery, SCP will also perform delegated discovery.

### SEPP Connection Settings

To connect to the Security Edge Protection Proxy (SEPP) node, the following configuration settings are required.

Setting	Description
<i>SEPP Connection Settings:</i>	
Peer SEPP	Select either the IP address of a SCP node from your test network or <i>None</i> if you are not using one in your test configuration.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.
Sepp Communication Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Telescopic FQDN</b></li> <li>• <b>Target API Root</b></li> </ul>

### Home PLMN for Inter-PLMN Routing

The following configuration settings are required.

PLMN MCC	Provide the PLMN MCC value. <b>About PLMN MCC ...</b> A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.
----------	--

	The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.
PLMN MNC	<p>Provide the PLMN MNC value.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>

## SMF Uplink Paths settings

The following table describes the settings required to configure the uplink paths.

Setting	Description
<i>Uplink Paths:</i>	
	Select the <b>Add an uplink path</b> button to add an uplink path to your test configuration.
<i>Uplink Path:</i>	
	Select the <b>Delete uplink path</b> button to remove the uplink path from your test configuration.
N3 UPF	Select the first UPF in Uplink User Plane path, the UPF connected to RAN.
Use Uplink Classifier UPF	<p><b>IMPORTANT</b> <i>This option appears when an UPF is selected in the N3 UPF drop-down and the Technical Spec Version is set to R17 December 2022.</i></p> <p><i>If enabled, it will allow you to configure how to use the Uplink Classifier UPF.</i></p>
Local PSA-UPF	Select from the list the UPF used for traffic towards Edge Application Server.
QoS Flow(s) for Local PSA-UPF	Select from the list the QoS Flows used for traffic towards Edge Application Server (multiple choices are allowed).
Central PSA-UPF	Select from the list the UPF used for Initial PDU Session Establishment and that, after ULCL insertion, will be used to forward all non-Edge Application traffic.
QoS Flow(s) for Central PSA-UPF	Select from the list the QoS Flows used for non-Edge Application traffic.

## SMF Slice and UPF Mapping settings

The following table describes the Slice and UPF Mapping settings.

Setting	Description
<i>SMF Slice and UPF Mapping:</i>	
	Select the <b>Add Slice and UPF Mapping</b> button to add a network slice to your test configuration.
<i>SMF NSSAI:</i>	
	Select the <b>Delete Slice and UPF Mapping</b> button to remove this network slice from your test configuration.
SST	The Slice/Service Type (SST) value for this network slice.
SD	The Slice/Service Type (SST) value for this network slice. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
DNNs	One or more DNNs (Data Network Names) associated with the network slice and uplink path. Select one or more DNNs from the drop-down list.
Uplink Path	Select the uplink path from the drop-down list. Note that only the <u>Uplink Path</u> entries without <b>Use Uplink Classifier UPF</b> enabled will appear in the list.

## SMF EAS Deploy Subscription settings

**IMPORTANT** This option is available only if the **Technical Version Spec** from Global Settings is set to **R17 December 2022**.

The following table describes the settings required to configure the EAS Deploy Subscription.

Setting	Description
<i>EAS Deploy Subscription:</i>	
	Select the <b>Add an EAS Deploy Subscription</b> button to add a subscription configuration to your test configuration.
<i>EAS Deploy Subscriptions:</i>	
	Select the <b>Delete EAS Deploy Subscription</b> button to remove the current subscription from your test configuration.
DNN SNSSAI Information	<i>Add and configure the DNN SNSSAI used with EAS deploy subscription. See configuration details in the <a href="#">DNN SNSSAI Information configuration on the facing page</a> table.</i>
Application ID	Identifies the application to which the EAS Deployment Information corresponds.
Immediate Report	If enabled, it requires the immediate reporting of the current status of EAS Deployment Information, if available.

Setting	Description
	When disabled (default), the EAS Deployment Information event report occurs when the event is met.
Internal Group ID	This parameter is used to identify an internal group.

## DNN SNSSAI Information configuration

Setting	Description
<i>DNN SNSSAI Information:</i>	
	Select the <b>Add an DNN SNSSAI Information</b> button to add the SNSSAI information to your test configuration.
<i>DNN SNSSAI Information:</i>	
	Select the <b>Delete DNN SNSSAI Information</b> button to remove the SNSSAI information from your test configuration.
SST	The Slice/Service Type (SST) value.
SD	The Slice Differentiator (SD) value for this SNSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
DNN	The DNN (Data Network Name) with which PDU sessions will be associated for this SNSSAI.

## SMF EAS Procedures Settings

**IMPORTANT** This option is available only if the **Technical Version Spec** from Global Settings is set to **R17 December 2022**.

The following table describes the settings required to configure the EAS Procedures Settings.

Setting	Description
<i>EAS Procedure Settings:</i>	
	Select the <b>Add EAS Procedures Settings</b> button to add a new EAS (Re)Discovery Procedure entry in the test configuration.
<i>EAS Procedure Settings:</i>	
	Select the <b>Delete EAS Procedures Settings</b> button to delete an EAS (Re)Discovery Procedure entry from the test configuration.
Procedures	Select from the drop-down the type of procedure to configure: <ul style="list-style-type: none"> <li>• EAS Discovery</li> </ul>

<b>Setting</b>	<b>Description</b>
	<ul style="list-style-type: none"> <li>• EAS Rediscovery</li> </ul>
EAS IP Address	<p>Add the Edge Application Server IP Address.</p> <p><b>IMPORTANT</b> This parameter appears only if Procedures is set to EAS Discovery.</p>
Uplink Path	<p>Select from the drop-down the uplink path associated with the EAS IP. Note that only the <u>Uplink Path</u> entries <u>with Use Uplink Classifier UPF</u> enabled will appear in the list.</p>
Procedure Trigger	<p>Select from the drop-down what action will trigger the current procedure:</p> <ul style="list-style-type: none"> <li>• TAC Change</li> <li>• DNAI Change</li> </ul> <p><b>IMPORTANT</b> This parameter appears only if Procedures is set to EAS Rediscovery.</p>
DNS Server	<p>The IPv4/IPv6 DNS server address associated with the TAC List/DNAI server.</p> <p><b>IMPORTANT</b> This parameter appears only if Procedures is set to EAS Rediscovery.</p>
TACS	<p>Define one or more TAC Lists values that employ the same Uplink Path and DNS Server. It is expected to have at least one TAC value (list of integers 0 – 16777215). Use <math>\oplus</math> to add multiple TAC values.</p> <p><b>IMPORTANT</b> This parameter appears only if Procedures is set to EAS Rediscovery, and Procedure Trigger is set to <i>TAC Change</i>.</p>
DNAI	<p>The DNAI value that employs the Uplink Path and DNS Server.</p> <p><b>IMPORTANT</b> This parameter appears only if Procedures is set to EAS Rediscovery, and Procedure Trigger is set to <i>DNAI Change</i>.</p>

# SMSF configuration settings



Short Message Service Function (SMSF) is the 5G core network service that supports the transfer of SMS over NAS. In this capacity, the SMSF will conduct subscription checking and perform a relay function between the device and the SMSC (Short Message Service Centre), through interaction with the AMF (Core Access and Mobility Management Function).

The configuration settings are described in the topics listed below.

## Topics:

<b>SMSF Ranges panel</b>	<b>431</b>
<b>SMSF Range panel</b>	<b>432</b>
<b>SMSF node settings</b>	<b>433</b>
<b>SMSF Nsmsf interface settings</b>	<b>433</b>
<b>SMSF Remote SBA Nodes</b>	<b>434</b>


## SMSF Ranges panel

The **SMSF Ranges** panel opens when you select the SMSF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new SMSF range to your test configuration.
- Open a SMSF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

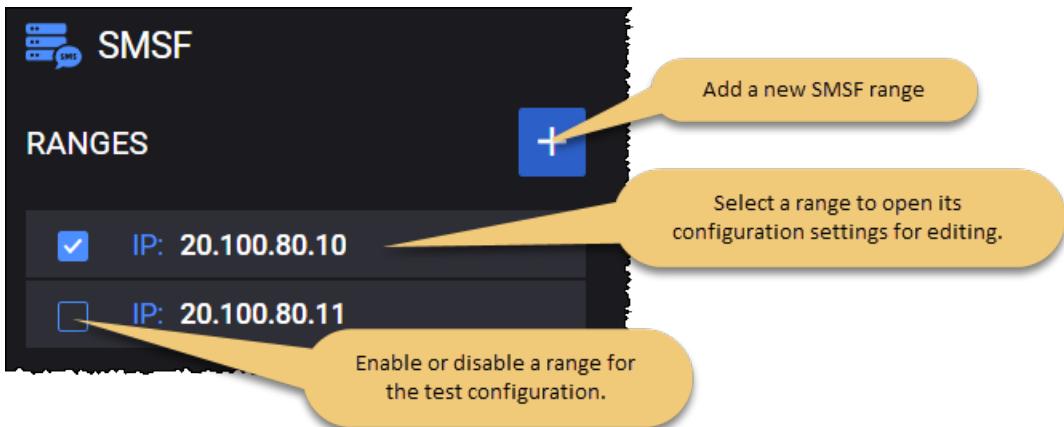

If multiple agents are assigned to the SMSF node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT**

Only one SMSF range can be configured on one agent.

- in case of multiple ranges, it will require one agent for each range;
- in case one range and multiple agents, each agent will create a different SMSF NF, with incremented IP address and NF ID, and whole UE range.

## SMSF Range panel

You add and select SMSF ranges from the SMSF Ranges panel. When you select the IP address of an SMSF, LoadCore opens the **Range** panel, from which you can:

- Delete the selected SMSF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the SMSF range.

### SMSF range controls and settings

Each SMSF range is identified by a unique IP address. You can add and delete SMSF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each SMSF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SMSF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SMSF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each SMSF range the configuration of an associated set of Node Settings, which are described in <a href="#">SMSF node settings</a> .
Nsmsf Interface Settings	Each SMSF range requires the configuration of Nsmsf interface settings, through which a SMSF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">SMSF Nsmsf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">SMSF remote SBA nodes</a> .

In order to configure the SMSF node to perform MT-SMS, it is required that on **UE Range Settings > SMS Configurations > SMSF Configuration**, to set SMS Mode to **MT-SMS**. When this is selected, and the node is enabled, the settings from **Mobile Settings** will be translated to the SMSF node as parameters for MT-SMS.

**NOTE**

The LoadCore AMF does not support SMS over HTTP2, so an AMF set as DUT is required in order to trigger MO-SMS over HTTP2.

## SMSF node settings

Each SMSF instance (that is, each range) requires the configuration of the following node settings.

Setting	Description
Instance ID	The Instance ID uniquely identifies each SMSF instance. You can accept the value provided by LoadCore or replace it with your own value.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## SMSF Nsmsf interface settings

Nsmsf is the service-based interface through which a SMSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nsmsf connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.

Connectivity Settings	Description
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SMSF Remote SBA Nodes

### AMF Connection Settings

To connect to the AMF node, the following configuration settings are required.

Setting	Description
<i>AMF Connectivity Settings:</i>	
Peer AMF type	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>• Select <b>Preset</b> - this option allows manually configuration of a peer AMF, as described <a href="#">here</a>.</li> <li>• Select <b>Discover</b> to invoke the NF discovery service. The SMSF will discover the AMF.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a>.</p>
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer AMF is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a>.</p>

The following table describes the settings required to configure a preset peer AMF:

Setting	Description
<i>AMF Peers:</i>	
	Select this button to add the peer AMF to your test configuration.
<i>AMF Peer:</i>	
	Select this button to delete the peer AMF from your test configuration.
Peer AMF	Select the peer AMF from the drop-down list.
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Protocol	The protocol to use for Namf communications. It can be either HTTP or HTTPS.
Port	The AMF port number to use for Namf communications. The default is port 80, but you can choose a different port number.

**NOTE**

In Full Core topology, in order for SMSF to establish a connection with a DUT AMF, the Full Core AMF marked as DUT should be configured with an IP and Instance ID that match the ones of the real AMF.

## UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

Setting	Description
<i>UDM Connectivity Settings:</i>	
Peer UDM type	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>Select <b>None</b> - no N21 interface.</li> <li>Select <b>Preset</b> - active N21 interface, this option allows manually configuration of a peer UDM, as described <a href="#">here</a>.</li> <li>Select <b>Discover</b> - active N21 interface, the peer UDM is discovered via NRF.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a>.</p>

Setting	Description
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer UDM is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a>.</p>

The following table describes the settings required to configure a preset peer UDM:

Setting	Description
<i>UDM Peers:</i>	
 +	Select this button to add the peer UDM to your test configuration.
<i>UDM Peer:</i>	
	Select this button to delete the peer UDM from your test configuration.
Peer UDM	Select the peer UDM from the drop-down list.
Protocol	The protocol to use for Namf communications. It can be either HTTP or HTTPS.
Port	The AMF port number to use for Namf communications. The default is port 80, but you can choose a different port number.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	<p>Use the toggle button to enable this option.</p> <p>When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.</p>
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.

Setting	Description
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

For several SBA nodes, if SCP is selected in SCP Connection Settings, new options will be available:

- **Indirect Communication without Delegated Discovery** or
- **Indirect Communication with Delegated Discovery**

If Indirect Communication with or without Delegated Discovery option is enabled for one or more nodes from Remote SBA Nodes, then only the messages for the interface on which this option is enabled will be forwarded to the SCP. In the case of Indirect Communication with Delegated Discovery, SCP will also perform delegated discovery.

# UDM/HSS configuration settings



Unified Data Management (UDM) is the 5G core network service that is responsible for a number of functions, including the generation of AKA authentication credentials, user identification handling, access authorization, subscription management, among others. It makes its services available to other network functions through the Nudm service-based interface. Multiple instances of UDM may be deployed. A UDM Group ID refers to one or more UDM instances managing a specific set of SUPIs.

The Home Subscriber Server(HSS) is the master database for a given subscriber, acting as a central repository of information for network nodes. Subscriber related information held by the HSS includes user identification, security, location and subscription profile. The HSS is a functional element of LTE and IMS.

The configuration settings are described in the topics listed below.

## Topics:

<b>UDM/HSS Ranges panel</b>	<b>439</b>
<b>UDM/HSS Range panel</b>	<b>440</b>
<b>UDM Range Settings</b>	<b>440</b>
UDM Settings	441
UDM Node Settings	442
UDM Nudm Interface Settings	444
UDM Remote SBA Nodes	446
<b>HSS Range Settings</b>	<b>448</b>
HSS Settings	448
HSS Node Settings	449
HSS S6a Interface Settings	450
<b>UDM and HSS Range Settings</b>	<b>451</b>


## UDM/HSS Ranges panel

The **UDM/HSS Ranges** panel opens when you select the UDM/HSS node from the network topology window.

You can perform the following tasks from this panel:

- Add a new range to your test configuration.
- Open a range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

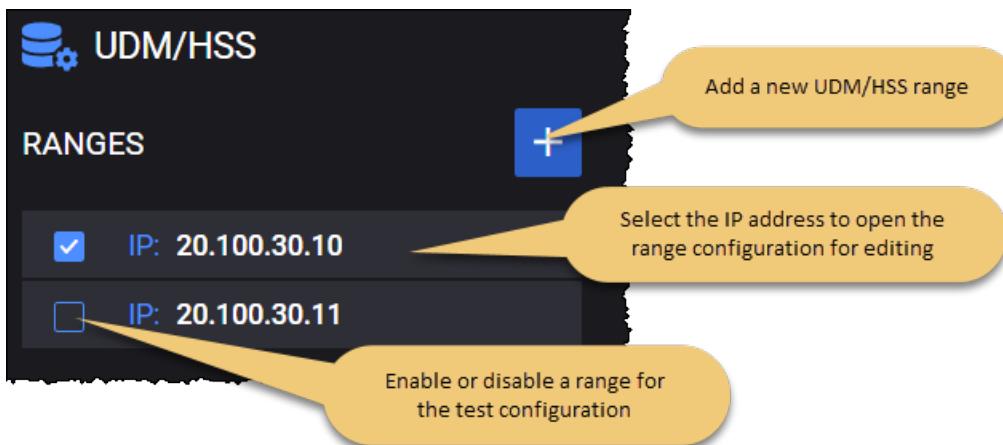

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT**

Only one UDM/HSS range can be configured on one agent.

- in case of multiple ranges, it will require one agent for each range;
- in case one range and multiple agents, each agent will create a different UDM NF, with incremented IP address and NF ID, and whole UE range.

## UDM/HSS Range panel

You add and select ranges from the UDM/HSS Ranges panel. When you select the IP address of a UDM/HSS, LoadCore opens the **Range** panel, from which you can:

- Delete the range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to enable the node and then configure it alongside with the connectivity settings required for the range.

### UDM/HSS range controls and settings

Each range is identified by a unique IP address. You can add and delete ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your selected node is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the selected node functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Enabled Nodes	This option allows you to enable a specific node ( <b>UDM</b> , <b>HSS</b> or <b>UDM and HSS</b> ) by selecting it from the drop-down list. Each node has specific range settings that need to be configured, as follows: <ul style="list-style-type: none"> <li>• <a href="#">UDM Range Settings</a></li> <li>• <a href="#">HSS Range Settings</a></li> <li>• <a href="#">UDM and HSS Settings</a></li> </ul>

## UDM Range Settings

The following table describes the available **Range** configuration options for the UDM node.

Setting	Description
Settings	Each UDM range requires the configuration of an associated set of Settings, which are described in <a href="#">UDM settings</a> .
UDM Node Settings	Each UDM range requires the configuration of an associated set of Node Settings, which are described in <a href="#">UDM node settings</a> .
Nudm	Each UDM range requires the configuration of Nudm interface settings, through

Setting	Description
Interface Settings	which a UDM instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">UDM Nudm interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">Remote SBA nodes</a> .

## UDM Settings

Each UDM instance requires the configuration of the following settings.

Setting	Description
PLMN MCC	<p>The PLMN MCC for this UDM range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this UDM range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
<p><i>Network Initiated Deregistration:</i> You can enable or disable this option, as required by your test configuration.</p>	
Delay	Set the delay value.
Trigger	<p>Describes what triggers the sending of the Network Deregistration message.</p> <p>Available options:</p> <ul style="list-style-type: none"> <li>• <b>Subscribe</b> - AMF to UDM SDM subscription HTTP procedure</li> <li>• <b>Update Location</b> - MME to HSS Update Location Request Diameter procedure</li> </ul>
Deregistration	Select the deregistration reason from the drop-down list. Available options:

Setting	Description
Reason	<ul style="list-style-type: none"> <li>• UE INITIAL REGISTRATION</li> <li>• UE REGISTRATION AREA CHANGE</li> <li>• SUBSCRIPTION WITHDRAWN</li> <li>• 5GS TO EPS MOBILITY</li> <li>• 5GS TO EPS MOBILITY UE INITIAL REGISTRATION</li> <li>• REREGRISTRATION REQUIRED</li> </ul>

## UDM Node Settings

Each UDM range includes a set of Node Settings plus one or more associated Routing Indicators. Also, here you can configure the SDM notifications settings.

Each UDM instance (that is, each range) is identified by the following node settings.

Setting	Description
Instance ID	The Instance ID uniquely identifies each UDM instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Home Network Private key	<p>The Home Network Private key that is used for subscriber privacy.</p> <p>The Subscription identifier de-concealing function (SIDF)—which is a service provided by the UDM—is responsible for de-concealing the SUPI from the SUCI. When the Home Network Public Key is used for encryption of the SUPI, the SIDF uses the Home Network Private Key that is securely stored in the home operator's network to decrypt the SUCI. The de-concealment takes place at the UDM. Access rights to the SIDF are defined such that only a network element of the home network is allowed to request SIDF.</p> <p>Note that one UDM can comprise several UDM instances. The Routing Indicator in the SUCI can be used to identify the specific UDM instance that is capable of serving a subscriber.</p>
	<p><b>About SUPI and SUCI ...</b></p> <p>The Subscription Permanent Identifier (SUPI) is a globally unique identifier allocated to each subscriber in the 5G System. The Subscription Concealed Identifier (SUCI) is a privacy-preserving identifier containing the concealed SUPI.</p>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
<p><i>Routing Indicators: For details, refer to <a href="#">Routing Indicators</a>.</i></p> <p><i>SDM Notifications: For details, refer to <a href="#">SDM Notifications</a>.</i></p>	

## Routing Indicators

The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.

You can add as many Routing Indicators as necessary to support your test objectives.

Setting	Description
	Select the <b>Add Routing Indicator</b> button to add a Routing Indicator for the UDM range.
	Select the <b>Delete</b> button to remove the routing indicator from the UDM range.

## SDM Notifications

The UDM is a database-like Network Function(NF). It keeps information about the subscribers (users). The information about a subscriber is organized as a collection of resources corresponding to that user (*nssai*, *am-data*, *sm-data*, *smf-select-data* etc). A resource is a JSON object, containing sub-objects identified by a path.

When other Network Functions (NFs) register to UDM for a certain subscriber, they get some of those resources (for that specific user) and also ask the UDM to subscribe for changes to those resources (so for example, through a subscription operation, the AMF requests from the UDM a notification when *am-data* resource for this user changes).

Basically, through the SDM Notifications, UDM is delivering notifications to other interested NFs about changes to its resources.

The SDM Notifications defines a list of resources and the changes that occur for each of those resources

You can add as many SDM notification subscriptions as necessary to support your test objectives. To do this, select the **Add UDM Triggered SDM Notifications Table** button.

The following table describes the parameters that you need to configure for each SDM subscription.

Setting	Description
<i>SDM Subscription:</i>	
	Select the <b>Delete Subscription</b> button to remote this subscription from the SDM notifications.
Resource name	This represents the subscribed resource (entered as a string) for which notifications are triggered. Valid strings currently supported: <i>nssai</i> , <i>am-data</i> , <i>smf-select-data</i> , <i>sm-data</i> , <i>ue-context-in-smf-data</i> .
Notification trigger time	This represents the time interval (in miliseconds) from NF subscription (for that resource) after which that NF will start receiving notifications from UDM.

Setting	Description
(ms)	
Change resource continuously	Select this option to apply the changes from the list continuously (start over again when reaching the end of the list). If this option is not selected, the notifications for the resource will stop when the last change in the list will happen, otherwise they will start from the beginning again.
<i>Resource changes:</i>	
	Select the <b>Add change</b> button to add new list of changes that will happen over time to the defined resource.
<i>Change Item</i>	
	Select the <b>Delete Change Item</b> to remove this list from your configuration.
Change type	This represents the nature of the change: <ul style="list-style-type: none"> <li><b>Add</b> - new content was added to the resource.</li> <li><b>Replace</b> - a certain content was replaced.</li> <li><b>Remove</b> - a certain content was removed.</li> <li><b>Move</b> - a certain content has been moved from one place to another.</li> </ul>
Path in resource to change	The resource is a JSON object and it is comprised of multiple JSON sub-objects. This path describes which sub-object will be the target of the change (if left empty, it designated the resource object).
New JSON value	This represents the new JSON text value for the object identifier by the <a href="#">Path in resource to change</a> . <p><b>IMPORTANT</b> This field must have a valid JSON text value only if the <a href="#">Change type</a> is set to <b>Add</b> or <b>Replace</b>.</p>
Trigger after previous notification change (ms)	This represents the time interval starting from the previous change notification, after which this notification should be delivered. The first notification would not use this value, it will be delivered using the value of <a href="#">Notification Trigger timer</a> .
From source path (used for Move change type)	<p><b>NOTE</b> This parameter is available only when <a href="#">Change type</a> is set to <b>Move</b>.</p> <p>This represents the original path of the JSON object that has been moved.</p>

## UDM Nudm Interface Settings

Nudm is the service-based interface through which a UDM instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nudm connectivity and service interaction.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>

<b>Connectivity Settings</b>	<b>Description</b>
VLAN ID	VLAN identifier.
<i>mTLS Server Settings</i>	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
<i>mTLS Client Settings</i>	<p><i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i></p>
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## UDM Remote SBA Nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

## SEPP Connection Settings

To connect to the Security Edge Protection Proxy (SEPP) node, the following configuration settings are required.

Setting	Description
<i>SEPP Connection Settings:</i>	
Peer SEPP	Select either the IP address of a SCP node from your test network or <i>None</i> if you are not using one in your test configuration.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.
Sepp Communication Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Telescopic FQDN</b></li> <li>• <b>Target API Root</b></li> </ul>

## Home PLMN for Inter-PLMN Routing

The following configuration settings are required.

PLMN MCC	Provide the PLMN MCC value. <b>About PLMN MCC ...</b> A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which
----------	--

	<p>consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>Provide the PLMN MNC value.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>

## HSS Range Settings

The following table describes the available **Range** configuration options for each range.

Setting	Description
Settings	Each HSS range requires the configuration of an associated set of Settings, which are described in <a href="#">HSS settings</a> .
HSS Node Settings	Each HSS range requires the configuration of an associated set of Node Settings, which are described in <a href="#">HSS node settings</a> .
S6a Interface Settings	Each HSS range requires the configuration of S6a interface settings, through which a HSS instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">HSS S6a interface settings</a> .

## HSS Settings

Each HSS instance requires the configuration of the following settings.

Setting	Description
PLMN MCC	<p>The PLMN MCC for this HSS range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	The PLMN MNC for this HSS range.

Setting	Description
	<p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
	<p><i>Network Initiated Deregistration: You can enable or disable this option, as required by your test configuration.</i></p>
Delay	Set the delay value.
Trigger	<p>Describes what triggers the sending of the Network Deregistration message.</p> <p>Available options:</p> <ul style="list-style-type: none"> <li>• <b>Subscribe</b> - AMF to UDM SDM subscription HTTP procedure</li> <li>• <b>Update Location</b> - MME to HSS Update Location Request Diameter procedure</li> </ul>
Deregistration Reason	<p>Select the deregistration reason from the drop-down list. Available options:</p> <ul style="list-style-type: none"> <li>• UE INITIAL REGISTRATION</li> <li>• UE REGISTRATION AREA CHANGE</li> <li>• SUBSCRIPTION WITHDRAWN</li> <li>• 5GS TO EPS MOBILITY</li> <li>• 5GS TO EPS MOBILITY UE INITIAL REGISTRATION</li> <li>• REREGISTRATION REQUIRED</li> </ul>

## HSS Node Settings

Each HSS instance (that is, each range) is identified by the following node settings.

Setting	Description
	<p><i>HSS S6a: You can enable or disable the S6a interface, as required by your test configuration.</i></p>
Origin Host Prefix	Set the origin host prefix. Default value: <b>host</b> .
Origin Realm	Set the origin realm. Default value: <b>keysight.com</b> .
Destination Host	Set the destination host prefix.
Destination Realm	Set the destination realm.
	<p><i>Cancel Location: You can enable or disable this option, as required by your test configuration.</i></p>
Delay	Set the delay value.

## HSS S6a Interface Settings

S6a is the service-based interface through which a HSS instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary S6a connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>VLAN TPID</i>	<i>VLAN tag protocol ID.</i>
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UDM and HSS Range Settings

The following table describes the available **Range** configuration options for each range.

Setting	Description
Settings	Each UDM and HSS range requires the configuration of an associated set of Settings, which are described in <a href="#">UDM settings</a> or <a href="#">HSS settings</a> .
UDM Node Settings	Each UDM and HSS range requires the configuration of an associated set of UDM Node Settings, which are described in <a href="#">UDM node settings</a> .
Nudm Interface Settings	Each UDM and HSS range requires the configuration of Nudm interface settings, through which a UDM instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">UDM Nudm interface Settings</a> .
HSS Node Settings	Each UDM and HSS range requires the configuration of an associated set of HSS Node Settings, which are described in <a href="#">HSS node settings</a> .
S6a Interface Settings	Each UDM and HSS range requires the configuration of S6a interface settings, through which a HSS instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">HSS S6a interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">remote SBA nodes</a> .

## UDR configuration settings



Unified Data Repository (UDR) is the 5G core network service that maintains a repository of data that can be used by a number of 5G network functions. For example, the UDR may store subscription data that is used by the UDM and policy data that is used by the PCF. It makes its services available to other network functions through the Nudr service-based interface. Multiple instances of UDR may be deployed, with each instance storing specific data or providing service to a specific set of network function (NF) consumers.

The configuration settings are described in the topics listed below.

### Topics:


<b>UDR Ranges panel</b>	<b>452</b>
<b>UDR Range panel</b>	<b>453</b>
<b>UDR Nudr interface settings</b>	<b>454</b>
<b>UDR Remote SBA Nodes</b>	<b>455</b>

### UDR Ranges panel

The **UDR Ranges** panel opens when you select the UDR node from the network topology window. You can perform the following tasks from this panel:

- Add a new UDR range to your test configuration.
- Open a UDR range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

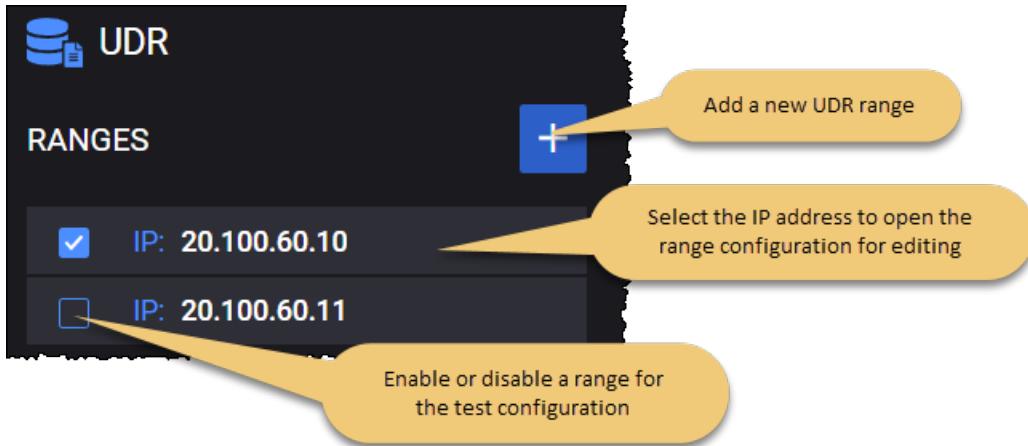

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **All Ranges on All Agents**
- **Round Robin Ranges on Agents**

#### IMPORTANT

One or more UDR ranges can be configured on one agent.

- in case of one range and multiple agents, each agent will create a different
- in case of round robin, each range will be configured on another agent.

## UDR Range panel

You add and select UDR ranges from the UDR Ranges panel. When you select a UDR's IP address from the **UDR Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected UDR range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the UDR range.

### UDR range controls and settings

Each UDR range is identified by a unique IP address. You can add and delete UDR ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each UDR range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your UDR is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the UDR functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each UDR range requires the configuration of an associated set of Node Settings, which are described in <a href="#">UDR node settings</a> .
Nudr Interface Settings	Each UDR range requires the configuration of Nudr interface settings, through which a UDR instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">UDR Nudr interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">UDR remote SBA nodes</a> .

### Node Settings

The following table describes the available UDR Node Settings.

Setting	Description
Instance ID	Multiple UDR instances may be deployed in the 5G network, with each one storing specific data or providing service to a specific set of NF consumers. Each UDR instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Name	The name of the UDR range. You can accept the name provided by the LoadCore, or

Setting	Description
	you can replace it with a name of your own choosing.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
PLMN MCC	Set the mobile country code.
PLMN MNC	Set the mobile network code.

## UDR Nudr interface settings

Nudr is the service-based interface through which a UDR instance makes its services available to other services in a 5G network. The following **Connectivity Settings** enable the necessary Nudr connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.

Connectivity Settings	Description
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
mTLS Server Settings	<p><b>IMPORTANT</b> <i>This option is available only if the IP's <b>Protocol</b> parameter is set to <b>HTTPS</b>.</i></p> <p><i>Select the check-box to make this option available, and then select the mTLS Server Settings to open the configuration panel for editing.</i></p>
CA Certificate	Select from the drop-down list one of the available server certificates.
Certificates and Private Keys (.zip)	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.
mTLS Client Settings	<i>Select the check-box to make this option available, and then select the mTLS Client Settings to open the configuration panel for editing.</i>
Certificates and Private Keys (.zip )	You can use the <b>Upload</b> button to add the archive that contains an equal number of CRT and KEY file types, where the CRT and the associated KEY file have the same name. Use <b>Clear</b> to remove the file, if necessary.

## UDR Remote SBA Nodes

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option.

<b>Setting</b>	<b>Description</b>
	When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

# UPF/PGW-U configuration settings



User Plane Function (UPF) is one of the fundamental components of the 5G core architecture. It is the interconnection point between the mobile infrastructure and the Data Networks (DN) and, as such, it is responsible for encapsulating and decapsulating the GPRS Tunneling Protocol for the user plane (GTP-U).

Among its key responsibilities are packet routing and forwarding, packet inspection and QoS handling, user plane lawful intercept, and providing the mobility anchor for intra-RAT and inter-RAT handovers.

UPF interacts with the DN over the N6 reference point, with the RAN over the N3 reference point, and with the SMF over the N4 reference point. In addition, the N9 reference point is used for interactions among UPFs, such as an I-UPF and the PDU session anchor UPF.

PGW-U, introduced in 3GPP Release 14 as part of the Control and User Plane Separation strategy (CUPS), handles the user plane forwarding responsibilities in 4G networks.

The configuration settings are described in the topics listed below.

## Topics:

<b>UPF/PGW-U Ranges panel</b>	<b>458</b>
<b>UPF/PGW-U Range panel</b>	<b>458</b>
<b>UPF node settings</b>	<b>460</b>
<b>UPF N3 interface settings</b>	<b>460</b>
<b>UPF N4 interface settings</b>	<b>461</b>
<b>UPF N6 interface settings</b>	<b>463</b>
<b>UPF N9 interface settings</b>	<b>463</b>
<b>UPF Nupf Interface Settings</b>	<b>465</b>
<b>UPF Remote SBA Nodes</b>	<b>466</b>
<b>UPF Slice Mapping settings</b>	<b>467</b>


## UPF/PGW-U Ranges panel

The **UPF/PGW-U Ranges** panel opens when you select the UPF/PGW-U node from the network topology window.

You can perform the following tasks from this panel:

- Add a new UPF range to your test configuration.
- Open a UPF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

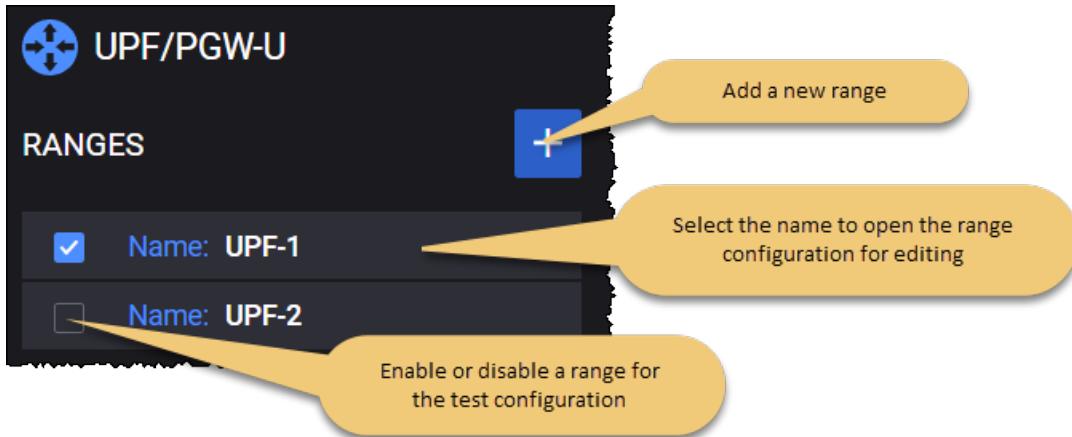

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **All Ranges on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT** One or multiple UPF ranges can be configured on one agent.

If one or multiple ranges and multiple agents is the case, each range can be configured on one agent or each range can be configured on multiple agents incrementing IP address, etc.

## UPF/PGW-U Range panel

You add and select UPF ranges from the UPF/PGW-U Ranges panel. When you select a UPF range **Name**, LoadCore opens the **Range** panel, from which you can:

- Delete the UPF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Modify the UPF range **Name**.
- Configure interface settings for the UPF range.

The following table describes the **Range Settings** that you configure for each UPF range.

<b>Setting</b>	<b>Description</b>
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your UPF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the UPF functionality (if it is selected in the Topology window).
Name	The name of the UPF range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
<i>Range Settings:</i>	
PSA-UPF	This option enables the UPF range as the PDU Session Anchor. The UPF will be connected to the DN. The toggle is switched on by default.
Node Settings	Each UPF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">UPF node settings</a> .
N3 Interface Settings	N3 is the interface between the RAN and the UPF. These interface settings are described in <a href="#">UPF N3 interface settings</a> .
N4 Interface Settings	N4 is the interface between the SMF and the UPF. These interface settings are described in <a href="#">UPF N4 interface settings</a> .
N6 Interface Settings	N6 is the interface between the DN and the UPF. These interface settings are described in <a href="#">UPF N6 interface settings</a> .
N9 Interface Settings	N9 is the interface between two UPFs. These interface settings are described in <a href="#">UPF N9 interface settings</a> .
Nupf Interface Settings	Each UPF range requires the configuration of Nupf interface settings, through which a UPF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">UPF Nupf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">UPF remote SBA nodes</a> .
Slice Mapping	These settings are described in <a href="#">UPF Slice Mapping settings</a> .

## UPF node settings

Each UPF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple UPF instances may be deployed in the 5G network. Each UPF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN Mobile Country Code (MCC) for this UPF range.
PLMN MNC	The PLMN Mobile Network Code (MNC) for this UPF range.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## UPF N3 interface settings

N3 is the user plane interface between the RAN and the UPF.

The following configuration settings are required by each UPF N3 range.

Setting	Description
<i>N3 Interface Settings:</i>	
Network Instance	The network domain that will be used in the Network Instance information element (IE) in messages sent on this interface. The UPF uses the Network Instance to determine the IP network to use when transferring traffic over the N3 interface.
<i>Network Instance:</i>	
	Select the <b>Add value</b> button to add a network instance to your test configuration.
	Select the <b>Delete</b> button to remove the network instance from your test configuration.
Network Instance Format	Select the encoding format for the network instance: string or label-list.

## Connectivity Settings

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N4 interface settings

The UPF receives user traffic information from the SMF over the N4 interface. N4—which employs the Packet Forwarding Control Protocol (PFCP)—is the control plane interface between the UPF and the SMF. PFCP sessions established with the UPF define how packets are identified, forwarded, processed, marked, and reported (using PDRs, FARs, BARs, QERs, and URRs).

The following configuration settings are required by each UPF N4 range.

Setting	Description
<i>N4 Interface Settings:</i>	
Supports FTEID Allocation	When this option is enabled, the UPF allocates TEIDs. When it is disabled, the UPF expects the SMF to allocate TEIDs.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected. Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N6 interface settings

N6 is the interface between the UPF session anchor and the DN. It is the interconnection point at which user plane packet encapsulation and decapsulation is performed.

The following **Connectivity Settings** are required by each UPF N6 range.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N9 interface settings

N9 is the interface between two UPFs in a 5G network: for example an I-UPF and the UPF session anchor. An I-UPF performs a relay function, while the session anchor terminates the protocols (such as GTP) used on that interface.

You can enable or disable the N9 Interface Settings, as required by your test configuration. For example:

**N9 Interface Settings**

The following **Interface Settings** are available only if the **N9 Interface Settings** check-box is selected.

Interface Settings	Description
Network Instance	The network domain that will be used in the Network Instance information element (IE) in messages sent on this interface. The UPF uses the Network Instance to determine the IP network to use when transferring traffic over the N9 interface.
<i>Add Network Instance:</i>	
	Select the <b>Add value</b> button to add a network instance to your test configuration.
	Select the <b>Delete</b> button to remove the network instance from your test configuration.
Network Instance Format	Select the encoding format for the network instance: string or label-list.

## Connectivity Settings

The following **Connectivity Settings** enable the necessary N9 connectivity between UPF nodes.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.

<b>Connectivity Settings</b>	<b>Description</b>
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF Nupf Interface Settings

Nupf is the service-based interface through which a SMSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nupf connectivity and service interaction.

<b>Connectivity Settings</b>	<b>Description</b>
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>

Connectivity Settings	Description
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## UPF Remote SBA Nodes

**IMPORTANT** This section becomes available for configuration only if [Nupf interface settings](#) is selected in the range configuration list.

The following configuration settings are required.

Settings	Description
<i>NRF Connection Settings:</i>	
Peer NRF	Select the peer UPF using either of the following methods: <ul style="list-style-type: none"> <li>Select the IP address of the UPF node. This is the destination address of the UPF node to which the packets are sent over the Nupf interface.</li> <li><b>None</b></li> </ul>
Protocol	The protocol to use for Nudm communications. It can be either HTTP or HTTPS.
Port	The UPF port number to use for Nupf communications. The default is port 80, but you can choose a different port number.

## UPF Slice Mapping settings

**IMPORTANT** This section becomes available for configuration only if [Nupf interface settings](#) is selected in the range configuration list.

The following table describes the Slice Mapping settings.

Setting	Description
<i>Slice Mapping:</i>	
	Select the <b>Add Slice Mapping</b> button to add a network slice to your test configuration.
<i>Slice Mapping:</i>	
	Select the <b>Delete Slice Mapping</b> button to remove this network slice from your test configuration.
SST	The Slice/Service Type (SST) value for this network slice.
SD	The Slice/Service Type (SST) value for this network slice. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
DNNs	<p>One or more DNNs (Data Network Names) associated with the network slice and uplink path.</p> <p>Select one or more DNNs from the drop-down list.</p>

## 5G-EIR configuration settings



Equipment Identity Register (5G-EIR) is a network function of 5G Core which is used to check the status of PEI(Permanent Equipment Identifier) (e.g., PEI blacklist status). It provides services for authentication and arbitrary device change processing to prevent unauthorized use of devices depending on the PEI status on 5G Core.

### Topics:

<b>5G-EIR Ranges panel</b>	<b>468</b>
<b>5G-EIR Range panel</b>	<b>469</b>
<b>5G-EIR node settings</b>	<b>469</b>
<b>5G-EIR N5g-eir interface settings</b>	<b>470</b>
<b>5G-EIR Remote SBA Nodes</b>	<b>471</b>


### 5G-EIR Ranges panel

The **5G-EIR Ranges** panel opens when you select the 5G-EIR node from the network topology window. Each 5G-EIR range is identified by a unique IP address that you configure.

You can perform the following tasks from this panel:

- Add a new 5G-EIR range to your test configuration.
- Open a 5G-EIR range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

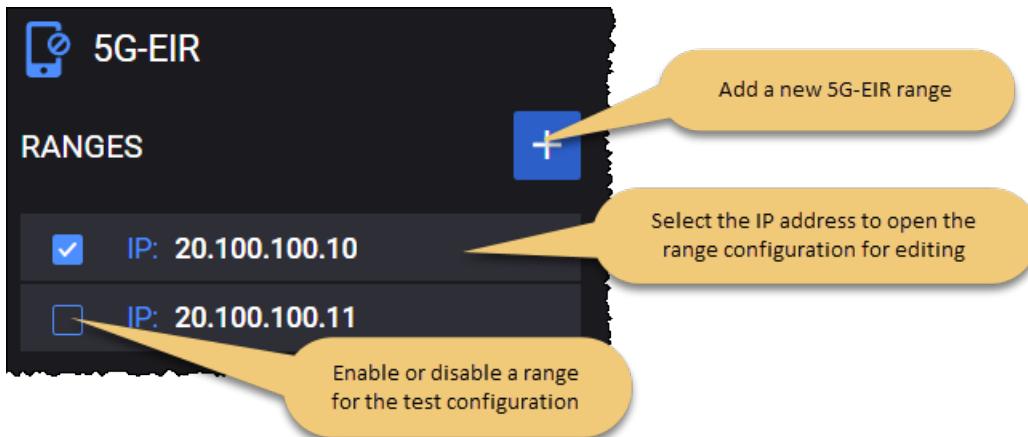

If multiple agents are assigned to this node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) displays the available options in the drop-down:

- **One Range on All Agents**
- **Round Robin Ranges on Agents**

**IMPORTANT**

Only one 5G-EIR range can be configured on one agent.

- in case of multiple ranges, it will require one agent for each range;
- in case one range and multiple agents, each agent will create a different 5G-EIR NF, with incremented IP address and NF ID, and whole UE range.

## 5G-EIR Range panel

When you select the IP address of a 5G-EIR range from the 5G-EIR Ranges panel, LoadCore opens the **Range** panel for that selected 5G-EIR. From that Range panel you can:

- Delete the selected 5G-EIR range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the 5G-EIR range.

### 5G-EIR range controls and settings

Each 5G-EIR range is identified by a unique IP address. You can add and delete ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each 5G-EIR range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your 5G-EIR is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the 5G-EIR functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each 5G-EIR range requires the configuration of an associated set of Node Settings, which are described in <a href="#">5G-EIR node settings</a> .
N5g-eirInterface Settings	Each 5G-EIR range requires the configuration of N5g-eir interface settings, through which a 5G-EIR instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">5G-EIR N5g-eir interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">5G-EIR remote SBA nodes</a> .

## 5G-EIR node settings

Each 5G-EIR range includes a set of Node Settings.

### Node Settings

Each 5G-EIR instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple 5G-EIR instances may be deployed in the 5G network. Each 5G-EIR instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## 5G-EIR N5g-eir interface settings

N5g-eir is a service-based interface exhibited by 5G-EIR (5G-Equipment Identity Register) which is an optional network function that checks the status of Equipment's identity (e.g. to check that it has not been blacklisted).

The following **Connectivity Settings** enable the necessary N5g-eir connectivity and service interaction.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.

Connectivity Settings	Description
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## 5G-EIR Remote SBA Nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Use SBI Fuzzing	Use the toggle button to enable this option. When enabled, the <i>Peer NRF</i> drop-down is hidden and a new drop-down called <i>SBI Fuzzer</i> is displayed.
SBI Fuzzer	Select the node from the drop-down list.
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.


## NF Discovery service

The NF Repository Function (NRF) enables a service discovery function (Nnrf\_NFDiscovery service) that allows a Network Function instance to discover services offered by other Network Function instances, by querying the local NRF. For a 5G node to be discovered, it must be registered to an NRF.


### NF Discovery in LoadCore

To use NF Discovery in a LoadCore test:

1. Enable and configure one or more NRF nodes for the test. For example:

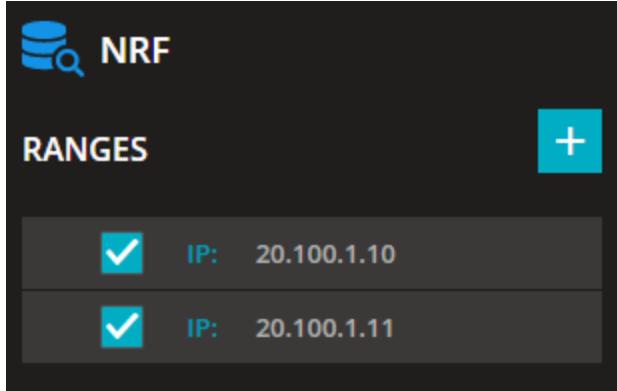

2. To register a node (such as an SMF) for discovery:
  - a. Select that node from the topology window, then select the range that you are registering.
  - b. From **Range Settings**, select **Remote SBA Nodes**.
  - c. Select **NRF Connection Settings**, and then select the desired *Peer NRF* (the IP address of the peer NRF). For example:

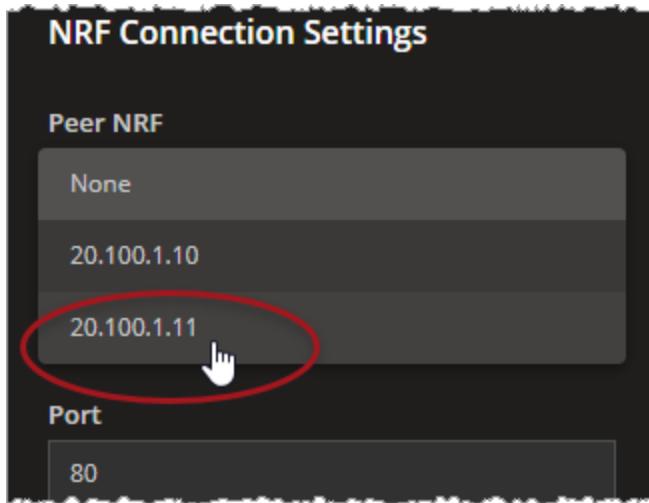


This is the NRF to which the node is registering.

3. For a node (such as an AMF) that needs to discover services offered by another NF instance:

- a. Select that node from the topology window, then select the range that will query the NRF.
- b. From the **Remote SBA Nodes** panel, select **Discover** in the *Peer NRF* field for the node to be discovered.
- c. Also from the **Remote SBA Nodes** panel, select **NRF Connection Settings**, and then select the desired *Peer NRF* (the IP address of the NRF to which the node is registered).


For example:

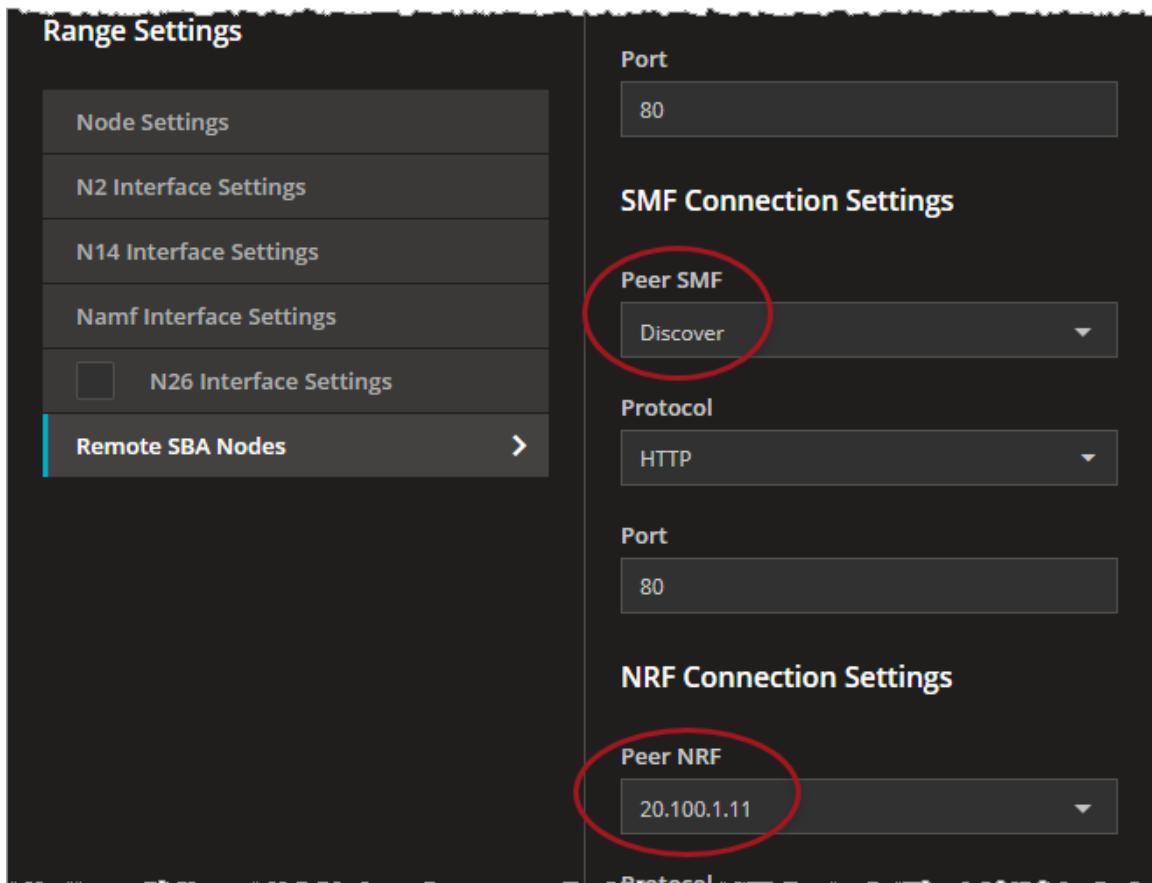

*CHAPTER 6*

## NG-RAN Simulation tests

This section provides descriptions of the configuration settings that are specific to the **Wireless NG-RAN Simulation** test type.



The NG-RAN simulation test topology is similar to a Full Core test, except that:


- The AMF and UPF nodes are configured as DUTs.
- The UE, RAN, and DN nodes are enabled for testing.
- All other simulated nodes are disabled by default.

For more details about configuring a Full Core test, refer to [Full Core tests: configuration settings](#).

*CHAPTER 7*

## SBA tests: configuration settings

This section provides descriptions of the configuration settings that are specific to the **Wireless SBA** test type:

**Topics:**

<b>SBA Tester overview</b>	<b>479</b>
<b>UE configuration settings</b>	<b>480</b>
UE Ranges panel	481
UE Range panel	481
Range Settings	482
UE Identification	483
UE Security	484
UE Settings	486
UE SDF settings	487
Shared Data IDs	488
UE Subscribed AMBR settings	488
Service Area Restrictions	489
Forbidden Areas	490
Notifications	490
SMS Configuration	491
Network Slicing	493
UDM Default NSSAI settings	494
UDM SNSSAI Mappings	494
UDR SNSSAI Settings	495
Charging Function	496
Converged Charging	496


Spending Limit Control .....	497
Objectives .....	500
Primary Objective .....	501
Secondary Objectives .....	540
<b>SBA Tester Global Settings panel .....</b>	<b>567</b>
Connection Settings .....	568
Advanced Settings .....	568
Impairment .....	570
DNNs panel .....	571
DNN configuration settings .....	572
DNN GBR configuration settings .....	573
Session AMBR configuration settings .....	574
QoS Flows panel .....	575
QoS Flow configuration settings .....	576
QoS Flow Packet Filter configuration settings .....	578
QoS Flow Maximum Packet Loss configuration settings .....	579
QoS Flow ARP configuration settings .....	579
QoS Flow MBR configuration settings .....	580
QoS Flow GBR configuration settings .....	580
<b>SBA Tester Simulated Nodes panel .....</b>	<b>581</b>
AMF configuration settings .....	581
SMF configuration settings .....	587
PCF configuration settings .....	592
AF configuration settings .....	597
<b>SBA Tester Remote SBA Nodes .....</b>	<b>603</b>
<b>SBA Tester Remote Nodes .....</b>	<b>605</b>
AUSF configuration settings .....	607
AUSF Ranges panel .....	608
AUSF Range panel .....	608
AUSF node settings .....	609
AUSF Nausf interface settings .....	610
AUSF remote SBA nodes .....	611

CHF configuration settings .....	613
CHF Ranges panel .....	613
CHF Range panel .....	614
CHF node settings .....	614
CHF Nchf interface settings .....	615
CHF remote SBA nodes .....	616
NRF configuration settings .....	617
NRF Ranges panel .....	617
NRF Range panel .....	617
NRF node settings .....	618
NRF Nnrf interface settings .....	619
NSSF configuration settings .....	621
NSSF Ranges panel .....	622
NSSF Range panel .....	622
NSSF node settings .....	623
Nnssf Interface Settings .....	624
Remote SBA nodes .....	625
NSSF Restricted NSSAIs .....	626
NSSF Network Slices .....	627
NSSF Configured NSSAI .....	628
PCF configuration settings .....	629
PCF Ranges panel .....	629
PCF Range panel .....	629
PCF node settings .....	630
PCF service area restrictions .....	632
PCF Npcf interface settings .....	633
PCF remote SBA nodes .....	634
SCP configuration settings .....	635
SCP Ranges panel .....	635
SCP Range panel .....	636
SCP Nscp interface settings .....	637
SCP Remote SBA Nodes .....	638

SMSF configuration settings .....	639
SMSF Ranges panel .....	639
SMSF Range panel .....	640
SMSF node settings .....	641
SMSF Nsmsf interface settings .....	641
SMSF Remote SBA Nodes .....	642
UDM configuration settings .....	645
UDM Ranges panel .....	645
UDM Range panel .....	646
UDM node settings .....	647
UDM Nudm interface settings .....	650
UDM remote SBA nodes .....	651
UDR configuration settings .....	652
UDR Ranges panel .....	652
UDR Range panel .....	653
UDR Nudr interface settings .....	655
UDR remote SBA nodes .....	656

## SBA Tester overview

The purpose of the **SBA test** test type is to test one of the SBA nodes by configuring what procedures you want to simulate and with what rate. This way, you can replace some nodes of the network architecture with a single **SBA Tester** node.

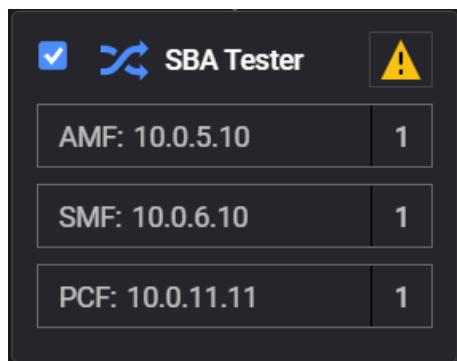

This SBA Tester hides the rest of the nodes and acts as if those nodes initiated certain procedures. The main advantage of this approach is that by doing this you can isolate one or a few interfaces and get rid of the overhead of simulating the rest of the needed interfaces between nodes, and thus obtaining a higher performance and greater flexibility.

In contrast, in the Full Core test topology, you do not actually control the rate at which the messages reach AUSF; rather, you control the rate at which you want the UE to do certain actions, and the rate at which messages reach AUSF is, consequently, determined by what happens in the network.

### For example ...

You can test an AUSF node with the Full Core topology test. To do this, you can configure a UE and make it attach to the network. When that UE attaches, the network needs to establish sessions for it on the AMF, the SMF, the UPF, and the NG-RAN, and at some point a request reaches AUSF.

Now if you use the SBA Tester to test the AUSF, you can just select the procedure you want to reach the AUSF, and with what rate. The messages associated to the selected procedure will be sent directly to the AUSF. From the AUSF's point of view, given the fact that the message structure and sequence is correct, it can only assume that these messages are generated by the same procedure as in the Full Core topology and it has no way of telling that those nodes are not actually there.

# UE configuration settings



You use the User Equipment (UE) configuration settings to define one or more ranges of simulated UEs. Every test requires at least one range of simulated UEs. These settings define properties that are representative of real-world UEs that may access a 5G network, including UE identity, security, network slice selection, among others.

In addition, the UE settings include the configuration of test objectives; these settings direct the traffic performance and UE behavior actions during test execution.

The configuration settings are described in the topics listed below.

## Topics:


<b>UE Ranges panel</b>	<b>481</b>
<b>UE Range panel</b>	<b>481</b>
<b>Range Settings</b>	<b>482</b>
UE Identification	483
UE Security	484
UE Settings	486
UE SDF settings	487
Shared Data IDs	488
UE Subscribed AMBR settings	488
Service Area Restrictions	489
Forbidden Areas	490
Notifications	490
SMS Configuration	491
<b>Network Slicing</b>	<b>493</b>
UDM Default NSSAI settings	494
UDM SNSSAI Mappings	494
UDR SNSSAI Settings	495
<b>Charging Function</b>	<b>496</b>
Converged Charging	496
Spending Limit Control	497
<b>Objectives</b>	<b>500</b>
Primary Objective	501
Secondary Objectives	540

## UE Ranges panel

The **UE Ranges** panel opens when you select the UE node from the network topology window. You can perform the following tasks from this panel:

- Add a new UE range to your test configuration.
- Open a UE range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

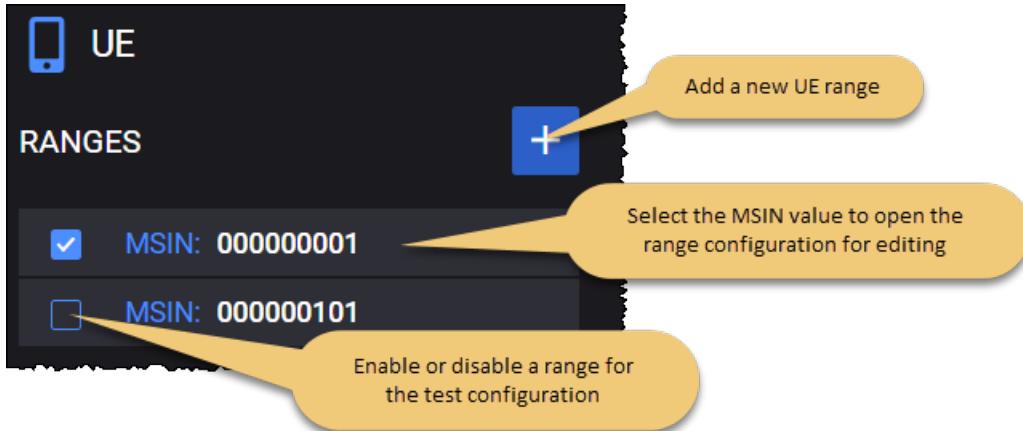

## UE Range panel

When you select an MSIN from the UE **Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Delete the UE range from the test configuration.
- Configure the *Range Count*.
- Access the detailed UE configuration settings (Range Settings, Network Slicing, Objectives).

### UE range controls and settings

The following table describes the available **Range** configuration options for each UE range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	Enter the number of simulated UEs required for the range.

## Detailed UE configuration settings

The Range panel also provides links to the detailed configuration settings:

- [Range Settings](#)
- [Network Slicing](#)
- [Test Objectives](#)

## Range Settings

For each range that you add (in the [UE Ranges panel](#)), you access and configure the settings from the **Range** panel ([UE Range panel](#)).

The **Range Settings** are organized into the following groups:

- [UE Identification](#)
- [UE Security](#)
- [UE Settings](#)
- [UE SDF settings](#)
- [Shared Data IDs](#)
- [UE Subscribed AMBR settings](#)
- [Service Area Restrictions](#)
- [Forbidden Areas](#)
- [SMS Configuration](#)

## UE Identification

Each UE range has a set of Identification settings that provide basic identity values for the simulated UEs that populate the range. Some of the values (such as MCC) are shared by all of the UEs in the range, while others (such as MSIN) are unique for each individual UE in the range. The unique values are generated using an initial value plus an increment value.

The following table describes the UE **Identification Settings**.

Setting	Description
MCC	The MCC that will be assigned to each UE in this range.
MNC	The MNC that will be assigned to each UE in this range.
MSIN	The MSIN value that will be assigned to the first simulated UE in the range.
MSIN increment	The value to use for incrementing the MSIN values for each of the UEs in the range.
IMEI	The IMEI value that will be assigned to the first simulated UE in the range. The International Mobile Equipment Identity (IMEI) is a number used to uniquely identify 3GPP and iDEN mobile phones, as well as some satellite phones. It identifies the origin, model, and serial number of the device. It consists of either 15 digits (14 digits plus one check digit); or 16 digits (14 digits plus two software version digits). GSM networks use the IMEI number to identify valid devices, and can also use the number to prevent a stolen phone from accessing the network. When it includes the software version digits, it is referred to as the IMEISV.
IMEI Increment	The value to use for incrementing the IMEI values for each of the UEs in the range.
Software Version	The software version number identifies the software version number of the mobile equipment. Its length is 2 digits.
MSISDN	The first Mobile Station ISDN (MSISDN) value for this range.
MSISDN Increment	The value to use for incrementing the MSISDNs in the range.
UE IP Address	The IPv4 address that has been assigned to the first simulated UE in the range.
UE IP increment	The value to use for incrementing the IPv4 addresses for each of the UEs in the range.
UE IPv6 Address Prefix	The IPv6 address prefix that has been assigned to the first simulated UE in the range.
UE IPv6 Address	The value to use for incrementing the IPv6 address prefixes for each of the UEs in the range.

Setting	Description
Prefix Increment	
UE IPv6 Address Prefix Length	The IPv6 address prefix that has been assigned to the UEs in the range.

## UE Security

Each UE range requires security settings for subscriber authentication and subscriber privacy. In the 5G system, the SUbscription Permanent Identifier (SUPI) is a globally unique identifier allocated to each subscriber. The serving network must authenticate the SUPI in the process of authentication and key agreement between UE and network. The serving network authorizes the UE through the subscription profile obtained from the home network; this UE authorization is based on the authenticated SUPI.

The SUPI is never transferred in clear text over the 5G-RAN; instead, the SUCI is used. The SUbscription Concealed Identifier (SUCI) is a privacy-preserving identifier containing the concealed SUPI. In the 5G core network, only the UDM has authority to deconceal the SUCI.

For detailed information, refer to 3GPP TS 33.501 (Security architecture and procedures for 5G System).

The following table describes the UE **Security Settings**.

Setting	Description
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP / OPc / TOP / TOPc	Select the operator-specific authentication value.
OP	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc	The OPc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.

<b>Setting</b>	<b>Description</b>												
OPc Increment	The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.												
TOP	A 256-bit operator variant algorithm configuration field used by the TUAK authentication algorithm.												
TOPc	A 256-bit value derived from TOP and K used by the TUAK authentication algorithm.												
TOPc Increment	The number used to increment the TOPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same TOPc value.												
RAND	A hexadecimal number that represents the 128-bit random challenge. You can accept the value generated by LoadCore, or enter of a RAND value of your own choosing.												
AUTN	The AUthentication TokeN (AUTN) to use when authenticating the UEs in this range.												
Protection Scheme	<p>The protection scheme used to generate the SUCI (for the purpose of concealing the SUPI) for each UE in the range. The options are as follows:</p> <table border="1"> <thead> <tr> <th><b>Scheme</b></th> <th><b>Identifier</b></th> <th><b>Size of the scheme output</b></th> </tr> </thead> <tbody> <tr> <td>null-scheme</td> <td>0x0</td> <td>Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)</td> </tr> <tr> <td>Profile-A</td> <td>0x1</td> <td>Total of 256-bit public key, 64-bit MAC, and size of input</td> </tr> <tr> <td>Profile-B</td> <td>0x2</td> <td>Total of 264-bit public key, 64-bit MAC, and size of input.</td> </tr> </tbody> </table>	<b>Scheme</b>	<b>Identifier</b>	<b>Size of the scheme output</b>	null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)	Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input	Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.
<b>Scheme</b>	<b>Identifier</b>	<b>Size of the scheme output</b>											
null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)											
Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input											
Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.											
Home Network Public Key	The home network public key that will be use for concealing the SUPI. The USIM stores the home network public key (if provisioned by the home operator).												
Home Network Public Key ID	The Home Network Public Key Identifier that will be used to indicate which public/private key pair to use for SUPI protection and deconcealment of the SUCI.												
Ephemeral Public Key	The ephemeral public key that will be used for computing a fresh SUCI on the UE side and for deconcealing the SUCI on the home network side.												
Ephemeral Private Key	The ephemeral private key that will be used for computing a fresh SUCI on the UE side.												
Routing Indicator	The Routing Indicator that is used in the construction of the SUCI.												

Setting	Description
	The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.
Authentication Type	Select the Authentication Method to use in the authentication procedures for this range of UEs. In the current release, 5G-AKA is the only supported Authentication Type.

## UE Settings

Each UE range has a set of **Settings** that configure timers and other subscription data for the range.

Setting	Description
<i>Settings:</i>	
Allow MICO Mode	This option, when selected, indicates that the UEs in the range prefer Mobile Initiated Connection Only (MICO) mode during Initial Registration and Registration Update procedures.
<i>Access and Mobility Policy:</i>	
Subscribed Registration Timer	The Periodic Registration timer value for this range of UEs. The AMF allocates a periodic registration timer value to the UE based on local policies, subscription information and information provided by the UE. After the expiry of this timer, the UE performs a periodic registration.
Active Time	The subscribed Active Time for Power Saving Mode (PSM) UEs.
RAT Restrictions	UE Mobility Restrictions include RAT restrictions, which define the 3GPP Radio Access Technologies (one or more) that a UE is not allowed to access in a PLMN. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual.
Wake Up Timer 5G To 4G	The time interval (in seconds) to elapse from UDM initiated deregistration (5G to 4G) until the user is restarted.
<i>Operator Specific Data</i>	
Policy data	This option allows for specific operator data to be added.
Use Operator Specific Data	Enable this option to use operator specific data. A list of objects similar with the reconfigured example is expected.

<b>Setting</b>	<b>Description</b>
Operator Specific Data Policy JSON	<p>Paste the operator specific data in JSON format into the field. Format and save the JSON content by selecting the <b>Save JSON</b> button.</p> <p>Default format:</p> <pre data-bbox="412 407 788 1358"> {     "opSpecDataName1": {         "dataType": "string",         "value": "aaaaa"     },     "opSpecDataName2": {         "dataType": "object",         "value": {             "member1": 1,             "member2": "string",             "member3": null         }     },     "opSpecDataName3": {         "dataType": "integer",         "value": 1023     },     "opSpecDataName4": {         "dataType": "array",         "value": [             {                 "member1": 1,                 "member2": "string",                 "member3": null             },             1025,             "another string"         ]     } } </pre>

## UE SDF settings

Each UE range has a set of **SDF** settings that configure subscription Service Data Flow values for the PDU sessions in the range.

<b>Setting</b>	<b>Description</b>
<i>SDF Settings:</i>	
UE UDP Port	The starting client-side UDP port number for the Service Data Flows (SDFs) in the PDU session.
UE UDP Port Increment	The value by which the client-side UDP port numbers are incremented

Setting	Description
	for the SDFs in the PDU session.
Layer 7 Server IP	The starting IP address of the destination server for the SDFs in the PDU session.
Layer 7 Server IP Increment	The value by which the server IP addresses are incremented for the SDFs in the PDU session.
Layer 7 Server UDP Port	The server-side UDP port number for the SDFs in the PDU session.
Layer 7 Server UDP Port Increment	The value by which the server-side UDP port numbers are incremented for the SDFs in the PDU session.

## Shared Data IDs

You use the **Shared Data ID** panel to create a list of shared-data-ids. These IDs are used to request the shared-data resources from the UDM.

A UE subscription may contain both individual subscription data and shared subscription data (subscription data that is shared by multiple UEs). These shared data are identified by Shared Data IDs that are listed in the UE individual data.

Use the **Add ID** button to add additional IDs to the list, and the **Delete ID** button to removed IDs from the list.

## UE Subscribed AMBR settings

Each UE range has a set of **Subscribed AMBR** settings that configure the Aggregate Maximum Bit Rate (AMBR) for which the UEs in the range are subscribed.

Setting	Description
<i>Subscribed AMBR:</i>	
Subscribed AMBR Uplink	The subscribed uplink UE AMBR value for this range of UEs. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.
Subscribed AMBR Uplink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.
Subscribed AMBR Downlink	The subscribed downlink UE AMBR value for this range of UEs. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.
Subscribed AMBR Downlink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.

## Service Area Restrictions

A UE subscription may contain service area restrictions, which place limits on the areas in which the UE may initiate communication with the network. A Service Area Restriction definition consists of either a list of allowed Tracking Area Identities (TAIs) or a list of non-allowed TAIs and, optionally, specifies the maximum number of allowed TAIs.

Use the settings described below to configure service area restrictions for a UE range. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.

### Service Area Restrictions

Setting	Description
Restriction Type	<p>The type of restriction to use for this range of UEs. It is either <b>Not Allowed Areas</b> or <b>Allowed Areas</b>.</p> <p>The list of allowed TAIs indicates the TAIs where the UE is allowed to be registered, and the list of non-allowed TAIs indicates the TAIs where the UE is not allowed to be registered.</p> <p>A Tracking Area identity (TAI) uniquely identifies a tracking area. It is constructed from the MCC (Mobile Country Code), MNC (Mobile Network Code), and TAC (Tracking Area Code).</p>
Max No. of TAs	The maximum number of allowed TAIs for this UE range.

### Areas

Each Service Area Restriction specifies one or more Areas (Allowed or Not Allowed Areas), each of which contains a list of TACs. You can add and delete areas from the Service Area Restrictions settings as needed to meet your test requirements.

Setting	Description
<b>Areas:</b>	
	Select the <b>Add Area</b> button to add a new restriction area to your configuration.
<b>Area:</b>	
	Select the <b>Delete Area</b> button to remove the restriction area from your configuration.
Area Codes	Each Area that you configure is identified by an Area Code, which is an operator-specific string value.
<b>TACs:</b>	
	Select the <b>Add TAC</b> button to add a new TAC to your configuration. Each <b>Area</b> that you add to a UE range's Service Area Restriction contains a

Setting	Description
	<p>list of one or more TACs.</p> <p>A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).</p>
	Select the <b>Delete</b> button to remove the tracking area code from your configuration.

## Forbidden Areas

A UE subscription may include a list of Forbidden Areas. In a Forbidden Area, the UE is not permitted to initiate any communication with the network.

You use the settings described below to configure forbidden areas for a UE range (these configuration settings are also made available on the UDM). You can add and delete Forbidden Areas for the UE range as needed to meet your test requirements.

Setting	Description
<i>Forbidden Area:</i>	
	Select the <b>Delete Forbidden Area</b> button to remove this area from your configuration.
Area Codes	Each Area that you configure is identified by an Area Code, which is an operator-specific string value.
<i>TACs:</i>	
	Select the <b>Delete</b> button to remove this TAC from your configuration.
TAC	<p>Each <b>Area</b> that you add to a UE range's Forbidden Area contains a list of one or more TACs.</p> <p>A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).</p>

## Notifications

Each UE range in the SBA topology has a set of **Notifications** values that configure Unified Data Repository (UDR) notifications for the range.

The UDR stores policy data that is used by the network service consumers (PCF, UDM, and NEF). Among the functionalities supported by the UDR is subscriptions to notification and the notification of

subscribed data changes.

<b>Setting</b>	<b>Description</b>
<i>UDR Notifications:</i>	
Delay (ms)	The delay in milliseconds between Policy Data Subscriptions and Policy Data Change Notification.
<i>Policy Data:</i>	
Enable notification	Enable subscription to policy data notifications for the UE range.
SM Policy Data json	Paste your policy data JSON file into the field.
<i>Application Data:</i>	
Enable notification	Enable subscription to application data notifications for the UE range.
Application Data json	Paste your application data JSON file into the field.

## SMS Configuration

The following table describes the UE **SMS Configuration** settings.

<b>Setting</b>	<b>Description</b>
<i>SMS Configuration:</i>	
SMS Mode	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>SMS-MO:</b> Mobile Originated. The UE range originates (sends) SMS messages.</li> <li>• <b>SMS-MT:</b> Mobile Terminated. The UE range waits for delivery of SMS messages.</li> </ul>
<i>Mobile Settings:</i>	
Service Center Address	The service center address used by the UE range for SMS messaging.
Type of Number	The type of number can be one of the following: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• International number</li> <li>• National number</li> <li>• Network specific number</li> <li>• Subscriber number</li> <li>• Alphanumeric</li> </ul>

<b>Setting</b>	<b>Description</b>
	<ul style="list-style-type: none"> <li>• Abbreviated number</li> <li>• Reserved number</li> </ul>
Numbering Plan Identification	<p>The numbering plan identification can be one of the following:</p> <ul style="list-style-type: none"> <li>• Unknown</li> <li>• ISDN</li> <li>• Data numbering plan</li> <li>• Telex numbering plan</li> <li>• National numbering plan</li> <li>• Private numbering plan</li> <li>• ERMES numbering plan</li> <li>• Reserved numbering plan</li> </ul>
Character Set	The character set used in the data coding scheme for the text message.
Text Message	The content of text message sent by the UE via SMS.
Mobile Terminate SMS Delay (s)	The time in seconds to wait, after the UE registers, for the AMF or SMF to initiate an MT SMS.
SMS Management Subscription Data	<p>When selected, this pane displays the following options:</p> <ul style="list-style-type: none"> <li>• <b>Subscribed for MT SMS</b> - by default, this option is enabled.</li> <li>• <b>Barred All MT SMS</b> - by default, this option is disabled.</li> <li>• <b>Barred Roaming MT SMS</b> - by default, this option is disabled.</li> <li>• <b>Subscribed for MO SMS</b> - by default, this option is enabled.</li> <li>• <b>Barred All MO SMS</b> - by default, this option is disabled.</li> <li>• <b>Barred Roaming MO SMS</b> - by default, this option is disabled.</li> </ul> <p>If technical specification Release 16 is configured in <a href="#">Global Settings</a>, the <a href="#">Trace Data</a> option is enabled.</p>
Enable SMS Management Subscription Get	<p>This option has effect only for technical specification Release 16.</p> <p>If active (default), TS 23.502 <i>Registration procedures for SMS over NAS</i> step 7b (<code>Nudm_SDM_Get</code>) is performed.</p>

The following table describes the **Trace Data** settings.

<b>Setting</b>	<b>Description</b>
<i>Trace Data</i>	<i>Select the check box to enable this option.</i>
Trace Reference	The trace reference string should be formed as follows: the concatenation of MCC, MNC and Trace ID as follows: <MCC><MNC><Trace ID>.

Setting	Description
	This field cannot be empty.
Trace Depth	Select an option from the drop-down list: <b>MINIMUM</b> , <b>MEDIUM</b> , <b>MAXIMUM</b> , <b>MINIMUM_WO_VENDOR_EXTENSION</b> , <b>MEDIUM_WO_VENDOR_EXTENSION</b> , <b>MAXIMUM_WO_VENDOR_EXTENSION</b> . Default value: <b>MEDIUM</b> .
NE Types	Configures a hexadecimal number as string, i.e. only values 0-9, a-f are allowed. Default value: <b>000008</b> . This field cannot be empty.
Triggering Events	Configures a hexadecimal number as string, i.e. only values 0-9, a-f are allowed. Default value: <b>0000</b> . This field cannot be empty.
Trace Collection Entity IPv4 Address	Provide the IPv4 address. Default value: <b>192.168.0.1</b> .
Trace Collection Entity IPv6 Address	Provide the IPv6 address. Default value: empty.
List of Interfaces	Configures a hexadecimal number as string, i.e. only values 0-9, a-f are allowed. Can be empty. Default value: empty.

## Network Slicing

A UE may access multiple *network slices* over a single Access Network. A Network Slice is defined within a PLMN and includes the Core Network Control Plane and User Plane Network Functions. In addition, it includes the NG Radio Access Network and/or the N3IWF functions to the non-3GPP Access Network. It functions as a logical end-to-end network that runs on a shared physical infrastructure, capable of providing specific network capabilities and characteristics.

Each UE range requires at least one NSSAI (Network Slice Selection Assistance Information) range.

The **Network Slicing** settings include:

- UDM Default NSSAI settings** ..... **494**
- UDM SNSSAI Mappings** ..... **494**
- UDR SNSSAI Settings** ..... **495**

## UDM Default NSSAI settings

You can add and delete UDM Default SNSSAI settings as required to meet your test objectives.

A UE Registration Request will include the Default Configured NSSAI Indication if the UE is using a Default Configured NSSAI. The Default Configured NSSAI, when configured in the UE, is used by the UE in a Serving PLMN only if the UE has no Configured NSSAI for the Serving PLMN.

The NSSAI slices are the ones supported and requested by UE (DNN mapping is done from here also) that will be sent in NAS messages (for example Registration, PDU Session Establishment).

The following table describes the UE **UDM Default NSSAI** settings.

Setting	Description
<i>UDM Default NSSAI:</i>	
	Select the <b>Add UDM Default NSSAI</b> button to add the default NSSAI to your test configuration.
<i>UDM Default NSSAI settings:</i>	
	Select the <b>Delete UDM Default NSSAI</b> button to delete this NSSAI from your test configuration.
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this S-NSSAI.
Mapped SST	The default Mapped configured Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The default Mapped configured Slice Differentiator (SD) value for this S-NSSAI.

## UDM SNSSAI Mappings

You can add and delete SNSSAI Mappings as required to meet your test objectives.

In an Initial Registration or Mobility Registration Update, the UE may include the Mapping Of Requested NSSAI, which is the mapping of each S-NSSAI of the Requested NSSAI to the HPLMN S-NSSAIs. This mapping ensures that the network can verify whether or not the S-NSSAIs in the Requested NSSAI are permitted based on the Subscribed S-NSSAIs.

The following table describes the UE **UDM SNSSAI Mapping** settings.

Setting	Description
<i>UDM SNSSAI Mapping:</i>	
	Select the <b>Add SNSSAI Mapping</b> button to add the NSSAI mapping to your test configuration.
<i>UDM SNSSAI Mapping settings:</i>	

Setting	Description
	Select the <b>Delete SNSSAI Mapping</b> button to delete this NSSAI mapping from your test configuration.
SST	The Slice/Service Type (SST) value.
SD	The Slice Differentiator (SD) value for this S-NSSAI.
Mapped SST	The Mapped Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The Mapped Slice Differentiator (SD) value for this S-NSSAI.
DNNS	The Subscription Information for each S-NSSAI may contain a Subscribed DNN list. Select one or more DNNs from the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .

## UDR SNSSAI Settings

The following table describes the UE **UDR SNSSAI** settings.

Setting	Description
<i>UDR SNSSAI Settings:</i>	
	Select the <b>Add SNSSAI Settings</b> button to add the SNSSAI settings to your test configuration.
<i>UDR Settings:</i>	
	Select the <b>Delete SNSSAI Settings</b> button to delete this SNSSAI settings configuration from your test configuration.
SST	The Slice/Service Type (SST) value
SD	The Slice Differentiator (SD) value for this SNSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
Mapped SST	The Mapped Slice/Service Type (SST) value for this SNSSAI.
Mapped SD	The Mapped Slice Differentiator (SD) value for this SNSSAI.
DNNS	A DNN (Data Network Name) with which PDU sessions will be associated for this SNSSAI. Select one or more DNNs from the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .

## Charging Function

LoadCore's Charging Function supports Converged Charging and Spending Limit Control functionalities.

Converged Charging is a process where online and offline charging are combined. The charging information is utilized by CCS(Converged Charging System) in one converged charging service which offers charging with and without quota management, as well as charging information record generation.

The Spending Limit Control Service is provided by the Charging Function (CHF) and enables the NF service consumer to retrieve policy counter status information. The internal CHF functionality for policy counter management provisioning is specified in 3GPP TS 32.240.

### Converged Charging

The following table describes the UE **Converged Charging** settings.

Setting	Description
Validity Time	The validity of the granted quota for a given category instance.
Quota Holding Time	A quota expiry time, when no traffic associated with the quota is observed for the value indicated by this attribute.
Time Quota Threshold	A time quota below this threshold will trigger a quota re-authorization.
Volume Quota Threshold	A volume quota below this threshold will trigger a quota re-authorization.
Unit Quota Threshold	A units quota below this threshold will trigger a quota re-authorization.
Notification Timer	Duration in milliseconds after which the CHF will notify CTF about quota re-authorization.
Enable Subscription Termination Timer	Select this option to enable the subscription termination timer.
<i>Total Available Units Per PDU Session:</i>	<i>Holds the maximum amount of units to be granted per PDU session per charging session.</i>
Total Time	Set the total time value.
Total Volume	Set the total volume value.
Total Uplink Volume	Set the total uplink volume value.
Total Downlink Volume	Set the total downlink volume value.
Total Service Specified Units	Set the total service specified units value.

<b>Setting</b>	<b>Description</b>
<i>Default Granted Units Per Charging Data Request:</i>	
Time	Set the time value.
Volume	Set the volume value.
Uplink Volume	Set the uplink volume value.
Downlink Volume	Set the downlink volume value.
Service Specified Units	Set the service specified units value.

## Spending Limit Control

The following table describes the UE **Spending Limit Control** settings.

<b>Setting</b>	<b>Description</b>
Enable Notify Timer	Use this option to enable the notify timer.
Trigger Notify Timer (ms)	The time interval (in milliseconds) after which CHF will notify PCF with modified policy counters.
Enable Subscription Termination Timer	Use this option to enable the subscription termination timer.
Trigger Subscription Termination (ms)	The time interval (in milliseconds) after which CHF will request PCF to terminate a subscription.
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported.
<i>Policy Counters</i>	<i>These settings are described <a href="#">here</a>.</i>
<i>Notify Policy Counters</i>	<i>These settings are described <a href="#">here</a>.</i>

## Policy Counters

The following table describes the **Policy Counters** settings.

Setting	Description
<i>Policy Counters:</i>	
	Select the <b>Add Policy Counter</b> button to add a policy counter to your test configuration.
<i>Policy Counter settings:</i>	
	Select the <b>Delete Policy Counter</b> button to delete this policy from your test configuration.
Policy Counter Id	This parameter is used to identify a policy counter. You can accept the value provided by LoadCore or overwrite it with your own value.
Current Status	Enter the policy counter status (as a string value). For example: <i>100Mbps</i> .
<i>Pending Statuses:</i>	
	Select the <b>Add Pending Status</b> button to add a pending policy counter status.
<i>Pending Policy Counter Status settings:</i>	
	Select the <b>Delete Pending Policy Counter Status</b> button to remove the pending policy counter status.
Policy Counter Status	Enter the pending policy counter status (as a string value). For example: <i>100Mbps</i> .
Activation Time	Enter the activation time (as a DateTime value) for this pending status value. For example: <i>2020-12-31 11:59:59</i> .

## Notify Policy Counters

The Policy Counters notifications are messages sent by CHF whenever the policy status has changed and contain the new policy status.

The notifications are enabled only after the **Enable Notify Timer** option is selected and will be sent based on the time interval set for the **Trigger Notify Timer (ms)** parameter.

The following table describes the **Notify Policy Counters** settings.

Setting	Description
<i>Policy Counters:</i>	
	Select the <b>Add Policy Counter</b> button to add a policy counter to your test configuration for which you want to receive notifications.

Setting	Description
<i>Policy Counter settings:</i>	
	Select the <b>Delete Policy Counter</b> button to delete this policy from your test configuration.
Policy Counter Id	This parameter is used to identify the policy counter for which to receive notifications.
Current Status	Enter the policy counter current status (as a string value). For example: <i>120Mbps</i> .
<i>Pending Statuses:</i>	
	Select the <b>Add Pending Status</b> button to add a pending policy counter status.
<i>Pending Policy Counter Status settings:</i>	
	Select the <b>Delete Pending Policy Counter Status</b> button to remove the pending policy counter status.
Policy Counter Status	Enter the policy counter status (as a string value). For example: <i>120Mbps</i> .
Activation Time	Enter the activation time (as a DateTime value) for this status value. For example: <i>2020-12-31 11:59:59</i> .

## Objectives

In a LoadCore test, an *objective* is a set of performance or event targets that the test is attempting to achieve. The objectives are individually configured for a given UE range. A test, therefore, may have multiple UE ranges each of which is attempting to achieve a specific set of objectives.

### Test Objective categories:

<b>Primary Objective</b> .....	<b>501</b>
<b>Secondary Objectives</b> .....	<b>540</b>

## Primary Objective

Select **Primary Objective** from the UE Range pane to access the settings for the selected UE range's Primary Objectives.

The focus of the primary objectives is on the establishment of subscriber PDU sessions, wherein each session initiates one of the available procedures. The following Primary Objective types are available for configuration:

- **Active Subscribers:** The test attempts to activate and maintain the configured objective throughout the entire sustain time. Deactivation procedures will start only at the end of the sustain time.
- **Subscribers Per Second:** The test attempts to activate a specified number of subscriber sessions per second, within the rate and time parameters that you configure.

### About primary objectives

In the current LoadCore release, there are two available primary objectives: *active subscribers* and *subscribers per second*. This topic gives a general description of their respective roles and behaviors.

- [Active Subscribers](#)
- [Subscribers Per Second](#)

### Active Subscribers

The active subscribers objective operates over a sequence of three phases: ramp up, sustain, and ramp down. Each of these has its own scope.

Phase	Activity during this phase
Ramp up	Registration + PDU Session Establishment (if enabled via DNNs to Activate option)
Sustain time	Traffic and/or secondary objectives are executed
Ramp down	Delete PDU Session (if enabled) + Dereistration

This can be viewed as a timeline:

|----- Ramp up -----|----- Sustain -----|----- Ramp down -----|

#### Observations:

- The duration of the ramp up phase is not directly configurable. The ramp up time is automatically computed from the total number of subscribers in the range divided by the configured Ramp-up Rate (`<number_of_subscribers_in_the_range> / <RampUpRate>`). If the ramp up rate cannot be maintained, ramp up will last longer.
- During the sustain time phase, only secondary objectives are running.
- If configured, uplink traffic will start after the ramp up stage is complete.
- Subscribers will accept any downlink traffic once they are attached (registered and PDU session established).

- The duration of ramp down is not directly configurable. The ramp down time is automatically computed from the total number of subscriber in the range divided by the configured Ramp-up Rate (`<number_of_subscribers_in_the_range>` / `<RampUpRate>`).  
If the ramp down rate cannot be maintained, ramp down will last longer.
- All User Plane Traffic except Stateless UDP will be started during Ramp Up phase. Stateless UDP traffic starts after all UEs have Registered and Established PDU Sessions.

**Example:**

Consider a test with 20000 subscribers, configured with an active subscribers objective with a ramp up rate of 1000/s, a secondary objective with a rate of 2000/s, and a sustain time set for 30 seconds. Such a test will give the following results.

<i>Ramp Up Time:</i>	$20000 / 1000 = 20\text{s}$ for subscribers to register
<i>Rate in ramp up time:</i>	1000 registrations per second
<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	2000 secondary procedures per second
<i>Ramp down time:</i>	$20000 / 1000 = 20\text{s}$ for subscribers to deregister
<i>Rate in ramp down time:</i>	1000 deregistrations per second

**Subscribers Per Second**

The Subscribers per Second objective operates over two phases: sustain and ramp down.

Phase	Activity during this phase
Sustain time	All objectives will run: primary objective—both registration and deregistration—and all secondary objectives.
Ramp down	Deregistration will be executed for the UEs that did not complete the hold time during the sustain phase.

This can be viewed as a timeline:

|----- Sustain -----|----- Ramp down -----|

**Observations:**

- The duration of ramp down is equal to the value of hold time.
- During the ramp down time, only deregistration occurs.

**Example:**

Consider a test with 20000 subscribers, configured with: a Subscribers per Second primary objective with a rate of 1000/s and a hold time of 10s, a secondary objective with a rate of 2000/s, and a Sustain time configured for 30 seconds.

Such a test will give the following results.

<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	~4000 per second (1000 per second from registration + 1000 per second from deregistration + 2000 per second from secondary objective, because both primary and secondary objective will run at the same time)
<i>Ramp down time:</i>	10 seconds
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## Primary Objective Parameters

The focus of the primary objectives is on the establishment of subscriber PDU sessions.

The following table describes the **Primary** control plane objectives.

Parameter	Description
Procedure Type	Select the procedure type from the drop-down list: <ul style="list-style-type: none"> <li>• <a href="#">UE Authentication Request AMF to AUSF</a></li> <li>• <a href="#">Create Policy AMF to PCF</a></li> <li>• <a href="#">Create Policy SMF to PCF</a></li> <li>• <a href="#">Initial Spending Limit PCF to CHF</a></li> <li>• <a href="#">Converged Charging SMF to CHF</a></li> <li>• <a href="#">NS Management AMF to NSSF</a></li> <li>• <a href="#">NS Selection Get AMF to NSSF</a></li> <li>• <a href="#">Enable SM Service AMF to SMSF</a></li> </ul>
Objective Type	Select the desired Primary Objective Type: <ul style="list-style-type: none"> <li>• <b>Active Subscribers:</b> The test attempts to activate and maintain the configured objective throughout the entire sustain time. Deactivation procedures will start only at the end of the sustain time.</li> <li>• <b>Subscribers Per Second:</b> The test attempts to activate a specified number of subscriber sessions per second, within the rate and time parameters that you configure.</li> </ul> <p>The panel will display the settings for the selected Objective Type.</p>
<i>Active Subscribers:</i>	
Ramp-up Rate	The number of subscriber sessions to activate per second.
Sustain Time	The duration of time (in Seconds) that the specified sessions will remain active.

Parameter	Description
(s)	
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
<i>Subscribers Per Second:</i>	
Hold Time (s)	The number of seconds that each subscriber session will remain active. This is, therefore, the amount of time that will elapse between the subscriber attach and the subscriber detach. At the end of the session hold time, the subscriber performs the detach procedure.
Rate	The number of subscriber sessions to activate per second.
Sustain Time (s)	The duration of time (in Seconds) that the specified session activation rate will be maintained.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.

## UE Authentication Request AMF to AUSF

The **UE Authentication Request AMF to AUSF** Procedure has a single configuration setting: *Starting AMF*. It takes one of the following values:

- **Start From First** - Starts from the first AMF in the list.
- **Start Round Robin** - First UE gets the first AMF, second UE the second AMF and so on.
- **Start Random** - Each UE gets a random AMF from the list.

## Create Policy AMF to PCF

The following table describes the settings for the **Create Policy AMF to PCF** Procedure.

Procedure setting	Description
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported (as described in TS 29.571).

Procedure setting	Description
Access Type	Select the Access Network type for the policy: 3GPP Access or Non-3GPP Access.
RAT Type	Select the RAT type value to use for this policy association. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual. The RAT Type attribute indicates where the served UE is camping.
User Location	Select <b>NR Location</b> to open the configuration panel for these settings, which are described below in <a href="#">User Location</a> .

## User Location

The User Location values are required by the services that enable an NF to request location information for a target UE. The User Location information includes:

- NR Location: The NR Location values are used in the 5G System by services that track the location of UEs.
- TAI: A Tracking Area identity (TAI) uniquely identifies a tracking area. It is constructed from the MCC (Mobile Country Code), MNC (Mobile Network Code), and TAC (Tracking Area Code).
- NCGI: In the 5G System, each NR cell is assigned a NR Cell Global Identity (NCGI) value. It is formed by concatenating the PLMN-Id (PLMN Identifier) with the 36-bit NCI (NR Cell Identity).
- Global RAN Node Id settings

These configuration settings are described in the following table.

Parameter	Description
<i>NR Location:</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI:</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.

Parameter	Description
<i>NCGI:</i>	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.
<i>Global Ran Node Id:</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.

### Create Policy SMF to PCF

The following table describes the settings for the **Create Policy SMF to PCF** Procedure.

Procedure setting	Description
PDU Session ID	Unsigned integer identifying a PDU session, within the range 0 to 255, as specified in clause 11.2.3.1b, bits 1 to 8, of 3GPP TS 24.007 [13].
PDU Type	Select the desired policy PDU type: IPv4 IPv6, IPv4, IPv6, UNSTRUCTURED, or ERHERNET.
DNN	Select one of the configured DNNs from the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
UE Time Zone	Specify the time zone value for this policy association. The time zone attribute (timeZone) indicates where the served UE is camping. The Time Zone information is expressed as the GMT time plus an offset value. The offset represents the time zone adjusted for daylight saving time.
Serving Network MCC	The MCC of the serving PLMN where the served UE is camping.
Serving Network MNC	The MNC of the serving PLMN where the served UE is camping.

<b>Procedure setting</b>	<b>Description</b>
Access Type	Select the Access Network type for the policy: 3GPP Access or Non-3GPP Access.
RAT Type	Select the RAT type value to use for this policy association. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual. The RAT Type attribute indicates where the served UE is camping.
Online	Select this option if the policy will support the online charging method for PDUs sessions.
Offline	Select this option if the policy will support the offline charging method for PDUs sessions.
Slice Info SD	Specify the Slice Differentiator (SD) value for the S-NSSAI associated with this policy. This is the S-NSSAI corresponding to the network slice that is allocated to the PDU (within the sliceInfo attribute).
Subs Session AMBR Uplink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Subs Session AMBR Downlink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) downlink rate.
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported (as described in TS 29.571).
<i>QoS Settings</i>	<i>Select <b>QoS Settings</b> to open the configuration panel for these settings, which are described below in <a href="#">QoS Settings</a>.</i>
<i>User Location</i>	<i>Select <b>NR Location</b> to open the configuration panel for these settings, which are described below in <a href="#">User Location</a>.</i>

## **QoS Settings**

The Create Policy SMF to PCF procedure require QoS values for this objective's Service Data Flows. These configuration settings are described in the following table.

<b>Parameter</b>	<b>Description</b>
5QI	Specify the 5QI value (decimal number) to use for this procedure. 5G QoS Identifier (5QI) is a scalar that is used as a reference to 5G QoS characteristics defined in TS 23.501, clause 5.7.4. These are access node-specific parameters that control QoS forwarding treatment for the QoS Flow (such as scheduling weights, admission thresholds, queue management thresholds, link layer protocol configuration, among others). Standardized 5QI values have a one-to-one mapping to a standardized combination of 5G QoS characteristics as

Parameter	Description
	specified in TS 23.501, table 5.7.4-1.
ARP:	
ARP Priority Level	<p>Specify the ARP priority level to use for this procedure.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.</p>
ARP Preemption Capability	<p>Select <b>Not Preemp</b> or <b>May Preempt</b>.</p> <p>When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.</p>
ARP Preemption Vulnerability	<p>Select <b>Not Preemptable</b> or <b>Preemptable</b>.</p> <p>When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.</p>

## User Location

The User Location values are required by the services that enable an NF to request location information for a target UE. The User Location information includes:

- NR Location: The NR Location values are used in the 5G System by services that track the location of UEs.
- TAI: A Tracking Area identity (TAI) uniquely identifies a tracking area. It is constructed from the MCC (Mobile Country Code), MNC (Mobile Network Code), and TAC (Tracking Area Code).
- NCGI: In the 5G System, each NR cell is assigned a NR Cell Global Identity (NCGI) value. It is formed by concatenating the PLMN-Id (PLMN Identifier) with the 36-bit NCI (NR Cell Identity).
- Global RAN Node Id settings

These configuration settings are described in the following table.

Parameter	Description
<i>NR Location:</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.

Parameter	Description
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI:</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>NCGI:</i>	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.
<i>Global Ran Node Id:</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.

### Initial Spending Limit PCF to CHF

The following table describes the settings for the **Initial Spending Limit PCF to CHF** Procedure.

Parameter	Description
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported (as described in TS 29.571).
<i>Policy Counters</i>	
Policy Counters Ids	This parameter is used to identify a policy counter. Select a value from the drop-down list.

Parameter	Description
<i>Additional Policy Counters Ids</i>	
	Select this button to add additional policy counters ids.
	Select this button to remove the policy counter id.

## Converged Charging SMF to CHF

The following table describes the configuration settings for the **Converged Charging SMF to CHF** procedure.

Parameter	Description
<i>PDU Session Information:</i>	
RAT Type	Select the RAT type value to use for this policy association. The options available in LoadCore are: <b>NR</b> , <b>EUTRA</b> , <b>WLAN</b> , and <b>VIRTUAL</b> . The RAT Type attribute indicates where the served UE is camping.
DNN	Select one of the configured DNNs from the drop-down list.
Charging Characteristics	Set the charging characteristics value.
Charging Characteristics Selection Mode	Select the charging characteristics mode from the drop-down list: <ul style="list-style-type: none"> <li>• <b>HOME_DEFAULT</b></li> <li>• <b>ROAMING_DEFAULT</b></li> <li>• <b>VISITING_DEFAULT</b></li> </ul>
Amfld	Set the value for this field.
PDU Address	Select <b>PDU Address</b> to open the configuration panel for these settings, which are described below in <a href="#">PDU Address</a> .
Subscriber Settings	Select <b>Subscriber Settings</b> to open the configuration panel for these settings, which are described below in <a href="#">Subscriber Settings</a> .
Authorized Settings	Select <b>Authorized Settings</b> to open the configuration panel for these settings, which are described below in <a href="#">Authorized Settings</a> .
User Location Information	Select <b>User Location Information</b> to open the configuration panel for these settings, which are described below in <a href="#">User Location Information</a> .
Ratings Groups	The Ratings Groups settings are described below in <a href="#">Ratings Groups</a> .

## PDU Address

These configuration settings are described in the following table.

Parameter	Description
IP Address	Provide the IP address.
IPv6 Address Prefix	Set the IPv6 address prefix.
IP Address Prefix Length	Set the length of the IP address prefix.
IPv4 Dynamic Address Flag	Enable or disable this option based on your test requirements.
IPv6 Dynamic Prefix Flag	Enable or disable this option based on your test requirements.

## Subscriber Settings

These configuration settings are described in the following table.

Parameter	Description
<i>QoS Settings: Select <b>QoS Settings</b> to open the configuration panel for these settings.</i>	
QoS Settings	
Priority Level	Specify the priority level.
5QI	Specify the 5QI value (decimal number) to use.
ARP	
ARP Priority Level	Specify the ARP priority level. The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.
ARP Preemption Capability	Select <b>Not Preemp</b> or <b>May Preempt</b> . When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.
ARP Preemption Vulnerability	Select <b>Not Preemptable</b> or <b>Preemptable</b> . When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.
<i>Session AMBR: Select <b>Session AMBR</b> to open the configuration panel for these settings.</i>	
Subscribed Session AMBR Uplink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Subscribed	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) downlink

Parameter	Description
Session AMBR Downlink	rate.

## Authorized Settings

These configuration settings are described in the following table.

Parameter	Description
<i>QoS Settings: Select <b>QoS Settings</b> to open the configuration panel for these settings.</i>	
<i>QoS Settings</i>	
AverWindow	Specify the averaging window value. It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.
MaxDataBurstVol	Specify the maximum data burst volume.
maxbrUI	Set the maximum bit rate value for uplink traffic.
maxbrDI	Set the maximum bit rate value for downlink traffic.
gbrUI	Set the guaranteed bit rate value for uplink traffic.
gbrDI	Set the guaranteed bit rate value for downlink traffic.
qnc	Enable or disable the QoS Notification Control parameter.
Priority level	Specify the priority level.
5QI	Specify the 5QI value (decimal number) to use.
<i>ARP</i>	
ARP Priority Level	<p>Specify the ARP priority level.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.</p>
ARP Preemption Capability	<p>Select <b>Not Preemp</b> or <b>May Preempt</b>.</p> <p>When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.</p>
ARP Preemption Vulnerability	<p>Select <b>Not Preemptable</b> or <b>Preemptable</b>.</p> <p>When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.</p>

Parameter	Description
<i>Session AMBR: Select <b>Session AMBR</b> to open the configuration panel for these settings.</i>	
Subscribed Session AMBR Uplink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Subscribed Session AMBR Downlink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) downlink rate.

## User Location Information

These configuration settings are described in the following table.

Parameter	Description
<i>NR Location: Select <b>NR Location</b> to open the configuration panel for these settings.</i>	
NR Location	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
TAI	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
NCGI	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.
Global Ran Node Id	
MCC	Set the mobile country code.

Parameter	Description
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.
<i>EUTRA Location: Select <b>EUTRA Location</b> to open the configuration panel for these settings.</i>	
<i>EUTRA Location</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>ECGI</i>	
MCC	The PLMN MCC that is used in the construction of this ECGI.
MNC	The PLMN MNC that is used in the construction of this ECGI.
EUTRA Cell ID	The EUTRA Cell ID that is used in the construction of this ECGI.
<i>Global Ran Node Id</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.

Parameter	Description
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.

*N3GA Location:* Select **N3GA Location** to open the configuration panel for these settings.

TAI	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
N3 Iwf Id	Set the value for this field.
UE IPV4 Address	Set the UE IPV4 address.
UE IPV6 Address	Set the UE IPV6 address.
Port Number	Set the port number.

## Rating Groups

The following table describes the Rating Groups settings.

Parameter	Description
	Select the <b>Add Group</b> button to add a new rating group to your test configuration.
<i>Rating Group</i>	
	Select this button to remove the rating group from your test configuration.
Id	Set the Id value for this rating group.
UPF Id	Set the UPF Id value for this rating group.
<i>Requested Unit</i>	
Time	Set the total time value.
Total Volume	Set the total volume value.
Uplink Volume	Set the total uplink volume value.

Parameter	Description
Downlink Volume	Set the total downlink volume value.
Service Specific Units	Set the total service specified units value.
<i>Used Units</i>	
	Select the <b>Add unit</b> button to add a new unit to your test configuration.
	Select this button to remove this unit from your test configuration.
Service Id	Set the service Id.
Quota Management Indicator	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>ONLINE_CHARGING</b></li> <li>• <b>OFFLINE_CHARGING</b></li> </ul>
Time	Set the total time value.
Total Volume	Set the total volume value.
Uplink Volume	Set the total uplink volume value.
Downlink Volume	Set the total downlink volume value.
Service Specific Units	Set the total service specified units value.
Charging Rule Base Name	Set the name of the charging rule
3GPPPS Data Off Status	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>INACTIVE</b></li> <li>• <b>ACTIVE</b></li> </ul>
Sponsor Identity	Specify the sponsor identity.
Application Service Provider Identity	Specify the application service provider.
Service Specific Units	Set the service specific units value.
<i>QoS Information</i>	Select <b>QoS Information</b> to open the configuration panel for these settings, which are described below in <a href="#">QoS Information</a> .
<i>Triggers</i>	The Triggers settings are described below in <a href="#">Triggers</a> .

The following table describes the QoS Information settings.

Parameter	Description
QoS Id	Specify the QoS id.
AverWindow	Specify the averaging window value. It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.
MaxDataBurstVol	Specify the maximum data burst volume.
maxbrUI	Set the maximum bit rate value for uplink traffic.
maxbrDI	Set the maximum bit rate value for downlink traffic.
gbrUI	Set the guaranteed bit rate value for uplink traffic.
gbrDI	Set the guaranteed bit rate value for downlink traffic.
qnc	Enable or disable the QoS Notification Control parameter.
Priority level	Specify the priority level.
Reflective Qos	Enable or disable reflective QoS.
Sharing Key Download	Specify the sharing key used for download.
Sharing Key Upload	Specify the sharing key used for upload.
Max Packet Loss Rate Download	The maximum download packet loss rate (packets per second) that is permitted for the QoS Flow.
Max Packet Loss Rate Upload	The maximum upload packet loss rate (packets per second) that is permitted for the QoS Flow.
Def Qos Flow Indication	Enable or disable this option.
5QI	Specify the 5QI value (decimal number) to use for this procedure.
<b>ARP</b>	
ARP Priority Level	<p>Specify the ARP priority level.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.</p>
ARP Preemption Capability	<p>Select <b>Not Preemp</b> or <b>May Preempt</b>.</p> <p>When a flow is preemption-vulnerable, it can be dropped to free up</p>

Parameter	Description
	resources for packets that have a higher ARP priority level.
ARP Preemption Vulnerability	Select <b>Not Preemptable</b> or <b>Preemptable</b> . When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.

The following table describes the Triggers settings.

Parameter	Description
	Select the <b>Add Trigger</b> button to add a new trigger to your test configuration.
<i>Trigger</i>	
	Select this button to remove this trigger from your test configuration.
Trigger Type	Select an option from the drop-down list: <b>UOTA_THRESHOLD, QHT, FINAL, QUOTA_EXHAUSTED, VALIDITY_TIME, OTHER_QUOTA_TYPE, FORCED_REAUTHORISATION, UNUSED_QUOTA_TIMER, UNIT_COUNT_INACTIVITY_TIMER, ABNORMAL_RELEASE, QOS_CHANGE, VOLUME_LIMIT, TIME_LIMIT, PLMN_CHANGE, USER_LOCATION_CHANGE, RAT_CHANGE, UE_TIMEZONE_CHANGE, TARIFF_TIME_CHANGE, MAX_NUMBER_OF_CHANGES_IN_CHARGING_CONDITIONS, MANAGEMENT_INTERVENTION, CHANGE_OF_UE_PRESENCE_IN_PRESENCE_REPORTING_AREA, CHANGE_OF_3GPP_PS_DATA_OFF_STATUS, SERVING_NODE_CHANGE, REMOVAL_OF_UPF, ADDITION_OF_UPF, START_OF_SERVICE_DATA_FLOW</b>
Trigger Category	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>IMMEDIATE_REPORT</b></li> <li>• <b>DEFERRED_REPORT</b></li> </ul>
Time Limit	Specify the time limit.
Volume Limit 64	Specify the volume limit.
Max Number of ccc	Set the value for this field.

## NS Management AMF to NSSF

The **NS Management AMF to NSSF** Procedure has a single configuration setting: *Starting AMF*. It takes one of the following values:

- **Start From First** - Starts from the first AMF in the list.
- **Start Round Robin** - First UE gets the first AMF, second UE the second AMF and so on.
- **Start Random** - Each UE gets a random AMF from the list.

## NS Selection Get AMF to NSSF

The **NS Selection Get AMF to NSSF** Procedure requires the configuration of the *Starting AMF*. It takes one of the following values:

- **Start From First** - Starts from the first AMF in the list.
- **Start Round Robin** - First UE gets the first AMF, second UE the second AMF and so on.
- **Start Random** - Each UE gets a random AMF from the list.

The following table describes the selection settings for the **NS Selection Get AMF to NSSF** procedure.

Parameter	Description
<i>Selection Settings</i>	
TAI	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>Context Settings</i>	
Context Type	Select an option from the drop-down list: <b>Initial Request</b> or <b>PDU Session Establishment</b> .
Request Mapping	Select the toggle button to enable this option. This option is available only when context type is set to <b>Initial Request</b> .
Subscribed NSAAI	This option is available only when context type is set to <b>Initial Request</b> . Refer to <a href="#">NSSAI</a> settings for details.
Default Subscribed NSAAI	This option is available only when context type is set to <b>Initial Request</b> . Refer to <a href="#">NSSAI</a> settings for details.
Requested NSSAI	This option is available only when context type is set to <b>Initial</b>

Parameter	Description
	<p><b>Request.</b></p> <p>Refer to <a href="#">NSSAI</a> settings for details.</p>
Roaming Indication	<p>Select an option from the drop-down list: <b>NON_ROAMING</b>, <b>LOCAL_BREAKOUT</b>, <b>HOME_ROUTED_ROAMING</b>.</p> <p>This option is available only when context type is set to <b>PDU Session Establishment</b>.</p>
PDU Session S-NSSAI	<p>This option is available only when context type is set to <b>PDU Session Establishment</b>.</p> <p>Refer to <a href="#">S-NSSAI</a> settings for details.</p>

The following table describes the NSSAI settings.

Parameter	Description								
	Select the add button to add the NSSAI settings to your test configuration.								
	Select the delete button to delete the NSSAI settings configuration from your test configuration.								
SST	<p>The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th>SST</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> </tr> <tr> <td>URLCC</td> <td>2</td> </tr> <tr> <td>MIoT</td> <td>3</td> </tr> </tbody> </table>	SST	Value	eMBB	1	URLCC	2	MIoT	3
SST	Value								
eMBB	1								
URLCC	2								
MIoT	3								
SD	The Slice Differentiator (SD) value for this NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.								
Mapped SST	The Mapped configured Slice/Service Type (SST) value for this NSSAI.								
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this NSSAI.								

The following table describes the S-NSSAI settings.

Parameter	Description								
SST	<p>The value that identifies the SST (Slice/Service Type) for this S-NSSAI. SST comprises octet 3 in the S-NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th>SST</th><th>Value</th></tr> </thead> <tbody> <tr> <td>eMBB</td><td>1</td></tr> <tr> <td>URLCC</td><td>2</td></tr> <tr> <td>MIoT</td><td>3</td></tr> </tbody> </table>	SST	Value	eMBB	1	URLCC	2	MIoT	3
SST	Value								
eMBB	1								
URLCC	2								
MIoT	3								
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.								
Mapped SST	The Mapped configured Slice/Service Type (SST) value for this S-NSSAI.								
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this S-NSSAI.								

## Enable SM Service AMF to SMSF

The **Enable SM Service AMF to SMSF** procedure requires the *Starting AMF* setting configuration. It takes one of the following values:

- **Start From First** - Starts from the first AMF in the list.
- **Start Round Robin** - First UE gets the first AMF, second UE the second AMF and so on.
- **Start Random** - Each UE gets a random AMF from the list.

The following table describes the configuration settings for the **UE SMS Context Data** procedure.

Parameter	Description
GUAMIs	Select <b>GUAMIs</b> to open the configuration panel for these settings, which are described below in <a href="#">GUAMIs</a> .
Access Type	Select the Access Network type for the policy: <b>3GPP Access</b> or <b>Non-3GPP Access</b> .
User Location Information	Select <b>User Location Information</b> to open the configuration panel for these settings, which are described below in <a href="#">User Location Information</a> .
UE Time Zone	Set the UE time zone.
Trace Data	Select the <b>Trace Data</b> check box to enable this option. The configuration settings are described below in <a href="#">Trace Data</a> .

Parameter	Description
Back-up AMF Info	Select <b>Back-up AMF Info</b> to open the configuration panel for these settings, which are described below in <a href="#">Back-up AMF Info</a> .
UDM Group ID	Set the UDM group ID.
Routing Indicator	Set the routing indicator.

## GUAMIs

These configuration settings are described in the following table.

Parameter	Description
	Select the <b>Add GUAMIs</b> button to add a new GUAMI to your test configuration.
	Select this button to remove the GUAMI from your test configuration.
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
AMF ID	Set the value for this field.

## User Location Information

These configuration settings are described in the following table.

Parameter	Description
<i>NR Location: Select <b>NR Location</b> to open the configuration panel for these settings.</i>	
NR Location	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.

Parameter	Description
<i>TAI</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>NCGI</i>	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.
<i>Global Ran Node Id</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.
<i>EUTRA Location: Select <b>EUTRA Location</b> to open the configuration panel for these settings.</i>	
<i>EUTRA Location</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI</i>	

Parameter	Description
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>ECGI</i>	
MCC	The PLMN MCC that is used in the construction of this ECGI.
MNC	The PLMN MNC that is used in the construction of this ECGI.
EUTRA Cell ID	The EUTRA Cell ID that is used in the construction of this ECGI.
<i>Global Ran Node Id</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.
<i>N3GA Location: Select <b>N3GA Location</b> to open the configuration panel for these settings.</i>	
TAI	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
N3 Iwf Id	Set the value for this field.
UE IPV4 Address	Set the UE IPV4 address.
UE IPV6 Address	Set the UE IPV6 address.
Port Number	Set the port number.

## Trace Data

These configuration settings are described in the following table.

Parameter	Description
Trace Reference	Set the trace reference value.
Trace Depth	Select the trace Depth from the drop-down list. The available options are: <b>MINIMUM, MEDIUM, MAXIMUM, MINIMUM_WO_VENDOR_EXTENSION, MEDIUM_WO_VENDOR_EXTENSION, MAXIMUM_WO_VENDOR_EXTENSION.</b>
NE types	Set the NE type.
Triggering Events	Specify the triggering events value.
Collection Entity IPv4 Address	Set the IPv4 address.
Collection Entity IPv6 Address	Set the IPv6 address.
List of Interfaces	Specify the list of interfaces.

### Back-up AMF Info

Parameter	Description
	Select the <b>Add Back-up AMF Info</b> button to create a new AMF info back-up.
	Select this button to remove the selected AMF back-up info.
Backup AMF Name	Set the name for the back-up AMF.
<i>GUAMIs</i>	Select <b>GUAMIs</b> to open the configuration panel for these settings, which are described below in <a href="#">GUAMIs</a> .

### SMS Subscription Data AMF to UDM settings

The following table describes the configuration settings for the **SMS Subscription Data AMF to UDM** procedure.

Parameter	Description
<i>SMS Subscription Data AMF to</i>	Select this feature to enable the subscription and retrieval for SMS-data from AMF to UDM

Parameter	Description
<i>UDM</i>	
Enable SMS Subscription Data Flow	If this option is enabled, the AMF will subscribe to UDM for SMS-data. <b>IMPORTANT</b> If the <b>Technical Spec Version</b> is set to <b>R15</b> , then the SMS Data Retrieval procedure will also be performed.
Enable SMS Subscription Data Get	<b>IMPORTANT</b> This option becomes available only if the <b>Enable SMS Subscription Data Flow</b> parameter is enabled, and the <b>Technical Spec Version</b> is set to <b>R16</b> or later. If this option is enabled, the AMF sends a GET request to the resource representing the UE's SMS Subscription Data.

## Policy Authorization AF to PCF

The following table describes the settings for the **Policy Authorization AF to PCF** Procedure.

Procedure setting	Description
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>AF App ID</b></li> <li>• <b>AF Requested Data</b></li> <li>• <b>Media Components</b></li> <li>• <b>Events</b></li> <li>• <b>Subscription Events</b></li> <li>• <b>Delay(s)</b></li> <li>• <b>Send Unsubscribe before Dereistration</b></li> <li>• <b>Send Resource Allocation failure</b></li> <li>• <b>Data to Send for Received Triggers</b></li> <li>• <b>Create SM Policy</b></li> <li>• <b>Delete SM Policy</b></li> <li>• <b>Update SM Policy</b></li> <li>• <b>Select All</b></li> </ul>
AF App ID	The AF application identifier. Default value is UE_IDENTITY.
Media Components	See <a href="#">Media Component</a> table for configuration details.
Events	See <a href="#">Events</a> table for configuration details.
Subscribe	If enabled, it will create a subscription to events for the existing AF application session context. See <a href="#">Subscribe</a> table for configuration details.

<b>Procedure setting</b>	<b>Description</b>
Delay (ms)	Set the delay (in milliseconds) before SMF will trigger SM Policy update procedure after receiving from PCF SM Policy update notify. A 0 value means no delay.
Send Resource Allocation Failure	If enabled, it will configure SMF to reject the creation of resource related to QoS Flows by sending failure code RES_ALLO_FAIL in SM Policy update.
<i>Data to Send for Received Triggers</i>	
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
Trigger Out of Credit Event	<i>If enabled, the SMF will send the NO_CREDIT trigger to PCF and the PCF will notify the AF.</i>
Trigger Type	Select from the drop-down when the SMF node will send the trigger: <ul style="list-style-type: none"> <li>• <b>Flow Information Received</b></li> <li>• <b>Trigger Requested</b></li> </ul>
Final Unit Action	Indicates the termination action to be taken when the user's account cannot cover the service cost. Available options are: <ul style="list-style-type: none"> <li>• <b>TERMINATE</b></li> <li>• <b>REDIRECT</b></li> <li>• <b>RESTRICT_ACCESS</b></li> </ul>
Trigger QoS Monitoring Event	If selected, it enables the QoS monitoring for UL, DL or round trip delay.
Create SM Policy	<i>This option should be enabled in case of simulated SMF, in order to create SM Policy before Policy Authorization Create. See <a href="#">Create SM Policy</a> table for configuration details.</i>
Update SM Policy	<i>This option should be enabled in case of simulated SMF, in order to update SM Policy after Policy Authorization Create. See <a href="#">Update SM Policy</a> table for configuration details.</i>
Delete SM Policy	<i>This option should be enabled in case of simulated SMF, in order to delete SM Policy after Policy Authorization Delete. See <a href="#">Delete SM Policy</a> table for configuration details.</i>

## Media Component

Parameter	Description
	Select the add button to add the media component settings to your test configuration.
<i>Settings:</i>	
	Select the delete button to delete the media component settings configuration from your test configuration.
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>Minimum Requested Bandwidth</b></li> <li>• <b>Maximum Requested Bandwidth</b></li> <li>• <b>Maximum Packet Loss Rate</b></li> <li>• <b>Media Type</b></li> <li>• <b>Flow Status</b></li> <li>• <b>Media Subcomponents</b></li> <li>• <b>Select All</b></li> </ul>
<i>Minimum Requested Bandwidth:</i>	
Uplink	Set the minimum uplink bitrate.
Downlink	Set the minimum downlink bitrate.
<i>Maximum Requested Bandwidth:</i>	
Uplink	Set the maximum uplink bitrate.
Downlink	Set the maximum downlink bitrate.
<i>Maximum Packet Loss Rate:</i>	
Uplink	The maximum uplink packet loss rate (packets per second) that is permitted for the QoS Flow.
Downlink	The maximum downlink packet loss rate (packets per second) that is permitted for the QoS Flow.
Media Type	Select the media type of the service. Available options are: <ul style="list-style-type: none"> <li>• <b>AUDIO</b></li> <li>• <b>VIDEO</b></li> <li>• <b>DATA</b></li> <li>• <b>APPLICATION</b></li> <li>• <b>CONTROL</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>TEXT</b></li> <li>• <b>MESSAGE</b></li> <li>• <b>OTHER</b></li> </ul>
Flow Status	Select the the status of the service data flows. Available options are: <ul style="list-style-type: none"> <li>• <b>ENABLED-UPLINK</b></li> <li>• <b>ENABLED-DOWNLINK</b></li> <li>• <b>DATA</b></li> <li>• <b>ENABLED</b></li> <li>• <b>DISABLED</b></li> <li>• <b>REMOVED</b></li> </ul>
<i>Media Subcomponents:</i>	
	Select to add the media subcomponent settings to your test configuration.
	Select to delete the media subcomponent settings configuration from your test configuration.
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>Flow Direction</b></li> <li>• <b>Flow Status</b></li> <li>• <b>Flow Usage</b></li> <li>• <b>Transport</b></li> <li>• <b>Select All</b></li> </ul>
Flow Direction	Select from the drop-down list the direction of the data flow on which the filter is applied: <b>Uplink</b> , <b>Downlink</b> , <b>Bidirectional</b> or <b>Unspecified</b> . This parameter is used to create Flow Description.
Flow Status	Select the the status of the service data flows. Available options are: <ul style="list-style-type: none"> <li>• <b>ENABLED-UPLINK</b></li> <li>• <b>ENABLED-DOWNLINK</b></li> <li>• <b>DATA</b></li> <li>• <b>ENABLED</b></li> <li>• <b>DISABLED</b></li> <li>• <b>REMOVED</b></li> </ul>
Flow Usage	Select from the drop-down the flow usage for this flow: <ul style="list-style-type: none"> <li>• <b>NO_INFORMATION</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>RTCP</b></li> <li>• <b>AF_SIGNALLING</b></li> </ul>
<i>Transport:</i>	
Type	Select the transport protocol specification type: <ul style="list-style-type: none"> <li>• <b>Value</b></li> <li>• <b>Keyword</b></li> </ul>
Value	Set a value for the transport type. <ul style="list-style-type: none"> <li>• If <b>Type</b> is set as <b>Value</b>, add an integer between 0 and 254.</li> <li>• If <b>Type</b> is set as <b>Keyword</b>, then the value is a string.</li> </ul>

## Events

Parameter	Description
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
<i>Items:</i>	
	Select to add the item settings to your test configuration.
	Select to delete the item settings configuration from your test configuration.
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
Event	Select from the drop-down the type of events to include in this item. <b>IMPORTANT</b> The option list depends on the <b>Technical Spec Version</b> set in Global Settings.
Notification Method	Select from the drop-down the notification method to use with this event. <b>IMPORTANT</b> The option list depends on the <b>Technical Spec Version</b> set in Global Settings.
Waiting Time (s)	Indicates the minimum waiting time between subsequent reports. <b>IMPORTANT</b> This setting is only visible when Technical Spec Version is set to 15, and Notification Method is set to <i>EVENT_DETECTION</i> .
Report Period (s)	Indicates the time interval between successive event notifications.

Parameter	Description	
	IMPORTANT	This setting is only visible when Technical Spec Version is set to 16 or higher, and Notification Method is set to <i>PERIODIC</i> .
Requested QoS Monitoring Parameter	IMPORTANT	<p>This parameter appears only if <b>Item's Event</b> parameter is set as <i>QOS_Monitoring</i>.</p> <p>Indicates the UL packet delay, DL packet delay and/or round trip packet delay between the UE and the UPF to be monitored. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>DLINK</b></li> <li>• <b>ULINK</b></li> <li>• <b>ROUND_TRIP</b></li> <li>• <b>Select/Deselect All</b></li> </ul>
<i>QoS Monitoring Information</i>	IMPORTANT	<i>This parameter appears only if Item's Event parameter is set as QOS_Monitoring.</i>
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.	
Downlink Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for DL packet delay.	
Uplink Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for UL packet delay.	
Round Trip Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for round trip packet delay.	

## Subscribe

Parameter	Description
Send Unsubscribe before Dereistration	If enabled, it will configure the simulated AF to send Unsubscribe request before UE deregisters.
<i>Subscription Events</i>	
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
<i>Items:</i>	
	Select to add the item settings to your test configuration.

Parameter	Description
	Select to delete the item settings configuration from your test configuration.
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
Event	Select from the drop-down the type of events to include in this item. <b>IMPORTANT</b> The option list depends on the <b>Technical Spec Version</b> set in Global Settings.
Notification Method	Select from the drop-down the notification method to use with this event. <b>IMPORTANT</b> The option list depends on the <b>Technical Spec Version</b> set in Global Settings.
Waiting Time (s)	Indicates the minimum waiting time between subsequent reports. <b>IMPORTANT</b> This setting is only visible when Technical Spec Version is set to 15, and Notification Method is set to <i>EVENT_DETECTION</i> .
Report Period (s)	Indicates the time interval between successive event notifications. <b>IMPORTANT</b> This setting is only visible when Technical Spec Version is set to 16 or higher, and Notification Method is set to <i>PERIODIC</i> .
Requested QoS Monitoring Parameter	<b>IMPORTANT</b> This parameter appears only if <b>Item's Event</b> parameter is set as <i>QOS_Monitoring</i> . Indicates the UL packet delay, DL packet delay and/or round trip packet delay between the UE and the UPF to be monitored. Available options are: <ul style="list-style-type: none"><li>• <b>DOWNLINK</b></li><li>• <b>UPLINK</b></li><li>• <b>ROUND_TRIP</b></li><li>• <b>Select/Deselect All</b></li></ul>
<i>QoS Monitoring Information</i>	<b>IMPORTANT</b> <i>This parameter appears only if Item's Event parameter is set as QOS_Monitoring.</i>
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
Downlink Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for DL packet delay.
Uplink Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for UL packet delay.
Round Trip	Unsigned integer identifying a threshold (in units of milliseconds) for round

Parameter	Description
Threshold	trip packet delay.

## Create SM Policy

Procedure setting	Description
PDU Session ID	Unsigned integer identifying a PDU session, within the range 0 to 255, as specified in clause 11.2.3.1b, bits 1 to 8, of 3GPP TS 24.007 [13].
PDU Type	Select the desired policy PDU type: IPv4 IPv6, IPv4, IPv6, UNSTRUCTURED, or ERHERNET.
DNN	Select one of the configured DNNs from the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
UE Time Zone	Specify the time zone value for this policy association. The time zone attribute (timeZone) indicates where the served UE is camping. The Time Zone information is expressed as the GMT time plus an offset value. The offset represents the time zone adjusted for daylight saving time.
Serving Network MCC	The MCC of the serving PLMN where the served UE is camping.
Serving Network MNC	The MNC of the serving PLMN where the served UE is camping.
Access Type	Select the Access Network type for the policy: 3GPP Access or Non-3GPP Access.
RAT Type	Select the RAT type value to use for this policy association. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual. The RAT Type attribute indicates where the served UE is camping.
Online	Select this option if the policy will support the online charging method for PDUs sessions.
Offline	Select this option if the policy will support the offline charging method for PDUs sessions.
Slice Info SST	Specify the Slice/Service Type (SST) value for the S-NSSAI associated with this policy. This is the S-NSSAI corresponding to the network slice that is allocated to the PDU (within the sliceInfo attribute).
Slice Info SD	Specify the Slice Differentiator (SD) value for the S-NSSAI associated with this policy. This is the S-NSSAI corresponding to the network slice that is allocated to the PDU (within the sliceInfo attribute).
Subs Session AMBR Uplink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) uplink rate.

Procedure setting	Description
Subs Session AMBR Downlink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) downlink rate.
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported (as described in TS 29.571).
<i>QoS Settings</i>	<i>Select to open the configuration panel for these settings, which are described below in <a href="#">QoS Settings</a>.</i>
<i>User Location</i>	<i>Select to open the configuration panel for these settings, which are described below in <a href="#">User Location Information</a>.</i>

## QoS Settings

The Create SM Policy procedure require QoS values for this objective's Service Data Flows. These configuration settings are described in the following table.

Parameter	Description
5QI	Specify the 5QI value (decimal number) to use for this procedure. 5G QoS Identifier (5QI) is a scalar that is used as a reference to 5G QoS characteristics defined in TS 23.501, clause 5.7.4. These are access node-specific parameters that control QoS forwarding treatment for the QoS Flow (such as scheduling weights, admission thresholds, queue management thresholds, link layer protocol configuration, among others). Standardized 5QI values have a one-to-one mapping to a standardized combination of 5G QoS characteristics as specified in TS 23.501, table 5.7.4-1.
ARP:	
ARP Priority Level	Specify the ARP priority level to use for this procedure. The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.
ARP Preemption Capability	Select <b>Not Preemp</b> or <b>May Preempt</b> . When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.
ARP Preemption	Select <b>Not Preemptable</b> or <b>Preemptable</b> . When a flow is preemption-capable, it can be allocated resources that were

Parameter	Description
Vulnerability	already assigned to another data flow that has a lower ARP priority level.

## User Location Information

These configuration settings are described in the following table.

Parameter	Description
<i>NR Location: Select <b>NR Location</b> to open the configuration panel for these settings.</i>	
NR Location	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
TAI	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
NCGI	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.
Global Ran Node ID	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf ID	Set the value for this field.

Parameter	Description
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb ID	Set the value for this field.
<i>EUTRA Location: Select <b>EUTRA Location</b> to open the configuration panel for these settings.</i>	
<i>EUTRA Location</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>ECGI</i>	
MCC	The PLMN MCC that is used in the construction of this ECGI.
MNC	The PLMN MNC that is used in the construction of this ECGI.
EUTRA Cell ID	The EUTRA Cell ID that is used in the construction of this ECGI.
<i>Global Ran Node Id</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf ID	Set the value for this field.
Bit Length	Set the bit length value.

Parameter	Description
GNB value	Set the GNB value.
Nge Nb ID	Set the value for this field.
<i>N3GA Location: Select <b>N3GA Location</b> to open the configuration panel for these settings.</i>	
TAI	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
N3 Iwf ID	Set the value for this field.
UE IPV4 Address	Set the UE IPV4 address.
UE IPV6 Address	Set the UE IPV6 address.
Port Number	Set the port number.

## Update SM Policy

Parameter	Description
Policy Control Request Triggers	<p>The policy control request triggers which are met.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• <b>PLMN_CH</b> – PLMN Change</li> <li>• <b>RES_MO_RE</b> – a request for resource modification has been received by the SMF. The SMF always reports to the PCF.</li> <li>• <b>AC_TY_CH</b> – Access Type Change</li> <li>• <b>UE_IP_CH</b> – UE IP address change. The SMF always reports to the PCF.</li> <li>• <b>UE_MAC_CH</b> – a new UE MAC address is detected or a used UE MAC address is inactive for a specific period</li> <li>• <b>AN_CH_COR</b> – Access Network Charging Correlation Information</li> <li>• <b>US_RE</b> – the PDU Session or the Monitoring key specific resources consumed by a UE either reached the threshold or needs to be reported for other reasons.</li> <li>• <b>APP_STA</b> – the start of application traffic has been detected.</li> <li>• <b>APP_STO</b> – the stop of application traffic has been detected.</li> <li>• <b>AN_INFO</b> – Access Network Information report</li> <li>• <b>CM_SES_FAIL</b> – credit management session failure</li> <li>• <b>PS_DA_OFF</b> – the SMF reports when the 3GPP PS Data Off status changes. The SMF always reports to the PCF.</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>DEF_QOS_CH</b> – default QoS Change. The SMF always reports to the PCF.</li> <li>• <b>SE_AMBR_CH</b> – session AMBR Change. The SMF always reports to the PCF.</li> <li>• <b>QOS_NOTIF</b> – the SMF notify the PCF when receiving notification from RAN that QoS targets of the QoS Flow cannot be guaranteed or guaranteed again.</li> <li>• <b>NO_CREDIT</b> – Out of credit</li> <li>• <b>PRA_CH</b> – change of UE presence in Presence Reporting Area</li> <li>• <b>SAREA_CH</b> – Location Change with respect to the Serving Area</li> <li>• <b>SCNN_CH</b> – Location Change with respect to the Serving CN node</li> <li>• <b>RE_TIMEOUT</b> – indicates the SMF generated the request because there has been a PCC revalidation timeout</li> <li>• <b>RES_RELEASE</b> – indicates that the SMF can inform the PCF of the outcome of the release of resources for those rules that require so.</li> <li>• <b>SUCC_RES_ALLO</b> – indicates that the requested rule data is the successful resource allocation.</li> <li>• <b>RAT_TY_CH</b> – RAT Type Change.</li> <li>• <b>REF_QOS_IND_CH</b> – Reflective QoS indication Change</li> </ul>
RES_MO_RE Data json	The JSON of the ueInitResReq IE from Npcf SM Policy Control Update request. The JSON represents the request for resource modification.
Number of Packet Filters	Specify the number of supported packet filters for signaled QoS rules.
3GPP Ps Data Off Status	If it is included in selected, the 3GPP PS Data Off is activated by the UE.
Access Type	Select the Access Network type for the policy: 3GPP Access or Non-3GPP Access.
RAT Type	Select the RAT type value to use for this policy association. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual. The RAT Type attribute indicates where the served UE is camping.
UE Time Zone	Set the UE time zone.
Serving Network MCC	The MCC of the serving PLMN where the served UE is camping.
Serving Network MNC	The MNC of the serving PLMN where the served UE is camping.
Subs Session AMBR Uplink	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Subs Session AMBR	Specify the subscribed session AMBR (Aggregate Maximum Bit Rate) downlink rate.

Parameter	Description
Downlink	
QoS Flow Usage	<p>Available options:</p> <ul style="list-style-type: none"> <li>• <b>GENERAL</b> – indicates that no specific QoS flow usage information is available.</li> <li>• <b>IMS_SIG</b> – indicate that the QoS flow is used for IMS signaling only.</li> </ul>
<i>User Location</i>	
User Location Information	<i>Select to open the configuration panel for these settings, which are described in <a href="#">User Location Information</a>.</i>
QoS Settings	<i>Select to open the configuration panel for these settings, which are described below in <a href="#">QoS Settings</a>.</i>

## Delete SM Policy

Parameter	Description
UE Time Zone	Set the UE time zone.
Serving Network MCC	The MCC of the serving PLMN where the served UE is camping.
Serving Network MNC	The MNC of the serving PLMN where the served UE is camping.
<i>User Location</i>	
User Location Information	<i>Select to open the configuration panel for these settings, which are described in <a href="#">User Location Information</a>.</i>

## Secondary Objectives

For each primary objective that you define, you can add one or more Secondary Objectives for the selected UE range.

When you select **Secondary Objective** from the UE **Range** pane, LoadCore opens another panel in which you can add one or more Secondary Objectives. These objectives are associated to the single Primary Objective configured for the UE range.

To add a Secondary Objective:

1. Click the **Add** button in the Objectives pane.



LoadCore opens the **Settings** pane where you configure the new objective.

2. In the new objective's **Settings** pane, select the desired *Procedure* from the drop-down list.  
(LoadCore automatically selects the first Procedure from the list.)
3. Configure all of the procedures for the new objective.

### Topics:

## UEGetNSSAIAMF2UDM

The following table describes the **Settings** for the *UEGetNSSAIAMF2UDM* Secondary Objective. This objective executes a procedure in which the AMF (the NF service consumer) sends a request to the UDM to obtain the UE's subscribed NSSAI.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	UE Get NSSAI AMF to UDM.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>UE Get NSSAI AMF to UDM:</i>	
Include Supported Features	Select this option if the procedure will include "supported-features" in the query.
Supported Features Query	Enter the supported-features value to use for the query.
Include PLMN ID	Select this option if the procedure will include "plmn-id" in the query.
PLMN ID Query	Enter the PLMN ID value to use for the query.

## RegistrationAMF2UDM

The following table describes the **Settings** for the *RegistrationAMF2UDM* Secondary Objective. This objective executes a procedure in which the AMF that is providing service to the UE invokes the Registration service operation to store related UE Context Management information in the UDM.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Registration AMF to UDM.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Registration AMF to UDM:</i>	
Role	Select the role for this procedure: <ul style="list-style-type: none"> <li>• <b>Initial Registration</b> – executes only when there is no AMF currently registered for the UE (either at start or when deregistered).</li> <li>• <b>Inter AMF Mobility</b> – executes after initial registration and does inter-AMF mobility registration</li> <li>• <b>Initial And Mobility</b> – does both the initial and the mobility AMF registration.</li> </ul>
Next AMF	Describes how the next AMF is selected when doing AMF mobility registration: <ul style="list-style-type: none"> <li>• <b>Next Round Robin</b> – selects the next AMF from the list in round-robin fashion.</li> <li>• <b>Next Random</b> – selects the next AMF from the list randomly.</li> </ul>

## DeregistrationAMF2UDM

The following table describes the **Settings** for the *DeregistrationAMF2UDM* Secondary Objective. This objective executes a procedure in which the AMF sends a request to the UDM to deregister a UE.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Deregistration AMF to UDM.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Deregistration AMF to UDM:</i>	
Min Hold Time (ms)	Minimum time (ms) that must elapse between an AMF registration procedure and this deregistration procedure.

## GetPolicyAMF2PCF

The following table describes the **Settings** for the *GetPolicyAMF2PCF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Get Policy AMF to PCF.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.

## UpdatePolicyAMF2PCF

The following table describes the **Settings** for the *UpdatePolicyAMF2PCF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Update Policy AMF to PCF.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>User Location:</i>	
NR Location	Select <b>NR Location</b> to open the configuration panel for the User Location settings (described below).

### User Location

The User Location values are required by the services that enable an NF to request location information for a target UE. The User Location information includes:

- NR Location: The NR Location values are used in the 5G System by services that track the location of UEs.
- TAI: A Tracking Area identity (TAI) uniquely identifies a tracking area. It is constructed from the MCC (Mobile Country Code), MNC (Mobile Network Code), and TAC (Tracking Area Code).
- NCGI: In the 5G System, each NR cell is assigned a NR Cell Global Identity (NCGI) value. It is formed by concatenating the PLMN-Id (PLMN Identifier) with the 36-bit NCI (NR Cell Identity).

These configuration settings are described in the following table.

Parameter	Description
<i>NR Location:</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.

<b>Parameter</b>	<b>Description</b>
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
<i>TAI:</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>NCGI:</i>	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.

## GetPolicySMF2PCF

The following table describes the **Settings** for the *GetPolicySMF2PCF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Get Policy SMF to PCF.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.

## UpdatePolicySMF2PCF

The following table describes the **Settings** for the *UpdatePolicySMF2PCF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Update Policy SMF to PCF.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Update Policy SMF to PCF:</i>	
Policy Control Request Triggers	<p>The policy control request triggers which are met.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• <b>PLMN_CH</b> – PLMN Change</li> <li>• <b>RES_MO_RE</b> – a request for resource modification has been received by the SMF. The SMF always reports to the PCF.</li> <li>• <b>AC_TY_CH</b> – Access Type Change</li> <li>• <b>UE_IP_CH</b> – UE IP address change. The SMF always reports to the PCF.</li> <li>• <b>UE_MAC_CH</b> – a new UE MAC address is detected or a used UE MAC address is inactive for a specific period</li> <li>• <b>AN_CH_COR</b> – Access Network Charging Correlation Information</li> <li>• <b>US_RE</b> – the PDU Session or the Monitoring key specific resources consumed by a UE either reached the threshold or needs to be reported for other reasons.</li> <li>• <b>APP_STA</b> – the start of application traffic has been detected.</li> <li>• <b>APP_STO</b> – the stop of application traffic has been detected.</li> <li>• <b>AN_INFO</b> – Access Network Information report</li> <li>• <b>CM_SES_FAIL</b> – credit management session failure</li> <li>• <b>PS_DA_OFF</b> – the SMF reports when the 3GPP PS Data Off status changes. The SMF always reports to the PCF.</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>DEF_QOS_CH</b> – default QoS Change. The SMF always reports to the PCF.</li> <li>• <b>SE_AMBR_CH</b> – session AMBR Change. The SMF always reports to the PCF.</li> <li>• <b>QOS_NOTIF</b> – the SMF notify the PCF when receiving notification from RAN that QoS targets of the QoS Flow cannot be guaranteed or guaranteed again.</li> <li>• <b>NO_CREDIT</b> – Out of credit</li> <li>• <b>PRA_CH</b> – change of UE presence in Presence Reporting Area</li> <li>• <b>SAREA_CH</b> – Location Change with respect to the Serving Area</li> <li>• <b>SCNN_CH</b> – Location Change with respect to the Serving CN node</li> <li>• <b>RE_TIMEOUT</b> – indicates the SMF generated the request because there has been a PCC revalidation timeout</li> <li>• <b>RES_RELEASE</b> – indicates that the SMF can inform the PCF of the outcome of the release of resources for those rules that require so.</li> <li>• <b>SUCC_RES_ALLO</b> – indicates that the requested rule data is the successful resource allocation.</li> <li>• <b>RAT_TY_CH</b> – RAT Type Change.</li> <li>• <b>REF_QOS_IND_CH</b> – Reflective QoS indication Change</li> </ul>
Number of Packet Filters	Specify the number of supported packet filters for signaled QoS rules.
3GPP Ps Data Off Status	If it is included in selected, the 3GPP PS Data Off is activated by the UE.
QoS Flow Usage	<p>Available options:</p> <ul style="list-style-type: none"> <li>• <b>GENERAL</b> – indicates that no specific QoS flow usage information is available.</li> <li>• <b>IMS_SIG</b> – indicate that the QoS flow is used for IMS signaling only.</li> </ul>
RES_MO_RE Data json	The JSON of the ueInitResReq IE from Npcf SM Policy Control Update request. The JSON represents the request for resource modification.

## RegistrationSMF2UDM

The following table describes the **Settings** for the *RegistrationSMF2UDM* Secondary Objective. This objective executes a procedure in which the SMF sends a request to the UDM to create a new registration.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Registration SMF to UDM.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Registration SMF to UDM:</i>	
SMF ID	The SMF ID of the SMF to which the request will be send.
SNSSAI SST	The SST (Slice/Service Type) value for the NSSAI that will be used for the requested registration. SST comprises octet 3 in the NSSAI information element.
SNSSAI SD	The SD (Slice Differentiator) value for the NSSAI that will be used for the requested registration. SD comprises octets 4 through 6 in the NSSAI information element.
DNN	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <b>DNN configuration settings</b> .

## DeregistrationSMF2UDM

The following table describes the **Settings** for the *DeregistrationSMF2UDM* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Deregistration SMF to UDM.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Trigger	Select the manner in which the objective is triggered: Manual or Automatic (default value). When the trigger objective is set to <b>Automatic</b> , the secondary objectives will start automatically. When it is set to <b>Manual</b> , the secondary objective will start only if it receives the start command.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Deregistration SMF to UDM:</i>	
Min Hold Time (ms)	Minimum time (ms) to pass between a SM FRegistration procedure and this procedure (deregistration).

## IntermediateSpendingLimitPCF2CHF

The following table describes the **Settings** for the *IntermediateSpendingLimitPCF2CHF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Intermediate Spending Limit PCF to CHF.
Only Once	When this option is selected, the test performs a single iteration of the procedure. When this option is not selected, the test executes the procedure at the specified rate throughout the entire duration of the test.

Parameter	Description
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Intermediate Spending Limit PCF to CHF</i>	
Supported Features	Specify the Supported Features attribute for this policy association. This attribute indicates the negotiated supported features for this policy association. It is a hexadecimal string that indicates the features supported (as described in TS 29.571).

The following table describes the Intermediate Policy Counters settings.

Parameter	Description
<i>Intermediate Policy Counters Ids</i>	
Policy Counters Ids	This parameter is used to identify a policy counter. Select a value from the drop-down list.
<i>Additional Policy Counters Ids</i>	
	Select this button to add additional policy counters ids.
	Select this button to remove the policy counter id.

## ConvergedChargingUpdateSMF2CHF

The following table describes the **Settings** for the *ConvergedChargingUpdateSMF2CHF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Converged Charging Update SMF to CHF.
Iterations	The number of times the procedure will run. It can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.

Parameter	Description
Distributed over (s)	Set the value for this field.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Converged Charging Update SMF to CHF</i>	
Maximum Updates	Set the number of maximum updates.
Delay Between Updates	Set the value of the delay between updates.
Rating Groups	<i>The required setting are described <a href="#">below</a>.</i>

## Rating Groups

The following table describes the Rating Groups settings.

Parameter	Description
	Select the <b>Add Group</b> button to add a new rating group to your test configuration.
<i>Rating Group</i>	
	Select this button to remove the rating group from your test configuration.
Id	Set the Id value for this rating group.
UPF Id	Set the UPF Id value for this rating group.
<i>Requested Unit</i>	
Time	Set the total time value.
Total Volume	Set the total volume value.
Uplink Volume	Set the total uplink volume value.
Downlink Volume	Set the total downlink volume value.
Service Specific Units	Set the total service specified units value.

Parameter	Description
<i>Used Units</i>	
	Select the <b>Add unit</b> button to add a new unit to your test configuration.
	Select this button to remove this unit from your test configuration.
Service Id	Set the service Id.
Quota Management Indicator	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>ONLINE_CHARGING</b></li> <li>• <b>OFFLINE_CHARGING</b></li> </ul>
Time	Set the total time value.
Total Volume	Set the total volume value.
Uplink Volume	Set the total uplink volume value.
Downlink Volume	Set the total downlink volume value.
Service Specific Units	Set the total service specified units value.
Charging Rule Base Name	Set the name of the charging rule
3GPPPS Data Off Status	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>INACTIVE</b></li> <li>• <b>ACTIVE</b></li> </ul>
Sponsor Identity	Specify the sponsor identity.
Application Service Provider Identity	Specify the application service provider.
Service Specific Units	Set the service specific units value.
QoS Information	Select <b>QoS Information</b> to open the configuration panel for these settings, which are described below in <a href="#">QoS Information</a> .
Triggers	The Triggers settings are described below in <a href="#">Triggers</a> .

## QoS Information

The following table describes the QoS Information settings.

Parameter	Description
QoS Id	Specify the QoS id.
AverWindow	Specify the averaging window value. It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.
MaxDataBurstVol	Specify the maximum data burst volume.
maxbrUI	Set the maximum bit rate value for uplink traffic.
maxbrDI	Set the maximum bit rate value for downlink traffic.
gbrUI	Set the guaranteed bit rate value for uplink traffic.
gbrDI	Set the guaranteed bit rate value for downlink traffic.
qnc	Enable or disable the QoS Notification Control parameter.
Priority level	Specify the priority level.
Reflective Qos	Enable or disable reflective QoS.
Sharing Key Download	Specify the sharing key used for download.
Sharing Key Upload	Specify the sharing key used for upload.
Max Packet Loss Rate Download	The maximum download packet loss rate (packets per second) that is permitted for the QoS Flow.
Max Packet Loss Rate Upload	The maximum upload packet loss rate (packets per second) that is permitted for the QoS Flow.
Def Qos Flow Indication	Enable or disable this option.
5QI	Specify the 5QI value (decimal number) to use for this procedure.
<b>ARP</b>	
ARP Priority Level	<p>Specify the ARP priority level.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.</p>
ARP Preemption Capability	<p>Select <b>Not Preemp</b> or <b>May Preempt</b>.</p> <p>When a flow is preemption-vulnerable, it can be dropped to free up</p>

Parameter	Description
	resources for packets that have a higher ARP priority level.
ARP Preemption Vulnerability	Select <b>Not Preemptable</b> or <b>Preemptable</b> . When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.

## Triggers

The following table describes the Triggers settings.

Parameter	Description
	Select the <b>Add Trigger</b> button to add a new trigger to your test configuration.
<i>Trigger</i>	
	Select this button to remove this trigger from your test configuration.
Trigger Type	Select an option from the drop-down list: <b>UOTA_THRESHOLD</b> , <b>QHT</b> , <b>FINAL</b> , <b>QUOTA_EXHAUSTED</b> , <b>VALIDITY_TIME</b> , <b>OTHER_QUOTA_TYPE</b> , <b>FORCED_REAUTHORISATION</b> , <b>UNUSED_QUOTA_TIMER</b> , <b>UNIT_COUNT_INACTIVITY_TIMER</b> , <b>ABNORMAL_RELEASE</b> , <b>QOS_CHANGE</b> , <b>VOLUME_LIMIT</b> , <b>TIME_LIMIT</b> , <b>PLMN_CHANGE</b> , <b>USER_LOCATION_CHANGE</b> , <b>RAT_CHANGE</b> , <b>UE_TIMEZONE_CHANGE</b> , <b>TARIFF_TIME_CHANGE</b> , <b>MAX_NUMBER_OF_CHANGES_IN_CHARGING_CONDITIONS</b> , <b>MANAGEMENT_INTERVENTION</b> , <b>CHANGE_OF_UE_PRESENCE_IN_PRESENCE_REPORTING_AREA</b> , <b>CHANGE_OF_3GPP_PS_DATA_OFF_STATUS</b> , <b>SERVING_NODE_CHANGE</b> , <b>REMOVAL_OF_UPF</b> , <b>ADDITION_OF_UPF</b> , <b>START_OF_SERVICE_DATA_FLOW</b>
Trigger Category	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>IMMEDIATE_REPORT</b></li> <li>• <b>DEFERRED_REPORT</b></li> </ul>
Time Limit	Specify the time limit.
Volume Limit 64	Specify the volume limit.
Max Number of ccc	Set the value for this field.

## UplinkSMSAMF2SMSF

The following table describes the **Settings** for the *UplinkSMSAMF2SMSF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Uplink SMS AMF to SMSF.
Iterations	The number of times the procedure will run. It can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Distributed over (s)	Set the value for this field.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Uplink SMS AMF to SMSF</i>	
SMS Record Data	The required setting are described <a href="#">below</a> .
SMS Configuration	The required setting are described <a href="#">below</a> .

## SMS Record Data

The following table describes the SMS Record Data settings.

Parameter	Description
Access Type	Select the access type: <b>3GPP ACCESS</b> or <b>NON 3GPP ACCESS</b> .
User Location Information	Select <b>User Location Information</b> to open the configuration panel for these settings, which are described below in <a href="#">User Location Information</a> .
UE Time Zone	Set the UE time zone.

The User Location Information settings are described in the following table.

Parameter	Description
<i>NR Location: Select <b>NR Location</b> to open the configuration panel for these settings.</i>	
NR Location	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.

Parameter	Description
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>NCGI</i>	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.
<i>Global Ran Node Id</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.
<i>EUTRA Location: Select <b>EUTRA Location</b> to open the configuration panel for these settings.</i>	
<i>EUTRA Location</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.

Parameter	Description
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
UE Location Timestamp	The timestamp value that the procedure will use in the identification of the UE location.
<i>TAI</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>ECGI</i>	
MCC	The PLMN MCC that is used in the construction of this ECGI.
MNC	The PLMN MNC that is used in the construction of this ECGI.
EUTRA Cell ID	The EUTRA Cell ID that is used in the construction of this ECGI.
<i>Global Ran Node Id</i>	
MCC	Set the mobile country code.
MNC	Set the mobile network code.
N3 Iwf Id	Set the value for this field.
Bit Length	Set the bit length value.
GNB value	Set the GNB value.
Nge Nb Id	Set the value for this field.
<i>N3GA Location: Select <b>N3GA Location</b> to open the configuration panel for these settings.</i>	
<i>TAI</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
N3 Iwf Id	Set the value for this field.
UE IPV4 Address	Set the UE IPV4 address.

Parameter	Description
UE IPV6 Address	Set the UE IPV6 address.
Port Number	Set the port number.

## SMS Configuration

The following table describes the SMS Configuration settings.

Parameter	Description
Service Center Address	The service center address used by the UE range for SMS messaging.
Type of Number	The type of number can be one of the following: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• International number</li> <li>• National number</li> <li>• Network specific number</li> <li>• Subscriber number</li> <li>• Alphanumeric</li> <li>• Abbreviated number</li> <li>• Reserved number</li> </ul>
Numbering Plan Identification	The numbering plan identification can be one of the following: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• ISDN</li> <li>• Data numbering plan</li> <li>• Telex numbering plan</li> <li>• National numbering plan</li> <li>• Private numbering plan</li> <li>• ERMES numbering plan</li> <li>• Reserved numbering plan</li> </ul>
Character Set	The character set used in the data coding scheme for the text message.
Destination MSISDN	The destination MSISDN for the SMS text message.
Destination MSISDN Increment	The increment for the destination MSISDN.

## PolicyUpdateAF2PCF

The following table describes the **Settings** for the *PolicyUpdateAF2PCF* Secondary Objective.

Parameter	Description
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Procedure	Update Policy AF to PCF.
Iterations	The number of times the procedure will run. It can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Distributed over (s)	Set the value for this field.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the procedure.
<i>Policy Update AF to PCF</i>	
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>AF App ID</b></li> <li>• <b>Media Components</b></li> <li>• <b>Events</b></li> </ul>
Media Components	See <a href="#">Media Component</a> table for configuration details.
Remove Event Subscription	If enabled, it will remove the existing event subscription information from the application session context.
Events	See <a href="#">Events</a> table for configuration details.
<i>User Location:</i>	
NR Location	Select <b>NR Location</b> to open the configuration panel for the User Location settings (described below).

## Media Component

Parameter	Description
	Select the add button to add the media component settings to your test configuration.

Parameter	Description
<i>Media Component:</i>	
	Select the delete button to delete the media component settings configuration from your test configuration.
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>Media Component</b></li> </ul>
Media Component Number	Identifies the media component number, and it contains the ordinal number of the media component.
Null Media Component	If enabled, it will remove the Media Component information from the application session context.
Media Component	<i>Select to open the configuration panel.</i>
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>Minimum Requested Bandwidth</b></li> <li>• <b>Maximum Requested Bandwidth</b></li> <li>• <b>Maximum Packet Loss Rate</b></li> <li>• <b>Media Type</b></li> <li>• <b>Flow Status</b></li> <li>• <b>Media Subcomponents</b></li> <li>• <b>Select All</b></li> </ul>
<i>Minimum Requested Bandwidth:</i>	
Uplink	Set the minimum uplink bitrate.
Downlink	Set the minimum downlink bitrate.
<i>Maximum Requested Bandwidth:</i>	
Uplink	Set the maximum uplink bitrate.
Downlink	Set the maximum downlink bitrate.
<i>Maximum Packet Loss Rate:</i>	
Uplink	The maximum uplink packet loss rate (packets per second) that is permitted for the QoS Flow.
Downlink	The maximum downlink packet loss rate (packets per second) that is permitted

Parameter	Description
	for the QoS Flow.
Media Type	Select the media type of the service. Available options are: <ul style="list-style-type: none"> <li>• <b>AUDIO</b></li> <li>• <b>VIDEO</b></li> <li>• <b>DATA</b></li> <li>• <b>APPLICATION</b></li> <li>• <b>CONTROL</b></li> <li>• <b>TEXT</b></li> <li>• <b>MESSAGE</b></li> <li>• <b>OTHER</b></li> </ul>
Flow Status	Select the the status of the service data flows. Available options are: <ul style="list-style-type: none"> <li>• <b>ENABLED-UPLINK</b></li> <li>• <b>ENABLED-DOWNLINK</b></li> <li>• <b>DATA</b></li> <li>• <b>ENABLED</b></li> <li>• <b>DISABLED</b></li> <li>• <b>REMOVED</b></li> </ul>
<i>Media Subcomponents:</i>	
	Select to add the media subcomponent settings to your test configuration.
	Select to delete the media subcomponent settings configuration from your test configuration.
<i>Settings:</i>	
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>Media Subcomponent</b></li> </ul>
Null Media Subcomponent	If enabled, it will remove the Media Subcomponent information from the application session context.
<i>Media Subcomponents</i>	
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure. The following options are available: <ul style="list-style-type: none"> <li>• <b>Flow Direction</b></li> <li>• <b>Flow Status</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>Flow Usage</b></li> <li>• <b>Transport</b></li> <li>• <b>Select All</b></li> </ul>
Flow Direction	<p>Select from the drop-down list the direction of the data flow on which the filter is applied: <b>Uplink</b>, <b>Downlink</b>, <b>Bidirectional</b> or <b>Unspecified</b>.</p> <p>This parameter is used to create Flow Description.</p>
Flow Status	<p>Select the the status of the service data flows. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>ENABLED-UPLINK</b></li> <li>• <b>ENABLED-DOWNLINK</b></li> <li>• <b>DATA</b></li> <li>• <b>ENABLED</b></li> <li>• <b>DISABLED</b></li> <li>• <b>REMOVED</b></li> </ul>
Flow Usage	<p>Select from the drop-down the flow usage for this flow:</p> <ul style="list-style-type: none"> <li>• <b>NO_INFORMATION</b></li> <li>• <b>RTCP</b></li> <li>• <b>AF_SIGNALLING</b></li> </ul>
<i>Transport:</i>	
Type	<p>Select the transport protocol specification type:</p> <ul style="list-style-type: none"> <li>• <b>Value</b></li> <li>• <b>Keyword</b></li> </ul>
Value	<p>Set a value for the transport type.</p> <ul style="list-style-type: none"> <li>• If <b>Type</b> is set as <b>Value</b>, add an integer between 0 and 254.</li> <li>• If <b>Type</b> is set as <b>Keyword</b>, then the value is a string.</li> </ul>

## Events

Parameter	Description
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
<i>Items:</i>	
	Select to add the item settings to your test configuration.

Parameter	Description
	Select to delete the item settings configuration from your test configuration.
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
Event	Select from the drop-down the type of events to include in this item. <b>IMPORTANT</b> The option list depends on the <b>Technical Spec Version</b> set in Global Settings.
Notification Method	Select from the drop-down the notification method to use with this event. <b>IMPORTANT</b> The option list depends on the <b>Technical Spec Version</b> set in Global Settings.
Waiting Time (s)	Indicates the minimum waiting time between subsequent reports. <b>IMPORTANT</b> This setting is only visible when Technical Spec Version is set to 15, and Notification Method is set to <i>EVENT_DETECTION</i> .
Report Period (s)	Indicates the time interval between successive event notifications. <b>IMPORTANT</b> This setting is only visible when Technical Spec Version is set to 16 or higher, and Notification Method is set to <i>PERIODIC</i> .
Requested QoS Monitoring Parameter	<b>IMPORTANT</b> This parameter appears only if <b>Item's Event</b> parameter is set as <i>QOS_Monitoring</i> . Indicates the UL packet delay, DL packet delay and/or round trip packet delay between the UE and the UPF to be monitored. Available options are: <ul style="list-style-type: none"><li>• <b>DOWNLINK</b></li><li>• <b>UPLINK</b></li><li>• <b>ROUND_TRIP</b></li><li>• <b>Select/Deselect All</b></li></ul>
Null QoS Monitoring Information	If enabled, it will remove the QoS Monitoring Information from the application session context.
<i>QoS Monitoring Information</i>	<b>IMPORTANT</b> <i>This parameter appears only if Item's Event parameter is set as QOS_Monitoring.</i>
Fields to Include in Requests	Select which parameters should be included in the requests sent as part of the Policy Authorization procedure.
Downlink Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for DL packet delay.

Parameter	Description
Uplink Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for UL packet delay.
Round Trip Threshold	Unsigned integer identifying a threshold (in units of milliseconds) for round trip packet delay.

## User Location

The User Location values are required by the services that enable an NF to request location information for a target UE. The User Location information includes:

- NR Location: The NR Location values are used in the 5G System by services that track the location of UEs.
- TAI: A Tracking Area identity (TAI) uniquely identifies a tracking area. It is constructed from the MCC (Mobile Country Code), MNC (Mobile Network Code), and TAC (Tracking Area Code).
- NCGI: In the 5G System, each NR cell is assigned a NR Cell Global Identity (NCGI) value. It is formed by concatenating the PLMN-Id (PLMN Identifier) with the 36-bit NCI (NR Cell Identity).

These configuration settings are described in the following table.


Parameter	Description
<i>NR Location:</i>	
Age of Location information	The Age of Location Information value, at the start of the procedure. The value represents the elapsed time in minutes since the last network contact of the mobile station.
Geographical information	The Geographical Location value that the procedure will use in the identification of the UE location.
Geodetic information	The Geodetic Location value that the procedure will use in the identification of the UE location.
<i>TAI:</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>NCGI:</i>	
MCC	The PLMN MCC that is used in the construction of this NCGI.
MNC	The PLMN MNC that is used in the construction of this NCGI.
NR Cell ID	The NCI that is used in the construction of this NCGI.

## SBA Tester Global Settings panel

The Global Settings include parameters that either have overall applicability to the test or can be used (by reference) in the configurations of other nodes in the test topology.

To access the Global Settings:

1. Select the **Test Overview** tab:

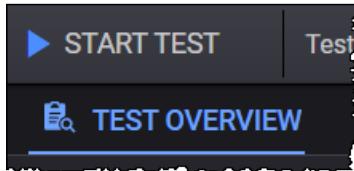


2. Click **Expand** if the Test Overview section is collapsed.
3. Click the Global Settings' **Edit** button:



LoadCore opens the **Global Settings** panel from which you can:

- Select the technical specification version from the drop-down list:

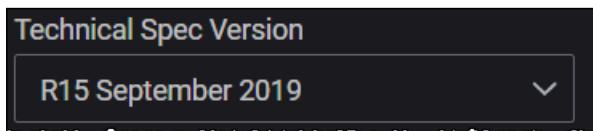

- Access and configure the following settings:

**Connection Settings** ..... **568**

**Advanced Settings** ..... **568**

**Impairment** ..... **570**

**DNNs panel** ..... **571**

    DNN configuration settings ..... 572

    DNN GBR configuration settings ..... 573

    Session AMBR configuration settings ..... 574

**QoS Flows panel** ..... **575**

    QoS Flow configuration settings ..... 576

    QoS Flow Packet Filter configuration settings ..... 578

    QoS Flow Maximum Packet Loss configuration settings ..... 579

    QoS Flow ARP configuration settings ..... 579

    QoS Flow MBR configuration settings ..... 580

    QoS Flow GBR configuration settings ..... 580

## Connection Settings

The following table describes the general connection settings that you configure for the SBA Tester.

Setting	Description
Connection Start Rate	The rate for TCP connection establishment.
Connection Stop Rate	The rate for TCP connection termination.
Max Requests Per Connection	The maximum requests count that should be sent over a TCP connection before it is closed.

## Advanced Settings

The following table describes the settings required to enable control plane advanced statistics and packet capture on the assigned agents.

Setting	Description
Overwrite Capture Size for IxStack	Enable this option to overwrite the capture size for IxStack.
Custom Capture Size for IxStack	Set the custom value of the capture size for IxStack.
Enable Capture Circular Buffer for IxStack	Select this option to enable circular buffer capture for IxStack.
Enable Capture On Loopback Interface	Select this option to enable packet capture on the loopback interface.
Enable Control Plane Advanced Stats	By default, these measurements and statistics are disabled. Select this option to enable control plane latency statistics.
Automated Polling Interval	Selected by default. The statistics are retrieved based on a predefined polling interval.
Custom Polling Interval	This option becomes available only when <i>Automated Polling Interval</i> option is disabled. It allows you to create a custom polling interval.

Setting	Description
(sec)	
Log Level	Select one of the options: <ul style="list-style-type: none"> <li>• <b>Info</b> - Designates informational messages that highlight the progress of the application at coarse-grained level.</li> <li>• <b>Debug</b> - Designates fine-grained informational events that are most useful to debug the application.</li> </ul>
Log Tags	Select one or more tags from the drop-down list.  Log Tags are used to collect specific information in the logs; they work with Debug and with Info log levels. Rather than allowing the logs to collect information about everything, you can use Log Tags to collect specific information—such as SCTP or HTTP messages—during the test. This limits the amount of information that is collected, making it easier for you to extract the data that you need.
Ignore Offline Agents At Runtime	When this option is enabled, if an agent loses connection to the Middleware during a test, the test will not stop but continue without that agent.

## Control Plane Latency Statistics

For the Control Plane Latency Statistics, the latency is measured per HTTP transaction.

For the control plane HTTP latency statistics, on the client side, the latency measures the time between the moment when the request is sent and the moment when the answer is received. On the server side, the latency measures the time between the moment when the request is received and the moment when the answer is sent.

**IMPORTANT** The time shown in statistics may be slightly different than the time computed in any capturing tool (for example, Wireshark) because of the time when the packets are actually captured.

Latency buckets:

- 0us - 125us
- 125us - 250us
- 250us - 500us
- 500us - 1ms
- 1ms - 5ms
- 5ms - 10ms
- 10ms - 15ms
- 15ms - 20ms
- 20ms - inf

**NOTE**

If enabled, the control plane latency statistics will not be displayed in predefined dashboards in LoadCore statistics user interface. To display these statistics you will need to use custom dashboards.

## Retrieve captured packets

After enabling packet capture, and running the test, to download the generated packet captures, you need to use a SFTP client (for example, WinSCP) to retrieve the captures from `/opt/5gc-test-engine` on each of the agents.

The packet capture can be identified as follows:

- `latestCapture.pcap`, when running the test without DPDK activated.
- `latestIxStackCapture.pcap` when running the test with DPDK activated.

## Impairment

The following table describes the settings required to define the impairment profile.

Setting	Description
<i>Impairment Profiles:</i>	
	Select the <b>Add impairment profile</b> button to add a new profile to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete impairment profile</b> button to remove the profile from your test configuration.
Name	Each impairment profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Action Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• Custom script</li> <li>• PFCP-drop message</li> </ul>
Script file	This parameter is available only when <b>Action Type</b> is set to <b>Custom script</b> . It allows you to add a custom script, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## DNNs panel

In the 5G architecture, a Data Network Name (DNN) serves as the identifier for a data network. It is the equivalent of an APN (Access Point Name) in an LTE network. A DNN is used when selecting an SMF and UPF for a PDU session, selecting an N6 interface for a PDU session, and determining policies to apply to a PDU session.

When setting up a LoadCore test, these DNN configurations become immediately available for selection in the UDM and UE configurations.

### Accessing the configuration settings

To access the DNN configuration settings, select **DNNs** from the **Global Settings** panel. LoadCore opens the **DNNs** panel from which you can add and edit DNN definitions:



The properties for a DNN are organized into the following groups of configuration settings:

<b>DNN configuration settings</b>	.....	<b>572</b>
<b>DNN GBR configuration settings</b>	.....	<b>573</b>
<b>Session AMBR configuration settings</b>	.....	<b>574</b>

## DNN configuration settings

You create and manage Data Network Names (DNNs) for your test network in the **Global Settings** section of the **Test Overview**. The **DNN** panel contains the configuration settings for an individual DNN. In this panel, you can:

- Click the **Delete DNN** button to delete the DNN configuration.
- Edit the DNN settings.

The following table describes the **DNN** settings.

Setting	Description
	Select the <b>Delete DNN</b> button to delete this DNN from your test configuration.
DNN	<p>Enter the DNN value for this DNN definition. For example: <code>dnn.keysight.com</code>.</p> <p>A DNN (as is the case with an EPS APN) is composed of two parts:</p> <ul style="list-style-type: none"> <li>• A mandatory Network Identifier that defines the external network to which the UPF is connected.</li> <li>• An optional Operator Identifier that defines the PLMN backbone in which the UPF is located.</li> </ul> <p>A 5GS Data Network Name (DNN) is equivalent to an EPS APN. It is a reference to a data network, and it may be used to select an SMF or UPF for a PDU session and to determine policies applicable to the PDU session.</p>
Address	The IP address of the DNN.
Allowed SSC Modes	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>• <b>SSC Mode 1:</b> The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>• <b>SSC Mode 2:</b> The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>• <b>SSC Mode 3:</b> Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4/v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
Default SSC Mode	<p>Select the desired default SSC mode for this DNN.</p> <p>The SSC mode associated with a PDU Session does not change during the lifetime of a PDU Session.</p>
Allowed Services	Select the allowed services from the drop-down list: Service 1, Service 2, Service 3, or all. In the 5G System, the <i>allowed services</i> may comprise any number of

Setting	Description
	service identifiers allowed for the subscriber in the PDU Session. The PCF maps those service identifiers into PCC rules according to local configuration and operator policies.
Subscription Categories	Select the desired Subscription Category for this range of UEs. Subscriber Category is an information type structured as a list of category identifiers associated with a subscriber. It may comprise any number of identifiers associated with the subscriber (such as platinum, gold, silver, bronze).
IPv4 Index	The IPv4 Index value for the PDU sessions accessing this DNN. This value identifies the IP address allocation method for IPv4 addresses.
IPv6 Index	The IPv6 Index value for the PDU sessions accessing this DNN. This value identifies the IP address allocation method for IPv6 addresses.
EPS Interworking	Enable this option if the UE subscription data indicates support for interworking with EPS for this DNN.
ADC Support	Enable this option if the DNN will support PDU sessions in which application detection and control (ADC) is enabled for subscribers.
Subscriber Spending Limits	Enable this option if the DNN will support PDU session policies that are based on subscriber spending limits.
Offline	Enable this option if the DNN will support the offline charging method for PDUs sessions.
Online	Enable this option if the DNN will support the online charging method for PDUs sessions.
GBR	Select this option to open a new panel that contains the GBR settings. These settings are described in <a href="#">DNN GBR configuration settings</a> .
Session AMBR	Select this option to open a new panel that contains the Session AMBR settings. These settings are described in <a href="#">Session AMBR configuration settings</a> .

## DNN GBR configuration settings

GBR indicates the guaranteed bit rates for service data flows that are mapped to this QoS flow. Separate GBR values are configured for uplink and downlink traffic.

The **GBR** settings are described in the table that follows.

Setting	Description
Guaranteed Bit Rate Uplink	The guaranteed bit rate (bps) for uplink traffic. This is the uplink bit rate that the QoS Flow associated with this DNN is expected to provide.
Guaranteed Bit	The guaranteed bit rate (bps) for downlink traffic. This is the downlink bit rate

<b>Setting</b>	<b>Description</b>
Rate Downlink	that the QoS Flow associated with this DNN is expected to provide.

## Session AMBR configuration settings

Each LoadCore DNN configuration has its own unique configuration settings, which include:

- The main DNN settings, described in [DNNs panel](#).
- The DNN's Session AMBR settings, described below.

The following tables describes the Session AMBR configuration settings.


<b>Parameter</b>	<b>Description</b>
Session AMBR Uplink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Session AMBR Uplink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.
Session AMBR Downlink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) downlink rate.
Session AMBR Downlink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.

## QoS Flows panel

The 5G QoS model is based on QoS Flows. A 5G QoS Flow is the finest level of granularity for QoS forwarding treatment in the 5G System. All traffic mapped to the same 5G QoS Flow receives the same forwarding treatment.

### Accessing the configuration settings:

To access the QoS Flows configuration settings, select **QoS Flows** from the the **Global Settings** panel. LoadCore opens the **QoS Flows** panel from which you can add and edit QoS Flow definitions:

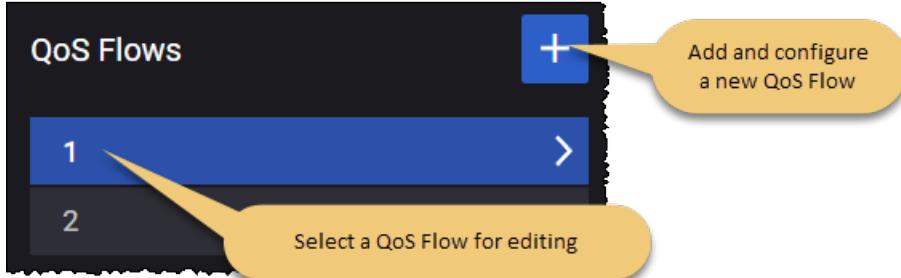

These QoS Flow configurations become immediately available for selection by other nodes in the test configuration. The properties for a QoS Flow are organized into the following groups of configuration settings:

<b>QoS Flow configuration settings</b>	<b>576</b>
<b>QoS Flow Packet Filter configuration settings</b>	<b>578</b>
<b>QoS Flow Maximum Packet Loss configuration settings</b>	<b>579</b>
<b>QoS Flow ARP configuration settings</b>	<b>579</b>
<b>QoS Flow MBR configuration settings</b>	<b>580</b>
<b>QoS Flow GBR configuration settings</b>	<b>580</b>

## QoS Flow configuration settings

You create and manage QoS Flows for your test network in the **Global Settings** section of the **Test Overview**. The **QoS Flow** panel contains the configuration settings for an individual QoS Flow. In this panel, you can:

- Click the **Delete QoS Flow** button to delete the QoS Flow configuration.
- Edit the QoS Flow settings.

The **QoS Flow** settings are described in the table that follows.


Setting	Description
<i>QoS Flow:</i>	
Is Default	<p>Enable this option if this QoS Flow is associated with the default QoS rule. In the 5G System, a default QoS rule is required for each UE session, and this rule will be associated with a QoS Flow.</p> <p>If this option is not selected, LoadCore makes the <b>Packet Filter List</b> settings available for configuration (refer to <a href="#">QoS Flow Packet Filter configuration settings</a> for descriptions of these settings).</p>
QFI	<p>Enter a QoS Flow Identifier (QFI) for this QoS Flow. This identifier will be used to uniquely identify a QoS Flow in the 5G System. All User Plane traffic with the same QFI within a PDU Session receives the same traffic forwarding treatment. The QFI is carried in an encapsulation header on the N3 and N9 reference points.</p>
5QI	<p>Specify the 5QI value (decimal number). 5G QoS Identifier (5QI) is a scalar that is used as a reference to 5G QoS characteristics defined in TS 23.501, clause 5.7.4. These are access node-specific parameters that control QoS forwarding treatment for the QoS Flow (such as scheduling weights, admission thresholds, queue management thresholds, link layer protocol configuration, among others). Standardized 5QI values have a one-to-one mapping to a standardized combination of 5G QoS characteristics as specified in TS 23.501, table 5.7.4-1.</p>
5QI Priority Level	<p>Specify the 5QI Priority Level for this QoS Profile. 5QI Priority Level is a Policy Control parameter that accepts values from 1 through 127 (where 1 is the highest priority). It indicates a priority in scheduling resources among QoS Flows.</p>
Resource Type	<p>Select the type of resource that the QoS Flow requires: Guaranteed Bit Rate (GBR), Non-Guaranteed Bit Rate (non-GBR), or Delay Critical GBR. The Resource Type determines whether or not dedicated network resources related to a QoS Flow-level Guaranteed Flow Bit Rate (GFBR) value are permanently allocated to the flow.</p>
Averaging Window	<p>Specify the <i>Averaging window</i> value for this 5GI. Each GBR QoS Flow is associated with an <i>Averaging window</i>. It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.</p>

<b>Setting</b>	<b>Description</b>
QoS Rule Precedence	<p>Specify the desired QoS Rule Precedence value for this QFI.</p> <p>The QoS rule precedence value (and the PDR precedence value) determine the order in which a QoS rule or a PDR, respectively, will be evaluated. The evaluation of the QoS rules or PDRs is performed in increasing order of their precedence value.</p>
Packet Delay Budget	<p>The Packet Delay Budget (PDB) defines an upper bound for the time that a packet may be delayed between the UE and the PCEF. For a given QCI, the value of the PDB is the same in uplink and downlink. The purpose of the PDB is to support the configuration of scheduling and link layer functions.</p>
Packet Error Rate	<p>The Packet Error Rate (PER) defines the upper bound for the rate of PDUs (IP packets) that have been processed by the sender of a link layer protocol but are not successfully delivered by the corresponding receiver to the upper layer. It defines an upper bound for the rate of non-congestion related packet losses.</p>
Max Data Burst	<p>The Maximum Data Burst Volume is the amount of data which the RAN is expected to deliver within the part of the Packet Delay Budget allocated to the link between the UE and the radio base station.</p>
Notification Control	<p>Enable or disable the Notification Control parameter. When enabled, it indicates whether notifications are requested from the RAN when the GFBR can no longer be fulfilled for a QoS Flow during the QoS Flow's lifetime.</p>
Segregation	<p>Enable this option if the Segregation indication is to be included in a UE initiated PDU Session Modification procedure. The Segregation indication is included when the UE requests that the network bind the applicable SDF(s) on a distinct and dedicated QoS Flow.</p>
Packet Filter List	<p><b>IMPORTANT</b> This is available if <a href="#">Is Default</a> option is not selected.</p> <p>Refer to the following topic for a description of the Packet Filter configuration settings: <a href="#">QoS Flow Packet Filter configuration settings</a>.</p>
Max Packet Loss Rate	<p>Refer to the following topic for a description of the Max Packet Loss Rate configuration settings: <a href="#">QoS Flow Maximum Packet Loss configuration settings</a>.</p>
ARP	<p>Refer to the following topic for a description of the ARP configuration settings: <a href="#">QoS Flow ARP configuration settings</a>.</p>
MBR	<p>Refer to the following topic for a description of the MBR configuration settings: <a href="#">QoS Flow MBR configuration settings</a>.</p>
GBR	<p>Refer to the following topic for a description of the GBR configuration settings: <a href="#">QoS Flow GBR configuration settings</a>.</p>

## QoS Flow Packet Filter configuration settings

A Packet Filter Set is used in the definition of QoS rules or packet detection rules (PDRs) to identify one or more packet flows for filtering.

You use the settings in the QoS Flow **Packet Filter List** panel to configure the packet filters associated with the current flow. You access this panel from the QoS Flow panel:

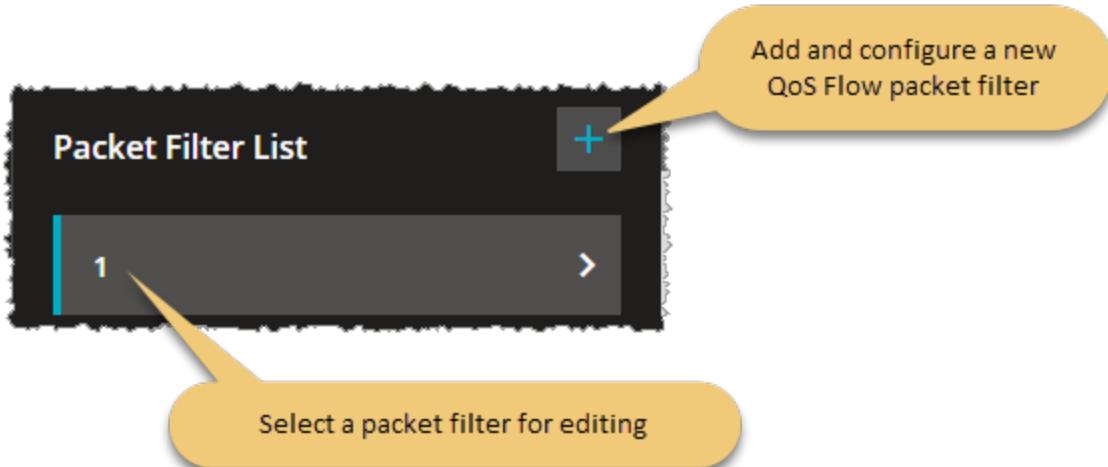

The **Packet Filter** settings are described in the following table.

Setting	Description
	Select the <b>Delete Packet Filter</b> button to delete this Packet Filter from the test configuration.
Direction	Select the direction of the data flow on which the filter is applied from the drop-down list: Uplink, Downlink, or Bidirectional.
IPv4 Remote Address and Subnet Mask	The IPv4 address of the remote node plus the subnet mask. If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
IPv6 Remote Address and Prefix Length	The IPv6 address for the remote node, expressed in CIDR notation (for example: 2001:db8::/32). If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
Protocol Identifier or Next Header	The Protocol ID of either the protocol above IP in the stack or the next header type. Examples: UDP, TCP, ESP.
Single Local Port	The local port number, if the filter specifies a single port.
Single Remote Port	The remote port number, if the filter specifies a single port.

Setting	Description
Local Port Range	The low and high limits for local port range.
Remote Port Range	The low and high limits for remote port range.
Security Parameter Index	The Security Parameters Index (SPI) for this packet filter. The SPI is a pointer that references the session key and algorithms used to protect the data being transported.
Type Of Service or Traffic Class	The IPv4 Type of Service (TOS) or the IPv6 traffic class.
Flow Label	The IPv6 Flow Label. This refers to the 20-bit Flow Label field in the IPv6 header.

## QoS Flow Maximum Packet Loss configuration settings

The setting establish the uplink and downlink maximum packet loss that is permitted for the QoS flow.

Setting	Description
<i>Max Packet Loss Rate:</i>	
Uplink	The maximum uplink packet loss rate (packets per second) that is permitted for the QoS Flow.
Downlink	The maximum downlink packet loss rate (packets per second) that is permitted for the QoS Flow.

## QoS Flow ARP configuration settings

The Allocation and Retention Priority (ARP) settings specify the priority level, preemption capability, and preemption vulnerability of a resource request. It is used to determine whether a new QoS Flow should be accepted or rejected—and to determine whether an existing QoS Flow can be preempted by another QoS Flow—in response to resource limitations.

The **QoS Flow ARP** settings are described in the table that follows.

Setting	Description
<i>ARP:</i>	
ARP Priority Level	<p>Specify the ARP priority level.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the</p>

Setting	Description
	home network and thus applicable when a UE is roaming.
Preemption Capability	Enable this option if the packets in this QoS Flow can preempt other flows. When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.
Preemption Vulnerability	Enable this option if the packets in this QoS Flow are candidates for being preempted by other flows. When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.

## QoS Flow MBR configuration settings

MBR indicates the maximum bit rates allowed for service data flows that are mapped to this QoS flow. Separate MBR values are configured for uplink and downlink traffic.

The **QoS Flow MBR** settings are described in the table that follows.

Setting	Description
<i>MBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the maximum bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the maximum bit rate value for downlink traffic.

## QoS Flow GBR configuration settings

GBR indicates the guaranteed bit rates for service data flows that are mapped to this QoS flow. Separate GBR values are configured for uplink and downlink traffic.

The **QoS Flow GBR** settings are described in the table that follows.


Setting	Description
<i>GBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the guaranteed bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the guaranteed bit rate value for downlink traffic.

## SBA Tester Simulated Nodes panel

The **Simulated nodes** panel opens when you select the SBA Tester from the network topology window. You can perform the following tasks from this panel:

- Add a new AMF, SMF, PCF or AF range to your test configuration.
- Open an AMF, SMF, PCF or AF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

When you select the Simulated Nodes panel, you enter the AMF/SMF/PCF/AF test configuration Settings. Each range can be accessed and configured by selecting it.

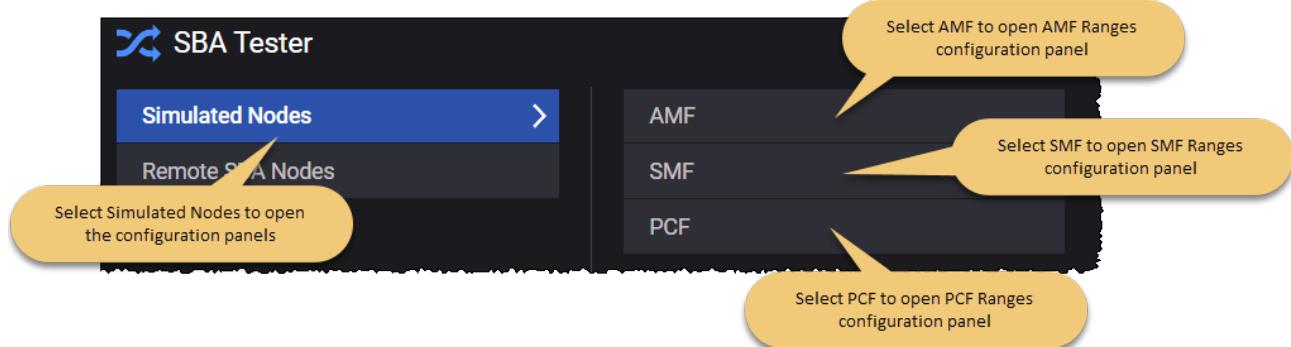


## AMF configuration settings

The **AMF Ranges** panel opens when you select the AMF node from the Simulated Nodes panel.

You can perform the following tasks from this panel:

- Add a new AMF range to your test configuration.
- Open an AMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

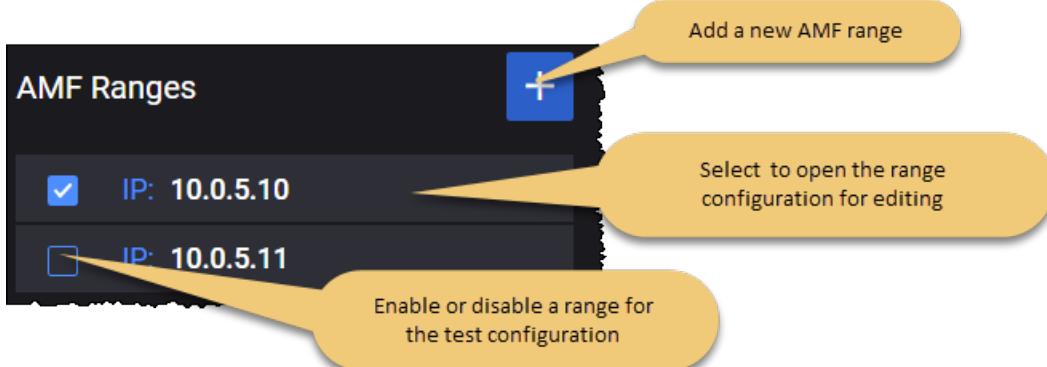

You can add and delete AMF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you need to configure for each AMF range.

<b>Setting</b>	<b>Description</b>
<i>AMF:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Namf Interface Settings:</i>	
Connectivity Settings	Each AMF range requires the configuration of Namf interface settings. These settings are described below in the <a href="#">AMF Namf interface settings</a> section.
<i>Node Settings:</i>	
Name	The name uniquely identifies each AMF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Instance ID	Each AMF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	<p>The PLMN MCC for this AMF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this AMF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Home Network Private Key	The home network private key.
Region ID	<p>An AMF Region consists of one or multiple AMF Sets.</p> <p>The AMF Region ID to use for this simulated AMF node. This ID identifies the region in which the node resides. The AMF Region ID addresses the case that there are more AMFs in the network than the number of AMFs that can be supported by AMF Set ID and AMF Pointer. It allows operators to re-use the same AMF Set IDs and AMF Pointers in different regions.</p>

<b>Setting</b>	<b>Description</b>
Set ID	<p>An AMF Set consists of some AMFs that serve a given area and Network Slice. Multiple AMF Sets may be defined per AMF Region and Network Slice(s).</p> <p>The AMF Set ID to use for this simulated AMF node. The Set ID uniquely identifies the AMF Set within the AMF Region.</p>
Pointer	The AMF Pointer identifies one or more AMFs within the AMF Set.
Implicit Subscription Expiration from UDM	Select the check box inn order to enable it.
Subscription Duration (ms)	Set the value for the subscription duration.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
Indirect Communication without Delegated Discovery	This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a> .
Target Nodes	This option is available only if <i>Indirect Communication without Delegated Discovery</i> option is enabled. It allows the user to select the target nodes (UDM, AUSF, PCF, NSSF, SMSF) for Indirect Communication via SCP.
Indirect Communication with Delegated Discovery	This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a> .
Target Nodes for Delegated Discovery	This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. Select the targeted nodes from the drop-down list (UDM, AUSF, PCF, NSSF, SMSF).
Optional Discovery Parameters	<p>A list of optional parameters for certain targets that can be used in discovery requests when using Delegated Discovery.</p> <p>This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. For more details, refer to <a href="#">Optional Discovery Parameters</a>.</p>

The following table describes the optional parameters required for delegated discovery.

<b>Setting</b>	<b>Description</b>
<i>Target Nodes</i>	

<b>Setting</b>	<b>Description</b>
	Select this button to add the a target node to your test configuration.
<i>Settings</i>	
<i>Target Node</i>	
	Select the <b>Delete Target Node</b> button to remove this node from your test configuration.
<i>Target Type</i>	Select the target node from the drop-down list.
<i>Discovery Parameter List</i>	
<i>Service Names</i>	Select the service name from the drop-down list.
<i>DNN</i>	Select one of the configured DNNs from the drop-down list.
<i>Hnrf Uri</i>	Set the Uri value for this field.
<i>supi</i>	Set the subscription permanent identifier value.
<i>gspi</i>	Set the value for this field.
<i>Routing Indicator</i>	Provide the routing indicator value.
<i>External Group Identity</i>	Provide the external group identity value.
<i>Dataset Id</i>	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>SUBSCRIPTION</b></li> <li>• <b>POLICY</b></li> <li>• <b>EXPOSURE</b></li> <li>• <b>APPLICATION</b></li> </ul>
<i>Amf Region Id</i>	Set the value for this field.
<i>Network Instance Format</i>	Select the encoding format for the network instance: string or label-list.
<i>Target Nf Fqdn</i>	Set the value for this field.
<i>Pgw</i>	Set the value for this field.
<i>Amf Set Id</i>	Set the value for this field.
<i>Smf Serving Area</i>	Set the value for this field.

<b>Setting</b>	<b>Description</b>
UE IPv4 Address	Set the UE IPV4 address.
UE Ipv6 Prefix	Set the UE IPV6 address prefix.
<i>SNssai</i>	
SST	Provide the SST (Slice/Service Type) value.
SD	Provide the SD (Slice Differentiator) value.
Mapped SST	Provide the mapped SST (Slice/Service Type) value.
Mapped SD	Provide the mapped SD (Slice Differentiator) value.
<i>Target Plmn List</i>	
	Select this button to add the a target plmn list to your test configuration.
	Select the <b>Delete Target Plmn</b> button to remove this list from your test configuration.
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
<i>Guami</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
Amf Id	Set the value for this field.
<i>TAI</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
TAC	Provide the Tracking Area Code (TAC) value.
<i>Nsi List</i>	
	Select this button to add the a Nsi list to your test configuration.
	Select this button to remove the Nsi list to your test configuration.

## AMF Namf interface settings

Namf is the service-based interface through which a AMF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Namf connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
TCP Connections	The number of concurrent TCP connections to use for each DUT.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner</i></p>

Connectivity Settings	Description
	VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.


## SMF configuration settings

The **SMF Ranges** panel opens when you select the SMF node from the Simulated Nodes panel.

You can perform the following tasks from this panel:

- Add a new SMF range to your test configuration.
- Open an SMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

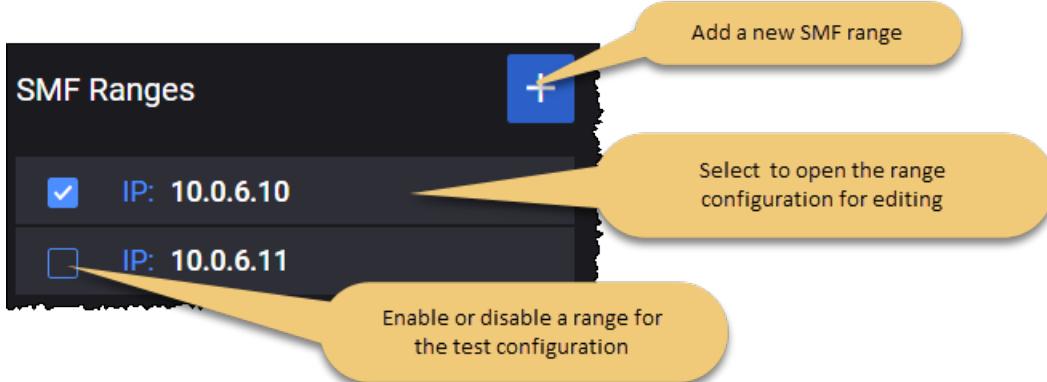

You can add and delete SMF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you need to configure for each SMF range.

Setting	Description
<b>SMF:</b>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<b>Nsmf Interface Settings:</b>	
Connectivity Settings	Each SMF range requires the configuration of Nsmf interface settings. These settings are described below in the <a href="#">SMF Nsmf interface settings</a> section.
<b>Node Settings:</b>	
Instance ID	Each SMF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.

<b>Setting</b>	<b>Description</b>
PLMN MCC	<p>The PLMN MCC for this AMF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this AMF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP2 User Agent	<p>User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.</p>
Indirect Communication without Delegated Discovery	<p>This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a>.</p>
Target Nodes	<p>This option is available only if <i>Indirect Communication without Delegated Discovery</i> option is enabled. It allows the user to select the target nodes (CHF, PCF) for Indirect Communication via SCP.</p>
Indirect Communication with Delegated Discovery	<p>This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a>.</p>
Target Nodes for Delegated Discovery	<p>This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. Select the targeted nodes from the drop-down list.</p>
Optional Discovery Parameters	<p>A list of optional parameters for certain targets that can be used in discovery requests when using Delegated Discovery.</p> <p>This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. For more details, refer to <a href="#">Optional Discovery</a>.</p>

<b>Setting</b>	<b>Description</b>
	<a href="#"><u>Parameters.</u></a>
<i>SMF NSSAI:</i>	
	Select the <b>Add NSSAI</b> button to add a NSSAI to your test configuration.
<i>SMF NSSAI:</i>	
	Select the <b>Delete NSSAI</b> button to remove this NSSAI from your test configuration.
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
DNNs	A DNN (Data Network Name) with which PDU sessions will be associated for this NSSAI. Select one or more DNNs from the drop-down list.

The following table describes the optional parameters required for delegated discovery.

<b>Setting</b>	<b>Description</b>
<i>Targeted Nodes</i>	
	Select this button to add the a target node to your test configuration.
<i>Settings</i>	
<i>Target Node</i>	
	Select the <b>Delete Target Node</b> button to remove this node from your test configuration.
Target Type	Select the target node from the drop-down list.
<i>Discovery Parameter List</i>	
Service Names	Select the service name from the drop-down list.
DNN	Select one of the configured DNNs from the drop-down list.
Hnrf Uri	Set the Uri value for this field.
supi	Set the subscription permanent identifier value.

Setting	Description
gspi	Set the value for this field.
Routing Indicator	Provide the routing indicator value.
External Group Identity	Provide the external group identity value.
Dataset Id	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>SUBSCRIPTION</b></li> <li>• <b>POLICY</b></li> <li>• <b>EXPOSURE</b></li> <li>• <b>APPLICATION</b></li> </ul>
Amf Region Id	Set the value for this field.
Network Instance Format	Select the encoding format for the network instance: string or label-list.
Target Nf Fqdn	Set the value for this field.
Pgw	Set the value for this field.
Amf Set Id	Set the value for this field.
Smf Serving Area	Set the value for this field.
UE IPv4 Address	Set the UE IPV4 address.
UE Ipv6 Prefix	Set the UE IPV6 address prefix.
<i>SNssai</i>	
SST	Provide the SST (Slice/Service Type) value.
SD	Provide the SD (Slice Differentiator) value.
Mapped SST	Provide the mapped SST (Slice/Service Type) value.
Mapped SD	Provide the mapped SD (Slice Differentiator) value.
<i>Target Plmn List</i>	
	Select this button to add the a target plmn list to your test configuration.
	Select the <b>Delete Target Plmn</b> button to remove this list from your test configuration.
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.

Setting	Description
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
<i>Guami</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
Amf Id	Set the value for this field.
<i>TAI</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
TAC	Provide the Tracking Area Code (TAC) value.
<i>Nsi List</i>	
	Select this button to add the a Nsi list to your test configuration.
	Select this button to remove the Nsi list to your test configuration.

## SMF Nsmf interface settings

Nsmf is the service-based interface through which a SMF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nsmf connectivity and service interaction.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.

<b>Connectivity Settings</b>	<b>Description</b>
TCP Connections	The number of concurrent TCP connections to use for each DUT.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.


## PCF configuration settings

The **PCF Ranges** panel opens when you select the PCF node from the Simulated Nodes panel.

You can perform the following tasks from this panel:

- Add a new PCF range to your test configuration.
- Open an PCF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

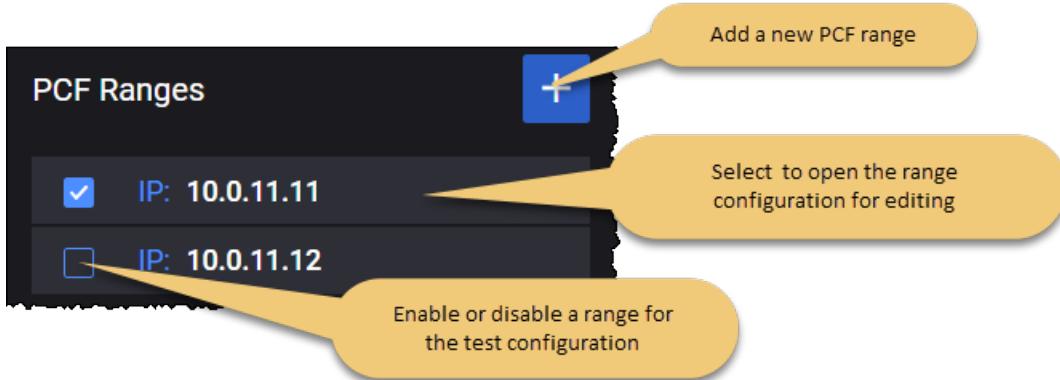

You can add and delete PCF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you need to configure for each PCF range.

<b>Setting</b>	<b>Description</b>
<i>PCF:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Npcf Interface Settings:</i>	
Connectivity Settings	Each PCF range requires the configuration of Npcf interface settings. These settings are described below in the <a href="#">PCF Npcf interface settings</a> section.
<i>Node Settings:</i>	
Instance ID	Each AMF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	<p>The PLMN MCC for this AMF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this AMF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The</p>

Setting	Description
	MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
Indirect Communication without Delegated Discovery	This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a> .
Target Nodes	This option is available only if <i>Indirect Communication without Delegated Discovery</i> option is enabled. It allows the user to select the target node (CHF) for Indirect Communication via SCP.
Indirect Communication with Delegated Discovery	This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a> .
Target Nodes for Delegated Discovery	This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. Select the targeted nodes from the drop-down list.
Optional Discovery Parameters	A list of optional parameters for certain targets that can be used in discovery requests when using Delegated Discovery. This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. For more details, refer to <a href="#">Optional Discovery Parameters</a> .

The following table describes the optional parameters required for delegated discovery.

Setting	Description
<i>Targeted Nodes</i>	
	Select this button to add the a target node to your test configuration.
<i>Settings</i>	
<i>Target Node</i>	
	Select the <b>Delete Target Node</b> button to remove this node from your test configuration.
<i>Target Type</i>	Select the target node from the drop-down list.

<b>Setting</b>	<b>Description</b>
<i>Discovery Parameter List</i>	
Service Names	Select the service name from the drop-down list.
DNN	Select one of the configured DNNs from the drop-down list.
Hnrf Uri	Set the Uri value for this field.
supi	Set the subscription permanent identifier value.
gspi	Set the value for this field.
Routing Indicator	Provide the routing indicator value.
External Group Identity	Provide the external group identity value.
Dataset Id	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>SUBSCRIPTION</b></li> <li>• <b>POLICY</b></li> <li>• <b>EXPOSURE</b></li> <li>• <b>APPLICATION</b></li> </ul>
Amf Region Id	Set the value for this field.
Network Instance Format	Select the encoding format for the network instance: string or label-list.
Target Nf Fqdn	Set the value for this field.
Pgw	Set the value for this field.
Amf Set Id	Set the value for this field.
Smf Serving Area	Set the value for this field.
UE IPv4 Address	Set the UE IPV4 address.
UE Ipv6 Prefix	Set the UE IPV6 address prefix.
<i>SNssai</i>	
SST	Provide the SST (Slice/Service Type) value.
SD	Provide the SD (Slice Differentiator) value.
Mapped SST	Provide the mapped SST (Slice/Service Type) value.

Setting	Description
Mapped SD	Provide the mapped SD (Slice Differentiator) value.
<i>Target Plmn List</i>	
	Select this button to add the a target plmn list to your test configuration.
	Select the <b>Delete Target Plmn</b> button to remove this list from your test configuration.
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
<i>Guami</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
Amf Id	Set the value for this field.
<i>TAI</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
TAC	Provide the Tracking Area Code (TAC) value.
<i>Nsi List</i>	
	Select this button to add the a Nsi list to your test configuration.
	Select this button to remove the Nsi list to your test configuration.

## PCF Npcf interface settings

Npcf is the service-based interface through which a PCF instance makes its services available to other services in a 5G network. The following **Connectivity Settings** enable the necessary Npcf connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.

<b>Connectivity Settings</b>	<b>Description</b>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
TCP Connections	The number of concurrent TCP connections to use for each DUT.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.


## AF configuration settings

The **AF Ranges** panel opens when you select the AF node from the Simulated Nodes panel.

You can perform the following tasks from this panel:

- Add a new AF range to your test configuration.
- Open an AF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

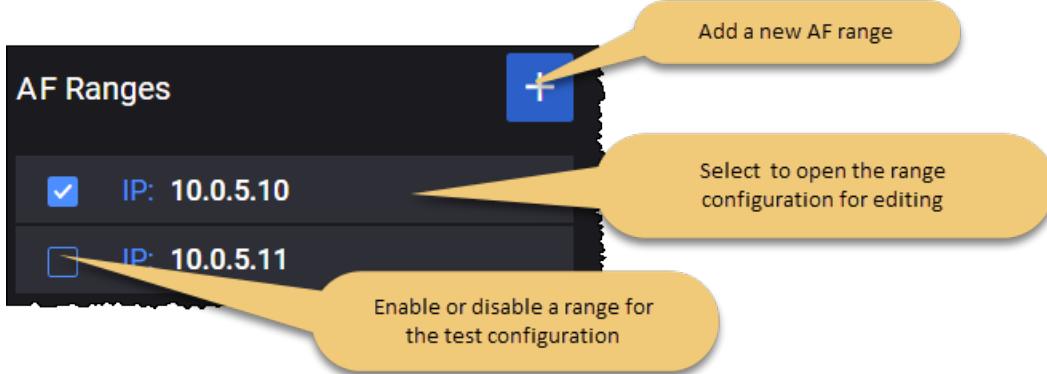

You can add and delete AF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you need to configure for each AF range.

Setting	Description
<i>AF:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Naf Interface Settings:</i>	
Connectivity Settings	Each AF range requires the configuration of Naf interface settings. These settings are described below in the <a href="#">AF Naf interface settings</a> section.
<i>Node Settings:</i>	
Instance ID	Each AF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
Indirect Communication without Delegated Discovery	This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a> .
Target Nodes	This option is available only if <i>Indirect Communication without Delegated Discovery</i> option is enabled. It allows the user to select the target nodes (UDM, AUSF, PCF, NSSF, SMSF) for Indirect Communication via SCP.

<b>Setting</b>	<b>Description</b>
Indirect Communication with Delegated Discovery	This option is available only if SCP is selected in <a href="#">SCP Connection Settings</a> .
Target Nodes for Delegated Discovery	This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. Select the targeted nodes from the drop-down list (UDM, AUSF, PCF, NSSF, SMSF).
Optional Discovery Parameters	<p>A list of optional parameters for certain targets that can be used in discovery requests when using Delegated Discovery.</p> <p>This option is available only if <i>Indirect Communication with Delegated Discovery</i> option is enabled. For more details, refer to <a href="#">Optional Discovery Parameters</a>.</p>

## AF Naf interface settings

Naf is the service-based interface through which a AF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Naf connectivity and service interaction.

<b>Connectivity Settings</b>	<b>Description</b>
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
TCP Connections	The number of concurrent TCP connections to use for each DUT.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
+	Select this button to add a new additional route to your test configuration, if needed.

<b>Connectivity Settings</b>	<b>Description</b>
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

The following table describes the **optional parameters** required for delegated discovery.


<b>Setting</b>	<b>Description</b>
<i>Target Nodes</i>	
	Select this button to add the a target node to your test configuration.
<i>Settings</i>	
Target Node	
	Select the <b>Delete Target Node</b> button to remove this node from your test configuration.
Target Type	Select the target node from the drop-down list.
Discovery Parameter List	
Service Names	Select the service name from the drop-down list.
DNN	Select one of the configured DNNs from the drop-down list.
Hnrf Uri	Set the Uri value for this field.

Setting	Description
SUPI	Set the subscription permanent identifier value.
GPSI	Set the value for this field.
Routing Indicator	Provide the routing indicator value.
External Group Identity	Provide the external group identity value.
Dataset ID	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>SUBSCRIPTION</b></li> <li>• <b>POLICY</b></li> <li>• <b>EXPOSURE</b></li> <li>• <b>APPLICATION</b></li> </ul>
AMF Region ID	Set the value for this field.
Network Instance Format	Select the encoding format for the network instance: <b>string</b> or <b>label-list</b> .
Target Nf Fqdn	Set the value for this field.
PGW	Set the value for this field.
Amf Set ID	Set the value for this field.
SMF Serving Area	Set the value for this field.
UE IPv4 Address	Set the UE IPV4 address.
UE Ipv6 Prefix	Set the UE IPV6 address prefix.
<i>SNssai</i>	
SST	Provide the SST (Slice/Service Type) value.
SD	Provide the SD (Slice Differentiator) value.
Mapped SST	Provide the mapped SST (Slice/Service Type) value.
Mapped SD	Provide the mapped SD (Slice Differentiator) value.
<i>Target Plmn List</i>	
	Select this button to add the a target plmn list to your test configuration.
	Select the <b>Delete Target Plmn</b> button to remove this list from your test configuration.

<b>Setting</b>	<b>Description</b>
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
<i>Guami</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
AMF ID	Set the value for this field.
<i>TAI</i>	
PLMN MCC	Provide the PLMN MCC (Mobile Country Code) value.
PLMN MNC	Provide the PLMN MNC (Mobile Network Code) value.
TAC	Provide the Tracking Area Code (TAC) value.
<i>Nsi List</i>	
	Select this button to add the a Nsi list to your test configuration.
	Select this button to remove the Nsi list to your test configuration.

## SBA Tester Remote SBA Nodes

The **Remote SBA Nodes** panel opens when you select the SBA Tester from the network topology window.

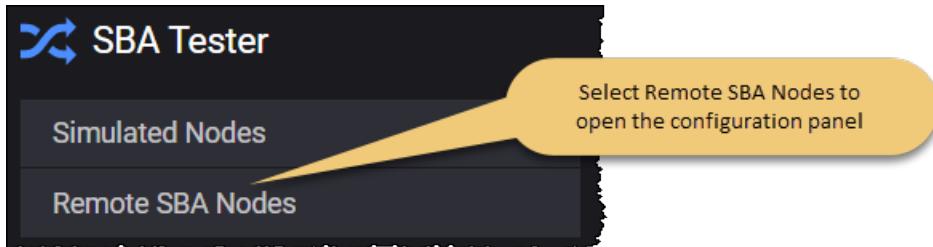

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

### Discovery Settings

This section is available only when the **Peer NRF** is set to an IP address.

Setting	Description
Select Node Type for Discovery	<p>This option allows the user to select which node should be discovered by the SBA Tester.</p> <p>Select the node (or nodes) from the drop-down list.</p> <p>Available options: <b>AUSF, CHF, NSSF, PCF, SMSF and UDM</b>.</p>

### SCP Connection Settings

Setting	Description
Peer SCP	Select the IP address of the SCP node used as next hop.
Protocol	The protocol to use for communications. It can be either HTTP or HTTPS.

<b>Setting</b>	<b>Description</b>
Port	The port number to use for communications. The default is port 80, but you can choose a different port number.

# SBA Tester Remote Nodes

This section describes the configuration of the SBA Tester remote nodes.

<b>AUSF configuration settings .....</b>	<b>607</b>
AUSF Ranges panel .....	608
AUSF Range panel .....	608
AUSF node settings .....	609
AUSF Nauf interface settings .....	610
AUSF remote SBA nodes .....	611
<b>CHF configuration settings .....</b>	<b>613</b>
CHF Ranges panel .....	613
CHF Range panel .....	614
CHF node settings .....	614
CHF Nchf interface settings .....	615
CHF remote SBA nodes .....	616
<b>NRF configuration settings .....</b>	<b>617</b>
NRF Ranges panel .....	617
NRF Range panel .....	617
NRF node settings .....	618
NRF Nnrf interface settings .....	619
<b>NSSF configuration settings .....</b>	<b>621</b>
NSSF Ranges panel .....	622
NSSF Range panel .....	622
NSSF node settings .....	623
Nnssf Interface Settings .....	624
Remote SBA nodes .....	625
NSSF Restricted NSSAIs .....	626
NSSF Network Slices .....	627
NSSF Configured NSSAI .....	628
<b>PCF configuration settings .....</b>	<b>629</b>
PCF Ranges panel .....	629
PCF Range panel .....	629

PCF node settings .....	630
PCF service area restrictions .....	632
PCF Npcf interface settings .....	633
PCF remote SBA nodes .....	634
<b>SCP configuration settings .....</b>	<b>635</b>
SCP Ranges panel .....	635
SCP Range panel .....	636
SCP Nscp interface settings .....	637
SCP Remote SBA Nodes .....	638
<b>SMSF configuration settings .....</b>	<b>639</b>
SMSF Ranges panel .....	639
SMSF Range panel .....	640
SMSF node settings .....	641
SMSF Nsmsf interface settings .....	641
SMSF Remote SBA Nodes .....	642
<b>UDM configuration settings .....</b>	<b>645</b>
UDM Ranges panel .....	645
UDM Range panel .....	646
UDM node settings .....	647
UDM Nudm interface settings .....	650
UDM remote SBA nodes .....	651
<b>UDR configuration settings .....</b>	<b>652</b>
UDR Ranges panel .....	652
UDR Range panel .....	653
UDR Nudr interface settings .....	655
UDR remote SBA nodes .....	656

## AUSF configuration settings



Authentication Server Function (AUSF) is the 5G core network service that handles authentication requests for 3GPP access and non-3GPP access networks. The AUSF serves as the termination point of user plane (UP) security, while providing the necessary authentication and authorization processes. It makes its services available to other network functions through the Nausf service-based interface. Multiple instances of AUSF may be deployed, with each instance storing specific data.

The configuration settings are described in the topics listed below.

### Topics:

<b>AUSF Ranges panel</b> .....	<b>608</b>
<b>AUSF Range panel</b> .....	<b>608</b>
<b>AUSF node settings</b> .....	<b>609</b>
<b>AUSF Nausf interface settings</b> .....	<b>610</b>
<b>AUSF remote SBA nodes</b> .....	<b>611</b>


## AUSF Ranges panel

The **AUSF Ranges** panel opens when you select the AUSF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new AUSF range to your test configuration.
- Open a AUSF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

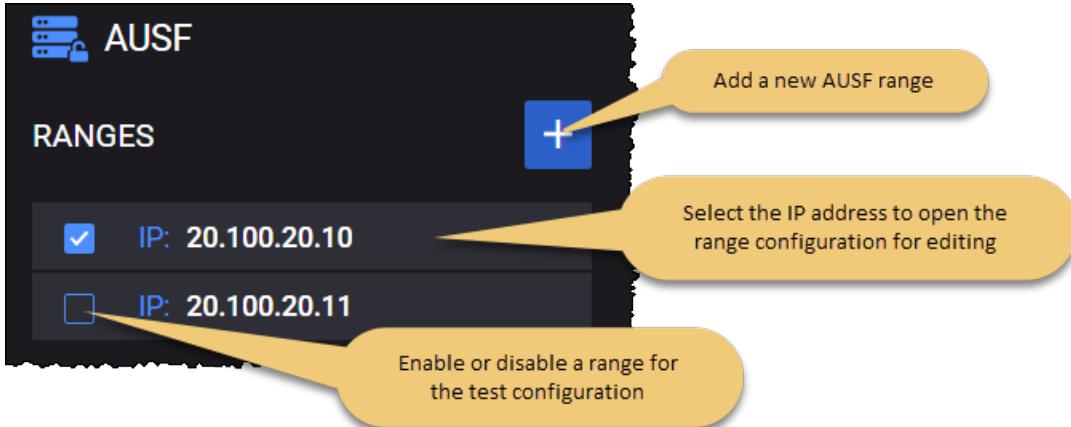

## AUSF Range panel

You add and select AUSF ranges from the AUSF Ranges panel. When you select the IP address of an AUSF , LoadCore opens the **Range** panel, from which you can:

- Delete the AUSF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the AUSF range.

## AUSF range controls and settings

Each AUSF range is identified by a unique IP address. You can add and delete AUSF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each AUSF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your AUSF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the AUSF functionality (if it is selected in the Topology window).

Setting	Description
<i>Range Settings:</i>	
Node Settings	Each AUSF range includes the configuration of an associated set of Node Settings, which are described in <a href="#">AUSF node settings</a> .
Nausf Interface Settings	Each AUSF range requires the configuration of Nausf interface settings, through which a AUSF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">AUSF Nausf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">AUSF remote SBA nodes</a> .

## AUSF node settings

Each AUSF range includes a set of Node Settings plus one or more associated Routing Indicators.

### Node Settings

Each AUSF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	The Instance ID uniquely identifies each AUSF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	<p>Set the mobile country code.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>Set the mobile network code.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## Routing Indicators

The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.

You can add as many Routing Indicators as necessary to support your test objectives.

Setting	Description
	Select the <b>Add Routing Indicator</b> button to add a routing indicator for the AUSF range.
	Select the <b>Delete</b> button to remove the routing indicator from the AUSF range.

## AUSF Nausf interface settings

Nausf is the service-based interface through which a AUSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nausf connectivity and service interaction.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>

Connectivity Settings	Description
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## AUSF remote SBA nodes

### UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

Setting	Description
<i>UDM Connectivity Settings:</i>	
Peer UDM	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>• Select the IP address of the UDM node. This is the destination address of the UDM node to which the packets are sent over the Nudm interface.</li> <li>• Select <b>Discover</b> to invoke the NF discovery service.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Protocol	The protocol to use for Nudm communications. It can be either HTTP or HTTPS.
Port	The UDM port number to use for Nudm communications. The default is port 80, but you can choose a different port number.

Setting	Description
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a>.</p>

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

For several SBA nodes, if SCP is selected in SCP Connection Settings, a new option will be available:

- **Indirect Communication without Delegated Discovery**

If Indirect Communication without Delegated Discovery option is enabled for one or more nodes from Remote SBA Nodes, then only the messages for the interface on which this option is enabled will be forwarded to the SCP.

## CHF configuration settings



The Charging Function (CHF) allows charging services to be offered to authorized network functions. Policy and Charging Control plays a very critical role in the 5G ecosystem. It provides control and transparency over the consumption of Network resources during real-time service delivery.

The PCF (Policy Charging Function) governs the Control plane functions via Policy rules defined and User plane functions via Policy enforcement. It works very closely with CHF (Charging Function) for Usage Monitoring.

In the SBA test topology, the charging function is used to test PCF. As a result, PCF must act as the device under test (to set the PCF as a DUT refer to [PCF range controls and settings](#)).

The configuration settings are described in the topics listed below.

<b>CHF Ranges panel</b>	<b>613</b>
<b>CHF Range panel</b>	<b>614</b>
<b>CHF node settings</b>	<b>614</b>
<b>CHF Nchf interface settings</b>	<b>615</b>
<b>CHF remote SBA nodes</b>	<b>616</b>

**Topics:**


### CHF Ranges panel

The **CHF Ranges** panel opens when you select the CHF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new CHF range to your test configuration.
- Open a CHF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

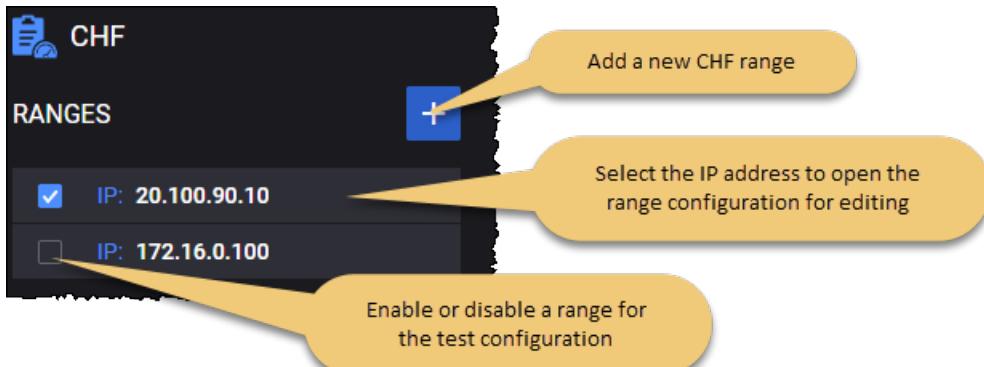

## CHF Range panel

You add and select CHF ranges from the CHF Ranges panel. When you select the IP address of an CHF, LoadCore opens the **Range** panel, from which you can:

- Delete the CHF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the CHF range.

### CHF range controls and settings

Each CHF range is identified by a unique IP address. You can add and delete CHF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each CHF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your CHF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the CHF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each CHF range the configuration of an associated set of Node Settings, which are described in <a href="#">CHF node settings</a> .
Nchf Interface Settings	Each CHF range requires the configuration of Nchf interface settings, through which a CHF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">CHF Nchf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">CHF remote SBA nodes</a> .

### CHF node settings

Each CHF range includes a set of Node Settings.

#### Node Settings

Each CHF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	The Instance ID uniquely identifies each CHF instance. You can accept the value provided by LoadCore or overwrite it with your own value.

Setting	Description
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## CHF Nchf interface settings

Nchf is the service-based interface through which a CHF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nchf connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer</i>

<b>Connectivity Settings</b>	<b>Description</b>
	<i>VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## CHF remote SBA nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

### SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

## NRF configuration settings



Network Repository Function (NRF) is the 5G core network service that allows every network function to discover the services offered by other network functions. It supports the service discovery function by maintaining the set of NF profiles and the set of available NF instances. It makes its services available to other network functions through the Nnrf service-based interface. Multiple instances of NRF may be deployed, with each instance storing specific data.

### Topics:

<b>NRF Ranges panel</b>	<b>617</b>
<b>NRF Range panel</b>	<b>617</b>
<b>NRF node settings</b>	<b>618</b>
<b>NRF Nnrf interface settings</b>	<b>619</b>


### NRF Ranges panel

The **NRF Ranges** panel opens when you select the NRF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new NRF range to your test configuration.
- Open a NRF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

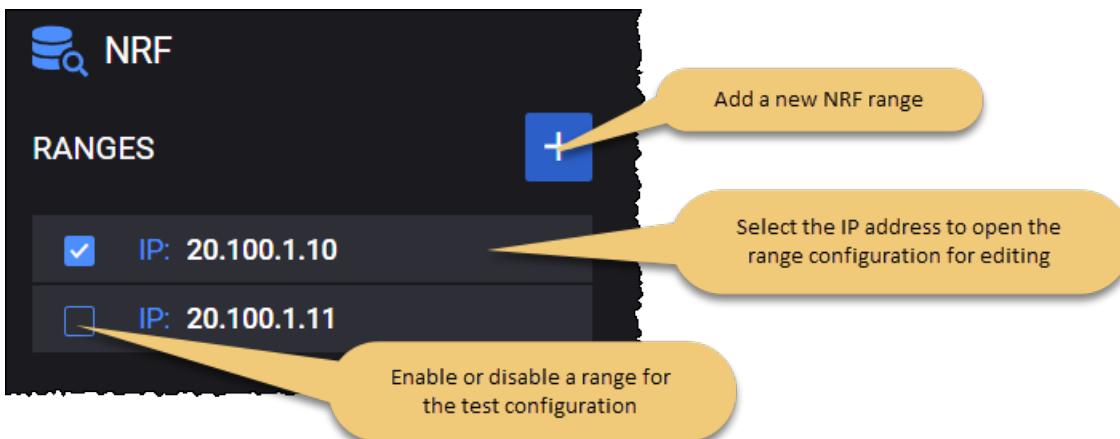

### NRF Range panel

You add and select NRF ranges from the NRF Ranges panel. When you select the IP address of a NRF , LoadCore opens the **Range** panel, from which you can:

- Delete the NRF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the NRF range.

## NRF range controls and settings

Each NRF range is identified by a unique IP address. You can add and delete NRF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each NRF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your NRF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the NRF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each NRF range includes the configuration of an associated set of Node Settings, which are described in <a href="#">NRF node settings</a> .
Nnrf Interface Settings	Each NRF range requires the configuration of Nnrf interface settings, through which a NRF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">NRF Nnrf interface settings</a> .

## NRF node settings

Each NRF range includes a set of Node Settings.

### Node Settings

Each NRF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple NRF instances may be deployed in the 5G network. Each NRF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
MCC	Set the mobile country code. <b>About PLMN MCC ...</b> A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001. The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the

Setting	Description
	country of domicile of the mobile subscriber.
MNC	<p>Set the mobile network code.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Heartbeat Interval(s)	Time in seconds expected between 2 consecutive heartbeat messages from an NF Instance to the NRF.

## NRF Nnrf interface settings

Nnrf is the service-based interface through which a NRF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nnrf connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>

<b>Connectivity Settings</b>	<b>Description</b>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## NSSF configuration settings



The Network Slice Selection Function (NSSF) selects Network Slice Instances (NSIs) based on information provided during UE attach. The NSSF offers services to the AMF (and to NSSFs to different PLMNs) via the Nnssf service based interface. N22 is the reference point between AMF and NSSF, and N31 is the reference point between the NSSF in the visited network and the NSSF in the home network.

The NSSF supports the following functionality:

- Selecting the set of Network Slice instances serving the UE
- Determining the Allowed NSSAI and, if needed, the mapping to the Subscribed S-NSSAIs
- Determining the Configured NSSAI and, if needed, the mapping to the Subscribed S-NSSAIs
- Determining the AMF Set to be used to serve the UE

### Topics:

<b>NSSF Ranges panel</b>	<b>622</b>
<b>NSSF Range panel</b>	<b>622</b>
<b>NSSF node settings</b>	<b>623</b>
<b>Nnssf Interface Settings</b>	<b>624</b>
<b>Remote SBA nodes</b>	<b>625</b>
<b>NSSF Restricted NSSAIs</b>	<b>626</b>
<b>NSSF Network Slices</b>	<b>627</b>
<b>NSSF Configured NSSAI</b>	<b>628</b>


## NSSF Ranges panel

The **NSSF Ranges** panel opens when you select the NSSF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new NSSF range to your test configuration.
- Open an NSSF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

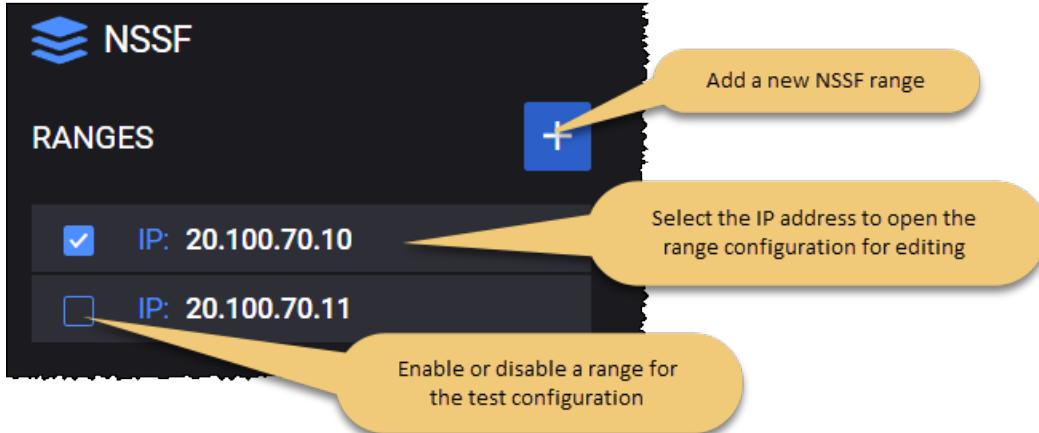

## NSSF Range panel

Selecting an IP address from the NSSF **Ranges** panel provides access to the configuration settings on the **Range** panel. From the NSSF **Range** panel, you can:

- Delete the NSSF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node, Nnssf interface, and remote SBA nodes.
- Select **Network Slicing** to configure restricted NSSAIs, network slices, and configured NSSAIs.

## NSSF range controls and settings

Each NSSF range is identified by a unique IP address. You can add and delete NSSF ranges as necessary to support your test requirements. The following table describes the **Range Settings** that you need to configure for each NSSF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your NSSF is a DUT in this test configuration.

Setting	Description
	When this option is not enabled, the LoadCore will simulate the NSSF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each NSSF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">NSSF node settings</a> .
Nnssf Interface Settings	Each NSSF range requires the configuration of Nnssf interface settings, through which a NSSF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">Nnssf Interface Settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">Remote SBA nodes</a> .
<i>Network Slicing:</i>	
Restricted NSSAIs	These settings are described in <a href="#">NSSF Restricted NSSAIs</a> .
Network Slices	These settings are described in <a href="#">NSSF Network Slices</a> .
Configured NSSAIs	These settings are described in <a href="#">NSSF Configured NSSAI</a> .

## NSSF node settings

Each NSSF range includes a set of Node Settings. Each NSSF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple NSSF instances may be deployed in the 5G network. Each NSSF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	Set the mobile country code. <b>About PLMN MCC ...</b> A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.

Setting	Description
	The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.
PLMN MNC	<p>Set the mobile network code.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## Nnssf Interface Settings

Nnssf is the service-based interface through which an NSSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nnssf connectivity and service interaction.

Connectivity Setting	Description
<i>IP:</i>	
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The length of the IP prefix for this interface.
Gateway Address	The gateway address through which other servers will access this NSSF instance.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.

<b>Connectivity Setting</b>	<b>Description</b>
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>Outer VLAN:</i>	
Outer VLAN	Enable this option if you are using VLANs on this interface.
VLAN ID	The outer VLAN identifier.
<i>Inner VLAN:</i>	
Inner VLAN	Enable this option if you are using VLANs on this interface and you need to configure inner VLANs. The Inner VLAN configuration settings are available only when <i>Outer VLAN</i> is enabled.
VLAN ID	The inner VLAN identifier.

## Remote SBA nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

### SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

## NSSF Restricted NSSAIs

The AMF uses the NSSAI Availability Service to update the S-NSSAIs that the AMF supports on a per-TA basis on the NSSF and to subscribe and notify any status changes, on a per-TA basis, of the S-NSSAIs available per TA (unrestricted) and the restricted S-NSSAI(s) per PLMN in that TA in the serving PLMN of the UE.

You use the **NSSF Restricted NSSAIs** settings to define the Restricted NSSAIs for your test. For each Restricted NSSAI in your configuration, you will configure one or more Restricted S-NSSAIs.

Setting	Description
<i>Restricted NSSAIs:</i>	
	Select the <b>Add a restricted NSSAI</b> button to add a restricted NSSAI to your test configuration.
<i>Restricted NSSAI settings:</i>	
	Select the <b>Delete Restricted NSSAI</b> button to delete this NSSAI from your test configuration.
<i>Tracking Area Identity (TAI):</i>	
MCC	The PLMN MCC that is used in the construction of this TAI.
MNC	The PLMN MNC that is used in the construction of this TAI.
TAC	The PLMN TAC that is used in the construction of this TAI.
<i>Restricted S-NSSAIs:</i>	
	Select the <b>Add NSSAI</b> button to add a Restricted A-NSSAI to your test configuration.
<i>NSSAI Settings:</i>	
	Select the <b>Delete NSSAI</b> button to delete this NSSAI from your test configuration.

Setting	Description
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
Mapped SST	The default Mapped configure Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The default Mapped configured Slice Differentiator (SD) value for this S-NSSAI.

## NSSF Network Slices

You use the **NSSF Network Slices** settings to configure one or more network slices for use in your test. A network slice is a 5G logical network that provides specific network capabilities and network characteristics.

Setting	Description
<i>Network Slices:</i>	
	Select the <b>Add a Network slice</b> button to add a network slice to your test configuration.
<i>Network Slice settings:</i>	
	Select the <b>Delete a Network Slice</b> button to remove this network slice from your test configuration.
Slice Name	Each network slice is uniquely identified by a <i>Slice Name</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
<i>Slice NRF (Network Repository Function):</i>	
Slice NRF host	The identifier (IP address) of the Network Repository Function (NRF) host to be used to select services within a Network Slice instance.
Protocol	The protocol used for communications. You can choose either HTTP or HTTPS.
Port	The port number used for communications. The default is port 80, but you can choose a different port number.
<i>Tracking Areas:</i>	
	Select the <b>Add Tracking Area</b> button to add a Tracking Area (TA) to your test configuration.
<i>Tracking Area Indication (TAI) settings:</i>	

Setting	Description
	Select the <b>Delete TAI</b> button to delete this TAI from your test configuration.
MCC	The Mobile Country Code (MCC) used in the construction of the TAI.
MNC	The Mobile Network Code (MNC) used in the construction of the TAI.
TAC	The Tracking Area Code (TAC) used in the construction of the TAI.

## NSSF Configured NSSAI

You use the **NSSF Configured NSSAI** settings to define one or more Configured NSSAIs for your test configuration. A Configured NSSAI is an NSSAI with which the PLMN may configure a UE, in which case the UE will use it as the default NSSAI.

Setting	Description
<i>Configured NSSAI:</i>	
	Select the <b>Add a Configured NSSAI</b> button to add a Configured NSSAI to your test configuration.
<i>Configured SNSSAI settings:</i>	
	Select the <b>Delete a Configured NSSAI</b> button to remove this NSSAI from your test configuration.
SST	The default Slice/Service Type (SST) value.
SD	The default Slice Differentiator (SD) value for this NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.
Mapped SST	The default Mapped configured Slice/Service Type (SST) value for this NSSAI.
Mapped SD	The default Mapped configured Slice Differentiator (SD) value for this NSSAI.
Slice names	Select from among the available slice names (the slices that you defined using the <b>NSSF Network Slices</b> settings). There is also an option to select all of the slices.

## PCF configuration settings



Policy Control Function (PCF) is the 5G core network component that governs the network behavior by supporting unified policy framework. It provides policy rules to Control Plane function(s). This includes network slicing, roaming, and mobility management. Also, it accesses subscription information for policy decisions taken by the UDR. It makes its services available to other network functions through the Npcf service-based interface. Multiple instances of PCF may be deployed, with each instance storing specific data.

The configuration settings are described in the topics listed below.

### Topics:

<b>PCF Ranges panel</b>	<b>629</b>
<b>PCF Range panel</b>	<b>629</b>
<b>PCF node settings</b>	<b>630</b>
<b>PCF service area restrictions</b>	<b>632</b>
<b>PCF Npcf interface settings</b>	<b>633</b>
<b>PCF remote SBA nodes</b>	<b>634</b>


### PCF Ranges panel

The **PCF Ranges** panel opens when you select the PCF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new PCF range to your test configuration.
- Open a PCF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

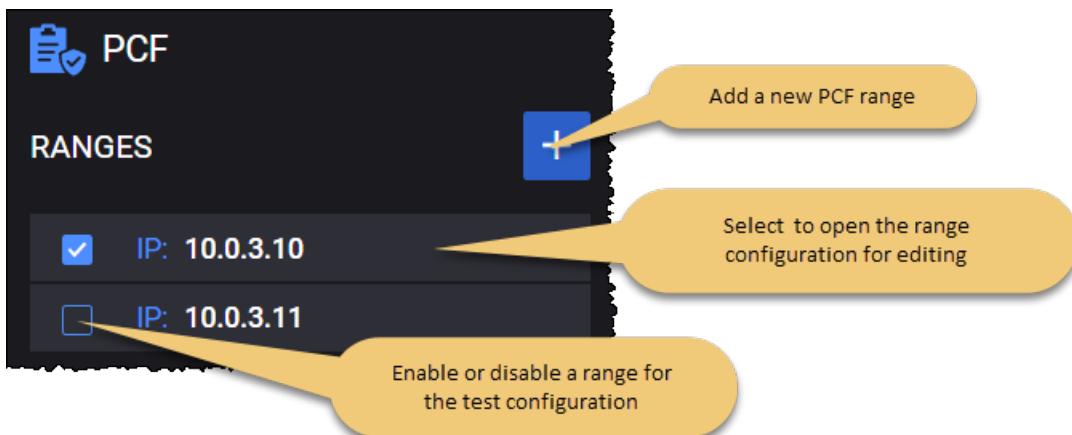

### PCF Range panel

You add and select PCF ranges from the PCF Ranges panel. When you select the IP address of an PCF node, LoadCore opens the **Range** panel, from which you can:

- Delete the PCF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the PCF range.

## PCF range controls and settings

Each PCF range is identified by a unique IP address. You can add and delete PCF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each PCF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your PCF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the PCF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each PCF range includes the configuration of an associated set of Node Settings, which are described in <a href="#">PCF node settings</a> .
Service Area Restrictions	Each PCF range requires the configuration of the service area restrictions. The settings are described in <a href="#">PCF service area restrictions</a> .
Npcf Interface Settings	Each PCF range requires the configuration of Npcf interface settings, through which a PCF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">PCF Npcf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">PCF remote SBA nodes</a> .

## PCF node settings

Each PCF range includes a set of Node Settings.

### Node Settings

Each PCF instance (that is, each range) is identified by the following node settings.

Setting	Description
Instance ID	Multiple PCF instances may be deployed in the 5G network. Each PCF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Name	The name of the PCF range. You can accept the name provided by the LoadCore, or

<b>Setting</b>	<b>Description</b>
	you can replace it with a name of your own choosing.
PLMN MCC	<p>The PLMN MCC for this PCF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this PCF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
RFSP	The value of RAT/Frequency Selection Priority (RFSP) index.
Include Request in Response	Enable this option to include the request in the response message.
Default Charging Method Offline	If needed, enable this option.
Default Charging Method Online	If needed, enable this option.
Retrieve Operator Specific Data	Retrieve Operator Specific Data from UDR during SM Policy Establishment.
Retrieve AM Policy Data	If enabled, the PCF will retrieve AM Policy data from UDR.
Triggers	Request Triggers to which the PCF subscribes. The allowed values are:

Setting	Description
	<ul style="list-style-type: none"> <li>• Location Change (tracking area). The tracking area of the UE has changed.</li> <li>• PRA Change (change of UE presence in PRA). The UE is entering/leaving a Presence Reporting Area.</li> <li>• Service Area Restriction Change</li> <li>• RFSP CHRA Change</li> <li>• Manage UE Policy Message</li> </ul> <p>Multiple values can be selected simultaneously.</p>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## PCF service area restrictions

The policy information sent from the PCF to AMF may contain service area restrictions for the UE. This means that the UE's access to the network resources can be restricted or limited.

The following configuration settings are required in order to define service area restrictions.

Setting	Description
<i>Service Area Restrictions:</i>	
Restriction type	Set the restriction type attribute: <ul style="list-style-type: none"> <li>• Allowed Areas</li> <li>• Not Allowed Areas</li> </ul>
Max No. Of TAs	The maximum number of allowed TAs that can be traversed.

The following configuration settings are required in order to define the tracking area identities.

For each PCF range in your test configuration, you can add and delete AREAS as required to meet your test objectives.

Setting	Description
<i>Areas:</i>	
	Select the <b>Add Area</b> button to add a new restriction area to your configuration.
<i>Area:</i>	
	Select the <b>Delete Area</b> button to remove the restriction area from your configuration.
Area Codes	Set the area code. Location Area Code (LAC) is a fixed length code (two octets) identifying a location area within a PLMN.

Setting	Description
TACS:	
	<p>This represents the Tracking Area Code (TAC) for this eNodeB. Select the <b>Add TAC</b> button to add a new TAC to your configuration.</p> <p>A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).</p>
	Select the <b>Delete</b> button to remove the tracking area code from your configuration.

After configuring it, the Service Area Restriction information consists of:

- either:
  - the maximum number of allowed TAs that can be traversed encoded as Max No. Of TAs attribute, and/or
  - both of :
    - a list of allowed Tracking Area Identities (TAIs) encoded as TACS attributes within the AREA attribute
    - the restriction type attribute set to Allowed Areas
- or:
  - a list of not allowed Tracking Area Identities (TAIs) encoded as TACS attributes within the AREA attribute, and
  - the restriction type attribute set to Not Allowed Areas

## PCF Npcf interface settings

Npcf is the service-based interface through which a PCF instance makes its services available to other services in a 5G network. The following **Connectivity Settings** enable the necessary Npcf connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.

<b>Connectivity Settings</b>	<b>Description</b>
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## PCF remote SBA nodes

The Unified Data Repository (UDR) stores policy data that is used by the PCF.

To connect to the UDR node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>UDR Connectivity Settings:</i>	
Peer UDR	The IP address from your test network to use for Nudr traffic. This is the destination address of the UDR node to which the packets are sent over the Nudr interface.
Protocol	The protocol to use for Nudr communications. It can be either HTTP or HTTPS.

Setting	Description
Port	The UDR port number to use for Nudr communications. The default is port 80, but you can choose a different port number.

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP configuration settings



Service Communication Proxy (SCP) allows the user to use Indirect Communication between SBA nodes. As of now, only model C is supported which uses the `3gpp-Sbi-Target-apiRoot` custom header. Spec version R16 September 2020 is required to use this feature.

The Service Communication Proxy (SCP) enables an important role within the 5G Service Based Architecture (SBA), providing functions ranging from simplifying network topology by applying signaling aggregation and routing, to overload handling, message parameter harmonization and load balancing.

The configuration settings are described in the topics listed below.

### Topics:


<b>SCP Ranges panel</b> .....	<b>635</b>
<b>SCP Range panel</b> .....	<b>636</b>
<b>SCP Nscp interface settings</b> .....	<b>637</b>
<b>SCP Remote SBA Nodes</b> .....	<b>638</b>

### SCP Ranges panel

The **SCP Ranges** panel opens when you select the SCP node from the network topology window. You can perform the following tasks from this panel:

- Add a new SCP range to your test configuration.
- Open a SCP range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

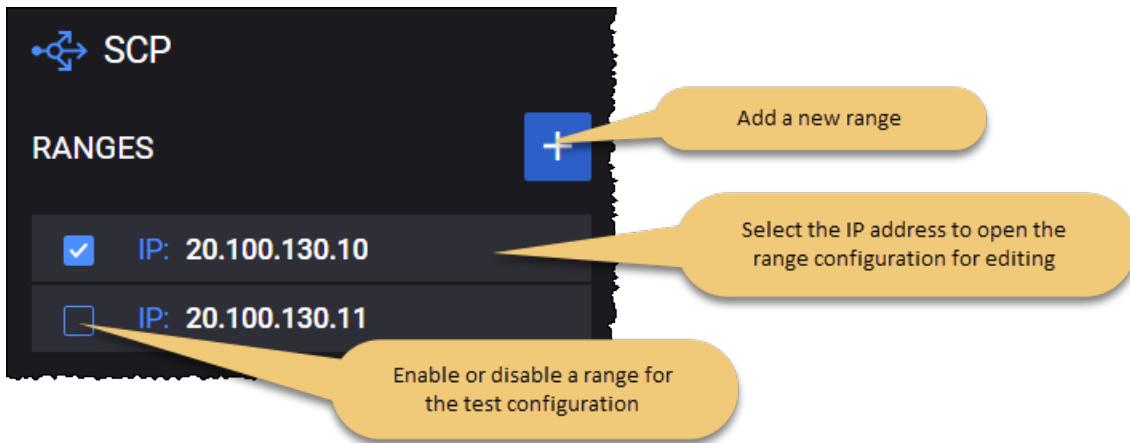

## SCP Range panel

You add and select SCP ranges from the SCP Ranges panel. When you select a SCP's IP address from the **SCP Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected SCP range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the SCP range.

### SCP range controls and settings

Each SCP range is identified by a unique IP address. You can add and delete SCP ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each SCP range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SCP is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SCP functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each SCP range requires the configuration of an associated set of Node Settings, which are described in <a href="#">SCP node settings</a> .
Nscp Interface Settings	Each SCP range requires the configuration of an interface necessary for SCP connectivity and use of indirect communication. These settings are described in <a href="#">SCP Nscp interface settings</a> .
Remote SBA Nodes	The remote SBA node settings are described in <a href="#">SCP remote SBA nodes</a> .

## Node Settings

The following table describes the available SCP Node Settings.

Setting	Description
Instance ID	Each SCP instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Forward to Another SCP	Select this check box to enable SCP Chaining. The SCP will be able to forward the messages it receives to a different SCP.
Enable Delegated Discovery	Select this option to enable delegated discovery.
HTTP Connections	The number of HTTP connections between two nodes.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## SCP Nscp interface settings

The following **Connectivity Settings** enable the necessary SCP connectivity and use of indirect communication.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	The additional routes will use the gateway defined in the IP information below.

<b>Connectivity Settings</b>	<b>Description</b>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SCP Remote SBA Nodes

### Peer SCP Type

<b>Setting</b>	<b>Description</b>
None	When this option is selected, the SCP chaining is not used.
Preset	Select this option in order to use a specific IP for next SCP hop.
Discover	When this option is selected the SCP will send a request to NRF to discover the next hop SCP.

### SCP Connection Settings

**IMPORTANT** These settings are available only when **Peer SCP Type** is set to **Preset**.


<b>Setting</b>	<b>Description</b>
Peer SCP	Select the IP address of the SCP node used as next hop.
Protocol	The protocol to use for communications. It can be either HTTP or HTTPS.
Port	The port number to use for communications. The default is port 80, but you can choose a different port number.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SMSF configuration settings



Short Message Service Function (SMSF) is the network service that supports the transfer of SMS over NAS. In this capacity, the SMSF will conduct subscription checking and perform a relay function between the device and the SMSC (Short Message Service Centre), through interaction with the AMF (Core Access and Mobility Management Function).

The configuration settings are described in the topics listed below.

### Topics:

<b>SMSF Ranges panel</b> .....	<b>639</b>
<b>SMSF Range panel</b> .....	<b>640</b>
<b>SMSF node settings</b> .....	<b>641</b>
<b>SMSF Nsmsf interface settings</b> .....	<b>641</b>
<b>SMSF Remote SBA Nodes</b> .....	<b>642</b>


### SMSF Ranges panel

The **SMSF Ranges** panel opens when you select the SMSF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new SMSF range to your test configuration.
- Open a SMSF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

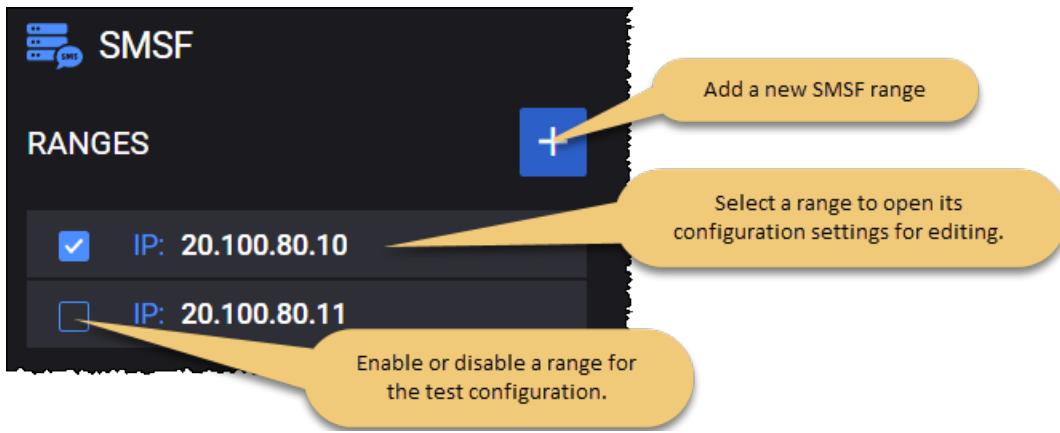

## SMSF Range panel

You add and select SMSF ranges from the SMSF Ranges panel. When you select the IP address of an SMSF, LoadCore opens the **Range** panel, from which you can:

- Delete the selected SMSF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the SMSF range.

### SMSF range controls and settings

Each SMSF range is identified by a unique IP address. You can add and delete SMSF ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each SMSF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your SMSF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SMSF functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node Settings	Each SMSF range the configuration of an associated set of Node Settings, which are described in <a href="#">SMSF node settings</a> .
Nsmsf Interface Settings	Each SMSF range requires the configuration of Nsmsf interface settings, through which a SMSF instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">SMSF Nsmsf interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">SMSF remote SBA nodes</a> .

In order to configure the SMSF node to perform MT-SMS, it is required that on **UE Range Settings > SMS Configurations > SMSF Configuration**, to set SMS Mode to **MT-SMS**. When this is selected, and the node is enabled, the settings from **Mobile Settings** will be translated to the SMSF node as parameters for MT-SMS.

**NOTE** The LoadCore AMF does not support SMS over HTTP2, so an AMF set as DUT is required in order to trigger MO-SMS over HTTP2.

## SMSF node settings

Each SMSF instance (that is, each range) requires the configuration of the following node settings.

Setting	Description
Instance ID	The Instance ID uniquely identifies each SMSF instance. You can accept the value provided by LoadCore or replace it with your own value.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.

## SMSF Nsmsf interface settings

Nsmsf is the service-based interface through which a SMSF instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nsmsf connectivity and service interaction.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>

<b>Connectivity Settings</b>	<b>Description</b>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## SMSF Remote SBA Nodes

### AMF Connection Settings

To connect to the AMF node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>AMF Connectivity Settings:</i>	
Peer AMF type	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>• Select <b>Preset</b> - this option allows manually configuration of a peer AMF, as described <a href="#">here</a>.</li> <li>• Select <b>Discover</b> to invoke the NF discovery service. The SMSF will discover the AMF.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication without Delegated Discovery</a>.</p>

Setting	Description
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer AMF is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a>.</p>

The following table describes the settings required to configure a preset peer AMF:

Setting	Description
<i>AMF Peers:</i>	
	Select this button to add the peer AMF to your test configuration.
<i>AMF Peer:</i>	
	Select this button to delete the peer AMF from your test configuration.
Peer AMF	Select the peer AMF from the drop-down list.
Protocol	The protocol to use for Namf communications. It can be either HTTP or HTTPS.
Port	The AMF port number to use for Namf communications. The default is port 80, but you can choose a different port number.

## UDM Connection Settings

To connect to the UDM node, the following configuration settings are required.

Setting	Description
<i>UDM Connectivity Settings:</i>	
Peer UDM type	<p>Select the peer UDM using either of the following methods:</p> <ul style="list-style-type: none"> <li>Select <b>None</b> - no N21 interface.</li> <li>Select <b>Preset</b> - active N21 interface, this option allows manually configuration of a peer UDM, as described <a href="#">here</a>.</li> <li>Select <b>Discover</b> - active N21 interface, the peer UDM is discovered via NRF.</li> </ul> <p>Refer to <a href="#">NF Discovery service</a> for the steps required to use the discovery service.</p>
Indirect Communication without Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect</a></p>

Setting	Description
	<a href="#">Communication without Delegated Discovery.</a>
Indirect Communication with Delegated Discovery	<p><b>IMPORTANT</b> This option is visible only when Peer UDM is set to <b>Discover</b> and SCP is selected in SCP Connection Settings.</p> <p>Select the option to enable it. For more details, refer to <a href="#">Indirect Communication with Delegated Discovery</a>.</p>

The following table describes the settings required to configure a preset peer UDM:

Setting	Description
<i>UDM Peers:</i>	
	Select this button to add the peer UDM to your test configuration.
<i>UDM Peer:</i>	
	Select this button to delete the peer UDM from your test configuration.
Peer UDM	Select the peer UDM from the drop-down list.
Protocol	The protocol to use for Namf communications. It can be either HTTP or HTTPS.
Port	The AMF port number to use for Namf communications. The default is port 80, but you can choose a different port number.

## NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

Setting	Description
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

## SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

Setting	Description
<i>SCP Connection Settings:</i>	
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

For several SBA nodes, if SCP is selected in SCP Connection Settings, new options will be available:

- **Indirect Communication without Delegated Discovery** or
- **Indirect Communication with Delegated Discovery**

If Indirect Communication with or without Delegated Discovery option is enabled for one or more nodes from Remote SBA Nodes, then only the messages for the interface on which this option is enabled will be forwarded to the SCP. In the case of Indirect Communication with Delegated Discovery, SCP will also perform delegated discovery.

## UDM configuration settings



Unified Data Management (UDM) is the 5G core network service that is responsible for a number of functions, including the generation of AKA authentication credentials, user identification handling, access authorization, subscription management, among others.

It makes its services available to other network functions through the Nudm service-based interface. Multiple instances of UDM may be deployed. A UDM Group ID refers to one or more UDM instances managing a specific set of SUPIs.

The configuration settings are described in the topics listed below.

### Topics:

<b>UDM Ranges panel</b>	<b>645</b>
<b>UDM Range panel</b>	<b>646</b>
<b>UDM node settings</b>	<b>647</b>
<b>UDM Nudm interface settings</b>	<b>650</b>
<b>UDM remote SBA nodes</b>	<b>651</b>


### UDM Ranges panel

The **UDM Ranges** panel opens when you select the UDM node from the network topology window.

You can perform the following tasks from this panel:

- Add a new UDM range to your test configuration.
- Open a UDM range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

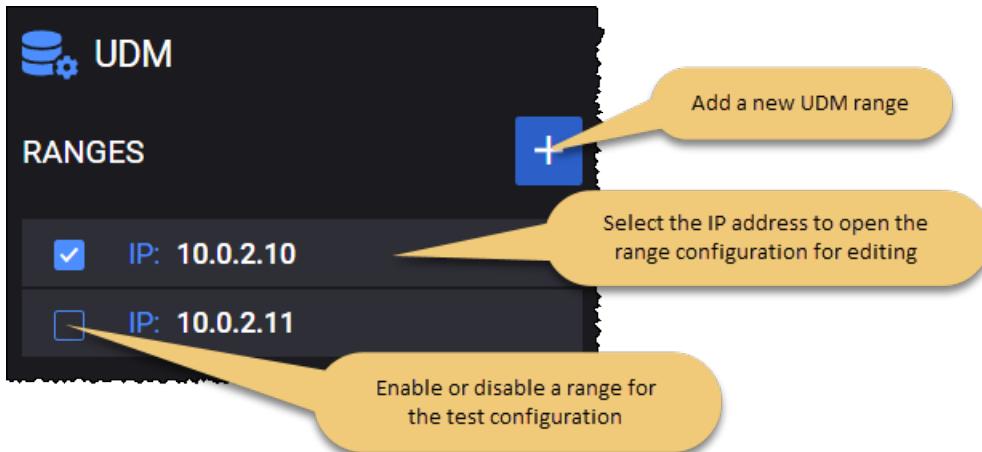

## UDM Range panel

You add and select UDM ranges from the UDM Ranges panel. When you select the IP address of a UDM, LoadCore opens the **Range** panel, from which you can:

- Delete the UDM range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the UDM range.

## UDM range controls and settings

Each UDM range is identified by a unique IP address. You can add and delete UDM ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each UDM range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your UDM is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the UDM functionality (if it is selected in the Topology window).
<i>Range Settings:</i>	
Node	Each UDM range has the configuration of an associated set of Node Settings, which are

Setting	Description
Settings	described in <a href="#">UDM node settings</a> .
Nudm Interface Settings	Each UDM range requires the configuration of Nudm interface settings, through which a UDM instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">UDM Nudm interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">UDM remote SBA nodes</a> .

## UDM node settings

Each UDM range includes a set of Node Settings plus one or more associated Routing Indicators.

### Node Settings

Each UDM instance (that is, each range) is identified by the following node settings.

Setting	Description
Instance ID	The Instance ID uniquely identifies each UDM instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Home Network Private key	<p>The Home Network Private key that is used for subscriber privacy.</p> <p>The Subscription identifier de-concealing function (SIDF)—which is a service provided by the UDM—is responsible for de-concealing the SUPI from the SUCI. When the Home Network Public Key is used for encryption of the SUPI, the SIDF uses the Home Network Private Key that is securely stored in the home operator's network to decrypt the SUCI. The de-concealment takes place at the UDM. Access rights to the SIDF are defined such that only a network element of the home network is allowed to request SIDF.</p> <p>Note that one UDM can comprise several UDM instances. The Routing Indicator in the SUCI can be used to identify the specific UDM instance that is capable of serving a subscriber.</p> <p><b>About SUPI and SUCI ...</b></p> <p>The Subscription Permanent Identifier (SUPI) is a globally unique identifier allocated to each subscriber in the 5G System. The Subscription Concealed Identifier (SUCI) is a privacy-preserving identifier containing the concealed SUPI.</p>
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
PLMN MCC	<p>The PLMN MCC for this UDM range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a</p>

Setting	Description
	<p>five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this UDM range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>

## Routing Indicators

The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.

You can add as many Routing Indicators as necessary to support your test objectives.

Setting	Description
	Select the <b>Add Routing Indicator</b> button to add a Routing Indicator for the UDM range.
	Select the <b>Delete</b> button to remove the routing indicator from the UDM range.

## SDM Notifications

The UDM is a database-like Network Function(NF). It keeps information about the subscribers (users). The information about a subscriber is organized as a collection of resources corresponding to that user (*nssai*, *am-data*, *sm-data*, *smf-select-data* etc). A resource is a JSON object, containing sub-objects identified by a path.

When other Network Functions (NFs) register to UDM for a certain subscriber, they get some of those resources (for that specific user) and also ask the UDM to subscribe for changes to those resources (so for example, through a subscription operation, the AMF requests from the UDM a notification when *am-data* resource for this user changes).

Basically, through the SDM Notifications, UDM is delivering notifications to other interested NFs about changes to its resources.

The SDM Notifications defines a list of resources and the changes that occur for each of those resources

You can add as many SDM notification subscriptions as necessary to support your test objectives. To do this, select the **Add UDM Triggered SDM Notifications Table** button.

The following table describes the parameters that you need to configure for each SDM subscription.

Setting	Description
<i>SDM Subscription:</i>	
	Select the <b>Delete Subscription</b> button to remove this subscription from the SDM notifications.
Resource name	This represents the subscribed resource (entered as a string) for which notifications are triggered. Valid strings currently supported: <i>nssai, am-data, smf-select-data, sm-data, ue-context-in-smf-data</i> .
Notification trigger time (ms)	This represents the time interval (in milliseconds) from NF subscription (for that resource) after which that NF will start receiving notifications from UDM.
Change resource continuously	Select this option to apply the changes from the list continuously(start over again when reaching the end of the list). If this option is not selected, the notifications for the resource will stop when the last change in the list will happen, otherwise they will start from the beginning again.
<i>Resource changes:</i>	
	Select the <b>Add change</b> button to add new list of changes that will happen over time to the defined resource.
<i>Change Item</i>	
	Select the <b>Delete Change Item</b> to remove this list from your configuration.
Change type	This represents the nature of the change: <ul style="list-style-type: none"> <li>• <b>Add</b> - new content was added to the resource.</li> <li>• <b>Change</b> - a certain content has changed.</li> <li>• <b>Remove</b> - a certain content was removed.</li> <li>• <b>Move</b> - a certain content has been moved from one place to another.</li> </ul>
Path in resource to change	The resource is a JSON object and it is comprised of multiple JSON sub-objects. This path describes which sub-object will be the target of the change (if left empty, it designated the resource object).
New JSON value	This represents the new JSON text value for the object identifier by the <a href="#">Path in resource to change</a> . <div style="background-color: #0070C0; color: white; padding: 2px 10px; margin-left: 10px;"><b>IMPORTANT</b></div> This field must have a valid JSON text value only if the <a href="#">Change type</a> is set to <b>Add</b> or <b>Replace</b> .

Setting	Description
Trigger after previous notification change (ms)	This represents the time interval starting from the previous change notification, after which this notification should be delivered. The first notification would not use this value, it will be delivered using the value of <a href="#">Notification Trigger timer</a> .
From source path (used for Move change type)	<p><b>NOTE</b> This parameter is available only when <a href="#">Change type</a> is set to <b>Move</b>.</p> <p>This represents the original path of the JSON object that has been moved.</p>

## UDM Nudm interface settings

Nudm is the service-based interface through which a UDM instance makes its services available to other services in a 5G network.

The following **Connectivity Settings** enable the necessary Nudm connectivity and service interaction.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.

<b>Connectivity Settings</b>	<b>Description</b>
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## UDM remote SBA nodes

### NRF Connection Settings

To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

### SCP Connection Settings

To connect to the Service Communication Proxy (SCP) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>SCP Connection Settings:</i>	

Setting	Description
Peer SCP	Select either the IP address of an SCP from your test network or <i>None</i> if you are not using an SCP in your test configuration. The IP address is the destination address of the SCP node to which the packets are sent the packets are sent for Indirect Communication.
Protocol	The protocol to use for communication via SCP. It can be either HTTP or HTTPS.
Port	The port number to use for communication via SCP. The default is port 80, but you can choose a different port number.

## UDR configuration settings



Unified Data Repository (UDR) is the 5G core network service that maintains a repository of data that can be used by a number of 5G network functions. For example, the UDR may store subscription data that is used by the UDM and policy data that is used by the PCF. It makes its services available to other network functions through the Nudr service-based interface. Multiple instances of UDR may be deployed, with each instance storing specific data or providing service to a specific set of network function (NF) consumers.

The configuration settings are described in the topics listed below.

### Topics:


<b>UDR Ranges panel</b> .....	<b>652</b>
<b>UDR Range panel</b> .....	<b>653</b>
<b>UDR Nudr interface settings</b> .....	<b>655</b>
<b>UDR remote SBA nodes</b> .....	<b>656</b>

### UDR Ranges panel

The **UDR Ranges** panel opens when you select the UDR node from the network topology window. You can perform the following tasks from this panel:

- Add a new UDR range to your test configuration.
- Open a UDR range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

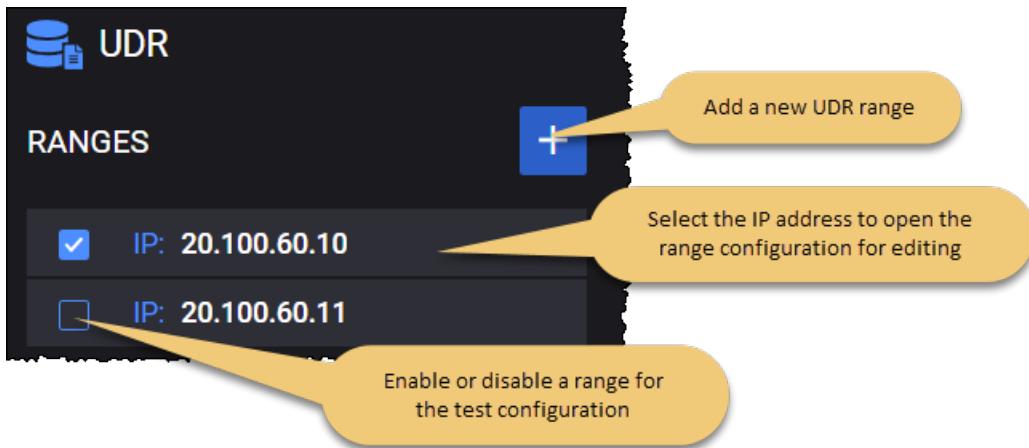

If multiple agents are assigned to the UDR node, the **Distribution Mode** parameter is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the UDR node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range 3 on agent1 and agent2.
- **Round Robin Ranges on Agents** - influences the way configuration is distributed in case of multiple agents assigned on the UDR node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1, range2 on agent2, range3 on agent1.

## UDR Range panel

You add and select UDR ranges from the UDR Ranges panel. When you select a UDR's IP address from the **UDR Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the selected UDR range from the test configuration.
- Designate the range as a **Device Under Test**.
- Select **Range Settings** to configure the node and connectivity settings for the UDR range.

## UDR range controls and settings

Each UDR range is identified by a unique IP address. You can add and delete UDR ranges as necessary to support your test objectives. The following table describes the available **Range** configuration options for each UDR range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your UDR is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the UDR functionality (if it is selected in the Topology window).

Setting	Description
<i>Range Settings:</i>	
Node Settings	Each UDR range requires the configuration of an associated set of Node Settings, which are described in <a href="#">UDR node settings</a> .
Nudr Interface Settings	Each UDR range requires the configuration of Nudr interface settings, through which a UDR instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">UDR Nudr interface settings</a> .
Remote SBA Nodes	These settings are described in <a href="#">UDR remote SBA nodes</a> .

## Node Settings

The following table describes the available UDR Node Settings.

Setting	Description
Instance ID	<p>Multiple UDR instances may be deployed in the 5G network, with each one storing specific data or providing service to a specific set of NF consumers.</p> <p>Each UDR instance is uniquely identified by an <i>Instance ID</i>. You can accept the value provided by LoadCore or overwrite it with your own value.</p>
Name	The name of the UDR range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
HTTP2 User Agent	User-Agent header in HTTP2 requests initiated from this node. For more details, see 3GPP TS 29.500, Table 5.2.2.2-1.
PLMN MCC	<p>Set the mobile country code.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>Set the mobile network code.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>

## UDR Nudr interface settings

Nudr is the service-based interface through which a UDR instance makes its services available to other services in a 5G network. The following **Connectivity Settings** enable the necessary Nudr connectivity and service interaction.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Protocol	The protocol to use for this interface communications. You can choose either HTTP or HTTPS.
Port	The TCP port number to use for this interface communications. The default is port 80, but you can choose a different port number.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner</i></p>

<b>Connectivity Settings</b>	<b>Description</b>
	<i>VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

## UDR remote SBA nodes


To connect to the Network Repository Function (NRF) node, the following configuration settings are required.

<b>Setting</b>	<b>Description</b>
<i>NRF Connection Settings:</i>	
Peer NRF	Select either the IP address of an NRF from your test network or <i>None</i> if you are not using an NRF in your test configuration. The IP address is the destination address of the NRF node to which the packets are sent over the Nnrf interface.
Protocol	The protocol to use for Nnrf communications. It can be either HTTP or HTTPS.
Port	The port number to use for Nnrf communications. The default is port 80, but you can choose a different port number.

*CHAPTER 8*

## **UPF Isolation tests: configuration settings**

This section provides descriptions of the configuration settings that are specific to the **Wireless UPF Isolation** test type:



In an UPF Isolation test topology, the DUT is UPF and LoadCore simulates traffic on the N3, N4, and N6 interfaces. You configure the simulated UEs, NG-RAN, SMF, and DN as required by your test requirements.

**Topics:**

<b>Global Settings panel</b>	<b>659</b>
DNS Settings	660
Advanced Settings	660
Impairment	662
QoS Flows panel	663
QoS Flow configuration settings	663
Reporting Settings	665
<b>UE configuration settings</b>	<b>666</b>
UE Ranges panel	667
UE Range panel	668
UE range settings	669
Objectives	675
Control Plane Objective	675
User Plane Objectives	688
<b>RAN configuration settings</b>	<b>736</b>
RAN Ranges panel	737
RAN Range settings	737
RAN N3 interface settings	738


Passthrough interface settings .....	739
<b>SMF configuration settings .....</b>	<b>740</b>
SMF Ranges panel .....	741
SMF Range settings .....	741
SMF N4 interface settings .....	742
SMF Uplink Paths .....	744
<b>UPF configuration settings .....</b>	<b>746</b>
UPF Ranges panel .....	747
UPF Range panel .....	747
UPF N3 interface settings .....	748
UPF N4 interface settings .....	750
UPF N6 interface settings .....	751
UPF N9 interface settings .....	752
UPF N4u interface settings .....	754
<b>DN configuration settings .....</b>	<b>756</b>
DN Ranges panel .....	756
DN Range panel .....	757
DN N6 Interface settings .....	758
DN routes settings .....	759
DN User Plane .....	760
DN Stateless UDP Traffic .....	761
DN Data Traffic .....	762
DN Voice Traffic .....	765
DN Video OTT Traffic .....	777
DN DNS Server Traffic .....	779
DN Predefined Applications Traffic .....	782
DN Capture Replay .....	782
DN Synthetic .....	784
DN UDG .....	786
DN Throttling settings .....	788

## Global Settings panel

The Global Settings include parameters that either have overall applicability to the test or can be used (by reference) in the configurations of other nodes in the test topology.

To access the Global Settings:

1. Select the **Test Overview** tab:

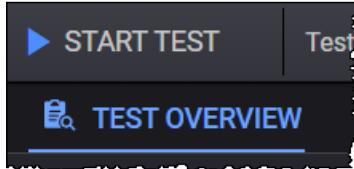


2. Click **Expand** if the Test Overview section is collapsed.
3. Click the Global Settings' **Edit** button:



LoadCore opens the **Global Settings** panel from which you can:

- Select the technical specification version from the drop-down list:

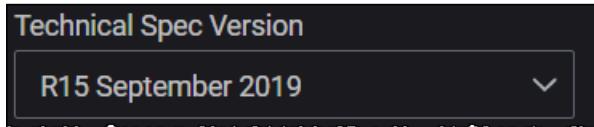

- Access and configure the following settings:

**DNS Settings** ..... **660**

**Advanced Settings** ..... **660**

**Impairment** ..... **662**

**QoS Flows panel** ..... **663**

    QoS Flow configuration settings ..... 663

    Reporting Settings ..... 665

## DNS Settings

The following table describes the settings required for the DNS Resolver configuration.

Setting	Description
<i>DNS Settings:</i>	
Cache Timeout (ms)	The amount of time (in miliseconds) the local DNS stores the address information.
<i>DNS Name Servers:</i>	
	Select the <b>Add DNS Name Server</b> button to add a new DNS server to your test configuration. Set the IP address of the DNS server.
	Select the <b>Delete</b> button to remove the DNS server from your test configuration.

## Advanced Settings

The following table describes the settings required to enable user plane and control plane advanced statistics and the ones needed for GTPU tunnel traffic.

Setting	Description
Overwrite Capture Size for IxStack	Enable this option to overwrite the capture size for IxStack.
Custom Capture Size for IxStack	Set the custom value of the capture size for IxStack.
Enable Capture Circular Buffer for IxStack	Select this option to enable circular buffer capture for IxStack.
Enable Capture On Loopback Interface	Select this option to enable packet capture on the loopback interface.
Enable Control Plane Advanced Stats	By default, these measurements and statistics are disabled. Select this option to enable control plane latency statistics.
Enable User	Select an option from the drill-down list for the user plane advanced statistics:

<b>Setting</b>	<b>Description</b>
Plane Advanced Stats	<ul style="list-style-type: none"> <li>• <b>None</b> - no advanced statistics enabled.</li> <li>• <b>One Way Delay</b> - the time spent by the packet on the network from the moment it is sent until it is received.</li> <li>• <b>Delay Variation Jitter</b> - the per polling interval average delay variation jitter value calculated for all packets.</li> </ul>
Automated Polling Interval	Enabled by default. The statistics are retrieved based on a predefined polling interval.
Custom Polling Interval (sec)	<p>This option becomes available only when Automated Polling Interval option is disabled.</p> <p>It allows you to create a custom polling interval.</p>
Log Level	<p>Select one of the options:</p> <ul style="list-style-type: none"> <li>• <b>Info</b> - Designates informational messages that highlight the progress of the application at coarse-grained level.</li> <li>• <b>Debug</b> - Designates fine-grained informational events that are most useful to debug the application.</li> </ul>
Log Tags	<p>Select one or more tags from the drop-down list.</p> <p>Log Tags are used to collect specific information in the logs; they work with Debug and with Info log levels. Rather than allowing the logs to collect information about everything, you can use Log Tags to collect specific information—such as SCTP or HTTP messages—during the test. This limits the amount of information that is collected, making it easier for you to extract the data that you need.</p>
Ignore Offline Agents At Runtime	When this option is enabled, if an agent loses connection to the Middleware during a test, the test will not stop but continue without that agent.

The following table describes the settings required on the Traffic Settings pane.

<b>Setting</b>	<b>Description</b>
<i>GTPU Source Port:</i>	
Start	Indicates the source port for the GTPU tunnel. By default, the registered UDP port for GTPU is 2152.
Count	Set the count value.
<i>Reserved cores for RTP Tx:</i>	
Enable RTP	Select this option to enable RTP.

Setting	Description
Cores	The number of cores reserved for RTP transmission.
<i>Traffic Control</i>	
Traffic Control Port	Set the traffic control port. By default, it is set to 44556.
Enable Jumbo Frame	<p>Enable this option if your test traffic requires the use of jumbo frames (Ethernet frames with more than 1500 bytes of payload).</p> <p>When you enable this option, you can then configure any of the MTU parameters in the test to any valid jumbo frame size (up to 9,000 bytes).</p>
Enable IxStack L4 Port Randomization	Select this option to enable IxStack L4 Port Randomization.
Enable UDP Port Recycling	Select this option to enable IxStack UDP Port Recycling.
Enable TCP Port Recycling	Select this option to enable IxStack TCP Port Recycling.
Enable ICMP Responses	Select this option to enable it. This will permit requests and responses to ICMP packets on subscribers addresses (it will have a significant memory impact on server nodes - AMF, UPF).

## Impairment

The following table describes the settings required to define the impairment profile.

Setting	Description
<i>Impairment Profiles:</i>	
	Select the <b>Add impairment profile</b> button to add a new profile to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete impairment profile</b> button to remove the profile from your test configuration.
Name	Each impairment profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Action Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• Custom script</li> <li>• PFCP-drop message</li> </ul>


Setting	Description
Script file	This parameter is available only when <b>Action Type</b> is set to <b>Custom script</b> . It allows you to add a custom script, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## QoS Flows panel

The 5G QoS model is based on QoS Flows. A 5G QoS Flow is the finest level of granularity for QoS forwarding treatment in the 5G System. All traffic mapped to the same 5G QoS Flow receives the same forwarding treatment.

### Accessing the configuration settings:

To access the QoS Flows configuration settings, select **QoS Flows** from the the **Global Settings** panel. LoadCore opens the **QoS Flows** panel from which you can add and edit QoS Flow definitions:

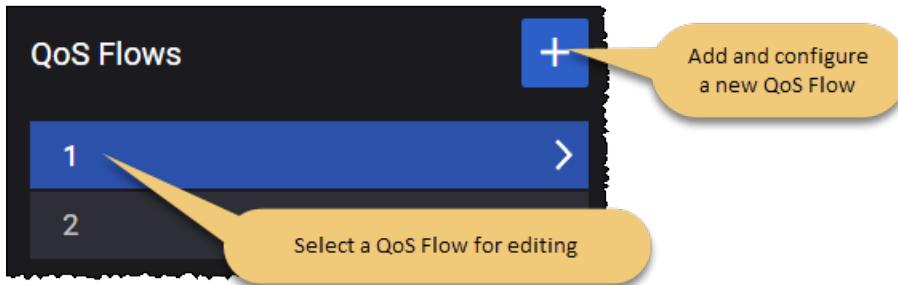

These QoS Flow configurations become immediately available for selection by other nodes in the test configuration. The properties for a QoS Flow are organized into the following groups of configuration settings:

**QoS Flow configuration settings** ..... **663**

**Reporting Settings** ..... **665**

## QoS Flow configuration settings

You create and manage QoS Flows for your test network in the **Global Settings** section of the **Test Overview**. The **QoS Flow** panel contains the configuration settings for an individual QoS Flow. In this panel, you can:

- Click the **Delete QoS Flow** button to delete the QoS Flow configuration.
- Edit the QoS Flow settings.

The **QoS Flow** settings are described in the following table.

Setting	Description
Is Default	Enable this option if this QoS Flow is associated with the default QoS rule. In the 5G System, a default QoS rule is required for each UE session, and this rule will be associated with a QoS Flow. If this option is not selected, LoadCore displays the <b>SDF</b> settings (described below).

Setting	Description
QFI	Enter a QoS Flow Identifier (QFI) for this QoS Flow. This identifier will be used to uniquely identify a QoS Flow in the 5G System. All User Plane traffic with the same QFI within a PDU Session receives the same traffic forwarding treatment. The QFI is carried in an encapsulation header on the N3 and N9 reference points.
Application ID	The Application ID set in PDI. This option will be present in the PDI (for each direction, UL and DL) of each flow for which the option was configured.

### SDF settings

These Service Data Flow settings are available for any QoS Flow that is not selected as the default flow (the *Is Default* option is disabled). For these non-default flows, you need to configure the Maximum Bit Rate and Guaranteed Bit Rate values.

Setting	Description
SDF string	<p>Enter an SDF string that describes the packet filter. For example:</p> <pre>permit out 17 from 22.22.22.22 11111 to \$ueip\$ 11100</pre> <p>In this example:</p> <ul style="list-style-type: none"> <li>• the Action is 'permit'</li> <li>• the Direction is 'out'</li> <li>• the Protocol Number is 17 (UDP)</li> <li>• the Source IP address is 22.22.22.22</li> <li>• the Source Port is 11111</li> <li>• The Destination IP is \$ueip\$ (a format specifier for UE IP address)</li> <li>• The Destination Port is 11100.</li> </ul> <p>The SDF String option is available for any QoS flow, including the default flow (s).</p> <p>The SDF syntax details are described in TS 29.212, section 5.4.2.</p>

#### MBR

Uplink (kbps)	The MBR uplink bitrate.
Downlink (kbps)	The MBR downlink bitrate.

#### GBR

Uplink (kbps)	The GBR uplink bitrate.
Downlink (kbps)	The GBR downlink bitrate.

### Activate predefined rules

This option is used to add a predefined rule on a per flow basis.

**NOTE**

For backwards compatibility, rules can still be activated on a per UE Range basis ([Activate Predefined Rules](#)). If rules are configured on both UE range and QoS Flow, the QoS Flow settings will take precedence.

The **Active Predefined Rules** settings are described in the following table.

<i>Active Predefined Rules:</i>	
	Select the <b>Add Activate Predefined Rules</b> button to add a predefined rule to your test configuration.
	Select the <b>Delete</b> button to remove the redefined rule from your test configuration.

## Reporting Settings

The values that you configure in the QoS Flows **Reporting Settings** populate the Volume Threshold and Volume Quota information elements (IEs) for the selected QoS Flow.

The Volume Threshold and/or Volume Quota IEs may be present in the Create URR grouped IE. Usage Reporting Rules (URRs) contain instructions for creating traffic measurement and reporting. The Volume Threshold IE is included if reporting is required upon reaching a volume threshold. The Volume Quota IE is included if volume-based measurement is used and the CP function needs to provision a Volume Quota in the UP function. Reference: 3GPP TS 29.244.

Setting	Description
<i>Volume Threshold</i>	
Total	The number of octets for the <b>Total Volume</b> field of the Volume Threshold IE.
Uplink	The number of octets for the <b>Uplink Volume</b> field of the Volume Threshold IE.
Downlink	The number of octets for the <b>Downlink Volume</b> field of the Volume Threshold IE.
<i>Volume Quota</i>	
Total	The number of octets for the <b>Total Volume</b> field of the Volume Quota IE.
Uplink	The number of octets for the <b>Uplink Volume</b> field of the Volume Quota IE.
Downlink	The number of octets for the <b>Downlink Volume</b> field of the Volume Quota IE.

# UE configuration settings



You use the User Equipment (UE) configuration settings to define one or more ranges of simulated UEs. Every test requires at least one range of simulated UEs. These settings define properties that are representative of real-world UEs that may access a 5G network, including UE identity, security, network slice selection, among others.

In addition, the UE settings include the configuration of test objectives; these settings direct the traffic performance and UE behavior actions during test execution.

The configuration settings are described in the topics listed below.

## Topics:


<b>UE Ranges panel</b> .....	<b>667</b>
<b>UE Range panel</b> .....	<b>668</b>
UE range settings .....	669
<b>Objectives</b> .....	<b>675</b>
Control Plane Objective .....	675
User Plane Objectives .....	688

## UE Ranges panel

The **UE Ranges** panel opens when you select the UE node from the network topology window. You can perform the following tasks from this panel:

- Add a new UE range to your test configuration.
- Open a UE range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

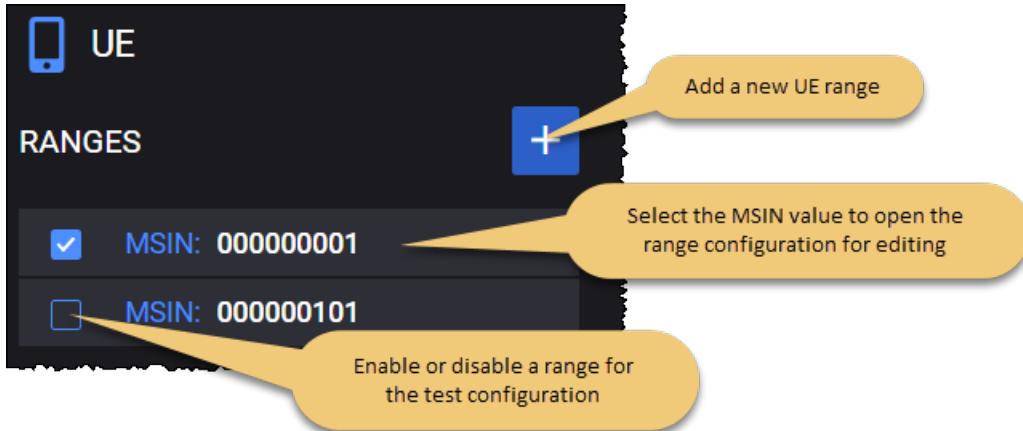

Refer to [UE Range panel](#) for a description of the UE range settings.

If multiple agents are assigned to the UE, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All UE Ranges and RAN Ranges on All Agents** - for example, for a test with 2 agents and 2 UE ranges and 2 RAN ranges, UE range1 and UE range2 and their parent ranges as well as all RAN ranges part of Mobility Path, and Secondary RAN ranges will be distributed to both agent1 and agent2.
- **Round Robin UE Ranges and RAN Ranges per Agent** - for example, if UE range1 is distributed to agent1, parent RAN range as well as all RAN ranges part of the Mobility Path (visited gNB/eNB ranges) and the Secondary RAN ranges will also be distributed on agent1.

## UE Range panel

When you select an IP address from the UE **Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Delete the UE range from the test configuration.
- Configure the *Range Count*.
- Select the *Parent NG-RAN*, *Parent SMF* and *Uplink Path* for the UE range.
- Access the detailed UE configuration settings (Identification, Settings, QoS Config).
- Access the Objectives settings for the range.

### UE range controls and settings

The following table describes the available **Range** configuration options for each UE range.

Setting	Description
<i>Basic range settings:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	Enter the number of simulated UEs required for the range.
Parent NG-RAN	Select the desired NG-RAN from the test configuration. This will be the NG-RAN through which the UEs in the range will access the 5G core network.
Parent SMF	Select the desired parent SMF from the drop-down list.
Uplink Path	Select the uplink path from the drop-down list.
<i>Detailed range settings:</i>	
Identification	Refer to the following topic for descriptions of the UE <b>Identification</b> settings: <a href="#">Identification settings</a> .
Settings	Refer to the following topic for descriptions of the UE <b>Settings</b> settings: <a href="#">Settings</a> .
QoS Config	Refer to the following topic for descriptions of the UE <b>QoS Config</b> settings: <a href="#">QoS Config settings</a> .

### Objectives

Each UE range has its own objectives settings. Refer to [Objectives](#) for detailed descriptions.

## UE range settings

For each range that you add to your test configuration, you configure the settings described in the **Range** panel, plus the settings described below.

### Identification settings

The following table describes the UE Identification settings.

Setting	Description
PDU Type	Select the type of PDU for this session: <ul style="list-style-type: none"> <li>IP</li> <li>Ethernet</li> </ul>
IP Type	Select the type of IP address used in test: <ul style="list-style-type: none"> <li>IPv4</li> <li>IPv6</li> <li>IPv4V6</li> </ul>
<i>Ipv4</i>	<i>This option is available only when IP Type is set to <b>IPv4</b>.</i>
Ipv4	The IPv4 address that has been assigned to your UE range.
IPv4 Increment	The value to use for incrementing the IPv4 addresses of your UE range.
IPv4 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>Ipv6</i>	<i>This option is available only when IP Type is set to <b>IPv6</b>.</i>
Ipv6	The IPv6 address that has been assigned to your UE range.
IPv6 Increment	The value to use for incrementing the IPv6 addresses of your UE range.
IPv6 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>Ipv4V6</i>	<i>This option is available only when IP Type is set to <b>IPv4V6</b>. This allows you to configure both the IPv4 stack and the IPv6 stack.</i>
Ipv4	The IPv4 address that has been assigned to your UE range.
IPv4 Increment	The value to use for incrementing the IPv4 addresses of your UE range.
IPv4 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.

<b>Setting</b>	<b>Description</b>
Ipv6	The IPv6 address that has been assigned to your UE range.
IPv6 Increment	The value to use for incrementing the IPv6 addresses of your UE range.
IPv6 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Include IMSI in UserID IE	Enable this option to include the IMSI in the UserID IE.
PLMN MCC	The MCC that will be assigned to each UE in this range.
PLMN MNC	The MNC that will be assigned to each UE in this range.
MSIN	The MSIN value that will be assigned to the first simulated UE in the range.
MSIN increment	The value to use for incrementing the MSIN values for each of the UEs in the range.
Include MSISDN in UserID IE	Enable this option to include the MSISDN in the UserID IE.
MSISDN	The first Mobile Station ISDN (MSISDN) value for this range.
MSISDN Increment	The value to use for incrementing the MSISDNs in the range.
Include IMEISV in UserID IE	Enable this option to include the IMEI SV in the UserID IE.
IMEI	<p>The IMEI value that will be assigned to the first simulated UE in the range.</p> <p>The International Mobile Equipment Identity (IMEI) is a number used to uniquely identify 3GPP and iDEN mobile phones, as well as some satellite phones. It identifies the origin, model, and serial number of the device. It consists of either 15 digits (14 digits plus one check digit); or 16 digits (14 digits plus two software version digits). GSM networks use the IMEI number to identify valid devices, and can also use the number to prevent a stolen phone from accessing the network.</p> <p>When it includes the software version digits, it is referred to as the IMEISV.</p>
IMEI Increment	The value to use for incrementing the IMEI values for each of the UEs in the range.
Software Version	The software version number identifies the software version number of the mobile equipment. Its length is 2 digits.

## Settings

The following table describes the UE settings.

Setting	Description
<i>Settings:</i>	
Bidirectional SDF Filters	Enable this option to set the BID (Bidirectional SDF Filter) flag to 1 in the SDF Filter IE. This flag is bit 5 in octet 5. When this flag is set, the SDF Filter ID will be present in the IE. Bidirectional SDF Filters are associated to both uplink and downlink Packet Detection Rules (PDRs) of the same Sx session.
Enable Passthrough	When this option is enabled, on the passthrough interface, the LoadCore waits for packets. Once received, the packets are encapsulated and transferred via N3 to the other side of the network.
Enable SLAAC	<p>This option enables IPv6 UEs to get their IP addresses via SLAAC (Stateless Address Auto-configuration).</p> <p><b>NOTE</b> The UE configured IPs must be IPv6. The User Plane uplink/downlink objectives server IP (destination for uplink, source for downlink) should also be IPv6.</p> <p>If SLAAC is enabled on an UE range, during the Session Establishment procedure, the SMF and UPF negotiate a N4-u tunnel (distinct from N4). A SLAAC configured UE sends (via gNB) a Router Solicitation message on N3 towards the UPF. The UPF forwards the Router Solicitation towards the SMF on the N4-u interface. The SMF replies with a Router Advertisement on N4-u towards the UPF, then the UPF forwards it back to the gNB on N3. The Router Advertisement contains the IPv6 prefix the UE will use in the subsequent traffic.</p>
Use PDI Optimization	Enable this option if the user node also supports this feature and performs the F-TEID allocation.
Include SFD when Application Identifier is Configured	If enabled, it will include SFD in PDIs in PFCP messages sent by the SMF even when the Application identifier is configured for QoS Flow.
Network Instance Format	Select the encoding format for the network instance: string or label-list.
Include N3 Network Instance	<p>Default value: <b>True</b> (the option is enabled).</p> <p>When this option is enabled, the SMF will include in PFCP Session Establishment Request the N3 Network instance.</p> <p>The N3 Network instance in PFCP Session Establishment Request will be the N3 Network Instance in UE range settings, or the N3 Network Instance from UPF node in case the N3 Network Instance in UE range settings is empty.</p> <p>When this option is disabled, the SMF will not include the N3 Network instance</p>

<b>Setting</b>	<b>Description</b>
	in the PFCP Session Establishment Request.
N3 Network Instance	Set the access network instance. It represents the value to be sent in the Network Instance IE when the source interface is set to Access.
N4-u Network Instance	It represents the value to be sent in the Network Instance IE when the source interface is set N4-u. This value will be used to locally configure a N4-u network instance, overwriting the one advertised by the UPF (if any).
N6 Network Instance	It represents the value to be sent in the Network Instance IE when the source interface is set to Core or SGi-LAN/N6-LAN.
Data Network Name	<p>Set the Data Network Name(DNN) value. For example: myHome.com. An empty value is accepted as input for this parameter. When a value is added it will be sent in PFCP Session Establishment Request message in APN IE. This value is the same for all UEs in range. The DNN field supports dynamic values. These values can be obtained with a sequence generator. The sequence can be added anywhere in the DNN name (beginning, middle or end). The syntax is [start_value-end_value,increment].</p> <p><b>NOTE</b> The start_value and end_value must have the same length. For example, we can configure dnn[008-999,1] and obtain dnn008,dnn009,...,dnn998,dnn999. Syntaxes dnn [8-999,1] or [008-1000,1] are not valid as the start and end value lengths are different.</p> <p>The start value is mandatory. Omitting certain parameters results in behaviors as exemplified below:</p> <ul style="list-style-type: none"> <li>dnn[4-9, ] an implicit increment of 1 is used</li> <li>dnn[4-9] as above</li> <li>dnn[4-,1] is used as dnn[4-9,1], 9 being the maximum value with the configured length, length of 1 in this case</li> <li>dnn[4-, ] as above</li> <li>dnn[4-] as above</li> <li>dnn[4] as above</li> </ul> <p>UEs will use the DNN values from the pool in a round robin manner.</p> <p><b>IMPORTANT</b> If multiple sequence generators are configured and their pools overlap (for example: dnn[000-600,1].keysight.com dnn[500-999,1].keysight.com), for UEs that use the second DNN pool, the DNN generated values might not be allocated starting with the start_value (they might start with an intermediate value in the second pool).</p>

Setting	Description
<i>BAR Settings: These settings are used in the Update BAR procedure for idle UEs.</i>	
Delay Before Update BAR	The delay in milliseconds before the UE will send a Session Modification Request with an UpdateBAR IE. This can occur while the UE is in idle (it happens only one time).
Downlink Data Notification Delay	The delay that the UP will apply between receiving a downlink data packet and notifying the CP function about it. Delay Value in integer multiples of 50 milliseconds, or 0 (TS 29244 8.2.28).
Suggested Buffering Packets Count	The count of suggested buffering packets.
User Plane Inactivity	
User Plane Inactivity Timer (s)	This timer contains the inactivity time period, in seconds, to be monitored by the User Plane function. A 0 value (default) indicates that User Plane Inactivity detection and reporting is stopped/not requested. When the value is greater, this feature will also enable the following parameters.
Delay Between PFCP Session Establishment and Suspend Traffic (s)	The time to wait before the UE suspends the traffic (in seconds).
Suspend Traffic Interval (s)	The time, in seconds, in which the traffic from remote side is suspended.
Remote IPv4 (IPv6)	Press the <b>+</b> button to add a remote IPv4 entry, then add the IP Address(es) of the DN.
Paging Throttling	<b>IMPORTANT</b> <i>This option appears only if UPF node's ranges are not set as Device Under Test.</i>
Throttling Criterion	Select the criterion on which two consecutive Paging messages triggered by the downlink traffic should be sent: <ul style="list-style-type: none"> <li>• <b>Seconds</b></li> <li>• <b>Packets</b></li> </ul>
Value	Assign a number of seconds to wait, or packets to skip until Paging is sent again. A value of 0 disables this option.
<i>Active Predefined Rules:</i>	

Setting	Description
	Select the <b>Add Activate Predefined Rules</b> button to add a predefined rule to your test configuration.
	Select the <b>Delete</b> button to remove the redefined rule from your test configuration.

## QoS Config settings

In the 5G system, QoS is enforced controlled at the QoS flow level. When you configure LoadCore UE ranges, you can associate each range with one or more QoS flows that you have configured in the Global settings, and you can choose to enable QoS detection and enforcement for each UE range.

The following table describes the UE QoS Config settings.

Setting	Description
<i>QoS Config:</i>	
Use Detective	Select this option to enable QoS flow level traffic detection for QoS enforcement. It monitors traffic and measures the data volume that surpasses the QoS limit.
Use Enforcement	Select this option to enable QoS enforcement. It blocks traffic when the data volume has reached the QoS limit.
Flows	Select one or more flows from the list of QoS flows.
<i>AMBR:</i>	
Uplink (kbps)	The uplink Session-AMBR value for this UE range.
Downlink (kbps)	The downlink Session-AMBR value for this UE range.


## Objectives

In a LoadCore test, an *objective* is a set of performance and event targets that the test is attempting to achieve. The objectives are individually configured for a given UE range. A test, therefore, may have multiple UE ranges each of which is attempting to achieve a specific set of objectives.

There are two categories of test objectives:

- [Control Plane Objective](#)
- [User Plane Objectives](#)

The test Objectives are individually configured for each UE range. For example:

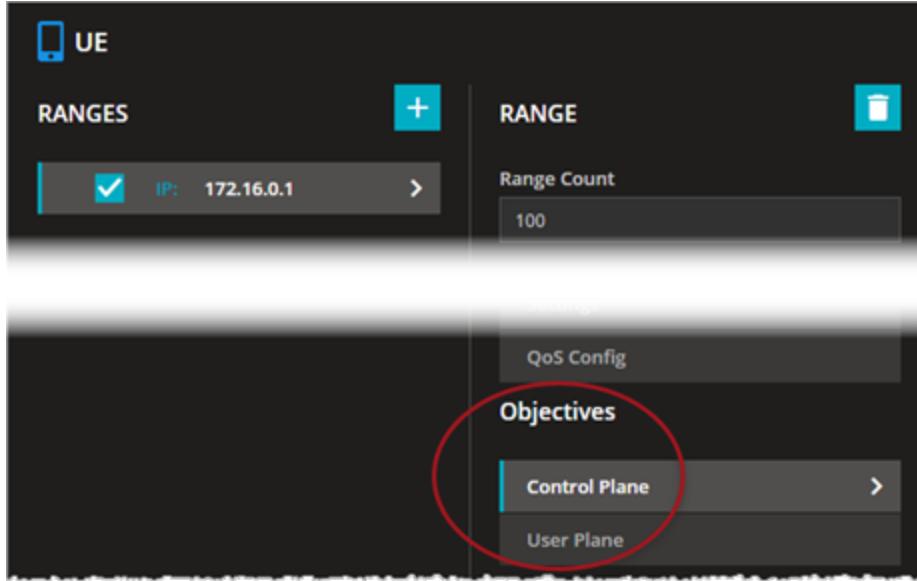

The Control Plane objectives always take precedence over User Plane objectives when running in parallel. This means that a test will first try to achieve the Control Plane objectives, and only then attempt to achieve the User Plane objective (Throughput, and so forth).

### Control Plane Objective

You configure Control Plane Objectives for each individual UE range. They are structured as Primary and Secondary objectives. The focus of the primary objectives is on the establishment of subscriber PDU sessions, whereas the focus of the secondary objectives is on the achievement of specific mobile user events during those sessions.

Refer to the following topics for descriptions of the Control Plane Objective settings:

- [Primary Control Plane Objective](#)
- [Secondary Control Plane Objectives](#)
- [About primary objectives](#)

## About primary objectives

In the current LoadCore release, there are two available primary objectives: *active subscribers* and *subscribers per second*. This topic gives a general description of their respective roles and behaviors.

- [Active Subscribers](#)
- [Subscribers Per Second](#)

### Active Subscribers

The active subscribers objective operates over a sequence of three phases: ramp up, sustain, and ramp down. Each of these has its own scope.

Phase	Activity during this phase
Ramp up	Registration + PDU Session Establishment (if enabled via DNNs to Activate option)
Sustain time	Traffic and/or secondary objectives are executed
Ramp down	Delete PDU Session (if enabled) + Dereistration

This can be viewed as a timeline:

|----- Ramp up -----|----- Sustain -----|----- Ramp down -----|

#### Observations:

- The duration of the ramp up phase is not directly configurable. The ramp up time is automatically computed from the total number of subscribers in the range divided by the configured Ramp-up Rate (`<number_of_subscribers_in_the_range> / <RampUpRate>`). If the ramp up rate cannot be maintained, ramp up will last longer.
- During the sustain time phase, only secondary objectives are running.
- If configured, uplink traffic will start after the ramp up stage is complete.
- Subscribers will accept any downlink traffic once they are attached (registered and PDU session established).
- The duration of ramp down is not directly configurable. The ramp down time is automatically computed from the total number of subscriber in the range divided by the configured Ramp-up Rate (`<number_of_subscribers_in_the_range> / <RampUpRate>`). If the ramp down rate cannot be maintained, ramp down will last longer.
- All User Plane Traffic except Stateless UDP will be started during Ramp Up phase. Stateless UDP traffic starts after all UEs have Registered and Established PDU Sessions.

#### Example:

Consider a test with 20000 subscribers, configured with an active subscribers objective with a ramp up rate of 1000/s, a secondary objective with a rate of 2000/s, and a sustain time set for 30 seconds. Such a test will give the following results.

<i>Ramp Up Time:</i>	20000 / 1000 = 20s for subscribers to register
<i>Rate in ramp up time:</i>	1000 registrations per second

<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	2000 secondary procedures per second
<i>Ramp down time:</i>	$20000 / 1000 = 20$ s for subscribers to deregister
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## Subscribers Per Second

The Subscribers per Second objective operates over two phases: sustain and ramp down.

Phase	Activity during this phase
Sustain time	All objectives will run: primary objective—both registration and deregistration—and all secondary objectives.
Ramp down	Deregistration will be executed for the UEs that did not complete the hold time during the sustain phase.

This can be viewed as a timeline:

|----- Sustain -----|----- Ramp down -----|

### Observations:

- The duration of ramp down is equal to the value of hold time.
- During the ramp down time, only deregistration occurs.

### Example:

Consider a test with 20000 subscribers, configured with: a Subscribers per Second primary objective with a rate of 1000/s and a hold time of 10s, a secondary objective with a rate of 2000/s, and a Sustain time configured for 30 seconds.

Such a test will give the following results.

<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	~4000 per second (1000 per second from registration + 1000 per second from deregistration + 2000 per second from secondary objective, because both primary and secondary objective will run at the same time)
<i>Ramp down time:</i>	10 seconds
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## Primary Control Plane Objective


The following table describes the **Primary** control plane objectives.

Parameter	Description
Objective Type	<p>Select the desired Primary Objective Type:</p> <ul style="list-style-type: none"> <li>• <b>Active Subscribers:</b> The test attempts to activate and maintain the configured objective throughout the entire sustain time. Deactivation procedures will start only at the end of the sustain time.</li> <li>• <b>Subscribers Per Second:</b> The test attempts to activate a specified number of subscriber sessions per second, within the rate and time parameters that you configure.</li> </ul> <p>The panel will display the settings for the selected Objective Type.</p>
<i>Active Subscribers:</i>	
Ramp-up Rate	The number of UE registrations that the test will establish per second. In the current release, each UE registration establishes exactly one PDU session.
Sustain Time (s)	The duration of time (in Seconds) that each subscriber session will be active.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
Flows to Activate	Select the list of QoS flow IDs to create during session establishment.
<i>Subscribers Per Second:</i>	
Hold Time (s)	The number of seconds that each subscriber session will remain active. This is, therefore, the amount of time that will elapse between the subscriber attach and the subscriber detach. At the end of the session hold time, the subscriber performs the detach procedure.
Rate	The number of subscriber sessions to activate per second.
Sustain Time (s)	The duration of time (in Seconds) that the specified session activation rate will be maintained.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.

Parameter	Description
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
Flows to Activate	Select the list of QoS flow IDs to create during session establishment.

## Secondary Control Plane Objectives

The focus of the secondary objectives is on the achievement of specific mobile user events during subscriber PDU sessions. For each primary objective that you configure for the UE range, you can select one or multiple Secondary Objectives. In this example, only Handover has been selected:

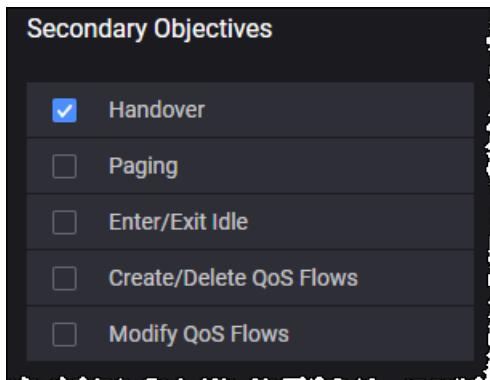

Note that:

- When the primary objective is **Active Subscribers**, the secondary objectives will start after all users are registered.
- When the primary objective is **Subscribers Per Second**, the secondary objectives will start at the beginning of the test (immediately after the first user has registered).

### Handover

When you configure a **Handover** secondary objective, each of the active subscribers configured for the primary objective attempts to execute the handover event defined for the objective. During a handover, the UEs in the range are moving amongst a group of NG-RANs. At the start of a handover, the UEs are registered with the Parent NG-RAN (which is configured in the [UE Range panel](#)). The UEs then traverse the NG-RANs that you configure (the *Visited NG-RAN* list).

The following table describes these objective parameters.

Parameter	Description
<i>Handover:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which handovers are initiated, measured in handovers per second.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of Handover procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.

Parameter	Description
Delay (s)	The delay between each handover event in the handover path, in seconds.
<i>Visited gNodeB and Uplink Paths</i>	
	Add next node to the list.
	Remove the selected node from the list.
Visited GNB	Select the gNodeB from the drop-down list.
Uplink Path	Select the uplink path from the drop-down list.

## Paging

When you configure a **Paging** secondary objective, each of the active subscribers configured for the primary objective attempts to execute the Paging event defined for the objective. Upon receiving a Paging message, each simulated UE—the UEs are in CM-IDLE state—will initiate the UE Triggered Service Request procedure (Reference: 23.502, section 4.2.3.2).

The following table describes the Paging objective parameters.

Parameter	Description
<i>Paging:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Suspend Traffic Interval (s)	The time (in seconds) to suspend traffic on the remote IP address.
Remote IP Address	Set the remote IP address: <ul style="list-style-type: none"> <li>• If the UPF is the DUT in the test topology, then set the <i>Remote IP Address</i> to</li> </ul>

Parameter	Description
	<p>the DN IP address.</p> <ul style="list-style-type: none"> <li>If the UPF is simulated in the test topology, then set the <i>Remote IP Address</i> to the N3 IP address of the UPF.</li> </ul>

## Enter/Exit Idle

When you configure an **Enter/Exit Idle** secondary objective, each of the active subscribers configured for the primary objective attempts to transition between the CM-IDLE and CM-CONNECTED states.

**NOTE**

When UE is scheduled to Exit Idle but the UE state is not Idle anymore (for example Paging event occurred), the Exit Idle procedure cannot be performed, therefore the Service Request is going to be skipped and the statistics for Service Request Skipped (on NG-RAN) will be incremented accordingly.


The following table describes the objective parameters.

Parameter	Description
<i>Enter Exit Idle:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated to transition UEs between the CM-IDLE state to the CM-CONNECTED states, measured in state transitions per second.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	The number of seconds to wait between each successive state transition.

## Create/Delete QoS Flows:

When you configure a **Create/Delete QoS Flows** secondary objective, each of the active subscribers configured for the primary objective attempts to create new QoS flows or delete existing QoS flows. The create/delete actions will be based on the configuration settings that you establish for this objective.

In the **Create/Delete QoS Flow** panel, you can add instances to your objective and select already-defined instances for modification or deletion:

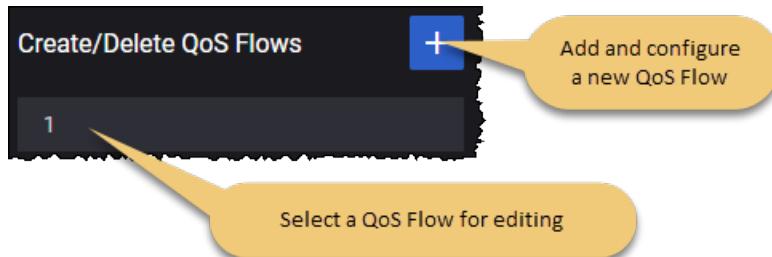

The following table describes the Objective parameters.

Parameter	Description
<i>Objective:</i>	
	Select the <b>Delete Objective</b> button to delete this QoS flow from your objective configuration.
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, once the sustain value is reached.
Interval	The number of seconds to wait between each successive action.
Flow IDs	Select the flow IDs from the drop-down list.


## Modify QoS Flows

When you configure a **Modify QoS Flows** secondary objective, each of the active subscribers configured for the primary objective attempts to execute a UE-requested PDU Session Modification

procedure. The procedure execution will be based on the configuration settings that you establish for this objective.

**Known Issue!** When running Modify QoS Flow objective for the default QoS flow and the *Only Once* parameter is set to False, all Session Modification Request messages for the same subscriber will be populated with the same values for the Update PDR parameters (Precedence / Activate Predefined Rules / Deactivate Predefined Rules).

In the **Modify QoS Flow** panel, you can add instances to your objective and select already-defined instances for modification or deletion:

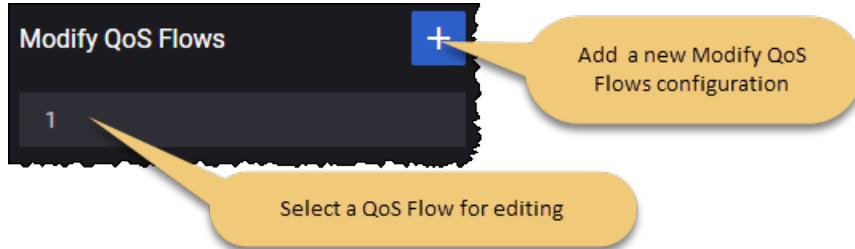

The following table describes the Objective parameters.

Parameter	Description
<i>Objective:</i>	
	Select the <b>Delete Objective</b> button to delete this QoS flow from your objective configuration.
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds that will elapse before the start of the action defined by the objective.
Trigger	In the LoadCore Web UI, the trigger is always automatic (that is, the secondary objectives will start automatically). In contrast, the REST API allows for a manual trigger.
Update PDR	These settings are described in <a href="#">Update PDR</a> below.
Update QoS	These settings are described in <a href="#">Update QoS</a> below.

Parameter	Description
Update URR	These settings are described in <a href="#">Update URR</a> below.

### Update PDR

To add an update for the packet detection rule (PDR) to your **Modify QoS Flow** configuration, select the **Add Update PDR** button.




The following table describes the parameters required to update the packet detection rule.

Parameter	Description
<i>Update PDR Settings:</i>	
	Select the <b>Delete Update PDR</b> button to delete this Update PDR from your objective configuration.
Flow ID	Select the flow ID from the drop-down list.
Direction	Select the traffic direction for which this filter applies: Uplink or Downlink.
Precedence	Specify the desired PDR Precedence value for this Update PDR. The the PDR precedence value determine the order in which a PDR will be evaluated. The evaluation of the PDRs is performed in increasing order of their precedence value.
<i>Activate Predefined Rules: List of predefined rules to be activated.</i>	
	Select the <b>Add Activate Predefined Rules</b> button to add a predefined rule to your test configuration.
	Select the <b>Delete</b> button to remove the redefined rule from your test configuration.
<i>Deactivate Predefined Rules: List of predefined rules to be deactivated.</i>	
	Select the <b>Add Activate Predefined Rules</b> button to deactivate a predefined rule to your test configuration.
	Select the <b>Delete</b> button to remove the redefined rule from your test configuration.

### Update QoS

To add an Update QoS to your **Modify QoS Flow** configuration select the **Add Update QoS** button.

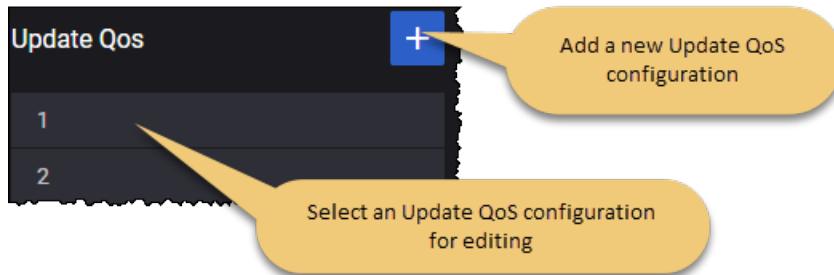


The following table describes the Update QoS settings.

Parameter	Description										
<i>Update QoS Settings:</i>											
	Select the <b>Delete Update QoS</b> button to delete this Update QoS from your objective configuration.										
Flow ID	Select the flow ID from the drop-down list.										
<i>MBR:</i>											
MBR Type	Select the desired Maximum Bit Rate (MBR) type for the flow. Based on your selection, LoadCore will present the appropriate settings.										
<table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Uplink</td> <td>Set the uplink bitrate.</td></tr> <tr> <td>Downlink</td> <td>Set the downlink bitrate.</td></tr> </tbody> </table>		Parameter	Description	Uplink	Set the uplink bitrate.	Downlink	Set the downlink bitrate.				
Parameter	Description										
Uplink	Set the uplink bitrate.										
Downlink	Set the downlink bitrate.										
<i>Dynamic QoS Rates:</i>											
<table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Uplink Action</td> <td>Select the action type to apply to the uplink bitrate.</td></tr> <tr> <td>Uplink Step</td> <td>Select the step to increase or decrease the uplink bitrate.</td></tr> <tr> <td>Downlink Action</td> <td>Select the action type to apply to the downlink bitrate.</td></tr> <tr> <td>Downlink Step</td> <td>Select the step to increase or decrease the downlink bitrate.</td></tr> </tbody> </table>		Parameter	Description	Uplink Action	Select the action type to apply to the uplink bitrate.	Uplink Step	Select the step to increase or decrease the uplink bitrate.	Downlink Action	Select the action type to apply to the downlink bitrate.	Downlink Step	Select the step to increase or decrease the downlink bitrate.
Parameter	Description										
Uplink Action	Select the action type to apply to the uplink bitrate.										
Uplink Step	Select the step to increase or decrease the uplink bitrate.										
Downlink Action	Select the action type to apply to the downlink bitrate.										
Downlink Step	Select the step to increase or decrease the downlink bitrate.										
<i>Gate Status:</i>											
Uplink	Select an option from the drop-down list. Traffic is forwarded when the gate is open and discarded when the gate is closed.										
Downlink	Select an option from the drop-down list.										

Parameter	Description
	Traffic is forwarded when the gate is open and discarded when the gate is closed.

## Update URR

To add an Update URR (Usage Reporting Rule) to your **Modify URR Flow** configuration, select the **Add Update URR** button.

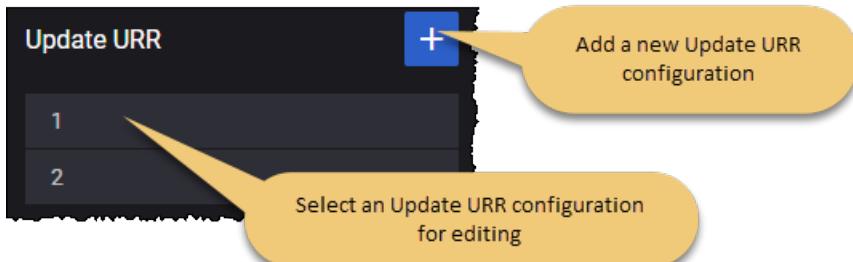


The following table describes the Update URR settings.

Parameter	Description
<i>Update URR Settings:</i>	
	Select the <b>Delete Update URR</b> button to delete this Update URR from your objective configuration.
Flow ID	Select the flow ID from the drop-down list.
<i>Volume Threshold:</i>	
Total	Set the value for the <b>Total Volume</b> field.
Uplink	Set the value for the <b>Uplink Volume</b> field.
Downlink	Set the value for the <b>Downlink Volume</b> field.
<i>Volume Quota:</i>	
Total	Set the value for the <b>Total Volume</b> field.
Uplink	Set the value for the <b>Uplink Volume</b> field.
Downlink	Set the value for the <b>Downlink Volume</b> field.

## User Plane Objectives

The User Plane Objectives focus on the rate and volume of user plane traffic that the simulated UEs are sending to the 5G network. You define separate User Plane objectives for each UE range.

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

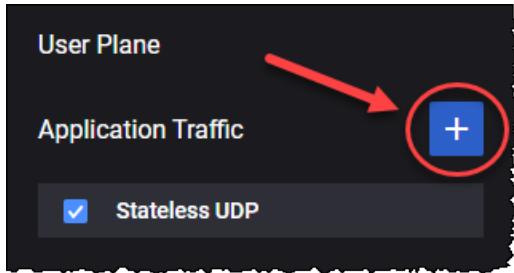

The available traffic applications are: **Stateless UDP, Data, Voice, Video OTT, DNS Client, Predefined Applications, ICMP Client, Ping, Synthetic and UDG**.

**NOTE** Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN. For the DN User Plane settings, refer to [DN User Plane](#).

The following table describes the Application Traffic generation parameters.

Parameter	Description
Address	The destination IP address for the user plane traffic that this UE range will generate.
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"> <li><b>Stateless UDP</b></li> <li><b>Data</b></li> <li><b>Voice</b></li> <li><b>Video OTT</b></li> <li><b>DNS Client</b></li> <li><b>Predefined Applications</b></li> <li><b>Synthetic</b></li> <li><b>UDG</b></li> </ul>
	Select this button to remove the application traffic objective from your test configuration.
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">Data</a>

Parameter	Description
	<a href="#"><u>Traffic.</u></a>
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#"><u>Voice Traffic.</u></a>
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#"><u>Video OTT Traffic.</u></a>
DNS Client	For the settings required to configure the DNS Client objective, refer to <a href="#"><u>DNS Client Traffic.</u></a>
Predefined Applications	For the settings required to configure the Predefined Applications objective, refer to <a href="#"><u>Predefined Applications Traffic.</u></a>
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#"><u>Synthetic Traffic.</u></a>
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#"><u>UDG Traffic.</u></a>

## Stateless UDP Traffic Generator

Use the **Stateless UDP** generator if you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings for the uplink traffic are described below.

The following table describes the Stateless UDP parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>uplink</b> and can not be modified since on the UE you can only configure the uplink flow.
Packet Rate	The rate at which the test generates packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Payload Size	The size of the packet payload, in bytes.
Delay(s)	The time to wait before the application traffic flows start.
Destination IP Address	The destination IP address to place in the IP packet.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.
QoS Flow ID	Select the QoS flow from the drop-down list.
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move</li> </ul>

Parameter	Description
	<p>back to the default flow.</p> <ul style="list-style-type: none"> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## Data Traffic

The following table describes the Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Throughput</b> . The other options are: <b>Concurrent Connections</b> and <b>Connections Rate</b> .
Concurrent Connections	Set the number of concurrent connections. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Connection Duration (s)	Set a value for the connection duration. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Connections Rate per Second	Set the value for connections rate per second. This parameter is available only when Objective type is set to <b>Connections Rate</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.
Optimize Throughput (per UE)	Select this option to enable it.
Connection Multiplier (per UE)	Set the connection multiplier value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single,

Parameter	Description
	unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
Application Traffic Flows	<p>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> <p>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows. Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>If <a href="#">Optimize Throughput (per UE)</a> option is enabled: <b>TCP, TLS, QUIC or UDP</b>.</li> <li>If <a href="#">Optimize Throughput (per UE)</a> option is disabled: <b>TCP, TLS or UDP</b>.</li> </ul>
Type	Select the L4/L7 protocol type from the list of pre-defined flows. The available options are: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get, HTTP Put, HTTP Post</b> and <b>FTP</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get, HTTPS Put</b> and <b>HTTPS Post</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Get, HTTP3 Put</b> and <b>HTTP3 Post</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional</b> (a flow in which a UDP client communicates with a server over a bidirectional datagram socket)</li> </ul> <p><b>NOTE</b> UDP bidirectional works for each UE by sending the number of TX packets configured in the objective (by default 8). After the packets have been received by the DN (or UPF), it sends RX packets (by default 8) to each UE. If the UEs receive the packets, they will send again the number of TX packets and so on. If the UEs did not receive downlink packets, it will send another set of TX packets after 60 seconds.</p>
Port	The port used by the flow.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). For example, a flow may have default actions: log in to a social media site, post a message, then log out. Iterations is the number of times you want this flow of actions to be executed.  Iterations number is set for each UE in the range, for example: if there is a range of 1000 UEs , and it has an objective of HTTP GET with 100 iterations, each of those UEs will get 100 HTTP pages.
Percentage	The percentage of the throughput will be of this type of flow.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server. <p><b>NOTE</b> Setting the page size on UE side will only influence PUT objectives, like HTTP PUT, HTTPS PUT and FTP PUT. To set the page size for GET objectives, the change must be operated on DN side.</p>

Parameter	Description
Client Tx Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
Server Tx Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
URL	The URL that is being accessed by the flow's protocol.
Destination Hostname	Destination hostname of the server. If DNS hostname resolution is enabled for the flow and Name Servers are configured under Global Settings, this name will be resolved before being used as L7 destination IP for the flow and included in HTTP headers. If empty, the "Address" from the previous fly-out level will be used as L7 destination IP for the flow.
Enable DNS Query Per Connection	Select the check-box to process only one DNS query per TCP connection.
QoS FlowID	Select a QoS Flow ID for this flow.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

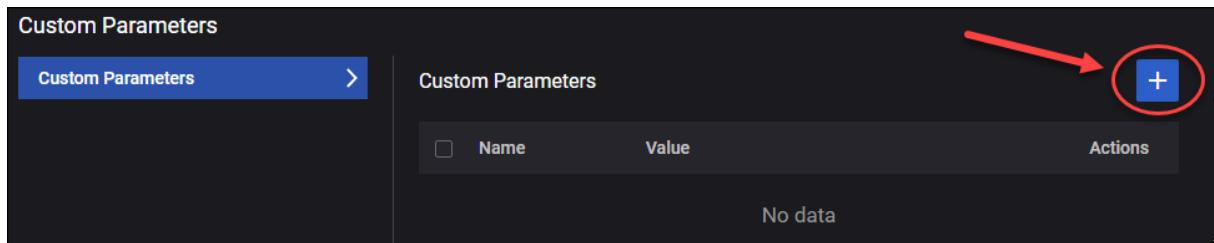

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

## For example ...

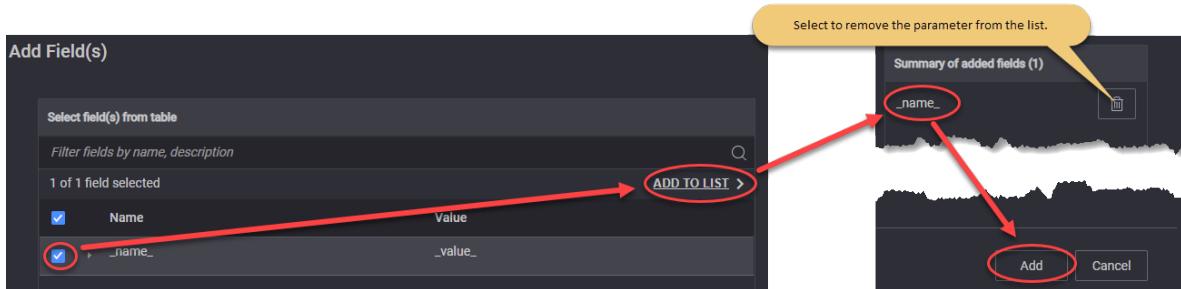

## Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Call Type	Select the type of call from the drop-down list. Available options are: <ul style="list-style-type: none"> <li>• <b>Basic Call</b></li> <li>• <b>Basic Call Mo</b> (Mobile Originated)</li> <li>• <b>Basic Call Mt</b> (Mobile Terminated)</li> </ul>
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<b>Sip Settings:</b>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.

Parameter	Description
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Enable IPSEC	Select this option to enable IPSEC.
Domain	Provide the domain name.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">SIP Advanced Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select this option in order to enable RTCP.
Media settings:	<i>For the configuration of media settings, refer to <a href="#">Media Settings</a>.</i>

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
DNN ID	Select the DNN from the drop-down list.
Iterations	The number of times the Call Type will be executed. It can be finite or infinite (set to zero).
UPDATE	Select this button in order to update IMSI and Source Phone with UE range identification settings.
IMSI	Read-only field, it displays the updated IMSI.
IMSI Phone Increment	The value by which the IMSI phone number is incremented.
Destination Phone	The destination phone number.
Destination Phone	The value by which the destination phone number is incremented.

Parameter	Description
Increment	
Source Phone	The source phone number.
Source Phone Increment	The value by which the destination phone number is incremented.
Destination IP	The destination IP address.
Destination IP Increment	The value by which the destination IP is incremented.
Destination Port	The destination port number.

## Media Settings

The parameters required for media settings are presented in the table below.

Parameter	Description
Media Duration (ms)	Length of time to play the media stream. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID for Voice	The QoS Flow ID for RTP traffic. Select the QoS Flows ID(s) from the drop-down list.
Enable video	Select to enable this option.
QoS Flow ID for Video	Select the QoS flow used for video from the drop-down list. This parameter is available only when <b>Enable video</b> is selected.

### Jitter Buffer Settings:

Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
--------------------	--

### Audio Codecs

	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>AMR</b> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <b>AMR-WB</b> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data</li> </ul>

Parameter	Description
	<p>compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</p> <ul style="list-style-type: none"> <li>• <b>EVS</b> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <b>PCMU</b></li> <li>• <b>PCMA</b></li> <li>• <b>iLBC</b></li> <li>• <b>G722</b></li> <li>• <b>G723</b></li> <li>• <b>G729</b></li> </ul> <p>The parameters of each audio codec are presented below.</p>
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.
<i>Advanced Media Settings</i>	
Custom SDP	Select this panel to open the custom SDP settings.
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> <li>• <b>NB Codecs IPv6</b></li> <li>• <b>AMR-WB IPv6</b></li> <li>• <b>Multimedia IPv4</b></li> </ul>

Parameter	Description
QoE Settings	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

### AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li><b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li><b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

### EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	<p>The following options are available:</p> <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>

Parameter	Description
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

### PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)
- [Custom Parameters](#)
- [SIP 3GPP IPSEC](#)


### SIP Custom Headers

From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE** The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:


- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

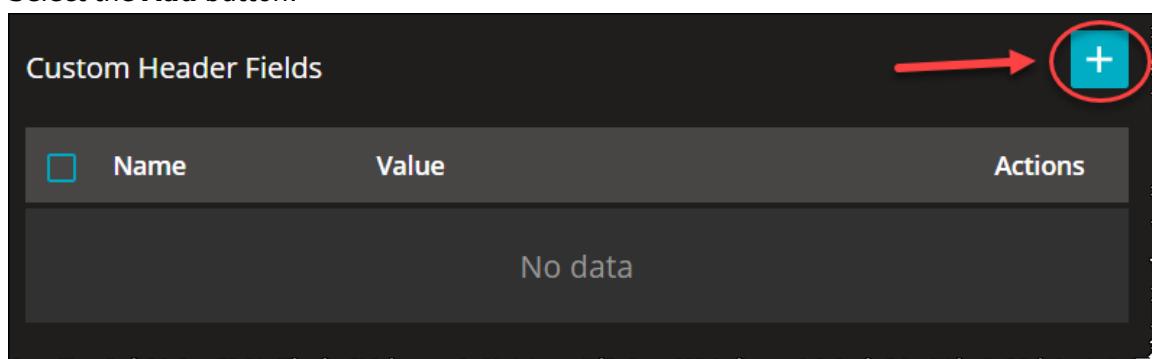

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

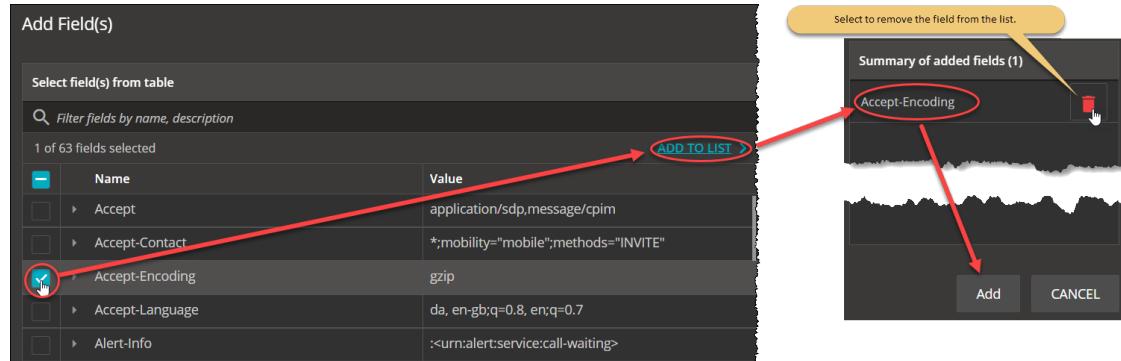

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261,	nexnonce="47364c23432d2e131a5fb210812c"

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	IETF RFC 3310	
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC	3600

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	3261	
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associated-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	3327	
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com", qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque ="", stale=False, algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice", realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",r esponse="245f23415f11432b3434341c022"
Proxy-	IETF	foo

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Require	RFC 3261	
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org? Replaces=425928%40bobster.example.com.3%3Bto-tag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore

Parameter	Description	Value
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication


The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPC	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPC	The OPC value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPC Increment	The number used to increment the OPC value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPC value.

## Custom Parameters

You can add custom parameters as follows:


1. The Custom Parameters panel, select the **Add** button.

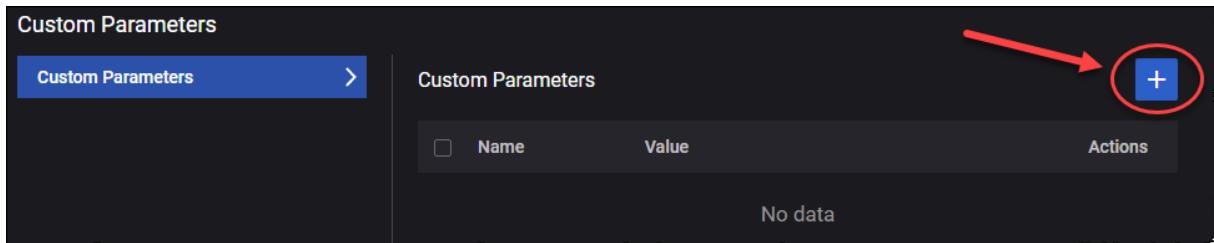

The Add Field(s) opens.

2. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

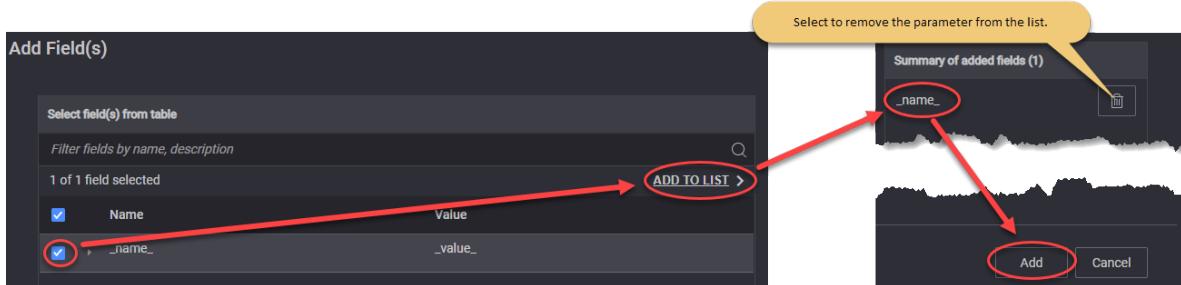

The following custom parameters are available:

Parameter	Description	Value
DelayBefore SIPInvite	Delay in milliseconds before sending SIP INVITE.	1000
DealyBeforeRTP	Delay in milliseconds before RTP session start.	0
DelayAfterRTP	Delay in milliseconds after RTP session end.	0
DeregisterLoop	Set the number of calls/loops before a SIP deregistration will be performed. Any SIP deregistration will be followed by a new SIP registration.	0
DelayBefore180	Delay in milliseconds before 180 Ringing message will be sent.	0
DelayBefore200INVITE	Delay in milliseconds before 200 OK message for INVITE will be sent.	0
debugIPSEC	Activate IPSEC debug. Please use debug only for a reduced number of simulated UEs.	0

Parameter	Description	Value
timeoutSIP	Global timeout in miliseconds for any SIP message. Default is set to standard 32000ms. Use this parameter to modify the default value.	32000
MaxActiveLimit	Set maximum allowed concurrent TCP connections per CPU Core. Default it is set to 8000. Please use this parameter to modify the default value.	8000

### SIP 3GPP IPSEC

The parameters required for SIP 3GPP IPSEC are presented in the table below.

Parameter	Description
Port-C	Set the value for this parameter.
Port-S	Set the value for this parameter.
Authentication Algorithm	Select the authentication algorithm: <ul style="list-style-type: none"> <li>• <b>hmac-sha-1-96</b></li> <li>• <b>aes-gmac</b></li> <li>• <b>null</b></li> </ul>
Encryption Algorithm	Select the encryption algorithm: <ul style="list-style-type: none"> <li>• <b>aes-gcm</b></li> <li>• <b>aes-cbc</b></li> <li>• <b>null</b></li> </ul>

### Video OTT Traffic

The following table describes the Ott(Over-the-Top) traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	Select the value from the drop-down list: <b>Simulated Users</b> or <b>Throughput</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.

Parameter	Description
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
Advanced OTT	Select the <b>Open Advanced OTT</b> button to enable and configure <a href="#">Advanced OTT Settings</a> .

## Advanced OTT Settings

The parameters required to configure the OTT advanced settings are presented in the table below.

Parameter	Description
Application Traffic Flow	Each Application Traffic entry requires at least one Ott traffic flow definition, and can support multiple such definitions. <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul>
<i>Flow:</i>	
	Select this button to remove this flow from your test configuration.
Type	Select the Ott traffic type from the drop-down list. Available options: <ul style="list-style-type: none"> <li><b>DASH</b></li> <li><b>HLS</b></li> </ul>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
URL	Select the URL from the drop-down list populated with the defined on the server.
Play Until End	If this check box is selected, the <b>Play duration</b> field is disabled and the original

Parameter	Description
	playtime is used.
Play Duration (sec)	This field is available only if the <b>Play Until End</b> check box is not selected. It allows you to set a custom playtime.
Transport	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero).
Percentage	The percentage of Test Objective to execute this flow.
Quality Control	These settings are presented in the <a href="#">Quality Control</a> pane.
Advanced Client settings	These settings are presented in the <a href="#">Advanced Client Settings</a> pane.

## Quality Control

The parameters required for Quality Control settings are presented in the table below.

Parameter	Description
<i>Jitter Buffer:</i>	
Initial Delay (s)	Set the number of seconds to wait before playback. The default value is 20.
Maximum Size (s)	Set the number of seconds to be buffered on the client side. The default value is 20.
MOS P.1203	Select an option from the drop-down list: <b>Disabled</b> or <b>Mode 0</b> .
Quality Control Mode	Select the quality control mode from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Adaptive Bit Rate</b></li> <li>• <b>Quality Predefined Levels</b></li> <li>• <b>Lowest Quality</b></li> <li>• <b>Highest Quality</b></li> </ul>
Number of segments	This field is available and editable only when the Quality Control Mode is set to <b>Adaptive Bit Rate</b> .
<i>Play Profiles:</i> The following settings are available and editable only when the Quality Control Mode is set to <b>Quality Predefined Levels</b> .	

Parameter	Description
	Select this button to add a predefined play profile to your test configuration.
<i>Quality Shift</i>	
	Select this button to remove this play profile from your test configuration.
Shift Type	Select the shift type from the drop-down list. Available options <ul style="list-style-type: none"> <li>• <b>Stay at Current Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lower Bitrate</b></li> <li>• <b>Change to the Higher Bitrate</b></li> </ul>
Numbers of levels to shift	This field is available and editable only when the Shift Type is set to <b>Change to Higher Bitrate</b> or <b>Change to Lower Bitrate</b> .
Play Until End	If this check box is selected, the Play Duration field is disabled and the original playtime is used.
Play duration(sec)	This field is available only if the Play Until End check box is not selected. It allows you to set a custom playtime.

## Advanced Client Settings


The parameters required for Advanced Client settings are presented in the table below.

Parameter	Description
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Timeshift for Live	Set a value for this field. 0 means no timeshift.
Enable DNS Query Per Connection	Select the check box to process only one DNS query per TCP connection.
Custom parameters	For more details, refer to <a href="#">Custom parameters</a> .

## Custom Parameters

You can add custom parameters as follows:


1. Select the **Open Custom Parameters** tile. The Custom Parameters panel opens.
2. Select the **Add** button.

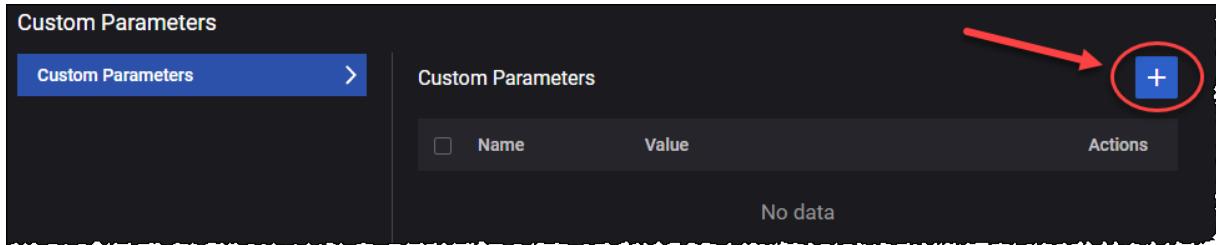

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

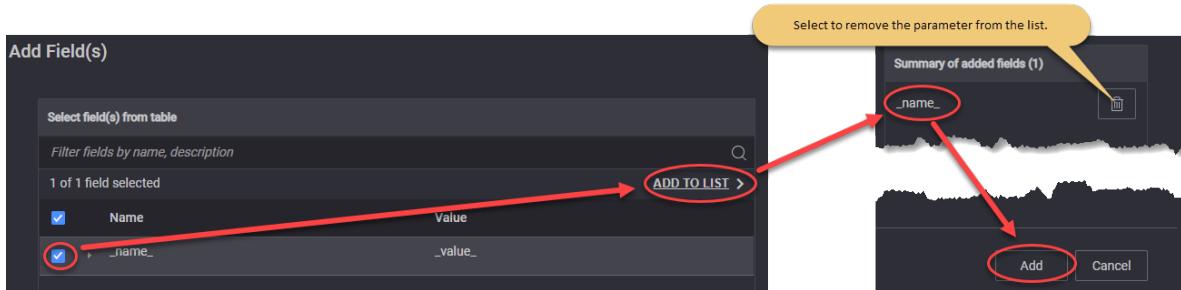

## DNS Client Traffic

The following table describes the DNS Client Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Connection multiplier (per UE)	Set the value for the connection multiplier.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>

<b>Parameter</b>	<b>Description</b>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Application Traffic Flows	<p>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>• To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>• To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> <p>Refer to <a href="#">Flow</a> or a description of the configuration settings for these traffic flows. Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Type	By default, the type is set to <b>DNS Client</b> .
Port	The port used by the flow.
DNS Server IP	Set the DNS server IP address.
Number of DNS servers	Set the number of DNS servers.
Hostname	Set the hostname.
Query Type	Select the query type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
QoS FlowID	Select a QoS Flow ID for this flow from the drop-down list.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

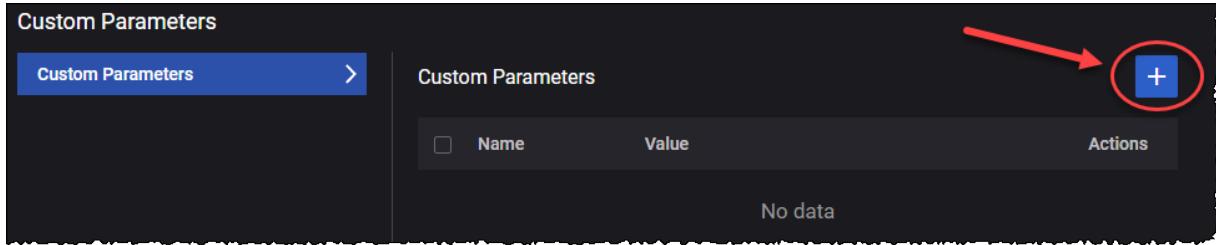

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

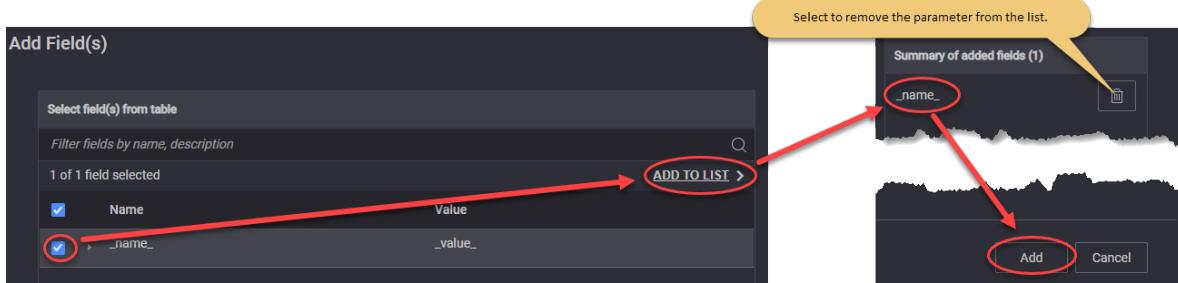

## ICMP Client

The following table describes the ICMP Client parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>ICMP Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Traffic Flow	Refer to <a href="#">Traffic Flow</a> for a description of the configuration settings for these traffic flows.

## Traffic Flow

The **Traffic Flow** parameters are described in the following table.

Parameter	Description
Destination Hostname	Set the destination hostname.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
Interval (ms)	Set the interval value.
Timeout (ms)	Set the timeout value.
DNN ID	Select the DNN for this flow.

## Capture Replay

This page describes the settings required by the capture replay functionality. Ethernet-based packet captures (.pcap files) can be filtered and resulting packets can be replayed on top of GTPu tunnels. Packets can be replayed as Ethernet frames over Ethernet PDU sessions or as IPv4 or IPv6 frames over IP-based PDU sessions. The capture replay feature can also be used with SGi client and SGi server (DN) to replay IP and Ethernet frames without any additional encapsulation.

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> milliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b>

Parameter	Description
	(option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).
Start Delay (s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
DNN ID	Select the DNN value for the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> . Default value: <b>Initiator</b> .

Parameter	Description
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in <code>pcap-filter</code> format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).
<i>Overrides</i>	
Override QoS Flow ID	This option is available only if the <i>Role</i> is set to <b>Initiator</b> . Select the toggle button to enable it.
Qos Flow ID	This option is available only when <i>Override QoS Flow ID</i> option is enabled. Select the QoS Flows ID(s) from the drop-down list.
Override IP Address	Select the toggle button to enable it. When enabled, <i>Destination IP Address</i> and <i>Destination IP Address Count</i> fields become available.
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Address Count	The destination IP address count value.

## Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .

Parameter	Description
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port

<b>Parameter</b>	<b>Description</b>
	number).

The following table describes the Traffic Flow parameters.

<b>Parameter</b>	<b>Description</b>
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: TCP or UDP.
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Client Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the server sends in a burst.
Server Burst Size (bytes)	The packet size in bytes.
Server Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## UDG

The following table describes the UDG parameters.

<b>Parameter</b>	<b>Description</b>
Application Type	Select the application type. In this case, this parameter must be set to

Parameter	Description
	<b>UDG.</b>
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.

Parameter	Description
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
<i>Out of Band Signaling</i>	<p>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</p> <p><b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.</p>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Reconnect Timeout (ms)	The time interval after which the client attempts to reconnect after the connection was interrupted. 0 means that reconnect is disabled.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

The following table describes the **UDG Traffic Parameters**.

Parameter	Description
UDG Test Type	Select the test type from the drop-down list. Available options: <b>Transmission</b> or <b>Ping-pong</b> . For each test type, the parameters are described below.
<i>Transmission</i>	
Throughput Tx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Throughput Rx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change. A corresponding server is required to achieve the displayed value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	The number of packets the server sends in a burst.
Server Burst Interval Unit	Select the server burst interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .

Parameter	Description
Server Burst Size (bytes)	The packet size in bytes.
<i>Ping-pong</i>	
Ping Direction	Set the ping direction. Available options: <b>Upstream</b> or <b>Downstream</b> .
Ping Interval	Set the ping time interval.
Ping Interval Unit	Set the ping interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .
Pong Number	Set the value for the pong number.
Client Packet Size (bytes)	The packet size in bytes.
Server Packet Size (bytes)	The packet size in bytes.

The following table describes the **Transaction** parameters.

Parameter	Description
<i>Transaction</i>	Select the check-box to enable these settings.
Duration (ms)	Transactions duration, in millisecond.
Idle interval (ms)	Idle interval between transactions, in millisecond.
Resume Mode	Side which triggers transition between the UE idle and the UE connected state. Available options: <b>User</b> or <b>Network</b> .

## Predefined Applications Traffic

The following table describes the Predefined Flows Traffic parameters.


Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Predefined Applications</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Simulated Users</b></li> <li>• <b>Throughput</b></li> <li>• <b>Connections Per Second</b></li> </ul>

Parameter	Description
Throughput (kbps)	<p><b>IMPORTANT</b> This parameter is available only when <a href="#">Objective Type</a> is set to <b>Throughput</b>.</p> <p>The desired throughput (in kbps) for the combined traffic flows that will be generated.</p>
Connections Per Seconds	<p><b>IMPORTANT</b> This parameter is available only when <a href="#">Objective Type</a> is set to <b>Connections Per Second</b>.</p> <p>Set the number of connections.</p>
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	<p>The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.</p>
Configure Traffic Profiles	<p>Each Application Traffic entry requires at least one traffic profile definition, and can support multiple such definitions.</p> <p>Refer to <a href="#">Traffic Profile</a> for a description of the configuration settings for these traffic profiles.</p>

## Traffic Profile


You can configure the traffic profiles as needed to meet your test objectives. You can do this as follows:

1. Select the **Configure Traffic Profiles** button.



The Traffic Profiles section opens.

2. Select the Traffic Profiles tile.

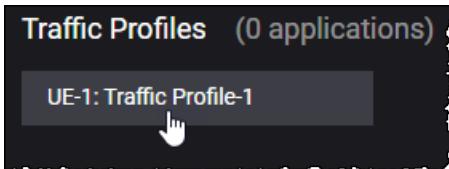

The Traffic Profile Configuration section opens.


3. From the Predefined Applications sections, you can add and configure applications by selecting the following sections:

- [Applications](#)
- [TCP Settings](#)
- [TLS Settings](#)
- [RTP Settings](#)

## Applications

You can add or remove predefined applications from the Applications tab under the Traffic Profile Configuration section, as follows:

1. Select the **Add Application** button.

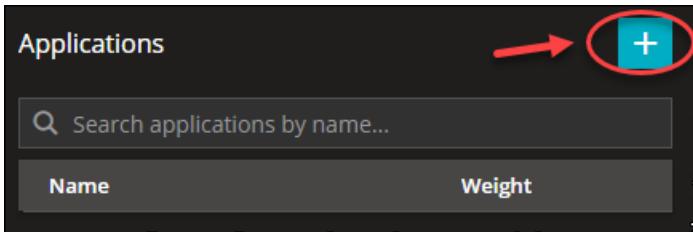


The Add Application(s) window opens.

2. From the Add Application(s), select the applications you want to add and select **ADD TO LIST** to move them to the added applications section. To add the applications to your configuration select **Add**.

**NOTE**

For the complete list of predefined applications, refer to [Predefined Applications](#).

**For example ...**

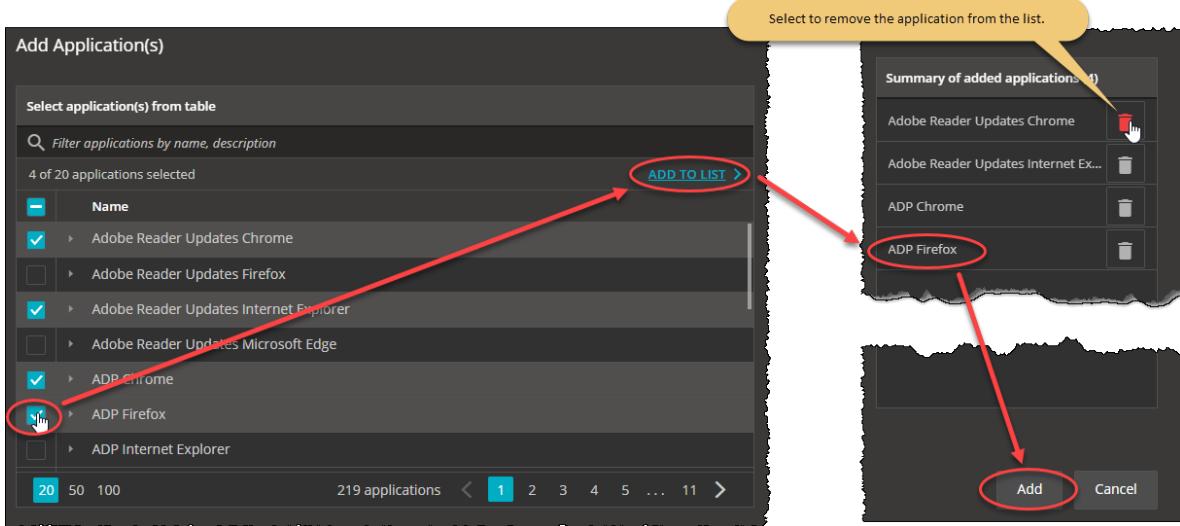

The applications are added to your configuration under the Applications section.

**For example ...**

Name	Weight	Action Buttons
Adobe Reader Updates Chrome 1	1	
Adobe Reader Updates Internet Exp...	1	
ADP Chrome 3	1	
ADP Firefox 4	1	

3. If needed, you can select the **Edit** button to enable the bulk selection of the available applications in order to remove them from the list.

For each application added, the following elements are available in the Applications table:

Field	Description
Name	The application name.
Weight	Set the application weight using the adjustment button. If the primary objective of a Traffic Profile is set to <b>Throughput</b> , the selected weight distribution time depends on the types and number of applications added to the application list.
Action Buttons	<ul style="list-style-type: none"> <li>• <b>Rename</b> - Select to rename the application.</li> <li>• <b>Advanced Settings</b> - for more information, refer to <a href="#">Advanced Settings</a>.</li> <li>• <b>Delete</b> - Select to delete the application.</li> </ul>

When an application is selected from the Application table, the Application Settings and Application Actions sections are displayed.

### For example ...

The screenshot shows the 'Applications' management interface. On the left, there is a list of predefined applications with columns for Name and Weight. One application, 'Adobe Reader Updates Chrome 1', is selected and highlighted with a cursor. On the right, two sections are displayed: 'Application Settings' and 'Application Actions'. The 'Application Settings' section contains fields for Destination Hostname, DNN ID, and QoS Flow ID. The 'Application Actions' section lists actions such as 'Check For Updates' and 'Download Updates'.

### Application Settings

Under the Application Settings section, the following fields are displayed:

**NOTE** These fields under the Application Settings section are common to all predefined applications.

Field	Description
Destination Hostname	The application name.
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select a QoS Flow ID from the drop-down list.


### Application Actions

The Application Actions section lists the actions and action parameters available in LoadCore for each predefined application. For the complete list of actions and parameters, refer to [Application Actions](#).

Under the Application Actions section, you can edit or add new actions for each application:

1. Use the icons available for each icon in order to remove it or to change its position in actions list.


### For example ...

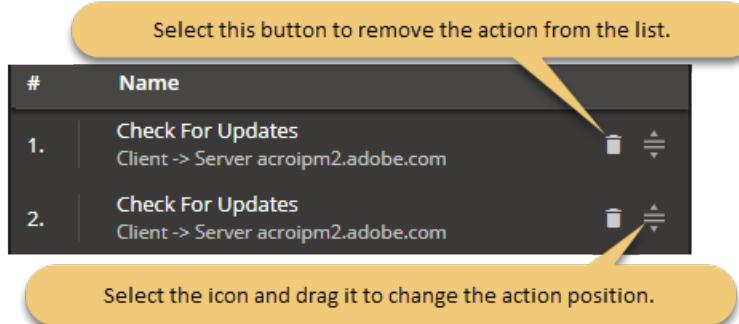

2. Select the **Add Actions** button to add new actions to the application. The Add Action(s) window opens.

Select an action from the list and then use the **Insert Actions** button to add the action in the desired position on the Insert Action(s) table. Select **Add**.

**For example ...**

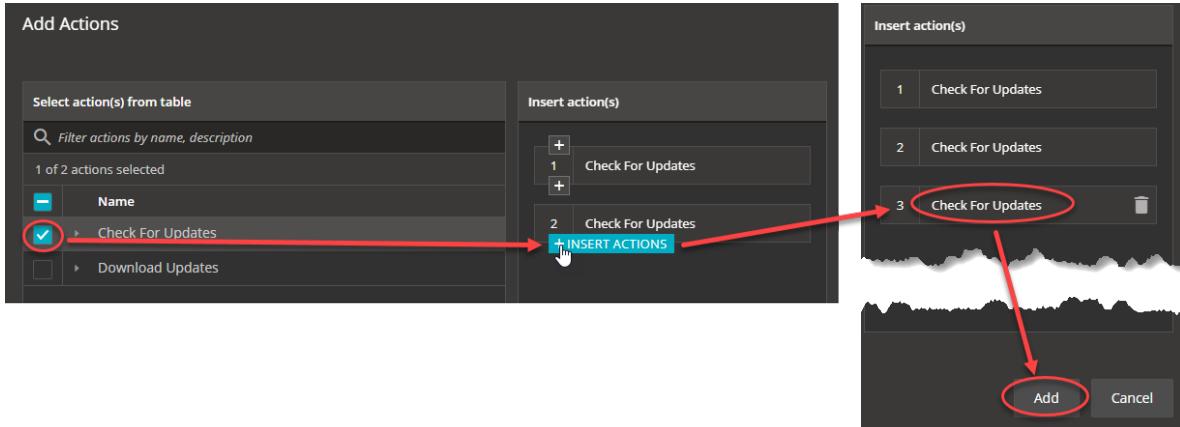


3. If needed, you can select the **Edit** button to enable the bulk selection of the available actions in order to remove them from the list.

## Application Advanced Settings

For each predefined application, the Application Settings menu is displayed when the Advanced Settings button is selected. This menu contains two main sections:

- **Connections**
- **Properties**

**For example ...**

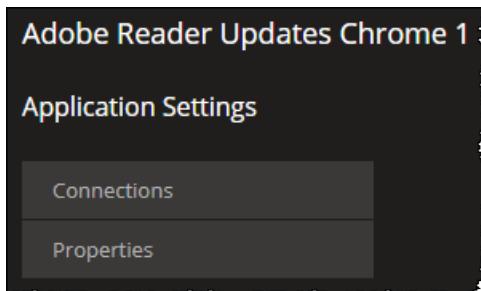

Under the **Connections** section, the Connections table is displayed. When a connection is selected, the Connections Properties fields are displayed, as follows:

Field	Description
Name	The application name.
Client Endpoint	The client endpoint.
Server Endpoint	The server endpoint.
Hostname	The hostname name.
Destination Port	The TCP source port that the client endpoint is initiating connections from.
Server Port	The TCP port that the server endpoint is accepting connections on.
Encryption disabled	Select the check box to enable it this option.


Under the **Properties** section, the application settings Properties fields are displayed, as follows:

Field	Description
Name	The application name.
Iterations	Set the value for the number of iterations.
Max Transactions	The maximum amount of transactions an application can make.
Client HTTP profile	Select the client HTTP profile from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• Chrome</li> <li>• Firefox</li> <li>• Opera</li> <li>• Microsoft Edge</li> <li>• Internet Explorer</li> <li>• Safari</li> <li>• Android</li> </ul>
Action Timeout (seconds)	Set the action timeout in seconds.
Connection Persistence	Select an option for the connection persistence: <ul style="list-style-type: none"> <li>• <b>Standard</b> - inherits the behavior with respect to the HTTP version (1.0 or 1.1).</li> <li>• <b>Disabled</b> - enforces connection closing following every HTTP message.</li> <li>• <b>Enabled</b> - enforces connection persistence through explicit keep-alive.</li> </ul>

Field	Description
HTTP Version	Select the HTTP version used: <ul style="list-style-type: none"> <li>• <b>HTTP/1.0</b></li> <li>• <b>HTTP/1.1</b></li> </ul>

## TCP Settings

The following UI elements are available on the TCP Settings tab under the Traffic Profile Configuration section.

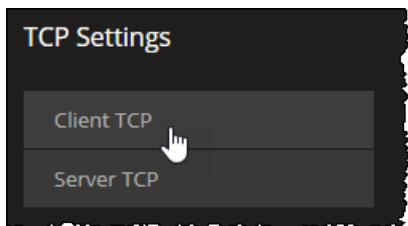


These parameters are configurable for both Client and Server settings, as presented in the following table.

Parameter	Description
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value. The default Min value is 2000 milliseconds and the permissible range of values is between 50 to 120000 milliseconds.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to. The default value is 3200 milliseconds and the permissible range of values is between 1000 to 120000 milliseconds.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number). The default value is 1024.
Max source port	The Max value specifies the upper bound (the highest permissible port number). The default value is 65535.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.

Parameter	Description
Enable RFC1323 TCP timestamps	<p>Enable or disable the stamp using the toggle button. If enabled, the client or server inserts an RFC 1323 timestamp into each packet.</p> <p><b>NOTE</b> Enabling the TCP Timestamp option adds 12 bytes to the TCP header. This reduces the effective configured MSS.</p>

## TLS Settings

The following UI elements are available on the TLS Settings tab under the Traffic Profile Configuration section.

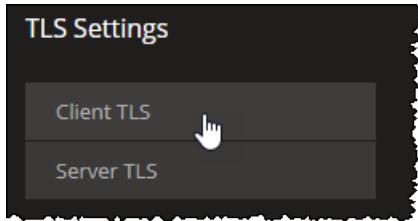

**NOTE** TLS multi version support is available, you can configure both TLS 1.2 and TLS 1.3 from **Client TLS Settings**. You can choose multiple ciphers for each different version. The Client sends these versions and ciphers in the Client Hello and the Server chooses one of the versions and ciphers and replies back with Server Hello. The Client then proceeds with the handshake.

**NOTE** Once you select either of the two Session Reuse Methods below for the **Client TLS Settings**, you can specify how many simultaneous connections can share the same Session ID or Ticket through the **Session Reuse Count** option for **TLSv1.2**.

These parameters are configurable for both Client and Server settings, as presented in the following tables.

### Client TLS Settings

Parameter	Description
<i>TLSv1.2</i>	<p>Select the check box to enable it. The following options became available:</p>
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>NOTE</b> Session reuse method is available only if <i>TLSv1.2</i> is selected.</p>

Parameter	Description
Immediate close	Select the check box to enable it.
TLSv1.3	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibility	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	Select the check box to enable it.

### Server TLS Settings

Parameter	Description
TLSv1.2	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>NOTE</b> Session reuse method is available only if TLSv1.2 is selected.</p>
Immediate close	Select the check box to enable it.
TLSv1.3	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibility	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	Select the check box to enable it.
SNI Enabled	<i>Select the check box to enable the server name indicator. The following <b>SNI Settings</b> become available:</i>
Certificate file	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.

Parameter	Description
Key file	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key file password	Enter your key file password.
DH file Traffic	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.
<i>Certificate file</i>	<i>Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.</i>
<i>Key file</i>	<i>Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.</i>
<i>Key file password</i>	<i>Enter your key file password.</i>
<i>DH file Traffic</i>	<i>Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.</i>

## RTP Settings

The following UI elements are available on the RTP Settings tab under the Traffic Profile Configuration section.

Settings	Description
Encryption Mode	Select an encryption mode from the drop-down list. Available options: <b>None</b> , <b>XOR</b> , <b>ZOOM</b> or <b>SRTP</b> .
MOS Mode	Select the Session Reuse Method from the drop-down list. Available options: <b>Disable</b> , <b>Per interval</b> or <b>Per call</b> .

## RAN configuration settings



Radio Access Network (RAN) is the 5G core network component that connects individual devices to other parts of a network through radio connections. A RAN resides between user equipment (UE) and provides the connection with the 5G core network. A RAN provides access and coordinates the management of resources across the radio sites.

Multiple instances of RAN may be deployed.

The configuration settings are described in the topics listed below.

### Topics:

<b>RAN Ranges panel</b> .....	<b>737</b>
<b>RAN Range settings</b> .....	<b>737</b>
<b>RAN N3 interface settings</b> .....	<b>738</b>
<b>Passthrough interface settings</b> .....	<b>739</b>


## RAN Ranges panel

The **RAN Ranges** panel opens when you select the RAN node from the network topology window.

On the Ranges section, you can perform the following task:

- Add a new RAN range to your test configuration.
- Open a RAN range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

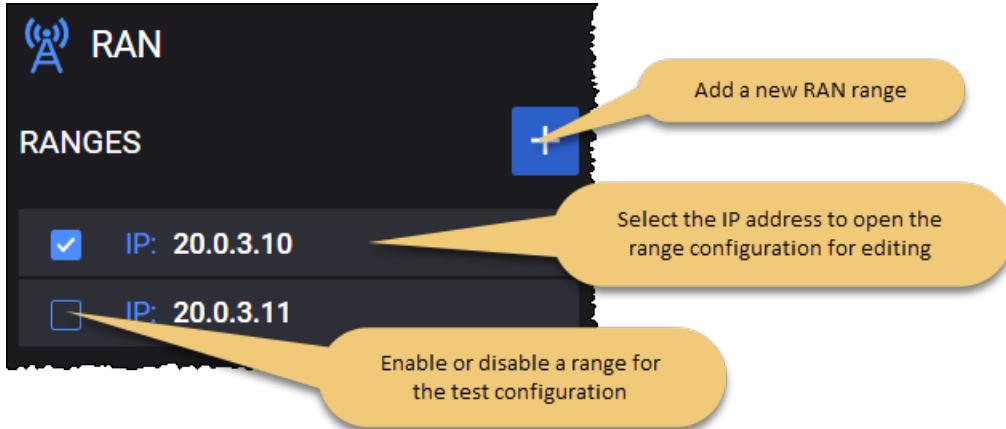

## RAN Range settings

You add and select RAN ranges from the RAN Ranges panel. When you select the name of a RAN range, LoadCore opens the **Range** panel, from which you can:

- Delete the RAN range from the test configuration.
- Select **Range Settings** to configure the node and connectivity settings for the RAN range.

### RAN range controls and settings

Each RAN range is identified by a unique name.

The following table describes the **Range Settings** that you need to configure for the RAN range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Name	Multiple RAN instances may be deployed in the 5G network. Each RAN instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Range Count	The number of RANs in the RAN range.

Setting	Description
<i>Range Settings:</i>	
N3 Interface Settings	Each RAN range requires the configuration of N3 interface settings, through which a RAN instance enables connectivity and interaction with the UPF component in the 5G network. These settings are described in <a href="#">RAN N3 interface settings</a> .
Passthrough Interface Settings	These settings are described in <a href="#">passthrough interface settings</a> .

## RAN N3 interface settings

The following configuration settings are required by the RAN N3 interface .

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to the this node.
Gateway Address	The IP address assigned as gateway address.
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

<b>Connectivity Settings</b>	<b>Description</b>
VLAN TPID	VLAN tag protocol ID.

## Passthrough interface settings

The configuration of the passthrough interface is required when passthrough is enabled in the UE settings. This interface will wait for an external traffic source.

The following settings are required for the passthrough interface configuration.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address assigned as the gateway address for the external traffic source.
IP Prefix Length	The IP address prefix length.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

## SMF configuration settings



Session Management Function (SMF), as the name implies, handles management of UE sessions while also allocating IP addresses to UEs. It also selects and controls the UPF for data transfer. Per-session SMFs may be allocated to UEs with multiple sessions. It also interacts with the User Plane Function (UPF) for efficient routing of the user's packets.

SMF interacts with the UPF over the N4 reference point and makes its services available to other network functions through the Nsmf service-based interface.

The configuration settings are described in the topics listed below.

### Topics:

<b>SMF Ranges panel</b> .....	<b>741</b>
<b>SMF Range settings</b> .....	<b>741</b>
<b>SMF N4 interface settings</b> .....	<b>742</b>
<b>SMF Uplink Paths</b> .....	<b>744</b>


## SMF Ranges panel

The **SMF Ranges** panel opens when you select the SMF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new SMF range to your test configuration.
- Open a SMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

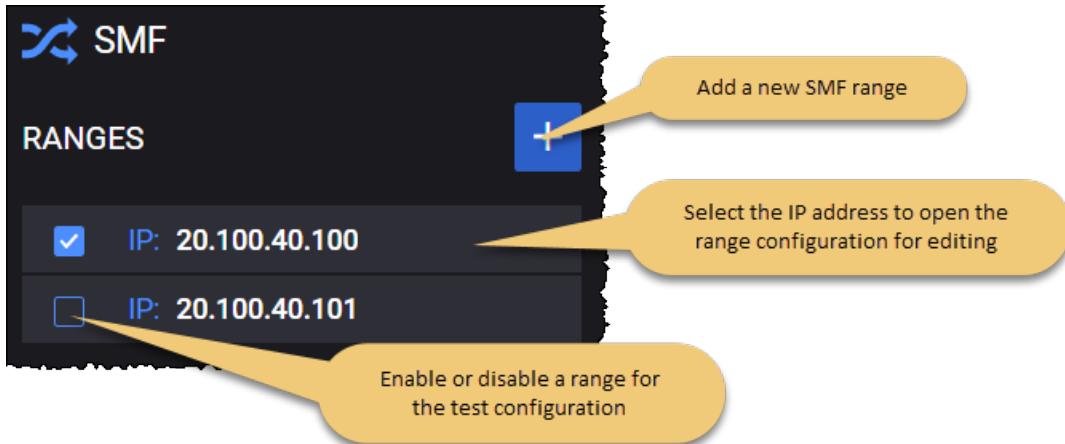

## SMF Range settings

You add and select SMF ranges from the SMF Ranges panel. When you select the name of a SMF, LoadCore opens the **Range** panel, from which you can:

- Delete the SMF range from the test configuration.
- Select **Range Settings** to configure the node and connectivity settings for the SMF range.

### SMF range controls and settings

Each SMF range is identified by a unique name.

The following table describes the **Range Settings** that you need to configure for each SMF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Name	The name uniquely identifies the SMF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
<i>Range Settings:</i>	

Setting	Description
N4 Interface Settings	Each SMF range requires the configuration of N4 interface settings, through which a SMF instance interacts with UPF in a 5G network. These settings are described in <a href="#">SMF N4 interface settings</a> .
Uplink Paths	These settings are described in <a href="#">SMF uplink paths</a> .

## SMF N4 interface settings

N4 is the service-based interface through which a AMF instance interacts with UPF in a 5G network.

The following settings identify the peer node and determine how TEIDs are allocated.

Setting	Description
<i>N4 Interface Settings:</i>	
Peer UPF	Select the UPF node connected to SMF over the N4 interface.
<i>PFCP Settings:</i>	
Use Remote FTEID Allocation	When this option is enabled, SMF expects the UPF to allocate TEIDs. When it is disabled, the UPF allocates TEIDs.
Supports PDI Optimization	The Packet Detection Information (PDI) Optimization option allows the optimization of PFCP signaling between the Control Plane and the User Plane function. This option is available only if <b>Supports FTEID Allocation</b> option is enabled.
Enable N4u Interface	Select this option to enable the N4u interface on SMF. The SMF uses the same IP on N4 and N4-u.
Include UE IP Address in Access PDI	Select this check box to include the UE IP Address IE in the PDI for Access Source Interface.
Include 3GPP Interface Type	Select this check box to include the 3GPP interface type in PFCP messages.
Include Choose ID	Select this check box to include the Choose ID value in PFCP messages.
Heartbeat Interval	Set the number of seconds between PFCP heartbeat procedures. By default, the value is set to 60, but can be changed using a value between 0 and 3600 (a value of 0 is used to disable such requests).
Session Deletion Rate for UPF triggered Release	This parameter is used to configure the rate for PFCP session deletion when UPF requests PFCP association release. By default, the value is set to 100, but can be changed using a value between 1 and 1.000.000.

Setting	Description
Wait for Association Setup	The time in seconds to wait for PFPC Association setup to be initiated by UPF. The default value is 0, meaning the SMF will not wait for UPF to initiate the association. The minimum value is 0 and the maximum value is 3600.
<i>N4-u Settings : These settings are enabled when <b>Enable N4u Interface</b> check box is selected.</i>	
Access SDF	The SDF describing the packet filter. Default value: <i>permit out 58 from any to assigned.</i>  Example: <i>permit out 17 from 22.22.22.22 11111 to \$ueip\$ 11100</i> . For syntax details refer to TS 29212 5.4.2. <i>\$ueip\$</i> is a format specifier for UE IP address.
CP-Function SDF	The SDF describing the packet filter. Default value: <i>permit out 58 from any to assigned.</i>  Example: <i>permit out 17 from 22.22.22.22 11111 to \$ueip\$ 11100</i> . For syntax details refer to TS 29212 5.4.2. <i>\$ueip\$</i> is a format specifier for UE IP address.

The following **Connectivity Settings** enable the necessary N4 connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>MAC</i>	<i>MAC Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i>  <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>

Connectivity Settings	Description
VLAN ID	VLAN identifier.

## SMF Uplink Paths

### About uplink paths

The Uplink Path options are used for N9 and ULCL (Uplink Classifier) scenarios. An Uplink Path contains one or more UPFs serving a PDU Session. This is needed because with I-UPF (intermediate UPF) and ULCL (Uplink Classifier) there can be more than one UPF chained between RAN and DN. The rule is that the first UPF in the path is the UPF connected to RAN (N3 UPF) and the last UPF is the UPF connected to DN (N9 UPF).

There are two possible combinations with more than one UPF:

<b>i-UPF:</b>	one N3 UPF (I-UPF) and one N9 UPF	In this case all flows of a PDU session will use the path <i>RAN &gt; N3 UPF &gt; N9 UPF &gt; DN</i> .
<b>ULCL:</b>	one N3 UPF (ULCL) and two N9 UPFs	In this case, some flows defined in the QoS Flows for first N9 UPF will use the path <i>RAN &gt; N3 UPF &gt; First N9 UPF &gt; DN</i> , and others will use <i>RAN &gt; N3 UPF &gt; Second N9 UPF &gt; DN</i> .

### Uplink Path settings

The following table describes the settings required to configure the uplink paths.

Setting	Description
<i>Uplink Paths:</i>	
	Select the <b>Add an uplink path</b> button to add an uplink path to your test configuration.
<i>Uplink Path:</i>	
	Select the <b>Delete uplink path</b> button to remove the uplink path from your test configuration.
N3 UPF	Select the first UPF in the path: the UPF connected to the RAN.
<i>Next UPFs:</i>	
First N9 UPF	The first UPF on the N9 interface
QoS Flows for first N9 UPF	Select the QoS Flows for the first N9 UPF.
Second N9 UPF	Select <b>None</b> if your test configures only one N9 UPF or a UPF if you test configures more than one N9 UPF.

<b>Setting</b>	<b>Description</b>
QoS Flows for second N9 UPF	Select the QoS Flows for the second N9 UPF.

## UPF configuration settings

The configuration settings are described in the topics listed below.

### Topics:

<b>UPF Ranges panel</b> .....	<b>747</b>
<b>UPF Range panel</b> .....	<b>747</b>
<b>UPF N3 interface settings</b> .....	<b>748</b>
<b>UPF N4 interface settings</b> .....	<b>750</b>
<b>UPF N6 interface settings</b> .....	<b>751</b>
<b>UPF N9 interface settings</b> .....	<b>752</b>
<b>UPF N4u interface settings</b> .....	<b>754</b>


## UPF Ranges panel

The **UPF Ranges** panel opens when you select the UPF node from the network topology window.

You can perform the following tasks from this panel:

- Add a new UPF range to your test configuration.
- Open a UPF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

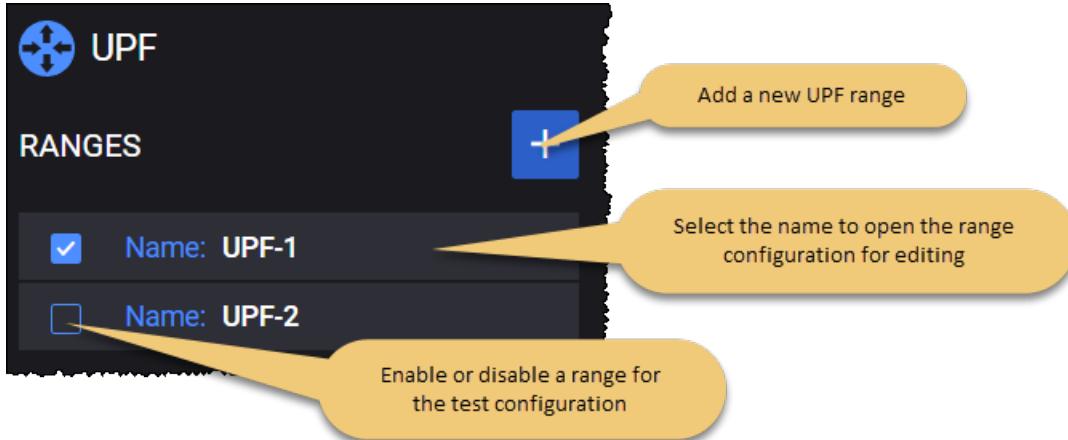

If multiple agents are assigned to the UPF node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the UPF node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range 3 on agent1 and agent2.
- **Round Robin Ranges on Agents** - influences the way configuration is distributed in case of multiple agents assigned on the UPF node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1, range2 on agent2, range3 on agent1.

## UPF Range panel

You add and select UPF ranges from the UPF Ranges panel. When you select UPF range Name, LoadCore opens the **Range** panel, from which you can:

- Delete the UPF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Modify the UPF range **Name**.
- Configure interface settings for the UPF range.

The following table describes the **Range Settings** that you need to configure for each UPF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your UPF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the UPF functionality (if it is selected in the Topology window).
Name	The name of the UPF range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
Range Count	The number of UPFs in the UPF range.
<i>Range Settings:</i>	
N3 Interface Settings	N3 is the interface between the RAN and the UPF. The interface settings are described in <a href="#">UPF N3 interface settings</a> .
N4 Interface Settings	N4 is the interface between the SMF and the UPF. The interface settings are described in <a href="#">UPF N4 interface settings</a> .
N6 Interface Settings	N6 is the interface between the DN and the UPF. The interface settings are described in <a href="#">UPF N6 interface settings</a> .
N9 Interface Settings	N9 is the interface between two UPFs. The interface settings are described in <a href="#">UPF N9 interface settings</a> .
N4u Interface Settings	N4u is an interface between the SMF and the UPF. The interface settings are described in <a href="#">UPF N4u interface settings</a> .

## UPF N3 interface settings

N3 is the user plane interface between the RAN and the UPF.

The following configuration settings are required by each UPF N3 range.

Setting	Description
<i>N3 Interface Settings:</i>	
Network Instance	The network domain that will be used in the Network Instance information element (IE) in messages sent on this interface. The UPF uses the Network Instance to determine the IP network to use when transferring traffic over the N3 interface.
<i>Network Instance:</i>	
	Select the <b>Add value</b> button to add a network instance to your test configuration.

Setting	Description
	Select the <b>Delete</b> button to remove the network instance from your test configuration.
Network Instance Format	Select the encoding format for the network instance: string or label-list.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i> <i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N4 interface settings

The UPF receives user traffic information from the SMF over the N4 interface. N4—which employs the Packet Forwarding Control Protocol (PFCP)—is the control plane interface between the UPF and the SMF. PFCP sessions established with the UPF define how packets are identified, forwarded, processed, marked, and reported (using PDRs, FARs, BARs, QERs, and URRs).

The following configuration settings are required by each UPF N4 range.

Setting	Description
<i>N4 Interface Settings:</i>	
Peer SMF	<p>By default, the value is set to <b>None</b>. This means that UPF expects the PFCP Association to be initiated by the SMF node.</p> <p>If this field is populated with one of the SMF nodes configured in the test (available in the drop-down list), then the UPF, upon startup, will try to establish the PFCP Association with the configured SMF.</p>
<i>PFCP Settings:</i>	
Supports FTEID Allocation	When this option is enabled, the UPF allocates TEIDs. When it is disabled, the UPF expects the SMF to allocate TEIDs.
Supports PDI Optimization	<p>The Packet Detection Information (PDI) Optimization option allows the optimization of PFCP signaling between the Control Plane and the User Plane function.</p> <p>This option is available only if <b>Supports FTEID Allocation</b> option is enabled.</p>
Heartbeat Interval	Set the number of seconds between PFCP heartbeat procedures. By default, the value is set to 60, but can be changed using a value between 0 and 3600 (a value of 0 is used to disable such requests).
Release PFCP association before node stop	When selected, the UPF will send PFCP Association Update to release PFCP association before UPF node stop.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway	The IP address assigned as gateway address.

<b>Connectivity Settings</b>	<b>Description</b>
Address	
MTU	Maximum transmission unit.
MSS	Maximum segment size.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N6 interface settings

N6 is the interface between the UPF session anchor and the DN. It is the interconnection point at which user plane packet encapsulation and decapsulation is performed.

The following **Connectivity Settings** are required by each UPF N6 range.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.


<b>Connectivity Settings</b>	<b>Description</b>
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway	The IP address assigned as gateway address.

<b>Connectivity Settings</b>	<b>Description</b>
Address	
MTU	Maximum transmission unit.
MSS	Maximum segment size.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N9 interface settings

N9 is the interface between two UPFs in a 5G network: for example an I-UPF and the UPF session anchor. An I-UPF performs a relay function, while the session anchor terminates the protocols (such as GTP) used on that interface.

You can enable or disable the N9 interface, as required by your test configuration. For example:



<b>Interface Settings</b>	<b>Description</b>
Network Instance	The network domain that will be used in the Network Instance information element (IE) in messages sent on this interface. The UPF uses the Network Instance to determine the IP network to use when transferring traffic over the N9 interface.
<i>Add Network Instance:</i>	

Interface Settings	Description
	Select the <b>Add value</b> button to add a network instance to your test configuration.
	Select the <b>Delete</b> button to remove the network instance from your test configuration.
Network Instance Format	Select the encoding format for the network instance: string or label-list.

The following **Connectivity Settings** enable the necessary N9 connectivity between UPF nodes.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner</i></p>


<b>Connectivity Settings</b>	<b>Description</b>
	<i>VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UPF N4u interface settings

The N4u interface is used to forward packets between SMF and UPF. It is used only for SLAAC.

The UPF can use the same or different IPs on N4 and N4-u.

You can enable or disable the N4u interface, as required by your test configuration. For example:

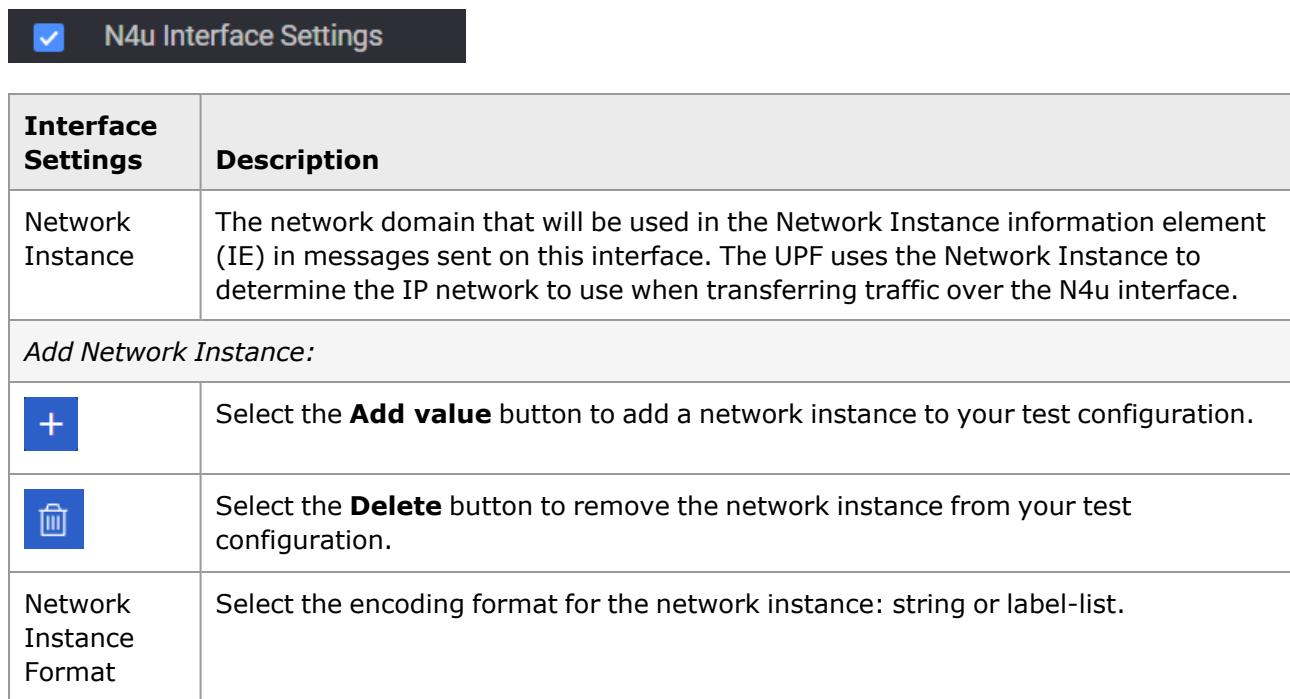

<b>Interface Settings</b>	<b>Description</b>
Network Instance	The network domain that will be used in the Network Instance information element (IE) in messages sent on this interface. The UPF uses the Network Instance to determine the IP network to use when transferring traffic over the N4u interface.
<i>Add Network Instance:</i>	
	Select the <b>Add value</b> button to add a network instance to your test configuration.
	Select the <b>Delete</b> button to remove the network instance from your test configuration.
Network Instance Format	Select the encoding format for the network instance: string or label-list.

## Connectivity Settings

The following **Connectivity Settings** enable the necessary N4u connectivity between the UPF and SMF.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

<b>Connectivity Settings</b>	<b>Description</b>
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.

<b>Connectivity Settings</b>	<b>Description</b>
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
MTU	Maximum transmission unit.
MSS	Maximum segment size.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

# DN configuration settings



Data Networks (DN) represents one of the entities in the 5G core network architecture. DN interfaces with UPF over the N6 reference point, enabling access to the public Internet, operator services, and other external data networks.

The configuration settings are described in the topics listed below.

## Topics:


<b>DN Ranges panel</b>	<b>756</b>
<b>DN Range panel</b>	<b>757</b>
<b>DN N6 Interface settings</b>	<b>758</b>
<b>DN routes settings</b>	<b>759</b>
<b>DN User Plane</b>	<b>760</b>
DN Stateless UDP Traffic	761
DN Data Traffic	762
DN Voice Traffic	765
DN Video OTT Traffic	777
DN DNS Server Traffic	779
DN Predefined Applications Traffic	782
DN Capture Replay	782
DN Synthetic	784
DN UDG	786
<b>DN Throttling settings</b>	<b>788</b>

## DN Ranges panel

The **DN Ranges** panel opens when you select the DN node from the network topology window. You can perform the following tasks from this panel:

- Add a new DN range to your test configuration.
- Open a DN range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

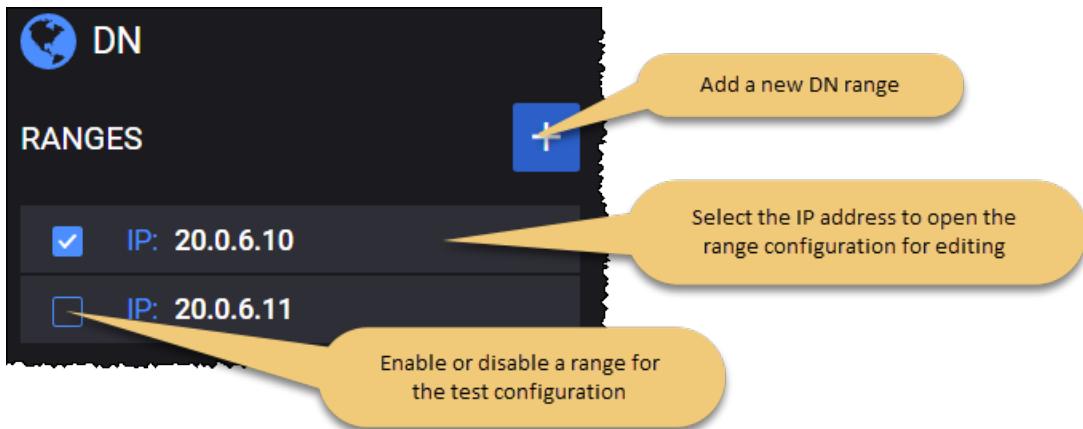

If multiple agents are assigned to the DN node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the DN node.

For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range 3 on agent1 and agent2.

## DN Range panel

You add and select DN ranges from the DN Ranges panel. When you select a DN's IP address from the **DN Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the DN range from the test configuration.
- Select **N6 Interface Settings** to configure the DN connectivity settings for the DN range.
- Select **Routes Settings** to configure the route to an UE or custom range.
- Select **User Plane** to configure the traffic generators.

## N6 Interface settings

Each DN range is identified by a unique IP address. You can add DN ranges as necessary to support your test objectives. For example, a test may require a range of UEs to concurrently access multiple data networks (for example, local and central DNs) using a single or multiple PDN sessions. In this case, you would create one DN range for each of those data networks.

The following table describes the available **Range** configuration options for each DN range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	The number of DNs in the DN range.
<i>Range Settings:</i>	

Setting	Description
N6 Interface Settings	Each DN range requires the configuration of N6 interface settings, through which a DN instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">DN N6 interface settings</a> .
Routes Settings	These settings are described in <a href="#">DN routes settings</a> .
User Plane	These settings are described in <a href="#">DN user plane</a> .
Throttling Settings	These settings are described in <a href="#">DN Throttling settings</a> .

## DN N6 Interface settings

The following table describes the **Connectivity Settings** that you configure for each DN range.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.

Connectivity Settings	Description
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## DN routes settings

**IMPORTANT** This configuration set appears only if an agent is assigned to the DN node (if possible).


The following table describes the **Route Settings** that you need to configure in order to create the route to an UE or custom range.

Settings	Description
<i>Routes Config:</i>	
	Select this button to add a new route to a specific UE range or a custom one.
<i>UE Routes Config:</i>	
	Select this button to remove the route.
Route Type	Select the route type from the drop-down list. Available options: <b>UE</b> or <b>Custom</b> .
UE Range IPv4	Select the IPv4 address of the UE range from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
UE Range IPv6	Select the IPv6 address of the UE range from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Peer UPF	Select the UPF node connected to DN over the N6 interface from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Gateway Address	The IP address assigned as gateway address.
Destination Subnet Address	Set the destination subnet address. This parameter is available only when the route type is set to <b>Custom</b> .

Settings	Description
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address. This parameter is available only when the route type is set to <b>Custom</b> .

## DN User Plane

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

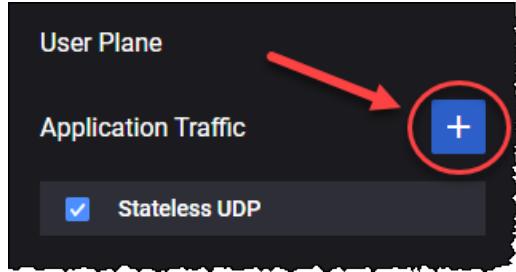

**NOTE**

Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN. For the UE User Plane settings, refer to [UE User Plane](#).

Parameter	Description
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"><li>• <b>Stateless UDP</b></li><li>• <b>Data</b></li><li>• <b>Voice</b></li><li>• <b>Video OTT</b></li><li>• <b>DNS Server</b></li><li>• <b>Predefined Applications</b></li><li>• <b>Synthetic</b></li><li>• <b>UDG</b></li></ul>
	Select this button to remove the application traffic objective from your test configuration.
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">DN Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">DN Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">DN Voice Traffic</a> .

Parameter	Description
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">DN Video OTT Traffic</a> .
DNS Server	For the settings required to configure the DNS Server objective, refer to <a href="#">DN DNS Client Traffic</a> .
Predefined Applications	For the settings required to configure the Predefined Applications objective, refer to <a href="#">DN Predefined Applications Traffic</a> .
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#">DN Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">DN UDG Traffic</a> .

## DN Stateless UDP Traffic

Use the **Stateless UDP** generator is you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings for the dowlink traffic are described below.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>dowlink</b> and can not be modified since on the DN you can only configure the downlink flow.
Packet Rate	The rate at which the test generates downlink packets, measured in packets per second (pps).
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.

Parameter	Description
Destination UE Range	Select the destination UE range from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## DN Data Traffic

The following table describes the DN Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Application Servers	<p>Each Application Traffic entry requires an application server definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing application server definition, click its name to open the Server panel where you can view and modify the server settings.</li> <li>To add another application server, click the <b>Add Server</b> button. LoadCore will open the Server panel where you will select the server type and configure the server settings.</li> </ul> <p>Refer to <a href="#">Server</a> (below) for a description of the configuration settings required by</p>

Parameter	Description
	<p>the application server.</p> <p>Also, you can add <a href="#"><u>custom parameters</u></a>, based on your test configuration requirements.</p>

## Server

You can add and delete application servers as needed to meet your test objectives. The **Server** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Server</b> button to remove the application server from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> , <b>TLS</b> , <b>QUIC</b> or <b>UDP</b> .
Type	Select the L4/L7 protocol type from the list of pre-defined application servers. The available types include: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get Responder</b>, <b>HTTP Put Responder</b>, <b>HTTP Post Responder</b>, <b>HTTP Server</b> and <b>FTP Responder</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get Responder</b>, <b>HTTPS Put Responder</b>, <b>HTTPS Post Responder</b> and <b>HTTPS Server</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Server</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional Responder</b>.</li> </ul>
Port	The port used by the application server.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server. Setting the page size on DN side will only influence GET objectives, like HTTP GET, HTTPs GET and FTP. To set the page size for PUT objectives, the change must be operated on UE side.
QoS FlowID	Select a QoS Flow ID for this application server.
Client Tx Count	This parameter is available only when the application server type is set to <b>UDP Bidirectional</b> .
Server Tx Count	This parameter is available only when the application server type is set to <b>UDP Bidirectional</b> .

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

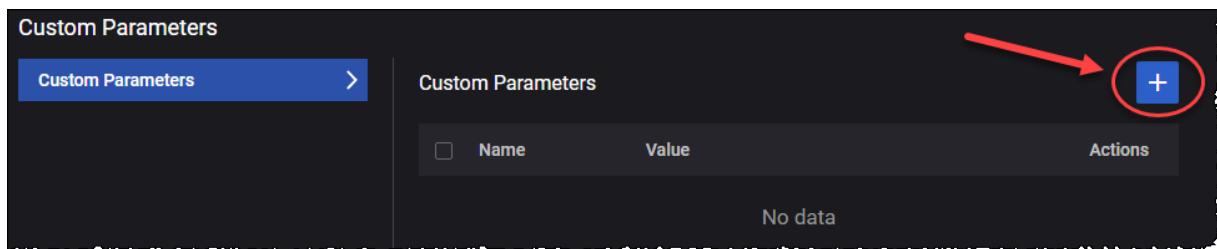

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

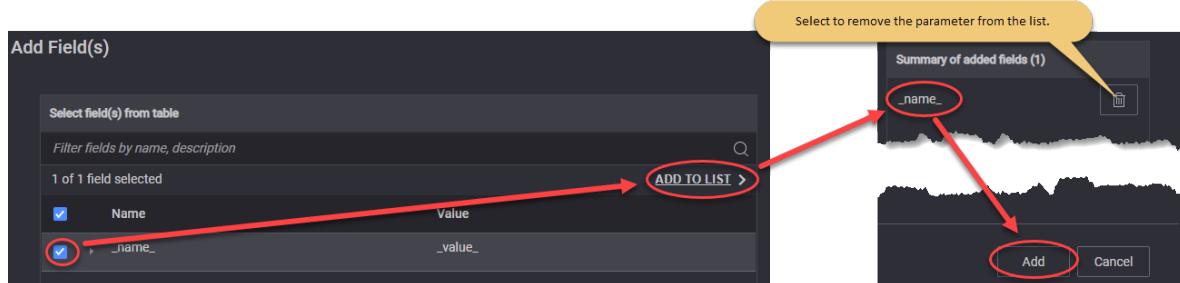

## DN Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Call Type	Select the type of call from the drop-down list.
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<i>Sip Settings:</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or

Parameter	Description
	overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPSEC	Select this option to enable IPSEC.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Media Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select the check box in order to enable this option.
Media settings:	<i>For the configuration of media settings, refer to <a href="#">Media Settings</a>.</i>

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.

## Media Settings

The parameters required for media settings are presented in the table below.

Parameter	Description
Audio Duration (ms)	Length of time to play the audio stream. You can accept the value provided by LoadCore or overwrite it with your own value.

Parameter	Description
QoS Flow ID	The QoS Flow ID for RTP traffic. Select the QoS Flows ID(s) from the drop-down list.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>AMR</b> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <b>AMR-WB</b> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <b>EVS</b> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <b>PCMU</b></li> <li>• <b>PCMA</b></li> <li>• <b>iLBC</b></li> <li>• <b>G722</b></li> <li>• <b>G723</b></li> <li>• <b>G729</b></li> </ul> The parameters of each audio codec are presented below.
<i>Advanced Media Settings</i>	
Custom SDP	Select this panel to open the custom SDP settings.
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>NB Codecs IPv6</b></li> <li><b>AMR-WB IPv6</b></li> <li><b>Multimedia IPv4</b></li> </ul>
<i>QoE Settings</i>	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

### AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li><b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li><b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

### EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	<p>The following options are available:</p> <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

### PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE**

The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:


- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

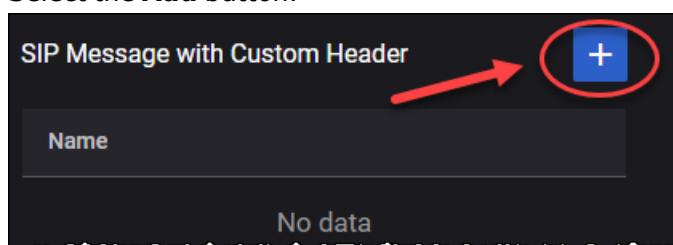

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

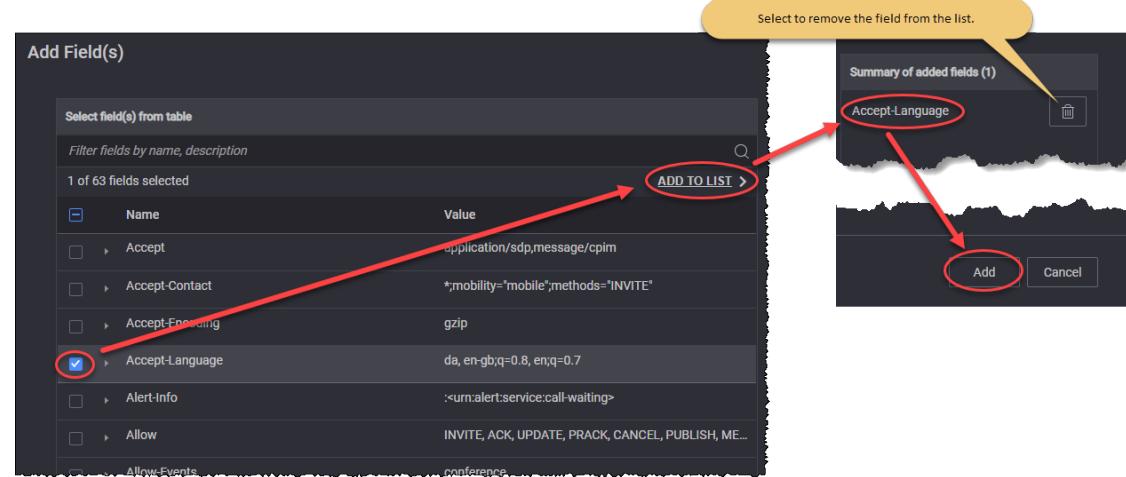

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261,	nexnonce="47364c23432d2e131a5fb210812c"

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	IETF RFC 3310	
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC	3600

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	3261	
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associated-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	3327	
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com", qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque ="", stale=False, algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice", realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",r esponse="245f23415f11432b3434341c022"
Proxy-	IETF	foo

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Require	RFC 3261	
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org? Replaces=425928%40bobster.example.com.3%3Bto-tag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore

Parameter	Description	Value
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPC	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPC	The OPC value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPC Increment	The number used to increment the OPC value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPC value.

## DN Video OTT Traffic

The following table describes the Video OTT Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>OTT Servers:</i>	
	Select this button to add an OTT server to your test configuration.
	Select this button to remove the OTT server from the test configuration.
Server Name	Set the server name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Streams	Refer to <a href="#">Streams</a> (below) for descriptions of the OTT server streams settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Streams

To open the OTT Server Streams panel, select the **Open Streams** button.



The OTT Server Streams parameters are described in the following table.

Parameter	Description
	Select this button to add a stream to your test configuration.
	Select this button to remove the stream from the test configuration.
Stream Name	Set the stream name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
URL	Set the URL path.
Type	Select the stream type from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Real</b></li> <li>• <b>Synthetic</b></li> </ul>
Protocol	Select the protocol from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Apple HLS</b></li> <li>• <b>DASH</b>.</li> </ul> If the stream type is set to <b>Synthetic</b> , you can choose one protocol from list. If the stream type is set to <b>Real</b> , you will see the protocol of real stream loaded.
Stream Duration	If the stream type is set to <b>Synthetic</b> , you can configure the stream duration in seconds. If the stream type is set to <b>Real</b> , you will see the real stream duration.
Segment Duration	If the stream type is set to <b>Synthetic</b> , you can configure the segment duration in seconds. If the stream type is set to <b>Real</b> , you will see the real segment duration.
Quality Levels:	<i>Set the quality value for each level.</i>
	Select this button to add a quality level to your test configuration.
	Select this button to remove the quality level from the test configuration.
Bitrate (kbps)	Set the value of the bitrate.
Resolution	Select the resolution from the drop-down list. Available options: <b>QCIF, 240p, nHD, 480, WXGA, FHD, QHD, 4K, 8K</b> .
Frames per second	Set the number of frames per second.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

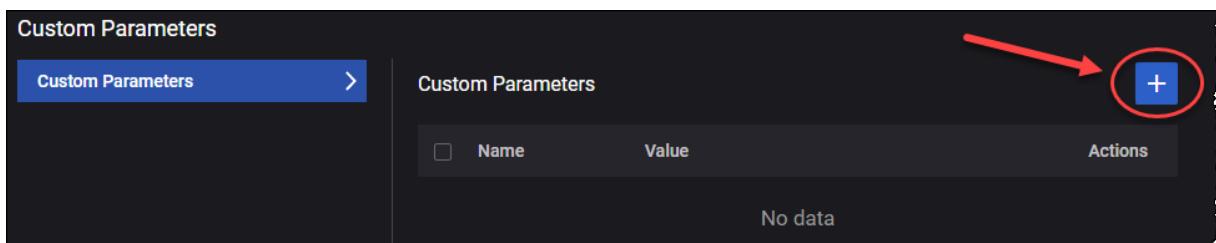

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

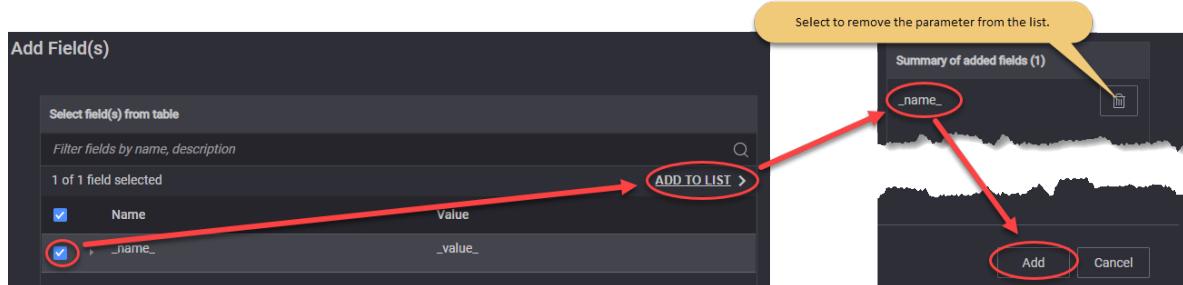

## DN DNS Server Traffic

The following table describes the DNS Server Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Server</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single,

Parameter	Description
	unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
<i>DNS Servers:</i>	
	Select this button to add an DNS server to your test configuration.
	Select this button to remove the DNS server from the test configuration.
Type	Select the type from the available options.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Zone Manager	Refer to <a href="#">Zone Manager (below)</a> for descriptions of the DNS server zones settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Zone Manager

To open the DNS Server Zones panel, select the **Open Zones** button.



The DNS Server Zones parameters are described in the following table.

Parameter	Description
	Select this button to add a zone to your test configuration.
	Select this button to remove the zone from the test configuration.
Zone Name	Set the zone name. Each zone is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Master Server	Provide the value for the master server.
Resource Records (RRs)	

Parameter	Description
	Select this button to add a resource record to your test configuration.
	Select this button to remove the resource record from the test configuration.
Type	Select the type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Hostname	Set the hostname.
Address	Provide the address.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

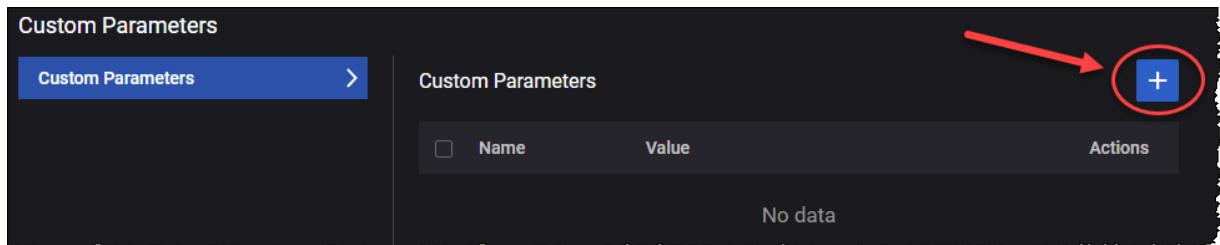

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

### For example ...

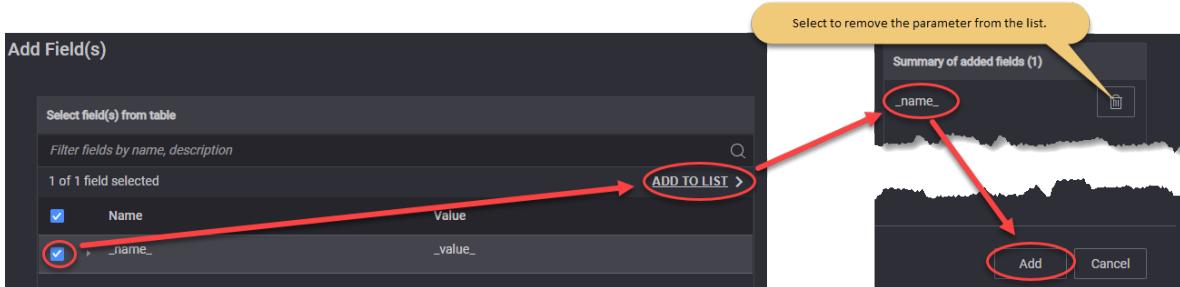

## DN Predefined Applications Traffic

The following table describes the Predefined Applications parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Predefined Applications</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Predefined Traffic Profiles	Select the traffic profile from the available options.

## DN Capture Replay

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .

Parameter	Description
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> miliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b> (option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).
Start Delay (s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
DNN ID	Select the DNN value for the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	

Parameter	Description
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> . Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in pcap-filter format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).
<i>Overrides</i>	
Override QoS Flow ID	This option is available only if the <i>Role</i> is set to <b>Initiator</b> . Select the toggle button to enable it.
Qos Flow ID	This option is available only when <i>Override QoS Flow ID</i> option is enabled. Select the QoS Flows ID(s) from the drop-down list.
Override IP Address	Select the toggle button to enable it. When enabled, <i>Destination IP Address</i> and <i>Destination IP Address Count</i> fields become available.
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Address Count	The destination IP address count value.

## DN Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.

Parameter	Description
	The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.

Parameter	Description
	throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the Traffic Flow parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## DN UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.

Parameter	Description
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .

Parameter	Description
Out of Band Signaling	Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a> . <b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

## DN Throttling settings

Throttling can be enabled from this menu per DN range (by selecting the corresponding check box), and matching user plane traffic over TCP, UDP or both.

Throttling can be useful, for example, when the local network interface that is generating downlink traffic has a higher speed than the radio interface between the UE and the GNB. If the traffic generated from either direction is bursty, the throttling mechanism will, instead of dropping packets, add them in a queue and spread them throughout a second according to the configured bit rate.

**NOTE** The throttling options only work for interfaces that are running IxStack, either over DPDK or over raw sockets, depending on where the traffic is terminated (if agent is present on DN/SGi server then its N6 interface should be IxStack; if there is no agent on DN/SGi, than N3 interface should be IxStack on UPF/CoreSim agent).


The following table describes the **Throttling Settings** that you can configure for each DN range.

Settings	Description
Bit Rate (mbps)	Can be set between 10 and 10000. Represents the value at which the traffic will be throttled, and it will become the enforced maximum bit rate.

<b>Settings</b>	<b>Description</b>
Throttle TCP Traffic	Select the check box to throttle UP traffic over TCP.
Throttle UDP Traffic	Select the check box to throttle UP traffic over UDP.

**CHAPTER 9****IP Endpoints tests: configuration settings**

This section provides descriptions of the configuration settings that are specific to the **IP Endpoints** test type:

**Topics:**

<b>Global Settings .....</b>	<b>792</b>
DNS Settings .....	792
Advanced Settings .....	793
UDP Buffer Settings .....	795
Impairment .....	795
Milenage .....	795
<b>IP Client configuration settings .....</b>	<b>797</b>
IP Client Ranges panel .....	797
IP Client Range panel .....	798
IP Client interface settings .....	799
IP Client Timeline .....	800
IP Client User Plane .....	800
Stateless UDP Traffic .....	801
Data Traffic .....	802
Voice Traffic .....	806
Video OTT Traffic .....	819
DNS Client Traffic .....	823
ICMP Client .....	826
Capture Replay .....	827
Synthetic .....	828
UDG .....	830
<b>Triple Play Server configuration settings .....</b>	<b>835</b>
CSCF Range panel .....	835
Media Function Range panel .....	836
Data/Video configuration settings .....	837


Data/Video Ranges panel .....	838
Data/Video Range panel .....	838
Data/Video interface settings .....	839
Data/Video User Plane .....	840
Data/Video Throttling settings .....	867

## Global Settings

The Global Settings include parameters that either have overall applicability to the test or can be used (by reference) in the configurations of other nodes in the test topology.

To access the Global Settings:

1. Select the **Test Overview** tab:

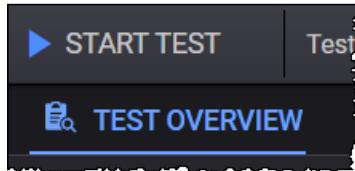

2. Click **Expand** if the Test Overview section is collapsed.
3. Click the Global Settings' **Edit** button:



LoadCore opens the **Global Settings** panel from which you can access and configure the following setting:

<b>DNS Settings</b>	<b>792</b>
<b>Advanced Settings</b>	<b>793</b>
<b>UDP Buffer Settings</b>	<b>795</b>
<b>Impairment</b>	<b>795</b>
<b>Milenage</b>	<b>795</b>

### DNS Settings

The following table describes the settings required for the DNS Resolver configuration.

Setting	Description
<i>DNS Settings:</i>	
Cache Timeout (ms)	The amount of time (in milliseconds) the local DNS stores the address information.
<i>DNS Name Servers:</i>	
	Select the <b>Add DNS Name Server</b> button to add a new DNS server to your test configuration. Set the IP address of the DNS server.
	Select the <b>Delete</b> button to remove the DNS server from your test configuration.

## Advanced Settings

The advanced settings are described in the following table:

Setting	Description
Overwrite Capture Size for IxStack	Enable this option to overwrite the capture size for IxStack.
Custom Capture Size for IxStack	Set the custom value of the capture size for IxStack.
Enable Capture Circular Buffer for IxStack	Select this option to enable circular buffer capture for IxStack.
Enable Capture On Loopback Interface	Select this option to enable packet capture on the loopback interface.
Enable User Plane Advanced Stats	Select an option from the drill-down list for the user plane advanced statistics: <ul style="list-style-type: none"> <li>• <b>None</b> - no advanced statistics enabled.</li> <li>• <b>One Way Delay</b> - the time spent by the packet on the network from the moment it is sent until it is received.</li> <li>• <b>Delay Variation Jitter</b> - the per polling interval average delay variation jitter value calculated for all packets.</li> </ul>
Automated Polling Interval	This option is enabled by default. The statistics are retrieved based on a predefined polling interval.
Custom Polling Interval (sec)	This option becomes available only when <i>Automated Polling Interval</i> option is disabled. It allows you to create a custom polling interval.
Log Level	Select one of the options: <ul style="list-style-type: none"> <li>• <b>Info</b> - Designates informational messages that highlight the progress of the application at coarse-grained level.</li> <li>• <b>Debug</b> - Designates fine-grained informational events that are most useful to debug the application.</li> </ul>
Log Tags	Select one or more tags from the drop-down list. Log Tags are used to collect specific information in the logs; they work with Debug

Setting	Description
	and with Info log levels. Rather than allowing the logs to collect information about everything, you can use Log Tags to collect specific information—such as SCTP or HTTP messages—during the test. This limits the amount of information that is collected, making it easier for you to extract the data that you need.
Ignore Offline Agents At Runtime	When this option is enabled, if an agent loses connection to the Middleware during a test, the test will not stop but continue without that agent.
IP Client Capture Replay Mode	The CaptureReplayMode that will be used on all ranges of the IP client.
Traffic Settings	<i>The settings are described <a href="#">here</a>.</i>

## Traffic Settings

The following table describes the settings on the Traffic Settings pane.

Setting	Description
<i>Reserved cores for RTP Tx:</i>	
Enable RTP	Select this option to enable RTP.
Cores	The number of cores reserved for RTP transmission.
<i>Traffic Control</i>	
Traffic Control Port	Set the traffic control port. Value should be in range: 1024-65535. By default, it is set to 44556.
Enable Jumbo Frame	Enable this option if your test traffic requires the use of jumbo frames (Ethernet frames with more than 1500 bytes of payload). When you enable this option, you can then configure any of the MTU parameters in the test to any valid jumbo frame size (up to 9,000 bytes).
Enable IxStack L4 Port Randomization	Select this option to enable IxStack L4 Port Randomization.
Enable UDP Port Recycling	Select this option to enable IxStack UDP Port Recycling.
Enable TCP Port Recycling	Select this option to enable IxStack TCP Port Recycling.
Enable ICMP	Select this option to enable it. This will permit requests and responses to ICMP

Setting	Description
Responses	packets on subscribers addresses (it will have a significant memory impact on server nodes - AMF, UPF).

## UDP Buffer Settings

The following table describes the UDP buffer settings.

Setting	Description
UDP Rx Buffer (bytes)	The size in bytes of the receive buffers for UDP sockets. The values should be in range: 212992-134217728.
UDP Tx Buffer (bytes)	The size in bytes of the transmit buffers for UDP sockets. The values should be in range: 212992-134217728.

## Impairment

The following table describes the settings required to define the impairment profile.

Setting	Description
<i>Impairment Profiles:</i>	
	Select the <b>Add impairment profile</b> button to add a new profile to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete impairment profile</b> button to remove the profile from your test configuration.
Name	Each impairment profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Action Type	Select an option from the drop-down list. The available option is: <b>Custom script</b> .
Script file	This parameter is available only when <b>Action Type</b> is set to <b>Custom script</b> . It allows you to add a custom script, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## Milenage

The following table describes the settings required to override the milenage constants.

Setting	Description
<i>Milenage Constants</i>	
Override Milenage Constants	Enable this option to override the milenage constants.



# IP Client configuration settings



The IP Client configuration settings are described in the topics listed below.

## Topics:


<b>IP Client Ranges panel</b>	<b>797</b>
<b>IP Client Range panel</b>	<b>798</b>
<b>IP Client interface settings</b>	<b>799</b>
<b>IP Client Timeline</b>	<b>800</b>
<b>IP Client User Plane</b>	<b>800</b>
Stateless UDP Traffic	801
Data Traffic	802
Voice Traffic	806
Video OTT Traffic	819
DNS Client Traffic	823
ICMP Client	826
Capture Replay	827
Synthetic	828
UDG	830

## IP Client Ranges panel

The **IP Client Ranges** panel opens when you select the IP Client node from the topology window. You can perform the following tasks from this panel:

- Set the **Distribution Mode**:
  - **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the UPF node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range 3 on agent1 and agent2.
  - **Round Robin Ranges on Agents** - influences the way configuration is distributed in case of multiple agents assigned on the UPF node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1, range2 on agent2, range3 on agent1.
- Add a new IP Client range to your test configuration.
- Open a IP Client range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

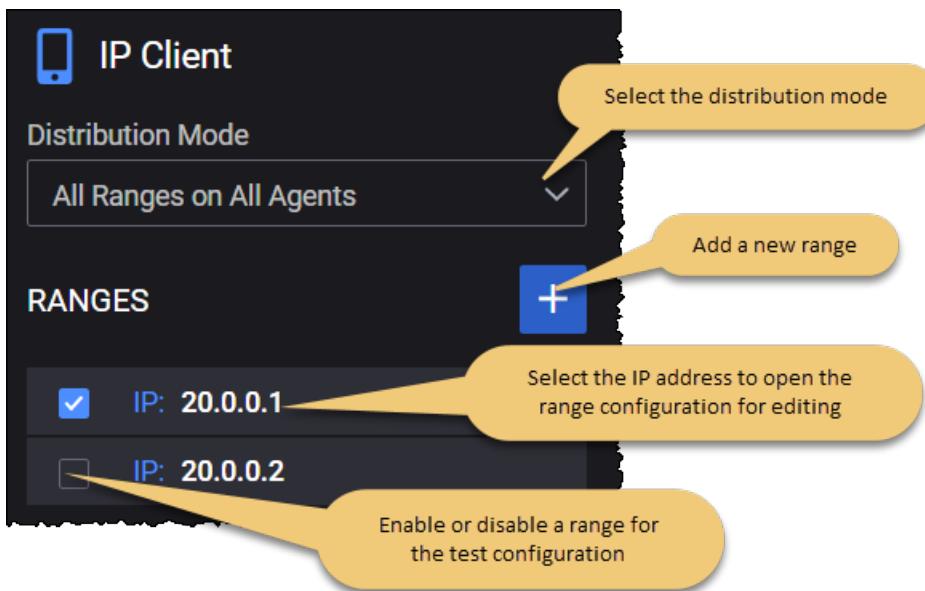

## IP Client Range panel

You add and select IP Client ranges from the IP Client Ranges panel. When you select an IP address from the **IP Client Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the IP Client range from the test configuration.
- Select the **Create Range Copies** button to create range copies that will be added to your test configuration.
- Designate the range as a **Device Under Test**.
- Use the **Range Settings** panel to configure the node and connectivity settings and the traffic generators for the IP Client range.

## IP Client range controls and settings

Each IP Client range is identified by a unique IP address. You can add and delete IP Client ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each IP Client range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
	Select the <b>Create Range Copies</b> button to create copies of your range. Also, you can specify the number of ranges to be created.
Device Under Test	Enable this option if your IP Client is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the IP Client functionality (if it is selected in the Topology window).

Setting	Description
Range Count	The number of IP clients in the IP Client range.
Remote Server	The IP address of the remote server.
<i>Range Settings:</i>	
Interface Settings	Each IP Client range requires the configuration of the interface settings, through which an IP Client instance enables connectivity and interaction with other functions in the network. These settings are described in <a href="#">IP Client interface settings</a> .
Timeline	These settings are described <a href="#">IP Client Timeline</a> .
User Plane	These settings are described in <a href="#">IP Client User Plane</a> .

## IP Client interface settings

The following table describes the **Connectivity Settings** that you configure for each IP Client range.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
IP Address Increment	The value by which the IP addresses will be incremented.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	Select the MAC address to open the MAC configuration panel for editing
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.

Connectivity Settings	Description
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## IP Client Timeline

The following table describes the **Timeline** settings that you configure for each IP Client range.

Setting	Description
Timeline	
Total Test Time (s)	The duration of time (in seconds) for session to be active.

## IP Client User Plane

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

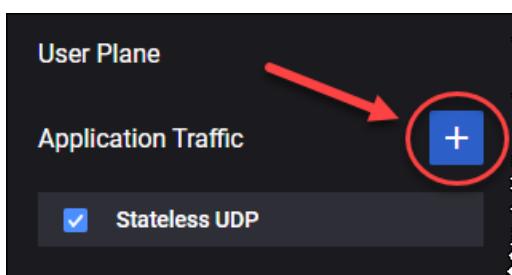

Parameter	Description
<b>+</b>	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"> <li>• <b>Stateless UDP</b></li> <li>• <b>Data</b></li> <li>• <b>Voice</b></li> <li>• <b>Video OTT</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>DNS Client</b></li> <li>• <b>ICMP Client</b></li> <li>• <b>Capture Replay</b></li> <li>• <b>Synthetic</b></li> <li>• <b>UDG</b></li> </ul>
	Select this button to remove the application traffic objective from your test configuration.
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">Video OTT Traffic</a> .
DNS Client	For the settings required to configure the DNS Client objective, refer to <a href="#">DNS Client Traffic</a> .
ICMP Client	For the settings required to configure the ICMP Client objective, refer to <a href="#">ICMP Client Traffic</a> .
Capture Relay	For the settings required to configure the Capture Replay objective, refer to <a href="#">Capture Replay</a> .
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#">Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">UDG Traffic</a> .

## Stateless UDP Traffic

Use the **Stateless UDP** generator if you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings are described below.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.

Parameter	Description
Flow Type	This field is set to <b>uplink</b> and can not be modified.
Packet Rate	The rate at which the test generates downlink packets, measured in packets per second (pps).
Payload Size	The size of the packet payload, in bytes.
Delay (s)	The time to wait before the application traffic flows start.
Destination UDP Port	The start destination port number to place in the UDP header.
Source UDP Port	The source port number to place in the UDP header.

## Data Traffic

The following table describes the Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Throughput</b> . The other options are: <b>Concurrent Connections</b> and <b>Connections Rate</b> .
Concurrent Connections	Set the number of concurrent connections. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Connection Duration (s)	Set a value for the connection duration. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Connections Rate per Second	Set the value for connections rate per second. This parameter is available only when Objective type is set to <b>Connections Rate</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.
Optimize Throughput (per IP Client)	Select this option to enable it.

Parameter	Description
Connection Multiplier (per IP Client)	Set the connection multiplier value.
Ramp Up Rate	Set the value for the this parameter.
Ramp Down Rate	Set the value for the this parameter.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each IP Session has been established.
<i>TCP Settings</i>	<i>Select the pane to open the TCP settings.</i>
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value. The default Min value is 2000 milliseconds and the permissible range of values is between 50 to 120000 milliseconds.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to. The default value is 3200 milliseconds and the permissible range of values is between 1000 to 120000 milliseconds.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Selective Acknowledgments	Select the toggle button to enable this option.
<i>Application Traffic Flows</i>	<p><i>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</i></p> <ul style="list-style-type: none"> <li><i>To select an existing traffic flow definition, click its name to open the</i></li> </ul>

Parameter	Description
	<p><i>Flow panel where you can view and modify the flow settings.</i></p> <ul style="list-style-type: none"> <li>• To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> <p>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows.</p> <p>Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>• If <a href="#">Optimize Throughput (per IP Client)</a> option is enabled: <b>TCP</b>, <b>TLS</b>, <b>QUIC</b> or <b>UDP</b>.</li> <li>• If <a href="#">Optimize Throughput (per IP Client)</a> option is disabled: <b>TCP</b>, <b>TLS</b> or <b>UDP</b>.</li> </ul>
Type	Select the L4/L7 protocol type from the list of pre-defined flows. The available options are: <ul style="list-style-type: none"> <li>• For <b>TCP</b> transport protocol: <b>HTTP Get</b>, <b>HTTP Put</b>, <b>HTTP Post</b> and <b>FTP</b>.</li> <li>• For <b>TLS</b> transport protocol: <b>HTTPS Get</b>, <b>HTTPS Put</b> and <b>HTTPS Post</b>.</li> <li>• For <b>QUIC</b> transport protocol: <b>HTTP3 Get</b>, <b>HTTP3 Put</b> and <b>HTTP3 Post</b>.</li> <li>• For <b>UDP</b> transport protocol: <b>UDP Bidirectional</b> (a flow in which a UDP client communicates with a server over a bidirectional datagram socket).</li> </ul>
Port	The port used by the flow.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). For example, a flow may have default actions: log in to a social media site, post a message, then log out. Iterations is the number of times you want this flow of actions to be executed.
Percentage	The percentage of the throughput will be of this type of flow.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.
Tx Packets Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.

Parameter	Description
RX Packets Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
URL	The URL that is being accessed by the flow's protocol.
Max Transactions per Connection	Set the value for this parameter.
Enable DNS Query Per Connection	Select the check-box to process only one DNS query per TCP connection.

## Custom Parameters

In this section you can add custom parameters or custom header fields by selecting the required pane:

- **Custom Parameters** or,
- **Custom Headers**


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

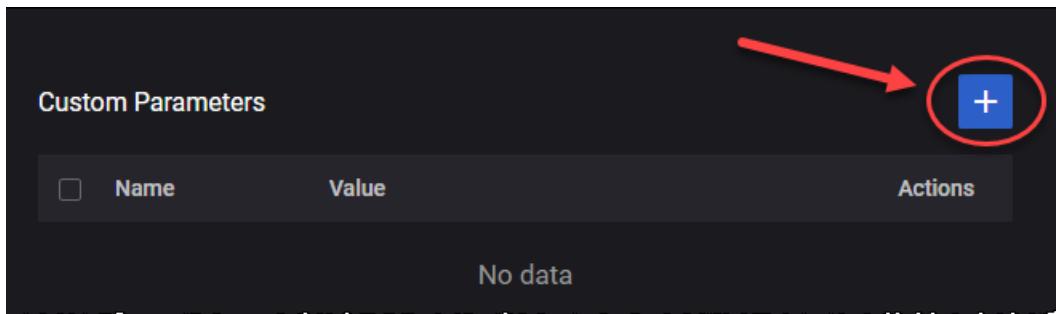

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

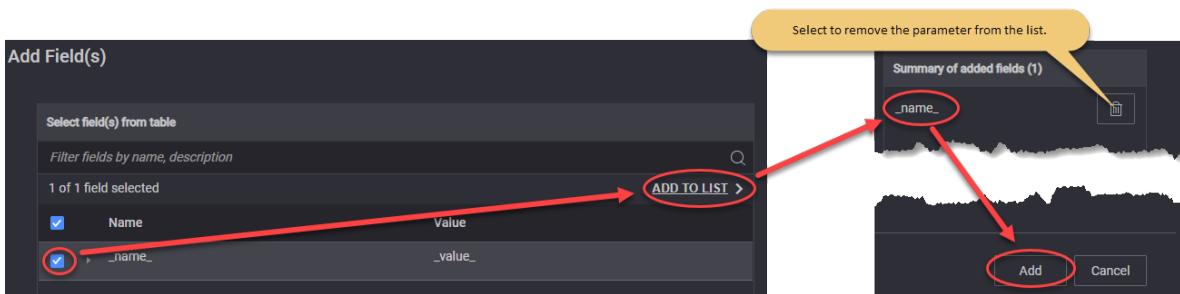

To add custom header fields, select the **Custom Headers** pane and follow the steps presented above for custom parameters.

## Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Ramp Up Rate	Set the value for this parameter.
Ramp Down Rate	Set the value for this parameter.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each IP Session has been established.
Call Type	Select the type of call from the drop-down list.
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<b>Sip Settings:</b>	

Parameter	Description
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPSEC	Select this option to enable IPSEC.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Advanced SIP Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select the check box in order to enable this option.
Audio settings:	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
Video Settings:	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
MSRP Settings:	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
Advanced Media Settings:	
Custom SDP	<i>Select this panel to open the custom SDP settings.</i>
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>NB Codecs IPv6</b></li> <li><b>AMR-WB IPv6</b></li> <li><b>Multimedia IPv4</b></li> </ul>
<i>QoE Settings</i>	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
Iterations	The number of times the Call Type will be executed. It can be finite or infinite (set to zero).
MCC	Set the Mobile Country Code (MCC) value.
MNC	Set the Mobile Network Code (MNC) value.
MSIN	<p>Set the MSIN value.</p> <p>The Mobile Subscriber Identification Number (MSIN) is a number that a wireless operator uses to uniquely identify a mobile phone. It is—at most—10-digits long. The MSIN is used (in combination with the MCC and MNC) to form the International Mobile Subscriber Identity (IMSI) number.</p>
IMSI Phone Increment	The value by which the IMSI phone number is incremented.
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.
Source Phone Increment	The value by which the destination phone number is incremented.
Destination Port	The destination port number.

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	<p>Select the audio codec from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <a href="#"><b>AMR</b></a> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>AMR-WB</b></a> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>EVS</b></a> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <a href="#"><b>PCMU</b></a></li> <li>• <a href="#"><b>PCMA</b></a></li> <li>• <a href="#"><b>iLBC</b></a></li> <li>• <a href="#"><b>G722</b></a></li> <li>• <a href="#"><b>G723</b></a></li> <li>• <a href="#"><b>G729</b></a></li> </ul> <p>The parameters of each audio codec are presented below.</p>

## AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.

Parameter	Description
	<ul style="list-style-type: none"> <li><b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li><b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

## EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	<p>The following options are available:</p> <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

## PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

## Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
<i>Video Codecs</i>	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)
- [Custom Parameters](#)
- [SIP 3GPP IPSEC](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE**

The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:

- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

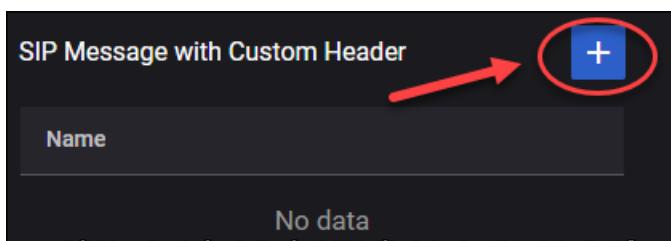

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC	:<urn:alert:service:call-waiting>

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	3261	
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nextnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:0 0 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-	IETF RFC	+3gpp.trf=sip:trf3.operator3.com

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Caps	6809, 3GPP TS 24.229	
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associate-d-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-	IETF RFC	supported

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Media	IETF RFC 5009	
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com",qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque="",stale=False, algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice",realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy

Parameter	Description	Value
n		
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore

Parameter	Description	Value
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication


The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the provided value or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPc	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the provided value or enter an OP value of your own choosing.
OPc	The OPc value is derived from the subscriber key K and the operator dependent value OP. You can accept the provided value or enter an OP value of your own choosing.
OPc Increment	The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.

## Custom Parameters

You can add custom parameters as follows:


1. The Custom Parameters panel, select the **Add** button.

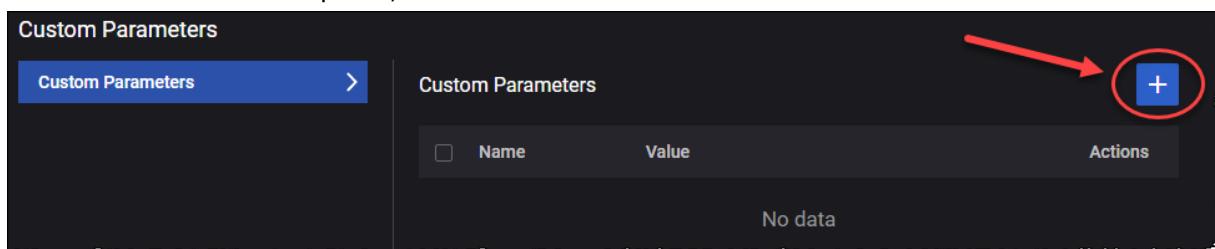

The Add Field(s) opens.

2. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

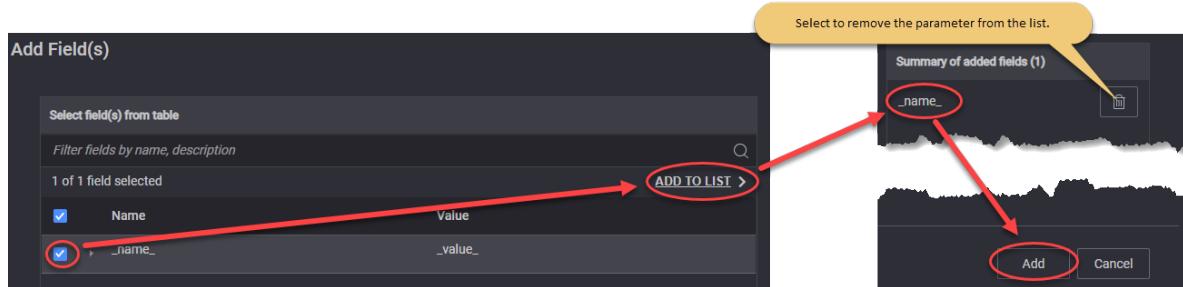

The following custom parameters are available:

Parameter	Description	Value
DelayBefore SIPInvite	Delay in milliseconds before sending SIP INVITE.	1000
DealyBeforeRTP	Delay in milliseconds before RTP session start.	0
DelayAfterRTP	Delay in milliseconds after RTP session end.	0
DeregisterLoop	Set the number of calls/loops before a SIP deregistration will be performed. Any SIP deregistration will be followed by a new SIP registration.	0
DelayBefore180	Delay in milliseconds before 180 Ringing message will be sent.	0
DelayBefore200INVITE	Delay in milliseconds before 200 OK message for INVITE will be sent.	0
debugIPSEC	Activate IPSEC debug. Please use debug only for a reduced number of simulated UEs.	0
timeoutSIP	Global timeout in milliseconds for any SIP message. Default is set to standard	32000

Parameter	Description	Value
	32000ms. Use this parameter to modify the default value.	
MaxActiveLimit	Set maximum allowed concurrent TCP connections per CPU Core. Default it is set to 8000. Please use this parameter to modify the deafult value.	8000

## SIP 3GPP IPSEC

The parameters required for SIP 3GPP IPSEC are presented in the table below.

Parameter	Description
Port-C	Set the value for this parameter.
Port-S	Set the value for this parameter.
Authentication Algorithm	Select the authentication algorithm: <ul style="list-style-type: none"> <li>• <b>hmac-sha-1-96</b></li> <li>• <b>aes-gmac</b></li> <li>• <b>null</b></li> </ul>
Encryption Algorithm	Select the encryption algorithm: <ul style="list-style-type: none"> <li>• <b>aes-gcm</b></li> <li>• <b>aes-cbc</b></li> <li>• <b>null</b></li> </ul>

## Video OTT Traffic

The following table describes the Video OTT(Over-the-Top) traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	Select the value from the drop-down list: <b>Simulated Users</b> or <b>Throughput</b> .
Ramp Up Rate	Set the value for the this parameter.
Ramp Down	Set the value for the this parameter.

Parameter	Description
Rate	
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each IP Session has been established.
Advanced OTT	Select the <b>Open Advanced OTT</b> button to enable and configure <a href="#">Advanced OTT Settings</a> .

## Advanced OTT Settings

The parameters required to configure the OTT advanced settings are presented in the table below.

Parameter	Description
Application Traffic Flow	<p>Each Application Traffic entry requires at least one Ott traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul>
<i>Flow:</i>	
	Select this button to remove this flow from your test configuration.
Type	<p>Select the Ott traffic type from the drop-down list. Available options:</p> <ul style="list-style-type: none"> <li><b>DASH</b></li> <li><b>HLS</b></li> </ul>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
URL	Select the URL from the drop-down list populated with the defined on the server.
Play Until End	If this option is enabled, the Play Duration field is disabled and the original

Parameter	Description
	playtime is used.
Transport	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero).
Percentage	The percentage of Test Objective to execute this flow.
Quality Control	These settings are presented in the <a href="#">Quality Control</a> pane.
Advanced Client settings	These settings are presented in the <a href="#">Advanced Client Settings</a> pane.

## Quality Control

The parameters required for Quality Control settings are presented in the table below.

Parameter	Description
<i>Jitter Buffer:</i>	
Initial Delay (s)	Set the number of seconds to wait before playback. The default value is 20.
Maximum Size (s)	Set the number of seconds to be buffered on the client side. The default value is 20.
MOS P.1203	Select an option from the drop-down list: <b>Disabled</b> or <b>Mode 0</b> .
Quality Control Mode	Select the quality control mode from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Adaptive Bit Rate</b></li> <li>• <b>Quality Predefined Levels</b></li> <li>• <b>Lowest Quality</b></li> <li>• <b>Highest Quality</b></li> </ul>
Number of segments	This field is available and editable only when the Quality Control Mode is set to <b>Adaptive Bit Rate</b> .
<i>Play Profiles:</i> The following settings are available and editable only when the Quality Control Mode is set to <b>Quality Predefined Levels</b> .	
	Select this button to add a predefined play profile to your test configuration.

Parameter	Description
<i>Quality Shift</i>	
	Select this button to remove this play profile from your test configuration.
Shift Type	Select the shift type from the drop-down list. Available options <ul style="list-style-type: none"> <li>• <b>Stay at Current Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lower Bitrate</b></li> <li>• <b>Change to the Higher Bitrate</b></li> </ul>
Numbers of levels to shift	This field is available and editable only when the Shift Type is set to <b>Change to Higher Bitrate</b> or <b>Change to Lower Bitrate</b> .
Play Until End	If this check box is selected, the <b>Play duration</b> field is disabled and the original playtime is used.
Play duration(sec)	This field is available only if the <b>Play Until End</b> check box is not selected. It allows you to set a custom playtime.

## Advanced Client Settings

The parameters required for Advanced Client settings are presented in the table below.

Parameter	Description
Timeshift for Live	Set a value for this field. 0 means no timeshift.
Enable DNS Query Per Connection	Select the check box to process only one DNS query per TCP connection.
Custom Parameters	For more details, refer to <a href="#">Custom Parameters and Custom Headers</a> .
Custom Headers	For more details, refer to <a href="#">Custom Parameters and Custom Headers</a> .

## Custom Parameters and Custom Headers

You can add custom parameters or custom header fields by selecting the required pane:

- **Custom Parameters** or,
- **Custom Headers**


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

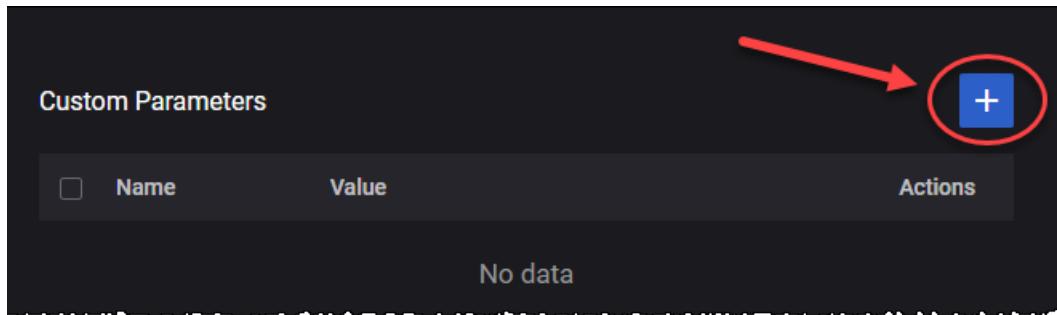

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

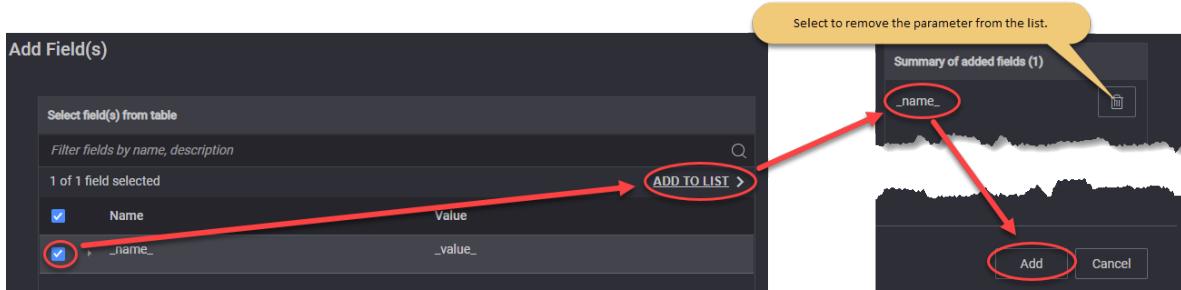

To add custom header fields, select the **Custom Headers** pane and follow the steps presented above for custom parameters.

## DNS Client Traffic

The following table describes the DNS Client Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Connection multiplier	Set the value for the connection multiplier.

<b>Parameter</b>	<b>Description</b>
(per IP Client)	
Ramp Up Rate	Set the value for the this parameter.
Ramp Down Rate	Set the value for the this parameter.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each IP Session has been established.
Application Traffic Flows	<p>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>• To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>• To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> <p>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows. Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Type	By default, the type is set to <b>DNS Client</b> .
Port	The port used by the flow.
DNS Server IP	Set the DNS server IP address.
Number of DNS servers	Set the number of DNS servers.
Hostname	Set the hostname.
Query Type	Select the query type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

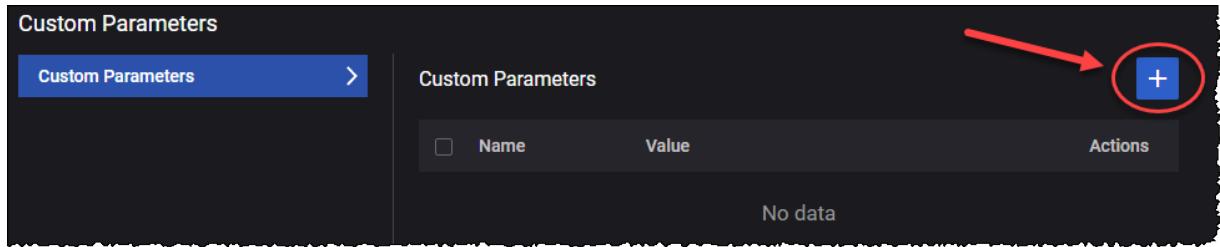

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

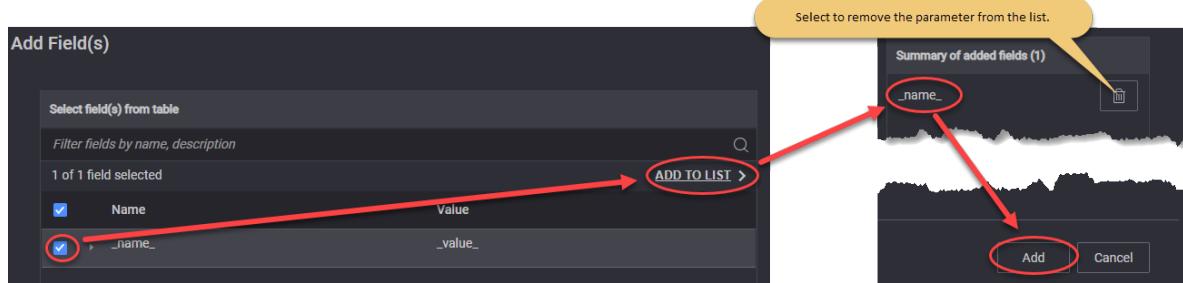

## ICMP Client

The following table describes the ICMP Client parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>ICMP Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Ramp Up Rate	Set the value for the this parameter.
Ramp Down Rate	Set the value for the this parameter.
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each IP Session has been established.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Traffic Flow	Refer to <a href="#">Traffic Flow</a> for a description of the configuration settings for these traffic flows.

## Traffic Flow

The **Traffic Flow** parameters are described in the following table.

Parameter	Description
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
Interval (ms)	Set the interval value.
Timeout (ms)	Set the timeout value.

## Capture Replay

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Ramp Up Rate	Set the value for the this parameter.
Ramp Down Rate	Set the value for the this parameter.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> miliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b> (option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).
Start Delay (s)	The number of seconds to wait after all IPs have been configured.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> . Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in pcap-filter format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).

## Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an

Parameter	Description
	acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: TCP or UDP.
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Client Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the server sends in a burst.
Server Burst Size (bytes)	The packet size in bytes.
Server Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that

Parameter	Description
	will be generated for this UE range, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the

Parameter	Description
	throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Out of Band Signaling	<p>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</p> <p><b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.</p>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Reconnect Timeout (ms)	The time interval after which the client attempts to reconnect after the connection was interrupted. 0 means that reconnect is disabled.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.

Parameter	Description
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

The following table describes the **UDG Traffic Parameters**.

Parameter	Description
UGD Test Type	Select the test type from the drop-down list. Available options: <b>Transmission</b> or <b>Ping-pong</b> . For each test type, the parameters are described below.
<i>Transmission</i>	
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Interval Unit	Select the server burst interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .
Server Burst Size (packets)	The number of packets the server sends in a burst.
Server Burst Size (bytes)	The packet size in bytes.
<i>Ping-pong</i>	
Ping Direction	Set the ping direction. Available options: <b>Upstream</b> or <b>Downstream</b> .
Ping Interval	Set the ping time interval.
Ping Interval Unit	Set the ping interval unit. Available options: <b>Milisecond</b> or <b>Microsecond</b> .
Pong Number	Set the value for the pong number.

Parameter	Description
Client Packet Size (bytes)	The packet size in bytes.
Server Packet Size (bytes)	The packet size in bytes.

# Triple Play Server configuration settings

In LoadCore, the Triple Play Server has three important components:

- Call Session Control Function (CSCF) – responsible for controlling sessions between endpoints and applications.
- Media Function
- Data/Video

The configuration settings for these three components are described in the topics listed below.

## Topics:

<b>CSCF Range panel</b>	<b>835</b>
<b>Media Function Range panel</b>	<b>836</b>
<b>Data/Video configuration settings</b>	<b>837</b>
Data/Video Ranges panel	838
Data/Video Range panel	838
Data/Video interface settings	839
Data/Video User Plane	840
Data/Video Throttling settings	867

## CSCF Range panel

When you select the CSCF's IP address from the **CSCF Ranges** panel, LoadCore opens the **Range** panel, from which you can select **CSCF Settings** to configure the node and connectivity settings for the CSCF range. Also, you can designate the range as a **Device Under Test**.

### CSCF range controls and settings

The following table describes the available **Range** configuration options for the CSCF range.

Setting	Description
Device Under Test	Enable this option if your CSCF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the CSCF functionality (if it is selected in the Topology window).
<i>P-CSCF Node Settings</i>	
Domain	Set the domain name.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Force IPsec Null Encryption	If enabled, it forces IPsec null encryption, therefore not encrypting the ESP traffic.

Setting	Description
<i>Authentication Settings</i>	
Enable Authentication	Select this option to enable authentication.
Realm	Set the realm. Default value: <b>keysight.com</b> .
Algorithm Type	Select the algorithm type from the drop-down list. Available options: <b>Digest</b> , <b>AKAv2</b> or <b>AKAv1</b> .
Algorithm	Select the algorithm from the drop-down list. Available options: <b>MD5</b> , <b>MD5-Sess</b> , <b>SHA256</b> or <b>SHA256-Sess</b> .
Quality of Protection	Select an option from the drop-down list: <b>auth</b> or <b>auth-init</b> .
<i>Interface Settings</i>	
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.

## Media Function Range panel

When you select the Media Function's IP address from the **Media Function Ranges** panel, LoadCore opens the **Range** panel, from which you can configure the connectivity settings for the Media Function range.

## Media Function range controls and settings

The following **Connectivity Settings** enable the necessary connectivity and service interaction.

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	MAC Address Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.

## Data/Video configuration settings

The Data/Video configuration settings are described in the topics listed below.

### Topics:


<b>Data/Video Ranges panel</b> .....	<b>838</b>
<b>Data/Video Range panel</b> .....	<b>838</b>
<b>Data/Video interface settings</b> .....	<b>839</b>
<b>Data/Video User Plane</b> .....	<b>840</b>
<b>Data/Video Throttling settings</b> .....	<b>867</b>

## Data/Video Ranges panel

The **Data/Video Ranges** panel opens when you select the Data/Video node from the network topology window. You can perform the following tasks from this panel:

- Add a new Data/Video range to your test configuration.
- Open a Data/Video range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

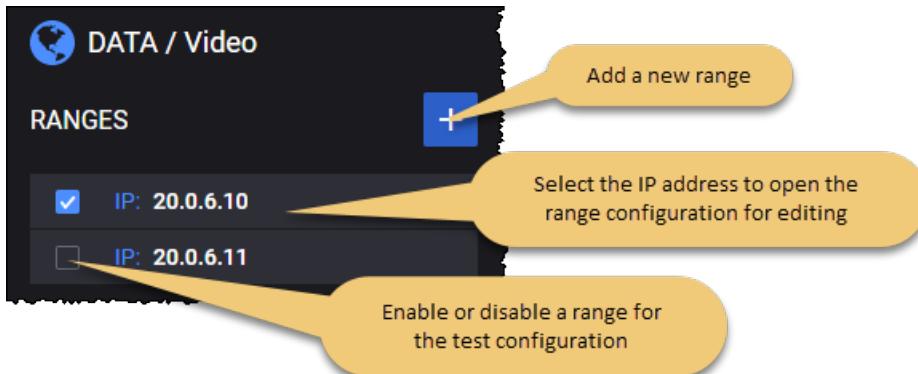

## Data/Video Range panel

You add and select Data/Video ranges from the Data/Video Ranges panel. When you select a Data/Video's IP address from the **Data/Video Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the Data/Video range from the test configuration.
- Select the **Create Range Copies** button to create range copies that will be added to your test configuration.
- Designate the range as a **Device Under Test**.
- Use the **Range Settings** panel to configure the node and connectivity settings and the traffic generators.

## Data/Video range controls and settings

Each Data/Video range is identified by a unique IP address. You can add and delete Data/Video ranges as necessary to support your test objectives.

The following table describes the available **Range** configuration options for each Data/Video range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
	Select the <b>Create Range Copies</b> button to create copies of your range. Also, you can specify the number of ranges to be created.

Setting	Description
Device Under Test	Enable this option if your Data/Video is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the Data/Video functionality (if it is selected in the Topology window).
Range Count	Set the value for the range count.
<i>Range Settings:</i>	
Interface Settings	These settings are described in <a href="#">Data/Video interface settings</a> .
User Plane	These settings are described in <a href="#">Data/Video User Plane</a> .
Throttling Settings	These settings are described in <a href="#">Data/Video Throttling settings</a> .

## Data/Video interface settings


The following table describes the **Connectivity Settings** that you configure for each Data/Video range.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	Select the MAC address to open the MAC configuration panel for editing
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.

Connectivity Settings	Description
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## Data/Video User Plane

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

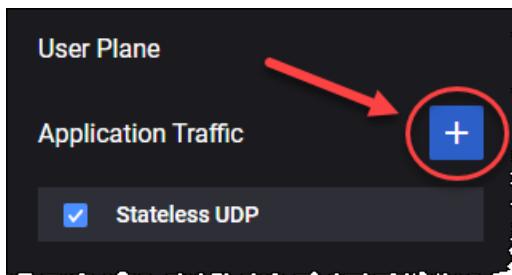

Parameter	Description
	<p>Select this button to add a new application traffic objective. The objective can be:</p> <ul style="list-style-type: none"> <li>• <b>Stateless UDP</b></li> <li>• <b>Data</b></li> <li>• <b>Voice</b></li> <li>• <b>Video OTT</b></li> <li>• <b>DNS Server</b></li> <li>• <b>Capture Replay</b></li> <li>• Synthetic</li> <li>• UDG</li> </ul>
	Select this button to remove the application traffic objective from your test configuration.

Parameter	Description
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">Video OTT Traffic</a> .
DNS Server	For the settings required to configure the DNS Server objective, refer to <a href="#">DNS Server Traffic</a> .
Capture Relay	For the settings required to configure the Capture Replay objective, refer to <a href="#">Capture Replay</a> .
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#">Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">UDG Traffic</a> .

## Stateless UDP Traffic

Use the **Stateless UDP** generator if you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings for the downlink traffic are described below.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>downlink</b> and can not be modified since on the Data/Video you can only configure the downlink flow.
Packet Rate	The rate at which the test generates downlink packets, measured in packets per second (pps).
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Destination UDP Port Start	The start destination port number to place in the UDP header.

Parameter	Description
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.

## Data Traffic

The following table describes the DN Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
TCP Settings	<i>Select the pane to open the TCP settings.</i>
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value. The default Min value is 2000 milliseconds and the permissible range of values is between 50 to 120000 milliseconds.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to. The default value is 3200 milliseconds and the permissible range of values is between 1000 to 120000 milliseconds.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.

<b>Parameter</b>	<b>Description</b>
Selective Acknowledgments	Select the toggle button to enable this option.
<i>Application Servers</i>	<p><i>Each Application Traffic entry requires an application server definition, and can support multiple such definitions.</i></p> <ul style="list-style-type: none"> <li>• <i>To select an existing application server definition, click its name to open the Server panel where you can view and modify the server settings.</i></li> <li>• <i>To add another application server, click the <b>Add Server</b> button. LoadCore will open the Server panel where you will select the server type and configure the server settings.</i></li> </ul> <p><i>Refer to <a href="#">Server</a> (below) for a description of the configuration settings required by the application server.</i></p> <p><i>Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</i></p>

## Server

You can add and delete application servers as needed to meet your test objectives. The **Server** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Server</b> button to remove the application server from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> , <b>TLS</b> , <b>QUIC</b> or <b>UDP</b> .
Type	Select the L4/L7 protocol type from the list of pre-defined application servers. The available types include: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get Responder</b>, <b>HTTP Put Responder</b>, <b>HTTP Post Responder</b>, <b>HTTP Server</b> and <b>FTP Responder</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get Responder</b>, <b>HTTPS Put Responder</b>, <b>HTTPS Post Responder</b> and <b>HTTPS Server</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Server</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional Responder</b>.</li> </ul>
Port	The port used by the application server.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.

## Custom Parameters

In this section you can add custom parameters or custom header fields by selecting the required pane:

- **Custom Parameters** or,
- **Custom Headers**


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

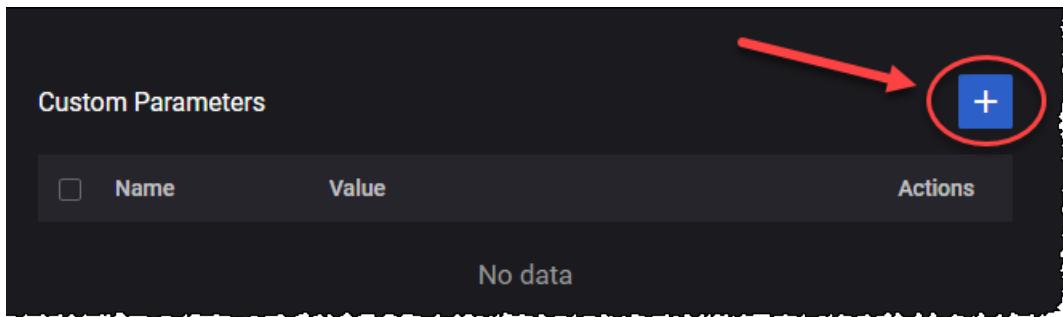

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

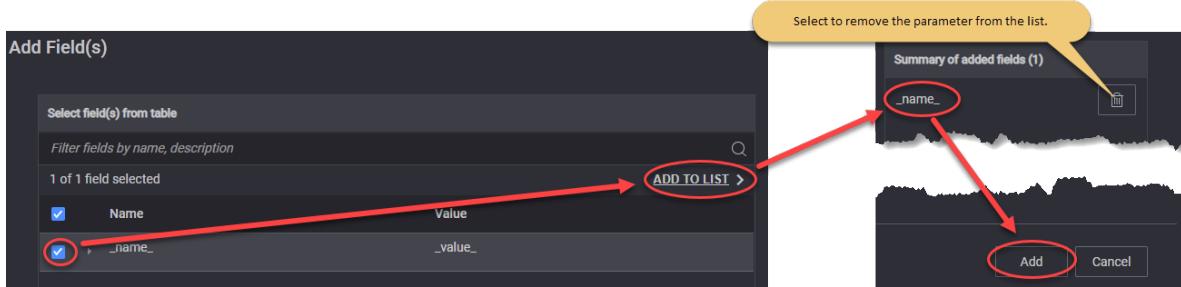

To add custom header fields, select the **Custom Headers** pane and follow the steps presented above for custom parameters.

## Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Call Type	Select the type of call from the drop-down list.

Parameter	Description
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<i>Sip Settings:</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPSEC	Select this option to enable IPSEC.
Advanced SIP Settings	<i>For more details about these settings, refer to <a href="#">Advanced SIP Settings</a>.</i>
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select the check box in order to enable this option.
Audio settings:	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
Video Settings:	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
MSRP Settings:	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
Advanced Media Settings:	
Custom SDP	<i>Select this panel to open the custom SDP settings.</i>
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP	Select the template from the drop-down list:

Parameter	Description
Template	<ul style="list-style-type: none"> <li><b>None</b></li> <li><b>EVS/AMR IPv4</b></li> <li><b>NB Codecs IPv6</b></li> <li><b>AMR-WB IPv6</b></li> <li><b>Multimedia IPv4</b></li> </ul>
<i>QoE Settings</i>	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <ul style="list-style-type: none"> <li><b>AMR</b> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li><b>AMR-WB</b> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data</li> </ul>

Parameter	Description
	<p>compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</p> <ul style="list-style-type: none"> <li>• <b>EVS</b> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <a href="#"><b>PCMU</b></a></li> <li>• <a href="#"><b>PCMA</b></a></li> <li>• <a href="#"><b>iLBC</b></a></li> <li>• <a href="#"><b>G722</b></a></li> <li>• <a href="#"><b>G723</b></a></li> <li>• <a href="#"><b>G729</b></a></li> </ul> <p>The parameters of each audio codec are presented below.</p>

## AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li>• <b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li>• <b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

## EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	The following options are available: <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

### PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

### Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE**

The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:


- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

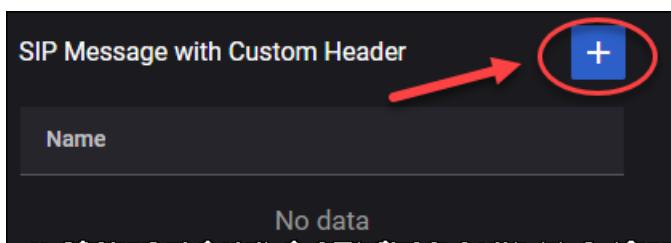

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

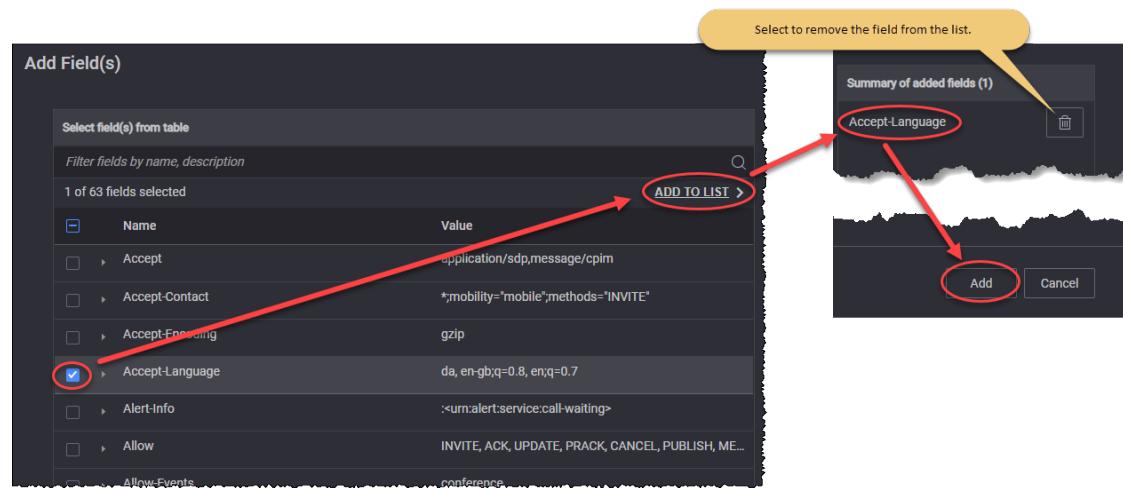

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nexnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC	60

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	4028	
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associated-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com", qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque="", stale=False, algorithm=MD5

Parameter	Description	Value
Proxy-Authorization	IETF RFC 3261	Digest username="Alice", realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response ="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>

Parameter	Description	Value
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>

Parameter	Description
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPc	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc	The OPc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc Increment	The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.

## Video OTT Traffic

The following table describes the Video OTT Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
<i>OTT Servers:</i>	
	Select this button to add an OTT server to your test configuration.

Parameter	Description
	Select this button to remove the OTT server from the test configuration.
Server Name	Set the server name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Streams	Refer to <a href="#">Streams</a> (below) for descriptions of the OTT server streams settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Streams

To open the OTT Server Streams panel, select the **Open Streams** button.



The OTT Server Streams parameters are described in the following table.

Parameter	Description
	Select this button to add a stream to your test configuration.
	Select this button to remove the stream from the test configuration.
Stream Name	Set the stream name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
URL	Set the URL path.
Type	Select the stream type from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Real</b></li> <li>• <b>Synthetic</b></li> </ul>
Protocol	Select the protocol from the drop-down list:

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>Apple HLS</b></li> <li>• <b>DASH</b></li> </ul> <p>If the stream type is set to <b>Synthetic</b>, you can choose one protocol from list. If the stream type is set to <b>Real</b>, you will see the protocol of real stream loaded.</p>
Stream Duration	<p>If the stream type is set to <b>Synthetic</b>, you can configure the stream duration in seconds. If the stream type is set to <b>Real</b>, you will see the real stream duration.</p>
Segment Duration	<p>If the stream type is set to <b>Synthetic</b>, you can configure the segment duration in seconds. If the stream type is set to <b>Real</b>, you will see the real segment duration.</p>
<i>Quality Levels:</i>	<i>Set the quality value for each level.</i>
	Select this button to add a quality level to your test configuration.
	Select this button to remove the quality level from the test configuration.
Bitrate (kbps)	Set the value of the bitrate.
Resolution	Select the resolution from the drop-down list. Available options: <b>QCIF, 240p, nHD, 480, WXGA, FHD, QHD, 4K, 8K</b> .
Frames per second	Set the number of frames per second.

## Custom Parameters

In this section you can add custom parameters or custom header fields by selecting the required pane:

- **Custom Parameters** or,
- **Custom Headers**


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

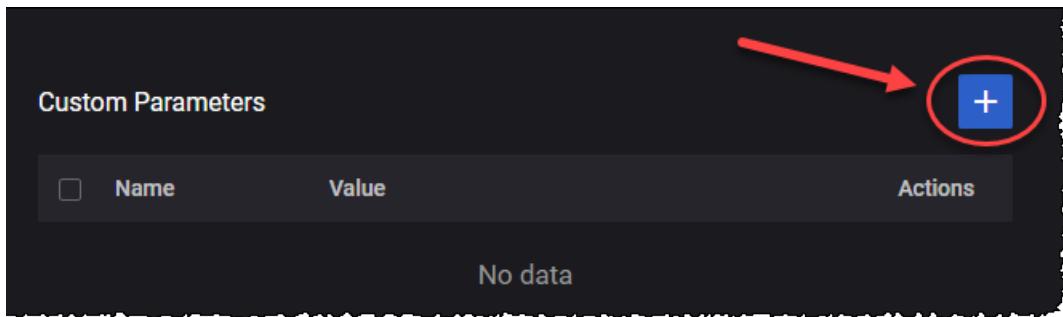

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

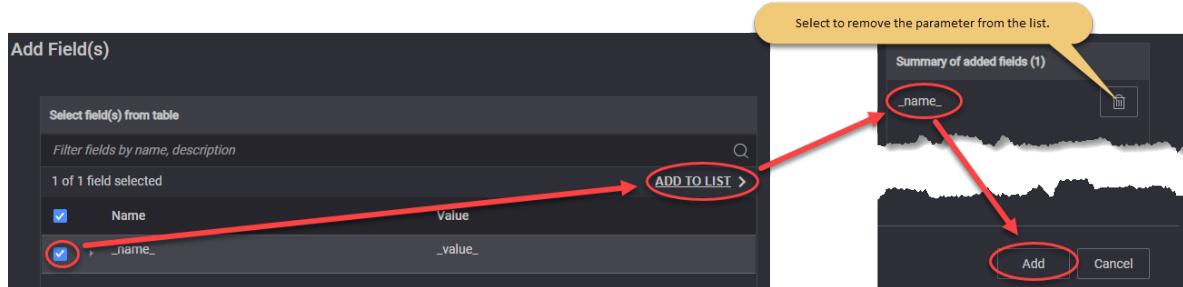

To add custom header fields, select the **Custom Headers** pane and follow the steps presented above for custom parameters.

## DNS Server Traffic

The following table describes the DNS Server Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Server</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>DNS Servers:</i>	

Parameter	Description
	Select this button to add an DNS server to your test configuration.
	Select this button to remove the DNS server from the test configuration.
Type	Select the type from the available options.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Zone Manager	Refer to <a href="#">Zone Manager</a> for descriptions of the DNS server zones settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Zone Manager

To open the DNS Server Zones panel, select the **Open Zones** button.



The DNS Server Zones parameters are described in the following table.

Parameter	Description
	Select this button to add a zone to your test configuration.
	Select this button to remove the zone from the test configuration.
Zone Name	Set the zone name. Each zone is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Master Server	Provide the value for the master server.
Resource Records (RRs)	
	Select this button to add a resource record to your test configuration.
	Select this button to remove the resource record from the test configuration.

Parameter	Description
Type	Select the type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Hostname	Set the hostname.
Address	Provide the address.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

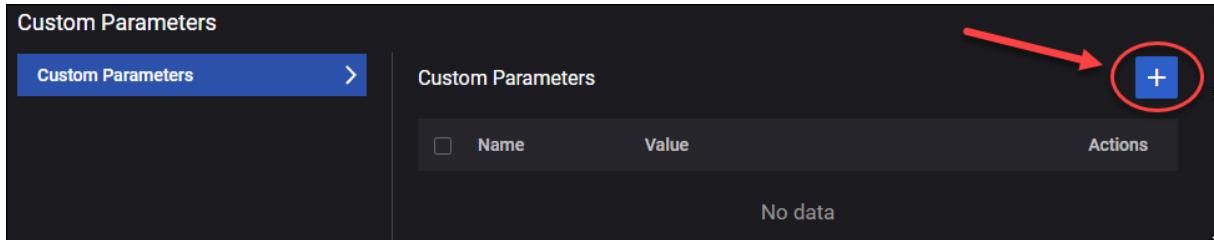

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

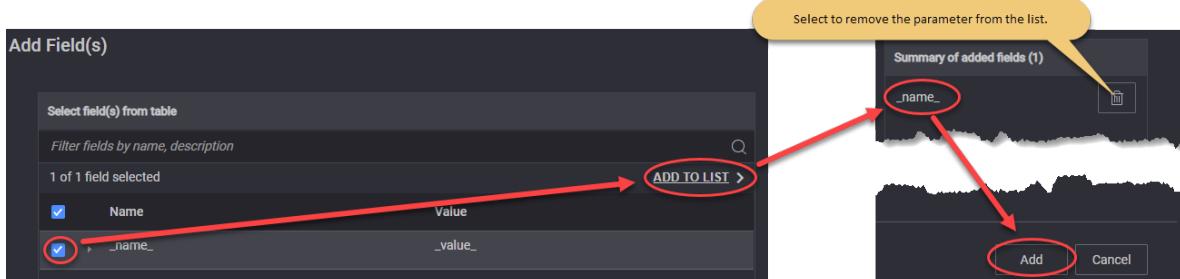

## Capture Replay

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> milliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b> (option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> . Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in pcap-filter format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> .

Parameter	Description
	(option disabled).
Override IP Address	Select the toggle button to enable it. When enabled, Source IP Address and Source IP Address Count fields become available.
Source IP Address	The source IP address to place in the IP packet.
Source IP Address Count	The source IP address count value.

## Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on

Parameter	Description
	your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the Traffic Flow parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then

Parameter	Description
	the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Out of Band Signaling	<i>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</i>
	<b>IMPORTANT</b> <i>To use the OOB feature, the OOB interface must be set in Agent Management window.</i>
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote	The remote IP address.

Parameter	Description
Address	
Port	Set the used port.

## Data/Video Throttling settings

Throttling can be enabled from this menu per Data/Video range (by selecting the corresponding check box), and matching user plane traffic over TCP, UDP or both.

Throttling can be useful, for example, when the local network interface that is generating downlink traffic has a higher speed than the radio interface between the UE and the GNB. If the traffic generated from either direction is bursty, the throttling mechanism will, instead of dropping packets, add them to a queue and spread them throughout a second according to the configured bit rate.

**NOTE**


The throttling options only work for interfaces that are running IxStack, either over DPDK or over raw sockets, depending on where the traffic is terminated (if agent is present on DN/SGi server then its N6 interface should be IxStack; if there is no agent on DN/SGi, than N3 interface should be IxStack on UPF/CoreSim agent).

The following table describes the **Throttling Settings** that you can configure for each DN range.

Settings	Description
Bit Rate (mbps)	Can be set between 10 and 10000. Represents the value at which the traffic will be throttled, and it will become the enforced maximum bit rate.
Throttle TCP Traffic	Select the check box to throttle UP traffic over TCP.
Throttle UDP Traffic	Select the check box to throttle UP traffic over UDP.

*CHAPTER 10***IPsec NG-RAN tests: configuration settings**

This section provides descriptions of the configuration settings that are specific to the **Wireless IPsec NG-RAN** test type:

**Topics:**

<b>Global Settings .....</b>	<b>870</b>
Global Settings panel .....	872
Node Start/Stop Rates .....	872
DNS Settings .....	873
Advanced Settings .....	873
DNNs panel .....	876
DNN configuration settings .....	877
Session AMBR configuration settings .....	880
ePCO configuration settings .....	881
Traffic Control Settings configuration .....	882
Impairment .....	883
QoS Flows panel .....	884
QoS Flow configuration settings .....	885
QoS Flow Packet Filter configuration settings .....	888
QoS Flow Max Packet Loss Rate settings .....	889
QoS Flow ARP configuration settings .....	889
QoS Flow MBR configuration settings .....	890
QoS Flow GBR configuration settings .....	890
Milenage .....	891
Customer Parameters .....	891
CA Certificates .....	891
<b>UE configuration settings .....</b>	<b>892</b>
UE Ranges panel .....	893
UE Range panel .....	893
Range Settings .....	895

UE Identification settings .....	895
UE Settings settings .....	896
UE Security settings .....	918
UE Subscribed AMBR settings .....	922
DNNs Config .....	922
SMS Configuration .....	925
Untrusted WiFi Settings .....	926
Network Slicing settings .....	928
UE NSSAI settings .....	928
UDM SNSSAI Mappings .....	929
Objectives .....	930
Control Plane Objective .....	930
User Plane Objectives .....	942
<b>DN configuration settings .....</b>	<b>989</b>
DN Ranges panel .....	990
DN Range panel .....	990
DN N6 interface settings .....	991
DN routes settings .....	992
DN User Plane .....	993
DN Stateless UDP Traffic .....	994
DN Data Traffic .....	996
DN Voice Traffic .....	998
DN Video OTT Traffic .....	1009
DN DNS Server Traffic .....	1012
DN Predefined Applications Traffic .....	1015
DN Capture Replay .....	1015
DN Synthetic .....	1017
DN Throttling settings .....	1019
<b>IMS configuration settings .....</b>	<b>1019</b>
CSCF Range panel .....	1020
Media Function Range panel .....	1021
<b>RAN/Untrusted AP configuration settings .....</b>	<b>1021</b>


gNodeB .....	1022
gNodeB Ranges panel .....	1022
gNodeB Range settings .....	1026
gNodeB node settings .....	1027
gNodeB NSSAI settings .....	1029
gNodeB N2 interface settings .....	1031
gNodeB N3 interface settings .....	1035
eNodeB .....	1039
eNodeB Ranges panel .....	1039
eNodeB Range Settings .....	1043
eNodeB Node Settings .....	1043
S1-U Interface Settings .....	1045
S1-MME Interface Settings .....	1046
UNAP .....	1047
UNAP Ranges panel .....	1048
UNAP Range Settings .....	1048
Passthrough interface settings .....	1050
<b>SEG/N3IWF &amp; Core configuration settings .....</b>	<b>1052</b>
Core settings .....	1053
N6/SGi interface settings .....	1054
Core Ranges settings .....	1055
AMF Ranges configuration settings .....	1056
UPF Ranges configuration settings .....	1063
MME Ranges configuration settings .....	1065
SGW Ranges configuration settings .....	1072
SEG Ranges configuration settings .....	1074
SEG interface settings .....	1078
N3IWF Ranges configuration settings .....	1079
N3IWF interface settings .....	1086

## Global Settings

The Global Settings include parameters that either have overall applicability to the test or can be used (by reference) in the configurations of other nodes in the test topology.

To access the Global Settings:

1. Select the **Test Overview** tab:

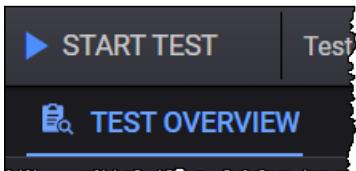

2. Click **Expand** if the Test Overview section is collapsed.
3. Click the Global Settings' **Edit** button:



LoadCore opens the **Global Settings** panel from which you can:

- Select the technical specification version from the drop-down list:



- Access and configure the following settings:

<b>Global Settings panel</b>	<b>872</b>
<b>Node Start/Stop Rates</b>	<b>872</b>
<b>DNS Settings</b>	<b>873</b>
<b>Advanced Settings</b>	<b>873</b>
<b>DNNs panel</b>	<b>876</b>
DNN configuration settings	877
Session AMBR configuration settings	880
ePCO configuration settings	881
Traffic Control Settings configuration	882
<b>Impairment</b>	<b>883</b>
<b>QoS Flows panel</b>	<b>884</b>
QoS Flow configuration settings	885
QoS Flow Packet Filter configuration settings	888
QoS Flow Max Packet Loss Rate settings	889
QoS Flow ARP configuration settings	889
QoS Flow MBR configuration settings	890
QoS Flow GBR configuration settings	890

<b>Milenage</b>	<b>891</b>
<b>Customer Parameters</b>	<b>891</b>
<b>CA Certificates</b>	<b>891</b>

## Global Settings panel



When you open the Global Settings for editing (from the **Test Overview** section), LoadCore opens the **Global Settings** panel. That panel provides a set of global configuration settings and links to more detailed settings.

### Configuration settings

The following table describes the settings that are available on the Global Settings panel.

Setting	Description
<i>Links to detailed settings:</i>	
Node Start/Stop Rates	For more details, refer to <a href="#">Node Start/Stop Rates</a> .
DNS Settings	For more details, refer to <a href="#">DNS Settings</a> .
Advanced Settings	For more details, refer to <a href="#">Advanced Settings</a> .
DNNs	For more details, refer to <a href="#">DNNs</a> .
Impairment	For more details, refer to <a href="#">Impairment</a> .
QoS Flows	For more details, refer to <a href="#">QoS Flows</a> .
Milenage	For more details, refer to <a href="#">Milenage</a> .
Custom Parameters	For more details, refer to <a href="#">Custom Parameters</a> .
CA Certificates	For more details, refer to <a href="#">CA Certificates</a> .

### Node Start/Stop Rates

The following table describes the settings that are available on the Node Start/Stop Rates. These include settings with which you control the Stream Control Transmission Protocol (SCTP) connection rates between NG-RAN and AMF. (SCTP—which operates in the transport layer of the NG-C signaling bearer—provides for the reliable transport of signaling messages.)

Setting	Description
<i>Node Start</i>	
Rate	Set the desired start rate for SCTP connections between the NG-RAN and the AMF (connections per second). Measured in procedures per second if Distributed over (s) is not modified.

Setting	Description
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
<i>Node Stop</i>	
Rate	Set the desired start rate for SCTP connections between the NG-RAN and the AMF (connections per second). Measured in procedures per second if Distributed over (s) is not modified.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.

## DNS Settings

The following table describes the settings required for the DNS Resolver configuration.

Setting	Description
<i>DNS Settings:</i>	
Cache Timeout (ms)	The amount of time (in milliseconds) the local DNS stores the address information.
<i>DNS Name Servers:</i>	
	Select the <b>Add DNS Name Server</b> button to add a new DNS server to your test configuration. Set the IP address of the DNS server.
	Select the <b>Delete</b> button to remove the DNS server from your test configuration.

## Advanced Settings

The following table describes the settings required to enable user plane and control plane advanced statistics.

Setting	Description
Ignore Offline Agents At Runtime	When this option is enabled, if an agent loses connection to the Middleware during a test, the test will not stop but continue without that agent.
Overwrite Capture Size for IxStack	Enable this option to overwrite the capture size for IxStack.
Custom Capture Size	Set the custom value of the capture size for IxStack.

<b>Setting</b>	<b>Description</b>
for IxStack	
Enable Capture Circular Buffer for IxStack	Select this option to enable circular buffer capture for IxStack.
Enable Capture On Loopback Interface	Select this option to enable packet capture on the loopback interface.
Enable Per UE Stats	Select this option to enable per UE statistics.
Enable Control Plane Advanced Stats	Select this option to enable control plane latency statistics.
Enable User Plane Advanced Stats	<p>Select an option from the drill-down list for the user plane advanced statistics:</p> <ul style="list-style-type: none"> <li>• <b>None</b> - no advanced statistics enabled.</li> <li>• <b>One Way Delay</b> - the time spent by the packet on the network from the moment it is sent until it is received.</li> <li>• <b>Delay Variation Jitter</b> - the per polling interval average delay variation jitter value calculated for all packets.</li> </ul>
Automated Polling Interval	This option is enabled by default. The statistics are retrieved based on a predefined polling interval.
Custom Polling Interval (sec)	<p>This option becomes available only when <i>Automated Polling Interval</i> option is disabled.</p> <p>It allows you to create a custom polling interval.</p>
Log Level	<p>Select one of the options:</p> <ul style="list-style-type: none"> <li>• <b>Info</b> - Designates informational messages that highlight the progress of the application at coarse-grained level.</li> <li>• <b>Debug</b> - Designates fine-grained informational events that are most useful to debug the application.</li> </ul>
Log Tags	<p>Select one or more tags from the drop-down list.</p> <p>Log Tags are used to collect specific information in the logs; they work with Debug and with Info log levels. Rather than allowing the logs to collect information about everything, you can use Log Tags to collect specific information—such as SCTP or</p>

Setting	Description
	HTTP messages—during the test. This limits the amount of information that is collected, making it easier for you to extract the data that you need.
Traffic Settings	<i>The settings are described <a href="#">here</a>.</i>
Response Cache Settings	<i>The settings are described <a href="#">here</a>.</i>

## Traffic Settings

The following table describes the settings on the Traffic Settings pane.

Setting	Description
<i>GTPU Source Port:</i>	
Start	Indicates the source port for the GTPU tunnel. By default, the registered UDP port for GTPU is 2152.
Count	Set the count value.
<i>Reserved cores for RTP Tx:</i>	
Enable RTP	Select this option to enable RTP.
Cores	The number of cores reserved for RTP transmission.
<i>Traffic Control</i>	
Traffic Control Port	Set the traffic control port. By default, it is set to 44556.
Enable Jumbo Frame	Enable this option if your test traffic requires the use of jumbo frames (Ethernet frames with more than 1500 bytes of payload). When you enable this option, you can then configure any of the MTU parameters in the test to any valid jumbo frame size (up to 9,000 bytes).
Enable IxStack L4 Port Randomization	Select this option to enable IxStack L4 Port Randomization.
Enable UDP Port Recycling	Select this option to enable IxStack UDP Port Recycling.
Enable TCP Port Recycling	Select this option to enable IxStack TCP Port Recycling.
Enable ICMP	Select this option to enable it. This will permit requests and responses to ICMP

Setting	Description
Responses	packets on subscribers addresses (it will have a significant memory impact on server nodes - AMF, UPF).

## Response Cache Settings

During performance testing scenarios, it is possible that not all responses are received by the client. The client initiates messages retries when it is not receiving responses. When a message retry reaches the server, the response is sent again faster and no additional load is put on the server, because the response message is already stored. There is no need to construct the response message again.

A rotation interval higher than the retry timer on the client node must be configured in order to still have the responses stored when a message retry arrives on the server node.

The following table describes the settings on the Response Cache pane.

Setting	Description
Enable response cache for GTPv2 and PFCP protocols	When this option is enabled, the server node will store the GTPv2 and PFCP Response messages for a period of time equal to Rotation Interval (in seconds).
Rotation interval	The period of time (in seconds) for which the server node will store the GTPv2 and PFCP Response messages. After this interval expires, the stored messages are discarded.

## DNNs panel

To access the DNN configuration settings, select **DNNs** from the the **Global Settings** panel. LoadCore opens the **DNNs** panel from which you can add and edit DNN definitions:



The properties for a DNN are organized into the following groups of configuration settings:

<b>DNN configuration settings</b>	<b>877</b>
<b>Session AMBR configuration settings</b>	<b>880</b>
<b>ePCO configuration settings</b>	<b>881</b>

**Traffic Control Settings configuration .....** **882****DNN configuration settings**

You create and manage Data Network Names (DNNs) for your test network in the **Global Settings** section of the **Test Overview**. The **DNN** panel contains the configuration settings for an individual DNN. In this panel, you can:

- Click the **Delete DNN** button to delete the DNN configuration.
- Edit the DNN settings.

The following table describes the **DNN** settings.

<b>Setting</b>	<b>Description</b>
<i>DNN:</i>	
DNN	<p>Enter the DNN value for this DNN definition. For example: <code>dnn.keysight.com</code>.</p> <p>A DNN (as is the case with an EPS APN) is composed of two parts:</p> <ul style="list-style-type: none"> <li>• A mandatory Network Identifier that defines the external network to which the UPF is connected.</li> <li>• An optional Operator Identifier that defines the PLMN backbone in which the UPF is located.</li> </ul> <p>A 5GS Data Network Name (DNN) is equivalent to an EPS APN. It is a reference to a data network, and it may be used to select an SMF or UPF for a PDU session and to determine policies applicable to the PDU session.</p> <p>The DNN field supports dynamic values. These values can be obtained with a sequence generator.</p> <p>The sequence can be added anywhere in the DNN name (beginning, middle or end). The syntax is <code>[start_value-end_value,increment]</code>.</p> <p><b>NOTE</b> The <code>start_value</code> and <code>end_value</code> must have the same length. For example, we can configure <code>dnn[008-999,1]</code> and obtain <code>dnn008,dnn009,...,dnn998,dnn999</code>. Syntaxes <code>dnn[8-999,1]</code> or <code>[008-1000,1]</code> are not valid as the start and end value lengths are different.</p> <p>The start value is mandatory. Omitting certain parameters results in behaviors as exemplified below:</p> <ul style="list-style-type: none"> <li>• <code>dnn[4-9, ]</code> an implicit increment of 1 is used</li> <li>• <code>dnn[4-9]</code> as above</li> <li>• <code>dnn[4-,1]</code> is used as <code>dnn[4-9,1]</code>, 9 being the maximum value with the configured length, length of 1 in this case</li> <li>• <code>dnn[4-, ]</code> as above</li> <li>• <code>dnn[4- ]</code> as above</li> <li>• <code>dnn[4]</code> as above</li> </ul> <p>UEs will use the DNN values from the pool in a round robin manner.</p>

Setting	Description
	<p><b>IMPORTANT</b> If multiple sequence generators are configured and their pools overlap (for example: dnn[000-600,1].keysight.com dnn[500-999,1].keysight.com), for UEs that use the second DNN pool, the DNN generated values might not be allocated starting with the start_value (they might start with an intermediate value in the second pool).</p>
PDU Type	Select the desired PDU type: IPv4, IPv6 or IPv4v6.
Allowed Session Types	Select the allowed session types from the drop-down list: IPv4 IPv6, IPv4, IPv6, UNSTRUCTURED, ETHERNET, or all.
Default Session Type	Select the default session type from the drop-down list: IPv4 IPv6, IPv4, IPv6, UNSTRUCTURED, or ETHERNET.
QoS Flows IDs	<p>Select the QoS Flows ID(s) from the drop-down list. Each DNN should contain at least the default flow (the default flow is unique per each DNN). In addition, zero or more dedicated flows can be associated to each DNN.</p> <p>For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a>.</p>
Allowed SSC Modes	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>SSC Mode 1: The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>SSC Mode 2: The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>SSC Mode 3: Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4/v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
Default SSC Mode	<p>Select the desired default SSC mode for this DNN.</p> <p>The SSC mode associated with a PDU Session does not change during the lifetime of a PDU Session.</p>
Allowed Services	<p>Select the allowed services from the drop-down list: Service 1, Service 2, Service 3, or all. In the 5G System, the <i>allowed services</i> may comprise any number of service identifiers allowed for the subscriber in the PDU Session. The PCF maps those service identifiers into PCC rules according to local configuration and operator policies.</p>
Subscription Categories	<p>Select the desired Subscription Category for this range of UEs.</p> <p>Subscriber Category is an information type structured as a list of category</p>

<b>Setting</b>	<b>Description</b>
	identifiers associated with a subscriber. It may comprise any number of identifiers associated with the subscriber (such as platinum, gold, silver, bronze).
IPv4 Index	The IPv4 Index value for the PDU sessions accessing this DNN. This value identifies the IP address allocation method for IPv4 addresses.
IPv6 Index	The IPv6 Index value for the PDU sessions accessing this DNN. This value identifies the IP address allocation method for IPv6 addresses.
EPS Interworking	Enable this option if the UE subscription data indicates support for interworking with EPS for this DNN.
ADC Support	Enable this option if the DNN will support PDU sessions in which application detection and control (ADC) is enabled for subscribers.
Subscriber Spending Limits	Enable this option if the DNN will support PDU session policies that are based on subscriber spending limits.
Offline	Enable this option if the DNN will support the offline charging method for PDUs sessions.
Online	Enable this option if the DNN will support the online charging method for PDUs sessions.
Is Emergency DNN	When this option is enabled, if an UE range has mapped this type of DNN, it will perform an emergency PDU Session.
MPS Priority	Enable this option if the DNN will support subscription to MPS priority service. The priority applies to all traffic on the PDU Session.
Dual Registration Mode	When enabled, it transfers this session to the other RAT in dual registration mode. If the session does not exist, it will be created in the other RAT.
MPS Priority Level	Specify the Multimedia Priority Services (MPS) priority level. This is the relative priority level for MPS.
IMS Signaling Priority	Specify the IP Multimedia Subsystem (IMS) signaling priority. This value indicates subscription to IMS signaling priority service. The priority applies only to IMS signaling traffic.
Access Network Instance	Set the access network instance. It represents the value to be sent in the Network Instance IE when the source interface is set to Access.
Core Network Instance	Set the core network instance. It represents the value to be sent in the Network Instance IE when the source interface is set to Core or SGi-LAN/N6-LAN.

Setting	Description
Session Rule Name	Set the session rule name.
GBR	<i>Select this option to open the GBR panel.</i>
Guaranteed Bit Rate Uplink	Specify the guaranteed bit rate for the uplink traffic.
Guaranteed Bit Rate Downlink	Specify the guaranteed bit rate for the downlink traffic.
Session AMBR	<i>Select this option to open a new panel that contains the Session AMBR settings. These settings are described in <a href="#">Session AMBR configuration settings</a>.</i>
ePCO	<i>Select this option to open the extended protocol configuration options panel. These settings are described in <a href="#">ePCO configuration settings</a>.</i>
Traffic Control Settings	<i>Select this option to open the traffic control settings panel. These settings are described in <a href="#">Traffic Control Settings configuration</a>.</i>

If, for an UE range, Paging is configured and globally per DNN Traffic Control is configured, for that UE range traffic control messages will be sent before entering Idle (as per the Paging objective) but traffic control messages will be sent per DNN as configured in the **Global Settings > DNN > Remote IPv4/IPv6** and traffic will be resumed per DNN as configured in the **Global Settings > DNN > Suspend Traffic Interval (s)** field.

## Session AMBR configuration settings

Each LoadCore DNN configuration has its own unique configuration settings, which include:

- The main DNN settings, described in [DNN configuration settings](#).
- The DNN's Session AMBR settings, described below.

### About Session AMBR ...

5G QoS enforcement and rate limitation policies utilizes Aggregate Maximum Bit Rate (AMBR) values to limit the amount of traffic flowing through the 5GS for a given UE. Every PDU session specifies a per-session AMBR value that limits the aggregate bit rate that can be expected across all non-GBR QoS flows. The Session-AMBR is measured over an AMBR averaging window, which is a standardized value. Downlink Session-AMBR is enforced by the UPF, and uplink Session-AMBR is enforced by the UPF and the UE.

The following tables describes the Session AMBR configuration settings.

Parameter	Description
Session AMBR Uplink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Session AMBR Uplink unit	The unit in which the rate is expressed. The options range from bps to Tbps.

Parameter	Description
Session AMBR Downlink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) downlink rate.
Session AMBR Downlink unit	The unit in which the rate is expressed. The options range from bps to Tbps.

## ePCO configuration settings

Configuration options for ePCO IE (extended Protocol Configuration Options IE) from PDU Session Establishment Request message and PDU Session Establishment Accept message.

Parameter	Description
Request DNS Server IP Address	Add DNS Server IPv4 Address Request or DNS Server IPv6 Address Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message. If required, enable this option.
Request P-CSCF IP address	Add P-CSCF IPv4 Address Request or P-CSCF IPv6 Address Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message. If required, enable this option.
Request IPv4 Link MTU	Add IPv4 Link MTU Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message. If required, enable this option.
DNS Server IPv4 Address	If ePCO IE was received in PDU Session Establishment Request and DNS Server IPv4 Address Request was set, send this DNS IPv4 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty. <p><b>NOTE</b> If this field is empty and a DNS Name Server is configured in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a>, then this field will be populated with the first IPv4 address of the DNS Name Server(s) defined in Global Settings.</p> <p><b>NOTE</b> If the DNS Name Server IPv4 address is updated in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a> while there is already a value set for DNS Server IPv4 Address, no update will be done on DNS Server IPv4 Address. If the new IPv4 DNS address is needed, the update in ePCO settings needs to be done manually.</p>
DNS Server IPv6 Address	If ePCO IE was received in PDU Session Establishment Request and DNS Server IPv6 Address Request was set, send this DNS IPv6 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.

Parameter	Description
	<p><b>NOTE</b> If this field is empty and a DNS Name Server is configured in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a>, then this field will be populated with the first IPv6 address of the DNS Name Server(s) defined in Global Settings.</p> <p><b>NOTE</b> If the DNS Name Server IPv6 address is updated in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a> while there is already a value set in ePCO for DNS Server IPv6 Address, no update will be done on ePCO DNS Server IPv6 Address. If the new IPv6 DNS address is needed, the update in ePCO settings needs to be done manually.</p>
P-CSCF IPv4 address	<p>If ePCO IE was received in PDU Session Establishment Request and P-CSCF IPv4 Address Request was set, send this P-CSCF IPv4 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p> <p><b>NOTE</b> If this field is empty and the CSCF node is enabled and has an IPv4 address, then this field is automatically updated to the CSCF IPv4 address.</p> <p><b>NOTE</b> If the IPv4 address of the IMS CSCF node is manually changed while there is already a value set for ePCO P-CSCF IPv4 address, this will not be automatically updated on ePCO P-CSCF IPv4 address. If the new CSCF address is needed, the update in ePCO settings needs to be done manually.</p>
P-CSCF IPv6 address	<p>If ePCO IE was received in PDU Session Establishment Request and P-CSCF IPv6 Address Request was set, send this P-CSCF IPv6 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p> <p><b>NOTE</b> If this field is empty and the CSCF node is enabled and has an IPv6 address, then this field is automatically updated to the CSCF IPv6 address.</p> <p><b>NOTE</b> If the IPv6 address of the IMS CSCF node is manually changed while there is already a value set for ePCO P-CSCF IPv6 address, this will not be automatically updated on ePCO P-CSCF IPv6 address. If the new CSCF address is needed, the update in ePCO settings needs to be done manually.</p>
Link MTU value	<p>If ePCO IE was received in PDU Session Establishment Request and IPv4 Link MTU Request was set, send this IPv4 Link MTU value in the ePCO IE in PDU Session Establishment Accept message.</p>

Known limitations:

- ePCO is only supported on NG-RAN and CoreSim 5G.
- The options are only used for signaling, in order to avoid errors. There is no support for sending/receiving traffic according to this option.

## Traffic Control Settings configuration

The Traffic Control Settings option offers the ability to use Traffic Control on a per DNN basis.

When enabled, after the Delay Between PDU Session Establishment and Suspend Traffic timer expires, Traffic Control specific messages will be sent from the UE IP address assigned for that specific PDU Session to the configured Remote IPv4 or Remote IPv6 peer address in order to stop downlink traffic. Downlink traffic will be resumed after the configured Suspend Traffic Interval expires.

The following tables describes the Traffic Control Settings parameters.

Parameter	Description
Traffic Control Settings	By default, this option is disabled. Select the check box to enable it.
Suspend Traffic Interval(s)	Set the value (in seconds) for this parameter.
Delay Between PDU Session Establishment and Suspend Traffic	Set the value (in seconds) for this parameter.
Remote IPv4	Select: <ul style="list-style-type: none"> <li>•  - Select to add the remote IPv4 address.</li> <li>•  - Select to remove the remote IPv4 address.</li> </ul>
Remote IPv6	Select: <ul style="list-style-type: none"> <li>•  - Select to add the remote IPv6 address.</li> <li>•  - Select to remove the remote IPv6 address.</li> </ul>

## Impairment

The following table describes the settings required to define the impairment profile.

Setting	Description
<i>Impairment Profiles:</i>	
	Select the <b>Add impairment profile</b> button to add a new profile to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete impairment profile</b> button to remove the profile from your test configuration.


Setting	Description
Name	Each impairment profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Action Type	Select an option from the drop-down list. The available option is: <b>Custom script</b> .
Script file	This parameter is available only when <b>Action Type</b> is set to <b>Custom script</b> . It allows you to add a custom script, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## QoS Flows panel

The 5G QoS model is based on QoS Flows. A 5G QoS Flow is the finest level of granularity for QoS forwarding treatment in the 5G System. All traffic mapped to the same 5G QoS Flow receives the same forwarding treatment.

### Accessing the configuration settings:

To access the QoS Flows configuration settings, select **QoS Flows** from the the **Global Settings** panel. LoadCore opens the **QoS Flows** panel from which you can add and edit QoS Flow definitions:

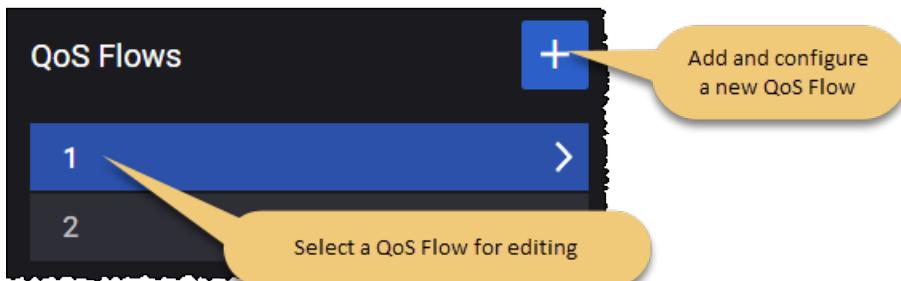

These QoS Flow configurations become immediately available for selection by other nodes in the test configuration. The properties for a QoS Flow are organized into the following groups of configuration settings:

<b>QoS Flow configuration settings</b> .....	<b>885</b>
<b>QoS Flow Packet Filter configuration settings</b> .....	<b>888</b>
<b>QoS Flow Max Packet Loss Rate settings</b> .....	<b>889</b>
<b>QoS Flow ARP configuration settings</b> .....	<b>889</b>
<b>QoS Flow MBR configuration settings</b> .....	<b>890</b>
<b>QoS Flow GBR configuration settings</b> .....	<b>890</b>

## QoS Flow configuration settings

You create and manage QoS Flows for your test network in the **Global Settings** section of the **Test Overview**. The **QoS Flow** panel contains the configuration settings for an individual QoS Flow. In this panel, you can:

- Click the **Delete QoS Flow** button to delete the QoS Flow configuration.
- Edit the QoS Flow settings.

The **QoS Flow** settings are described in the table that follows.

Setting	Description
<i>QoS Flow:</i>	
Is Default	<p>Enable this option if this QoS Flow is associated with the default QoS rule. In the 5G System, a default QoS rule is required for each UE session, and this rule will be associated with a QoS Flow.</p>
Type	<p><b>IMPORTANT</b> This parameter is available only if the <a href="#">Is Default</a> option is not selected.</p> <p>The following options are available:</p> <ul style="list-style-type: none"> <li>• <b>Data</b> - LoadCore PCF/PCRF is capable by itself to generate Packet filters for this flow/bearer. This type of flow/bearer is used for non-Voice or non-Video traffic.</li> <li>• <b>Audio</b> - LoadCorePCF/PCRF needs information related to this flow/bearer from CSCF.</li> <li>• <b>Video</b> - LoadCorePCF/PCRF needs information related to this flow/bearer from CSCF.</li> </ul>
Network Initiated Flow	<p><b>IMPORTANT</b> This parameter is available only if the <a href="#">Is Default</a> option is not selected.</p> <p>Select the associated check box to enable this option.</p> <p>The following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <i>Delay After Initial Registration (s)</i> - set the value for this parameter.</li> <li>• <i>Interval between Create and Delete (s)</i> - set the value for this parameter.</li> <li>• <i>Iterations</i> - set the value for this parameter.</li> </ul>
QFI	Enter a QoS Flow Identifier (QFI) for this QoS Flow. This identifier will be used to uniquely identify a QoS Flow in the 5G System. All User Plane traffic with the same QFI within a PDU Session receives the same traffic forwarding treatment. The QFI is carried in an encapsulation header on the N3 and N9 reference points.
5QI	<p>Specify the 5QI value (decimal number).</p> <p>5G QoS Identifier (5QI) is a scalar that is used as a reference to 5G QoS characteristics defined in TS 23.501, clause 5.7.4. These are access node-specific parameters that control QoS forwarding treatment for the QoS Flow (such as</p>

<b>Setting</b>	<b>Description</b>
	scheduling weights, admission thresholds, queue management thresholds, link layer protocol configuration, among others). Standardized 5QI values have a one-to-one mapping to a standardized combination of 5G QoS characteristics as specified in TS 23.501, table 5.7.4-1.
5QI Priority Level	Specify the 5QI Priority Level for this QoS Profile. 5QI Priority Level is a Policy Control parameter that accepts values from 1 through 127 (where 1 is the highest priority). It indicates a priority in scheduling resources among QoS Flows.
Resource Type	Select the type of resource that the QoS Flow requires: Guaranteed Bit Rate (GBR), Non-Guaranteed Bit Rate (non-GBR), or Delay Critical GBR. The Resource Type determines whether or not dedicated network resources related to a QoS Flow-level Guaranteed Flow Bit Rate (GFBR) value are permanently allocated to the flow.
Averaging Window	Specify the <i>Averaging window</i> value for this 5GI. Each GBR QoS Flow is associated with an <i>Averaging window</i> . It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.
QoS Rule Precedence	Specify the desired QoS Rule Precedence value for this QFI. The QoS rule precedence value (and the PDR precedence value) determine the order in which a QoS rule or a PDR, respectively, will be evaluated. The evaluation of the QoS rules or PDRs is performed in increasing order of their precedence value.
Packet Delay Budget	The Packet Delay Budget (PDB) defines an upper bound for the time that a packet may be delayed between the UE and the PCEF. For a given QCI, the value of the PDB is the same in uplink and downlink. The purpose of the PDB is to support the configuration of scheduling and link layer functions.
Packet Error Rate	The Packet Error Rate (PER) defines the upper bound for the rate of PDUs (IP packets) that have been processed by the sender of a link layer protocol but are not successfully delivered by the corresponding receiver to the upper layer. It defines an upper bound for the rate of non-congestion related packet losses.
Max Data Burst	The Maximum Data Burst Volume is the amount of data which the RAN is expected to deliver within the part of the Packet Delay Budget allocated to the link between the UE and the radio base station.
QoS Reference	This option is used on the PCF node to identify a particular PCC Rule when QoS reference information is received from the NEF on N33 interface.  NOTE QoS Reference is supported only when Technical Spec Version is R16 or higher.
Notification Control	Enable or disable the Notification Control parameter. When enabled, it indicates whether notifications are requested from the RAN when the GFBR can no longer be fulfilled for a QoS Flow during the QoS Flow's lifetime.


<b>Setting</b>	<b>Description</b>
Segregation	Enable this option if the Segregation indication is to be included in a UE initiated PDU Session Modification procedure. The Segregation indication is included when the UE requests that the network bind the applicable SDF(s) on a distinct and dedicated QoS Flow.
Use Match-all Packet Filter	<p><b>IMPORTANT</b> This is available if <a href="#">Is Default</a> option is enabled.</p> <p>If this option is not enabled, a new <a href="#">Packet Filter List</a> option appears and custom packet filter can be configured.</p>
EPS Bearer Identifier	The EBI for the bearer associated with this QoS flow.
PCC Rule Name	Set a value for this parameter.
Is Predefined Rule	Select the check box to enable this option.
Application Identifier	Set the application identifier value.
Send QoS Rule Precedence when Application identifier is configured	If needed, enable this option.
Move to Secondary Node	<p>If needed, enable this option.</p> <p>This option is part of the Option 3x and Dual Connectivity NR feature, for more details refer to <a href="#">UE Range Panel</a>.</p>
Packet Filter List	<p><b>IMPORTANT</b> This is available if <a href="#">Use Match-all Packet Filter</a> option is not selected.</p> <p>Refer to the following topic for a description of the Packet Filter configuration settings: <a href="#">QoS Flow Packet Filter configuration settings on page 105</a>.</p>
Max Packet Loss Rate	Refer to the following topic for a description of the Max Packet Loss Rate configuration settings: <a href="#">QoS Flow Maximum Packet Loss configuration settings</a> .
ARP	Refer to the following topic for a description of the ARP configuration settings: <a href="#">QoS Flow ARP configuration settings</a> .
MBR	Refer to the following topic for a description of the MBR configuration settings: <a href="#">QoS Flow MBR configuration settings</a> .
GBR	Refer to the following topic for a description of the GBR configuration settings:

Setting	Description
	<a href="#">QoS Flow GBR configuration settings.</a>

## QoS Flow Packet Filter configuration settings

A Packet Filter Set is used in the definition of QoS rules or packet detection rules (PDRs) to identify one or more packet flows for filtering.

You use the settings in the QoS Flow **Packet Filter List** panel to configure the packet filters associated with the current flow. You access this panel from the QoS Flow panel:

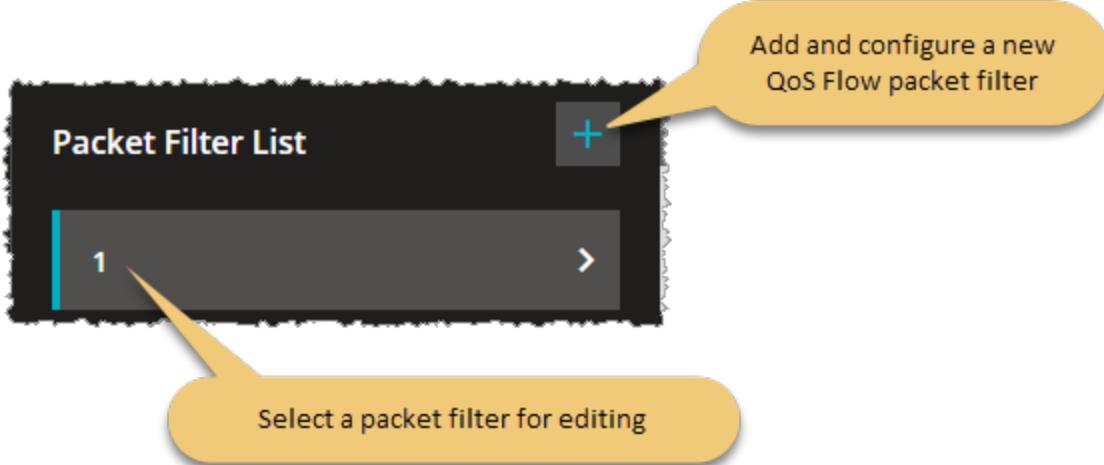

The **Packet Filter** settings are described in the following table.

Setting	Description
	Select the <b>Delete Packet Filter</b> button to delete this Packet Filter from the test configuration.
Direction	Select the direction of the data flow on which the filter is applied from the drop-down list: Uplink, Downlink, or Bidirectional.
IPv4 Remote Address and Subnet Mask	The IPv4 address of the remote node plus the subnet mask. If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
IPv6 Remote Address and Prefix Length	The IPv6 address for the remote node, expressed in CIDR notation (for example: 2001:db8::/32). If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
Protocol Identifier or Next Header	The Protocol ID of either the protocol above IP in the stack or the next header type. Examples: UDP, TCP, ESP.
Single Local Port	The local port number, if the filter specifies a single port.

Setting	Description
Single Remote Port	The remote port number, if the filter specifies a single port.
Local Port Range	The low and high limits for local port range.
Remote Port Range	The low and high limits for remote port range.
Security Parameter Index	The Security Parameters Index (SPI) for this packet filter. The SPI is a pointer that references the session key and algorithms used to protect the data being transported.
Type Of Service or Traffic Class	The IPv4 Type of Service (TOS) or the IPv6 traffic class.
Flow Label	The IPv6 Flow Label. This refers to the 20-bit Flow Label field in the IPv6 header.

## QoS Flow Max Packet Loss Rate settings

The setting establish the uplink and downlink maximum packet loss that is permitted for the QoS flow.

Setting	Description
<i>Max Packet Loss Rate:</i>	
Uplink	The maximum uplink packet loss rate (packets per second) that is permitted for the QoS Flow.
Downlink	The maximum downlink packet loss rate (packets per second) that is permitted for the QoS Flow.

## QoS Flow ARP configuration settings

The Allocation and Retention Priority (ARP) settings specify the priority level, preemption capability, and preemption vulnerability of a resource request. It is used to determine whether a new QoS Flow should be accepted or rejected—and to determine whether an existing QoS Flow can be preempted by another QoS Flow—in response to resource limitations.

The **QoS Flow ARP** settings are described in the table that follows.

Setting	Description
<i>ARP:</i>	
ARP Priority Level	Specify the ARP priority level. The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority

Setting	Description
	levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the home network and thus applicable when a UE is roaming.
Preemption Capability	Enable this option if the packets in this QoS Flow can preempt other flows. When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.
Preemption Vulnerability	Enable this option if the packets in this QoS Flow are candidates for being preempted by other flows. When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.

## QoS Flow MBR configuration settings

MBR indicates the maximum bit rates allowed for service data flows that are mapped to this QoS flow. Separate MBR values are configured for uplink and downlink traffic.

The **QoS Flow MBR** settings are described in the table that follows.

Setting	Description
<i>MBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the maximum bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the maximum bit rate value for downlink traffic.

## QoS Flow GBR configuration settings

GBR indicates the guaranteed bit rates for service data flows that are mapped to this QoS flow. Separate GBR values are configured for uplink and downlink traffic.

The **QoS Flow GBR** settings are described in the table that follows.

Setting	Description
<i>GBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the guaranteed bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the guaranteed bit rate value for downlink traffic.

# Milenage

The following table describes the settings required to override the milenage constants.

## **Customer Parameters**

The section allows you to use custom parameters. When **Use Custom Parameters** is enabled, you can use the text section below to add the custom parameters.

## CA Certificates

The following table describes the settings required for CA certificates upload.

Setting	Description
<i>CA Certificates:</i>	
	Select the <b>Add CA Certificate</b> button to add a new certificate to your test configuration.
<i>CA Certificate:</i>	
	Select the <b>Delete CA Certificate</b> button to remove the certificate from your test configuration.
Name	Each certificate is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Certificate File (.crt)	It allows you to add the certificate from the storage location, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## UE configuration settings



You use the User Equipment (UE) configuration settings to define one or more ranges of simulated UEs. Every test requires at least one range of simulated UEs. These settings define properties that are representative of real-world UEs that may access a 5G network, including UE identity, security, network slice selection, among others.

In addition, the UE settings include the configuration of test objectives; these settings direct the traffic performance and UE behavior actions during test execution.

The configuration settings are described in the topics listed below.

### Topics:

<b>UE Ranges panel</b> .....	<b>893</b>
<b>UE Range panel</b> .....	<b>893</b>
<b>Range Settings</b> .....	<b>895</b>
UE Identification settings .....	895
UE Settings settings .....	896
UE Security settings .....	918
UE Subscribed AMBR settings .....	922
DNNs Config .....	922
SMS Configuration .....	925
Untrusted WiFi Settings .....	926
<b>Network Slicing settings</b> .....	<b>928</b>
UE NSSAI settings .....	928
UDM SNSSAI Mappings .....	929


<b>Objectives</b>	<b>930</b>
Control Plane Objective	930
User Plane Objectives	942

## UE Ranges panel

The **UE Ranges** panel opens when you select the UE node from the network topology window. You can perform the following tasks from this panel:

- Add a new UE range to your test configuration.
- Open a UE range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

For example ...

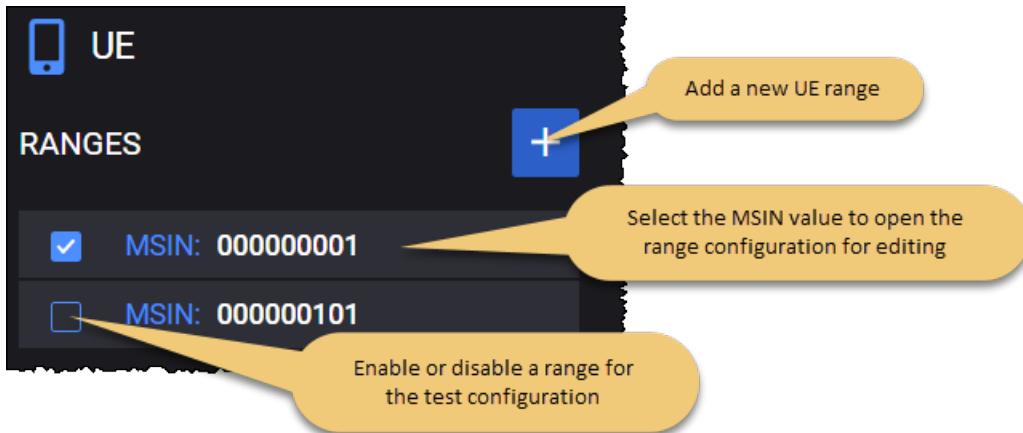

If multiple agents are assigned to the UE, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All UE Ranges and RAN Ranges on All Agents** - for example, for a test with 2 agents and 2 UE ranges and 2 RAN ranges, UE range1 and UE range2 and their parent ranges as well as all RAN ranges part of Mobility Path, and Secondary RAN ranges will be distributed to both agent1 and agent2.
- **Round Robin UE Ranges and RAN Ranges per Agent** - for example, if UE range1 is distributed to agent1, parent RAN range as well as all RAN ranges part of the Mobility Path (visited gNB/eNB ranges) and the Secondary RAN ranges will also be distributed on agent1.

## UE Range panel


When you select an MSIN from the UE **Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Delete the UE range from the test configuration.
- Configure the *Range Count*.
- Select the *Parent NG-RAN/UNAP* for the UE range.
- Select a *Secondary Node*.
- Access the detailed UE configuration settings (Range Settings, Network Slicing, Objectives).

## UE range controls and settings

LoadCore has now support for Option 3x, on the NG-RAN, simulating Dual Connectivity radio connections, as described in 3GPP TS 36.300/38.300.

This will enable the UEs to use the radio resources for sending/receiving application traffic on both E-UTRAN and NR, as seen in the following topology.

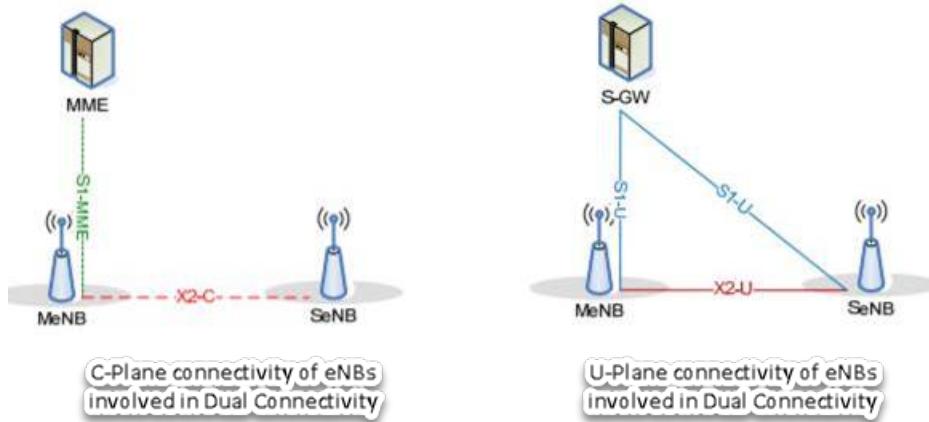

The eNodeBs and gNodeBs involved in the communication must have a X2 connection established between them.

The eNodeBs/gNodeBs involved in this communication will have two optional roles:

- a Parent Node – (only eNodeB at this point), or
- a Secondary Node (a gNodeB).

The UE will attach to a 4G eNodeB which can have a Secondary node configured, a gNodeB. This implies all the traffic or just a part of it can be sent through the NR bearer, the IP and GTP tunnel being negotiated in the E-RAB modification procedure over the S1 interface.

Through E-RAB modification LoadCore supports the following:

- SN addition
- SN change
- SN modification
- SN release

Since the UEs will be able to use both E-UTRAN and NR resources, not all the established bearers need to be moved.

In this configuration, the **Move to Secondary Node** option must be enabled on the QoS flows tab, on each bearer that needs to use the NR resources. The traffic will be moved to NR bearers as soon as the bearer configured to support is successfully setup.

Known limitations:

- Application Traffic is not supported on Dual Connectivity bearers.

The following table describes the available **Range** configuration options for each UE range.

<b>Setting</b>	<b>Description</b>
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	Enter the number of simulated UEs required for the range.
Parent RAN/UNAP	Select the desired parent node from the test configuration. This will be the NG-RAN through which the UEs in the range will access the 5G core network.
Secondary Node	This option is used for Option 3x and Dual Connectivity NR-NR features. Select the secondary node from the drop-down list.

## Range Settings

For each range that you add (in the [UE Ranges panel](#)), you configure the settings from the **Range** panel ([UE Range panel](#)).

The **Range Settings** are organized into the following groups:

<b>UE Identification settings</b> .....	<b>895</b>
<b>UE Settings settings</b> .....	<b>896</b>
<b>UE Security settings</b> .....	<b>918</b>
<b>UE Subscribed AMBR settings</b> .....	<b>922</b>
<b>DNNs Config</b> .....	<b>922</b>
<b>SMS Configuration</b> .....	<b>925</b>
<b>Untrusted WiFi Settings</b> .....	<b>926</b>

### UE Identification settings

Each UE range has a set of Identification settings that provide basic identity values for the simulated UEs that populate the range. Some of the values (such as MCC) are shared by all of the UEs in the range, while others (such as MSIN) are unique for each individual UE in the range. The unique values are generated using an initial value plus an increment value.

The following table describes the UE **Identification Settings**.

<b>Setting</b>	<b>Description</b>
PLMN MCC	The MCC that will be assigned to each UE in this range.
PLMN MNC	The MNC that will be assigned to each UE in this range.
MSIN	The MSIN value that will be assigned to the first simulated UE in the range. <b>About MSIN ...</b>

Setting	Description
	The Mobile Subscriber Identification Number (MSIN) is a number that a wireless operator uses to uniquely identify a mobile phone. It is—at most—10-digits long. The MSIN is used (in combination with the MCC and MNC) to form the International Mobile Subscriber Identity (IMSI) number.
MSIN increment	The value to use for incrementing the MSIN values for each of the UEs in the range.
IMEI	The IMEI value that will be assigned to the first simulated UE in the range. The International Mobile Equipment Identity (IMEI) is a number used to uniquely identify 3GPP and iDEN mobile phones, as well as some satellite phones. It identifies the origin, model, and serial number of the device. It consists of either 15 digits (14 digits plus one check digit); or 16 digits (14 digits plus two software version digits). GSM networks use the IMEI number to identify valid devices, and can also use the number to prevent a stolen phone from accessing the network. When it includes the software version digits, it is referred to as the IMEISV.
IMEI Increment	The value to use for incrementing the IMEI values for each of the UEs in the range.
Software Version	The software version number identifies the software version number of the mobile equipment. Its length is 2 digits.
MSISDN	The first Mobile Station ISDN (MSISDN) value for this range.
MSISDN Increment	The value to use for incrementing the MSISDNs in the range.

## UE Settings settings

Each UE range has a set of **Settings** that configure subscription data and PDU session data for the range.

Setting	Description
<i>Settings:</i>	
Dual Registration Mode	When enabled, this option allows an UE to be registered/attached in the same time to 5GS via a gNodeB and to EPS via an eNodeB. The UE will activate this feature in case: <ul style="list-style-type: none"> <li>• Dual Registration Mode option is enabled.</li> <li>• At least one DNN has <a href="#">Dual Registration Mode</a> option enabled.</li> <li>• It has a <a href="#">parent gNodeB</a> (<i>gNodeB-1</i> for example).</li> <li>• It has a Handover objective configured with <a href="#">visited nodes</a> (for example, primary node <i>gNodeB-1</i> and secondary node <i>eNodeB-1</i>).</li> </ul>

<b>Setting</b>	<b>Description</b>
Allow MICO Mode	<p>This option, when selected, indicates that the UEs in the range prefer Mobile Initiated Connection Only (MICO) mode during Initial Registration and Registration Update procedures.</p> <p>Applicable to simulated UDM NF.</p>
Subscriber Registration Timer (s)	<p>The Periodic Registration timer value for this range of UEs.</p> <p>The AMF allocates a periodic registration timer value to the UE based on local policies, subscription information and information provided by the UE. After the expiry of this timer, the UE performs a periodic registration.</p> <p>Applicable to simulated UDM NF.</p>
Active Time (s)	The subscribed Active Time for Power Saving Mode (PSM) UEs.
RAT Restrictions	<p>UE Mobility Restrictions include RAT restrictions, which define the 3GPP Radio Access Technologies (one or more) that a UE is not allowed to access in a PLMN. The options available in LoadCore are: NR, E-UTRA, WLAN, and Virtual.</p> <p>Applicable to simulated UDM NF.</p>
Set ESM Information Transfer Flag	<p>By default, this option is enabled.</p> <p>This option controls the value of the <i>ESM information transfer</i> flag from InitialUEMessage/AttachRequest 4G message.</p> <p>When this option is disabled, the UE/eNodeB will set the flag <i>ESM information transfer</i> to <i>False</i> and MME will not send DownlinkNASTransport/ESM information request.</p>
Switch Off Deregistration/Detach	When this option is enabled, the Deregistration Request/Detach messages will use a deregistration/detach type of Switch-off. When the Deregistration/Detach type is switch-off, the AMF/MME does not send the Deregistration/Detach Accept message back to the UE.
PDU Session Release Before Deregistration	When this option is enabled, the UE will release PDU sessions before deregistration.
Enable Periodic Registration Update/Periodic Tracking Area Update	<p>By default, this option is not enabled.</p> <p>If the periodic registration / TAU functionality is disabled, the UE will ignore the T3512/T3412 timer received in the Registration Accept/TAU Accept and will not send any Periodic Registration Update/Tracking Area Update request.</p> <p>During the Initial Registration/Initial Attach, the AMF/MME sends in the Registration Accept/Attach Accept a T3512/T3412 timer, which consists of a Unit-Value pair. For example, a value of 30 and unit of 10min means 300 minutes.</p> <p>The T3512/T3412 timer can be overridden by subsequent Registration</p>

<b>Setting</b>	<b>Description</b>
	<p>Accept/TAU Accept messages. If T3512/T3412 is 0 or Disabled, no periodic registration/periodic TAU should be performed. If no T3512/T3412 value is present in the Registration Accept /Attach Accept message, the last known T3512/T3412 value is used. If a T3512/T3412 was never transmitted by the AMF/MME, the default value of 54 minutes will be used.</p> <p>The T3512/T3412 timer is triggered when the UE enters idle. If the UE exits the idle state, the T3512/T3412 timer is stopped. When the UE enters again in idle, the T3512/T3412 timer is restarted.</p> <p>While the UE is in idle mode, when the T3512/T3412 timer expires:</p> <ul style="list-style-type: none"> <li>• If the UE is not registered/attached for emergency services, the UE initiates a Periodic Registration Update/Tracking Area Update procedure and restarts the T3512/T3412 timer.</li> <li>• If the UE is registered/attached for emergency services, the UE locally de-registers/detaches and the AMF/MME locally detaches the UE.</li> </ul>
Include UEContextRequest IE for PRU Initial UE Message	<p>If enabled, it will include the UEContextRequest IE for the PRU Initial UE Message.</p> <p><b>IMPORTANT</b> This option appears only if <b>Enable Periodic Registration Update/Periodic Tracking Area Update</b> is enabled.</p>
Delay Before PDU Session Creation (ms)	The time that will elapse before the UEs in this range begin creating PDU sessions after successful Registration.
Delay Before Deregister (ms)	The time that will elapse between PDU Session Release Complete and UE initiated Deregistration Request messages.
Delay Before Handover Notify (ms)	The time to wait before handover notification.
Check AUTN	<p>By default, this option is disabled.</p> <p>When the option is enabled, then UE will check the value of AUTN in the <i>Authentication Request</i> messages and it will reply with <i>Authentication Failure (MAC failure)</i> in case of different MAC values or with <i>Authentication Failure (Synch failure)</i> in the case the sequence number computed using the AUTN value is invalid.</p>
Unsolicited Router Advertisement	Select to enable this option.
AMF Force Identification During Registration	This option will force the AMF to always trigger the "Identification Procedure" to get the identity of the UE. When the NG-RAN node receives this request, it responds with the IMEISV or the SUCI.
Identity Request PEI	When the Identification Procedure is triggered by the MME/AMF due to

<b>Setting</b>	<b>Description</b>
Type	<p>the <a href="#">AMF Force Identification During Registration</a> option being enabled, it allows the selection of the requested PEI type: <b>IMEISV</b> or <b>IMEI</b>. Default value: <b>IMEISV</b>.</p>
Send Registration Accept in Initial Context Setup Request	<p>If enabled, the UE will send Registration Accept in Initial Context Setup Request.</p>
Always Include Uplink Data Status IE in Service Request Message	<p>The UE will always include the Uplink Data Status IE for a Service Request message, not only if it has pending data.</p>
Enable Passthrough	<p>Select this option to enable passthrough and any interface. Applicable to all passthrough topologies (UE/gNB or UPF). Applicable to either direction: GTPu to IP or/and IP to GTPu.</p>
Attach/Register with GUTI	<p>When the Primary Objective type is Subscribers Per Second, enabling this option will trigger a Registration/Attach Request with the type of user identity set to temporary identity (GUTI). When option is not enabled, the type of user identity in the Registration/Attach Request will be permanent identity.</p>
Authentication with GUTI	<p>This option is available only when Attach/Register with GUTI option is enabled. When enabled, this option triggers authentication in case of attach (4G)/register (5G) with GUTI.</p>
Force Emergency Registration	<p>When this option is enabled, the UE will perform an Emergency registration (instead of Initial Registration). Only the primary objective's DNNs are taken into account when deciding if the UE performs an emergency registration. When the <code>dnnIdsToActivate</code> is present but empty in the primary objective, the Emergency Registration will not be performed even if there is a Secondary Objective that uses an emergency DNN.</p>
Identity Type for Emergency Registration	<p>Select the identity type to use from the drop-down list. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>SUCI/IMSI</b> - where SUCI is used for 5G network, and IMSI for 4G network</li> <li>• <b>IMEISV/IMEI</b> - where IMEISV is used for 5G network, and IMEI for 4G network.</li> </ul>
Support SMS	<p>When this is selected, a flag will be added in the Registration message advertising UE support for SMS over NAS feature. This feature is currently available on gNB N1N2 interface but not on the</p>

<b>Setting</b>	<b>Description</b>
	Full Core AMF, so the AMF needs to be set as DUT.
Delay Before Indirect Forwarding Cleanup (ms)	The time that will elapse before indirect forwarding cleanup. The delay is calculated from the UE Context Release.
Send Native GUTI During IRAT Mobility Registration	Enable this option to send native GUTI during IRAT mobility registration.
Authentication During Mobility Registration	<p>Select a value from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Never</b>: Authentication is not performed during mobility registration.</li> <li>• <b>Always</b>: Authentication during mobility registration is always performed.</li> <li>• <b>No Native Context</b>: Authentication during mobility registration is performed only when the UE does not hold a native 5G security context.</li> </ul>
Update GUTI in TAU	Select to enable this option.
Access Class	<p>Select the Access Class of the UE from the drop-down list. The following options are available: <i>None</i>, <i>Low Priority Access</i>, <i>11 - For PLMN Use</i>, <i>12 - Security Service</i>, <i>13 - Public Utilities</i>, <i>14 - Emergency Services</i>, <i>15 - PLMN Staff</i>.</p> <p><b>IMPORTANT</b> This option is available for 4G only.</p>
Index to RFSP	Set the value for the initial Context Setup Request - Index to RFSP IE. Possible values are in range of 0 to 256, where a zero value means the <i>indexToRFSP</i> is not sent.
GUTI Reallocation Delay (s)	The time to wait, in seconds, after the UE registers to allocate a new GUTI. A value of zero disables the reallocation.
<i>Radio Capability</i>	
UE Radio Capability IE Value for LTE	The UE radio capability IE value that will be included UE Capability Info Indication message.
UE Radio Capability IE Value for NR	The UE radio capability IE value that will be included UE Capability Info Indication message.
Send UE Capability IE Indication after Initial Context Setup	Enable this option to sent UE capability IE indication after initial context setup.
Trigger UE Radio	This option will trigger from CoreSim the UE radio capability check

<b>Setting</b>	<b>Description</b>
Capability Check Procedure after Registration	procedure after registration in 5G or UE radio capability match procedure after attach in 4G.
Replay UE Radio Capability	<p>The UE Radio Capability IE is replayed in the Initial Context Setup Request and UE Radio Capability Match / Check messages on 4G and 5G. This option is applicable for the AMF and MME nodes.</p> <p><b>NOTE</b> It is not applicable for Initial Context Setup Request of an inter-RAT handover procedure.</p> <p><b>NOTE</b> After UE Radio Capability Match / UE Radio Capability Check procedures, UE always sends UE Radio Capability Info Indication.</p>
<i>Location Reporting</i>	<i>Select the check box to enable location reporting as defined in TS 23.502 (supported on the AMF and NG-RAN nodes).</i>
Reporting Type	<p>Select the value from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <b>Direct</b> - If the test timeline is long enough, the AMF generates <i>n</i> LocationReportingControl messages at every <i>m</i> seconds from the moment Registration Complete message is received by the AMF (<i>n</i> is the value configured for <a href="#">Number of Repeats</a> and <i>m</i> is the value of <a href="#">Interval Between Requests</a>).</li> <li>• <b>Change of Serving Cell</b> - In case of Handover with AMF change, if <b>Change of Serving Cell</b> is selected, after handover, the new AMF will send a LocationReportingControl message to the NG-RAN.</li> </ul>
Interval Between Requests (seconds)	Set the time interval between requests.
Number of Repeats	Set the number of repeats.
Start Time (seconds)	The number of seconds after successful attach when the AMF sends a LocationReportingControl message (event-type: <code>change-of-serv-cell</code> ).
Stop Time (Seconds)	The number of seconds since the <a href="#">Start Time</a> when the AMF sends LocationReportingControl message (event-type: <code>stop-change-serving-cell</code> ).
<i>SMF Initiated PDU Session Release</i>	<i>Select the check box to enable this option.</i>
Time to Wait before SMF Initiated PDU Session Release (s)	Time in seconds to wait before SMF initiated PDU session release.
DNNs	Select the DNNs from the drop-down list.

<b>Setting</b>	<b>Description</b>
	<p>The available options are:</p> <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul>
<i>Network Initiated Deregistration</i>	<i>Select the check box to enable this option.</i>
<b>Time to wait before Network Initiated Deregistration (s)</b>	Time in seconds to wait before network initiated deregistration.
<b>Set Reregistration Required Flag in Deregistration Request Message</b>	Enable this option to set a required reregistration flag in the deregistration request message.
<i>AMF Initiated UE Context Release</i>	<i>Select the check box to enable this option.</i>
<b>Time to Wait before AMF Initiated UE Context Release (s)</b>	Time in seconds to wait before AMF initiated UE context release.
<b>Location Services</b>	<i>Select the check box to enable <a href="#">Location Services</a> (as described in TS23271). The Location Services procedures over the LPPa interface are detailed in TS36455.</i> <div data-bbox="561 1227 757 1275" style="background-color: #d3d3d3; padding: 5px; display: inline-block;"><b>NOTE</b></div> <div data-bbox="763 1220 1351 1317" style="padding-left: 10px;"><i>When Location Services is enabled, at least 1 profile must be configured (a maximum of 15 profiles allowed).</i></div>
<b>Reroute NAS Request</b>	<i>Select the check box to enable this option.</i>
<b>AMF Set ID</b>	The AMF Set ID to use for this simulated AMF node. The Set ID uniquely identifies the AMF Set within the AMF Region.
<b>Reroute After SMC</b>	If selected, the AMF will reroute after Security Mode procedure.
<b>NSSAI</b>	<i>See the <a href="#">NSSAI on page 905</a> table for details.</i>
<b>Network Initiated PDU Session Modification</b>	<i>See the <a href="#">Network Initiated PDU Session Modification on page 905</a> table for details.</i>
<b>Refresh Security Context</b>	<i>When enabled, the AMF will initiate the Security Mode Control procedure to obtain a fresh uplink NAS Count which is used to generate a new Security Key.</i>
<b>Delay(s)</b>	The time to wait, in seconds, before triggering the Security Mode

<b>Setting</b>	<b>Description</b>
	Control procedure after the UE is registered.
Iterations	The number of times the security context will be refreshed.
Interval(s)	The time, in seconds, between two iterations.
<i>Core Network Assistance Information For Inactive</i>	<p><i>If enabled, the configured Core Network Assistance Information for RRC INACTIVE IE is present only in the INITIAL CONTEXT SETUP REQUEST message carrying the initial Registration Accept. It is not present in the INITIAL CONTEXT SETUP REQUESTS carrying other types of NAS messages, UE CONTEXT MODIFICATION REQUEST, HANDOVER REQUEST or PATH SWITCH REQUEST ACKNOWLEDGE. It is not present for Emergency Registration.</i></p> <p><i>This option is disabled by default. See <a href="#">Core Network Assistance Information For Inactive</a> for configuration details.</i></p>
<i>Paging Settings</i>	<p><b>IMPORTANT</b> <i>This option appears only if Core node's ranges are not set as Device Under Test.</i></p> <p><i>See <a href="#">Paging Settings</a> for configuration details.</i></p>
<i>Trace Settings</i>	<i>Enable this option to send Trace Start/Deactivate Trace IEs as defined in TS38.413 chapter 8.11 (Trace Procedures). See <a href="#">Trace Settings</a> for configuration details.</i>
<i>Management Based MDT</i>	<i>Select to enable and click this setting to open the configuration panel. See <a href="#">Management Based MDT</a> for more details.</i>
<i>Mobile Terminated SMS Configuration</i>	<i>Select to enable and click this setting to open the configuration panel. See <a href="#">Mobile Terminated SMS Configuration</a> for more details.</i>
<i>Generic UE Configuration Update</i>	<i>Select to enable and click this setting to open the configuration panel.</i>
Delay (s)	The time to wait, in seconds, before initiating the Generic UE Configuration Update procedure, after the UE is registered. A zero value means the procedure is not initiated.
Acknowledgment Request	If enabled (default), it indicates if the UE was asked to respond to the Configuration Update Command message with a <i>Configuration Update Complete</i> message.
Allocate New GUTI	If enabled (default), it will allocate a new Global Unique Temporary Identifier (GUTI) to the configuration update.

## Location Services

The following table describes the **Location Services** settings.

Setting	Description
<i>Location Services:</i>	
	Select the <b>Add LCS Profile</b> button to add a new profile.
	Select the <b>Delete LCS Profile</b> button to remove the profile from your test configuration.
Trigger	Select an option from the drop-down list: <ul style="list-style-type: none"> <li><b>None</b> - no trigger (default option).</li> <li><b>UE Available</b> - UE exits Idle mode.</li> <li><b>Change of Area</b> - UE performs handover with TAC change.</li> </ul>
<i>E-CID Measurements:</i>	
	Select the <b>Add E-CID Measurements</b> button to add a new measurement. <p><b>IMPORTANT</b> A maximum of 15 E-CID Measurements can be configured across all LCS Profiles for an UE range.</p>
	Select the <b>Delete E-CID Measurements</b> button to delete the measurement from your test configuration.
Report Characteristics	Select an option from the drop-down list: <ul style="list-style-type: none"> <li><b>On Demand</b> - information is needed on demand in real time.</li> <li><b>Periodic</b> - periodic E-CID measurement reports.</li> </ul>
Measurement Quantities	Select an option (or more) from the drop-down list. The available options are: <b>Cell-ID</b> (default), <b>Angle of Arrival</b> , <b>Timing Advance Type 1</b> , <b>Timing Advance Type 2</b> , <b>RSRP</b> , <b>RSRQ</b> . The following measurement quantities become available as follows: <ul style="list-style-type: none"> <li><b>SS-RSRP</b>, <b>SS-RSRQ</b>, <b>CSI-RSRP</b>, <b>CSI-RSRQ</b>, <b>Angle of Arrival NR</b> - for 5G only, when <i>Technical Spec Version</i> is set to either <b>R16 September 2020</b>, or <b>R17 December 2022</b> (see <a href="#">Global Settings</a>).</li> <li><b>Timing Advance NR</b> - for 5G only, when <i>Technical Spec Version</i> is set to <b>R17 December 2022</b>.</li> </ul> <p><b>NOTE</b> There is no support for Inter-RAT Measurement Quantities and WLAN Measurement Quantities.</p>
Delay (ms)	This option is available only when the <i>Trigger</i> is set to <b>None</b> . It represents the time trigger for E-CID measurement initiation.
Periodicity	This option is available only when the <i>Report Characteristics</i> is set to <b>Periodic</b> . It represents the periodicity of E-CID measurement reports. The available options are: <b>120 ms</b> , <b>240 ms</b> , <b>480 ms</b> , <b>640 ms</b> , <b>1024 ms</b> , <b>2048 ms</b> , <b>5120 ms</b> , <b>10240 ms</b> , <b>1 min</b> , <b>6 min</b> , <b>12 min</b> , <b>30 min</b> , <b>60 min</b> .

Setting	Description
Duration (ms)	This option is available only when the <i>Report Characteristics</i> is set to <b>Periodic</b> . It represent the timer to trigger E-CID measurement termination.

## NSSAI

The following table describes the **NSSAI** settings.

Setting	Description								
<b>NSSAI:</b>									
	Select the <b>Add UE NSSAI</b> button to add a new UE NSSAI to your test configuration.								
<b>NSSAI Settings:</b>									
	Select the <b>Delete UE NSSAI</b> button to delete this UE NSSAI from your test configuration.								
SST	<p>The value that identifies the SST (Slice/Service Type) for this S-NSSAI. SST comprises octet 3 in the S-NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th>SST</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> </tr> <tr> <td>URLCC</td> <td>2</td> </tr> <tr> <td>MIoT</td> <td>3</td> </tr> </tbody> </table>	SST	Value	eMBB	1	URLCC	2	MIoT	3
SST	Value								
eMBB	1								
URLCC	2								
MIoT	3								
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.								
Mapped SST	The Mapped configured Slice/Service Type (SST) value for this S-NSSAI.								
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this S-NSSAI.								

## Network Initiated PDU Session Modification

The following table describes the **Network Initiated PDU Session Modification** settings.

Setting	Description
<i>Network Initiated PDU Session Modification:</i>	

<b>Setting</b>	<b>Description</b>
	From the panel, you can select a <b>DNN Config</b> for editing and also add additional DNN configurations. Select the <b>Add DNNs Config</b> button to add a new DNN configuration.
<i>DNN Config:</i>	
	Select the <b>Delete DNN Config</b> button to delete this DNN config from your test configuration.
DNN	From the drop-down, select one of the previously-defined DNNs.
Delay Before Network Initiated PDU Session Modification (s)	The time to wait, in seconds, between the PDU Session Establishment end and the start of Network Initiated PDU Session Modification procedure start.
Interval Between Consecutive Network Initiated PDU Session Modification procedures (s)	The time, in seconds, between two Consecutive Network Initiated PDU Session Modification procedures.
Iterations	The number of consecutive Network Initiated PDU Session Modification procedures per UE.
<i>Flows:</i>	<i>This option lists all the flows defined and associated to the selected DNN. Select the check-box to configure a flow. By default, the default bearer is selected.</i>
	Select the <b>Add Flow</b> button to add a new flow to your test configuration.
<i>Flow:</i>	
	Select the <b>Delete Flow</b> button to delete this DNN config from your test configuration.
Flow ID	Select the flow's ID from the drop-down list.
ARP	<i>If enabled, the Allocation and Retention Priority (ARP) setting specifies the priority level, preemption capability, and preemption vulnerability of a resource request.</i>
ARP Priority Level	Specify the ARP priority level. The ARP Priority Level defines the relative importance of a resource request,

<b>Setting</b>	<b>Description</b>																				
	where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by home network and thus applicable when a UE is roaming.																				
ARP Preemption Capability	<p>The available options are:</p> <ul style="list-style-type: none"> <li>• <b>Not Preempt</b></li> <li>• <b>May Preempt</b> - if selected, the packets in this Flow can preempt other flows. When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.</li> </ul>																				
ARP Preemption Vulnerability	<p>The available options are:</p> <ul style="list-style-type: none"> <li>• <b>Not Preemptable</b></li> <li>• <b>Premptable</b> - if selected, the packets in this QoS Flow are candidates for being preempted by other flows. When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.</li> </ul>																				
GBR	<p><i>If enabled, configure the parameters to indicate the guaranteed bit rates (GBR) for the selected flow.</i></p>																				
GBR Type	<p>Select the desired guaranteed bit rate (GBR) type for the flow. Based on your selection, LoadCore will show the appropriate settings to configure.</p> <table border="1" data-bbox="409 1157 1437 1776"> <thead> <tr> <th colspan="2" data-bbox="409 1157 1437 1218"><i>QoS Rates:</i></th></tr> <tr> <th data-bbox="409 1218 649 1258"><b>Parameter</b></th><th data-bbox="649 1218 1437 1258"><b>Description</b></th></tr> </thead> <tbody> <tr> <td data-bbox="409 1258 649 1320">Uplink</td><td data-bbox="649 1258 1437 1320">Set the uplink bitrate.</td></tr> <tr> <td data-bbox="409 1320 649 1381">Downlink</td><td data-bbox="649 1320 1437 1381">Set the downlink bitrate.</td></tr> <tr> <th colspan="2" data-bbox="409 1381 1437 1442"><i>Dynamic QoS Rates:</i></th></tr> <tr> <th data-bbox="409 1442 649 1482"><b>Parameter</b></th><th data-bbox="649 1442 1437 1482"><b>Description</b></th></tr> <tr> <td data-bbox="409 1482 649 1543">Uplink Action</td><td data-bbox="649 1482 1437 1543">Select the action type to apply to the uplink bitrate.</td></tr> <tr> <td data-bbox="409 1543 649 1605">Uplink Step</td><td data-bbox="649 1543 1437 1605">Select the step to increase or decrease the uplink bitrate.</td></tr> <tr> <td data-bbox="409 1605 649 1666">Downlink Action</td><td data-bbox="649 1605 1437 1666">Select the action type to apply to the downlink bitrate.</td></tr> <tr> <td data-bbox="409 1666 649 1727">Downlink Step</td><td data-bbox="649 1666 1437 1727">Select the step to increase or decrease the downlink bitrate.</td></tr> </tbody> </table>	<i>QoS Rates:</i>		<b>Parameter</b>	<b>Description</b>	Uplink	Set the uplink bitrate.	Downlink	Set the downlink bitrate.	<i>Dynamic QoS Rates:</i>		<b>Parameter</b>	<b>Description</b>	Uplink Action	Select the action type to apply to the uplink bitrate.	Uplink Step	Select the step to increase or decrease the uplink bitrate.	Downlink Action	Select the action type to apply to the downlink bitrate.	Downlink Step	Select the step to increase or decrease the downlink bitrate.
<i>QoS Rates:</i>																					
<b>Parameter</b>	<b>Description</b>																				
Uplink	Set the uplink bitrate.																				
Downlink	Set the downlink bitrate.																				
<i>Dynamic QoS Rates:</i>																					
<b>Parameter</b>	<b>Description</b>																				
Uplink Action	Select the action type to apply to the uplink bitrate.																				
Uplink Step	Select the step to increase or decrease the uplink bitrate.																				
Downlink Action	Select the action type to apply to the downlink bitrate.																				
Downlink Step	Select the step to increase or decrease the downlink bitrate.																				
<p><i>If enabled, configure the maximum bit rates (MBR) allowed for the selected flos.</i></p>																					

Setting	Description																				
MBR Type	<p>Select the desired maximum bit rate (MBR) type for the flow. Based on your selection, LoadCore will show the appropriate settings to configure.</p> <table border="1"> <tr> <td colspan="2"><i>QoS Rates:</i></td></tr> <tr> <th>Parameter</th> <th>Description</th></tr> <tr> <td>Uplink</td> <td>Set the uplink bitrate.</td></tr> <tr> <td>Downlink</td> <td>Set the downlink bitrate.</td></tr> <tr> <td colspan="2"><i>Dynamic QoS Rates:</i></td></tr> <tr> <th>Parameter</th> <th>Description</th></tr> <tr> <td>Uplink Action</td> <td>Select the action type to apply to the uplink bitrate.</td></tr> <tr> <td>Uplink Step</td> <td>Select the step to increase or decrease the uplink bitrate.</td></tr> <tr> <td>Downlink Action</td> <td>Select the action type to apply to the downlink bitrate.</td></tr> <tr> <td>Downlink Step</td> <td>Select the step to increase or decrease the downlink bitrate.</td></tr> </table>	<i>QoS Rates:</i>		Parameter	Description	Uplink	Set the uplink bitrate.	Downlink	Set the downlink bitrate.	<i>Dynamic QoS Rates:</i>		Parameter	Description	Uplink Action	Select the action type to apply to the uplink bitrate.	Uplink Step	Select the step to increase or decrease the uplink bitrate.	Downlink Action	Select the action type to apply to the downlink bitrate.	Downlink Step	Select the step to increase or decrease the downlink bitrate.
<i>QoS Rates:</i>																					
Parameter	Description																				
Uplink	Set the uplink bitrate.																				
Downlink	Set the downlink bitrate.																				
<i>Dynamic QoS Rates:</i>																					
Parameter	Description																				
Uplink Action	Select the action type to apply to the uplink bitrate.																				
Uplink Step	Select the step to increase or decrease the uplink bitrate.																				
Downlink Action	Select the action type to apply to the downlink bitrate.																				
Downlink Step	Select the step to increase or decrease the downlink bitrate.																				

## Core Network Assistance Information For Inactive

Setting	Description
<i>Core Network Assistance Information For Inactive</i>	
UE Specific DRX	<p>The UE Specific DRX value can be selected from the available options:</p> <ul style="list-style-type: none"> <li><b>DRX32</b></li> <li><b>DRX64</b> (default value)</li> <li><b>DRX128</b></li> <li><b>DRX256</b></li> <li><b>None</b> - if selected, this IE will not be included in the message</li> </ul>
<i>Expected UE Behaviour</i>	
Expected Handover Interval	<p>The expected time interval between inter NG-RAN node handovers. When set to <b>None</b>, this IE will not be included in the message. Select a value from the drop-down:</p> <ul style="list-style-type: none"> <li><b>None</b> (default)</li> <li><b>Sec15</b></li> <li><b>Sec30</b></li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Sec60</b></li> <li>• <b>Sec90</b></li> <li>• <b>Sec120</b></li> <li>• <b>Sec180</b></li> <li>• <b>Long Time</b></li> </ul>
Expected UE Mobility	<p>Indicates whether the UE is expected to be stationary or mobile. When set to <b>None</b>, this IE will not be included in the message. Select a value from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)</li> <li>• <b>Stationary</b></li> <li>• <b>Mobile</b></li> </ul>
<i>Expected UE Activity Behaviour</i>	
Expected Activity Period	The expected activity time in seconds. Any period longer than 180 seconds is represented by the value 181. When left empty, this IE will not be included in the message.
Expected Idle Period	The expected idle time in seconds. Any period longer than 180 seconds is represented by the value 181. When left empty, this IE will not be included in the message.
Source Of UE Activity Behaviour Information	<p>Indicates the source of the UE activity behavior. When set to 'None' this IE will not be included in the message.</p> <p>Select a value from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)</li> <li>• <b>Subscription Information</b></li> <li>• <b>Statistics</b></li> </ul>

## Paging Settings

Setting	Description
<i>Individual UE Paging</i>	
Delay Before Paging (ms)	The time to wait before paging, after UE enters idle.
Paging Storm Iterations	The number of times the UE will be paged.
Paging Storm Interval (ms)	The delay between paging messages, in milliseconds.
<i>UE Group Paging</i>	<i>If selected, a group of Idle UEs will be paged from their last parent based on the configured criteria. The configuration is applied per parent node.</i>

Setting	Description
Group Paging Condition	Select from the drop-down the condition that needs to be met in order to trigger Paging: <ul style="list-style-type: none"> <li>• <b>Time To Wait</b> - is counted from the moment the first UE goes to idle or after one iteration completes (in case iterations is used). When this time elapses, all the UEs that are idle at that moment will be paged.</li> <li>• <b>Number Of UEs</b> - when the respective amount of UEs are in idle state, Paging will be triggered for all of them.</li> </ul>
Group Paging Value	This is the condition value. The maximum value should be the same as for the maximum value for UE Range count.
Group Paging Iterations	The number of times to repeat the condition.
Group Paging Rate	The number of UEs per second for which Paging is started. The value zero disables the rate, and Paging will be done as soon as possible.
<i>Paging Throttling</i>	
Throttling Criterion	Select the criterion on which two consecutive Paging messages triggered by the downlink traffic should be sent: <ul style="list-style-type: none"> <li>• Seconds</li> <li>• Packets</li> </ul>
Value	Assign a number of seconds to wait, or packets to skip until Paging is sent again. A value of 0 disables this option.

## Trace Settings

Setting	Description
Trace Activation Delay (s)	Time, in seconds, after the UE registers to send the Trace Activation. A value of zero means the Trace Activation is sent within the ICS Request message.
Trace Deactivation Delay (s)	Time, in seconds, after the trace activation was sent for the CoreSim to deactivate the trace. A value of zero disables the trace deactivation.
Interfaces to Trace	Select from the drop-down the interfaces to trace.
Trace Depth	The expected time interval between inter NG-RAN node handovers.
Trace Collection Entity IP Address	The starting IP address.
<i>MDT Settings</i>	

<b>Setting</b>	<b>Description</b>
MDT Activation	<p>Select the Minimization of Drive Test (MDT) type used as MDT activation trigger. Options are:</p> <ul style="list-style-type: none"> <li>• <b>Immediate MDT Only</b> (default)</li> <li>• <b>Logged MDT Only</b></li> <li>• <b>Immediate MDT Only and Trace</b></li> </ul>
Scope	<p>Select the area scope of the MDT. You can choose from:</p> <ul style="list-style-type: none"> <li>• <b>Cell Based</b></li> <li>• <b>TA Based</b></li> <li>• <b>PLMN Wide</b> (default)</li> <li>• <b>TAI Based</b></li> </ul>
<i>Cell Defining the Area Scope for MDT</i>	<p><b>IMPORTANT</b> <i>This option appears only if the <b>Scope</b> is set to <b>Cell Based</b>.</i>  See <a href="#">Cell Defining the Area for MDT Settings</a> table for more details.</p>
<i>TACs Defining the Area Scope for MDT</i>	<p><b>IMPORTANT</b> <i>This option appears only if the <b>Scope</b> is set to <b>TA Based</b>.</i>  See <a href="#">TACs Defining the Area for MDT Settings</a> table for more details.</p>
<i>TAIs Defining the Area Scope for MDT</i>	<p><b>IMPORTANT</b> <i>This option appears only if the <b>Scope</b> is set to <b>TA Based</b>.</i>  See <a href="#">TAIs Defining the Area for MDT Settings</a> table for more details.</p>
Mode	<p>Select the MDT mode you want to apply. Options are:</p> <ul style="list-style-type: none"> <li>• <b>Immediate MDT</b> (default)</li> <li>• <b>Logged MDT</b></li> </ul>
<i>Immediate MDT Settings</i>	<p><b>IMPORTANT</b> <i>This option appears only if <b>Mode</b> is set to <b>Immediate MDT</b>.</i>  See <a href="#">Immediate MDT Settings</a> table for more details.</p>
<i>Logged MDT Settings</i>	<p><b>IMPORTANT</b> <i>This option appears only if <b>Mode</b> is set to <b>Logged MDT</b>.</i>  See <a href="#">Logged MDT Settings</a> table for more details.</p>
<i>Signaling Based MDT</i>	<p>Select and click this setting to open the configuration panel. See <a href="#">Signaling Based MDT</a> for more details.</p>

### Cell Defining the Area for MDT Settings

<b>Setting</b>	<b>Description</b>
TACS:	

Setting	Description
	Select the Add TACS button to add a new UE ID to your test configuration.
<i>Cell:</i>	
	Select the Delete Cell ID button to delete the UE ID from your test configuration.
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the Cell ID.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the Cell ID.
Cell ID	The cell identifier of the UE.

### TACs Defining the Area for MDT Settings

Setting	Description
<i>TACS:</i>	
	<p>This represents the Tracking Area Code (TAC) for this eNodeB. Select the <b>Add TAC</b> button to add a new TAC to your configuration.</p> <p>A Tracking Area Code (TAC) is a 2 or 3-octet string identifying a Tracking Area within a PLMN. A Tracking Area (TA) is a geographical combination of several neighboring base stations. When a UE is in the Idle state, its location is known to the network at the TA level (versus the cell level, as is the case with a UE in the Connected state). The TAC is used in the construction of the Tracking Area Identity (TAI).</p>
	Select the <b>Delete</b> button to remove the tracking area code from your configuration.

### TAIs Defining the Area for MDT Settings

Setting	Description
<i>TAI:</i>	
	Select the Add TAI button to add a new TAI (Tracking Area Identity) to your test configuration.
<i>TAI:</i>	
	Select the Delete TAI button to delete this TAI from your test configuration.
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the TAI.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the TAI.

Setting	Description
TAI	The Tracking Area Identity (TAI) used in the construction of the TAI.

## Immediate MDT Settings

Setting	Description
<i>Measurements</i>	
Logging M1 Event Triggered Measurements	If enabled, the UE logs the M1 measurements (RSRP/RSRQ) that are triggered by specific events.
DL Signal Quantities (M1)	<i>Select to enable and click to open the configuration panel.</i>
Reporting Trigger	Select the trigger for M1 measurement report. Options are: <ul style="list-style-type: none"> <li>• <b>Periodic</b></li> <li>• <b>A2 Event Triggered</b></li> <li>• <b>A2 Event Triggered Periodic</b></li> </ul>
Event Type	<p><b>IMPORTANT</b> This option appears only if the <b>Reporting Trigger</b> is set to <b>A2 Event Triggered</b> or <b>A2 Event Triggered Periodic</b>.</p> <p>Select a specific type of radio event configured for data collection during MDT operations. Options are:</p> <ul style="list-style-type: none"> <li>• <b>RSRP</b></li> <li>• <b>RSRQ</b></li> <li>• <b>SINR</b></li> </ul>
Event Threshold	<p><b>IMPORTANT</b> This option appears only if the <b>Reporting Trigger</b> is set to <b>A2 Event Triggered</b> or <b>A2 Event Triggered Periodic</b>.</p> <p>Set the value for the event. Allowed values are between 0 (default) and 127.</p>
Report Interval	<p><b>IMPORTANT</b> This option appears only if the <b>Reporting Trigger</b> is set to <b>Periodic</b> or <b>A2 Event Triggered Periodic</b>.</p> <p>Select from the drop-down the time interval between successive event notifications. Possible values are: <b>ms120</b>, <b>ms240</b>, <b>ms480</b>, <b>ms640</b>, <b>ms1024</b>, <b>ms2048</b>, <b>ms5120</b>, <b>ms10240</b>, <b>min1</b>, <b>min6</b>, <b>min12</b>, <b>min30</b>, <b>min60</b>.</p>

Setting	Description
Report Amount	<p><b>IMPORTANT</b> This option appears only if the <b>Reporting Trigger</b> is set to <b>Periodic</b> or <b>A2 Event Triggered Periodic</b>.</p> <p>Select from the drop-down the number of measurement reports that the UE sends to the network before stopping. Possible values are: <b>r1, r2, r4, r8, r16, r32, r64, infinity</b>.</p>
<i>Power Headroom (M2)</i>	<i>Select to enable and click to open the configuration panel.</i>
<b>Enable M2 Measurement</b>	If enabled, the UE will transmit Power Headroom (M2) values measured as the difference between the maximum transmission power of the UE and the current transmission power that the UE is using.
<i>PDCP SDU Data Volume (M4)</i>	<i>Select to enable and click to open the configuration panel.</i>
<b>Collection Period</b>	Select the time duration over which the User Equipment (UE) collects measurement data related to network performance. Possible values are: <b>ms1024, ms2048, ms5120, ms10240, min1</b> .
<b>Links to log</b>	<p>Specifies which direction of the communication channel the measurements are collected from, impacting how network performance is analyzed and optimized. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>Uplink</b></li> <li>• <b>Downlink</b></li> <li>• <b>Both Uplink and Downlink</b></li> </ul>
<i>Average UE Throughput (M5)</i>	<i>Select to enable and click to open the configuration panel.</i>
<b>Collection Period</b>	Select the time duration over which the User Equipment (UE) collects measurement data related to network performance. Possible values are: <b>ms1024, ms2048, ms5120, ms10240, min1</b> .
<b>Links to log</b>	<p>Specifies which direction of the communication channel the measurements are collected from, impacting how network performance is analyzed and optimized. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>Uplink</b></li> <li>• <b>Downlink</b></li> <li>• <b>Both Uplink and Downlink</b></li> </ul>
<i>Packet Delay (M6)</i>	<i>Select to enable and click to open the configuration panel.</i>
<b>Report Interval</b>	Select from the drop-down the time interval between successive event notifications. Possible values are: <b>ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960</b> ,

Setting	Description
	<b>min1, min6, min12, min30.</b>
Links to log	Specifies which direction of the communication channel the measurements are collected from, impacting how network performance is analyzed and optimized. Available options are: <ul style="list-style-type: none"> <li><b>Uplink</b></li> <li><b>Downlink</b></li> <li><b>Both Uplink and Downlink</b></li> </ul>
Packet Loss Rate (M7)	Select to enable and click to open the configuration panel.
Collection Period	Set the period (in minutes) in which the collection of data will occur.
Links to log	Specifies which direction of the communication channel the measurements are collected from, impacting how network performance is analyzed and optimized. Available options are: <ul style="list-style-type: none"> <li><b>Uplink</b></li> <li><b>Downlink</b></li> <li><b>Both Uplink and Downlink</b></li> </ul>

## Logged MDT Settings

Setting	Description
Report Type	Select the report type for logged MDTs. Options are: <ul style="list-style-type: none"> <li><b>Periodic</b></li> <li><b>Event Triggered</b></li> </ul>
Logging Interval	Specifies the time interval between consecutive logged measurements. Possible values are: <b>ms320, ms640, ms1280, ms2560, ms5120, ms10240, ms20480, ms30720, ms40960, ms61440, infinity.</b>
Logging Duration	Defines the total duration for which the UE should perform logging of measurements. Once this duration expires, the UE stops logging. Possible values are: <b>m10, m20, m40, m60, m90, m120.</b>
Event Trigger	<p><b>IMPORTANT</b> This option is available only if the <b>Report Type</b> is set to <b>Event Triggered</b>.</p> <p>Select from the drop-down the type of event trigger. Options are:</p> <ul style="list-style-type: none"> <li><b>Out of Coverage</b></li> <li><b>L1 Event</b></li> </ul>
L1 Event Type	<p><b>IMPORTANT</b> This option is available only if the <b>Event Trigger</b> is set to <b>L1 Event</b>.</p>

Setting	Description
	Select the threshold type of the L1 event trigger: <ul style="list-style-type: none"> <li>• <b>RSRP</b></li> <li>• <b>RSRQ</b></li> </ul>
L1 Event Threshold	<b>IMPORTANT</b> This option is available only if the <b>Event Trigger</b> is set to <b>L1 Event</b> . Specify the threshold value for triggering a Layer 1 event.
Hysteresis	<b>IMPORTANT</b> This option is available only if the <b>Event Trigger</b> is set to <b>L1 Event</b> . Define a margin above or below the L1 Event Threshold that must be exceeded before the event is triggered or canceled.
Time to Trigger	<b>IMPORTANT</b> This option is available only if the <b>Event Trigger</b> is set to <b>L1 Event</b> . Select from the drop-down the time during which specific criteria for the event has to be met in order to trigger a measurement report. Available values are: <b>ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256, ms320, ms480, ms512, ms640, ms1024, ms1280, ms2560, ms5120</b> .

## Signaling Based MDT

Setting	Description
PLMNs:	
	Select the Add PLMN button to add a new public land mobile network to your test configuration.
PLMN:	
	Select the Delete PLMN button to delete the public land mobile network from your test configuration.
PLMN MCC	The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.
PLMN MNC	The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. Add the MNC that will be assigned to each UE in this range.

## Management Based MDT

Setting	Description
<i>PLMNs:</i>	
	Select the Add PLMN button to add a new public land mobile network to your test configuration.
<i>PLMN:</i>	
	Select the Delete PLMN button to delete the public land mobile network from your test configuration.
PLMN MCC	The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.
PLMN MNC	The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. Add the MNC that will be assigned to each UE in this range.

## Mobile Terminated SMS Configuration

Setting	Description
Delay	After the UE registers, the network waits the configured number of seconds before it initiates the MT SMS.
Originating Address	The originating address of the SMS text message.
Service Center Address	The service center address of the SMS text message.
Type of Number	Select from the drop-down the type of number to be used. Options are: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• International Number</li> <li>• National Number</li> <li>• Network Specific Number</li> <li>• Subscriber Number</li> <li>• Alphanumeric</li> <li>• Abbreviated Number</li> <li>• Reserved Number</li> </ul>
Numbering Plan Identification	Select from the drop-down the numbering plan identification. Options are: <ul style="list-style-type: none"> <li>• Unknown</li> <li>• ISDN</li> <li>• Data Numbering Plan</li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li>• Telex Numbering Plan</li> <li>• National Numbering Plan</li> <li>• Private Numbering Plan</li> <li>• Ermes Numbering Plan</li> <li>• Reserved Numbering Plan</li> </ul>
Text	The actual text message of the SMS.
Character Set	Select the character set used in the data coding scheme for the text message. Options are: <ul style="list-style-type: none"> <li>• GSM7</li> <li>• UCS2</li> </ul>

## UE Security settings

Each UE range requires security settings for subscriber authentication and subscriber privacy. In the 5G system, the SUbscription Permanent Identifier (SUPI) is a globally unique identifier allocated to each subscriber. The serving network must authenticate the SUPI in the process of authentication and key agreement between UE and network. The serving network authorizes the UE through the subscription profile obtained from the home network; this UE authorization is based on the authenticated SUPI.

The SUPI is never transferred in clear text over the 5G-RAN; instead, the SUCI is used. The SUbscription Concealed Identifier (SUCI) is a privacy-preserving identifier containing the concealed SUPI. In the 5G core network, only the UDM has authority to deconceal the SUCI.

For detailed information, refer to 3GPP TS 33.501 (Security architecture and procedures for 5G System).

The following table describes the UE **Security Settings**.

Setting	Description
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP / OPCODE / TOP / TOPC	Select the operator-specific authentication value.
OP	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters.

<b>Setting</b>	<b>Description</b>												
	<p>It remains fix for all Subscriber/SIM of an operator.</p> <p>You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.</p>												
OPc	<p>The OPc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.</p>												
OPc Increment	<p>The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.</p>												
TOP	<p>A 256-bit operator variant algorithm configuration field used by the TUAK authentication algorithm.</p>												
TOPc	<p>A 256-bit value derived from TOP and K used by the TUAK authentication algorithm.</p>												
TOPc Increment	<p>The number used to increment the TOPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same TOPc value.</p>												
SUCI Protection Scheme	<p>The protection scheme used to generate the SUCI (for the purpose of concealing the SUPI) for each UE in the range. The options are as follows:</p> <table border="1" data-bbox="434 1072 1437 1406"> <thead> <tr> <th data-bbox="434 1072 572 1129"><b>Scheme</b></th><th data-bbox="572 1072 752 1129"><b>Identifier</b></th><th data-bbox="752 1072 1437 1129"><b>Size of the scheme output</b></th></tr> </thead> <tbody> <tr> <td data-bbox="434 1129 572 1220">null-scheme</td><td data-bbox="572 1129 752 1220">0x0</td><td data-bbox="752 1129 1437 1220">Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)</td></tr> <tr> <td data-bbox="434 1220 572 1311">Profile-A</td><td data-bbox="572 1220 752 1311">0x1</td><td data-bbox="752 1220 1437 1311">Total of 256-bit public key, 64-bit MAC, and size of input</td></tr> <tr> <td data-bbox="434 1311 572 1406">Profile-B</td><td data-bbox="572 1311 752 1406">0x2</td><td data-bbox="752 1311 1437 1406">Total of 264-bit public key, 64-bit MAC, and size of input.</td></tr> </tbody> </table>	<b>Scheme</b>	<b>Identifier</b>	<b>Size of the scheme output</b>	null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)	Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input	Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.
<b>Scheme</b>	<b>Identifier</b>	<b>Size of the scheme output</b>											
null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)											
Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input											
Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.											
Home Network Public Key	<p>The home network public key that will be used for concealing the SUPI. The USIM stores the home network public key (if provisioned by the home operator).</p>												
Home Network Public Key ID	<p>The Home Network Public Key Identifier that will be used to indicate which public/private key pair to use for SUPI protection and deconcealment of the SUCI.</p>												
Ephemeral Public Key	<p>The ephemeral public key that will be used for computing a fresh SUCI on the UE side and for deconcealing the SUCI on the home network side.</p>												
Ephemeral Private Key	<p>The ephemeral private key that will be used for computing a fresh SUCI on the UE side.</p>												

Setting	Description
Routing Indicator	The Routing Indicator that is used in the construction of the SUCI. The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.
RAND	A hexadecimal number that represents the 128-bit random challenge. You can accept the value generated by LoadCore, or enter of a RAND value of your own choosing.
RAND Increment	Specify the RAND increment value.
AUTN	The AUthentication TokeN (AUTN) to use when authenticating the UEs in this range.
Authentication Type	Select the Authentication Method to use in the authentication procedures for this range of UEs. In the current release, <b>5G-AKA</b> is the only supported Authentication Type.
Integrity Protection Maximum Uplink Data Rate	Select a value from the drop-down list: <ul style="list-style-type: none"> <li>• <b>64 kbps</b></li> <li>• <b>Full Data Rate</b></li> </ul>
Integrity Protection Maximum Downlink Data Rate	Select a value from the drop-down list: <ul style="list-style-type: none"> <li>• <b>64 kbps</b></li> <li>• <b>Full Data Rate</b></li> </ul>
<i>UDM User Plane Security Profile</i>	<i>With this option you can configure User Plane security profiles. See <a href="#">UDM User Plane Security Profile below</a> table for details.</i>
<i>Override UE Security Capability</i>	<i>If selected, this option will override the default UE Security Capability settings. See <a href="#">Override UE Security Capability on the next page</a> table for details.</i>

## UDM User Plane Security Profile

The following parameters are required to configure the UDM User Plane Security Profile:

Parameter	Description
	Select the <b>Add Security Profile</b> button to add a new profile to your test configuration.
	Select the <b>Delete Profile</b> button to remove the profile from your test configuration.

Parameter	Description
UDM SNSSAI Mapping Profile	Select the mapping profile from the drop-down list.
DNNs	Select the DNN value for the drop-down list. For example: dnn.keysight.com.
Integrity	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>REQUIRED</b></li> <li>• <b>PREFERRED</b></li> <li>• <b>NOT-NEEDED</b></li> </ul>
Confidentiality	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>REQUIRED</b></li> <li>• <b>PREFERRED</b></li> <li>• <b>NOT-NEEDED</b></li> </ul>

When the **REQUIRED** option is selected for any of the [Integrity](#) or [Confidentiality](#) parameters and, on the NGRAN, the same option ([Enable Integrity](#) or [Enable Confidentiality](#)) is NOT selected, the NGRAN will send in *PduSessionResourceSetupResponse* message an error cause (forcing SMF to send a PDU Session establishment reject). Otherwise, for any other combinations of Integrity or Confidentiality parameters on UDM security profile and NGRAN, the flow should be successfully.

**NOTE**

User Plane Security settings are not taken into account for N2 Handover procedure.

## Override UE Security Capability

The following parameters are required to configure the Override UE Security Capability:

Parameter	Description
Include 5G UE Security Capabilities in 4G Attach	If enabled, the 4G Attach Request will contain the UE Additional Security Capability IE (5G UE Security Capability).
5G Ciphering Algorithm	<i>This section lists the supported 5G ciphering algorithm. By default, all settings are enabled. If required, you can disable each setting individually to avoid override.</i>
NEA0	Null ciphering algorithm (enabled by default).
NEA1	128-bit SNOW 3G based algorithm (enabled by default).
NEA2	128-bit AES based algorithm (enabled by default).
NEA3	128-bit ZUC based algorithm (enabled by default).
5G Integrity	<i>This section lists the supported 5G integrity algorithm. By default, all</i>

Parameter	Description
Algorithm	<i>settings are enabled. If required, you can disable each setting individually to avoid override.</i>
NIA0	Null ciphering algorithm (enabled by default).
NIA1	128-bit SNOW 3G based algorithm (enabled by default).
NIA2	128-bit AES based algorithm (enabled by default).
NIA3	128-bit ZUC based algorithm (enabled by default).

## UE Subscribed AMBR settings

Each UE range has a set of **Subscribed AMBR** settings that configure the Aggregate Maximum Bit Rate (AMBR) for which the UEs in the range are subscribed.

Setting	Description
<i>Subscribed AMBR:</i>	
Subscribed AMBR Uplink	The subscribed uplink UE AMBR value for this range of UEs. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.
Subscribed AMBR Uplink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.
Subscribed AMBR Downlink	The subscribed downlink UE AMBR value for this range of UEs. Applicable to simulated UDM NF, part of the UE subscription Access and Mobility Data.
Subscribed AMBR Downlink Unit	The unit in which the rate is expressed. The options range from bps to Tbps.

## DNNs Config

You use the DNNs Config panel to configure one or more Data Network Names (DNNs) for each UE range. These settings establish a mapping between DNNs and UE IPs, thereby enabling multiple PDU sessions for each UE in the range.

The following table describes the UE **DNNs Config** settings.

Setting	Description
<i>DNNs Config:</i>	
	From the panel, you can select a DNN Config for editing and also add additional DNN configurations. Select the <b>Add DNNs Config</b> button to add a new DNN configuration.

<b>Setting</b>	<b>Description</b>
<i>DNN Config:</i>	
	Select the <b>Delete DNN Config</b> button to delete this DNN config from your test configuration.
SSC Mode	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>• SSC Mode 1: The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>• SSC Mode 2: The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>• SSC Mode 3: Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4/v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
Session ID	Provide the session ID value.
DNN	Select one of the previously-defined DNNs from the drop-down list.
Local IPv4 Address	<p>The IPv4 address that the UE receives from the SMF during PDU Session Establishment. This address is used for L4-7 traffic (source IP for the UL traffic, destination IP for the DL traffic). It is used only when LoadCoresimulates the SMF.</p> <p>IP address is also used to create UE Routes from DN.</p>
Local IPv4 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Local IPv4 Address Increment	The value by which the IP addresses will be incremented.
Local IPv6 Address	<p>The IPv6 address that the UE receives from the SMF during PDU Session Establishment. This address is used for L4-7 traffic (source IP for the UL traffic, destination IP for the DL traffic). It is used only when LoadCoresimulates the SMF.</p> <p>IP address is also used to create UE Routes from DN.</p>
Local IPv6 Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Local IPv6 Address Increment	The value by which the IP addresses will be incremented.

Setting	Description
Increment	
Configure S-NSSAI:	<p>When this check-box is selected, you can configure which slice (S-NSSAI) to be send in PDU Session Establishment messages. If the check-box is not selected, the first slice from Allowed NSSAI list (received in Registration Accept) is used in PDU Session Establishment message.</p> <p><b>NOTE</b> This is applicable for the N1/N2 interface only and is not propagated beyond the AMF.</p>
S-NSSAI	This list contains all the slices defined for the selected UE range. Select from the drop-down list the slice to be used in PDU Session Establishment.
Force S-NSSAI	<p>This option is used to control the behavior in case you select a slice that is not part of Allowed NSSAI received from AMF, as follows:</p> <ul style="list-style-type: none"> <li>if the check-box is not selected, the UE will not send any slice in PDU Session Establishment message (as the slice selected from the above list is not part of Allowed NSSAI).</li> <li>if the check-box is selected, the UE will use the slice selected from the above list, although it is not part of Allowed NSSAI.</li> </ul> <p>This option is for negative testing purposes, and it is expected the PDU Session Establishment to fail as it uses a slice that is not allowed.</p>
<i>Secondary Authentication:</i>	
Method type	<p>The following options are available:</p> <ul style="list-style-type: none"> <li><b>None</b></li> <li><b>EAP-TTLS</b> (Extensible Authentication Protocol – Tunnelled Transport Layer Security)</li> <li><b>CHAP</b> (Challenge-Handshake Authentication Protocol)</li> <li><b>PAP</b> (password Authentication Protocol)</li> </ul>
<i>EAP-TTLS Auth Method:</i>	
CA Certificate	Provide the client certificate.
Tunneled Authentication Method	Select the tunneled authentication method: <ul style="list-style-type: none"> <li><b>PAP</b></li> <li><b>CHAP</b></li> </ul>
Password	Provide the password.
Send User Identity	<p>By default, this option is disabled.</p> <p>Enabling this option will add SM PDU DN Request Container IE (Authentication Identity) to the PDU Session Establishment Request message send by NG-RAN.</p>
<i>Chap Auth Method:</i>	

<b>Setting</b>	<b>Description</b>
User	Provide the user.
Secret	Provide the password.
<i>PAP Auth Method:</i>	
User	Provide the user.
Password	Provide the password.

## SMS Configuration

The following table describes the UE **SMS Configuration** settings.

<b>Setting</b>	<b>Description</b>
<i>Mobile Settings:</i>	
Service Center Address	The service center address used by the UE range for SMS messaging.
Type of Number	<p>The type of number can be one of the following:</p> <ul style="list-style-type: none"> <li>• Unknown</li> <li>• International number</li> <li>• National number</li> <li>• Network specific number</li> <li>• Subscriber number</li> <li>• Alphanumeric</li> <li>• Abbreviated number</li> <li>• Reserved number</li> </ul>
Numbering Plan Identification	<p>The numbering plan identification can be one of the following:</p> <ul style="list-style-type: none"> <li>• Unknown</li> <li>• ISDN</li> <li>• Data numbering plan</li> <li>• Telex numbering plan</li> <li>• National numbering plan</li> <li>• Private numbering plan</li> <li>• ERMES numbering plan</li> <li>• Reserved numbering plan</li> </ul>
Character Set	The character set used in the data coding scheme for the text message.
Text Message	The content of text message sent by the UE via SMS.

Setting	Description
Mobile Terminate SMS Delay (s)	The time in seconds to wait, after the UE registers, for the AMF or SMF to initiate an MT SMS.
<i>SMS Configuration:</i>	
SMS Mode	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>SMS-MO</b>: Mobile Originated. The UE range originates (sends) SMS messages.</li> <li>• <b>SMS-MT</b>: Mobile Termintated. The UE range waits for delivery of SMS messages.</li> </ul>

## Untrusted WiFi Settings

The following table describes the UE **Untrusted WiFi Settings** settings.

Setting	Description
Remote N3IWF	Select the remote N3IWF range from drop-down list.
Destination Port	Read-only field. Value set to <b>500</b> .
Source Port	Provide the source port. By default, set to <b>500</b> .
Enable NAT-T	Select to enable the NAT Traversal keepalive.
NAS IP Type	Select the NAS IP type from the drop-down list: <b>IPv4</b> (default) or <b>IPv6</b> .
Configure a CA Certificate	By default this option is disabled. When enabled, the CA Certificate drop-down is displayed which allows the selection of one of the CA Certificates defined in <a href="#">global settings</a> .
CA Certificate	Select the CA Certificate from the drop-down list.
IKE Phase 1	
Encryption Algorithm	Select the encryption algorithm from the drop-down list. Default value: <b>AES-128-GCM-16</b> . Available options are: <b>AES-128-CBC</b> , <b>AES-192-CBC</b> , <b>AES-256-CBC</b> , <b>AES-128-GCM-16</b> , <b>AES-192-GCM-16</b> , <b>AES-256-GCM-16</b> .
Hash Algorithm	Select the hash algorithm from the drop-down list. Default value: <b>NONE</b> . Available options: <b>NONE</b> , <b>HMAC-MD5-96</b> , <b>HMAC-SHA1-96</b> , <b>HMAC-MD5-128</b> , <b>HMAC-SHA1-160</b> , <b>HMAC-SHA2-256-128</b> , <b>HMAC-SHA2-384-192</b> , <b>HMAC-SHA2-512-256</b> . Restrictions: <ul style="list-style-type: none"> <li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16</b>, <b>AES-192-</b></li> </ul>

<b>Setting</b>	<b>Description</b>
	<p><b>GCM-16</b> or <b>AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</p> <ul style="list-style-type: none"> <li>If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
<b>DH Group</b>	Select an option from the drop-down list. Available options are: <b>modp768(1)</b> , <b>modp1024(2)</b> , <b>modp1536(5)</b> , <b>modp2048(14)</b> , <b>modp3072(15)</b> , <b>modp4096(16)</b> , <b>modp6144(17)</b> , <b>modp8192(18)</b> , <b>prime256v1(19)</b> , <b>secp384r1(20)</b> , <b>secp521r1(21)</b> , <b>prime192v1(25)</b> , <b>secp224r1(26)</b> , <b>x25519(31)</b> , <b>x448(32)</b> . Default value: <b>prime256v1(19)</b> .
<b>PRF Algorithm</b>	Select an option from the drop-down list. Default value: <b>HMAC-SHA256</b> . Available options: <b>HMAC-MD5</b> , <b>HMAC-SHA1</b> , <b>HMAC-SHA256</b> , <b>HMAC-SHA384</b> , <b>HMAC-SHA512</b> .
<i>IKE Phase 2</i>	
<b>Encryption Algorithm</b>	Select the encryption algorithm from the drop-down list. Default value: <b>AES-128-GCM-16</b> . Available options: <b>AES-128-CBC</b> , <b>AES-192-CBC</b> , <b>AES-256-CBC</b> , <b>AES-128-GCM-16</b> , <b>AES-192-GCM-16</b> , <b>AES-256-GCM-16</b> .
<b>Hash Algorithm</b>	Select the hash algorithm from the drop-down list. Default value: <b>NONE</b> . Available options: <b>NONE</b> , <b>HMAC-MD5-96</b> , <b>HMAC-SHA1-96</b> , <b>HMAC-MD5-128</b> , <b>HMAC-SHA1-160</b> , <b>HMAC-SHA2-256-128</b> , <b>HMAC-SHA2-384-192</b> , <b>HMAC-SHA2-512-256</b> . Restrictions: <ul style="list-style-type: none"> <li>When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
<i>Identification</i>	
<b>Local Identification Type</b>	Select an option from the drop-down list. Available options are: <b>ID_IPV4_ADDR</b> , <b>ID_FQDN</b> , <b>ID_USER_FQDN</b> , <b>ID_IPV6_ADDR</b> , <b>ID_DER ASN1 DN</b> , <b>ID_KEY_ID</b> . Default value: <b>ID_FQDN</b> .
<b>Local Identification Value</b>	Set the value for this parameter. This field is mandatory if the <i>Local Identification Type</i> is set to: <b>ID_FQDN</b> , <b>ID_</b>

<b>Setting</b>	<b>Description</b>
	<b>KEY_ID or ID_RFC822_ADDR.</b>
<i>Timers</i>	
Enable Rekey	By default, this option is disabled. Select the toggle button to enable it.
IKE Phase 1 (IKE) Lifetime (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).
IKE Phase 1 (IKE) Lifetime (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).
DDP Interval (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).

## Network Slicing settings

A UE may access multiple *network slices* over a single Access Network. A Network Slice is defined within a PLMN and includes the Core Network Control Plane and User Plane Network Functions. In addition, it includes the NG Radio Access Network and/or the N3IWF functions to the non-3GPP Access Network. It functions as a logical end-to-end network that runs on a shared physical infrastructure, capable of providing specific network capabilities and characteristics.

Each UE range requires at least one NSSAI (Network Slice Selection Assistance Information) range.

The **Network Slicing** settings include:

**UE NSSAI settings** ..... **928**

**UDM SNSSAI Mappings** ..... **929**

### UE NSSAI settings

Each UE range requires at least one NSSAI range.

An NSSAI (Network Slice Selection Assistance Information) is a collection of S-NSSAIs (Single Network Slice Selection Assistance Information). An NSSAI may be a Configured NSSAI, a Requested NSSAI, or an Allowed NSSAI. A maximum of eight S-NSSAIs can be sent in signaling messages between the UE and the Network. The Requested NSSAI signaled by the UE to the network allows the network to select the Serving AMF, Network Slice(s), and Network Slice instance(s) for the UE.

The S-NSSAI information element includes a mandatory Slice/Service Type (SST) field, an optional Slice Differentiator (SD) field, and it can also include an optional Mapped Configured SST and an optional Mapped Configured SD.

The NSSAI slices are the ones supported by UE (DNN mapping is done from here also) that will be sent in NAS messages (for example Registration, PDU Session Establishment).

The following table describes the **UE NSSAI** settings.

<b>Setting</b>	<b>Description</b>								
<i>UE NSSAI:</i>									
	Select the <b>Add UE NSSAI</b> button to add a new UE NSSAI to your test configuration.								
<i>UE NSSAI settings:</i>									
	Select the <b>Delete UE NSSAI</b> button to delete this UE NSSAI from your test configuration.								
SST	The value that identifies the SST (Slice/Service Type) for this S-NSSAI. SST comprises octet 3 in the S-NSSAI information element. The standardized SST values are: <table border="1" data-bbox="344 699 1437 931"> <thead> <tr> <th><b>SST</b></th> <th><b>Value</b></th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> </tr> <tr> <td>URLCC</td> <td>2</td> </tr> <tr> <td>MIoT</td> <td>3</td> </tr> </tbody> </table>	<b>SST</b>	<b>Value</b>	eMBB	1	URLCC	2	MIoT	3
<b>SST</b>	<b>Value</b>								
eMBB	1								
URLCC	2								
MIoT	3								
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.								
Mapped SST	The Mapped configured Slice/Service Type (SST) value for this S-NSSAI.								
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this S-NSSAI.								

## UDM SNSSAI Mappings

You can add and delete SNSSAI Mappings as required to meet your test objectives.

In an Initial Registration or Mobility Registration Update, the UE may include the Mapping Of Requested NSSAI, which is the mapping of each S-NSSAI of the Requested NSSAI to the HPLMN S-NSSAIs. This mapping ensures that the network can verify whether or not the S-NSSAIs in the Requested NSSAI are permitted based on the Subscribed S-NSSAIs.

The following table describes the UE **UDM SNSSAI Mapping** settings.

<b>Setting</b>	<b>Description</b>
<i>UDM SNSSAI Mapping:</i>	
	Select the <b>Add SNSSAI Mapping</b> button to add the NSSAI mapping to your test configuration.

Setting	Description
<i>UDM SNSSAI Mapping settings:</i>	
	Select the <b>Delete SNSSAI Mapping</b> button to delete this NSSAI mapping from your test configuration.
SST	The Slice/Service Type (SST) value.
SD	The Slice Differentiator (SD) value for this S-NSSAI.
Mapped SST	The Mapped Slice/Service Type (SST) value for this S-NSSAI.
Mapped SD	The Mapped Slice Differentiator (SD) value for this S-NSSAI.
DNNS	The Subscription Information for each S-NSSAI may contain a Subscribed DNN list. Select all DNNs required to be activated in this S-NSSAI (via multiple PDU Sessions).

## Objectives

In a LoadCore test, an *objective* is a set of performance and event targets that the test is attempting to achieve. The objectives are individually configured for a given UE range. A test, therefore, may have multiple UE ranges each of which is attempting to achieve a specific set of objectives.

### Test Objective categories:

<b>Control Plane Objective</b>	<b>930</b>
<b>User Plane Objectives</b>	<b>942</b>

### Control Plane Objective

You configure Control Plane Objectives for each individual UE range. They are structured as Primary and Secondary objectives. The focus of the primary objectives is on the establishment of subscriber PDU sessions, whereas the focus of the secondary objectives is on the achievement of specific mobile user events during those sessions.

Refer to the following topics for descriptions of the Control Plane Objective settings:

- [About primary objectives](#)
- [Primary Control Plane Objective](#)
- [Secondary Control Plane Objective](#)

### About primary objectives

In the current LoadCore release, there are two available primary objectives: *active subscribers* and *subscribers per second*. This topic gives a general description of their respective roles and behaviors.

- [Active Subscribers](#)
- [Subscribers Per Second](#)

## Active Subscribers

The active subscribers objective operates over a sequence of three phases: ramp up, sustain, and ramp down. Each of these has its own scope.

Phase	Activity during this phase
Ramp up	Registration + PDU Session Establishment (if enabled via DNNs to Activate option)
Sustain time	Traffic and/or secondary objectives are executed
Ramp down	Delete PDU Session (if enabled) + Dereistration

This can be viewed as a timeline:

|----- Ramp up -----|----- Sustain -----|----- Ramp down -----|

### Observations:

- The duration of the ramp up phase is not directly configurable. The ramp up time is automatically computed from the total number of subscribers in the range divided by the configured Ramp-up Rate ( $\langle \text{number\_of\_subscribers\_in\_the\_range} \rangle / \langle \text{RampUpRate} \rangle$ ). If the ramp up rate cannot be maintained, ramp up will last longer.
- During the sustain time phase, only secondary objectives are running.
- If configured, uplink traffic will start after the ramp up stage is complete.
- Subscribers will accept any downlink traffic once they are attached (registered and PDU session established).
- The duration of ramp down is not directly configurable. The ramp down time is automatically computed from the total number of subscriber in the range divided by the configured Ramp-up Rate ( $\langle \text{number\_of\_subscribers\_in\_the\_range} \rangle / \langle \text{RampUpRate} \rangle$ ). If the ramp down rate cannot be maintained, ramp down will last longer.
- All User Plane Traffic except Stateless UDP will be started during Ramp Up phase. Stateless UDP traffic starts after all UEs have Registered and Established PDU Sessions.

### Example:

Consider a test with 20000 subscribers, configured with an active subscribers objective with a ramp up rate of 1000/s, a secondary objective with a rate of 2000/s, and a sustain time set for 30 seconds. Such a test will give the following results.

<i>Ramp Up Time:</i>	20000 / 1000 = 20s for subscribers to register
<i>Rate in ramp up time:</i>	1000 registrations per second
<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	2000 secondary procedures per second
<i>Ramp down time:</i>	20000 / 1000 = 20s for subscribers to deregister
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## Subscribers Per Second

The Subscribers per Second objective operates over two phases: sustain and ramp down.

Phase	Activity during this phase
Sustain time	All objectives will run: primary objective—both registration and deregistration—and all secondary objectives.
Ramp down	Deregistration will be executed for the UEs that did not complete the hold time during the sustain phase.

This can be viewed as a timeline:

|----- Sustain -----|----- Ramp down -----|

### Observations:

- The duration of ramp down is equal to the value of hold time.
- During the ramp down time, only deregistration occurs.

### Example:

Consider a test with 20000 subscribers, configured with: a Subscribers per Second primary objective with a rate of 1000/s and a hold time of 10s, a secondary objective with a rate of 2000/s, and a Sustain time configured for 30 seconds.

Such a test will give the following results.

<i>Sustain time:</i>	30 seconds
<i>Rate in sustain time:</i>	~4000 per second (1000 per second from registration + 1000 per second from deregistration + 2000 per second from secondary objective, because both primary and secondary objective will run at the same time)
<i>Ramp down time:</i>	10 seconds
<i>Rate in ramp down time:</i>	1000 deregistrations per second

## Primary Control Plane Objective

Control Plane Objectives are structured as Primary and Secondary objectives. The focus of the primary objectives is on the establishment of subscriber PDU sessions.

The following table describes the **Primary** control plane objectives.

Parameter	Description
Objective Type	<p>Select the desired Primary Objective Type:</p> <ul style="list-style-type: none"> <li>• <b>Active Subscribers:</b> The test attempts to activate and maintain the configured objective throughout the entire sustain time. Deactivation procedures will start only at the end of the sustain time.</li> <li>• <b>Subscribers Per Second:</b> The test attempts to activate a specified number of subscriber sessions per second, within the rate and time parameters that you configure.</li> </ul> <p>The panel will display the settings for the selected Objective Type.</p>
<i>Active Subscribers:</i>	
Ramp-up Rate	The number of UE registrations that the test will establish per second. In the current release, each UE registration establishes exactly one PDU session.
Sustain Time (s)	The duration of time (in Seconds) that each subscriber session will be active.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
DNNs to Activate	<p>Select the DNNs to activate for this secondary objective. (These are the DNNs configured for the UE in the <b>DNNs Config</b> Range settings.)</p> <p>The choices are:</p> <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> <p>The list of available DNNs include those that have not been activated for the primary objective.</p>
Number of Retries	<p>This value indicates how many times UE/NGRAN will retry the Register or PDU Session Establishment procedures if any message from these procedures encounters an error (timeout or an error is received).</p> <p>The available options are:</p> <ul style="list-style-type: none"> <li>• <b>-1</b> : infinite retries for entire sustain time.</li> <li>• <b>0</b> (default value) : the retry option is disabled.</li> <li>• <b>1 to 127</b>: the number of retries per UE (Register + PDU Session procedure).</li> </ul>
<i>Subscribers Per Second:</i>	
Hold Time (s)	The number of seconds that each subscriber session will remain active. This is,

Parameter	Description
	therefore, the amount of time that will elapse between the subscriber attach and the subscriber detach. At the end of the session hold time, the subscriber performs the detach procedure.
Rate	The number of subscriber sessions to activate per second.
Sustain Time (s)	The duration of time (in Seconds) that the specified session activation rate will be maintained.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the objective after NG-Setup/S1-Setup have successfully completed.
DNNs to Activate	<p>Select the DNNs to activate for this secondary objective. (These are the DNNs configured for the UE in the <b>DNNs Config</b> Range settings.)</p> <p>The choices are:</p> <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> <p>The list of available DNNs include those that have not been activated for the primary objective.</p>


## Secondary Control Plane Objective

The focus of the secondary objectives is on the achievement of specific mobile user events during subscriber PDU sessions. For each primary objective that you configure for the UE range, you can select one or multiple Secondary Objectives.

### IMPORTANT

The number of UEs must be equal to or greater than the number of secondary objectives configured, in order for all objective procedures to execute. For example, if only one UE is configured and two secondary objectives are configured (such as Handover and Enter/Exit Idle), one of the objectives will be skipped.

In this example, only Handover has been selected:

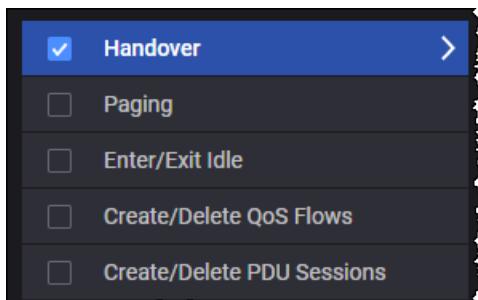

Note that:

<b>When the primary objective is:</b>	<b>then the secondary objectives will start...</b>
Active Subscribers	after all users are registered.
Subscribers Per Second	at the beginning of the test (immediately after the first user has registered).

## Handover

When you configure a **Handover** secondary objective, each of the active subscribers configured for the primary objective attempts to execute the handover event defined for the objective. During a handover, the UEs in the range are moving amongst a group of NG-RANs. At the start of a handover, the UEs are registered with the Parent NG-RAN (which is configured in the [UE Range panel](#)). The UEs then traverse the NG-RANs that you configure (the *Visited NG-RAN* list).

### Handover configuration parameters

The following table describes these objective parameters.

Parameter	Description
<i>Handover:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which handovers are initiated, measured in procedures per second if <b>Distributed over (s)</b> is not modified.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of UE registration procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Force N2 Handover	Enable this option to force N2 handover with direct forwarding instead of X2 / Xn handover.
Mobility for State	This option specifies in what state should the UE perform the handover objective. The following options can be selected from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Connected</b></li> <li>• <b>Idle</b></li> <li>• <b>Any</b></li> </ul>

Parameter	Description
	When <b>Any</b> is selected, the UE will execute the handover objective, regardless if the UE is in Connected or Idle state.
Force UE State Before Returning to Parent Node	Select an option from the drop down list: <ul style="list-style-type: none"> <li>• <b>None</b> - The UE will perform either Idle Mode Mobility or Connected Handover to parent RAN, depending on what state the UE is before executing the procedure.</li> <li>• <b>Connected</b> - The UE will perform Connected Handover from the last node in the visited gNodeBs/eNodeBs list to the parent RAN. This means that <b>if the UE was in idle state</b> before performing this mobility, the UE will <b>first perform exit idle</b>, and only after the UE is in connected state, will it initiate <b>the connected handover</b> to the parent RAN.</li> <li>• <b>Idle</b> - The UE will perform Idle Mode Mobility from the last node in the visited gNodeBs/eNodeBs list to the parent RAN. This means that if the UE was in <b>connected</b> state before performing this mobility, the UE will <b>first perform enter idle</b>, and only after the UE is in idle state, will it initiate the <b>idle mode mobility</b> to the parent RAN.</li> </ul>
Send Service Request after Returning to Parent Node	By default, this option is disabled. Send Service Request immediately after Return to Parent Node Mobility if UE State was idle.
Handover Cancel	<i>When this option is enabled, NG-RAN will trigger a Handover Cancel after receiving Handover Request from AMF. Handover Cancel is applicable only for N2 Handover.</i>
Percentage	The percentage of N2 Handover Procedures that will trigger a Handover Cancel from the gNodeB.
Seed	The seed of Random Number Generator.
<i>Visited gNodeBs/eNodeBs/UNAPs : A list of the NG-RANs that UEs will visit during the test.</i>	
	Add next node to the list.
	Remove the selected node from the list.
Force UE State before Mobility	The following options can be selected from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Connected</b></li> <li>• <b>Idle</b></li> <li>• <b>Any</b></li> </ul>
Primary Node	Select the primary node from the drop-down list. If an UNAP is selected as the Primary Node, the Secondary Node field will not be

Parameter	Description
	displayed.
Secondary Node	Select the secondary node from the drop-down list.
Send Service Request After Mobility	By default, this option is disabled. Send Service Request immediately after Mobility if UE State was idle.

## Paging

When you configure a **Paging** secondary objective, each of the active subscribers configured for the primary objective attempts to execute the Paging event defined for the objective. Upon receiving a Paging message, each simulated UE—the UEs are in CM-IDLE state—will initiate the UE Triggered Service Request procedure (Reference: 23.502, section 4.2.3.2).

The following table describes the Paging objective parameters.

Parameter	Description
<i>Paging:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Suspend Traffic Interval (s)	The time (in seconds) to suspend traffic on the remote IP address.
Remote IP Address	Set the remote IP address: <ul style="list-style-type: none"> <li>• If the UPF is the DUT in the test topology, then set the <i>Remote IP Address</i> to the DN IP address.</li> <li>• If the UPF is simulated in the test topology, then set the <i>Remote IP Address</i> to the N3 IP address of the UPF.</li> </ul>

Notes:

- Paging objective should be configured with **Stateless UDP** as User Plane.
- Enter IDLE procedure is executed for each UE after Delay(s) once DN responds to instrumentation packet sent inband by the UE. See also *Global Settings > Advanced Settings > Traffic Settings > [Traffic Control Port](#)*.
- Following Enter IDLE, Downlink User Plane traffic is suspended for *Suspend Traffic Interval (s)*.

## Enter/Exit Idle

When you configure an **Enter/Exit Idle** secondary objective, each of the active subscribers configured for the primary objective attempts to transition between the CM-IDLE and CM-CONNECTED states.

**NOTE**

When UE is scheduled to Exit Idle but the UE state is not Idle anymore (for example Paging event occurred), the Exit Idle procedure cannot be performed, therefore the Service Request is going to be skipped and the statistics for Service Request Skipped (on NG-RAN) will be incremented accordingly.

The following table describes the objective parameters.

Parameter	Description
<i>Enter Exit Idle:</i>	
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated to transition UEs between the CM-IDLE state to the CM-CONNECTED states, measured in state transitions per second.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay (s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	The number of seconds to wait between each successive state transition.

## Create/Delete QoS Flows


When you configure a **Create/Delete QoS Flows** secondary objective, each of the active subscribers configured for the primary objective attempts to meet the requirements defined by the QoS Flow ID. The selected flows will be created following a configured *Delay* value, and deleted when the configured *Interval* expires.

## QoS flow options

There are two options for creating QoS flows:

- UE initiated - the QoS flows are initiated by the UE
- PCF Initiated - the QoS flows are network initiated

The QoS Flow panel contains the configuration settings for an individual QoS Flow (UE initiated or PCF initiated).

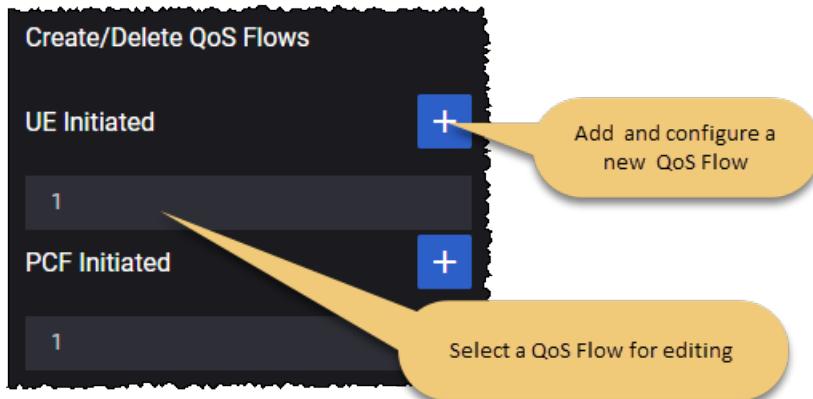

## Objective parameters

The following table describes the objective parameters (for both UE initiated QoS flows and PCF initiated QoS flows).

Parameter	Description
<i>Create/Delete QoS Flows:</i>	
	Select the <b>Add Objective</b> button to add an instance of this objective.
<i>Objective:</i>	
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second. Using higher values for this parameter requires a large number of UEs configured in the test in order to achieve the desired rate.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max	The maximum number of procedures that may be outstanding while new

Parameter	Description
Outstanding	procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	Interval between the triggering of creation and deletion of the QoS flow, in seconds.
DNN	Select the DNN value for the drop-down list. For example: dnn.keysight.com.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

### Support for Network Initiated QoS Flow modification

The Create/Delete QoS Flows secondary objective also provides support for Network Initiated QoS Flow modification of existing QoS flows on the N1/N2 interfaces. This support is available when all topology nodes except for **RAN** are selected as DUTs.

By triggering the Network Initiated PDU Session Modification procedure, the network can modify the following parameters of the existing QoS flows, both default and dedicated:

- ARP
- QoS flow descriptions parameters (MBR, GBR)
- Session AMBR
- QoS rules – all supported filters

Notes:

- In order to modify the default QoS flow, it needs to be configured on the DNN tab. The QoS Flows and DNNs are configured in the Global Settings.
- None of the parameters changed by the network initiated QoS flow modification will be enforced.
- The NG-RAN node supports handling the QoS flow modification procedure only for one PDU session per procedure (Create QoS Flow, Modify QoS Flow, Release QoS Flow).
- For UE Initiated dedicated QoS Flows, the interval between the creation and deletion of the QoS flow should be large enough to support the successful finalization for the modification of the existing QoS flow. (*Interval* is one of the Objective settings.)

## Create/Delete PDU Sessions

When you configure a **Create/Delete PDU Sessions** secondary objective, each of the active subscribers configured for the primary objective attempts to meet the requirements specified by the objective configuration. The PDU sessions will be created following a configured *Delay* value, and then deleted when the configured *Interval* expires.

The following table describes the objective parameters.

Parameter	Description
<i>Create/Delete PDU Sessions:</i>	
	Select the <b>Add Objective</b> button to add an instance of this objective.
<i>Objective:</i>	
	Select the <b>Delete Objective</b> button to delete this Secondary Objective from your test configuration.
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	<p>The rate at which procedures are initiated, measured in procedures initiated per second.</p> <p>Using higher values for this parameter requires a large number of UEs configured in the test in order to achieve the desired rate.</p>
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Interval	The interval between the triggering of creation and deletion of the PDU Session, in seconds.
DNNs to Activate	<p>Select the DNNs to activate for this secondary objective. (These are the DNNs configured for the UE in the <b>DNNs Config</b> Range settings.)</p> <p>The choices are:</p> <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> <p>The list of available DNNs include those that have not been activated for the primary objective.</p>

Parameter	Description
	You configure DNNs for the selected UE in the <b>DNNs Config</b> Range settings. The list of available DNNs include those that have not been activated for the primary objective.

## SMS

This objective will perform the procedure of sending SMS messages.


The following table describes the objective parameters.

Parameter	Description
Iterations	The number of times this procedure runs for each subscriber, it can be finite or infinite (set to zero).
Rate	The rate at which procedures are initiated, measured in procedures initiated per second. Using higher values for this parameters requires a large number of UEs configured in the test in order to achieve the desired rate.
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Max Outstanding	The maximum number of procedures that may be outstanding while new procedures are being started. If the number of outstanding procedures reaches this limit, no new procedures may be started until the outstanding procedures have successfully started.
Delay(s)	The number of seconds to wait before starting the secondary objective, from the start of sustain time.
Destination MSISDN	The destination MSISDN for the SMS text message.
Destination MSISDN Increment	The increment for the destination MSISDN.

## User Plane Objectives

The User Plane Objectives focus on the rate and volume of user plane traffic that the simulated UEs are sending to the 5G network. You define separate User Plane objectives for each UE range.

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

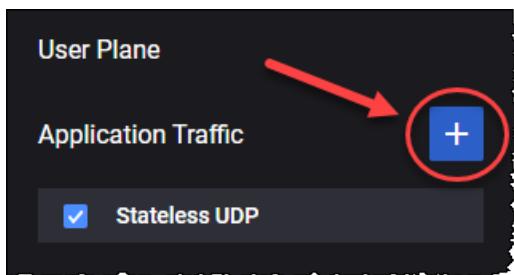

The available traffic applications are: **Stateless UDP, Data, Voice, Video OTT, DNS Client, Predefined Applications, ICMP Client, Ping, Synthetic and UDG.**

**NOTE**

Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN. For the DN User Plane settings, refer to [DN User Plane](#).

The following table describes the Application Traffic generation parameters.

Parameter	Description
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"><li>• <b>Stateless UDP</b></li><li>• <b>Data</b></li><li>• <b>Voice</b></li><li>• <b>Video OTT</b></li><li>• <b>DNS Client</b></li><li>• <b>Predefined Applications</b></li><li>• <b>ICMP Client</b></li><li>• <b>Capture Replay</b></li><li>• <b>Synthetic</b></li><li>• <b>UDG</b></li></ul>
	Select this button to remove the application traffic objective from your test configuration.
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">Video Ott Traffic</a> .

Parameter	Description
DNS Client	For the settings required to configure the DNS Client objective, refer to <a href="#">DNS Client Traffic</a> .
Predefined Applications	For the settings required to configure the Predefined Applications objective, refer to <a href="#">Predefined Applications Traffic</a> .
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#">Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">UDG Traffic</a> .

### Stateless UDP Traffic

The **Stateless UDP** objective generates IP packets that encapsulate dummy UDP payload. The Stateless UDP generator configuration settings for the uplink traffic are described below.

The following table describes the Stateless UDP parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>uplink</b> and can not be modified since on the UE you can only configure the uplink flow.
Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Delay(s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
Destination IP Address	The destination IP address to place in the IP packet.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.

Parameter	Description
Source UDP Port	The source port number to place in the UDP header.
DNN ID	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## Data Traffic

The following table describes the Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Throughput</b> . The other options are: <b>Concurrent Connections</b> and <b>Connections Rate</b> .
Concurrent Connections	<p>Set the number of concurrent connections.</p> <p>This parameter is available only when Objective type is set to <b>Concurrent Connections</b>.</p>
Connection Duration (s)	<p>Set a value for the connection duration.</p> <p>This parameter is available only when Objective type is set to <b>Concurrent Connections</b>.</p>
Connections Rate per Second	<p>Set the value for connections rate per second.</p> <p>This parameter is available only when Objective type is set to <b>Connections Rate</b>.</p>

Parameter	Description
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.
Optimize Throughput (per UE)	Select this option to enable it.
Connection Multiplier (per UE)	Set the connection multiplier value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
Application Traffic Flows	<p>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> <p>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows. Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>If <a href="#">Optimize Throughput (per UE)</a> option is enabled: <b>TCP</b>, <b>TLS</b>, <b>QUIC</b> or <b>UDP</b>.</li> <li>If <a href="#">Optimize Throughput (per UE)</a> option is disabled: <b>TCP</b>, <b>TLS</b> or <b>UDP</b>.</li> </ul>
Type	Select the L4/L7 protocol type from the list of pre-defined flows. The available options are: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get</b>, <b>HTTP Put</b>, <b>HTTP Post</b> and <b>FTP</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get</b>, <b>HTTPS Put</b> and <b>HTTPS Post</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Get</b>, <b>HTTP3 Put</b> and <b>HTTP3 Post</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional</b> (a flow in which a UDP client communicates with a server over a bidirectional datagram socket)</li> </ul> <p><b>NOTE</b> UDP bidirectional works for each UE by sending the number of TX packets configured in the objective (by default 8). After the packets have been received by the DN (or UPF), it sends RX packets (by default 8) to each UE. If the UEs receives the packets, they will send again the number of TX packets and so on. If the UEs did not receive downlink packets, it will send another set of TX packets after 60 seconds.</p>
Port	The port used by the flow.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). For example, a flow may have default actions: log in to a social media site, post a message, then log out. Iterations is the number of times you want this flow of actions to be executed.
Percentage	The percentage of the throughput will be of this type of flow.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.
Client Tx Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
Server Tx Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.

Parameter	Description
URL	The URL that is being accessed by the flow's protocol.
Destination Hostname	Destination hostname of the server. If DNS hostname resolution is enabled for the flow and Name Servers are configured under Global Settings, this name will be resolved before being used as L7 destination IP for the flow and included in HTTP headers. If empty, the "Address" from the previous fly-out level will be used as L7 destination IP for the flow.
Max Transactions per Connection	Set the value for this parameter.
Enable DNS Query Per Connection	Select the check-box to process only one DNS query per TCP connection.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range settings.
QoS FlowID	Select a QoS Flow ID for this flow.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

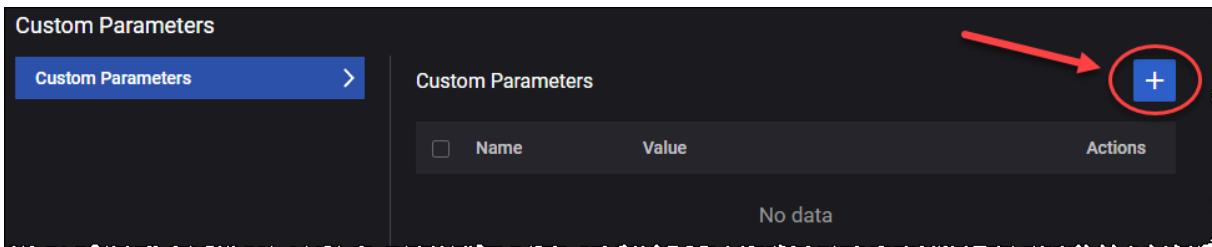

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

## For example ...

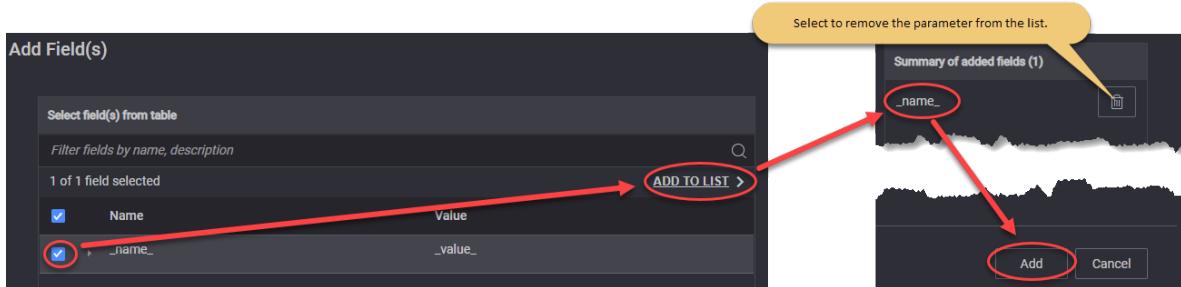

## Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Call Type	Select the type of call from the drop-down list. Available options are: <ul style="list-style-type: none"> <li>• <b>Basic Call</b></li> <li>• <b>Basic Call Mo</b> (Mobile Originated)</li> <li>• <b>Basic Call Mt</b> (Mobile Terminated)</li> </ul>
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<b>Sip Settings:</b>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.

Parameter	Description
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li><b>TCP</b> - Transmission Control Protocol</li> <li><b>TLS</b> - Transport Layer Security</li> <li><b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPSEC	Select this option to enable IPSEC.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Advanced SIP Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select this option in order to enable RTCP.
<i>Audio settings:</i>	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
<i>Video Settings:</i>	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
<i>MSRP Settings:</i>	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
<i>Advanced Media Settings:</i>	
<i>Custom SDP</i>	<i>Select this panel to open the custom SDP settings.</i>
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li><b>None</b></li> <li><b>EVS/AMR IPv4</b></li> <li><b>NB Codecs IPv6</b></li> <li><b>AMR-WB IPv6</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>Multimedia IPv4</b></li> </ul>
QoE Settings	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
DNN ID	Select the DNN from the drop-down list.
Iterations	The number of times the Call Type will be executed. It can be finite or infinite (set to zero).
Update IMSI and Source Phone with UE Range Identification Settings	Select this button in order to update IMSI and Source Phone with UE range identification settings.
IMSI	Read-only field, it displays the updated IMSI.
IMSI Phone Increment	The value by which the IMSI phone number is incremented.
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.
Source Phone Increment	The value by which the destination phone number is incremented.
Destination IP	The destination IP address.
Destination IP Increment	The value by which the destination IP is incremented.
Destination Port	The destination port number.

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
QoS Flow ID	Select the QoS flow used for audio from the drop-down list.

Parameter	Description
for Video	
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	<p>Select the audio codec from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <a href="#"><b>AMR</b></a> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>AMR-WB</b></a> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>EVS</b></a> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <a href="#"><b>PCMU</b></a></li> <li>• <a href="#"><b>PCMA</b></a></li> <li>• <a href="#"><b>iLBC</b></a></li> <li>• <a href="#"><b>G722</b></a></li> <li>• <a href="#"><b>G723</b></a></li> <li>• <a href="#"><b>G729</b></a></li> </ul> <p>The parameters of each audio codec are presented below.</p>

## AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.

Parameter	Description
	<ul style="list-style-type: none"> <li><b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li><b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

## EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	<p>The following options are available:</p> <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

## PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

## Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
QoS Flow ID for Voice	Select the QoS Flows ID(s) from the drop-down list.
<i>Video Codecs</i>	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
QoS Flow ID for MSRP	Select the QoS Flows ID(s) from the drop-down list.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)
- [Custom Parameters](#)
- [SIP 3GPP IPSEC](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE**

The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:

- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

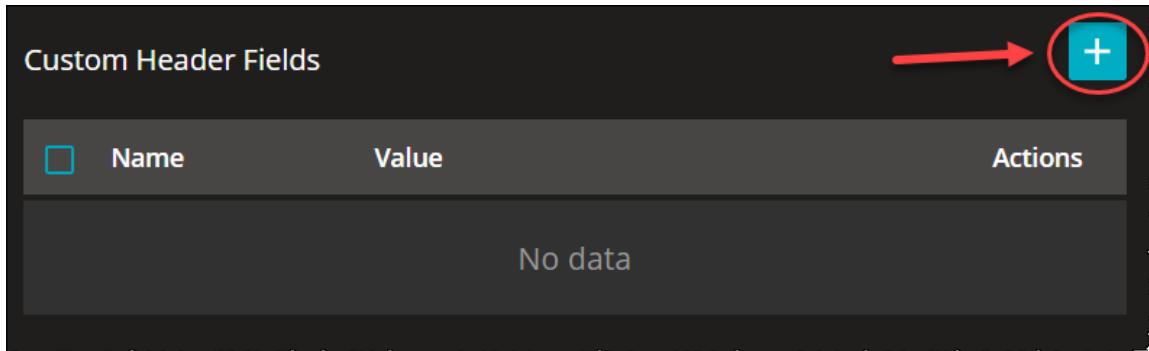

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

Name	Value
Accept	application/sdp,message/cpim
Accept-Contact	*;mobility="mobile";methods="INVITE"
Accept-Encoding	gzip
Accept-Language	da, en-gb;q=0.8, en;q=0.7
Alert-Info	<urn:alert:service:call-waiting>

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nextnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	< <a href="http://www.example.com/alice/photo.jpg">http://www.example.com/alice/photo.jpg</a> > ;purpose=icon
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13	IETF RFC 3261

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	Nov 2010 23:29: 00 GMT	
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associated-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-g-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig-roi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com",qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque="",stale=False,algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice",realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>,<sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF	Bob <sip:bob@biloxi.com>

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	RFC 3261	
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF	Need more boxes

Parameter	Description	Value
	RFC 3261	
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.


Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own

Parameter	Description
	choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPc	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc	The OPc value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPc Increment	The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.

## Custom Parameters

You can add custom parameters as follows:


1. The Custom Parameters panel, select the **Add** button.

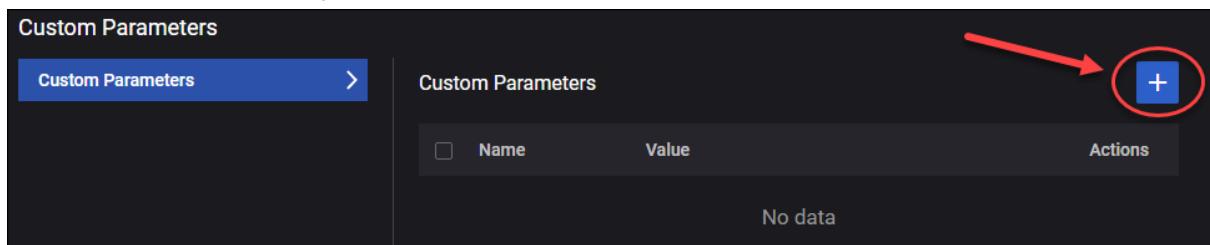

The Add Field(s) opens.

2. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

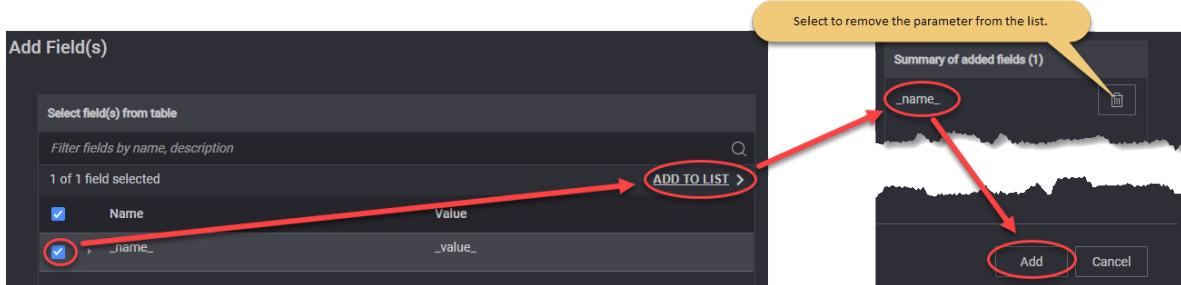

The following custom parameters are available:

Parameter	Description	Value
DelayBefore SIPInvite	Delay in milliseconds before sending SIP INVITE.	1000
DealyBeforeRTP	Delay in milliseconds before RTP session start.	0
DelayAfterRTP	Delay in milliseconds after RTP session end.	0
DeregisterLoop	Set the number of calls/loops before a SIP deregistration will be performed. Any SIP deregistration will be followed by a new SIP registration.	0
DelayBefore180	Delay in milliseconds before 180 Ringing message will be sent.	0
DelayBefore200INVITE	Delay in milliseconds before 200 OK message for INVITE will be sent.	0
debugIPSEC	Activate IPSEC debug. Please use debug only for a reduced number of simulated UEs.	0
timeoutSIP	Global timeout in milliseconds for any SIP message. Default is set to standard 32000ms. Use this parameter to modify the default value.	32000
MaxActiveLimit	Set maximum allowed concurrent TCP connections per CPU Core. Default it is set to 8000. Please use this parameter to modify the deafult value.	8000

### SIP 3GPP IPSEC

The parameters required for SIP 3GPP IPSEC are presented in the table below.

Parameter	Description
Port-C	Set the value for this parameter.
Port-S	Set the value for this parameter.
Authentication Algorithm	Select the authentication algorithm: <ul style="list-style-type: none"> <li>• <b>hmac-sha-1-96</b></li> <li>• <b>aes-gmac</b></li> <li>• <b>null</b></li> </ul>
Encryption Algorithm	Select the encryption algorithm: <ul style="list-style-type: none"> <li>• <b>aes-gcm</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>aes-cbc</b></li> <li><b>null</b></li> </ul>

## Video OTT Traffic

The following table describes the Video OTT(Over-the-Top) traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	Select the value from the drop-down list: <b>Simulated Users</b> or <b>Throughput</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
Advanced OTT	<i>Select the <b>Open Advanced OTT</b> button to enable and configure <a href="#">Advanced OTT Settings</a>.</i>

## Advanced OTT Settings

The parameters required to configure the OTT advanced settings are presented in the table below.

Parameter	Description
Application Traffic Flow	<p>Each Application Traffic entry requires at least one Ott traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul>
<i>Flow:</i>	
	Select this button to remove this flow from your test configuration.
Type	Select the Ott traffic type from the drop-down list. Available options: <ul style="list-style-type: none"> <li><b>DASH</b></li> <li><b>HLS</b></li> </ul>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
URL	Select the URL from the drop-down list populated with the defined on the server.
Play Until End	If this check box is selected, the Play Duration field is disabled and the original playtime is used.
Play Duration (sec)	This field is available only if the Play Until End check box is not selected. It allows you to set a custom playtime.
Transport	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li><b>HTTP</b></li> <li><b>HTTPS</b></li> <li><b>HTTP/QUIC</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero).
Percentage	The percentage of Test Objective to execute this flow.
Quality Control	These settings are presented in the <a href="#">Quality Control</a> pane.
Advanced Client settings	These settings are presented in the <a href="#">Advanced Client Settings</a> pane.

## Quality Control

The parameters required for Quality Control settings are presented in the table below.

Parameter	Description
<i>Jitter Buffer:</i>	
Initial Delay (s)	Set the number of seconds to wait before playback. The default value is 20.
Maximum Size (s)	Set the number of seconds to be buffered on the client side. The default value is 20.
MOS P.1203	Select an option from the drop-down list: <b>Disabled</b> or <b>Mode 0</b> .
Quality Control Mode	Select the quality control mode from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Adaptive Bit Rate</b></li> <li>• <b>Quality Predefined Levels</b></li> <li>• <b>Lowest Quality</b></li> <li>• <b>Highest Quality</b></li> </ul>
Number of segments	This field is available and editable only when the Quality Control Mode is set to <b>Adaptive Bit Rate</b> .
<i>Play Profiles: The following settings are available and editable only when the Quality Control Mode is set to <b>Quality Predefined Levels</b>.</i>	
	Select this button to add a predefined play profile to your test configuration.
<i>Quality Shift</i>	
	Select this button to remove this play profile from your test configuration.
Shift Type	Select the shift type from the drop-down list. Available options <ul style="list-style-type: none"> <li>• <b>Stay at Current Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lower Bitrate</b></li> <li>• <b>Change to the Higher Bitrate</b></li> </ul>
Numbers of levels to shift	This field is available and editable only when the Shift Type is set to <b>Change to Higher Bitrate</b> or <b>Change to Lower Bitrate</b> .
Play Until End	If this check box is selected, the <b>Play duration</b> field is disabled and the original playtime is used.
Pay duration(sec)	This field is available only if the <b>Play Until End</b> check box is not selected. It allows you to set a custom playtime.

## Advanced Client Settings


The parameters required for Advanced Client settings are presented in the table below.

Parameter	Description
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Timeshift for Live	Set a value for this field. 0 means no timeshift.
Enable DNS Query Per Connection	Select the check box to process only one DNS query per TCP connection.
Custom parameters	For more details, refer to <a href="#">Custom parameters</a> .

## Custom Parameters

You can add custom parameters as follows:


1. Select the **Open Custom Parameters** tile. The Custom Parameters panel opens.
2. Select the **Add** button.

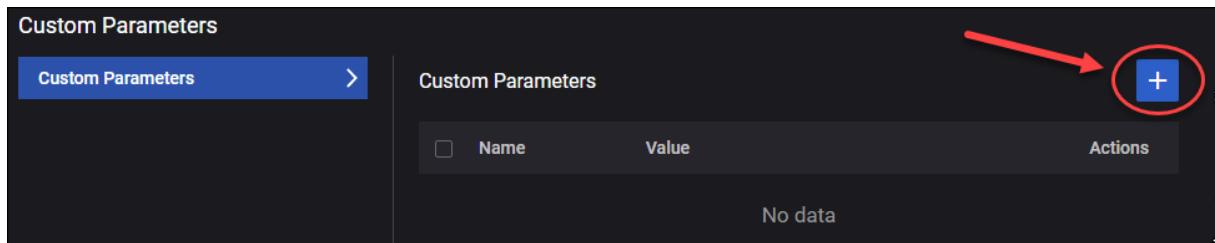

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

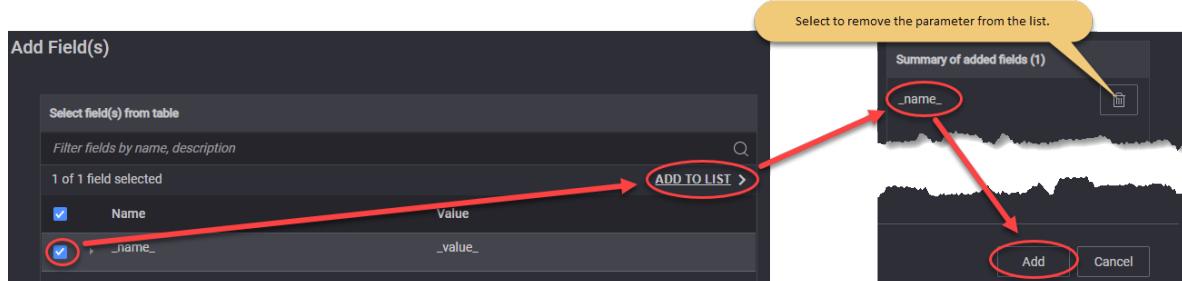

## DNS Client Traffic

The following table describes the DNS Client Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Connection multiplier (per UE)	Set the value for the connection multiplier.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Application Traffic Flows	<p>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul> <p>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows. Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Type	By default, the type is set to <b>DNS Client</b> .
Port	The port used by the flow.
DNS Server IP	Set the DNS server IP address.
Number of DNS servers	Set the number of DNS servers.
Hostname	Set the hostname.
Query Type	Select the query type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range Settings.
QoS FlowID	Select a QoS Flow ID for this flow.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

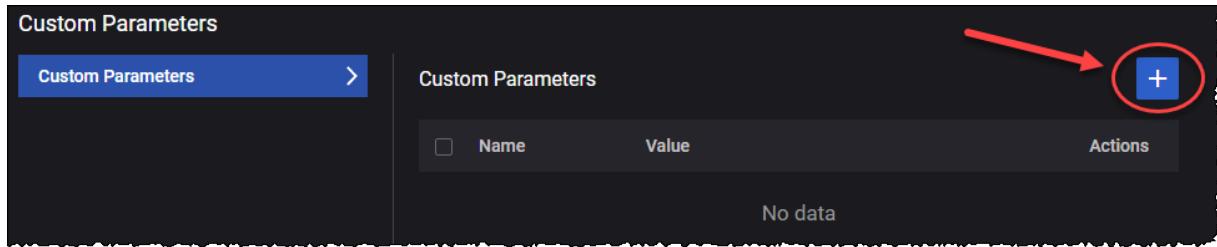

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

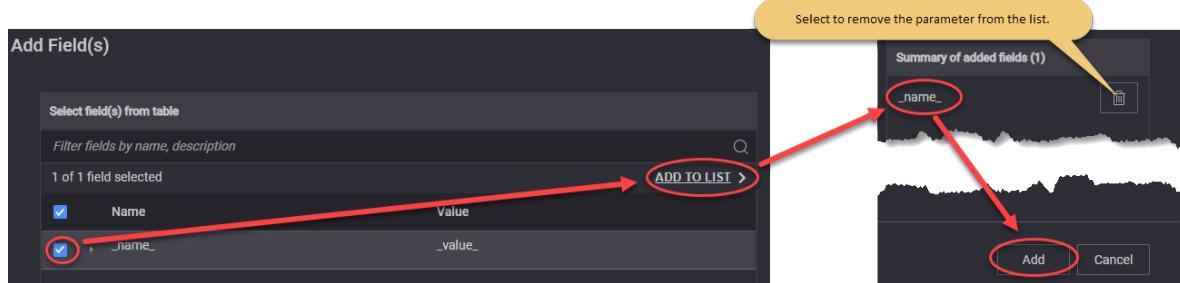

## ICMP Client

The following table describes the ICMP Client parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>ICMP Client</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Traffic Flow	Refer to <a href="#">Traffic Flow</a> for a description of the configuration settings for these traffic flows.

## Traffic Flow

The **Traffic Flow** parameters are described in the following table.

Parameter	Description
Destination Hostname	Set the destination hostname.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). Iterations is the number of times you want this flow of actions to be executed.
Interval (ms)	Set the interval value.
Timeout (ms)	Set the timeout value.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range Settings.

## Capture Replay

This page describes the settings required by the capture replay functionality. Ethernet-based packet captures (.pcap files) can be filtered and resulting packets can be replayed on top of GTPu tunnels. Packets can be replayed as Ethernet frames over Ethernet PDU sessions or as IPv4 or IPv6 frames over IP-based PDU sessions. The capture replay feature can also be used with SGi client and SGi server (DN) to replay IP and Ethernet frames without any additional encapsulation.

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> milliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b>

Parameter	Description
	(option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).
Start Delay (s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
DNN ID	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> .

Parameter	Description
	Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in pcap-filter format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).
<i>Overrides</i>	
Override QoS Flow ID	This option is available only if the <i>Role</i> is set to <b>Initiator</b> . Select the toggle button to enable it.
Qos Flow ID	This option is available only when <i>Override QoS Flow ID</i> option is enabled. Select the QoS Flows ID(s) from the drop-down list.
Override IP Address	Select the toggle button to enable it. When enabled, <i>Destination IP Address</i> and <i>Destination IP Address Count</i> fields become available.
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Address Count	The destination IP address count value.

## Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .

Parameter	Description
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port

Parameter	Description
	number).

The following table describes the Traffic Flow parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: TCP or UDP.
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Client Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	This field is available only when Transport Protocol is UDP. The number of packets the server sends in a burst.
Server Burst Size (bytes)	The packet size in bytes.
Server Timeout (ms)	This field is available only when Transport Protocol is UDP. Set the timeout value.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to

Parameter	Description
	<b>UDG.</b>
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.

Parameter	Description
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
<i>Out of Band Signaling</i>	<p>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</p> <p><b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.</p>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Reconnect Timeout (ms)	The time interval after which the client attempts to reconnect after the connection was interrupted. 0 means that reconnect is disabled.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

The following table describes the **UDG Traffic Parameters**.

Parameter	Description
UDG Test Type	Select the test type from the drop-down list. Available options: <b>Transmission</b> or <b>Ping-pong</b> . For each test type, the parameters are described below.
<i>Transmission</i>	
Throughput Tx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change.
Client Burst Interval (ms)	The time interval at which the client sends packet bursts.
Client Burst Size (packets)	The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Throughput Rx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change. A corresponding server is required to achieve the displayed value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Size (packets)	The number of packets the server sends in a burst.
Server Burst Interval Unit	Select the server burst interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .

Parameter	Description
Server Burst Size (bytes)	The packet size in bytes.
<i>Ping-pong</i>	
Ping Direction	Set the ping direction. Available options: <b>Upstream</b> or <b>Downstream</b> .
Ping Interval	Set the ping time interval.
Ping Interval Unit	Set the ping interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .
Pong Number	Set the value for the pong number.
Client Packet Size (bytes)	The packet size in bytes.
Server Packet Size (bytes)	The packet size in bytes.

The following table describes the **Transaction** parameters.

Parameter	Description
<i>Transaction</i>	Select the check-box to enable these settings.
Duration (ms)	Transactions duration, in millisecond.
Idle interval (ms)	Idle interval between transactions, in millisecond.
Resume Mode	Side which triggers transition between the UE idle and the UE connected state. Available options: <b>User</b> or <b>Network</b> .

## Predefined Applications Traffic

The following table describes the Predefined Flows Traffic parameters.


Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Predefined Applications</b> .
Objective Type	Select an option from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Simulated Users</b></li> <li>• <b>Throughput</b></li> <li>• <b>Connections Per Second</b></li> </ul>
Throughput (kbps)	<b>IMPORTANT</b> This parameter is available only when <u>Objective Type</u> is set to <b>Throughput</b> .

Parameter	Description
	The desired throughput (in kbps) for the combined traffic flows that will be generated.
Connections Per Seconds	<p><b>IMPORTANT</b> This parameter is available only when <a href="#">Objective Type</a> is set to <b>Connections Per Second</b>.</p> <p>Set the number of connections.</p>
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
Configure Traffic Profiles	<p>Each Application Traffic entry requires at least one traffic profile definition, and can support multiple such definitions.</p> <p>Refer to <a href="#">Traffic Profile</a> for a description of the configuration settings for these traffic profiles.</p>

## Traffic Profile


You can configure the traffic profiles as needed to meet your test objectives. You can do this as follows:

1. Select the **Configure Traffic Profiles** button.



The Traffic Profiles section opens.

2. Select the Traffic Profiles tile.

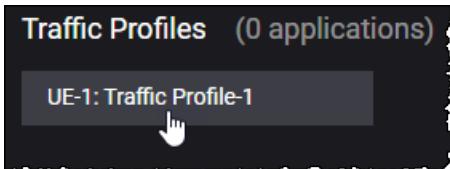

The Traffic Profile Configuration section opens.


3. From the Predefined Applications sections, you can add and configure applications by selecting the following sections:

- [Applications](#)
- [TCP Settings](#)
- [TLS Settings](#)
- [RTP Settings](#)

## Applications

You can add or remove predefined applications from the Applications tab under the Traffic Profile Configuration section, as follows:

1. Select the **Add Application** button.

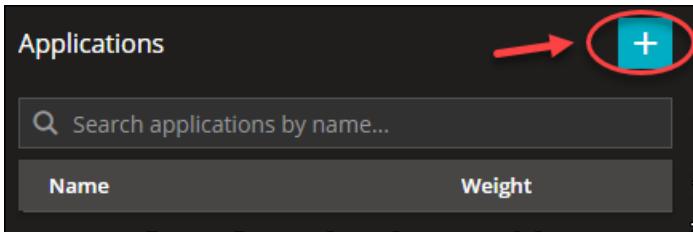


The Add Application(s) window opens.

2. From the Add Application(s), select the applications you want to add and select **ADD TO LIST** to move them to the added applications section. To add the applications to your configuration select **Add**.

**NOTE**

For the complete list of predefined applications, refer to [Predefined Applications](#).

**For example ...**

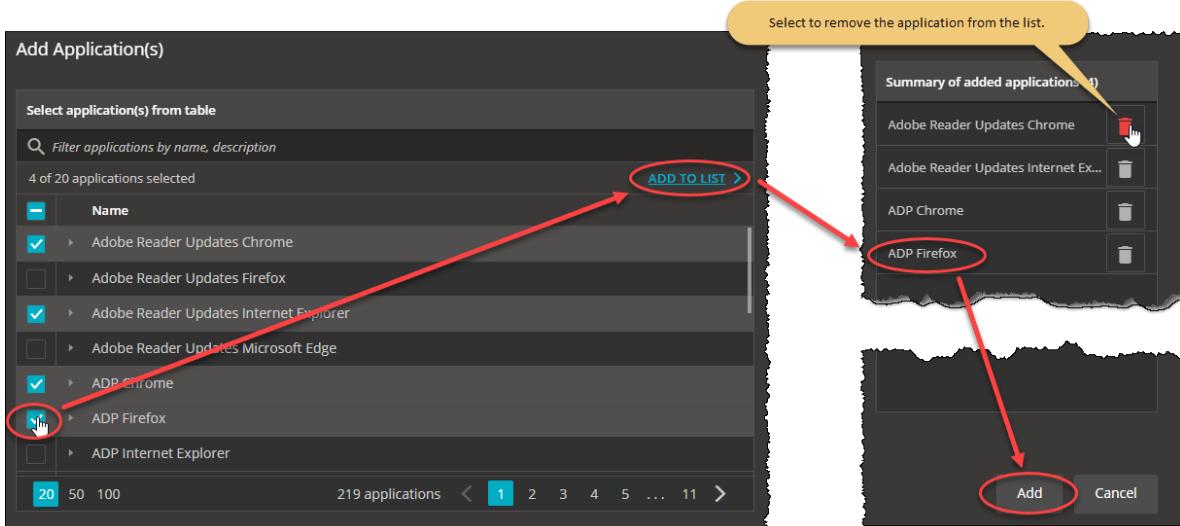

The applications are added to your configuration under the Applications section.

For example ...

Applications	
	Edit  +
Search applications by name...	
Name	Weight
■ Adobe Reader Updates Chrome 1	1
■ Adobe Reader Updates Internet Exp...	1
■ ADP Chrome 3	1
■ ADP Firefox 4	1

3. If needed, you can select the **Edit** button to enable the bulk selection of the available applications in order to remove them from the list.

For each application added, the following elements are available in the Applications table:

Field	Description
Name	The application name.
Weight	Set the application weight using the adjustment button. If the primary objective of a Traffic Profile is set to <b>Throughput</b> , the selected weight distribution time depends on the types and number of applications added to the application list.
Action Buttons	<ul style="list-style-type: none"> <li>• <b>Rename</b> - Select to rename the application.</li> <li>• <b>Advanced Settings</b> - for more information, refer to <a href="#">Advanced Settings</a>.</li> <li>• <b>Delete</b> - Select to delete the application.</li> </ul>

When an application is selected from the Application table, the Application Settings and Application Actions sections are displayed.

### For example ...

The screenshot shows the 'Applications' management interface. On the left, there is a list of predefined applications with columns for Name and Weight. One application, 'Adobe Reader Updates Chrome 1', is selected and highlighted with a cursor. On the right, two sections are displayed: 'Application Settings' and 'Application Actions'. The 'Application Settings' section contains fields for Destination Hostname, DNN ID, and QoS Flow ID. The 'Application Actions' section lists actions such as 'Check For Updates' and 'Download Updates'.

### Application Settings

Under the Application Settings section, the following fields are displayed:

**NOTE** These fields under the Application Settings section are common to all predefined applications.

Field	Description
Destination Hostname	The application name.
DNN ID	Select the DNN from the drop-down list.
QoS Flow ID	Select a QoS Flow ID from the drop-down list.


### Application Actions

The Application Actions section lists the actions and action parameters available in LoadCore for each predefined application. For the complete list of actions and parameters, refer to [Application Actions](#).

Under the Application Actions section, you can edit or add new actions for each application:

1. Use the icons available for each icon in order to remove it or to change its position in actions list.


### For example ...

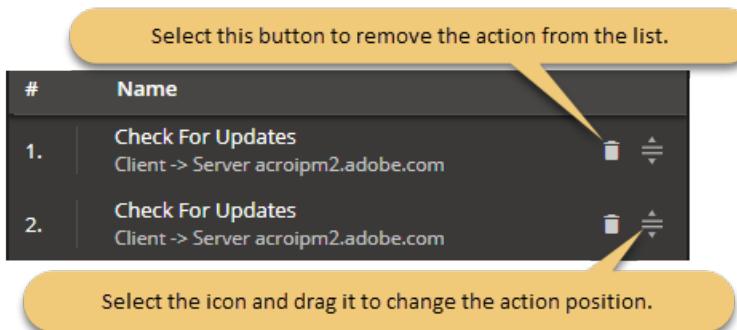

2. Select the **Add Actions** button to add new actions to the application. The Add Action(s) window opens.

Select an action from the list and then use the **Insert Actions** button to add the action in the desired position on the Insert Action(s) table. Select **Add**.

**For example ...**

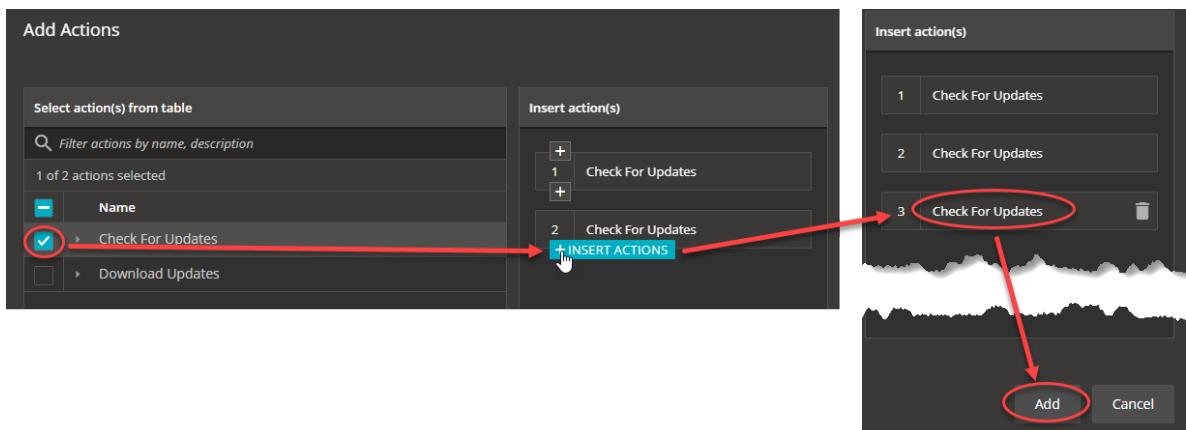


3. If needed, you can select the **Edit** button to enable the bulk selection of the available actions in order to remove them from the list.

## Application Advanced Settings

For each predefined application, the Application Settings menu is displayed when the Advanced Settings button is selected. This menu contains two main sections:

- **Connections**
- **Properties**

**For example ...**

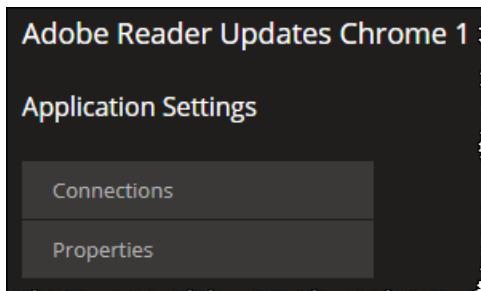

Under the **Connections** section, the Connections table is displayed. When a connection is selected, the Connections Properties fields are displayed, as follows:

Field	Description
Name	The application name.
Client Endpoint	The client endpoint.
Server Endpoint	The server endpoint.
Hostname	The hostname name.
Destination Port	The TCP source port that the client endpoint is initiating connections from.
Server Port	The TCP port that the server endpoint is accepting connections on.
Encryption disabled	Select the check box to enable it this option.


Under the **Properties** section, the application settings Properties fields are displayed, as follows:

Field	Description
Name	The application name.
Iterations	Set the value for the number of iterations.
Max Transactions	The maximum amount of transactions an application can make.
Client HTTP profile	Select the client HTTP profile from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• Chrome</li> <li>• Firefox</li> <li>• Opera</li> <li>• Microsoft Edge</li> <li>• Internet Explorer</li> <li>• Safari</li> <li>• Android</li> </ul>
Action Timeout (seconds)	Set the action timeout in seconds.
Connection Persistence	Select an option for the connection persistence: <ul style="list-style-type: none"> <li>• <b>Standard</b> - inherits the behavior with respect to the HTTP version (1.0 or 1.1).</li> <li>• <b>Disabled</b> - enforces connection closing following every HTTP message.</li> <li>• <b>Enabled</b> - enforces connection persistence through explicit keep-alive.</li> </ul>

Field	Description
HTTP Version	Select the HTTP version used: <ul style="list-style-type: none"> <li>• <b>HTTP/1.0</b></li> <li>• <b>HTTP/1.1</b></li> </ul>

## TCP Settings

The following UI elements are available on the TCP Settings tab under the Traffic Profile Configuration section.

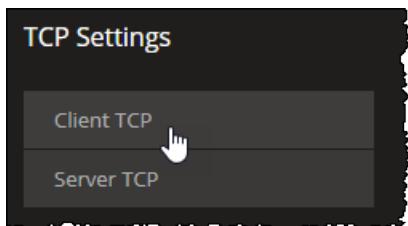


These parameters are configurable for both Client and Server settings, as presented in the following table.

Parameter	Description
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value. The default Min value is 2000 milliseconds and the permissible range of values is between 50 to 120000 milliseconds.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to. The default value is 3200 milliseconds and the permissible range of values is between 1000 to 120000 milliseconds.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number). The default value is 1024.
Max source port	The Max value specifies the upper bound (the highest permissible port number). The default value is 65535.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.

Parameter	Description
Enable RFC1323 TCP timestamps	<p>Enable or disable the stamp using the toggle button. If enabled, the client or server inserts an RFC 1323 timestamp into each packet.</p> <p><b>NOTE</b> Enabling the TCP Timestamp option adds 12 bytes to the TCP header. This reduces the effective configured MSS.</p>

## TLS Settings

The following UI elements are available on the TLS Settings tab under the Traffic Profile Configuration section.

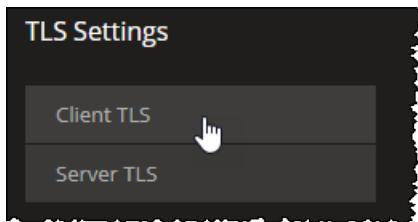

**NOTE** TLS multi version support is available, you can configure both TLS 1.2 and TLS 1.3 from **Client TLS Settings**. You can choose multiple ciphers for each different version. The Client sends these versions and ciphers in the Client Hello and the Server chooses one of the versions and ciphers and replies back with Server Hello. The Client then proceeds with the handshake.

**NOTE** Once you select either of the two Session Reuse Methods below for the **Client TLS Settings**, you can specify how many simultaneous connections can share the same Session ID or Ticket through the **Session Reuse Count** option for **TLSv1.2**.

These parameters are configurable for both Client and Server settings, as presented in the following tables.

### Client TLS Settings

Parameter	Description
<i>TLSv1.2</i>	<p>Select the check box to enable it. The following options became available:</p>
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>NOTE</b> Session reuse method is available only if <i>TLSv1.2</i> is selected.</p>

Parameter	Description
Immediate close	Select the check box to enable it.
TLSv1.3	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibility	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	Select the check box to enable it.

### Server TLS Settings

Parameter	Description
TLSv1.2	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>NOTE</b> Session reuse method is available only if TLSv1.2 is selected.</p>
Immediate close	Select the check box to enable it.
TLSv1.3	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibility	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	Select the check box to enable it.
SNI Enabled	<i>Select the check box to enable the server name indicator. The following <b>SNI Settings</b> become available:</i>
Certificate file	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.

Parameter	Description
Key file	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key file password	Enter your key file password.
DH file Traffic	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.
Certificate file	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.
Key file	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key file password	Enter your key file password.
DH file Traffic	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.

## RTP Settings

The following UI elements are available on the RTP Settings tab under the Traffic Profile Configuration section.

Settings	Description
Encryption Mode	Select an encryption mode from the drop-down list. Available options: <b>None</b> , <b>XOR</b> , <b>ZOOM</b> or <b>SRTP</b> .
MOS Mode	Select the Session Reuse Method from the drop-down list. Available options: <b>Disable</b> , <b>Per interval</b> or <b>Per call</b> .

## DN configuration settings



Data Networks (DN) represents one of the entities in the 5G core network architecture. DN interfaces with UPF over the N6 reference point, enabling access to the public Internet, operator services, and other external data networks.

The configuration settings are described in the topics listed below.

### Topics:

<b>DN Ranges panel</b>	<b>990</b>
<b>DN Range panel</b>	<b>990</b>
<b>DN N6 interface settings</b>	<b>991</b>
<b>DN routes settings</b>	<b>992</b>
<b>DN User Plane</b>	<b>993</b>
DN Stateless UDP Traffic	994
DN Data Traffic	996


DN Voice Traffic .....	998
DN Video OTT Traffic .....	1009
DN DNS Server Traffic .....	1012
DN Predefined Applications Traffic .....	1015
DN Capture Replay .....	1015
DN Synthetic .....	1017
<b>DN Throttling settings .....</b>	<b>1019</b>

## DN Ranges panel

The **DN Ranges** panel opens when you select the DN node from the network topology window. You can perform the following tasks from this panel:

- Add a new DN range to your test configuration.
- Open a DN range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

For example ...

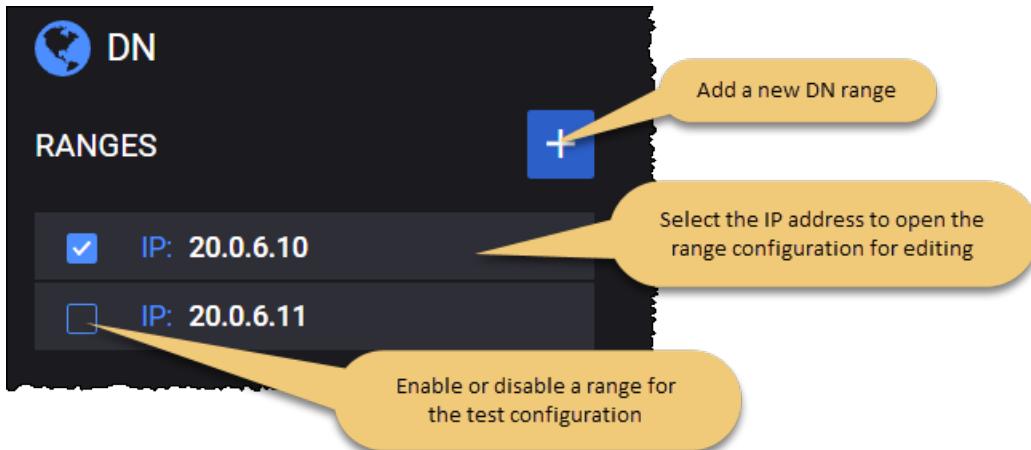

If multiple agents are assigned to the DN node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the DN node.  
For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range 3 on agent1 and agent2.

## DN Range panel

You add and select DN ranges from the DN Ranges panel. When you select a DN's IP address from the **UDR Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the DN range from the test configuration.
- Select **Range Settings** to configure the node and connectivity settings for the DN range.

- Select **Routes Settings** to configure the route to an UE or custom range.
- Select **User Plane** to configure the traffic generators.

## DN range controls and settings

Each DN range is identified by a unique IP address. You can add and delete DN ranges as necessary to support your test objectives. For example, a test may require a range of UEs to concurrently access multiple data networks (for example, local and central DNS) using a single or multiple PDN sessions. In this case, you would create one DN range for each of those data networks.

The following table describes the available **Range** configuration options for each DN range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	The number of DNs in the DN range.
<i>Range Settings:</i>	
N6 Interface Settings	Each DN range requires the configuration of N6 interface settings, through which a DN instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">DN N6 interface settings</a> .
Routes Settings	These settings are described in <a href="#">DN routes settings</a> .
User Plane	These settings are described in <a href="#">DN User Plane</a> .
Throttling Settings	These settings are described in <a href="#">DN Throttling settings</a> .

## DN N6 interface settings

N6 is the interface between the Data Network (DN) and the UPF.

The following table describes the **Connectivity Settings** that you configure for each DN range.

**NOTE**

The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost

<b>Connectivity Settings</b>	<b>Description</b>
	bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier..
VLAN TPID	VLAN tag protocol ID.

## DN routes settings

**IMPORTANT** This configuration set appears only if an agent is assigned to the DN node (if possible).


The following table describes the **Route Settings** that you need to configure in order to create the route to an UE or custom range.

<b>Settings</b>	<b>Description</b>
<i>Routes Config:</i>	

Settings	Description
	Select this button to add a new route to a specific UE range or a custom one.
<i>UE Routes Config:</i>	
	Select this button to remove the route.
Route Type	Select the route type from the drop-down list. Available options: <b>UE</b> or <b>Custom</b> .
UE Range MSIN	Select the MSIN of the UE range from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Peer UPF/SGW	Select the UPF node connected to DN over the N6 interface from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Gateway Address	The IP address assigned as gateway address.
DNN(s)	Select the DNNs from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> This parameter is available only when the route type is set to <b>UE</b> .
Destination Subnet Address	Set the destination subnet address. This parameter is available only when the route type is set to <b>Custom</b> .
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address. This parameter is available only when the route type is set to <b>Custom</b> .

## DN User Plane

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

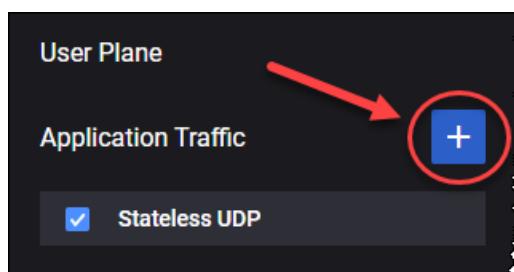

**NOTE**

Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN. For the UE User Plane settings, refer to [UE User Plane](#).

Parameter	Description
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"> <li>• <b>Stateless UDP</b></li> <li>• <b>Data</b></li> <li>• <b>Voice</b></li> <li>• <b>Video OTT</b></li> <li>• <b>DNS Server</b></li> <li>• <b>Predefined Applications</b></li> <li>• <b>Synthetic</b></li> <li>• <b>UDG</b></li> </ul>
	Select this button to remove the application traffic objective from your test configuration.
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">DN Stateless UDP Traffic</a> .
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">DN Data Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">DN Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">DN Video OTT Traffic</a> .
DNS Server	For the settings required to configure the DNS Server objective, refer to <a href="#">DN DNS Server Traffic</a> .
Predefined Applications	For the settings required to configure the Predefined Applications objective, refer to <a href="#">DN Predefined Applications Traffic</a> .
Synthetic	For the settings required to configure the Synthetic traffic objective, refer to <a href="#">DN Synthetic Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">DN UDG Traffic</a> .

## DN Stateless UDP Traffic

Use the **Stateless UDP** generator if you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings for the downlink traffic are described below.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>downlink</b> and can not be modified since on the DN you can only configure the downlink flow.
Packet Rate	The rate at which the test generates downlink packets, measured in packets per second (pps).
Distributed over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.
Destination UE Range	Select the destination UE range from the drop-down list.
DNN	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## DN Data Traffic

The following table describes the DN Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Application Servers	<p>Each Application Traffic entry requires an application server definition, and can support multiple such definitions.</p> <ul style="list-style-type: none"> <li>• To select an existing application server definition, click its name to open the Server panel where you can view and modify the server settings.</li> <li>• To add another application server, click the <b>Add Server</b> button. LoadCore will open the Server panel where you will select the server type and configure the server settings.</li> </ul> <p>Refer to <a href="#">Server</a> (below) for a description of the configuration settings required by the application server.</p> <p>Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</p>

## Server

You can add and delete application servers as needed to meet your test objectives. The **Server** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Server</b> button to remove the application server from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> , <b>TLS</b> , <b>QUIC</b> or <b>UDP</b> .
Type	Select the L4/L7 protocol type from the list of pre-defined application servers. The available types include: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get Responder</b>, <b>HTTP Put Responder</b>, <b>HTTP Post Responder</b>, <b>HTTP Server</b> and <b>FTP Responder</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get Responder</b>, <b>HTTPS Put Responder</b>, <b>HTTPS Post Responder</b> and <b>HTTPS Server</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Server</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional Responder</b>.</li> </ul>
Port	The port used by the application server.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.
QoS FlowID	Select a QoS Flow ID for this application server.
Client Tx Count	This parameter is available only when the application server type is set to UDP Bidirectional.
Server Tx Count	This parameter is available only when the application server type is set to UDP Bidirectional.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

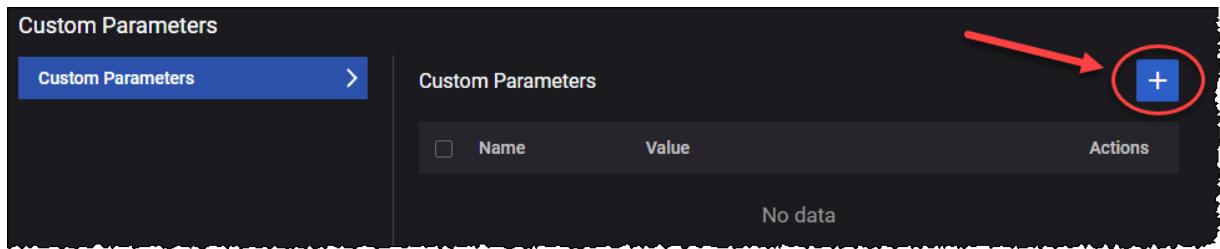

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

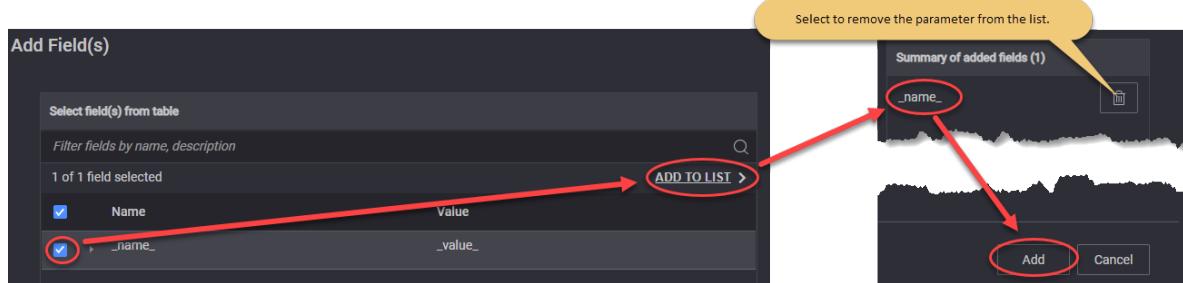

## DN Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Call Type	Select the type of call from the drop-down list.
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<i>Sip Settings:</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or

Parameter	Description
	overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li><b>TCP</b> - Transmission Control Protocol</li> <li><b>TLS</b> - Transport Layer Security</li> <li><b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPSEC	Select this option to enable IPSEC.
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Advanced SIP Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select the check box in order to enable this option.
Audio settings:	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
Video Settings:	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
MSRP Settings:	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
Advanced Media Settings:	
Custom SDP	Select this panel to open the custom SDP settings.
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li><b>None</b></li> <li><b>EVS/AMR IPv4</b></li> <li><b>NB Codecs IPv6</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>AMR-WB IPv6</b></li> <li><b>Multimedia IPv4</b></li> </ul>
QoE Settings	Select this panel to open the audio QoE settings.
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
QoS Flow ID for Video	Select the QoS flow used for audio from the drop-down list.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <ul style="list-style-type: none"> <li><b>AMR</b> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li><b>AMR-WB</b> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been</li> </ul>

Parameter	Description
	<p>adopted as the standard speech codec by 3GPP.</p> <ul style="list-style-type: none"> <li>• <b>EVS</b> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <a href="#">PCMU</a></li> <li>• <a href="#">PCMA</a></li> <li>• <a href="#">iLBC</a></li> <li>• <a href="#">G722</a></li> <li>• <a href="#">G723</a></li> <li>• <a href="#">G729</a></li> </ul> <p>The parameters of each audio codec are presented below.</p>

### AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li>• <b>Bandwidth efficient:</b> In the bandwidth efficient format only the full payload is octet aligned, so fewer padding bits are added.</li> <li>• <b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

### EVS

Parameter	Description
Packet Time	Length of time in milliseconds represented by the media in a packet.

Parameter	Description
(ms)	
Payload Type	Specifies the audio payload type.
Payload Format	The following options are available: <ul style="list-style-type: none"> <li><b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li><b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

### PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

### Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
QoS Flow ID for Voice	Select the QoS Flows ID(s) from the drop-down list.
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.

Parameter	Description
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
QoS Flow ID for MSRP	Select the QoS Flows ID(s) from the drop-down list.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)


### SIP Custom Headers

From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE** The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:


- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

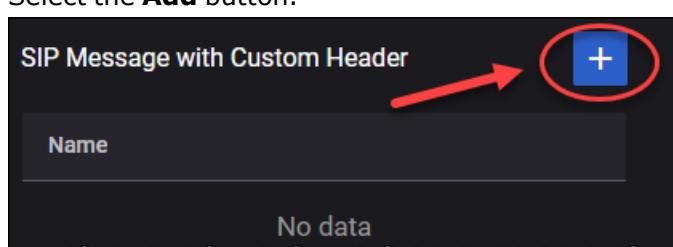

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

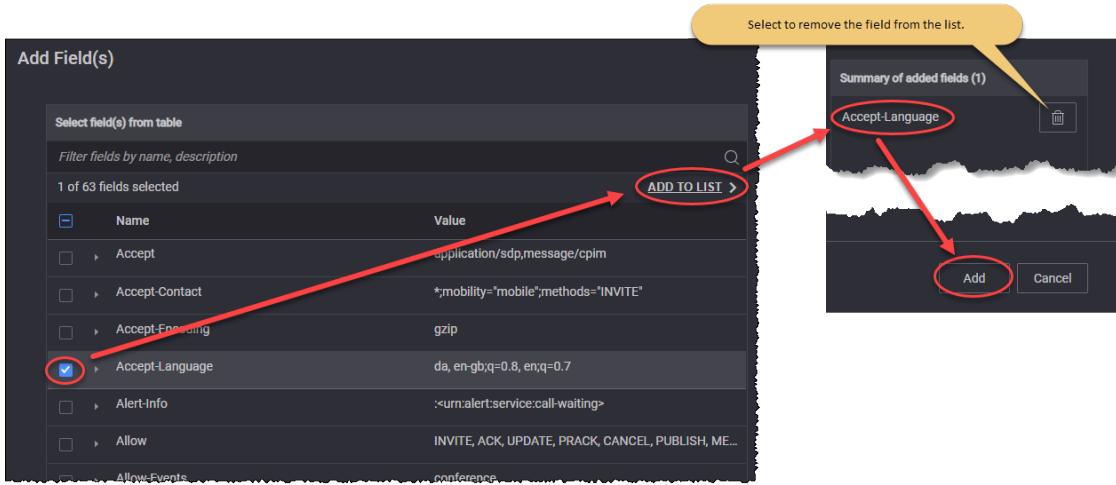

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nexnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associate-d-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com",qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque="",stale=FALSE, algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice",realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>, <sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2

Parameter	Description	Value
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li><b>AKAv2</b></li> <li><b>ProxyDefined</b></li> </ul>
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPC	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc	The OPC value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc Increment	The number used to increment the OPC value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPC value.

## DN Video OTT Traffic

The following table describes the Video OTT Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>

Parameter	Description
<i>OTT Servers:</i>	
	Select this button to add an OTT server to your test configuration.
	Select this button to remove the OTT server from the test configuration.
Server Name	Set the server name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Streams	Refer to <a href="#">Streams</a> (below) for descriptions of the OTT server streams settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Streams

To open the OTT Server Streams panel, select the **Open Streams** button.



The OTT Server Streams parameters are described in the following table.

Parameter	Description
	Select this button to add a stream to your test configuration.
	Select this button to remove the stream from the test configuration.
Stream Name	Set the stream name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
URL	Set the URL path.
Type	Select the stream type from the drop-down list:

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>Real</b></li> <li>• <b>Synthetic</b></li> </ul>
Protocol	<p>Select the protocol from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Apple HLS</b></li> <li>• <b>DASH</b>.</li> </ul> <p>If the stream type is set to <b>Synthetic</b>, you can choose one protocol from list. If the stream type is set to <b>Real</b>, you will see the protocol of real stream loaded.</p>
Stream Duration	<p>If the stream type is set to <b>Synthetic</b>, you can configure the stream duration in seconds.</p> <p>If the stream type is set to <b>Real</b>, you will see the real stream duration.</p>
Segment Duration	<p>If the stream type is set to <b>Synthetic</b>, you can configure the segment duration in seconds.</p> <p>If the stream type is set to <b>Real</b>, you will see the real segment duration.</p>
Quality Levels:	<i>Set the quality value for each level.</i>
	Select this button to add a quality level to your test configuration.
	Select this button to remove the quality level from the test configuration.
Bitrate (kbps)	Set the value of the bitrate.
Resolution	Select the resolution from the drop-down list. Available options: <b>QCIF, 240p, nHD, 480, WXGA, FHD, QHD, 4K, 8K</b> .
Frames per second	Set the number of frames per second.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

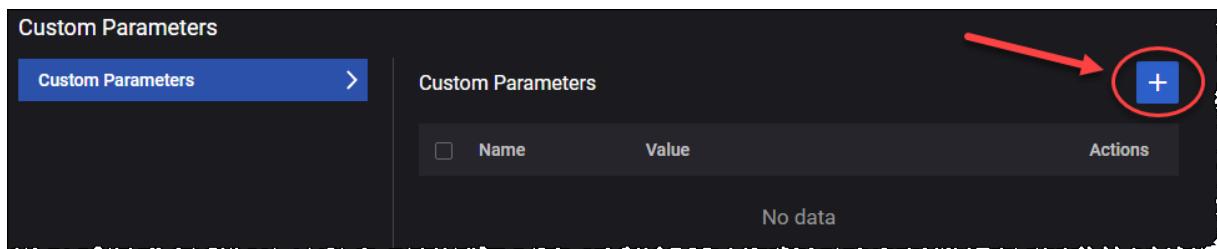

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

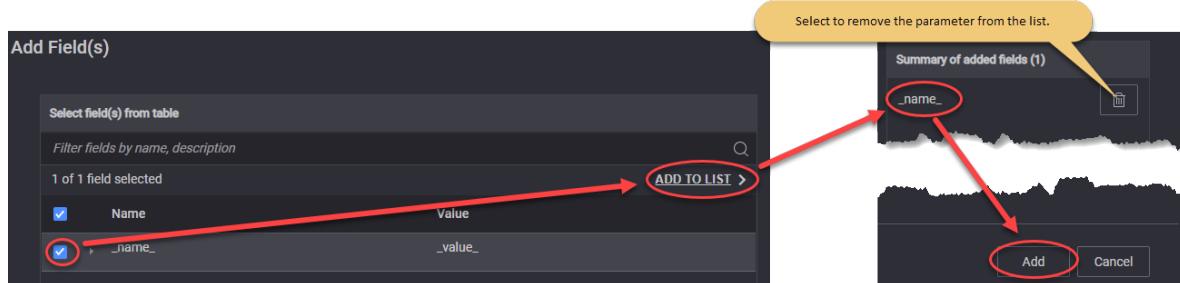

## DN DNS Server Traffic

The following table describes the DNS Server Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>DNS Server</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>DNS Servers:</i>	
<b>+</b>	Select this button to add an DNS server to your test configuration.

Parameter	Description
	Select this button to remove the DNS server from the test configuration.
Type	Select the type from the available options.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Zone Manager	Refer to <a href="#">Zone Manager</a> for descriptions of the DNS server zones settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Zone Manager

To open the DNS Server Zones panel, select the **Open Zones** button.



The DNS Server Zones parameters are described in the following table.

Parameter	Description
	Select this button to add a zone to your test configuration.
	Select this button to remove the zone from the test configuration.
Zone Name	Set the zone name. Each zone is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Master Server	Provide the value for the master server.
Resource Records (RRs)	
	Select this button to add a resource record to your test configuration.
	Select this button to remove the resource record from the test configuration.
Type	Select the type from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• <b>A</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>AAAA</b></li> <li>• <b>CNAME</b></li> <li>• <b>TXT</b></li> <li>• <b>PTR</b></li> <li>• <b>NS</b></li> </ul>
Hostname	Set the hostname.
Address	Provide the address.

## Custom Parameters


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters panel opens.


2. Select the **Add** button.

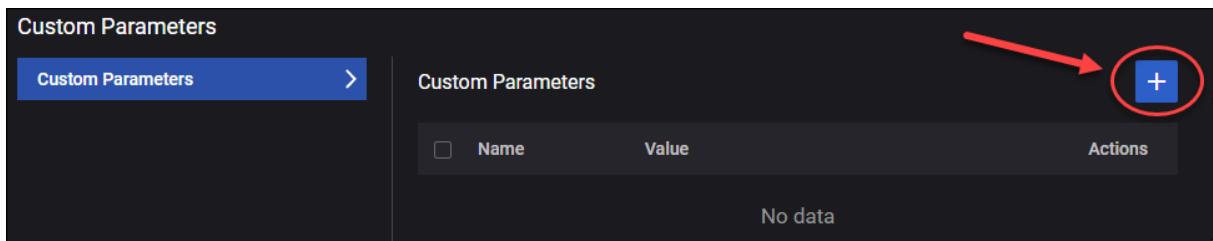

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

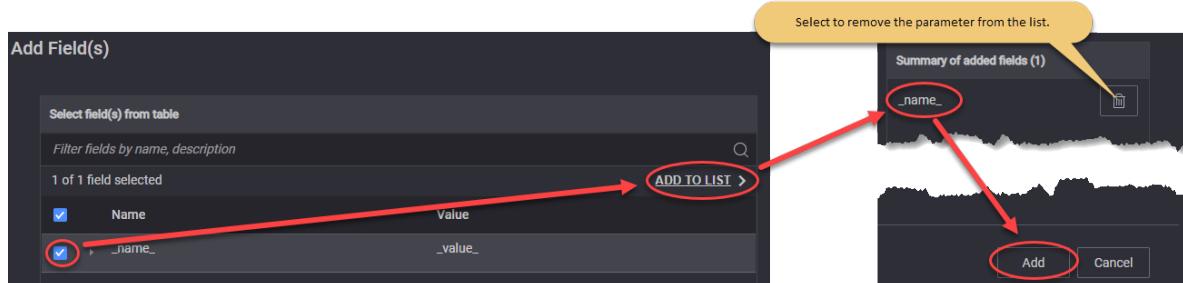

## DN Predefined Applications Traffic

The following table describes the Predefined Applications parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Predefined Applications</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Predefined Traffic Profiles	Select the traffic profile from the available options.

## DN Capture Replay

The following table describes the Capture Replay parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Capture Replay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Capture File	It allows you to upload a capture file, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.
Iterations	The number of times the capture will be replayed for each subscriber. Set to <b>0</b> for no limit. The default value is <b>1</b> .
Maximum Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Rx Timeout (ms)	Time the responder waits for packets, after the delay observed in the packet capture. The default value is <b>1000</b> milliseconds.
Delayed Tx	Prevent the packets from being sent faster than they appear to be sent in the capture file, trying to maintain the packet delays. The default value is <b>true</b>

Parameter	Description
	(option enabled).
Resynchronize	Try to resync responder with initiator by matching incoming packets ahead and behind the current packet. The default value is <b>true</b> (option enabled).
Start Delay (s)	The number of seconds to wait from the start of sustain time (i.e. after all UEs have registered).
DNN ID	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Count	The destination IP address count value.

The following table describes the Filter object parameters.

Parameter	Description
<i>Filter</i>	
	Select this button to add a new filter to your test configuration.
	Select this button to remove the additional route from your test configuration.
Role	Select the role from the drop-down list. Available options: <b>Initiator</b> and <b>Responder</b> .

Parameter	Description
	Default value: <b>Initiator</b> .
Filter Expression	This field cannot be empty. It selects the packets to be replayed from uploaded capture. The filter string should be in pcap-filter format, as described at <a href="https://www.tcpdump.org/manpages/pcap-filter.7.html">https://www.tcpdump.org/manpages/pcap-filter.7.html</a> .
Remove Encapsulation	Remove GTPu encapsulation from packets, if present, before trying to match the filter expression and when replaying the packets. The default value is <b>false</b> (option disabled).
<i>Overrides</i>	
Override QoS Flow ID	This option is available only if the <i>Role</i> is set to <b>Initiator</b> . Select the toggle button to enable it.
Qos Flow ID	This option is available only when <i>Override QoS Flow ID</i> option is enabled. Select the QoS Flows ID(s) from the drop-down list.
Override IP Address	Select the toggle button to enable it. When enabled, <i>Destination IP Address</i> and <i>Destination IP Address Count</i> fields become available.
Destination IP Address	The destination IP address to place in the IP packet.
Destination IP Address Count	The destination IP address count value.

## DN Synthetic

The following table describes the Synthetic parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>Synthetic</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of

Parameter	Description
	the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).

The following table describes the Traffic Flow parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

## DN Throttling settings

Throttling can be enabled from this menu per DN range (by selecting the corresponding check box), and matching user plane traffic over TCP, UDP or both.

Throttling can be useful, for example, when the local network interface that is generating downlink traffic has a higher speed than the radio interface between the UE and the GNB. If the traffic generated from either direction is bursty, the throttling mechanism will, instead of dropping packets, add them in a queue and spread them throughout a second according to the configured bit rate.

**NOTE**

The throttling options only work for interfaces that are running IxStack, either over DPDK or over raw sockets, depending on where the traffic is terminated (if agent is present on DN/SGi server then its N6 interface should be IxStack; if there is no agent on DN/SGi, than N3 interface should be IxStack on UPF/CoreSim agent).

The following table describes the **Throttling Settings** that you can configure for each DN range.

Settings	Description
Bit Rate (mbps)	Can be set between 10 and 10000. Represents the value at which the traffic will be throttled, and it will become the enforced maximum bit rate.
Throttle TCP Traffic	Select the check box to throttle UP traffic over TCP.
Throttle UDP Traffic	Select the check box to throttle UP traffic over UDP.

## IMS configuration settings

The IP Multimedia Subsystem (IMS) is a standards-based architectural framework for delivering multimedia communications services such as voice, video and text messaging over IP networks. IMS enables secure and reliable multimedia communications between diverse devices across diverse networks.

In LoadCore, IMS has two important components:

- Call Session Control Function (CSCF) – the core of the IMS architecture, responsible for controlling sessions between endpoints (referred to as terminals in the IMS specifications) and

applications.

- Media Function

The configuration settings for these two components are described in the topics listed below.

#### Topics:

<b>CSCF Range panel</b>	<b>1020</b>
<b>Media Function Range panel</b>	<b>1021</b>

## CSCF Range panel

When you select the CSCF's IP address from the **CSCF Ranges** panel, LoadCore opens the **Range** panel, from which you can select **CSCF Settings** to configure the node and connectivity settings for the CSCF range.:.

### CSCF range controls and settings

The following table describes the available **Range** configuration options for the CSCF range.

Setting	Description
<i>P-CSCF Node Settings</i>	
Domain	Set the domain name.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Force IPsec Null Encryption	If enabled, it forces IPsec null encryption, therefore not encrypting the ESP traffic.
<i>Authentication Settings</i>	
Enable Authentication	Select this option to enable authentication.
Realm	Set the realm. Default value: <b>keysight.com</b> .
Algorithm Type	Select the algorithm type from the drop-down list. Available options: <b>Digest</b> , <b>AKAv2</b> or <b>AKAv1</b> .
Algorithm	Select the algorithm from the drop-down list. Available options: <b>MD5</b> , <b>MD5-Sess</b> , <b>SHA256</b> or <b>SHA256-Sess</b> .
Quality of Protection	Select an option from the drop-down list: <b>auth</b> or <b>auth-init</b> .
<i>Connectivity Settings</i>	

Setting	Description
IP Address	Set the IP address.

## Media Function Range panel


When you select the Media Function's IP address from the **Media Function Ranges** panel, LoadCore opens the **Range** panel, from which you can configure the connectivity settings for the Media Function range.

### Media Function range controls and settings

The following **Connectivity Settings** enable the necessary connectivity and service interaction.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.

## RAN/Untrusted AP configuration settings



In wireless networks, a Radio Access Network (RAN) is the network that enables user endpoints, such as mobile phones, to communicate and access core network resources. The Full Core test topology supports both the 5G gNodeB and the 4G eNodeB. In each case, the RAN provides access and coordinates the management of resources across the radio sites. Multiple instances of RAN may be deployed. In 5G topology, an *untrusted AP* refers to an Access Point that is considered unsecure or not fully trusted by the cellular network operator.

The configuration settings are described in the topics listed below.


### Topics:

<b>gNodeB</b> .....	<b>1022</b>
gNodeB Ranges panel .....	1022
gNodeB Range settings .....	1026
gNodeB node settings .....	1027
gNodeB NSSAI settings .....	1029
gNodeB N2 interface settings .....	1031
gNodeB N3 interface settings .....	1035
<b>eNodeB</b> .....	<b>1039</b>
eNodeB Ranges panel .....	1039
eNodeB Range Settings .....	1043
eNodeB Node Settings .....	1043
S1-U Interface Settings .....	1045

S1-MME Interface Settings .....	1046
<b>UNAP .....</b>	<b>1047</b>
UNAP Ranges panel .....	1048
UNAP Range Settings .....	1048
<b>Passthrough interface settings .....</b>	<b>1050</b>

## gNodeB

To configure one or more gNodeB ranges for a test, select gNodeB from the RAN panel.

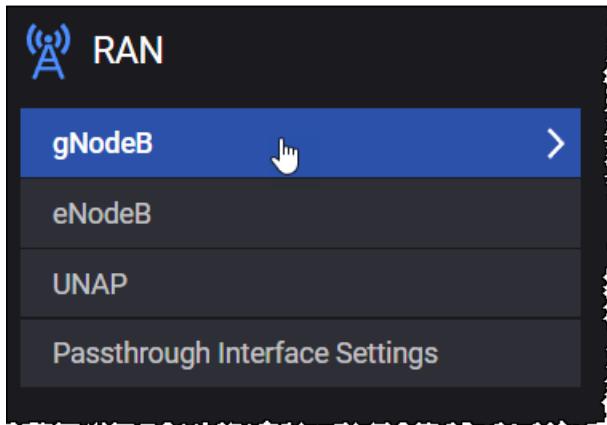

The following topics describe the gNodeB configuration settings:

<b>gNodeB Ranges panel .....</b>	<b>1022</b>
<b>gNodeB Range settings .....</b>	<b>1026</b>
<b>gNodeB node settings .....</b>	<b>1027</b>
<b>gNodeB NSSAI settings .....</b>	<b>1029</b>
<b>gNodeB N2 interface settings .....</b>	<b>1031</b>
<b>gNodeB N3 interface settings .....</b>	<b>1035</b>

### gNodeB Ranges panel


The **gNodeB Ranges** panel opens when you select **gNodeB** from the RAN pane. It consists of two main section: Ranges and Ranges Connectivity.

#### Ranges

On the Ranges section, you can perform the following task:

- Add a new gNodeB range to your test configuration.
- Open a gNodeB range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

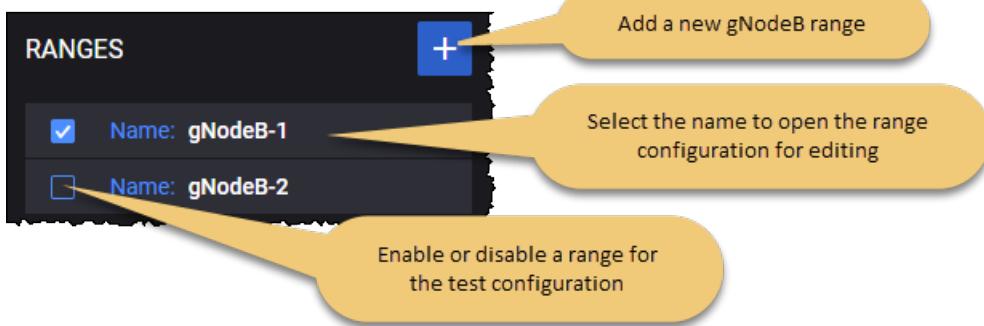

## Ranges Connectivity

The Ranges Connectivity section allows you to configure Xn links between gNodeB ranges for handovers. This section is displayed as a matrix of check-boxes, each selected check-box represents an Xn link between ranges on the line and the range on the column.

Note that to configure the Xn links between gNodeB ranges, you need to add at least two gNodeB ranges. If there are fewer than two gNodeB ranges, LoadCore displays the following message: "Two or more ranges are required to configure Xn links".

Due to the fact that the Xn links are bidirectional the Range Connectivity matrix is only half full of check-boxes.

	gNodeB-1	gNodeB-2	gNodeB-3	gNodeB-4
gNodeB-1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
gNodeB-2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
gNodeB-3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
gNodeB-4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Each Xn link check-box can have one of the following states:


State	Description
Selected and blue color	An Xn link connection is established between enabled gNodeB ranges.
Selected and grey color	An Xn link connection is established between disabled gNodeB ranges.
Unselected	No Xn link connection between gNodeB ranges.

To see all the Xn links for a particular gNodeB range, you need to read the line of that range and then the column of that range.

If none of the links is marked as an Xn link then only N2 handovers will be performed.

Hovering over a specific gNodeB range from the Ranges Connectivity matrix highlights the row and displays more details about the connectivity/range status.

When a gNodeB range is disabled you are not able to select any Xn link for that specific gNodeB range.

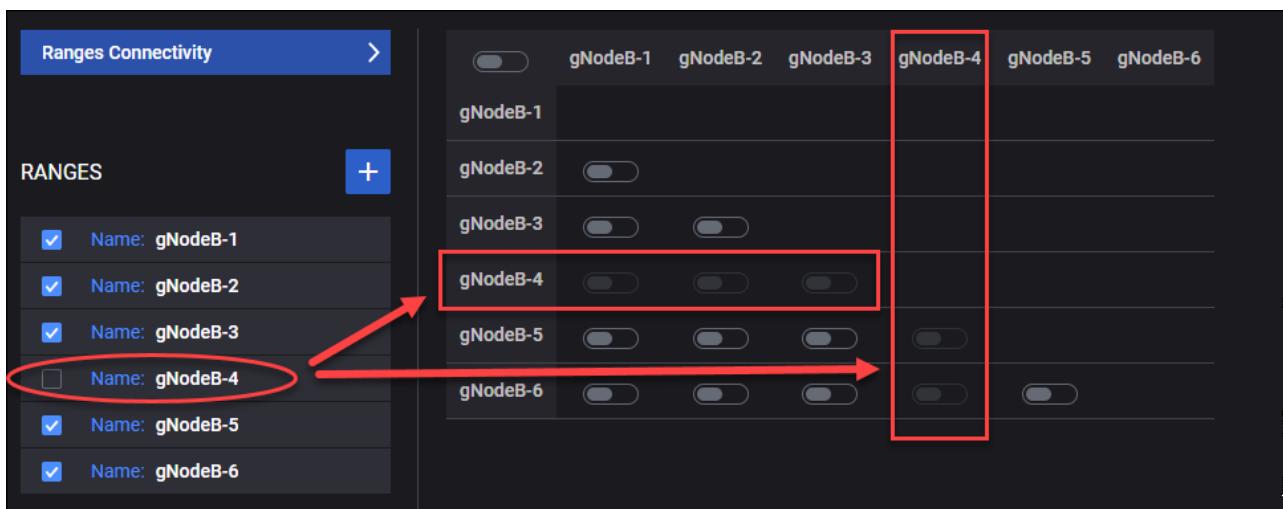

If there was an Xn link between two gNodeB ranges and now one of them is disabled, the check-box will become greyed out and cannot be unselected.

**NOTE** None of the Xn links that are part of disabled gNodeB ranges are sent to the traffic agent.

#### For example ...

1. The disabled range gNodeB-4 had an Xn link with gNodeB-3. The selected check-box is greyed out. This Xn link will not be sent to the traffic agent.

The screenshot shows the 'Ranges Connectivity' interface. On the left, there's a list of 'RANGES' with checkboxes next to each entry. The entries are: Name: gNodeB-1 (checked), Name: gNodeB-2 (checked), Name: gNodeB-3 (checked), Name: gNodeB-4 (unchecked), Name: gNodeB-5 (checked), and Name: gNodeB-6 (checked). A red circle highlights the 'Name: gNodeB-4' entry. On the right is a 6x6 matrix representing connectivity between gNodeBs. The columns and rows are labeled gNodeB-1 through gNodeB-6. The main check-box at the top left of the matrix is checked. The cell at the intersection of gNodeB-4 (row) and gNodeB-6 (column) has a red circle around its enable switch, and a red arrow points from the 'Name: gNodeB-4' entry in the list to this cell.


2. The gNodeB-3 range was enabled on previous step and there were selected Xn links between gNodeB-3/gNodeB-4 and gNodeB-3/gNodeB-6. Due to the fact that gNodeB-3 is now disabled, the check-box for Xn links between gNodeB-3 and gNodeB-6 have become greyed out.

This screenshot shows the same interface after the 'gNodeB-3' range has been disabled. The list on the left now shows: Name: gNodeB-1 (checked), Name: gNodeB-2 (checked), Name: gNodeB-4 (unchecked), Name: gNodeB-5 (checked), Name: gNodeB-6 (checked), and Name: gNodeB-7 (checked). In the matrix, the row for gNodeB-3 contains several greyed-out enable switches, while the other rows remain functional.

The first cell of matrix contains a main check-box that displays the state of the matrix and perform operations.

<b>State</b>	<b>Description</b>	<b>Operation</b>
Selected	All connected.	If the main check-box is Selected, you can undo the selection to change the state to Unselected and all Xn links from the connectivity matrix will become unselected (none connected).
Unselected	None connected.	If the main check-box is Unselected, you can select it to change the state to Checked and all Xn links from the connectivity matrix will become selected (all connected).

When the main matrix check-box is selected all the Xn link check-boxes from the matrix become selected.

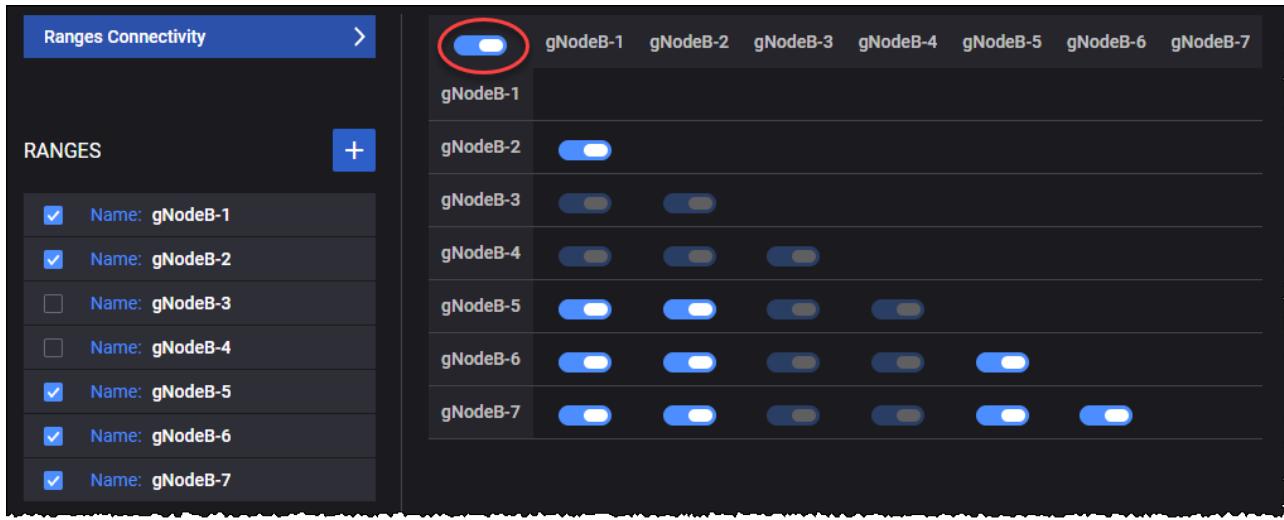

Even the Xn link check-boxes for disabled gNodeB ranges are selected since the Xn links for disabled gNodeB ranges are not sent to the traffic agent. This way, when the disabled gNodeB range is enabled, you will not have to manually select the Xn link check-boxes for that particular gNodeB range.

## gNodeB Range settings

You add and select gNodeB ranges from the gNodeB Ranges panel. When you select the name of an gNodeB range, LoadCore opens the **Range** panel, from which you can:

- Delete the gNodeB range from the test configuration.
- Designate the range as a **Device Under Test**.
- Specify the number of gNodeB nodes to configure for the range.
- Select **Range Settings** to configure the node and connectivity settings for the gNodeB range.

## gNodeB range controls and settings

Each gNodeB range is identified by a unique name. You can add and delete ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each gNodeB range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Device Under Test	Enable this option if your gNodeB is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the gNodeB functionality (if it is selected in the Topology window).
Range Count	The number of gNodeBs in the gNodeB range.

Setting	Description
<i>Range Settings:</i>	
Node Settings	Each gNodeB range requires the configuration of an associated set of Node Settings, which are described in <a href="#">gNodeB node settings</a> .
NSSAI	Each gNodeB range requires the configuration of at least one NSSAI, and may specify multiple NSSAIs. These settings are described in <a href="#">gNodeB NSSAI settings</a> .
N2 Interface Settings	Each gNodeB range requires the configuration of N2 interface settings, through which a gNodeB instance enables connectivity and interaction with the AMF component in the 5G network. These settings are described in <a href="#">gNodeB N2 interface settings</a> .
N3 Interface Settings	Each gNodeB range requires the configuration of N3 interface settings, through which a gNodeB instance enables connectivity and interaction with the UPF component in the 5G network. These settings are described in <a href="#">gNodeB N3 interface settings</a> .

## gNodeB node settings

Each gNodeB range includes a set of Node Settings.

### Node Settings

Each gNodeB instance (that is, each range) is identified by the following node settings.

Setting	Description
Name	Multiple gNodeB instances may be deployed in the 5G network. Each gNodeB instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN MCC for this gNodeB range.
PLMN MNC	The PLMN MNC for this gNodeB range.
Tracking area code	The Tracking Area Code to use for the nodes in this range.
gNodeB ID	The gNodeB Identifier. It is used to uniquely identify each gNodeB within a PLMN. The gNodeB ID is contained within the NCI of its cells. When the gNodeB <i>Range Count</i> setting is greater than 1, LoadCore increments the <i>gNodeB ID</i> setting for each gNodeB.
gNodeB ID Length	The number of bits from the Cell Identity to use as the gNodeB ID.
Cell ID	The NR Cell Identity (NCI) for the cell associated with this node range.
Connection	The S1AP connection timeout.

Setting	Description
Timeout (ms)	
Perform Load Balancing	Select the option to enable it. Performs load balancing between MMEs from the same MME group for initial attach.
Dynamic RAN UE NGAP/S1AP ID	If enabled, it will allocate dynamic RAN UE NGAP/S1AP ID values at Service Request.

## EPS Fallback Settings

The **Enable EPS Fallback** check box enables the UE to switch from the 5G core network (5GC) to a LTE/EPS connection in order to avoid bad connection quality. This is done using a 5G to 4G inter-RAT handover (during which the session management and user plane tunnels in the core network are handed over from SMF/UPF to MME/S-GW).

The following parameters are required to configure the EPS fallback:

Setting	Description
Enable EPS Fallback	Select the check box to enable this option.
5QI	Select the 5G QoS identifier that will trigger the EPS fallback procedure. (The 5QI must be defined on the <a href="#">QoS Flow configuration settings on page 885</a> panel in the <b>Global Settings</b> .)  When a request is received for this 5QI to create a dedicated QoS flow, the RAN will reject the request, which will trigger the EPS fallback procedure.
Associated ENB	Select the eNodeB used for handover.
Secondary Node	Select the secondary node from the drop-down list.  This option is used for EPS fallback to an eNodeB associated to a gNodeB using Option 3x.
EPS Fallback Mobility	Type of mobility to EPS during EPS fallback.  Select an option from the drop down list: <ul style="list-style-type: none"> <li>• <b>Handover to 4G</b></li> <li>• <b>Inter-System Redirection to 4G</b></li> </ul>
EPS Fallback Return Mobility	Type of mobility that occurs after the deletion of the dedicated bearer that triggered EPS fallback.  Select an option from the drop down list: <ul style="list-style-type: none"> <li>• <b>None</b> - After the dedicated bearer is deleted in 4G, the UE will not initiate any procedure.</li> <li>• <b>Connected Mode Handover to 5G</b> (default value) - After the</li> </ul>

Setting	Description
	<p>dedicated bearer is deleted in 4G, the UE will initiate a 4G to 5G Connected Mode Handover.</p> <ul style="list-style-type: none"> <li><b>Idle Mode Mobility to 5G</b> - After the dedicated bearer is deleted in 4G, the UE will perform an Enter Idle procedure in 4G, followed by a 4G to 5G iRAT Idle Mode Mobility.</li> </ul>
Send Service Request After EPS Fallback Return Mobility	<p>By default, this option is disabled.</p> <p>Send Service Request immediately after returning to 5G when Idle Mode Mobility to 5G was performed.</p>

The following options can be enabled under the **User Plane Security** pane:

- Enable Integrity ( by default, this option is disabled)
- Enable Confidentiality ( by default, this option is disabled)

**NOTE** User Plane Security settings are not taken into account for N2 Handover procedure.

The following parameters are required under the **Public Warning System** pane:

Setting	Description
Public Warning System	Select the check box to enable this option.
PWS Restart Timer (s)	<p>Duration in seconds after which PWS Restart Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38.413 , 8.9.3 PWS Restart Indication</i>.</p> <p>Values should be in range 0-86400. Default value: <b>0</b>.</p>
PWS Failure Timer (s)	<p>Duration in seconds after which PWS Failure Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38.413 , 8.9.4 PWS Failure Indication</i>.</p> <p>Values should be in range 0-86400. Default value: <b>0</b>.</p>

**NOTE** If the *Public Warning System* option is enabled and both PWS Restart and PWS Failure procedures are configured to be initiated (non-zero timers), the timers should be different.

## gNodeB NSSAI settings

Each UE range requires at least one NSSAI range.

NSSAI (Network Slice Selection Assistance Information) includes one or more NSAAIs. Each network slice is uniquely identified by a specific NSSAI.

The slice assistance information comprises a list of one or more NSSAIs, where an NSSAI is a combination of:

- An 8-bit mandatory SST (Slice/Service Type) field, which identifies the slice type.
- An SD (Slice Differentiator) field, which differentiates among Slices that have the same SST field and consist of 24 bits.

An NSSAI information element identifies a network slice. In addition to the SST and SD, it can also include an optional Mapped Configured SST and an optional Mapped Configured SD.

For each gNodeB range in your test configuration, you can add and delete NSSAIs (NASSAI 1, NSSAI 2,...NSSAI X) as required to meet your test objectives.

The gNodeB NSSAI slices are the ones supported per TA level, that will be sent in NGAP messages (for example NG Setup).

The following table describes the configuration settings that are required for each NSSAI.

<b>Setting</b>	<b>Description</b>												
<b>NSSAI:</b>													
	Select the Add NSSAI button to add a new NSSAI to your test configuration.												
<b>NSSAI settings:</b>													
	Select the Delete NSSAI button to delete this NSSAI from your test configuration.												
SST	<p>The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th><b>SST</b></th> <th><b>Value</b></th> <th><b>Suitable for handling:</b></th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> <td>5G enhanced Mobile Broadband</td> </tr> <tr> <td>URLCC</td> <td>2</td> <td>ultra-reliable low-latency communications</td> </tr> <tr> <td>MIoT</td> <td>3</td> <td>massive IoT</td> </tr> </tbody> </table>	<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>	eMBB	1	5G enhanced Mobile Broadband	URLCC	2	ultra-reliable low-latency communications	MIoT	3	massive IoT
<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>											
eMBB	1	5G enhanced Mobile Broadband											
URLCC	2	ultra-reliable low-latency communications											
MIoT	3	massive IoT											
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.												
Mapped SST	The Mapped configure Slice/Service Type (SST) value for this specific NSSAI.												
Mapped SD	The Mapped configured Slice Differentiator (SD) value for this specific NSSAI.												

## gNodeB N2 interface settings

N2 is the user plane interface between the gNodeB and the AMF.

When the gNodeB node is used as secondary node on a UE Range (either in the Parent RAN > [Secondary Node](#) section or in the [Handover](#) objective), the option to enable/disable the N2 interface is displayed.

By default, the N2 interface check box is enabled.

When the gNodeB node is used only as secondary node on a UE Range (either in the Parent RAN > [Secondary Node](#) section or in the [Handover](#) objective), the option to enable/disable the N2 interface is displayed.

The following configuration settings are required by each gNodeB N2 range.

### N2 Interface Settings

Settings	Description
Peer AMF	The IP address of the AMF node connected to gNodeB over the N2 interface.
Destination port	The destination Stream Control Transmission Protocol (SCTP) port for control plane messages (NG-AP signaling messages) on the N2 interface.
SCTP source port	The source SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.
<i>SCTP Parameters</i>	
Avoid Bundling of Data Chunks	Select this option to enable it. It turns on/off any Nagle-like algorithm. This means that packets are generally sent as soon as possible and no unnecessary delays are introduced, at the cost of more packets in the network.
Minimum Retransmission Timeout (ms)	Set the minimum retransmission timeout value, in milliseconds.
Maximum Retransmission Timeout (ms)	Set the maximum retransmission timeout value, in milliseconds.
Initial Retransmission Timeout (ms)	Set the initial retransmission timeout value, in milliseconds.
Maximum Retransmission per Association	Set the maximum retransmissions value per association.

Settings	Description
Maximum Retransmission per Path	Set the maximum retransmissions value per path.
Heartbeat Interval (ms)	Set the heartbeat interval value, in milliseconds.
SACK Delay (ms)	Set the delayed selective ACK timeout value.
SACK Frequency	Set the delayed selective ACK frequency value.

## Connectivity Settings

Settings	Description
<i>IPSec: Select the check box to enable IPsec option.</i>	
Peer SEG	Select the peer SEG range from the drop-down list.
Destination Port	By default, the destination port is set to <b>500</b> and cannot be changed.
Source Port	Set the source port number.
Enable NAT-T	Select to enable the NAT Traversal keepalive.
Inner IP Type	Select the IP type: <b>IPv4</b> or <b>IPv6</b> .
<i>Authentication</i>	
Authentication Method	By default, the authentication method is set to <b>Certificates</b> and cannot be changed.
CA Certificate	Select the <a href="#">CA certificate</a> from the drop-down list.
Certificates and Private Keys (zip)	<p>It allows you to upload an archive that contains the certificates and keys for the gNodeB range, using the <b>Upload</b> button. To remove the archive , select the <b>Clear</b> button.</p> <p>The <b>.key</b> and <b>.crt</b> files need to have the same name before extensions.</p>
Use Same Certificates and Private Key For All Tunnels	By default, this option is disabled. Select the toggle button to enable it.
<i>IKE Phase 1</i>	
Encryption Algorithm	<p>Select the encryption algorithm from the drop-down list.</p> <p>Default value: <b>AES-128-GCM-16</b>. Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b>.</p>

<b>Settings</b>	<b>Description</b>
Hash Algorithm	<p>Select the hash algorithm from the drop-down list.</p> <p>Default value: <b>NONE</b>. Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b>.</p> <p>Restrictions:</p> <ul style="list-style-type: none"> <li>When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
DH Group	<p>Select an option from the drop-down list.</p> <p>Default value: <b>prime256v1(19)</b>. Available options: <b>prime256v1(19), secp384r1(20), secp521r1(21), prime192v1(25), secp224r1(26), x25519(31), x448(32)</b>.</p>
PRF Algorithm	<p>Select an option from the drop-down list.</p> <p>Default value: <b>HMAC-SHA256</b>. Available options: <b>HMAC-MD5, HMAC-SHA1, HMAC-SHA256, HMAC-SHA384, HMAC-SHA512</b>.</p>
<i>IKE Phase 2</i>	
Encryption Algorithm	<p>Select the encryption algorithm from the drop-down list.</p> <p>Default value: <b>AES-128-GCM-16</b>. Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b>.</p>
Hash Algorithm	<p>Select the hash algorithm from the drop-down list.</p> <p>Default value: <b>NONE</b>. Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b>.</p> <p>Restrictions:</p> <ul style="list-style-type: none"> <li>When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
<i>Identification</i>	
Local Identification Type	<p>Select an option from the drop-down list.</p> <p>Default value: <b>ID_DER ASN1 DN</b>. Available options: <b>ID_IPV4_ADDR</b>,</p>

<b>Settings</b>	<b>Description</b>
	<b>ID_FQDN, ID_USER_FQDN, ID_IPV6_ADDR, ID_DER ASN1 DN, ID_KEY_ID.</b>
Local Identification Value	<p>Set the value for this parameter.</p> <p>This field is mandatory if the <i>Local Identification Type</i> is set to: <b>ID_FQDN, ID_KEY_ID or ID_RFC822_ADDR.</b></p>
<i>Timers</i>	
Enable Rekey	By default, this option is disabled. Select the toggle button to enable it.
IKE Phase 1 (IKE) Lifetime (s)	<p>Set a value for this parameter.</p> <p>Default value: <b>0</b> (disabled).</p>
IKE Phase 1 (IKE) Lifetime (s)	<p>Set a value for this parameter.</p> <p>Default value: <b>0</b> (disabled).</p>
DPD Interval (s)	<p>Set a value for this parameter.</p> <p>Default value: <b>0</b> (disabled).</p>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Emulated Router Address	<p>Set the IPv4 or IPv6 address for the emulated router. This allows to hide all messages from the interface behind a MAC address.</p> <div data-bbox="518 1438 682 1495" style="background-color: #e0e0e0; padding: 2px 10px; border-radius: 5px;">NOTE</div> <p>This option can be used only with IxStack stack.</p>
Emulated Router Address Prefix Length	Set the IP network mask for the emulated router.
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.

Settings	Description
MAC	Select the MAC address to open the MAC configuration panel for editing
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID..

## gNodeB N3 interface settings

N3 is the user plane interface between the gNodeB and the UPF.

The following configuration settings are required by each gNodeB N3 range.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IPsec: Select the check box to enable IPsec option.</i>	
Use N2 IPsec Tunnel	This option is available only if <a href="#">IPsec check box</a> is selected on the N2 interface. When this option is selected, the IPsec configuration from the N2 interface will be used for the N3 interface. Otherwise, N3 IPsec configuration is required.
Peer SEG	Select the peer SEG range from the drop-down list.
Destination Port	By default, the destination port is set to <b>500</b> and cannot be changed.
Source Port	Set the source port number.
Enable NAT-T	Select to enable the NAT Traversal keepalive.
Inner IP Type	Select the IP type: <b>IPv4</b> or <b>IPv6</b> .


<b>Connectivity Settings</b>	<b>Description</b>
<i>Authentication</i>	
Authentication Method	By default, the authentication method is set to <b>Certificates</b> and cannot be changed.
CA Certificate	Select the <a href="#">CA certificate</a> from the drop-down list.
Certificates and Private Keys (zip)	<p>It allows you to upload an archive that contains the certificates and keys for the gNodeB range, using the <b>Upload</b> button. To remove the archive , select the <b>Clear</b> button.</p> <p>The <b>.key</b> and <b>.crt</b> files need to have the same name before extensions.</p>
Use Same Certificates and Private Key For All Tunnels	By default, this option is disabled. Select the toggle button to enable it.
<i>IKE Phase 1</i>	
Encryption Algorithm	<p>Select the encryption algorithm from the drop-down list.</p> <p>Default value: <b>AES-128-GCM-16</b>. Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b>.</p>
Hash Algorithm	<p>Select the hash algorithm from the drop-down list.</p> <p>Default value: <b>NONE</b>. Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b>.</p> <p>Restrictions:</p> <ul style="list-style-type: none"> <li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>• If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
DH Group	<p>Select an option from the drop-down list.</p> <p>Default value: <b>prime256v1(19)</b>. Available options: <b>prime256v1(19), secp384r1(20), secp521r1(21), prime192v1(25), secp224r1(26), x25519(31), x448(32)</b>.</p>
PRF Algorithm	<p>Select an option from the drop-down list.</p> <p>Default value: <b>HMAC-SHA256</b>. Available options: <b>HMAC-MD5, HMAC-SHA1, HMAC-SHA256, HMAC-SHA384, HMAC-SHA512</b>.</p>

<b>Connectivity Settings</b>	<b>Description</b>
<i>IKE Phase 2</i>	
Encryption Algorithm	Select the encryption algorithm from the drop-down list. Default value: <b>AES-128-GCM-16</b> . Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b> .
Hash Algorithm	Select the hash algorithm from the drop-down list. Default value: <b>NONE</b> . Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b> . Restrictions: <ul style="list-style-type: none"> <li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>• If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
<i>Identification</i>	
Local Identification Type	Select an option from the drop-down list. Default value: <b>ID_DER ASN1 DN</b> . Available options: <b>ID_IPV4_ADDR, ID_FQDN, ID_USER_FQDN, ID_IPV6_ADDR, ID_DER ASN1 DN, ID_KEY_ID</b> .
Local Identification Value	Set the value for this parameter. This field is mandatory if the <i>Local Identification Type</i> is set to: <b>ID_FQDN, ID_KEY_ID or ID_RFC822_ADDR</b> .
<i>Timers</i>	
Enable Rekey	By default, this option is disabled. Select the toggle button to enable it.
IKE Phase 1 (IKE) Lifetime (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).
IKE Phase 1 (IKE) Lifetime (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).
DPD Interval (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>

<b>Connectivity Settings</b>	<b>Description</b>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Emulated Router Address	Set the IPv4 or IPv6 address for the emulated router. This allows to hide all messages from the interface behind a MAC address.  NOTE     This option can be used only with IxStack stack.
Emulated Router Address Prefix Length	Set the IP network mask for the emulated router.
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i>
	<i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID..

## eNodeB

To configure one or more eNodeB ranges for a test, select **eNodeB** from the RAN panel.

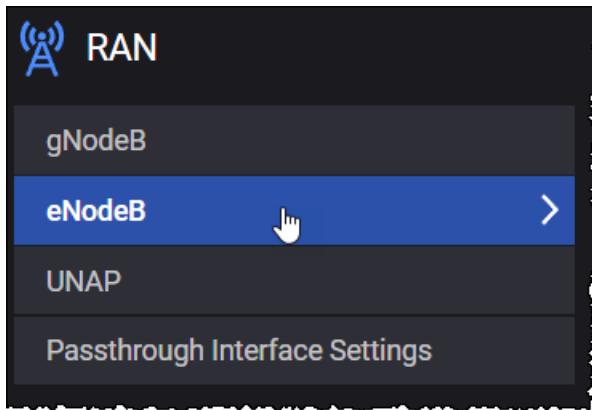

The following topics describe the eNodeB configuration settings:


<b>eNodeB Ranges panel</b>	<b>1039</b>
<b>eNodeB Range Settings</b>	<b>1043</b>
<b>eNodeB Node Settings</b>	<b>1043</b>
<b>S1-U Interface Settings</b>	<b>1045</b>
<b>S1-MME Interface Settings</b>	<b>1046</b>

### eNodeB Ranges panel

The **eNodeB Ranges** panel opens when you select the **eNodeB** node from the **RAN** pane. On the Ranges panel, you can perform the following task:


- Add a new eNodeB range to your test configuration.
- Open a eNodeB range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

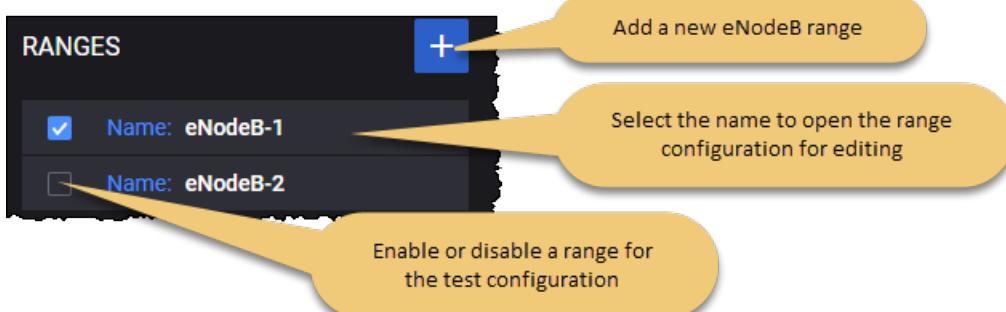


## Ranges Connectivity

The Ranges Connectivity section allows you to configure X2 links between eNodeB ranges for handovers. This section is displayed as a matrix of check-boxes, each selected check-box represents an X2 link between ranges on the line and the range on the column.

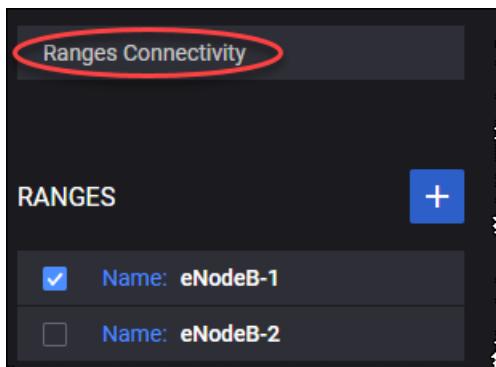

Note that to configure the X2 links between eNodeB ranges, you need to add at least two eNodeB ranges. If there are fewer than two eNodeB ranges, LoadCore displays the following message: "Two or more ranges are required to configure X2 links".

Due to the fact that the X2 links are bidirectional the Range Connectivity matrix is only half full of check-boxes.

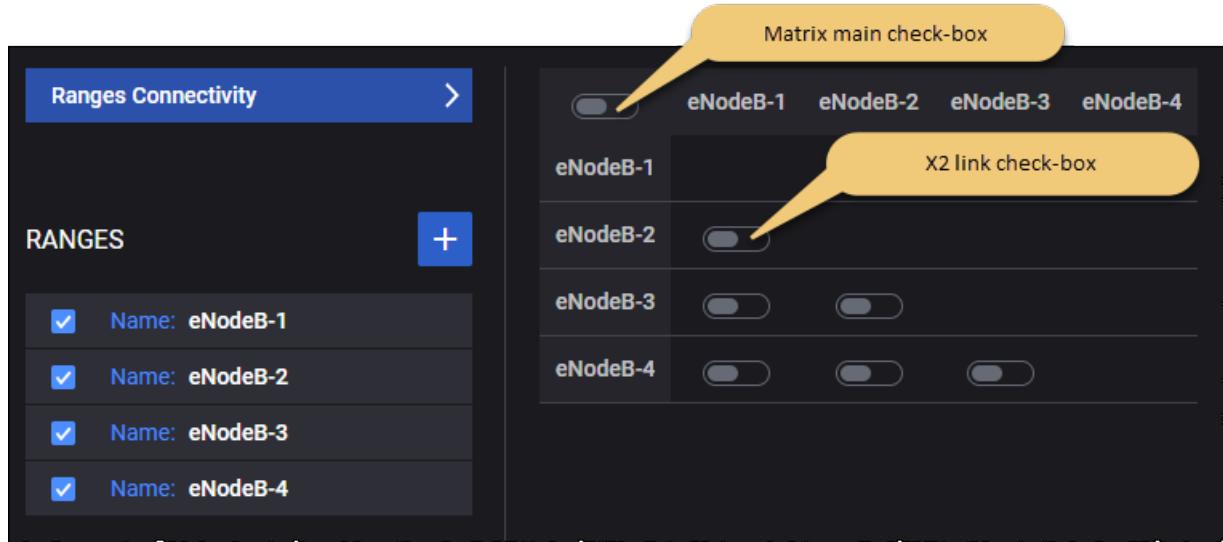

Each X2 link check-box can have one of the following states:

State	Description
Selected and blue color	An X2 link connection is established between enabled eNodeB ranges.
Selected and grey color	An X2 link connection is established between disabled eNodeB ranges.
Unselected	No X2 link connection between eNodeB ranges.

To see all the X2 links for a particular eNodeB range, you need to read the line of that range and then the column of that range.

If none of the links is marked as an X2 link then only S1 handovers will be performed.

Hovering over a specific eNodeB range from the Ranges Connectivity matrix highlights the row and displays more details about the connectivity/range status.

When a eNodeB range is disabled you are not able to select any X2 link for that specific eNodeB range.

Ranges Connectivity >		eNodeB-1	eNodeB-2	eNodeB-3	eNodeB-4	eNodeB-5	eNodeB-6
RANGES							
<input checked="" type="checkbox"/>	Name: eNodeB-1	<input type="checkbox"/>					
<input checked="" type="checkbox"/>	Name: eNodeB-2	<input type="checkbox"/>	<input type="checkbox"/>				
<input checked="" type="checkbox"/>	Name: eNodeB-3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
<input type="checkbox"/>	Name: eNodeB-4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
<input checked="" type="checkbox"/>	Name: eNodeB-5	<input type="checkbox"/>					
<input checked="" type="checkbox"/>	Name: eNodeB-6	<input type="checkbox"/>					

If there was an X2 link between two eNodeB ranges and now one of them is disabled, the check-box will become greyed out and cannot be unselected.

**NOTE**

None of the X2 links that are part of disabled eNodeB ranges are sent to the traffic agent.

**For example ...**

1. The disabled range eNodeB-4 had an X2 link with eNodeB-3. The selected check-box is greyed out. This X2 link will not be sent to the traffic agent.

Ranges Connectivity >		eNodeB-1	eNodeB-2	eNodeB-3	eNodeB-4	eNodeB-5	eNodeB-6
RANGES							
<input checked="" type="checkbox"/>	Name: eNodeB-1	<input type="checkbox"/>					
<input checked="" type="checkbox"/>	Name: eNodeB-2	<input type="checkbox"/>					
<input checked="" type="checkbox"/>	Name: eNodeB-3	<input type="checkbox"/>	<input type="checkbox"/>				
<input type="checkbox"/>	Name: eNodeB-4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
<input checked="" type="checkbox"/>	Name: eNodeB-5	<input type="checkbox"/>					
<input checked="" type="checkbox"/>	Name: eNodeB-6	<input type="checkbox"/>					

2. The eNodeB-3 range was enabled on previous step and there were selected X2 links between eNodeB-3/eNodeB-4 and eNodeB-3/eNodeB-6. Due to the fact that eNodeB-3 is now disabled, the check-box for X2 links between eNodeB-3 and eNodeB-6 have become greyed out.

The screenshot shows the 'Ranges Connectivity' interface. On the left, there's a sidebar titled 'RANGES' with a '+' button. Below it is a list of eNodeB names with checkboxes: eNodeB-1 (checked), eNodeB-2 (checked), eNodeB-3 (unchecked), eNodeB-4 (unchecked), eNodeB-5 (checked), eNodeB-6 (checked), and eNodeB-7 (checked). To the right is a 7x7 matrix of checkboxes representing X2 links between eNodeBs. The first column header 'eNodeB-1' has a main checkbox above it, which is unchecked. The matrix cells show various combinations of checked and unchecked states across the rows and columns.

The first cell of matrix contains a main check-box that displays the state of the matrix and perform operations.

State	Description	Operation
Selected	All connected.	If the main check-box is Selected, you can undo the selection to change the state to Unselected and all X2 links from the connectivity matrix will become unselected (none connected).
Unselected	None connected.	If the main check-box is Unselected, you can select it to change the state to Checked and all X2 links from the connectivity matrix will become selected (all connected).

When the main matrix check-box is selected all the X2 link check-boxes from the matrix become selected.

This screenshot is similar to the one above, but the main check-box at the top left is now selected (blue). The matrix cells are also blue, indicating that all X2 links have been selected. The sidebar and list of eNodeB ranges remain the same as in the previous screenshot.

Even the X2 link check-boxes for disabled eNodeB ranges are selected since the X2 links for disabled eNodeB ranges are not sent to the traffic agent. This way, when the disabled eNodeB range is

enabled, you will not have to manually select the X2 link check-boxes for that particular eNodeB range.

## eNodeB Range Settings

Each eNodeB range is identified by a unique name. You can add and delete ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each eNodeB range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	The number of eNodeBs in the range.
<i>Range Settings:</i>	
Node Settings	Each eNodeB range requires the configuration of an associated set of Node Settings, which are described in <a href="#">eNodeB node settings</a> .
S1-U Interface Settings	Each eNodeB range requires the configuration of an associated set of S1-U Interface Settings, which are described in <a href="#">S1-U interface settings</a> .
S1-MME Interface Settings	Each eNodeB range requires the configuration of an associated set of S1 Interface Settings, which are described in <a href="#">S1-MME interface settings</a> .

## eNodeB Node Settings

Each eNodeB instance (that is, each range) is identified by the following node settings.

Setting	Description
Name	The name of this eNodeB range. Multiple eNodeB instances (ranges) may be deployed in the test network. Each eNodeB instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	The PLMN MCC for this eNodeB range.
PLMN MNC	The PLMN MNC for this eNodeB range.
Tracking area code	The Tracking Area Code to use for the nodes in this range.
eNodeB ID	The eNodeB ID uniquely identifies an eNodeB within a Public Land Mobile Network (PLMN).

Setting	Description
	When the eNodeB <i>Range Count</i> setting is greater than 1, LoadCore increments the <i>eNodeB ID</i> setting for each eNodeB.
eNodeB ID Length	The number of bits to use for the eNodeB ID. It can have either 20 bits or 28 bits.
Cell ID	The Cell Identifier for this eNodeB range. The Cell Identifier is an 8-bit value that identifies a cell within the eNodeB. The same Cell Identifier is used for each eNodeB defined in a range.
Connection Timeout (ms)	The S1AP connection timeout.
Perform Load Balancing	Select the option to enable it. Performs load balancing between MMEs from the same MME group for initial attach.
Dynamic RAN UE NGAP/S1AP ID	If enabled, it will allocate dynamic RAN UE NGAP/S1AP ID values at Service Request.

The following parameters are required under the **Public Warning System** pane:

Setting	Description
Public Warning System	Select the check box to enable this option.
PWS Restart Timer (s)	Duration in seconds after which PWS Restart Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38.413, 8.9.3 PWS Restart Indication</i> . Values should be in range 0-86400. Default value: <b>0</b> .
PWS Failure Timer (s)	Duration in seconds after which PWS Failure Indication is sent. The timer starts after the PWS Write-Replace message exchange. <b>0</b> indicates that no message is sent. For more details, refer to <i>TS 38.413, 8.9.4 PWS Failure Indication</i> . Values should be in range 0-86400. Default value: <b>0</b> .

**NOTE**

If the *Public Warning System* option is enabled and both PWS Restart and PWS Failure procedures are configured to be initiated (non-zero timers), the timers should be different.

## S1-U Interface Settings

The **S1-U Interface Settings** should be enabled and configured when the test is simulating the MME and the DUT is an SGW. When LoadCore simulates the MME and the SGW, these settings should be disabled.

In 4G networks, S1-U is the reference point between the LTE eNodeB and the LTE S-GW. It uses the GTP-U protocol running on top of UDP to provides best-effort data delivery of user datagrams. One GTP tunnel is established for each radio bearer to carry user traffic between the eNodeB and the selected SGW.

### Connectivity Settings

**NOTE** The following connectivity settings are available in LoadCore Web interface, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Emulated Router Address	Set the IPv4 or IPv6 address for the emulated router. This allows to hide all messages from the interface behind a MAC address. <p><b>NOTE</b> This option can be used only with IxStack stack.</p>
Emulated Router Address Prefix Length	Set the IP network mask for the emulated router.
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.

<b>Connectivity Settings</b>	<b>Description</b>
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## S1-MME Interface Settings

The **S1-MME Interface Settings** should be enabled and configured when the test is not simulating the MME. When LoadCore simulates the MME, these settings should be disabled.

In 4G networks, S1 is the interface from the LTE access network (E-UTRAN) to the core network (EPC). It supports a multi-point connection among MMEs/SGWs and eNBs, and comprises two reference points:

- S1-MME: Reference point for the control plane protocol between E-UTRAN and MME.
- S1-U: Reference point between E-UTRAN and SGW for the per bearer user plane tunneling and inter-eNodeB path switching during handover.

## S1-MME Interface Settings


In order to run a test using the S1 interface, the eNodeB range must be enabled and configured with a Peer MME.

<b>S1 Interface Settings</b>	<b>Description</b>
Peer MME	Select the name of the peer MME node from the drop-down list.
SCTP Source port	The source SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.
IP	Select the IP address to open the IP configuration panel for editing.

S1 Interface Settings	Description
IP Address	The IP address in your test network to use for traffic on this interface. If the <i>Range Count</i> is greater than 1, then this IP Address value is assigned to the first range and is incremented by 1 for each additional range.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## UNAP

To configure one or more UNAP ranges for a test, select **UNAP** from the RAN panel.

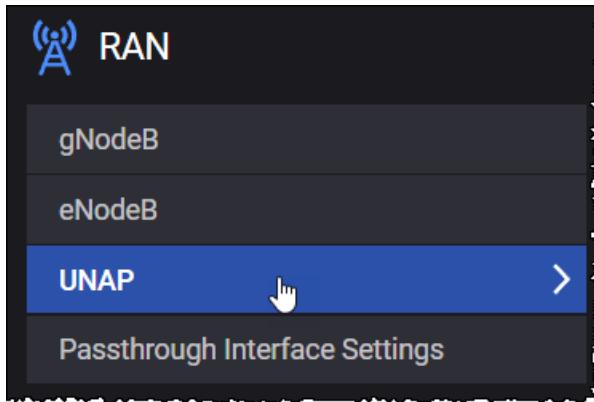

The following topics describe the UNAP configuration settings:


- |                            |             |
|----------------------------|-------------|
| <b>UNAP Ranges panel</b>   | <b>1048</b> |
| <b>UNAP Range Settings</b> | <b>1048</b> |

## UNAP Ranges panel

The **UNAP Ranges** panel opens when you select the **UNAP** node from the **RAN** pane. On the Ranges panel, you can perform the following task:

- Add a new UNAP range to your test configuration.
- Open a UNAP range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

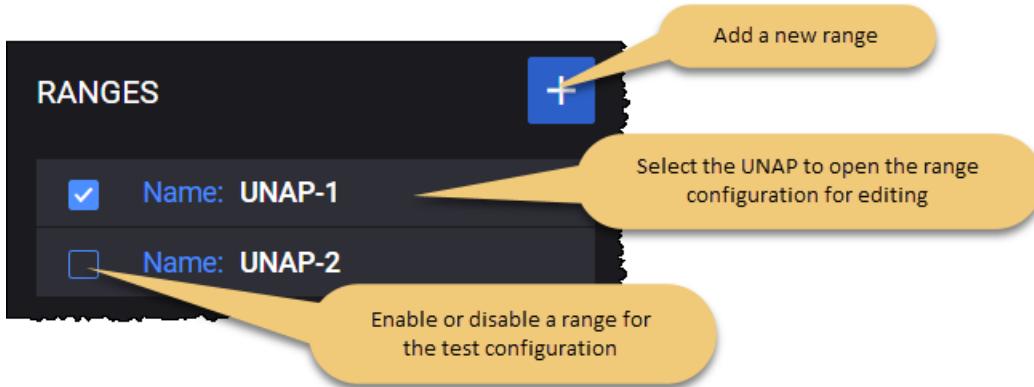

## UNAP Range Settings

Each UNAP range is identified by a unique name. You can add and delete ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each UNAP range.

Setting	Description
<i>Range:</i>	

Setting	Description
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	Enter the number of simulated UNAPs required for the range. Default value is <b>1</b> .
<i>Range Settings:</i>	
Node Settings	<i>Each UNAP range requires the configuration of an associated set of Node Settings.</i>
Name	The name of this UNAP range. Multiple UNAP instances (ranges) may be deployed in the test network. Each UNAP instance is uniquely identified by its name. You can accept the value provided by LoadCore or overwrite it with your own value.
UNAP ID	Provide the UNAP identifier value.
UNAP ID Increment	Set the UNAP identifier increment value.
WLAN IP Pool	<i>Each UNAP range requires connectivity settings configuration, which is described in the <a href="#">Connectivity Settings table</a>.</i>


## Connectivity Settings

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
IP Address Increment	Set the IP address increment value.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.

<b>Connectivity Settings</b>	<b>Description</b>
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 0.0.0.1.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## Passthrough interface settings

To configure the passthrough interface settings, select **Passthrough Interface Settings** from the RAN panel.

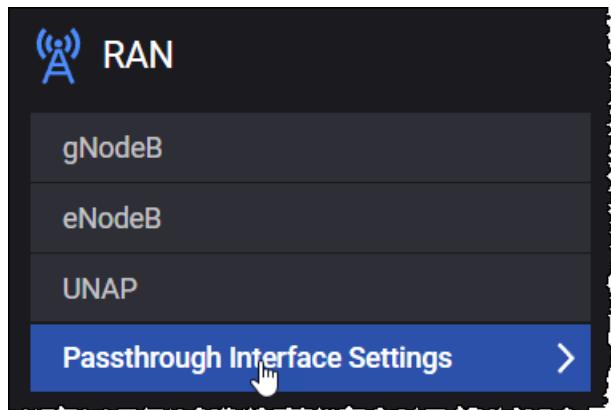

The configuration of the passthrough interface is required when passthrough is enabled in the UE settings. This interface will wait for an external traffic source.

The following settings are required for the passthrough interface configuration.

Connectivity Settings	Description
Stack Type	Select the stack type from the drop-down list. Available options: <b>Single Stack</b> or <b>Dual Stack</b> .
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address assigned as the gateway address for the external traffic source.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
Secondary IP	Select the IP address to open the secondary IP configuration panel for editing. This panel is available only when the stack type is set to <b>Dual Stack</b> .
IP Address	The IP address assigned as the gateway address for the external traffic source.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway	The IP address assigned as gateway address.

<b>Connectivity Settings</b>	<b>Description</b>
Address	
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## SEG/N3IWF & Core configuration settings

The configuration settings are described in the topics listed below.

### Topics:

<b>Core settings</b> .....	<b>1053</b>
<b>N6/SGi interface settings</b> .....	<b>1054</b>
<b>Core Ranges settings</b> .....	<b>1055</b>
AMF Ranges configuration settings .....	1056
UPF Ranges configuration settings .....	1063
MME Ranges configuration settings .....	1065
SGW Ranges configuration settings .....	1072
<b>SEG Ranges configuration settings</b> .....	<b>1074</b>

SEG interface settings .....	1078
<b>N3IWF Ranges configuration settings .....</b>	<b>1079</b>
N3IWF interface settings .....	1086

If multiple agents are assigned to the SEG/N3IWF topology, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the SEG/N3IWF node.

For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range3 on agent1 and agent2.

## Core settings

To configure the core settings, select **Core Settings** from the CoreSim panel.

The following table describes the parameters required for core settings configuration.

Setting	Description
Home Network Private Key	The Home Network Private key that is used for subscriber privacy.
Routing Indicators	<p><i>The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.</i></p> <p><i>You can add as many Routing Indicators as necessary to support your test objectives.</i></p>
	Select the <b>Add Routing Indicator</b> button to add a Routing Indicator.
	Select the <b>Delete</b> button to remove the routing indicator.
PCRF Node Settings	<p><b>NOTE</b> <i>These settings are available only when Core is set as DUT (for more details, refer to <a href="#">Core Ranges settings</a>.)</i></p> <p><i>You can enable or disable the PCRF Node Settings, as required by your test configuration.</i></p>
Origin Host Prefix	Set the origin host prefix. Default value: <b>host</b> .
Origin Realm	Set the origin realm. Default value: <b>keysight.com</b> .
Rx Interface Settings	<p><i>The Rx Interface Settings panel is available only when the <a href="#">PCRF Node Settings</a> panel is enabled.</i></p> <p><i>The Rx interface settings are described <a href="#">below</a>.</i></p>

## Rx Interface Settings

Connectivity Settings	Description
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Port	The port number to use for this interface communications. The default is port 3868, but you can choose a different port number.

## N6/SGi interface settings

N6 is the interface between the UPF session anchor and the DN. It is the interconnection point at which user plane packet encapsulation and decapsulation is performed.

The following **Connectivity Settings** enable the necessary N6/SGi connectivity and service interaction.

Connectivity Settings	Description
Stack Type	Select the stack type from the drop-down list. Available options: <b>Single Stack</b> or <b>Dual Stack</b> .
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>Secondary IP</i>	Select the IP address to open the secondary IP configuration panel for editing.

<b>Connectivity Settings</b>	<b>Description</b>
	<i>This panel is available only when the stack type is set to <b>Dual Stack</b>.</i>
IP Address	The IP address assigned as the gateway address for the external traffic source.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## Core Ranges settings

When you select the Core Ranges pane ,LoadCore opens the Core Range panel, from which you can:

- Designate the range as a **Device Under Test**.
- Select the corresponding pane to configure the core range and connectivity settings:
  - [AMF Ranges](#)
  - [UPF Ranges](#)

- [MME Ranges](#)
- [SGW Ranges](#)


## AMF Ranges configuration settings

To access and configure the AMF ranges settings, select **AMF Ranges** from the Core Ranges panel.

You can perform the following tasks from the **Ranges** panel:

- Add a new AMF range to your test configuration.
- Open an AMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

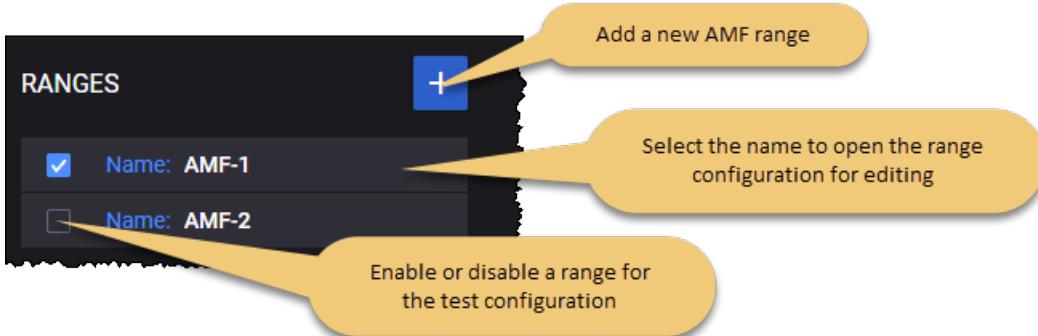

You add and select AMF ranges from the Ranges panel. When you select the name of an AMF, LoadCore opens the **Range** panel, from which you can:

- Delete the AMF range from the test configuration.
- Configure the node and connectivity settings for the AMF range.

### AMF range controls and settings

Each AMF range is identified by a unique name. You can add and delete AMF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each AMF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
Node Settings	Each AMF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">AMF node settings</a> .
N2 Interface	Each AMF range requires the configuration of N2 interface settings, through which a AMF instance interacts with RAN in a 5G network. These settings are described in

Setting	Description
Settings	<a href="#">AMF N2 interface settings.</a>

## AMF node settings

Each AMF range includes a set of Node Settings.

### Node Settings

Each AMF instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	<p>Multiple AMF instances may be deployed in the 5G network.</p> <p>Each AMF instance is uniquely identified by an <i>Instance ID</i>. You can accept the value provided by LoadCore or overwrite it with your own value.</p>
Name	<p>The name uniquely identifies each AMF instance. You can accept the value provided by LoadCore or overwrite it with your own value.</p>
PLMN MCC	<p>The PLMN MCC for this AMF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this AMF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Region ID	<p>An AMF Region consists of one or multiple AMF Sets.</p> <p>The AMF Region ID to use for this simulated AMF node. This ID identifies the region in which the node resides. The AMF Region ID addresses the case that there are more AMFs in the network than the number of AMFs that can be supported by AMF Set ID and AMF Pointer. It allows operators to re-use the same AMF Set IDs and AMF Pointers in different regions.</p>

<b>Setting</b>	<b>Description</b>
Set ID	An AMF Set consists of some AMFs that serve a given area and Network Slice. Multiple AMF Sets may be defined per AMF Region and Network Slice(s). The AMF Set ID to use for this simulated AMF node. The Set ID uniquely identifies the AMF Set within the AMF Region.
Pointer	The AMF Pointer to use for this simulated AMF node. The AMF Pointer identifies one or more AMFs within the AMF Set.
Relative Capacity	Set the relative capacity value.
Ciphering Algorithm	Allows to select the supported 5G ciphering algorithm: <ul style="list-style-type: none"> <li>• NEA0 - Null ciphering algorithm</li> <li>• NEA1 - 128-bit SNOW 3G based algorithm</li> <li>• NEA2 - 128-bit AES based algorithm</li> <li>• NEA3 - 128-bit ZUC based algorithm</li> </ul>
Integrity Algorithm	Allows to select the supported 5G integrity protection algorithm: <ul style="list-style-type: none"> <li>• NIA0 - Null Integrity Protection algorithm</li> <li>• NIA1 - 128-bit SNOW 3G based algorithm</li> <li>• NIA2 - 128-bit AES based algorithm</li> <li>• NIA3 - 128-bit ZUC based algorithm</li> </ul>
Request N2 SM Information	Enable this option to request N2 SM Information again instead of using the existing one.
Prefer AMF Change	Enable this option to change the AMF for an N2 handover even when the target RAN(T-RAN) is connected to the serving AMF.
Skip MT SMS	If enabled, it will skip the initiation of the MT SMS procedure when the MO SMS procedure ends.

*T3512: Select the check box to open T3512 Settings and configure the T3512 timer.*

**NOTE** *If disabled, a value of 50 minutes (Value 5 X Unit 10 minutes) is sent for T3512.*

Value	Set the value for this parameter. The accepted values are between 0-31.
Unit	Select the unit size for this parameter from the drop-down list. The available options are: 2s, 30s, 1m, 10m, 1h, 10h and Deactivated.
NSSAI	<i>These settings are described <a href="#">below</a>.</i>
TAI	<i>These settings are described <a href="#">below</a>.</i>
Public Warning	<i>These settings are described <a href="#">below</a>.</i>

<b>Setting</b>	<b>Description</b>
<i>System</i>	
<i>Emergency Settings</i>	<i>These settings are described <a href="#">below</a>.</i>

## NSSAI

The following table describes the configuration settings that are required for NSSAI.

<b>Setting</b>	<b>Description</b>												
<i>NSSAI:</i>													
 +	Select the Add NSSAI button to add a new NSSAI to your test configuration.												
<i>NSSAI settings:</i>													
	Select the Delete NSSAI button to delete this NSSAI from your test configuration.												
SST	<p>The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:</p> <table> <thead> <tr> <th><b>SST</b></th> <th><b>Value</b></th> <th><b>Suitable for handling:</b></th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> <td>5G enhanced Mobile Broadband</td> </tr> <tr> <td>URLCC</td> <td>2</td> <td>ultra-reliable low-latency communications</td> </tr> <tr> <td>MIoT</td> <td>3</td> <td>massive IoT</td> </tr> </tbody> </table>	<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>	eMBB	1	5G enhanced Mobile Broadband	URLCC	2	ultra-reliable low-latency communications	MIoT	3	massive IoT
<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>											
eMBB	1	5G enhanced Mobile Broadband											
URLCC	2	ultra-reliable low-latency communications											
MIoT	3	massive IoT											
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.												

## TAI

The following table describes the configuration settings that are required for TAI.

<b>Setting</b>	<b>Description</b>
<i>TAI:</i>	
 +	Select the Add TAI button to add a new TAI (Tracking Area Identity) to your test configuration.
<i>TAI settings:</i>	

<b>Setting</b>	<b>Description</b>
	Select the Delete TAI button to delete this TAI from your test configuration.
<b>PLMN ID:</b> Set the values for the PLMN identifier.	
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the TAI.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the TAI.
<b>TAC:</b>	
	Select the Add TAC button to add a new TAC (Tracking Area Code) to your test configuration.
<b>Settings:</b>	
	Select the Delete TAC button to delete this TAC from your test configuration.
TAC	The Tracking Area Code (TAC) used in the construction of the TAI.

### Public Warning System

The following table describes the configuration settings that are required for public warning system.

<b>Setting</b>	<b>Description</b>
Message ID	Set the public warning system message ID.
Repetition Period	Set the public warning system message repetition period.
Number of Broadcasts Requested	Set the public warning system message number of requested broadcasts.
Time to Wait Before Triggering PWS after NG Setup (s)	Set the number of seconds to wait before triggering PWS after NG setup.
PWS Cancel Timer (s)	Duration in seconds after which PWS cancel warning is sent. 0 indicates no cancellation.
Write Replace Warning Area List	Select one of the drop-down options to configure the areas where the warning message needs to be broadcast: <ul style="list-style-type: none"> <li>• <b>None</b> (default), the Warning Area List IE will be omitted.</li> <li>• <b>TAI List</b>- this enables the <b>TAI List</b> parameter, to add the TAIs that will receive the warnings; refer to <a href="#">TAI</a> table above for the configuration of Tracking Area Identities required.</li> <li>• <b>NR Cell ID List</b>- this enables the <b>NR Cell ID List</b> parameter, to add</li> </ul>

<b>Setting</b>	<b>Description</b>
	the NR Cell IDs that will receive the warnings; refer to <a href="#">NR Cell ID List</a> table below for further configuration.
Cancel Warning Area List	<p>Select one of the drop-down options to configure the areas where the warning message needs to be canceled:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default), the Warning Area List IE will be omitted.</li> <li>• <b>TAI List</b>- this enables the <b>TAI List</b> parameter, to add the TAIs that will receive the PWS cancel; refer to <a href="#">TAI</a> table above for the configuration of Tracking Area Identities required.</li> <li>• <b>NR Cell ID List</b>- this enables the <b>NR Cell ID List</b> parameter, to add the NR Cell IDs that receive the PWS cancel; refer to <a href="#">NR Cell ID List</a> table below for further configuration.</li> </ul>
Popup	If enabled, it will activate a pop-up on the UE when receiving an ETWS message.
Emergency User Alert	If enabled, it will activate the emergency user alert on the UE when receiving an ETWS message.
Data coding scheme	Select an option from the drop-down to set the data coding scheme for PWS/ETWS messages.
Warning Message Contents	Add the content of the warning message that will be broadcasted to the UEs.

### NR Cell ID List

The following table describes the configuration settings that are required for NR Cell ID.

<b>Setting</b>	<b>Description</b>
<i>NR Cell ID:</i>	
	Select the Add NR Cell ID button to add a new UE ID to your test configuration.
<i>NR Cell ID settings:</i>	
	Select the Delete NR Cell ID button to delete this UE ID from your test configuration.
PLMN ID: Set the values for the PLMN identifier.	
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the NR Cell ID.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the NR Cell ID.

Setting	Description
NR Cell ID	The cell identifier of the UE.

### Emergency Settings

The following table describes the emergency settings configuration.

Setting	Description
Authentication Behaviour	<p>The authentication procedure behaviour during an Emergency Registration.</p> <p>Select an option from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Normal Authentication (default value)</li> <li>• Allow Authentication Failure</li> <li>• Skip Authentication</li> </ul>
Emergency Services Support Value	<p>Select an option from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Not Supported (default value)</li> <li>• In NR connected to 5GC only</li> <li>• In EUTRA connected to 5GC only</li> <li>• In NR connected to 5GC and EUTRA connected to 5GC</li> </ul>
Emergency Services Fallback Support Value	<p>Select an option from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Not Supported (default value)</li> <li>• In NR connected to 5GC only</li> <li>• In EUTRA connected to 5GC only</li> <li>• In NR connected to 5GC and EUTRA connected to 5GC</li> </ul>

### AMF N2 interface settings

N2 is the service-based interface through which a AMF instance interacts with RAN in a 5G network.

The following **Connectivity Settings** enable the necessary N2 connectivity and service interaction.

Connectivity Settings	Description
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway	The value to use when incrementing the Gateway address (starting with the

<b>Connectivity Settings</b>	<b>Description</b>
Increment	Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.


## UPF Ranges configuration settings

To access and configure the UPF ranges settings, select **UPF Ranges** from the Core Ranges panel.

You can perform the following tasks from the **Ranges** panel:

- Add a new UPF range to your test configuration.
- Open a UPF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

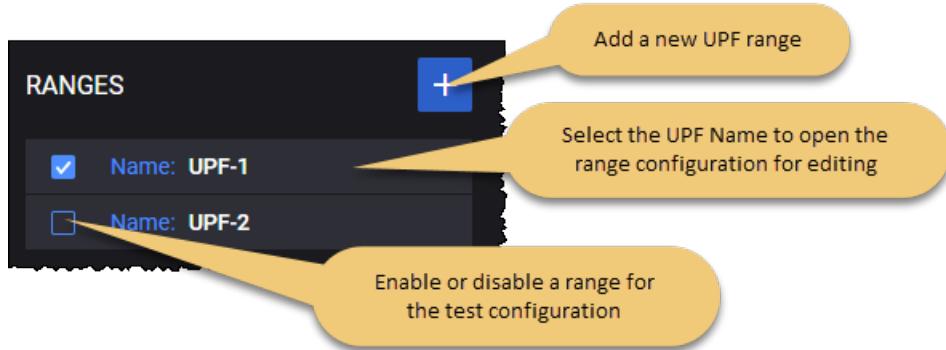

You add and select UPF ranges from the Ranges panel. When you select an UPF range *Name*, LoadCore opens the **Range** panel, from which you can:

- Delete the UPF range from the test configuration.
- Modify the UPF range name.
- Configure interface settings for the UPF range.

The following table describes the **Range Settings** that you configure for each UPF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Name	The name of the UPF range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
<i>Range Settings:</i>	
N3 Interface Settings	N3 is the interface between the RAN and the UPF. These interface settings are described in <a href="#">UPF N3 interface settings</a> .

## UPF N3 interface settings

The following configuration settings are required by each UPF N3 range.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.

<b>Connectivity Settings</b>	<b>Description</b>
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## MME Ranges configuration settings

To access and configure the MME ranges settings, select **MME Ranges** from the Core Ranges panel.

You can perform the following tasks from the **Ranges** panel:

- Add a new MME range to your test configuration.
- Open an MME range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

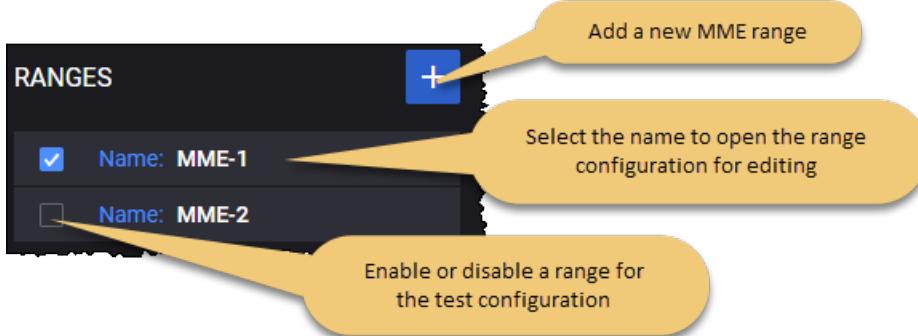

You add and select MME ranges from the MME Ranges panel. When you select the name of an MME , LoadCore opens the **Range** panel, from which you can:

- Delete the MME range from the test configuration.
- Configure the node and connectivity settings for the MME range.

### MME range controls and settings

Each MME range is identified by a unique name. You can add and delete MME ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each MME range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
Node Settings	Each MME range requires the configuration of an associated set of Node Settings, which are described in <a href="#">MME node settings</a> .
S1 Interface Settings	These settings are described in <a href="#">MME S1 interface settings</a> .

## MME node settings

Each MME range includes a set of Node Settings.

### Node Settings

Each MME instance (that is, each range) is identified by the following node settings.

Setting	Description
<i>Node Settings:</i>	
Name	The name uniquely identifies each MME instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Group ID	Set the MME group ID value.
Code	Set the MME code value.
PLMN MCC	<p>The PLMN MCC for this MME range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this MME range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Ciphering Algorithm	<p>Allows to select the supported 5G ciphering algorithm:</p> <ul style="list-style-type: none"> <li>• <b>EEA0</b> - Null ciphering algorithm</li> <li>• <b>EEA1</b> - 128-bit SNOW 3G based algorithm</li> <li>• <b>EEA2</b> - 128-bit AES based algorithm</li> <li>• <b>EEA3</b> - 128-bit ZUC based algorithm</li> </ul>
Integrity Algorithm	<p>Allows to select the supported 5G integrity protection algorithm:</p> <ul style="list-style-type: none"> <li>• <b>EIA0</b> - Null Integrity Protection algorithm</li> <li>• <b>EIA1</b> - 128-bit SNOW 3G based algorithm</li> </ul>

<b>Setting</b>	<b>Description</b>
	<ul style="list-style-type: none"> <li>• <b>EIA2</b> - 128-bit AES based algorithm</li> <li>• <b>EIA3</b> - 128-bit ZUC based algorithm</li> </ul>
Relative Capacity	Set the relative capacity value.
<i>Public Warning System</i>	<i>Select the check box to enable this option.</i>
Message ID	Set the public warning system message ID. Values should be in range 0-65535. Default value: <b>4352</b> .
Repetition Period	Set the public warning system message repetition period. Values should be in range 1-131071. Default value: <b>1</b> .
Number of Broadcasts Requested	Set the public warning system message number of requested broadcasts. Values should be in range 0-65535. Default value: <b>1</b> .
Time to Wait Before Triggering PWS after NG Setup (s)	Set the number of seconds to wait before triggering PWS after S1 setup. Values should be in range 0-86400. Default value: <b>1</b> .
PWS Kill Timer (s)	Duration in seconds after which PWS Kill Request is sent. Values should be in range 0-86400. Default value: <b>0</b> .
Write Replace Warning Area List	Select one of the drop-down options to configure the areas where the warning message needs to be broadcast: <ul style="list-style-type: none"> <li>• <b>None</b> (default), the Warning Area List IE will be omitted.</li> <li>• <b>TAI List</b>- this enables the <b>TAI List</b> parameter, to add the TAIs that will receive the warnings; refer to <a href="#">TAI</a> table below for the configuration of Tracking Area Identities required.</li> <li>• <b>Cell ID List</b>- this enables the <b>Cell ID List</b> parameter, to add the Cell IDs that will receive the warnings; refer to <a href="#">Cell ID List</a> table below for further configuration.</li> </ul>
Kill Warning Area List	Select one of the drop-down options to configure the areas where the warning message needs to be killed: <ul style="list-style-type: none"> <li>• <b>None</b> (default), the Warning Area List IE will be omitted.</li> <li>• <b>TAI List</b>- this enables the <b>TAI List</b> parameter, to add the TAIs that will receive the PWS kill; refer to <a href="#">TAI</a> table below for the configuration of Tracking Area Identities required.</li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Cell ID List</b>- this enables the <b>Cell ID List</b> parameter, to add the Cell IDs that will receive the PWS kill; refer to <a href="#">Cell ID List</a> table below for further configuration.</li> </ul>
Popup	If enabled, it will activate a pop-up on the UE when receiving an ETWS message.
Emergency User Alert	If enabled, it will activate the emergency user alert on the UE when receiving an ETWS message.
Data coding scheme	Select an option from the drop-down to set the data coding scheme for PWS/ETWS messages.
Warning Message Contents	Add the content of the warning message that will be broadcasted to the UEs.
T3412	<p><i>Select the check box to enable this option.</i></p> <p><b>NOTE</b> <i>If enabled, it allows the configuration of the T3412 timer. If disabled, a value of 50 minutes (Value 5 x Unit 10 minutes) is sent for T3412.</i></p>
Value	Set the value for this parameter. Accepted values are between <b>0</b> and <b>31</b> .
Unit	Select from the drop-down the unit to use for T3412 timer calculation. Supported values are: <ul style="list-style-type: none"> <li>if <i>Support Extended Timer</i> is <b>enabled</b>, units are <b>2 seconds</b>, <b>30 seconds</b>, <b>1 minute</b>, <b>10 minutes</b>, <b>1 hour</b>, <b>10 hours</b>, <b>Deactivated</b>.</li> <li>if <i>Support Extended Timer</i> is <b>disabled</b>, units are <b>2 seconds</b>, <b>1 minute</b>, <b>10 hours</b>, <b>Deactivated</b>.</li> </ul>
Support Extended Time	If enabled (default), it sets the T3412 extended value as described in the TS 24.301, chapter 8.2.1.12.
Emergency Settings	<i>This option allows you to configure the Emergency support and MME behavior for Authentication procedure.</i>
Allow Emergency Attach	This parameter is enabled by default; the MME will allow the UEs to use emergency attach.
Authentication Behaviour	Select one of the following behaviors to apply during Emergency Registration: <ul style="list-style-type: none"> <li>• <b>Normal Authentication</b></li> <li>• <b>Allow Authentication Failure</b></li> <li>• <b>Skip Authentication</b></li> </ul>

**TAI**

The following table describes the configuration settings that are required for TAI.

<b>Setting</b>	<b>Description</b>
<i>TAI:</i>	
	Select the Add TAI button to add a new TAI (Tracking Area Identity) to your test configuration.
<i>TAI settings:</i>	
	Select the Delete TAI button to delete this TAI from your test configuration.
<i>PLMN ID: Set the values for the PLMN identifier.</i>	
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the TAI.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the TAI.
<i>TAC:</i>	
	Select the Add TAC button to add a new TAC (Tracking Area Code) to your test configuration.
<i>Settings:</i>	
	Select the Delete TAC button to delete this TAC from your test configuration.
TAC	The Tracking Area Code (TAC) used in the construction of the TAI.

## Cell ID List

The following table describes the configuration settings that are required for Cell ID.

<b>Setting</b>	<b>Description</b>
<i>Cell ID:</i>	
	Select the Add Cell ID button to add a new UE ID to your test configuration.
<i>Cell ID settings:</i>	
	Select the Delete Cell ID button to delete the UE ID from your test configuration.
<i>PLMN ID: Set the values for the PLMN identifier.</i>	
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the Cell ID.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the Cell

Setting	Description
	ID.
Cell ID	The cell identifier of the UE.

## MME S1 interface settings

The following **Connectivity Settings** enable the necessary S1 connectivity and service interaction.

S1 Interface Settings	Description
Local STCP Port	Set the local STCP port number.
<i>Connectivity Settings</i>	
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.

S1 Interface Settings	Description
MAC	Select the MAC address to open the MAC configuration panel for editing.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## SGW Ranges configuration settings

To access and configure the SGW ranges settings, select **SGW Ranges** from the Core Ranges panel.

You can perform the following tasks from the **SGW Ranges** panel:

- Add a new SGW range to your test configuration.
- Open a SGW range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

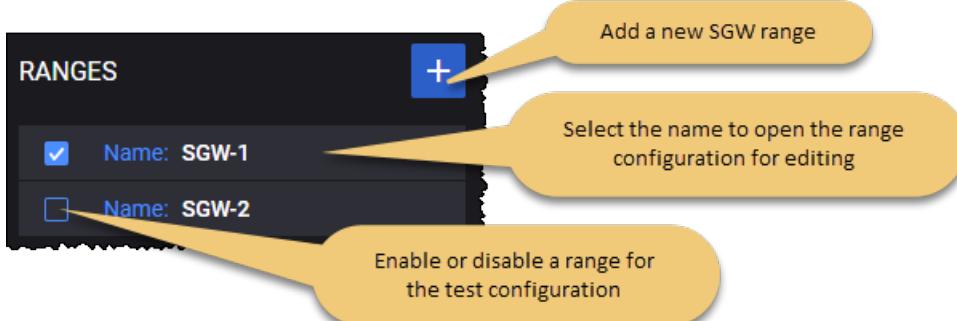

You add and select SGW ranges from the Ranges panel. When you select the name of a SGW, LoadCore opens the **Range** panel, from which you can:

- Delete the SGW range from the test configuration.
- Modify the SGW range name.
- Configure the range and connectivity settings for the SGW range.

## SGW range controls and settings

Each SGW range is identified by a unique name. You can add and delete SGW ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each SGW range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Name	The name uniquely identifies each SGW instance. You can accept the value provided by LoadCore or overwrite it with your own value.
<i>Range Settings:</i>	
UDP Rx Buffer (bytes)	Size of receive buffers for UDP sockets: <ul style="list-style-type: none"> <li>• minimum: 212992 #The default Linux buffer size</li> <li>• maximum: 134217728 #128MB</li> <li>• default: 12582912 #12MB</li> </ul>
UDP Tx Buffer (bytes)	Size of transmit buffers for UDP sockets: <ul style="list-style-type: none"> <li>• minimum: 212992 # The default Linux buffer size</li> <li>• maximum: 134217728 #128MB</li> <li>• default: 2097152 #2MB</li> </ul>
S1-u Interface Settings	These settings are described in <a href="#">SGW S1-u interface settings</a> .

## SGW S1-u interface settings

The following **Connectivity Settings** enable the necessary S1-u connectivity and service interaction.

S1-u Interface Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address in your test network to use for traffic on this interface.

S1-u Interface Settings	Description
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## SEG Ranges configuration settings

To access and configure the SEG ranges settings, select **SEG Ranges** from the CoreSim panel.

You can perform the following tasks from the **SEG Ranges** panel:

- Add a new SEG range to your test configuration.
- Open a SEG range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

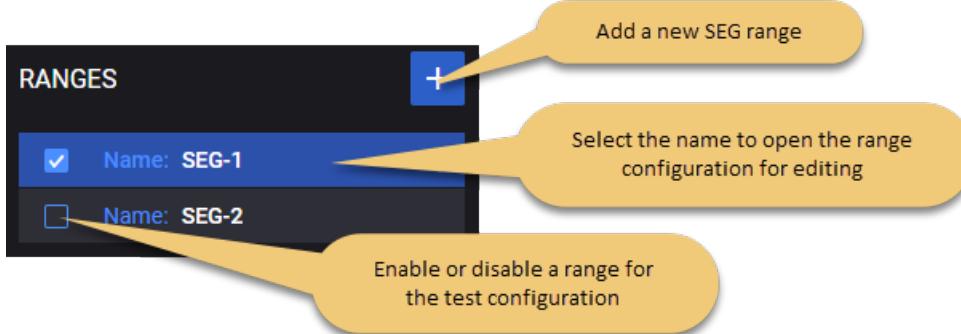

You add and select SEG ranges from the SEG Ranges panel. When you select the name of a SEG , LoadCore opens the **Range** panel, from which you can:

- Delete the SEG range from the test configuration.
- Designate the range as a **Device Under Test**.
- Modify the SEG range name.
- Configure the range and connectivity settings for the SEG range.

### SEG range controls and settings

Each SEG range is identified by a unique name. You can add and delete SEG ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each SEG range.

Setting	Description
<i>Range:</i>	
Device Under Test	Enable this option if your SEG is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SEG functionality (if it is selected in the Topology window).
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
<i>Node Settings</i>	
Name	The name uniquely identifies each SGW instance. You can accept the value provided by LoadCore or overwrite it with your own value.

Setting	Description
Role	By default, the role is set to <b>Responder (Remote Access)</b> and cannot be changed.
UDP Rx Buffer (bytes)	Size of receive buffers for UDP sockets: <ul style="list-style-type: none"> <li>minimum: 212992</li> <li>maximum: 134217728</li> <li>default: 12582912</li> </ul>
UDP Tx Buffer (bytes)	Size of transmit buffers for UDP sockets: <ul style="list-style-type: none"> <li>minimum: 212992</li> <li>maximum: 134217728</li> <li>default: 2097152</li> </ul>
<i>Interface Settings</i>	<i>These settings are described in <a href="#">SEG interface settings</a>.</i>
<i>Remote Access IP Pool</i>	
Start IP	Set the start IP address.
IP Increment	Set the IP address increment value.
IPs count	Set the IP count value.
IP Prefix Length	Set the IP prefix length value.
<i>Local Protected Subnet</i>	<i>Selects which node(s) are protected by SEG: AMF and/or UPF . AMF and UPF could be protected by the same SEG when running with Linux stack.</i>
N2 Host(s)	Select an entry from the drop-down list: you can either <i>Select All</i> or select a specific AMF range from the list.
N3 Host(s)	Select an entry from the drop-down list: you can either <i>Select All</i> or select a specific UPF range from the list.
<i>Authentication</i>	
Authentication Method	By default, the authentication method is set to <b>Certificates</b> and cannot be changed.
CA Certificate	Select the <a href="#">CA certificate</a> from the drop-down list.
Certificates and Private Keys (zip)	It allows you to upload an archive that contains the certificates and keys for the SEG range, using the <b>Upload</b> button. To remove the archive , select the <b>Clear</b> button. The <b>.key</b> and <b>.crt</b> files need to have the same name before extensions.
Use Same	By default, this option is disabled. Select the toggle button to enable it.

<b>Setting</b>	<b>Description</b>
Certificates and Private Key For All Tunnels	
<i>IKE Phase 1</i>	
Encryption Algorithm	<p>Select the encryption algorithm from the drop-down list.</p> <p>Default value: <b>AES-128-GCM-16</b>. Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b>.</p>
Hash Algorithm	<p>Select the hash algorithm from the drop-down list.</p> <p>Default value: <b>NONE</b>. Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b>.</p> <p>Restrictions:</p> <ul style="list-style-type: none"> <li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>• If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
DH Group	<p>Select an option from the drop-down list.</p> <p>Default value: <b>prime256v1(19)</b>. Available options: <b>prime256v1(19), secp384r1(20), secp521r1(21), prime192v1(25), secp224r1(26), x25519(31), x448(32)</b>.</p>
PRF Algorithm	<p>Select an option from the drop-down list.</p> <p>Default value: <b>HMAC-SHA256</b>. Available options: <b>HMAC-MD5, HMAC-SHA1, HMAC-SHA256, HMAC-SHA384, HMAC-SHA512</b>.</p>
<i>IKE Phase 2</i>	
Encryption Algorithm	<p>Select the encryption algorithm from the drop-down list.</p> <p>Default value: <b>AES-128-GCM-16</b>. Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b>.</p>
Hash Algorithm	<p>Select the hash algorithm from the drop-down list.</p> <p>Default value: <b>NONE</b>. Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b>.</p> <p>Restrictions:</p> <ul style="list-style-type: none"> <li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> </ul>

Setting	Description
	<p><b>192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</p> <ul style="list-style-type: none"> <li>If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
<i>Identification</i>	
Local Identification Type	<p>Select an option from the drop-down list.</p> <p>Default value: <b>ID_DER ASN1 DN</b>. Available options: <b>ID_IPV4_ADDR</b>, <b>ID_FQDN</b>, <b>ID_USER_FQDN</b>, <b>ID_IPV6_ADDR</b>, <b>ID_DER ASN1 DN</b>, <b>ID_KEY_ID</b>.</p>
Local Identification Value	<p>Set the value for this parameter.</p> <p>This field is mandatory if the <i>Local Identification Type</i> is set to: <b>ID_FQDN</b>, <b>ID_KEY_ID</b> or <b>ID_RFC822_ADDR</b>.</p>
<i>Timers</i>	
Enable Rekey	By default, this option is disabled. Select the toggle button to enable it.
IKE Phase 1 (IKE) Lifetime (s)	<p>Set a value for this parameter.</p> <p>Default value: <b>0</b> (disabled).</p>
IKE Phase 1 (IKE) Lifetime (s)	<p>Set a value for this parameter.</p> <p>Default value: <b>0</b> (disabled).</p>
DPD Interval (s)	<p>Set a value for this parameter.</p> <p>Default value: <b>0</b> (disabled).</p>

## SEG interface settings

The following **Connectivity Settings** enable connectivity and service interaction.

SEG Interface Settings	Description
Source Port	Set the source port number.
Enable NAT-T	Select to enable the NAT Traversal keepalive.
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix	The IP address prefix assigned to this range. It specifies the number of leftmost

<b>SEG Interface Settings</b>	<b>Description</b>
Length	bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## N3IWF Ranges configuration settings

To access and configure the N3IWF ranges settings, select **N3IWF Ranges** from the CoreSim panel.

You can perform the following tasks from the **N3IWF Ranges** panel:

- Add a new N3IWF range to your test configuration.
- Open a N3IWF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

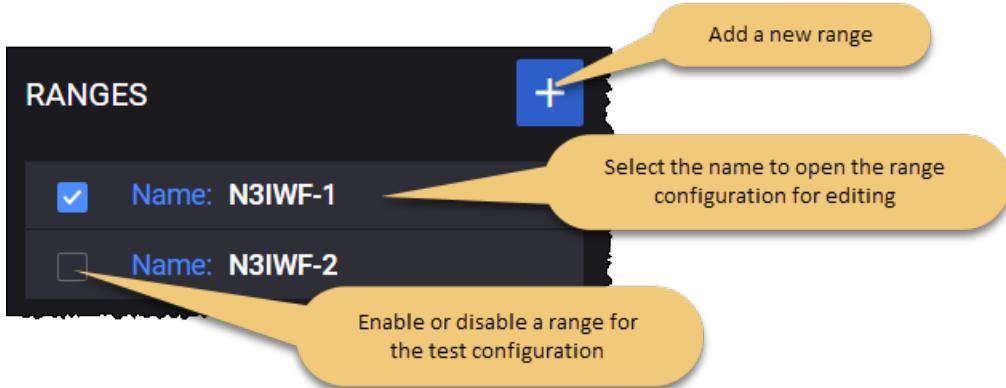

You add and select N3IWF ranges from the N3IWF Ranges panel. When you select the name of a N3IWF, LoadCore opens the **Range** panel, from which you can:

- Delete the N3IWF range from the test configuration.
- Designate the range as a **Device Under Test**.
- Modify the N3IWF range name.
- Configure the range and connectivity settings for the N3IWF range.

### N3IWF range controls and settings

Each N3IWF range is identified by a unique name. You can add and delete N3IWF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each N3IWF range.

Setting	Description
<i>Range:</i>	
Device Under Test	Enable this option if your N3IWF is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the N3IWF functionality (if it is selected in the Topology window).
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
<i>Node Settings</i>	
Name	The name uniquely identifies each N3IWF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Role	By default, the role is set to <b>Responder (Remote Access)</b> and cannot be changed.
PLMN MCC	The PLMN MCC for this N3IWF range. <b>About PLMN MCC ...</b>

<b>Setting</b>	<b>Description</b>
	<p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the country of domicile of the mobile subscriber.</p>
PLMN MNC	<p>The PLMN MNC for this N3IWF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Tracking Area Code	Provide the Tracking Area Code (TAC) value
N3IWF ID	Set the value for this field.
N3IWF ID Increment	Set the increment value for this field.
SCTP Tx Buffer (bytes)	Set the size of SCTP Tx Buffer.
SCTP Rx Buffer (bytes)	Set the size of SCTP Rx Buffer.
UDP Rx Buffer (bytes)	<p>Size of receive buffers for UDP sockets:</p> <ul style="list-style-type: none"> <li>• minimum: 212992</li> <li>• maximum: 134217728</li> <li>• default: 12582912</li> </ul>
UDP Tx Buffer (bytes)	<p>Size of transmit buffers for UDP sockets:</p> <ul style="list-style-type: none"> <li>• minimum: 212992</li> <li>• maximum: 134217728</li> <li>• default: 2097152</li> </ul>
<i>Traffic Profiles</i>	<i>These settings are described in <a href="#">Traffic Profiles settings</a>.</i>
<i>NSSAI</i>	<i>These settings are described in <a href="#">NSSAI settings</a>.</i>

<b>Setting</b>	<b>Description</b>
<i>NWu Interface Settings</i>	<i>These settings are described in <a href="#">N3IWF interface settings</a>.</i>
<i>N2 Interface Settings</i>	<i>These settings are described in <a href="#">N3IWF interface settings</a>.</i>
<i>N3 Interface Settings</i>	<i>These settings are described in <a href="#">N3IWF interface settings</a>.</i>
<i>Authentication</i>	
Configure Certificates	By default, this option is disabled. When enabled, the following fields become available: <i>Certificates(.zip)</i> and <i>Use Same Certificate For All Instances</i> .
CA Certificate	Select the CA Certificate from the drop-down list. <b>NOTE</b> To be able to populate and select from the drop-down, you first need to upload certificates.
Certificates (.zip)	It allows you to upload an archive that contains the certificates for the N3IWF range, using the <b>Upload</b> button. To remove the archive , select the <b>Clear</b> button.
Use Same Certificates For All Instances	By default, this option is disabled. Select the toggle button to enable it.
<i>IKE Phase 1</i>	
Encryption Algorithm	Select the encryption algorithm from the drop-down list. Default value: <b>AES-128-GCM-16</b> . Available options: <b>AES-128-CBC</b> , <b>AES-192-CBC</b> , <b>AES-256-CBC</b> , <b>AES-128-GCM-16</b> , <b>AES-192-GCM-16</b> , <b>AES-256-GCM-16</b> .
Hash Algorithm	Select the hash algorithm from the drop-down list. Default value: <b>NONE</b> . Available options: <b>NONE</b> , <b>HMAC-MD5-96</b> , <b>HMAC-SHA1-96</b> , <b>HMAC-MD5-128</b> , <b>HMAC-SHA1-160</b> , <b>HMAC-SHA2-256-128</b> , <b>HMAC-SHA2-384-192</b> , <b>HMAC-SHA2-512-256</b> . Restrictions: <ul style="list-style-type: none"><li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li><li>• If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li></ul>
DH Group	Select an option from the drop-down list. Available options are: <b>modp768(1)</b> , <b>modp1024(2)</b> , <b>modp1536(5)</b> , <b>modp2048(14)</b> , <b>modp3072(15)</b> ,

Setting	Description
	<b>modp4096(16), modp6144(17), modp8192(18), prime256v1(19), secp384r1(20), secp521r1(21), prime192v1(25), secp224r1(26), x25519(31), x448(32).</b> Default value: <b>prime256v1(19)</b> .
PRF Algorithm	Select an option from the drop-down list. Default value: <b>HMAC-SHA256</b> . Available options: <b>HMAC-MD5, HMAC-SHA1, HMAC-SHA256, HMAC-SHA384, HMAC-SHA512</b> .
IKE Phase 2	
Encryption Algorithm	Select the encryption algorithm from the drop-down list. Default value: <b>AES-128-GCM-16</b> . Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b> .
Hash Algorithm	Select the hash algorithm from the drop-down list. Default value: <b>NONE</b> . Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b> . Restrictions: <ul style="list-style-type: none"> <li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>• If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
Identification	
Local Identification Type	Select an option from the drop-down list. Default value: <b>ID_DER ASN1 DN</b> . Available options: <b>ID_IPV4_ADDR, ID_FQDN, ID_USER_FQDN, ID_IPV6_ADDR, ID_DER ASN1 DN, ID_KEY_ID</b> .
Local Identification Value	Set the value for this parameter. This field is mandatory if the <i>Local Identification Type</i> is set to: <b>ID_FQDN, ID_KEY_ID or ID_RFC822_ADDR</b> .
Timers	
Enable Rekey	By default, this option is disabled. Select the toggle button to enable it.
IKE Phase 1 (IKE) Lifetime (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).

Setting	Description
IKE Phase 1 (IKE) Lifetime (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).
DPD Interval (s)	Set a value for this parameter. Default value: <b>0</b> (disabled).

## Traffic Profiles

The following table describes the configuration settings that are required for Control Plane.

**NOTE** Only one Control Plane Profile is accepted.

Setting	Description
TCP Port	The TCP port for N3IWF: <ul style="list-style-type: none"><li>• default value: <b>20000</b>.</li><li>• minimum value: <b>1024</b>.</li><li>• maximum value: <b>65535</b>.</li></ul>
IP Type	Select the IP type from the drop-down list: <b>IPv4</b> (default) or <b>IPv6</b> .
Local Protected Subnet IP Address	The IP address for N3IWF TCP server. Default value: <b>150.0.2.1</b> .
Local Protected Subnet IP Prefix Length	The only accepted options are <b>32</b> for IPv4 and <b>128</b> for IPv6.
Remote Inner IP Address	Per UE IP Address used for TCP Control Plane connection. Address increment is 1. Default value: <b>150.0.100.1</b> .

The following table describes the configuration settings that are required for User Plane.

**NOTE** A maximum of 15 User Plane Profile can be configured.

Setting	Description
	Select the Add User Plane button to add a new profile to your test configuration.
	Select the Delete User Plane button to delete this profile from your test configuration.
DNN	Select the DNN value for the drop-down list.
IP Type	Select the IP type from the drop-down list: <b>IPv4</b> (default) or <b>IPv6</b> .

Setting	Description
Local Protected Subnet IP Address	The IP address for N3IWF GRE endpoint. Default value: <b>150.1.2.1</b> .
Local Protected Subnet IP Prefix Length	The only accepted options are <b>32</b> for IPv4 and <b>128</b> for IPv6.
Remote Inner IP Address	Per PDU Session IP Address used for GRE User Plane connection. Address increment is 1. Default value: <b>150.1.100.1</b> .

## NSSAI

The following table describes the configuration settings that are required for NSSAI.

Setting	Description												
<i>NSSAI:</i>													
	Select the Add NSSAI button to add a new NSSAI to your test configuration.												
<i>NSSAI settings:</i>													
	Select the Delete NSSAI button to delete this NSSAI from your test configuration.												
SST	<p>The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:</p> <table border="1"> <thead> <tr> <th>SST</th> <th>Value</th> <th>Suitable for handling:</th> </tr> </thead> <tbody> <tr> <td>eMBB</td> <td>1</td> <td>5G enhanced Mobile Broadband</td> </tr> <tr> <td>URLCC</td> <td>2</td> <td>ultra-reliable low-latency communications</td> </tr> <tr> <td>MIoT</td> <td>3</td> <td>massive IoT</td> </tr> </tbody> </table>	SST	Value	Suitable for handling:	eMBB	1	5G enhanced Mobile Broadband	URLCC	2	ultra-reliable low-latency communications	MIoT	3	massive IoT
SST	Value	Suitable for handling:											
eMBB	1	5G enhanced Mobile Broadband											
URLCC	2	ultra-reliable low-latency communications											
MIoT	3	massive IoT											
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.												

## N3IWF interface settings

### NWu interface settings

The following settings enable connectivity and service interaction.

Interface Settings	Description
Source Port	Set the source port number.
Enable NAT-T	Select to enable the NAT Traversal keepalive.

Connectivity Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>

<b>Connectivity Settings</b>	<b>Description</b>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## N2 interface settings

The following settings enable connectivity and service interaction.

<b>Interface Settings</b>	<b>Description</b>
Peer AMF	The IP address of the AMF node connected over the N2 interface.
Destination port	The destination Stream Control Transmission Protocol (SCTP) port for control plane messages (NG-AP signaling messages) on the N2 interface.
SCTP source port	The source SCTP port for control plane messages (NG-AP signaling messages). Each SCTP endpoint provides the other endpoint with a list of transport addresses through which that endpoint can be reached and from which it will originate SCTP packets. These transport addresses are composed of multiple IP addresses in combination with an SCTP port. The default port number is 36412, but you can change it.
Connection Timeout (ms)	Set the connection timeout value.
<b>SCTP Parameters</b>	
Avoid Bundling of Data Chunks	Select this option to enable it. It turns on/off any Nagle-like algorithm. This means that packets are generally sent as soon as possible and no unnecessary delays are introduced, at the cost of more packets in the network.
Minimum Retransmission Timeout (ms)	Set the minimum retransmission timeout value, in milliseconds.
Maximum Retransmission Timeout (ms)	Set the maximum retransmission timeout value, in milliseconds.

<b>Interface Settings</b>	<b>Description</b>
Initial Retransmission Timeout (ms)	Set the initial retransmission timeout value, in milliseconds.
Maximum Retransmission per Association	Set the maximum retransmissions value per association.
Maximum Retransmission per Path	Set the maximum retransmissions value per path.
Heartbeat Interval (ms)	Set the heartbeat interval value, in milliseconds.
SACK Delay (ms)	Set the delayed selective ACK timeout value.
SACK Frequency	Set the delayed selective ACK frequency value.
<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
Emulated Router Address	Set the IPv4 or IPv6 address for the emulated router. This allows to hide all messages from the interface behind a MAC address.  NOTE      This option can be used only with IxStack stack.
Emulated Router Address Prefix Length	Set the IP network mask for the emulated router.
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.

<b>Connectivity Settings</b>	<b>Description</b>
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

### N3 interface settings


The following **Connectivity Settings** enable connectivity and service interaction.

<b>SEG Interface Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>

<b>SEG Interface Settings</b>	<b>Description</b>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

*CHAPTER 10***RuSIM tests: configuration settings**

This section provides descriptions of the configuration settings that are specific to the **Wireless RuSIM** test type:

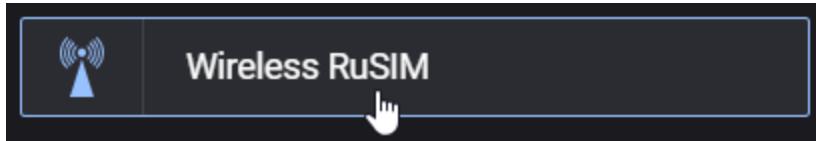**Topics:**

<b>Global Settings</b> .....	<b>1093</b>
Global Settings panel .....	1095
Node Start/Stop Rates .....	1095
DNS Settings .....	1095
Advanced Settings .....	1096
DNNs panel .....	1099
DNN configuration settings .....	1099
Session AMBR configuration settings .....	1102
ePCO configuration settings .....	1102
Traffic Control Settings configuration .....	1104
Impairment .....	1105
QoS Flows panel .....	1106
QoS Flow configuration settings .....	1106
QoS Flow Packet Filter configuration settings .....	1110
QoS Flow Max Packet Loss Rate settings .....	1111
QoS Flow ARP configuration settings .....	1111
QoS Flow MBR configuration settings .....	1112
QoS Flow GBR configuration settings .....	1112
CA Certificates .....	1112
Customer Parameters .....	1113
External Stats Server .....	1113
Global Playlists .....	1120
UE Global Parameters .....	1120
<b>UE configuration settings</b> .....	<b>1121</b>

UE configuration panel .....	1121
UE Subscribers panel .....	1122
Range Settings .....	1124
Test Procedures .....	1143
UE Devices panel .....	1182
Device Settings .....	1182
Basic Parameters .....	1183
Radio Capability settings .....	1183
Cyphering settings .....	1185
LADPm settings .....	1185
PSL1-L2 settings .....	1186
Layer 3 Signaling .....	1188
User Plane .....	1190
Physical Layer Parameters settings .....	1191
NR Physical Layer Parameters .....	1197
5GMM Parameters settings .....	1219
EMM Parameters settings .....	1219
Additional Capabilities .....	1223
AMM Panel .....	1224
AMM Settings .....	1224
Mobility Environment settings .....	1225
<b>DN configuration settings .....</b>	<b>1225</b>
DN Ranges panel .....	1226
DN Range panel .....	1226
DN N6 interface settings .....	1227
DN routes settings .....	1228
DN User Plane .....	1229
Data Traffic .....	1230
DN Stateless UDP Traffic .....	1234
DN UDG .....	1235
DN Video OTT Traffic .....	1239
DN Voice Traffic .....	1244


DN Throttling settings .....	1254
<b>Core configuration settings .....</b>	<b>1255</b>
Core settings .....	1255
N6/SGi interface settings .....	1256
Core Ranges settings .....	1258
AMF Ranges configuration settings .....	1258
UPF Ranges configuration settings .....	1264
MME Ranges configuration settings .....	1266
SGW Ranges configuration settings .....	1270
SEG Ranges configuration settings .....	1273
SEG interface settings .....	1277
<b>IMS configuration settings .....</b>	<b>1277</b>
CSCF Range panel .....	1278
Media Function Range panel .....	1280
<b>RU configuration settings .....</b>	<b>1281</b>
RU Ranges panel .....	1281
RU Range Settings .....	1282
General Settings .....	1282
M-Plane settings .....	1284
S-Plane settings .....	1285
Compression settings .....	1286

## Global Settings

The Global Settings include parameters that either have overall applicability to the test or can be used (by reference) in the configurations of other nodes in the test topology.

To access the Global Settings:

1. Select the **Test Overview** tab:

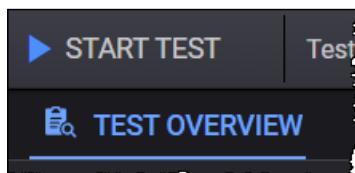

2. Click **Expand** if the Test Overview section is collapsed.

3. Click the Global Settings' **Edit** button:



LoadCore opens the **Global Settings** panel from which you can:

- Select the technical specification version from the drop-down list:



- Access and configure the following settings:

<b>Global Settings panel</b>	<b>1095</b>
<b>Node Start/Stop Rates</b>	<b>1095</b>
<b>DNS Settings</b>	<b>1095</b>
<b>Advanced Settings</b>	<b>1096</b>
<b>DNNs panel</b>	<b>1099</b>
DNN configuration settings	1099
Session AMBR configuration settings	1102
ePCO configuration settings	1102
Traffic Control Settings configuration	1104
<b>Impairment</b>	<b>1105</b>
<b>QoS Flows panel</b>	<b>1106</b>
QoS Flow configuration settings	1106
QoS Flow Packet Filter configuration settings	1110
QoS Flow Max Packet Loss Rate settings	1111
QoS Flow ARP configuration settings	1111
QoS Flow MBR configuration settings	1112
QoS Flow GBR configuration settings	1112
<b>CA Certificates</b>	<b>1112</b>
<b>Customer Parameters</b>	<b>1113</b>
<b>External Stats Server</b>	<b>1113</b>
<b>Global Playlists</b>	<b>1120</b>
<b>UE Global Parameters</b>	<b>1120</b>

## Global Settings panel



When you open the Global Settings for editing (from the **Test Overview** section), LoadCore opens the **Global Settings** panel. That panel provides a set of global configuration settings and links to more detailed settings.

### Configuration settings

The following table describes the settings that are available on the Global Settings panel.

Setting	Description
<i>Links to detailed settings:</i>	
DNNs	For more details, refer to <a href="#">DNNs</a> .
QoS Flows	For more details, refer to <a href="#">QoS Flows</a> .

### Node Start/Stop Rates

The following table describes the settings that are available on the Node Start/Stop Rates. These include settings with which you control the Stream Control Transmission Protocol (SCTP) connection rates between NG-RAN and AMF. (SCTP—which operates in the transport layer of the NG-C signaling bearer—provides for the reliable transport of signaling messages.)

Setting	Description
<i>Node Start</i>	
Rate	Set the desired start rate for SCTP connections between the NG-RAN and the AMF (connections per second). Measured in procedures per second if Distributed over (s) is not modified.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
<i>Node Stop</i>	
Rate	Set the desired start rate for SCTP connections between the NG-RAN and the AMF (connections per second). Measured in procedures per second if Distributed over (s) is not modified.
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.

### DNS Settings

The following table describes the settings required for the DNS Resolver configuration.

Setting	Description
<i>DNS Settings:</i>	
Cache Timeout (ms)	The amount of time (in milliseconds) the local DNS stores the address information.
<i>DNS Name Servers:</i>	
	Select the <b>Add DNS Name Server</b> button to add a new DNS server to your test configuration. Set the IP address of the DNS server.
	Select the <b>Delete</b> button to remove the DNS server from your test configuration.

## Advanced Settings

The following table describes the settings required to enable user plane and control plane advanced statistics.

Setting	Description
Overwrite Capture Size	Enable this option to overwrite the capture size for IxStack.
Custom Capture Size (packets)	Set the custom value of the capture size for IxStack.
Enable Capture Circular Buffer for IxStack	Select this option to enable circular buffer capture for IxStack.
Power Saver on Agents	Select this option to disable the IxStack/DPDK at the end of each test and on all agents.
Enable User Plane Advanced Stats	Select an option from the drill-down list for the user plane advanced statistics: <ul style="list-style-type: none"> <li>• <b>None</b> - no advanced statistics enabled.</li> <li>• <b>One Way Delay</b> - the time spent by the packet on the network from the moment it is sent until it is received.</li> <li>• <b>Delay Variation Jitter</b> - the per polling interval average delay variation jitter value calculated for all packets.</li> </ul>
Automated Polling Interval	This option is enabled by default. The statistics are retrieved based on the test duration and the available disk space.
Custom Polling Interval (s)	This option becomes available only when <i>Automated Polling Interval</i> option is disabled. It allows you to create a custom polling interval (value expressed in seconds).
Log Level	Select one of the options:

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Info</b> - Designates informational messages that highlight the progress of the application at coarse-grained level.</li> <li>• <b>Debug</b> - Designates fine-grained informational events that are most useful to debug the application.</li> </ul>
Log Tags	<p>Select one or more tags from the drop-down list.</p> <p>Log Tags are used to collect specific information in the logs; they work with Debug and with Info log levels. Rather than allowing the logs to collect information about everything, you can use Log Tags to collect specific information—such as SCTP or HTTP messages—during the test. This limits the amount of information that is collected, making it easier for you to extract the data that you need.</p>
Traffic Settings	<i>The settings are described <a href="#">here</a>.</i>
Response Cache Settings	<i>The settings are described <a href="#">here</a>.</i>
Ignore Offline Agents at Runtime	When this option is enabled, if an agent loses connection to the Middleware during a test, the test will not stop, but continue without the respective agent.

## Traffic Settings

The following table describes the settings on the Traffic Settings pane.

Setting	Description
<i>GTPU Source Port:</i>	
Start	Indicates the source port for the GTPU tunnel. By default, the registered UDP port for GTPU is 2152.
Count	Set the count value.
<i>Reserved cores for RTP Tx:</i>	
Enable RTP	Select this option to enable RTP.
Cores	The number of cores reserved for RTP transmission.
<i>Traffic Control</i>	
Traffic Control Port	Set the traffic control port. By default, it is set to 44556.
Enable Jumbo Frame	This option will enable Jumbo Frame, an Ethernet frame with a payload greater than the standard maximum transmission unit (MTU) of 1,500 bytes.

<b>Setting</b>	<b>Description</b>
Enable IxStack L4 Port Randomization	Select this option to enable IxStack L4 Port Randomization.
Enable UDP Port Recycling	Select this option to enable IxStack UDP Port Recycling.
Enable TCP Port Recycling	Select this option to enable IxStack TCP Port Recycling.
Enable ICMP Responses	Select this option to enable it. This will permit requests and responses to ICMP packets on subscribers addresses (it will have a significant memory impact on server nodes - AMF, UPF).

## Response Cache Settings

During performance testing scenarios, it is possible that not all responses are received by the client. The client initiates messages retries when it is not receiving responses. When a message retry reaches the server, the response is sent again faster and no additional load is put on the server, because the response message is already stored. There is no need to construct the response message again.

A rotation interval higher than the retry timer on the client node must be configured in order to still have the responses stored when a message retry arrives on the server node.

The following table describes the settings on the Response Cache pane.

<b>Setting</b>	<b>Description</b>
Enable response cache for GTPv2 and PFCP protocols	When this option is enabled, the server node will store the GTPv2 and PFCP Response messages for a period of time equal to Rotation Interval (in seconds).
Rotation interval	The period of time (in seconds) for which the server node will store the GTPv2 and PFCP Response messages. After this interval expires, the stored messages are discarded.

## DNNs panel

To access the DNN configuration settings, select **DNNs** from the the **Global Settings** panel. LoadCore opens the **DNNs** panel from which you can add and edit DNN definitions:



The properties for a DNN are organized into the following groups of configuration settings:

<b>DNN configuration settings</b>	1099
<b>Session AMBR configuration settings</b>	1102
<b>ePCO configuration settings</b>	1102
<b>Traffic Control Settings configuration</b>	1104

### DNN configuration settings

You create and manage Data Network Names (DNNs) for your test network in the **Global Settings** section of the **Test Overview**. The **DNN** panel contains the configuration settings for an individual DNN. In this panel, you can:

- Click the **Delete DNN** button to delete the DNN configuration.
- Edit the DNN settings.

The following table describes the **DNN** settings.

Setting	Description
<i>DNN:</i>	
DNN	<p>Enter the DNN value for this DNN definition. For example: <code>dnn.keysight.com</code>.</p> <p>A DNN (as is the case with an EPS APN) is composed of two parts:</p> <ul style="list-style-type: none"> <li>• A mandatory Network Identifier that defines the external network to which the UPF is connected.</li> <li>• An optional Operator Identifier that defines the PLMN backbone in which the UPF is located.</li> </ul> <p>A 5GS Data Network Name (DNN) is equivalent to an EPS APN. It is a reference to a data network, and it may be used to select an SMF or UPF for a PDU session and to determine policies applicable to the PDU session.</p>

<b>Setting</b>	<b>Description</b>
	<p>The DNN field supports dynamic values. These values can be obtained with a sequence generator.</p> <p>The sequence can be added anywhere in the DNN name (beginning, middle or end). The syntax is [start_value-end_value,increment].</p> <p><b>NOTE</b> The start_value and end_value must have the same length. For example, we can configure <code>dnn[008-999,1]</code> and obtain <code>dnn008,dnn009,...,dnn998,dnn999</code>. Syntaxes <code>dnn[8-999,1]</code> or <code>[008-1000,1]</code> are not valid as the start and end value lengths are different.</p> <p>The start value is mandatory. Omitting certain parameters results in behaviors as exemplified below:</p> <ul style="list-style-type: none"> <li>• <code>dnn[4-9, ]</code> an implicit increment of 1 is used</li> <li>• <code>dnn[4-9]</code> as above</li> <li>• <code>dnn[4-,1]</code> is used as <code>dnn[4-9,1]</code>, 9 being the maximum value with the configured length, length of 1 in this case</li> <li>• <code>dnn[4-, ]</code> as above</li> <li>• <code>dnn[4- ]</code> as above</li> <li>• <code>dnn[4]</code> as above</li> </ul> <p>UEs will use the DNN values from the pool in a round robin manner.</p> <p><b>IMPORTANT</b> If multiple sequence generators are configured and their pools overlap (for example: <code>dnn[000-600,1].keysight.com</code> <code>dnn[500-999,1].keysight.com</code>), for UEs that use the second DNN pool, the DNN generated values might not be allocated starting with the start_value (they might start with an intermediate value in the second pool).</p>
PDU Type	Select the desired PDU type: IPv4, IPv6 or IPv4v6.
QoS Flows IDs	<p>Select the QoS Flows ID(s) from the drop-down list. Each DNN should contain at least the default flow (the default flow is unique per each DNN). In addition, zero or more dedicated flows can be associated to each DNN.</p> <p>For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a>.</p>

<b>Setting</b>	<b>Description</b>
Allowed SSC Modes	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>• <b>SSC Mode 1:</b> The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>• <b>SSC Mode 2:</b> The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>• <b>SSC Mode 3:</b> Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4/v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
EPS Interworking	Enable this option if the UE subscription data indicates support for interworking with EPS for this DNN.
Is Emergency DNN	When this option is enabled, if an UE range has mapped this type of DNN, it will perform an emergency PDU Session.
MPS Priority	Enable this option if the DNN will support subscription to MPS priority service. The priority applies to all traffic on the PDU Session.
Dual Registration Mode	When enabled, it transfers this session to the other RAT in dual registration mode. If the session does not exist, it will be created in the other RAT.
MPS Priority Level	Specify the Multimedia Priority Services (MPS) priority level. This is the relative priority level for MPS.
IMS Signaling Priority	Specify the IP Multimedia Subsystem (IMS) signaling priority. This value indicates subscription to IMS signaling priority service. The priority applies only to IMS signaling traffic.
Session Rule Name	Set the session rule name.
GBR	<i>Select this option to open the GBR panel.</i>
Guaranteed Bit Rate Uplink	Specify the guaranteed bit rate for the uplink traffic.
Guaranteed Bit Rate Downlink	Specify the guaranteed bit rate for the downlink traffic.
Session AMBR	<i>Select this option to open a new panel that contains the Session AMBR settings. These settings are described in <a href="#">Session AMBR configuration settings</a>.</i>
ePCO	<i>Select this option to open the extended protocol configuration options panel.</i>

Setting	Description
	<i>These settings are described in <a href="#">ePCO configuration settings</a>.</i>
Traffic Control Settings	Select this option to open the traffic control settings panel. These settings are described in <a href="#">Traffic Control Settings configuration</a> .

If, for an UE range, Paging is configured and globally per DNN Traffic Control is configured, for that UE range traffic control messages will be sent before entering Idle (as per the Paging objective) but traffic control messages will be sent per DNN as configured in the **Global Settings > DNN > Remote IPv4/IPv6** and traffic will be resumed per DNN as configured in the **Global Settings > DNN > Suspend Traffic Interval (s)** field.

## Session AMBR configuration settings

Each LoadCore DNN configuration has its own unique configuration settings, which include:

- The main DNN settings, described in [DNN configuration settings](#).
- The DNN's Session AMBR settings, described below.

### About Session AMBR ...

5G QoS enforcement and rate limitation policies utilizes Aggregate Maximum Bit Rate (AMBR) values to limit the amount of traffic flowing through the 5GS for a given UE. Every PDU session specifies a per-session AMBR value that limits the aggregate bit rate that can be expected across all non-GBR QoS flows. The Session-AMBR is measured over an AMBR averaging window, which is a standardized value. Downlink Session-AMBR is enforced by the UPF, and uplink Session-AMBR is enforced by the UPF and the UE.

The following tables describes the Session AMBR configuration settings.

Parameter	Description
Session AMBR Uplink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) uplink rate.
Session AMBR Uplink unit	The unit in which the rate is expressed. The options range from kbps to Tbps.
Session AMBR Downlink	Specify the DNN session AMBR (Aggregate Maximum Bit Rate) downlink rate.
Session AMBR Downlink unit	The unit in which the rate is expressed. The options range from kbps to Tbps.

## ePCO configuration settings

Configuration options for ePCO IE (extended Protocol Configuration Options IE) from PDU Session Establishment Request message and PDU Session Establishment Accept message.

Parameter	Description
Request DNS	Add DNS Server IPv4 Address Request or DNS Server IPv6 Address Request in the

<b>Parameter</b>	<b>Description</b>
Server IP Address	<p>Extended Protocol Configuration Options IE included in PDU Session Establishment Request message.</p> <p>If required, enable this option.</p>
Request P-CSCF IP address	<p>Add P-CSCF IPv4 Address Request or P-CSCF IPv6 Address Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message.</p> <p>If required, enable this option.</p>
Request IPv4 Link MTU	<p>Add IPv4 Link MTU Request in the Extended Protocol Configuration Options IE included in PDU Session Establishment Request message.</p> <p>If required, enable this option.</p>
DNS Server IPv4 Address	<p>If ePCO IE was received in PDU Session Establishment Request and DNS Server IPv4 Address Request was set, send this DNS IPv4 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p> <p><b>NOTE</b> If this field is empty and a DNS Name Server is configured in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a>, then this field will be populated with the first IPv4 address of the DNS Name Server(s) defined in Global Settings.</p> <p><b>NOTE</b> If the DNS Name Server IPv4 address is updated in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a> while there is already a value set for DNS Server IPv4 Address, no update will be done on DNS Server IPv4 Address. If the new IPv4 DNS address is needed, the update in ePCO settings needs to be done manually.</p>
DNS Server IPv6 Address	<p>If ePCO IE was received in PDU Session Establishment Request and DNS Server IPv6 Address Request was set, send this DNS IPv6 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p> <p><b>NOTE</b> If this field is empty and a DNS Name Server is configured in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a>, then this field will be populated with the first IPv6 address of the DNS Name Server(s) defined in Global Settings.</p> <p><b>NOTE</b> If the DNS Name Server IPv6 address is updated in Global Settings &gt; DNS Settings &gt; <a href="#">DNS Name Servers</a> while there is already a value set in ePCO for DNS Server IPv6 Address, no update will be done on ePCO DNS Server IPv6 Address. If the new IPv6 DNS address is needed, the update in ePCO settings needs to be done manually.</p>
P-CSCF IPv4 address	<p>If ePCO IE was received in PDU Session Establishment Request and P-CSCF IPv4 Address Request was set, send this P-CSCF IPv4 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p>

<b>Parameter</b>	<b>Description</b>
	<p><b>NOTE</b> If this field is empty and the CSCF node is enabled and has an IPv4 address, then this field is automatically updated to the CSCF IPv4 address.</p> <p><b>NOTE</b> If the IPv4 address of the IMS CSCF node is manually changed while there is already a value set for ePCO P-CSCF IPv4 address, this will not be automatically updated on ePCO P-CSCF IPv4 address. If the new CSCF address is needed, the update in ePCO settings needs to be done manually.</p>
P-CSCF IPv6 address	<p>If ePCO IE was received in PDU Session Establishment Request and P-CSCF IPv6 Address Request was set, send this P-CSCF IPv6 address in the ePCO IE in PDU Session Establishment Accept message if this field is not empty.</p> <p><b>NOTE</b> If this field is empty and the CSCF node is enabled and has an IPv6 address, then this field is automatically updated to the CSCF IPv6 address.</p> <p><b>NOTE</b> If the IPv6 address of the IMS CSCF node is manually changed while there is already a value set for ePCO P-CSCF IPv6 address, this will not be automatically updated on ePCO P-CSCF IPv6 address. If the new CSCF address is needed, the update in ePCO settings needs to be done manually.</p>
Link MTU value	<p>If ePCO IE was received in PDU Session Establishment Request and IPv4 Link MTU Request was set, send this IPv4 Link MTU value in the ePCO IE in PDU Session Establishment Accept message.</p>

Known limitations:

- ePCO is only supported on NG-RAN and CoreSim 5G.
- The options are only used for signaling, in order to avoid errors. There is no support for sending/receiving traffic according to this option.

## Traffic Control Settings configuration

The Traffic Control Settings option offers the ability to use Traffic Control on a per DNN basis.

When enabled, after the Delay Between PDU Session Establishment and Suspend Traffic timer expires, Traffic Control specific messages will be sent from the UE IP address assigned for that specific PDU Session to the configured Remote IPv4 or Remote IPv6 peer address in order to stop downlink traffic. Downlink traffic will be resumed after the configured Suspend Traffic Interval expires.

The following tables describes the Traffic Control Settings parameters.

<b>Parameter</b>	<b>Description</b>
Traffic Control Settings	<p>By default, this option is disabled.</p> <p>Select the check box to enable it.</p>
Suspend Traffic Interval(s)	<p>Set the value (in seconds) for this parameter.</p>

Parameter	Description
Delay Between PDU Session Establishment and Suspend Traffic (s)	Set the value (in seconds) for this parameter.
Remote IPv4	Select: <ul style="list-style-type: none"><li>•  - Select to add the remote IPv4 address.</li><li>•  - Select to remove the remote IPv4 address.</li></ul>
Remote IPv6	Select: <ul style="list-style-type: none"><li>•  - Select to add the remote IPv6 address.</li><li>•  - Select to remove the remote IPv6 address.</li></ul>

## Impairment

The following table describes the settings required to define the impairment profile.


Setting	Description
<i>Impairment Profiles:</i>	
	Select the <b>Add impairment profile</b> button to add a new profile to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete impairment profile</b> button to remove the profile from your test configuration.
Name	Each impairment profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Action Type	Select an option from the drop-down list. The available option is: <b>Custom script</b> .
Script file	This parameter is available only when <b>Action Type</b> is set to <b>Custom script</b> . It allows you to add a custom script, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## QoS Flows panel

The 5G QoS model is based on QoS Flows. A 5G QoS Flow is the finest level of granularity for QoS forwarding treatment in the 5G System. All traffic mapped to the same 5G QoS Flow receives the same forwarding treatment.

### Accessing the configuration settings:

To access the QoS Flows configuration settings, select **QoS Flows** from the the **Global Settings** panel. LoadCore opens the **QoS Flows** panel from which you can add and edit QoS Flow definitions:

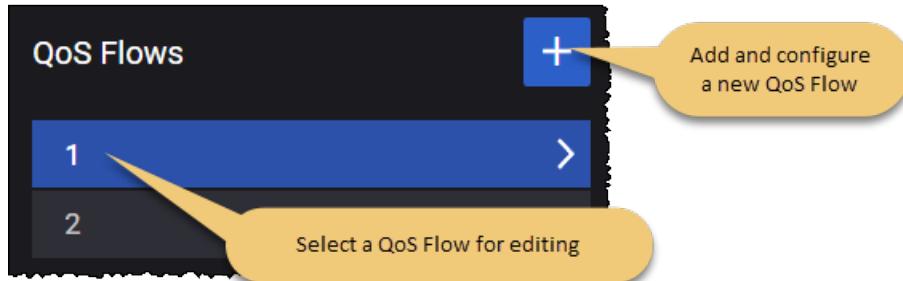

These QoS Flow configurations become immediately available for selection by other nodes in the test configuration. The properties for a QoS Flow are organized into the following groups of configuration settings:

<b>QoS Flow configuration settings</b>	<b>1106</b>
<b>QoS Flow Packet Filter configuration settings</b>	<b>1110</b>
<b>QoS Flow Max Packet Loss Rate settings</b>	<b>1111</b>
<b>QoS Flow ARP configuration settings</b>	<b>1111</b>
<b>QoS Flow MBR configuration settings</b>	<b>1112</b>
<b>QoS Flow GBR configuration settings</b>	<b>1112</b>

### QoS Flow configuration settings

You create and manage QoS Flows for your test network in the **Global Settings** section of the **Test Overview**. The **QoS Flow** panel contains the configuration settings for an individual QoS Flow. In this panel, you can:

- Click the **Delete QoS Flow** button to delete the QoS Flow configuration.
- Edit the QoS Flow settings.

The **QoS Flow** settings are described in the table that follows.

Setting	Description
<i>QoS Flow:</i>	
Is Default	Enable this option if this QoS Flow is associated with the default QoS rule. In the 5G System, a default QoS rule is required for each UE session, and this rule will be associated with a QoS Flow.

Setting	Description
Type	<p><b>IMPORTANT</b> This parameter is available only if the <a href="#">Is Default</a> option is not selected.</p> <p>The following options are available:</p> <ul style="list-style-type: none"> <li>• <b>Data</b> - LoadCore PCF/PCRF is capable by itself to generate Packet filters for this flow/bearer. This type of flow/bearer is used for non-Voice or non-Video traffic.</li> <li>• <b>Audio</b> - LoadCorePCF/PCRF needs information related to this flow/bearer from CSCF.</li> <li>• <b>Video</b> - LoadCorePCF/PCRF needs information related to this flow/bearer from CSCF.</li> <li>• <b>MSRP</b> - This option will automatically configure the QoS flow with specific parameters for Message Session Relay Protocol (MSRP), QFI = 8, 5QI = 8.</li> </ul>
Network Initiated Flow	<p><b>IMPORTANT</b> This parameter is available only if the <a href="#">Is Default</a> option is not selected.</p> <p>Select the associated check box to enable this option.</p> <p>The following fields are displayed:</p> <ul style="list-style-type: none"> <li>• <i>Delay After Initial Registration (s)</i> - set the value for this parameter.</li> <li>• <i>Interval between Create and Delete (s)</i> - set the value for this parameter.</li> <li>• <i>Iterations</i> - set the value for this parameter.</li> </ul>
QFI	<p>Enter a QoS Flow Identifier (QFI) for this QoS Flow. This identifier will be used to uniquely identify a QoS Flow in the 5G System. All User Plane traffic with the same QFI within a PDU Session receives the same traffic forwarding treatment. The QFI is carried in an encapsulation header on the N3 and N9 reference points.</p>
5QI	<p>Specify the 5QI value (decimal number).</p> <p>5G QoS Identifier (5QI) is a scalar that is used as a reference to 5G QoS characteristics defined in TS 23.501, clause 5.7.4. These are access node-specific parameters that control QoS forwarding treatment for the QoS Flow (such as scheduling weights, admission thresholds, queue management thresholds, link layer protocol configuration, among others). Standardized 5QI values have a one-to-one mapping to a standardized combination of 5G QoS characteristics as specified in TS 23.501, table 5.7.4-1.</p>
5QI Priority Level	<p>Specify the 5QI Priority Level for this QoS Profile. 5QI Priority Level is a Policy Control parameter that accepts values from 1 through 127 (where 1 is the highest priority). It indicates a priority in scheduling resources among QoS Flows.</p>
Resource Type	<p>Select the type of resource that the QoS Flow requires: Guaranteed Bit Rate (GBR), Non-Guaranteed Bit Rate (non-GBR), or Delay Critical GBR. The Resource Type determines whether or not dedicated network resources related to a QoS Flow-level Guaranteed Flow Bit Rate (GFBR) value are permanently allocated to the flow.</p>


<b>Setting</b>	<b>Description</b>
Averaging Window	Specify the <i>Averaging window</i> value for this 5GI. Each GBR QoS Flow is associated with an <i>Averaging window</i> . It represents the time duration (specified in milliseconds) over which the GFBR and MFBR are calculated.
QoS Rule Precedence	Specify the desired QoS Rule Precedence value for this QFI. The QoS rule precedence value (and the PDR precedence value) determine the order in which a QoS rule or a PDR, respectively, will be evaluated. The evaluation of the QoS rules or PDRs is performed in increasing order of their precedence value.
Packet Delay Budget	The Packet Delay Budget (PDB) defines an upper bound for the time that a packet may be delayed between the UE and the PCEF. For a given QCI, the value of the PDB is the same in uplink and downlink. The purpose of the PDB is to support the configuration of scheduling and link layer functions.
Packet Error Rate	The Packet Error Rate (PER) defines the upper bound for the rate of PDUs (IP packets) that have been processed by the sender of a link layer protocol but are not successfully delivered by the corresponding receiver to the upper layer. It defines an upper bound for the rate of non-congestion related packet losses.
Max Data Burst	The Maximum Data Burst Volume is the amount of data which the RAN is expected to deliver within the part of the Packet Delay Budget allocated to the link between the UE and the radio base station.
QoS Reference	This option is used on the PCF node to identify a particular PCC Rule when QoS reference information is received from the NEF on N33 interface.  <b>NOTE</b> QoS Reference is supported only when Technical Spec Version is R16 or higher.
Notification Control	Enable or disable the Notification Control parameter. When enabled, it indicates whether notifications are requested from the RAN when the GFBR can no longer be fulfilled for a QoS Flow during the QoS Flow's lifetime.
Segregation	Enable this option if the Segregation indication is to be included in a UE initiated PDU Session Modification procedure. The Segregation indication is included when the UE requests that the network bind the applicable SDF(s) on a distinct and dedicated QoS Flow.
Use Match-all Packet Filter	<b>IMPORTANT</b> This is available if <a href="#">Is Default</a> option is enabled. If this option is not enabled, a new <a href="#">Packet Filter List</a> option appears and custom packet filter can be configured.
EPS Bearer Identifier	The EBI for the bearer associated with this QoS flow.
PCC Rule Name	Set a value for this parameter.

<b>Setting</b>	<b>Description</b>
Is Predefined Rule	Select the check box to enable this option.
Application Identifier	Set the application identifier value.
Send QoS Rule Precedence when Application identifier is configured	If needed, enable this option.
Move to Secondary Node	If needed, enable this option. This option is part of the Option 3x and Dual Connectivity NR feature, for more details refer to <a href="#">UE Range Panel</a> .
Packet Filter List	<p><b>IMPORTANT</b> This is available if <a href="#">Use Match-all Packet Filter</a> option is not selected.</p> <p>Refer to the following topic for a description of the Packet Filter configuration settings: <a href="#">QoS Flow Packet Filter configuration settings on page 105</a>.</p>
Max Packet Loss Rate	Refer to the following topic for a description of the Max Packet Loss Rate configuration settings: <a href="#">QoS Flow Maximum Packet Loss configuration settings</a> .
ARP	Refer to the following topic for a description of the ARP configuration settings: <a href="#">QoS Flow ARP configuration settings</a> .
MBR	Refer to the following topic for a description of the MBR configuration settings: <a href="#">QoS Flow MBR configuration settings</a> .
GBR	Refer to the following topic for a description of the GBR configuration settings: <a href="#">QoS Flow GBR configuration settings</a> .

## QoS Flow Packet Filter configuration settings

A Packet Filter Set is used in the definition of QoS rules or packet detection rules (PDRs) to identify one or more packet flows for filtering.

You use the settings in the QoS Flow **Packet Filter List** panel to configure the packet filters associated with the current flow. You access this panel from the QoS Flow panel:

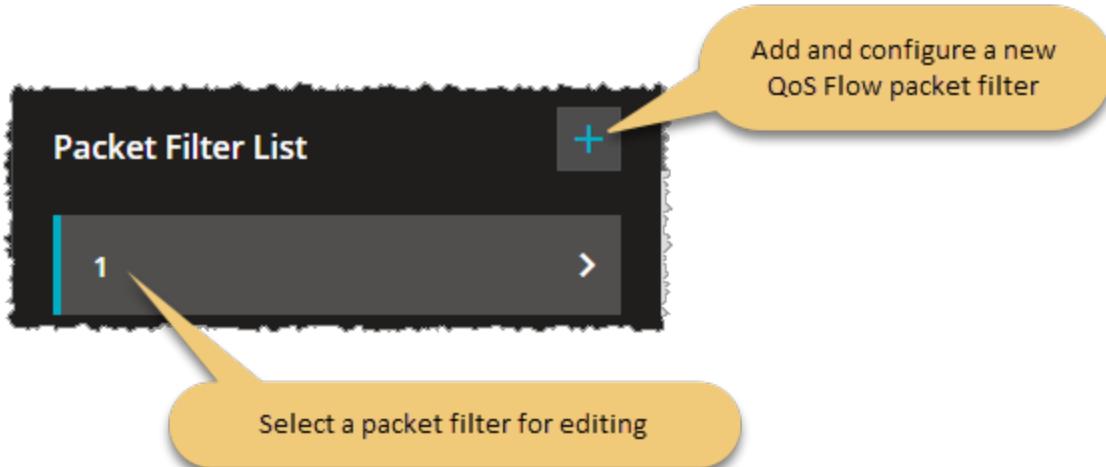

The **Packet Filter** settings are described in the following table.

Setting	Description
	Select the <b>Delete Packet Filter</b> button to delete this Packet Filter from the test configuration.
Direction	Select the direction of the data flow on which the filter is applied from the drop-down list: Uplink, Downlink, or Bidirectional.
IPv4 Remote Address and Subnet Mask	The IPv4 address of the remote node plus the subnet mask. If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
IPv6 Remote Address and Prefix Length	The IPv6 address for the remote node, expressed in CIDR notation (for example: 2001:db8::/32). If the <i>Direction</i> is Uplink, then this IP address is the destination IP. If the <i>Direction</i> is Downlink, then this IP address is the source IP.
Protocol Identifier or Next Header	The Protocol ID of either the protocol above IP in the stack or the next header type. Examples: UDP, TCP, ESP.
Single Local Port	The local port number, if the filter specifies a single port.
Single Remote Port	The remote port number, if the filter specifies a single port.

Setting	Description
Local Port Range	The low and high limits for local port range.
Remote Port Range	The low and high limits for remote port range.
Security Parameter Index	The Security Parameters Index (SPI) for this packet filter. The SPI is a pointer that references the session key and algorithms used to protect the data being transported.
Type Of Service or Traffic Class	The IPv4 Type of Service (TOS) or the IPv6 traffic class.
Flow Label	The IPv6 Flow Label. This refers to the 20-bit Flow Label field in the IPv6 header.

## **QoS Flow Max Packet Loss Rate settings**

The setting establish the uplink and downlink maximum packet loss that is permitted for the QoS flow.

Setting	Description
<i>Max Packet Loss Rate:</i>	
Uplink	The maximum uplink packet loss rate (packets per second) that is permitted for the QoS Flow.
Downlink	The maximum downlink packet loss rate (packets per second) that is permitted for the QoS Flow.

## **QoS Flow ARP configuration settings**

The Allocation and Retention Priority (ARP) settings specify the priority level, preemption capability, and preemption vulnerability of a resource request. It is used to determine whether a new QoS Flow should be accepted or rejected—and to determine whether an existing QoS Flow can be preempted by another QoS Flow—in response to resource limitations.

The **QoS Flow ARP** settings are described in the table that follows.

Setting	Description
<i>ARP:</i>	
ARP Priority Level	<p>Specify the ARP priority level.</p> <p>The ARP Priority Level defines the relative importance of a resource request, where 1 is the highest priority and 15 is the lowest priority. The ARP priority levels 1–8 should be assigned only to resources for services that are authorized to receive prioritized treatment within an operator domain, whereas the ARP priority levels 9–15 may be assigned to resources that are authorized by the</p>

Setting	Description
	home network and thus applicable when a UE is roaming.
Preemption Capability	Enable this option if the packets in this QoS Flow can preempt other flows. When a flow is preemption-capable, it can be allocated resources that were already assigned to another data flow that has a lower ARP priority level.
Preemption Vulnerability	Enable this option if the packets in this QoS Flow are candidates for being preempted by other flows. When a flow is preemption-vulnerable, it can be dropped to free up resources for packets that have a higher ARP priority level.

## QoS Flow MBR configuration settings

MBR indicates the maximum bit rates allowed for service data flows that are mapped to this QoS flow. Separate MBR values are configured for uplink and downlink traffic.

The **QoS Flow MBR** settings are described in the table that follows.

Setting	Description
<i>MBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the maximum bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the maximum bit rate value for downlink traffic.

## QoS Flow GBR configuration settings

GBR indicates the guaranteed bit rates for service data flows that are mapped to this QoS flow. Separate GBR values are configured for uplink and downlink traffic.

The **QoS Flow GBR** settings are described in the table that follows.

Setting	Description
<i>GBR:</i>	
Uplink Bitrate Unit	Select the uplink bitrate unit from the drop-down list.
Uplink Bitrate Value	Set the guaranteed bit rate value for uplink traffic.
Downlink Bitrate Unit	Select the downlink bitrate unit from the drop-down list.
Downlink Bitrate Value	Set the guaranteed bit rate value for downlink traffic.

## CA Certificates

The following table describes the settings required for CA certificates upload.

Setting	Description
<i>CA Certificates:</i>	
	Select the <b>Add CA Certificate</b> button to add a new certificate to your test configuration.
<i>CA Certificate:</i>	
	Select the <b>Delete CA Certificate</b> button to remove the certificate from your test configuration.
Name	Each certificate is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Certificate File (.crt)	It allows you to add the certificate from the storage location, using the <b>Upload</b> button. To remove the script, select the <b>Clear</b> button.

## Customer Parameters

The section allows you to use custom parameters. When **Custom Parameters** is enabled, you can use the text section below to add the custom parameters.

## External Stats Server

If this option is selected, it will allow you to add an external statistic server.

The following table describes the settings required for the External Stats Server configuration.

Setting	Description
<i>External Stats Server:</i>	
Profile	This parameter allows you to upload or remove a stats server profile. Press <b>Upload</b> and load the preferred server profile, or <b>Clear</b> to dismiss one that is set.
Server Address	The address of the external stats server.

## Setting up a Profile

The External Stats Server feature allows you to forward statistic logs to an external server, thus requiring to upload a profile that defines where the stats are stored and what stats should be transferred.

**IMPORTANT** This feature is designed to support any type of external entity, but currently it supports only the Apache Kafka Plugin.

The parameters required to create the request to the external entity are configured in the **Profile** JSON file that is uploaded to Keysight Open RAN Simulators, Cloud Edition 5.0. The following structure and parameters describe the standard content of the JSON file:

Section/ Parameter	Definition	Code Sample
<i>Input section</i>		<p><i>Lists all the stats/config parameters used in the profile. All the parameters are already available in Keysight Open RAN Simulators, Cloud Edition 5.0. the following types are supported:</i></p>
stat	<p>It can be any stat supported in Keysight Open RAN Simulators, Cloud Edition 5.0. The stats can be filtered by any other stat from the stat response.</p>	<p>With filter sample:</p> <pre data-bbox="806 487 1437 846"> {   "type": "stat",   "group": "AgentStatistics",   "stat": "CPU Percent",   "name": "cpu_percent1",   "filterBy": {     "stat": "agentIP",     "value": "10.38.158.83"   } } </pre> <p>Without filter sample:</p> <pre data-bbox="806 925 1437 1199"> {   "type": "stat",   "group": "Fullcoreoverview_RegisteredAttachedUE",   "stat": "UEs Registered",   "name": "no_of_UE_Registered" } </pre>
config	<p>It can be any parameter exposed in the UI. The path is the same as the one used by the UI to set/get a parameter (see <a href="#">Parameter sample path on the next page</a> image).</p>	<pre data-bbox="806 1262 1437 1495"> {   "type": "config",   "group": "config/nodes/ausf/ranges/1/nodeSettings",   "stat": "mcc",   "name": "mcc" } </pre>
<i>Mappings section</i>		<p><i>Mapping will use any input parameter referred by name. Mapping also supports mathematical expressions to combine stats.</i></p>
	<p>For example, Keysight Open RAN Simulators, Cloud Edition 5.0 exposes <code>stat1</code> and <code>stat2</code> but the user needs <code>user_stat</code> which comprises (<code>stat1 +</code></p>	<ul style="list-style-type: none"> <li>• one parameter sample:</li> </ul> <pre data-bbox="806 1706 1437 1854"> {   "type": "controlplane",   "from": "no_of_UE_Registered",   "to": "no_of_UE_Registered" } </pre>

Section/ Parameter	Definition	Code Sample
	<p>stat2) /100. The expression is evaluated and the result sent under user_stat name.</p>	<pre data-bbox="817 333 1449 397">}</pre> <p>OR</p> <pre data-bbox="817 481 1449 671">{     "type": "controlplane",     "from": "mcc",     "to": "MCC" }</pre> <ul style="list-style-type: none"> <li>• with mathematical expression:</li> </ul> <pre data-bbox="817 777 1449 967">{     "type": "controlplane",     "from": "cpu_percent1/(cpu_percent1 + cpu_percent2)",     "to": "agent1 cpu ratio" }</pre>

## Parameter sample path



The screenshot shows a browser window with the URL <https://10.38.157.61/api/v2/sessions/wireless-07a05ef0-a421-4894-869d-81e6e88831aa/config/config/nodes/ausf/ranges/1/nodeSettings>. The page displays a JSON object representing node settings. The JSON structure includes fields like instanceId, mcc, mnc, routingIndicators, and links. The 'mcc' field is highlighted with a red underline.

```

{
  instanceId: "7ea3abc7-f0f6-435b-9154-125deddd101b",
  mcc: "226",
  mnc: "04",
  - routingIndicators: [
      1234,
      2222
    ],
  - links: [
    - {
      rel: "self",
      type: "self",
      method: "GET",
      href: "/api/v2/sessions/wireless-07a05ef0-a421-4894-869d-81e6e88831aa/config/config/nodes/ausf/ranges/1/nodeSettings"
    },
    - {
      rel: "meta",
      type: "meta",
      method: "GET",
      href: "/api/v2/sessions/wireless-07a05ef0-a421-4894-869d-81e6e88831aa/config/config/nodes/ausf/ranges/1/nodeSettings/$options"
    }
  ]
}

```

## Sample profile

```

{
  "profile": {
    "type": "kafka",
    "3gpp_scenario": "QUIC_ABR_DEBUG",
    "event_type": "ATTS-TOOLS-KEYSIGHT-EVENT",
  }
}

```

```

    "specversion": "1.1",
    "kafkatopics": "com.att.ant.stage.ATTSSKeysight.1.0",
    "kafkaschemaUrl": "https%3A%2F%2Fc1001.eastus2.uat.iebus.3pc.att.com%3A8082%2Fschemas%2Fids%2F6635&schemaId=14260",
        "kafkaHeaderBootstrapUrl": "c1001.eastus2.uat.iebus.3pc.att.com:9093",
        "kafkaHeaderSaslMechanism": "PLAIN",
        "kafkaHeaderOAuthScope": "ANT-data-feed-dev-stage",
        "kafkaUsername": "m30317@ant.att.com",
        "kafkaPassword": "August2023#",
        "input": [
            {
                "type": "stat",
                "group": "AgentStatistics",
                "stat": "CPU Percent",
                "name": "cpu_percent1",
                "filterBy": {
                    "stat": "agentIP",
                    "value": "10.38.158.83"
                }
            },
            {
                "type": "stat",
                "group": "AgentStatistics",
                "stat": "CPU Percent",
                "name": "cpu_percent2",
                "filterBy": {
                    "stat": "agentIP",
                    "value": "10.38.157.97"
                }
            },
            {
                "type": "config",
                "group": "config/nodes/ausf/ranges/1/nodeSettings",
                "stat": "mcc",
                "name": "mcc"
            },
            {
                "type": "config",
                "group": "config/nodes/ue/ranges/1/userPlane/tigerObjective/1/statelessUDP",
                "stat": "ipAddress",
                "name": "ipAddress"
            },
            {
                "type": "stat",
                "group": "Fullcoreoverview_RegisteredAttachedUE",
                "stat": "UEs Registered",
                "name": "no_of_UE_Registered"
            },
            {

```

```

        "type": "stat",
        "group": "Fullcoreoverview_PDUSessionEstablishment",
        "stat": "PDU Session Establishment Succeeded",
        "name": "no_of_PDU_Session_Established"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_UserPlaneThroughput",
        "stat": "L2-3 Device Rx Traffic",
        "name": "L3 Server::Total Bits/Sec"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_UserPlaneThroughput",
        "stat": "L2-3 Device Tx Traffic",
        "name": "L3 Client::Total Bits/Sec"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_TCPConnections",
        "stat": "TCP connections established",
        "name": "HTTP/s Handshakes Succeeded"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_TCPConnections",
        "stat": "TCP connect failed",
        "name": "HTTP/s Handshakes Failed"
    },
    {
        "type": "stat",
        "group": "Fullcoreapplicationtraffic_TCPConnections",
        "stat": "TCP connections closed normally",
        "name": "HTTP/s Connection Closed"
    }
],
"mappings": [
    {
        "type": "controlplane",
        "from": "cpu_percent1 + cpu_percent2",
        "to": "total cpu_percent %"
    },
    {
        "type": "controlplane",
        "from": "cpu_percent1/(cpu_percent1 + cpu_percent2)",
        "to": "agent1 cpu ratio"
    },
    {
        "type": "controlplane",
        "from": "cpu_percent2/(cpu_percent1 + cpu_percent2)",
        "to": "agent2 cpu ratio"
    }
]
}

```

```

},
{
  "type": "controlplane",
  "from": "mcc",
  "to": "MCC"
},
{
  "type": "controlplane",
  "from": "ipAddress",
  "to": "Destination IP Address"
},
{
  "type": "controlplane",
  "from": "no_of_UE_Registered",
  "to": "no_of_UE_Registered"
},
{
  "type": "controlplane",
  "from": "no_of_PDU_Session_Established",
  "to": "no_of_PDU_Session_Established"
},
{
  "type": "userplane",
  "from": "L3 Server::Total Bits/Sec",
  "to": "L3 Server::Total Bits/Sec"
},
{
  "type": "userplane",
  "from": "L3 Client::Total Bits/Sec",
  "to": "L3 Client::Total Bits/Sec"
},
{
  "type": "userplane",
  "from": "HTTP/s Handshakes Succeeded",
  "to": "HTTP/s Handshakes Succeeded"
},
{
  "type": "userplane",
  "from": "HTTP/s Handshakes Failed",
  "to": "HTTP/s Handshakes Failed"
},
{
  "type": "userplane",
  "from": "HTTP/s Connection Closed",
  "to": "HTTP/s Connection Closed"
}
]
}
}

```

**Event body sent to Kafka**

```
[
  {
    "eventBody": {
      "id": "wireless-0acbc45b-8777-4250-a3ec-4f00e47399c8_39",
      "time": "2024-02-29T13:57:35Z",
      "type": "ATTS-TOOLS-KEYSIGHT-EVENT",
      "specversion": "1.1",
      "source": "https://10.38.157.61/wireless-07a05ef0-a421-4894-869d-81e6e88831aa",
      "datacontenttype": "application/json",
      "payload": [
        {
          "type": "resource_info",
          "resource_info": {
            "simulated_tool_info": [
              {
                "tool_name": "LoadCore",
                "middleware_ip": "10.38.157.61"
              }
            ],
            "network_type": "5G",
            "3gpp_scenario": "QUIC_ABR_DEBUG"
          }
        },
        {
          "type": "test_execution_result",
          "test_execution_result": {
            "control_plane_result": {
              "Destination IP Address": "20.0.6.10",
              "MCC": "226",
              "agent1 cpu ratio": "0.455321",
              "agent2 cpu ratio": "0.544679",
              "no_of_PDU_Session_Established": "100",
              "no_of_UE_Registered": "0",
              "total cpu_percent %": "3.0902"
            },
            "userplane_plane_result": {
              "L3 Client::Total Bits/Sec": "0",
              "L3 Server::Total Bits/Sec": "0"
            }
          }
        },
        {
          "type": "test_execution_details",
          "test_execution_details": {
            "testName": "4 - Full Core Base Config",
            "testSessionID": "wireless-07a05ef0-a421-4894-869d-81e6e88831aa",
            "UserID": "admin@example.org",
            "testStatus": "STOPPING",
            "testStartTime": "2024-02-29T13:55:40Z",
            "testDuration": 105,
          }
        }
      ]
    }
  ]
]
```

```

        "testStopTime": "2024-02-29T13:57:31Z"
    }
}
],
"payloadType": "JSON",
"value": {}
}
]

```

## Global Playlists

The following table describes the settings required to define the global playlists.

Setting	Description
<i>Global Playlists:</i>	
	Select the <b>Add Global Playlist</b> button to add a new playlist to your test configuration.
<i>Impairment Profile:</i>	
	Select the <b>Delete Global Playlist</b> button to remove the playlist from your test configuration.
Name	Each playlist profile is uniquely identified by a name. You can accept the value provided by LoadCore or overwrite it with your own value.
Playlist file	It allows you to add a custom playlist, using the <b>Upload</b> button. To remove the file, select the <b>Clear</b> button.

## UE Global Parameters

The following table describes the settings required to define the UE global parameters

Setting	Description
<i>UE Global Parameters</i>	
Force IPv4 not NAT	If enabled, this parameter disables NAT on IPv4. It will set the alias IP of the APN of the UE instead the APCIP.
Enable Router Solicitation	This setting enables/disables the ICMPv6 router solicitation procedure.
IPv6 Local Link Subnet Prefix	This parameter specifies the IPv6 global subnet prefix (in hexadecimal format) and can be used as the 64 most-significant bits of an IPv6 address.

# UE configuration settings



You use the User Equipment (UE) configuration settings to define one or more ranges of simulated UEs. Every test requires at least one range of simulated UEs. These settings define properties that are representative of real-world UEs that may access a 5G network, including UE identity, security, network slice selection, among others.

In addition, the UE settings include the configuration of test objectives; these settings direct the traffic performance and UE behavior actions during test execution.

The configuration settings are described in the topics listed below.

## Topics:


<b>UE configuration panel</b>	<b>1121</b>
<b>UE Subscribers panel</b>	<b>1122</b>
Range Settings .....	1124
Test Procedures .....	1143
<b>UE Devices panel</b>	<b>1182</b>
Device Settings .....	1182
Basic Parameters .....	1183
Radio Capability settings .....	1183
Cyphering settings .....	1185
LADPm settings .....	1185
PSL1-L2 settings .....	1186
Layer 3 Signaling .....	1188
User Plane .....	1190
Physical Layer Parameters settings .....	1191
NR Physical Layer Parameters .....	1197
5GMM Parameters settings .....	1219
EMM Parameters settings .....	1219
Additional Capabilities .....	1223
<b>AMM Panel</b>	<b>1224</b>
AMM Settings .....	1224
Mobility Environment settings .....	1225

## UE configuration panel

The **UE** panel opens when you select the UE node from the network topology window. You can perform the following tasks from this panel:

- Add Subscribers to your test configuration
- Define the devices used by the UEs
- Define the Advance Mobility Management (AMM) environments.

**For example ...**

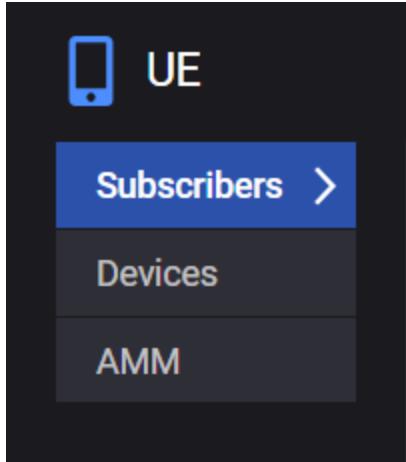

## UE Subscribers panel

In this section you can define the general scenario settings and subscribers.

### Scenario Settings

Setting	Description
<i>General:</i>	
Scenario Repetition Delay	This parameter specifies the delay time in millisecond to start subsequent scenario repetitions; it is the waiting time before starting the next scenario repetition; it is meaningful only if the Scenario Repetition number is greater than one.
Scenario Loop Enabled	This selector enables/disables the test scenario loop function. When enabled, the <b>Scenario Repetition</b> parameter is ignored and the test scenario is repeated infinitely.
Scenario Repetition	This parameter defines how many times this scenario will repeat. <b>IMPORTANT</b> This setting appears only if the <b>Scenario Loop Enabled</b> is disabled.
<i>Duration Parameters:</i>	
Duration Control Enables	This selector enables/disables the user specified duration for the test scenario. If it is enabled, the parameters described below are shown.
Duration Type	This parameter specifies the scenario duration type. Select a value from the drop-down list:

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Explicit</b> – (default) allows you to specify the scenario duration time by setting the Duration parameter</li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if the <b>Duration Control Enabled</b> parameter is enabled.</p>
Duration (s)	<p>This parameter specifies the time, in seconds, that the test scenario will last. Once the specified time elapses, the test scenario stops.</p> <p><b>IMPORTANT</b> This parameter becomes available only if the <b>Duration Type</b> parameter is set to <b>Explicit</b>.</p>
Graceful Shutdown Enabled	<p>This selector enables/disables the graceful shutdown feature. It is meaningful only if the <b>Duration Control Enabled</b> parameter is enabled and the <b>Duration</b> parameter has been specified.</p> <ul style="list-style-type: none"> <li>• If disabled, at the expiry of the <b>Duration</b> time, the scenario will be stopped immediately, any scheduled test procedures will be arrested and the connection with the Test Manager will be closed.</li> <li>• If enabled, at the expiry of the <b>Duration</b> time, the scenario will be stopped but the connection with the Test Manager will not be closed. The running test procedures will complete their execution, but no further test procedures will be scheduled.</li> </ul>

## Subscribers

This section allows you to add subscribers (in form of UE ranges) to your test.

Setting	Description
<i>Subscribers:</i>	
	Select the <b>Add Subscriber</b> button to add a new subscriber to your configuration.
<i>Ranges:</i>	
Range	Set the number of range copies to be created.
	Select the Create Subscriber Copies button to add subscribers with similar configuration profile.
	Select the <b>Delete Subscriber</b> button to remove the subscriber from your configuration.
Range Count	Enter the number of simulated UEs required for the range.
Associated Device	Select from the drop-down the name of the device that is associated to the subscriber.

<b>Setting</b>	<b>Description</b>
	<b>IMPORTANT</b> The devices listed should previously be defined in the <a href="#">Devices</a> section.
Phone Number	Specify the telephone number of the mobile subscriber (refer to <a href="#">3GPP TS 23.003</a> for further details on its format).
GPRS/EDGE Capabilities Enabled	Select to enable the GPRS/EDGE capabilities of this subscriber.
Logging Deciphered NAS	This parameter specifies whether the deciphered NAS messages related to this subscriber will be logged. <b>NOTE</b> This parameter is used together with the Deciphered NAS PDU function in the monitoring application (e.g. PE-Wireshark). Deciphered NAS PDUs are available in the monitoring application only for the subscribers that have this flag enabled.
Logging Group	This parameter specifies whether the subscriber belongs to the logging group. <b>NOTE</b> The logging group is used together with the Logging UE Group function in the monitoring application (e.g. PE-Wireshark). When the Logging UE Group function is enabled in the PE-Wireshark, only subscribers belonging to the logging group will be logged, otherwise all subscribers will be logged.

## Range Settings

For each range that you add , you configure the settings from the **Range** panel.

The **Range Settings** are organized into the following groups:

### UE Identification settings

Each UE range has a set of Identification settings that provide basic identity values for the simulated UEs that populate the range. Some of the values (such as MCC) are shared by all of the UEs in the range, while others (such as MSIN) are unique for each individual UE in the range. The unique values are generated using an initial value plus an increment value.

The following table describes the UE **Identification Settings**.

<b>Setting</b>	<b>Description</b>
PLMN MCC	The MCC that will be assigned to each UE in this range.
PLMN MNC	The MNC that will be assigned to each UE in this range.
MSIN	The MSIN value that will be assigned to the first simulated UE in the range. <b>About MSIN ...</b>

Setting	Description
	The Mobile Subscriber Identification Number (MSIN) is a number that a wireless operator uses to uniquely identify a mobile phone. It is—at most—10-digits long. The MSIN is used (in combination with the MCC and MNC) to form the International Mobile Subscriber Identity (IMSI) number.
MSIN increment	The value to use for incrementing the MSIN values for each of the UEs in the range.
IMEI	The IMEI value that will be assigned to the first simulated UE in the range. The International Mobile Equipment Identity (IMEI) is a number used to uniquely identify 3GPP and iDEN mobile phones, as well as some satellite phones. It identifies the origin, model, and serial number of the device. It consists of either 15 digits (14 digits plus one check digit); or 16 digits (14 digits plus two software version digits). GSM networks use the IMEI number to identify valid devices, and can also use the number to prevent a stolen phone from accessing the network. When it includes the software version digits, it is referred to as the IMEISV.
IMEI Increment	The value to use for incrementing the IMEI values for each of the UEs in the range.
Software Version	The software version number identifies the software version number of the mobile equipment. Its length is 2 digits.
MSISDN	The first Mobile Station ISDN (MSISDN) value for this range.
MSISDN Increment	The value to use for incrementing the MSISDNs in the range.

## UE Security settings

Each UE range requires security settings for subscriber authentication and subscriber privacy. In the 5G system, the SUbscription Permanent Identifier (SUPI) is a globally unique identifier allocated to each subscriber. The serving network must authenticate the SUPI in the process of authentication and key agreement between UE and network. The serving network authorizes the UE through the subscription profile obtained from the home network; this UE authorization is based on the authenticated SUPI.

The SUPI is never transferred in clear text over the 5G-RAN; instead, the SUCI is used. The SUbscription Concealed Identifier (SUCI) is a privacy-preserving identifier containing the concealed SUPI. In the 5G core network, only the UDM has authority to deconceal the SUCI.

For detailed information, refer to 3GPP TS 33.501 (Security architecture and procedures for 5G System).

The following table describes the UE **Security Settings**.

Setting	Description
SIM Configuration	<i>This subgroup defines the subscriber SIM configuration parameters.</i>

<b>Setting</b>	<b>Description</b>
Use Real SIM	This parameter enables/disables the use of a real SIM card that is located on the LSU SIM board. When this option is enabled, it requires <b>SIM card index</b> configuration, otherwise the authentication parameters are needed.
SIM Less	If enabled, the SIM Less parameter is applied to the subscriber.
SIM Card Index	This parameter specifies the slot number on the LSU SIM board where the SIM card is located. It is applicable only when a real SIM card is used for the subscriber.
SMS Center Address	This parameter specifies the address of the SMS center in international format, for example <i>00391234567890</i> .
Main Access Class	This parameter specifies the main access class supported by the subscriber. The supported range is 0 – 9 (refer to <a href="#">3GPP TS 22.011</a> for further details).
Force Hi Prio Access Establishment Cause	This parameter enables/disables the assignment of one or more Access Classes in the range 11 – 15 to the subscriber. Refer to 3GPP TS 36.304 for detail on Access Class. When enabled, it can support the Priority call, meaning that the status of rrcConnectionRequest is set to <code>establishmentCause="highPriorityAccess"</code> .
<i>Authentication</i>	
Authentication Key	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 32 characters/128 bits. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
Authentication Key Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Authentication Algorithm	<p>This parameter specifies the authentication algorithm used by the UE in case dummy authentication is disabled and real authentication is used. Select one of the options available in the drop-down: OPC, OP, TEST, TOP, TOPC.</p> <p>In case the dummy authentication is enabled, only the Authentication response parameter is required and other Authentication parameters will be ignored.</p> <p>See the Authentication response parameter to enable/disable dummy authentication.</p>
Authentication Response Parameter	This parameter specifies the authentication response calculated in the USIM (RES value) as defined in 3GPP TS 24.301 subclause 9.9.3.4.
Authentication OPC	<p><b>IMPORTANT</b> This option appears only if the <b>Authentication Algorithm</b> is set to <b>OPC</b>.</p>

Setting	Description
	This parameter specifies the OPc as defined in 3GPP TS 35.206 subclause 2.3 and 5.1. It must be a 16-byte hexadecimal string.
Opc Increment	<p><b>IMPORTANT</b> This option appears only if the <b>Authentication Algorithm</b> is set to <b>OPC</b>.</p> <p>The number used to increment the OPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPc value.</p>
Authentication OP	<p><b>IMPORTANT</b> This option appears only if the <b>Authentication Algorithm</b> is set to <b>OP</b>.</p> <p>This parameter specifies the OPc as defined in 3GPP TS 35.206 subclause 2.3 and 5.1. It must be a 16-byte hexadecimal string.</p>
Authentication Response Parameter length	This parameter specifies the length (in bytes) of the <b>Authentication Response Parameter</b> included in EMM Authentication Response. It is meaningful only if the the <b>Authentication Algorithm</b> parameter is set to <b>OPc</b> or <b>OP</b> .
TOP	<p><b>IMPORTANT</b> This option appears only if the <b>Authentication Algorithm</b> is set to <b>TOP</b>.</p> <p>A 64 character length/256-bit operator variant algorithm configuration field used by the TUAK authentication algorithm.</p>
TOPc	<p><b>IMPORTANT</b> This option appears only if the <b>Authentication Algorithm</b> is set to <b>TOPc</b>.</p> <p>A 64 character length/256-bit value derived from TOP and K used by the TUAK authentication algorithm.</p>
TOPc Increment	<p><b>IMPORTANT</b> This option appears only if the <b>Authentication Algorithm</b> is set to <b>TOPc</b>.</p> <p>The number used to increment the TOPc value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same TOPc value.</p>
RAND	<p>A hexadecimal number that represents the 128-bit random challenge.</p> <p>You can accept the value generated by LoadCore, or enter of a RAND value of your own choosing.</p>
RAND Increment	Specify the RAND increment value.
AUTN	The AUthentication TokeN (AUTN) to use when authenticating the UEs in this range.
<i>Access Classes</i>	
Main Access Class	This parameter specifies the main access class supported by the subscriber

<b>Setting</b>	<b>Description</b>
	and its range is 0 – 9 (refer to 3GPP TS 22.011 for further details).
<b>Force High Priority Access Establishment Cause</b>	Enable/disable the assignment of an Access Class in the range 11 – 15 to the subscriber. Refer to 3GPP TS 36.304 for details on Access Class.
<b>Supported Classes</b>	<p><b>IMPORTANT</b> This option appears only if the <b>Force High Priority Access Establishment Cause</b> is enabled.</p> <p>Select from the drop-down one or more classes to support:</p> <ul style="list-style-type: none"> <li>• <b>Class 11</b> - dedicated to PLMN use</li> <li>• <b>Class 12</b> - dedicated to security services</li> <li>• <b>Class 13</b> - dedicated to public utility</li> <li>• <b>Class 14</b> - dedicated to emergency services</li> <li>• <b>Class 15</b> - dedicated to PLMN staff.</li> </ul>
<b>NR Provisioning</b>	<i>This group allows to configure Failure Simulation parameters related to the subscriber and applies to the 5GNR context</i>
<b>Random Access Response Failure</b>	<p>This parameter allows to configure the Random Access Responses to discard. Possible values are :</p> <ul style="list-style-type: none"> <li>• <b>Discard all RARs</b> - never send Random Access Response</li> <li>• <b>Do not discard any RAR</b> – send Random Access Response immediately</li> <li>• <b>Number of RARs to discard before accepting a new one</b> - send Random Access Response after the specified number of attempts.</li> </ul>
<b>RRC MSG3 not acceptable</b>	This option specifies if the subscriber has to send a not acceptable RRC MSG3. If enabled, the subscriber will send the corresponding message.
<b>Out Of Time RRC Connection Setup</b>	This option specifies if the subscriber has completed the RRC Connection Establishment in time. If enabled, sending the RRC Setup Complete message will be skipped.
<b>Reconfiguration with Sync Failure</b>	If enabled, this option specifies if the subscriber has to send a SCGFailure information message with failure type <code>synchReconfigFailure-SCG</code> .
<b>SRB3 IP Check Failure</b>	If enabled, this option specifies if the subscriber has to send a SCGFailure information message with failure type <code>srb3-IntegrityFailure</code> .
<b>EPS Fallback working mode upon IRAT 4G-&gt;5G Failure</b>	This parameter specifies the EPS Fallback working mode. Please note that it works only if "voiceFallbackIndicationEPS-r16" capability is enabled for the associated device.
<b>Routing Indicator</b>	The Routing Indicator that is used in the construction of the SUCI.

<b>Setting</b>	<b>Description</b>												
	The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.												
Home Network Public Key ID	The Home Network Public Key Identifier that will be used to indicate which public/private key pair to use for SUPI protection and deconcealment of the SUCI.												
Protection Scheme ID	<p>The protection scheme used to generate the SUCI (for the purpose of concealing the SUPI) for each UE in the range. The options are as follows:</p> <table border="1" data-bbox="442 635 1437 952"> <thead> <tr> <th data-bbox="442 635 572 692"><b>Schema</b></th> <th data-bbox="572 635 768 692"><b>Identifier</b></th> <th data-bbox="768 635 1437 692"><b>Size of the scheme output</b></th> </tr> </thead> <tbody> <tr> <td data-bbox="442 692 572 783">null-scheme</td><td data-bbox="572 692 768 783">0x0</td><td data-bbox="768 692 1437 783">Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)</td></tr> <tr> <td data-bbox="442 783 572 895">Profile-A</td><td data-bbox="572 783 768 895">0x1</td><td data-bbox="768 783 1437 895">Total of 256-bit public key, 64-bit MAC, and size of input</td></tr> <tr> <td data-bbox="442 895 572 952">Profile-B</td><td data-bbox="572 895 768 952">0x2</td><td data-bbox="768 895 1437 952">Total of 264-bit public key, 64-bit MAC, and size of input.</td></tr> </tbody> </table>	<b>Schema</b>	<b>Identifier</b>	<b>Size of the scheme output</b>	null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)	Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input	Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.
<b>Schema</b>	<b>Identifier</b>	<b>Size of the scheme output</b>											
null-scheme	0x0	Size of the input (size of username used in case of NAI format or MSIN in case of IMSI)											
Profile-A	0x1	Total of 256-bit public key, 64-bit MAC, and size of input											
Profile-B	0x2	Total of 264-bit public key, 64-bit MAC, and size of input.											

## 5GMM Parameters

This group allows you to configure EMM parameters related to the subscriber.

<b>Setting</b>	<b>Description</b>
<i>5GMM Parameters:</i>	
UE's Usage Setting	<p>This parameter specifies UE's usage setting, refer to the specification 3GPP TS 24.301. You can select one of the values in the drop-down list:</p> <ul style="list-style-type: none"> <li>• Voice Centric</li> <li>• Data Centric</li> </ul>
Voice Domain Preferred	<p>This parameter specifies the voice domain preference (refer to the 3GPP TS 24.301 specification for more details). Possible options are:</p> <ul style="list-style-type: none"> <li>• Voice Only</li> <li>• IMS PS Voice Only</li> <li>• CS Voice Preferred, IMS PS Voice as Secondary</li> <li>• IMS PS Voice Preferred, CS Voice as Secondary</li> </ul>
Timer 3324	<p>This option forces the state over the the Timer T3324. You can select between the two options: <b>Disabled</b>, <b>Deactivated</b> or <b>Activated</b>.</p> <p>If <b>Activated</b> option is set, it will trigger the <b>Timer 3324 value</b> parameter to appear.</p>

Setting	Description
Timer 3324 value	<p>This parameter specifies the value of timer 3324 (in milliseconds) proposed by an UE supporting PSM, as defined in 3GPP TS 24.301.</p> <p><b>IMPORTANT</b> This parameter appears only if the <b>Timer 3324</b> is set to <b>Activated</b>.</p>
Forced periodic Tracking Area Update timer (T3512)	<p>This option forces the state over the the Timer T3512's tracking area update. You can select between the two options: <b>Disabled</b> or <b>Activated</b>.</p> <p>If <b>Activated</b> option is set, it will trigger the <b>Forced periodic Tracking Area Update timer T3512 Value</b> parameter to appear.</p>
Force periodic Tracking Area Update timer T3512 Value	<p>This parameter specifies the value of the periodic Tracking Area Update timer (T3512) in milliseconds, in order to overwrite the value assigned by EPC during EMM Attach or EMM TAU procedures (refer to 3GPP TS 24.301 for details).</p> <p><b>IMPORTANT</b> This parameter appears only if the <b>Forced periodic Tracking Area Update timer (T3512)</b> is set to <b>Activated</b>.</p>
Enable Timer 3512	<p>This option will enable the user to enable and configure Timer 3512.</p>
Timer 3512	<p>Configure the value of Timer 3512. The AMF should include this IE during the initial registration procedure over 3GPP access. The AMF may include this IE during the mobility and periodic registration update procedure over 3GPP access.</p> <p><b>IMPORTANT</b> This parameter appears only if the <b>Enable Timer 3512</b> is enabled.</p>
Extended Periodic Timers supported	<p>This parameter specifies if the UE supports extended periodic timers management, as defined in 3GPP TS 24.301/9.9.3.20A.</p>
Enable Timer 3512 extended value	<p>This parameter enables/disables the Timer 3512 extended value parameter. If enabled, the Timer 3512 Extended Value parameter is available.</p>
Timer 3512 Extended Value	<p>Specify the extended value of timer T3512 proposed by UE, as defined in 3GPP TS 24.301/9.9.3.16B.</p> <p><b>IMPORTANT</b> This parameter appears only if the <b>Enable Timer 3512 extended value</b> is enabled.</p>
Enable eDRX	<p>This parameter enables/disables the configuration of the <b>PTW WB-S1</b> and <b>eDRX S1</b> parameters.</p> <p>These parameters are used in the Extended DRX parameters information element, and their purpose is to indicate that the UE wants to use eDRX. Refer to 3GPP TS</p>

Setting	Description
	24.008/10.5.5.32. If the MME accepts the extended idle mode DRX, the MME based on operator policies may also provide different values of the extended idle mode DRX parameters than what was requested by the UE.
PTW WB-S1	The parameter contains the Paging Time Window (PTW) value for WB-S1 mode. Refer to 3GPP TS 24.008/10.5.5.32 for more information. <b>IMPORTANT</b> This parameter appears only if the <b>Enable eDRX</b> is enabled.
eDRX S1	This parameter contains the eDRX value for S1 mode. Refer to 3GPP TS 24.008/10.5.5.32. The E-UTRAN eDRX cycle length duration value and the eDRX cycle parameter TeDRX are derived from the eDRX value. <b>IMPORTANT</b> This parameter appears only if the <b>Enable eDRX</b> is enabled.
Paging eDRX CRC Type	Select from the drop-down the algorithm used to compute the P-HSN starting from the UE identity (S-TMSI). <b>IMPORTANT</b> This parameter appears only if the <b>Enable eDRX</b> is enabled.

## RRC Parameters

This group allows to configure Radio Resource Control (RRC) parameters related to the subscriber. The following table describes the UE **RRC Parameters** settings.

Setting	Description
<b>RRC Parameters</b>	
Skip SN0 AM	If enabled, the sending of PDCP SN=0 with RLC AM is skipped.
Skip SN0 UM	If enabled, the sending of PDCP SN=0 with RLC UM is skipped.
T304 NR	This parameter allows users to specify in milliseconds the value of the T304 timer defined in 3GPP TS 38.331. If set to 0 (default), the value of the T304 timer is taken from the t304 parameter included in the RRCReconfiguration message defined in 3GPP TS 38.331.
Control Plane Only Enabled	This parameter allows to enable/disable the Control Plane Only feature without configuring the PDCP/RLC/MAC protocol layer parameters. It is meaningful only when the eNB is simulated.
Discard All Pagings	If disabled (default), the subscriber is enabled to respond to the received pagings according to the followed settings. If enabled, the subscriber is forced to discard each paging received without responding.
1 <sup>st</sup> Paging	This parameter defines the percentage of the first paging to which the

<b>Setting</b>	<b>Description</b>
Responded	<p>subscriber will response.</p> <p><b>NOTE</b> A first paging is a paging received by the subscriber at the first time after last paging response.</p> <p><b>IMPORTANT</b> This parameter is disabled if <b>Discard All Pagings</b> is enabled.</p>
2 <sup>nd</sup> Paging Response	<p>This parameter defines the percentage of second paging to which the subscriber will provide response.</p> <p><b>NOTE</b> A second paging is a paging received by the subscriber at the second time after last paging response.</p> <p><b>IMPORTANT</b> This parameter is disabled if <b>Discard All Pagings</b> is enabled.</p>
3 <sup>rd</sup> Paging Response	<p>This parameter defines the percentage of third pagings to which the subscriber will provide response.</p> <p><b>NOTE</b> A third paging is a paging received by the subscriber at the third time after last paging response.</p> <p><b>IMPORTANT</b> This parameter is disabled if <b>Discard All Pagings</b> is enabled.</p>
RRC NR Forced Reestablishment Cause	<p>This parameter defines the cause of the RRC Reestablishment Request. Default value is <b>None</b>, meaning that the natural cause will be used. See 3GPP 38.331, paragraph 5.3.7.4 for details. You can select from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)</li> <li>• <b>Reconfiguration Failure</b></li> <li>• <b>Handover Failure</b></li> <li>• <b>Other Failure</b></li> </ul>
RRC Connection Request - Discard Percentage	<p>This parameter defines the percentage of RRC Connection Request messages that will be discarded. A <b>0</b> discarding percentage (default) means no discarding of any RRC Connection Request message, while <b>100</b> means to discard all RRC Connection Request messages.</p>
RRC Connection Setup - Discard Percentage	<p>This parameter defines the percentage of RRC Connection Setup messages that will be discarded. A <b>0</b> discarding percentage (default) means no discarding of any RRC Connection Setup message, while <b>100</b> means to discard all RRC Connection Setup messages.</p>
RRC Connection Reconfiguration - Discard Percentage	<p>This parameter defines the percentage of RRC Connection Reconfiguration messages that will be discarded. A <b>0</b> discarding percentage (default) means no discarding of any RRC Connection Reconfiguration message, while <b>100</b> means to discard all RRC Connection Reconfiguration messages.</p>
RRC Connection Reestablishment -	<p>This parameter defines the percentage of RRC Connection Reestablishment messages that will be discarded. A <b>0</b> discarding percentage (default) means</p>

<b>Setting</b>	<b>Description</b>
Discard percentage	no discarding of any RRC Connection Reestablishment message, while <b>100</b> means to discard all RRC Connection Reconfiguration messages.
RRC Connection Release - Discard Percentage	This parameter defines the percentage of RRC Connection Release messages that will be discarded. A <b>0</b> discarding percentage (default) means no discarding of any RRC Connection Release message, while <b>100</b> means to discard all RRC Connection Release messages.
RRC Security Mode Command - Discard Percentage	This parameter defines the percentage of RRC Security Mode Command messages that will be discarded. A <b>0</b> discarding percentage (default) means no discarding of any RRC Security Mode Command message, while <b>100</b> means to discard all RRC Security Mode Command messages.
Handover - Discard Percentage	This parameter defines the discarding percentage of the messages that trigger Handover procedure (RRC Connection Reconfiguration, including Mobility Control Information IE). A <b>0</b> discarding percentage (default) means no discarding of any Handover triggering message, while <b>100</b> means to discard all Handover triggering messages.
NR Handover - Discard Percentage	This parameter defines the discarding percentage of the messages that trigger Handover procedure (RRC Connection Reconfiguration, including Mobility Control Information IE). A <b>0</b> discarding percentage (default) means no discarding of any Handover triggering message, while <b>100</b> means to discard all Handover triggering messages.
Enable MMTel Voice	This option enables/disables the Voice Multimedia Telephony Service for the mobile equipment, as described in 3GPP TS 36.331/5.3.3, 6.3.1.
Enable MMTel Video	This option enables/disables the Video Multimedia Telephony Service for the mobile equipment, as described in 3GPP TS 36.331/5.3.3, 6.3.1.
Enable MMTel SMS	This option enables/disables the SMS Multimedia Telephony Service for the mobile equipment, as described in 3GPP TS 36.331/5.3.3, 6.3.1.
ACDC Category	<p>This parameter defines the Application-specific congestion Control for Data Communication ( ACDC) category, as defined in 3GPP TS 24.105.</p> <p>This value should be an integer ranging from 0 to 16. The lowest ACDC Category value corresponds to the highest ranked ACDC category and a UE treats the applications assigned to the highest ranked ACDC category as the least restriction to access attempts, and vice versa.</p>
NB-IoT Category	<p>This parameter indicates the category of UEs for which Access Barring (AB) applies. Possible values are:</p> <ul style="list-style-type: none"> <li>A - corresponds to all UEs</li> <li>B - corresponds to the UEs that are neither in their HPLMN nor in a PLMN that is equivalent to it</li> <li>C - corresponds to the UEs that are neither in the PLMN listed as most preferred PLMN of the country where the UEs are roaming in the operator-</li> </ul>

Setting	Description
	defined PLMN selector list on the USIM, nor in their HPLMN, nor in a PLMN that is equivalent to their HPLMN (see 3GPP TS 22.011 for more information).
Autonomous trigger for RRC_INACTIVE to RRC_IDLE transition	If this parameter is enabled, UeSIM will not execute the RRCResume procedure for RNA Update when triggered, but will consider it failed, as if T319 had expired, changing the state to RRC_IDLE.

## L2 Parameters

This group allows you to configure L1/L2 parameters related to the subscriber.

Setting	Description
<i>L2 Parameters:</i>	
CRNTI	This parameter specifies the value of the Cell RNTI (Radio Network Temporary Identifier). Default value is <b>1</b> . <b>IMPORTANT</b> A <b>0</b> value is not allowed.
UL HARQ enabled	This parameter enables/disables the uplink Hybrid ARQ (HARQ) process.
DL HARQ enabled	This parameter enables/disables the downlink Hybrid ARQ (HARQ) process.
Layer	This parameter specifies the layer over which the traffic starts. Possible values are: <b>HARQ, MAC, RLC, or PDCP</b> .
SR Storm	This parameter enables/disables the SR Storm.

## L2 Test

This group allows you to configure L1/L2 test parameters related to the subscriber.

Setting	Description
<i>L2 Test:</i>	
Cmti	This parameter specifies the C-RNTI value defined in the 3GPP TS 38.321 standard. Allowed value range is <b>1 – maxC-RNTI</b> , where maxC-RNTI is <b>65519 (0xffff)</b> ."
LsuCellId	This parameter specifies the LSU CellId value.
BeamId	This parameter specifies the BeamId value.
L1L2RbTypeIdList	This parameter specifies the EPS Bearer to be involved in the

<b>Setting</b>	<b>Description</b>
	L2 test.
timeAlignmentTimerDedicated	This parameter specifies the TimeAlignmentTimer value as defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
periodicBSR_Timer	This parameter specifies the periodicBSR-Timer value as defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
retxBSR_Timer	This parameter specifies the retxBSR_Timer value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
periodicPHR_Timer	This parameter specifies the periodicPHR_Timer value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
prohibitPHR_Timer	This parameter specifies the prohibitPHR_Timer value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
prach_ConfigIndex	This parameter specifies the prach-ConfigIndex value defined in 3GPP TS 38.321 (MAC) and 38.331 (RRC). Allowed value range is 0–255.
preambleReceivedTargetPower	This parameter specifies the value of preambleReceivedTargetPower as defined in 3GPP TS 38.321 (MAC) and 38.331 (RRC). Allowed value range is -200 – -74.
rsrp_ThresholdSSB	This parameter specifies the rsrp-ThresholdSSB value defined in 3GPP TS 38.321 (MAC) and 38.331 (RRC). Allowed value range is 0 – 140.
sul_RSRP_Threshold	This parameter specifies the sul-RSRP-Threshold value defined in 3GPP TS 38.321 (MAC) and 38.331 (RRC). Allowed value range is 0 – 140.
ra_PreambleIndex	"tooltip": "This parameter specifies the ra-PreambleIndex value defined in 3GPP TS 38.321 (MAC) and 38.331 (RRC). Allowed value range is 0 – 63."
preamblePowerRampingStep	This parameter specifies the preamblePowerRampingStep value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
ra_ssbs_OccasionMaskIndex	This parameter specifies the value of ra_ssbs_OccasionMaskIndex defined in 3GPP TS 38.321 and 38.331. Allowed value range is: 0 – 15.

<b>Setting</b>	<b>Description</b>
preambleTxMax	This parameter specifies the preambleTxMax value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
totalNumberOfRA_Preambles	This parameter specifies the totalNumberOfRA-Preambles value defined in 3GPP TS 38.331. Allowed value range is 1 – 63.
ssb_perRACH_Occasion	This parameter specifies the ssb_perRACH_Occasion value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
ra_Msg3SizeGroupA	This parameter specifies the ra_Msg3SizeGroupA value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
numberOfRA_PreamblesGroupA	This parameter specifies the numberOfRA-PreamblesGroupA value defined in 3GPP TS 38.321 and 38.331. Allowed value range is 1 – 64.
deltaPreambleMsg3	This parameter specifies the value of deltaPreambleMsg3 defined in 3GPP TS 38.321 (MAC), 38.331 (RRC, Delta-Preamble-Msg3), and 38.213 (Physical Layer, Delta-Preamble-Msg3). Allowed value range is -1 – 6.
messagePowerOffsetGroupB	This parameter specifies the messagePowerOffsetGroupB value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
ra_ResponseWindow	This parameter specifies the ra_ResponseWindow value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
ra_ContentionResolutionTimer	This parameter specifies the ra_ContentionResolutionTimer value defined in 3GPP TS 38.321 and 38.331. Select from the drop-down one of the available values.
ra_test_01	This parameter specifies if RA test mode type 1 is enabled (preamble during RA is not performed). Default value is <b>False</b> .
Rt_Preamble	This parameter is valid only if the <b>ra_test_01</b> parameter is set to <b>True</b> . It specifies which Preamble is accepted in a RAR. Allowed values are -1 (all) or a value included in the range of 0 to 63.
Rt_RaRnti	This parameter is valid only if the <b>ra_test_01</b> parameter is set to <b>True</b> . It specifies which RA-RNTI is accepted as valid in a RAR message.

Setting	Description
	<p>Allowed values are:</p> <ul style="list-style-type: none"> <li>• <b>-1</b> - any RA-RNTI value is considered valid in a RAR message</li> <li>• <b>1 – 65519</b> (0xFFEF) - specifies the only RA-RNTI value considered valid in a RAR message.</li> </ul>

## DNNs Config

You use the DNNs Config panel to configure one or more Data Network Names (DNNs) for each UE range. These settings establish a mapping between DNNs and UE IPs, thereby enabling multiple PDU sessions for each UE in the range.

The following table describes the UE **DNNs Config** settings.

Setting	Description
<i>DNNs Config:</i>	
	From the panel, you can select a DNN Config for editing and also add addition DNN configurations. Select the <b>Add DNNs Config</b> button to add a new DNN configuration.
<i>DNN Config:</i>	
	Select the <b>Delete DNN Config</b> button to delete this DNN configuration from your test configuration.
SSC Mode	<p>Session and Service Continuity (SSC) Mode for this DNN:</p> <ul style="list-style-type: none"> <li>• SSC Mode 1: The network preserves the connectivity service provided to the UE. The PDU Session IP address (IPv4, IPv6, IPv4v6) is preserved.</li> <li>• SSC Mode 2: The network may release the connectivity service delivered to the UE and release the corresponding PDU Sessions. The release of the PDU induces the release of the IP addresses (IPv4, IPv6, IPv4v6) that had been allocated to the UE.</li> <li>• SSC Mode 3: Changes to the user plane can be visible to the UE, while the network ensures that the UE suffers no loss of connectivity. A connection through a new PDU Session Anchor point is established before the previous connection is terminated in order to allow for better service continuity. The IP address (IPv4, IPv6, IPv4v6) is not preserved in this mode when the PDU Session Anchor changes.</li> </ul>
Session ID	Provide the session ID value.
Alternate Session ID	<p><b>IMPORTANT</b> This parameter becomes available only if <b>SSC Mode</b> is set to <b>SSC Mode 2</b> or <b>SSC Mode 3</b>.</p> <p>Provide an alternate session ID value.</p>

Setting	Description
DNN	Select one of the previously-defined DNNs from the drop-down list.
Local IPv4 Address	The IPv4 address that the UE receives from the SMF during PDU Session Establishment. This address is used for L4-7 traffic (source IP for the UL traffic, destination IP for the DL traffic). It is used only when LoadCoresimulates the SMF. IP address is also used to create UE Routes from DN.
Local IPv4 Address Increment	The value by which the IP addresses will be incremented.
Local IPv6 Address	The IPv6 address that the UE receives from the SMF during PDU Session Establishment. This address is used for L4-7 traffic (source IP for the UL traffic, destination IP for the DL traffic). It is used only when LoadCoresimulates the SMF. IP address is also used to create UE Routes from DN.
Local IPv6 Address Increment	The value by which the IP addresses will be incremented.
Configure S-NSSAI:	<i>When this check-box is selected, you can configure which slice (S-NSSAI) to be send in PDU Session Establishment messages. If the check-box is not selected, the first slice from Allowed NSSAI list (received in Registration Accept) is used in PDU Session Establishment message.</i> <b>NOTE</b> <i>This is applicable for the N1/N2 interface only and is not propagated beyond the AMF.</i>
S-NSSAI	This list contains all the slices defined for the selected UE range. Select from the drop-down list the slice to be used in PDU Session Establishment.
<i>Secondary Authentication:</i>	
User	Provide the user.
Password	Provide the password.
Send User Identity	By default, this option is disabled. Enabling this option will add SM PDU DN Request Container IE (Authentication Identity) to the PDU Session Establishment Request message send by NG-RAN.

## Default Configured NSSAI

The following table describes the UE **Default Configured NSSAI** settings.

Setting	Description
<i>Default Configured NSSAI:</i>	

<b>Setting</b>	<b>Description</b>								
	Select the <b>Add Default Configured NSSAI</b> button to add the NSSAI settings to your test configuration.								
<i>Default Configured NSSAI:</i>									
	Select the <b>Delete Default Configured NSSAI</b> button to delete this NSSAI settings configuration from your test configuration.								
SST	The value that identifies the SST (Slice/Service Type) for this S-NSSAI. SST comprises octet 3 in the S-NSSAI information element. The standardized SST values are: <table border="1" data-bbox="349 639 1437 882"> <thead> <tr> <th><b>SST</b></th><th><b>Value</b></th></tr> </thead> <tbody> <tr> <td>eMBB</td><td>1</td></tr> <tr> <td>URLCC</td><td>2</td></tr> <tr> <td>MIoT</td><td>3</td></tr> </tbody> </table>	<b>SST</b>	<b>Value</b>	eMBB	1	URLCC	2	MIoT	3
<b>SST</b>	<b>Value</b>								
eMBB	1								
URLCC	2								
MIoT	3								
SD	The Slice Differentiator (SD) value for this SNSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the S-NSSAI.								
Mapped SST	The Mapped Slice/Service Type (SST) value for this NSSAI.								
Mapped SD	The Mapped Slice Differentiator (SD) value for this NSSAI.								

## Core Settings

Each UE range has a set of **Core Settings** that configure subscription data and PDU session data for the range.

<b>Setting</b>	<b>Description</b>
<i>Core Settings:</i>	
Enable Passthrough	Select this option to enable passthrough and any interface. Applicable to all passthrough topologies (UE/gNB or UPF). Applicable to either direction: GTPu to IP or/and IP to GTPu.
Update GUTI in TAU	Select to enable this option.
Unsolicited Router Advertisement	Select to enable this option.
AMF Force	This option will force the AMF to always trigger the "Identification

<b>Setting</b>	<b>Description</b>
Identification During Registration	Procedure" to get the identity of the UE. When the NG-RAN node receives this request, it responds with the IMEISV or the SUCI.
Send Registration Accept in Initial Context Setup Request	If enabled, the UE will send Registration Accept in Initial Context Setup Request.
Delay Before Paging (ms)	The time to wait before paging, after UE enters idle mode.
Paging Storm Iterations	The number of times the UE will be paged.
Paging Storm Interval (ms)	The delay between paging messages, in milliseconds.
<i>Location Reporting</i>	<i>Select the check box to enable location reporting as defined in TS 23.502 (supported on the AMF and NG-RAN nodes).</i>
Reporting Type	<p>Select the value from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <b>Direct</b> - If the test timeline is long enough, the AMF generates <math>n</math> LocationReportingControl messages at every <math>m</math> seconds from the moment Registration Complete message is received by the AMF (<math>n</math> is the value configured for <a href="#">Number of Repeats</a> and <math>m</math> is the value of <a href="#">Interval Between Requests</a>).</li> <li>• <b>Change of Serving Cell</b> - In case of Handover with AMF change, if this option is selected, after handover, the new AMF will send a LocationReportingControl message to the NG-RAN.</li> </ul>
Interval Between Requests (s)	Set the time interval between requests.
Number of Repeats	Set the number of repeats.
Start Time (s)	The number of seconds after successful attach when the AMF sends a LocationReportingControl message (event-type: change-of-serve-cell).
Stop Time (s)	The number of seconds since the <a href="#">Start Time</a> when the AMF sends LocationReportingControl message ( event-type: stop-change-serving-cell).
<i>SMF Initiated PDU Session Release</i>	<i>Select the check box to enable this option.</i>
Time to Wait before SMF Initiated PDU Session Release (s)	Time in seconds to wait before SMF initiated PDU session release.
DNNs	Select the DNNs from the drop-down list.

<b>Setting</b>	<b>Description</b>
	<p>The available options are:</p> <ul style="list-style-type: none"> <li>• Select All/Deselect All: Select/deselect this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul>
<i>Network Initiated Deregistration</i>	<i>Select the check box to enable this option.</i>
Time to wait before Network Initiated Deregistration (s)	Time in seconds to wait before network initiated deregistration.
Set Reregistration Required Flag in Deregistration Request Message	Enable this option to set a required reregistration flag in the deregistration request message.
<i>AMF Initiated UE Context Release</i>	<i>Select the check box to enable this option.</i>
Time to Wait before AMF Initiated UE Context Release (s)	Time in seconds to wait before AMF initiated UE context release.

## Mobility Settings

The following table describes the UE **Mobility** settings.

<b>Setting</b>	<b>Description</b>
Associated Mobility Environment	This option defines which radio condition to use for UEs in the group. The drop-down will display the available AMM tables from the Mobility Environment Library defined in the <a href="#">AMM Panel</a> section.
Spatial Displacement	<p>Select from the drop-down the UEs allocation over the route. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>Round Robin</b> - UEs are spread all the way-points in a round robin manner (for example, if the scenario group has 10 UEs and the route has 10 way-points, each UE will be allocated on each way-point, if the route has 5 way-points there are 2 UEs over each way-points).</li> <li>• <b>Index</b> - UEs start the simulation from the Position Index. Position Index defines the row index of the Environment Mobility table selected in the Mobility Environment.</li> <li>• <b>Modulo</b> - defines which is the starting row of the AMM table for each UE-based MSID mod Tlen, where MSID is the parameter in the user database, and Tlen (Table Length) is the number of environment mobility rows</li> </ul>

<b>Setting</b>	<b>Description</b>
	selected in the selected Mobility Environment. Example given, if UE MSID is 1 and the row numbers in the table are 10 ( $1 \bmod 10 = 1$ ), it means the UE starts the simulation from the first row of the AMM table.
Position Index	The index of row from Mobility table from where the UE should start the mobility path.
Temporal Displacement	<p>This option defines when the AMM table parsing has to start. Options available are:</p> <ul style="list-style-type: none"> <li>• <b>Session Driven</b> - the UE and AMM table parsing start at the same time based on Session Interval Time parameter configured on the session properties. For each UE, the AMM table parsing starts when the UE begins to simulate session procedures. In other words, if the UE is not starting its simulation, will not have any radio condition in place.</li> <li>• <b>Scenario Driven</b> - The AMM table parsing starts at the same time the scenario start. It means that the UE not starting procedures emulation yet already has the radio condition applied on it.</li> </ul>
Distribution	This parameter is an additional setting for Temporal Displacement, it uniformly start UEs over the table length. It means that the last UE from the subscriber list starts the AMM table parsing before the first UE ends the AMM table parsing.
Override Option	<p>This parameter defines in which cell the UE attaches to the scenario simulation, and applies when there are more than one cell in the scenario simulation. Available options are:</p> <ul style="list-style-type: none"> <li>• <b>None</b> - mobility path should be executed sequentially, as defined</li> <li>• <b>Initial Cell Attached</b> - UE starts the attach procedure with the better RSRP value in the AMM table. It will trigger the selection of a specific cell from the cells list of the SID file.</li> <li>• <b>EARFCN Attached</b> - defines the Evolved Absolute Radio Frequency Channel Number (EARFCN) used by the UE to start the attach procedure. It will trigger the selection of a EARFCN cells in the SID file.</li> </ul>
Initial Cell Attached	<p><b>IMPORTANT</b> This parameter appears if the <b>Override Option</b> is set to <b>Initial Cell Attached</b>.</p> <p>Select the specific cell from the drop-down.</p>
DL EARFCN	<p><b>IMPORTANT</b> This parameter appears if the <b>Override Option</b> is set to <b>EARFCN Attached</b>.</p> <p>Set the specific channel in the field.</p>
Upon Detach	<p>This parameter allows to manage the initial position of the subscriber before repetition of a Session Block.</p> <ul style="list-style-type: none"> <li>• If disabled (default), the subscriber continues moving along the defined route until it reaches the ending point</li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li>If enabled, the subscriber moves immediately to the starting position after the detach.</li> </ul>
Cell Binding	<p><i>This parameter specifies the association between the cells defined for Advanced Mobility Management and LSU cells.</i></p> <p><i>A custom cell binding is required because the Mobility Environment is not computed starting from the Network Topology on the map. Assign an LSU cell to every cell in the custom Mobility Environment. In order to use the AMM feature, it is mandatory to configure this parameter. See <a href="#">Cell Binding</a> table for further configuration.</i></p>

## Cell Binding

The following table describes the **Cell Binding** settings.

Setting	Description
<i>Cell Binding:</i>	
 +	Select the <b>Add Cell Binding</b> button to add the Cell Binding settings to your test configuration.
<i>Cell Binding:</i>	
	Select the <b>Delete Default Configured NSSAI</b> button to delete this NSSAI settings configuration from your test configuration.
Name	Type the name of this new binding.
AMM Cell	Select from the drop-down the AMM cell to associate with this binding. The list will display the cells defined in the <a href="#">AMM Panel</a> section.
RU Cell	Select from the drop-down the RU cell to associate with this binding. The list will display the cells defined in the <a href="#">RU node</a> section.

## Test Procedures

UeSIM/RuSim test procedures are classified in groups according to their functions, as shown in the Mobility Profiles and Test Procedures window. Each test group contains a set of test procedures, as described in following paragraphs. According to the selected perspective, different test procedures are provided.

## Scenario settings

The **Settings** feature defines the properties of the subscriber's group .

Setting	Description
<i>Group Settings:</i>	

Setting	Description
Looped Group Repetitions	This option enables/disables the group loop function. If enabled, the group is repeated infinitely.
Repetitions	This parameter appears only if <b>Looped Group Repetition</b> is disabled. It specifies the number of times the test procedures are repeated.
<i>General:</i>	
Test Suite Name	Provide the name of the test session.
Access Network	This parameter specifies a session type: LTE or NR. By default, this parameter is automatically set to FiveG NR.
Session Scheduling:	<i>This group defines the scheduling of session execution. A session iteration consists of the execution of all test procedures included in the session.</i>
Random Rate	This parameter enables/disables the use of a random distribution of the session interval time. When this option is enabled, the time between two consecutive MS activations is a randomly generated value between the minimum and the maximum been delimited according to the exponential distribution.
Execution Mode	<p>This parameter specifies the execution mode of the session iteration. You can set one of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Normal</b> - the session iteration is repeated according to what is specified in the Session <b>Repetition Number</b> parameter</li> <li>• <b>Attempt</b> - the session iteration is executed according to what is specified in the <b>Max Attempt</b> and <b>Stop Attempt</b> parameters; this execution mode is useful for sessions that are dedicated to perform CS Registration/PS Registration/PDP Activation</li> <li>• <b>Looped</b> - the session iteration is repeated infinitely without considering what is specified in the Session <b>Repetition</b> parameter.</li> </ul>
Repetition Mode	<p><b>IMPORTANT</b> This parameter is available only if <b>Execution Mode</b> is set to either <b>Normal</b> or <b>Attempt</b>.</p> <p>This parameter allows you to choose if you will have a classic repetition number, or the whole group of subscribers executing the scheduled test sessions for session repetition number of times. The following options are available:</p> <ul style="list-style-type: none"> <li>• <b>Repetitions</b> - classic repetition working mode, as defined by the <b>Repetition number</b> parameter.</li> <li>• <b>Group Dependent Repetitions</b> - the repetitions depend on the number of subscribers included in the group; the number of repetitions is a multiplier of the subscribers in the group. For example, if the Dependent Repetition parameter is set to 2 and the subscribers included in the group are 10, all of them will do the test two times for a total of 10x2 test executions. Moreover, the first user does not wait for the end of the test done by the last user to</li> </ul>

<b>Setting</b>	<b>Description</b>
	begin the second iteration.
Repetition Number	<p><b>IMPORTANT</b> This parameter is available only if <b>Execution Mode</b> parameter is set to <b>Normal</b>, and <b>Repetition Mode</b> is <b>Repetitions</b>.</p> <p>This parameter specifies the number of times that the session iteration will be executed. If this parameter is set to 1, only the first subscriber in the list will execute the session iteration one time. For example: if the group includes 100 subscribers and Repetition Number is set to 100, each subscriber will execute the session iteration one time.</p>
Dependent Repetitions	<p>This parameter is available only if <b>Execution Mode</b> parameter is set to <b>Normal</b> or <b>Attempt</b>, and <b>Repetition Mode</b> is <b>Group Dependent Repetitions</b>.</p> <p>This parameter specifies the number of times that the session iteration will be executed.</p>
Max Attempt	<p><b>IMPORTANT</b> This parameter is available only if the <b>Execution Mode</b> parameter is set to <b>Attempt</b>.</p> <p>This parameter specifies the maximum number of consecutive attempts for each subscriber to execute the session iteration.</p>
Stop Attempt	<p><b>IMPORTANT</b> This parameter is available only if the <b>Execution Mode</b> parameter is set to <b>Attempt</b>.</p> <p>This parameter specifies the event in which the subscriber stops attempting to execute the session iteration. The following options are available:</p> <ul style="list-style-type: none"> <li>• CS Registered</li> <li>• PS Registered</li> <li>• PDP Activated.</li> </ul>
Scheduling Type	<p>This parameter specifies the scheduling type of the session iteration. Select one of the available options from the drop-down.</p> <ul style="list-style-type: none"> <li>• <b>Sequential</b> - a new session iteration execution starts at the end of the previous session iteration execution; no session interval timer is used.</li> <li>• <b>Timer Triggered</b> (default) - the session interval timer starts at the beginning of each session iteration execution; when the timer expires, the successive session iteration starts to run only if there is at least one available subscriber; if no subscriber is available, just the session interval timer is restarted.</li> </ul>
Session Interval Time	<p><b>IMPORTANT</b> This parameter is available only if the <b>Scheduling Type</b> is set to <b>Timer Trigger</b>.</p> <p>Define the timer (in milliseconds) to use during session iteration execution.</p>
Session Block Scheduling:	<p><i>The Session Block Scheduling parameter group defines the scheduling of session block execution. A session block iteration consists of the execution of a user-</i></p>

Setting	Description
	<i>defined number (defined in the Repetition parameter) of session iterations.</i>
Block Interval Time (ms)	This parameter specifies the interval (in milliseconds) between successive iterations of the session block.
Block Loop Enabled	This parameter enables/disables session's block iteration looping . When enabled, the session block is repeated infinitely.
Block Repetition	<p><b>IMPORTANT</b> This parameter appears only if <b>Block Loop Enabled</b> parameter is on.</p> <p>Specifies the number of times that the session block iteration will be executed.</p>
Block Scheduling Mode	<p>This parameter specifies the scheduling mode of the session block. Select from the drop-down one of the available options:</p> <ul style="list-style-type: none"> <li>• <b>Constant Rate</b> - the block interval timer starts at the beginning of the session block iteration; when the timer expires, if the current session block iteration is running, it is stopped and the successive session block iteration starts to run.</li> <li>• <b>Variable Rate</b> - the session block interval timer starts at the end of the session block iteration; when the timer expires, the successive session block iteration starts to run.</li> </ul>

## Procedures

In this section you can add and configure the procedures to be followed during testing. Use the **Move** ( ) icon to reorder the procedures tiles up or down and create a flow.

The following table describes the parameters used for **Procedures** configuration.

Setting	Description
<i>Procedures:</i>	
	<p>Select the <b>Add Procedure</b> button to add a procedure to your test. The procedure objective can be:</p> <ul style="list-style-type: none"> <li>• <b>5GMM/5GSM - Registration</b></li> <li>• <b>5GMM/5GSM - Deregistration</b></li> <li>• <b>5GMM/5GSM - PDU Session Establish</b></li> <li>• <b>5GMM/5GSM - PDU Session Release</b></li> <li>• <b>5GMM/5GSM - Service Request</b></li> <li>• <b>Miscellaneous - Delay</b></li> <li>• <b>Application Traffic - Stateless UDP</b></li> <li>• <b>Application Traffic - Data</b></li> <li>• <b>Application Traffic - Voice</b></li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Application Traffic - Video</b></li> <li>• <b>Application Traffic - UDG</b></li> </ul> <p><b>NOTE</b> Once added, a new procedure will be added to the list. It is named by default based on the first <b>Procedure Type</b> in the list. Click to proceed to further configuration. The procedures are also selected by default; deselect if it should not be used in the test.</p>
<i>Procedure:</i>	
	Select the <b>Delete Procedure</b> button to delete this procedure from your test configuration.
Parallel Procedure	When this option is enabled, the current procedure changes to a parallel procedure that allows users to define multiple procedures (user plane and control plane) that can be executed in parallel.
Idle Timer (ms)	<p><b>IMPORTANT</b> This parameter becomes available only if <b>Parallel Procedure</b> is enabled.</p> <p>This parameter specifies the waiting time (in milliseconds) to trigger transition between UE RRC Idle state to UE RRC Connected state. It specifies the time between UDG SUSPEND RESPONSE of the last suspended UDG traffic flow and UDG RESUME REQUEST of the first resumed UDG traffic flow of each involved UE. The UE RRC state transition can be triggered by UE or Network, according to the value of the <b>Idle to Connected trigger side</b> parameter.</p>
Idle to Connect trigger side	<p><b>IMPORTANT</b> This parameter becomes available only if <b>Parallel Procedure</b> is enabled.</p> <p>This parameter specifies the side (UE or EPC) that triggers the transition between UE RRC Idle to UE RRC Connected state. The following options are available in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>UE Synchronous</b> - the UE RRC state transition is triggered by the UE side. Idle Timer is started when all UDG traffic flows involved in the test are suspended. Resume of UDG traffic flows of each UE is synchronized with every UE RRC Idle to Connected state transition.</li> <li>• <b>UE Not Synchronous</b> – the UE RRC state transition is triggered by the UE side, but resume of UDG traffic flows is not synchronized with every UE RRC Idle to Connected state transition. UDG traffic suspend periods are computed according to the Idle Timer (ms) parameter.</li> <li>• <b>Network</b> - the UE RRC state transition is triggered by the Network side and will be performed through a paging procedure. UDG traffic suspended periods are computed according to the Idle Timer (ms) parameter and its values must be larger than the UE Inactivity Timer configured in the eNodeB.</li> </ul>
Procedure Type	Select from the list the procedure type you want to add to the test flow.

<b>Setting</b>	<b>Description</b>
	<b>IMPORTANT</b> Based on the selected type, the list of parameters to configure will change dramatically. See
<b>Label</b>	This parameter allows the user to assign a user-defined identifier to this procedure, to easily identify the test inside the session. By default, the procedures are named by their type.
<b>Abort Session on Error</b>	This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution. <ul style="list-style-type: none"> <li>• If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>• If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>
<b>Procedures</b>	<b>IMPORTANT</b> <i>This option becomes available only if <b>Parallel Procedure</b> is enabled.</i>
	Press this button to open the Parallel Procedure page.
	Select the <b>Add Procedure</b> button to add a parallel procedure to your test. Continue with the configurations explained below.
	Select the <b>Delete Procedure</b> button to delete this procedure from your test configuration.

For each procedure type, see the following configuration sections:

<b>Parameter</b>	<b>Description</b>
5GMM/5GSM - Registration	For the settings required to configure the Data traffic objective, refer to <a href="#">5GMM/5GSM - Registration</a> .
5GMM/5GSM - Deregistration	For the settings required to configure the Data traffic objective, refer to <a href="#">5GMM/5GSM - Deregistration</a> .
5GMM/5GSM - PDU Session Establish	For the settings required to configure the Data traffic objective, refer to <a href="#">5GMM/5GSM - PDU Session Establish</a> .
5GMM/5GSM - PDU Session Release	For the settings required to configure the Data traffic objective, refer to <a href="#">5GMM/5GSM - PDU Session Release</a> .
5GMM/5GSM - Service Request	For the settings required to configure the Data traffic objective, refer to <a href="#">5GMM/5GSM - Registration</a> .
Miscellaneous -	For the settings required to configure the Data traffic objective, refer to

Parameter	Description
Delay	<a href="#">5GMM/5GSM - Registration.</a>
Application Traffic - Data	For the settings required to configure the Data traffic objective, refer to <a href="#">Application Traffic - Data</a> .
Application Traffic - Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">Application Traffic - Stateless UDP</a> .
Application Traffic - Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">Application Traffic - Voice</a> .
Application Traffic - Video	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">Application Traffic - Video</a> .
Application Traffic - UDG	For the settings required to configure the UDG objective, refer to <a href="#">Application Traffic - UDG</a> .

## 5GMM/5GSM - Registration

This test procedure allows the simulated subscriber to register attach to the network, in compliance with the 5GMMRegistration procedure defined in 3GPP TS 24.501, paragraph 5.5.1.

The following table describes the 5GMM/5GSM - Registration procedure parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>5GMM/5GSM - Registration</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Abort Session on Error	This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution. <ul style="list-style-type: none"> <li>• If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>• If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>

## 5GMM/5GSM - Deregistration

This test procedure allows the simulated UEs to de-register from the network, in compliance with the 5GMM De-registration procedure defined in 3GPP TS 24.501, paragraph 5.5.2.

The following table describes the 5GMM/5GSM -Deregistration procedure parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter

Parameter	Description
	must be set to <b>5GMM/5GSM - Deregistration</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Abort Session on Error	This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution. <ul style="list-style-type: none"> <li>If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>
Deregistration at Power Off	If enabled, it will automatically trigger deregister procedure when UE will power-off.

### 5GMM/5GSM - PDU Session Establish

This test procedure complies with the 5GSM PDU session establishment procedure defined in 3GPP TS 24.501, paragraph 6.4.1.

The following table describes the 5GMM/5GSM - PDU Session Establish procedure parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>5GMM/5GSM - PDU Session Establish</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Abort Session on Error	This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution. <ul style="list-style-type: none"> <li>If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>
Always On PDU Session Requested	Indicates whether a PDU session is requested to be established as an always-on session. You can select between: <b>Null</b> , <b>Always-on PDU session not requested</b> or <b>Always-on PDU session requested</b> .
NRSM Info Transfer Flag	If enabled, it indicates that the NRSM information (i.e. protocol configuration options, or APN, or both), will be transferred security protected.
SM Info Transfer Flag	It indicates whether SM information (i.e. protocol configuration options, or APN, or both), will be transferred security protected.

Parameter	Description
DNN	Select the DNN from the drop-down list.
Request Type	This parameter specifies the value of the UE request type, as described in 3GPP TS 24.008 subclause 10.5.6.17. Select one of the options in the drop-down: <b>Initial Request, Handover or Emergency</b> .
Proxy IP Address	This parameter specifies the IP address of the SIP proxy server.
SIP Transport Type	This parameter specifies the SIP Transport Type. You can choose either <b>UDP</b> , or <b>TCP</b> .

### 5GMM/5GSM - PDU Session Release

This test procedure allows the UE to request the release of a PDU session, in compliance with the 5GSM PDU session release procedure defined in 3GPP TS 24.501, paragraph 6.4.3.

The following table describes the 5GMM/5GSM - PDU Session Release procedure parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>5GMM/5GSM - PDU Session Release</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Abort Session on Error	This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution. <ul style="list-style-type: none"> <li>If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>
DNN	Select the DNN from the drop-down list.

### 5GMM/5GSM - Service Request

This test procedure allows the simulated UEs to send the SERVICE REQUEST message to the AMF, in compliance with the Service request procedure defined in 3GPP TS 24.501, paragraph 8.2.16.

The following table describes the 5GMM/5GSM - Service Request procedure parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>5GMM/5GSM - Service Request</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it

Parameter	Description
	with your own value.
Abort Session on Error	<p>This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution.</p> <ul style="list-style-type: none"> <li>If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>
Service Type	<p>Select the service to request from the drop-down list:</p> <ul style="list-style-type: none"> <li><b>Data</b></li> <li><b>Emergency Services</b></li> <li><b>Emergency Services Fallback</b></li> <li><b>High Priority Access</b></li> <li><b>Signaling</b></li> </ul>

### Miscellaneous - Delay

The following table describes the Delay procedure parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Miscellaneous - Delay</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Abort Session on Error	<p>This checkbox enables/disables the aborting of the session execution when the test procedure fails in its execution.</p> <ul style="list-style-type: none"> <li>If enabled, the test session aborts once this test procedure fails. If a Detach is scheduled in any subsequent test procedure, the Detach is executed before aborting the test session.</li> <li>If disabled (default), the test session goes ahead to execute the following test procedures, although this test procedure fails.</li> </ul>
Delay Time (ms)	Type the delay time that defines this procedure.

## Application Traffic - Data

The following table describes the Data Traffic parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Application Traffic - Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Duration	Set a value for the procedure duration.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS flow used for audio from the drop-down list.
Objective Type	By default, this parameter is set to <b>Throughput</b> . The other options are: <b>Concurrent Connections</b> and <b>Connections Rate</b> .
Concurrent Connections	Set the number of concurrent connections. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Concurrent Duration	Set a value for the connection duration. This parameter is available only when Objective type is set to <b>Concurrent Connections</b> .
Throughput (kbps)	The desired throughput (in kbps) for the combined traffic flows that will be generated. This parameter is available only when Objective Type is set to <b>Throughput</b> or <b>Concurrent Connections</b> .
Connections Rate per Second	Set the value for connections rate per second. This parameter is available only when Objective type is set to <b>Connections Rate</b> .
Optimize Throughput (per UE)	Select this option to enable it.
Connection Multiplier (per UE)	Set the connection multiplier value.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes. The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).

Parameter	Description
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.

<b>Parameter</b>	<b>Description</b>
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
<i>Application Traffic Flows</i>	<p><i>Each Application Traffic entry requires at least one traffic flow definition, and can support multiple such definitions.</i></p> <ul style="list-style-type: none"> <li>• <i>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</i></li> <li>• <i>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</i></li> </ul> <p><i>Refer to <a href="#">Flow</a> for a description of the configuration settings for these traffic flows.</i></p> <p><i>You can also add <a href="#">custom parameters</a>, based on your test configuration requirements.</i></p>

## Flow

You can add and delete traffic flows as needed to meet your test objectives. The **Flow** parameters are described in the following table.


Parameter	Description
	Click the <b>Delete Flow</b> button to remove the flow from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>If <a href="#">Optimize Throughput (per UE)</a> option is enabled: <b>TCP</b>, <b>TLS</b>, <b>QUIC</b> or <b>UDP</b>.</li> <li>If <a href="#">Optimize Throughput (per UE)</a> option is disabled: <b>TCP</b>, <b>TLS</b> or <b>UDP</b>.</li> </ul>
Type	Select the L4/L7 protocol type from the list of pre-defined flows. The available options are: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get</b>, <b>HTTP Put</b>, <b>HTTP Post</b> and <b>FTP</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get</b>, <b>HTTPS Put</b> and <b>HTTPS Post</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Get</b>, <b>HTTP3 Put</b> and <b>HTTP3 Post</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional</b> (a flow in which a UDP client communicates with a server over a bidirectional datagram socket)</li> </ul> <p><b>NOTE</b> UDP bidirectional works for each UE by sending the number of Tx packets configured in the objective (by default 8). After the packets have been received by the DN (or UPF), it sends Rx packets (by default 8) to each UE. If the UEs receives the packets, they will send again the number of Tx packets and so on. If the UEs did not receive downlink packets, it will send another set of Tx packets after 60 seconds.</p>
Port	The port used by the flow.
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero). For example, a flow may have default actions: log in to a social media site, post a message, then log out. Iterations is the number of times you want this flow of actions to be executed.
Percentage	The percentage of the throughput will be of this type of flow.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.
Tx Packets Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.
Rx Packets Count	This parameter is available only when the flow type is set to UDP Bidirectional. Refer to <a href="#">UDP Bidirectional</a> for more details.

Parameter	Description
URL	The URL that is being accessed by the flow's protocol.
Destination Hostname	Destination hostname of the server. If DNS hostname resolution is enabled for the flow and Name Servers are configured under Global Settings, this name will be resolved before being used as L7 destination IP for the flow and included in HTTP headers. If empty, the "Address" from the previous fly-out level will be used as L7 destination IP for the flow.
Max Transactions per Connection	Set the value for this parameter.
Enable DNS Query Per Connection	Select the check-box to process only one DNS query per TCP connection.
DNN ID	Select the DNN for this flow. The DNNs are configured in the UE Range settings.
QoS FlowID	Select a QoS Flow ID for this flow.

## Custom Parameters/Headers


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters/Custom Headers panel opens.


2. Select the **Add** button.

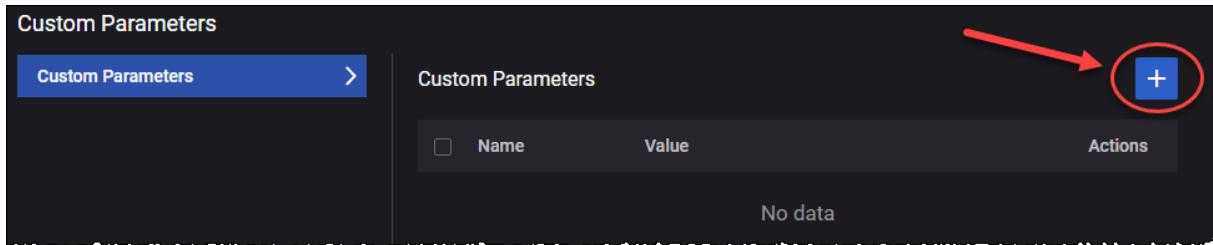

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

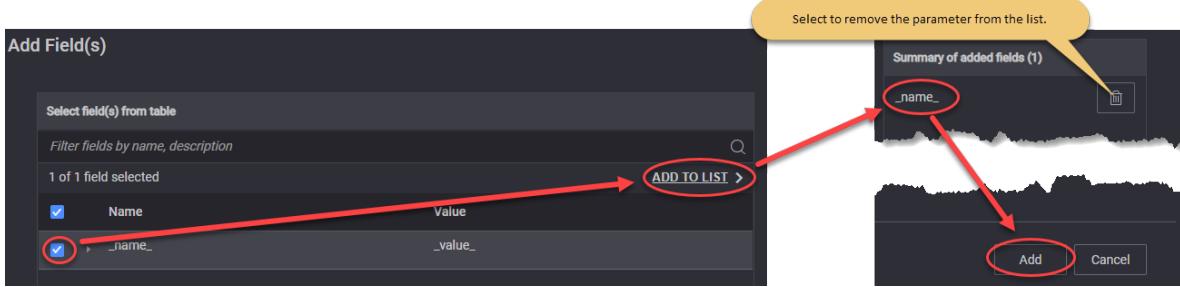

- Once added in the Custom tables, you can edit the value, or press the Menu icon (⋮) to Edit name or Delete the new parameter/header. You can also reorder the items in these tables by dragging them up or down.

## Application Traffic - Stateless UDP Traffic

The **Stateless UDP** objective generates IP packets that encapsulate dummy UDP payload. The Stateless UDP generator configuration settings for the uplink traffic are described below.

The following table describes the Stateless UDP parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>downlink</b> and can not be modified since on the UE you can only configure the downlink flow.
Throughput Rx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change. A corresponding server is required to achieve the displayed value.
Packet Rate	The rate at which the test generates uplink packets, measured in packets per second (pps).
Distributed Over (s)	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Destination UDP Port	The destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.

Parameter	Description
Destination UE Range	Select the destination UE range from the drop-down list.
Start after First Uplink Packet	Set a value for the procedure duration.
DNN	Select the DNN from the drop-down list.
QoS Flow ID	Select the QoS flow used for audio from the drop-down list.
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the QoS Flow/Bearer ID field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## Application Traffic - UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.
Duration	Set a value for the procedure duration.
DNN	Select the DNN value for the drop-down list.
QoS Flow ID	Select the QoS flow used for audio from the drop-down list.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>

Parameter	Description
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).

Parameter	Description
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Traffic Flow	<i>This section shows the traffic flow of this procedure. See the <a href="#">Traffic Flow</a> table for details.</i>

## Traffic Flow

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Out of Band Signaling	<p>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</p> <p><b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.</p>
Destination Hostname	Destination hostname of the server. This value is editable.
Port	This represents the server(destination) port. This value is editable.
Reconnect Timeout (ms)	The time interval after which the client attempts to reconnect after the connection was interrupted. 0 means that reconnect is disabled.
UDG Traffic Parameters	See <a href="#">UDG Traffic Parameters</a> table for further details.
Transaction	See <a href="#">Transaction</a> table for further details.
Keepalive Expiry Count	The time, in milliseconds, to wait for UUDG to reconnect. 0 means that reconnect is disabled.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC	The value to use when incrementing the MAC address (starting with the MAC

Parameter	Description
Increment	Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

## UDG Traffic Parameters

The following table describes the **UDG Traffic Parameters**.

Parameter	Description
UDG Test Type	Select the test type from the drop-down list. Available options: <b>Transmission</b> , <b>Ping-pong</b> or <b>Speed-Test</b> . For each test type, the parameters are described below.
<i>Transmission</i>	
Throughput Tx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change.
Client Burst Interval	The time interval at which the client sends packet bursts.
Client Burst Interval Unit	The time unit for the Client burst interval. Options are <b>Millisecond</b> and <b>Microsecond</b> .
Client Burst Size (packets)	The number of packets the client sends in a burst.
Client Burst Size (bytes)	The packet size in bytes.
Throughput Rx (kbps)	This value is computed based on the parameters in the test and will be recalculated if one of these parameters change. A corresponding server is required to achieve the displayed value.
Server Burst Interval	The time interval at which the server sends packet bursts.
Server Burst Interval Unit	The time unit for the server burst interval. Options are <b>Millisecond</b> and <b>Microsecond</b> .
Server Burst Size (packets)	The number of packets the server sends in a burst.
Server Burst Size (bytes)	The packet size in bytes.

Parameter	Description
<i>Ping-pong</i>	
Ping Direction	Set the ping direction. Available options: <b>Upstream</b> or <b>Downstream</b> .
Ping Interval	Set the ping time interval.
Ping Interval Unit	Set the ping interval unit. Available options: <b>Millisecond</b> or <b>Microsecond</b> .
Pong Number	Set the value for the pong number.
Client Packet Size (bytes)	The packet size in bytes.
Server Packet Size (bytes)	The packet size in bytes.
<i>Speed-Test</i>	
Traffic Direction	Set the ping direction. Available options: <b>Upstream</b> or <b>Downstream</b> .
Client Packet Size (bytes)	The packet size in bytes.
Server Packet Size (bytes)	The packet size in bytes.

## Transaction

The following table describes the **Transaction** parameters.

Parameter	Description
<i>Transaction</i>	Select the check-box to enable these settings.
Duration (ms)	Transactions duration, in millisecond.
Idle interval (ms)	Idle interval between transactions, in millisecond.
Resume Mode	Side which triggers transition between the UE idle and the UE connected state. Available options: <b>User</b> or <b>Network</b> .

## Application Traffic - Video

The following table describes the Video OTT(Over-the-Top) traffic parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .

Parameter	Description
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	Select the value from the drop-down list: <b>Simulated Users</b> or <b>Throughput</b> .
Duration	Set a value for the procedure duration.
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
IP Preference	Select a value from the drop-down list: <b>IPv4</b> or <b>IPv6</b> .
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
Selective Acknowledgments	If necessary, enable this option.

Parameter	Description
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
<i>Advanced OTT</i>	Select the <b>Open Advanced OTT</b> button to enable and configure <a href="#">Advanced OTT Settings</a> .

## Advanced OTT Settings

The parameters required to configure the OTT advanced settings are presented in the table below.

Parameter	Description
Application Traffic Flow	Each Application Traffic entry requires at least one Ott traffic flow definition, and can support multiple such definitions. <ul style="list-style-type: none"> <li>To select an existing traffic flow definition, click its name to open the Flow panel where you can view and modify the flow settings.</li> <li>To add another traffic flow, click the <b>Add Flow</b> button. LoadCore will open the Flow panel where you will select the flow type and configure the flow settings.</li> </ul>
<i>Flow:</i>	
	Select this button to remove this flow from your test configuration.
Type	Select the Ott traffic type from the drop-down list. Available options: <ul style="list-style-type: none"> <li><b>DASH</b></li> <li><b>HLS</b></li> </ul>
Destination Hostname	Destination hostname of the server. This value is editable.

Parameter	Description
Port	This represents the server(destination) port. This value is editable.
URL	Select the URL from the drop-down list populated with the defined on the server.
Play Until End	If this check box is selected, the Play Duration field is disabled and the original playtime is used.
Play Duration (sec)	This field is available only if the <b>Play Until End</b> is not enabled. It allows you to set a custom playtime.
Transport	Select the transport protocol from the drop-down list. Available options: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> <li>• <b>HTTP/QUIC</b></li> </ul>
Iterations	The number of times the flow will run. It can be finite or infinite (set to zero).
Percentage	The percentage of Test Objective to execute this flow.
Quality Control	<i>These settings are presented in the <a href="#">Quality Control</a> pane.</i>
Advanced Client settings	<i>These settings are presented in the <a href="#">Advanced Client Settings</a> pane.</i>

## Quality Control

The parameters required for Quality Control settings are presented in the table below.

Parameter	Description
<i>Jitter Buffer:</i>	
Initial Delay (s)	Set the number of seconds to wait before playback. The default value is 20.
Maximum Size (s)	Set the number of seconds to be buffered on the client side. The default value is 20.
MOS P.1203	Select an option from the drop-down list: <b>Disabled</b> or <b>Mode 0</b> .
Quality Control Mode	Select the quality control mode from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Adaptive Bit Rate</b></li> <li>• <b>Quality Predefined Profiles</b></li> <li>• <b>Lowest bitrate</b></li> <li>• <b>Highest bitrate</b></li> </ul>

Parameter	Description
Number of segments	This field is available and editable only when the Quality Control Mode is set to <b>Adaptive Bit Rate</b> .
<i>Play Profiles: The following settings are available and editable only when the Quality Control Mode is set to <b>Quality Predefined Profiles</b>.</i>	
	Select this button to add a predefined play profile to your test configuration.
<i>Quality Shift</i>	
	Select this button to remove this play profile from your test configuration.
Shift Type	Select the shift type from the drop-down list. Available options <ul style="list-style-type: none"> <li>• <b>Stay at Current Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lowest Bitrate</b></li> <li>• <b>Change to the Lower Bitrate</b></li> <li>• <b>Change to the Higher Bitrate</b></li> </ul>
Numbers of levels to shift	This field is available and editable only when the Shift Type is set to <b>Change to Higher Bitrate</b> or <b>Change to Lower Bitrate</b> .
Play Until End	If this check box is selected, the <b>Play duration</b> field is disabled and the original playtime is used.
Play duration (s)	This field is available only if the <b>Play Until End</b> check box is not selected. It allows you to set a custom playtime.

## Advanced Client Settings


The parameters required for Advanced Client settings are presented in the table below.

Parameter	Description
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Timeshift for Live	Set a value for this field. 0 means no timeshift.
Enable DNS Query Per Connection	Select the check box to process only one DNS query per TCP connection.
Custom parameters	For more details, refer to <a href="#">Custom parameters/Headers</a> .
Custom Headers	

## Custom Parameters/Headers

You can add custom parameters as follows:


1. Select the **Open Custom Parameters/Headers** tile. The Custom Parameters/Custom Headers Fields panel opens.
2. Select the **Add** button.

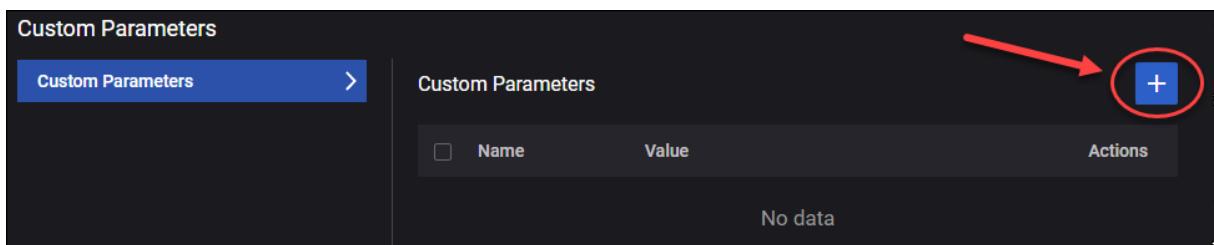

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

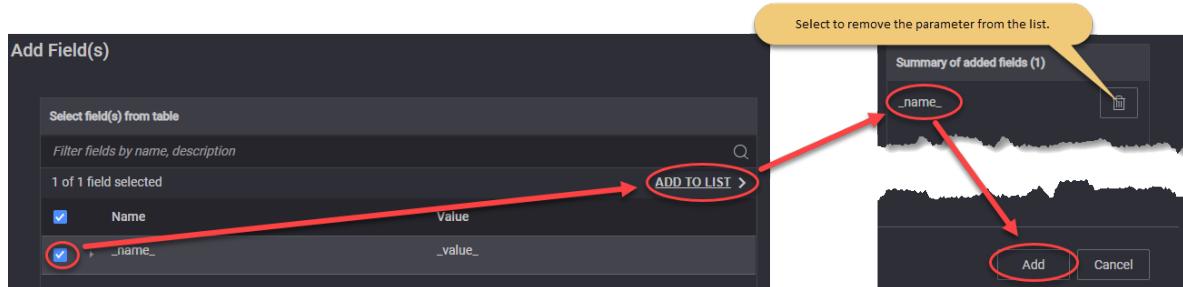

4. Once added in the Custom tables, you can edit the value, or press the Menu icon (⋮) to **Edit name** or **Delete** the new parameter/header. You can also reorder the items in these tables by dragging them up or down.

## Application Traffic - Voice

The following table describes the Voice Traffic parameters.

Parameter	Description
Procedure Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Duration	Set a value for the procedure duration.
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.

Parameter	Description
	The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Delay application traffic start (ms)	The time (in milliseconds) to wait before the application traffic flows start after each PDU Session has been established.
IP Preference	Select the IP address preference: <b>IPv4</b> or <b>IPv6</b> .
Call Type	Select the type of call from the drop-down list. Available options are: <ul style="list-style-type: none"> <li>• <b>Basic Call</b></li> <li>• <b>Basic Call Mo</b> (Mobile Originated)</li> <li>• <b>Basic Call Mt</b> (Mobile Terminated)</li> <li>• <b>Custom Flow</b> - this setting allows you to configure your own Flow via the <b>Flow Editor</b>.</li> </ul>
Dial Plan:	<i>For the settings required to configure the dial plan, refer to <a href="#">Dial Plan</a>.</i>
<i>Sip Settings:</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.
Enable IPsec	Select this option to enable IPsec.
Registration Refresh Time	Select the type of registration refresh time: <ul style="list-style-type: none"> <li>• <b>Negotiated</b> - Registration refresh will be sent after 50% of expiration time received in the <i>200 OK</i> response.</li> <li>• <b>Custom</b> - it allows you to set your own interval.</li> </ul>
Custom Registration Refresh Interval (s)	This parameter becomes available only the Registration Refresh Time is set to <b>Custom</b> . Set the registration refresh interval, in seconds.
Number of Loops after	A value of 1 means De-registration will have to occur on each loop with successful registration.

Parameter	Description
Registration to Send De-Registration	
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Advanced SIP Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select this option in order to enable RTCP.
RTP Session Duration (ms)	Set the value for the session duration.
<i>Audio settings:</i>	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
<i>Video Settings:</i>	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
<i>MSRP Settings:</i>	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
<i>Advanced Media Settings:</i>	
Custom SDP	Select this panel to open the custom SDP settings.
Use Custom SPD	Enable the slider to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> <li>• <b>NB Codecs IPv6</b></li> <li>• <b>AMR-WB IPv6</b></li> <li>• <b>Multimedia IPv4</b></li> </ul>
<i>QoE Settings</i>	<i>Select this panel to open the audio QoE settings.</i>
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Dial Plan

The parameters required to configure the dial plan are presented in the table below.

Parameter	Description
DNN	Select the DNN from the drop-down list.
Destination IP	The destination IP address.
Destination IP Increment	The value by which the destination IP is incremented.
Iterations	The number of times the Call Type will be executed. It can be finite or infinite (set to zero).
MCC	The MCC that will be assigned to each UE in this range.
MNC	The MNC that will be assigned to each UE in this range.
MSIN	<p>The MSIN value that will be assigned to the first simulated UE in the range.</p> <p><b>About MSIN ...</b></p> <p>The Mobile Subscriber Identification Number (MSIN) is a number that a wireless operator uses to uniquely identify a mobile phone. It is—at most—10-digits long. The MSIN is used (in combination with the MCC and MNC) to form the International Mobile Subscriber Identity (IMSI) number.</p>
IMSI Phone Increment	The value by which the IMSI phone number is incremented.
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.
Source Phone Increment	The value by which the destination phone number is incremented.
Destination Port	The destination port number.

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.
QoS Flow ID for Voice	Select the QoS flow used for audio from the drop-down list.

Parameter	Description
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	<p>Select the audio codec from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <a href="#"><b>AMR</b></a> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>AMR-WB</b></a> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>EVS</b></a> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <a href="#"><b>PCMU</b></a></li> <li>• <a href="#"><b>PCMA</b></a></li> <li>• <a href="#"><b>iLBC</b></a></li> <li>• <a href="#"><b>G722</b></a></li> <li>• <a href="#"><b>G723</b></a></li> <li>• <a href="#"><b>G729</b></a></li> </ul> <p>The parameters of each audio codec are presented below.</p>

## AMR/AMR-WB

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet. AMR speech encoding is performed on 20 ms speech frames.
Payload Type	Specifies the audio payload type.
Payload Format	<p>For a given session, the payload format can be either bandwidth efficient or octet aligned, depending on the mode of operation that is established for the session via out-of-band means.</p> <ul style="list-style-type: none"> <li>• <b>Bandwidth efficient:</b> In the bandwidth efficient format only the full</li> </ul>

Parameter	Description
	<p>payload is octet aligned, so fewer padding bits are added.</p> <ul style="list-style-type: none"> <li>• <b>Octet aligned:</b> In the octet-aligned format, all the fields in a payload, including payload header, table of contents entries, and speech frames themselves, are individually aligned to octet boundaries to make implementations efficient. All fields of an AMR payload (payload header, table of contents and speech) are individually octet aligned.</li> </ul>
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p> <p>For AMR WB there are 9 modes available.</p>

## EVS

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.
Payload Format	<p>The following options are available:</p> <ul style="list-style-type: none"> <li>• <b>Full header</b> - In this payload format, the payload consists of one or more coded frame(s). The packet headers contain the Table of Contents (ToC) byte(s) and the Change Mode Request (CMR) byte.</li> <li>• <b>Compact</b> - In this payload format a single codec data frame is sent in each RTP packet. The format uses protected payload sizes that uniquely identify the EVS codec bitrates for the EVS Primary or EVS AMR-WB IO mode.</li> </ul>
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

## PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Packet Time (ms)	Length of time in milliseconds represented by the media in a packet.
Payload Type	Specifies the audio payload type.

## Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
QoS Flow ID for Voice	Select the QoS Flows ID(s) from the drop-down list.
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
QoS Flow ID for MSRP	Select the QoS Flows ID(s) from the drop-down list.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)
- [Custom Parameters](#)
- [SIP 3GPP IPSEC](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE**

The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:

- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

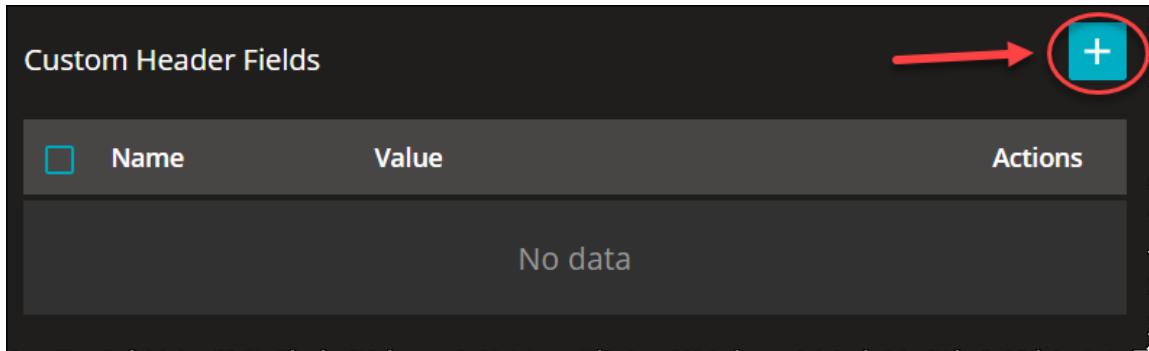

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

Name	Value
Accept	application/sdp,message/cpim
Accept-Contact	*;mobility="mobile";methods="INVITE"
Accept-Encoding	gzip
Accept-Language	da, en-gb;q=0.8, en;q=0.7
Alert-Info	<urn:alert:service:call-waiting>

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7

Parameter	Description	Value
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nextnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC 4028	60
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD; e-utran-cell-id-3gpp=1234
P-Associated-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>, <sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig-roi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel

Parameter	Description	Value
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com", domain="sip:ss1.carrier.com", qop="auth", nonce="f84f1cec41e6cbe5aea9c8e88d359", opaque="", stale=FALSE, algorithm=MD5
Proxy-Authorization	IETF RFC 3261	Digest username="Alice", realm="atlanta.com", nonce="c60f3082ee1212b402a21831ae", response="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Bto-tag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,

Parameter	Description	Value
		<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication


The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>
Update with UE Range Security Settings	Press this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPC	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPC	The OPC value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
OPC Increment	The number used to increment the OPC value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPC value.

### Custom Parameters

You can add custom parameters as follows:


1. The Custom Parameters panel, select the **Add** button.

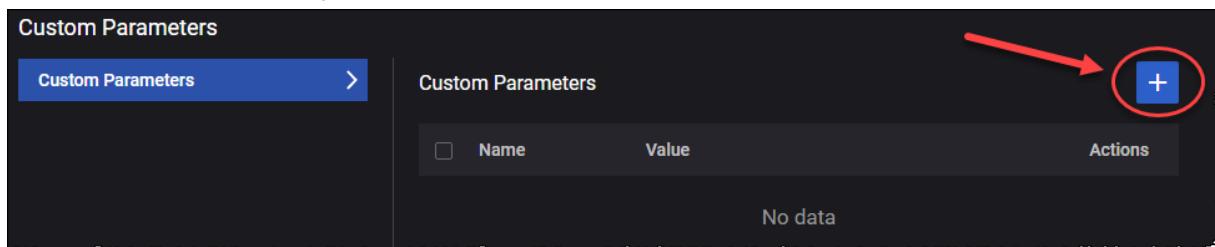

The Add Field(s) opens.

2. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

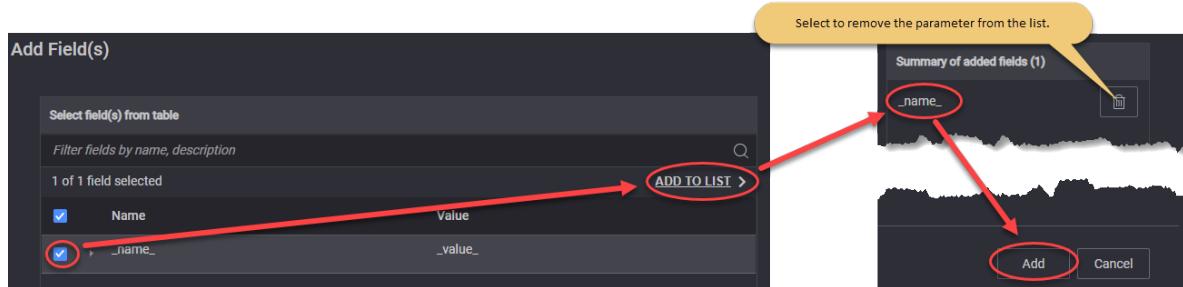

The following custom parameters are available:

Parameter	Description	Value
DelayBefore SIPInvite	Delay in milliseconds before sending SIP INVITE.	1000
DealyBeforeRTP	Delay in milliseconds before RTP session start.	0
DelayAfterRTP	Delay in milliseconds after RTP session end.	0
DeregisterLoop	Set the number of calls/loops before a SIP deregistration will be performed. Any SIP deregistration will be followed by a new SIP registration.	0
DelayBefore180	Delay in milliseconds before 180 Ringing message will be sent.	0
DelayBefore200INVITE	Delay in milliseconds before 200 OK message for INVITE will be sent.	0
debugIPSEC	Activate IPSEC debug. Please use debug only for a reduced number of simulated UEs.	0
timeoutSIP	Global timeout in miliseconds for any SIP message. Default is set to standard 32000 ms. Use this parameter to modify the default value.	32000

Parameter	Description	Value
MaxActiveLimit	Set maximum allowed concurrent TCP connections per CPU Core. Default it is set to 8000. Please use this parameter to modify the default value.	8000

### SIP 3GPP IPSEC

The parameters required for SIP 3GPP IPSEC are presented in the table below.

Parameter	Description
Port-C	Set the value for this parameter.
Port-S	Set the value for this parameter.
Authentication Algorithm	Select the authentication algorithm: <ul style="list-style-type: none"> <li>• <b>hmac-sha-1-96</b></li> <li>• <b>aes-gmac</b></li> <li>• <b>null</b></li> </ul>
Encryption Algorithm	Select the encryption algorithm: <ul style="list-style-type: none"> <li>• <b>aes-gcm</b></li> <li>• <b>aes-cbc</b></li> <li>• <b>null</b></li> </ul>

### UE Devices panel

When devices option is selected, it will open the **Devices** configuration panel.

This section allows you to add devices to your test.

Setting	Description
<i>Devices:</i>	
	Select the <b>Add Device</b> button to add a new device to your configuration.
<i>Device</i>	See <a href="#">Device Settings</a> for further configuration.

### Device Settings

For each device that you add , you configure the settings from the **Device** panel.

The **Device Settings** are organized into the following groups:

## Basic Parameters

The following table describes the parameters to configure for device's **Basic Parameters**.

Setting	Description
Name	This parameter specifies the device name. It is a user-defined character string used to uniquely identify this mobile equipment, used to associate this mobile equipment to one or more subscribers.
3GPP Release	This parameter specifies the 3GPP Release that identifies the features of this mobile equipment. It can be used as a filter to configure and to enable only a subset of features. You can select a value from the list.
IMEI TAC	This parameter specifies the Type Allocation Code (TAC) of the IMEI or IMEISV, as defined in 3GPP TS 23.003, clause 6. It must be a string of eight decimal digits. The default value is 00000000.
Software Version	This parameter specifies the Software Version Number (SVN) of the IMEISV, as defined in 3GPP TS 23.003, clause 6. A string value of 1 or 2 decimal digits is supported; default value is 00.
Low Complexity	<p><b>IMPORTANT</b> This parameter is available only if the <b>3GPP Release</b> parameter is set to a value greater than or equal to 13.</p> <p>This parameter specifies if the Low Complexity Mode is supported. Select one of the available options from the drop-down list:</p> <ul style="list-style-type: none"> <li>• Not Supported</li> <li>• Bandwidth Reduced Low Complexity</li> <li>• Enhanced Coverage Mode.</li> </ul>
RSRP value for enhanced coverage level selection	<p><b>IMPORTANT</b> This parameter is visible only if the Low Complexity parameter is set to <b>Bandwidth Reduced Low Complexity</b> or <b>Enhanced Coverage Mode</b>.</p> <p>This parameter specifies the RSRP value used for enhanced coverage level selection according to 3GPP 36.331. Allowed values range is: <b>0-97</b>.</p>

## Radio Capability settings

The following table describes the **Radio Capability** parameters related to the device model.

Setting	Description
Power Class	<i>This subgroup defines the RF power capability of the mobile equipment.</i>
RF Power Capability	This parameter specifies the RF power capability of the mobile equipment as defined in 3GPP TS 45.005 and 3GPP TS 24.008. It is possible to change the setting by choosing a value from the dropdown list.

<b>Setting</b>	<b>Description</b>
8-PSK RF Power Capability	This parameter specifies the 8-PSK RF power capability of the mobile equipment, as defined in 3GPP TS 45.005 and 3GPP TS 24.008. It is possible to change the setting by choosing a value from the dropdown list.
<i>Supported Bands</i>	<i>This subgroup defines the GSM frequency bands supported by the mobile equipment.</i>
GSM 850	If enabled, the mobile equipment will support the GSM 850 band.
GSM 900	<p>This parameter should indicate which type of GSM 900 band is supported by the mobile equipment supports:</p> <ul style="list-style-type: none"> <li>• <b>P-GSM 900</b> - primary GSM 900 band supported</li> <li>• <b>E-GSM 900</b> - extended GSM 900 band supported.</li> </ul>
GSM 1800	If enabled, the mobile equipment will support the GSM 1800 band.
GSM 1900	If enabled, the mobile equipment will support the GSM 1900 band.
<i>DRX Settings</i>	<i>This subgroup defines the DRX settings related to the mobile equipment</i>
Split PG Cycle Code	This parameter defines the Split PG Cycle Code, as defined in 3GPP TS 24.008. Select a value from the drop-down.
Split on CCCH	If enabled, the Split PG cycle on CCCH will be supported by the mobile equipment.
Non-DRX Timer	This parameter defines the time for non-DRX mode after transfer state, as defined in 3GPP TS 24.008. You can select a value from the drop-down list.
CN Specific DRX Cycle	<p>This parameter defines the CN specific DRX cycle length coefficient, as defined in 3GPP TS 24.008. Select one of the following values from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Not Specified</b> - CN Specific DRX cycle length coefficient is not specified by the mobile equipment</li> <li>• <b>Coefficient 6</b> - CN Specific DRX cycle length coefficient is 6</li> <li>• <b>Coefficient 7</b> - CN Specific DRX cycle length coefficient is 7</li> <li>• <b>Coefficient 8</b> - CN Specific DRX cycle length coefficient is 8</li> <li>• <b>Coefficient 9</b> - CN Specific DRX cycle length coefficient is 9.</li> </ul>
<i>TRX Settings</i>	<i>This subgroup defines the TRX configuration of the mobile equipment.</i>
VAMOS Level	<p>This parameter defines the VAMOS (Adaptive Multi-user Channels on One Slot) level, as defined in 3GPP TS 45.001 and 3GPP TS 45.002. You can select one of the following values from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>0</b> - the mobile equipment does not support VAMOS</li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li><b>1</b> - the mobile equipment supports VAMOS I level</li> <li><b>2</b> - the mobile equipment supports VAMOS II level.</li> </ul> <p><b>IMPORTANT</b> This parameter appears only if <b>3GPP Release</b> value is set in the range <b>9 - 13</b>.</p>
Early Clmk Send	It indicates whether the Controlled Early Classmark Sending option is implemented in the mobile equipment can be found in AM in L3 Signaling and it has below definition: It indicates whether the Controlled Early Classmark Sending option is implemented in the mobile equipment

## Cyphering settings

This group allows to configure the Cyphering parameters related to the device model.

Setting	Description
<i>Cyphering</i>	
A5 GSM Encryption Algorithm	<p>This parameter defines the GSM encryption algorithm capability supported by the mobile equipment. You can select one or more options from the drop-down list to allow support:</p> <ul style="list-style-type: none"> <li><b>A5/1 Supported</b></li> <li><b>A5/2 Supported</b></li> <li><b>A5/3 Supported</b></li> <li><b>A5/4 Supported</b></li> </ul>
GEA GPRS Encryption Algorithm	<p>This parameter defines the GPRS encryption algorithm capability supported by the mobile equipment. You can select one or more options from the drop-down list to allow support:</p> <ul style="list-style-type: none"> <li><b>GEA/1 Supported</b></li> <li><b>GEA/2 Supported</b></li> </ul>
UEA0	If enabled, it indicates that the UEA0 UMTS encryption algorithm is supported by the mobile equipment.
UEA1	If enabled, it indicates that the UEA1 UMTS encryption algorithm is supported by the mobile equipment.
UEA2	If enabled, it indicates that the UEA2 UMTS encryption algorithm is supported by the mobile equipment.

## LADPm settings

This settings allows you to set the LAPDm protocol layer configuration parameters related to the device model. The included configuration parameters depend on the technology: parameters related to technologies different from LTE are visible only if the Inter-RAT feature is enabled.

Setting	Description
<i>Parameters:</i>	
Repeated ACCH Capability	<p>This parameter indicates whether the mobile equipment supports Repeated SACCH and Repeated Downlink FACCH, as defined in 3GPP TS 24.008. Select one of the options available in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Do not include</b></li> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> </ul>

## PSL1-L2 settings

This settings will set the L1-L2 protocol layer configuration parameters. Parameters related to technologies different from LTE are visible only if the Inter-RAT feature is enabled.

Setting	Description
<i>PSL1-L2:</i>	
GPRS Multislot Class	<p>This parameter defines the GPRS multislot class of the mobile equipment. Its range should be 1-29 for 3GPP release 4 and earlier, or 1-45 for 3GPP release 5 and later.</p> <p>Refer to 3GPP TS 24.008 and 3GPP TS 45.002 for further details.</p>
GPRS Extended Dynamic Allocation	If enabled, it indicates that the mobile equipment supports GPRS Extended Dynamic Allocation capabilities. Refer to 3GPP TS 24.008 for further details.
EGPRS Multislot Class	<p>This parameter defines the EGPRS multislot class of the mobile equipment. Its range should be 1-29 for 3GPP release 4 and earlier, or 1-45 for 3GPP release 5 and later.</p> <p>Refer to 3GPP TS 24.008 and 3GPP TS 45.002 for further details.</p>
EGPRS Extended Dynamic Allocation	If enabled, it indicates that the mobile equipment supports EGPRS Extended Dynamic Allocation Capabilities. Refer to 3GPP TS 24.008 for further details.
Multislot Reduction for Dual Carrier	This parameter specifies the number of time-slots fewer than the maximum number of receive time-slots that the mobile equipment supports. This indicates that the mobile equipment supports dual carrier in the downlink for EGPRS (refer to 3GPP TS 24.008 and 3GPP TS 45.002 for further details). You can select a value from the drop-down list.
EGPRS Reduced Latency	This parameter indicates whether the mobile equipment supports Reduced TTI configurations and Fast Ack/Nack Reporting in packet transfer mode for both EGPRS and EGPRS2. Refer to 3GPP TS 44.060 and 3GPP TS 24.008 for

<b>Setting</b>	<b>Description</b>
Capability	further details.
PFC Feature Mode	This parameter indicates whether the mobile equipment supports Packet Flow Control procedures. Refer to 3GPP TS 24.008 for further details.
GERAN Feature Package 1	This parameter indicates whether the mobile equipment supports GERAN feature package 1. Refer to 3GPP TS 24.008 for further details.
Uplink EGPRS2	<p>This parameter indicates whether the mobile equipment supports EGPRS2 in uplink (refer to 3GPP TS 24.008 for further details).</p> <p>Select one of the available options:</p> <ul style="list-style-type: none"> <li>• <b>Default</b></li> <li>• <b>EGPRS2-A Supported</b></li> <li>• <b>EGPRS2-A Not Supported</b></li> </ul>
Downlink EGPRS2	<p>This parameter indicates whether the mobile equipment supports EGPRS2 in downlink (refer to 3GPP TS 24.008 for further details).</p> <p>Select one of the available options:</p> <ul style="list-style-type: none"> <li>• <b>Default</b></li> <li>• <b>EGPRS2-A Supported</b></li> <li>• <b>EGPRS2-A Not Supported</b></li> </ul>
Multi Tone	If enabled, it indicates that the mobile equipment supports UL Multitone transmissions on NPUSCH.
Multi Carrier	If enabled, it indicates that the mobile equipment supports Multicarrier operation.
RSRP for NB CE Level Selection Support	If enabled, it indicates that the mobile equipment supports RSRP for NB CE Level Selection.
<i>RLC/MAC Parameters</i>	<i>This group allows to set the RLC/MAC protocol layer configuration parameters related to the device model. Refer to 3GPP TS 24.008 for further details.</i>
GPRS Multislot Class	<p>This parameter defines the GPRS multislot class of the mobile equipment. Its range should be 1-29 for 3GPP release 4 and earlier, or 1-45 for 3GPP release 5 and later.</p> <p>Refer to 3GPP TS 24.008 and 3GPP TS 45.002 for further details.</p>
GPRS Extended Dynamic Allocation	If enabled, it indicates that the mobile equipment supports GPRS Extended Dynamic Allocation capabilities. Refer to 3GPP TS 24.008 for further details.

<b>Setting</b>	<b>Description</b>
EGPRS Multislot Class	<p>This parameter defines the EGPRS multislot class of the mobile equipment. Its range should be 1-29 for 3GPP release 4 and earlier, or 1-45 for 3GPP release 5 and later.</p> <p>Refer to 3GPP TS 24.008 and 3GPP TS 45.002 for further details.</p>
EGPRS Extended Dynamic Allocation	<p>If enabled, it indicates that the mobile equipment supports EGPRS Extended Dynamic Allocation Capabilities. Refer to 3GPP TS 24.008 for further details.</p>
EGPRS Reduced Latency Capability	<p>This parameter indicates whether the mobile equipment supports Reduced TTI configurations and Fast Ack/Nack Reporting in packet transfer mode for both EGPRS and EGPRS2. Refer to 3GPP TS 44.060 and 3GPP TS 24.008 for further details.</p>
Multislot Reduction forDual Carrier	<p>This parameter specifies the number of time-slots fewer than the maximum number of receive time-slots that the mobile equipment supports. This indicates that the mobile equipment supports dual carrier in the downlink for EGPRS (refer to 3GPP TS 24.008 and 3GPP TS 45.002 for further details). You can select a value from the drop-down list.</p>
pcf Feature Mode	<p>This parameter indicates whether the mobile equipment supports Packet Flow Control procedures. Refer to 3GPP TS 24.008 for further details.</p>
GERAN Feature Package 1	<p>This parameter indicates whether the mobile equipment supports GERAN feature package 1. Refer to 3GPP TS 24.008 for further details.</p>
UL EGPRS2 Supported	<p>This parameter indicates whether the mobile equipment supports EGPRS2 in uplink (refer to 3GPP TS 24.008 for further details).</p>
DL EGPRS2 Supported	<p>This parameter indicates whether the mobile equipment supports EGPRS2 in downlink (refer to 3GPP TS 24.008 for further details).</p>

## Layer 3 Signaling

This group allows you to configure the **Layer 3 Signaling** parameters related to the device model.

<b>Setting</b>	<b>Description</b>
<i>Layer 3 Signaling</i>	
SMS via CS Domain	<p>This parameter defines the SM capabilities via CS domain, as defined in 3GPP TS 24.008. Select one of the following values from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Supported</b> - Mobile equipment supports mobile terminated point to point SMS via CS domain</li> <li>• <b>Not Supported</b> - Mobile equipment does not support mobile terminated point to point SMS via CS domain.</li> </ul>

<b>Setting</b>	<b>Description</b>
SMS via PS Domain	<p>This parameter defines the SM capabilities via PS domain, as defined in 3GPP TS 24.008. Select one of the following values from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Supported</b> - Mobile equipment supports mobile terminated point to point SMS via PS domain.</li> <li>• <b>Not Supported</b> - Mobile equipment does not support mobile terminated point to point SMS via PS domain.</li> </ul>
Notification	<p>This parameter indicates whether the mobile equipment supports Notification procedure. Refer 3GPP TS 24.008 to for further details. Possible values are:</p> <ul style="list-style-type: none"> <li>• <b>Supported</b></li> <li>• <b>Not Supported</b></li> </ul>
Forced RRC Establishment Cause	<p>This parameter specifies the cause set in the RRC Connection Establishment Request in case of forced RRC Establishment. Select one of the values from the drop-down list: <b>Default, Not Defined, Emergency, High Priority, MT Access, MO Access, MO Data, Delay Tolerant Access, Mo Voice Call</b>.</p>
Forced RRC Establishment Cause (NB)	<p>This parameter specifies the cause of the RRC Connection Establishment for NB-IoT in case of forced RRC Establishment. Select one of the values from the drop-down list: <b>Default, Not Defined, NB MT Access, NB MO Signaling, NB MO Data, NB MO Exception Data, NB Delay Tolerant Access</b>.</p>
Forced RRC NR Establishment Cause	<p>This parameter specifies the cause set in the RRC Connection Establishment Request in case of forced NR RRC Establishment. Select one of the values from the drop-down list: <b>Not Defined, Emergency, High Priority Access, MT Access, MO Access, MO Data, Mo Voice Call, Mo Video Call, Mo SMS, MPS Priority Access, MCS Priority Access</b>.</p>
<i>Radio Resource Protocol</i>	<p><i>This group allows to set Radio Resource Protocol layer configuration parameters (refer to 3GPP TS 24.008 for further details).</i></p>
Controlled Early Classmark Sending	<p>If enabled, it indicates that the Controlled Early Classmark Sending option is implemented in the mobile equipment.</p>
Pseudo Synchronization	<p>If enabled, it indicates that the mobile equipment is capable of pseudo synchronization, as defined in 3GPP TS 44.018.</p>
<i>EPS Mobility Management Protocol</i>	<p><i>This group allows to set EPS Mobility Management Protocol layer configuration parameters; refer to 3GPP TS 24.008 for further details.</i></p>
EMM Combined Procedure Capability	<p>If enabled, it indicates that the EMM Combined Procedures is supported by the mobile equipment.</p>
EPC Capability	<p>If enabled, it indicates that the mobile equipment supports access to the EPC via access networks other than GERAN or UTRAN.</p>

<b>Setting</b>	<b>Description</b>
E-UTRA FDD	If enabled, it indicates that the E-UTRA FDD is supported by the mobile equipment.
E-UTRA TDD	If enabled, it indicates that the E-UTRA TDD is supported by the mobile equipment.
E-UTRA Measurement and Reporting	<p>If enabled, it indicates that the mobile equipment supports E-UTRAN Neighbour Cell measurements and measurement reporting while having an RR:</p> <ul style="list-style-type: none"> <li>• if both <b>E-UTRA FDD</b> and <b>E-UTRA TDD</b> parameters are disabled, this option should also be disabled.</li> <li>• if one or both <b>E-UTRA FDD</b> and <b>E-UTRA TDD</b> parameters are enabled, this option can be either enabled, or disabled.</li> </ul>
<i>Inter-RAT Capabilities</i>	<i>This group allows to set Inter-RAT Capabilities configuration parameters; refer to 3GPP TS 24.008 for further details.</i>
PS Inter-RAT HO Iu Mode	If enabled, it indicates that the mobile equipment supports the PS inter-RAT HO from GERAN to UTRAN Iu mode.
PS Inter-RAT HO S1 Mode	If enabled, it indicates that the mobile equipment supports the PS inter-RAT HO from GERAN to E-UTRAN S1 mode.
ISR	If enabled, it indicates that the mobile equipment supports ISR (Idle Mode Signalling Reduction).
SRVCC to GERAN/UTRAN	If enabled, it indicates that the mobile equipment supports SRVCC (Single Radio Voice Call Continuity) from UTRAN HSPA or E-UTRAN to GERAN/UTRAN.

## User Plane

This group allows you to configure the **User Plane** parameters related to the device model.

<b>Setting</b>	<b>Description</b>
<i>User Plane</i>	
GSM Traffic Codec	<p>Configure which GSM Traffic codecs are supported by the mobile equipment. You can select one ore more from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>FR</b> - the Full Rate codec is supported by the device</li> <li>• <b>HR</b> - the Half Rate codec is supported by the device</li> <li>• <b>EFR</b> - the Enhanced Full Rate codec is supported by the device</li> <li>• <b>AMR-FR</b> - the Adaptive MultiRate - Full Rate codec is supported by the device</li> <li>• <b>AMR-HR</b> - the Adaptive MultiRate - Half Rate codec is supported by the device</li> <li>• <b>AMR-WB</b> - the Adaptive MultiRate – Wide Band codec is supported by the device.</li> </ul>

Setting	Description
UMTS Traffic Codec	Configure which UMTS Traffic codecs are supported by the mobile equipment. You can select one or more from the drop-down list: <ul style="list-style-type: none"> <li><b>UMTS_AMR</b> - the UMTS Adaptive MultiRate codec is supported by the device</li> <li><b>UMTS_AMR-2</b> - the UMTS Adaptive MultiRate 2 codec is supported by the device</li> <li><b>UMTS_AMR-WB</b> - the UMTS Adaptive MultiRate - Wideband codec is supported by the device.</li> </ul>

## Physical Layer Parameters settings

This group allows to configure the **Physical Layer** parameters, to select the supported ROHC profiles and to set the feature group indicators related to the device model.

Setting	Description
EUTRA Band Power Class	It indicates which power class is supported by the mobile equipment in the specific E-UTRA band.
<i>Physical Layer Settings</i>	
Basic Parameters	See <a href="#">Basic Parameters</a> table for configuration details.
R9 Parameters	See <a href="#">R9 Parameters</a> table for configuration details.
R10 Parameters	See <a href="#">R10 Parameters</a> table for configuration details.
R14 Parameters	See <a href="#">R14 Parameters</a> table for configuration details.
EUTRA Bands	See <a href="#">EUTRA Bands</a> table for configuration details.
<i>Physical Layer Parameters</i>	
SRS Tx Port Switching Pattern	This parameter indicates whether the SRS Tx port switching pattern is supported by the UE. Select a value from the drop-down list. The <b>txry</b> value means that the UE is capable of SRS transmission on "x" antenna ports over total of "y" antennas, where "y" corresponds to all or subset of UE receive antennas. <b>IMPORTANT</b> If the <b>t1r4-t2r4</b> UE capability is selected, both <b>t1r4</b> and <b>t2r4</b> values are supported by the UE. Refer to 3GPP TS 38.306/ 4.2.7.1 for the detailed description of all values.
Max Number SRS Ports Per Resource	This parameter indicates the supported maximum number of SRS ports per each SRS resource. You can select a value from the drop-down list: <b>Not Set</b> , <b>N1</b> , <b>N2</b> , or <b>N4</b> .

<b>Setting</b>	<b>Description</b>
Half Duplex List Custom Export	
<i>Supported ROHC Profile</i>	<i>This subgroup defines which Robust Header Compression (ROHC) profiles from the list are supported by the mobile equipment. Robust Header Compression is defined in 3GPP TS 36.323 and the available ROHC profiles are provided in 3GPP TS 36.306 subclause 4.3.1.1.</i>
Profile 0x0001	Indicates if the 0x0001 ROHC RTP profile is supported by the UE.
Profile 0x0002	Indicates if the 0x0002 ROHC UDP profile is supported by the UE.
Profile 0x0003	Indicates if the 0x0003 ROHC ESP profile is supported by the UE.
Profile 0x0004	Indicates if the 0x0004 ROHC IP profile is supported by the UE.
Profile 0x0006	Indicates if the 0x0006 ROHC TCP profile is supported by the UE.
Profile 0x0101	Indicates if the 0x0101 ROHCv2 RTP profile is supported by the UE.
Profile 0x0102	Indicates if the 0x0102 ROHCv2 UDP profile is supported by the UE.
Profile 0x0103	Indicates if the 0x0103 ROHCv2 ESP profile is supported by the UE.
Profile 0x0104	Indicates if the 0x0104 ROHCv2 IP profile is supported by the UE.
ROHC Context Continuation	This parameter indicates whether the UE supports Robust Header Compression (ROHC) context continuation operation, where the UE does not reset the current ROHC context upon handover.
Maximum Number of ROHC Context Sessions	This parameter specifies the maximum number of concurrently active Robust Header Compression (ROHC) contexts supported by the UE. The default value is 2, but you can select other values from the drop-down list.
Supported Band Combination	Input a hex string with the supported band combination of the device. Refer to Table 5.6A-1 in 3GPP TS 36.101 for the bandwidth class parameters BandwidthClassUL, BandwidthClassDL corresponding to each band. For further details about the Carrier Aggregation feature supported by UeSIM, refer to the [FD002] document.
<i>Feature Group Indicators</i>	<i>This subgroup defines which feature groups are supported by the mobile equipment.</i>
Feature Group Indicators Enabled	This parameter specifies if the Feature Group Indicators field is enabled for the mobile equipment. When the field Feature Group Indicators is disabled, the UE will not provide feature group indicators to the eNodeB; see the featureGroupIndicators field in the UE EUTRA- Capability IE.

Setting	Description
Feature Group Indicators	The feature group indicators are mapped in a bit string, and the definitions of the bits are described in 3GPP 36.331, Annex B and C. For a specific indicator, if the UE supports all functionalities for a feature group listed in Table B.1-1, B.1-1a or C.1-1/3GPP 36.331, the indicator should be set to one (1), else the indicator should be set to zero (0).

## Basic Parameters

This table describes the configuration of **Basic Parameters**.

Setting	Description
Maximum Transmit Power (dBm)	This parameter indicates the maximum transmit power of the UE. The range is from -30 dBm to 23 dBm.
E-UTRA NR Dual Connectivity	If enabled, it indicates that the E-UTRA NR Dual Connectivity is supported by the UE.
UE Transmit Antenna Selection	If enabled, indicates that the UE transmit antenna selection is supported by the UE. Refer to 3GPP TS 36.213 for details.
UE Specific Reference Signals	If enabled, indicates that the UE-specific reference signals are supported by the UE.
UE Category	This parameter specifies the UE category, as defined in 3GPP TS 36.306 subclause 4.1, 4.1A and 4.1C. The default value is Category 3.
MaxNumTxLayers Management	This parameter specifies the maximum number of supported layers for spatial multiplexing per UE. The UE should support the number of layers according to its Rel-8/9 category (Cat. 1-5) in all non-CA band combinations. For each bandwidth class-per-band, per-band combination specified in <code>supportedBandCombination</code> , the UE provides the corresponding MIMO capability. See 3GPP TS 36.306, Table 4.4-1 and 4.2.3.1 for details.
Four Layer TM3-TM4	If enabled, it indicates that the UE supports 4-layer spatial multiplexing for TM3 and TM4.
Power Preference Indication	If enabled, it indicates that the UE supports power preference indication.
Power Preference Indication Configuration	This parameter specifies the UE power saving configuration. It is meaningful only if the <b>Power Preference Indication Supported</b> is disabled. Select a value from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Normal</b></li> <li>• <b>Low Power Consumption</b></li> </ul>
PDCP SN Extension R11	If enabled, it indicates that the UE supports 15-bit length of PDCP sequence number.

<b>Setting</b>	<b>Description</b>
Request Reduced Format	If enabled, it indicates that the UE is requested to provide supported CA band combinations in the <code>supportedBandCombinationReduced-r13</code> instead of the <code>supportedBandCombination-r10</code> .
Request Maximum Component Carriers Retrieval	If enabled, it indicates the support for retrieval of maximum number of CCs for which the UE is requested to provide CA band combinations and non-CA bands.
MTC Parameters - CE Mode A	If enabled, it indicates that the UE supports operation in CE mode A.
MTC Parameters – CE Mode B	If enabled, it indicates that the UE supports operation in CE mode B.
Measurement Gap Patterns	This parameter indicates which gap patterns are supported by the UE (4 to 11) as specified in 3GPP TS 36.133 and TS 38.133.
Enhanced dual layer FDD	If enabled, it indicates that the UE supports enhanced dual layer in FDD.
Enhanced dual layer TDD	If enabled, it indicates that the UE supports enhanced dual layer in TDD.
Proximity indication for intra-frequency	If enabled, it indicates that the UE supports proximity indication for intra-frequency E-UTRAN CSG member cells.
Proximity indication for inter-frequency	If enabled, it indicates that the UE supports proximity indication for inter-frequency E-UTRAN CSG member cells.
Intra-Freq A3 cell mode A	This parameter defines whether the mobile equipment, when operating in CE mode A, supports eventA3 for intra-frequency neighboring cells in normal coverage and CE Mode A.
Intra-Freq A3 cell mode B	This parameter defines whether the mobile equipment, when operating in CE mode B, supports eventA3 for intra-frequency neighboring cells in normal coverage, CE Mode A and CE Mode B.
Intra-Freq HO cell mode A	This parameter defines whether the mobile equipment, when operating in CE mode A, supports intra-frequency handover to target cell in normal coverage and CE Mode A.
Intra-Freq HO cell mode B	This parameter defines whether the mobile equipment, when operating in CE mode B, supports intra-frequency handover to target cell in normal coverage, CE Mode A or CE Mode B.
Frequency Band Priority Adjustment	If enabled, it indicates that the UE supports the prioritization of frequency bands in <code>multiBandInfoList</code> over the band in <code>freqBandIndicator</code> , as defined by <code>freqBandIndicatorPriority-r12</code> .
Supported Band	This parameter allows to configure the carrier aggregation bands

<b>Setting</b>	<b>Description</b>
Combination NR14 UI 256 Qam	combination supported by the UE.
Logged Measurements Idle	<p>This parameter enables/disables the support of the Logged MDT functionality via measurements collection by the UE. If enabled, the device performs measurements logging for MDT purposes when it is in IDLE state.</p> <p>When the network enquires the capability of the UE, the information conveyed by this parameter is included in the response message provided by the UE.</p>
Standalone GNSS Location	This parameter enables/disables the Standalone Global Navigation Satellite System (GNSS) Location Support.
TDD Special Subframe	If enabled, it indicates that the TDD Special Subframe management is supported by this device. This configuration is available only if the 3GPP Release parameter is set to a value greater than 10. Refer to 3GPP TS 36.306 for details.
MBMS SCell	This parameter specifies whether the UE in RRC_CONNECTED state supports MBMS reception on a frequency indicated in an MBMSInterestIndication message, when an SCell (Secondary Cell) is configured on that frequency (regardless of whether the SCell is activated or not). Refer to 3GPP TS 36.331 for details.
MBMS Non-Serving Cell	This parameter specifies whether the UE in RRC_CONNECTED state supports MBMS reception on a frequency indicated in an MBMSInterestIndication message, where (according to supportedBandCombination and to network synchronization properties) a serving cell may be additionally configured.
MBMS Single Carrier Only	This parameter specifies whether the UE is able to receive the eMBMS signal from a single carrier only and that the UE indicates its interest to only one eMBMS frequency carrier.
CRS Interference Handling	If enabled, it indicates that the UE supports CRS interference handling.
PDCCH	This parameter specifies whether the UE supports multi-cell HARQ ACK, periodic CSI reporting and SR on PUCCH format 3.
UL Coordinated Multi- Point Operation	If enabled, it indicates that the UE supports UL Coordinated Multi- Point operation.
Logical Channel SR Prohibit Timer	This parameter specifies whether the UE supports the LogicalChannelSRProhibitTimer, as defined in 3GPP TS 36.321.
Downlink LAA	This parameter specifies whether the UE supports downlink License Assisted Access operation.

Setting	Description
In-Device coexistence UL	This parameter specifies whether the UE supports in-device coexistence (IDC) in uplink. When supported (enabled), the UE should report <code>inDeviceCoexInd-r11</code> IE set to <code>true</code> in UE Capability Info Indication RRC PDU (refer to 3GPP TS 36.331).
TEST DEVICE - MPR behavior	This parameter is a bit mask that defines the bits in the <code>modifiedMPRbehaviour</code> field, indicated in the UE Radio Access Capability IE by a UE supporting an MPR or A-MPR modified in a later release of this specification. Refer to 3GPP TS 36.101/ Annex H.

## R9 Parameters

This table describes the configuration of **R9 Parameters**.

Setting	Description
Proximity indication for intra-frequency	This parameter indicates whether the UE supports proximity indication for intra-frequency E-UTRAN CSG member cells.
Proximity indication for inter-frequency	This parameter indicates whether the UE supports proximity indication for inter-frequency E-UTRAN CSG member cells.
Proximity indication	This parameter indicates whether the UE supports proximity indication for UTRAN CSG member cells.
Intra Freq SI Acquis HO R9 Enabled	This parameter indicates whether the UE supports, upon the configuration of <code>siRequestForHO</code> by the network, the acquisition and reporting of relevant information using autonomous gaps by reading the SI from a neighboring intra-frequency cell.
Inter Freq SI Acquis HO R9 Enabled	This parameter indicates whether the UE supports, upon the configuration of <code>siRequestForHO</code> by the network, the acquisition and reporting of relevant information using autonomous gaps by reading the SI from a neighboring inter-frequency cell.
UTRAN SI Acquis HO R9 Enabled	This parameter indicates whether the UE supports, upon the configuration of <code>siRequestForHO</code> by the network, the acquisition and reporting of relevant information using autonomous gaps by reading the SI from a neighboring UMTS cell.
RACH Report R9 Enabled	This parameter indicates whether the UE supports delivery of <code>rachReport</code> .

## R10 Parameters

This table describes the configuration of **R10 Parameters**.

Setting	Description
Two Antenna Ports For PUCCH R10	This parameter indicates if two antenna ports for PUCCH is supported.
Transmission Mode 9 with 8 Tx FDD R10	This parameter indicates if Transmission Mode 9 with 8 Tx is supported.
PMI Disabling R10	This parameter indicates if PMI disabling is supported.
Cross Carrier Scheduling R10	This parameter indicates if cross carrier scheduling is supported.
Simultaneous PUCCH PUSCH R10	This parameter indicates whether simultaneous PUCCH and PUSCH transmissions is configured, see TS 36.213 for details.
Multi Cluster PUSCH within CC R10	This parameter indicates whether multi-cluster win component carrier is supported.

## R14 Parameters

This table describes the configuration of **R14 Parameters**.

Setting	Description
CE PDSCH Ten Processes R14	This parameter indicates if the UE supports 10 DL HARQ processes in FDD in CE mode A, as specified in 3GPP TS 36.331/ 6.3.6.
CE HARQ ACK Bundling R14	This parameter indicates if the UE supports HARQ-ACK bundling in half duplex FDD in CE mode A, as specified in 3GPP TS 36.212 and 36.213.
Overheating Ind R14	This parameter specifies whether the UE supports overheating assistance information.

## EUTRA Bands

This table describes the configuration of **EUTRA Bands**.

Setting	Description
EUTRA Band Rel 13	For bands to appear in the list, create the input as a hex string containing the EUTRA BANDS.

## NR Physical Layer Parameters

This group allows you to configure NR Physical Layer parameters related to the device model, and applies to the 5GNR context.

The following table describes the device **NR Physical Layer Parameters** settings.

<b>Setting</b>	<b>Description</b>
<i>NR Physical Layer Parameters:</i>	
supportedNrBandNrHalfDuplexFddTypeaRedCapR17List	Add the number of the supported NR band list configured for the UE to support the Half-duplex FDD operation (instead of full-duplex FDD operation) type A for RedCap UE. The UE can include this field only if the UE supports supportOfRedCap-r17.
supportedNrBandNrCondPscellChangeR16List	Add the number of the supported NR band list configured for UE to support conditional PSCell change. This parameter is available only if 3GPP Release parameter is set to a value greater than or equal to 16.
supportedNrBandNrBwpWithoutCdSsbOrNcdSsbRedCapR17List	Add the number of the supported NR band list configured for the UE to support the RRCconfigured DL BWP without CD-SSB or NCD-SSB. The UE can include this field only if the UE supports supportOfRedCap-r17.
supportedNrBandNrPdsch256QamFr2List	Add the number of the supported NR band list configured to specify if PDSCH 256QAM FR2 is supported for the corresponding NR band.
One FL DMRS Three Additional IDMRS UL	<p>This parameter indicates whether the UE supports DM-RS pattern for UL transmission with one symbol front-loaded DM-RS with three additional DM-RS symbols. Available Options are:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>

<b>Setting</b>	<b>Description</b>
DRX Preference R16	<p>Indicates whether the UE supports providing its preference of a cell group on DRX parameters for power saving in RRC_CONNECTED.</p> <p><b>IMPORTANT</b> This parameter become available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Max CC Preference R16	<p>Indicates whether the UE supports providing its preference of a cell group on the maximum number of secondary component carriers for power saving in RRC_CONNECTED.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Release Preference R16	<p>Indicates whether the UE supports providing its preference assistance information to transition out of RRC_CONNECTED for power saving.</p>

Setting	Description
	<p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Min Scheduling Preference R16	<p>Indicates whether the UE supports providing its preference on the minimum scheduling offset for cross-slot scheduling of the cell group for power saving in RRC_CONNECTED</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Max BW Preference R16	<p>Indicates whether the UE supports providing its preference of a cell group on the maximum aggregated bandwidths for power saving in RRC_CONNECTED. You can select one of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>

<b>Setting</b>	<b>Description</b>
	<p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Max MIMO Layer Preference R16	<p>Indicates whether the UE supports providing its preference of a cell group on the maximum number of MIMO layers for power saving in RRC_CONNECTED. You can select one of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
EUTRA CGI Reporting	This parameter specifies if the mobile equipment supports CGI-Reporting. Refer to 3GPP TS 38.306/4.2.9 for further details.
LCH to SCell Restriction	Indicates whether the UE supports restricting data transmission from a given LCH to a configured (sub-) set of serving cell.
Supported Gap Patterns	Indicates whether the UE supports gap patterns 2, 3 and

<b>Setting</b>	<b>Description</b>
	<p>11 in NE-DC when the frequencies to be measured within this measurement gap are all NR frequencies.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Supported Gap Patterns NR Only R16	<p>It indicates measurement gap pattern(s) optionally supported by the mobile equipment for NR SA, for NR-DC, for NE-DC and for independent measurement gap configuration on FR2 in (NG)EN-DC.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
<i>Basic Parameters</i>	See <a href="#">Basic Parameters</a> table for configuration details.
<i>Common Parameters</i>	See <a href="#">Common Parameters</a> table for configuration details.
<i>Measurement and Mobility</i>	See <a href="#">Measurement and Mobility</a> table for configuration details.
<i>FRX-Diff</i>	See <a href="#">FRX-Diff</a> table for configuration details.
<i>PDCP Parameters</i>	See <a href="#">PDCP Parameters</a> table for configuration details.

Setting	Description
<i>RedCap Parameters</i>	See <a href="#">RedCap Parameters table</a> for configuration details.

## Basic Parameters

This table describes the configuration of **Basic Parameters**.

Setting	Description
Reflective QoS	This parameter specifies if the AS reflectivity is supported by the mobile equipment; refer to 3GPP TS 38.306 and 3GPP TS 37.324.
Voice over NR	This parameter specifies if the mobile equipment supports IMS voiceOverNR RRC UE capability as defined in 3GPP TS 38.306, paragraph 4.2.13.
Two FL-DMRS	This parameter defines whether the UE supports DM-RS pattern for DL reception and/or UL transmission with two symbols front-loaded DM-RS, without additional DM-RS symbols. The left most bit in the bitmap corresponds to DL reception and the right most bit in the bitmap corresponds to UL transmission. Refer to 3GPP TS 38.306 for details.
Logged Measurements R16	This parameter indicates whether the mobile equipment supports Logged Measurements for R16. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b> .
LCP Restriction	This parameter specifies if the LCP Restriction is supported by the mobile equipment.
Overheating Ind	This parameter specifies whether the UE supports overheating assistance information.
Gnss Location R16	Indicates whether the UE is equipped with a GNSS or A-GNSS receiver that may be used to provide detailed location information along with SON, MDT, and NTN related measurements in RRC_CONNECTED, RRC_IDLE and RRC_INACTIVE. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b> .
Inter Band Contiguous MRDC	Indicates whether the UE is equipped with a GNSS or A-GNSS receiver that may be used to provide detailed location information along with SON, MDT, and NTN related measurements in RRC_CONNECTED, RRC_IDLE and RRC_INACTIVE.
Async Nrdc R16	Indicates whether the UE supports asynchronous NR-DC with MRTD and MTTD as specified in clause 7.5 and 7.6 of TS 38.133. If the band combination is comprised of a single band entry for more than two carriers, the UE should support any permutations of carriers to CGs. If the band combination is

<b>Setting</b>	<b>Description</b>
	comprised of at least two band entries, the carriers corresponding to a band entry shall belong to only one cell group.
Inter-RAT Parameters	This parameter specifies the supported Inter-RAT parameters.
Cell Group	<p>This parameter combines the csi-RS-RLM and maxNumberResource-CSI-RS-RLM parameters described in 3GPP TS 38.306/4.2.9. It is used to:</p> <ul style="list-style-type: none"> <li>• indicate whether the mobile equipment supports radio link monitoring procedure based on measurement of CSI-RS as specified in TS 38.213 and TS 38.133.</li> <li>• define the maximum number of CSI-RS resources within a slot per spCell for CSI-RS based RLM.</li> </ul> <p>If the chosen value is 'Not Set', csi-RS-RLM is not supported, otherwise csi-RS-RLM is supported and maxNumberResource-CSI-RS-RLM is set to nx.</p>
Supported NR Band List	This parameter specifies the supported NR band list.
Supported NR Band List Additional Value	This parameter specifies the supported NR band list additional values.
Supported Nr Band Nr Pdsch 256 Qam Fr2 List	Add the number of the supported NR band list configured to specify if PDSCH 256QAM FR2 is supported for the corresponding NR band.
Supported Nr Band Nr Pusch 256 Qam List	Add the number of the supported NR band list configured to specify if PDSCH 256QAM is supported for the corresponding NR band.
Supported Nr Band Nr Ue Power Class List	Add the number of the supported NR band list configured to specify the supported UE power class.
Supported Nr Band Nr Bwp Same Numerology List	Add the number of the supported NR band list configured to specify the type of A/B BWP adaptation (up to 2/4 BWPs) with the same numerology, via DCI and timer. Refer to 3GPP TS 38.306, 4.2.7.2.
Supported Nr Band Nr Bwp Without Restriction List	Add the number of the supported NR band list configured to specify if BWP operation without bandwidth restriction is supported. Refer to 3GPP TS 38.306, 4.2.7.2.
Supported Nr Band Nr Cond Ps	Add the number of the supported NR band list configured to specify if the UE supports conditional PSCell change. This parameter is available only if 3GPP

<b>Setting</b>	<b>Description</b>
Cell Change R16 List	Release parameter is set to a value greater than or equal to 16.
Supported Nr Band Nr Cond Ps Cell Change Two Trigger Events R16 List	Add the number of the supported NR band list configured to specify if the UE supports two trigger events for the same execution condition. This parameter is available only if 3GPP Release parameter is set to a value greater than or equal to 16.
Supported Nr Band Nr Enhanced Skip Uplink Tx Configured V1660 List	Add the number of the supported NR band list configured to specify if the UE supports the enhancedSkipUplinkTxConfigured-v1660 for the corresponding Band NR. This parameter is available only if 3GPP Release parameter is set to a value greater than or equal to 16.
Supported Nr Band Nr Enhanced Skip Uplink Tx Dynamic V1660 List	Add the number of the supported NR band list configured to specify if the UE supports the enhancedSkipUplinkTxDynamic-v1660 for the corresponding Band NR. This parameter is available only if 3GPP Release parameter is set to a value greater than or equal to 16.
Supported Nr Band Nr Configured Ul Grant Type2 V1650 List	Add the number of the supported NR band list configured to specify if the UE supports Type 2 PUSCH transmissions with configured grant, as specified in TS 38.214 with UL-TWG-repK value of one. This applies only to non-shared spectrum channel access.  For shared spectrum channel access, configuredULGrantType2- r16 applies. UE should set the capability value consistently for all FDD-FR1 bands, all TDD-FR1 bands and all TDD-FR2 bands respectively. This parameter is available only if 3GPP Release parameter is set to a value greater than or equal to 16.
Supported Nr Band Nr Bwp Without Cd Ssb or Ncd Ssb Red Cap R17 List	Add the number of the supported NR band list configured to specify if the UE supports the RRCconfigured DL BWP without CD-SSB or NCD-SSB. The UE can include this field only if the UE supports supportOfRedCap-r17.
Supported Nr Band Nr Half Duplex Fdd Typea RedCap R17 List	Add the number of the supported NR band list configured to specify if the UE supports the Half-duplex FDD operation (instead of full-duplex FDD operation) type A for RedCap UE. The UE can include this field only if the UE supports supportOfRedCap-r17.
Supported NR Band Combination	This parameter specifies the Supported NR Band Combinations.

<b>Setting</b>	<b>Description</b>
Supported NR Band Combination v1540	This parameter specifies the supported NR band combinations v1540, as described in 3GPP TS 38.331.
Nr Feature Set Combination Id List	This is the Feature Set Combination Identifier NR.
Supported MR-DC Band Combination	This parameter specifies the Supported MR-DC Band Combinations.
Supported Band Combination NRDC	This parameter specifies the Supported New Radio Dual Connectivity (NRDC) Band Combinations, as described in 3GPP TS 38.331.
NR RLC Am With Short SN	This parameter specifies whether the mobile equipment supports RLC AM with short sequence number.
NR RLC Um With Short SN	This parameter specifies whether the mobile equipment supports RLC AM with short sequence number.
NR RLC Am With Long SN	This parameter specifies whether the mobile equipment supports RLC UM with long sequence number.
NR RLC	<p>need definition</p> <p>Select one or more options from the drop-down:</p> <ul style="list-style-type: none"> <li>• <b>AM with Short SN</b></li> <li>• <b>UM with Short SN</b></li> <li>• <b>UM with Long SN</b></li> </ul>
Long DRX Cycle	This parameter specifies if the mobile equipment supports Long DRX Cycle, as specified in 3GPP TS 38.321.
Short DRX Cycle	This parameter specifies if the mobile equipment supports Short DRX Cycle as specified in 3GPP TS 38.321.
SRB3	This parameter specifies if the Signaling Radio Bearer (SRB) 3 is supported by the mobile equipment.
PDSCH 256QAM FR1	This parameter specifies if the 256QAM on PDSCH in FR1 Bands is supported by the mobile equipment.
Feature Sets EUTRA	This parameter specifies the Supported Feature Sets EUTRA, refer to 3GPP TS 38.331 for details.
Feature Sets	This parameter specifies the Supported Feature Sets MRDC, refer to 3GPP TS

<b>Setting</b>	<b>Description</b>
MRDC	38.331 for details.
Feature Sets NR	This parameter specifies the Supported Feature Sets NR, refer to 3GPP TS 38.331 for details.
Skip Uplink Tx Dynamic	<p>This parameter specifies whether the mobile equipment skips UL transmission for uplink grant other than a configured uplink grant if no data is available for transmission in the UE buffer, as described in 3GPP TS 38.321. Select from the drop-down the appropriate option:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FDD Only</b></li> <li>• <b>TDD Only</b></li> </ul>
Split DRB with UL Both MCG SCG	<p>This parameter specifies if the mobile equipment supports UL transmission via both MCG path and SCG path for the split DRB, as described in 3GPP TS 37.340. Also refer to 3GPP TS 38.306/4.2.2.</p>
PDSCH Remapping FR1 Per Symbol	<p>This parameter specifies the value of PDSCH RE Mapping FR1 Per Symbol supported by the mobile equipment, as described in 3GPP TS 38.306, paragraph 4.2.7.10. It indicates the maximum number of PDSCH Resource Element (RE) mapping supported for FR1, per symbol per CC.</p> <p>Select a value from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Not Set</b></li> <li>• <b>N10</b> - means 10 RE mapping patterns expected for the mobile equipment in the network</li> <li>• <b>N20</b> - means 20 RE mapping patterns expected for the mobile equipment in the network</li> </ul>
PDSCH Remapping FR1 Per Slot	<p>This parameter specifies the value of PDSCH RE Mapping FR1 Per Slot supported by the mobile equipment, as described in 3GPP TS 38.306, paragraph 4.2.7.10. It indicates the maximum number of PDSCH Resource Element (RE) mapping supported for FR1, per slot per CC.</p> <p>Select a value from the drop-down list. For example, N16 means 16 RE mapping patterns expected for the mobile equipment in the network.</p>
Resume With Stored MCG Scells R16	<p>This parameter specifies whether the UE supports not deleting the stored MCG SCell configuration when initiating the resume procedure.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>
Resume With Stored SCG R16	<p>This parameter specifies whether the UE supports not deleting the stored SCG configuration when initiating resume procedure.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>

Setting	Description
Voice Fallback Indication EPS R16	This parameter indicates whether the UE supports voiceFallbackIndication in RRCCRelease and MobilityFromNRCommand. If this field is included, the UE must support IMS voice over NR and IMS voice over E-UTRA via EPC. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b> .
Resume With Scg Config R16	This parameter specifies whether the UE supports not deleting the stored SCG configuration when initiating resume.
Inactive State	This parameter specifies if the mobile equipment supports RRC_inactive, as described in refer to 3GPP TS 38.331.
SFN Sync NRDC	This parameter specifies if the UE supports NR-DC only with SFN and frame synchronization between PCell and PSCell. If not enabled, the UE supports NR-DC with slot-level synchronization without condition on SFN and frame synchronization.

## Common Parameters

This table describes the configuration of **Common Parameters**.

Setting	Description
<i>Common:</i>	
Dynamic HARQ ACK Codebook	This parameter specifies if the UE supports HARQ-ACK codebook dynamically constructed by DCI(s). Refer to 3GPP TS 38.306/ 4.2.7.10 for details.
PDSCH Mapping Type A	This parameter specifies if the UE supports PDSCH Mapping Type A with less than seven symbols, as described in 3GPP TS 38.306, paragraph 4.2.7.10.
Configured UL Grant Type 1	This parameter specifies if the UE supports Type 1 PUSCH transmissions with configured grant, as described in 3GPP TS 38.214.
Configured UL Grant Type 2	This parameter specifies if the UE supports Type 2 PUSCH transmissions with configured grant, as described in 3GPP TS 38.306, paragraph 4.2.7.10.
Downlink SPS	This parameter specifies whether the UE supports PDSCH reception based on semi-persistent scheduling.
Rate Matching Resrc Set Semi- Static	This parameter specifies if the UE supports Rate Matching Resrc Set Semi-Static, as described in 3GPP TS 38.306, paragraph 4.2.7.10.
Rate Matching Resrc Set Dynamic	This parameter indicates whether the UE supports receiving PDSCH with resource mapping that excludes the REs corresponding to resource sets

<b>Setting</b>	<b>Description</b>
	configured with RB-symbol level granularity indicated by bitmaps (see patternType in RateMatchPattern in 3GPP TS 38.331) based on dynamic indication in the scheduling DCI, as specified in 3GPP TS 38.214.
DCI DL Priority Indicator R16	<p>This parameter indicates whether the UE supports the priority indicator field configured in DCI formats 1_1 and 1_2 in a BWP when configured to monitor both DCI formats 1_1 and 1_2 in the BWP.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>
DCI Format 12 And 02 R16	<p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>
DCI UL Priority Indicator R16	<p>This parameter indicates whether the UE supports the priority indicator field configured in DCI formats 0_1 and 0_2 in a BWP when configured to monitor both DCI formats 0_1 and 0_2 in the BWP.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>
Monitoring DCI Same Search Space R16	<p>This parameter indicates whether the UE supports monitoring both DCI format 0_1/1_1 and DCI format 0_2/1_2 in the same search space.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>
PUSCH Repetition Type A R16	<p>This parameter indicates whether the UE supports the dynamic indication of the number of repetitions for PUSCH transmission, as specified in 3GPP TS 38.214, clause 6.1.2.1. This parameter is only reported for non-shared spectrum operation (non-SharedSpectrumChAccess-r16 IE).</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16 or 17</b>.</p>
PUSCH Repetition Multi Slots	<p>This parameter indicates whether the UE supports transmitting PUSCH scheduled by DCI format 0_1 when configured with higher layer parameter <code>pusch-AggregationFactor &gt; 1</code>, as defined in 3GPP TS 38.214, clause 6.1.2.1.</p>
Max Layers MIMO Indication	<p>This parameter box specifies if the UE supports the network configuration of maxMIMO-Layers, as described in 3GPP TS 38.331.</p>
Dynamic Beta Offset Indication HARQ ACK CSI	<p>This parameter specifies if the UE supports indicating beta-offset (UCI repetition factor onto PUSCH) for HARQ-ACK and/or CSI via DCI among the RRC configured beta-offsets.</p>
BWP Switching Delay	<p>This parameter indicates whether the UE supports DCI and timer based active BWP switching delay type1 or type2 specified in 3GPP TS 38.133, paragraph 8.6.2. Select an option from the drop-down.</p>
Type2 HARQ ACK	<p>This parameter indicates whether the UE supports Type 2 HARQACK</p>

Setting	Description
Codebook R16	codebook, as described in 38.306, paragraph 4.2.7.10. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b> .
Dynamic PRB Bundling DL	This parameter indicates whether the UE supports DCI-based indication of the PRG size for PDSCH reception, as defined in 3GPP TS 38.306, paragraph 4.2.7.10.
Type 2 PUSCH Repetition Multi Slots	This parameter indicates whether the UE supports Type 2 PUSCH transmissions with configured grant as specified in TS 38.214 with UL-TWG-repK value equal to 2, 4, or 8 with a single repetition of the transport block within each slot, and redundancy version pattern as indicated by UL-TWG-RV-rep.

## Measurement and Mobility

This table describes the configuration of **Measurement and Mobility**.

Setting	Description
<i>Measurement and Mobility:</i>	
SSB RLM	This parameter specifies if the mobile equipment supports ssb-RLM. Refer to 3GPP TS 38.306/ 4.2.9 for further details.
Nr CGI Reporting	This parameter specifies if the mobile equipment supports nr-CGI-Reporting. Refer to 3GPP TS 38.306/ 4.2.9 for further details.
Independent Gap Config	This parameter specifies if the mobile equipment supports independentGapConfig. Refer to 3GPP TS 38.306/ 4.2.9 for further details.
Idle Inactive Nr Meas Report R16	<p>This parameter specifies if the UE supports configuration of NR SSB measurements in RRC_IDLE/RRC_INACTIVE and reporting of the corresponding results upon network request as specified in 3GPP TS 38.331.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Idle Inactive Nr Meas Beam Report R16	This parameter specifies if the UE supports beam level measurements in RRC_IDLE/RRC_INACTIVE and reporting of the corresponding beam

<b>Setting</b>	<b>Description</b>
	<p>measurement results upon network request, as specified in 3GPP TS 38.331.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Idle Inactive Eutra Meas Report R16	<p>This parameter specifies if the UE supports configuration of E-UTRA measurements in RRC_IDLE/RRC_INACTIVE and reporting of the corresponding results upon network request, as specified in 3GPP TS 38.331.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Idle Inactive Validity Area R16	<p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Pcell T312 R16	<p>Indicates whether the UE supports T312 based fast failure recovery for PCell.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Direct SCG SCell Activation R16	<p>This parameter indicates whether the UE supports direct NR SCG SCell activation, as specified in 3GPP TS 38.321, upon SCell addition and upon reconfiguration with sync of the SCG, both performed via a RRCReconfiguration message received through SRB3, or contained in an RRC(Connection) Reconfiguration message received via SRB1.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Direct MCG SCell Activation R16	<p>This parameter indicates whether the UE supports direct NR MCG SCell activation, as specified in 3GPP TS 38.321, upon SCell addition and reconfiguration with sync of the MCG, as specified in 3GPP TS 38.331.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>

<b>Setting</b>	<b>Description</b>
Direct MCG SCell Activation Resume R16	<p>This parameter indicates whether the UE supports direct NR SCG SCell activation, as specified in 3GPP TS 38.321:</p> <ul style="list-style-type: none"> <li>• upon reception of an RRCCoreConfiguration included in a RRCCoreConnectionResume message, as specified in 3GPP TS 38.331 and 3GPP TS 36.331, if the UE indicates support of EN-DC or NGEN-DC, and support of resumeWithSCGConfig- r16 as specified in 3GPP TS 36.331</li> <li>• upon reception of an RRCCoreConfiguration included in an RRCCoreResume message, as specified in 3GPP TS 38.331, if the UE indicates support of NR-DC and of resumeWithSCGConfig- r16 as specified in 3GPP TS 38.331.</li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
<i>Measurement and Mobility FRX-Diff</i>	
CSI RSI RLM	<p>This represents the maxNumberResource-CSI-RS-RLM; this parameter specifies the maximum number of Channel-State Information Reference Signal (CSIRS) resources within a slot per spCell for CSI-RS based RLM (radio link monitoring). Refer to 3GPP TS 38.306/ 4.2.9 for further details.</p> <p>Select a value from the drop-down.</p>
Inter Frequency Meas	<p>This parameter specifies if the mobile equipment supports the interFrequencyMeas-Nogap-r16. It is possible to change the setting by choosing a value from the drop-down list.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
SS SINR Meas	<p>This parameter specifies if the mobile equipment supports ss-SINR measurement, as specified in 3GPP TS 38.215. It is possible to change the setting by choosing a value from the drop-down list.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
<i>Measurement and Mobility XDD-Diff</i>	
Intra and Inter	<p>This parameter specifies if the mobile equipment supports intraAndInterF-MeasAndReport. Refer to 3GPP TS 38.306/ 4.2.9 for further details.</p>

<b>Setting</b>	<b>Description</b>
Frequency Measurement and Report	<p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FDD only</b></li> <li>• <b>TDD only</b></li> </ul>
Event A Measurement and Report	<p>This parameter specifies if the mobile equipment supports eventAMeasAndReport. Refer to 3GPP TS 38.306/ 4.2.9 for further details.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FDD only</b></li> <li>• <b>TDD only</b></li> </ul>
PS Cell T312 R16	<p>This parameter indicates whether the UE supports T312 based fast failure recovery for PSCell.</p>
Cond PS Cell Change FDD TDD R16	<p>This parameter indicates whether the UE supports conditional PSCell change between FDD and TDD cells.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Cond PS Cell Change FR1 FR2 R16	<p>This parameter indicates whether the UE supports conditional PSCell change between FR1 and FR2.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Enhanced Skip Uplink Tx Configured R16	<p>This parameter specifies whether the UE supports the enhancedSkipUplinkTxConfigured-v1660 for the corresponding Band NR.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FDD only</b></li> <li>• <b>TDD only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
Enhanced Skip Uplink Tx Dynamic R16	<p>This parameter specifies whether the UE supports the enhancedSkipUplinkTxDynamic-v1660 for the corresponding Band NR.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> </ul>

<b>Setting</b>	<b>Description</b>
	<ul style="list-style-type: none"> <li>• <b>FDD only</b></li> <li>• <b>TDD only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>

## FRX-Diff

This table describes the configuration of **Measurement and Mobility**.

<b>Setting</b>	<b>Description</b>
<i>FRX-Diff</i>	
Max Layers MIMO Adaptation R16	<p>This parameter specifies if the UE supports the network configuration of maxMIMO-Layers, as described in 3GPP TS 38.331.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FDD only</b></li> <li>• <b>TDD only</b></li> </ul> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>16</b> or <b>17</b>.</p>
One Ports PTRS	<p>This parameter specifies the value of One Ports PTRS supported by the mobile equipment; it refers to PT-RS with one antenna port in DL reception and/or UL transmission. For details, refer to 3GPP TS 38.306, paragraph 4.2.7.10. Allowed value range is 0-3.</p>
PUCCH F2 with FH	<p>This parameter specifies if the mobile equipment supports transmission of a PUCCH format 2 (2 OFDM symbols in total) with frequency hopping in a slot, as described in 3GPP TS 38.306, paragraph 4.2.7.10.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
PUCCH F3 with FH	<p>This parameter specifies if the mobile equipment supports transmission of a PUCCH format 3 with frequency hopping in a slot, as described in 3GPP TS 38.306, paragraph 4.2.7.10.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> </ul>

<b>Setting</b>	<b>Description</b>
	<ul style="list-style-type: none"> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
PUCCH F3 with FH	<p>This parameter enables/disabled the support of transmission of a PUCCH format 3 with frequency hopping in a slot.</p>
One FL DMRS Two Additional DMRS UL	<p>This parameter specifies if the mobile equipment supports DM-RS pattern for DL transmission with one symbol front-loaded DM-RS with two additional DM-RS symbols, and more than one antenna ports, as described in 3GPP TS 38.306, paragraph 4.2.7.10.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
Two FL DMRS Two Additional DMRS UL	<p>This parameter indicates whether the UE supports DM-RS pattern for UL transmission with two symbols front-loaded DM-RS with one additional two symbols DM-RS.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
Mux SR HARQ ACK CSI PUCCH Multi per Slot	<p>This parameter specifies if the mobile equipment supports mux SR HARQ ACK CSI PUCCH MultiPerSlot.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
Mux SR HARQ ACK CSI PUCCH Once per Slot Same Symbol	<p>This parameter specifies if the mobile equipment supports mux SR HARQ ACK CSI PUCCH Once Per Slot Same Symbol.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>

<b>Setting</b>	<b>Description</b>
DL 64QAM MCS Table Alt	<p>This parameter specifies if the dl-64QAM-MCS-TableAlt is supported by the mobile equipment.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
UL 64QAM MCS Table Alt	<p>This parameter specifies if the ul-64QAM-MCS-TableAlt is supported by the mobile equipment.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
DL Scheduling Offset PDSCH Type A	<p>This parameter indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type A.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
DL Scheduling Offset PDSCH Type B	<p>This parameter indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type B.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
PUCCH F3-4 Half Pi BPSK	<p>This parameter indicates whether the UE supports pi/2-BPSK for PUCCH format 3\4.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>

<b>Setting</b>	<b>Description</b>
PDCCH Blind Detection CA	Indicates whether the PDCCH blind decoding capabilities are supported by the UE for CA with more than 4 CCs as specified in TS 38.213.
PDCCH Blind Detection CA Value	<p>Indicates the PDCCH blind detection decoding value.</p> <p><b>IMPORTANT</b> This parameter is available only if PDCCH Blind Detection CA is enabled</p>
PDCCH Blind Detection MCG UE FRX	<p>Indicates whether the PDCCH blind decoding capabilities are supported for MCG when in NR DC. The UE sets the value in accordance with the constraints specified in TS 38.213.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
PDCCH Blind Detection MCG UE	Indicates whether the PDCCH blind decoding capabilities value is supported for MCG.
PDCCH Blind Detection SCG UE FRX	<p>Indicates whether the PDCCH blind decoding capabilities are supported for SCG when in NR DC. The UE sets the value in accordance with the constraints specified in TS 38.213.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
PDCCH Blind Detection SCG UE	Indicates PDCCH blind decoding capabilities value supported for SCG

## PDCP Parameters

This table describes the configuration of **PDCP Parameters**.

<b>Setting</b>	<b>Description</b>
<i>PDCP Parameters:</i>	
Out of Order Delivery	This parameter indicates whether the UE supports the out of order delivery of data to upper layers by PDCP.
PDCP Duplication SRB	This parameter indicates whether the UE supports CA-based PDCP duplication over SRB1/2 and/or, if (NG)EN-DC is supported, SRB3, as specified in 3GPP TS 38.323

<b>Setting</b>	<b>Description</b>
PDCP Duplication MCG or SRB-DRB	This parameter indicates whether the UE supports CA-based PDCP duplication over MCG or SCG DRB, as specified in 3GPP TS 38.323.
PDCP Duplication More than Two RLC R16	This parameter indicates whether the UE supports PDCP duplication with more than two RLC entities, as specified in 3GPP TS 38.323.
DL Scheduling Offset PDSCH Type A XDD	<p>This parameter indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type A.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
DL Scheduling Offset PDSCH Type B XDD	<p>This parameter indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type B.</p> <p>Select from the following values:</p> <ul style="list-style-type: none"> <li>• <b>Not Supported</b></li> <li>• <b>Supported</b></li> <li>• <b>FR1 only</b></li> <li>• <b>FR2 only</b></li> </ul>
LCH To Grant Priority Restriction R16	This checkbox indicates whether the UE supports restricting data transmission from a given LCH to a configured (sub-) set of dynamic grant priority levels.

## RedCap Parameters

This table describes the configuration of **RedCap Parameters**.

<b>Setting</b>	<b>Description</b>
<i>RedCap Parameters:</i>	
Support Of RedCap R17	<p>This parameter indicates whether the UE supports the Reduced Capability feature.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>17</b>.</p>
Long SN RedCap R17	<p>This parameter indicates whether the RedCap UE supports 18-bit length of PDCP sequence number.</p> <p><b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>17</b>.</p>

Setting	Description
Support Of 16 DRB RedCap R17	This parameter indicates whether the RedCap UE supports 16 DRBs. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>17</b> .
AM With Long SN RedCap R17	This parameter indicates whether the RedCap UE supports AM DRB with 18-bit length of RLC sequence number. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>17</b> .
RRM Relaxation RRC Connected RedCap R17	This parameter indicates whether the RedCap UE supports Rel-17 relaxed RRM measurements in RRC_CONNECTED, as specified in 3GPP TS 38.331. <b>IMPORTANT</b> This parameter becomes available only if <b>3GPP Release</b> parameter is set to <b>17</b> .

## 5GMM Parameters settings

This group allows to configure 5GNR Mobility Management parameters related to the device model and applies to the 5GNR context.

Setting	Description
UE Security Capabilities	This parameter refers to the UE security capability information element used by the UE and by the network to indicate which security algorithms are supported by the UE in N1 mode for NAS security, as well as which security algorithms are supported over NR and E-UTRA connected to 5GCN for AS security. Refer to in 3GPP TS 24.501/Figure 9.11.3.54.1, 3GPP TS 24.301/Figure 9.9.3.34.1.
Capability	This parameter refers to the 5GMM capability information element. Its purpose is to provide the network with information concerning aspects of the UE related to the 5GCN or inter-working with the EPS. The contents might affect the way the network handles the operation of the UE. Refer to 3GPP TS 24.501 for details.
UE's Usage Settings	This parameter specifies the UE's usage settings as described in 3GPP TS 24.501, paragraph 9.11.3.55. The purpose of the UE's usage setting information element is to provide the network with the UE's usage setting as defined in 3GPP TS 24.301; the network uses the UE's usage setting to select the RFSP index. You can select one or more options from the drop-down: <ul style="list-style-type: none"> <li>• <b>Not Used</b></li> <li>• <b>Voice Centric</b> - indicates that the UE has preference for voice services</li> <li>• <b>Data Centric</b> - indicates that the UE has preference for data services.</li> </ul>

## EMM Parameters settings

This group allows to configure EMM parameters and to select the supported EPS encryption/integrity algorithms and UMTS encryption/integrity algorithms for the device model.

<b>Setting</b>	<b>Description</b>
Last Visited Registered TAI	This parameter indicates a Tracking Area Identity (TAI) contained in the TAI list that the UE registered to the network, which identifies the tracking area last visited by the mobile equipment. When present, 5 bytes in hexadecimal are required (see coding is 3GPP TS 24.301, Figure 9.9.3.32.1 and Table 9.9.3.32.1). It is used in the first Attach procedure after the connection to the Simulator.
1xCS SRVCC	This parameter indicates if the Single Radio Voice Call Continuity (SRVCC) from E-UTRAN access to 3GPP2 1xCS is supported by the mobile equipment. Refer to 3GPP TS 23.216 for further details.
PNB-CIoT	<p>The Preferred CIoT NTW Behaviour parameter defines the network behaviour the UE is expecting to be available in the network, refer to 3GPP TS 24.301/9.9.3.0B and 3GPP TS 23.401/5.3.2. You can select a value from the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>No Info</b></li> <li>• <b>Control Plain CIoT</b></li> <li>• <b>User Pain CIoT</b></li> </ul>
Encryption and Integrity	This parameter defines the encryption and integrity algorithms supported by the mobile equipment. A description of the values shown in the drop-down list are provided in the <a href="#">Encryption and Integrity</a> table.
Miscellaneous	This parameter defines feature capability supported by the mobile equipment. The available algorithms are defined in 3GPP TS 24.301/ 9.9.3.34. A description of the values shown in the drop-down list are provided in the <a href="#">Miscellaneous</a> table.
Additional Encryption and Integrity	This parameter defines the additional security algorithms supported by the mobile equipment. The available algorithms are defined in Table 9.9.3.53.1/3GPP TS 24.301. A description of the values shown in the drop-down list are provided in the <a href="#">Additional Encryption and Integrity</a> table.

### Encryption and Integrity

If selected, the following options will allow support for different encryption and integrity algorithms.

<b>Setting</b>	<b>Description</b>
EEA0	The EEA0 EPS encryption algorithm is supported by the mobile equipment.
128-EEA1	The 128-EEA1 EPS encryption algorithm is supported by the mobile equipment.
128-EEA2	The 128-EEA2 EPS encryption algorithm is supported by the mobile equipment.
EEA3	The EEA3 EPS encryption algorithm is supported by the mobile equipment.
EEA4	The EEA4 EPS encryption algorithm is supported by the mobile equipment.

<b>Setting</b>	<b>Description</b>
EEA5	The EEA5 EPS encryption algorithm is supported by the mobile equipment.
EEA6	The EEA6 EPS encryption algorithm is supported by the mobile equipment.
EEA7	The EEA7 EPS encryption algorithm is supported by the mobile equipment.
EIA0	The mobile equipment must set the spare bit.
128-EIA1	The 128-EIA1 EPS integrity algorithm is supported by the mobile equipment.
128-EIA2	The 128-EIA2 EPS integrity algorithm is supported by the mobile equipment.
EIA3	The EIA3 EPS integrity algorithm is supported by the mobile equipment.
EIA4	The EIA4 EPS integrity algorithm is supported by the mobile equipment.
EIA5	The EIA5 EPS integrity algorithm is supported by the mobile equipment.
EIA6	The EIA6 EPS integrity algorithm is supported by the mobile equipment.
EIA7	The EIA7 EPS integrity algorithm is supported by the mobile equipment.
UEA0	The UEA0 UMTS encryption algorithm is supported by the mobile equipment.
UEA1	The UEA1 UMTS encryption algorithm is supported by the mobile equipment.
UEA2	The UEA2 UMTS encryption algorithm is supported by the mobile equipment.
UEA3	The UEA3 UMTS encryption algorithm is supported by the mobile equipment.
UEA4	The UEA4 UMTS encryption algorithm is supported by the mobile equipment.
UEA5	The UEA5 UMTS encryption algorithm is supported by the mobile equipment.
UEA6	The UEA6 UMTS encryption algorithm is supported by the mobile equipment.
UEA7	The UEA7 UMTS encryption algorithm codec is supported by the mobile equipment.
UCS2	The UCS2 UMTS integrity algorithm is supported by the mobile equipment.
UIA1	The UIA1 UMTS integrity algorithm is supported by the mobile equipment.
UIA2	The UIA2 UMTS integrity algorithm is supported by the mobile equipment.
UIA3	The UIA3 UMTS integrity algorithm is supported by the mobile equipment.
UIA4	The UIA4 UMTS integrity algorithm is supported by the mobile equipment.
UIA5	The UIA5 UMTS integrity algorithm is supported by the mobile equipment.
UIA6	The UIA6 UMTS integrity algorithm is supported by the mobile equipment.

<b>Setting</b>	<b>Description</b>
UIA7	The UIA7 UMTS integrity algorithm is supported by the mobile equipment.

### Miscellaneous

If selected, the following options will allow support for miscellaneous CIoT-related optimizations.

<b>Setting</b>	<b>Description</b>
CP CIoT	The capacity for control plane CIoT EPS optimization is supported by the mobile equipment.
UP CIoT	The capacity for user plane CIoT EPS optimization is supported by the mobile equipment.
S1-U Data	The capacity for S1-u data transfer is supported by the mobile equipment.
ER w/o PDN	The capacity for EMM REGISTERED without PDN connectivity is supported by the mobile equipment.
Multiple DRB	The capacity to support multiple user plane radio bearers (see 3GPP TS 36.306 [44], 3GPP TS 36.331 [22]) in NB-S1 mode is supported by the mobile equipment.
DCNR	The capacity for dual connectivity with NR is supported by the mobile equipment.
N1	The capacity to support N1 Interface.

### Additional Encryption and Integrity

If selected, the following options will allow support for additional encryption and integrity algorithms.

<b>Setting</b>	<b>Description</b>
5G-IA15	The 5G-IA15 algorithm is supported by the mobile equipment.
5G-IA14	The 5G-IA14 algorithm is supported by the mobile equipment.
5G-IA13	The 5G-IA13 algorithm is supported by the mobile equipment.
5G-IA12	The 5G-IA12 algorithm is supported by the mobile equipment.
5G-IA11	The 5G-IA11 algorithm is supported by the mobile equipment.
5G-IA10	The 5G-IA10 algorithm is supported by the mobile equipment.
5G-IA9	The 5G-IA9 algorithm is supported by the mobile equipment.
5G-IA8	The 5G-IA8 algorithm is supported by the mobile equipment.
5G-IA7	The 5G-IA7 algorithm is supported by the mobile equipment.
5G-IA6	The 5G-IA6 algorithm is supported by the mobile equipment.

<b>Setting</b>	<b>Description</b>
5G-IA5	The 5G-IA5 algorithm is supported by the mobile equipment.
5G-IA4	The 5G-IA4 algorithm is supported by the mobile equipment.
128-5G-IA3	The 128-5G-IA3 algorithm is supported by the mobile equipment.
128-5G-IA2	The 128-5G-IA2 algorithm is supported by the mobile equipment.
128-5G-IA1	The 128-5G-IA1 algorithm is supported by the mobile equipment.
5G-IA0	The 5G-IA0 algorithm is supported by the mobile equipment.
5G-EA15	The 5G-EA15 algorithm is supported by the mobile equipment.
5G-EA14	The 5G-EA14 algorithm is supported by the mobile equipment.
5G-EA13	The 5G-EA13 algorithm is supported by the mobile equipment.
5G-EA12	The 5G-EA12 algorithm is supported by the mobile equipment.
5G-EA11	The 5G-EA11 algorithm is supported by the mobile equipment.
5G-EA10	The 5G-EA10 algorithm is supported by the mobile equipment.
5G-EA9	The 5G-EA9 algorithm is supported by the mobile equipment.
5G-EA8	The 5G-EA8 algorithm is supported by the mobile equipment.
5G-EA7	The 5G-EA7 algorithm is supported by the mobile equipment.
5G-EA6	The 5G-EA6 algorithm is supported by the mobile equipment.
5G-EA5	The 5G-EA5 algorithm is supported by the mobile equipment.
5G-EA4	The 5G-EA4 algorithm is supported by the mobile equipment.
128-5G-EA3	The 128-5G-EA3 algorithm is supported by the mobile equipment.
128-5G-EA2	The 128-5G-EA2 algorithm is supported by the mobile equipment.
128-5G-EA1	The 128-5G-EA1 algorithm is supported by the mobile equipment.
5G-EA0	The 5G-EA0 algorithm is supported by the mobile equipment.

## Additional Capabilities

This group allows the configuration of the radio access capabilities for the mobile equipment, as specified in 3GPP TS 25.331.

The following table describes the **Additional Capabilities** settings.

Setting	Description
Capabilities for E-UTRA	This parameter specifies the UE capabilities for E-UTRA; it is a hex dump of the encoding of UE capabilities defined for the UE EUTRA-Capability IE in 3GPP TS 36.331.
Capabilities for GERAN-CS	This parameter specifies the UE capabilities for GERAN-CS; it is a hex dump of the concatenated string of the Mobile Station Classmark 2 IE and the Mobile Station Classmark 3 IE defined in 3GPP TS 24.008.
Capabilities for GERAN-PS	This parameter specifies the UE capabilities for GERAN-PS; it is a hex dump of the value part of the MS Radio Access Capability IE defined in 3GPP TS 24.008.
CDMA2000-1XRTT	This parameter specifies the UE capabilities for CDMA2000-1XRTT; it is a hex dump of the A21 Mobile Subscription Information defined in 3GPP2 A.S0008.
NR	This parameter specifies the UE capabilities for NR; it is a hex dump of the encoding of UE capabilities defined for the UE-NRCapability IE in 3GPP TS 38.331.
EUTRA NR	This parameter specifies the UE capabilities for EUTRA-NR; it is a hex dump of the encoding of UE capabilities defined for the UEMRDC-Capability IE in 3GPP TS 38.331.

## AMM Panel

This feature allows you to set configuration parameters dedicated to the Advanced Mobility Management feature.

**AMM Settings** ..... **1224**

**Mobility Environment settings** ..... **1225**

## AMM Settings

When AMM option is selected, it will open the **Advanced Mobility Management** configuration panel.

This section allows you to add new environments to your test.

Setting	Description
<i>Mobility Envs:</i>	
	Select the <b>Add Mobility Environment</b> button to add a new environment to your configuration.
<i>Mobility Environment List</i>	See <a href="#">Mobility Environment settings</a> for further configuration.

## Mobility Environment settings

The following table describes the parameters to configure for AMM environment.

Setting	Description
<i>Mobility</i>	
	Select the <b>Delete Mobility Environment</b> button to remove the selected environment from your configuration.
<i>Cells</i>	
	Select the <b>Add Cell</b> button to add a new cell to your mobility environment configuration.
<i>Cell</i>	
	Select the <b>Delete Mobility Environment</b> button to remove the selected environment from your configuration.
Radio	This table is used to define multiple radio conditions and the time interval between reporting consecutive radio conditions.
Beam 0	Define RSRP, RSRQ , SINR and other parameters for Beam 0.
Beam 1	Define RSRP, RSRQ , SINR and other parameters for Beam 1.
Beam 2	Define RSRP, RSRQ , SINR and other parameters for Beam 2.
Beam 3	Define RSRP, RSRQ , SINR and other parameters for Beam 3.

## DN configuration settings



Data Networks (DN) represents one of the entities in the 5G core network architecture. DN interfaces with UPF over the N6 reference point, enabling access to the public Internet, operator services, and other external data networks.

The configuration settings are described in the topics listed below.

### Topics:

<b>DN Ranges panel</b>	<b>1226</b>
<b>DN Range panel</b>	<b>1226</b>
<b>DN N6 interface settings</b>	<b>1227</b>
<b>DN routes settings</b>	<b>1228</b>
<b>DN User Plane</b>	<b>1229</b>
Data Traffic	1230
DN Stateless UDP Traffic	1234


DN UDG .....	1235
DN Video OTT Traffic .....	1239
DN Voice Traffic .....	1244
<b>DN Throttling settings .....</b>	<b>1254</b>

## DN Ranges panel

The **DN Ranges** panel opens when you select the DN node from the network topology window. You can perform the following tasks from this panel:

- Add a new DN range to your test configuration.
- Open a DN range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

For example ...

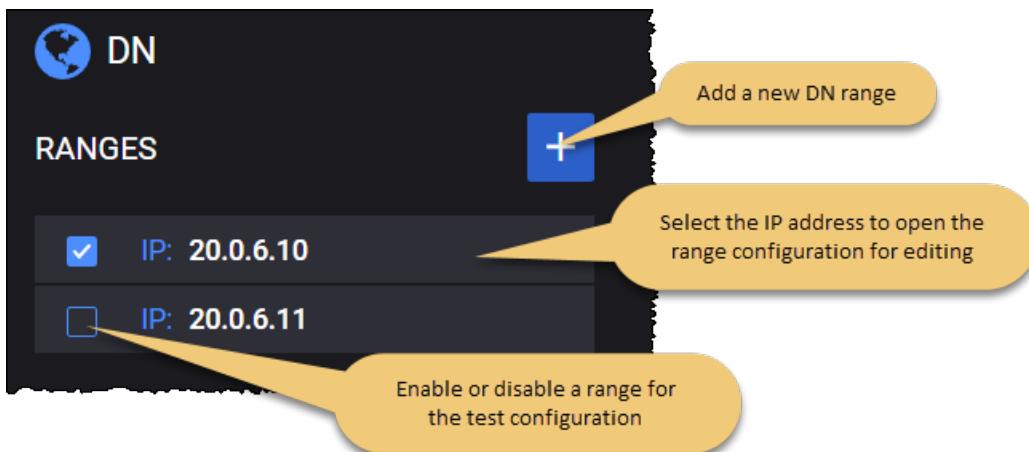

If multiple agents are assigned to the DN node, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- **All Ranges on All Agents** - influences the way configuration is distributed in case of multiple agents assigned on the DN node.

For example, for a test with 2 agents and 3 ranges: range1 on agent1 and agent2, range2 on agent1 and agent2, range 3 on agent1 and agent2.

## DN Range panel

You add and select DN ranges from the DN Ranges panel. When you select a DN's IP address from the **UDR Ranges** panel, LoadCore opens the **Range** panel, from which you can:

- Select the **Delete Range** button to delete the DN range from the test configuration.
- Select **Range Settings** to configure the node and connectivity settings for the DN range.
- Select **Routes Settings** to configure the route to an UE or custom range.
- Select **User Plane** to configure the traffic generators.

## DN range controls and settings

Each DN range is identified by a unique IP address. You can add and delete DN ranges as necessary to support your test objectives. For example, a test may require a range of UEs to concurrently access multiple data networks (for example, local and central DNs) using a single or multiple PDN sessions. In this case, you would create one DN range for each of those data networks.

The following table describes the available **Range** configuration options for each DN range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Range Count	The number of DNs in the DN range.
<i>Range Settings:</i>	
N6 Interface Settings	Each DN range requires the configuration of N6 interface settings, through which a DN instance enables connectivity and interaction with other functions in the 5G network. These settings are described in <a href="#">DN N6 interface settings</a> .
Routes Settings	These settings are described in <a href="#">DN routes settings</a> .
User Plane	These settings are described in <a href="#">DN User Plane</a> .
Throttling Settings	These settings are described in <a href="#">DN Throttling settings</a> .

## DN N6 interface settings

N6 is the interface between the Data Network (DN) and the UPF.

The following table describes the **Connectivity Settings** that you configure for each DN range.

**NOTE** The following connectivity settings are available in LoadCore WebUI, but some of them can be configured only when DPDK is activated.

Connectivity Settings	Description
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
IP Address	The value by which the IP addresses will be incremented.

Connectivity Settings	Description
Increment	
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier..
VLAN TPID	VLAN tag protocol ID.

## DN routes settings

**IMPORTANT** This configuration set appears only if an agent is assigned to the DN node (if possible).


The following table describes the **Route Settings** that you need to configure in order to create the route to an UE or custom range.

Settings	Description
<i>Routes Config:</i>	

Settings	Description
	Select this button to add a new route to a specific UE range or a custom one.
<i>UE Routes Config:</i>	
	Select this button to remove the route.
Route Type	Select the route type from the drop-down list. Available options: <b>UE</b> or <b>Custom</b> .
UE Range MSIN	Select the MSIN of the UE range from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Peer UPF/SGW	Select the UPF node connected to DN over the N6 interface from the drop-down list. This parameter is available only when the route type is set to <b>UE</b> .
Gateway Address	The IP address assigned as gateway address.
DNN(s)	Select the DNNs from the drop-down list. The available options are: <ul style="list-style-type: none"> <li>• All: Select this item to choose all of the available DNNs that are configured for the UE.</li> <li>• specific DNNs: Select one or more of the individual DNNs from the list.</li> </ul> This parameter is available only when the route type is set to <b>UE</b> .
Destination Subnet Address	Set the destination subnet address. This parameter is available only when the route type is set to <b>Custom</b> .
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address. This parameter is available only when the route type is set to <b>Custom</b> .

## DN User Plane

LoadCore provides multiple traffic application that can be added by selecting the **Add Objective** button.

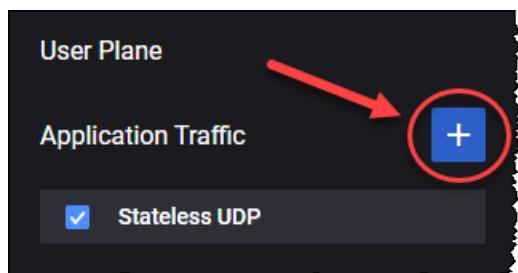

**NOTE**

Based on your test requirements, the configuration of the User Plane Objectives may involve settings for the traffic generators on the UE and also on the DN.

Parameter	Description
	Select this button to add a new application traffic objective. The objective can be: <ul style="list-style-type: none"> <li>• <b>Stateless UDP</b></li> <li>• <b>Data</b></li> <li>• <b>Voice</b></li> <li>• <b>Video OTT</b></li> <li>• <b>UDG</b></li> </ul>
	Select this button to remove the application traffic objective from your test configuration.
Data	For the settings required to configure the Data traffic objective, refer to <a href="#">DN Data Traffic</a> .
Stateless UDP	For the settings required to configure the Stateless UDP traffic objective, refer to <a href="#">DN Stateless UDP Traffic</a> .
Voice	For the settings required to configure the Voice traffic objective, refer to <a href="#">DN Voice Traffic</a> .
Video OTT	For the settings required to configure the Video OTT traffic objective, refer to <a href="#">DN Video OTT Traffic</a> .
UDG	For the settings required to configure the UDG traffic objective, refer to <a href="#">DN UDG Traffic</a> .

## Data Traffic

The following table describes the Data Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Data</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
TCP Settings	<i>Select the pane to open the TCP settings.</i>
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value. The default Min value is 2000 milliseconds and the permissible range of values is between 50 to 120000 milliseconds.

Parameter	Description
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to. The default value is 3200 milliseconds and the permissible range of values is between 1000 to 120000 milliseconds.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min Source Port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max Source Port	The Max value specifies the upper bound (the highest permissible port number).
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Selective Acknowledgments	Select the toggle button to enable this option.
<i>UDP Settings</i>	
Receive Buffer Size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit Buffer Size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min Source Port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).

Parameter	Description
Max Source Port	The Max value specifies the upper bound (the highest permissible port number).
<i>TLS Settings</i>	See <a href="#">TLS Settings</a> table for more details.
<i>Application Servers</i>	<p><i>Each Application Traffic entry requires an application server definition, and can support multiple such definitions.</i></p> <ul style="list-style-type: none"> <li><i>To select an existing application server definition, click its name to open the Server panel where you can view and modify the server settings.</i></li> <li><i>To add another application server, click the <b>Add Server</b> button. LoadCore will open the Server panel where you will select the server type and configure the server settings.</i></li> </ul> <p><i>Refer to <a href="#">Server</a> (below) for a description of the configuration settings required by the application server.</i></p> <p><i>Also, you can add <a href="#">custom parameters</a>, based on your test configuration requirements.</i></p>

## TLS Settings

Parameter	Description
<i>TLSv1.2</i>	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
<i>Cipher</i>	<p>Select one or more ciphers from the drop-down list.</p> <p><b>IMPORTANT</b> This parameter becomes available only if TLSv1.2 is selected.</p>
<i>Session reuse method</i>	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Session ticket</li> <li>Session ID</li> </ul> <p><b>IMPORTANT</b> Session reuse method is available only if TLSv1.2 is selected.</p>
<i>TLSv1.3</i>	<p><i>Select the check box to enable it.</i></p> <p><i>The following options became available:</i></p>
<i>Cipher</i>	<p>Select one or more ciphers from the drop-down list.</p> <p><b>IMPORTANT</b> This parameter becomes available only if TLSv1.3 is selected.</p>
<i>Middlebox compatibility</i>	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.

Parameter	Description
	<b>IMPORTANT</b> This parameter becomes available only if TLSv1.3 is selected.
Immediate close	Select the check box to enable it.
Certificate File	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.
Key File	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key File Password	Enter your key file password.
DH file	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.

## Server


You can add and delete application servers as needed to meet your test objectives. The **Server** parameters are described in the following table.

Parameter	Description
	Click the <b>Delete Server</b> button to remove the application server from your configuration.
Transport Protocol available for Data	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> , <b>TLS</b> , <b>QUIC</b> or <b>UDP</b> .
Type	Select the L4/L7 protocol type from the list of pre-defined application servers. The available types include: <ul style="list-style-type: none"> <li>For <b>TCP</b> transport protocol: <b>HTTP Get Responder</b>, <b>HTTP Put Responder</b>, <b>HTTP Post Responder</b>, <b>HTTP Server</b> and <b>FTP Responder</b>.</li> <li>For <b>TLS</b> transport protocol: <b>HTTPS Get Responder</b>, <b>HTTPS Put Responder</b>, <b>HTTPS Post Responder</b> and <b>HTTPS Server</b>.</li> <li>For <b>QUIC</b> transport protocol: <b>HTTP3 Server</b>.</li> <li>For <b>UDP</b> transport protocol: <b>UDP Bidirectional Responder</b>.</li> </ul>
Port	The port used by the application server.
Page Size (bytes)	The page size represents the size of the web page or data file that will be retrieved from or stored to an HTTP or FTP server.
Custom Parameters	See <a href="#">Custom Parameters/Headers</a> for more details.

## Custom Parameters/Headers


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters/Custom Headers panel opens.


2. Select the **Add** button.

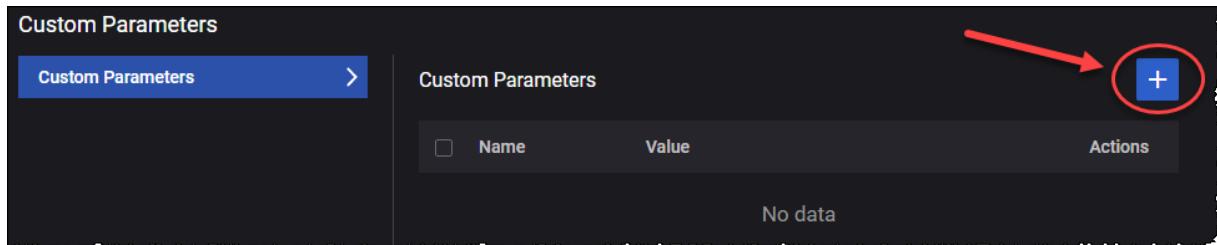

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

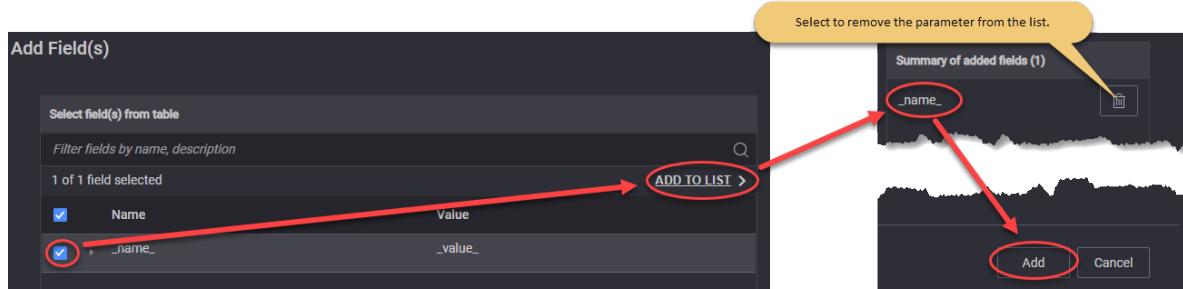

4. Once added in the Custom tables, you can edit the value, or press the Menu icon (⋮) to Edit name or Delete the new parameter/header. You can also reorder the items in these tables by dragging them up or down.

## DN Stateless UDP Traffic

Use the **Stateless UDP** generator if you want to generate IP packets that encapsulate UDP payload. The Stateless UDP generator configuration settings for the dowlink traffic are described below.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Stateless UDP</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Flow Type	This field is set to <b>dowlink</b> and can not be modified since on the DN you can only configure the downlink flow.
Packet Rate	The rate at which the test generates downlink packets, measured in packets per second (pps).
Distributed	Used to configure procedure rate less than 1/sec. Example: if configured as 3, test

Parameter	Description
over (s)	will execute one procedure every 3 seconds.
Payload Size	The size of the packet payload, in bytes.
Destination UDP Port Start	The start destination port number to place in the UDP header.
Destination UDP Port Count	Total number of UDP ports in this range.
Source UDP Port	The source port number to place in the UDP header.
Destination UE Range	Select the destination UE range from the drop-down list.
DNN	Select the DNN value for the drop-down list. For more details about DNN configuration, refer to <a href="#">DNN configuration settings</a> .
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list. For more details about QoS Flow configuration, refer to <a href="#">QoS Flow configuration settings</a> .
Fallback to Default Flow	<p>This option supports use cases in which it is desirable for user traffic to use the default QoS flow if the requested dedicated flow is not available.</p> <ul style="list-style-type: none"> <li>When this option is selected, traffic will flow from the start of the test until the end. If the dedicated flow or bearer is not yet activated, it will fall back to the default flow. Once the dedicated bearer becomes active the traffic will move to that flow. If the dedicated bearer is deleted, the traffic will move back to the default flow.</li> <li>When this option is not selected, traffic will not flow until the designated QoS flow is activated (the flow selected in the <i>QoS Flow/Bearer ID</i> field).</li> </ul> <p>This option is useful in a test in which you are using more than one traffic type. For example, you may want HTTP traffic to be running throughout the duration of the test while voice traffic is running only when a default flow is activated for it.</p>

## DN UDG

The following table describes the UDG parameters.

Parameter	Description
Application Type	Select the application type. In this case, this parameter must be set to <b>UDG</b> .
Label	Set the label name. You can accept the value provided by CoreSIM or overwrite it with your own value.

Parameter	Description
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
MSS	<p>The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.</p> <p>The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).</p>
Selective Acknowledgments	If necessary, enable this option.
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer,

Parameter	Description
	the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
<i>TLS Settings</i>	See <a href="#">TLS Settings</a> table for more details.
<i>Traffic Flow</i>	<i>This section shows the traffic flow of this procedure. See the <a href="#">Traffic Flow</a> table for details.</i>

## TLS Settings

Parameter	Description
<i>TLSv1.2</i>	<p>Select the check box to enable it.</p> <p><i>The following options became available:</i></p>
Cipher	<p>Select one or more ciphers from the drop-down list.</p> <p><b>IMPORTANT</b> This parameter becomes available only if TLSv1.2 is selected.</p>
Session reuse method	<p>Select the Session Reuse Method from the drop-down list:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Session ticket</li> <li>Session ID</li> </ul> <p><b>IMPORTANT</b> Session reuse method is available only if TLSv1.2 is selected.</p>
<i>TLSv1.3</i>	<p>Select the check box to enable it.</p> <p><i>The following options became available:</i></p>
Cipher	<p>Select one or more ciphers from the drop-down list.</p> <p><b>IMPORTANT</b> This parameter becomes available only if TLSv1.3 is selected.</p>
Middlebox compatibility	<p>Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.</p> <p><b>IMPORTANT</b> This parameter becomes available only if TLSv1.3 is selected.</p>
Immediate close	Select the check box to enable it.

Parameter	Description
Certificate File	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.
Key File	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key File Password	Enter your key file password.
DH file	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.

## Traffic Flow

The following table describes the **Traffic Flow** parameters.

Parameter	Description
<i>Flow</i>	
Transport Protocol	Select the transport protocol from the drop-down list. Available options: <b>TCP</b> or <b>UDP</b> .
Out of Band Signaling	<p>Select this check-box to enable OOB signaling. More details about the required parameters <a href="#">here</a>.</p> <p><b>IMPORTANT</b> To use the OOB feature, the OOB interface must be set in Agent Management window.</p>
Port	This represents the server(destination) port. This value is editable.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.

The following table describes the **Out of Band Signaling** parameters.

Parameter	Description
Local Address	The local IP address.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Remote Address	The remote IP address.
Port	Set the used port.

## DN Video OTT Traffic

The following table describes the Video OTT Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Video OTT</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
<i>TCP Settings</i>	
Min retransmission timeout (ms)	The lowest value that the computed RTO timer value can be set to. Expiry of the RTO timer indicates that the sender has not received an acknowledgment for the transmission, which triggers a retransmission of the segment. Upon each retransmission, the RTO timer value is doubled, up to the Max value.
Max retransmission timeout (ms)	The highest value that the computed RTO timer value can be set to.
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the TCP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the TCP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
MSS	The desired Maximum Segment Size (MSS) for the user plane traffic that will be generated for this UE range, specified in bytes.  The MSS is the largest TCP segment that the IP device can transmit as a single, unfragmented unit. It is typically calculated as the MTU minus the TCP header size minus the IP header size. For example, for traditional Ethernet, the MSS value is 1460 (1500 minus 40).
Selective Acknowledgments	If necessary, enable this option.

Parameter	Description
<i>UDP Settings</i>	
Receive buffer size (bytes)	The default size of the receive buffer (in bytes). This parameter affects the UDP receive window size. If you increase the size of the receive buffer, then the receive window is prolonged. If you are experiencing high latency on your test network, increase the size of the receive buffer to improve the throughput.
Transmit buffer size (bytes)	The default size of the transmit buffer (in bytes). This parameter affects the UDP transmit window size. If you increase the size of the transmit buffer, the transmit window is prolonged. If you are experiencing high latency on your test network, increase the size of the transmit buffer to improve the throughput.
Min source port	The source port specifies which ports are used for client connections. The Min value specifies the lower bound (the lowest permissible port number).
Max source port	The Max value specifies the upper bound (the highest permissible port number).
<i>Server TLS Settings</i>	See <a href="#">Server TLS Settings table for more details</a> .
<i>OTT Servers</i>	See <a href="#">OTT Servers table for more details</a> .

## Server TLS Settings

Parameter	Description
TLSv1.2	Select the check box to enable it. The following options became available:
Cipher	Select one or more ciphers from the drop-down list.
Session reuse method	Select the Session Reuse Method from the drop-down list: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Session ticket</li> <li>• Session ID</li> </ul> <p><b>IMPORTANT</b> Session reuse method is available only if TLSv1.2 is enabled.</p>
Session reuse count	The number of simultaneous connections that can share the same Session ID or Session ticket. <p><b>IMPORTANT</b> This option appears only if client TLSv1.2 is enabled, and the <b>Session reuse method</b> is set to either the <b>Session ticket</b> or the <b>Session ID method</b>.</p>
Immediate close	If enabled, the endpoint closes the TCP connection immediately after sending the TLS CLOSE message (i.e., the endpoint does not wait for a confirmation from the

Parameter	Description
	other end).
Send close notify	If enabled, it will send a close notify message.
TLSv1.3	<i>Select the check box to enable it. The following options became available:</i>
Cipher	Select one or more ciphers from the drop-down list.
Middlebox compatibilty	Select the check box to enable it. It allows for compatibility with middleboxes which do not support TLSv1.3.
Immediate close	Select the check box to enable it.
Send close notify	If enabled, it will send a close notify message.
SNI Enabled	Select the toggle button to enable the server name indicator. <b>IMPORTANT</b> If disabled , the following settings become unavailable.
Certificate file	Select <b>Upload</b> to add your certificate file or <b>Clear</b> to remove it.
Key file	Select <b>Upload</b> to add your key file or <b>Clear</b> to remove it.
Key file password	Enter your key file password.
DH file Traffic	Select <b>Upload</b> to add your DH file or <b>Clear</b> to remove it.

## OTT Servers

Parameter	Description
	Select this button to add an OTT server to your test configuration.
	Select this button to remove the OTT server from the test configuration.
Server Name	Set the server name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>HTTP</b></li> <li>• <b>HTTPS</b></li> </ul>

Parameter	Description
	<ul style="list-style-type: none"> <li>• <b>HTTP/QUIC</b></li> </ul>
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
QoS Flow ID	Select the QoS Flows ID(s) from the drop-down list.
Streams	Refer to <a href="#">Streams</a> for descriptions of the OTT server streams settings.
Custom Parameters	You can add <a href="#">custom parameters</a> , based on your test configuration requirements.

## Streams

To open the OTT Server Streams panel, select the **Open Streams** button.



The OTT Server Streams parameters are described in the following table.

Parameter	Description
	Select this button to add a stream to your test configuration.
	Select this button to remove the stream from the test configuration.
Stream Name	Set the stream name. Each server is identified by a unique name. You can accept the value provided by LoadCore or overwrite it with your own value.
URL	Set the URL path.
Type	Select the stream type from the drop-down list: <ul style="list-style-type: none"> <li>• <b>Real</b></li> <li>• <b>Synthetic</b></li> </ul>
Protocol	Select the protocol from the drop-down list: <ul style="list-style-type: none"> <li>• <b>HLS</b></li> <li>• <b>DASH</b>.</li> </ul> If the stream type is set to <b>Synthetic</b> , you can choose one protocol from list. If the stream type is set to <b>Real</b> , you will see the protocol of real stream loaded.
Stream Duration	If the stream type is set to <b>Synthetic</b> , you can configure the stream duration in seconds. If the stream type is set to <b>Real</b> , you will see the real stream duration.

Parameter	Description
Segment Duration	If the stream type is set to <b>Synthetic</b> , you can configure the segment duration in seconds. If the stream type is set to <b>Real</b> , you will see the real segment duration.
Quality Levels:	<i>Set the quality value for each level.</i>
	Select this button to add a quality level to your test configuration.
	Select this button to remove the quality level from the test configuration.
Bitrate (kbps)	Set the value of the bitrate.
Resolution	Select the resolution from the drop-down list. Available options: <b>QCIF, 240p, nHD, 480, WXGA, FHD, QHD, 4K, 8K.</b>
Frames per second	Set the number of frames per second.

## Custom Parameters/Headers


You can add custom parameters as follows:

1. Select the **Open Custom Parameters** button.



The Custom Parameters/Custom Headers panel opens.


2. Select the **Add** button.

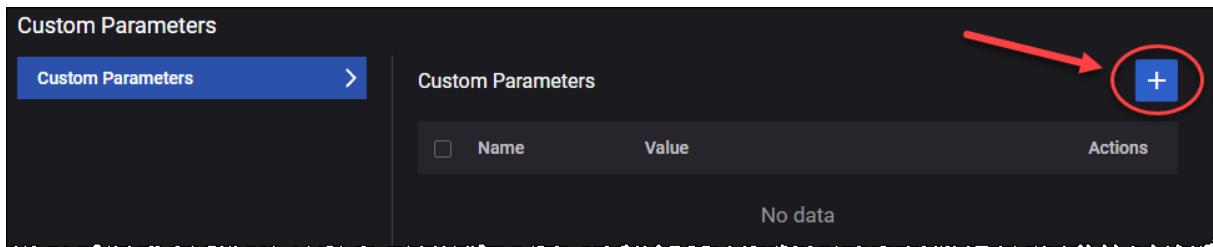

The Add Field(s) opens.

3. From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

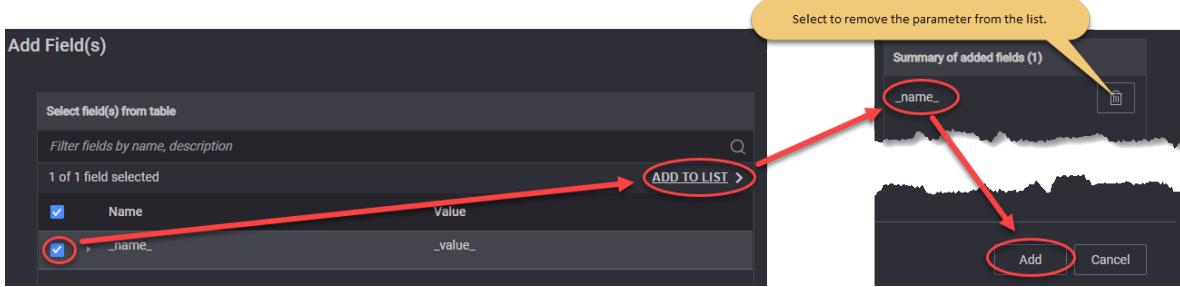

4. Once added in the Custom tables, you can edit the value, or press the Menu icon (⋮) to Edit name or Delete the new parameter/header. You can also reorder the items in these tables by dragging them up or down.

## DN Voice Traffic

The following table describes the Voice Traffic parameters.

Parameter	Description
Application Type	Select the type of traffic you want to generate. In this case, this parameter must be set to <b>Voice</b> .
Label	Set the label name. You can accept the value provided by LoadCore or overwrite it with your own value.
Objective Type	By default, this parameter is set to <b>Simulated Users</b> and cannot be changed.
Call Type	Select the type of call from the drop-down list. Default is <b>Basic Type</b> .
<i>Dial Plan:</i>	
Destination Phone	The destination phone number.
Destination Phone Increment	The value by which the destination phone number is incremented.
Source Phone	The source phone number.
<i>Sip Settings:</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Transport Protocol	Select the transport protocol. The available options are: <ul style="list-style-type: none"> <li>• <b>TCP</b> - Transmission Control Protocol</li> <li>• <b>TLS</b> - Transport Layer Security</li> <li>• <b>UDP</b> - User Datagram Protocol</li> </ul>
Domain	Provide the domain name.

Parameter	Description
Advanced SIP Settings	For more details about these settings, refer to <a href="#">Advanced SIP Settings</a> .
<i>RTP Settings</i>	
Local Port	Set the local port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Local Port Increment	The value by which the local port number is incremented.
Enable OWD	If selected, one way delay statistics for audio RTP traffic are computed.
Enable RTCP	Select the check box in order to enable this option.
RTP Session Duration (s)	Set the value for the session duration.
<i>Audio settings:</i>	<i>For the configuration of audio settings, refer to <a href="#">Audio Settings</a>.</i>
<i>Video Settings:</i>	<i>For the configuration of video settings, refer to <a href="#">Video Settings</a>.</i>
<i>MSRP Settings:</i>	<i>For the configuration of MSRP settings, refer to <a href="#">MSRP Settings</a>.</i>
<i>Advanced Media Settings:</i>	
Custom SDP	Select this panel to open the custom SDP settings.
Use Custom SPD	Select the check box to use the custom SDP.
Custom SDP Template	Select the template from the drop-down list: <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>EVS/AMR IPv4</b></li> <li>• <b>NB Codecs IPv6</b></li> <li>• <b>AMR-WB IPv6</b></li> <li>• <b>Multimedia IPv4</b></li> </ul>
<i>QoE Settings</i>	<i>Select this panel to open the audio QoE settings.</i>
Enable MOS	Select this option to enable MOS (Mean Opinion Score).

## Audio Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable Audio	Select to enable this option.

Parameter	Description
QoS Flow ID for Video	Select the QoS flow used for audio from the drop-down list.
<i>Jitter Buffer Settings:</i>	
Initial Delay (ms)	Set the value of the initial delay until playback starts (ms).
<i>Audio Codecs</i>	
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	<p>Select the audio codec from the drop-down list. The available options are:</p> <ul style="list-style-type: none"> <li>• <a href="#"><b>AMR</b></a> - The Adaptive Multi-Rate (AMR) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>AMR-WB</b></a> - The Adaptive Multi-Rate Wide Band (AMR-WB) is an audio data compression schemes optimized for speech coding, which have been adopted as the standard speech codec by 3GPP.</li> <li>• <a href="#"><b>EVS</b></a> - The EVS (Enhanced Voice Services) codec specified by 3GPP TS 26.445 compresses 20ms input blocks of audio samples. In addition to the EVS Primary mode, 3GPP TS 26.445 specifies that the codec implement the EVS AMR-WB IO mode for interoperability with AMR WB devices.</li> <li>• <a href="#"><b>PCMU</b></a></li> <li>• <a href="#"><b>PCMA</b></a></li> <li>• <a href="#"><b>iLBC</b></a></li> <li>• <a href="#"><b>G722</b></a></li> <li>• <a href="#"><b>G723</b></a></li> <li>• <a href="#"><b>G729</b></a></li> </ul> <p>The parameters of each audio codec are presented below.</p>

## AMR/AMR-WB

Parameter	Description
Payload Type	Specifies the audio payload type.
Bitrate	<p>Indicates the mode(bitrate) of the AMR codec.</p> <p>For AMR there are 8 available modes. All these modes can be changed dynamically without negotiation, reflecting the main characteristics of this codec – adaptive rate.</p>

Parameter	Description
	For AMR WB there are 9 modes available.

## EVS

Parameter	Description
Payload Type	Specifies the audio payload type.
Bitrate	Indicates the mode(bitrate) of the EVS codec. Select the value from the drop-down list.

## PCMU/PCMA/iLBC/G722/G723/G729

Parameter	Description
Payload Type	Specifies the audio payload type.

## Video Settings

The parameters required for audio settings are presented in the table below.

Parameter	Description
Enable video	Select to enable this option.
QoS Flow ID for Voice	Select the QoS Flows ID(s) from the drop-down list.
Video Codecs	<i>This section is available only when <b>Enable video</b> is selected</i>
	Select this button to add the audio codec to your test configuration.
	Select this button to remove the audio codec from your test configuration.
Codec Name	Select the audio codec from the drop-down list. The available options are: <b>H264</b> or <b>H265</b> .
FPS	Set the FPS value.
Payload Type	Set the payload type value.
Average Bitrate (kbps)	Set the average bit rate value.

## MSRP Settings

The parameters required for MSRP settings are presented in the table below.

Parameter	Description
Enable MSRP	Select to enable this option.
QoS Flow ID for MSRP	Select the QoS Flows ID(s) from the drop-down list.
MSRP Port	Provide the MSRP port.
MSRP Local domain	Provide the MSRP local domain.

## Advanced SIP Settings

The following settings are available under the Advanced SIP Settings section:

- [SIP Custom Headers](#)
- [SIP Authentication](#)

### SIP Custom Headers


From the SIP Message with Custom Header pane, select the **Add** button to add a new SIP message.

**NOTE**

The message can be deleted by selecting the corresponding **Delete** for each message. Also, you can use the **Edit** button for bulk selection and, then, delete the message in one action.

For each message, you can:


- Edit the custom header by selecting the **Message Type** from the drop-down list: **ANY, REGISTER, INVITE, ACK, BYE, OPTIONS, CANCEL, NOTIFY, SUBSCRIBE, REFER, MESSAGE, INFO, UPDATE, PRACK, RESPONSE, 1xx, 2xx**.
- Add custom header fields:
  - Select the **Add** button.

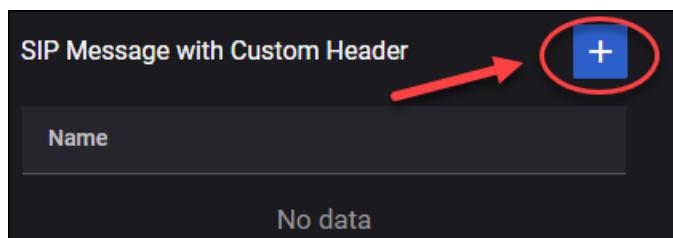

The Add Field(s) opens.

- From the Add Field(s), select the fields you want to add and select **ADD TO LIST** to move them to the added fields section. To add the fields to your configuration select **Add**.

**For example ...**

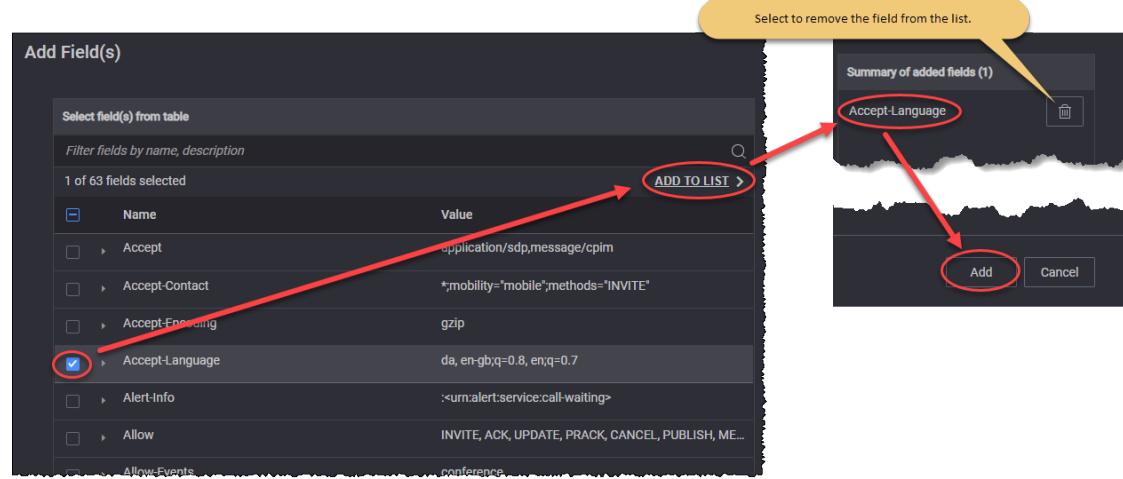

The following custom header are available:

Parameter	Description	Value
Accept	IETF RFC 3261	application/sdp,message/cpim
Accept-Contact	IETF RFC 3841	*;mobility="mobile";methods="INVITE"
Accept-Encoding	IETF RFC 3261	gzip
Accept-Language	IETF RFC 3261	da, en-gb;q=0.8, en;q=0.7
Alert-Info	IETF RFC 3261	:<urn:alert:service:call-waiting>
Allow	IETF RFC 3261	INVITE, ACK, UPDATE, PRACK, CANCEL, PUBLISH, MESSAGE, OPTIONS, SUBSCRIBE, NOTIFY
Allow-Events	IETF RFC 6665	conference
Authentication-Info	IETF RFC 3261, IETF RFC 3310	nexnonce="47364c23432d2e131a5fb210812c"
Call-Info	IETF RFC 3261	<http://www.example.com/alice/photo.jpg> ;purpose=icon
Content-Disposition	IETF RFC 3261	session

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
Content-Encoding	IETF RFC 3261	gzip
Content-ID	IETF RFC 8262	<target123@atlanta.example.com>
Content-Language	IETF RFC 3261	fr
Date	Sat,13 Nov 2010 23:29:00 GMT	IETF RFC 3261
Error-Info	IETF RFC 3261	<sip:announcement10@example.com>
Event	IETF RFC 6665, IETF RFC 6446, IETF RFC 3680	reg
Expires	IETF RFC 3261	3600
Feature-Caps	IETF RFC 6809, 3GPP TS 24.229	+3gpp.trf=sip:trf3.operator3.com
Geolocation	IETF RFC 6442	<user1@operator1.com>
In-Reply-To	IETF RFC 3261	70710@saturn.bell-tel.com, 17320@saturn.bell-tel.com
Max-Forwards	IETF RFC 3261	70
MIME-Version	IETF RFC 3261	1.0
Min-Expires	IETF RFC 3261	40
Min-SE	IETF RFC	60

<b>Parameter</b>	<b>Description</b>	<b>Value</b>
	4028	
Organization	IETF RFC 3261	Keysight
P-Access-Network-Info	IETF RFC 7315	3GPP-E-UTRAN-FDD;e-utran-cell-id-3gpp=1234
P-Associated-URI	IETF RFC 7315	sip:user2@operator3.com
Path	IETF RFC 3327	<sip:P2.example.com;lr>,<sip:P1.example.com;lr>
P-Called-Party-ID	IETF RFC 7315	sip:user1-business@example.com
P-Charging-Function-Addresses	IETF RFC 7315	ccf=192.0.8.1; ecf=192.0.8.3
P-Charging-Vector	IETF RFC 7315	icid-value=1234bc9876e;icid-generated-at=192.0.6.8;orig- ioi=home1.net
P-Early-Media	IETF RFC 5009	supported
Permission-Missing	IETF RFC 5360	userC@example.com
P-Preferred-Identity	IETF RFC 3325	"Cullen Jennings" <sip:fluffy@cisco.com>
P-Preferred-Service	IETF RFC 6050	urn:urn-7:3gpp-service.ims.icsi.mmtel
Priority	IETF RFC 3261	emergency
Proxy-Authenticate	IETF RFC 3261	Digest realm="atlanta.com",domain="sip:ss1.carrier.com", qop="auth",nonce="f84f1cec41e6cbe5aea9c8e88d359",opaque="", stale=False, algorithm=MD5

Parameter	Description	Value
Proxy-Authorization	IETF RFC 3261	Digest username="Alice", realm="atlanta.com",nonce="c60f3082ee1212b402a21831ae",response ="245f23415f11432b3434341c022"
Proxy-Require	IETF RFC 3261	foo
P-Visited-Network-ID	IETF RFC 7315	Visited network number 1
RAck	IETF RFC 3262	10
Reason	IETF RFC 3326	Q.850;cause=16;text="Terminated"
Record-Route	IETF RFC 3261	<sip:server10.biloxi.com;lr>, <sip:bigbox3.site3.atlanta.com;lr>
Refer-To	IETF RFC 3515	<sip:dave@bobster.example.org?Replaces=425928%40bobster.example.com.3%3Btag%3D7743%3Bfrom-tag%3D6472>
Reply-To	IETF RFC 3261	Bob <sip:bob@biloxi.com>
Request-Disposition	IETF RFC 3841	proxy
Require	IETF RFC 3261	Path
Retry-After	IETF RFC 3261	3600
Route	IETF RFC 3261	<sip:bigbox3.site3.atlanta.com;lr>,<sip:server10.biloxi.com;lr>
RSeq	IETF RFC 3262	10
Server	IETF RFC 3261	HomeServer v2
Service-Route	IETF RFC 3608	<sip:P2.HOME.EXAMPLE.COM;lr>

Parameter	Description	Value
Session-Expires	IETF RFC 4028	3600;refresher=uac
Session-ID	IETF RFC 7329	0123456789abcdef123456789abcdef0
SIP-Etag	IETF RFC 3903	12345
SIP-If-Match	IETF RFC 3903	12345
Subject	IETF RFC 3261	Need more boxes
Subscription-State	IETF RFC 6665	active
Supported	IETF RFC 3261	100Rel,timer,precondition
Timestamp	IETF RFC 3261	Timestamp
Unsupported	IETF RFC 3261	100Rel
User-Agent	IETF RFC 3261	LoadCore
Warning	IETF RFC 3261	307 isi.edu "Session parameter `foo` not understood"

## SIP Authentication

The parameters required for SIP authentication are presented in the table below.

Parameter	Description
Username	Provide the username.
Password	Provide the password.
Authentication Type	Select the authentication type: <ul style="list-style-type: none"> <li>• <b>Digest MD5</b></li> <li>• <b>AKAv1</b></li> <li>• <b>AKAv2</b></li> <li>• <b>ProxyDefined</b></li> </ul>

Parameter	Description
UPDATE	Select this button to update with UE range security settings.
K	The K (Subscriber Authentication Key) value used for authentication of the UEs in this range. The key is a string with a maximum length of 34 characters. You can accept the value generated by LoadCore, or enter of a K value of your own choosing.
K Increment	The number used to increment the K value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same K value.
Configure OP or OPC	Select the operator-specific authentication value.
Op	The Auth OP value specifies the operator-specific authentication value to use for the UEs in this range. It is a string with a maximum length of 34 characters. It remains fix for all Subscriber/SIM of an operator. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc	The OPC value is derived from the subscriber key K and the operator dependent value OP. You can accept the value generated by LoadCore, or enter of an OP value of your own choosing.
Opc Increment	The number used to increment the OPC value for each subsequent UE in the range. A value of zero indicates that each UE in the range uses the same OPC value.

## DN Throttling settings

Throttling can be enabled from this menu per DN range (by selecting the corresponding check box), and matching user plane traffic over TCP, UDP or both.

Throttling can be useful, for example, when the local network interface that is generating downlink traffic has a higher speed than the radio interface between the UE and the GNB. If the traffic generated from either direction is bursty, the throttling mechanism will, instead of dropping packets, add them in a queue and spread them throughout a second according to the configured bit rate.

**NOTE**

The throttling options only work for interfaces that are running IxStack, either over DPDK or over raw sockets, depending on where the traffic is terminated (if agent is present on DN/SGi server then its N6 interface should be IxStack; if there is no agent on DN/SGi, than N3 interface should be IxStack on UPF/CoreSim agent).

The following table describes the **Throttling Settings** that you can configure for each DN range.

Settings	Description
Bit Rate (mbps)	Can be set between 10 and 10000. Represents the value at which the traffic will be throttled, and it will become the enforced maximum bit rate.

<b>Settings</b>	<b>Description</b>
Throttle TCP Traffic	Select the check box to throttle UP traffic over TCP.
Throttle UDP Traffic	Select the check box to throttle UP traffic over UDP.

## Core configuration settings

The configuration settings are described in the topics listed below.

### Topics:

<b>Core settings</b> .....	<b>1255</b>
<b>N6/SGi interface settings</b> .....	<b>1256</b>
<b>Core Ranges settings</b> .....	<b>1258</b>
AMF Ranges configuration settings .....	1258
UPF Ranges configuration settings .....	1264
MME Ranges configuration settings .....	1266
SGW Ranges configuration settings .....	1270
<b>SEG Ranges configuration settings</b> .....	<b>1273</b>
SEG interface settings .....	1277

If agents are assigned to the Core topology, the **Distribution Mode** parameter (see [Distribution Mode feature on page 69](#)) is displayed and the following options can be selected from the drop-down:

- All Ranges on All Agents

### Core settings

To configure the core settings, select **Core Settings** from the CoreSim panel.

The following table describes the parameters required for core settings configuration.

<b>Setting</b>	<b>Description</b>
Home Network Private Key	The Home Network Private key that is used for subscriber privacy.
Interworking without N26 Interface	If enabled, indicates Core supports interworking without N26 interface.
Routing Indicators	<i>The Routing Indicator is used in combination with the MCC and MNC to route network signaling to AUSF and UDM instances that are capable of serving the subscriber. It contains four decimal digits, is assigned by the home network operator, and provisioned in the USIM.</i>

Setting	Description
	<i>You can add as many Routing Indicators as necessary to support your test objectives.</i>
	Select the <b>Add Routing Indicator</b> button to add a Routing Indicator.
	Select the <b>Delete</b> button to remove the routing indicator.

## N6/SGi interface settings

N6 is the interface between the UPF session anchor and the DN. It is the interconnection point at which user plane packet encapsulation and decapsulation is performed.

The following **Connectivity Settings** enable the necessary N6/SGi connectivity and service interaction.

Connectivity Settings	Description
Stack Type	Select the stack type from the drop-dpwn list. Available options: <b>Single Stack</b> or <b>Dual Stack</b> .
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.

<b>Connectivity Settings</b>	<b>Description</b>
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Secondary IP	<p><i>Select the IP address to open the secondary IP configuration panel for editing.</i></p> <p><b>IMPORTANT</b> <i>This panel is available only when the stack type is set to Dual Stack.</i></p>
IP Address	The IP address assigned as the gateway address for the external traffic source.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
<i>Additional Routes</i>	
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route to your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.

Connectivity Settings	Description
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## Core Ranges settings

When you select the Core Ranges pane ,LoadCore opens the Core Range panel, from which you can:

- Enable the node as a **Device Under Test**. When enabled, the application will simulate the nodes functionality.
- Select the corresponding pane to configure the core range and connectivity settings:
  - [AMF Ranges](#)
  - [UPF Ranges](#)
  - [MME Ranges](#)
  - [SGW Ranges](#)


### AMF Ranges configuration settings

To access and configure the AMF ranges settings, select **AMF Ranges** from the Core Ranges panel.

You can perform the following tasks from the **Ranges** panel:

- Add a new AMF range to your test configuration.
- Open an AMF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

#### For example ...

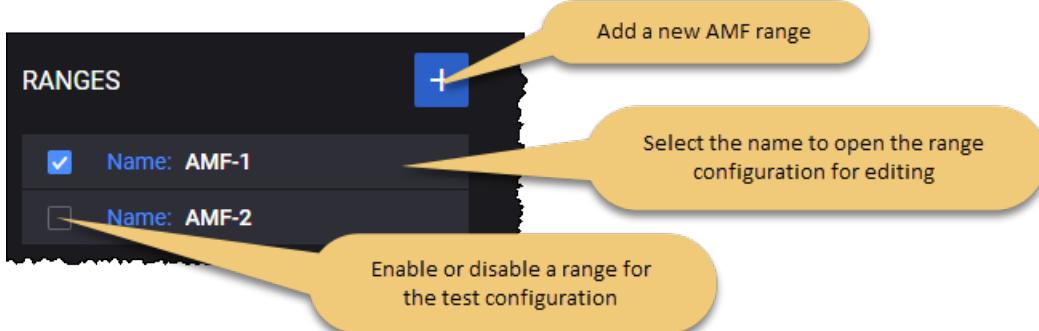

You add and select AMF ranges from the Ranges panel. When you select the name of an AMF, LoadCore opens the **Range** panel, from which you can:

- Delete the AMF range from the test configuration.
- Configure the node and connectivity settings for the AMF range.

## AMF range controls and settings

Each AMF range is identified by a unique name. You can add and delete AMF ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each AMF range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
Node Settings	Each AMF range requires the configuration of an associated set of Node Settings, which are described in <a href="#">AMF node settings</a> .
N2 Interface Settings	Each AMF range requires the configuration of N2 interface settings, through which a AMF instance interacts with RAN in a 5G network. These settings are described in <a href="#">AMF N2 interface settings</a> .

## AMF node settings

Each AMF range includes a set of Node Settings.

Setting	Description
<i>Node Settings:</i>	
Instance ID	Multiple AMF instances may be deployed in the 5G network. Each AMF instance is uniquely identified by an <i>Instance ID</i> . You can accept the value provided by LoadCore or overwrite it with your own value.
Name	The name uniquely identifies each AMF instance. You can accept the value provided by LoadCore or overwrite it with your own value.
PLMN MCC	<p>The PLMN MCC for this AMF range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies</p>

<b>Setting</b>	<b>Description</b>
	the country of domicile of the mobile subscriber.
PLMN MNC	<p>The PLMN MNC for this AMF range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Region ID	<p>An AMF Region consists of one or multiple AMF Sets.</p> <p>The AMF Region ID to use for this simulated AMF node. This ID identifies the region in which the node resides. The AMF Region ID addresses the case that there are more AMFs in the network than the number of AMFs that can be supported by AMF Set ID and AMF Pointer. It allows operators to re-use the same AMF Set IDs and AMF Pointers in different regions.</p>
Set ID	<p>An AMF Set consists of some AMFs that serve a given area and Network Slice. Multiple AMF Sets may be defined per AMF Region and Network Slice(s).</p> <p>The AMF Set ID to use for this simulated AMF node. The Set ID uniquely identifies the AMF Set within the AMF Region.</p>
Pointer	The AMF Pointer to use for this simulated AMF node. The AMF Pointer identifies one or more AMFs within the AMF Set.
Relative Capacity	Set the relative capacity value.
Ciphering Algorithm	<p>Allows to select the supported 5G ciphering algorithm:</p> <ul style="list-style-type: none"> <li>• NEA0 - Null ciphering algorithm</li> <li>• NEA1 - 128-bit SNOW 3G based algorithm</li> <li>• NEA2 - 128-bit AES based algorithm</li> <li>• NEA3 - 128-bit ZUC based algorithm</li> </ul>
Integrity Algorithm	<p>Allows to select the supported 5G integrity protection algorithm:</p> <ul style="list-style-type: none"> <li>• NIA0 - Null Integrity Protection algorithm</li> <li>• NIA1 - 128-bit SNOW 3G based algorithm</li> <li>• NIA2 - 128-bit AES based algorithm</li> <li>• NIA3 - 128-bit ZUC based algorithm</li> </ul>
Request N2 SM Information	Enable this option to request N2 SM Information again instead of using the existing one.
Prefer AMF	Enable this option to change the AMF for an N2 handover even when the target

Setting	Description
Change	RAN(T-RAN) is connected to the serving AMF.
Skip MT SMS	Skip the initiation of MT SMS procedure when the MO SMS procedure ends.
<i>T3512: Select the check box to open T3512 Settings and configure the T3512 timer.</i>	
NOTE	If disabled, a value of 50 minutes (Value 5 X Unit 10 minutes) is sent for T3512.
Value	Set the value for this parameter. The accepted values are between 0-31.
Unit	Select the unit size for this parameter from the drop-down list. The available options are: 2s, 30s, 1m, 1dch, 10m, 1h, 10h, 320hand Deactivated.
NSSAI	<i>These settings are described <a href="#">below</a>.</i>
TAI	<i>These settings are described <a href="#">below</a>.</i>
Public Warning System	<i>These settings are described <a href="#">below</a>.</i>
Emergency Settings	<i>This option allows you to configure the Emergency support and MME behavior for Authentication procedure.</i>
Authentication Behaviour	Select one of the following behaviors to apply during Emergency Registration: <ul style="list-style-type: none"> <li>• <b>Normal Authentication</b></li> <li>• <b>Allow Authentication Failure</b></li> <li>• <b>Skip Authentication</b></li> </ul>

## NSSAI

The following table describes the configuration settings that are required for NSSAI.

Setting	Description
<i>NSSAI:</i>	
	Select the Add NSSAI button to add a new NSSAI to your test configuration.
<i>NSSAI settings:</i>	
	Select the Delete NSSAI button to delete this NSSAI from your test configuration.
SST	The value that identifies the SST (Slice/Service Type) for this NSSAI. SST comprises octet 3 in the NSSAI information element. The standardized SST values are:

<b>Setting</b>	<b>Description</b>		
	<b>SST</b>	<b>Value</b>	<b>Suitable for handling:</b>
eMBB	1	5G enhanced Mobile Broadband	
URLCC	2	ultra-reliable low-latency communications	
MIoT	3	massive IoT	
SD	The Slice Differentiator (SD) value for this S-NSSAI. SD is an optional information that differentiates amongst multiple Network Slices of the same Slice/Service type. The SD field comprises octets 4 through 6 in the NSSAI.		

## TAI

The following table describes the configuration settings that are required for TAI.

<b>Setting</b>	<b>Description</b>
<i>TAI</i>	
	Select the Add TAI button to add a new TAI (Tracking Area Identity) to your test configuration.
<i>TAI:</i>	
	Select the Delete TAI button to delete this TAI from your test configuration.
PLMN ID: Set the values for the PLMN identifier.	
PLMN MCC	The PLMN Mobile Country Code (MCC) used in the construction of the TAI.
PLMN MNC	The PLMN Mobile Network Code (MNC) used in the construction of the TAI.
<i>TAC:</i>	
	Select the Add TAC button to add a new TAC (Tracking Area Code) to your test configuration.
<i>Settings:</i>	
	Select the Delete TAC button to delete this TAC from your test configuration.
TAC	The Tracking Area Code (TAC) used in the construction of the TAI.

## Public Warning System

The following table describes the configuration settings that are required for public warning system.

<b>Setting</b>	<b>Description</b>
Message ID	Set the public warning system message ID.
Repetition Period	Set the public warning system message repetition period.
Number of Broadcasts Requested	Set the public warning system message number of requested broadcasts.
Time to Wait Before Triggering PWS after NG Setup (s)	Set the number of seconds to wait before triggering PWS after NG setup.
PWS Cancel Timer (s)	Duration in seconds after which PWS cancel warning is sent. 0 indicates no cancellation.

### AMF N2 interface settings

N2 is the service-based interface through which a AMF instance interacts with RAN in a 5G network.

The following **Connectivity Settings** enable the necessary N2 connectivity and service interaction.

<b>Connectivity Settings</b>	<b>Description</b>
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix that has been assigned to this node.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway	The IP address assigned as gateway address.

Connectivity Settings	Description
Address	
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## UPF Ranges configuration settings

To access and configure the UPF ranges settings, select **UPF Ranges** from the Core Ranges panel.

You can perform the following tasks from the **Ranges** panel:

- Add a new UPF range to your test configuration.
- Open a UPF range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

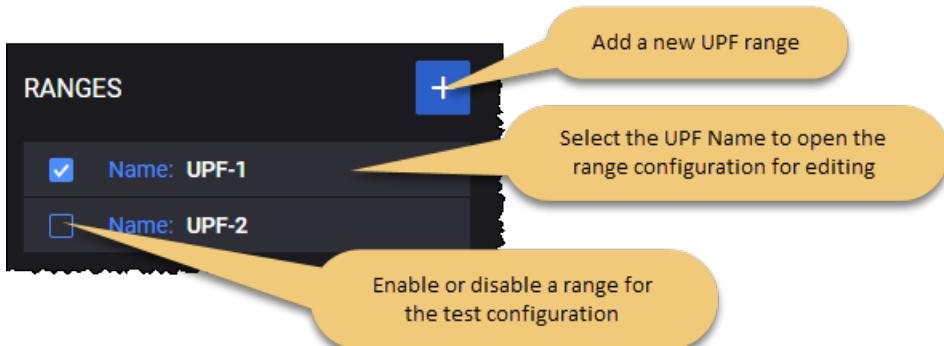

You add and select UPF ranges from the Ranges panel. When you select an UPF range *Name*, LoadCore opens the **Range** panel, from which you can:

- Delete the UPF range from the test configuration.
- Modify the UPF range name.
- Configure interface settings for the UPF range.

The following table describes the **Range Settings** that you configure for each UPF range.

<b>Setting</b>	<b>Description</b>
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Name	The name of the UPF range. You can accept the name provided by the LoadCore, or you can replace it with a name of your own choosing.
Range Count	The number of UPFs in the UPF range.
<i>Range Settings:</i>	
N3/S1-u/S5-u Interface Settings	N3 is the interface between the RAN and the UPF. These interface settings are described in <a href="#">UPF N3/S1-u/S5-u Interface Settings</a> .

## UPF N3/S1-u/S5-u Interface Settings

The following configuration settings are required by each UPF N3 range.

<b>Connectivity Settings</b>	<b>Description</b>
IP	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	Maximum transmission unit.
MSS	Maximum segment size.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>

<b>Connectivity Settings</b>	<b>Description</b>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.


## MME Ranges configuration settings

To access and configure the MME ranges settings, select **MME Ranges** from the Core Ranges panel.

You can perform the following tasks from the **Ranges** panel:

- Add a new MME range to your test configuration.
- Open an MME range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

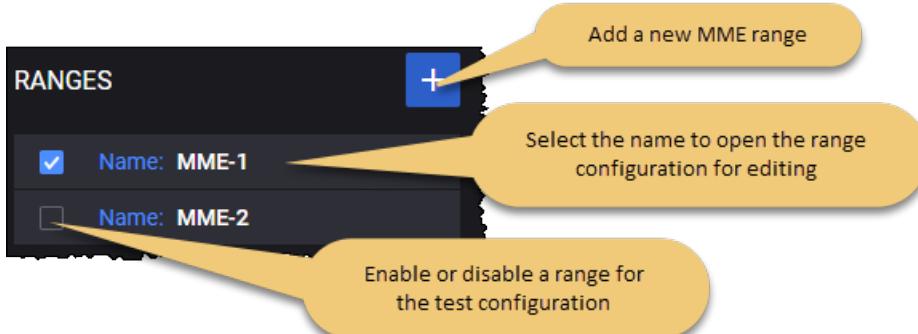

You add and select MME ranges from the MME Ranges panel. When you select the name of an MME , LoadCore opens the **Range** panel, from which you can:

- Delete the MME range from the test configuration.
- Configure the node and connectivity settings for the MME range.

## MME range controls and settings

Each MME range is identified by a unique name. You can add and delete MME ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each MME range.

Setting	Description
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
Node Settings	Each MME range requires the configuration of an associated set of Node Settings, which are described in <a href="#">MME node settings</a> .
S1 Interface Settings	These settings are described in <a href="#">MME S1 interface settings</a> .

## MME node settings

Each MME range includes a set of Node Settings.

Setting	Description
<i>Node Settings:</i>	
Name	The name uniquely identifies each MME instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Group ID	Set the MME group ID value.
Code	Set the MME code value.
PLMN MCC	<p>The PLMN MCC for this MME range.</p> <p><b>About PLMN MCC ...</b></p> <p>A Public Land Mobile Network (PLMN) is a telecommunications network that provides wireless communication services offered by a specific operator in a specific country. A PLMN is identified by a globally unique PLMN code, which consists of a MCC (Mobile Country Code) and MNC (Mobile Network Code). It is a five- to six-digit number identifying a country, and a mobile network operator in that country, usually represented in the form 001-01 or 001-001.</p> <p>The Mobile Country Code (MCC) is a three-digit code that uniquely identifies the</p>

<b>Setting</b>	<b>Description</b>
	country of domicile of the mobile subscriber.
PLMN MNC	<p>The PLMN MNC for this MME range.</p> <p><b>About PLMN MNC ...</b></p> <p>The Mobile Network Code (MNC) is a two-digit (North America) or three-digit (European Standard) code that is used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile network operator. The MCC-MNC tuple is stored within the first five or six digits of the IMSI (International Mobile Subscriber Identity), and is also used in combination with the MCC to identify a PLMN.</p>
Ciphering Algorithm	<p>Allows to select the supported 5G ciphering algorithm:</p> <ul style="list-style-type: none"> <li>• <b>EEA0</b> - Null ciphering algorithm</li> <li>• <b>EEA1</b> - 128-bit SNOW 3G based algorithm</li> <li>• <b>EEA2</b> - 128-bit AES based algorithm</li> <li>• <b>EEA3</b> - 128-bit ZUC based algorithm</li> </ul>
Integrity Algorithm	<p>Allows to select the supported 5G integrity protection algorithm:</p> <ul style="list-style-type: none"> <li>• <b>EIA0</b> - Null Integrity Protection algorithm</li> <li>• <b>EIA1</b> - 128-bit SNOW 3G based algorithm</li> <li>• <b>EIA2</b> - 128-bit AES based algorithm</li> <li>• <b>EIA3</b> - 128-bit ZUC based algorithm</li> </ul>
Relative Capacity	Set the relative capacity value.
Public Warning System	<i>Select the check box to enable this option.</i>
Message ID	<p>Set the public warning system message ID. Values should be in range 0-65535. Default value: <b>4352</b>.</p>
Repetition Period	<p>Set the public warning system message repetition period. Values should be in range 1-131071. Default value: <b>1</b>.</p>
Number of Broadcasts Requested	<p>Set the public warning system message number of requested broadcasts. Values should be in range 0-65535. Default value: <b>1</b>.</p>
Time to Wait Before Triggering PWS after	<p>Set the number of seconds to wait before triggering PWS after S1 setup. Values should be in range 0-86400. Default value: <b>1</b>.</p>

Setting	Description
NG Setup (s)	
PWS Kill Timer (s)	Duration in seconds after which PWS Kill Request is sent. Values should be in range 0-86400. Default value: <b>0</b> .

## MME S1 interface settings

The following **Connectivity Settings** enable the necessary S1 connectivity and service interaction.

S1 Interface Settings	Description
Local STCP Port	Set the local STCP port number.
<i>Connectivity Settings</i>	
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MTU	The Maximum Transmission Unit (MTU) for this range. MTU specifies the largest packet that an Ethernet frame can carry.
MSS	The Maximum Segment Size (MSS) for this range. MSS specifies the largest TCP segment that the IP device can transmit as a single, unfragmented unit.
Additional Routes	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix	The IP address prefix assigned to this range. It specifies the number of leftmost bits

S1 Interface Settings	Description
Length	in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
MAC	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.
Outer VLAN	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p><i>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</i></p>
VLAN ID	VLAN identifier.


## SGW Ranges configuration settings

To access and configure the SGW ranges settings, select **SGW Ranges** from the Core Ranges panel.

You can perform the following tasks from the **SGW Ranges** panel:

- Add a new SGW range to your test configuration.
- Open a SGW range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

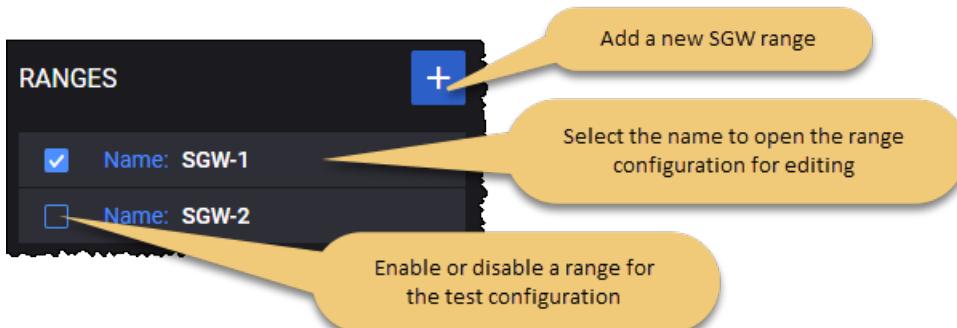

You add and select SGW ranges from the Ranges panel. When you select the name of a SGW, LoadCore opens the **Range** panel, from which you can:

- Delete the SGW range from the test configuration.
- Modify the SGW range name.
- Configure the range and connectivity settings for the SGW range.

### **SGW range controls and settings**

Each SGW range is identified by a unique name. You can add and delete SGW ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each SGW range.

<b>Setting</b>	<b>Description</b>
<i>Range:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
Name	The name uniquely identifies each SGW instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Range Count	The number of SGWs in the SGW range.
<i>Range Settings:</i>	
UDP Rx Buffer (bytes)	Size of receive buffers for UDP sockets: <ul style="list-style-type: none"> <li>• minimum: 212992 #The default Linux buffer size</li> <li>• maximum: 134217728 #128MB</li> <li>• default: 12582912 #12MB</li> </ul>
UDP Tx Buffer (bytes)	Size of transmit buffers for UDP sockets: <ul style="list-style-type: none"> <li>• minimum: 212992 # The default Linux buffer size</li> <li>• maximum: 134217728 #128MB</li> <li>• default: 2097152 #2MB</li> </ul>
<i>S1-u Interface Settings</i>	<i>These settings are described in <a href="#">SGW S1-u interface settings</a>.</i>

## SGW S1-u interface settings

The following **Connectivity Settings** enable the necessary S1-u connectivity and service interaction.

S1-u Interface Settings	Description
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Additional Routes</i>	<i>The additional routes will use the gateway defined in the IP information below.</i>
	Select this button to add a new additional route to your test configuration, if needed.
	Select this button to remove the additional route from your test configuration.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

S1-u Interface Settings	Description
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.


## SEG Ranges configuration settings

To access and configure the SEG ranges settings, select **SEG Ranges** from the CoreSim panel.

You can perform the following tasks from the **SEG Ranges** panel:

- Add a new SEG range to your test configuration.
- Open a SEG range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

**For example ...**

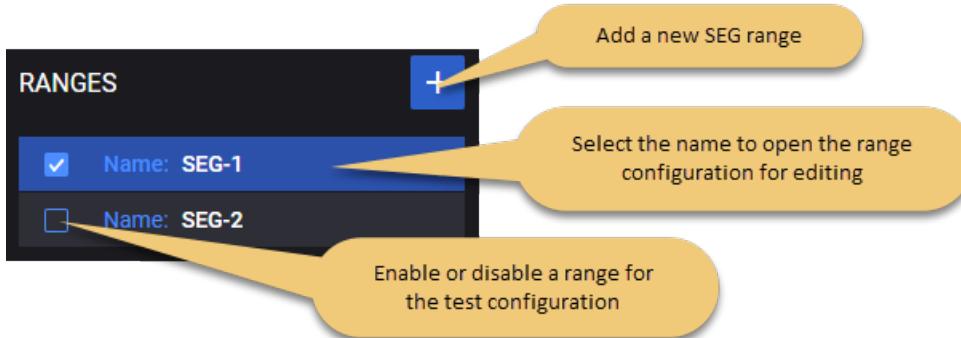

You add and select SEG ranges from the SEG Ranges panel. When you select the name of a SEG , LoadCore opens the **Range** panel, from which you can:

- Delete the SEG range from the test configuration.
- Designate the range as a **Device Under Test**.
- Modify the SEG range name.
- Configure the range and connectivity settings for the SEG range.

### SEG range controls and settings

Each SEG range is identified by a unique name. You can add and delete SEG ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each SEG range.

Setting	Description
<i>Range:</i>	
Device Under Test	Enable this option if your SEG is a DUT in this test configuration. When this option is not enabled, the LoadCore will simulate the SEG functionality (if it is selected in the Topology window).
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>Range Settings:</i>	
<i>Node Settings</i>	
Name	The name uniquely identifies each SGW instance. You can accept the value provided by LoadCore or overwrite it with your own value.
Role	By default, the role is set to <b>Responder (Remote Access)</b> and cannot be changed.
UDP Rx Buffer (bytes)	Size of receive buffers for UDP sockets: <ul style="list-style-type: none"> <li>minimum: 212992</li> <li>maximum: 134217728</li> <li>default: 12582912</li> </ul>
UDP Tx Buffer (bytes)	Size of transmit buffers for UDP sockets: <ul style="list-style-type: none"> <li>minimum: 212992</li> <li>maximum: 134217728</li> <li>default: 2097152</li> </ul>
<i>Interface Settings</i>	<i>These settings are described in <a href="#">SEG interface settings</a>.</i>
<i>Remote Access IP Pool</i>	
IP Address	Set the start IP address.
IP Increment	Set the IP address increment value.
IPs count	Set the IP count value.
IP Prefix Length	Set the IP prefix length value.
<i>Local Protected Subnet</i>	<i>Selects which node(s) are protected by SEG: AMF and/or UPF . AMF and UPF could be protected by the same SEG when running with Linux stack.</i>
N2 Host(s)	Select an entry from the drop-down list: you can either <i>Select All</i> or select a specific AMF range from the list.

<b>Setting</b>	<b>Description</b>
N3 Host(s)	Select an entry from the drop-down list: you can either <i>Select All</i> or select a specific UPF range from the list.
<i>Authentication</i>	
Authentication Method	By default, the authentication method is set to <b>Certificates</b> and cannot be changed.
CA Certificate	Select the CA certificate from the drop-down list.
Certificates and Private Keys (zip)	It allows you to upload an archive that contains the certificates and keys for the SEG range, using the <b>Upload</b> button. To remove the archive , select the <b>Clear</b> button. The <code>.key</code> and <code>.crt</code> files need to have the same name before extensions.
Use Same Certificates and Private Key For All Tunnels	By default, this option is disabled. Select the toggle button to enable it.
<i>IKE Phase 1</i>	
Encryption Algorithm	Select the encryption algorithm from the drop-down list. Default value: <b>AES-128-GCM-16</b> . Available options: <b>AES-128-CBC</b> , <b>AES-192-CBC</b> , <b>AES-256-CBC</b> , <b>AES-128-GCM-16</b> , <b>AES-192-GCM-16</b> , <b>AES-256-GCM-16</b> .
Hash Algorithm	Select the hash algorithm from the drop-down list. Default value: <b>NONE</b> . Available options: <b>NONE</b> , <b>HMAC-MD5-96</b> , <b>HMAC-SHA1-96</b> , <b>HMAC-MD5-128</b> , <b>HMAC-SHA1-160</b> , <b>HMAC-SHA2-256-128</b> , <b>HMAC-SHA2-384-192</b> , <b>HMAC-SHA2-512-256</b> . Restrictions: <ul style="list-style-type: none"><li>• When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li><li>• If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16</b>, <b>AES-192-GCM-16</b> or <b>AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li></ul>
DH Group	Select an option from the drop-down list. Default value: <b>prime256v1(19)</b> . Available options: <b>prime256v1(19)</b> , <b>secp384r1(20)</b> , <b>secp521r1(21)</b> , <b>prime192v1(25)</b> , <b>secp224r1(26)</b> , <b>x25519(31)</b> , <b>x448(32)</b> .
PRF Algorithm	Select an option from the drop-down list. Default value: <b>HMAC-SHA256</b> . Available options: <b>HMAC-MD5</b> , <b>HMAC-</b>

<b>Setting</b>	<b>Description</b>
	<b>SHA1, HMAC-SHA256, HMAC-SHA384, HMAC-SHA512.</b>
<i>IKE Phase 2</i>	
Encryption Algorithm	<p>Select the encryption algorithm from the drop-down list.  Default value: <b>AES-128-GCM-16</b>. Available options: <b>AES-128-CBC, AES-192-CBC, AES-256-CBC, AES-128-GCM-16, AES-192-GCM-16, AES-256-GCM-16</b>.</p>
Hash Algorithm	<p>Select the hash algorithm from the drop-down list.  Default value: <b>NONE</b>. Available options: <b>NONE, HMAC-MD5-96, HMAC-SHA1-96, HMAC-MD5-128, HMAC-SHA1-160, HMAC-SHA2-256-128, HMAC-SHA2-384-192, HMAC-SHA2-512-256</b>.</p> <p>Restrictions:</p> <ul style="list-style-type: none"> <li>When <i>Encryption Algorithm</i> is set to one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the only available <i>Hash Algorithm</i> is <b>NONE</b>.</li> <li>If <b>Encryption Algorithm</b> is set to a value other than one of <b>AES-128-GCM-16, AES-192-GCM-16 or AES-256-GCM-16</b>, the <b>NONE</b> hash algorithm is not available.</li> </ul>
<i>Identification</i>	
Local Identification Type	<p>Select an option from the drop-down list.  Default value: <b>ID_DER ASN1 DN</b>. Available options: <b>ID_IPV4_ADDR, ID_FQDN, ID_USER_FQDN, ID_IPV6_ADDR, ID_DER ASN1 DN, ID_KEY_ID</b>.</p>
Local Identification Value	<p>Set the value for this parameter.  This field is mandatory if the <i>Local Identification Type</i> is set to: <b>ID_FQDN, ID_KEY_ID or ID_RFC822_ADDR</b>.</p>
<i>Timers</i>	
Enable Rekey	By default, this option is disabled. Select the toggle button to enable it.
IKE Phase 1 (IKE) Lifetime (s)	<p>Set a value for this parameter.  Default value: <b>0</b> (disabled).</p>
IKE Phase 1 (IKE) Lifetime (s)	<p>Set a value for this parameter.  Default value: <b>0</b> (disabled).</p>
DPD Interval (s)	<p>Set a value for this parameter.  Default value: <b>0</b> (disabled).</p>

## SEG interface settings

The following **Connectivity Settings** enable connectivity and service interaction.

<b>SEG Interface Settings</b>	<b>Description</b>
Source Port	Set the source port number.
<i>IP</i>	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address in your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>MAC</i>	<i>Select the MAC address to open the MAC configuration panel for editing.</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the <i>MAC Address</i> ). The default value is 000000000001.
<i>Outer VLAN</i>	<i>Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.</i>
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.

## IMS configuration settings

The IP Multimedia Subsystem (IMS) is a standards-based architectural framework for delivering multimedia communications services such as voice, video and text messaging over IP networks. IMS enables secure and reliable multimedia communications between diverse devices across diverse networks.

In LoadCore, IMS has two important components:

- Call Session Control Function (CSCF) – the core of the IMS architecture, responsible for controlling sessions between endpoints (referred to as terminals in the IMS specifications) and applications.
- Media Function

The configuration settings for these two components are described in the topics listed below.

**Topics:**

<b>CSCF Range panel .....</b>	<b>1278</b>
<b>Media Function Range panel .....</b>	<b>1280</b>

## CSCF Range panel

When you select the CSCF's IP address from the **CSCF Ranges** panel, LoadCore opens the **Range** panel, from which you can select **CSCF Settings** to configure the node and connectivity settings for the CSCF range.:.

### CSCF range controls and settings

The following table describes the available **Range** configuration options for the CSCF range.

Setting	Description
<i>P-CSCF Node Settings</i>	
Domain	Set the domain name.
Port	Set the port number. You can accept the value provided by LoadCore or overwrite it with your own value.
Force IPsec Null Encryption	Select this option to enable IPSEC.
<i>SIP Settings</i>	
<i>Authentication Settings</i>	
Enable Authentication	Select this option to enable authentication.
Realm	Set the realm. Default value: <b>keysight.com</b> .
Algorithm Type	Select the algorithm type from the drop-down list. Available options: <b>Digest</b> , <b>AKAv2</b> or <b>AKAv1</b> .
Algorithm	Select the algorithm from the drop-down list. Available options: <b>MD5</b> , <b>MD5-Sess</b> , <b>SHA256</b> or <b>SHA256-Sess</b> .
Quality of Protection	Select an option from the drop-down list: <b>auth</b> or <b>auth-init</b> .
<i>AF Node Settings</i>	
Hostname	Set the hostname.
Realm	Set the realm. Default value: <b>keysight.com</b> .
N6 Interface Settings	<i>The CSCF range requires the configuration of N6 interface settings (this interface is used for SIP).</i>

<b>Setting</b>	<b>Description</b>
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Outer VLAN</i>	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.
<i>Rx Interface Settings</i>	The CSCF range requires the configuration of Rx interface settings (this interface is used for Diameter).
<i>IP</i>	Select the IP address to open the IP configuration panel for editing.
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
<i>Outer VLAN</i>	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
<i>Inner VLAN</i>	<p><b>IMPORTANT</b> This option is visible only when the Outer VLAN is selected.</p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>

Setting	Description
VLAN ID	VLAN identifier.
UE Routes Settings	<i>These settings are described in CSCF UE routes settings.</i>
Routes Config:	
	Select this button to add a new route to a specific UE range.
Routes Config:	
	Select this button to remove the route to the UE range.
UE Range MSIN	Select the MSIN of the UE range from the drop-down list.

## Media Function Range panel

When you select the Media Function's IP address from the **Media Function Ranges** panel, LoadCore opens the **Range** panel, from which you can configure the connectivity settings for the Media Function range.


### Media Function range controls and settings

The following **Connectivity Settings** enable the necessary connectivity and service interaction.

Connectivity Settings	Description
IP	<i>Select the IP address to open the IP configuration panel for editing.</i>
IP Address	The IP address from your test network to use for traffic on this interface.
IP Prefix Length	The IP address prefix assigned to this range. It specifies the number of leftmost bits in the address, which indicates the network portion of the address.
Gateway Address	The IP address assigned as gateway address.
Gateway Increment	The value to use when incrementing the Gateway address (starting with the Gateway Address).
MAC	<i>Select the MAC address to open the MAC configuration panel for editing</i>
MAC Address	Hardware MAC address.
MAC Increment	The value to use when incrementing the MAC address (starting with the MAC Address). The default value is 000000000001.

<b>Connectivity Settings</b>	<b>Description</b>
Outer VLAN	Select the check-box to make this option available, and, then, select the Outer VLAN to open the configuration panel for editing.
VLAN ID	VLAN identifier.
VLAN TPID	VLAN tag protocol ID.
Inner VLAN	<p><b>IMPORTANT</b> <i>This option is visible only when the Outer VLAN is selected.</i></p> <p>Select the check-box to make this option available, and then select the Inner VLAN to open the configuration panel for editing.</p>
VLAN ID	VLAN identifier.

## RU configuration settings



For testing over the O-RAN fronthaul interface, Keysight has successfully deployed with multiple industry players the RuSIM, a 5G UE and O-RU emulator. RuSIM enables infrastructure vendors, chipset providers and mobile operators and integrators to easily run functional and load tests, conformance tests and performance tests.

RuSIM enables network verification by generating IP traffic load, simulating applications running on multiple concurrent devices operating real voice and data sessions.

The configuration settings are described in the topics listed below.

### Topics:


<b>RU Ranges panel</b> .....	<b>1281</b>
<b>RU Range Settings</b> .....	<b>1282</b>
General Settings .....	1282
M-Plane settings .....	1284
S-Plane settings .....	1285
Compression settings .....	1286

### RU Ranges panel

The **RU Ranges** panel opens when you select the **RU** node from the network topology window. You can perform the following tasks from this panel:

- Add a new RU range to your test configuration.
- Open a RU range configuration (for editing or viewing).
- Enable or disable a range for the test configuration.

### For example ...

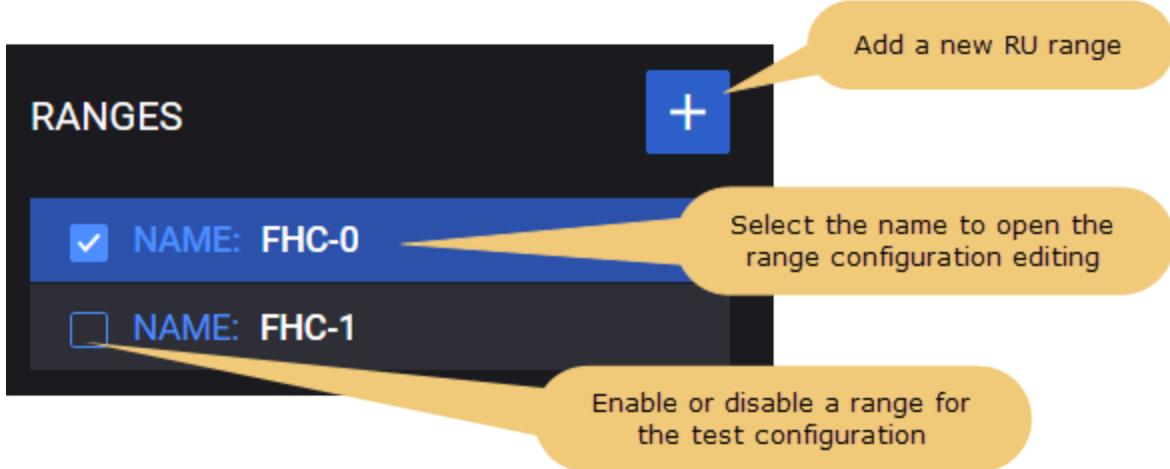

## RU Range Settings

Each RU range is identified by a unique name. You can add and delete ranges as necessary to support your test objectives.

The following table describes the **Range Settings** that you configure for each UNAP range.

Setting	Description
<i>Cell Settings:</i>	
	Select the <b>Delete Range</b> button to delete this range from your test configuration.
<i>General Settings</i>	See <a href="#">General Settings</a> for more details.
<i>M-Plane</i>	See <a href="#">M-Plane settings</a> for more details.
<i>S-Plane</i>	See <a href="#">S-Plane settings</a> for more details.
<i>Compression</i>	See <a href="#">Compression settings</a> for more details.

### General Settings

Each RU range is identified by the following general settings.

Setting	Description
Name	The name of this RU range. Multiple RU instances (ranges) may be deployed in the test network. Each RU instance is uniquely identified by its name. You can accept the value provided by LoadCore or overwrite it with your own value.
CC ID	Insert the Carrier Component ID.
MAC Address	MAC address used by O-RAN driver for both M-Plane and CU-Plane.

<b>Setting</b>	<b>Description</b>
Device Index	Device index used by O-RAN driver for M-Plane and CU-Plane.
DU Port ID Mask	Defines the mask used to extract the DU port ID field from eAxC ID in O-RAN packet header (e.g. 0x6000).
Band Sector ID Mask	Defines the mask used to extract the band sector ID field from eAxC ID in O-RAN packet header (e.g. 0x1c00).
CC ID Mask	Defines the mask used to extract CC ID field from eAxC ID in O-RAN packet header. Typical value for ACELL scenario (multiple cell per O-RAN link) is decimal 240 (0x0300). Typical value for non-ACELL scenario (single cell per O-RAN link) is decimal 0 (0x0000).
Polarization Mask	Polarization mask defines the mask used to extract polarization field from eAxC ID in O-RAN packet header.
RU Port ID Mask	Defines the mask used to extract RU port ID field from eAxC ID in O-RAN packet header (e.g. 0x00ff).
RU Port Map Mask	RU port map mask identifies portion of RU port ID field to treat as one entry in RU port map
Maximum Capture Events	Maximum number of events for an event capture.
Maximum Capture Event Size	Maximum size of an event in an event capture.
MTU of UL U-Plane Packets	MTU size used for sizing UL U-Plane packets \n(in bytes).
Endpoints per Stream Core	Number of O-RAN endpoints (eAxC) allocated per stream core.
<i>RU Ports:</i>	<i>The RU Port includes IDs, type and associated antenna. Optionally, the UL antenna mapping, UL/DL codec and UL/DL scale can also be specified when setting the ports. The line contains "ruPortId ruPortSectType ruPortAp ruPortULAp ruPortULCodec ruPortDLCodec ruPortULScale ruPortDLScale". If UL/DL codec and UL/DL scale settings for an eAxcID are non-zero, these values take precedence over other codec/scale parameters.</i>
Maximum Number of RU Ports	The maximum number of RU Ports to be used on this range.

<b>Setting</b>	<b>Description</b>
RU Port 0	A ruPort describes IDs, type and associated antenna. Optionally, the UL antenna mapping, UL/DL codec and UL/DL scale can also be specified.
RU Port 1	
RU Port 2	When configured, the line contains the following settings: ruPortid, ruPortSectType, ruPortAp, ruPortUIAp, ruPortUICodec, ruPortDICodec, ruPortUIScale, ruPortDIScale.
RU Port 3	
RU Port 4	If UL/DL codec and UL/DL scale settings for an excID are non-zero, these values take precedence over other codec/scale parameters.
RU Port 5	
RU Port 6	
RU Port 7	
RU Port 8	
RU Port 9	
RU Port 10	
RU Port 11	
RU Port 12	
RU Port 13	
RU Port 14	
RU Port 15	
<i>VLANs</i>	
C-Plane VLAN	C-Plane VLAN identifier.
U-Plane VLAN	U-Plane VLAN identifier.
M-Plane VLAN	M-Plane VLAN identifier.

## M-Plane settings

The Management Plane (M-Plane) in O-RAN is responsible for managing the Radio Unit (O-RU). It provides a variety of functions to set parameters on the O-RU side, as required by the Control/User Plane (C/U-Plane) and Synchronization Plane (S-Plane).

The following settings are required for the M-Plane configuration.

<b>Setting</b>	<b>Description</b>
M-Plane Type	Select the type from the drop-dpwn list. Available options are: <ul style="list-style-type: none"> <li>• <b>NETCONF</b></li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li><b>SOAP</b></li> </ul>
Skip M-Plane	Select the appropriate action from the drop-down: <ul style="list-style-type: none"> <li><b>Run Mplane and use the values from Mplane to configure ordrv</b></li> <li><b>Do not run Mplane and use cell configuration for ordrv</b></li> <li><b>Run Mplane but **NOT** use the values from Mplane to configure ordrv</b></li> </ul>
Config name of the radio unit	Designates the name of the tar.gzradio unit config file. <p><b>IMPORTANT</b> This parameter is available only when Skip M-Plane is set to <b>Run Mplane and use the values from Mplane to configure ordrv</b>.</p>
Static PRACH	<i>The Physical Random Access Channel and is used by UEs to request an uplink allocation from the base station.</i>

## S-Plane settings

Frequency and time synchronization of O-DUs and O-RUs via Ethernet use Synchronous Ethernet and IEEE 1588 Precision Time Protocol (PTP). Transport of PTP directly over L2 Ethernet (ITU-T G.8275.1 full timing on-path support) is assumed in this version of the specification, whilst transport of PTP over UDP/IP (ITU-T G.8275.2 partial timing support from the network) is also possible albeit with un-assured synchronization performance. Security mechanisms will not be used for this plane.

The following table describes the **S-Plane settings** that you configure for each RU range.

Setting	Description
<i>S-Plane</i>	
IOT Profile	Determines the delay parameters: the parameters <code>t2a_min_up</code> , <code>t2a_max_up</code> , <code>t2a_min_cp_dl</code> , <code>t2a_max_cp_dl</code> , <code>t2a_min_cp_ul</code> , <code>t2a_max_cp_ul</code> are determined by this parameter. It can be overridden by explicitly specifying the parameters too. These parameters determine whether packets are on-time or not.
Alpha	Offset for the starting position of 10 ms radio frame. It is also referred as downlink-radio-frame-offset, and is used in calculation of the Frame Number from GPS time. Refer to O-RAN CUS specification (System Frame Number Calculation from GPS Time) for more details.
Beta	Offset for the SFN value. it is also referred as downlink-sfn-offset, and is used in calculation of the Frame Number from GPS time. Refer to O-RAN CUS specification (System Frame Number Calculation from GPS Time) for more details.",
O-RAN Uplink Delay	Delay between UL C-Plane and UL U-Plane (in $\mu$ sec). Only applicable when PTP is not used.

<b>Setting</b>	<b>Description</b>
O-RAN Downlink Delay	Worst case delay between DL C-Plane and DL U-Plane (in $\mu$ sec). Only applicable when PTP is not used.
PTP	<i>If enabled, it will configure the Precision Time Protocol (PTP), which provides an efficient way to synchronize time on the network nodes. This protocol uses Master-Slave architecture. Grandmaster Clock (Master) is a reference clock for the other nodes, which adapt their clocks to the master.</i>
T2A_MIN_UP	Used with T2A_MAX_UP and T0 value to create on-time range for incoming U-Plane. If specified, overrides the value set by IOT_PROFILE.
T2A_MAX_UP	Used along with T2A_MIN_UP and T0 value to create on-time range for incoming U-plane. If specified, overrides the value set by IOT_PROFILE.
T2A_MIN_CP_DL	T2A_MIN_CP_DL is used along with T2A_MAX_CP_DL and T0 to create on-time range for incoming downlink c-plane. If specified, overrides the value set by IOT_PROFILE.
T2A_MAX_CP_DL	T2A_MAX_CP_DL is used along with T2A_MIN_CP_DL and T0 to create on-time range for incoming downlink c-plane. If specified, overrides the value set by IOT_PROFILE.
T2A_MIN_CP_UL	T2A_MIN_CP_UL is used along with T2A_MAX_CP_UL and T0 to create on-time range for incoming uplink c-plane. If specified, overrides the value set by IOT_PROFILE.
T2A_MAX_CP_UL	T2A_MAX_CP_UL is used along with T2A_MIN_CP_UL and T0 to create on-time range for incoming uplink c-plane. If specified, overrides the value set by IOT_PROFILE.
TA3_MIN	Used when PTP is used for transmit clock, specifies the minimum time to transmit UL data from RU to DU, starting from T0.
TA3_MAX	Currently not used by ORDRV.
TA3_ADJ	Used when PTP is used for transmit clock, delay added to TA3_MIN to adjust transmit time of UL data from RU to DU with reference to T0.

## Compression settings

<b>Setting</b>	<b>Description</b>
<i>Compression:</i>	
Use Dynamic Compression in Uplink	If enabled, it will allow you to use the Dynamic Compression in Uplink.

Setting	Description
Uplink Codec	<p><b>IMPORTANT</b> This parameter is available only if <b>Use Dynamic Compression in Uplink</b> is <i>disabled</i>.</p> <p>UL_CODEC specifies the static U-plane compression algorithm used by UL. This can be overridden by a non-zero value of RuPortUICodec in RU Port definition for an eAxC ID. You can select one of the options in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Uncompressed 16 Bits BigEndian</b></li> <li>• <b>Block Floating Point 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 9 Bits BigEndian</b></li> <li>• <b>Block Floating Point 12 Bits BigEndian</b></li> <li>• <b>Block Floating Point 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 14 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 9 Bits BigEndian</b></li> <li>• <b>Uncompressed 12 Bits BigEndian</b></li> <li>• <b>Uncompressed 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 12 Bits BigEndian</b></li> </ul>
Use Dynamic Compression in Downlink	If enabled, it will allow you to use the Dynamic Compression in Downlink.
Downlink Codec	<p><b>IMPORTANT</b> This parameter is available only if <b>Use Dynamic Compression in Downlink</b> is <i>disabled</i>.</p> <p>DL_CODEC specifies the static U-plane compression algorithm used by DL. This can be overridden by a non-zero value of RuPortDILCodec in RU Port definition for an eAxC ID.</p> <p>You can select one of the options in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Uncompressed 16 Bits BigEndian</b></li> <li>• <b>Block Floating Point 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 9 Bits BigEndian</b></li> <li>• <b>Block Floating Point 12 Bits BigEndian</b></li> <li>• <b>Block Floating Point 8 Bits BigEndian</b></li> <li>• <b>Modular Compression 4 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 14 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 9 Bits BigEndian</b></li> <li>• <b>Uncompressed 12 Bits BigEndian</b></li> </ul>

Setting	Description
	<ul style="list-style-type: none"> <li>• <b>Uncompressed 14 Bits BigEndian</b></li> <li>• <b>Modular Compression 5 Bits BigEndian</b></li> <li>• <b>Block Floating Point 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 12 Bits BigEndian</b></li> </ul>
PRACH Codec	<p>PRACH_CODEC specifies the static U-plane compression algorithm used by PRACH (Applies to section type 3 eAxC UL). If not set, UL_CODEC value is used. This can be overridden by a non-zero value of RuPortUICodec in RU Port definition for an eAxC ID.</p> <p>You can select one of the options in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Uncompressed 16 Bits BigEndian</b></li> <li>• <b>Block Floating Point 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 9 Bits BigEndian</b></li> <li>• <b>Block Floating Point 12 Bits BigEndian</b></li> <li>• <b>Block Floating Point 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 14 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 9 Bits BigEndian</b></li> <li>• <b>Uncompressed 12 Bits BigEndian</b></li> <li>• <b>Uncompressed 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 12 Bits BigEndian</b></li> </ul>
SRS Codec	<p>SRS_CODEC specifies the static U-plane compression algorithm used by SRS.</p> <p>You can select one of the options in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Uncompressed 16 Bits BigEndian</b></li> <li>• <b>Block Floating Point 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 9 Bits BigEndian</b></li> <li>• <b>Block Floating Point 12 Bits BigEndian</b></li> <li>• <b>Block Floating Point 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 14 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 9 Bits BigEndian</b></li> <li>• <b>Uncompressed 12 Bits BigEndian</b></li> <li>• <b>Uncompressed 14 Bits BigEndian</b></li> </ul>

<b>Setting</b>	<b>Description</b>
	<ul style="list-style-type: none"> <li>• <b>Block Floating Point 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 12 Bits BigEndian</b></li> </ul>
SSB Codec	<p>SSB_CODEC specifies the static U-plane compression algorithm used by SSB (Applies to section type 3 eAxC DL). If not set, DL_CODEC value is used. This can be overridden by a non-zero value of RuPortDICodec in RU Port definition for an eAxC ID.</p> <p>You can select one of the options in the drop-down list:</p> <ul style="list-style-type: none"> <li>• <b>Uncompressed 16 Bits BigEndian</b></li> <li>• <b>Block Floating Point 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 9 Bits BigEndian</b></li> <li>• <b>Block Floating Point 12 Bits BigEndian</b></li> <li>• <b>Block Floating Point 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 14 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 9 Bits BigEndian</b></li> <li>• <b>Uncompressed 12 Bits BigEndian</b></li> <li>• <b>Uncompressed 14 Bits BigEndian</b></li> <li>• <b>Block Floating Point 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 8 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 10 Bits BigEndian</b></li> <li>• <b>Block Scaling Compression 12 Bits BigEndian</b></li> </ul>

**CHAPTER 11**

## Manage LoadCore licenses

---

LoadCore is a licensed product. You can manage licenses using either the integrated LoadCore License Manager or a centralized License server that is managed by your organization.

**Chapter contents:**

<b>Licensing Requirements</b> .....	<b>1290</b>
<b>License Manager</b> .....	<b>1290</b>
<b>License Server</b> .....	<b>1292</b>
<b>Licensed Test Configs</b> .....	<b>1293</b>

## Licensing Requirements

The license server is shipped as a separate .ova file.

After deploying the .ova, you will have access to a web interface for the license server (for example: <https://10.38.156.169>).

You can:

- activate licenses by selecting the **Activate** button,
- sync licenses,
- generating a license request bin file by selecting **Offline Operations** and then **Generate Request**,
- import offline licenses by selecting **Offline Operations** and then **Import Licenses**,
- check the license statistics,
- deactivate Licenses by selecting the **Deactivate** button.

After activation, the licenses and features will be available in the LoadCore web UI.

## License Manager

The first time you use LoadCore, you need to active at least one license. You activate and manage your licenses using the LoadCore **License Manager** functions, which are accessed from the setup menu.

- [How to open License Manager on the next page](#)
- [Activate a license on the next page](#)
- [Deactivate a license on the next page](#)
- [Sync licenses on the next page](#)
- [Reserve a license on the next page](#)
- [Get license statistics on page 1292](#)
- [Perform offline license operations on page 1292](#)

## How to open License Manager

To access the LoadCore License Manager:

1. Select **Administration** from the setup menu (⚙).
2. Select **License Manager** (from the **Administration** menu).

## Activate a license

To activate one or more LoadCore licenses:

1. Select **Administration** from the setup menu (⚙), then select **License Manager**.
2. Select **Activate licenses**.  
LoadCore opens the **Activate Licenses** dialog.
3. Enter your license data in the dialog box.  
You can use either activation codes or entitlement codes (one or more ).
4. Select **Load Data**, indicate the number of licenses you want to activate, then click **Activate**.

Your new licenses—which should now be listed in the License Manager page—are now available for running tests.

## Deactivate a license

To deactivate one or more LoadCore licenses:

1. Select **Administration** from the setup menu (⚙), then select **License Manager**.
2. Select **Deactivate licenses**, then and indicate a new quantity for each of the existing licenses.
3. Select **Perform the Activation** to complete the task.

**NOTE** It is recommended to deactivate the license before deleting a LoadCore VM. This way you can easily reuse the same license (Activation Code) when deploying another LoadCore VM.

## Sync licenses

To synchronize one or more LoadCore licenses:

1. Select **Administration** from the setup menu (⚙), then select **License Manager**.
2. Select **Sync licenses**.

## Reserve a license

To reserve one or more LoadCore licenses:

1. Select **Administration** from the setup menu (⚙), then select **License Manager**.
2. Select the **Manage Reservation** icon.  
LoadCore opens a new window.
3. Select the license you wish to reserve.
4. Enter the number of desired licenses in **New Reserved Count** field.
5. Enter the duration of the reservation (in hours) in the **Duration to Reserve** field.

**NOTE**

The License Statistics display shows all reserved features, ordered by count and reserved time. The initial reserved count and duration is overwritten when a new reservation is performed.

## Get license statistics

To activate one or more LoadCore licenses:

1. Select **Administration** from the setup menu (⚙), then select **License Manager**.
2. Select **License statistics**.

## Perform offline license operations

Offline license management is required for cases in which your test network is operating in an isolated environment with no Internet access. To perform offline LoadCore license operations:

1. Select **Administration** from the setup menu (⚙), then select **License Manager**.
2. Select **Offline operations**.  
LoadCore opens the **Keysight Licensing Offline Operations** dialog.
3. Click **Generate request**.
4. Using a system that has Internet connectivity, access the KSM Offline Operations Page, and follow the steps provided for the desired operation.
5. From your offline system, return to the **Keysight Licensing Offline Operations** dialog, then click **Import license**.
6. Click **Finish** to complete the task.

## License Server

Rather than using the internal LoadCore License Manager, you can use a centralized License server that is managed by your organization.

### Add a License Server

To add a license server in the LoadCore web UI:

1. Log in the LoadCore web UI.
2. Under the Settings Menu (⚙), select License Servers.

The dialog shows the license server currently used.

**NOTE**

To see the list of installed licenses, you need to access the license server in a web browser: <https://<license-Server-IP>>

3. Enter the license server IP address in the empty license server field, then select the Add button (+) next to the field.
4. Select **CLOSE** to confirm your action and close the License server dialog.

### Remove a License Server

To remove a license server that was previously added in the LoadCore web UI:

1. Log in the LoadCore web UI.
2. Under the Settings menu (⚙), select License servers.  
The license servers dialog opens, listing the previously-set license servers.
3. Select the **Delete** button next to the license server that you want to remove.
4. Select **CLOSE** to confirm your action and close the License server dialog.

## Activate a license

To activate one or more LoadCore licenses:

1. From the Setting menu (⚙), select **Application Settings**.  
LoadCore opens the **Applications Settings** dialog.
2. Select a **License Provider** from the drop-down list.
3. Enter the IP address in the **License Server IP** field.
4. Click **Update**.

## Licensed Test Configs

LoadCore offers a wide range of licensed test configurations for the following categories:

- [Licensed Full Core Configs](#)
- [Licensed SBA Configs](#)
- [Licensed UPF Isolation Configs](#)

### Licensed Full Core Configs

The following test cases are available in the current release of LoadCore.

Test Case	Test Case Description
gNB Simulation TC 101 Single UE Reg No PDU Session SUCI Null De-Reg	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, then deregister after 1 minute without any User Plan Traffic (Control Plane Only).</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 101.1 Single UE Reg No PDU Session SUCI Null Switch Off Dereg	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, and deregister after 1 minute without any User Plan Traffic (Control Plane Only). The Dereistration Request messages will use a <i>Switch-off</i> deregistration type.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 101.2 Single	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, and deregister after 1 minute</p>

<b>Test Case</b>	<b>Test Case Description</b>
UE Force Emergency Registration No PDU Session SUCI Null	<p>without any User Plan Traffic (Control Plane Only). The registration type will be <i>Emergency registration</i> (instead of <i>Initial Registration</i>).</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 101.3 Register with 5G-GUTI and Deregister	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, and deregister after 1 minute without any User Plan Traffic (Control Plane Only). The type of user identity is set to <i>5G-GUTI</i> in <i>Registration Request</i>.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 101.4 AMF triggers identification procedure to get UE identity during Registration	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, and deregister after 1 minute without any User Plan Traffic (Control Plane Only). The AMF is expected to trigger the <i>Identification Procedure</i> to obtain the identity of the UE.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 101.5 UE registers perodic registration and then deregisters	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, and deregister after 1 minute without any User Plan Traffic (Control Plane Only). The <i>Periodic Registration Update</i> is enabled.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 101.6 Single UE in Mico mode Reg 1 PDU No UP De-Reg	<p>This test verifies that an gNB can support a single User Equipment (UE) registration without creating a PDU Session, and deregister after 1 minute without any User Plan Traffic (Control Plane Only). The UEs in the range prefer Mobile Initiated Connection Only (MICO) mode during <i>Initial Registration</i> procedure.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 102 Single UE Reg 1 PDU 1 Flow SUCI Null De-Reg	<p>This test verifies that a single User Equipment (UE) can register to the 5G Core Network, can create a Protocol Data Unit (PDU) using a default QoS Flow with the Subscription Concealed Identifier (SUCI) encrypted with <i>NULL</i> profile. The UE should generate UDP traffic on the default QoS Flow and then deregister.</p>

<b>Test Case</b>	<b>Test Case Description</b>
UDP	<p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 104 Single UE Reg 1 PDU 1 Flow SUCI Profile B De-Reg UDP	<p>This test verifies that a single UE can register to the 5G Core Network, creates a Protocol Data Unit (PDU) using the default QoS Flow with the SUCI encrypted with the <i>Profile B</i>. The UE generates UDP traffic on the default QoS Flow and then deregisters.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 105 Single UE Reg 1 PDU 2 Flows No UP De-Reg	<p>This test verifies that a single UE can register to the 5G Core Network, can create an PDU using a default and a dedicated QoS Flow without any User Plane Traffic (Control Plane Only). The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 106 Single UE Reg 1 PDU 2 Flows Same DNN (1x TCP 1x UDP) De-Reg	<p>This test verifies that a single UE can register to the 5G Core Network, and can create a PDU using a default and a dedicated QoS Flow on the same DNN. The UE generates UDP traffic on one QoS flow and TCP on the other QoS Flow. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 107 Single UE Reg 2 PDU 2 Flows (1x TCP 1x UDP) 2 DNN De-Reg	<p>This test verifies that a single UE can register into the 5G Core Network and can create two PDUs by using the default QoS Flow. The UE will generate UDP traffic on the first DNN, and TCP on the other DNN. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 108 Single UE Reg 2 PDU 4 Flows 2 DNN De-Reg (1x HTTP 1x HTTPS 1x UDP 1x FTP)	<p>This test verifies that a single UE can register into the 5G Core Network, and can create two PDUs and four QoS Flows (two QoS flow on one DNN, and the other two QoS flows on the second DNN). The first DNN will include two flows for HTTP and HTTPS while the second DNN will contain the other two flows for UDP and FTP traffic. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>

<b>Test Case</b>	<b>Test Case Description</b>
gNB Simulation TC 108.1 REG and Voice Call and Deregistration	<p>This test verifies that a single User Equipment (UE) can register to the 5G Core Network, can create a Protocol Data Unit (PDU) using a default QoS Flow and generate Voice traffic on the default QoS Flow. Finally, the UE deregisters.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 108.2 Single UE with UDP and Voice traffic	<p>This test verifies that a single User Equipment (UE) can register to the 5G Core Network, can create one Protocol Data Unit (PDU) using a default QoS Flow, and generate Voice and UDP Data traffic on the default QoS Flow. Finally, the UE deregisters.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 108.3 Single UE with UDP HTTP and Voice traffic	<p>This test verifies that a single User Equipment (UE) can register to the 5G Core Network, can create a Protocol Data Unit (PDU) using a default QoS Flow, and generate Voice and Data (both UDP and TCP/HTTP) traffic on the default QoS Flow. Finally, the UE deregisters.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 109 Single UE Reg 1 PDU 1 Flow 1 HO De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, and can create one PDU using a default QoS flow with UDP traffic generation. It also performs a single handover. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 110 Single UE Reg 1 PDU 1 Flow Multiple HO De- Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, and can create an PDU using a default QoS flow with UDP traffic generation. It also performs multiple handovers. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 111 Single UE Reg 2 PDU 2 Flow Multiple HO De- Reg UDP	<p>This test verifies that a single UE can register to the 5G Core Network, can create two PDUs using the default QoS flows with UDP traffic generation on both flows, while performing multiple handovers. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> </ul>

<b>Test Case</b>	<b>Test Case Description</b>
	<ul style="list-style-type: none"> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 112 Single UE Reg 1 PDU 1 Flow 1 Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register to the 5G Core Network, can create a PDU using the default QoS flow with UDP traffic generation. The UE then enters and exits the Idle status for one single time. The UE will then deregister from the network.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 113 Single UE Reg 1 PDU 1 Flow Multiple Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, can create a PDU using a default QoS flow with UDP traffic generation, while the UE enters and exits the Idle state multiple times. The UE will then deregister from the network.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 114 Single UE Reg 2 PDU 2 Flows Multiple Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, and can create two PDUs using a default QoS flow with UDP traffic generation on both flows while performing multiple enters and exits to/from Idle state. The UE will then deregister from the network.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 115 Single UE Reg 1 PDU 1 Flow 1 HO 1 Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, can create a PDU using the default QoS flow with UDP traffic generation, while the UE performs a single handover and a single enter and exit Idle state. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 116 10 UEs Reg 1 PDU 1 Flow Multiple HO and Enter/Exit Idle Rate 1/s De-Reg UDP	<p>This test verifies that 10 UEs can register into the 5G Core Network, and can create a PDU using a default QoS flow with UDP traffic generation per UE, while each of the 10 UEs perform multiple handovers and multiple enter and exit idle state at a rate of 1 per second. The UEs will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation	This test verifies that 10 UEs can register in to the 5G Core Network at a rate

<b>Test Case</b>	<b>Test Case Description</b>
TC 117 10 UEs Reg Rate 1/s 1 PDU 1 Flow De-Reg	<p>of 1 per second while also creating a PDU using a default QoS flow per UE. After the hold time expires, all UEs will deregister and the test will repeat at 1 UE per second for the sustain time duration.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 118 10 UEs Reg Rate 1/s 1 PDU 1 Flow Multiple HO and Enter/Exit Idle Rate 1/s De-Reg UDP	<p>This test verifies that 10 UEs register in to the 5G Core Network at a rate of one per second while also creating a PDU using a default QoS flow per UE, and generating UDP traffic on every UE. During traffic generation, the UEs will perform multiple handovers and multiple entering and exiting the idle state at a rate of 1 per second. The UEs will deregister and then repeat this process at 1 UE per second for the entire duration of the sustain time.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 119 10 gNBs 10 UEs Reg 10 PDU 10 Flow No UP De-Reg	<p>This test verifies that the 5G Core Network can support 10 gNBs with 10 UEs registering to each gNB while also creating 10 PDUs and 10 QoS Flows with no user plane traffic (Control Plane Only). All UEs will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 120 10 gNBs 10 UEs Reg Rate 1/s 1 PDU 1 Flow Multiple HO and Enter/Exit Idle Rate 1/s De-Reg UDP	<p>This test verifies that the 5G Core Network can support 10 gNBs with 10 UEs registering at a rate of 1 UE per second to each gNB while also creating a PDU per UE using the default QoS flow per UE with UDP traffic being generated on each of the default QoS Flows. While traffic is generated, the UEs perform multiple handovers and multiple entering and exiting idle states at a rate of 1 per second. All UEs will then deregister and repeat this process for the entire duration of the test.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 702 100UEs and 22GB-HTTP Get Traffic - withSingle Port Pair	<p>This test verifies that the 5G Core Network can support 24 gNBs with 100 UEs, each using a PDU and a QoS Flow. Traffic type will be <i>HTTP Get</i> trying to achieve 22 Gbps of the User Plane Throughput.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation	This test verifies that 5G Core Network can support 48 gNBs with 1000 UEs,

<b>Test Case</b>	<b>Test Case Description</b>
TC 703 1000UEs and 90GB-HTTP Get Traffic with FourPort Pairs	<p>each using a PDU and a QoS Flow. Traffic type will be <i>HTTP Get</i> trying to achieve 90 Gbps of User Plane Throughput.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 704 1000UEs and 50GB- Data and voice traffic mix	<p>This test verifies that the 5G Core Network can support 48 gNBs with 1000 UEs, each using a PDU and a QoS Flow. The traffic type will be <i>HTTP Get – 35%, HTTPS Get – 10%, HTTP Get Port 70 – 25%, UDP Bi-Directional – 30%</i>, Voice Basic Call, trying to get 100 GB, but will achieve 50 Gbps of the User Plane Throughput.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
gNB Simulation TC 705 5000UEs and 50GB- Data traffic mix	<p>This test verifies that the 5G Core Network can support 48 gNBs with 1000 UEs, each using a PDU and a QoS Flow. The traffic type will be <i>HTTP Get – 35%, HTTPS Get – 10%, HTTP Get Port 70 – 25%, UDP Bi-Directional – 30%</i>, trying to get 100 GB, but will achieve 50 Gbps of User Plane Throughput.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 101 Single UE Reg No PDU Session SUCI Null De-Reg	<p>This test verifies that an AMF can support a single User Equipment (UE) registration without creating a PDU Session, then deregister after 1 minute without any User Plan Traffic (Control Plane Only).</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 102 Single UE Reg 1 PDU 1 Flow SUCI Null De-Reg UDP	<p>This test verifies that a single User Equipment (UE) can register to the 5G Core Network, can create a Protocol Data Unit (PDU) using a default QoS Flow with the Subscription Concealed Identifier (SUCI) encrypted with <i>NULL</i> profile. The UE should generate UDP traffic on the default QoS Flow and then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 104 Single UE Reg 1 PDU 1 Flow SUCI Profile B De-Reg UDP	<p>This test verifies that a single UE can register to the 5G Core Network, creates a Protocol Data Unit (PDU) using the default QoS Flow with the SUCI encrypted with the <i>Profile B</i>. The UE generates UDP traffic on the default QOS Flow and then deregisters from the network.</p> <p>This test case is available in two scenarios:</p>

<b>Test Case</b>	<b>Test Case Description</b>
	<ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 105 Single UE Reg 1 PDU 2 Flows No UP De- Reg	<p>This test verifies that a single UE can register to the 5G Core Network, can create an PDU using a default and a dedicated QoS Flow without any User Plane Traffic (Control Plane Only). The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 106 Single UE Reg 1 PDU 2 Flows Same DNN (1x TCP 1x UDP) De-Reg	<p>This test verifies that a single UE can register to the 5G Core Network, and can create a PDU using a default and a dedicated QoS Flow on the same DNN. The UE generates UDP traffic on one QoS flow and TCP on the other QoS Flow. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 107 Single UE Reg 2 PDU 2 Flows (1x TCP 1x UDP) 2 DNN De- Reg	<p>This test verifies that a single UE can register into the 5G Core Network and can create two PDUs by using the default QoS Flow. The UE will generate UDP traffic on the first DNN, and TCP on the other DNN. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 108 Single UE Reg 2 PDU 4 Flows 2 DNN De- Reg (1x HTTP 1x HTTPS 1x UDP 1x FTP)	<p>This test verifies that a single UE can register into the 5G Core Network, and can create two PDUs and four QoS Flows (two QoS flow on one DNN, and the other two QoS flows on the second DNN). The first DNN will include two flows for HTTP and HTTPS while the second DNN will contain the other two flows for UDP and FTP traffic. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 109 Single UE Reg 1 PDU 1 Flow 1 HO De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, and can create one PDU using a default QoS flow with UDP traffic generation. It also performs a single handover. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 110 Single UE	<p>This test verifies that a single UE can register into the 5G Core Network, and can create an PDU using a default QoS flow with UDP traffic generation. It also</p>

<b>Test Case</b>	<b>Test Case Description</b>
Reg 1 PDU 1 Flow Multiple HO De-Reg UDP	<p>performs multiple handovers. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 111 Single UE Reg 2 PDU 2 Flow Multiple HO De-Reg UDP	<p>This test verifies that a single UE can register to the 5G Core Network, can create two PDUs using the default QoS flows with UDP traffic generation on both flows, while performing multiple handovers. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 112 Single UE Reg 1 PDU 1 Flow 1 Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register to the 5G Core Network, can create a PDU using the default QoS flow with UDP traffic generation. The UE then enters and exits the Idle status for one single time. The UE will then deregister from the network.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 113 Single UE Reg 1 PDU 1 Flow Multiple Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, can create a PDU using a default QoS flow with UDP traffic generation, while the UE enters and exits the Idle state multiple times. The UE will then deregister from the network.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 114 Single UE Reg 2 PDU 2 Flows Multiple Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, and can create two PDUs using a default QoS flow with UDP traffic generation on both flows while performing multiple enters and exits to/from Idle state. The UE will then deregister from the network.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
AMF Isolation TC 115 Single UE Reg 1 PDU 1 Flow 1 HO 1 Enter/Exit Idle De-Reg UDP	<p>This test verifies that a single UE can register into the 5G Core Network, can create a PDU using the default QoS flow with UDP traffic generation, while the UE performs a single handover and a single enter and exit Idle state. The UE will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> </ul>

<b>Test Case</b>	<b>Test Case Description</b>
	<ul style="list-style-type: none"> <li>• <b>B2B</b> - DUT not deployed</li> </ul> <p>AMF Isolation TC 116 10 UEs Reg 1 PDU 1 Flow Multiple HO and Enter/Exit Idle Rate 1/s De-Reg UDP</p> <p>This test verifies that 10 UEs can register into the 5G Core Network, and can create a PDU using a default QoS flow with UDP traffic generation per UE, while each of the 10 UEs perform multiple handovers and multiple enter and exit idle state at a rate of 1 per second. The UEs will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
	<p>AMF Isolation TC 117 10 UEs Reg Rate 1/s 1 PDU 1 Flow De-Reg</p> <p>This test verifies that 10 UEs can register in to the 5G Core Network at a rate of 1 per second while also creating a PDU using a default QoS flow per UE. After the hold time expires, all UEs will deregister and the test will repeat at 1 UE per second for the sustain time duration.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
	<p>AMF Isolation TC 118 10 UEs Reg Rate 1/s 1 PDU 1 Flow Multiple HO and Enter/Exit Idle Rate 1/s De- Reg UDP</p> <p>This test verifies that 10 UEs register in to the 5G Core Network at a rate of one per second while also creating a PDU using a default QoS flow per UE, and generating UDP traffic on every UE. During traffic generation, the UEs will perform multiple handovers and multiple entering and exiting the idle state at a rate of 1 per second. The UEs will deregister and then repeat this process at 1 UE per second for the entire duration of the sustain time.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
	<p>AMF Isolation TC 119 10 gNBs 10 UEs Reg 10 PDU 10 Flow No UP De-Reg</p> <p>This test verifies that the 5G Core Network can support 10 gNBs with 10 UEs registering to each gNB while also creating 10 PDUs and 10 QoS Flows with no user plane traffic (Control Plane Only). All UEs will then deregister.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
	<p>AMF Isolation TC 120 10 gNBs 10 UEs Reg Rate 1/s 1 PDU 1 Flow Multiple HO and Enter/Exit Idle Rate 1/s De-Reg UDP</p> <p>This test verifies that the 5G Core Network can support 10 gNBs with 10 UEs registering at a rate of 1 UE per second to each gNB while also creating a PDU per UE using the default QoS flow per UE with UDP traffic being generated on each of the default QoS Flows. While traffic is generated, the UEs perform multiple handovers and multiple entering and exiting idle states at a rate of 1 per second. All UEs will then deregister and repeat this process for the entire duration of the test.</p> <p>This test case is available in two scenarios:</p>

Test Case	Test Case Description
	<ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>

## Licensed SBA Configs

The following test cases are available in the current release of LoadCore.

Test Case	Test Case Description
UDM Isolation TC 101 Registration AMF to UDM	<p>This test verifies the capability of the UDM to respond to <i>Registration AMF to UDM</i>.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
UDM Isolation TC 102 Registration and Deregistration AMF to UDM	<p>This test verifies the capability of the UDM to respond to <i>Registration AMF to UDM</i> and <i>Deregistration AMF to UDM</i>.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
UDM Isolation TC 103 Registration AMF to UDM and Registration SMF to UDM	<p>This test verifies the capability of the UDM to respond to <i>Registration AMF to UDM</i> and <i>Registration SMF to UDM</i>.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
UDM Isolation TC 104 Registration AMF to UDM and Registration SMF to UDM and Deregistration for both	<p>This test verifies the capability of the UDM to respond to <i>Registration AMF to UDM</i>, <i>Registration SMF to UDM</i>, <i>Deregistration AMF to UDM</i> and <i>Deregistration SMF to UDM</i>.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
UDM Isolation TC 105 UE Get NSSAI AMF to UDM	<p>This test verifies the capability of the UDM to respond to <i>Get NSSAI AMF to UDM</i>.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 101 AM Policy Association Establishment	<p>This test verifies the capability of PCF to respond to <i>Npcf_AMPolicyControl_Create</i> Service Operation. It tests the AM Policy Association Establishment as described in TS 29.513 Chapter</p>

Test Case	Test Case Description
	<p>5.1.1.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 102 AM Policy Association Modification initiated by the AMF	<p>This test verifies the capability of PCF to respond to <i>Npcf_AMPolicyControl_Create</i> and <i>Update</i> Service Operation.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 103 SM Policy Association Establishment	<p>This test verifies the capability of PCF to respond to <i>Npcf_SMPolicyControl_Create</i> Service Operation.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 104 SM Policy Association Modification initiated by the SMF	<p>This test verifies the capability of PCF to respond to <i>Npcf_SMPolicyControl_Create</i> and <i>Update</i> Service Operation.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 105 AM & SM Policy Association Establishment	<p>This test verifies the capability of PCF to respond to both <i>Npcf_AMPolicyControl_Create</i> and <i>Npcf_SMPolicyControl_Create</i> Service Operations.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 106 AM & SM Policy Association Modification initiated by the AMF	<p>This test will verify the capability of PCF to respond to <i>Npcf_AMPolicyControl_Create</i>, <i>Npcf_AMPolicyControl_Update</i>, <i>Npcf_SMPolicyControl_Create</i> and <i>Npcf_SMPolicyControl_Update</i> Service Operation.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 107 AM Policy Association Termination	<p>This test verifies that the AMF can terminate a policy sent to the PCF.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> </ul>

<b>Test Case</b>	<b>Test Case Description</b>
	<ul style="list-style-type: none"> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 109 SM Policy Association Termination	<p>This test verifies that the SMF can terminate a policy sent to the PCF.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 131 SM Policy Association Modification Trigger AC_TY_CH (Access Type Change)	<p>This test verifies that SMF can initiate an Update policy using the Access Type Change trigger type.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 132 SM Policy Association Modification Trigger PLMN_CH (PLMN Change)	<p>This test verifies that SMF can initiate an Update policy using the <i>PLMN Change</i> trigger type.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 133 SM Policy Association Modification Trigger RES_MO_RE (Resource Mod)	<p>This test verifies that the SMF can initiate an Update policy using the trigger for a request for resource modification. The SMF always reports to the PCF.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 134 SM Policy Association Modification Trigger UE_MAC_CH (MAC Change)	<p>This test verifies that the SMF can initiate an Update policy using the trigger for a new user equipment MAC address or an inactive, used UE MAC address.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 135 SM Policy Association Modification Trigger AN_CH_COR (Access Network Info)	<p>This test verifies that the SMF can initiate an Update policy using the trigger for Access Network Charging Correlation Information.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 136 SM Policy Association Modification	<p>This test verifies that the SMF can initiate an Update policy using the trigger when the PDU Session or the Monitoring key specific</p>

<b>Test Case</b>	<b>Test Case Description</b>
Trigger US_RE (PDU Threshold)	<p>resources consumed by a UE either reach the threshold or requires reporting for other reasons.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 137 SM Policy Association Modification Trigger APP_STA (App Traffic Start)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when detecting the start of application traffic.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 138 SM Policy Association Modification Trigger APP_STO (App Traffic Stop)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when detecting the application traffic stops.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 139 SM Policy Association Modification Trigger AN_INFO (Access Network Info Report)	<p>This test verifies that the SMF can initiate an Update policy using the trigger for the Access Network Information report.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 140 SM Policy Association Modification Trigger CM_SES_FAIL (Credit Session Fail)	<p>This test verifies that the SMF can initiate an Update policy using the trigger for credit management session failure.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 141 SM Policy Association Modification Trigger PS_DA_OFF (3GPP PS Data Off Change)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when the SMF reports a change in the 3GPP PS Data Off status.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 142 SM Policy Association Modification Trigger DEF_QOS_CH (Default QOS Change)	<p>This test verifies that the SMF can initiate an update policy using the trigger when the default QoS changes. The SMF always reports to PCF.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> </ul>

<b>Test Case</b>	<b>Test Case Description</b>
	<ul style="list-style-type: none"> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 143 SM Policy Association Modification Trigger SE_AMBR_CH (Session AMBR Change)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when the session AMBR changes. The SMF always reports to the PCF.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 144 SM Policy Association Modification Trigger QOS_NOTIF (Not Guaranteed QOS Flow)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when the SMF notifies the PCF about receiving notification from RAN that the QoS targets of the QoS Flow cannot be guaranteed, or re-guaranteed.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 145 SM Policy Association Modification Trigger NO_CREDIT (Out of Credit)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when UEs are out of credit.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 146 SM Policy Association Modification Trigger PRA_CH (UE Presence Change)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when a change of UE presence in the Presence Reporting Area is detected.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 147 SM Policy Association Modification Trigger SAREA_CH (Serving Area Change)	<p>This test verifies that the SMF can initiate an Update policy using the trigger when a Serving Area Location Change is detected.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 148 SM Policy Association Modification Trigger SCNN_CH (Serving CN Node Change)	<p>This test verifies that the SMF can initiate an update policy using the trigger when a Serving CN Node Location Change is detected.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>

<b>Test Case</b>	<b>Test Case Description</b>
PCF Isolation TC 149 SM Policy Association Modification Trigger RE_TIMEOUT (PCC Timeout)	<p>This test verifies that the SMF can initiate an Update policy using the trigger that indicates the SMF generated the request because a Policy and Charging Control (PCC) revalidation timeout occurred.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 150 SM Policy Association Modification Trigger RES_RELEASE (Resource Release)	<p>This test verifies that the SMF can initiate an Update policy using the trigger that indicates the SMF can inform PCF about the release of the required resources.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 151 SM Policy Association Modification Trigger SUCC_RES_ALLO (Success Rule Release)	<p>This test verifies that the SMF can initiate an update policy using the trigger that indicates the requested rule data is the successful resource allocation.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 152 SM Policy Association Modification Trigger RAT_TY_CH (RAT Type Change)	<p>This test verifies that the SMF can initiate an Update policy using the trigger that indicates a RAT Type Change.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>
PCF Isolation TC 153 SM Policy Association Modification Trigger REF_QOS_IND_CH (QoS Indication Error)	<p>This test verifies that the SMF can initiate an Update policy using the trigger for a Reflective QoS indication Change.</p> <p>This test case is available in two scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Live</b> - DUT deployed</li> <li>• <b>B2B</b> - DUT not deployed</li> </ul>

## Licensed UPF Isolation Configs

The following test cases are available in the current release of LoadCore.

<b>Test Case</b>	<b>Test Case Description</b>
TC-01 UPF Isolation 1000 UE 400Kbps Per UE 400Mbps HTTP	This test validates real UPF performance when 1000 UEs are generating 400Mbps HTTP Throughput in the DL. UE DL AMBR 400Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.

<b>Test Case</b>	<b>Test Case Description</b>
Throughput	
TC-02 UPF Isolation 1000 UE 400Kbps Per UE 400Mbps HTTP Throughput DPI_ Configured	This test validates real UPF performance when 1000 UEs are generating 400Mbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3 . UE DL AMBR 400Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-03 UPF Isolation 10000 UE 400Kbps Per UE 4Gbps HTTP Throughput	This test validates real UPF performance when 10000 UEs are generating 4Gbps HTTP Throughput in the DL. UE DL AMBR 400Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-04 UPF Isolation 10000 UE 400Kbps Per UE 4Gbps HTTP Throughput DPI_ Configured	This test validates real UPF performance when 10000 UEs are generating 4Gbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3. UE DL AMBR 400Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-05 UPF Isolation 50K UE 400Kbps Per UE 20Gbps HTTP Throughput	This test validates real UPF performance when 50K UEs are generating 20Gbps HTTP Throughput in the DL. UE DL AMBR 400Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-06 UPF Isolation 50K UE 400Kbps Per UE 20Gbps HTTP Throughput DPI_ Configured	This test validates real UPF performance when 50k UEs are generating 20Gbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3. UE DL AMBR 400Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-07 UPF Isolation 1 UE Max Throughput	This test validates real UPF performance with 1 super user generating 5Gbps throughput in DL. UE DL AMBR 10Gbps & UL 10Gbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-08 UPF Isolation 30K UE 2Mbps Per UE 60Gbps HTTP Throughput	This test validates real UPF performance when 30k UEs are generating 60Gbps HTTP Throughput in the DL. UE DL AMBR 2Mbps & UL 200Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-09 UPF Isolation 30K UE 2Mbps Per UE 60Gbps HTTP Throughput DPI_ Configured	This test validates real UPF performance when 30k UEs are generating 60Gbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3. UE DL AMBR 2Mbps & UL 200Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-10 UPF Isolation 15K UE 5Mbps Per UE 75Gbps HTTP Throughput	This test validates real UPF performance when 15k UEs are generating 75Gbps HTTP Throughput in the DL. UE DL AMBR 5Mbps & UL 200Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.

<b>Test Case</b>	<b>Test Case Description</b>
TC-11 UPF Isolation 15K UE 5Mbps Per UE 75Gbps HTTP Throughput DPI_Configured	This test validates real UPF performance when 15k UEs are generating 75Gbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3. UE DL AMBR 5Mbps & UL 200Kbp, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-12 UPF Isolation 200K UE 300 Kbps Per UE 60Gbps HTTP Throughput	This test validates real UPF performance when 200KUEs are generating 60Gbps HTTP Throughput in the DL. UE DL AMBR 300Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-13 UPF Isolation 200K UE 300 Kbps Per UE 60Gbps HTTP Throughput DPI_Configured	This test validates real UPF performance when 200k UEs are generating 60Gbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3. UE DL AMBR 300Kbps & UL 10Kbp, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-14 UPF Isolation 600K UE 100 Kbps Per UE 60Gbps HTTP Throughput	This test validates real UPF performance when 600K UEs are generating 60Gbps HTTP Throughput in the DL. UE DL AMBR 100Kbps & UL 10Kbps, QFI 5, 6, 7 used in the test to send 6PDRs.
TC-15 UPF Isolation 600K UE 100 Kbps Per UE 60Gbps HTTP Throughput DPI_Configured	This test validates real UPF performance when 600k UEs are generating 60Gbps HTTP Throughput in the DL with DPI feature configured using Application IDs Host1, Host2 and Host3. UE DL AMBR 100Kbps & UL 10Kbp, QFI 5, 6, 7 used in the test to send 6PDRs.

This page intentionally left blank.

**CHAPTER 12**

## Manage LoadCore users

---

Managing the users who can access the application is one of the primary LoadCore administrative requirements.

- [User categories below](#)
- [Creating users below](#)
- [Reset a user's password on the next page](#)
- [Disable a user account on the next page](#)
- [Delete a user account on the next page](#)

### User categories

LoadCore user accounts can be of one of the following types:

- Administrative user: Can access the Access Control functions and perform various administrative tasks, including the definition and management of other user accounts.
- Regular user: Can access the application and use all of the resources involved in test creation, execution, and analysis.

### Creating users

Each user who requires access to the LoadCore application must have a user account. To add a user:

1. Select the settings menu ( ) and then select **Administration**.
2. Select **Access Control** from the **Administration** menu.  
LoadCore opens the **Keycloak Admin Console** in a new browser tab.
3. Select **Users** from the list of **Manage** functions (in the navigation pane).
4. Select the **Add user** button.
5. Enter the required information in the **Add user** form, then select the **Save** button.  
The following values are required for the new user:
  - Username (which must be unique within the realm).
  - Email address
  - First and Last Name
  - *User Enabled* set to **ON**.
6. Select the **Save** button.  
LoadCore adds the user and displays that user's information in the **Details** tab.
7. Set the initial password for the user:
  - a. Select the **Credentials** tab.
  - b. Enter the *Password*.
  - c. Re-enter the password in the *Password Confirmation* field.
  - d. Set **TemporaryON** if the user will be required to change the password upon initial log in.
  - e. Select the **Set Password** button.

LoadCore displays a confirmation dialog.

- f. Select the **Set Password** button to confirm the action.

## Reset a user's password

Administrative users can reset a user's password:

1. Select the settings menu (⚙) and then select **Administration**.
2. Select **Access Control** from the **Administration** menu.  
LoadCore opens the **Realm Settings** window.
3. Select **Users** from the list of **Manage** functions.
4. Select the user.
5. Select the **Credentials** tab.
6. Enter the new *Password*.
7. Re-enter the new password in the *Password Confirmation* field.
8. Set *Temporary* **ON** if the user will be required to change the password upon initial log in.
9. Select the **Reset Password** button.  
LoadCore displays a confirmation dialog.
10. Select the **Reset Password** button to confirm the action.

## Disable a user account

Administrative users can temporarily disable a user's account:

1. Select the settings menu (⚙) and then select **Administration**.
2. Select **Access Control** from the **Administration** menu.  
LoadCore opens the **Realm Settings** window.
3. Select **Users** from the list of **Manage** functions.
4. Select the user.
5. Set *User Enabled* to **OFF**.

This user account will not be able to log in until the account access is set to **ON**.

## Delete a user account

Administrative users can reset a user's password:

1. Select the settings menu (⚙) and then select **Administration**.
2. Select **Access Control** from the **Administration** menu.  
LoadCore opens the **Realm Settings** window.
3. Select **Users** from the list of **Manage** functions.
4. View all users or search for the Username of the account that you will delete.
5. Click **Delete**.

The screenshot shows a user management interface. At the top, there is a search bar with the text 'helene' and a magnifying glass icon. To the right of the search bar are buttons for 'View all users', 'Unlock users', and 'Add user'. Below the search bar is a table header with columns: ID, Username, Email, Last Name, First Name, and Actions. In the table body, there is one row for a user with ID '11095ddd...', Username 'helene23', and actions 'Edit' and 'Delete'. A red circle with a hand cursor icon is drawn around the 'Delete' button.

6. LoadCore opens a confirmation dialog.
7. Select **Delete** to confirm that you are permanently deleting this user account.

## Reset Password for Regular Users

This section describes the steps needed in order to reset the LoadCore log in password for regular users.


**IMPORTANT** The password can be changed only by an **ADMIN** user.

1. Select the wheel icon > **Administration**.

The screenshot shows a dark-themed administration menu. At the top right, there are icons for help, notifications (4), settings, and a user profile labeled 'admin'. Below the top bar is a horizontal navigation bar with links: 'License Manager', 'Agent Management', 'Software Updates', 'Application Settings', and 'Administration'. The 'Administration' link is highlighted with a red circle and a hand cursor icon.

A separate browser page opens, displaying all access control settings.

2. From the Manage section, select **Users**.

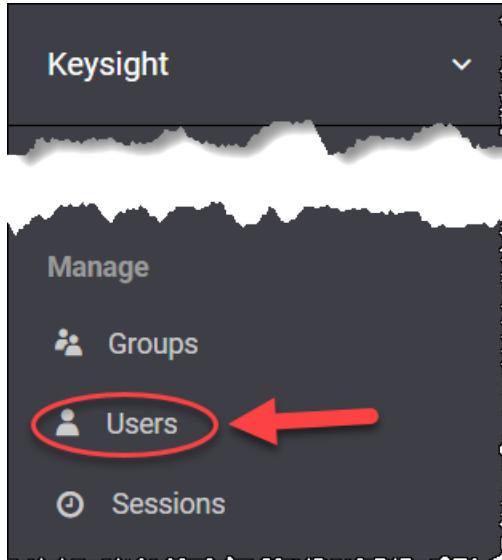

The Users section is displayed.

- From the Lookup tab, use the search function to find a specific user or select **View all users** to display all users and, then, select it from the list.

ID	Username	Email	Last Name	First Name	Actions
2527e098-9acd-48a9-8ab...	admin	admin@example.org	Admin	Default	<a href="#">Edit</a> <a href="#">Delete</a>
1a0287b9-9345-4858-b7b...	tester				<a href="#">Edit</a> <a href="#">Delete</a>

Select the **Edit** action for the user that needs a password reset. The user's profile section is displayed.

- Select **Credentials**.

Tester

- Details
- Attributes
- Credentials**
- Role Mappings
- Groups
- Consents
- Sessions

ID: 1a0287b9-9345-4858-b7b6-f49d245a3a61

Created At: 4/18/22 12:59:58 PM

Username: tester


- Set the new password and select **Set Password** in order to apply the changes.

The screenshot shows the 'Manage Credentials' section for the 'Tester' user. It includes fields for 'Position', 'Type', 'User Label', and 'Data'. Below this, there's a 'Set Password' section with fields for 'Password' and 'Password Confirmation', both containing placeholder dots. A 'Temporary' toggle switch is set to 'ON'. At the bottom is a large 'Set Password' button, which is circled in red.

## Configure LoadCore with LDAP/AD

This section describes the steps needed in order to configure LoadCore with LDAP/AD:

1. Select the wheel icon > **Administration**.

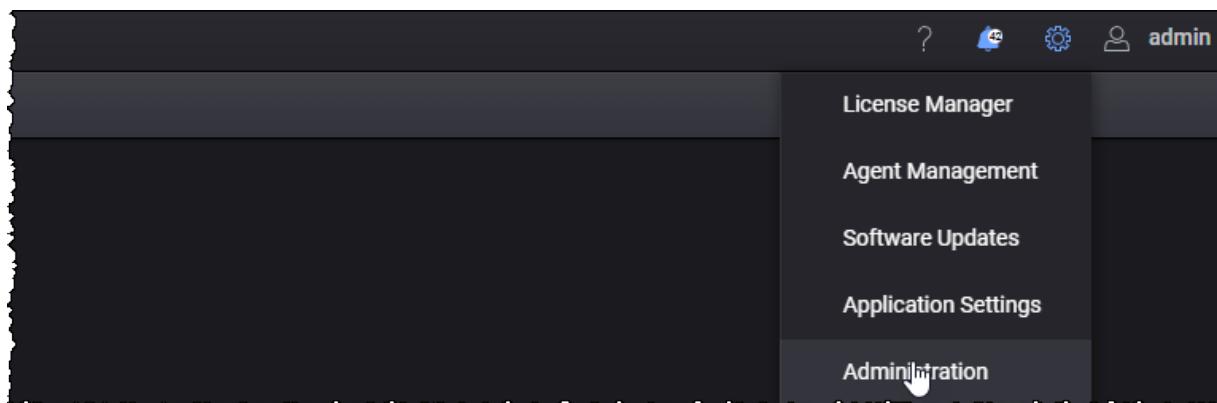

A separate browser page opens displaying all access control settings.

2. Add a default group. Default groups allow you to automatically assign group membership to users.

First, you need to create a new group and set up the default group's role for assigned every Active Directory's user role.


Then, to make it as a default group:

### 3. Add a provider.

To perform these actions you must be logged in as a realm administrator or super user. You will need access to the server logs. You may require help from your companies AD team.

To begin configuring a LDAP identity provider, go to User Federation and select **LDAP** from the drop down list.

The LDAP settings should look like the following:

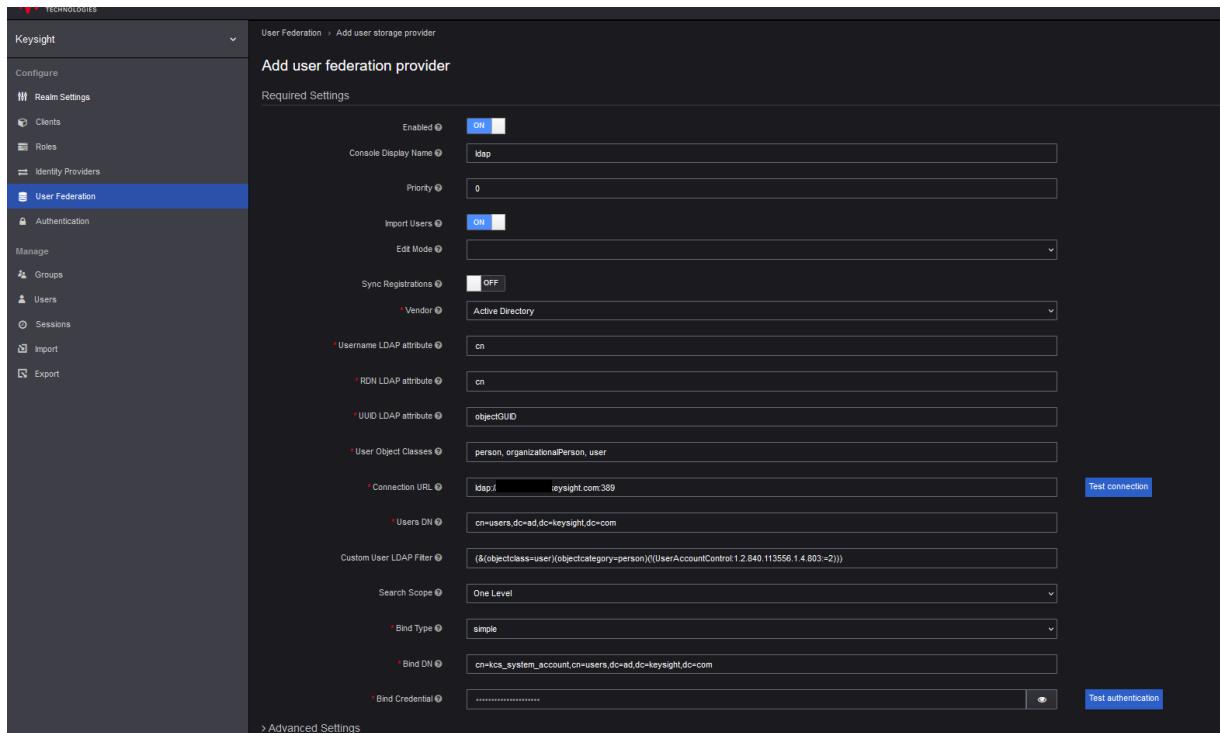

- **Vendor** - The most important setting is the Vendor drop down, which will fill the page with default values for different LDAP providers. Options include **Active Directory**, **Red Hat Directory Server**, **Tivoli**, **Novell eDirectory** and **Others**. You may need to ask your LDAP administrator.
- **Edit Mode** - Edit Mode must be set to **UNSYNCED** for the Terms & Conditions acceptance to work.
- **Username LDAP attribute** - Name of the LDAP attribute that will be mapped to the Keycloak username. Active Directory installations may use **cn** or **sAMAccountName**. Others often use **uid**.
- **RDN LDAP attribute** - Name of the LDAP attribute that will be used as the RDN for a typical user DN lookup. This is often the same as the above **Username LDAP attribute**, but does not have to be. For example, Active Directory installations may use **cn** for this attribute while using **sAMAccountName** for the Username LDAP attribute.
- **UUID LDAP attribute** - Name of an LDAP attribute that will be unique to all users in the tree. For example, Active Directory installations should use **objectGUID**. Other LDAP vendors typically define a UUID attribute, but if your implementation does not have one, any other unique attribute (such as **uid** or **entryDN**) may be used.
- **User Object Classes** - Values of the LDAP objectClass attributes for users, separated by a comma. This is used in the search term for looking up existing LDAP users, and if read-write sync is enabled, new users will be added to LDAP with these objectClass values as well.
- **Connection Url** - This will have been provided by the AD contact. Note that "l" in the middle is an "el", as in "ldap".
- **Users DN** - Example: cn=users:dc=ad,dc=keysight,dc=com
- **Custom User LDAP filter** - format : (logic (condition 1) (condition 2) ... (condition n))

Logic	Symbol
AND	&
OR	
NOT	!


For Example:

(&(objectclass=user) (objectcategory=person) (! (UserAccountControl:1.2.840.113556.1.4.803:=2))) means "User AND Person AND Not Account Disabled"


It reduced Users number from 26185 to 21262 in Keysight Active Directory on 10/12/2020.

Refer to [Active Directory User Related Searches](#) for more details.

- **Test Connection** - This button allows you to test if your connection to the LDAP server is correctly configured. After selecting the **Test connection** button, success is indicated by a success message on the top of the page.




- **Test Authentication** - This button allows you to test if connection is correctly authenticated. After selecting the **Test Authentication** button success is indicated by a success message on the top of the page.



**IMPORTANT** Make sure that Edit Mode is set to **UNSYNCED**. Without this, new users will get an error and not be able to log in when they accept the EULA.

#### 4. Configure synchronization settings.

If you have a large number of users to import, it can be helpful to set up batch synchronization and periodic updates.

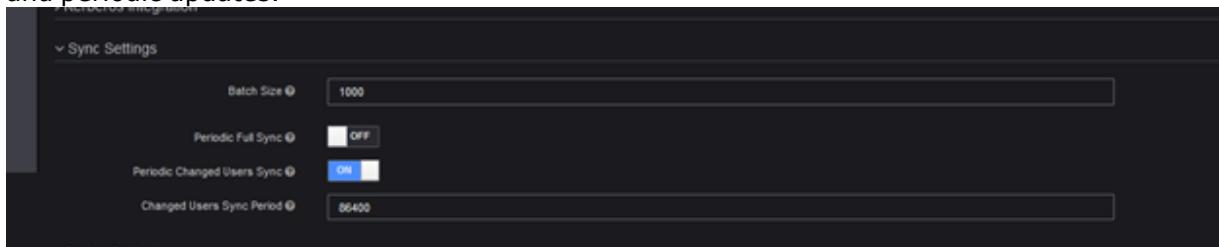

#### 5. Configure LDAP mapper.

After saving the initial configuration, you can add extra user information (country, department, state and title).

#### 6. Select the **Synchronize all users** button. The success message will be displayed on the top of the page.



Success! Sync of users finished successfully. 0 imported users, 3355 updated users



**IMPORTANT**

It takes a long time to do a full synchronization. Wait until the success or failed message is displayed.

This page intentionally left blank.

*CHAPTER 13*

## Passthrough testing

---

Although LoadCore is designed to internally generate simulated IP traffic, it also enables a test environment in which you configure external traffic sources in your test network. This is called passthrough testing because the external traffic is transmitted to and processed by the LoadCore test engine, bypassing the internal IP traffic generation process (*Objectives* configuration).

**Topics:**

<b>Overview of passthrough testing .....</b>	<b>1323</b>
<b>Passthrough test configuration notes .....</b>	<b>1324</b>

# Overview of passthrough testing

## Supported test topologies

The following LoadCore test types (topologies) support the use of passthrough testing:

- Full Core
- NG-RAN Simulation
- UPF Isolation
- IPsec NG-RAN


## Functional overview

In each supported test topology, you can configure passthrough on the NG-RAN and on the UPF (and also on the SMF in the UPF Isolation topology). A given test may configure either or both. The following steps give a summary of the test setup and execution when both passthrough interfaces are configured.

1. Create a new test or modify a previously-created test.
2. Configure a passthrough interface on the NG-RAN.  
This is the interface on which the NG-RAN will receive traffic from your external traffic source.
3. Configure a UE range with the IP address set to your external traffic source.
 

**NOTE** Both passthrough traffic and User Plane objectives traffic can work simultaneously. If you want only passthrough traffic, then there is no need to configure any traffic objectives.
4. Configure a passthrough interface on the UPF.  
This is the N6 interface over which the UPF sends packets to and receives packets from your external DN node.
5. Configure network routes on the traffic generators. If you are using the LoadCore sgi-client/sgi-server applications as traffic generators, the network routes must be added via REST API. If you are using third-party traffic generators, you must make sure that the network routes are configured correctly.
6. Once the test starts, the NG-RAN receives IP packets from your external traffic source, encapsulates the packets (adding a GTP-U header), and forwards them over the N3 interface towards the UPF.
7. The UPF removes the GTP-U header from the packets and forward them over the N6 interface towards the external DN node.
8. Your external DN node generates IP packets and forwards them to the UPF over the N6 interface.
9. The UPF encapsulates the packets (adding GTP-U headers) and forwards them over the N3 interface towards the NG-RAN, where they will be decapsulated and sent to the destination node.

The following illustration shows the location of the passthrough interfaces in the UPF Isolation topology:

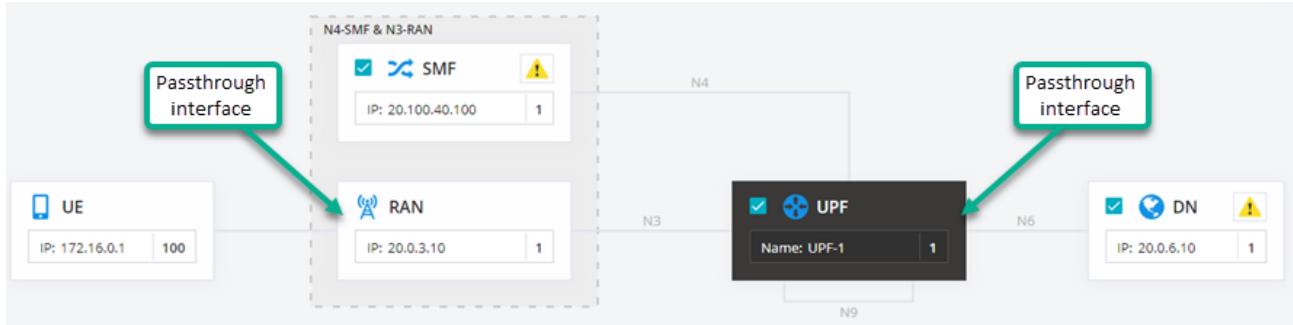

## Passthrough test configuration notes

This topic summarizes the test configuration actions that are unique to and required by passthrough tests.

- [RAN settings](#)
- [UE settings](#)
- [UPF settings](#)
- [N4-SMF & N3-RAN settings](#)
- [For more information](#)

### RAN settings

The RAN settings are the same for each of the test types that support passthrough testing.

 <b>RAN</b>	<ul style="list-style-type: none"> <li>• From the RAN <b>Range Settings</b>, select <b>Passthrough Interface Settings</b>, then select the <b>Connectivity Settings</b>. The <i>IP Address</i> that you configure will be the IP gateway address for the traffic sent from the external traffic source.</li> <li>• From the topology window, select the agent icon to open the <b>RAN Agent Assignment</b> window. In the <b>Passthrough Device</b> column, select a device that is not used by another interface in that test. This is the device from which the traffic is sent.</li> </ul>
--	---

### UE settings

The UE settings are the same for each of the test types that support passthrough testing.

 <b>UE</b>	<ul style="list-style-type: none"> <li>• From the UE <b>Range Settings</b>, select <b>Settings</b>, then select the <i>Enable Passthrough</i> option.</li> <li>• Configure Objectives if you want to simultaneously send Objectives-defined traffic and passthrough traffic. If you want to send only passthrough traffic, then there is no need to configure Objectives.</li> </ul>
---	--


## UPF settings

The UPF settings are the same for each of the test types that support passthrough testing.

 UPF	<ul style="list-style-type: none"> <li>From the UPF <b>Range Settings</b>, select <b>N6 Interface Settings</b>, then select the <b>Connectivity Settings</b>. The <i>IP Address</i> that you configure will be the IP gateway address for the external server.</li> <li>From the topology window, select the agent icon to open the <b>UPF Agent Assignment</b> window. In the <b>N6</b> column, select a device that is the DN destination for the traffic originating from the external client node. Select a device that is not used by another interface in that test.</li> </ul>
---	---

## N4-SMF & N3-RAN settings

The UPF Isolation test type supports configuration of a passthrough interface, as follows:

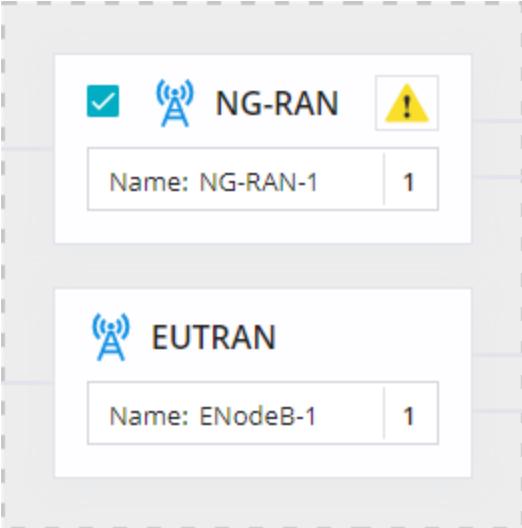	<ul style="list-style-type: none"> <li>From the RAN <b>Range Settings</b>, select <b>Passthrough Interface Settings</b>, then select the <b>Connectivity Settings</b>. The <i>IP Address</i> that you configure will be the IP gateway address for the traffic sent from the external traffic source.</li> <li>From the topology window, select the agent icon to open the <b>Agent Assignment</b> window. In the <b>Passthrough Device</b> column, select a device for this interface.</li> </ul>
--	--

## For more information

### Full Core topology:

- [Passthrough interface settings](#)
- [UE Settings settings](#)
- [UPF N6 interface settings](#)

### UPF Isolation:

- [Passthrough interface settings](#)
- [UE range settings](#)
- [UPF N6 interface settings](#)

## APPENDIX A

# 5G abbreviations

---

The following list of abbreviations is based on the 3GPP technical specifications.

<b>Abbreviation</b>	<b>Description</b>
5GC	5G Core Network
5GS	Fifth Generation System
5G-AN	5G Access Network
5G-EIR	5G-Equipment Identity Register
5G-GUTI	5G Globally Unique Temporary Identifier
5G-S-TMSI	5G S-Temporary Mobile Subscription Identifier
5QI	5G QoS Identifier
ADC	Application Detection and Control
AF	Application Function
AMBR	Aggregate Maximum Bit Rate
AMF	Access and Mobility Management Function
AN	Access Network
ARP	Allocation Retention Priority
AS	Access Stratum
AUSF	Authentication Server Function
BAR	Buffering Action Rule
BSF	Binding Support Function
CAPIF	Common API Framework for 3GPP northbound APIs
CHF	Charging Function
CIDR	Classless Inter-Domain Routing

<b>Abbreviation</b>	<b>Description</b>
CN	Core Network
CP	Control Plane
DL	Downlink
DN	Data Network
DNAI	Data Network Access Identifier
DNN	Data Network Name
DRX	Discontinuous Reception
E-UTRAN	Evolved UMTS Terrestrial Radio Access Network (LTE)
EBI	EPS Bearer Identity
eMBB	enhanced Mobile Broadband
ePDG	evolved Packet Data Gateway
FAR	Forwarding Action Rule
FQDN	Fully Qualified Domain Name
F-TEID	Fully-qualified Tunnel Endpoint Identifier
GBR	Guaranteed Bit Rate
GFBR	Guaranteed Flow Bit Rate
GMLC	Gateway Mobile Location Centre
gNB	Fifth generation NodeB (gNode)
GPSI	Generic Public Subscription Identifier
GSM	Global System for Mobile communications
GUAMI	Globally Unique AMF Identifier
HPLMN	Home Public Land Mobile Network
HR	Home Routed (roaming)
I-UPF	Intermediate UPF
IMS	IP Multimedia Subsystem
iRAT	inter-RAT (Radio Access Technology)

<b>Abbreviation</b>	<b>Description</b>
ITU	International Telecommunication Union
LADN	Local Area Data Network
LBO	Local Break Out (roaming)
LMF	Location Management Function
LRF	Location Retrieval Function
MBR	Maximum Bit Rate
MCX	Mission Critical Service
MDBV	Maximum Data Burst Volume
MEC	Multi-access Edge Computing (also, Mobile Edge Computing)
MFBR	Maximum Flow Bit Rate
MICO	Mobile Initiated Connection Only
MPS	Multimedia Priority Service
MSISDN	Mobile Station International Subscriber Directory Number
N3IWF	Non-3GPP InterWorking Function
NAI	Network Access Identifier
NAS	Non Access Stratum
NEF	Network Exposure Function
NF	Network Function
NGAP	Next Generation Application Protocol
NR	New Radio
NRF	Network Repository Function
NSI	ID Network Slice Instance Identifier
NSSAI	Network Slice Selection Assistance Information
NSSF	Network Slice Selection Function
NSSP	Network Slice Selection Policy
NVF	Network Function Virtualization

<b>Abbreviation</b>	<b>Description</b>
NWDAF	Network Data Analytics Function
PCC	Policy and Charging Control
PCF	Policy Control Function
PDN	Packet Data Network
PDR	Packet Detection Rule
PDU	Protocol Data Unit
PEI	Permanent Equipment Identifier
PER	Packet Error Rate
PFCP	Packet Forwarding Control Protocol
PFD	Packet Flow Description
PLMN	Public Land Mobile Network
PPD	Paging Policy Differentiation
PPF	Paging Proceed Flag
PPI	Paging Policy Indicator
PSA	PDU Session Anchor
SCP	Service Communication Proxy
QCI	QoS Class Identifier
QER	QoS Enforcement Rule
QFI	QoS Flow Identifier
QoE	Quality of Experience
QoS	Quality of Service
(R)AN	(Radio) Access Network
RAT	Radio Access Technology
RQA	Reflective QoS Attribute
RQI	Reflective QoS Indication
RRC	Radio Resource Control

<b>Abbreviation</b>	<b>Description</b>
RTP	Real-time Transport Protocol
SA NR	Standalone New Radio
SBA	Service Based Architecture
SBI	Service Based Interface
SCTP	Stream Control Transmission Protocol
SD	Slice Differentiator
SDAP	Service Data Adaptation Protocol
SDF	Service Data Flow
SDM	Subscriber Data Management
SDN	Software-Defined Networking
SEAF	Security Anchor Functionality
SEPP	Security Edge Protection Proxy
SLAAC	Stateless Address Auto-configuration
SMF	Session Management Function
SMSF	Short Message Service Function
S-NSSAI	Single Network Slice Selection Assistance Information
SPGW	Serving/Packet Data Network Gateway
SSC	Session and Service Continuity
SST	Slice/Service Type
SUCI	Subscription Concealed Identifier
SUPI	Subscription Permanent Identifier
TA	Tracking Area
TAC	Tracking Area Code
TAI	Tracking Area Identity
TEID	Tunnel Endpoint Identifier
TNL	Transport Network Layer

<b>Abbreviation</b>	<b>Description</b>
TNLA	Transport Network Layer Association
TSP	Traffic Steering Policy
UDM	Unified Data Management
UDR	Unified Data Repository
UDSF	Unstructured Data Storage Function
UL	Uplink
ULCL	Uplink Classifier
UP	User Plane
UPF	User Plane Function
URR	Usage Reporting Rules
URSP	UE Route Selection Policy
USIM	UMTS Subscriber Identify Module
VID	VLAN Identifier
VLAN	Virtual Local Area Network
VoNR	Voice over New Radio

## APPENDIX B

# Predefined Applications

---

The following table describes the available Predefined Applications.

Application	Description
Adobe Reader Updates Chrome	This application simulates Adobe Reader Updates web application with the Google Chrome browser.
Adobe Reader Updates Firefox	This application simulates Adobe Reader Updates web application with the Google Firefox browser.
Adobe Reader Updates Internet Explorer	This application simulates Adobe Reader Updates web application with the Google Internet Explorer browser.
Adobe Reader Updates Microsoft Edge	This application simulates Adobe Reader Updates web application with the Google Microsoft Edge browser.
ADP Chrome	This application simulates ADP web application with the Chrome browser.
ADP Firefox	This application simulates ADP web application with the Firefox browser.
ADP Internet Explorer	This application simulates ADP web application with the Internet Explorer browser.
ADP Microsoft Edge	This application simulates ADP web application with the Microsoft Edge browser.
Airbnb Chrome	This application simulates Airbnb web application with the Google Chrome browser.
Airbnb Firefox	This application simulates Airbnb web application with the Mozilla Firefox browser.
Airbnb Internet Explorer	This application simulates Airbnb web application with the Internet Explorer browser.
Airbnb Microsoft Edge	This application simulates Airbnb web application with the Microsoft Edge browser.
appointy Chrome	This application simulates appointy web application with the Chrome browser.
appointy Firefox	This application simulates appointy web application with the Firefox browser.
appointy Internet Explorer	This application simulates appointy web application with the Internet Explorer browser.
appointy Microsoft	This application simulates appointy web application with the Microsoft Edge browser.

<b>Application</b>	<b>Description</b>
Edge	browser.
AWS Console Chrome	This application simulates AWS Console web application with the Chrome browser.
AWS Console Firefox	This application simulates AWS Console web application with the Firefox browser.
AWS Console Internet Explorer	This application simulates AWS Console web application with the Internet Explorer browser.
AWS Console Microsoft Edge	This application simulates AWS Console web application with the Microsoft Edge browser.
AWS S3 Chrome	This application simulates AWS S3 web application with the Google Chrome browser.
AWS S3 Firefox	This application simulates AWS S3 web application with the Mozilla Firefox browser.
AWS S3 Internet Explorer	This application simulates AWS S3 web application with the Internet Explorer browser.
AWS S3 Microsoft Edge	This application simulates AWS S3 web application with the Microsoft Edge browser.
Baidu Chrome	This application simulates Baidu web application with the Chrome browser.
Baidu Firefox	This application simulates Baidu web application with the Firefox browser.
Baidu Internet Explorer	This application simulates Baidu web application with the Internet Explorer browser.
Baidu Maps Chrome	This application simulates Baidu Maps web application with the Google Chrome browser.
Baidu Maps Firefox	This application simulates Baidu Maps web application with the Mozilla Firefox browser.
Baidu Maps Internet Explorer	This application simulates Baidu Maps web application with the Internet Explorer browser.
Baidu Maps Microsoft Edge	This application simulates Baidu Maps web application with the Microsoft Edge browser.
Baidu Microsoft Edge	This application simulates Baidu web application with the Microsoft Edge browser.
Bilibili Chrome	This application simulates Bilibili web application with the Google Chrome browser.

<b>Application</b>	<b>Description</b>
Bilibili Firefox	This application simulates Bilibili web application with the Mozilla Firefox browser.
Bilibili Internet Explorer	This application simulates Bilibili web application with the Internet Explorer browser.
Bilibili Microsoft Edge	This application simulates Bilibili web application with the Microsoft Edge browser.
Cisco Spark Chrome	This application simulates Cisco Spark web application with the Chrome browser.
Cisco Spark Firefox	This application simulates Cisco Spark web application with the Firefox browser.
Cisco Spark Internet Explorer	This application simulates Cisco Spark web application with the Internet Explorer browser.
Cisco Spark Microsoft Edge	This application simulates Cisco Spark web application with the Microsoft Edge browser.
Commvault Chrome	This application simulates Commvault web application with the Google Chrome browser.
Commvault Firefox	This application simulates Commvault web application with the Mozilla Firefox browser.
Commvault Internet Explorer	This application simulates Commvault web application with the Internet Explorer browser.
Commvault Microsoft Edge	This application simulates Commvault web application with the Microsoft Edge browser.
Crawling Wikipedia (Chinese) Chrome	This application simulates Crawling Wikipedia (Chinese) web application with the Chrome browser.
Crawling Wikipedia (Chinese) Firefox	This application simulates Crawling Wikipedia (Chinese) web application with the Firefox browser
Crawling Wikipedia (Chinese) Internet Explorer	This application simulates Crawling Wikipedia (Chinese) web application with the Internet Explorer browser.
Crawling Wikipedia (Chinese) Microsoft Edge	This application simulates Crawling Wikipedia (Chinese) web application with the Microsoft Edge browser.

<b>Application</b>	<b>Description</b>
DocuSign Chrome	This application simulates DocuSign web application with the Google Chrome browser.
DocuSign Firefox	This application simulates DocuSign web application with the Mozilla Firefox browser.
DocuSign Internet Explorer	This application simulates DocuSign web application with the Internet Explorer browser.
DocuSign Microsoft Edge	This application simulates DocuSign web application with the Microsoft Edge browser.
Dreambox Chrome	This application simulates Dreambox web application with the Google Chrome browser.
Dreambox Firefox	This application simulates Dreambox web application with the Mozilla Firefox browser.
Dreambox Internet Explorer	This application simulates Dreambox web application with the Internet Explorer browser.
Dreambox Microsoft Edge	This application simulates Dreambox web application with the Microsoft Edge browser.
eBanking Chrome to Apache	This application simulates a banking web application with the Google Chrome browser connecting to an Apache web server. The user registers, logs into the website and performs common actions like viewing transactions, accounts and opening the contact page ended with logout.
eBanking Firefox to IIS	This application simulates a banking web application with the Mozilla Firefox browser connecting to an IIS web server. The user registers, logs into the website and performs common actions like viewing transactions, accounts and opening the contact page ended with logout.
eBanking Internet Explorer to Nginx	This application simulates a banking web application with the Internet Explorer browser connecting to an Nginx web server. The user registers, logs into the website and performs common actions like viewing transactions, accounts and opening the contact page ended with logout.
eBanking Microsoft Edge to Apache	This application simulates a banking web application with the Microsoft Edge browser connecting to an Apache web server. The user registers, logs into the website and performs common actions like viewing transactions, accounts and opening the contact page ended with logout.
EpixNow Chrome	This application simulates EpixNow web application with the Google Chrome browser.
EpixNow Firefox	This application simulates EpixNow web application with the Mozilla Firefox browser.

<b>Application</b>	<b>Description</b>
EpixNow Internet Explorer	This application simulates EpixNow web application with the Internet Explorer browser.
EpixNow Microsoft Edge	This application simulates EpixNow web application with the Microsoft Edge browser.
eShop Chrome to Apache	This application simulates an online shop web application with the Google Chrome browser connecting to an Apache web server. The user searches for a product, views information about it, logs in, adds a product to the cart, deletes it from the cart and then logs out.
eShop Firefox to IIS	This application simulates an online shop web application with the Mozilla Firefox browser connecting to an IIS web server. The user searches for a product, views information about it, logs in, adds a product to the cart, deletes it from the cart and then logs out.
eShop Internet Explorer to Nginx	This application simulates an online shop web application with the Internet Explorer browser connecting to an Nginx web server. The user searches for a product, views information about it, logs in, adds a product to the cart, deletes it from the cart and then logs out.
eShop Microsoft Edge to Apache	This application simulates an online shop web application with the Microsoft Edge browser connecting to an Apache web server. The user searches for a product, views information about it, logs in, adds a product to the cart, deletes it from the cart and then logs out.
Facebook Audio Chrome	This application simulates Facebook Audio web application with the Google Chrome browser.
Facebook Audio Firefox	This application simulates Facebook Audio web application with the Mozilla Firefox browser.
Facebook Audio Internet Explorer	This application simulates Facebook Audio web application with the Internet Explorer browser.
Facebook Audio Microsoft Edge	This application simulates Facebook Audio web application with the Microsoft Edge browser.
Facebook Chrome	This application simulates Facebook web application with the Google Chrome browser.
Facebook Firefox	This application simulates Facebook web application with the Mozilla Firefox browser.
Facebook Internet Explorer	This application simulates Facebook web application with the Internet Explorer browser.
Facebook Microsoft Edge	This application simulates Facebook web application with the Microsoft Edge browser.

<b>Application</b>	<b>Description</b>
FacebookLive Chrome	This application simulates FacebookLive web application with the Google Chrome browser.
FacebookLive Firefox	This application simulates FacebookLive web application with the Mozilla Firefox browser.
FacebookLive Internet Explorer	This application simulates FacebookLive web application with the Internet Explorer browser.
FacebookLive Microsoft Edge	This application simulates FacebookLive web application with the Microsoft Edge browser.
Gab Chrome	This application simulates Gab web application with the Google Chrome browser.
Gab Firefox	This application simulates Gab web application with the Mozilla Firefox browser.
Gab Internet Explorer	This application simulates Gab web application with the Internet Explorer browser.
Gab Microsoft Edge	This application simulates Gab web application with the Microsoft Edge browser.
Gaode Maps Chrome	This application simulates Gaode Maps web application with the Google Chrome browser.
Gaode Maps Firefox	This application simulates Gaode Maps web application with the Mozilla Firefox browser.
Gaode Maps Internet Explorer	This application simulates Gaode Maps web application with the Internet Explorer browser.
Gaode Maps Microsoft Edge	This application simulates Gaode Maps web application with the Microsoft Edge browser.
Google Classroom Chrome	This application simulates Google Classroom web application with the Chrome browser.
Google Classroom Firefox	This application simulates Google Classroom web application with the Firefox browser.
Google Classroom Internet Explorer	This application simulates Google Classroom web application with the Internet Explorer browser.
Google Classroom Microsoft Edge	This application simulates Google Classroom web application with the Microsoft Edge browser.
Google Drive Chrome	This application simulates Google Drive web application with the Google Chrome browser.

<b>Application</b>	<b>Description</b>
Google Drive Firefox	This application simulates Google Drive web application with the Mozilla Firefox browser.
Google Drive Internet Explorer	This application simulates Google Drive web application with the Internet Explorer browser.
Google Drive Microsoft Edge	This application simulates Google Drive web application with the Microsoft Edge browser.
Google Sheets Chrome	This application simulates Google Sheets web application with the Chrome browser.
Google Sheets Firefox	This application simulates Google Sheets web application with the Firefox browser.
Google Sheets Internet Explorer	This application simulates Google Sheets web application with the Internet Explorer browser.
Google Sheets Microsoft Edge	This application simulates Google Sheets web application with the Microsoft Edge browser.
Google Slides Chrome	This application simulates Google Slides web application with the Chrome browser.
Google Slides Firefox	This application simulates Google Slides web application with the Firefox browser.
Google Slides Internet Explorer	This application simulates Google Slides web application with the Internet Explorer browser.
Google Slides Microsoft Edge	This application simulates Google Slides web application with the Microsoft Edge browser.
GoogleHangouts Chrome	This application simulates GoogleHangouts web application with the Chrome browser.
GoogleHangouts Firefox	This application simulates GoogleHangouts web application with the Firefox browser.
GoogleHangouts Internet Explorer	This application simulates GoogleHangouts web application with the Internet Explorer browser.
GoogleHangouts Microsoft Edge	This application simulates GoogleHangouts web application with the Microsoft Edge browser.
GooglePhotos Chrome	This application simulates GooglePhotos web application with the Chrome browser.
GooglePhotos Firefox	This application simulates GooglePhotos web application with the Firefox browser.

<b>Application</b>	<b>Description</b>
GooglePhotos Internet Explorer	This application simulates GooglePhotos web application with the Internet Explorer browser.
GooglePhotos Microsoft Edge	This application simulates GooglePhotos web application with the Microsoft Edge browser.
HTTP App	This application simulates a generic HTTP application.
Jingdong Chrome	This application simulates Jingdong web application with the Google Chrome browser.
Jingdong Firefox	This application simulates Jingdong web application with the Mozilla Firefox browser.
Jingdong Internet Explorer	This application simulates Jingdong web application with the Internet Explorer browser.
Jingdong Microsoft Edge	This application simulates Jingdong web application with the Microsoft Edge browser.
Jira Chrome	This application simulates Jira web application with the Chrome browser.
Jira Firefox	This application simulates Jira web application with the Firefox browser.
Jira Internet Explorer	This application simulates Jira web application with the Internet Explorer browser.
Jira Microsoft Edge	This application simulates Jira web application with the Microsoft Edge browser.
League of Legends Chrome	This application simulates League of Legends web application with the Google Chrome browser.
League of Legends Firefox	This application simulates League of Legends web application with the Mozilla Firefox browser.
League of Legends Internet Explorer	This application simulates League of Legends web application with the Internet Explorer browser.
League of Legends Microsoft Edge	This application simulates League of Legends web application with the Microsoft Edge browser.
Mail.ru Chrome	This application simulates Mail.ru web application with the Chrome browser.
Mail.ru Firefox	This application simulates Mail.ru web application with the Firefox browser.
Mail.ru Internet Explorer	This application simulates Mail.ru web application with the Internet Explorer browser.
Mail.ru Microsoft Edge	This application simulates Mail.ru web application with the Microsoft Edge browser.

<b>Application</b>	<b>Description</b>
Meraki Chrome	This application simulates Meraki web application with the Google Chrome browser.
Meraki Firefox	This application simulates Meraki web application with the Mozilla Firefox browser.
Meraki Internet Explorer	This application simulates Meraki web application with the Internet Explorer browser.
Meraki Microsoft Edge	This application simulates Meraki web application with the Microsoft Edge browser.
Mewe Chrome	This application simulates Mewe web application with the Google Chrome browser.
Mewe Firefox	This application simulates Mewe web application with the Mozilla Firefox browser.
Mewe Internet Explorer	This application simulates Mewe web application with the Internet Explorer browser.
Mewe Microsoft Edge	This application simulates Mewe web application with the Microsoft Edge browser.
MongoDB	This application simulates the MongoDB, a cross-platform document-oriented database.
Netease Music Chrome	This application simulates Netease Music web application with the Google Chrome browser.
Netease Music Firefox	This application simulates Netease Music web application with the Mozilla Firefox browser.
Netease Music Internet Explorer	This application simulates Netease Music web application with the Internet Explorer browser.
Netease Music Microsoft Edge	This application simulates Netease Music web application with the Microsoft Edge browser.
Office 365 Outlook People Chrome	This application simulates Office 365 Outlook People web application with the Chrome browser.
Office 365 Outlook People Firefox	This application simulates Office 365 Outlook People web application with the Firefox browser.
Office 365 Outlook People Internet Explorer	This application simulates Office 365 Outlook People web application with the Internet Explorer browser.
Office 365 Outlook	This application simulates Office 365 Outlook People web application with the

<b>Application</b>	<b>Description</b>
People Microsoft Edge	Microsoft Edge browser.
Office365 Excel Chrome	This application simulates Office365 Excel web application with the Google Chrome browser.
Office365 Excel Firefox	This application simulates Office365 Excel web application with the Mozilla Firefox browser.
Office365 Excel Internet Explorer	This application simulates Office365 Excel web application with the Internet Explorer browser.
Office365 Excel Microsoft Edge	This application simulates Office365 Excel web application with the Microsoft Edge browser.
Office365 OneDrive Chrome	This application simulates Office365 OneDrive web application with the Google Chrome browser.
Office365 OneDrive Firefox	This application simulates Office365 OneDrive web application with the Mozilla Firefox browser.
Office365 OneDrive Internet Explorer	This application simulates Office365 OneDrive web application with the Internet Explorer browser.
Office365 OneDrive Microsoft Edge	This application simulates Office365 OneDrive web application with the Microsoft Edge browser.
Office365 Outlook Chrome	This application simulates Office365 Outlook web application with the Google Chrome browser.
Office365 Outlook Firefox	This application simulates Office365 Outlook web application with the Mozilla Firefox browser.
Office365 Outlook Internet Explorer	This application simulates Office365 Outlook web application with the Internet Explorer browser.
Office365 Outlook Microsoft Edge	This application simulates Office365 Outlook web application with the Microsoft Edge browser.
OK.ru Chrome	This application simulates OK.ru web application with the Chrome browser.
OK.ru Firefox	This application simulates OK.ru web application with the Firefox browser.
OK.ru Internet Explorer	This application simulates OK.ru web application with the Internet Explorer browser.
OK.ru Microsoft Edge	This application simulates OK.ru web application with the Microsoft Edge browser.

<b>Application</b>	<b>Description</b>
Portal Chrome to Apache	This application simulates a portal web application with the Google Chrome browser connecting to an Apache web server. The user logs into the website and performs common actions such as search and upload image before logs out.
Portal Firefox to IIS	This application simulates a portal web application with the Mozilla Firefox browser connecting to an IIS web server. The user logs into the website and performs common actions such as search and upload image before logs out.
Portal Internet Explorer to Nginx	This application simulates a portal web application with the Internet Explorer browser connecting to an Nginx web server. The user logs into the website and performs common actions such as search and upload image before logs out.
Portal Microsoft Edge to Apache	This application simulates a portal web application with the Microsoft Edge browser connecting to an Apache web server. The user logs into the website and performs common actions such as search and upload image before logs out.
Reddit Chrome	This application simulates Reddit web application with the Google Chrome browser.
Reddit Firefox	This application simulates Reddit web application with the Mozilla Firefox browser.
Reddit Internet Explorer	This application simulates Reddit web application with the Internet Explorer browser.
Reddit Microsoft Edge	This application simulates Reddit web application with the Microsoft Edge browser.
Salesforce Chrome	This application simulates Salesforce web application with the Chrome browser.
Salesforce Firefox	This application simulates Salesforce web application with the Firefox browser.
Salesforce Internet Explorer	This application simulates Salesforce web application with the Internet Explorer browser.
Salesforce Microsoft Edge	This application simulates Salesforce web application with the Microsoft Edge browser.
Service-Now Chrome	This application simulates Service-Now web application with the Google Chrome browser.
Service-Now Firefox	This application simulates Service-Now web application with the Mozilla Firefox browser.
Service-Now	This application simulates Service-Now web application with the Internet

<b>Application</b>	<b>Description</b>
Internet Explorer	Explorer browser.
Service-Now Microsoft Edge	This application simulates Service-Now web application with the Microsoft Edge browser.
Skype 8 Chrome	This application simulates Skype 8 web application with the Chrome browser.
Skype 8 Firefox	This application simulates Skype 8 web application with the Firefox browser.
Skype 8 Internet Explorer	This application simulates Skype 8 web application with the Internet Explorer browser.
Skype 8 Microsoft Edge	This application simulates Skype 8 web application with the Microsoft Edge browser.
Skype Chrome	This application simulates Skype web application with the Chrome browser.
Skype Firefox	This application simulates Skype web application with the Firefox browser.
Skype Internet Explorer	This application simulates Skype web application with the Internet Explorer browser.
Skype Microsoft Edge	This application simulates Skype web application with the Microsoft Edge browser.
SMTP	Emulates an SMTP Email session.
Social Network Chrome to Apache	This application simulates a social network web application with Google Chrome browser connecting to an Apache web server. The user logs into the website, performs common actions such as view profile, like post, unlike post, create a post, comment to a post and then logs out.
Social Network Firefox to IIS	This application simulates a social network web application with Mozilla Firefox browser connecting to an IIS web server. The user logs into the website, performs common actions such as view profile, like post, unlike post, create a post, comment to a post and then logs out.
Social Network Internet Explorer to Nginx	This application simulates a social network web application with Internet Explorer browser connecting to an Nginx web server. The user logs into the website, performs common actions such as view profile, like post, unlike post, create a post, comment to a post and then logs out.
Social Network Microsoft Edge to Apache	This application simulates a social network web application with Microsoft Edge browser connecting to an Apache web server. The user logs into the website, performs common actions such as view profile, like post, unlike post, create a post, comment to a post and then logs out.
Splunk Chrome	This application simulates Splunk web application with the Google Chrome browser.

<b>Application</b>	<b>Description</b>
Splunk Firefox	This application simulates Splunk web application with the Mozilla Firefox browser.
Splunk Internet Explorer	This application simulates Splunk web application with the Internet Explorer browser.
Splunk Microsoft Edge	This application simulates Splunk web application with the Microsoft Edge browser.
Tubi Chrome	This application simulates Tubi web application with the Chrome browser.
Tubi Firefox	This application simulates Tubi web application with the Firefox browser.
TWC Firefox	This application simulates TWC web application with the Firefox browser.
TWC Internet Explorer	This application simulates TWC web application with the Internet Explorer browser.
TWC Microsoft Edge	This application simulates TWC web application with the Microsoft Edge browser.
Video Platform Chrome to Apache	This application simulates a video platform web application with Google Chrome browser connecting to an Apache web server. The user logs into the website, performs common actions such as search video, download video, upload video, delete video, like video, unlike video and then logs out.
Video Platform Firefox to IIS	This application simulates a video platform web application with Mozilla Firefox browser connecting to an IIS web server. The user logs into the website, performs common actions such as search video, download video, upload video, delete video, like video, unlike video and then logs out.
Video Platform Internet Explorer to Nginx	This application simulates a video platform web application with Internet Explorer browser connecting to an Nginx web server. The user logs into the website, performs common actions such as search video, download video, upload video, delete video, like video, unlike video and then logs out.
Video Platform Microsoft Edge to Apache	This application simulates a video platform web application with Microsoft Edge browser connecting to an Apache web server. The user logs into the website, performs common actions such as search video, download video, upload video, delete video, like video, unlike video and then logs out.
VKontakte Chrome	This application simulates VKontakte web application with the Chrome browser.
VKontakte Firefox	This application simulates VKontakte web application with the Firefox browser.
VKontakte Internet Explorer	This application simulates VKontakte web application with the Internet Explorer browser.

<b>Application</b>	<b>Description</b>
Vkontakte Microsoft Edge	This application simulates VKontakte web application with the Microsoft Edge browser.
Yammer Chrome	This application simulates Yammer web application with the Google Chrome browser.
Yammer Firefox	This application simulates Yammer web application with the Mozilla Firefox browser.
Yammer Internet Explorer	This application simulates Yammer web application with the Internet Explorer browser.
Yammer Microsoft Edge	This application simulates Yammer web application with the Microsoft Edge browser.
YYLive Chrome	This application simulates YYLive web application with the Google Chrome browser.
YYLive Firefox	This application simulates YYLive web application with the Mozilla Firefox browser.
YYLive Internet Explorer	This application simulates YYLive web application with the Internet Explorer browser.
YYLive Microsoft Edge	This application simulates YYLive web application with the Microsoft Edge browser.

## APPENDIX C

# Application Actions

The following table lists the application actions and action parameters available in LoadCore.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
<i>Adobe Reader Updates</i>		
Check For Updates	Current Version	Displays the current version.
	Update Version	Displays the update version.
Download Updates	Update Version	Displays the current version.
<i>ADP</i>		
Load Main Paige	N/A	N/A
Load Login Information Page	N/A	N/A
Load Employee Login Page	N/A	N/A
<i>Airbnb</i>		
Load First Page	City	Set the city name.
	Country	Set the country name.
	Checkin date	Set the check-in date.
	Checkout Date	Set the check-out date.
Specify Search Criteria	City	Set the city name.
	State/province	Set the state/province name.
	Country	Set the country name.
	Checkin date	Set the check-in date.
	Checkout Date	Set the check-out date.
	Selected rental name	Set the selected rental name.
	Second selected rental	Set the second selected rental name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Select a Rental	Main rental photo	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Main rental photo (low resolution)	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Photo of host	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Photo 2 of rental	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Photo 3 of rental	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Photo 4 of rental	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
Photo 5 of rental		<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	City	Set the city name.
	State/province	Set the state/province name.
	Country	Set the country name.
	Checkin date	Set the check-in date.
	Checkout Date	Set the check-out date.
	Selected rental name	Set the selected rental name.
	Airbnb host name	Set the airbnb host name.
	Reviewer	Set the reviewer name.
	Second reviewer	Set the second reviewer name.
	Third reviewer	Set the third reviewer name.
View Rental Photos	Thumbnail photo of host	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Thumbnail photo of first reviewer	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Thumbnail photo of third reviewer	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	City	Set the city name.
	State/province	Set the state/province name.
	Country	Set the country name.
	Checkin date	Set the check-in date.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	Checkout Date	Set the check-out date.
View More Amenities	City	Set the city name.
	Country	Set the country name.
	Checkin date	Set the check-in date.
	Checkout Date	Set the check-out date.
View Hot Profile	Thumbnail photo of first reviewer	
View Second Property	Photo 3 of rental	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	City	Set the city name.
	State/province	Set the state/province name.
	Country	Set the country name.
	Checkin date	Set the check-in date.
	Checkout Date	Set the check-out date.
	Selected rental name	Set the selected rental name.
	Airbnb host name	Set the airbnb host name.
	Reviewer	Set the reviewer name.
	Second reviewer	Set the second reviewer name.
	Third reviewer	Set the third reviewer name.
	Second selected rental	Set the second selected rental name.
	Photo 1 of rental	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	Photo 4 of rental	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Photo 5 of rental	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	City	Set the city name.
	Second selected rental	Set the second selected rental name.
View the Calendar	N/A	N/A
<i>appointy</i>		
Load Login Page	User name	Set the user name.
Login	User name	Set the user name.
	Password	Provide the password
	Profession	Set the profession.
	City	Set the city name.
	State/Province	Set the state/province name.
	Staff member 1	Set the name of the first staff member.
	Staff member 2	Set the name of the second staff member.
	Customer 1 first name	Set the first name of Customer 1.
	Customer 1 last name	Set the last name of Customer 1.
	Customer 2 first name	Set the first name of Customer 2.
	Customer 2 last name	Set the last name of Customer 2.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Book New Customer	User name	Set the user name.
	Full manager name	Set the manager name.
	City	Set the city name.
	State/Province	Set the state/province name.
	Service	Set the service name.
	Staff member 1	Set the name of the first staff member.
	Customer 2 first name	Set the first name of Customer 2.
	Customer 2 last name	Set the last name of Customer 2.
View New Users Pulldown	User name	Set the user name.
View New Appointments Pulldown	User name	Set the user name.
Select Dashboard Tab	User name	Set the user name.
	Profession	Set the profession.
Select Reports Tab	User name	Set the user name.
View Week Calendar	User name	Set the user name.
View Customers Tab	User name	Set the user name.
	City	Set the city name.
	Customer 1 first name	Set the first name of Customer 1.
	Customer 1 last name	Set the last name of Customer 1.
	Customer 2 first name	Set the first name of Customer 2.
	Customer 2 last name	Set the last name of Customer 2.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Logout	User name	Set the user name.
<i>AWS Console</i>		
Load AWS Page	N/A	N/A
Load AWS Management Console	Region name	Set the region name.
Sign In	User email	Provide the user email.
	Password	Provide the password.
	User name	Set the user name.
	Region name	Set the region name.
Check Account Info	User email	Provide the user email.
	Region name	Set the region name.
Check Account Billing	User email	Provide the user email.
	Region name	Set the region name.
Check Credentials	Region name	Set the region name.
	Existing keyID 1	Provide the existing keyID 1.
	Existing keyID 2	Provide the existing keyID 2.
Create New Access Key	New KeyID	Set the new keyID.
Download Key file	New KeyID	Set the new keyID.
	Key file name	Set the key file name.
Delete Key	Existing keyID 1	Provide the existing keyID 1.
Sign Out	User email	Provide the user email.
	Region name	Set the region name.
<i>AWS S3</i>		

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Check Buckets Names	User email	Provide the user email.
	Region name	Set the region name.
	KeyID	Provide the keyID.
Create Buckets	Region name	Set the region name.
	KeyID	Set the keyID.
	Source bucket name	Set the source bucket name.
	Destination bucket name	Set the destination bucket name.
Upload File	Region name	Set the region name.
	KeyID	Set the keyID.
	Source bucket bame	Set the source bucket name.
	Local file name for upload	Select an option: <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
List Files	Region name	Set the region name.
	KeyID	Set the keyID.
	Source bucket name	Set the source bucket name.
	Source file name	Set the source file name.
Copy Files	Region name	Set the region name.
	KeyID	Set the keyID.
	Source bucket name	Set the source bucket name.
	Destination bucket name	Set the destination bucket name.
	Source file name	Set the source file name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Verify Copied Files	Region name	Set the region name.
	KeyID	Set the keyID.
	Destination bucket name	Set the destination bucket name.
Download Files	Region name	Set the region name.
	KeyID	Set the keyID.
	Source bucket name	Set the source bucket name.
	Source file name	Set the source file name.
Delete Files and Buckest	User email	Provide the user email.
	Region name	Set the region name.
	KeyID	Provide the keyID.
	Source bucket name	Set the source bucket name.
	Destination bucket name	Set the destination bucket name.
	Source file name	Set the source file name.
<i>Baidu</i>		
Access Baidu News	N/A	N/A
Access Baidu Maps	N/A	N/A
Access Baidu Pictures	N/A	N/A
Load Maine Paige	N/A	N/A
Search String	Search query	Provide the search criteria.
Search Image	Baidu search image file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Access Baidu Passport	N/A	N/A
<i>Baidu Maps</i>		
Load Web Page	N/A	N/A
Search a Place	Query string	Provide the search criteria.
Finding a route	Query string	Provide the search criteria.
	Source location	Set the search location.
	Destination location	Set the destination location.
<i>Bilibili</i>		
Open Bilibili Website	N/A	N/A
Login	Username	Provide the username.
	Password	Provide the password.
Search Video	Video name	Provide the video name.
Watch Video	N/A	N/A
Upload Video	Uploaded video title	Set the title for the uploaded video.
	Uploaded video file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Logout	N/A	N/A
<i>Cisco Spark</i>		
Start the Application	N/A	N/A
Click Get Started	N/A	N/A
Click Next	User email address	Provide the user's email address.
Click SignIn	The contact's	Provide the contact's first/last name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	first/last name	
	User email address	Provide the user's email address.
	The contact's email address	Provide the contact's email address.
	Password	Provide the password.
	User's first/last name	Provide the user's first/last name
Create a Team	User email address	Provide the user's email address.
Add Contact	The contact's first/last name	Provide the contact's first/last name.
	User email address	Provide the user's email address.
	The contact's email address	Provide the contact's email address.
Send Message	The contact's first/last name	Provide the contact's first/last name.
	User email address	Provide the user's email address.
	The contact's email address	Provide the contact's email address.
Send File	User email address	Provide the user's email address.
	User's first/last name	Provide the user's first/last name
Initiate a Call	The contact's first/last name	Provide the contact's first/last name.
	User email address	Provide the user's email address.
	The contact's email address	Provide the contact's email address.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Hang Up Call	The contact's first/last name	Provide the contact's first/last name.
	User email address	Provide the user's email address.
	The contact's email address	Provide the contact's email address.
Exit	N/A	N/A
<i>Commvault</i>		
Get Login Page	N/A	N/A
Login	User email	Provide the user's email address.
	Password	Provide the password.
View Drive	N/A	N/A
Create Folder	Created folder name	Set the name of the created folder.
Rename Folder	Folder name	Set the folder's new name.
Move File	Folder name	Provide the folder name.
Navigate To Folder	Folder name	Provide the folder name.
Upload File	Uploaded file name	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Download File	Downloaded file name	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Get Public Link	Folder ID	Provide the folder ID.
Move File To Trash	N/A	N/A
View Trash	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Restore File From Trash	Folder name	Provide the folder name.
Empty Trash	N/A	N/A
View Public Links	N/A	N/A
Deelte Public Link	Folder ID	Provide the folder ID.
Log Out	N/A	N/A
<i>Crawling Wikipedia (Chinese)</i>		
Crawl Link 1	Root URI	Set the root URI.
Crawl Link 2	Root URI	Set the root URI.
Crawl Link 3	Root URI	Set the root URI.
Crawl Link 4	Root URI	Set the root URI.
<i>DocuSign</i>		
Load Front Page	N/A	N/A
<i>Dreambox</i>		
Login	Login email address	Provide the login email address.
	Password	Provide the password.
Open Dashboard	N/A	N/A
Check Activity Status	From date	Set the starting date.
	To date	Set the end date.
Add Assignment	Select a grade	Set a grade.
	Select a category	Set a category.
	Short description	provide a short description.
Set Dreambox Game	N/A	N/A
Pause Dreambox Game	N/A	N/A
Quit Dreambox	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Game		
Logout	N/A	N/A
<i>eBanking</i>		
Sign Up	SignUp username	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	SignUp password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	SignUp confirm password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Login	Login username	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Login password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
View Transactions	N/A	N/A
View Accounts	N/A	N/A
Get Contact Page	N/A	N/A
Logout	N/A	N/A
<i>EpixNow</i>		

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Open Login Page	N/A	N/A
Login	Email	Provide the login email address.
	Password	Provide the password.
Browse Movies	Search keyword	Provide the search criteria.
Search Movies	Search keyword	Provide the search criteria.
Play	Search keyword	Provide the search criteria.
Logout	N/A	N/A
<i>eShop</i>		
Search Product	Product name	Provide the product name.
View Product	Product ID	Provide the product ID.
Login	Login username	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Login password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Add To Cart	N/A	N/A
Remove From Cart	N/A	N/A
Buy	Full name	Provide the full name.
	Address	Provide the address.
	Account number	Provide the account number.
Logout	N/A	N/A
<i>Facebook Audio</i>		
Open Home Page	N/A	N/A
Login	Encrypted	Provide the password.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	password	
	Email	Provide the login email address.
Create Audio Room	N/A	N/A
Join Audio Room	N/A	N/A
Leave Audio Room	N/A	N/A
Logout	N/A	N/A
<i>Facebook</i>		
Get Homepage	N/A	N/A
Sign In	User email	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User first name	Provide the first name.
	User second name	Provide the second name.
Open Notifications	N/A	N/A
Search Person	Search string	Provide the search criteria.
Add Friend	Friend first name	Provide the friend's first name.
	Friend second name	Provide the friend's second name.
Send Message	Message body	Provide the message.
	Recipient first name	Provide the recipient's first name.
	Recipient second name	Provide the recipient's second name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Send Message With Attachment	Message body	Provide the message.
	Recipient first name	Provide the recipient's first name.
	Recipient second name	Provide the recipient's second name.
	Filename	Provide the file name
	Upload File	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Download Attachment	Download file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Go To Profile	N/A	N/A
Post In News Feed	Post Message	Provide the message.
	Post file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Comment Post	Comment message	Provide the post message.
	Post author	Provide the post's author.
Delete Comment	Post author	Provide the post's author.
Like Post	N/A	N/A
Unlike Post	N/A	N/A
Sign Out	N/A	N/A
<i>FacebookLive</i>		

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Sign In	C_user cookie2	Set the value.
	C_user cookie	Set the value.
	User email address	Provide the user email address.
	Password	Provide the password.
	User name	Provide the username.
	Friend 1 first name	Provide the first name.
Start Live Stream	C_user cookie	Set the value.
	User name	Provide the username.
	Friend 1 first name	Provide the first name.
	Friend 3 first name	Provide the first name.
	Video stream ID	Set the video stream ID.
Sign Out	C_user cookie	Set the value.
	User email address	Provide the user email address.
	User name	Provide the username.
	Video stream ID	Set the video stream ID.
<i>Gab</i>		
Open Home Page	N/A	N/A
Open Login Page	N/A	N/A
Login	Email	Provide the email address.
	Password	Provide the password.
Read News	N/A	N/A
Post News	Statut text	Provide the message.
Logout	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
<i>Gaode Maps</i>		
Open Website	N/A	N/A
Search Location	Destination	Provide the destination.
Find Route	Destination	Provide the destination.
	Starting location	Provide the starting location.
	Transportation method	Provide the transportation method.
<i>Google Classroom</i>		
Load Homepage	N/A	N/A
Login	Username	Provide the username.
	User email	Provide the email address.
	User password	Provide the password.
	Student username	Provide the student's username.
	Student email	Provide the student's email address.
Create New Classroom	Username	Provide the username.
	User email	Provide the email address.
	Student username	Provide the student's username.
	Student email	Provide the student's email address.
	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.
Create New Post	Post text	Provide the text message.
Edit Post	Post text	Provide the text message.
Add Attachment to Post	Post attachment	Select an option:

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
		<ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Username	Provide the username.
	User email	Provide the email address.
	Post text	Provide the text message.
Load Classroom Tab	N/A	N/A
Create New Assignment	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.
	Post text	Provide the text message.
	Assignment title	Provide the assignment title.
Add Attachment to Assignment	Assignment document	Select an option: <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Username	Provide the username.
	User email	Provide the email address.
	Assignment title	Provide the assignment title.
	N/A	N/A
Invite a Student	Student email	Provide the student's email address.
	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Student Load Homepage	Post attachment	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Username	Provide the username.
	Student username	Provide the student's username.
	Student email	Provide the student's email address.
	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.
	Post text	Provide the text message.
	Assignment title	Provide the assignment title.
Student Add Submission	Submission document compressed	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Student username	Provide the student's username.
	Student email	Provide the student's email address.
	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.
Add Student Private Comment	Student private comment	Provide the comment.
Load Grades Tab	Assignment title	Provide the assignment title.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
View Submission	Submission document	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Submission document webp format	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Username	Provide the username.
	User email	Provide the email address.
	Student username	Provide the student's username.
	Student email	Provide the student's email address.
	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Assignment title	Provide the assignment title.
	Student private comment	Provide the comment.
Add Professor Private Comment	Username	Provide the username.
	User email	Provide the email address.
	Student username	Provide the student's username.
	Student email	Provide the student's email address.
	Assignment title	Provide the assignment title.
	Student private comment	Provide the comment.
	Professor private comment	Provide the comment.
Grade Submission	Grade of the	Provide the grade value.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	assignment	
Archive Classroom	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.
	Post text	Provide the text message.
	Assignment title	Provide the assignment title.
Delete Classroom	Classroom name	Set the classroom name.
	Section name	Set the section name.
	Room name	Set the room name.
	Subject name	Set the subject name.
Logout	Username	Provide the username.
	User email	Provide the email address.
<i>Google Drive</i>		
Get Sigh In Page	N/A	N/A
Sign In	User email	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Create Folder	Folder name	Set the folder name.
Upload File	File name	Provide the file name.
	Upload file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li></ul>

Application Action	Action Parameters	Parameter Description
		<ul style="list-style-type: none"> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
Delete File	File name	Provide the file name.
Empty Bin	File name	Provide the file name.
	File content	Select an option: <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
Create Text Document	Document content	Provide the document content.
	Document name	Provide the document name.
Create Presentation	Powerpoint content	Provide the content.
	Powerpoint name	Provide the name.
Create Spreadsheet	Spreadsheet content	Provide the content.
	Spreadsheet name	Provide the name.
Download File	File name	Provide the file name.
	Downloaded file	Select an option: <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
Sign Out	N/A	N/A
<i>Google Sheets</i>		
Load Sigh In Page	N/A	N/A
Sign In	Username	Provide the username.
	Password	Provide the password.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Create a New Sheet	N/A	N/A
Input Data	Username	Provide the username.
	Sheet name	Provide the sheet name.
	Key text 1	Provide the key text.
	Value text 1	Provide the value text
	Key text 2	Provide the key text.
	Value text 2	Provide the value text
	Key text 3	Provide the key text.
	Value text 3	Provide the value text
Share the Sheet	Username	Provide the username.
	Sheet name	Provide the sheet name.
	Receiver username	Provide the username of the receiver.
Complete sharing	Username	Provide the username.
	Sheet name	Provide the sheet name.
	Receiver username	Provide the username of the receiver.
	Sharing note	Provide the text for the sharing note.
Sign Out	Username	Provide the username.
<i>Google Slides</i>		
Load Sigh In Page	N/A	N/A
Sign In	Username	Provide the username.
	Password	Provide the password.
Start a New Presentation	Username	Provide the username.
Start a New Slide	N/A	N/A
Input Slide Text	Slide Name	Provide the value.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Replace Image	Username	Provide the username.
	File attachment	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Name the Slide	Slide name	Provide the value.
Share the Slide	Username	Provide the username.
	Slide name	Provide the value.
	Receiver username	Provide the username of the receiver.
Send Sharing	Receiver username	Provide the username of the receiver.
Sign Out	Username	Provide the username.
<i>GoogleHangouts</i>		
Load First Page	N/A	N/A
Sign In	User's first/last name	Provide the user's first/last name.
	User email address	Provide the user email address.
	Password	Provide the password.
	Other user's first/last name	Provide the other user's first/last name.
Start Chat	User's first/last name	Provide the user's first/last name.
	User email address	Provide the user email address.
	Other user's first/last name	Provide the other user's first/last name.
Send Text Message	First chat text message	Provide the text message.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Receive Text Message	N/A	N/A
Send a File	User email address	Provide the user email address.
	Second chat text message	Provide the text message.
Receive Text Reply	User email address	Provide the user email address.
Send Image	N/A	N/A
Receive Image	User's first/last name	Provide the user's first/last name.
	User email address	Provide the user email address.
	Other user's first/last name	Provide the other user's first/last name.
	First chat text message	Provide the text message.
	Second chat text message	Provide the text message.
Make Phone Call	User's first/last name	Provide the user's first/last name.
	User email address	Provide the user email address.
	Phone number	Provide the phone number.
Start Video Call	User's first/last name	Provide the user's first/last name.
	User email address	Provide the user email address.
	Other user's first/last name	Provide the other user's first/last name.
Logout	User's first/last name	Provide the user's first/last name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	User email address	Provide the user email address.
<i>GooglePhotos</i>		
Load Login Page	N/A	N/A
Login to Google	Password	Provide the password.
	Full user name	Provide the username.
	Downloaded photo	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
View a Photo	User email address	Provide the user email address.
	Full user name	Provide the username.
View Next Photo	Full user name	Provide the username.
Return to Main Page	Full user name	Provide the username.
	Downloaded photo	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
View Albums Page	Shared folder name	Provide the folder name.
Select an Album	User email address	Provide the user email address.
	Full user name	Provide the username.
	Shared folder name	Provide the folder name.
Upload a Photo	Uploaded Photo	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to</li></ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
		upload a file.
Return to Photos Page	N/A	N/A
Download a Photo	Full user name	Provide the username.
	Downloaded photo	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Logout of Google	User email address	Provide the user email address.
	Full user name	Provide the username.
<i>HTTP</i>		

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
HTTP GET	Path	The value of the path requested.
	Query	The value of the query requested.
	Request headers	<p>The name-value options provided are:</p> <ul style="list-style-type: none"> <li>• Accept-Language</li> <li>• Sec-Fetch-User</li> <li>• Upgrade-Insecure-Requests</li> <li>• Sec-Fetch-Site</li> </ul> <p>Use the <b>Add</b> button to add new options or the <b>Delete</b> to remove them.</p>
	Status code	The value of the response status code.
	Reason phrase	The value of the reason phrase.
	Response headers	<p>The name-value options provided are:</p> <ul style="list-style-type: none"> <li>• Cache-Control</li> <li>• Etag</li> </ul> <p>Use the <b>Add</b> button to add new options or the <b>Delete</b> to remove them.</p>
	Response body	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> <li>• <b>Dynamic payload</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
HTTP POST	URL	Provide the URL.
	Request headers	<p>The name-value options provided are:</p> <ul style="list-style-type: none"> <li>• Sec-Fetch-User</li> <li>• Upgrade-Insecure-Requests</li> <li>• Accept-Language</li> <li>• Sec-Fetch-Site</li> </ul> <p>Use the <b>Add</b> button to add new options or the <b>Delete</b> to remove them.</p>
	Request body	<p>Select an option:</p> <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> <li>• <b>Dynamic payload</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
	Status code	The value of the response status code.
	Reason phrase	The value of the reason phrase.
	Response headers	<p>The name-value options provided are:</p> <ul style="list-style-type: none"> <li>• Etag</li> <li>• Cache-Control</li> </ul> <p>Use the <b>Add</b> button to add new options or the <b>Delete</b> to remove them.</p>
	Response Body	Add a response message.
<i>Jingdong</i>		
Go To Jingdong	N/A	N/A
Login	Username	Provide the username.
Search For products	Search keyword	Provide the search criteria.
Check Products Information	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Checkout	Username	Provide the username.
	Product name	Provide the product name.
	Order ID	Provide the order ID.
Logout	N/A	N/A
<i>Jira</i>		
Load Login Page	Story name	Provide the story name.
Login	Login email address	Provide the login email address.
	Password	Provide the password.
Create Project	Login email address	Provide the login email address.
	Project name	Provide the project name.
Create Story	Project name	Provide the project name.
	Story name	Provide the story name.
Add Comments to Story	Story name	Provide the story name.
Mark The Story To Closed	Story name	Provide the story name.
Logout	Story name	Provide the story name.
<i>League of Legends</i>		
Login	User ID	Provide the user ID.
Start Game	User ID	Provide the user ID.
Attack	N/A	N/A
<i>Mail.ru</i>		
Login	Username	Provide the username.
	Password	Provide the password.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Send Mail	Fullscreen	Provide the fullname.
	Recipient email address	Provide the recipient email address.
	Recipient email subject	Provide the email subject.
	Recipient email body	Provide the email body.
View Mail	Fullscreen	Provide the fullname.
	Message sender email	Provide the sender email.
	Message sender name	Provide the sender name.
	View message subject	Provide the message subject.
	View message body	Provide the message body.
Logout	N/A	N/A
<i>Meraki</i>		
Login	Dashboard email address	Provide the email address.
	Dashboard password	Provide the password.
Enroll Device	New device address	Provide the device address.
	Enrollment message	Provide an enrollment message.
Add Application	New device address	Provide the device address.
	New application search query	Provide the search criteria.
Add Profile	New device address	Provide the device address.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	Test profile name	Provide the test profile name.
	Test profile description	Provide the test profile description.
	Backup file name	Provide the backup file name.
Push Updates	N/A	N/A
View Clients	New device address	Provide the device address.
View Map	New device address	Provide the device address.
View Logs	New device address	Provide the device address.
Download CSV	Dashboard email address	Provide the email address.
Send Command	Remote command line	Provide the remote command line,
View Summary	New device address	Provide the device address.
Add Geofence	Geofence name	Provide the geofence name.
	Area name	Provide the area name.
Add Policy	Policy name	Provide the policy name
Add owner	New device address	Provide the device address.
	Owner name	Provide the name.
	Owner username	Provide the username.
	Owner password	Provide the password.
	Owner email	Provide the email.
Logout	N/A	N/A
<i>Mewe</i>		
Open Login Page	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Login	Email	Provide the email address.
	Password	Provide the password.
Read News Feed	N/A	N/A
Post Status	Status message	Provide the message text.
Logout	N/A	N/A
<i>MongoDB</i>		
Insert	N/A	N/A
Update	N/A	N/A
Query	N/A	N/A
Get More	N/A	N/A
Delete	N/A	N/A
Kill Cursor	N/A	N/A
Diagnostic Messages	N/A	N/A
<i>Netease</i>		
Go to Netease Music	N/A	N/A
Login	N/A	N/A
Search Music	Artist ID	Provide the artist ID.
PlayMusic	Music file name 1	Provide the music file name.
	Music file name 2	Provide the music file name.
	Music file name 3	Provide the music file name.
	Music file name 4	Provide the music file name.
Add To Playlist	Artist ID	Provide the artist ID.
Recommend Music	Artist ID	Provide the artist ID.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Watch Music Video	Artist ID	Provide the artist ID.
	Music video ID 1	Provide the music video ID.
	Music video ID 2	Provide the music video ID.
	Music video ID 3	Provide the music video ID.
	Music video ID 4	Provide the music video ID.
Logout	N/A	N/A
<i>Office 365 Outlook People</i>		
Get Sign In Page	N/A	N/A
Sign In	User name	Provide the user name.
	Password	Provide the password.
Create a New Contact	Contact first name	Provide the first name.
	Contact last name	Provide the last name.
	Contact email	Provide the email address.
Search for a Contact	Search people	Provide the search criteria.
Delete a Contact	Contact email	Provide the email address.
Sign Out	N/A	N/A
<i>Office365 Excel</i>		
Get Home Page	N/A	N/A
Sign In	User email	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Get Excel Tab	N/A	N/A
Get Excel Workbook	Workbook name	Provide the workbook name.
Edit Workbook	Content	Provide the content.
Pin Workbook	Workbook name	Provide the workbook name.
Open Workbook In OneDrive	N/A	N/A
Sign Out	N/A	N/A
<i>Office365 OneDrive</i>		
Get Home Page	N/A	N/A
Sign In	User email	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Get OneDrive Tab	N/A	N/A
Delete File	File name	Provide the file name.
Upload File	File name	Provide the file name.
	Upload file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Create Folder	Folder name	Provide the folder name.
Create Excel Workbook	Workbook name	Provide the workbook name.
Create Word	Document name	Provide the document name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Document		
Create Powerpoint Presentation	Powerpoint name	Provide the powerpoint name.
Sign Out	N/A	N/A
<i>Office365 Outlook</i>		
Sign In	User email	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
View Inbox	N/A	N/A
Send Message	Recipient	Provide the email address.
	Subject	Provide the email subject.
	Body	Provide the email body text.
Send Message With Attachment	Recipient	Provide the email address.
	Subject	Provide the email subject.
	Body	Provide the email body text.
	Attachment	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Attachment filename	Provide the file name.
Open Message	N/A	N/A
Delete Message	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Navigate To Calendar Panel	N/A	N/A
Create A New Event	Event date	Set the event date.
	Event start time	Set the start time.
	Event end time	Set the end time
	Event name	Set the event name.
Delete An Event	Event date	Set the event date.
	Event start time	Set the start time.
	Event end time	Set the end time
	Event name	Set the event name.
Navigate to People Panel	N/A	N/A
Create a New Contact	Contact email	Provide the address email.
	First name	Provide the first name.
	Second name	Provide the second name.
	Phone number	Provide the phone number.
Search For A Contact	Search string	Provide the search criteria.
Delete A Contact	Contact email	Provide the address email.
	First name	Provide the first name.
	Second name	Provide the second name.
	Phone number	Provide the phone number.
Navigate To Task Panel	N/A	N/A
Create New Task	Task title	Provide the task tile.
Mark Task Completed	Task title	Provide the task tile.
Delete Task	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Sign Out	N/A	N/A
<i>OK.ru</i>		
Login	Username	Provide the user name.
	Password	Provide the password.
View Feed	N/A	N/A
Post Message	Message	Provide the message text.
Logout	N/A	N/A
<i>Portal</i>		
Login	User email	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	User password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Search Image	Search query	Provide the search criteria.
Upload Image	Uploaded file name	Provide the file name.
	Uploaded file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Logout	N/A	N/A
<i>Reddit</i>		
Load Main Page	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Sign In	Username	Provide the user name.
	Account password	Provide the password.
Access Post	N/A	N/A
Create Comment	Comment content	Provide content for the comment.
Delete Comment	N/A	N/A
Search Posts	Query string	Provide the search criteria.
Subscribe to Subreddit	Subreddit	Provide the subreddit.
Access Gifts Page	Subreddit	Provide the subreddit.
Load Profile	Username	Provide the user name.
Access Settings	N/A	N/A
Access Messages	N/A	N/A
Sign Out	N/A	N/A
<i>Salesforce</i>		
Load Login Page	User name	Provide the user name.
Login	User name	Provide the user name.
	Login email address	Provide the login email address.
	Password	Provide the password.
Select Top Deal	User name	Provide the user name.
	Login email address	Provide the login email address.
Update Call Log	User name	Provide the user name.
	Login email address	Provide the login email address.
Select Opportunities Tab	Login email address	Provide the login email address.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Select An Opportunity	User name	Provide the user name.
	Login email address	Provide the login email address.
Edit Amount	User name	Provide the user name.
	Login email address	Provide the login email address.
Select Notes Tab	User name	Provide the user name.
	Login email address	Provide the login email address.
Edit a Note	User name	Provide the user name.
	Login email address	Provide the login email address.
Select Dashboards Tab	User name	Provide the user name.
	Login email address	Provide the login email address.
Open Adoption Dashboard	User name	Provide the user name.
	Login email address	Provide the login email address.
Select Calendar Tab	User name	Provide the user name.
	Login email address	Provide the login email address.
Add a Meeting	User name	Provide the user name.
	Login email address	Provide the login email address.
Logout	User name	Provide the user name.
	Login email address	Provide the login email address.
<i>Service-Now</i>		
Get Sign In Page	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Sign In	Username	Provide the user name.
	Password	Provide the password.
View an Incident	Username	Provide the user name.
	Incident number searched	Provide the incident number.
	Search shot description	Provide a description.
Create an Incident	Username	Provide the user name.
	Incident number searched	Provide the incident number.
	Description	Provide a description.
	Caller	Provide the caller.
	Caller email	Provide the caller email.
Sign Out	N/A	N/A
<i>Skype 8</i>		
Sign In	Sign-in address	Provide the email address.
	Password	Provide the password.
Add Contact	Contact email address	Provide the email address.
	Contact's first/last name	Provide the first/last name.
View Contact Profile	Contact email address	Provide the email address.
Send an IM	N/A	N/A
Receive an IM	N/A	N/A
Start Audio Call	N/A	N/A
End Audio Call	N/A	N/A
Sign Out	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
<i>Skype</i>		
Login	Login email address	Provide the email address.
	User name	Provide the user name.
	Peer email address	Provide the peer email address.
	Peer user name	Provide the peer user name.
	Peer activity message	Provide the message.
Video Call	Login email address	Provide the email address.
	User name	Provide the user name.
	Peer email address	Provide the peer email address.
	Peer user name	Provide the peer user name.
End Video Call	Login email address	Provide the email address.
	User name	Provide the user name.
	Peer email address	Provide the peer email address.
	Peer user name	Provide the peer user name.
Voice Call	Login email address	Provide the email address.
	User name	Provide the user name.
	Peer email address	Provide the peer email address.
	Peer user name	Provide the peer user name.
End Voice Call	Login email address	Provide the email address.
	User name	Provide the user name.

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
	Peer email address	Provide the peer email address.
	Peer user name	Provide the peer user name.
Logout	Login email address	Provide the email address.
	User name	Provide the user name.
	Peer email address	Provide the peer email address.
	Peer user name	Provide the peer user name.
	Peer activity message	Provide the message.
<i>SMTP</i>		
Ehlo	N/A	N/A
Auth Login	N/A	N/A
Send Mail	Email subject	Provide the email subject.
	Email content	Provide the email content.
	Number of attachment	Provide the value for the number of attachment.
	Attachment Content	Provide the attachment content.
Quit	N/A	N/A
<i>Social Network</i>		
Login	Login username	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Login password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
		file.
News feed	N/A	N/A
View Profile	Member ID	Provide the member ID.
Like Post	N/A	N/A
Unlike Post	N/A	N/A
Create Post	Post content	Provide the content.
Comment To Post	Original post ID	Provide the post ID.
	Comment content	Provide the content.
Logout	N/A	N/A
<i>Splunk</i>		
Load Login Page	N/A	N/A
Login	Username	Provide the user name.
	Password	Provide the password.
Upload Log	Description	Provide a description.
	Index	Provide the index.
	Log File	Select an option: <ul style="list-style-type: none"> <li>• <b>Synthetic data (bytes)</b> and set the value.</li> <li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li> </ul>
Search Log	Index	Provide the index.
Logout	Username	Provide the user name.
<i>Tubi</i>		
Open Tubi Page	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Login	Email address	Provide the email address.
	Password	Provide the password.
	User ID	Provide the user ID.
	User name	Provide the user name.
Browse Tubi	Genre	Provide the genre.
Select Movie	Genre	Provide the genre.
	Movie name	Provide the movie name.
	Movie duration	Provide the movie duration.
	Movie description	Provide the movie description.
	Movie director	Provide the movie director.
	Movie release year	Provide the release year.
	Movie actor 1	Provide the movie actor.
	Movie actor 2	Provide the movie actor.
	Movie content ID	Provide the movie content ID.
	Recommended movie name	Provide the recommended movie name.
Play Video	Movie content ID	Provide the movie content ID.
Pause Video	Movie content ID	Provide the movie content ID.
Select Recommended Movie	Genre	Provide the genre.
	Recommended movie name	Provide the recommended movie name.
	Recommended movie duration	Provide the recommended movie duration.
Logout	N/A	N/A
<i>TWC</i>		
Open The Weather Channel App	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
View 48 Hours Details	N/A	N/A
View 15 Days Details	N/A	N/A
Swipe to Bottom of Main Page	N/A	N/A
<i>Video Platform</i>		
Login	Login username	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
	Login password	Select an option: <ul style="list-style-type: none"><li>• <b>User input</b> and provide the value.</li><li>• <b>Playlist file</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Search Video	Video name	Provide the video name.
Download video	Downloaded file name	Provide the file name.
	Downloaded file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Upload Video	Uploaded file name	Provide the file name.
	Uploaded file	Select an option: <ul style="list-style-type: none"><li>• <b>Synthetic data (bytes)</b> and set the value.</li><li>• <b>Payload profile</b> - select an option from the drop-down list or use the <b>Upload</b> button to upload a file.</li></ul>
Delete Video	N/A	N/A

<b>Application Action</b>	<b>Action Parameters</b>	<b>Parameter Description</b>
Like Video	N/A	N/A
Unlike Video	N/A	N/A
Logout	N/A	N/A
<b>VKontakte</b>		
Load Login page	N/A	N/A
Login	Username	Provide the user name.
	Password	Provide the password.
View Feed	View feed message	Provide the message.
Post Message	Post message	Provide the message.
Logout	N/A	N/A
<b>Yammer</b>		
Select First Group	User email address	Provide the email address.
	User name	Provide the user name.
Select Second Group	User email address	Provide the email address.
Select Third Group	User email address	Provide the email address.
Like an Entry	User email address	Provide the email address.
Reply to a Post	User email address	Provide the email address.
	User name	Provide the user name.
Post New Message	User email address	Provide the email address.
	User name	Provide the user name.
Select Another Group	User email address	Provide the email address.

Application Action	Action Parameters	Parameter Description
<i>YYLive</i>		
Load Home Page	N/A	N/A
Select Category	Category	Provide the category.
Play Video	Video ID	Provide the Video ID.

### The difference between Dynamic and Payload files

- If the chosen file is Payload (not Dynamic), the exact contents of the file can be seen on the wire.
- If the chosen file is Dynamic and the file does not contain Macros, then the behavior is the same as above.
- If the chosen file is Dynamic and the file contains Macros, then each Macro is evaluated during the test with the expected value that the Macro is meant to generate.

## Artifacts

This section contains useful information and details on Playlist and Macro features.

### Rules and Grammar for Playlists

Rules to support comma or double-quotes as a part of a playlist:

1. Each playlist item with comma or double-quote in the content **must** be enclosed within double-quotes.
2. Every double-quote used as a part of the content must be escaped with another double-quote.

Each record is located on a separate line, delimited by a line break (CRLF). For example: `record = value * (COMMA value)` :

Record	value 1	value 2
abcd	abcd	
abcd,wxyz	abcd	wxyz
"abcd,pqr","wxyz"	abcd,pqr	wxyz
"abcd,pq""r","wxyz"	abcd,pq"r	wxyz

For all applications that have a **Sign In** or **Sign Up** action, the following parameters offer the possibility of uploading a playlist file: Login Username, Login password or SignUp Username, SignUp password, SignUp confirm password. Select the **Playlist file** option and select the **Upload** option:

The screenshot shows the 'Traffic Profiles (1 application)' configuration screen. On the left, under 'Traffic Profile Configuration', there's a sidebar with 'Predefined Applications' and a 'TCP Settings' section. The main area is divided into four panels: 'Applications' (listing 'eBanking Chrome to Apache 1'), 'Actions' (listing six actions: Sign Up, Login, View Transactions, View Accounts, Get Contact Page, Logout), 'Properties' (containing 'Login username' dropdown set to 'Playlist file', 'Login password' dropdown set to 'User input', and a text field 'user1pass'), and a central search bar. A red circle highlights the 'Upload' button in the 'Properties' panel.


After the upload is performed, the reference column has corresponding csv column names, which can be chosen from the dropdown menu:

This screenshot shows the 'Actions' configuration screen. The left panel lists six actions. The right panel, titled 'Properties', contains fields for 'Login username' (set to 'Playlist file', with a dropdown showing 'playlist (2).csv') and 'Select a reference column' (with a dropdown menu open, showing 'Username' highlighted with a red box and a cursor icon). Other fields include 'Password', 'Login password' (set to 'User input', with a dropdown showing 'user1pass'), and 'User input'.

For some applications, the Hostname (under **ConnectionProperties**) offers the possibility of uploading a playlist file:

1. Select the **Playlist** file option .
2. Select **Upload**.

3. Choose the **Reference** column name from the drop-down.

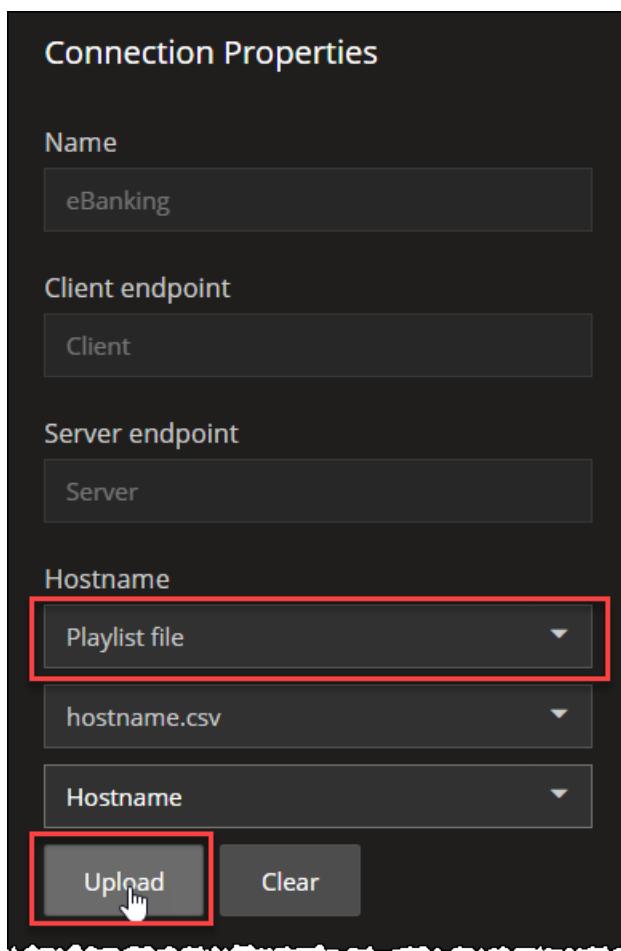

Example of a Hostname playlist file:

**NOTE** As of now, we do not validate empty Hostname values, if they are fetched from a playlist file.

	A	B
1	Hostname	
2	server1.com	
3	server2.com	
4	server3.com	
5	server4.com	
6	server5.com	
7	server6.com	
8	server7.com	
9	server8.com	
10	server9.com	
11	server10.com	
12		
13		
14		
15		
16		
17		

hostname(4107)


## About Playlists

For the **Sign In** action in eBanking, eShop, Social Network, Portal or the **Sign Up** action in eBanking applications, please use this [Sign In playlist](#) file:

Sign In playlist - Excel

	A	B	C	D	E	F	G	H	I
1	Username	Password							
2	admin	pgrassword							
3	michael	qwerty							
4	NULL	123456789							
5	john	12345							

For the **Sign In** action in Office 365 (Outlook, Excel, OneDrive) applications , please use this [Sign In Office 365 playlist](#) file:

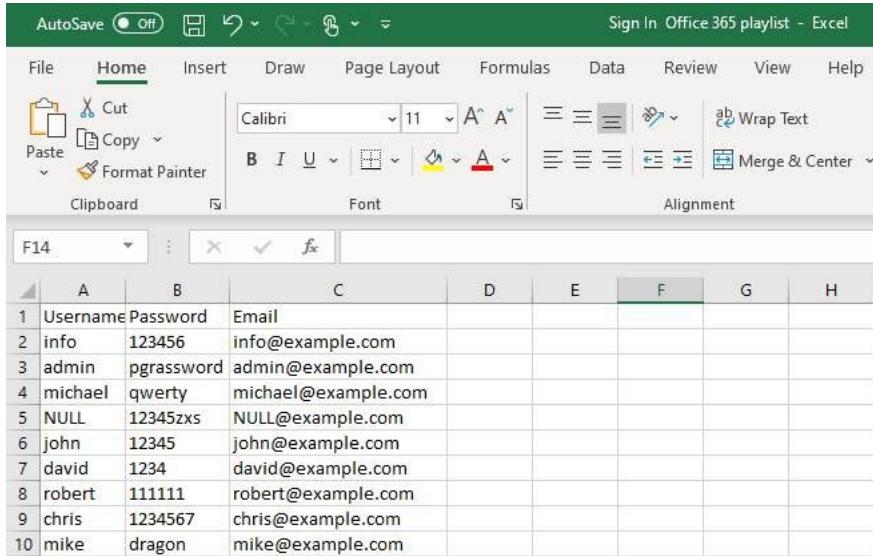

The screenshot shows a Microsoft Excel spreadsheet titled "Sign In Office 365 playlist - Excel". The table contains 10 rows of data with columns labeled A through H. Column A is "Username", column B is "Password", and column C is "Email". The data is as follows:

	Username	Password	Email				
1	info	123456	info@example.com				
2	admin	pgrassword	admin@example.com				
3	michael	qwerty	michael@example.com				
4	NULL	12345zxs	NULL@example.com				
5	john	12345	john@example.com				
6	david	1234	david@example.com				
7	robert	111111	robert@example.com				
8	chris	1234567	chris@example.com				
9	mike	dragon	mike@example.com				
10							


## About Macros

A macro is a method or function which allows you to customize the payload text data with the following parameters. The `maxLength` limit is set to 1024:

<b>Macros</b>	<b>Description</b>
<code>\$(RandomIPAddress, 'IPv4')</code>	The <b>RandomIPAddress</b> macro randomly generates IPv4 address. IPv6 is not yet supported.
<code>\$(Rand, minValue, maxValue)</code>	The <b>Rand</b> macro generates one random number within the range [minValue, maxValue]. It takes one or two parameters. Range is 0 – N or N1 – N2.
<code>\$(RandomAscii, minLength, maxLength)</code>	The <b>RandomAscii</b> macro generates a sequence of random Ascii characters with values in the range: 0-127 minLength and maxLength are numbers. The sequence length is randomly chosen between the 2 values. If only one argument is specified, it is used as a fixed length.
<code>\$(RandomAlpha, minLength, maxLength)</code>	The <b>RandomAlpha</b> macro generates a sequence of random letters [A-Za-z]. minLength and maxLength are numbers. The sequence length is randomly chosen between the 2 values. If only one argument is specified, it is used as a fixed length.
<code>\$(RandomNum, minLength, maxLength)</code>	The <b>RandomNum</b> macro generates a sequence of random digits minLength and maxLength are numbers. The sequence length is randomly chosen between the 2 values. If only one argument is specified, it is used as a fixed length.
<code>\$(RandomAlphaNum, minLength, maxLength)</code>	The <b>RandomAlphaNum</b> macro generates a sequence of random letters or digits [A-Za-z0-9]. minLength and maxLength are numbers. The sequence length is randomly chosen between the 2 values. If only one argument is specified, it is used as a fixed length.


\$(RandomByte, minLength, maxLength)	The <b>RandomByte</b> macro generates a sequence of random bytes. minLength and maxLength are numbers. The sequence length is randomly chosen between the 2 values. If only one argument is specified, it is used as a fixed length.
\$(PatternRepeat, pattern, minLength, maxLength)	The <b>PatternRepeat</b> macro generates a sequence of characters by repeating the <pattern> pattern. minLength and maxLength are numbers. The sequence length is randomly chosen between the 2 values. If only one argument is specified, it is used as a fixed length. If the chosen length is not an exact multiple of the length of <pattern>, the last repetition of <pattern> is truncated.

The following is the macro file structure, and please use this [macros](#) file for the correct file format:

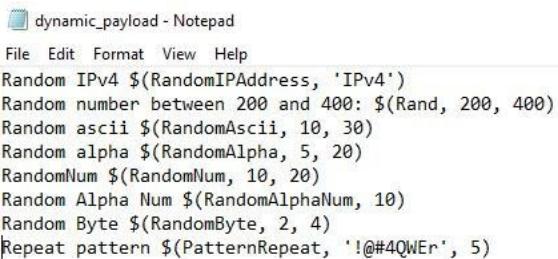

```
dynamic_payload - Notepad
File Edit Format View Help
Random IPv4 $(RandomIPAddress, 'IPv4')
Random number between 200 and 400: $(Rand, 200, 400)
Random ascii $(RandomAscii, 10, 30)
Random alpha $(RandomAlpha, 5, 20)
RandomNum $(RandomNum, 10, 20)
Random Alpha Num $(RandomAlphaNum, 10)
Random Byte $(RandomByte, 2, 4)
Repeat pattern $(PatternRepeat, '!@#4QWEr', 5)
```

This feature is also available for the HTTP application, on both HTTP GET and HTTP POST actions, under the following parameters: Response body/Response body. Switch to the dynamic payload and upload the `dynamic_payload` file:

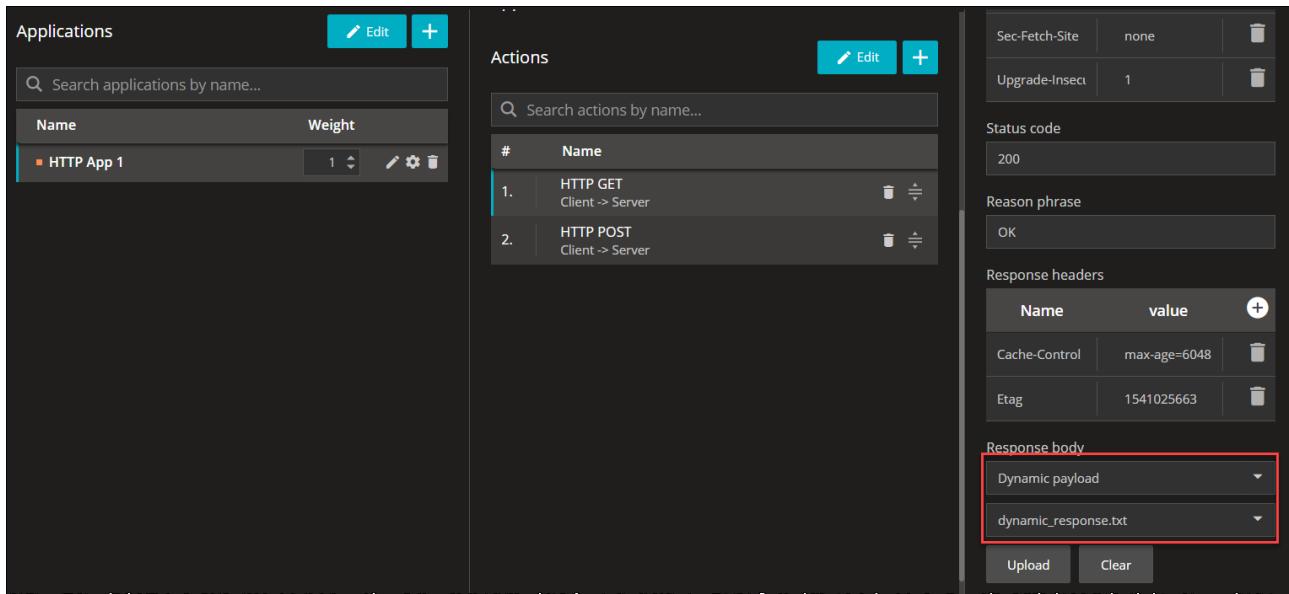

The screenshot shows the ZAP interface with three main panels:

- Applications** panel: Shows a single application named "HTTP App 1" with a weight of 1.
- Actions** panel: Shows two actions: "HTTP GET Client -> Server" and "HTTP POST Client -> Server".
- Configuration Panel** (on the right):
  - Headers**: Sec-Fetch-Site: none, Upgrade-Insect: 1
  - Status code**: 200
  - Reason phrase**: OK
  - Response headers**: Cache-Control: max-age=6048, Etag: 1541025663
  - Response body** (highlighted with a red box):
    - Dynamic payload
    - dynamic\_response.txt

Assign the agents, enable capture and start the test. After the test is finished, download the captured information and you can see the payload, as set in the macro file:

No.	Time	Source	Destination	Protocol	Length	Info
16	0.099346	192.168.10.91	192.168.10.90	TCP	66	[TCP Window Update] 48737 → 80 [ACK] Seq=1 Ack=1 Win=2896 Len=0 TSval=764983045 TSecr=807789105
17	0.099359	192.168.10.91	192.168.10.90	TCP	66	[TCP Window Update] 37775 → 80 [ACK] Seq=1 Ack=1 Win=2896 Len=0 TSval=764983119 TSecr=807784865
18	0.099366	192.168.10.91	192.168.10.90	TCP	66	[TCP Window Update] 58394 → 80 [ACK] Seq=1 Ack=1 Win=2896 Len=0 TSval=764983026 TSecr=807847657
19	0.099374	192.168.10.91	192.168.10.90	HTTP	371	GET /file.txt?name1=val1 HTTP/1.1
20	0.099378	192.168.10.91	192.168.10.90	HTTP	371	GET /file.txt?name1=val1 HTTP/1.1
21	0.099378	192.168.10.91	192.168.10.90	HTTP	371	GET /file.txt?name1=val1 HTTP/1.1
22	0.099623	192.168.10.90	192.168.10.91	HTTP	590	HTTP/1.1 200 OK (text/plain)
23	0.099624	192.168.10.90	192.168.10.91	HTTP	602	HTTP/1.1 200 OK (text/plain)
24	0.099646	192.168.10.91	192.168.10.90	TCP	66	[TCP Window Update] 36116 → 80 [ACK] Seq=1 Ack=1 Win=2896 Len=0 TSval=764983171 TSecr=807846794
25	0.099651	192.168.10.91	192.168.10.90	HTTP	371	GET /file.txt?name1=val1 HTTP/1.1
26	0.099685	192.168.10.90	192.168.10.91	HTTP	582	HTTP/1.1 200 OK (text/plain)

> Frame 22: 590 bytes on wire (4720 bits), 590 bytes captured (4720 bits)  
> Ethernet II, Src: VMware\_A6:29:b9 (00:0c:29:a6:29:b9), Dst: VMware\_99:5a:02 (00:0c:29:99:5a:02)  
> Internet Protocol Version 4, Src: 192.168.10.90, Dst: 192.168.10.91  
> Transmission Control Protocol, Src Port: 80, Dst Port: 58394, Seq: 1, Ack: 306, Len: 524  
> Hypertext Transfer Protocol  
Line-based text data: text/plain (12 lines)  
Random IPv4 158.243.103.228\r\n  
Random number between 200 and 400: 266\r\n  
Random ascii \016\035EY\023Te1.'\]:\034+?\031p\*\026qI\030\024<\r\n  
Random alpha VEKzKn\r\n  
RandomNum 227499253664034\r\n  
Random Alpha Num RDtTu0rLmL\r\n  
Random Byte Y♦\r\n  
Repeat pattern !@#4QWEr!@#4QWEr!@#4QWEr!@#4QWEr!\r\n  
\r\n  
\r\n  
\r\n

# Index

---

**#**  
5G-EIR, configuration settings 468

## A

agents  
  clear ownership 67  
  management 65  
  Network Management window 68  
  ownership 63  
  reboot 67  
  status of 65  
  tags 67  
AMF, configuration settings 236

application traffic generator 178, 205, 208-209, 218, 291, 691, 713, 716, 725, 782, 823, 826, 945, 968, 970, 979, 1015, 1153

AUSF, configuration settings 253, 607

## B

bidirectional UDP traffic flow 180, 693, 804, 947, 1156

## C

create/delete PDU session, secondary objective 167, 941  
create/delete QoS Flows, secondary objective 165, 683, 938

customer assistance 3

## D

discovery, NRF 472  
DN, configuration settings 756

**DNN settings**

Full Core tests 92, 876, 1099

SBA tests 571

## E

enter/exit idle, secondary objective 164, 682, 938  
EPS fallback 370, 1028

## F

Full Core tests  
  configuration settings 77  
  global settings 85, 870, 1093  
  network slicing 149, 928  
  objectives 153, 930

## H

handover, secondary objective 680

## I

IPFilterRule 664

## M

middleware VM, upgrade 47  
modify QoS Flows, secondary objective 683

## N

Network Management window 68

Nnrf\_NFDiscovery 472

NRF discovery 472

NRF, configuration settings 335, 617

## O

objectives

Full core tests 153, 930

---

SBA tests 500	
UPF Isolation tests 675	
	<b>P</b>
packet filters	
for SDF 664	
packet filter list configuration 105, 578, 888, 1110	
Paging, secondary objective 163, 681, 937	
passthrough testing 1322	
passwords	
admin, change 27	
PCF, configuration settings 350, 629	
product support 3	
	<b>Q</b>
QoS flows, settings 101, 884, 1106	
	<b>R</b>
RAN, configuration settings 362, 736, 1021	
	<b>S</b>
SBA tests	
configuration settings 475	
global settings 567	
network slicing 493	
objectives 500	
SCP configuration settings 392, 635	
SGW-U, configuration settings 457	
SMF, configuration settings 411, 740	
SMS, secondary objective 168, 942	
stateless UDP traffic generator 176, 270, 761, 801, 944, 994, 1158, 1234	
statistics	
licensing stats 1292	
	<b>T</b>
tags	
custom 67	
TCP connection settings 568	
technical support 3	
traffic generators 170, 269, 688, 760, 942, 993, 1229	
	<b>U</b>
UDM, configuration settings 438, 645	
UDP stateless, traffic generator 176, 270, 761, 801, 944, 994, 1158, 1234	
UDR, configuration settings 452, 652	
UE configuration settings	
Full Core tests 117, 892, 1121	
SBA tests 480	
UPF Isolation tests 666	
UPF Isolation tests	
configuration settings 657	
global settings 659	
objectives 675	
UPF, configuration settings 457, 746	
URRs 665	



© Keysight Technologies, 2019–2024

This information is subject to change  
without notice.

[www.keysight.com](http://www.keysight.com)