AKAI Fire EndGAme

BY Kheops74

The ultimate script for FL Studio

User Guide & Features

User Guide & Features

INSTALLATION :

Download, unzip, and copy the **Akai Fire EndGAme** folder to: `C:\Users\Name XXX\Documents\Image-Line\FL Studio\Settings\Hardware` or your `FL Studio Data\FL Studio\Settings\Hardware` folder.

In the **Akai Fire EndGAme** folder and **fire_modules** subfolder, find these files and create desktop shortcuts:

- **AkaiFireWatcher.exe** - Essential to run the script!
- **FLControlEditor.exe** - To configure your shortcuts.
- **color_picker_to_0x.html** - Pad color code helper.

1. Run **AkaiFireWatcher.exe**.
2. Turn on the Akai Fire and wait for full initialization.
3. Launch **FL Studio**.
4. Open MIDI options, select the script if not already done, and set the **same Port** for both Input and Output.

This script transforms your Akai Fire into a complete production tool.

Four main modes are available:

1. **Step Mode (Reimagined)**
2. **Note Mode (with Chords)**
3. **FL Studio Control**
4. **Unique Performance Mode**

Mode STEP Features

4 Different Operating Modes

1. Classic STEP This is the original mode with one key difference: it uses **1 x 64 steps** instead of 4 x 16 steps. You control **one channel rack at a time** across 64 steps. The 4 knobs function as they did originally.

2. Vertical MONO STEP Modes 2, 3, and 4 use a new **vertical sequencer concept**—rotate your Akai Fire vertically! The 64-pad matrix represents **4 sequencer steps across 16 note pitches**.

- **Navigation:** Use the **Volume** knob for octaves and **Select** to move through bars (4 steps at a time). Use **Pattern -/+** for 1-step increments.
- **EDIT Mode:** Press **(STEP)**; the button flashes. Select one or more notes (they will flash). Use the 4 knobs to control: **Volume** (Pitch), **PAN** (Velocity), **FILTER** (Length), and **RESO** (Time Offset/Shift).
- **MUTE Keys:** Used to mute the corresponding step.
- **Multi-Device:** Sync 2 or 4 Akai Fires to see 8 or 16 steps at once. Hold **(ALT + Press Select)** to choose the physical layout position with **Select** and confirm with **Press**.

3. Vertical POLY STEP Same as the previous mode, but you can freely add **multiple notes on the same step**.

4. Vertical POLY CHORD STEP Choose your chord using **(BROWSER)** and **(SELECT)**. The chord is automatically played when you add a note to the grid. You always trigger the root note on the grid; you can place several on one step to play the same chord across multiple octave

NOTE Mode Features

2 different operating modes

1. Classic NOTE A 4-octave piano visible for each of the 12 notes. Black and white keys are sequential on the same row. Change the 4 visible octaves with **(PATTERN -+)**.

2. Chord NOTE Press **(PRESS SELECT)** once to enable (or disable) Chord mode. Choose your chord with **(BROWSER)** and confirm by pressing **(BROWSER)** again. The keyboard directly plays the chosen chord.

DRUM Mode Features - FL Studio Controle

The Concept: I transformed this mode into total control of FL Studio's physical commands. Each pad becomes a direct shortcut, bypassing FL Studio API limitations that prevent using keyboard shortcuts with a program and a key recognition script! You can now use all Piano Roll and Playlist tools, and easily map any available FL Studio shortcut to the pad of your choice! ;)

Pad Row 1 (16 pads): Selects Mixer or Channel Rack tracks, **(SHIFT + PAD)** mutes the track. **Pad Row 2 (16 pads):** The first 16 patterns. **Pad Row 3 (Pads 1 to 9):** Shortcuts for Playlist tools. **Pad Row 4 (Pads 1 to 9):** Shortcuts for Piano Roll tools.

Mute 1: Switches Row 1 to Mixer track view and toggles tracks 1-16 / 17-32. **Mute 2:** Switches Row 1 to Channel Rack view and toggles tracks 1-16 / 17-32. **Mute 3:** Switches Row 3 between Playlist shortcuts and your custom shortcuts. **Mute 4:** Switches Row 4 between Piano Roll shortcuts and your custom shortcuts.

The pads on the right of the Akai act as directional arrows with **Esc** and **Enter** keys. To help you change shortcuts, I made a program that does everything for you! :) `Documents\Image-Line\FL Studio\Settings\Hardware\Akai Fire EndGAme\FLControlEditor.exe`

PERFORM Mode Features

A brand new unique performance mode! This mode does not use FL's native performance mode—it works all the time! It allows you to mute Mixer tracks, Channel Rack tracks, Playlist tracks, or switch from one pattern to another, synchronized to the end of 1, 2, 4, or 8 bars. Selection is made with **(SELECT)**.

Using the 4 **(MUTE)** buttons, you select one of the 4 modes displayed on the Akai screen:

1. **Mixer MODE**
2. **Channel Rack MODE**
3. **Playlist MODE**
4. **Patterns MODE**

The operation is ultra-simple: when FL is on Stop, pressing a pad mutes or unmutes the track instantly. When FL is on Play, pressing a pad makes it flash (**pending**), and at the end of the chosen number of bars, the track is automatically muted (or unmuted).
With **(SHIFT+PAD)**, you mute/unmute the track directly without waiting for the end of the bar. With **(ALT+PAD)**, the track waits for the end of the chosen bars, triggers the track for the chosen duration, then stops automatically.
This is a "play and stop" to trigger a sound once—ideal for a snare roll or an FX, for example.

NOTE: For Patterns mode only, the pattern length is detected automatically! If you play a 4-bar pattern and switch to a 2-bar then a 16-bar one, it will automatically wait for the full end of the current one before switching to the next.

MODE : STEP1 - Classic Séquenceur 1x64 pas (SHIFT+STEP)

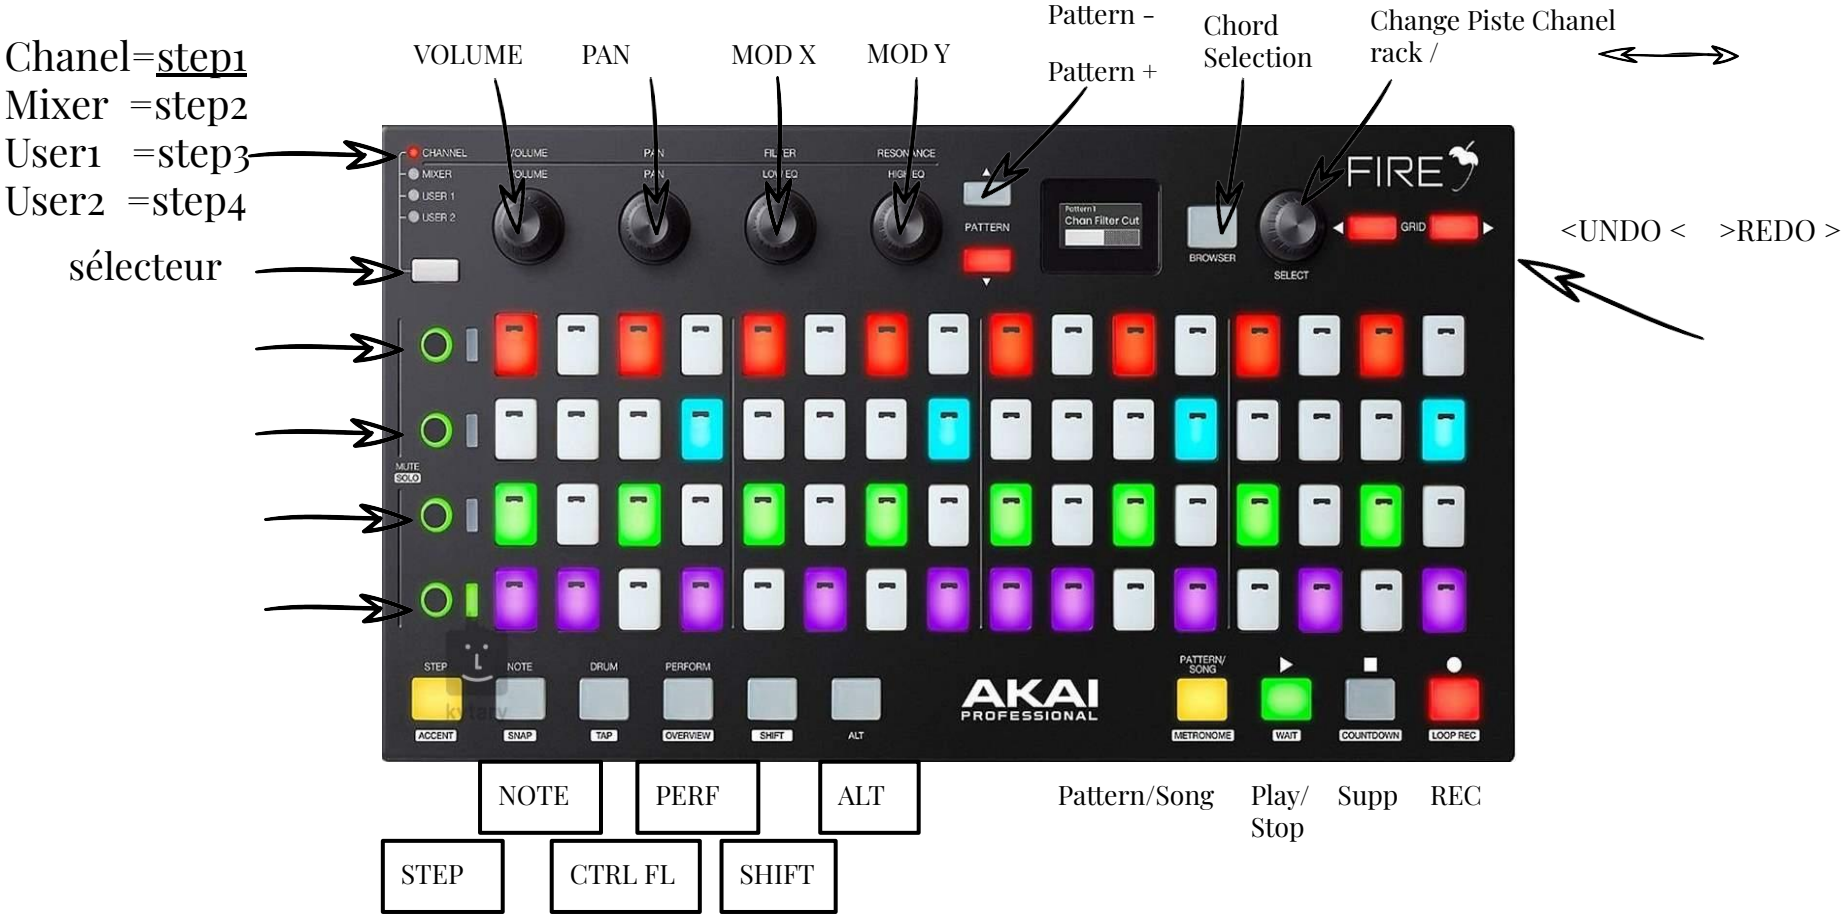

MODE : STEP2 - Vertical Mono Sequencer (STEP ou ALT+STEP)

MODE : STEP3 - Vertical Poly Free Sequencer (ALT+STEP)

Chanel=step1
Mixer =step2
User1 =step3
User2 =step4

sélecteur

mute

mute

mute

mute

PITCH

VÉLOCITÉ

LONGUEUR

DÉCALAGE

Avance -

Avance +

Chord Selection

(Presse) MONO-ACCORD / ⟷

<UNDO < >REDO >

PIANO

PERF

ALT

Pattern/Song

Play/ Stop

Supp

REC

STEP

CTRL FL

SHIFT

MODE : STEP4 - Vertical Poly Chord Sequencer (ALT+SHIFT+STEP)

Chanel=step1
Mixer =step2
User1 =step3
User2 =step4

sélecteur

mute

mute

mute

mute

PITCH

VÉLOCITÉ

LONGUEUR

DÉCALAGE

Avance -

Avance +

Chord Selection

(Presse) MONO-ACCORD / ←→

<UNDO <

>REDO >

PIANO

PERF

ALT

Pattern/Song

Play/ Stop

Supp

REC

STEP

CTRL FL

SHIFT

MODE : NOTE - piano avec ou sans accord automatique

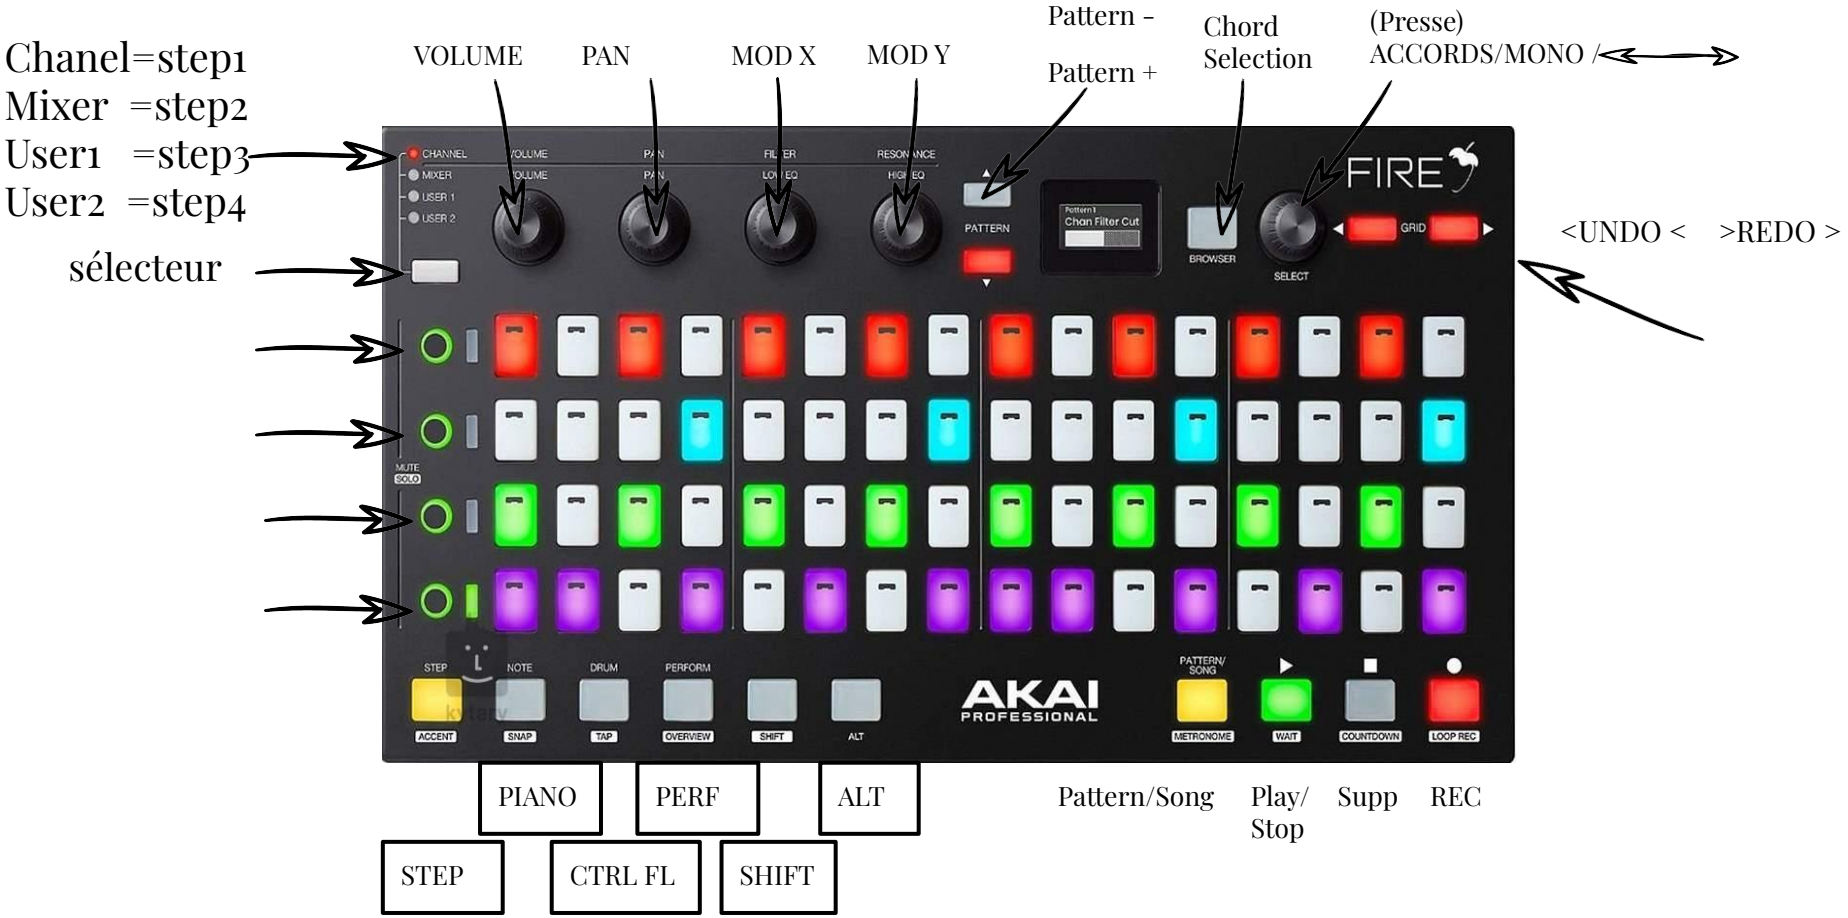

MODE : DRUM - Contrôle FL Studio

Chanel Rack

Piano Roll

Mixer

Playlist

Pattern -

Pattern +

Browser

(Press)
ENTER /

ECHAP

<UNDO <

>REDO >

Mixer 1 a 32

32 Mix/
Chanel Rack

Chanel 1 à 32

16 pattern

Shortcut piano
roll/User

Shortcut
Playlist/user

arrows
echap
enter

PIANO

PERF

ALT

Pattern/Song

Play/
Stop

Supp

REC

STEP

CTRL FL

SHIFT

MODE : DRUM - FL Control

1mix mute	2mix mute	3mix mute	4 mute	5 mute	6 mute	7 mute	8 mute	9 mute	10 mute	11 mute	12 mute	13 mute	14 mute	15 mute	16 mute
pattern 01	pattern 02	pattern	pattern 04	pattern 05	pattern 06	pattern 07	pattern 08	pattern 09	pattern 10	pattern 11	pattern 12	pattern 13	pattern 14	pattern 15	pattern 16
Pattern 1	Pattern 2	Pattern 3	Pattern 4	Pattern 5	Pattern 6	Pattern 7	Pattern 8	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9
draw	paint	delete	mute	slip	slice	select	zoom	playback		copie	paste	cut	echap	↑	enter
draw	paint	delete	mute	paint b	slice	select	zoom	playback		ctrl	alt	shift	←	↓	→

MODE : DRUM - FL Control page2

17 mute	18 mute	19 mute	20 mute	21 mute	22 mute	23 mute	24 mute	25 mute	26 mute	27 mute	28 mute	29 mute	30 mute	31 mute	32 mute
pattern 17	pattern 18	pattern 19	pattern 20	pattern 21	pattern 22	pattern 23	pattern 24	pattern 25	pattern 26	pattern 27	pattern 28	pattern 29	pattern 30	pattern 31	pattern 32
Pattern 1	Pattern 2	Pattern 3	Pattern 4	Pattern 5	Pattern 6	Pattern 7	Pattern 8	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9	Pattern 9
user	user	user	user	user	user	user	user	user		copie	paste	cut	echap	↑	enter
user	user	user	user	user	user	user	user	user		ctrl	alt	shift	←	↓	→

MODE : PERFORM - mode Live special

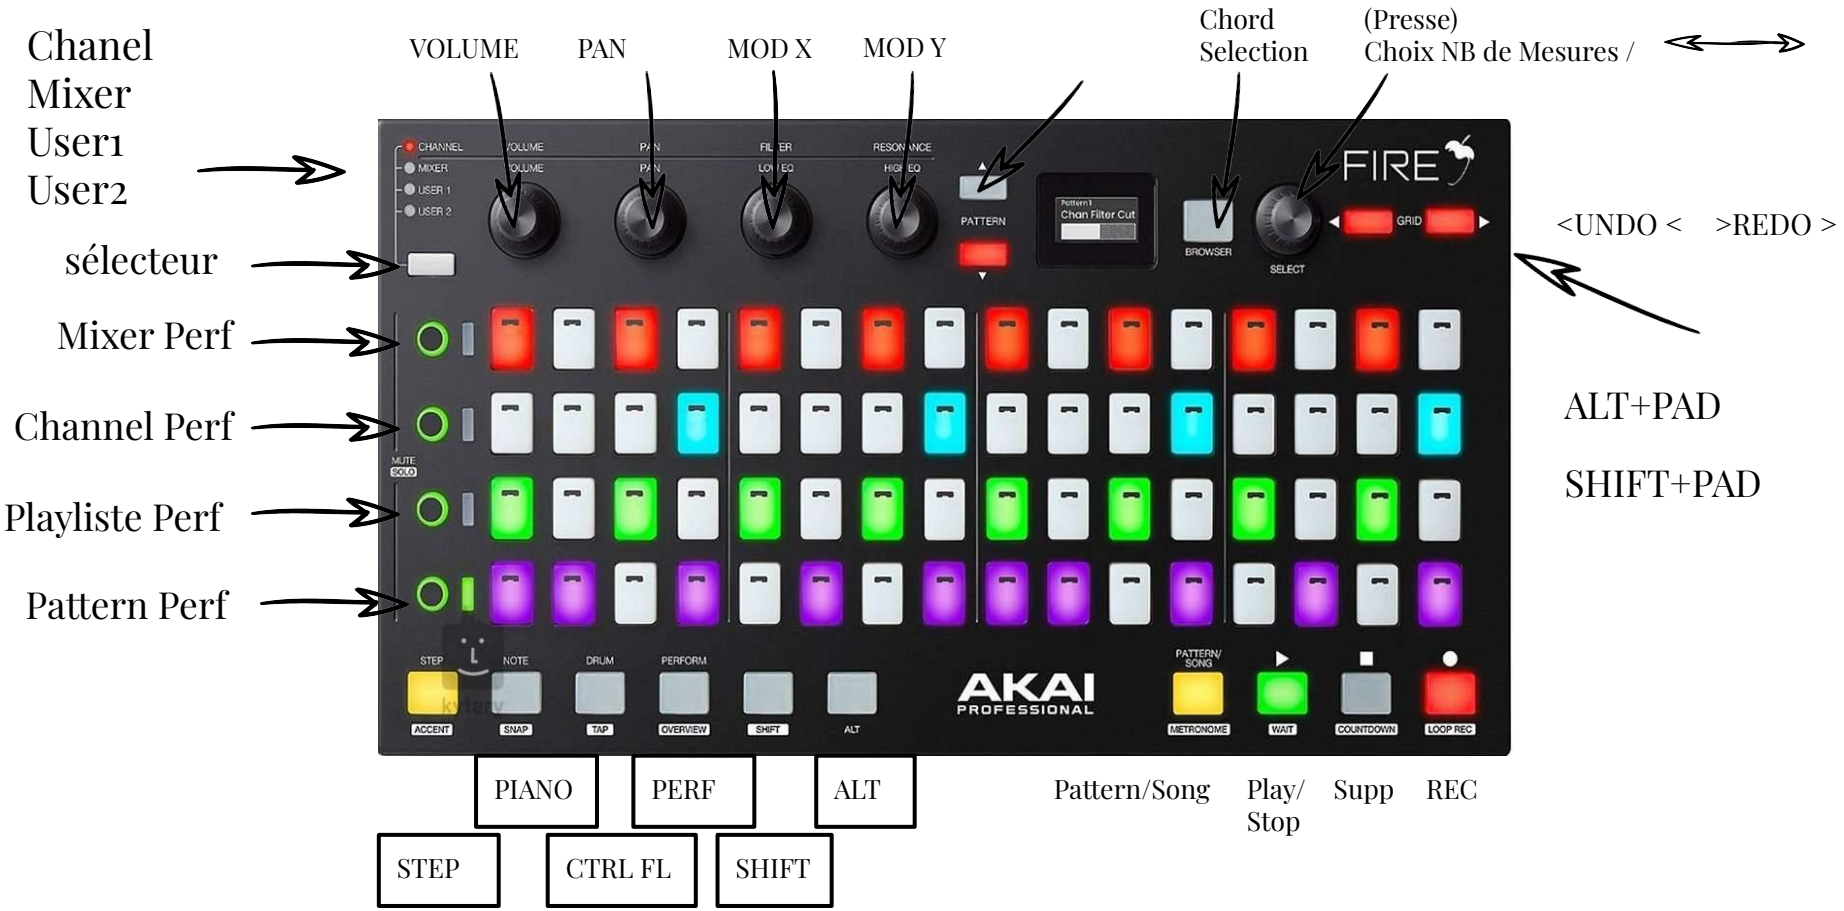

MODE : PERFORM - mode Live (mixer,chanel rack et playslist)

MUTE 1	Mixer Page
MUTE 2	Chanel rack Page
MUTE 3	Playlist Page
MUTE 4	Pattern Page
ALT+PAD	Directly plays the chosen pattern
SHIFT+PAD	attend la fin de la mesure, puis joue une fois le pad choisit en entier, puis il stop
SELECT ⇦ ⇨	Choice of the number of bars: 1, 2, 4, or 8
PRESS SELECT	change mode

MODE : PERFORM - mode Live (pattern seulement)

MUTE 1	Mixer Page
MUTE 2	Chanel rack Page
MUTE 3	Playlist Page
MUTE 4	Pattern Page
ALT+PAD	Directly plays the chosen pattern
SHIFT+PAD	Not used in this mode
SELECT ⇦ ⇨	Automatic detection of the number of bars according to the chosen pattern
PRESS SELECT	change mode

Missing Features

Due to FL Studio API limitations regarding the Piano Roll, I couldn't design the vertical sequencer exactly as intended. The API is quite restrictive, which is why there is a discrepancy between what you see on the Akai and what appears in the Piano Roll. Notes in the Piano Roll will always be displayed as "steps," and chords or multiple notes on a single step cannot be visualized there. They are not visible in FL, but they are correctly played!

For example, if you play a 3-note chord in Vertical Poly Chord Step mode, you will see and hear the chord on the Akai Fire, but the Piano Roll will only show a single note (the root/lowest note of the chord).

In fact, the Piano Roll behaves as if you were in the Channel Rack, with one step active and only one visible note pitch.

Hoping for a future FL Studio update that allows for proper Piano Roll note management... To compensate for this, I have included the ability to export your Akai sequence as a MIDI file! This allows you to actually see it in FL Studio, edit it, and save it later.

(ALT + PRESS SELECT): Converts your sequence into a MIDI file located in: `Documents\Image-Line\FL Studio\Settings\Hardware\Akai Fire EndGAme\pattern1.mid`

(SHIFT + PRESS SELECT): Recalls your sequence to the Akai, or allows you to load one created elsewhere! Example: Take any MIDI melody, rename it to `pattern1.mid`, and send it to the Akai Fire.

Attention: Multi-Fire synchronization only works in Mono/Poly/Chord Step modes! This allows you to use one Akai Fire in FL Studio Control mode and another in Performance mode, or synchronize two for Step mode to see 8 steps—or even 16 steps simultaneously with 4 Fires.

Recall of functions :

long press ALT + SHIFT = Multi-Fire Synchronization - choice with (select) left or right on the slave Akai fire

MODE STEP	
SHIFT + STEP	Mode Step Classic
ALT + STEP	Mode Step Mono/Poly
ALT+SHIFT+STEP	Mode Step Accords
Browser / Select	Open Accords choice
Mute/Solo	mute only one note
Left Selector	Switch between modes
ALT + Press Select	Export midi/json file
SHIFT + Press Selec	Import midi file
Press Selec	Sync akai to FL piano roll

MODE DRUM =	FL CONTRÔLE
MUTE 1	Row 1 View Mixer
MUTE 2	Row 1 view Ch Rack
MUTE 3	Row 3 Shortcut Playlist /User
MUTE 4	Row 4 Shortcut Piano Roll /User
SHIFT + Pads Row 1	Mute Mixer/Ch Rack
Row 2	16 Patterns

Rappel des fonctions :

long press ALT + SHIFT = Multi-Fire Synchronization - choice with (select) left or right on the slave Akai fire

MODE PERF	
SHIFT + Pads	Mute Direct
ALT + Pads	
Press Select	Switch Mode
Turn Select	Select 1.2.4.8 bar

MODE NOTE	
Press Select	Switch Accord/Mono
Browser	Accord Choice