



SETING KONFIGURASI UISS


1. Buka Aplikasi UISS – seting pertama Klik Setup - UISS

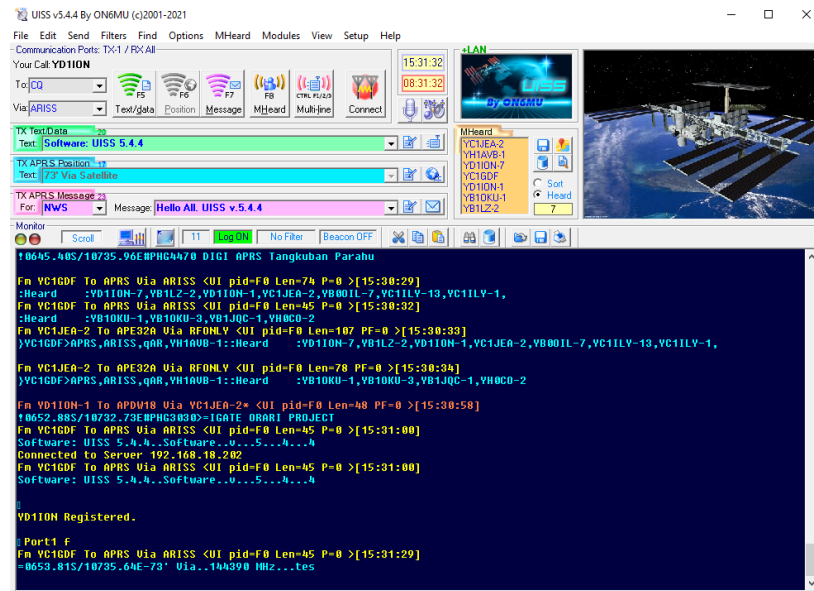


2. Klik Main

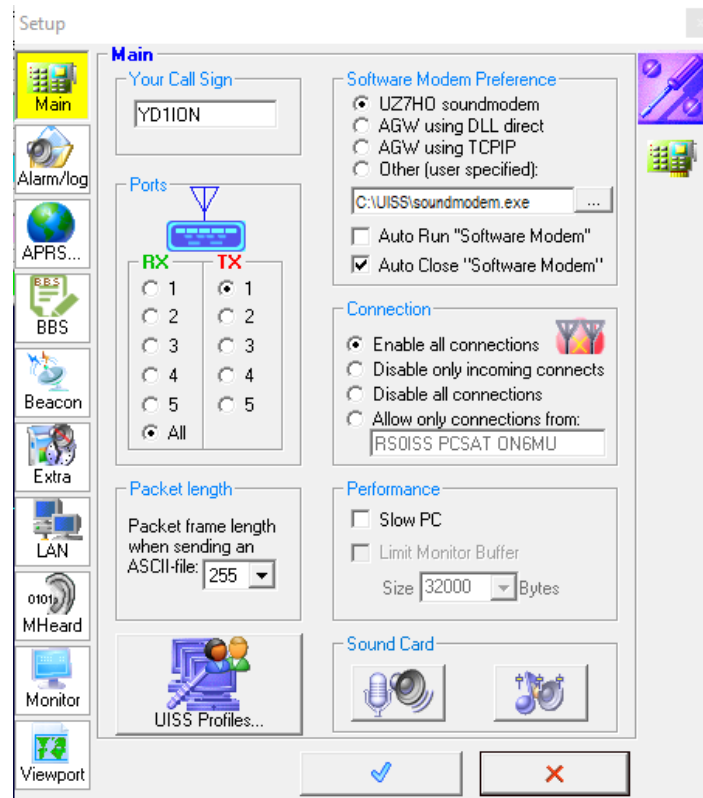


3. Alarm/log

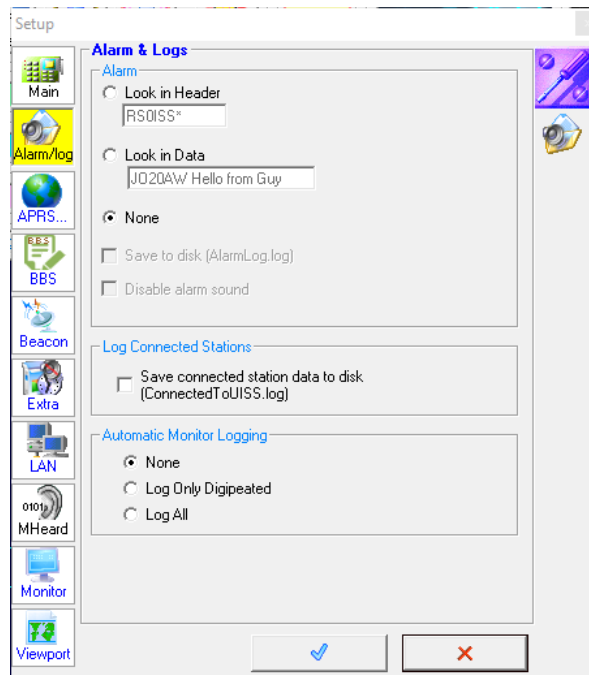


4. APRS

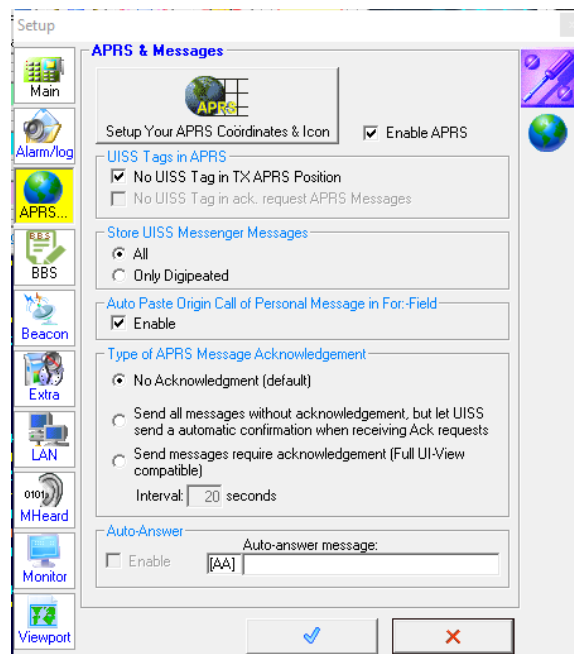


5. APRS SETUP

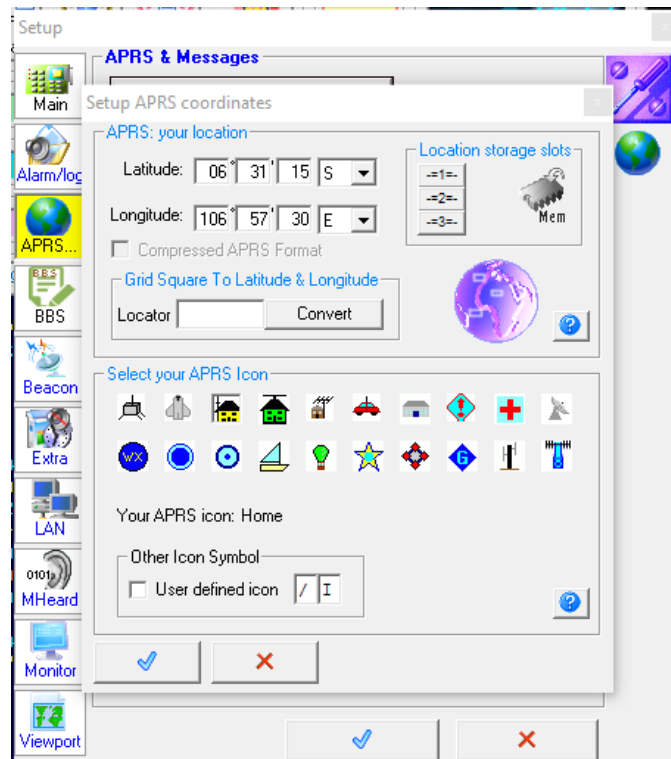


6. BBS

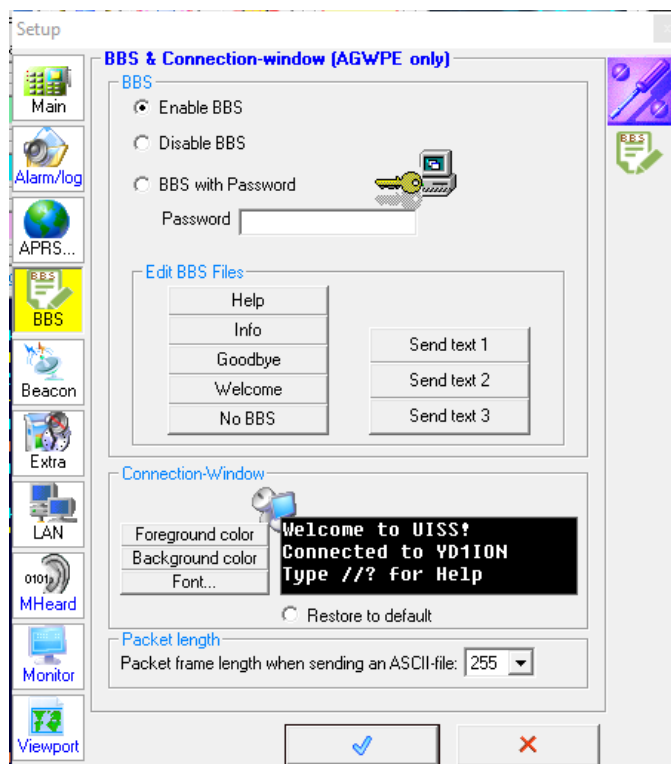

7. Beacon

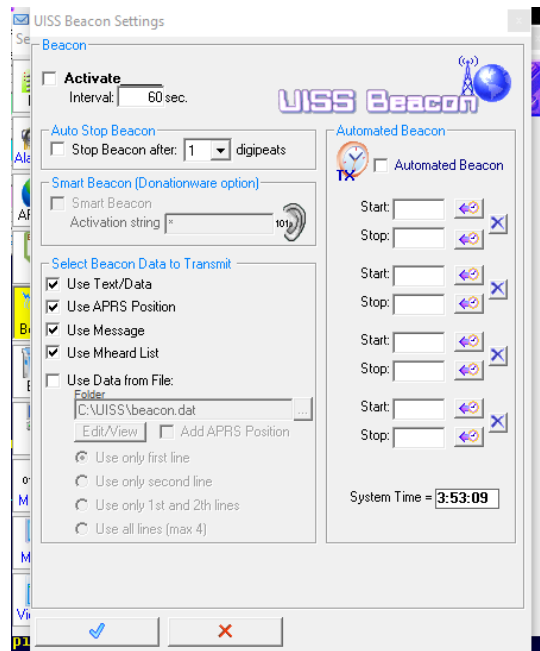


8. Ektra

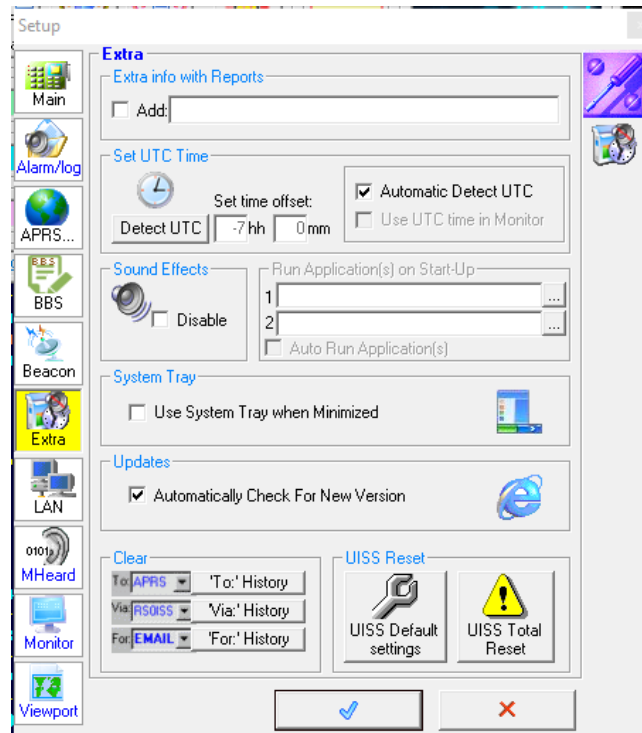


9. LAN




10. MHeard

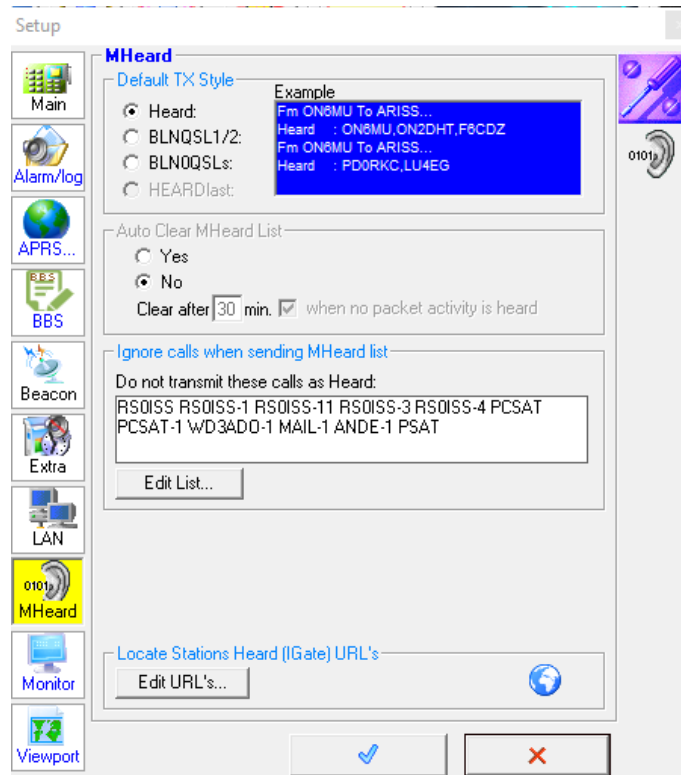


11. Monitor

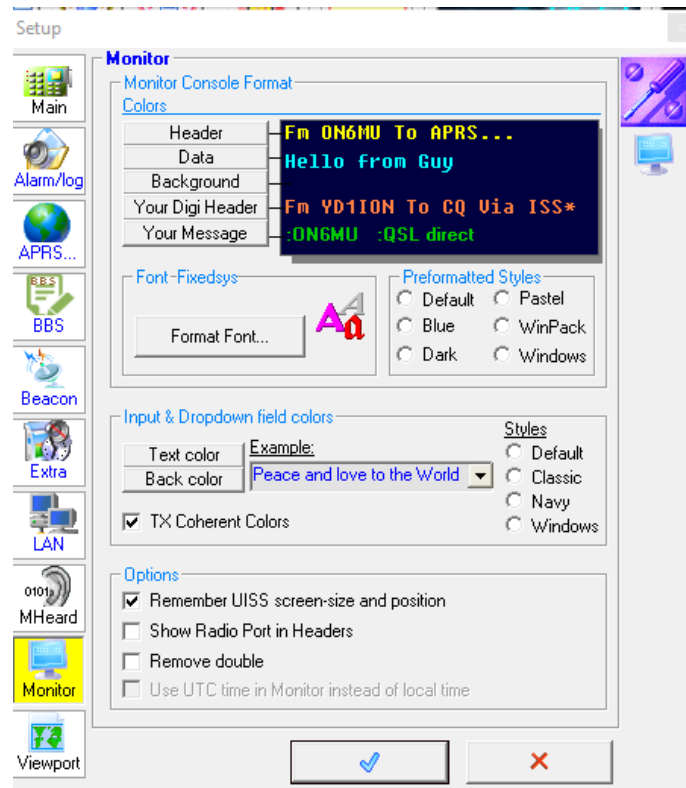

12. Viewport

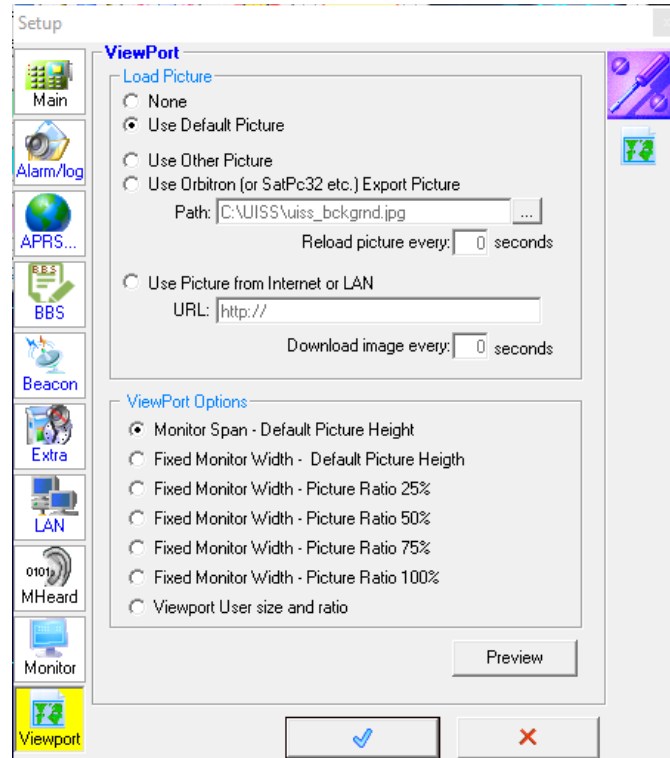

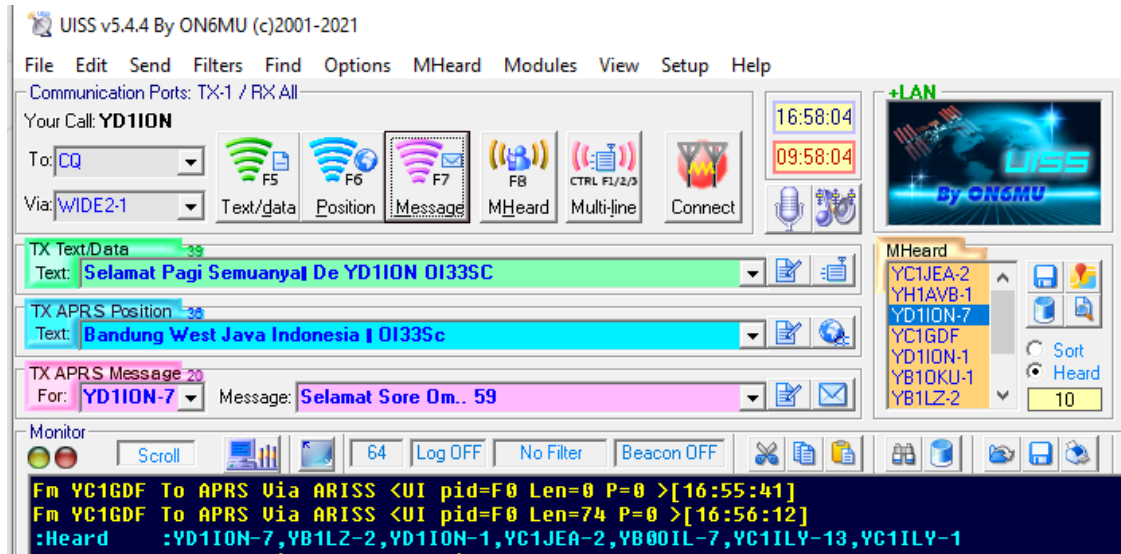A. SETING TX APRS**1. TX Text/Data**

- Selamat Pagi Semuanya... De YD1ION OI33SC
- Selamat Siang Semuanya... De YD1ION OI33SC
- Selamat Sore Semuanya... De YD1ION OI33SC
- Selamat Malam Semuanya... De YD1ION OI33SC

2. TX APRS Position

- Bandung West Java Indonesia ... OI33Sc

3. TX APRS Message

- Selamat Pagi Om.. 59
- Selamat Siang Om.. 59
- Selamat Sore Om.. 59
- Selamat Malam Om.. 59