Controller for TOPPING E2x2 OTG Stream Deck Plugin Manual

2026-11-14 (v1.0.1)

This plugin controls the **TOPPING E2x2 OTG** mixer from Elgato Stream Deck keys and dials. It talks to the device directly over USB (HID). Each key is set to a Mix and a channel, and it moves only that target, whatever Mix the TOPPING app is showing.

Made by: **Kimtan2**

What you need

Item	Requirement
Computer	Windows 10 or later
Stream Deck app	Stream Deck software 7.3 or later
Audio interface	TOPPING E2x2 OTG with the **official TOPPING driver** (the plugin does not change the driver)
TOPPING app	TOPPING Professional Control Center. It can stay open while you use the plugin
Install file	`TOPPING-E2x2-OTG.streamDeckPlugin`

The dial actions (VU dial, Pan dial, 디지털 게인 다이얼) need a **Stream Deck +**. Key actions work on every Stream Deck.

Read this first (limits)

Values the plugin changes do not show in the TOPPING app, and the app can overwrite them.

The device does not report its current mixer values. So the plugin keeps the values itself and matches them by reading the TOPPING app's workspace file (`.TPwork`). When you switch the Mix view in the app or restart the app, the app sends its own values to the device again. To make the app match the values set on Stream Deck, use the **TOPPING app restart** key (see below). **The TOPPING app then closes and opens again for 2-3 seconds.**

Step 1: Install the plugin

1. Double-click `TOPPING-E2x2-OTG.streamDeckPlugin`.
2. When the Stream Deck app asks, click **Install**. If it asks to replace an installed version, choose Install too. Your existing keys are kept.
3. Check that the **Controller for TOPPING E2x2 OTG** category is in the action list on the right.
4. Put any action on a key and click it to open its settings below. At the top, **Language** switches between 한국어, English and 日本語; its default, **Same as Stream Deck**, follows the Stream Deck app's language. The choice applies to every action. Action names in the action list always follow the Stream Deck app's language.
5. When a new version is out on GitHub, the bottom of the settings screen shows a notice with an **Open release page** link.

Step 2: Match the app and the plugin

The plugin starts from the workspace the TOPPING app has open, so if the app has a workspace open there is nothing to do. If the keys show **SETUP**, no workspace has been read yet. Then do one of these:

- **Open a workspace in the app:** pick one in the **Workspace** list at the top of the TOPPING app. The keys follow within a few seconds.
- **Press a Workspace load key:** make a load key (see "Workspace key" below) and press it.

After changing values in the app, save the workspace in the app. The plugin then reads the new values.

Step 3: Make your first key

This example raises the Playback 1/2 volume in Mix A by 1 dB per press.

1. Drag **Fader** from the action list onto a key.
2. In the settings, set **Target** to **Mix channel**, **Mix** to **A** and **Channel** to **Playback 1/2**.
3. Leave **Mode** on **Step** and enter `1` in **Step (dB, negative = down)**.
4. Each press raises the volume by 1 dB. Make a key that lowers it the same way, with `-1`.

For two keys stacked together, **Button fader (2 keys)** is handier: it draws one fader across both keys and keeps moving while you hold a key.

Actions

Action	What it does
Mute	Mute on / off / toggle for the target
Solo	Solo on / off / toggle for a Mix channel
Input option (48V, INST, Ø)	48V phantom power, INST and Ø (phase invert) for IN 1, IN 2 and the Mobile input
LINK	Links or unlinks a stereo channel, per Mix
Output control room	Headphone gain (LOW / HIGH), and monitor HP / TRS / AUX on and off
Fader	Sets the volume to a fixed value (Set) or moves it one step (Step)
Button fader (2 keys)	Two keys (top/bottom or left/right) raise and lower the volume. Holding repeats
VU dial	Turn for volume, press for mute (or to recall a set level), shows a level meter
Pan	Pan of a Mix channel (key)
Pan dial	Pan of a Mix channel (dial, press to center)
Digital gain	Input digital gain (key, 0 to +20 dB)
Digital gain dial	Input digital gain (dial, press to mute the input)
Output Source Select	Chooses what a loopback or an output (Out 1/2, Mobile Out, S/PDIF) plays
Workspace load/save	Loads a workspace, or saves the current values as a new workspace (see below)
TOPPING app restart	Force-closes the TOPPING app and starts it again, so the app and the keys show the same values (see below)

Action names appear in the action list exactly as in the table above, some of them in Korean.

Choosing a target

Fader, Button fader, VU dial and Mute pick one of three under **Target**.

Target	Meaning
Mix channel	One channel in Mix A to D (IN, Playback, Loopback and so on). You pick the Mix and the channel
Loopback	Loop 1/2, 3/4, 5/6
Output	Out 1/2, Mobile Out, S/PDIF

Follow an output (the Mix it plays now) (Fader, Button fader, VU dial, Mute, Pan, Pan dial, LINK): pick it at the bottom of the **Mix** list and choose the **Output to follow** (Out 1/2, Mobile Out, S/PDIF). The key acts on the channel in whichever of Mix A to D that output plays now, and its Mix label follows. **Each Mix has its own levels, so when the output switches to another Mix the sound can suddenly get louder. Turn the volume down before switching, and listen with care.** If the output plays something other than a Mix, the key shows `NOT A MIX` and does nothing.

A channel with LINK off has separate L and R. Then Mute, Solo and Pan keys can pick **Both (pair)**, **L only** or **R only** under **Side**. Volume keys, Button fader and VU dial always act on both sides.

Every channel key shows the text in its **Name** field. Leave it empty for the default name (24 characters at most).

Output Source Select

Pick where the sound goes (a loopback or an output) under **Target**, and how it changes under **Mode**.

- **Cycle MIX A-D:** each press goes MIX A → B → C → D.
- **Cycle chosen sources:** steps through only the ones ticked in **Sources**.
- **Toggle between two:** switches between **Source 1** and **Source 2**.

Workspace key


Pick **Load** or **Save** under **Mode**.

- **Load:** pick a saved workspace in the **Workspace** list. Pressing the key sends its values to the device and every key follows. The key you loaded last looks switched on.
- **Save:** enter a **New workspace name**. Pressing the key saves the current values as a workspace file with that name. It appears in the TOPPING app's list after the app restarts.
- **Also store on the device** (Save mode, on by default): when on, saving also stores the values in the device itself, so they stay after the interface is switched off and on. This does the same as the TOPPING app's download. When off, only the file is saved.
- **Restart the TOPPING app to match** (both modes, on by default): after saving or loading, the TOPPING app is force-closed and started again in the tray with that workspace open. On start the app sends that workspace to the device, so the app, the device and the keys all show the same values. The app is gone for 2-3 seconds, and changes made in the app but not saved there are lost. Turn it off if you do not want this.

When saving

- With **Restart the TOPPING app to match** off, the key does not save under the name of the workspace the TOPPING app has open, because the app writes its own values over it when it exits. If the settings show "Cannot save", enter another name. With the option on, the app is force-closed before it can write over the file, so that name is allowed.
- A workspace with the same name is replaced. **Only the version just before** stays in the same folder as the hidden file `.E2X2_OTG_<name>.TPwork.bak`. There is one backup per name, and each save replaces it with the version it overwrote.
- If the device is not connected, only the file is saved; the key shows ⚠ and the settings say so.

Storing on the device from the app: in the TOPPING app, click the download icon right of the workspace name at the top, pick the first option (save the current workspace and download to the device) and click OK.

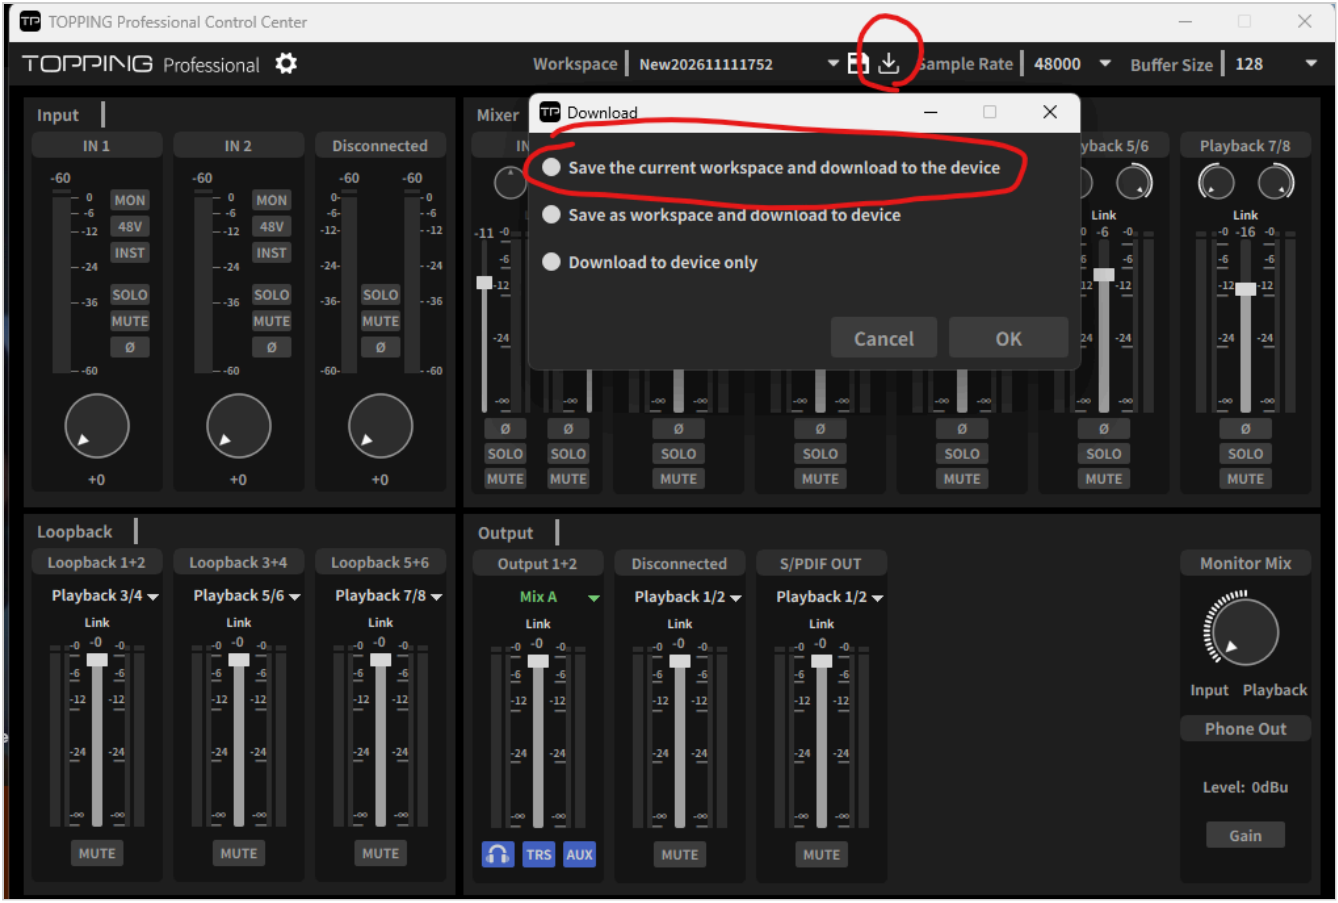

TOPPING app restart key

The TOPPING app saves the values it remembers to its workspace file when it exits, and sends that file to the device when it starts. So values set on Stream Deck jump back after the app is closed and opened. This key force-closes the app (with no exit save) and starts it again to remove that mismatch. Pick it in **Mode**:

- **Match TOPPING app settings** (default): saves the current key values into the workspace the app has open, then restarts the app. The Stream Deck values win. **The values saved in that workspace are overwritten.** Only the version just before is kept as a backup.
- **Undo to the previous version**: puts back the version of the app's open workspace from before the last save (the backup), then restarts the app. Press again to return to the newer version. With no backup the key shows ⚠.
- **Restart TOPPING app**: restarts the app without saving. The workspace saved in the app wins, and the device and the keys go back to it.

If the app was not running, the key starts it. If the app does not close within 5 seconds, nothing is changed and the key shows ⚠.

Level meters

- Meters move **only while sound is playing**.
- Each channel has its own meter: a Mix channel shows that channel, a loopback shows the loopback, an output shows the output.
- The OTG input shows its meter too.

Key indicators and troubleshooting

Indicator / symptom	Meaning	What to do
OFFLINE	The device is not connected	Check the USB cable and power. Keys come back on their own when it reconnects
SETUP	No workspace has been loaded yet	Open a workspace in the TOPPING app, or press a Workspace load key
SET CHANNEL	The key is not set up yet	Pick the target, channel, name and so on in the settings
NOT A MIX	A key set to follow an output, and that output plays something other than a Mix	Set that output's source to one of Mix A to D (turn the volume down first)
⚠ (briefly)	A Workspace key could not load or save	Read the message at the top of its settings
Values differ from the app	Values changed by the plugin do not show in the app	Press the TOPPING app restart key (Match TOPPING app settings)
Values set on Stream Deck jump back	The app sends its own values when it switches Mix view or restarts	Keep **Restart the TOPPING app to match** on for the save and load keys, or press the TOPPING app restart key

Known limits

- **Solo** on an input has no effect on the device.
- Volume goes up to **+12 dB** and digital gain is **0 to +20 dB**. Pan on a linked channel moves exactly as in the TOPPING app.
- **48V** only shows a warning in the settings. Pressing the key turns it on at once, so do not turn it on with anything other than a condenser microphone connected.
- INST, monitoring, 48V and headphone gain pressed on the device show on the keys at once. The monitoring knob (Input ↔ Playback) is not followed yet.
- The plugin does not change the device's USB driver. It uses only the HID communication the official driver allows.

Contact

If something goes wrong or you have a question, please contact the author (Kimtan2).

- Discord: kimtan2
- Chzzk: 김탄2

TOPPING is a trademark of TOPPING. Stream Deck is a trademark of Elgato (Corsair). This plugin is an unofficial project, not affiliated with them.