


32


0119

32

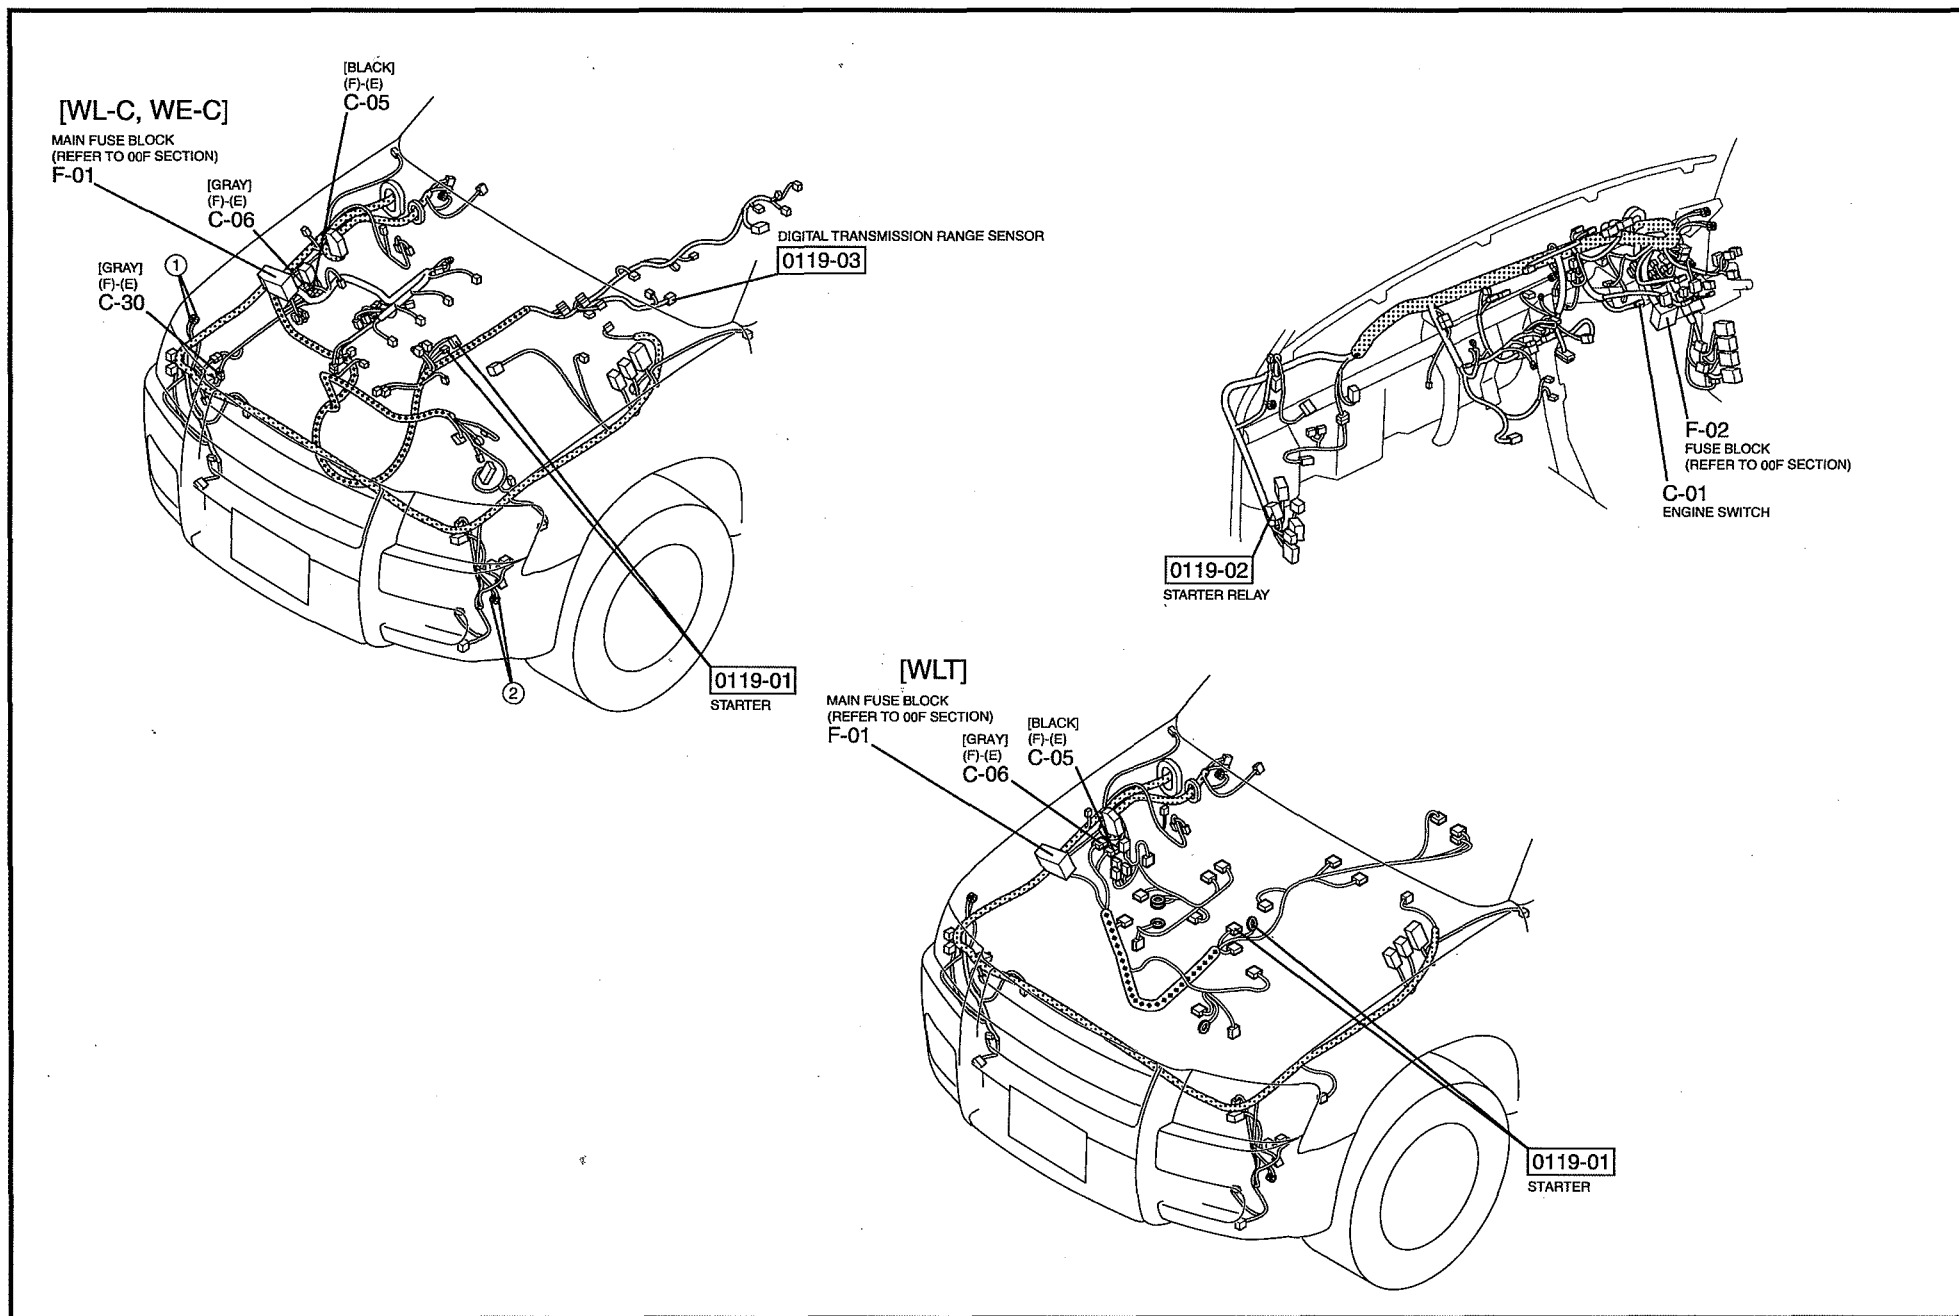

STARTING SYSTEM

0119

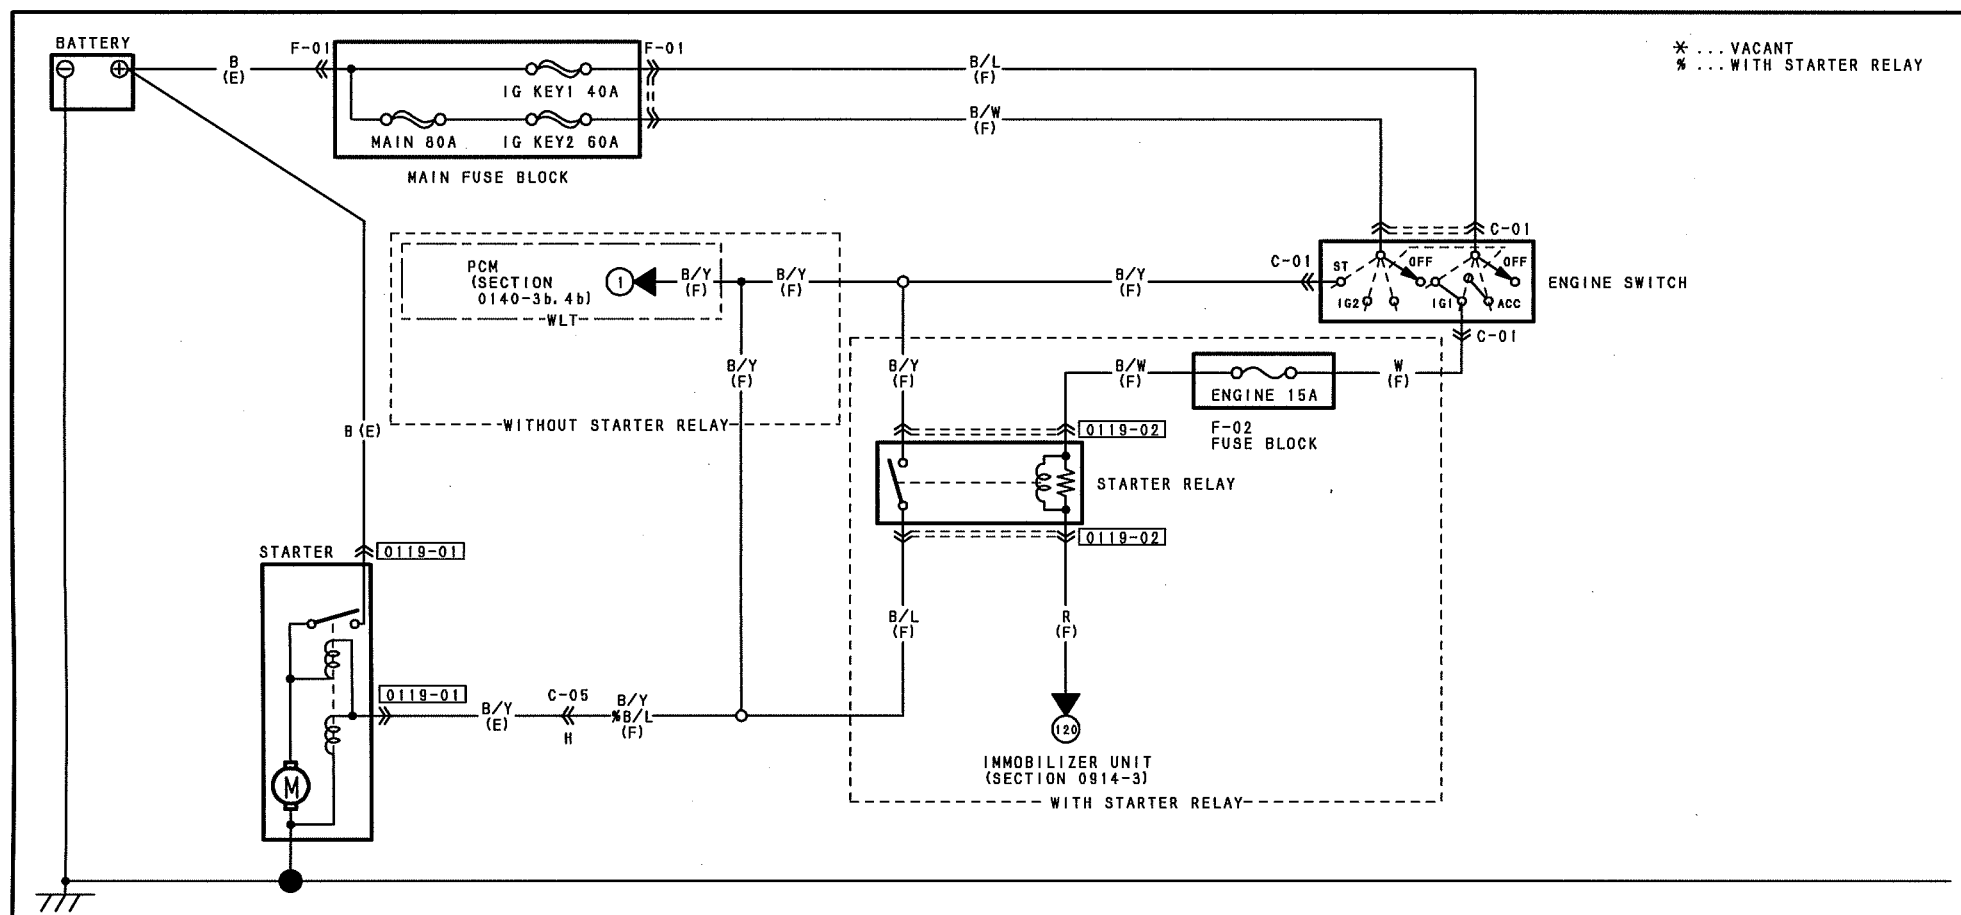

34

0119-01 STARTER (E)		0119-02 STARTER RELAY (F)				

