


REMOTE FREEWHEEL CONTROL SYSTEM

0318-a

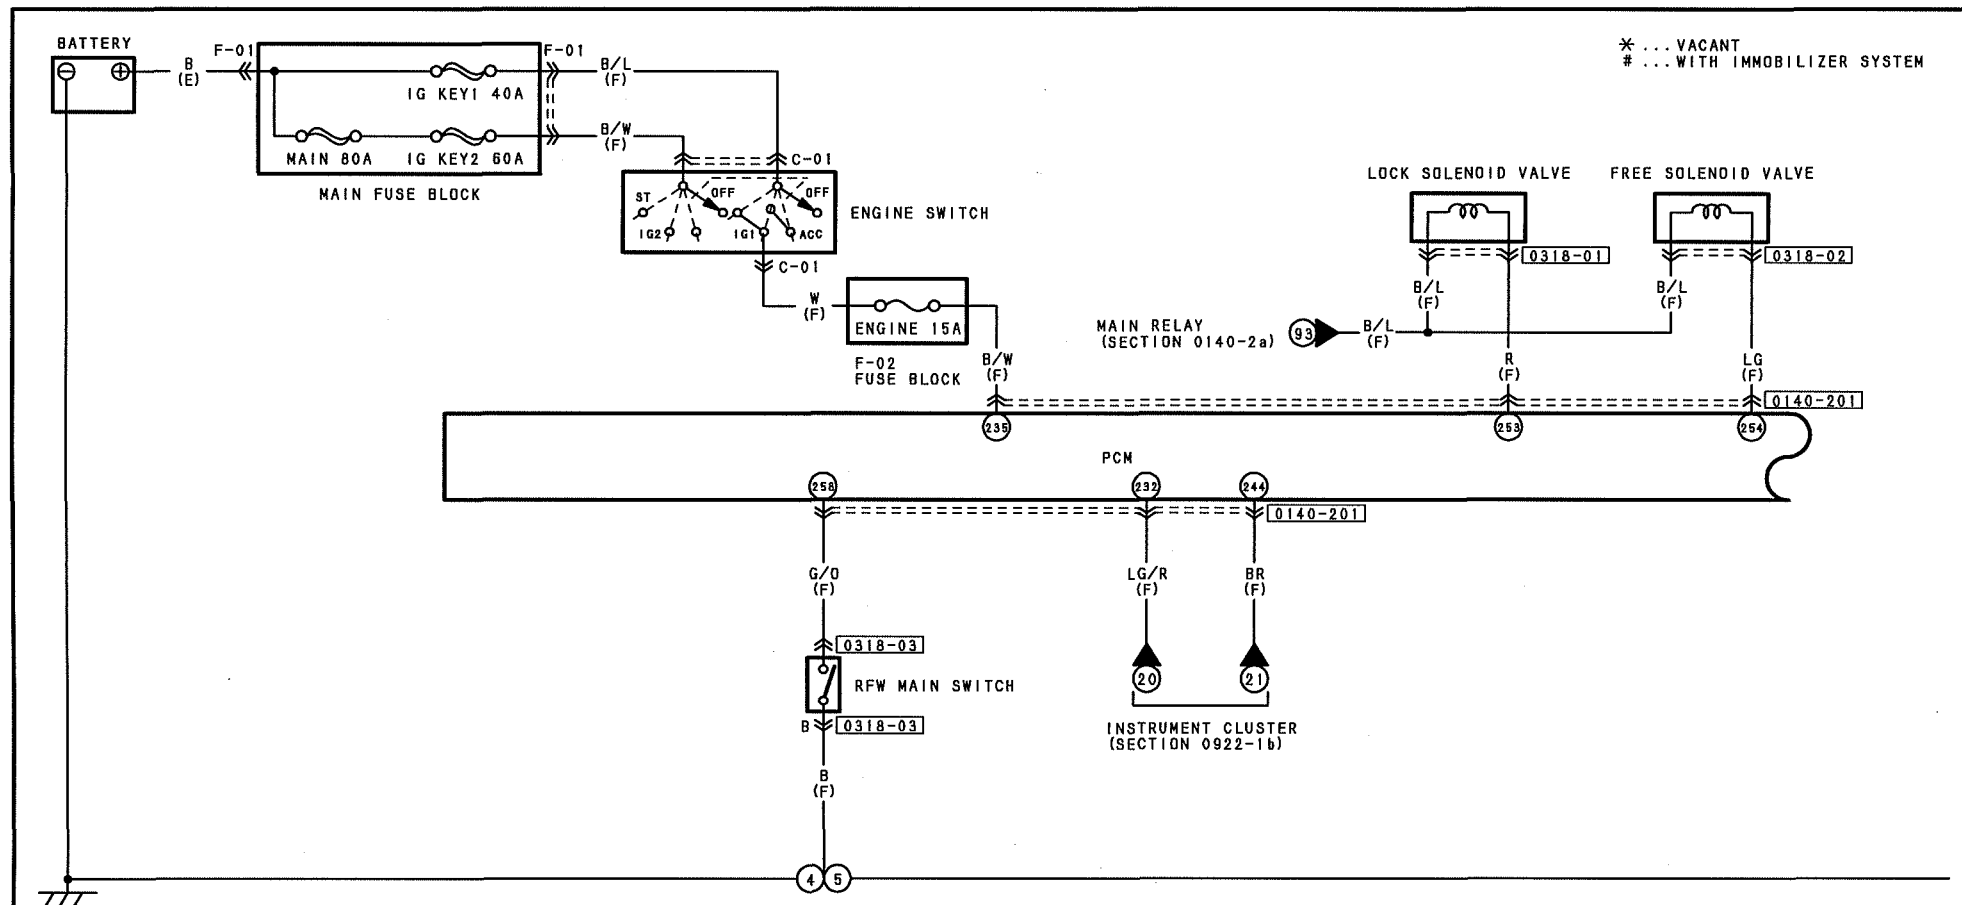


0318-01 LOCK SOLENOID VALVE (F)



0318-02 FREE SOLENOID VALVE (F)



0140-201 PCM (F)





219	218	217	216	215	214	213	212	211	210	209	208	207	206	205	204	203	202	201
LG	W/L	*	*	*	*	BR/W	BR/B	*	P/L	*	*	*	B/L	B/L	B/L	B/L	B/L	B/L
232	231	230	229	228	227	226	225	224	223	222	221	220	219	218	217	216	215	214
LG/R	R/Y	*	*	*	G/B	R	BR/R	B/W	*	R/L	*	*	B/L	B/L	B/L	B/L	B/L	B/L
245	244	243	242	241	240	239	238	237	236	235	234	233	232	231	230	229	228	227
*	BR	*	*	*	B/L	R/W	W/G	*	B/W	*	GY	*	*	*	*	*	*	*
258	257	256	255	254	253	252	251	250	249	248	247	246	245	244	243	242	241	240
G/O	*	V/G	*	LG	R	*	*	*	*	*	*	*	*	*	*	*	*	*



0318-03 RFW MAIN SWITCH (F)




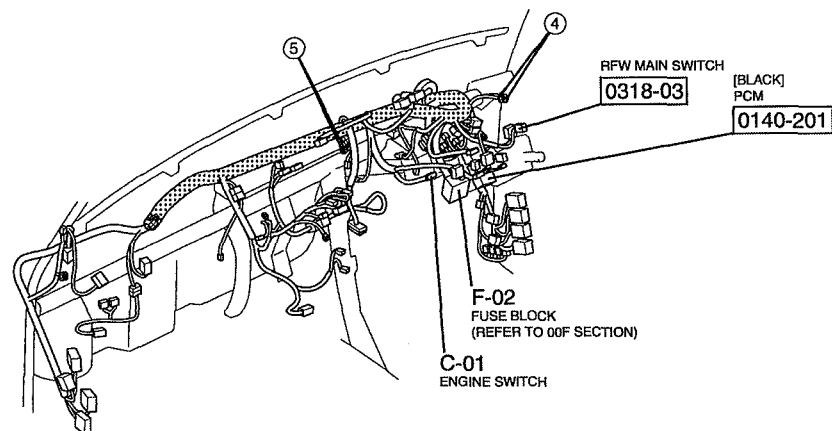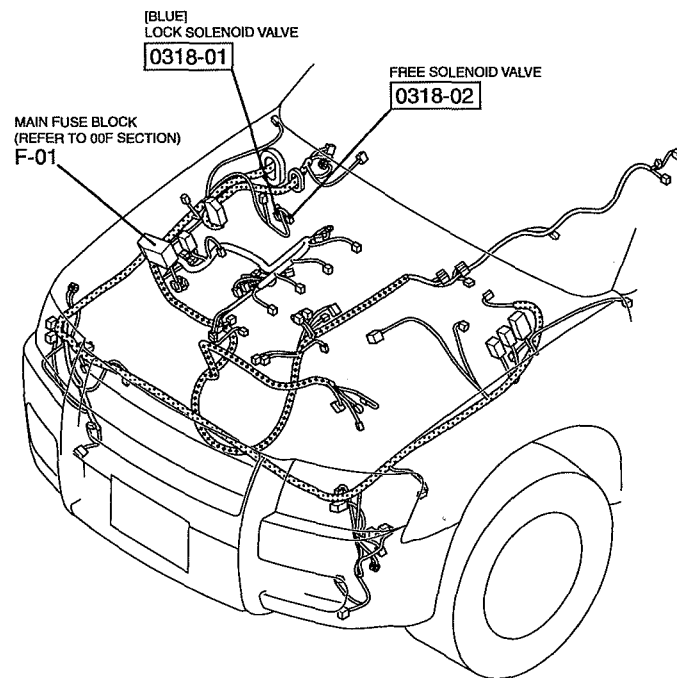


REMOTE FREEWHEEL CONTROL SYSTEM

0318-b


* ... VACANT

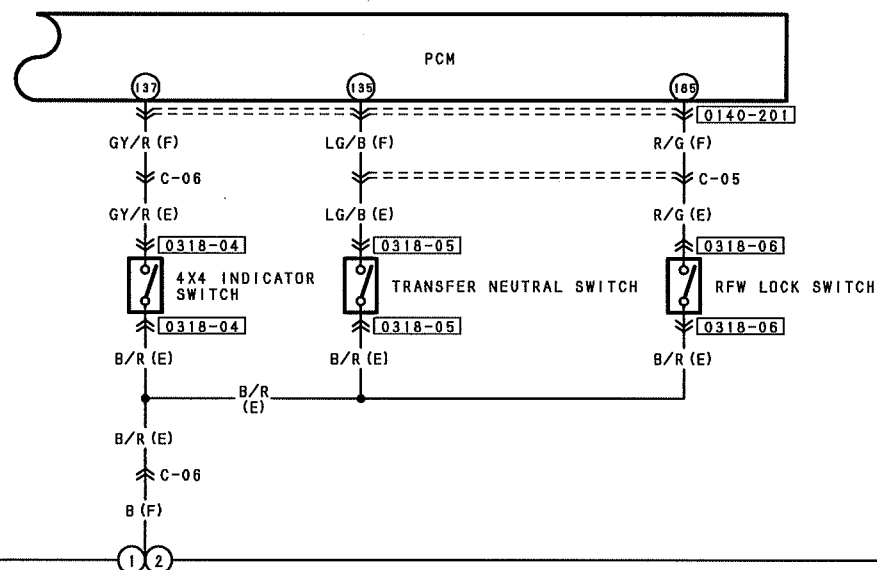

0318-04 4X4 INDICATOR SWITCH (E)



0318-05 TRANSFER NEUTRAL SWITCH (E)





0318-06 RFW LOCK SWITCH (E)




0140-201 PCM (F)

124	123	122	121	120	119	118	117	116	115	114	113	112	111	110	109	108	107	106	105	104	103	102	101
*	*	*	*	*	*	*	*	B/L	L/Y	Y	*	*	B/Y	R/G	LG/R	*	*	L/W	*	*	*	R	LG
148	147	146	145	144	143	142	141	140	139	138	137	136	135	134	133	132	131	130	129	128	127	126	125
*	*	*	*	*	*	*	*	GY/L	W/L	*	*	GY/R	*	LG/B	*	V/R	*	*	B/W	R/B	*	BR/W	P
172	171	170	169	168	167	166	165	164	163	162	161	160	159	158	157	156	155	154	153	152	151	150	149
*	P	W	V/Y	*	L/O	*	*	*	*	G/W	G/Y	*	*	BR/Y	W/R	B/O	*	L/B	*	BR	W		
196	195	194	193	192	191	190	189	188	187	186	185	184	183	182	181	180	179	178	177	176	175	174	173
*	V	BR	L	G	O	BR/W	R/Y	GY	*	*	R/G	G/R	*	BR	W/G	*	L/R	Y/B	R/W	LG/B	*	V	B/Y

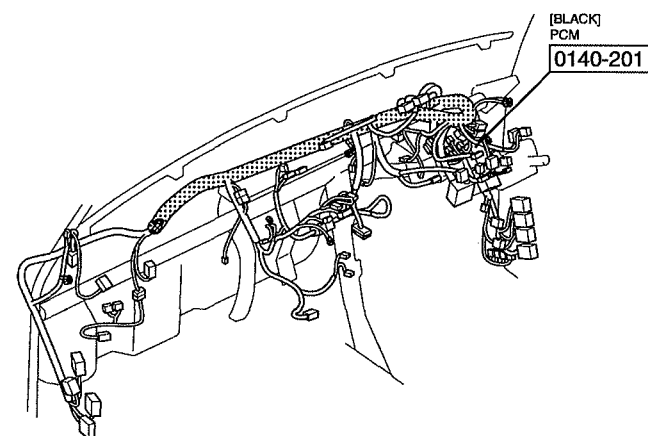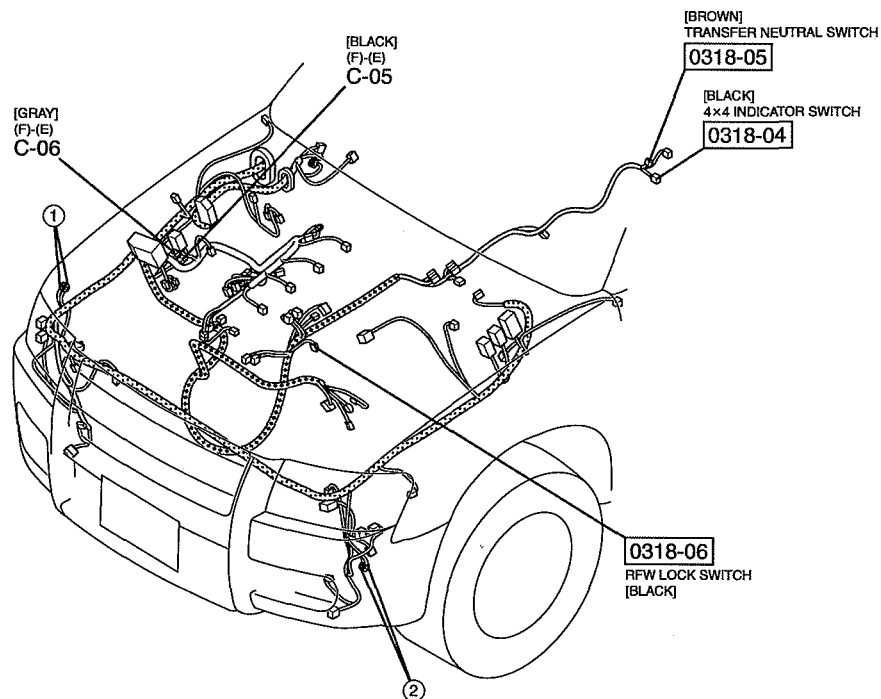



4X4 CONTROL SYSTEM

0318-3a

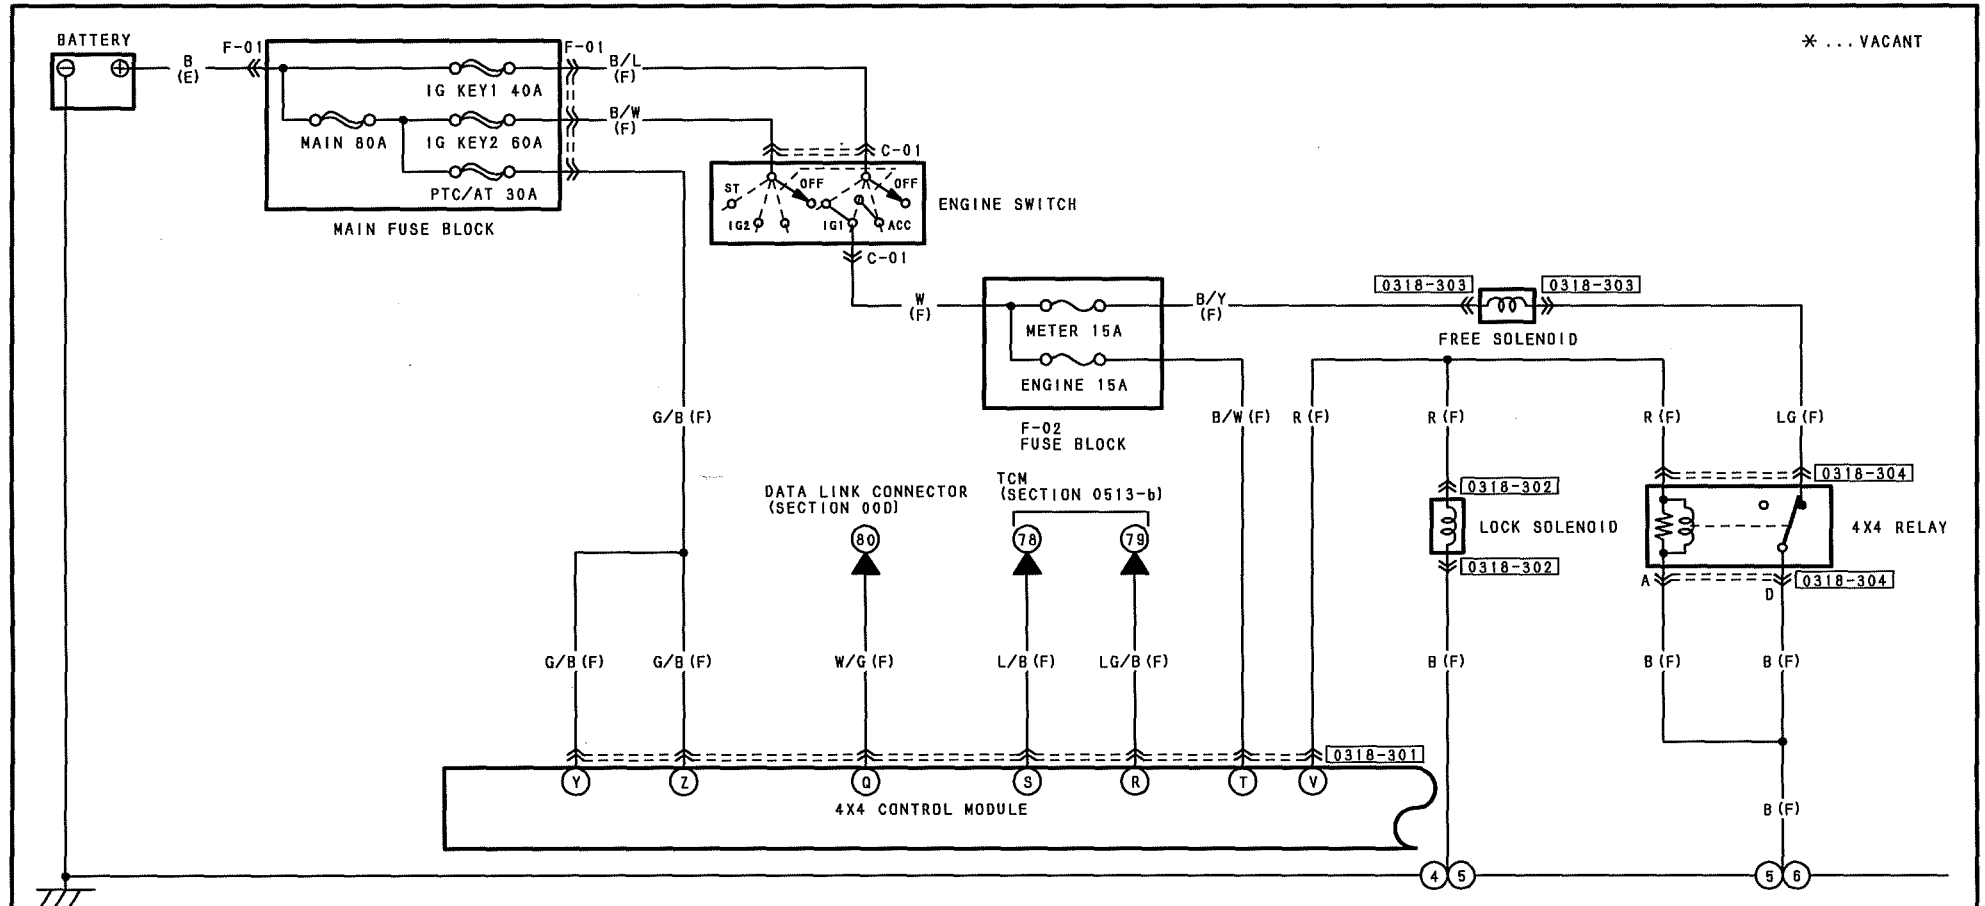

0318-301	4X4 CONTROL MODULE (F)	0318-302	LOCK SOLENOID (F)	0318-303	FREE SOLENOID (F)																																							
Y W U S Q O M K I G E C A <table><tr><td>G/B</td><td>B</td><td>R/Y</td><td>L/B</td><td>W/G</td><td>*</td><td>R</td><td>*</td><td>B/Y</td><td>W</td><td>V</td><td>R/B</td><td>W/L</td></tr><tr><td>G/B</td><td>B</td><td>R</td><td>B/W</td><td>LG/B</td><td>*</td><td>R/W</td><td>B/R</td><td>B/L</td><td>B/W</td><td>W/R</td><td>R/B</td><td>W/L</td></tr><tr><td>Z</td><td>X</td><td>V</td><td>T</td><td>R</td><td>P</td><td>N</td><td>L</td><td>J</td><td>H</td><td>F</td><td>D</td><td>B</td></tr></table>		G/B	B	R/Y	L/B	W/G	*	R	*	B/Y	W	V	R/B	W/L	G/B	B	R	B/W	LG/B	*	R/W	B/R	B/L	B/W	W/R	R/B	W/L	Z	X	V	T	R	P	N	L	J	H	F	D	B	R B S		LG B/Y S	
G/B	B	R/Y	L/B	W/G	*	R	*	B/Y	W	V	R/B	W/L																																
G/B	B	R	B/W	LG/B	*	R/W	B/R	B/L	B/W	W/R	R/B	W/L																																
Z	X	V	T	R	P	N	L	J	H	F	D	B																																
		0318-304	4X4 RELAY (F)																																									
		A <table><tr><td>R</td><td>LG</td><td>B</td></tr><tr><td colspan="3">*</td></tr><tr><td>B</td><td colspan="2">D</td></tr></table>		R	LG	B	*			B	D																																	
R	LG	B																																										
*																																												
B	D																																											


55A

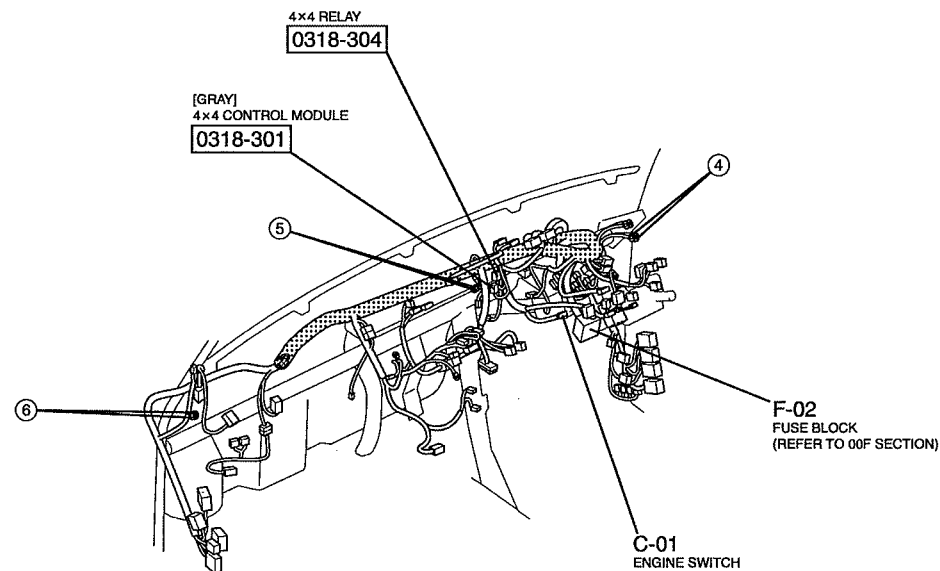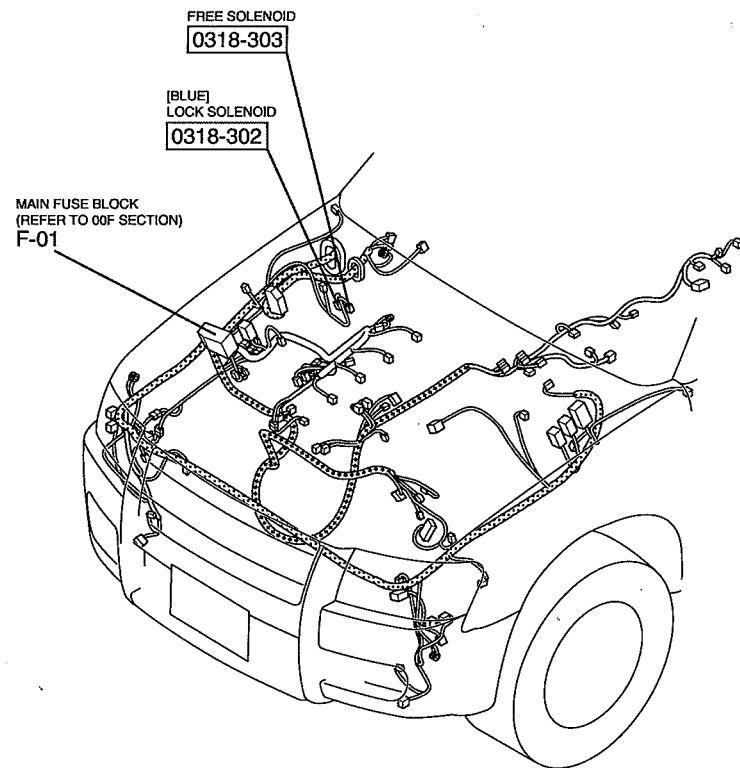


4X4 CONTROL SYSTEM

0318-3b


* ... VACANT

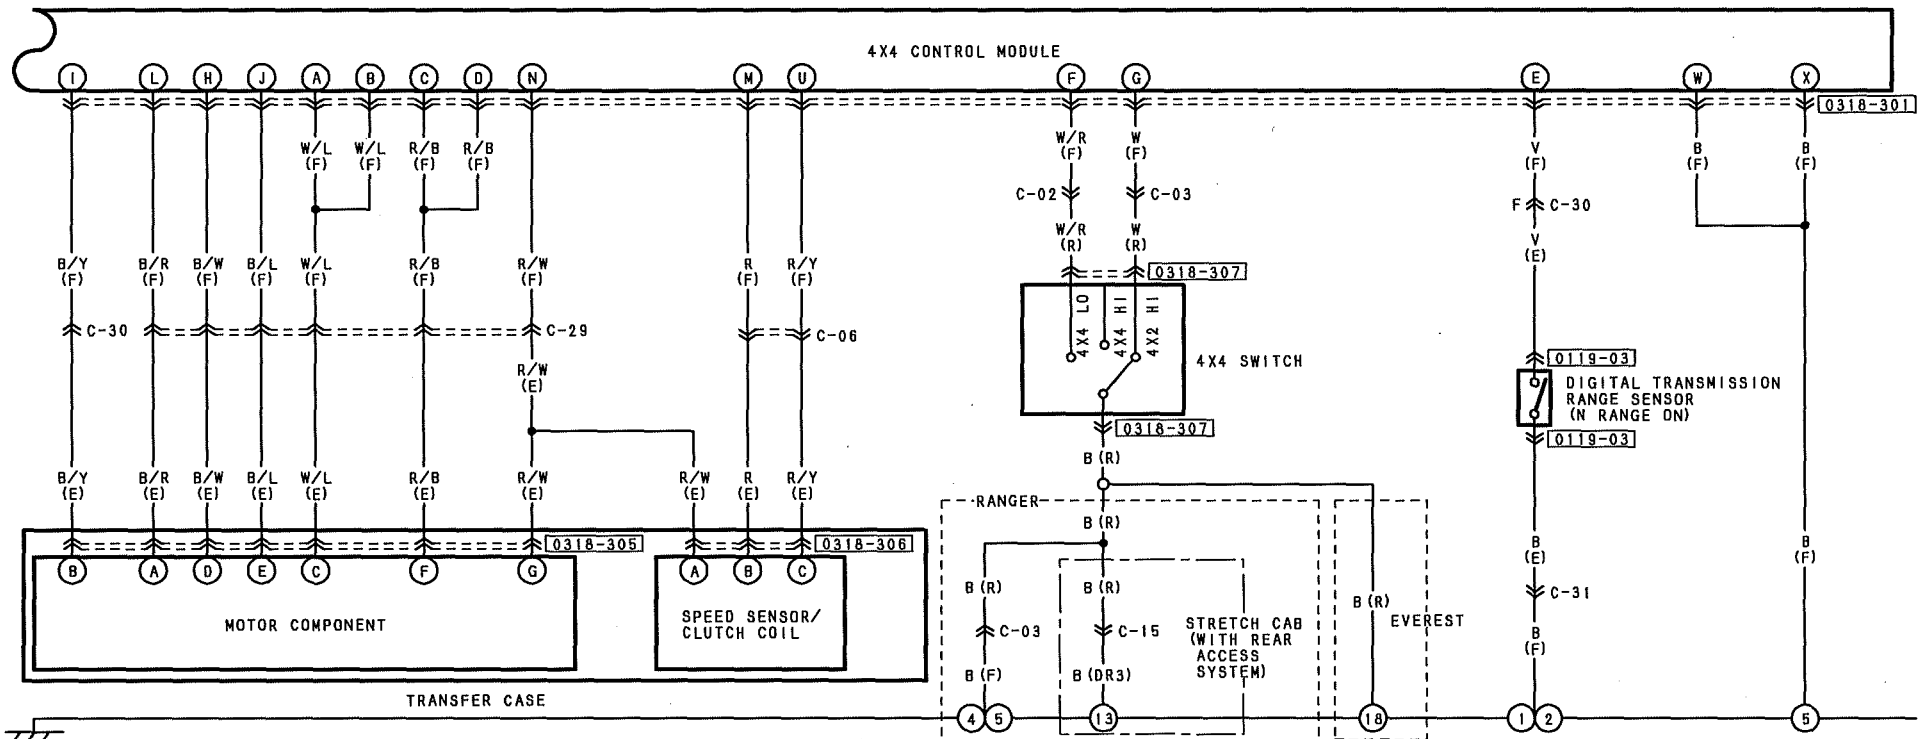


0318-301 4X4 CONTROL MODULE (F)

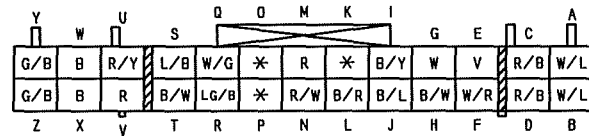


0318-307 4X4 SWITCH (R)




0318-305 MOTOR COMPONENT (E)

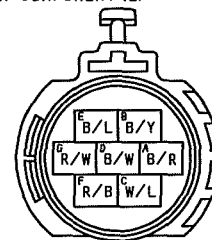

0318-306 SPEED SENSOR/CLUTCH COIL (E)




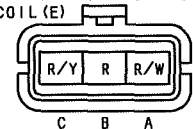


0119-03 DIGITAL TRANSMISSION RANGE SENSOR (E)

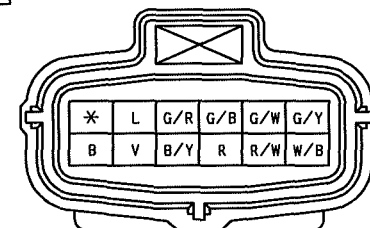

55C

HARNESS SYMBOL:  (F)  (E)  (R)

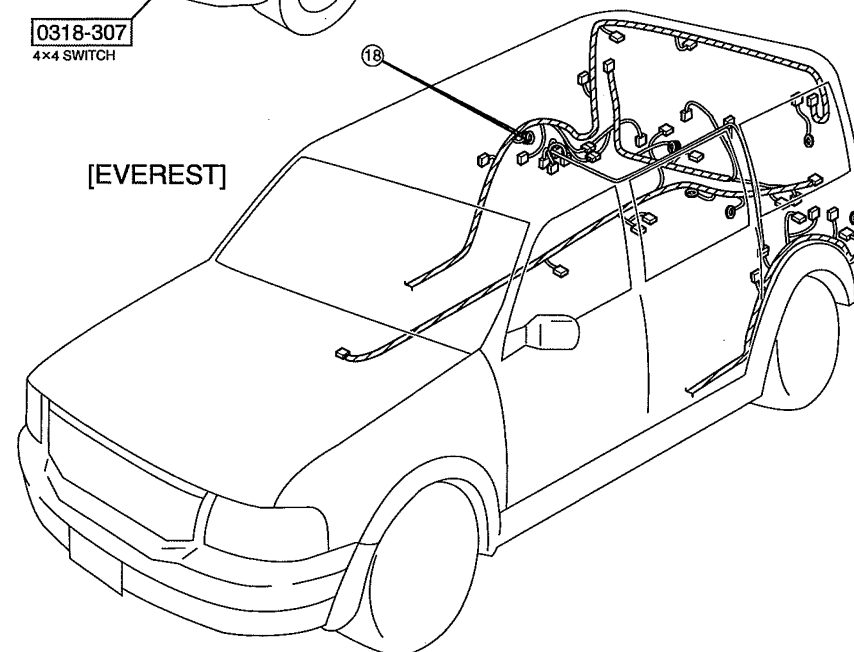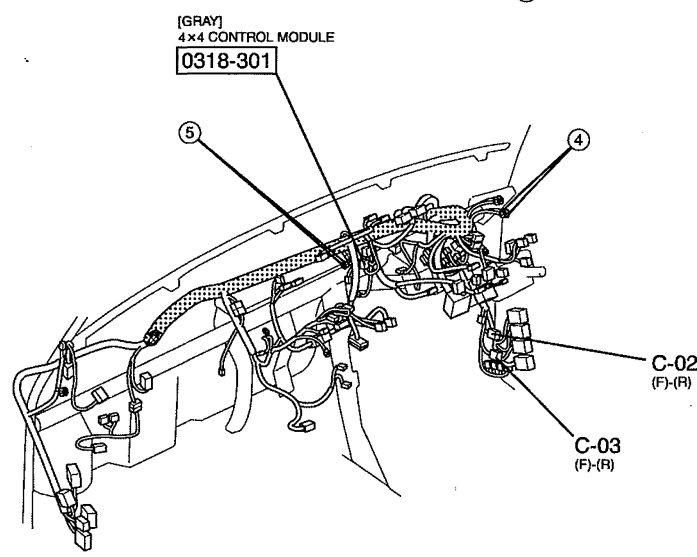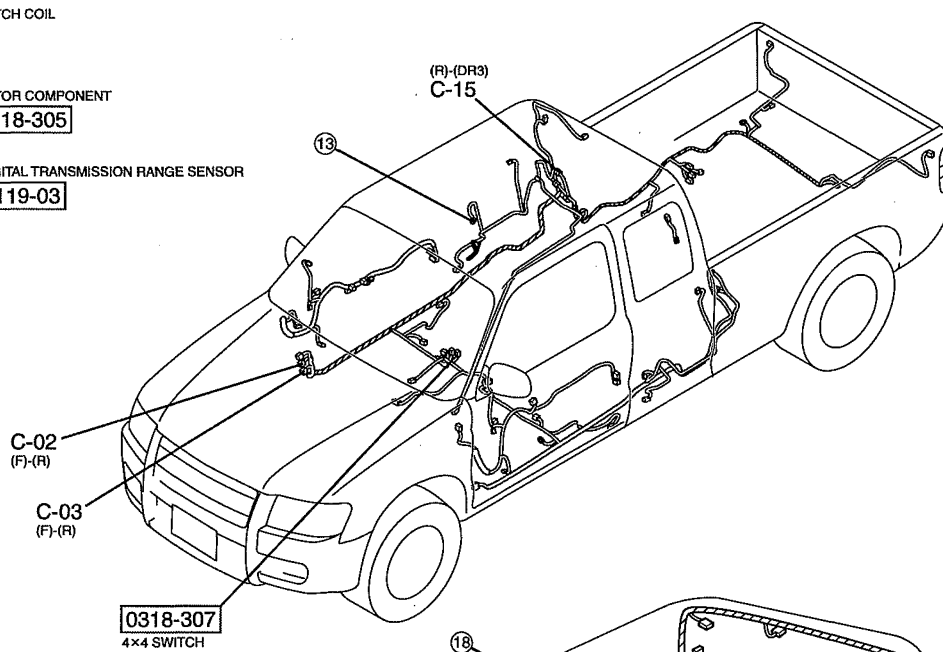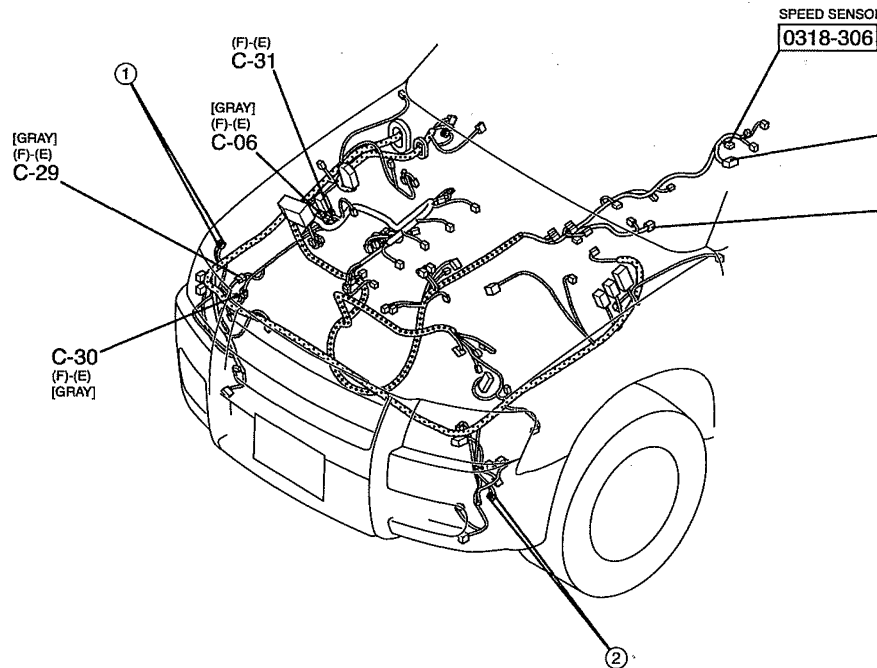

03 DRIVELINE/AXLE
18 4-WHEEL DRIVE

0318-3b

55D