
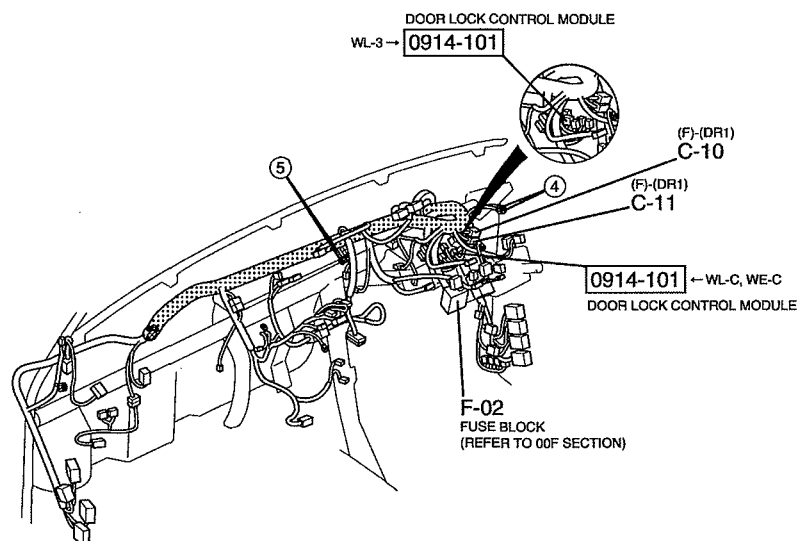
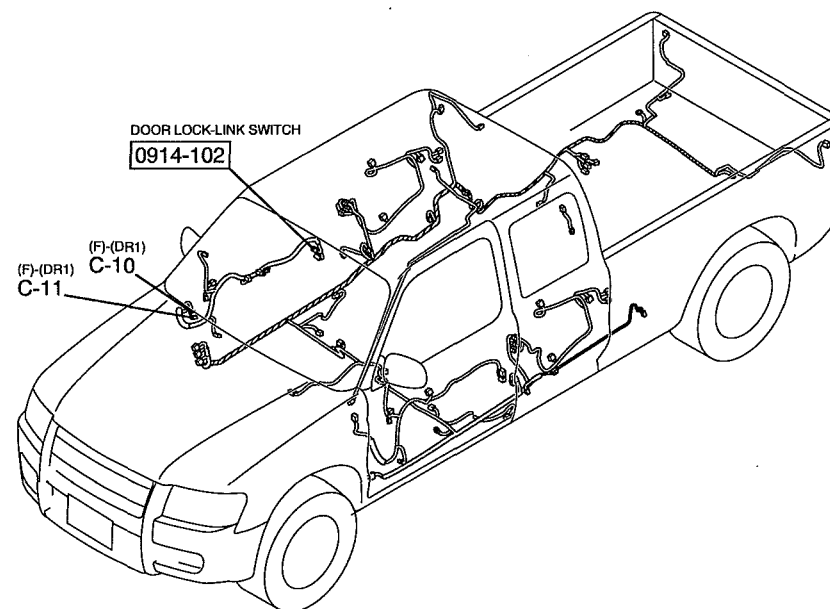


76


76

76


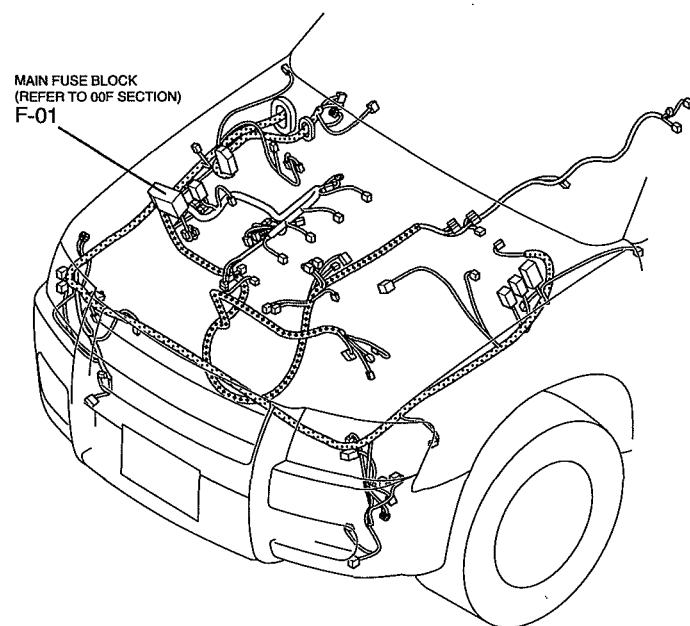


POWER DOOR LOCK SYSTEM

0914-1b

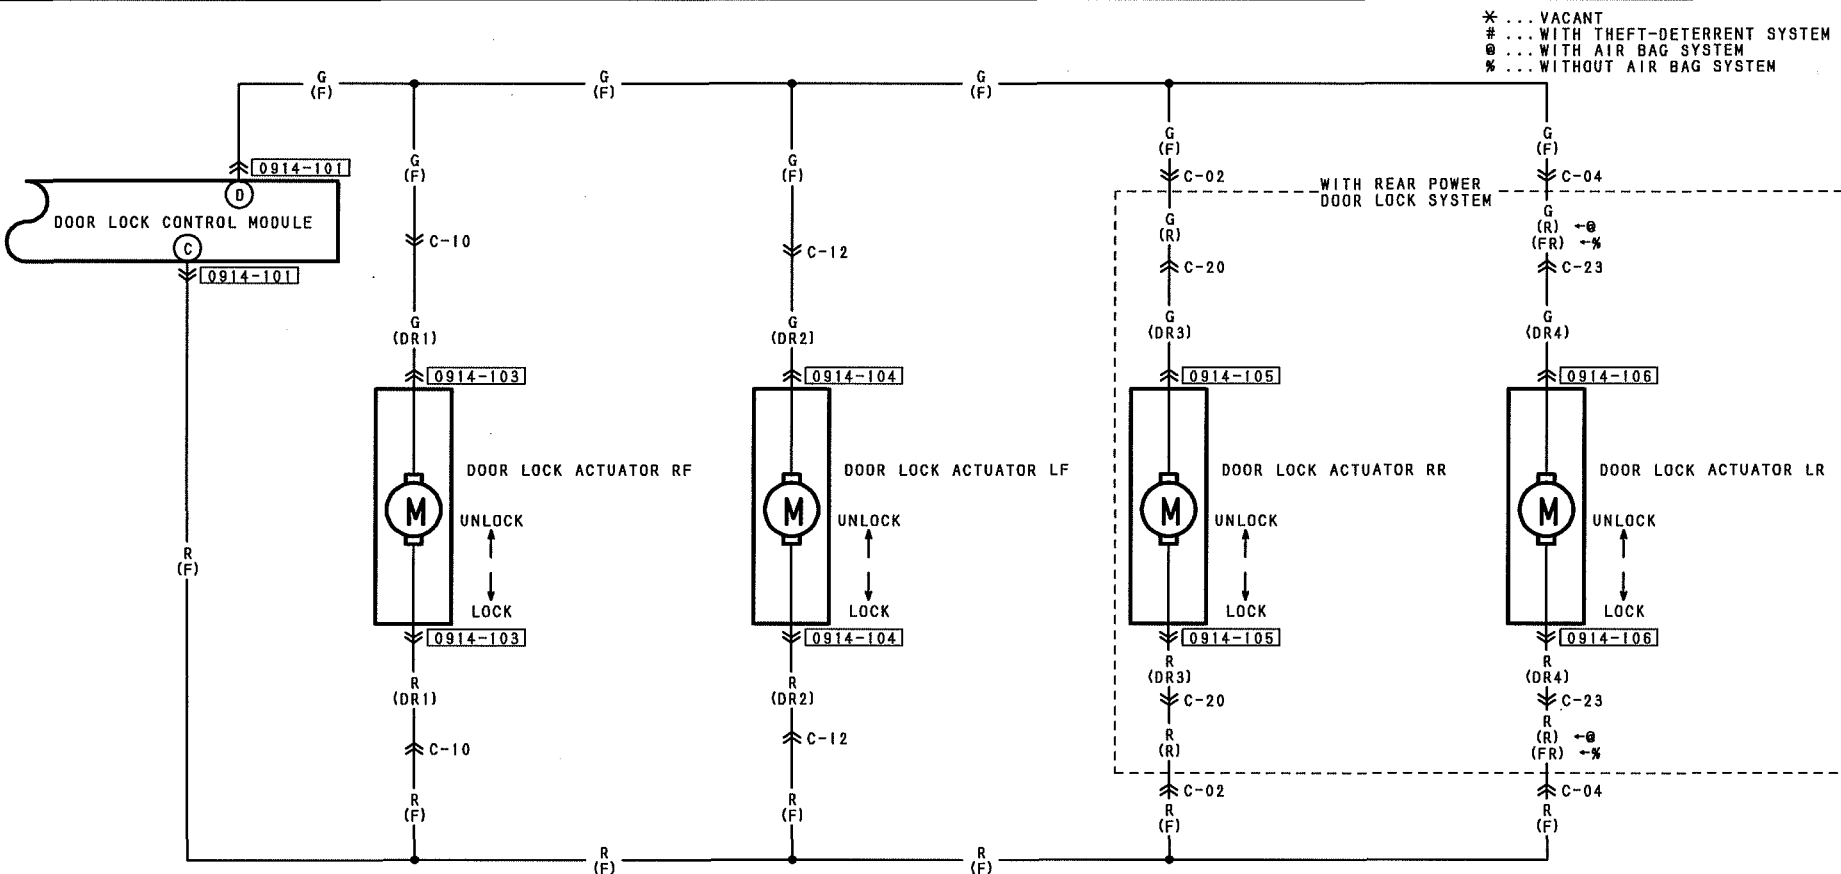


0914-101 DOOR LOCK CONTROL MODULE (F)	0914-103 DOOR LOCK ACTUATOR RF (DR1)	0914-104 DOOR LOCK ACTUATOR LF (DR2)	
	0914-105 DOOR LOCK ACTUATOR RR (DR3)	0914-106 DOOR LOCK ACTUATOR LR (DR4)	

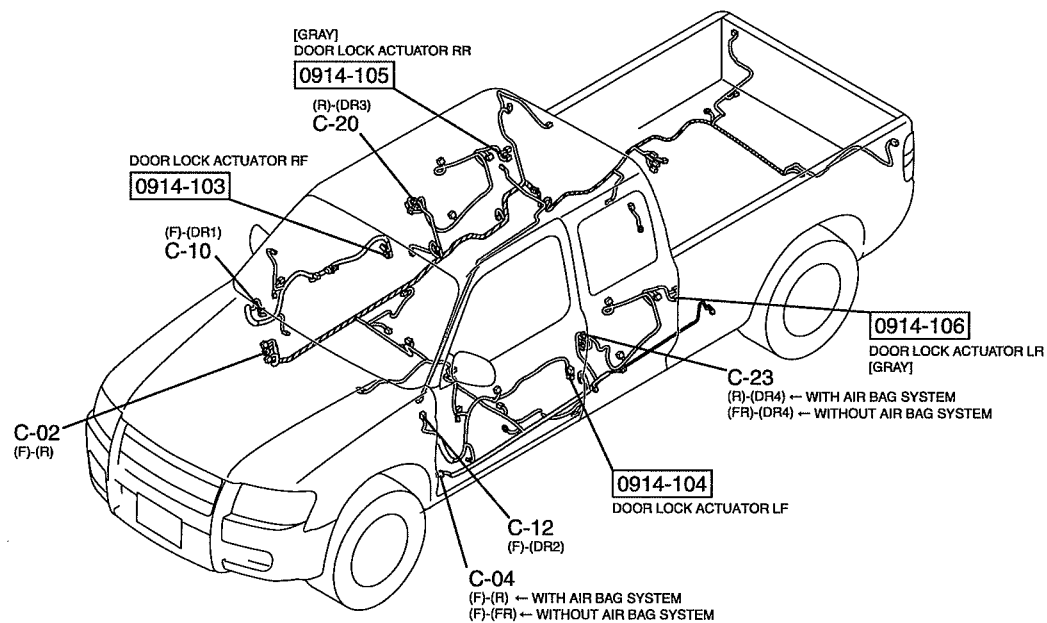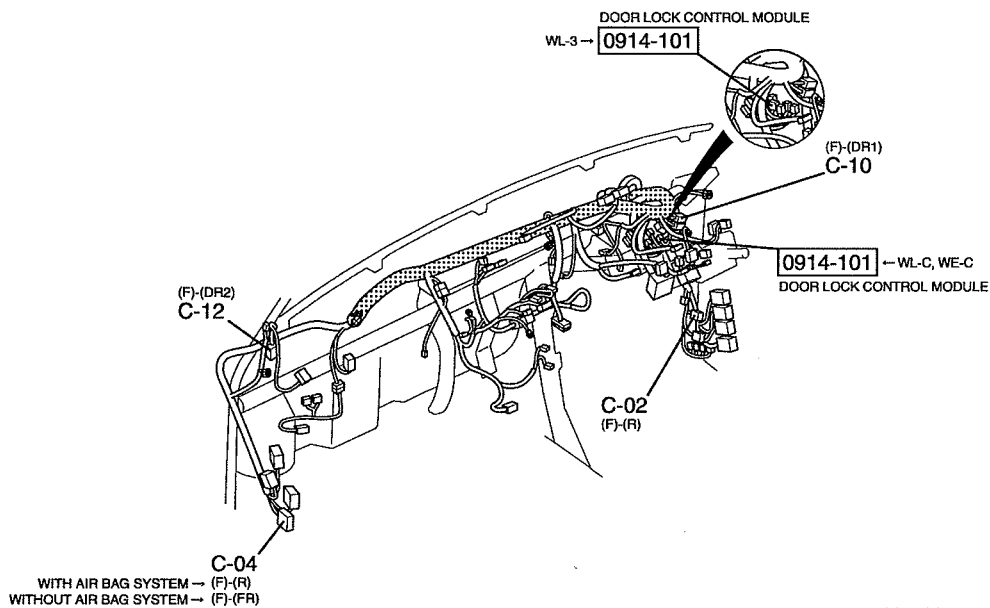


KEYLESS CONTROL MODULE

0914-2

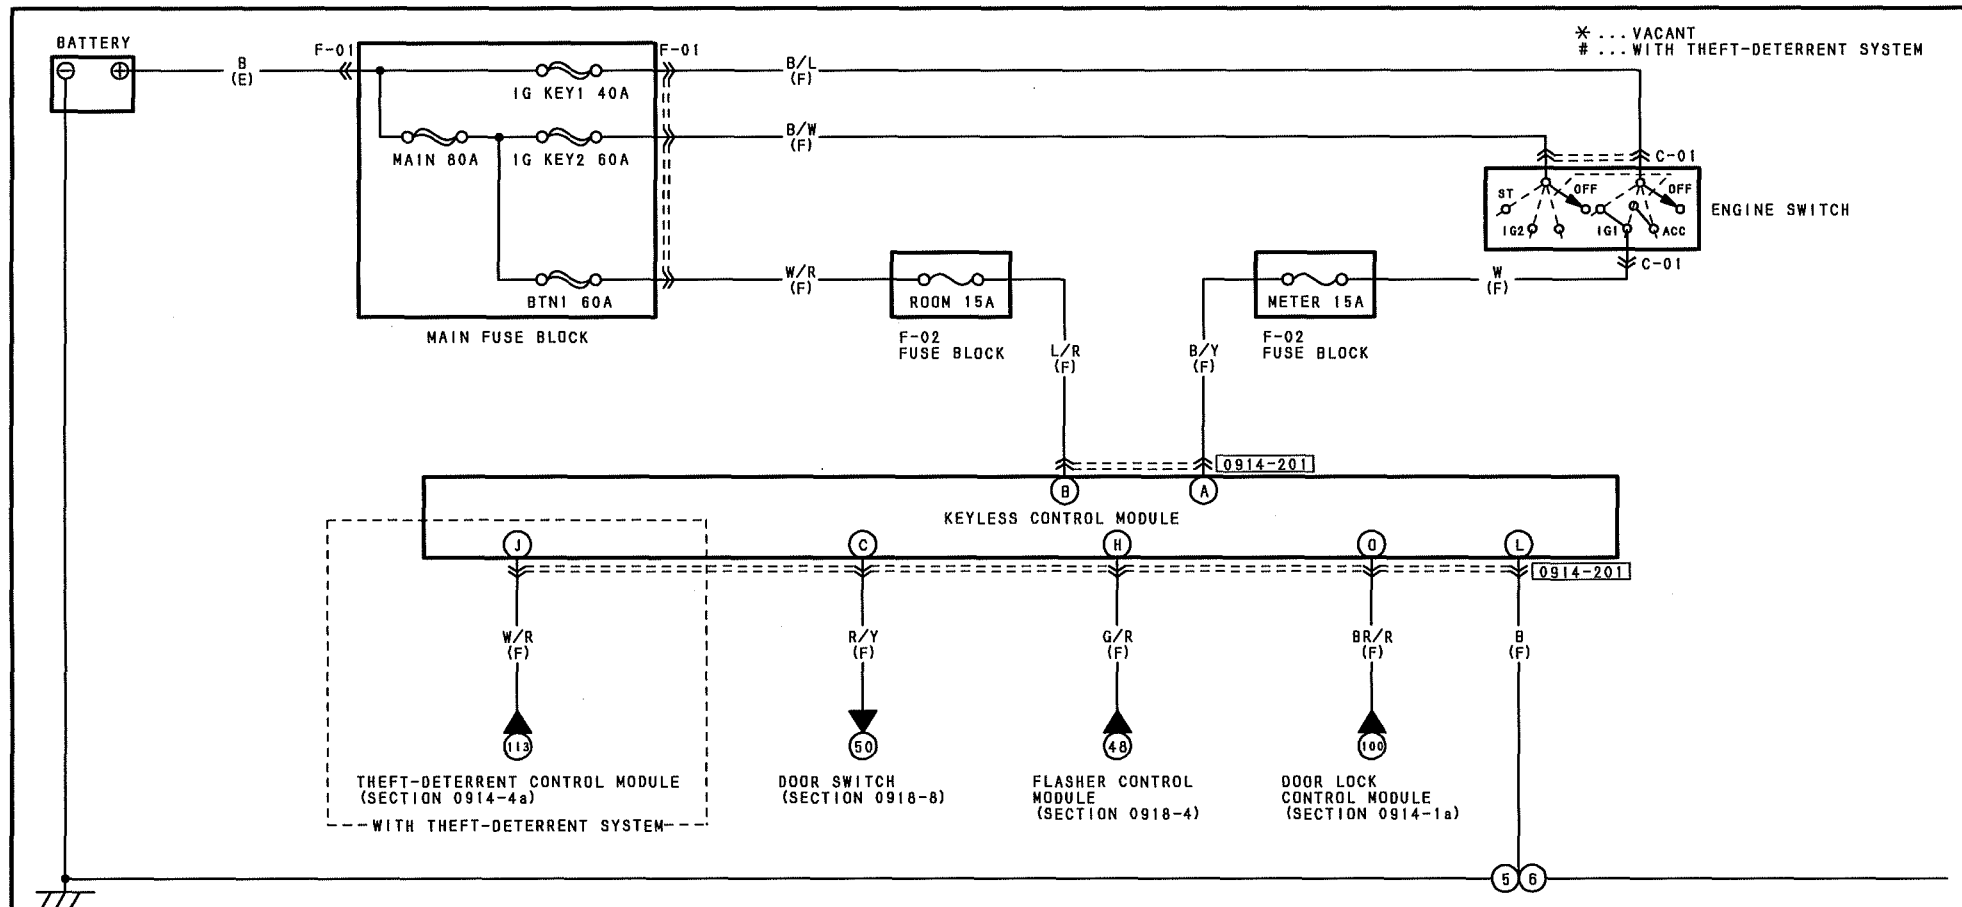


0914-201 KEYLESS CONTROL MODULE (F)

O	M	K	I	G	E	C	A
BR/R	*	*	*	*	*	R/Y	B/Y
*	*	B	#W/R	G/R	*	*	L/R
P	N	L	J	H	F	D	B

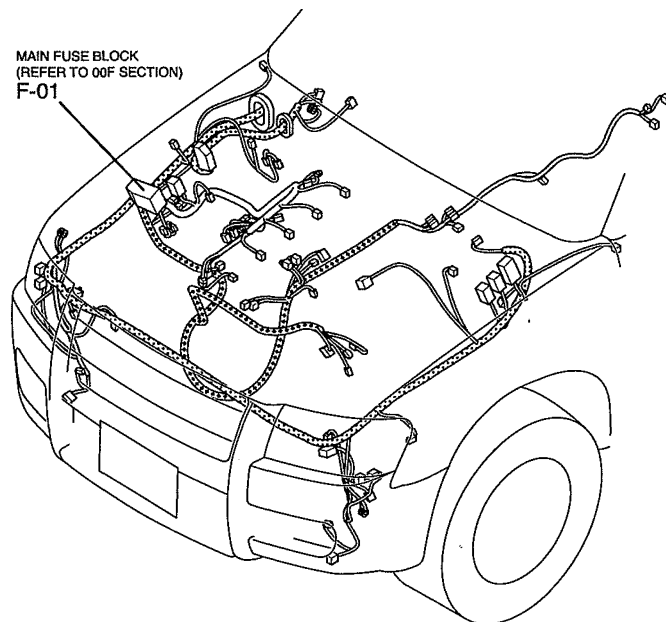

MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-01

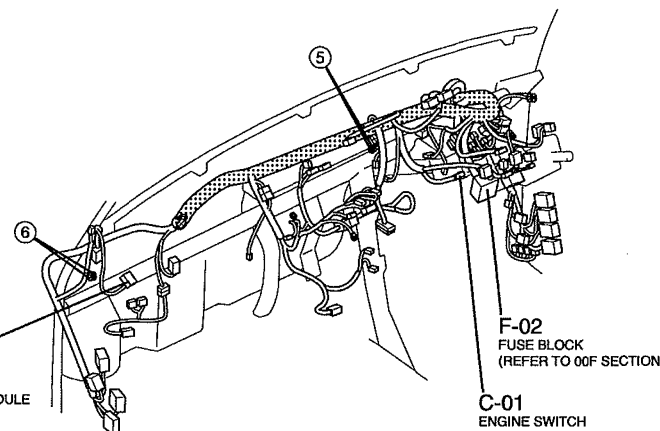


0914-201
KEYLESS CONTROL MODULE




F-02
FUSE BLOCK
(REFER TO 00F SECTION)



C-01
ENGINE SWITCH

IMMOBILIZER SYSTEM

0914-3

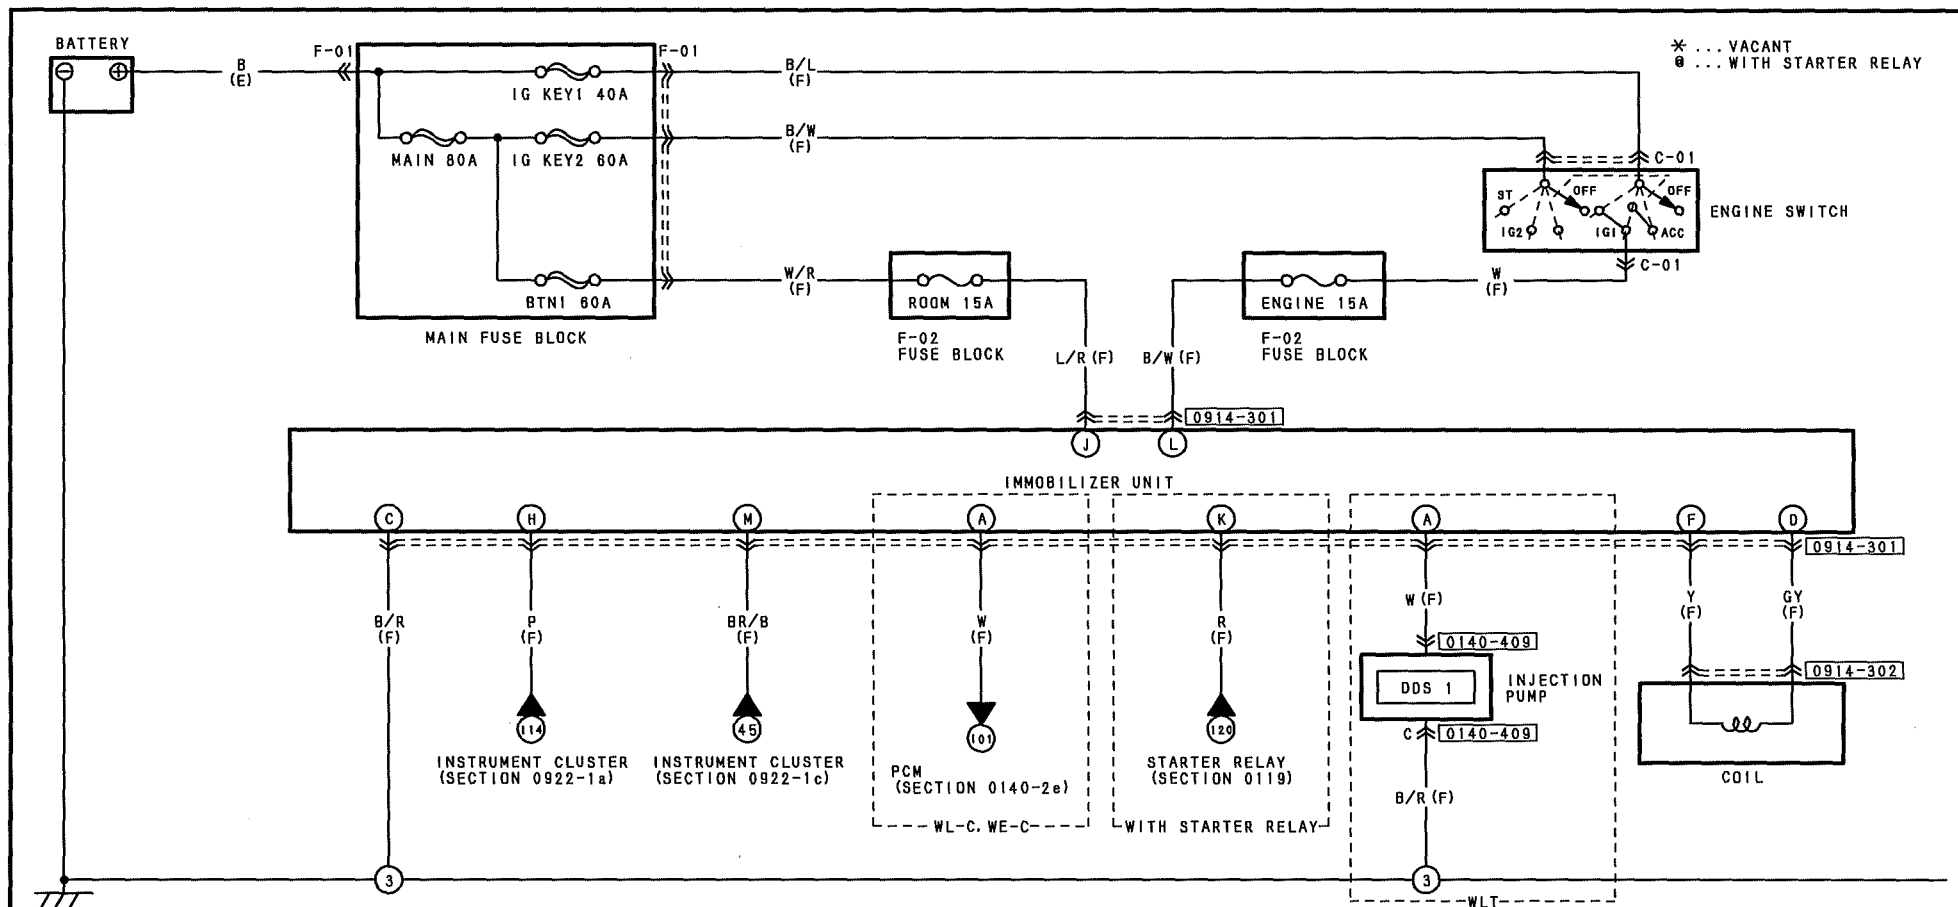


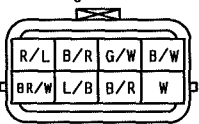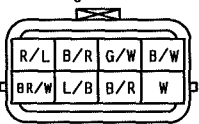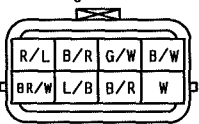0914-301	IMMOBILIZER UNIT (F)	0914-302	COIL (F)	0140-409	INJECTION PUMP (F)																																		
	<table><tr><td>M</td><td>K</td><td></td><td>E</td><td>C</td><td>A</td></tr><tr><td>BR/B</td><td>* OR</td><td></td><td>*</td><td>B/R</td><td>W</td></tr><tr><td>*</td><td>B/W</td><td>L/R</td><td>P</td><td>Y</td><td>GY</td><td>*</td></tr><tr><td>N</td><td>L</td><td>J</td><td>H</td><td>F</td><td>D</td><td>B</td></tr></table>	M	K		E	C	A	BR/B	* OR		*	B/R	W	*	B/W	L/R	P	Y	GY	*	N	L	J	H	F	D	B	<table><tr><td>GY</td><td>* </td><td>Y</td></tr></table>	GY	* 	Y	<table><tr><td colspan="4"></td><td></td></tr></table>							
M	K		E	C	A																																		
BR/B	* OR		*	B/R	W																																		
*	B/W	L/R	P	Y	GY	*																																	
N	L	J	H	F	D	B																																	
GY	* 	Y																																					
																																							

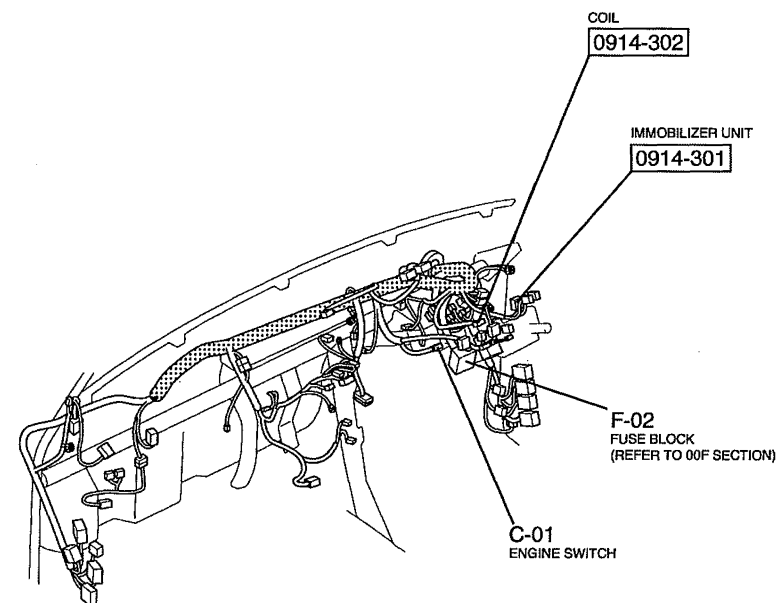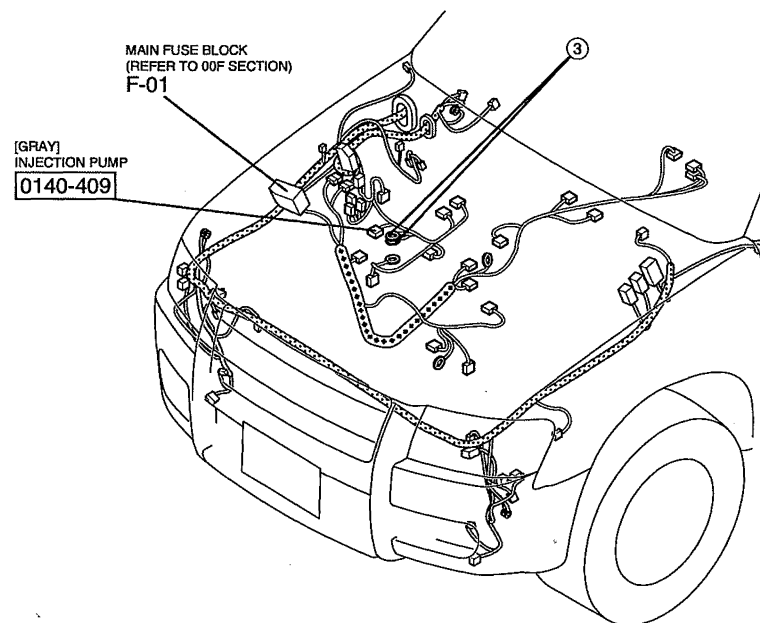


THEFT-DETERRENT SYSTEM


0914-4a

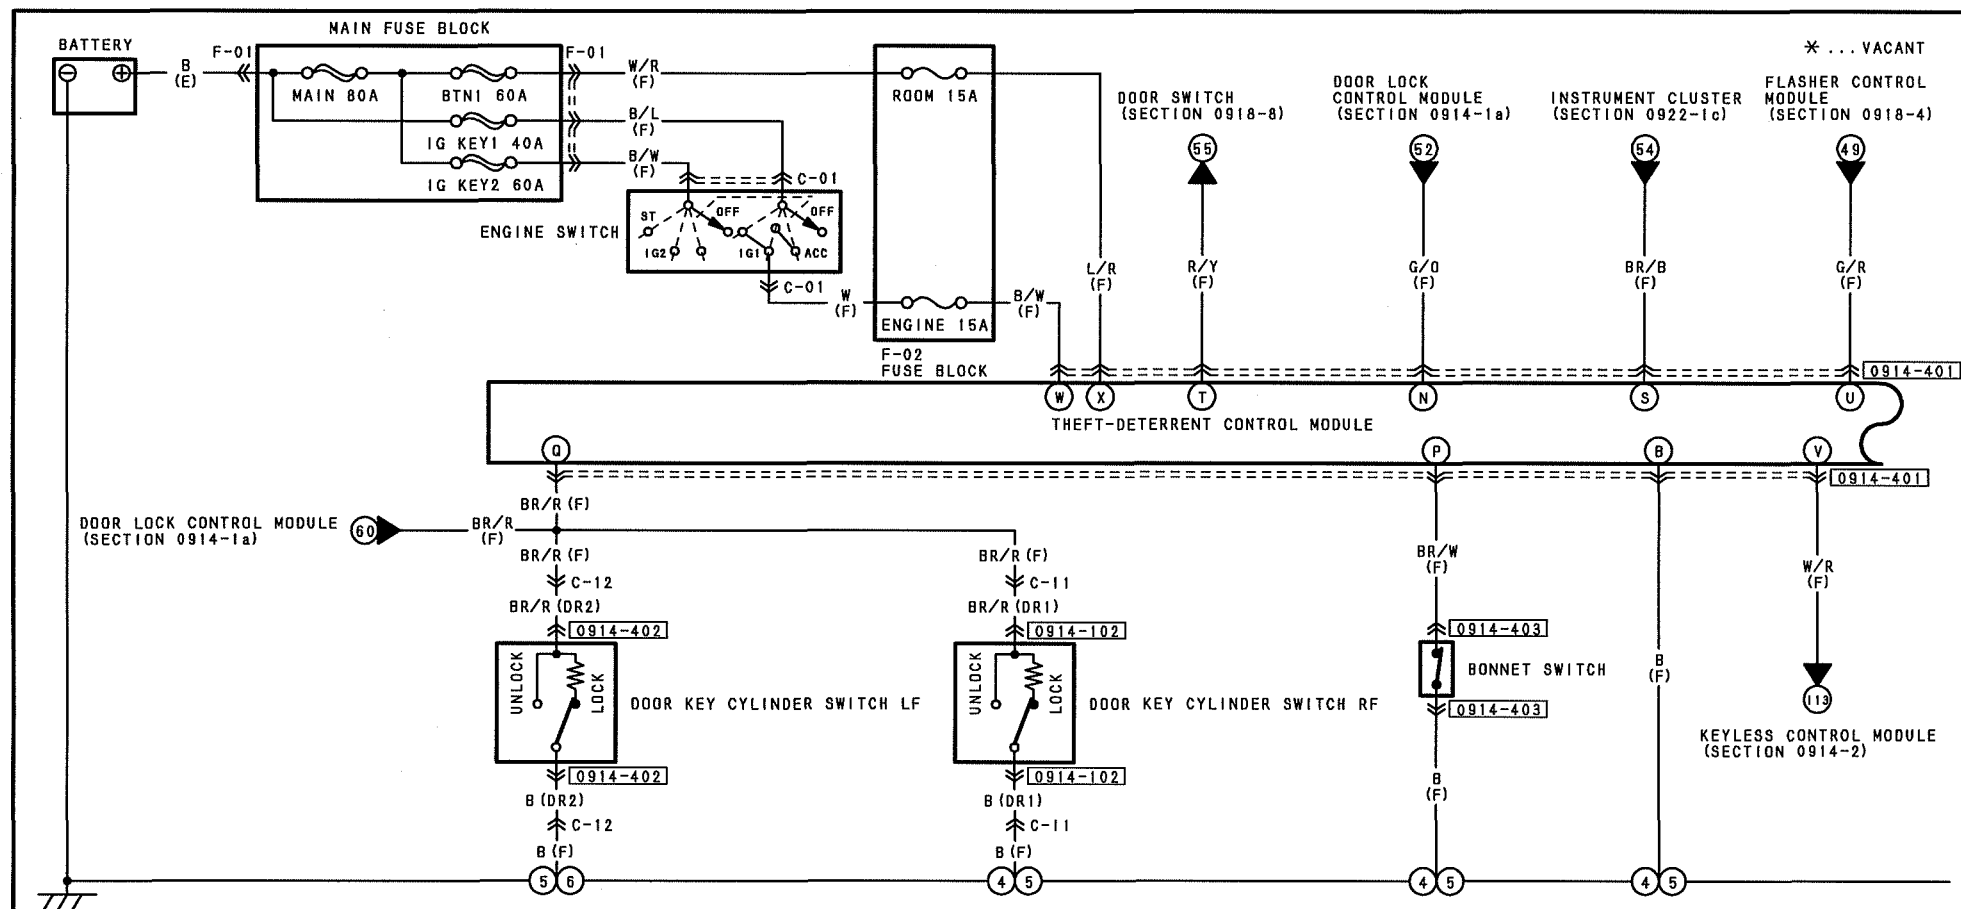


0914-401 THEFT-DETERRENT CONTROL MODULE (F)

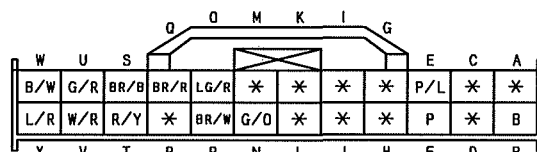

0914-402 DOOR KEY CYLINDER SWITCH LF (DR2)



0914-102 DOOR KEY CYLINDER SWITCH RF (DR1)




0914-403 BONNET SWITCH (F)




MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-01

[BLACK]
BONNET SWITCH
0914-403

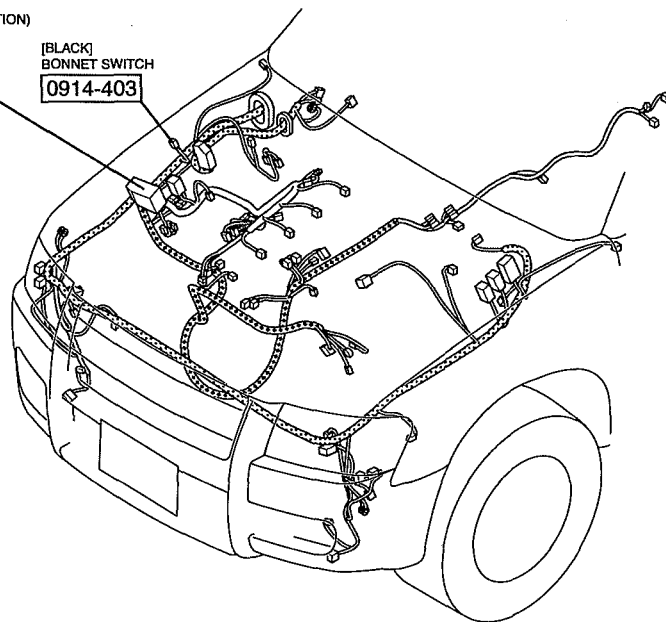


DOOR KEY CYLINDER SWITCH RF
0914-102

(F)-(DR1)
C-11

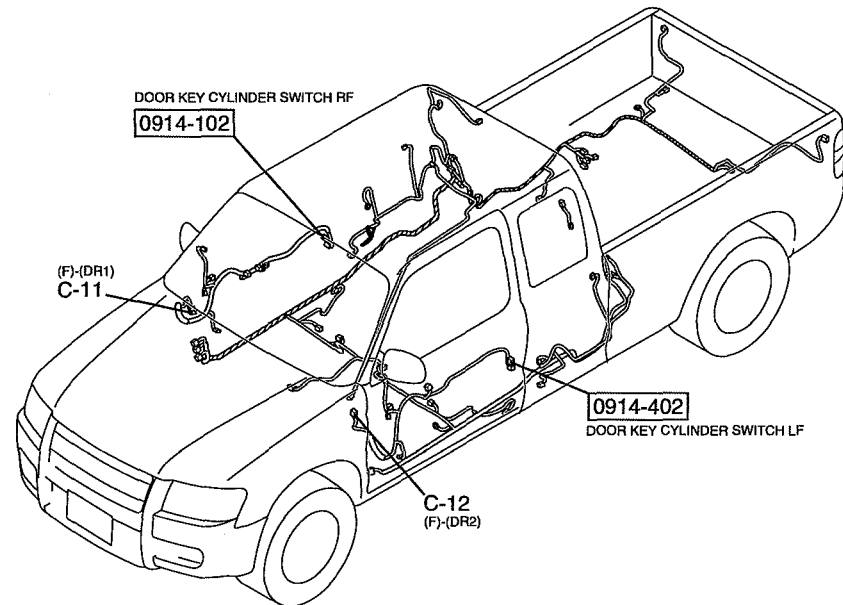

0914-402
DOOR KEY CYLINDER SWITCH LF

C-12
(F)-(DR2)

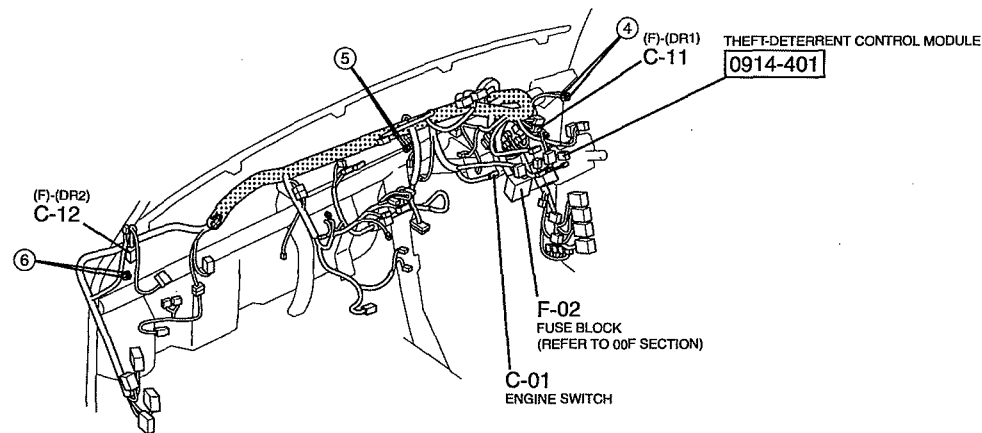

THEFT-DETERRENT CONTROL MODULE
0914-401

(F)-(DR1)
C-11

F-02
FUSE BLOCK
(REFER TO 00F SECTION)


C-01
ENGINE SWITCH

(F)-(DR2)
C-12

THEFT-DETERRENT SYSTEM

0914-4b


* ... VACANT
 @ ... WITH AIR BAG SYSTEM
 % ... WITHOUT AIR BAG SYSTEM

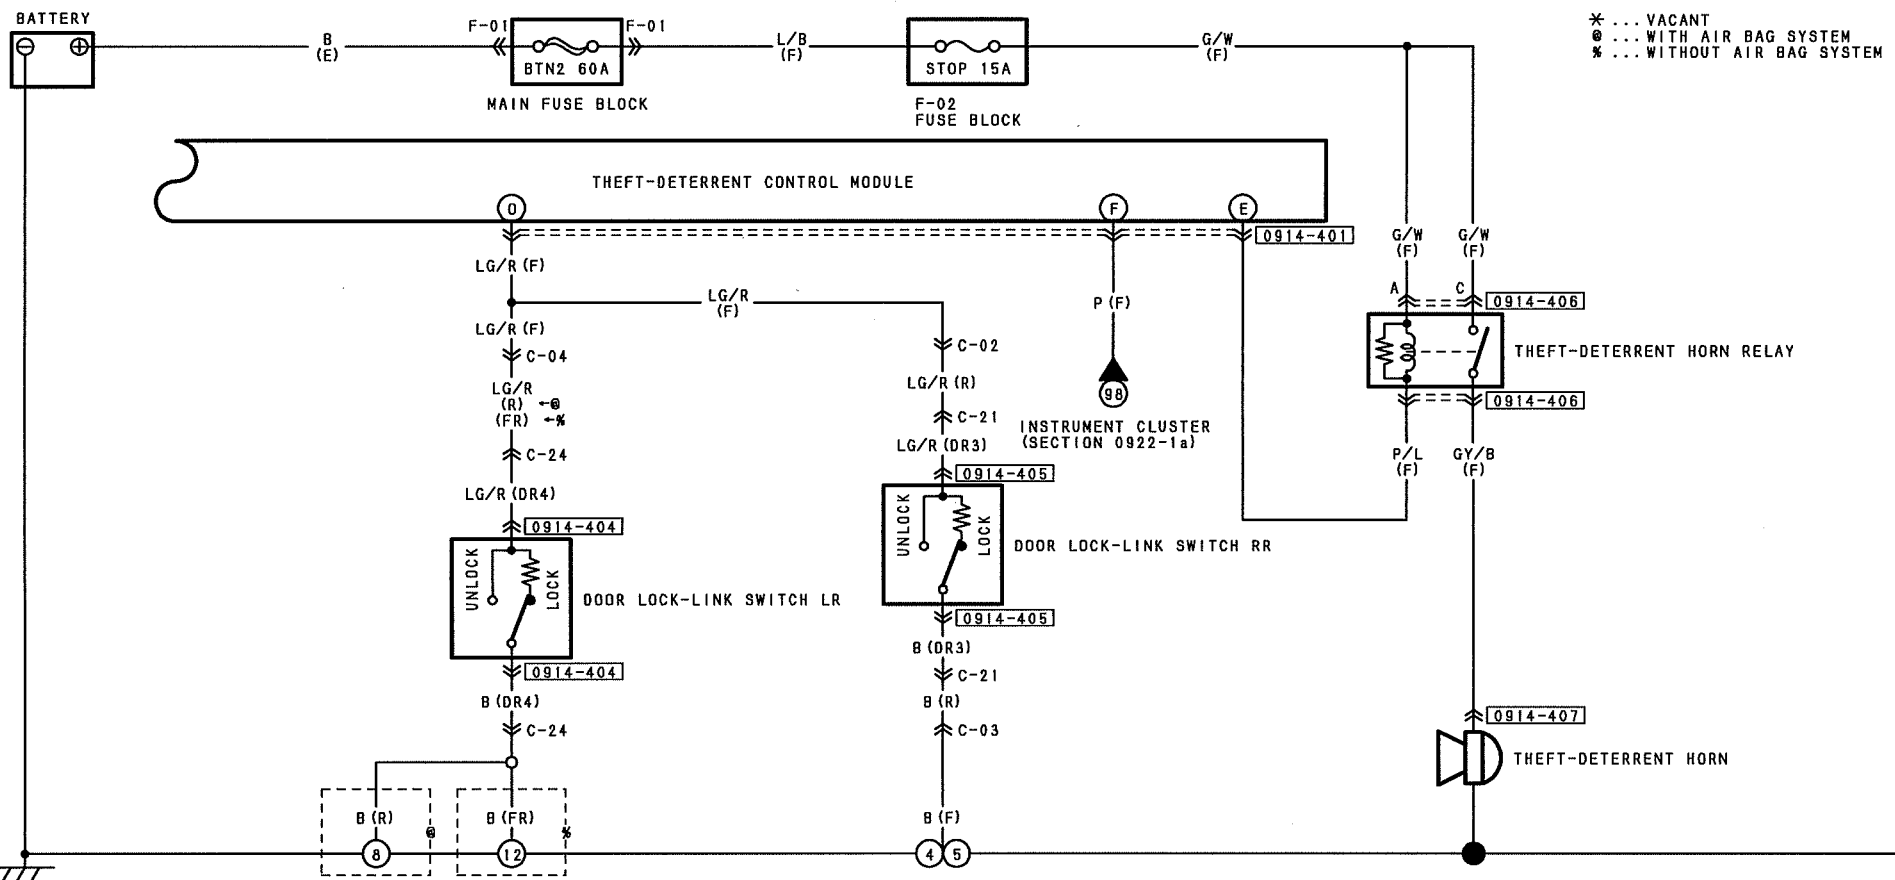


0914-401 THEFT-DETERRENT CONTROL MODULE (F)

W	U	S	Q	O	M	K	I	G	E	C	A
B/W	G/R	BR/B	BR/R	LG/R	*	*	*	*	P/L	*	*
L/R	W/R	R/Y	*	BR/W	G/D	*	*	*	P	*	B
X	V	T	R	P	N	L	J	H	F	D	B


0914-404 DOOR LOCK-LINK SWITCH LR (DR4)



0914-405 DOOR LOCK-LINK SWITCH RR (DR3)






0914-406 THEFT-DETERRENT HORN RELAY (F)

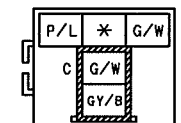


0914-407 THEFT-DETERRENT HORN (F)



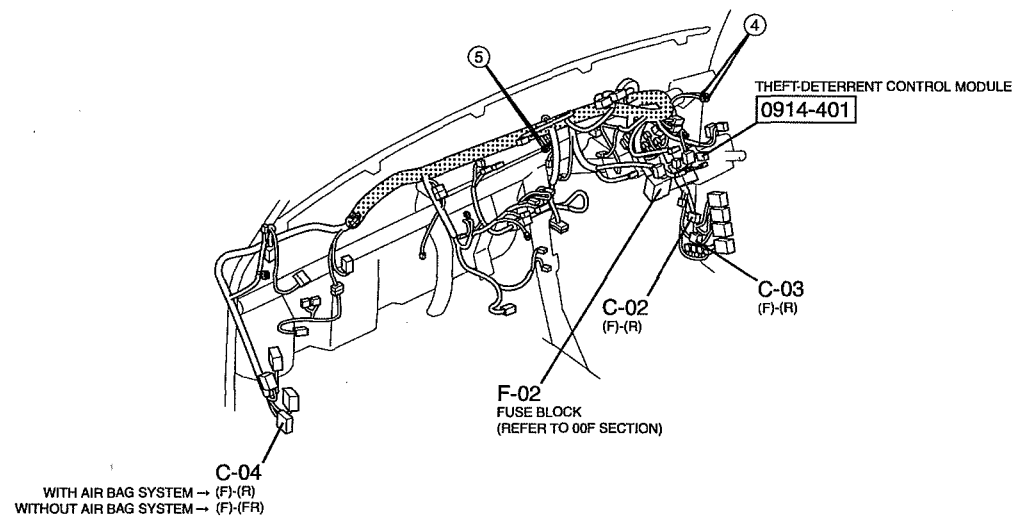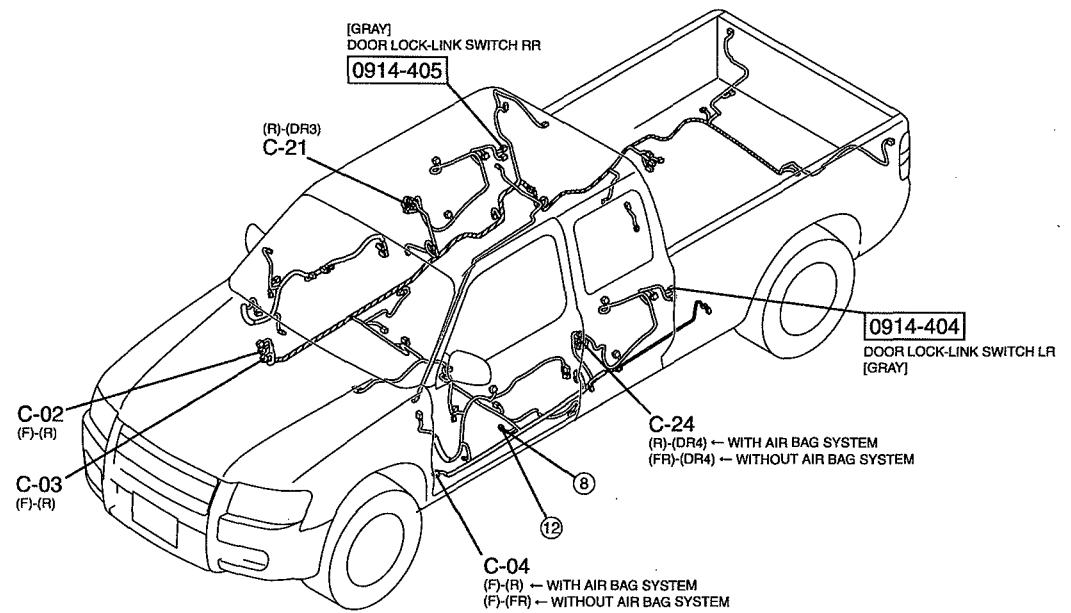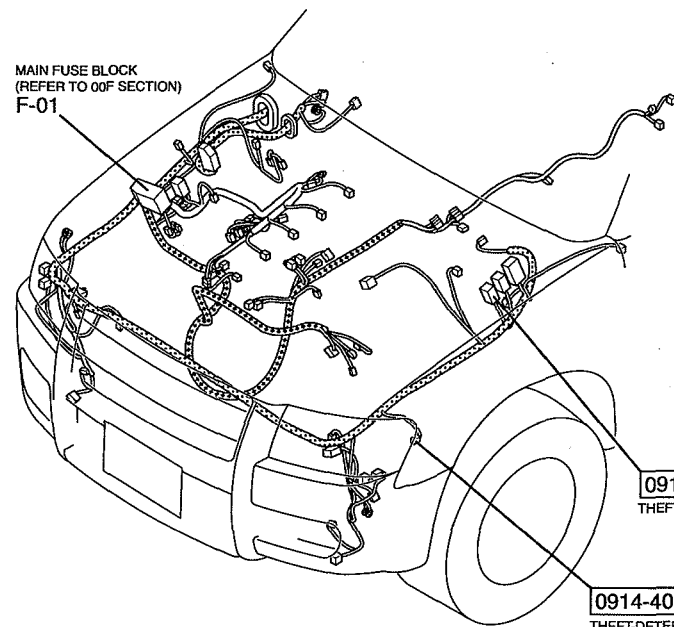

FUEL-FILLER LID OPENER


0914-5

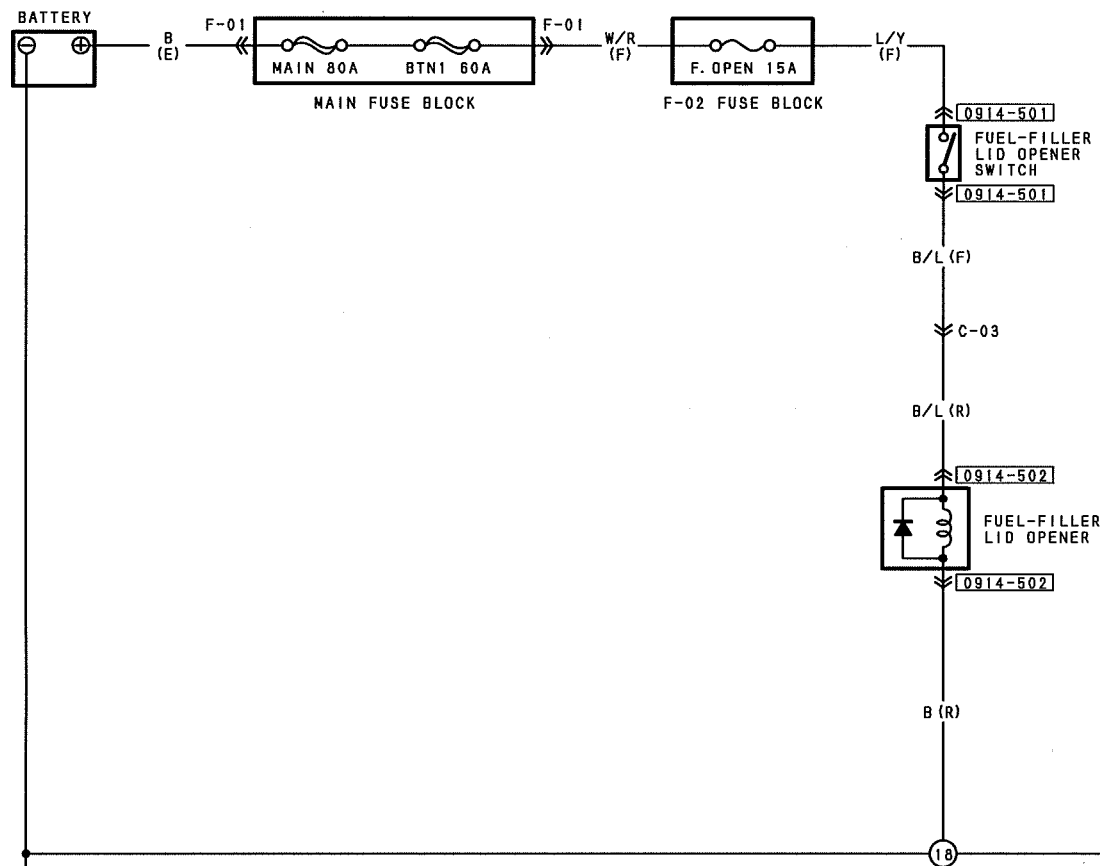


87A

0914-501 FUEL-FILLER LID OPENER SWITCH (F)		0914-502 FUEL-FILLER LID OPENER (R)				

MAIN FUSE BLOCK
(REFER TO 00F SECTION)
F-01

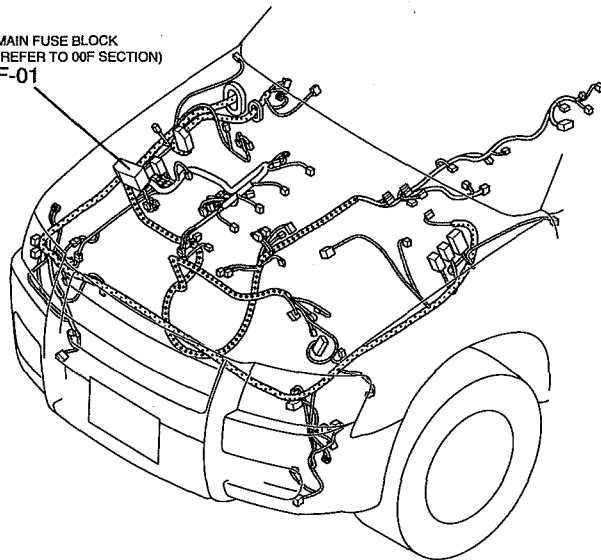


0914-502
FUEL-FILLER
LID OPENER

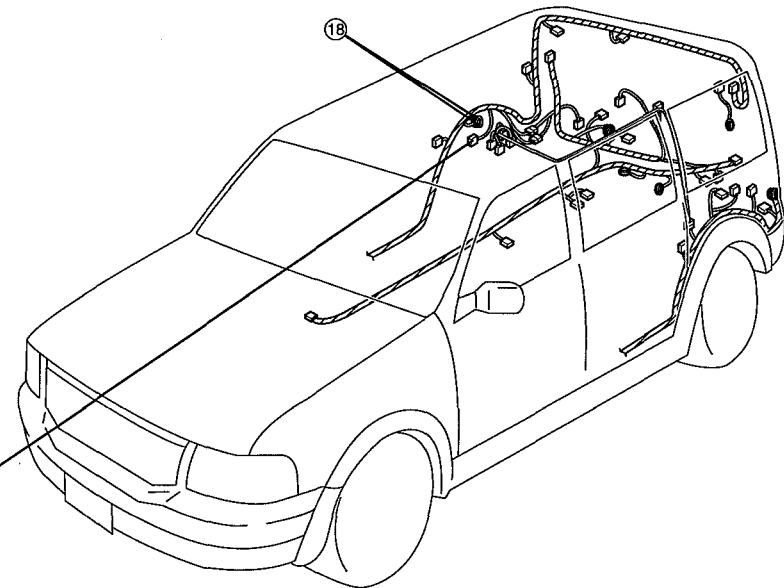

0914-501
FUEL-FILLER LID OPENER SWITCH

F-02
FUSE BLOCK
(REFER TO 00F SECTION)

C-03
(F)-(R)

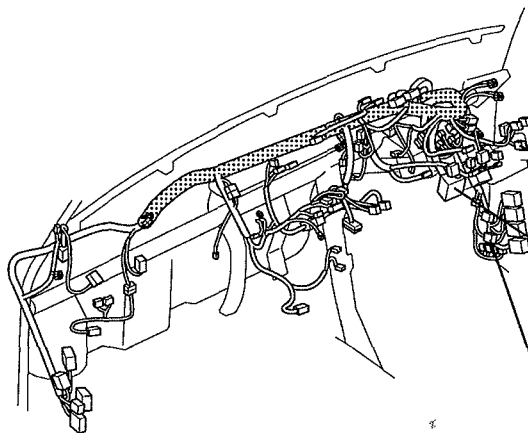

C-03
(F)-(R)

