


**THIS PAGE INTENTIONALLY
LEFT BLANK**

FUSE BOX

00F

F-01 MAIN FUSE BLOCK



* ... VACANT
... AT

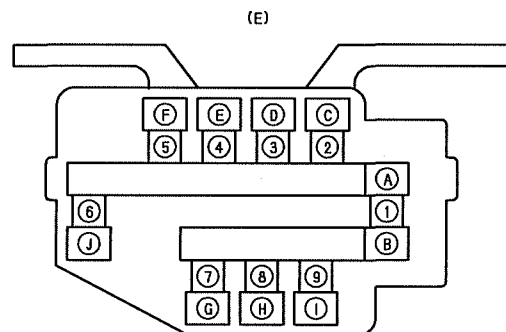

(E)



(F)



(F2)




NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
①	MAIN	80A	⑥	(ABS)	40A
②	(GLOW)	60A	⑦	BTN1	60A
③	IG KEY1	40A	⑧	IG KEY2	60A
④	BTN2	60A	⑨	(PTC/AT)	30A
⑤	(INJ/FIP)	20A			

() IF EQUIPPED

NOTE: SEEN FROM TERMINAL SIDE

F-02 FUSE BLOCK (F)

* ... VACANT
... NOT USED
@ ... WITH FUEL-FILLER LID OPENER
% ... WITH REAR ACCESSORY SOCKET
& ... WITH REAR A/C
< > ... WITH REAR WIPER AND WASHER

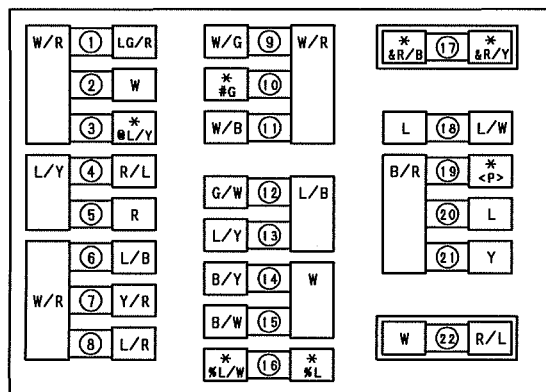

NOTE: SEEN FROM TERMINAL SIDE

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
①	(A/C)	10A	⑫	STOP	15A
②	(DEFOG)	20A	⑬	HAZARD	10A
③	(F. OPEN)	15A	⑭	METER	15A
④	HEAD RH	15A	⑮	ENGINE	15A
⑤	HEAD LH	15A	⑯	(P. POINT)	15A
⑥	(FOG)	15A	⑰	(R. A/C)	20A
⑦	TAIL	10A	⑱	CIGAR	20A
⑧	ROOM	15A	⑲	(R. WIP)	10A
⑨	(D. LOCK)	30A	⑳	WIPER	15A
⑩	(P. WIND)	30A	㉑	(A/C2)	10A
⑪	(ABS/SOL)	20A	㉒	(P. WIND)	30A

() IF EQUIPPED