

PJ Ranger

Wiring Diagrams Manual

(Part No. WD380)



WARNING

Servicing a vehicle can be dangerous. If you have not received service-related training, the risks of injury, property damage, and failure of servicing increase. The recommended servicing procedures for the vehicle in this workshop manual were developed with Ford-trained technicians in mind. This manual may be useful to non-Ford trained technicians, but a technician with our service-related training and experience will be at less risk when performing service operations. However, all users of this manual are expected to at least know general safety procedures.

This manual contains "Warnings" and "Cautions" applicable to risks not normally encountered in a general technician's experience. They should be followed to reduce the risk of injury and the risk that improper service or repair may damage the vehicle or render it unsafe. It is also important to understand that the "Warnings" and "Cautions" are not exhaustive. It is impossible to warn of all the hazardous consequences that might result from failure to follow the procedures.

The procedures recommended and described in this manual are effective methods of performing service and repair. Some require tools specifically designed for a specific purpose. Persons using procedures and tools which are not recommended by Ford Motor Company must satisfy themselves thoroughly that neither personal safety nor safety of the vehicle will be jeopardized.

The contents of this manual, including drawings and specifications, are the latest available at the time of printing, and Ford Motor Company reserves the right to change the vehicle designs and alter the contents of this manual without notice and without incurring obligation.

Parts should be replaced with genuine Ford replacement parts or with parts which match the quality of genuine Ford replacement parts. Persons using replacement parts of lesser quality than that of genuine Ford replacement parts must satisfy themselves thoroughly that neither personal safety nor safety of the vehicle will be jeopardized.

Ford Motor Company is not responsible for any problems which may arise from the use of this manual. The cause of such problems includes but is not limited to insufficient service-related training, use of improper tools, use of replacement parts of lesser quality than that of genuine Ford replacement parts, or not being aware of any revision of this manual.

RANGER

WIRING DIAGRAMS

FOREWORD

This wiring diagram incorporates the wiring schematics of the RANGER and available optional equipment. Actual vehicle wiring may vary slightly depending on optional equipment or local specifications, or both.

For proper repair and maintenance, a thorough familiarization with this manual is important, and it should always be kept in a handy place for quick and easy reference.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing.

As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Ford dealers. This manual should be kept up-to-date.

Ford Motor Company reserves the right to alter the specifications and contents of this manual without obligation or advance notice.

All rights reserved. No part of this book may be reproduced or used in any form or by any means, electronic or mechanical-including photocopying and recording and the use of any kind of information storage and retrieval system-without permission in writing.

Ford Motor Company

APPLICATION:

This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN) shown on the following page.

CONTENTS

TITLE	SECTION	
	PREVIOUS	NEW
GENERAL INFORMATION	GI (GENERAL INFORMATION)	00
	W (ELECTRICAL WIRING SCHEMATIC)	
	FB (FUSE BLOCK)	
	JB (JOINT BOX)	
	X (COMMON CONNECTOR)	
	Y (GROUND POINT)	
ENGINE	U (DATA LINK CONNECTOR)	01
	A (CHARGING SYSTEM/ STARTING SYSTEM)	
	B (ENGINE CONTROL SYSTEM)	
SUSPENSION	Q (CRUISE CONTROL SYSTEM)	02
DRIVELINE/AXLE	—	03
BRAKES	O (ANTI-LOCK BRAKE SYSTEM)	04
TRANSMISSION/ TRANSAXLE	H (EC-AT CONTROL SYSTEM)	05
STEERING	N (ELECTRIC POWER STEERING SYSTEM)	06
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	G (AIR CONDITIONING SYSTEM)	07
RESTRAINTS	S (SEAT BELT/AIR BAG SYSTEM)	08
BODY & ACCESSORIES	C (GAUGE CONTROL SYSTEM)	09
	D (WIPER SYSTEM)	
	E (EXTERIOR LIGHTING SYSTEM)	
	F (SIGNAL SYSTEM)	
	I (INTERIOR LIGHTING SYSTEM)	
	J (AUDIO SYSTEM)	
	K (DOOR/WINDOW SYSTEM)	
	L (MIRROR SYSTEM)	
	M (SUNROOF SYSTEM)	
	P (POWER SEAT SYSTEM)	
	T (SECURITY AND LOCKS SYSTEM/OPTION)	
ALPHABETICAL INDEX	AI (ALPHABETICAL INDEX)	AI

©2005 Ford Sales & Service
PRINTED IN THAILAND, DEC. 2005
F198-30-05L

**VEHICLE IDENTIFICATION NUMBERS (VIN)
(CHASSIS NUMBERS)**

Australian specs.

MNA BS1D90*W	MNA US1E90*W
MNA BS1E90*W	MNA US2D90*W
MNA BS2D90*W	MNA US2E90*W
MNA BS2E90*W	MNA USAD10*W
MNA BSAD10*W	MNA USAD90*W
MNA BSAD90*W	MNA USAE10*W
MNA BSAE10*W	MNA USAE90*W
MNA BSAE90*W	MNA USBD10*W
MNA BSBD10*W	MNA USBD90*W
MNA BSBD90*W	MNA USBE10*W
MNA BSBE10*W	MNA USBE90*W
MNA BSBE90*W	MNA USED90*W
MNA BSED90*W	MNA USEE90*W
MNA BSEE90*W	MNA USFD90*W
MNA BSFD90*W	MNA USFE90*W
MNA BSFE90*W	
MNA DS1D90*W	
MNA DS1E90*W	
MNA DS2D90*W	
MNA DS2E90*W	
MNA DSAD10*W	
MNA DSAD90*W	
MNA DSAE10*W	
MNA DSAE90*W	
MNA DSBD10*W	
MNA DSBD90*W	
MNA DSBE10*W	
MNA DSBE90*W	
MNA DSED90*W	
MNA DSEE90*W	
MNA DSFD90*W	
MNA DSFE90*W	
MNA LS1D90*W	
MNA LS1E90*W	
MNA LS2D90*W	
MNA LS2E90*W	
MNA LSAD10*W	
MNA LSAD90*W	
MNA LSAE10*W	
MNA LSAE90*W	
MNA LSBD10*W	
MNA LSBD90*W	
MNA LSBE10*W	
MNA LSBE90*W	
MNA LSED90*W	
MNA LSEE90*W	
MNA LSFD90*W	
MNA LSFE90*W	
MNA US1D90*W	

SYSTEM INDEX

00 GENERAL INFORMATION

R READING WIRING DIAGRAMS

VEHICLE IDENTIFICATION NUMBER (VIN) CODE.....	2
VEHICLE IDENTIFICATION NUMBERS (VIN).....	3
CONTENTS OF WIRING DIAGRAMS	4
GROUND POINTS	5
SYSTEM CIRCUIT DIAGRAM/CONNECTOR DIAGRAM ...	6
ROUTING DIAGRAM	8
HARNESS SYMBOLS	9
WIRING COLOR CODE	9
SYMBOLS	10
ABBREVIATIONS USED IN THIS MANUAL	12

P ELECTRICAL SYSTEM GENERAL PROCEDURES..... 14

POWER, GROUND & COMMON CONNECTOR

E ELECTRICAL WIRING SCHEMATIC	18
F FUSE BOX	20
C COMMON CONNECTOR LIST	22
G GROUND POINT	26

DATA LINK CONNECTOR

D DATA LINK CONNECTOR	30
-----------------------------	----

01 ENGINE

17 CHARGING SYSTEM	32
19 STARTING SYSTEM	34
40 CONTROL SYSTEM	
WL-3	36
WL-C, WE-C	42

03 DRIVELINE/AXLE

18 4-WHEEL DRIVE	
REMOTE FREEWHEEL CONTROL SYSTEM.....	52

04 BRAKES

13 ANTILOCK BRAKE SYSTEM	
4 WHEEL ANTILOCK BRAKE SYSTEM (4WABS)	56
REAR ANTILOCK BRAKE SYSTEM.....	58

07 HEATER, VENTILATION & AIR CONDITIONING (HVAC)

40 CONTROL SYSTEM	
HEATER AND AIR CONDITIONER.....	60

08 RESTRAINTS

10 AIR BAG SYSTEM

AIR BAG SYSTEM SERVICE CAUTIONS/ SERVICE WARNINGS.....	62
AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)	64

09 BODY & ACCESSORIES

12 GLASS/WINDOWS/MIRRORS

REAR WINDOW DEFROSTER	68
POWER WINDOW SYSTEM	70
POWER OUTER MIRROR	74

14 SECURITY AND LOCKS

POWER DOOR LOCK SYSTEM	76
KEYLESS CONTROL MODULE.....	80
IMMOBILIZER SYSTEM.....	82
THEFT-DETERRENT SYSTEM	84

18 LIGHTING SYSTEMS

HEADLIGHT	88
LICENSE PLATE LIGHT	90
PARKING LIGHT	90
TAILLIGHT	90
FRONT FOG LIGHT	92
TURN AND HAZARD WARNING LIGHT	94
BACK-UP LIGHT	96
BRAKE LIGHT	98
HIGH-MOUNT BRAKE LIGHT	98
ILLUMINATION LIGHT	100
INTERIOR LIGHT	102

19 WIPER/WASHER SYSTEM

WINDSHIELD WIPER AND WASHER	104
-----------------------------------	-----

20 ENTERTAINMENT

ACCESSORY SOCKET	106
CIGARETTE LIGHTER.....	106
AUDIO SYSTEM	108

22 INSTRUMENTATION/DRIVER INFO.

INSTRUMENT CLUSTER.....	112
HORN	118

AI ALPHABETICAL INDEX

ALPHABETICAL INDEX	120
--------------------------	-----

VEHICLE IDENTIFICATION NUMBER (VIN) CODE

① M N B B S 1 D 1 0 6 ① 1 2 3 4 5 6 ①												
										Serial No.		
										Algeria:		
										Others:	Plant	
										Model Year Production year		
										Gulf:	Check Digit	① mark W=A. A. Thailand
										Algeria:	Plant	
										Others:	No meaning	
										Engine type		
										Gulf only	Other	
										1=	D= 2268—2721 kg {5001—6000 lbs}	
										Gross vehicle weight	2=	E= 2722—3175 kg {6001—7000 lbs}
										Gulf only	Others	
										8=	A= Regular cab.-without box	
										3=	B= Regular cab.-with box	
											E= Double cab.-without box	
											F= Double cab.-with box	
											1= Stretch cab.	
											(with Rear Access System) -without box	
										Body style	2=	2= Stretch cab.
												(with Rear Access System) -with box
										Product source		
										M= Thailand (for Europe (L.H.D.))		
										S= Japan (for Australia, General (R.H.D.),		
										General (L.H.D.), Gulf)		
										B= Seatbelt only		
										D= with Air bag (Driver side)		
										L= with Air bag (Driver and Passenger)		
										U= with Air bag (Driver, Passenger and Side air bag)		
										WF0=FORD (European (L.H.D.))		
										MNA=FORD (Australian)		
										MNB=FORD (General (R.H.D.))		
										MNC=FORD (General (L.H.D.), Gulf)		
										World manufacturer identification		

① mark
W=A. A. Thailand

7= 2007, 8=2008, 9=2009...
6= 2006, 7=2007, 8=2008...

0 to 9, X
W= A. A. Thailand
0

6= F2E (2.2 EGI)
1= WL-C (2.5 L-DI)
9= WE-C (3.0 L-DI)
2= WL-3 (2.5 L Diesel-Emission Turbo)
4= WL-Turbo (2.5L Diesel turbo)
7= G6E (2.6 EGI)

Other

D= 2268—2721 kg {5001—6000 lbs}
E= 2722—3175 kg {6001—7000 lbs}

Others

A= Regular cab.-without box
B= Regular cab.-with box
E= Double cab.-without box
F= Double cab.-with box
1= Stretch cab.
(with Rear Access System) -without box
2= Stretch cab.
(with Rear Access System) -with box

M= Thailand (for Europe (L.H.D.))
S= Japan (for Australia, General (R.H.D.),
General (L.H.D.), Gulf)

B= Seatbelt only
D= with Air bag (Driver side)
L= with Air bag (Driver and Passenger)
U= with Air bag (Driver, Passenger and Side air bag)

WF0=FORD (European (L.H.D.))
MNA=FORD (Australian)
MNB=FORD (General (R.H.D.))
MNC=FORD (General (L.H.D.), Gulf)

① : This mark is used only for Algerian model, in order to identify the manufacturer.

VEHICLE IDENTIFICATION NUMBERS (VIN)

Australian specs.

MNA BS1D90*W	MNA US1E90*W
MNA BS1E90*W	MNA US2D90*W
MNA BS2D90*W	MNA US2E90*W
MNA BS2E90*W	MNA USAD10*W
MNA BSAD10*W	MNA USAD90*W
MNA BSAD90*W	MNA USAE10*W
MNA BSAE10*W	MNA USAE90*W
MNA BSAE90*W	MNA USBD10*W
MNA BSBD10*W	MNA USBD90*W
MNA BSBD90*W	MNA USBE10*W
MNA BSBE10*W	MNA USBE90*W
MNA BSBE90*W	MNA USED90*W
MNA BSED90*W	MNA USEE90*W
MNA BSEE90*W	MNA USFD90*W
MNA BSFD90*W	MNA USFE90*W
MNA BSFE90*W	
MNA DS1D90*W	
MNA DS1E90*W	
MNA DS2D90*W	
MNA DS2E90*W	
MNA DSAD10*W	
MNA DSAD90*W	
MNA DSAE10*W	
MNA DSAE90*W	
MNA DSBD10*W	
MNA DSBD90*W	
MNA DSBE10*W	
MNA DSBE90*W	
MNA DSED90*W	
MNA DSEE90*W	
MNA DSFD90*W	
MNA DSFE90*W	
MNA LS1D90*W	
MNA LS1E90*W	
MNA LS2D90*W	
MNA LS2E90*W	
MNA LSAD10*W	
MNA LSAD90*W	
MNA LSAE10*W	
MNA LSAE90*W	
MNA LSBD10*W	
MNA LSBD90*W	
MNA LSBE10*W	
MNA LSBE90*W	
MNA LSED90*W	
MNA LSEE90*W	
MNA LSFD90*W	
MNA LSFE90*W	
MNA US1D90*W	

CONTENTS OF WIRING DIAGRAMS

- This manual comprises the sections shown below.

NEW				PREVIOUS		
GENERAL INFORMATION	00	R	Reading wiring diagrams	Shows circuit and connector diagrams and component and connector location diagrams	GI	General information of wiring diagrams
		P	Electrical system general procedures			
		E	Electrical wiring schematic		W	Electrical wiring schematic
		F	Fuse box complete wiring system		FB	Fuse block complete wiring system
		J	Joint box/Junction box complete wiring system		JB	Joint box complete wiring system
		C	Common connector list		X	Common connector list
		G	Ground point		Y	Ground point
		D	Data link connector		U	Data link connector
ENGINE	01	12	Cooling system		A	Charging system/Starting system
		14	Fuel system			
		17	Charging system		B	Engine control system
		18	Ignition system		C	Gauge control system
		19	Starting system		D	Wiper system
		20	Cruise control system		E	Lighting system
SUSPENSION	02	40	Control system		F	Signal system
		12	Wheel and tires		G	Air-conditioning system
DRIVELINE/AXLE	03	18	4-Wheel drive		H	Transmission control/Key interlock/Shift-lock system
BRAKES	04	13	Antilock brake system		I	Interior light system
		14	Traction control system		J	Audio/Radio system
		15	Dynamic stability control		K	Power window/Power door lock system
TRANSMISSION/TRANSAXLE	05	13	Automatic transmission		L	Remote control mirror system
		14	Automatic transmission shift mechanism		M	Sliding sunroof system
		17	Automatic transaxle		O	Anti-lock brake system
		18	Automatic transaxle shift mechanism		N	Electric power steering (EPS)
STEERING	06	13	Electric power steering (EPS)		P	Power seat/Seat warmer system
		14	Power steering		Q	Auto cruise control system
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07	40	Control system		S	Air bag system
					T	Others
RESTRAINTS	08	10	Air bag system		AI	Alphabetical Index
		11	Seat belt			
BODY & ACCESSORIES	09	12	Glass/Windows/Mirrors	Gives page number of circuit diagram for each component		
		13	Seats			
		14	Security and locks			
		15	Sunroof			
		18	Lighting systems			
		19	Wiper/Washer system			
		20	Entertainment			
		21	Power systems			
		22	Instrumentation/Driver info.			
		40	Control system			
AI		Alphabetical Index				

Depending on the vehicle model, the actual sections may be different.

- This shows ground points of the harness.

--

On vehicle

To circuit

The ground connection numbers in system circuit diagrams correspond to those in the ground point diagram.

[illegible]

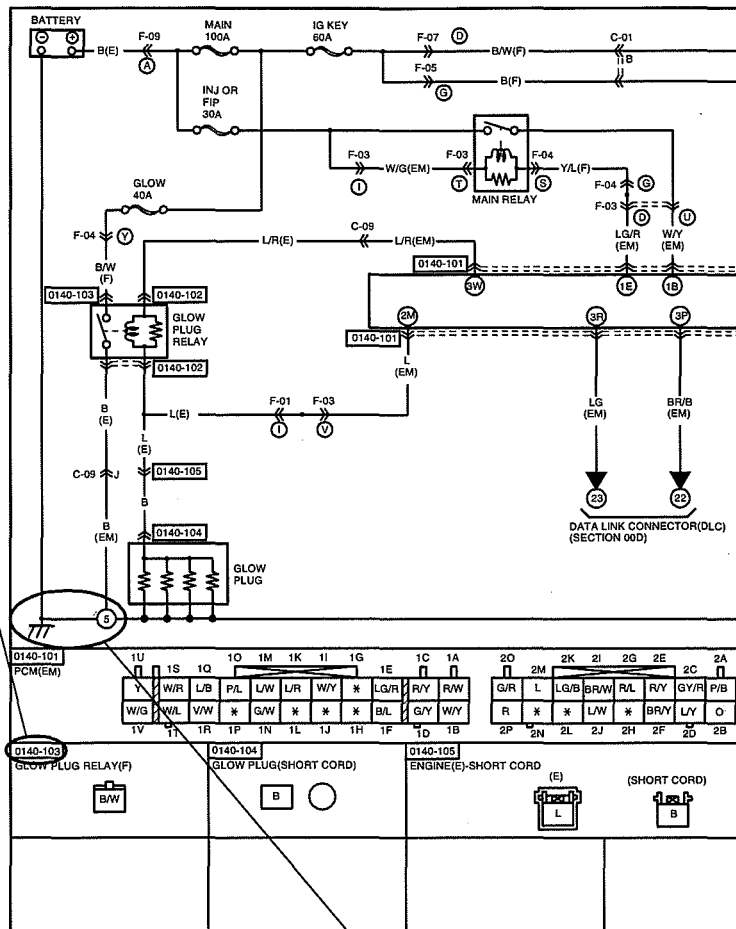
SYSTEM CIRCUIT DIAGRAM/CONNECTOR DIAGRAM

- These diagrams show the circuits for each system, from the power supply to the ground. The power supply side is on the upper part of the page, the ground side on the lower part. The diagrams describe circuits with the ignition switch off.

Below is an explanation of the various points in the diagram.

System name

CONTROL SYSTEM



Connector code

The prefix letter indicates the system in which the connector is used.

- F: Fuse box connectors
- J: Joint box/Junction box connectors
- C: Common connectors
- G: Ground point connectors
- D: Data link connector
- 0112: Cooling system connectors
- 0114: Fuel system connectors
- 0117: Charging system connectors
- 0118: Ignition system connectors
- 0119: Starting system connectors
- 0120: Cruise control system connectors
- 0140: Engine control system connectors
- 0212: Wheel and tires connectors
- 0318: 4-Wheel drive connectors
- 0413: Antilock brake system connectors
- 0414: Traction control system connectors
- 0415: Dynamic stability control connectors
- 0513: Automatic transmission connectors
- 0514: Automatic transmission shift mechanism connectors
- 0517: Automatic transaxle connectors
- 0518: Automatic transaxle shift mechanism connectors
- 0613: Electric power steering (EPS) connectors
- 0614: Power steering connectors
- 0740: Heater, ventilation & air conditioning (HVAC) control system connectors
- 0810: Air bag system connectors
- 0811: Seat belt connectors
- 0912: Glass/Windows/Mirrors connectors
- 0913: Seats connectors
- 0914: Security and locks connectors
- 0915: Sunroof connectors
- 0918: Lighting systems connectors
- 0919: Wiper/Washer system connectors
- 0920: Entertainment connectors
- 0921: Power systems
- 0922: Instrumentation/Driver info. Connectors
- 0940: Control system

Ground numbers

A harness ground is represented differently than a unit ground.

Types of grounds	Symbol
Harness 	
Unit 	
Sensor 	

System code

Indicates communication with connected parts.
Signals are transmitted back and forth between
connected parts.

Current flows in the direction of the arrow.

- * Shielded wire :
Prevents signal disturbances from electrical interference.
Wire is covered by a metal meshing for grounding.

- Male and female connectors are represented as follows in the circuit and connector diagrams.

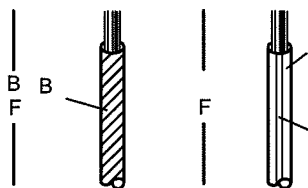
- Like connectors are linked by dashed lines between the connector symbols.
- Connector diagrams show connectors on the harness side. The terminal indicates the view from the harness side.

- Colors for connectors except white are given in locations.
- Unused terminals are indicated by *.

- Two-color wires are indicated by a two-letter symbol. The first indicates the base color of the wire, the second the color of the stripe. For example:

W/R is a white wire with a red strip
BR/Y is a brown wire with a yellow strip

Symbol
(Example)



- The harness symbol is in () following the harness symbols (refer to P-9.).

ROUTING DIAGRAM

- The routing diagram shows where electrical components are on the system circuit diagram by call out line and connector symbols.

Connector symbol

Shows the system that uses the connector.

(Example)

Connector	Symbol
Common connectors	C-02
System connectors	0922-05

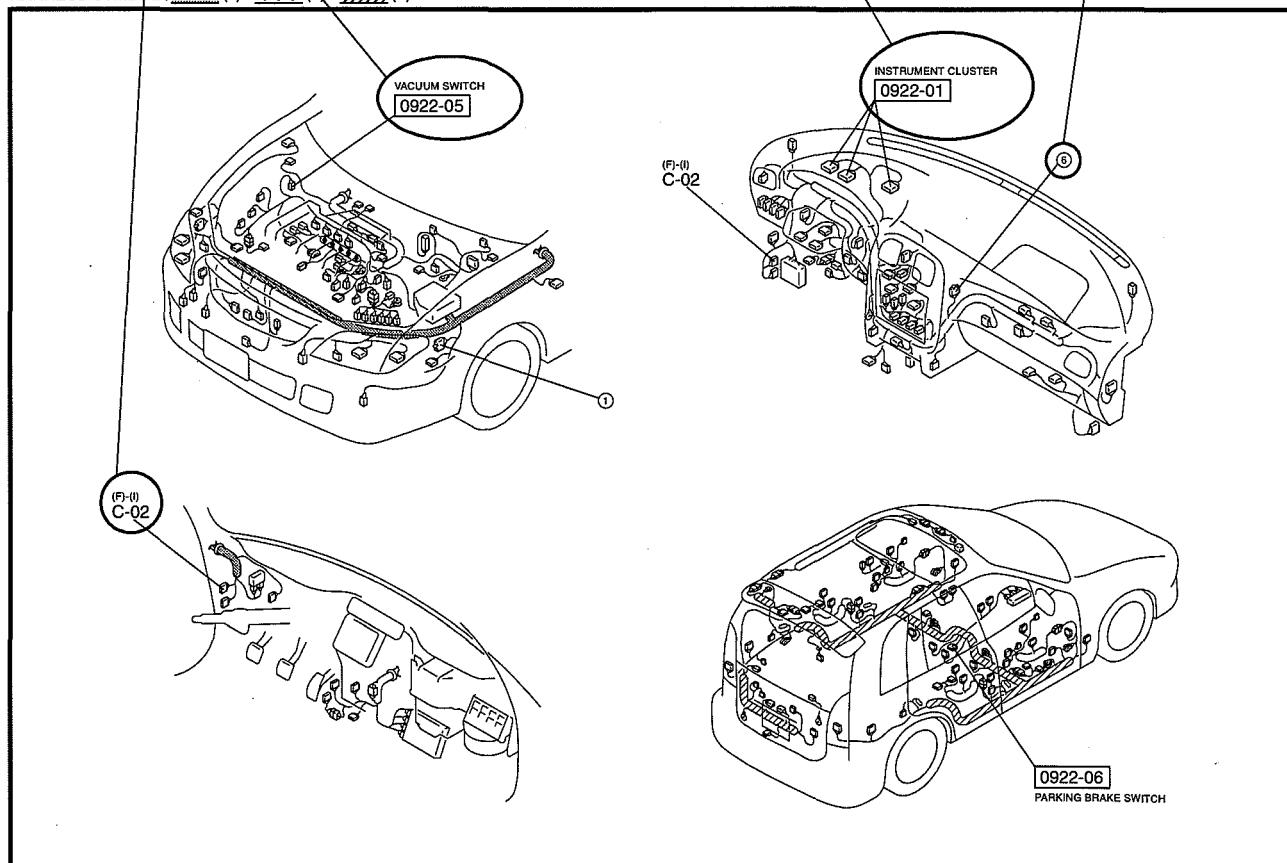
Component name

Shows the names of components in routing diagrams.

Ground symbol

Shows the ground in system diagrams.

HARNESS SYMBOL :  (F)  (S)  (R)










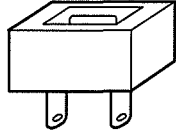
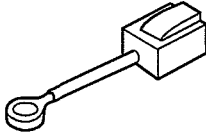
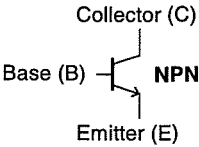

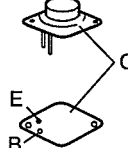

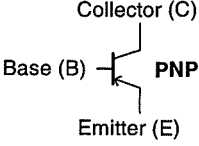

HARNESS SYMBOLS


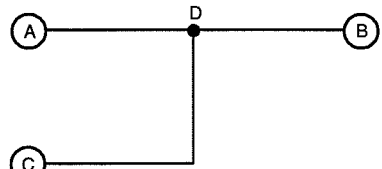

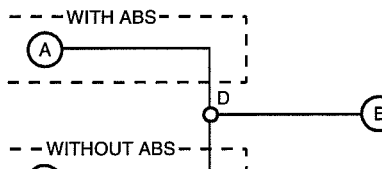











DESCRIPTION OF HARNESS	SYMBOL	DESCRIPTION OF HARNESS	SYMBOL
FRONT HARNESS	(F)	DOOR No. 1 HARNESS	(DR1)
FRONT No. 2 HARNESS	(F2)	DOOR No. 2 HARNESS	(DR2)
ENGINE HARNESS	(E)	DOOR No. 3 HARNESS	(DR3)
DASH HARNESS	(D)	DOOR No. 4 HARNESS	(DR4)
REAR HARNESS	(R)	FLOOR HARNESS	(FR)
REAR No. 2 HARNESS	(R2)	INTERIOR LIGHT HARNESS	(IN)
REAR No. 3 HARNESS	(R3)	A/C HARNESS	(AC)
INSTRUMENT PANEL HARNESS	(I)	INJECTION HARNESS	(INJ)
EMISSION HARNESS	(EM)	HAND BRAKE HARNESS	(HB)
EMISSION No. 2 HARNESS	(EM2)		
EMISSION No. 3 HARNESS	(EM3)		

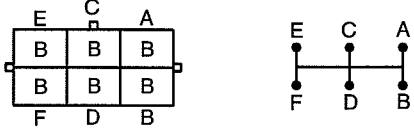
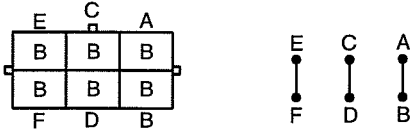
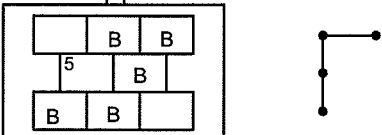
WIRING COLOR CODE

COLOR	CODE	COLOR	CODE
BLACK	B	ORANGE	O
BLUE	L	PINK	P
BROWN	BR	RED	R
DARK BLUE	DL	SKY BLUE	SB
DARK GREEN	DG	TAN	T
GRAY	GY	VIOLET	V
GREEN	G	WHITE	W
LIGHT BLUE	LB	YELLOW	Y
LIGHT GREEN	LG		

SYMBOLS

Symbol	Meaning	Symbol	Meaning
Battery 	- Generates electricity through chemical reaction. - Supplies direct current to circuits.	Light 	Emits light and generates heat when current flows through filament.
Ground (1) 	- Connecting point to vehicle body or other ground wire where current flows from positive to negative terminal of battery. - Ground (1) indicates a ground point to body through wire harness. - Ground (2) indicates point where component is grounded directly to body. Remarks - Current will not flow through a circuit if ground is faulty.		Resistance  - A resistor with a constant value. - Mainly used to protect electrical components in circuits by maintaining rated voltage.
Ground (2) 		Motor 	
Ground (3) 		Pump 	
Fuse 	- Melts when current flow exceeds that specified for circuit, interrupts current flow. Precautions - Do not replace with fuses exceeding specified capacity.	Cigarette lighter 	Accessory socket  Interior power supply.
Fuse (For high current fuse)/ Fusible link 	<Blade type>  <Tube type>  <Cartridge type>  <Fusible link> 	Horn 	
Transistor (1) 	- Electrical switching component. - Turns on when voltage is applied to the base (B). Collector indication mark  ECB  	Speaker 	Heater  Generates heat when current flows.
Transistor (2) 	Reading code. 2 S C 828 A Semiconductor Number of terminals Revision mark A: High-frequency PNP B: Low-frequency PNP C: High-frequency NPN D: Low-frequency NPN	Ignition switch 	

Symbol	Meaning	Symbol	Meaning
Switch (1)  Normally open	Allows or breaks current flow by opening and closing circuits.	Harness Connection  When circuit C-D is connected to circuit A-B, the connection D is indicated by a black dot.	 For vehicles with ABS, use the A-B circuit.
Switch (2)  Normally closed		Selection  Diversion point D for the different circuits according to the vehicle's specification is indicated by a white dot.	 For vehicles without ABS, use the C-B circuit.
Autostop switch 	Automatically shuts off circuit when certain conditions are met.		
Relay (1)  Normally open	Current flowing through coil produces electromagnetic force causing contact to open or close.	No current to coil  No flow	Current to coil  Flow
Relay (2)  Normally closed	Current flowing through coil produces electromagnetic force causing contact to close.	No current to coil  Flow	Current to coil  No flow
Sensor (1) 	Detects characteristics such as intake manifold vacuum and airflow amount according to resistance variation.	Solenoid 	Current flowing through coil generates electromagnetic force to operate plungers.
Sensor (2) 	Detects resistance variation according to operation of other parts.	Diode 	Known as a semiconductor rectifier, the diode allows current flow in one direction only.
Sensor (3) 	- A resistor whose resistance variation according to temperature variation. - When temperature increases, resistance decreases.	Cathode(K)  Anode(A) ← Flow of electric current K-A K-A K-A	
Sensor (4) 	Detects pulse signals from rotating object.	Light-emitting diode (LED) 	- A diode that lights when current flows. - Unlike ordinary bulbs, the diode does not generate heat when lit.
Sensor (5) 	Generates potential difference when tension or pressure is applied.	Cathode(K)  Anode(A)  Cathode(K) Anode(A) Flow of current	
Capacitor 	Component that temporarily stores electrical charge.	Reference diode (Zener diode) 	Allows current to flow in one direction up to a certain voltage; allows current to flow in the other direction once that voltage is exceeded.

Symbol	Meaning
Extent of the change in the wiring position (1) 	The wiring position can be exchanged freely within the connector.
Extent of the change in the wiring position (2) 	The wiring position can be exchanged according to the following combinations only. Between A and B, Between C and D, Between E and F
Extent of the change in the wiring position (3) 	- The wiring position can be exchanged according to the following combinations only. Between 1, 2, 4 and 7. - The wiring positions may be indicated by numbers for some connectors.

ABBREVIATIONS USED IN THIS MANUAL

3GR	THIRD GEAR
4GR	FOURTH GEAR
A	AMPERE
A/C	AIR CONDITIONING
A/F	AIR FUEL
AAS	AUTO ADJUSTING SUSPENSION
ABS	ANTI-LOCK BRAKING SYSTEM
ACC	ACCESSORIES
ACV	AIR CONTROL VALVE
ADD	ADDITIONAL
AIS	AIR INJECTION SYSTEM
ALL	AUTOMATIC LOAD LEVELING
AM	AMPLITUDE MODULATION
AMP	AMPLIFIER
ANT	ANTENNA
ASV	AIR SUPPLY VALVE
AT	AUTOMATIC TRANSMISSION
ATX	AUTOMATIC TRANSAXLE
B+	BATTERY POSITIVE VOLTAGE
BAC	BYPASS AIR CONTROL
CAN	CONTROLLER AREA NETWORK
CIGAR	CIGARETTE
CIS	CONTINUOUS FUEL INJECTION SYSTEM
CKP	CRANKSHAFT POSITION SENSOR
CM	CONTROL MODULE
CMP	CAMSHAFT POSITION SENSOR

COMBI	COMBINATION
CON	CONDITIONER
CONT	CONTROL
CPU	CENTRAL PROCESSING UNIT
DEF	DEFROSTER
DI	DISTRIBUTOR IGNITION
DLC	DATA LINK CONNECTOR
DLI	DISTRIBUTORLESS IGNITION
DOHC	DOUBLE-OVERHEAD CAMSHAFT
DRL	DAYTIME RUNNING LIGHT
DTC	DIAGNOSTIC TROUBLE CODE(S)
DTM	DIAGNOSTIC TEST MODE
ECPS	ELECTRONICALLY CONTROLLED POWER STEERING
ECT	ENGINE CONTROL TEMPERATURE
EGR	EXHAUST GAS RECIRCULATION
EHPAS	ELECTRO HYDRAULIC POWER ASSIST STEERING
EI	ELECTRONIC IGNITION
ELEC	ELECTRIC
ELR	EMERGENCY LOCKING RETRACTOR
ET	ELECTRONIC THROTTLE
EPS	ELECTRIC POWER STEERING
EVAP	EVAPORATIVE EMISSION
F	FRONT
F/I	FUEL INJECTOR
FICB	FAST-IDLE CAM BREAKER

FM	FREQUENCY MODULATION
FP	FUEL PUMP
FPR	FUEL PUMP RELAY
GEN	GENERATOR
GND	GROUND
H/D	HEATER/DEFROSTER
HEAT	HEATER
HI	HIGH
HO2S	HEATED OXYGEN SENSOR
HS	HIGH SPEED
HU	HYDRAULIC UNIT
IAC	IDLE AIR CONTROL
IAT	INTAKE AIR TEMPERATURE
IG	IGNITION
ILLUMI	ILLUMINATION
INT	INTERMITTENT
JB	JOINT BOX
KS	KNOCK SENSOR
LCD	LIQUID CRYSTAL DISPLAY
LF	LEFT FRONT
LH	LEFT HAND
LO	LOW
LR	LEFT REAR
M	MOTOR
MAF	MASS AIR FLOW
MAP	MANIFOLD ABSOLUTE PRESSURE
MFI	MULTIPOINT FUEL INJECTION
MID	MIDDLE
MIL	MALFUNCTION INDICATOR LAMP
MIN	MINUTE
MIX	MIXTURE
MPX	MULTIPLEX
MS	MIDDLE SPEED
MT	MANUAL TRANSMISSION
MTX	MANUAL TRANSAXLE
N	NEUTRAL
NC	NORMALLY CLOSED
NO	NORMALLY OPEN
O ₂ S	OXYGEN SENSOR
OBD	ON-BOARD DIAGNOSTIC
O/D	OVER DRIVE
OFF	SWITCH OFF
ON	SWITCH ON
OSC	OSCILLATOR
P	POWER
P/S	POWER STEERING
PCM	POWERTRAIN CONTROL MODULE
PJB	PASSENGER JUNCTION BOX

PNP	PARK/NEUTRAL POSITION
PRC	PRESSURE REGULATOR CONTROL
PRG	PURGE SOLENOID VALVE
PSP	POWER STEERING PRESSURE
PTC	POSITIVE TEMPERATURE COEFFICIENT HEATER
PWM	PULSE WIDTH MODULATION
QSS	QUICK-START SYSTEM
R	REAR
REC	RECIRCULATION
RF	RIGHT FRONT
RH	RIGHT HAND
RPM	REVOLUTIONS PER MINUTE
RR	RIGHT REAR
SAS	SOPHISTICATED AIR BAG SENSOR
SFI	SEQUENTIAL MULTIPOINT FUEL INJECTION
SOL	SOLENOID
SPV	SPILL VALVE
ST	START
SW	SWITCH
TC	TURBOCHARGER
TCC	TORQUE CONVERTER CLUTCH
TCM	TRANSMISSION(TRANSAXLE) CONTROL MODULE
TCS	TRACTION CONTROL SYSTEM
TEMP	TEMPERATURE
TFT	TRANSAXLE FLUID TEMPERATURE
TICS	TRIPLE INDUCTION CONTROL SYSTEM
TNS	TAIL NUMBER SIDE LIGHTS
TP	THROTTLE POSITION SENSOR
TR	TRANSMISSION(TRANSAXLE) RANGE
TWS	TOTAL WIRING SYSTEM
V	VOLT
VAF	VOLUME AIR FLOW SENSOR
VENT	VENTILATION
VICS	VARIABLE INERTIA CHARGING SYSTEM
VOL	VOLUME
VR	VOLTAGE REGULATOR
VRIS	VARIABLE RESONANCE INDUCTION SYSTEM
VSS	VEHICLE SPEED SENSOR
VTCS	VARIABLE TUMBLE CONTROL SYSTEM
W	WATT(S)
WOT	WIDE OPEN THROTTLE