

SERVICE TOOLS [WL-C, WE-C]

01-60B SERVICE TOOLS [WL-C, WE-C]

ENGINE SERVICE TOOLS

[WL-C, WE-C] 01-60B-1

01

ENGINE SERVICE TOOLS [WL-C, WE-C]

DCF01600000W02


1: Mazda SST number

2: Global SST number

Example

1:49 UN30 3050
2:303-050


Engine lifting
brackets

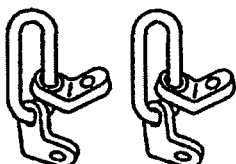

1:49 0107 680A

2:-


Engine stand

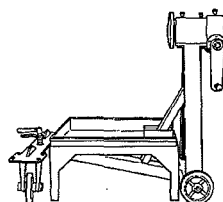

1:49 L010 1A0

2:-


Engine stand
hanger set

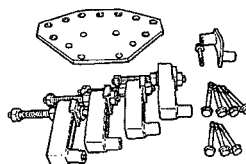

1:49 0636 100B

2:-


Valve spring
lifter arm



1:49 B012 0A2

2:-


Pivot

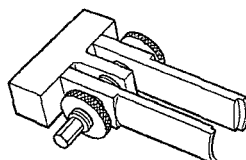

1:49 S120 170

2:-


Valve seal
remover



1:49 F027 009

2:-


Oil seal installdr

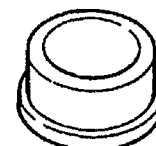

1:49 S010 001

2:-


Oil seal installer

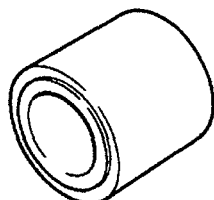

1:49 E011 1A0

2:-


Ring gear brake
set

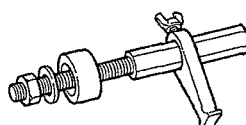

1:49 S120 215B

2:-


Pulley puller



1:49 S011 103

2:-


Oil seal installer

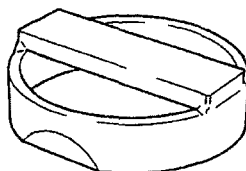

1:49 S010 301

2:-


Oil seal installer

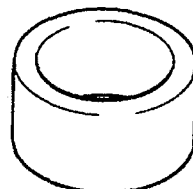

1:49 UN30 3050

2:-


Engine lifting
brackets

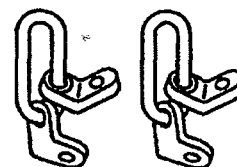

1:49 G011 001

2:-


Piston pin
replacer

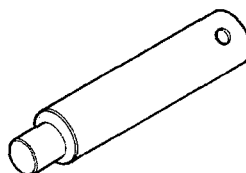

1:49 B012 015

2:-


Valve guide
remover and
installer

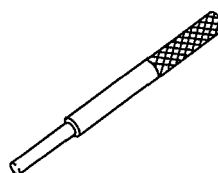

1:49 L017 5A0

2:-

Support hanger

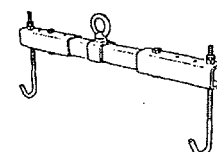

SERVICE TOOLS [WL-C, WE-C]

1:49 B012 016

2:-

Valve seal
installer

