
Tessel Axis: the button names

What to write on the standard panel when the unit is a Axis.

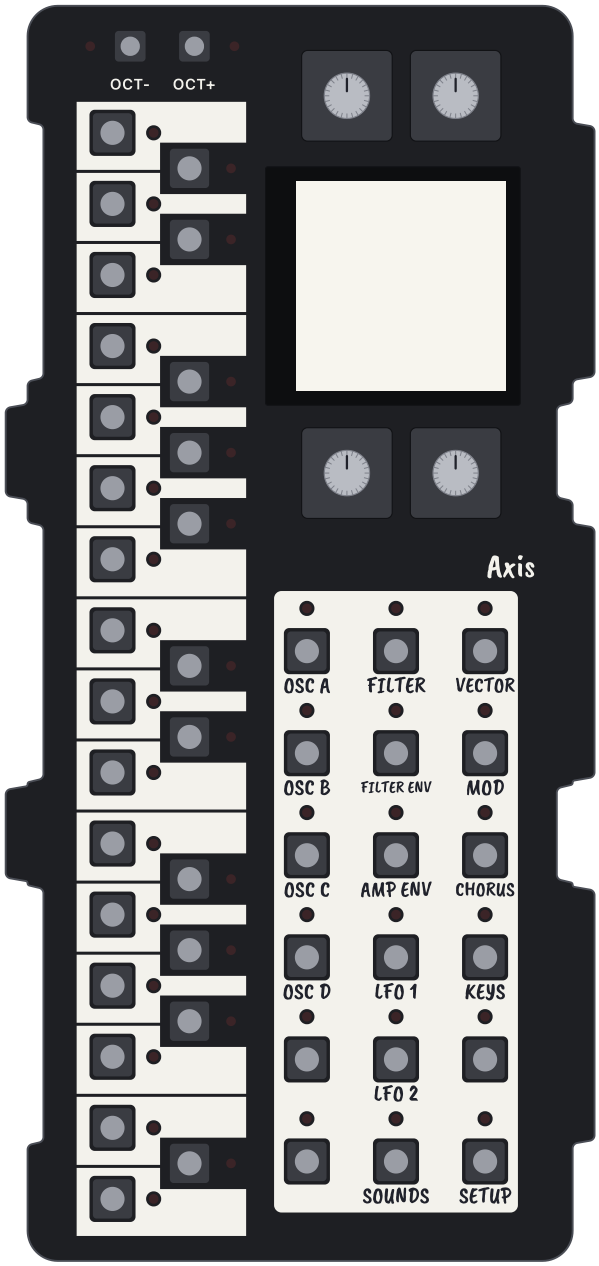

THE FUNCTION BUTTONS

OSC A	**FILTER**	**VECTOR**
OSC B	**FILTER ENV**	**MOD**
OSC C	**AMP ENV**	**CHORUS**
OSC D	**LFO 1**	**KEYS**
blank	**LFO 2**	blank
blank	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.