
Tessel Ember: the button names

What to write on the standard panel when the unit is a Ember.

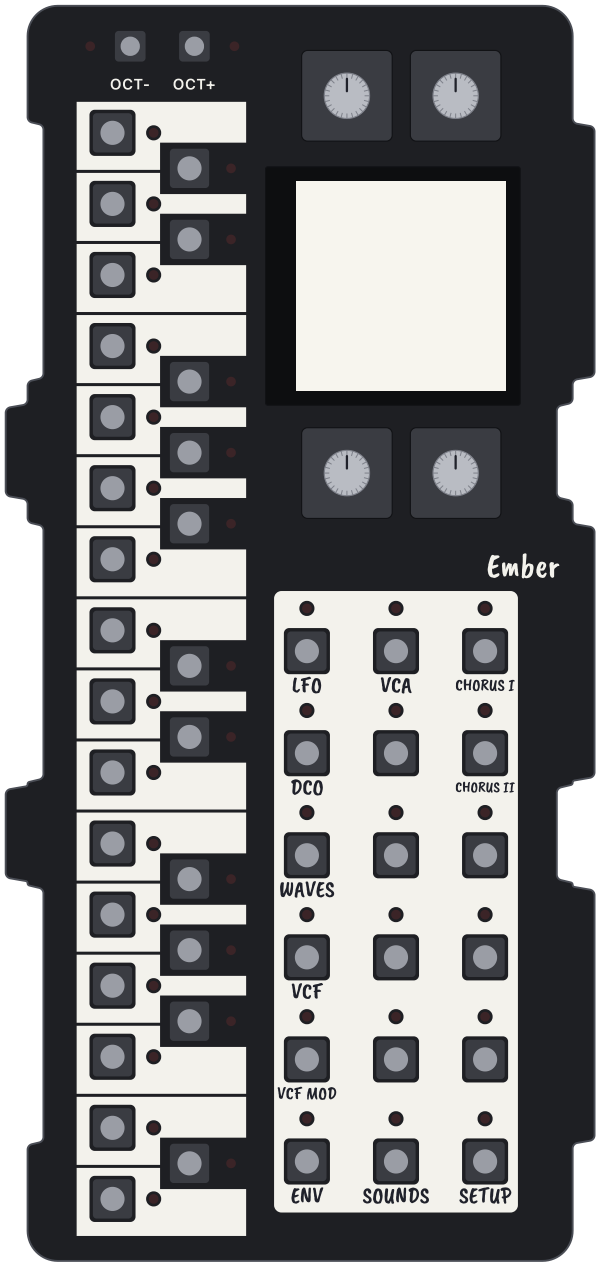

THE FUNCTION BUTTONS

LFO	**VCA**	**CHORUS I**
DCO	blank	**CHORUS II**
WAVES	blank	blank
VCF	blank	blank
VCF MOD	blank	blank
ENV	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.