
Tessel Glass: the button names

What to write on the standard panel when the unit is a Glass.

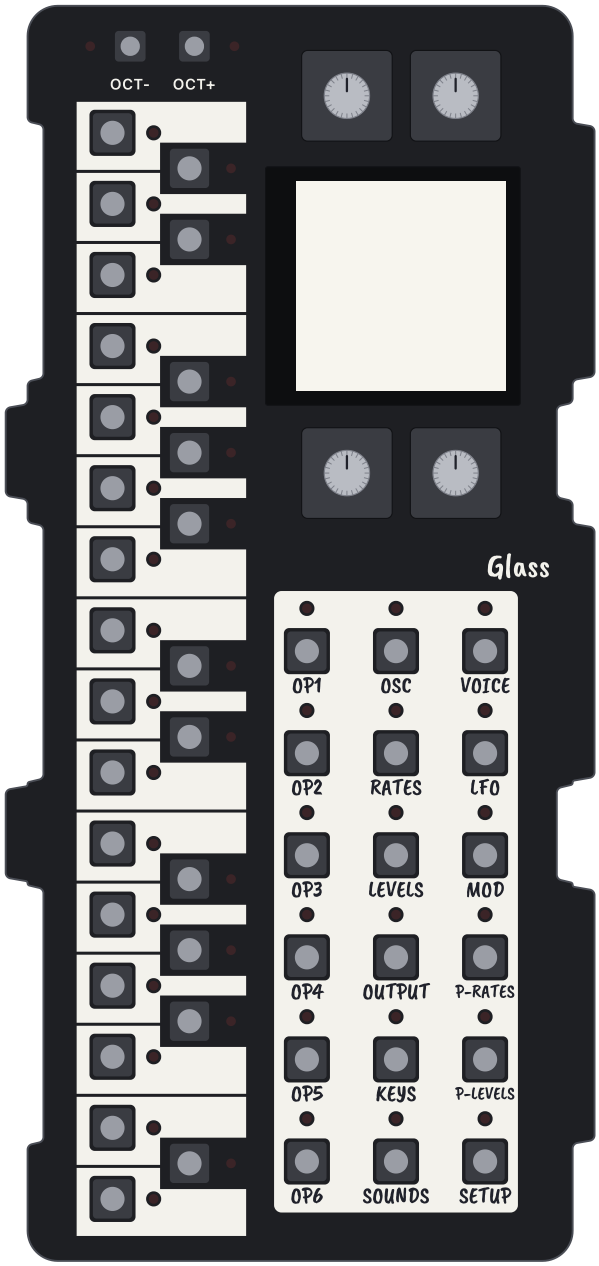

THE FUNCTION BUTTONS

OP1	**OSC**	**VOICE**
OP2	**RATES**	**LFO**
OP3	**LEVELS**	**MOD**
OP4	**OUTPUT**	**P-RATES**
OP5	**KEYS**	**P-LEVELS**
OP6	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.