
Tessel Grit: the button names

What to write on the standard panel when the unit is a Grit.

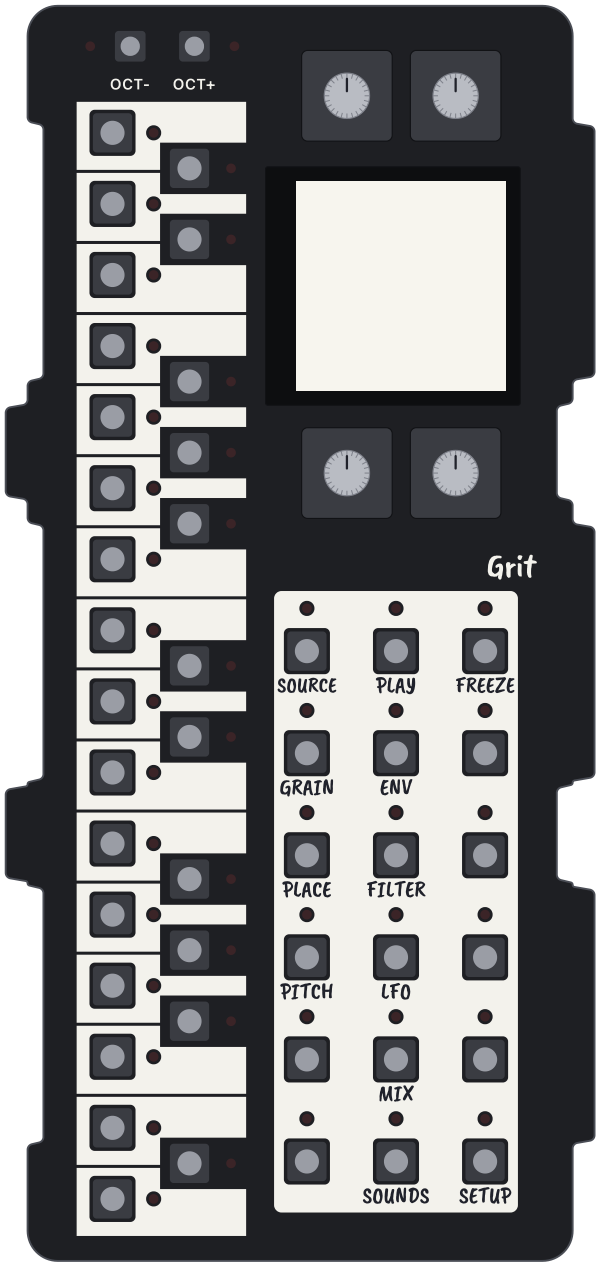

THE FUNCTION BUTTONS

SOURCE	**PLAY**	**FREEZE**
GRAIN	**ENV**	blank
PLACE	**FILTER**	blank
PITCH	**LFO**	blank
blank	**MIX**	blank
blank	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.