
Tessel Haze: the button names

What to write on the standard panel when the unit is a Haze.

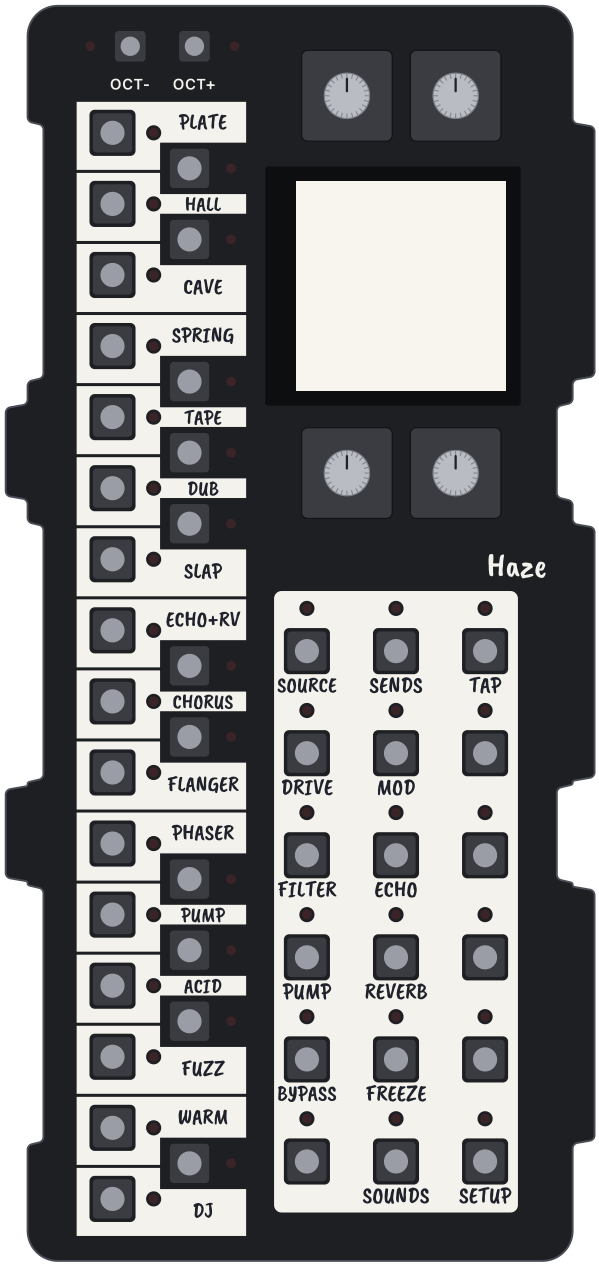

THE FUNCTION BUTTONS

SOURCE	SENDS	TAP
DRIVE	**MOD**	blank
FILTER	**ECHO**	blank
PUMP	**REVERB**	blank
BYPASS	**FREEZE**	blank
blank	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

THE WHITE KEYS, TOP KEY FIRST

1. **PLATE**
2. **HALL**
3. **CAVE**
4. **SPRING**
5. **TAPE**
6. **DUB**
7. **SLAP**
8. **ECHO+RV**
9. **CHORUS**
10. **FLANGER**
11. **PHASER**
12. **PUMP**
13. **ACID**
14. **FUZZ**
15. **WARM**
16. **DJ**

Write each on its white key, in the part the black keys leave showing, with the same marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.