
Tessel Pilot: the button names

What to write on the standard panel when the unit is a Pilot.

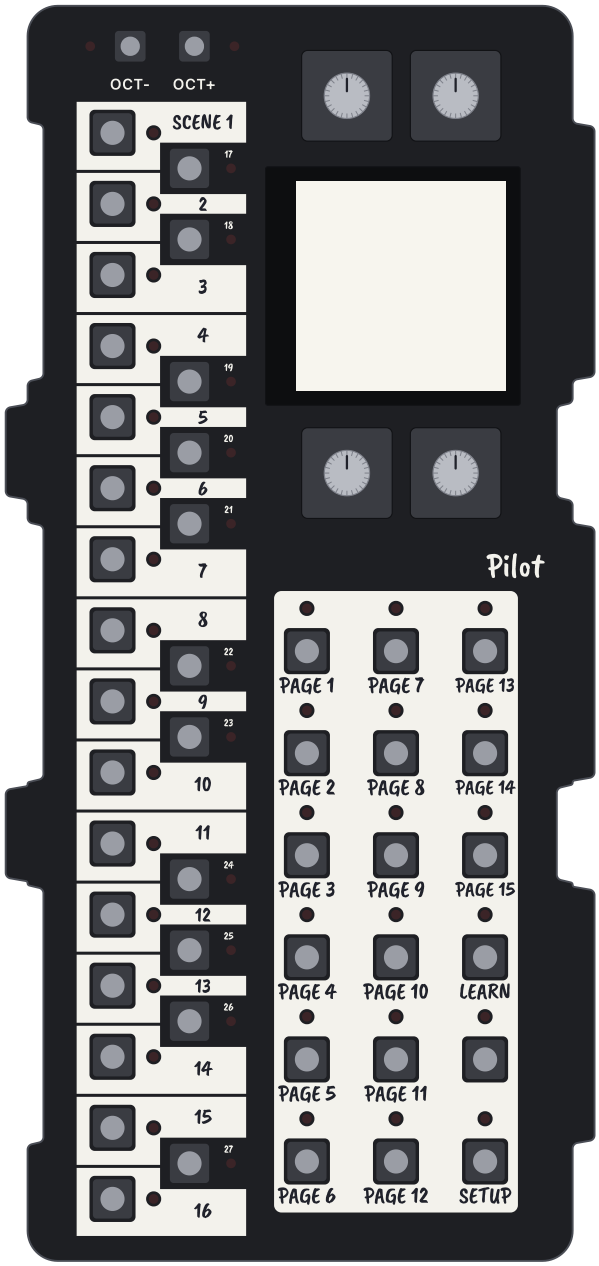

THE FUNCTION BUTTONS

PAGE 1	**PAGE 7**	**PAGE 13**
PAGE 2	**PAGE 8**	**PAGE 14**
PAGE 3	**PAGE 9**	**PAGE 15**
PAGE 4	**PAGE 10**	**LEARN**
PAGE 5	**PAGE 11**	blank
PAGE 6	**PAGE 12**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

THE WHITE KEYS, TOP KEY FIRST

SCENE 1 on key 1, then 2 to 16, one number a key.

Write each on its white key, in the part the black keys leave showing, with the same marker.

THE BLACK KEYS, TOP KEY FIRST

17 to 27, one number a key.

Write each on its black key, beside the button just above its light, with a white paint pen.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.