
Tessel Step: the button names

What to write on the standard panel when the unit is a Step.

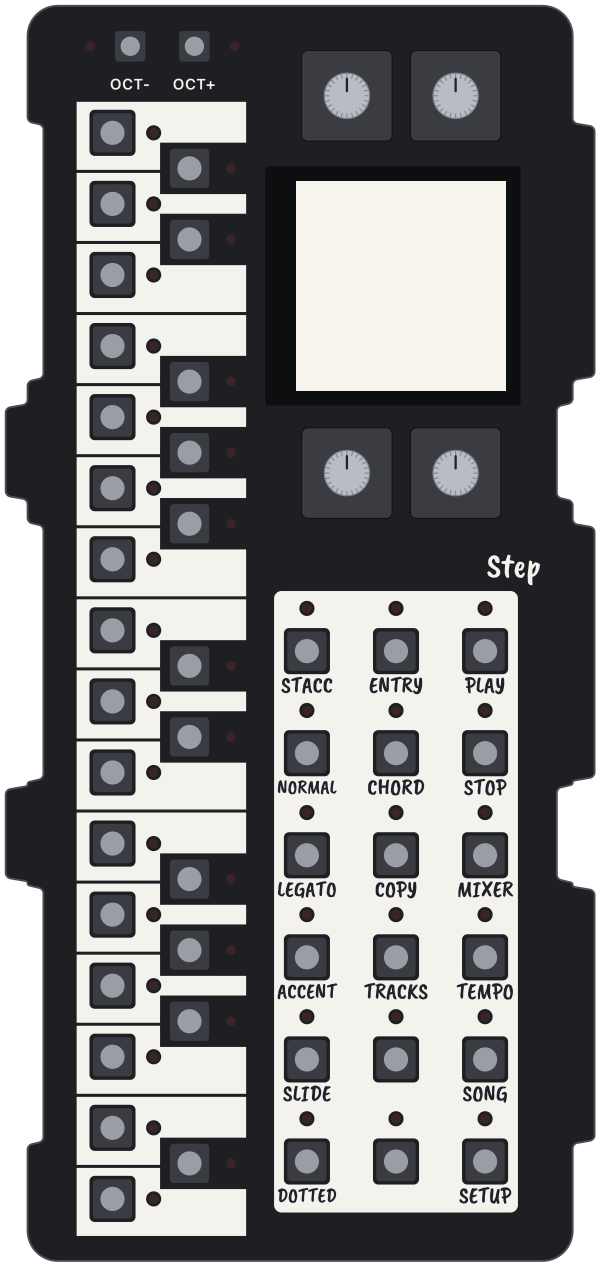

THE FUNCTION BUTTONS

STACC	**ENTRY**	**PLAY**
NORMAL	**CHORD**	**STOP**
LEGATO	**COPY**	**MIXER**
ACCENT	**TRACKS**	**TEMPO**
SLIDE	blank	**SONG**
DOTTED	blank	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.