
# Tessel Strike: the button names

What to write on the standard panel when the unit is a Strike.

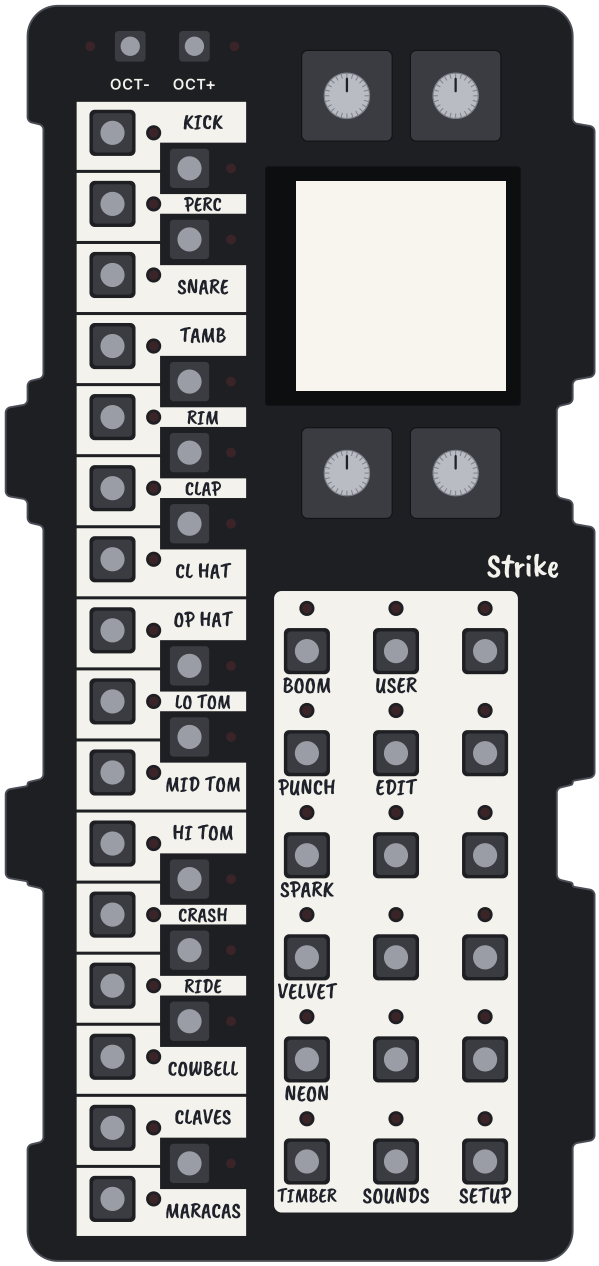


## THE FUNCTION BUTTONS

| | | |
|---|---|---|
| **BOOM** | **USER** | blank |
| **PUNCH** | **EDIT** | blank |
| **SPARK** | blank | blank |
| **VELVET** | blank | blank |
| **NEON** | blank | blank |
| **TIMBER** | **SOUNDS** | **SETUP** |

Write each name just below its button, on the white area, with a fine permanent marker.

## THE WHITE KEYS, TOP KEY FIRST

1. **KICK**
2. **PERC**
3. **SNARE**
4. **TAMB**
5. **RIM**
6. **CLAP**
7. **CL HAT**
8. **OP HAT**
9. **LO TOM**
10. **MID TOM**
11. **HI TOM**
12. **CRASH**
13. **RIDE**
14. **COWBELL**
15. **CLAVES**
16. **MARACAS**

Write each on its white key, in the part the black keys leave showing, with the same marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.