
# Tessel Taste: the button names

What to write on the standard panel when the unit is a Taste.

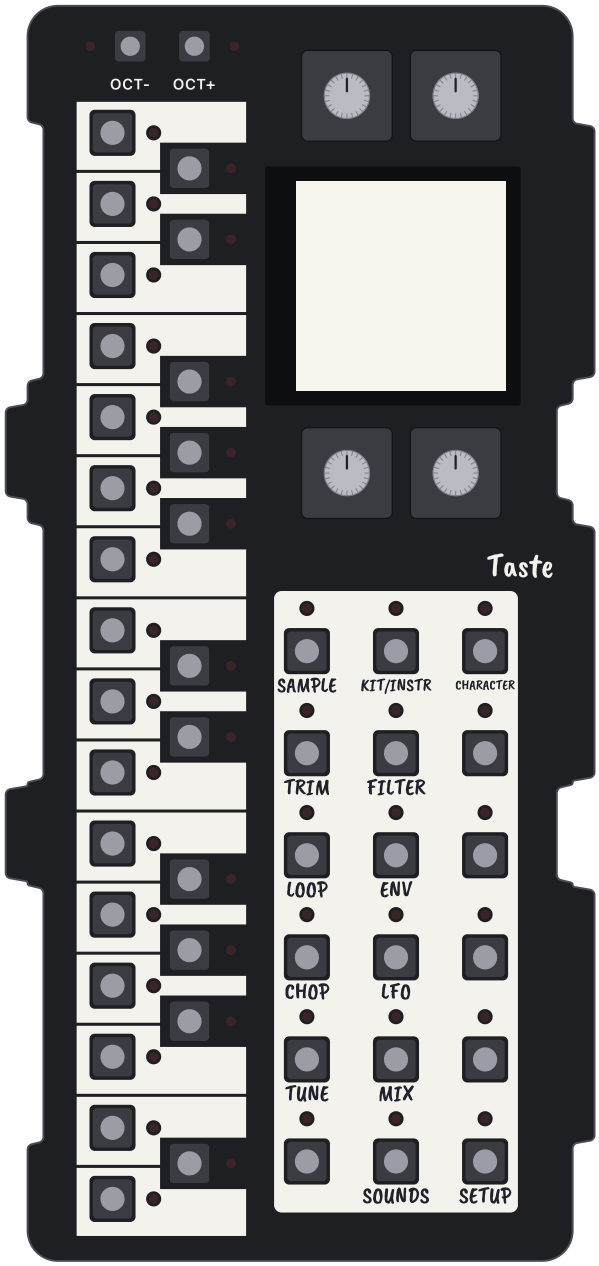


## THE FUNCTION BUTTONS

| SAMPLE | KIT/INSTR | CHARACTER |
|---|---|---|
| **TRIM** | **FILTER** | blank |
| **LOOP** | **ENV** | blank |
| **CHOP** | **LFO** | blank |
| **TUNE** | **MIX** | blank |
| blank | **SOUNDS** | **SETUP** |

Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.