
Tessel Glass: the button names

What to write on the standard panel when the unit is a Glass.

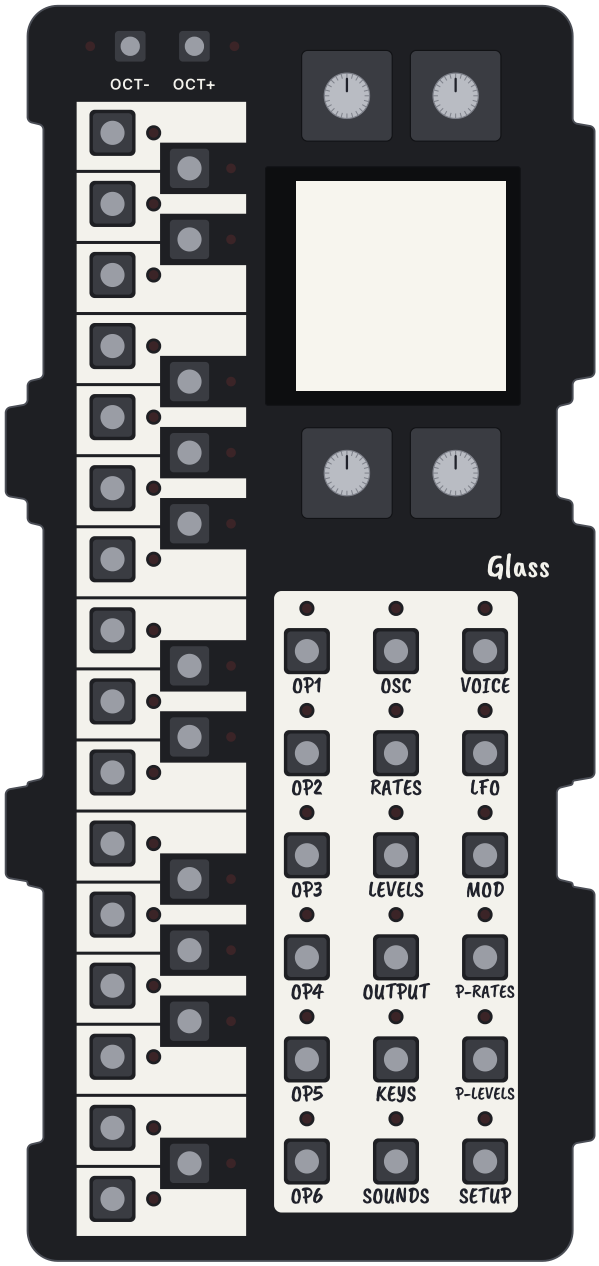

THE FUNCTION BUTTONS

OP1	**OSC**	**VOICE**
OP2	**RATES**	**LFO**
OP3	**LEVELS**	**MOD**
OP4	**OUTPUT**	**P-RATES**
OP5	**KEYS**	**P-LEVELS**
OP6	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.


Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.

Tessel Volt: the button names

What to write on the standard panel when the unit is a Volt.

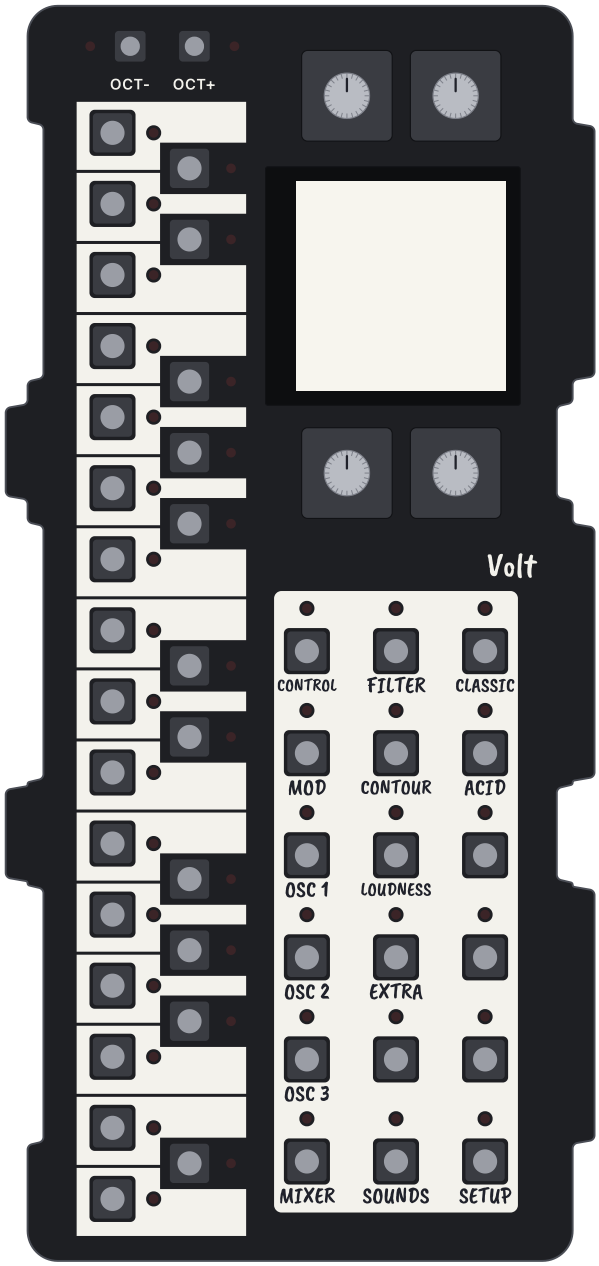

THE FUNCTION BUTTONS

CONTROL	**FILTER**	**CLASSIC**
MOD	**CONTOUR**	**ACID**
OSC 1	**LOUDNESS**	blank
OSC 2	**EXTRA**	blank
OSC 3	blank	blank
MIXER	**SOUNDS**	**SETUP**


Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel Ember: the button names

What to write on the standard panel when the unit is a Ember.

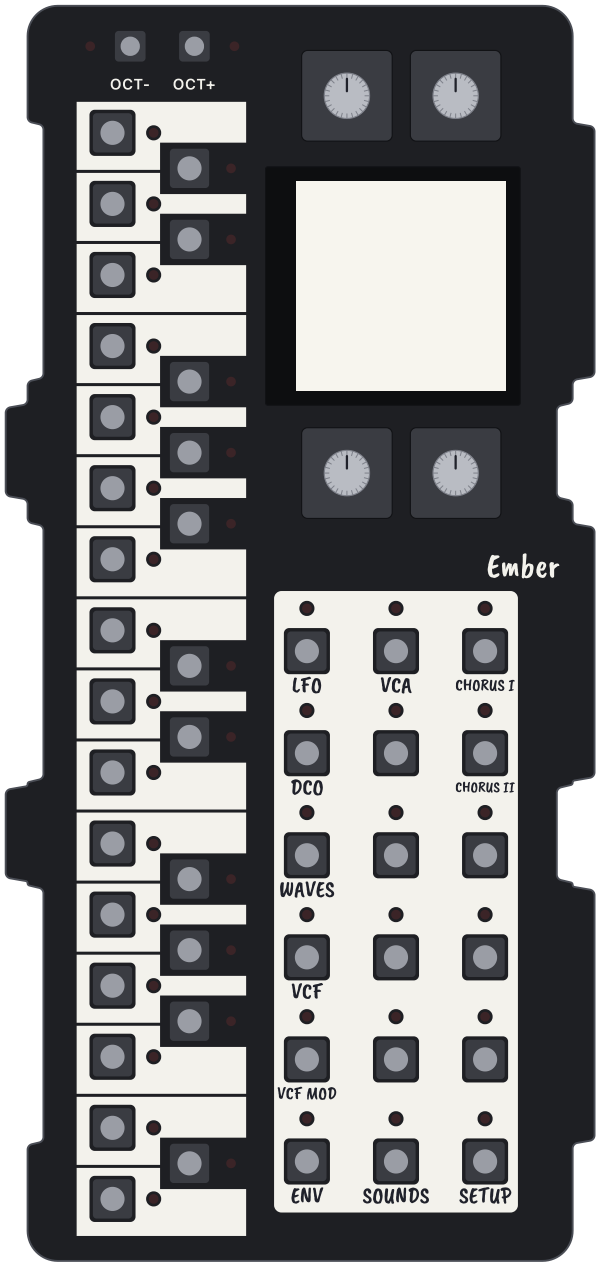

THE FUNCTION BUTTONS

LFO	**VCA**	**CHORUS I**
DCO	blank	**CHORUS II**
WAVES	blank	blank
VCF	blank	blank
VCF MOD	blank	blank
ENV	**SOUNDS**	**SETUP**


Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel Axis: the button names

What to write on the standard panel when the unit is a Axis.

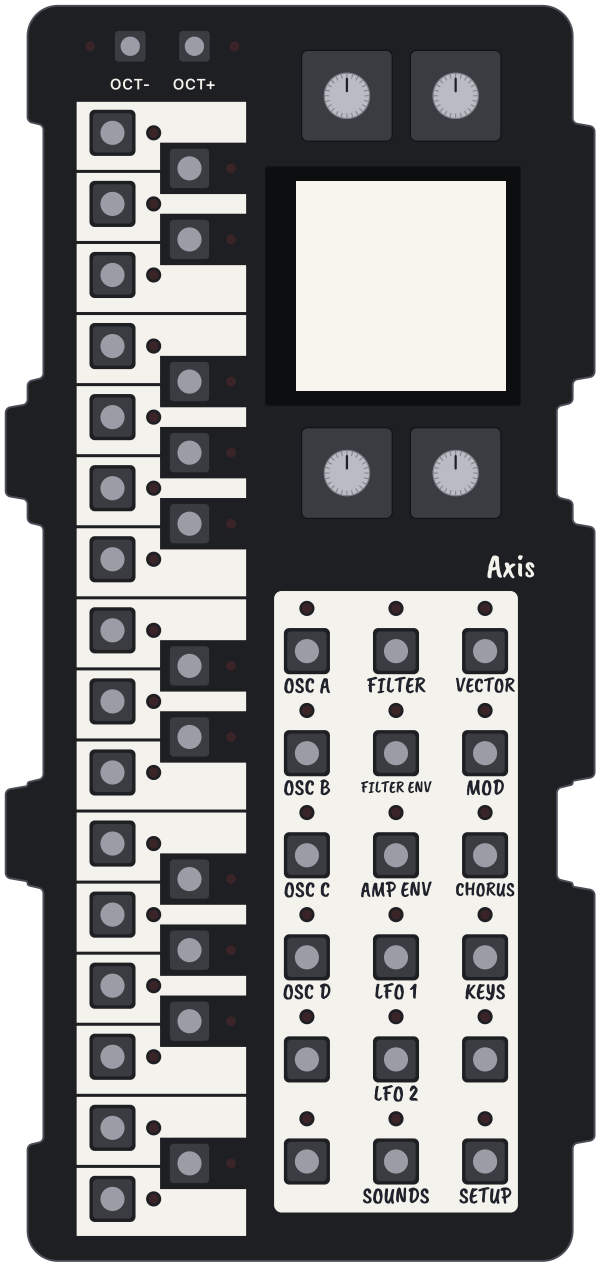

THE FUNCTION BUTTONS

OSC A	**FILTER**	**VECTOR**
OSC B	**FILTER ENV**	**MOD**
OSC C	**AMP ENV**	**CHORUS**
OSC D	**LFO 1**	**KEYS**
blank	**LFO 2**	blank
blank	**SOUNDS**	**SETUP**


Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel Strike: the button names

What to write on the standard panel when the unit is a Strike.

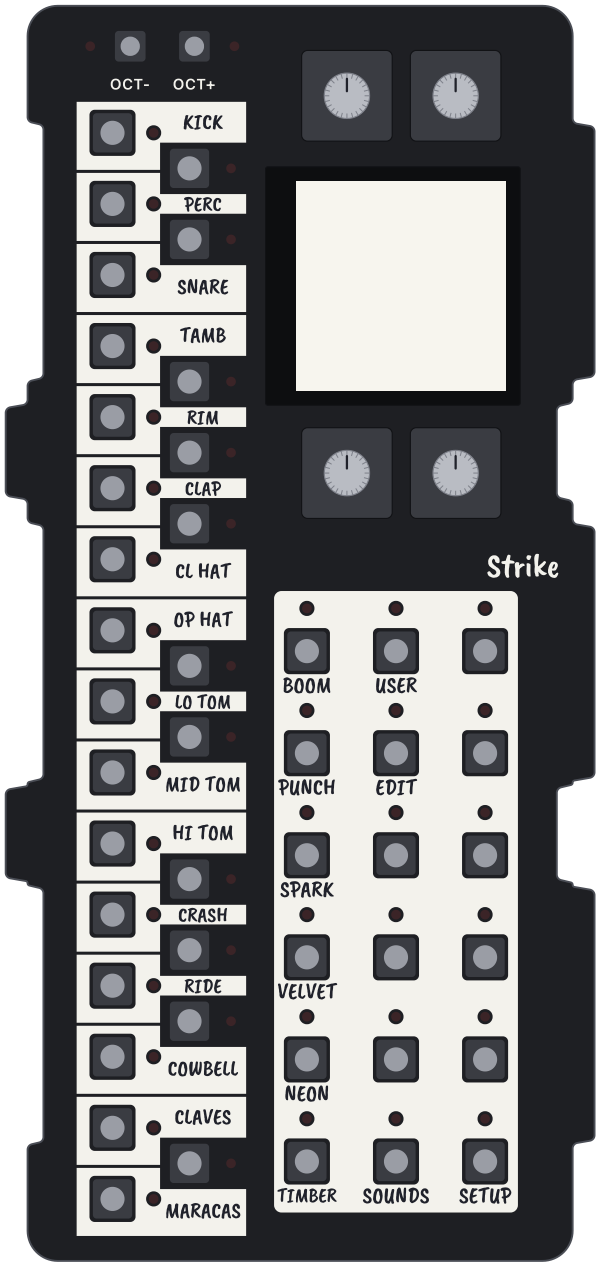

THE FUNCTION BUTTONS

BOOM	**USER**	blank
PUNCH	**EDIT**	blank
SPARK	blank	blank
VELVET	blank	blank
NEON	blank	blank
TIMBER	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

THE WHITE KEYS, TOP KEY FIRST

1. **KICK**
2. **PERC**
3. **SNARE**
4. **TAMB**
5. **RIM**
6. **CLAP**
7. **CL HAT**
8. **OP HAT**
9. **LO TOM**
10. **MID TOM**
11. **HI TOM**
12. **CRASH**
13. **RIDE**
14. **COWBELL**
15. **CLAVES**
16. **MARACAS**


Write each on its white key, in the part the black keys leave showing, with the same marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel Taste: the button names

What to write on the standard panel when the unit is a Taste.

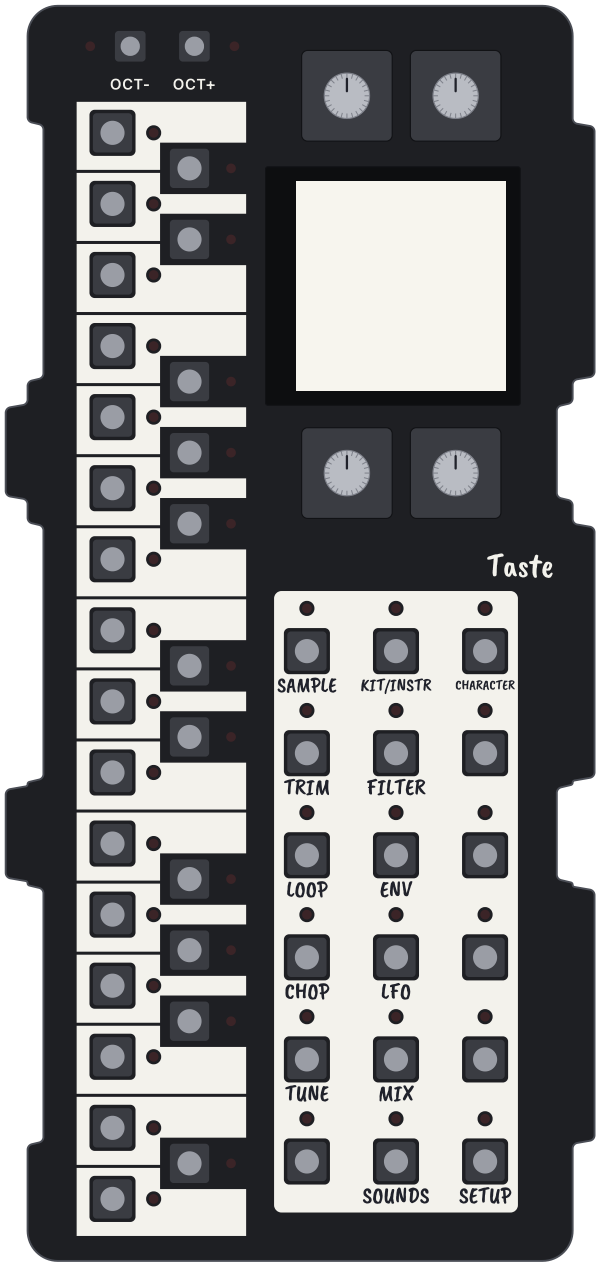

THE FUNCTION BUTTONS

SAMPLE	KIT/INSTR	CHARACTER
TRIM	**FILTER**	blank
LOOP	**ENV**	blank
CHOP	**LFO**	blank
TUNE	**MIX**	blank
blank	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.


Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.

Tessel Grit: the button names

What to write on the standard panel when the unit is a Grit.

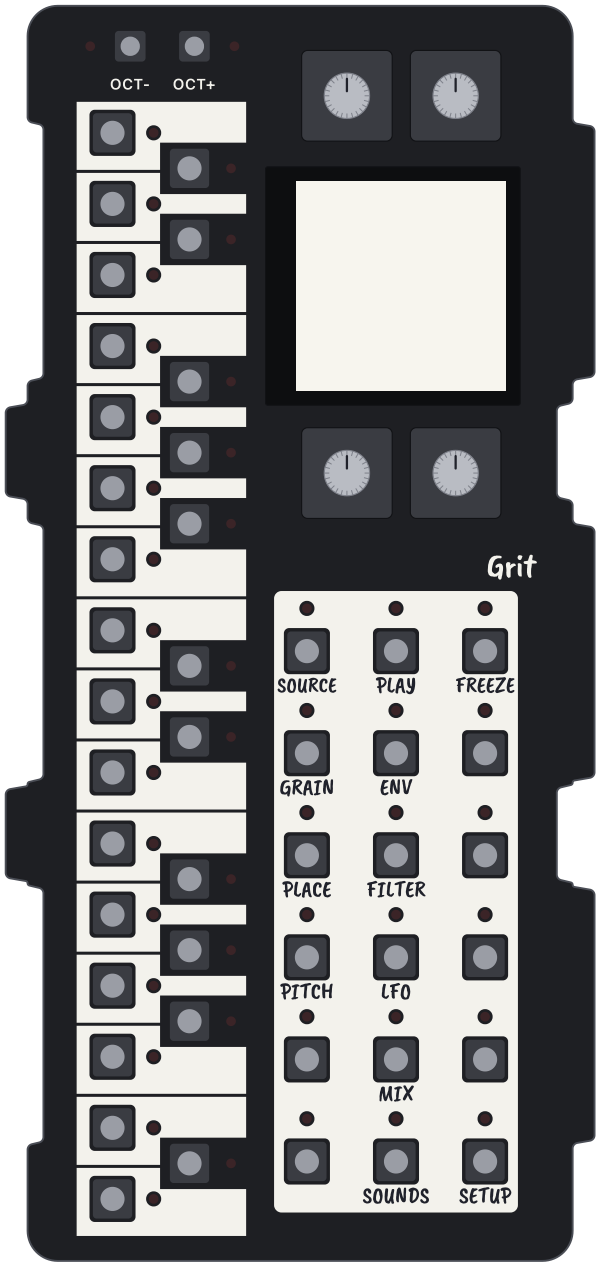

THE FUNCTION BUTTONS

SOURCE	**PLAY**	**FREEZE**
GRAIN	**ENV**	blank
PLACE	**FILTER**	blank
PITCH	**LFO**	blank
blank	**MIX**	blank
blank	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.


Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.

Tessel Haze: the button names

What to write on the standard panel when the unit is a Haze.

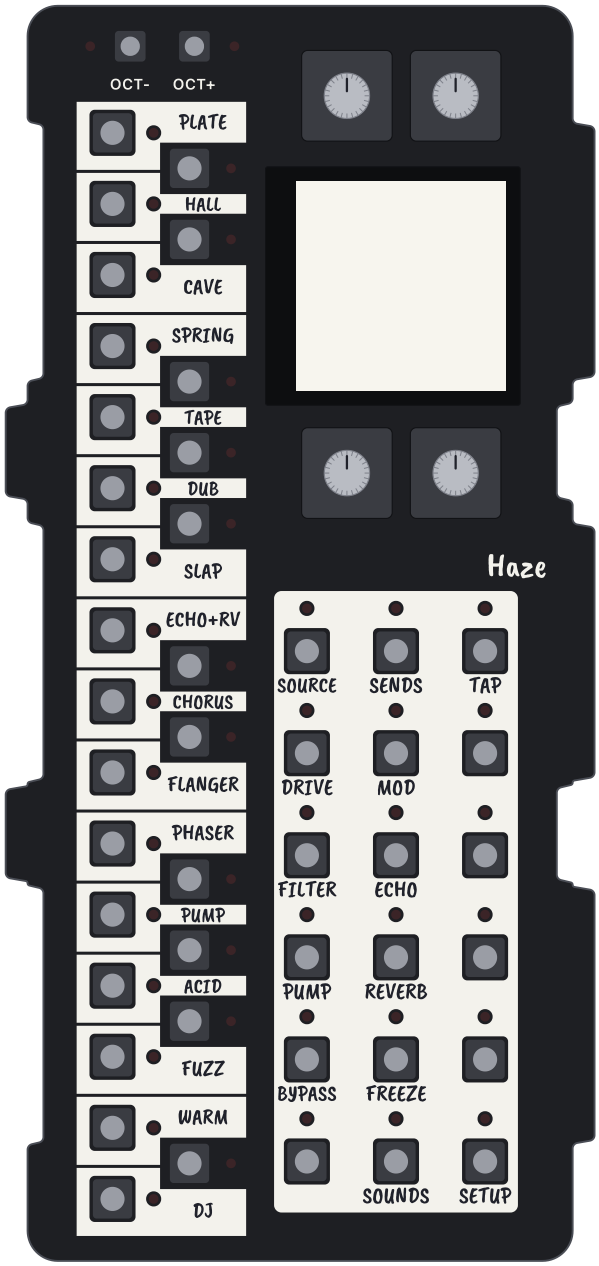

THE FUNCTION BUTTONS

SOURCE	SENDS	TAP
DRIVE	**MOD**	blank
FILTER	**ECHO**	blank
PUMP	**REVERB**	blank
BYPASS	**FREEZE**	blank
blank	**SOUNDS**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

THE WHITE KEYS, TOP KEY FIRST

1. **PLATE**
2. **HALL**
3. **CAVE**
4. **SPRING**
5. **TAPE**
6. **DUB**
7. **SLAP**
8. **ECHO+RV**
9. **CHORUS**
10. **FLANGER**
11. **PHASER**
12. **PUMP**
13. **ACID**
14. **FUZZ**
15. **WARM**
16. **DJ**

Write each on its white key, in the part the black keys leave showing, with the same marker.


Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel by Utopian Instruments. The same names are in the quick reference at the back of *Making Sounds* and *Making Music*.

Tessel Step: the button names

What to write on the standard panel when the unit is a Step.

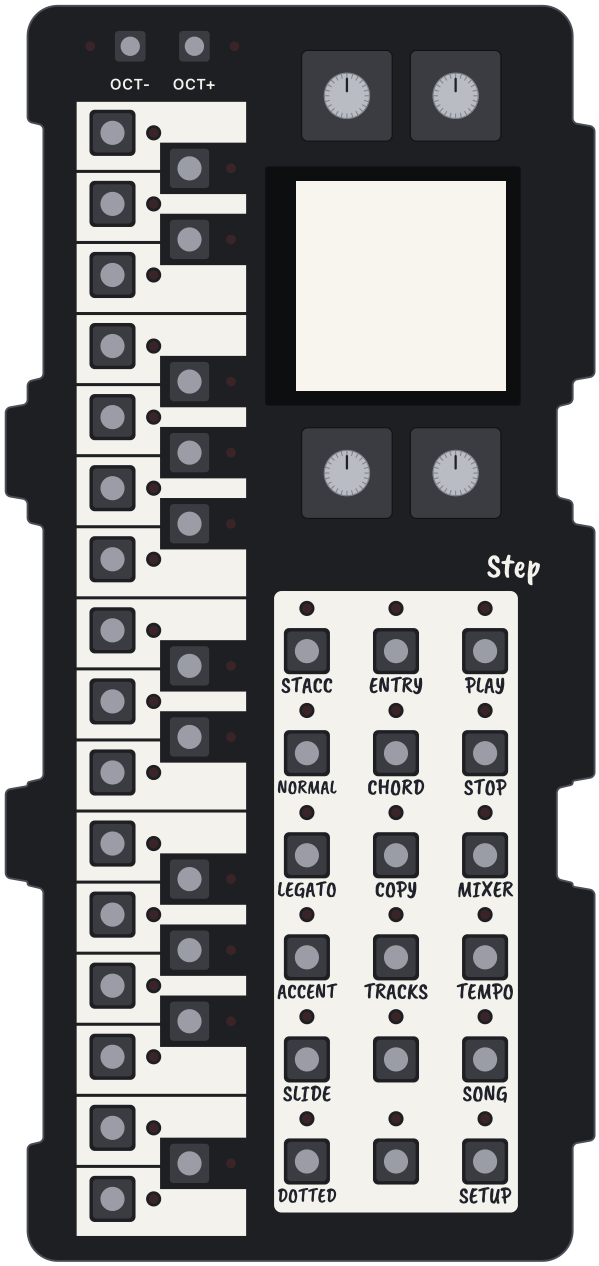

THE FUNCTION BUTTONS

STACC	**ENTRY**	**PLAY**
NORMAL	**CHORD**	**STOP**
LEGATO	**COPY**	**MIXER**
ACCENT	**TRACKS**	**TEMPO**
SLIDE	blank	**SONG**
DOTTED	blank	**SETUP**


Write each name just below its button, on the white area, with a fine permanent marker.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.

Tessel Pilot: the button names

What to write on the standard panel when the unit is a Pilot.

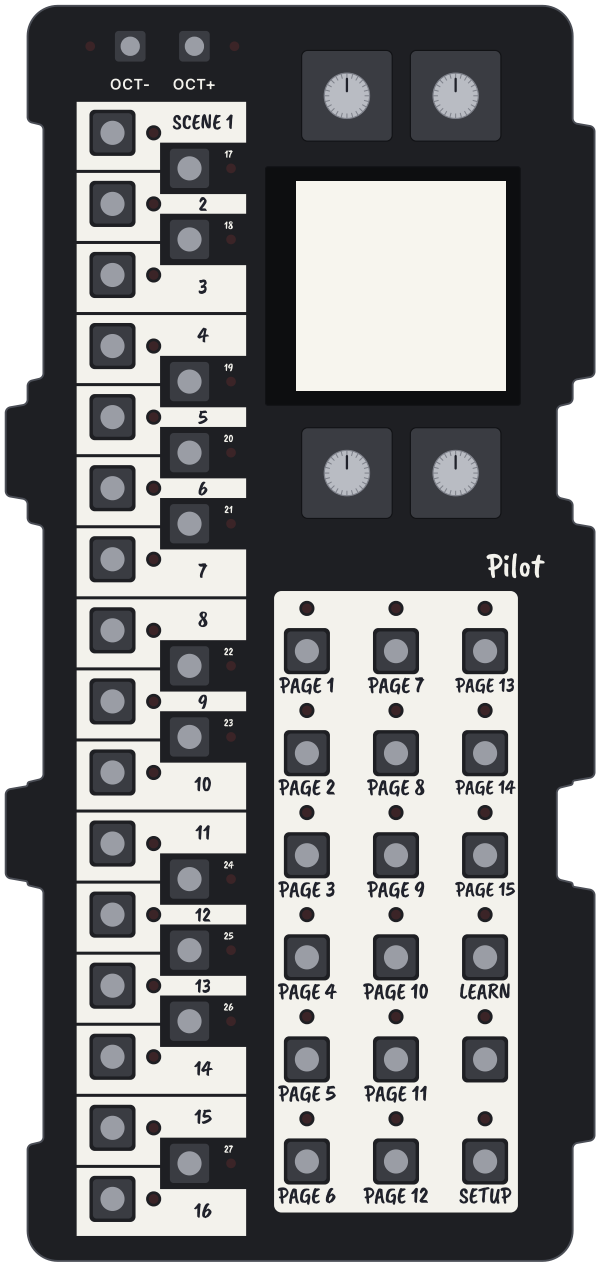

THE FUNCTION BUTTONS

PAGE 1	**PAGE 7**	**PAGE 13**
PAGE 2	**PAGE 8**	**PAGE 14**
PAGE 3	**PAGE 9**	**PAGE 15**
PAGE 4	**PAGE 10**	**LEARN**
PAGE 5	**PAGE 11**	blank
PAGE 6	**PAGE 12**	**SETUP**

Write each name just below its button, on the white area, with a fine permanent marker.

THE WHITE KEYS, TOP KEY FIRST

SCENE 1 on key 1, then 2 to 16, one number a key.

Write each on its white key, in the part the black keys leave showing, with the same marker.

THE BLACK KEYS, TOP KEY FIRST

17 to 27, one number a key.

Write each on its black key, beside the button just above its light, with a white paint pen.

Printed at 100% (not “fit to page”), the drawing is the unit’s real size: lay the unit beside it as you write.

If you like, write the unit’s name to the right of the middle screw, as in the drawing, with a white paint pen.