

# SYNTHMAVEN

## 4.0 USER GUIDE

The oriental groove box for the FM-1

M-VAVE FM-1 | Firmware, web editor and iPad editor

Screens rendered from firmware; editor examples may use mock data.

Based on Melodee and the credited SynthMaven / Clipper lineage.

# SCREEN INDEX


Introduction 11

SynthMaven 4: the oriental groove box 12

First 10 minutes 13

First 10 minutes 14

The design: cards, knobs and themes 15

Groove box 16

Drum Home and factory grooves 17

Getting started 18

Settings menu: hold HOME 19

Performance 20

Punch effects 21

Sequencer 22

Recording a take 23

Song arranger on the FM-1 24

Web and iPad editor 25

Per-layer MIDI routing 26

Playing with several keyboards 27

Maqam tuning workflow 28

MainStage-style performance: programs, scenes and setlists 29

The SM FM1 iPad app 30

Start here: controls and storage 31

Install, back up and recover 32

USB computer, iPad and powered-host setup 33

HOME: four-part program 34

Shortcuts and secondary actions 35

SAVE 36

NAME: entering a sound or project name 37

SEL 38

SCALE PICKER: categories and favorites 39

GLO 40

Layering notification 41

FX 42

FX 43

# SCREEN INDEX


| | |
|---|---|
| SHARED | 44 |
| ENV | 45 |
| ENV | 46 |
| ENV DEST | 47 |
| LFO | 48 |
| LFO | 49 |
| LFO 2 | 50 |
| LFO DEST | 51 |
| MOD | 52 |
| SCL | 53 |
| MASTER TUNE | 54 |
| CUSTOM TUNE | 55 |
| CHORD | 56 |
| EDIT | 57 |
| SID / EDIT 1 | 58 |
| SID / EDIT 2 | 59 |
| SID / VOICE | 60 |
| TUNE / CLOCK | 61 |
| SYSTEM | 62 |
| VOICE COST | 63 |
| LAYERING | 64 |
| CPU GUARD | 65 |
| DISPLAY | 66 |
| USB / SAVE | 67 |
| CONTROLS | 68 |
| RECORDING | 69 |
| DEVICE | 70 |
| PROGRAM | 71 |
| PRESETS | 72 |
| USER | 73 |
| PROJECT | 74 |
| ARP | 75 |
| ARP | 76 |

# SCREEN INDEX


| | |
|---|---|
| ARP 2 | 77 |
| SEQ | 78 |
| NOTES | 79 |
| PATTERN | 80 |
| TEMPO | 81 |
| EDIT hold | 82 |
| LAYER MIX | 83 |
| PATTERNS | 84 |
| SONG | 85 |
| MOTION | 86 |
| DRUM / EDIT 1 | 87 |
| DRUM / EDIT 2 | 88 |
| DRUM / DRUM SOUND | 89 |
| DRUM / DRUM MIX | 90 |
| DRUM / LANES | 91 |
| DRUM / LANES 2 | 92 |
| DRUM / DRUM HIT | 93 |
| FX / NOTE TAIL | 94 |
| FX / NOTE ECHO | 95 |
| FX 1 / PHASER | 96 |
| FX 1 / WIDTH | 97 |
| FX 1 / FORMANT | 98 |
| FX 1 / TAPE | 99 |
| FX 1 / SPIT | 100 |
| FX 1 / ROOM | 101 |
| FX 1 / REVERB | 102 |
| FX 1 / CHORUS | 103 |
| FX 1 / NOTE ECHO | 104 |
| FX 1 / DRIVE | 105 |
| FX 1 / CRUSH | 106 |
| FX 1 / FLANGER | 107 |
| FX 1 / PEDAL PHASER | 108 |
| FX 1 / PEDAL CHORUS | 109 |

# SCREEN INDEX


FX 2 / PHASER 110

FX 2 / WIDTH 111

FX 2 / FORMANT 112

FX 2 / TAPE 113

FX 2 / SPIT 114

FX 2 / ROOM 115

FX 2 / REVERB 116

FX 2 / CHORUS 117

FX 2 / NOTE ECHO 118

FX 2 / DRIVE 119

FX 2 / CRUSH 120

FX 2 / FLANGER 121

FX 2 / PEDAL PHASER 122

FX 2 / PEDAL CHORUS 123

FX 3 / PHASER 124

FX 3 / WIDTH 125

FX 3 / FORMANT 126

FX 3 / TAPE 127

FX 3 / SPIT 128

FX 3 / ROOM 129

FX 3 / REVERB 130

FX 3 / CHORUS 131

FX 3 / NOTE ECHO 132

FX 3 / DRIVE 133

FX 3 / CRUSH 134

FX 3 / FLANGER 135

FX 3 / PEDAL PHASER 136

FX 3 / PEDAL CHORUS 137

SEND FX 1 / PHASER 138

SEND FX 1 / WIDTH 139

SEND FX 1 / FORMANT 140

SEND FX 1 / TAPE 141

SEND FX 1 / SPIT 142

# SCREEN INDEX


SEND FX 1 / ROOM 143

SEND FX 1 / REVERB 144

SEND FX 1 / CHORUS 145

SEND FX 1 / NOTE ECHO 146

SEND FX 1 / DRIVE 147

SEND FX 1 / CRUSH 148

SEND FX 1 / FLANGER 149

SEND FX 1 / PEDAL PHASER 150

SEND FX 1 / PEDAL CHORUS 151

SEND FX 2 / PHASER 152

SEND FX 2 / WIDTH 153

SEND FX 2 / FORMANT 154

SEND FX 2 / TAPE 155

SEND FX 2 / SPIT 156

SEND FX 2 / ROOM 157

SEND FX 2 / REVERB 158

SEND FX 2 / CHORUS 159

SEND FX 2 / NOTE ECHO 160

SEND FX 2 / DRIVE 161

SEND FX 2 / CRUSH 162

SEND FX 2 / FLANGER 163

SEND FX 2 / PEDAL PHASER 164

SEND FX 2 / PEDAL CHORUS 165

SEND FX 3 / PHASER 166

SEND FX 3 / WIDTH 167

SEND FX 3 / FORMANT 168

SEND FX 3 / TAPE 169

SEND FX 3 / SPIT 170

SEND FX 3 / ROOM 171

SEND FX 3 / REVERB 172

SEND FX 3 / CHORUS 173

SEND FX 3 / NOTE ECHO 174

SEND FX 3 / DRIVE 175

# SCREEN INDEX


SEND FX 3 / CRUSH 176

SEND FX 3 / FLANGER 177

SEND FX 3 / PEDAL PHASER 178

SEND FX 3 / PEDAL CHORUS 179

FM6 / EDIT 1 180

FM6 / EDIT 2 181

FM6 / STORE 182

FM6 / ALGO 183

FM6 / FREQ 184

FM6 / OUT 185

FM6 / EG RATE 186

FM6 / EG LVL 187

FM6 / SCALE 188

FM6 / CURVE 189

FM6 / PITCH EG 190

FM6 / PITCH LV 191

FM6 / FM LFO 192

FM6 / FM BEND 193

CZ-1 / CZ TOOLS 194

CZ-1 / CZ LINE 195

CZ-1 / CZ DETUNE 196

CZ-1 / CZ VIBRATO 197

CZ-1 / CZ WINDOW 198

CZ-1 / CZ1 WAVE 199

CZ-1 / CZ1 TOUCH 200

CZ-1 / C1 PIT R1-4 201

CZ-1 / C1 PIT R5-8 202

CZ-1 / C1 PIT L1-4 203

CZ-1 / C1 PIT L5-8 204

CZ-1 / C1 PIT POINT 205

CZ-1 / C1 WAV R1-4 206

CZ-1 / C1 WAV R5-8 207

CZ-1 / C1 WAV L1-4 208

# SCREEN INDEX


CZ-1 / C1 WAV L5-8 209

CZ-1 / C1 WAV POINT 210

CZ-1 / C1 AMP R1-4 211

CZ-1 / C1 AMP R5-8 212

CZ-1 / C1 AMP L1-4 213

CZ-1 / C1 AMP L5-8 214

CZ-1 / C1 AMP POINT 215

CZ-1 / CZ2 WAVE 216

CZ-1 / CZ2 TOUCH 217

CZ-1 / C2 PIT R1-4 218

CZ-1 / C2 PIT R5-8 219

CZ-1 / C2 PIT L1-4 220

CZ-1 / C2 PIT L5-8 221

CZ-1 / C2 PIT POINT 222

CZ-1 / C2 WAV R1-4 223

CZ-1 / C2 WAV R5-8 224

CZ-1 / C2 WAV L1-4 225

CZ-1 / C2 WAV L5-8 226

CZ-1 / C2 WAV POINT 227

CZ-1 / C2 AMP R1-4 228

CZ-1 / C2 AMP R5-8 229

CZ-1 / C2 AMP L1-4 230

CZ-1 / C2 AMP L5-8 231

CZ-1 / C2 AMP POINT 232

PROPHET / EDIT 1 233

PROPHET / EDIT 2 234

PROPHET / P5 STORE 235

PROPHET / P5 OSC A 236

PROPHET / P5 OSC B 237

PROPHET / P5 B WAVES 238

PROPHET / P5 MIXER 239

PROPHET / P5 FILTER 240

PROPHET / P5 FLT ENV 241

# SCREEN INDEX


PROPHET / P5 AMP ENV 242

PROPHET / P5 ENV MOD 243

PROPHET / P5 POLYMOD 244

PROPHET / P5 MOD FLT 245

PROPHET / P5 LFO 246

PROPHET / P5 WHEEL 247

PROPHET / P5 WHEEL 2 248

PROPHET / P5 UNISON 249

PROPHET / P5 BEND 250

MIDI Track / EDIT 1 251

HYBRID / EDIT 1 252

HYBRID / EDIT 2 253

ANALOG / EDIT 1 254

ANALOG / EDIT 2 255

DIGITAL / EDIT 1 256

DIGITAL / EDIT 2 257

VOICE / EDIT 1 258

VOICE / EDIT 2 259

STRINGS / EDIT 1 260

STRINGS / EDIT 2 261

JUNO / EDIT 1 262

JUNO / EDIT 2 263

ACID / EDIT 1 264

ACID / EDIT 2 265

WSEQ / EDIT 1 266

WSEQ / EDIT 2 267

VPS / EDIT 1 268

VPS / EDIT 2 269

Editor / MIDI routing for layers and the drummer 270

Editor / Perform: quick edits 271

Editor / Tone 272

Editor / Filter 273

Editor / Envelopes 274

# SCREEN INDEX


Editor / Modulation 275

Editor / Effects 276

Editor / LFO and arpeggiator 277

Editor / Native patch import 278

Editor / DX7 / FM6 279

Editor / Sequencer 280

Editor / Independent drum machine 281

Editor / Programs, scenes and setlists 282

Editor / Projects and full backup 283

Editor / Global microtuning 284

Editor / Saved scales and Scala 285

Editor / Scale keyboard and chords 286

Editor / Library 287

Editor / Settings 288

Editor / MIDI Learn 289

Editor / Four-layer melodic sequencer 290

Editor / Four-track song arranger 291

# Introduction

SynthMaven 4.0

# SynthMaven 4: the oriental groove box




OPEN THIS SCREEN This page explains what SynthMaven 4 is for.

| | |
|---|---|
| **What it is** | An FM-1 firmware for oriental live musicians, turning the standard M-VAVE FM-1 into an oriental groove box. |
| **At a glance** | 14 sound engines, 610 melodic presets, 4 drum kits, 70 scales (46 of them maqam), 4 simultaneous layers plus the drummer, and 8 factory drum grooves. |
| **Microtuning for maqam** | 46 maqam settings, a selectable root and octave boundary, custom offsets per key (10-cent steps on the panel, 1-cent steps in the editors), per-part bypass and scale-aware chords. |
| **Multi-layer key mapping** | Four parts per program, stacked or split across the keyboard, each with its own range, level and pan. |
| **Groove box** | An independent eight-lane drum machine beside all four parts, with factory grooves including Maksoom, Wahda, Baladi and Fox. |
| **Sequencer** | Up to 64 steps and 8 patterns per track, song arrangement, live recording, step chance, knob automation and a piano roll. |
| **Song arranger** | Up to 16 sections, each with a pattern for every track, a drum groove and 1-16 repeats, on the FM-1 or in the editors. A jam can become an arrangement. |
| **MainStage-style performance** | Programs with four scenes, a 32-entry setlist and learned pedal or controller actions, with a Perform screen in the web editor and the SM FM1 iPad app. |
| **Multi-keyboard support** | A separate MIDI input and channel for each layer and the drummer, over USB, TRS or both. |
| **STEP BY STEP** | 1. Install SynthMaven and start on Program 1. 2. Tap SEL to choose a maqam. 3. Press HOME twice to reach the drums, choose a groove with ALGORITHM and press PLAY. 4. Play over it, then hold GLO for two seconds to bring in the other layers. |

# First 10 minutes

SynthMaven 4.0

# First 10 minutes





OPEN THIS SCREEN Start here after installing.

| | |
|---|---|
| **1. Choose a maqam** | Tap SEL. Turn SELECT to choose a scale, KNOB 3 to choose the root and KNOB 4 to turn master tuning on. |
| **2. Start a groove** | Press HOME to reach the drums. Turn ALGORITHM to MAKSOOM or another groove, then press PLAY. Turn SELECT to set the tempo. |
| **3. Bring in layers** | Press HOME to return to the four cards. Hold GLO for two seconds to play all four layers together. |
| **4. Choose a sound** | Turn SELECT, once the drums are stopped, to choose a layer, then ALGORITHM for its engine and PRESETS for its sound. |
| **5. Save your program** | Stop playback and press SAVE to open PROGRAM. Turn KNOB 4 right twice within 1.5 seconds to save. |
| **STEP BY STEP** | 1. Follow these in order the first time. 2. Back up before you install, because installing resets settings and musical storage. |

# The design: cards, knobs and themes




OPEN THIS SCREEN Hold HOME for Settings, then choose COLOR.




1 It's a Prophet

| | |
|---|---|
| **Cards** | Every page shows its four knobs as cards along the top, in the same order as KNOB 1-4. Each card has its colour along the top, its label and its value. |
| **Colours** | KNOB 1-4 and layers 1-4 use the theme's four colours in order, on every screen. |
| **SYNTHMAVEN** | The default: red as the main colour, then white, blue and grey. |
| **ORANGE** | Orange as the main colour, then white, blue and grey. |
| **BABY BLUE** | Baby blue as the main colour, then white, red and grey. |
| **PINK** | Pink as the main colour, then white, blue and grey. |
| **Type** | All screens use Rubik, with a smaller size on the Home cards so that names fit. The pixel font is gone. |
| **STEP BY STEP** | 1. Hold HOME to open Settings. 2. With COLOR selected, turn KNOB 1 to change the theme; it applies straight away. 3. Turn KNOB 4 to leave. |

# Groove box

SynthMaven 4.0

# Drum Home and factory grooves

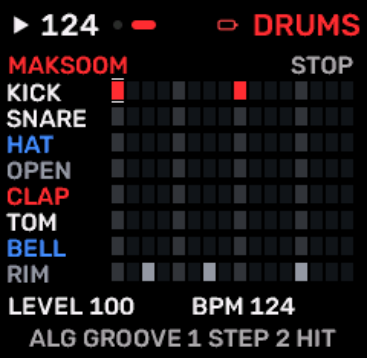



OPEN THIS SCREEN Press HOME on the four-part overview.

| | |
|---|---|
| **ALGORITHM** | Choose a groove: BALLAD, HALF PIPE, STRAIGHT 8, ON THE FLOOR, MAKSOOM, WAHDA, BALADI or FOX. It replaces the eight lanes straight away. |
| **MY PATTERN** | Turn back to MY PATTERN to get your own steps again. Editing a groove makes it your pattern. |
| **SELECT** | Choose one of the eight lanes: KICK, SNARE, HAT, OPEN, CLAP, TOM, BELL or RIM. While the drums are running, SELECT sets the tempo instead, on both Home screens. |
| **PRESETS / KNOB 1** | Choose a step. |
| **KNOB 2** | Turn right to add a hit on the step, left to clear it. |
| **KNOB 3 / KNOB 4** | Set the lane level / set the tempo. |
| **PLAY** | Start or stop the independent drums. All four sound layers stay available to the keyboard. |
| **Arabic rhythms** | On these grooves dum is on KICK and tak is on RIM: MAKSOOM D T . T D . T . / BALADI D D . T D . T . / WAHDA D . . T . . T . / FOX D T D T. |
| **Limits** | The drum machine has 16 steps at 1/16 and no swing. Drum patterns save with the program. |
| **STEP BY STEP** | 1. Press HOME until DRUMS shows in the header. 2. Turn ALGORITHM to the groove you want and press PLAY. 3. Change the tempo with KNOB 4. 4. Save the program to keep the drum pattern. |

# Getting started

SynthMaven 4.0

# Settings menu: hold HOME

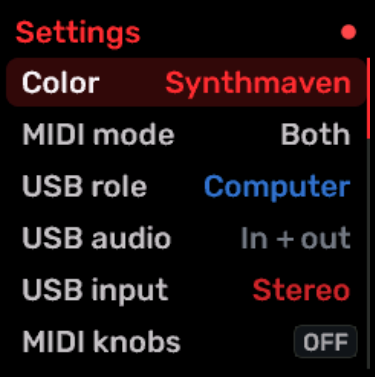



OPEN THIS SCREEN Hold HOME.

| | |
|---|---|
| **SELECT** | Move through the rows; it wraps from the last row to the first. |
| **KNOB 1** | Change the selected row. |
| **KNOB 4** | Leave the menu. KNOB 2 no longer moves the row. |
| **MIDI MODE** | Where the MIDI-only tracks accept notes: USB, TRS or BOTH. The default is BOTH. |
| **USB ROLE** | COMPUTER for the editors and the installer; HOST for a keyboard, pad or pedal connected to the FM-1. It returns to COMPUTER at each power-on. |
| **KNOB MODE** | How knobs respond to a controller: Absolute or Relative. |
| **HOLD and LIGHTS** | Now in GLO preference pages, not this menu. |
| **STEP BY STEP** | 1. Hold HOME until Settings opens. 2. Turn SELECT to the row. 3. Turn KNOB 1 to change it. 4. Turn KNOB 4 to leave. |

# Performance

SynthMaven 4.0

# Punch effects

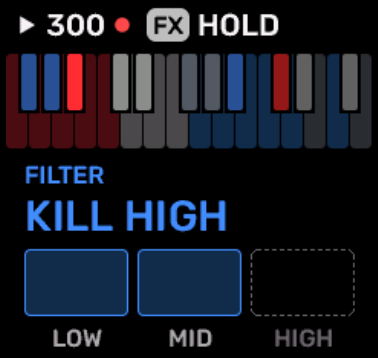



OPEN THIS SCREEN Hold FX.

| | |
|---|---|
| **FX + key** | Hold FX and press a key to apply one of 27 effects to the whole stereo master. Let go of the key for dry audio. |
| **Double-tap FX** | Lock the layer; tap again to close it. |
| **Effects** | Loops, reverse, tape stop, half speed, filter sweeps, phone, crush, alias, gate, echo, wobble, band kills, rewind, octave up, flanger, auto-pan, freeze, mono and fade. |
| **KNOB 1** | Browse the key reference. |
| **Notes** | Effect keys play no notes and send no MIDI. Keys already held keep playing. |
| **Reverse and rewind** | Hold FX briefly first, so there is audio history to play back. |
| **STEP BY STEP** | 1. Start a groove. 2. Hold FX and press an effect key at the end of a phrase. 3. Let go to return to the dry sound. |

# Sequencer

SynthMaven 4.0

# Recording a take

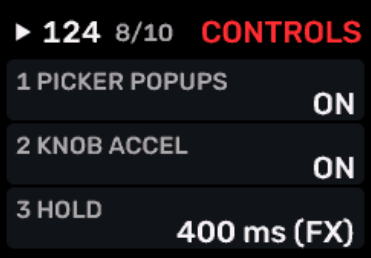



OPEN THIS SCREEN Select a track, then tap REC.

GLO 8/10 CONTROLS

| | |
|---|---|
| **REC** | Tap to arm or disarm the selected track. Only one track can be armed at a time. |
| **REC + PLAY** | Arm and start together. |
| **Armed before PLAY** | Records from step zero. |
| **Armed while playing** | Records from that track's next pattern start. |
| **What is kept** | Timing, velocity and held length, including repeats and overlapping chords. |
| **Undo** | After a take, hold EDIT for UNDO RECORDING. There is one such undo. |
| **Click** | Set click, click level and count-in in GLO > RECORDING. Set quantize on SEQ > TEMPO. |
| **STEP BY STEP** | 1. Select the track and an empty pattern. 2. Set the click and count-in. 3. Press REC + PLAY and perform. 4. Stop, check NOTES, and save the project. |

# Song arranger on the FM-1

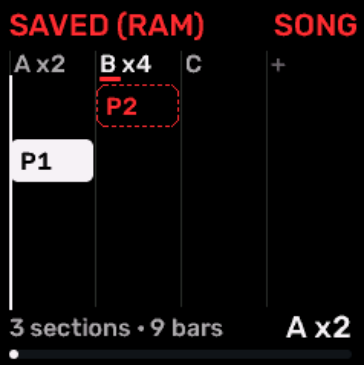



OPEN THIS SCREEN Press SEQ and turn SELECT to SONG.

| | |
|---|---|
| **SEQ > SONG** | The arranger: sections as columns, with the patterns of the track you're editing as blocks. |
| **KNOB 1** | Choose the section. |
| **KNOB 2** | Choose the track. |
| **KNOB 3** | Choose that track's pattern in this section. |
| **KNOB 4** | Set how many times the section repeats, 1-16. |
| **PRESETS** | Choose the section's drum groove: no change, one of the 8 factory grooves, or drums off. It shows at the foot of the screen. |
| **Limits** | Up to 16 sections. Sections change at track 1's loop boundary, and the last section stops the song. |
| **Take a jam** | While you jam with no song playing, each loop of track 1 is logged as a section. Hold REC on SONG, or use Take jam on the sheet, to turn that into the arrangement. |
| **OCT+ sheet** | Insert, Duplicate or Delete a section, Take jam, or Clear song. |
| **Drummer** | A section with a groove starts the drummer on that groove from the section's first step. Your own drum pattern comes back when the song stops. Grooves are factory patterns, and MY PATTERN can't be chosen per section. |
| **STEP BY STEP** | 1. Make a few patterns first. 2. Open SEQ > SONG and add sections in playback order. 3. Choose each track's pattern and the repeats. 4. Press PLAY to audition, then stop and save the project. |

# Web and iPad editor


SynthMaven 4.0

# Per-layer MIDI routing

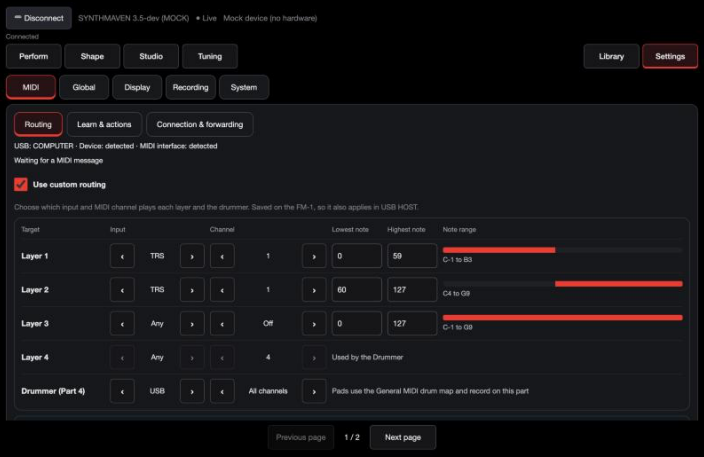



| | |
|---|---|
| **Open** | Settings > MIDI > Routing. |
| **Where** | In the editors: Settings > MIDI > Routing. |
| **Layers and drummer** | Assign an input (Any, USB or TRS) and a channel (Off, 1-16 or All) to layers 1-4 and the Drummer. Routing is off by default and is saved on the FM-1. |
| **Splits and stacks** | Layers on the same input and channel split or stack by note range. |
| **Drummer** | Plays and records on the first part using the DRUM engine; that part is then not available as a layer. |
| **MIDI Learn** | Adds Transport Play / Stop, Record (selected part) and Record (drummer). |
| **STEP BY STEP** | 1. Connect in COMPUTER role and open the editor. 2. Turn routing on. 3. Choose an input and channel for each layer and the Drummer. 4. Play each keyboard and check it reaches the right layer. |

# Playing with several keyboards

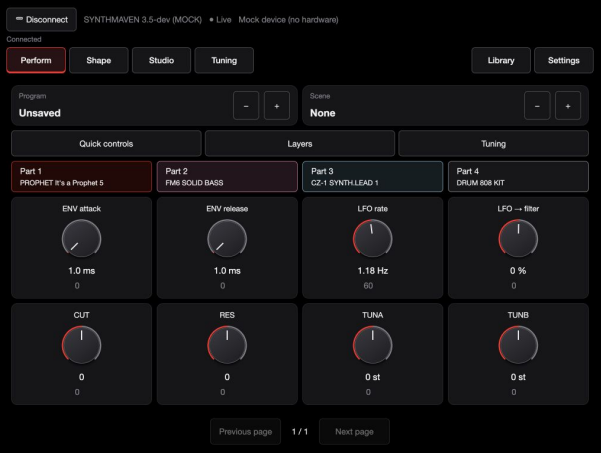



| | |
|---|---|
| **Open** | Settings > MIDI > Routing. |
| **Two keyboards by input** | Put one on TRS and one on USB. Route each layer to the input that should play it. |
| **Several on one input** | Give each keyboard its own channel, and route each layer to one channel. |
| **Controllers through a computer** | The web editor can forward several controllers on a computer, each to its target's channel. |
| **Controllers through an iPad** | The iPad app forwards one controller at a time. |
| **Directly into the FM-1** | Set USB ROLE to HOST and use a powered data hub. The FM-1 can't power a USB controller itself. HOST and the editors can't be used over USB at the same time. |
| **STEP BY STEP** | 1. Decide which keyboard plays which layers. 2. Set each keyboard's MIDI channel on the keyboard. 3. Set Routing to match. 4. Save the program. |

# Maqam tuning workflow

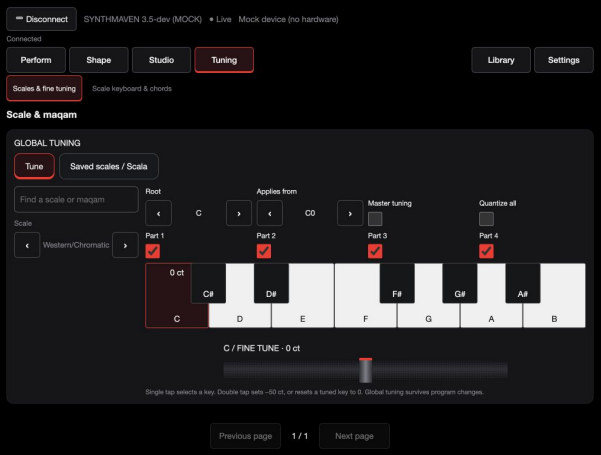



| | |
|---|---|
| **Open** | Tap SEL, or open the Tuning tab. |
| **SEL (tap)** | Master tuning. SELECT or KNOB 1 chooses the scale, KNOB 2 the lower octave boundary, KNOB 3 the root, KNOB 4 turns it on. Arabic scales show as A/ on the panel. |
| **SEL (hold three seconds)** | Custom tuning. KNOB 1 chooses the key, KNOB 2 changes its offset in 10-cent steps, KNOB 3 quantizes all, KNOB 4 applies master tuning to the selected part. |
| **Editors** | Tap a key and use the wheel for 1-cent steps. Hold an untuned key for one second for -50 cents; hold an adjusted key to reset it. |
| **Octave boundary** | Notes below it stay in equal temperament, which keeps bass and chords usable. |
| **Per part** | Each part can bypass master tuning, so a piano layer can stay in equal temperament. |
| **Programs** | Tuning survives program changes unless a program includes its own tuning. |
| **STEP BY STEP** | 1. Tap SEL and choose a scale and root. 2. Choose the octave boundary. 3. Turn on master tuning. 4. Bypass any part that should stay in equal temperament. |

# MainStage-style performance: programs, scenes and setlists

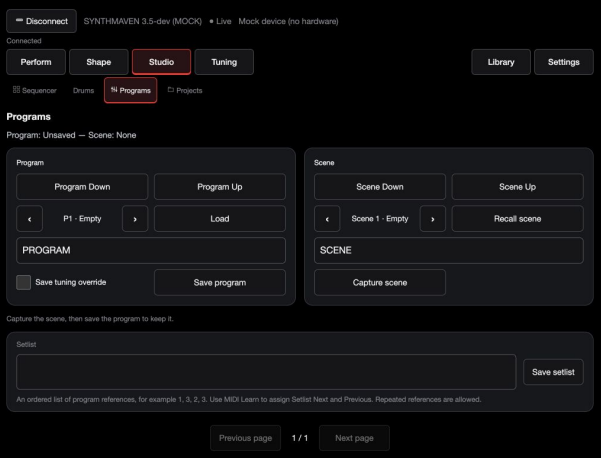



| | |
|---|---|
| **Open** | Studio > Programs. |
| **Program** | Four parts with levels, pans, splits and scenes. P1-P8 are stored on the device. |
| **Scene** | Four per program: snapshots of levels, pans, mutes, effect sends, HYBRID macros and tuning. |
| **Setlist** | An ordered list of up to 32 references to P1-P8. A program can appear more than once. |
| **Pedals and controllers** | MIDI Learn assigns up to 16 actions, including Scene or Setlist Next / Previous. |
| **Panel** | On HOME, hold OCT- or OCT+ for three seconds for the previous or next program. |
| **Editors** | The Perform screen has program and scene navigation, a mixer and quick controls. Tuning has its own tab. |
| **STEP BY STEP** | 1. Build a program for each song and save it. 2. Capture scenes in Programs & scenes, then save the program. 3. Build the setlist. 4. Learn a pedal to Scene Next and Setlist Next. |

# The SM FM1 iPad app

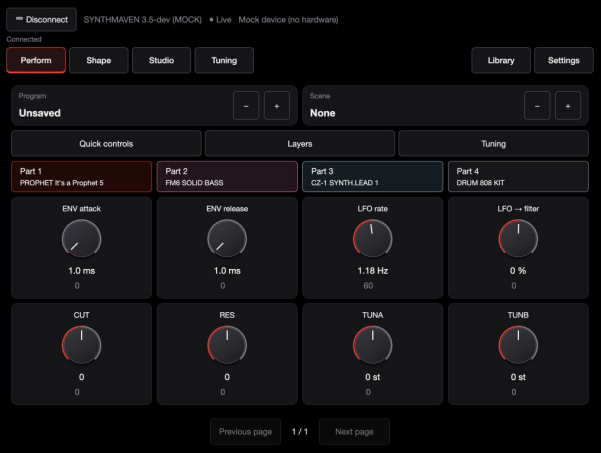


| | |
|---|---|
| **Open** | Open SM FM1 on the iPad. |
| **What it is** | A landscape-only iPad app with the same editor and workspace as the web editor. |
| **Connect** | Set USB ROLE to COMPUTER and USB Audio to IN+OUT, then choose Connect > USB cable. |
| **Workspaces** | Perform for quick sound and layer controls; Tuning for scales and the tuning keyboard; Shape for engines; Studio for the sequencer, drums and programs. |
| **Mock device** | A page marked Mock device is a demonstration and can't play the FM-1. |
| **Version** | The current TestFlight app is 3.5.6 (18). It connects to this firmware, but some wording and the theme colours are older until it is rebuilt. |
| **STEP BY STEP** | 1. Connect the FM-1 with a data cable. 2. Open SM FM1 and run the connection wizard. 3. Choose a part in Perform. |

# Start here: controls and storage

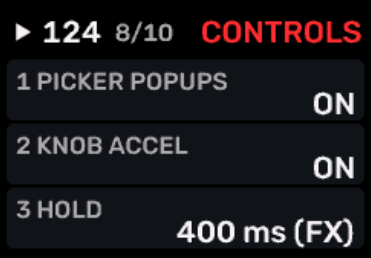


OPEN THIS SCREEN

GLO 8/10 CONTROLS

| | |
|---|---|
| **Sound preset** | One instrument sound. Factory sounds are read-only starting points; USER slots store individual edited sounds. |
| **Program** | Four parts with levels, pan, splits and scenes. P1-P8 are separate from the 384 USER sound slots. |
| **Project** | A-D stores the wider working setup, patterns and arrangement. Save a project after arranging a song. |
| **Editor library** | A named collection on your browser or iPad; it is not automatically a device save. |
| **Master level** | The physical MASTER knob controls listening level. Start low and raise gradually. Four layers share one processing budget; they do not each have a separate eight-voice allocation. |
| **STEP BY STEP** | 1. Connect power and let HOME appear. Choose a program, then play at a comfortable level. 2. Select one part before editing its engine or sound. Save the complete program after mixing. 3. Export a full backup before updating: a firmware flash restores factory settings and programs. |


# Install, back up and recover




OPEN THIS SCREEN

| | |
|---|---|
| **Installer** | Use the SynthMaven installer in a browser supporting Web MIDI/SysEx. Allow MIDI permission and select the FM-1. |
| **Backup** | Use Projects & backup > Save backup. Keep the downloaded archive outside browser storage. |
| **Install** | Select the current firmware and follow the installer prompts. Keep USB power connected throughout writing and verification. |
| **Recovery** | If the normal editor cannot connect, reopen the installer and follow its detected recovery/loader instructions. Use the release recovery package if required; never interrupt a write. |
| **After update** | Allow the device to restart, reconnect the editor and verify its version. Restore a backup only if you want its previous settings/programs. |
| **STEP BY STEP** | 1. Download the guide and release files first. Back up the working device. 2. Run the installer through its final verification and restart. 3. If a restart stalls after writing has completed, power-cycle and reconnect; do not power-cycle while writing. |

# USB computer, iPad and powered-host setup

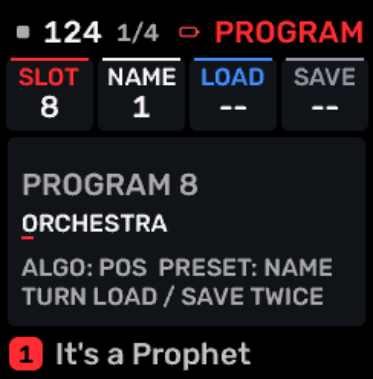


OPEN THIS SCREEN

| | |
|---|---|
| **COMPUTER role** | Use GLO > USB / SAVE > ROLE = COMPUTER for the web editor or iPad. The computer/iPad is the USB host. |
| **HOST role** | Use HOST for a class-compliant USB MIDI keyboard, pad controller or pedal connected to the FM-1. This changes the FM-1 to host role. There is no separate keys-only or pedal-only USB mode. |
| **Power and hub** | The FM-1 cannot power the USB port, so a bus-powered controller needs a powered hub or powered OTG adapter. Connect the hub upstream cable to the FM-1, the controller to a USB-A data port and the charger to the hub power input. Hubs with two internal hub chips are supported. A slow hub can take up to about 3 seconds to be found. |
| **TRS together** | TRS MIDI IN stays active in either role. With GLO > MIDI/CPU > ROUT = PARTS, MIDI channels 1-4 play layers 1-4, so a USB controller and a TRS controller on different channels can play different layers. |
| **Return to editor** | One USB port cannot act as device and host simultaneously. Return to COMPUTER, reconnect the computer/iPad cable and choose the FM-1 MIDI ports. |
| **iPad** | Open SM FM1 in landscape and choose Connect > USB cable. USB Audio defaults to IN+OUT. iPadOS may cache the FM-1 name as SoundMaven; the corrected app also checks its USB identity and selects matching input/output automatically. Bluetooth is excluded. |
| **STEP BY STEP** | 1. Start in COMPUTER and confirm a normal editor connection. 2. Disconnect the editor, choose HOST, connect the powered hub with the controller, wait up to 3 seconds and verify received MIDI. 3. To edit again, return to COMPUTER before reconnecting the iPad or computer. |


# HOME: four-part program




OPEN THIS SCREEN Press HOME.

| | |
|---|---|
| **SELECT** | Choose the focused part, 1-4. While the drums are running it sets the tempo instead. |
| **ALGORITHM** | Cycle engines for that part. |
| **PRESET** | Cycle sounds within the selected engine. |
| **OCT- / OCT+** | A short press transposes the keyboard. On HOME, hold OCT- for three seconds for Program Down; hold OCT+ for Program Up. |
| **EDIT / GLO holds** | Hold EDIT two seconds for the persistent four-volume mixer. Hold GLO two seconds to toggle layering and display Layered ON/OFF. |
| **Cards** | Each part has a card: its role, sound, engine, pattern and steps. The selected card is outlined, and a dimmed card isn't sounding. |
| **Rotary knobs** | The four knobs under the cards show KNOB 1-4 for the selected part. Turn one to edit it. |
| **HOME** | Press HOME again to switch to the independent drum screen. Ordinary page controls are documented on their own pages. |
| **STEP BY STEP** | 1. Choose a program. Focus a part with SELECT. 2. Choose its engine and preset; keep the other three parts as support. 3. Hold EDIT to balance the four volumes, then SAVE the program. |

# Shortcuts and secondary actions

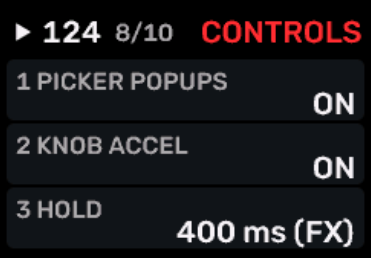


OPEN THIS SCREEN


GLO 8/10 CONTROLS

| | |
|---|---|
| **EDIT: two seconds** | Open the mixer; release the button and continue mixing. |
| **GLO: two seconds** | Toggle layering, with a temporary Layered ON/OFF notification. |
| **ENV: three seconds** | Open the chord screen. Normal short ENV presses open envelopes. |
| **SEL: three seconds** | Open custom microtuning; a short press opens master tuning. |
| **OCT buttons: three seconds** | On HOME only, previous/next program. Short taps retain octave behavior. |
| **SEQ hold** | Open pattern selection; the normal hold threshold is about 0.7 seconds. |
| **HOME hold** | Open system/settings. FX hold is a separate configurable performance overlay; its threshold is set in GLO. |
| **Confirm / cancel** | OCT+ confirms an offered action; OCT- cancels/backs out. PROGRAM uses its own two-turn save/load confirmation. |
| **STEP BY STEP** | 1. Use a short press for the normal family page. 2. For a special screen, hold until it opens, then release. 3. Use HOME to return; navigating alone does not create a named save. |

# SAVE

SynthMaven 4.0

# NAME: entering a sound or project name

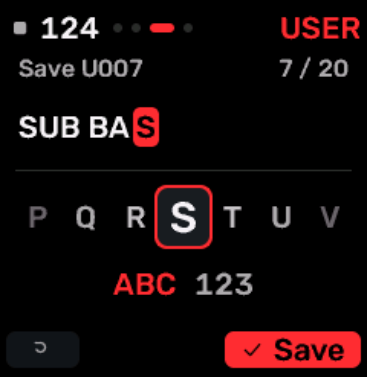



OPEN THIS SCREEN Open a sound/project naming action from SAVE.

| | |
|---|---|
| **KNOB 1 / KNOB 2** | Move the cursor / choose the character. KNOBS 3-4 have no naming assignment. |
| **White keys** | Enter letters with repeated taps, like a phone keypad. Wait briefly to move on; digits are available in number mode. Keys enter text instead of playing notes. |
| **Black keys** | C#: delete. D#: letters/numbers. F#: cursor left. G#: space. A#: cursor right. |
| **OCT+ / OCT-** | Confirm the name / cancel. This naming keyboard is separate from the PROGRAM inline name controls. |
| **STEP BY STEP** | 1. Choose a sound/project Save action and enter the name screen. 2. Enter a short recognizable name; check the destination. 3. Confirm with OCT+, or cancel with OCT-. |

# SEL

SynthMaven 4.0

# SCALE PICKER: categories and favorites

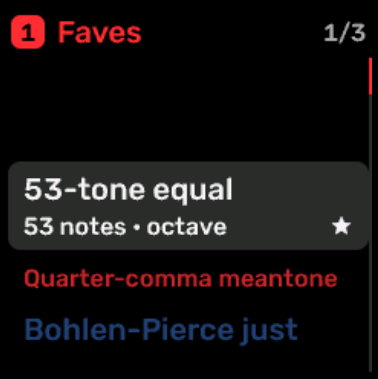


OPEN THIS SCREEN From the scale choice, open the offered list with OCT+.


| | |
|---|---|
| **Scale list** | Browse the available scales; firmware prefixes W/, A/ and T/ keep names short. Editors use the full family names. |
| **Favorites** | A favorite narrows browsing; it does not change the scale intervals or create a new scale. |
| **Confirm / return** | OCT+ selects an offered choice. OCT- returns without accepting the picker choice. |
| **Microtuning** | Use MASTER TUNE for root and first affected octave; CUSTOM TUNE edits individual pitch classes. Lower notes remain equal-tempered below the selected octave. |
| **STEP BY STEP** | 1. Open the scale setting and its picker. 2. Choose a family and scale, then confirm. 3. Play a note above the tuning threshold; fine-tune on CUSTOM TUNE and save a named scale in the editor. |

# GLO

SynthMaven 4.0

# Layering notification

OPEN THIS SCREEN Hold GLO for two seconds.





| | |
|---|---|
| **Layered ON** | Incoming notes can play all four parts within their split ranges. Levels, pan and mute determine the audible balance. |
| **Layered OFF** | Play the selected sound rather than the complete four-part stack. |
| **GLO** | Hold for two seconds to toggle. The notification temporarily replaces the current screen; this is not a separate latched mixer. |
| **EDIT** | Hold for two seconds for the four-volume mixer. KNOBS 1-4 then adjust the corresponding part levels. |
| **STEP BY STEP** | 1. Hold GLO until the message appears. 2. Release and play to compare the two modes. 3. Save the program when the layer balance is ready. |

# FX

SynthMaven 4.0


# FX

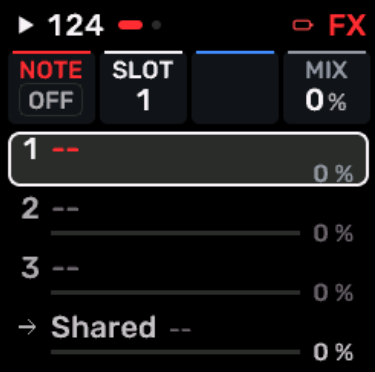


OPEN THIS SCREEN On HOME select the part, then press FX. Use SELECT or repeated family-button taps to find FX.

| | |
|---|---|
| **KNOB 1 - NOTE FX** | Select note processing for the highlighted part-rack row: OFF, NOTE TAIL or NOTE ECHO. Values: OFF / NOTE TAIL / NOTE ECHO. |
| **KNOB 2 - ROW** | Choose one of the three effect rows or the shared/return row. |
| **KNOB 3** | No parameter on the ordinary part effect row. |
| **KNOB 4 - AMOUNT** | Set the selected row mix/send; NOTE TAIL uses release amount. On RETURN, set the shared wet return level. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SHARED

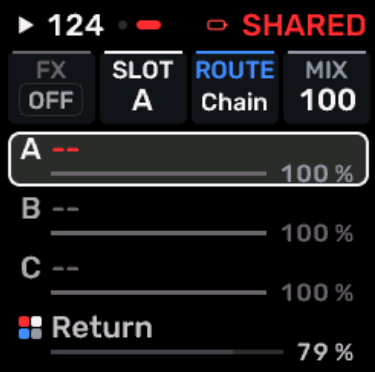


OPEN THIS SCREEN On HOME select the part, then press FX. Use SELECT or repeated family-button taps to find SHARED.

| | |
|---|---|
| **KNOB 1 - FX** | Select the shared audio effect in the highlighted rack row. Values: OFF / PHASER / WIDTH / FORMANT / TAPE / SPIT / ROOM / REVERB / CHORUS / DRIVE / CRUSH / FLANGER / PEDAL PHASER / PEDAL CHORUS. |
| **KNOB 2 - ROW** | Choose one of the three effect rows or the shared/return row. |
| **KNOB 3 - ROUTE** | CHAIN feeds the shared processors in sequence. SPLIT uses the separate part sends to the shared effect slots. Values: CHAIN / SPLIT. |
| **KNOB 4 - AMOUNT** | Set the selected row mix/send; NOTE TAIL uses release amount. On RETURN, set the shared wet return level. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ENV

SynthMaven 4.0


# ENV





OPEN THIS SCREEN On HOME select the part, then press ENV. Use SELECT or repeated family-button taps to find ENV.

| | |
|---|---|
| **KNOB 1 - ATK** | Attack time: how quickly the envelope rises after a note starts. Values: 1.0 to 10.0 s. |
| **KNOB 2 - DEC** | Decay time from the attack peak to the sustain level. Values: 1.0 to 10.0 s. |
| **KNOB 3 - SUS** | Sustain level while the key or gate remains held; this is a level, not a time. Values: 0 to 100 %. |
| **KNOB 4 - REL** | Release time after key-up; longer tails continue to consume voices. Values: 1.0 to 10.0 s. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ENV DEST

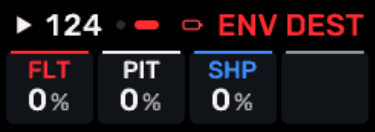


OPEN THIS SCREEN On HOME select the part, then press ENV. Use SELECT or repeated family-button taps to find ENV DEST.




1 INIT SID

| | |
|---|---|
| **KNOB 1 - FLT** | Filter-envelope amount; positive values open the filter with the envelope, negative values invert that movement where supported. Values: -100 to +98 %. |
| **KNOB 2 - PIT** | Pitch or pitch modulation depth. In an envelope/LFO destination page this is an amount, not a tuning reference. Values: -100 to +98 %. |
| **KNOB 3 - SHP** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: -100 to +98 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# LFO

SynthMaven 4.0


# LFO

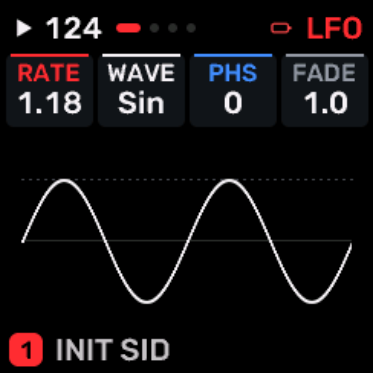


OPEN THIS SCREEN On HOME select the part, then press LFO. Use SELECT or repeated family-button taps to find LFO.

| | |
|---|---|
| **KNOB 1 - RATE** | Speed of the selected oscillator/modulator/effect. The displayed unit identifies Hz or a tempo division. Values: .05 to 40.0 Hz. |
| **KNOB 2 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: SIN / TRI / SAW / SQR / S&H. |
| **KNOB 3 - PHS** | Starting phase of LFO 1. Values: 0 to 127. |
| **KNOB 4 - FADE** | Time for LFO modulation to fade in after a note starts. Values: 1.0 to 10.0 s. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# LFO 2

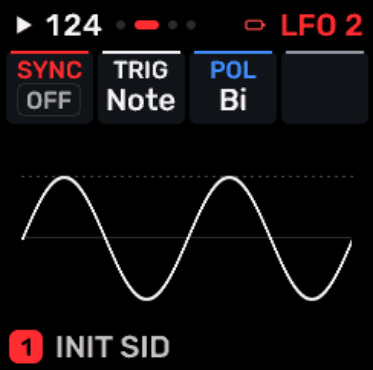



OPEN THIS SCREEN On HOME select the part, then press LFO. Use SELECT or repeated family-button taps to find LFO 2.

| | |
|---|---|
| **KNOB 1 - SYNC** | LFO tempo synchronization. OFF uses free speed; other choices follow the selected clock division. Values: OFF / 4BAR / 2BAR / 1/1 / 1/2 / 1/4 / 1/8 / 8T / 1/16 / 16T / 1/32. |
| **KNOB 2 - TRIG** | NOTE restarts the LFO for each note; FREE keeps it running independently. Values: NOTE / FREE. |
| **KNOB 3 - POL** | BI moves modulation above and below center; UNI moves in one direction from zero. Values: BI / UNI. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# LFO DEST

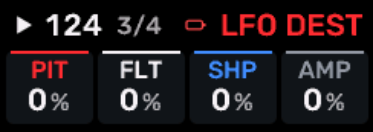



OPEN THIS SCREEN On HOME select the part, then press LFO. Use SELECT or repeated family-button taps to find LFO DEST.



1 INIT SID

| | |
|---|---|
| **KNOB 1 - PIT** | Pitch or pitch modulation depth. In an envelope/LFO destination page this is an amount, not a tuning reference. Values: -100 to +98 %. |
| **KNOB 2 - FLT** | LFO-to-filter depth. Positive and negative values reverse the cutoff movement; zero leaves cutoff unchanged. Values: -100 to +98 %. |
| **KNOB 3 - SHP** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: -100 to +98 %. |
| **KNOB 4 - AMP** | Amplitude modulation depth. Start with a small amount to avoid large level swings. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# MOD

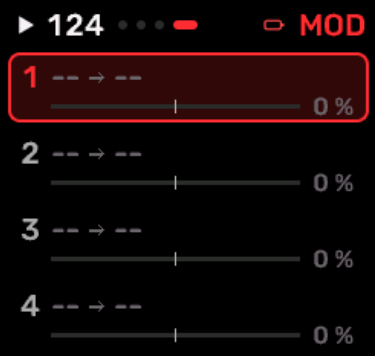


OPEN THIS SCREEN On HOME select the part, then press LFO. Use SELECT or repeated family-button taps to find MOD.

| | |
|---|---|
| **KNOB 1 - SRC1** | Source of the selected modulation route: LFO, envelope, velocity, key tracking, random or a MIDI controller. Values: OFF / LFO / ENV / VEL / KEY / RAND / MODW / AT / EXPR / S&H / SLEW. |
| **KNOB 2 - ROUTE** | Select modulation connection 1-4; the other three knobs edit that connection. |
| **KNOB 3 - DST1** | Destination of the selected matrix route. Engine destinations E1-E8 follow the active instrument controls. Values: 17 named choices; browse the on-screen list.. |
| **KNOB 4 - AMT1** | Depth of the selected modulation route. Negative values reverse the direction; zero disables its influence. Values: -100 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SCL

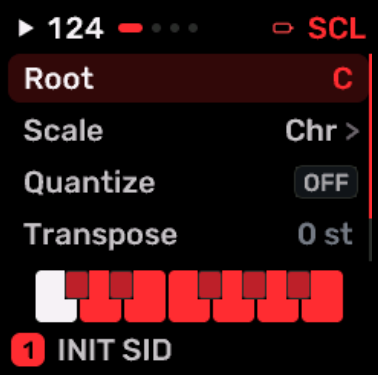


OPEN THIS SCREEN On HOME select the part, then press SEL. Use SELECT or repeated family-button taps to find SCL.

| | |
|---|---|
| **KNOB 1** | Edit the highlighted row. |
| **KNOB 2** | Move the row highlight; the list scrolls to reveal the remaining settings. |
| **KNOBS 3-4** | No direct row editing on this list screen. |
| **ROOT** | Root note of the selected scale. This transposes the scale relationship; it does not transpose every played note. C to B |
| **SCL** | Keyboard scale used by note quantization and scale-aware chords. 70 named choices; browse the on-screen list. |
| **QNT** | OFF leaves note selection chromatic; SNAP moves notes to the chosen scale; WHITE maps white-key playing into that scale. ALL modes apply the setting across all four parts and MIDI input. OFF / SNAP / WHITE / ALL / MPC |
| **DEG** | Scale degree assigned to pad 02 in MPC quantization mode; establishes the pad-bank layout. 1 to 12 |
| **TRN** | Transpose this part by semitones; octave shifts are multiples of 12. -24 to +24 st |
| **BUTTONS AND NAVIGATION** | KNOB 2 selects a row and KNOB 1 changes it. OCT+ opens a choice list when available; OCT- returns to HOME. SELECT/family button moves between screens. PLAY/REC retain transport/recording roles. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# MASTER TUNE

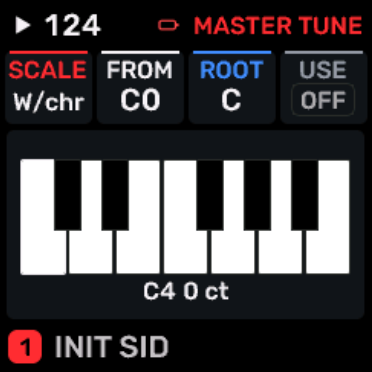


OPEN THIS SCREEN Tap SEL to open MASTER TUNE.

| | |
|---|---|
| **KNOB 1 - SCALE** | Select the master scale. W/, A/ and T/ abbreviate Western, Arabic and Turkish names on the device. Values: 62 named choices; browse the on-screen list.. |
| **KNOB 2 - FROM** | First octave affected by master tuning, C0-C8. Lower notes remain equal-tempered. Values: C0 / C1 / C2 / C3 / C4 / C5 / C6 / C7 / C8. |
| **KNOB 3 - ROOT** | Root note of the selected scale. This transposes the scale relationship; it does not transpose every played note. Values: C to B. |
| **KNOB 4 - USE** | Enable or bypass the global tuning system. Values: OFF to ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# CUSTOM TUNE

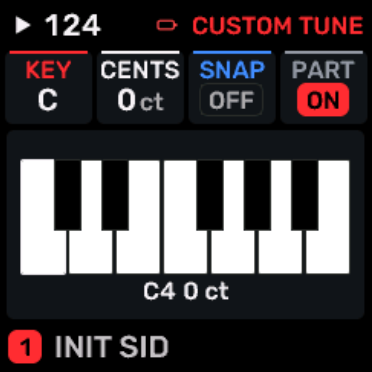


OPEN THIS SCREEN Hold SEL for three seconds, then release.

| | |
|---|---|
| **KNOB 1 - KEY** | Select C through B. Each edit applies to that pitch class within the active tuning range. Values: C to B. |
| **KNOB 2 - CENTS** | Detune the selected chromatic note from -100 to +100 cents in 10-cent device steps. The editors offer 1-cent steps. Values: -100 to 100 ct. |
| **KNOB 3 - SNAP** | Enable master scale quantization for all four parts and MIDI, subject to tuning application settings. Values: OFF to ON. |
| **KNOB 4 - PART** | Apply master tuning to the selected part. ON follows the global scale; OFF bypasses it for this part. Values: OFF to ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CHORD

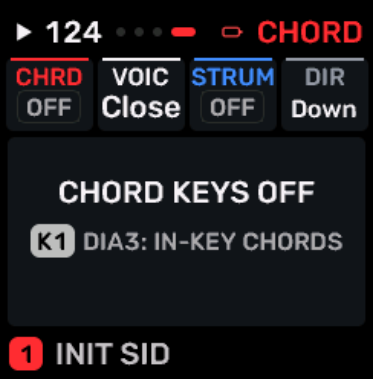



OPEN THIS SCREEN Hold ENV for three seconds, then release.

| | |
|---|---|
| **KNOB 1 - CHRD** | Chord generation mode. OFF plays single notes; DIA3/DIA7 use scale degrees; fixed shapes and AUTO/AUTO2 provide other harmonies. Microtonal compatibility restricts available choices. Values: OFF / DIA3 / DIA7 / MAJ / MIN / DOM7 / MAJ7 / MIN7 / SUS4 / POW / AUTO / AUTO2 / OPEN5 / NEUTRAL. |
| **KNOB 2 - VOIC** | Chord voicing: CLOSE, SMOOTH, OPEN, INV1, INV2 or +OCT. This changes the layout of generated chord notes, not the part polyphony. Values: CLOSE / OPEN / INV1 / INV2 / +OCT. |
| **KNOB 3 - STRUM** | Spread chord notes in time. The upper values select tempo-synchronized direction/rate combinations. Values: OFF / 1/8 / 1/16 / 1/32 / 1/64 / 1/128 / 16T / 32T. |
| **KNOB 4 - STROKE** | Strum direction: DOWN, UP or ALT (alternating). Values: DOWN / UP / ALT. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# EDIT

SynthMaven 4.0

# SID / EDIT 1

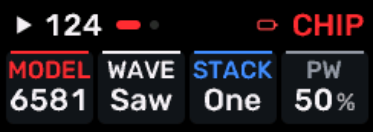


OPEN THIS SCREEN On HOME choose SID, then EDIT. Use its section/page navigation to reach EDIT 1.




1 INIT SID

| | |
|---|---|
| **KNOB 1 - MODEL** | Select SID chip-model character, including its oscillator/filter response. Values: 6581 / 8580 / C64 6581 / C64 8580. |
| **KNOB 2 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: TRI / SAW / PULSE / NOISE / TRI+SAW / TRI+PLS / SAW+PLS / T+S+P. |
| **KNOB 3 - STACK** | SID oscillator/voice stacking configuration; changes the combined waveform character and voice load. Values: ONE / DETUNE / OCT / FIFTH / MAJOR / SYNC / RING / SUB. |
| **KNOB 4 - PW** | Pulse width/duty cycle; changes harmonic balance. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SID / EDIT 2





OPEN THIS SCREEN On HOME choose SID, then EDIT. Use its section/page navigation to reach EDIT 2.



1 INIT SID

| | |
|---|---|
| **KNOB 1 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 0 to 100 %. |
| **KNOB 2 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 15. |
| **KNOB 3 - MODE** | Choose the operating mode for this page: LFO restart, arp direction, delay style, controller protocol or operator frequency mode. Values: LP / BP / HP / NOTCH / LP+BP / BP+HP / ALL / OFF. |
| **KNOB 4 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SID / VOICE

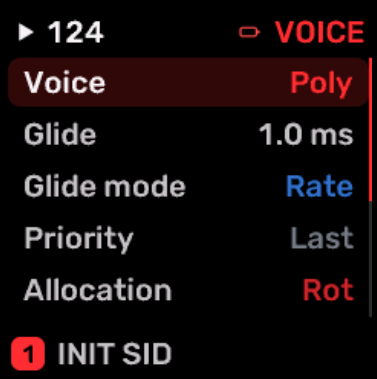


OPEN THIS SCREEN On HOME choose SID, then EDIT. Use its section/page navigation to reach VOICE.

| | |
|---|---|
| **KNOB 1** | Edit the highlighted row. |
| **KNOB 2** | Move the row highlight; the list scrolls to reveal the remaining settings. |
| **KNOBS 3-4** | No direct row editing on this list screen. |
| **VCE** | POLY plays chords; MONO plays one note; LEG is legato mono; UNI stacks voices. All use the shared budget. POLY / MONO / LEG / UNI |
| **GLD** | Glide/portamento time between pitches. 1.0 to 10.0 s |
| **GLMOD** | Choose which note transitions use glide. RATE / TIME |
| **PRIO** | Priority of held notes in a monophonic part. LAST / LOW / HIGH |
| **ALLOC** | Voice allocation/unison setting. Extra voices consume the shared eight-voice budget. ROT / REUSE |
| **DTUNE** | Detuning amount between oscillators/voices or FM operators, according to the selected engine. 0 to 127 |
| **PAN** | Position of the selected part in the stereo field; center is zero. -100 to +98 % |
| **MUTE** | Silence the selected part without deleting its sound. OFF / ON |
| **SPRD** | Stereo spread or oscillator/processor width. Check the result in mono. 0 to 100 % |
| **BUTTONS AND NAVIGATION** | KNOB 2 selects a row and KNOB 1 changes it. OCT+ opens a choice list when available; OCT- returns to HOME. SELECT/family button moves between screens. PLAY/REC retain transport/recording roles. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# TUNE / CLOCK

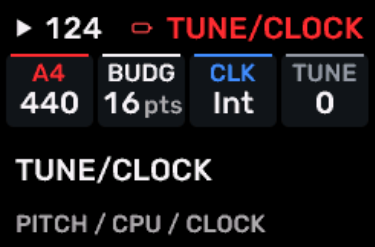



OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find GLOBAL.

GLO 1/10 TUNE/CLOCK

| | |
|---|---|
| **KNOB 1 - A4** | Reference frequency of A4, in Hz. This is separate from the tuning-system octave boundary. Values: 400 to 480 Hz. |
| **KNOB 2 - BUDGET** | Shared synthesis allocation budget (8-32 points). All four parts compete for this total; raising it can increase CPU load and crackling. Values: 8 to 64 pts. |
| **KNOB 3 - CLK** | Clock source: INT uses the FM-1 tempo; USB or TRS follows incoming MIDI clock on that connection. Values: INT / USB / TRS. |
| **KNOB 4 - TUNE** | Global fine pitch offset in cents, added to A4 and scale tuning. Values: -50 to 50. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# SYSTEM

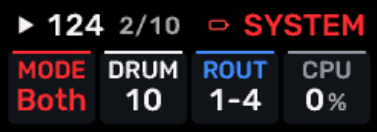


OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find SYSTEM.


SYSTEM

MIDI ROUTING / CPU

GLO 2/10 SYSTEM

| | |
|---|---|
| **KNOB 1 - MIDI MODE** | Where MIDI-only tracks accept notes: USB, TRS or BOTH. Values: USB / TRS / BOTH. |
| **KNOB 2 - DRUM** | MIDI drum-input channel: OFF or 1-16; channel 10 is the General MIDI convention. Values: 17 named choices; browse the on-screen list.. |
| **KNOB 3 - ROUT** | CH1-4/CH5-8/CH9-12/CH13-16 route consecutive MIDI channels to the parts. SEL routes input to the focused part. Values: CH1-4 / SEL / CH5-8 / CH9-12 / CH13-16 / PARTS. |
| **KNOB 4 - CPU** | Live processor-load display; a diagnostic indication, not a volume control. Persistent overload can cause crackling. Values: Action / no continuous value. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# VOICE COST

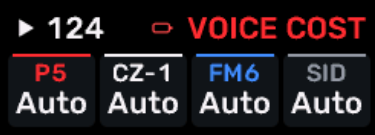


OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find WEIGHTS.

**VOICE COST**

P5 / CZ-1 / FM6 / SID

**GLO 3/10 VOICE COST**

| | |
|---|---|
| **KNOB 1 - P5** | Allocation cost per sounding P5 voice. AUTO uses the built-in cost; a numbered override changes how quickly this engine consumes the shared budget. Values: AUTO / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 / 15. |
| **KNOB 2 - CZ-1** | Allocation cost per sounding CZ-1 voice. AUTO uses the built-in cost; a numbered override changes how quickly this engine consumes the shared budget. Values: AUTO / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 / 15. |
| **KNOB 3 - FM6** | Allocation cost per sounding FM6 voice. AUTO uses the built-in cost; a numbered override changes how quickly this engine consumes the shared budget. Values: AUTO / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 / 15. |
| **KNOB 4 - SID** | Allocation cost per sounding SID voice. AUTO uses the built-in cost; a numbered override changes how quickly this engine consumes the shared budget. Values: AUTO / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 / 15. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# LAYERING




OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find LAYERING.

**LAYERING**

LAYER OR SELECT PART

GLO 4/10 LAYERING

| | |
|---|---|
| **KNOB 1 - LAYER** | Toggle four-part performance. OFF plays the focused part; ON uses enabled parts and their routing. Values: OFF to ON. |
| **KNOB 2** | No assigned parameter on this page. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# CPU GUARD




OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find WEIGHTS 2.

## CPU GUARD

COST / BUDGET / GUARD

GLO 5/10 CPU GUARD

| | |
|---|---|
| **KNOB 1 - DRUM** | Budget points per drum voice: AUTO uses the built-in cost. Values: AUTO / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 13 / 14 / 15. |
| **KNOB 2 - BUDGET** | Shared synthesis allocation budget (8-32 points). All four parts compete for this total; raising it can increase CPU load and crackling. Values: 8 to 64 pts. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4 - GUARD** | Enable overload protection that can cut voices to protect the audio deadline. It is not output loudness compensation. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# DISPLAY




OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find DISPLAY.

GLO 6/10 DISPLAY

| | |
|---|---|
| **KNOB 1 - COLOR** | Choose the theme: SYNTHMAVEN, ORANGE, BABY BLUE or PINK. Changes the appearance of the device, not the sound. Values: SYNTHMAVEN (red), ORANGE, BABY BLUE, PINK. |
| **KNOB 2 - LIGHTS** | Choose the behavior of keyboard/button illumination. This does not change note velocity. Values: OFF / LOW / MID / HIGH / FULL. |
| **KNOB 3 - SCREEN OFF** | Display sleep timeout: NEVER, 5, 15, 30 or 60 minutes. The audio engine continues operating. Values: NEVER / 5 / 15 / 30 / 60 MIN. |
| **KNOB 4 - Unused** | Unused control; turning it has no action on this screen. Values: . |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |


# USB / SAVE




OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find USB / SAVE.

| | |
|---|---|
| **KNOB 1 - USB AUDIO** | IN+OUT, IN, OUT or OFF enables the corresponding USB audio directions. Values: IN+OUT / IN / OUT / OFF. |
| **KNOB 2 - USB INPUT** | Choose stereo master input or four-track audio input routing. Requires COMPUTER USB role. Values: STEREO / 4 TRACKS. |
| **KNOB 3 - USB ROLE** | COMPUTER connects an editor, iPad or computer; PEDAL hosts a class-compliant controller with appropriate powered host hardware. Return to COMPUTER before editing over USB. Values: COMPUTER / HOST. |
| **KNOB 4 - AUTOSAVE** | Keep automatic working-project saves after playback stops and the instrument is idle. Named program saves remain a separate operation. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# CONTROLS

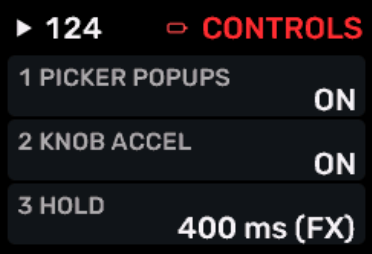


OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find CONTROLS.

## GLO 8/10 CONTROLS

| | |
|---|---|
| **KNOB 1 - PICKER POPUPS** | Enable automatic value pickers while editing enumerated choices. Values: OFF / ON. |
| **KNOB 2 - KNOB ACCEL** | ON makes faster turns cover larger value changes; OFF gives more consistent small adjustments. Values: OFF / ON. |
| **KNOB 3 - HOLD** | Threshold for the inherited FX performance layer only. It does not change the fixed two-second mixer or three-second tuning/chord shortcuts. Values: 300 / 400 / 500 / 600 ms (FX hold only). |
| **KNOB 4 - Unused** | Unused control; turning it has no action on this screen. Values: Unused. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |


# RECORDING




OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find RECORDING.

| | |
|---|---|
| **KNOB 1 - AUDIO CLICK** | Metronome behavior: OFF, during REC only, or ON during playback. Values: OFF / REC / ON. |
| **KNOB 2 - CLICK LEVEL** | Metronome loudness: LOW, MID or HIGH. Values: LOW / MID / HIGH. |
| **KNOB 3 - COUNT-IN** | Recording count-in: OFF, 1 BAR or 2 BARS. Values: OFF / 1 BAR / 2 BARS. |
| **KNOB 4 - NOTE PREVIEW** | Play an audible preview when selecting/editing sequence notes. OFF is useful for silent editing. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |

# DEVICE

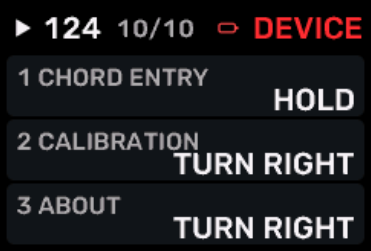



OPEN THIS SCREEN On HOME select the part, then press GLO. Use SELECT or repeated family-button taps to find DEVICE.

GLO 10/10 DEVICE

| | |
|---|---|
| **KNOB 1 - CHORD ENTRY** | HOLD replaces the current entered chord while keys are held; ADD accumulates notes for step entry. Values: HOLD / ADD. |
| **KNOB 2 - CALIBRATION** | Turn right to enter hardware control calibration. Follow the on-screen prompts; do not enter during a performance. Values: Turn right to open. |
| **KNOB 3 - ABOUT** | Turn right to open firmware version, credits and device information. No sound parameter is changed. Values: Turn right to open. |
| **KNOB 4 - Unused** | Unused control; turning it has no action on this screen. Values: Unused. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | These are device/global settings. Master tuning survives program changes unless a saved program explicitly includes a tuning override. Named custom scales can be saved/exported in the editor. |
| **STEP BY STEP** | 1. Open GLO and select this named page. 2. Turn the knob beside the setting to choose the desired value. 3. Leave the menu; settings are remembered. Use COMPUTER USB role before reconnecting the editor. |


# PROGRAM

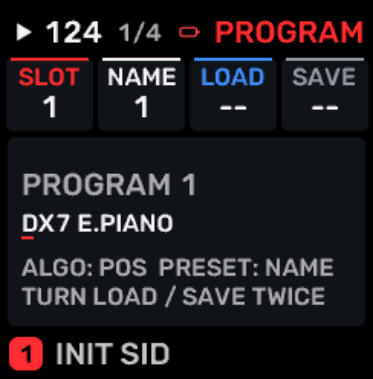


OPEN THIS SCREEN Tap SAVE; PROGRAM is the first page. Stop playback before writing a save.

| | |
|---|---|
| **KNOB 1 - SLOT** | Choose saved program slot P1-P8. Values: 1 to 8. |
| **KNOB 2 - NAME** | Change the character at the current name position. ALGORITHM chooses the position; PRESET also changes the character. Values: 1 to 12. |
| **KNOB 3 - LOAD** | Load the complete four-part program in the selected slot. Turn right twice within 1.5 seconds; turn left to cancel the armed action. Values: -- / GO. |
| **KNOB 4 - SAVE** | Save the complete four-part program in the selected slot. Turn right twice within 1.5 seconds; turn left to cancel the armed action. Values: -- / GO. |
| **BUTTONS AND NAVIGATION** | SELECT (or KNOB 1) chooses P1-P8. ALGORITHM chooses name position; PRESET/KNOB 2 edits the character. KNOB 3 loads and KNOB 4 saves with two right turns. Repeated SAVE opens PRESETS, USER and PROJECT; HOME exits. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PRESETS

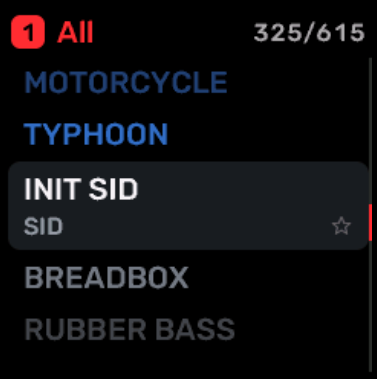


OPEN THIS SCREEN On HOME select the part, then press SAVE. Use SELECT or repeated family-button taps to find PRESETS.

| | |
|---|---|
| **KNOB 1 - LIST** | Choose ALL, favorites, recent sounds or a category. |
| **KNOB 2 - SOUND** | Browse and load the highlighted sound into the focused part. |
| **KNOB 3 - FAV** | Turn right to mark a favorite; left to remove it. |
| **KNOB 4 - ENGINE** | Choose the engine whose presets are listed. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# USER





OPEN THIS SCREEN On HOME select the part, then press SAVE. Use SELECT or repeated family-button taps to find USER.


1 INIT SID

| | |
|---|---|
| **KNOB 1 - SLOT** | Choose one of 384 user sound slots. |
| **KNOB 2 - LOAD** | Turn right to select Load; confirm using OCT+. |
| **KNOB 3 - ERASE** | Turn right to select Erase; confirm only after backing up this sound. |
| **KNOB 4 - SAVE** | Turn right to select Save. Stop playback and confirm using OCT+. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROJECT

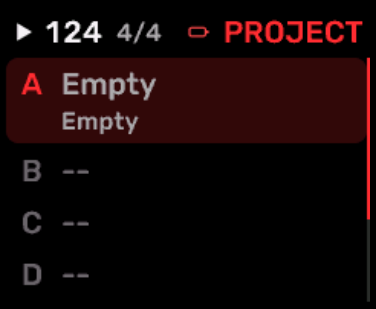


OPEN THIS SCREEN On HOME select the part, then press SAVE. Use SELECT or repeated family-button taps to find PROJECT.





| | |
|---|---|
| **KNOB 1 - SLOT** | Choose project A-D or the template destination. This is separate from the eight PROGRAM slots. Values: 1 to TMPL. |
| **KNOB 2 - BOOT** | Choose the project loaded on startup: OFF or A-D. OFF uses the normal startup/template behavior; this is separate from named program slots. Values: OFF / A / B / C / D. |
| **KNOB 3 - LOAD** | Load the selected project. Turn the action knob right, then confirm with OCT+; OCT- cancels. Stop playback before saving. Values: -- / GO. |
| **KNOB 4 - SAVE** | Save the selected project. Turn the action knob right, then confirm with OCT+; OCT- cancels. Stop playback before saving. Values: -- / GO. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ARP

SynthMaven 4.0

# ARP

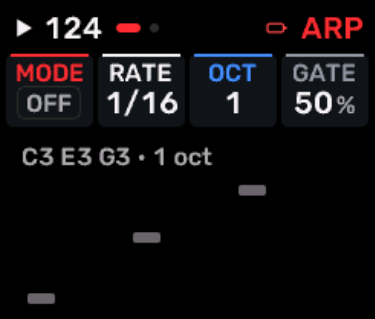


OPEN THIS SCREEN On HOME select the part, then press ARP. Use SELECT or repeated family-button taps to find ARP.

| | |
|---|---|
| **KNOB 1 - MODE** | OFF, ascending, descending, up/down, random, played order or repeat patterns from held notes. Values: OFF / UP / DN / UPDN / RND / ORD / REPEAT. |
| **KNOB 2 - RATE** | Arpeggiator note division relative to tempo. T values are triplets. Values: 1/4 / 1/8 / 1/16 / 1/32 / 8T / 16T / 1/2 / 1/1 / 2BAR / 4BAR. |
| **KNOB 3 - OCT** | Number of octaves traversed by the arpeggiator. Values: 1 to 4. |
| **KNOB 4 - GATE** | Duration of each generated arp/sequence note as a fraction of its step. Values: 1 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ARP 2




OPEN THIS SCREEN On HOME select the part, then press ARP. Use SELECT or repeated family-button taps to find ARP 2.

| | |
|---|---|
| **KNOB 1 - SWG** | Off-beat timing offset. Zero is straight; higher settings delay alternating subdivisions. Values: 0 to 100 %. |
| **KNOB 2 - PROB** | Probability of playing a generated note. Lower settings deliberately omit some notes. Values: 0 to 100 %. |
| **KNOB 3 - HOLD** | Keep the arpeggiated/held notes after key-up. Turn off to release the latched note set. Values: OFF / ON. |
| **KNOB 4 - ORD** | Order in which held notes enter the arpeggiator. Values: NOTE / PLAY. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEQ

SynthMaven 4.0


# NOTES




OPEN THIS SCREEN On HOME select the part, then press SEQ. Use SELECT or repeated family-button taps to find NOTES.

| | |
|---|---|
| **KNOB 1 - NOTE** | Move through steps and notes within a chord. |
| **KNOB 2 - PITCH** | Change the selected note pitch. An empty step can acquire a note. |
| **KNOB 3 - LENGTH** | Change note length; ties can extend across steps. |
| **KNOB 4 - FORCE** | Choose note articulation/velocity strength. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PATTERN

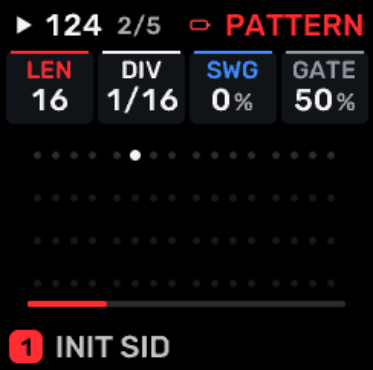



OPEN THIS SCREEN On HOME select the part, then press SEQ. Use SELECT or repeated family-button taps to find PATTERN.

| | |
|---|---|
| **KNOB 1 - LEN** | Length of the current sequence or setlist. Shorter lengths wrap sooner; a setlist length of zero disables the list. Values: 1 to 64 STEP. |
| **KNOB 2 - DIV** | Pattern step division relative to tempo. Values: 1/4 / 1/8 / 1/16 / 1/32 / 8T / 16T / 1/2 / 1/1 / 2BAR / 4BAR. |
| **KNOB 3 - SWG** | Off-beat timing offset. Zero is straight; higher settings delay alternating subdivisions. Values: 0 to 100 %. |
| **KNOB 4 - GATE** | Duration of each generated arp/sequence note as a fraction of its step. Values: 1 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# TEMPO




OPEN THIS SCREEN On HOME select the part, then press SEQ. Use SELECT or repeated family-button taps to find TEMPO.



1 INIT SID

| | |
|---|---|
| **KNOB 1 - BPM** | Internal tempo in beats per minute. Values: 40 to 240 BPM. |
| **KNOB 2 - SWG** | Off-beat timing offset. Zero is straight; higher settings delay alternating subdivisions. Values: 0 to 100 %. |
| **KNOB 3 - QNT** | Recording grid for the next take on all tracks. OFF preserves timing; divisions snap recording to the grid. Does not rewrite an existing take. Values: OFF / 1/4 / 1/8 / 1/16 / 1/32 / 8T / 16T / 1/2 / 1/1 / 2BAR / 4BAR. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# EDIT hold

SynthMaven 4.0


# LAYER MIX




OPEN THIS SCREEN Hold EDIT for two seconds, then release. The mixer stays open until you leave it.

| | |
|---|---|
| **KNOB 1 - VOL1** | Volume of part 1. This is independent of which part SELECT currently focuses. Values: 0 to 100 %. |
| **KNOB 2 - VOL2** | Volume of part 2. This is independent of which part SELECT currently focuses. Values: 0 to 100 %. |
| **KNOB 3 - VOL3** | Volume of part 3. This is independent of which part SELECT currently focuses. Values: 0 to 100 %. |
| **KNOB 4 - VOL4** | Volume of part 4. This is independent of which part SELECT currently focuses. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | SELECT focuses part 1-4. PRESET pans the focused part. ALGORITHM sets its lower split point A1-A6. KNOBS 1-4 always control the four volumes. HOME exits; hold GLO for two seconds to toggle layering. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# PATTERNS

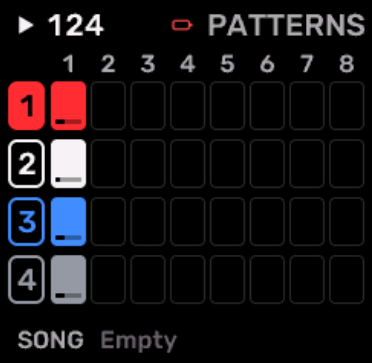


OPEN THIS SCREEN On HOME select the part, then press SEQ. Use SELECT or repeated family-button taps to find PATTERNS.

| | |
|---|---|
| **KNOB 1 - TRACK 1** | Choose the next pattern for track 1; changes may wait for a loop boundary during playback. |
| **KNOB 2 - TRACK 2** | Choose the next pattern for track 2; changes may wait for a loop boundary during playback. |
| **KNOB 3 - TRACK 3** | Choose the next pattern for track 3; changes may wait for a loop boundary during playback. |
| **KNOB 4 - TRACK 4** | Choose the next pattern for track 4; changes may wait for a loop boundary during playback. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SONG

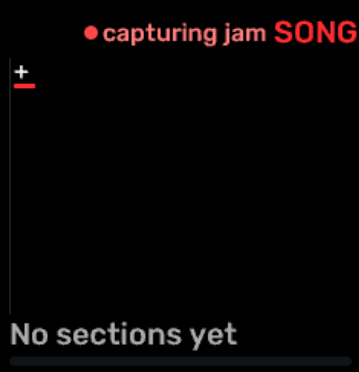



OPEN THIS SCREEN On HOME select the part, then press SEQ. Use SELECT or repeated family-button taps to find SONG.

| | |
|---|---|
| **KNOB 1 - SECTION** | Select an arrangement section. |
| **KNOB 2 - TRACK** | Choose the track being arranged. |
| **KNOB 3 - PATTERN** | Select the pattern assigned to the focused track in this section. |
| **KNOB 4 - REPEATS** | Set section repeats from 1 to 16. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# MOTION

▶ 124 6/6 MOTION


OPEN THIS SCREEN On HOME select the part, then press SEQ. Use SELECT or repeated family-button taps to find MOTION.





1 INIT SID

| | |
|---|---|
| **KNOB 1 - ENABLE** | Enable or disable motion automation. |
| **KNOB 2 - LANE** | Select an existing automation lane. |
| **KNOB 3 - STEP** | Select the step within the lane. |
| **KNOB 4 - VALUE** | Edit its value for the selected step. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / EDIT 1

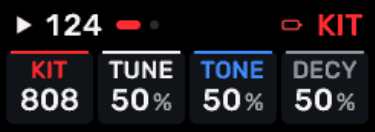



OPEN THIS SCREEN On HOME choose DRUM, then EDIT. Use its section/page navigation to reach EDIT 1.




1 808 KIT

| | |
|---|---|
| **KNOB 1 - KIT** | Drum sample/kit selection. This changes the sound sources for the drum lanes. Values: 808 / 909 / SID. |
| **KNOB 2 - TUNE** | Pitch tuning of the engine oscillator; use the displayed interval to transpose this sound without changing the global scale. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 0 to 100 %. |
| **KNOB 4 - DECY** | Drum-kit decay amount. Shorten it for tighter hits and fewer overlapping tails. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / EDIT 2

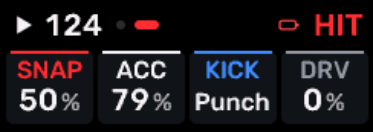



OPEN THIS SCREEN On HOME choose DRUM, then EDIT. Use its section/page navigation to reach EDIT 2.







| | |
|---|---|
| **KNOB 1 - SNAP** | Enable master scale quantization for all four parts and MIDI, subject to tuning application settings. Values: 0 to 100 %. |
| **KNOB 2 - ACC** | Accent sensitivity/amount. Values: 0 to 100 %. |
| **KNOB 3 - KICK** | Level of the kick drum lane; reduce to balance that instrument against the kit. Values: PUNCH / ROUND. |
| **KNOB 4 - DRV** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / DRUM SOUND

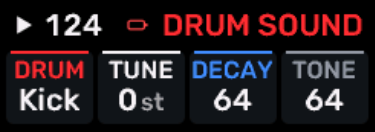



OPEN THIS SCREEN On HOME choose DRUM, then EDIT. Use its section/page navigation to reach DRUM SOUND.




1 808 KIT

| | |
|---|---|
| **KNOB 1 - SOUND** | Choose the drum voice in the current kit. |
| **KNOB 2 - TUNE** | Transpose that kit voice -24 to +24 semitones. |
| **KNOB 3 - DECAY** | Decay offset -64 to +63; changes the tail of this kit voice. |
| **KNOB 4 - TONE** | Tone offset -64 to +63; changes brightness of this kit voice. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / DRUM MIX

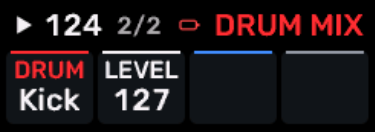


OPEN THIS SCREEN On HOME choose DRUM, then EDIT. Use its section/page navigation to reach DRUM MIX.








| | |
|---|---|
| **KNOB 1 - SOUND** | Choose the kit voice to balance. |
| **KNOB 2 - LEVEL** | Raise/lower this kit voice. This edits the kit, not just one hit. |
| **KNOB 3 - Unused** | No assigned parameter. |
| **KNOB 4 - Unused** | No assigned parameter. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / LANES





OPEN THIS SCREEN On HOME choose DRUM, then EDIT. Use its section/page navigation to reach LANES.







| | |
|---|---|
| **KNOB 1 - KICK** | Level of the kick drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **KNOB 2 - SNARE** | Level of the snare drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **KNOB 3 - CLAP** | Level of the clap drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **KNOB 4 - HATCL** | Level of the hatcl drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / LANES 2

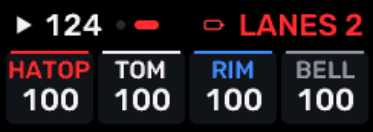


OPEN THIS SCREEN On HOME choose DRUM, then EDIT. Use its section/page navigation to reach LANES 2.



1 808 KIT

| | |
|---|---|
| **KNOB 1 - HATOP** | Level of the hatop drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **KNOB 2 - TOM** | Level of the tom drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **KNOB 3 - RIM** | Level of the rim drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **KNOB 4 - BELL** | Level of the bell drum lane; reduce to balance that instrument against the kit. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DRUM / DRUM HIT




OPEN THIS SCREEN On HOME choose DRUM, then SEQ. Use its section/page navigation to reach DRUM HIT.

| | |
|---|---|
| **KNOB 1 - HIT** | Move through individual recorded hits and steps. |
| **KNOB 2 - SOUND** | Select the drum instrument for this event. |
| **KNOB 3 - TUNE** | Tune only the selected hit by -24 to +24 semitones. |
| **KNOB 4 - LENGTH** | Set the duration/gate of this hit; it does not change the whole kit. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX / NOTE TAIL




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE TAIL for the required slot, then open FX.

| | |
|---|---|
| **KNOB 1 - NOTE FX** | Select note processing for the highlighted part-rack row: OFF, NOTE TAIL or NOTE ECHO. Values: OFF / NOTE TAIL / NOTE ECHO. |
| **KNOB 2 - ROW** | Choose one of the three effect rows or the shared/return row. |
| **KNOB 3** | No parameter on the ordinary part effect row. |
| **KNOB 4 - AMOUNT** | Set the selected row mix/send; NOTE TAIL uses release amount. On RETURN, set the shared wet return level. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX / NOTE ECHO




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open FX.

| | |
|---|---|
| **KNOB 1 - NOTE FX** | Select note processing for the highlighted part-rack row: OFF, NOTE TAIL or NOTE ECHO. Values: OFF / NOTE TAIL / NOTE ECHO. |
| **KNOB 2 - ROW** | Choose one of the three effect rows or the shared/return row. |
| **KNOB 3** | No parameter on the ordinary part effect row. |
| **KNOB 4 - AMOUNT** | Set the selected row mix/send; NOTE TAIL uses release amount. On RETURN, set the shared wet return level. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / PHASER

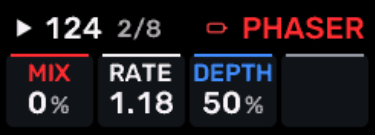



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PHASER for the required slot, then open FX 1.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / WIDTH

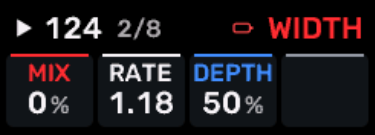



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose WIDTH for the required slot, then open FX 1.

Mono changes the tone

1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of WIDTH. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / FORMANT

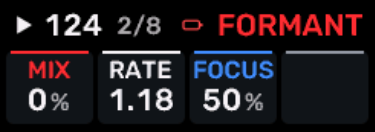



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FORMANT for the required slot, then open FX 1.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FORMANT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - FOCUS** | Character/intensity of FORMANT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / TAPE

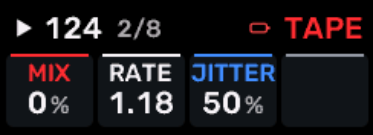



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose TAPE for the required slot, then open FX 1.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of TAPE. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - JITTER** | Character/intensity of TAPE. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / SPIT

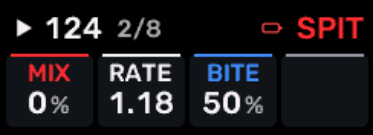



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose SPIT for the required slot, then open FX 1.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of SPIT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - BITE** | Character/intensity of SPIT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / ROOM

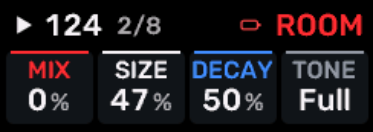



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose ROOM for the required slot, then open FX 1.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / REVERB

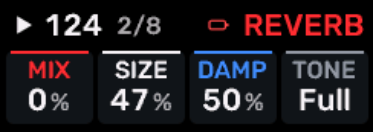



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose REVERB for the required slot, then open FX 1.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DAMP** | High-frequency damping; darker reverberation or faster high-frequency decay as raised. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / CHORUS

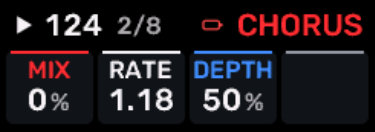


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CHORUS for the required slot, then open FX 1.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 1 / NOTE ECHO




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open FX 1.

| | |
|---|---|
| **KNOB 1 - LEVEL** | Level of the selected part/operator/processor; use the page context to identify which one. A zero part level silences that part. Values: 0 to 100 %. |
| **KNOB 2 - TIME** | Delay time. Listen for pitch changes when changing tape-style delay time. Values: 1/4 / 1/8 / 1/16 / 1/32 / 8T / 16T / 1/2 / 1/1 / 2BAR / 4BAR. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 1 / DRIVE

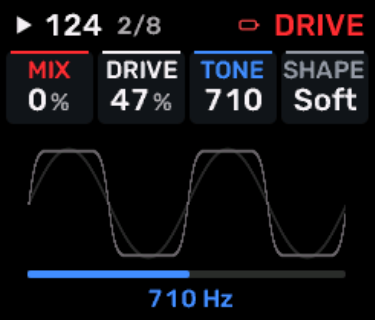


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose DRIVE for the required slot, then open FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 30 to 16.0 kHz. |
| **KNOB 4 - SHAPE** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: SOFT / HARD / FOLD / FUZZ. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / CRUSH

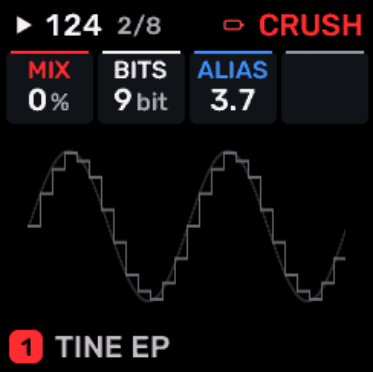


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CRUSH for the required slot, then open FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - BITS** | Bit depth of the crusher. Lower settings add quantization distortion. Values: 16 to 1 bit. |
| **KNOB 3 - ALIAS** | Sample-hold rate of the bitcrusher. Lower effective rates introduce aliasing and a rough digital texture. Values: 44.1 to 689 Hz. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 1 / FLANGER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FLANGER for the required slot, then open FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FLANGER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 1 / PEDAL PHASER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL PHASER for the required slot, then open FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 1 / PEDAL CHORUS

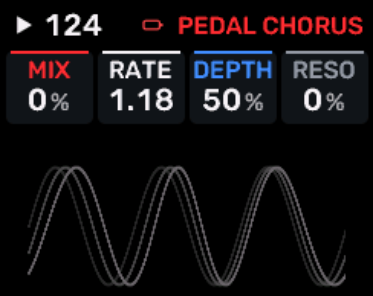


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL CHORUS for the required slot, then open FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / PHASER

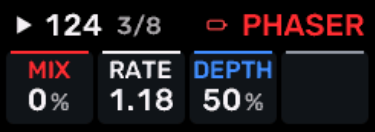



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PHASER for the required slot, then open FX 2.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / WIDTH

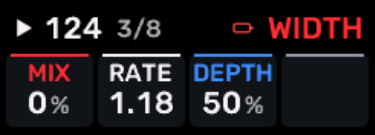



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose WIDTH for the required slot, then open FX 2.

Mono changes the tone

1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of WIDTH. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / FORMANT

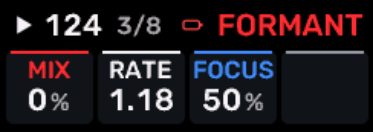



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FORMANT for the required slot, then open FX 2.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FORMANT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - FOCUS** | Character/intensity of FORMANT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / TAPE

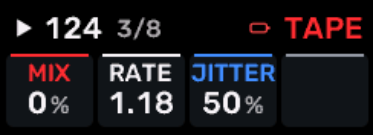



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose TAPE for the required slot, then open FX 2.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of TAPE. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - JITTER** | Character/intensity of TAPE. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / SPIT

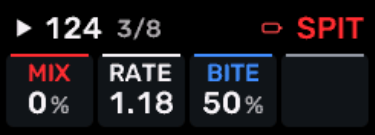



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose SPIT for the required slot, then open FX 2.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of SPIT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - BITE** | Character/intensity of SPIT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / ROOM

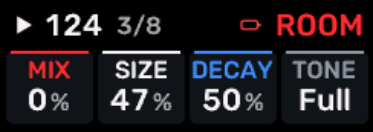



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose ROOM for the required slot, then open FX 2.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / REVERB

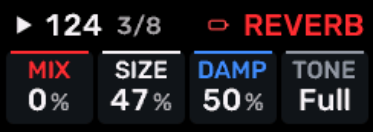



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose REVERB for the required slot, then open FX 2.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DAMP** | High-frequency damping; darker reverberation or faster high-frequency decay as raised. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / CHORUS

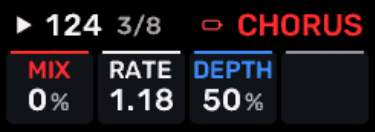


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CHORUS for the required slot, then open FX 2.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 2 / NOTE ECHO




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open FX 2.

| | |
|---|---|
| **KNOB 1 - LEVEL** | Level of the selected part/operator/processor; use the page context to identify which one. A zero part level silences that part. Values: 0 to 100 %. |
| **KNOB 2 - TIME** | Delay time. Listen for pitch changes when changing tape-style delay time. Values: 1/4 / 1/8 / 1/16 / 1/32 / 8T / 16T / 1/2 / 1/1 / 2BAR / 4BAR. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / DRIVE

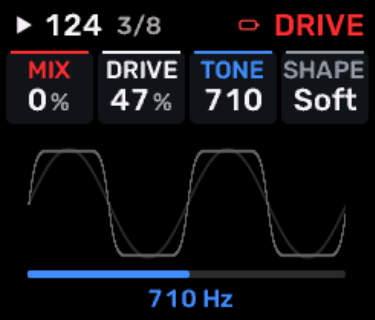


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose DRIVE for the required slot, then open FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 30 to 16.0 kHz. |
| **KNOB 4 - SHAPE** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: SOFT / HARD / FOLD / FUZZ. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / CRUSH




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CRUSH for the required slot, then open FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - BITS** | Bit depth of the crusher. Lower settings add quantization distortion. Values: 16 to 1 bit. |
| **KNOB 3 - ALIAS** | Sample-hold rate of the bitcrusher. Lower effective rates introduce aliasing and a rough digital texture. Values: 44.1 to 689 Hz. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 2 / FLANGER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FLANGER for the required slot, then open FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FLANGER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 2 / PEDAL PHASER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL PHASER for the required slot, then open FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 2 / PEDAL CHORUS

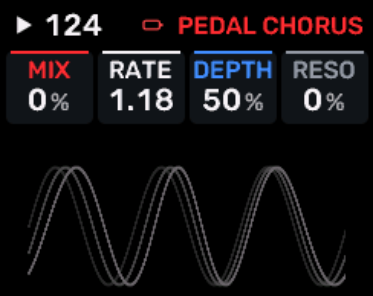


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL CHORUS for the required slot, then open FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / PHASER

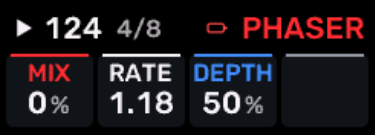



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PHASER for the required slot, then open FX 3.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / WIDTH

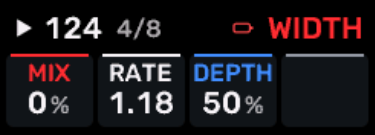



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose WIDTH for the required slot, then open FX 3.

Mono changes the tone

1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of WIDTH. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / FORMANT

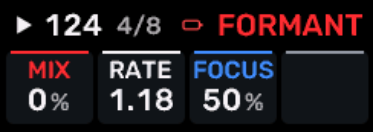



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FORMANT for the required slot, then open FX 3.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FORMANT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - FOCUS** | Character/intensity of FORMANT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / TAPE

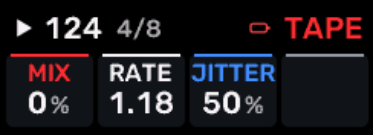



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose TAPE for the required slot, then open FX 3.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of TAPE. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - JITTER** | Character/intensity of TAPE. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / SPIT

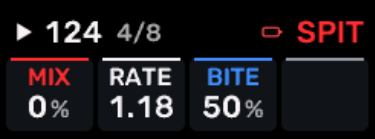



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose SPIT for the required slot, then open FX 3.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of SPIT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - BITE** | Character/intensity of SPIT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / ROOM

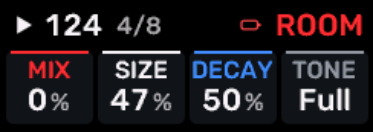



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose ROOM for the required slot, then open FX 3.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / REVERB

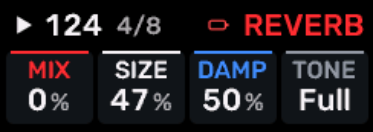



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose REVERB for the required slot, then open FX 3.



## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DAMP** | High-frequency damping; darker reverberation or faster high-frequency decay as raised. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / CHORUS

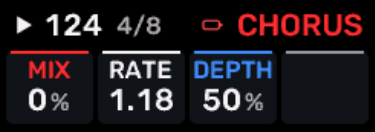


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CHORUS for the required slot, then open FX 3.

## 1 TINE EP

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 3 / NOTE ECHO




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open FX 3.

| | |
|---|---|
| **KNOB 1 - LEVEL** | Level of the selected part/operator/processor; use the page context to identify which one. A zero part level silences that part. Values: 0 to 100 %. |
| **KNOB 2 - TIME** | Delay time. Listen for pitch changes when changing tape-style delay time. Values: 1/4 / 1/8 / 1/16 / 1/32 / 8T / 16T / 1/2 / 1/1 / 2BAR / 4BAR. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 3 / DRIVE

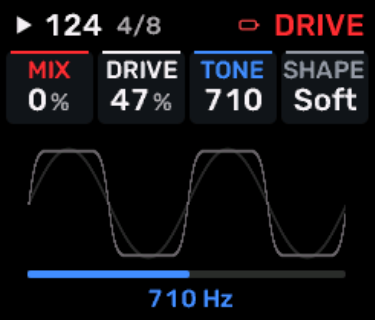


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose DRIVE for the required slot, then open FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 30 to 16.0 kHz. |
| **KNOB 4 - SHAPE** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: SOFT / HARD / FOLD / FUZZ. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / CRUSH

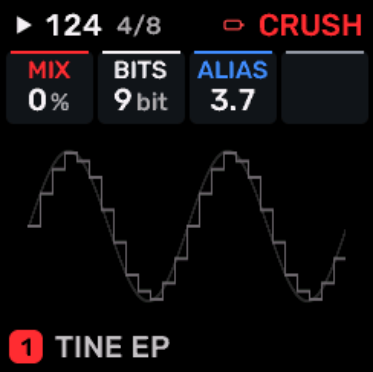


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CRUSH for the required slot, then open FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - BITS** | Bit depth of the crusher. Lower settings add quantization distortion. Values: 16 to 1 bit. |
| **KNOB 3 - ALIAS** | Sample-hold rate of the bitcrusher. Lower effective rates introduce aliasing and a rough digital texture. Values: 44.1 to 689 Hz. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FX 3 / FLANGER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FLANGER for the required slot, then open FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FLANGER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 3 / PEDAL PHASER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL PHASER for the required slot, then open FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FX 3 / PEDAL CHORUS

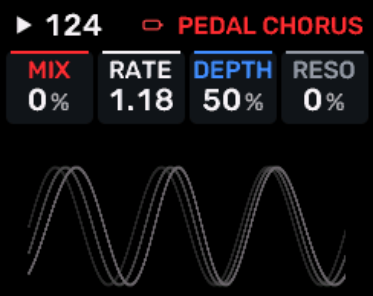



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL CHORUS for the required slot, then open FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / PHASER

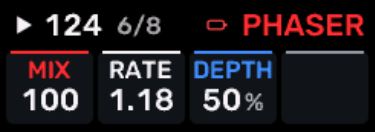



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PHASER for the required slot, then open SEND FX 1.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 1 / WIDTH

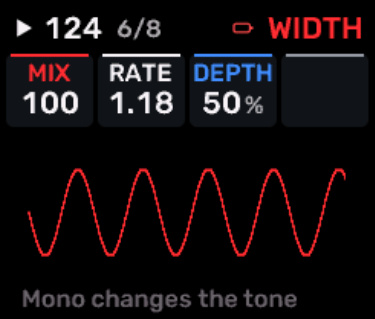


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose WIDTH for the required slot, then open SEND FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of WIDTH. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / FORMANT

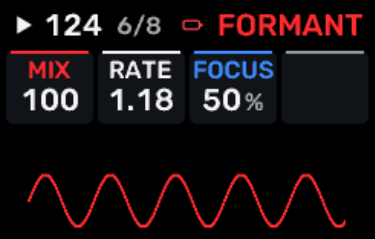



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FORMANT for the required slot, then open SEND FX 1.

All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FORMANT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - FOCUS** | Character/intensity of FORMANT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / TAPE

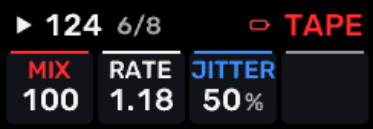



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose TAPE for the required slot, then open SEND FX 1.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of TAPE. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - JITTER** | Character/intensity of TAPE. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / SPIT

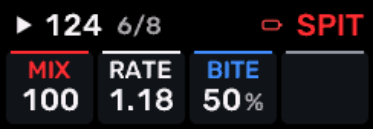



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose SPIT for the required slot, then open SEND FX 1.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of SPIT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - BITE** | Character/intensity of SPIT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / ROOM

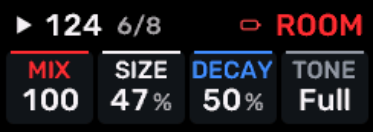



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose ROOM for the required slot, then open SEND FX 1.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / REVERB

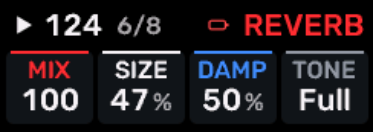



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose REVERB for the required slot, then open SEND FX 1.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DAMP** | High-frequency damping; darker reverberation or faster high-frequency decay as raised. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / CHORUS

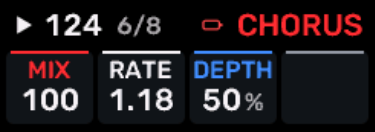



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CHORUS for the required slot, then open SEND FX 1.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / NOTE ECHO

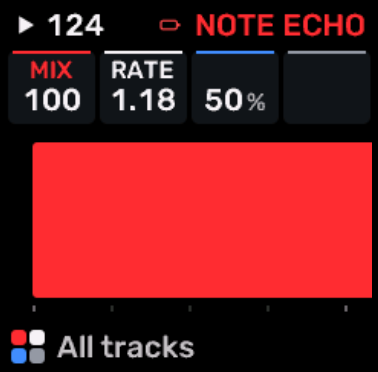


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open SEND FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of NOTE ECHO. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 1 / DRIVE




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose DRIVE for the required slot, then open SEND FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 30 to 16.0 kHz. |
| **KNOB 4 - SHAPE** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: SOFT / HARD / FOLD / FUZZ. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / CRUSH

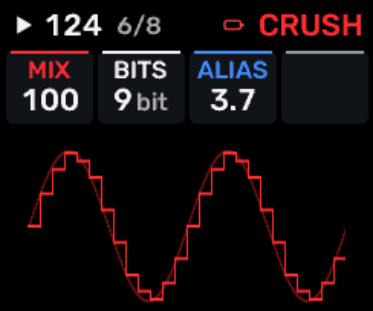


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CRUSH for the required slot, then open SEND FX 1.

All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - BITS** | Bit depth of the crusher. Lower settings add quantization distortion. Values: 16 to 1 bit. |
| **KNOB 3 - ALIAS** | Sample-hold rate of the bitcrusher. Lower effective rates introduce aliasing and a rough digital texture. Values: 44.1 to 689 Hz. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 1 / FLANGER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FLANGER for the required slot, then open SEND FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FLANGER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 1 / PEDAL PHASER

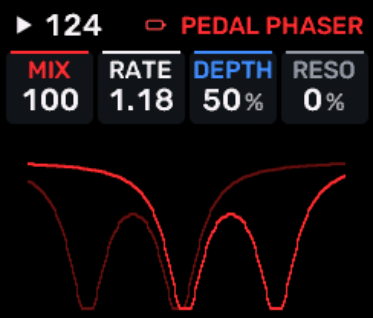


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL PHASER for the required slot, then open SEND FX 1.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 1 / PEDAL CHORUS

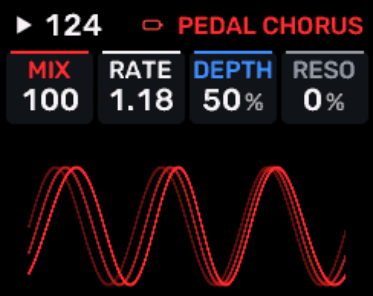



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL CHORUS for the required slot, then open SEND FX 1.


All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / PHASER

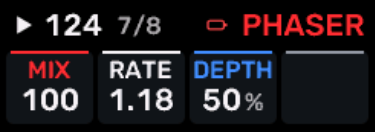



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PHASER for the required slot, then open SEND FX 2.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 2 / WIDTH

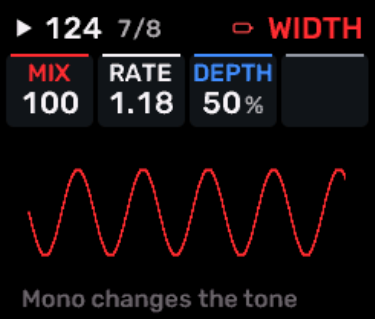


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose WIDTH for the required slot, then open SEND FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of WIDTH. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / FORMANT

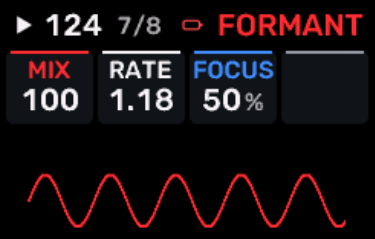



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FORMANT for the required slot, then open SEND FX 2.

All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FORMANT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - FOCUS** | Character/intensity of FORMANT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / TAPE

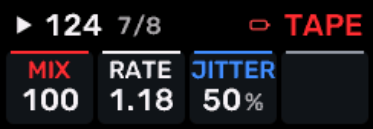



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose TAPE for the required slot, then open SEND FX 2.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of TAPE. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - JITTER** | Character/intensity of TAPE. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / SPIT

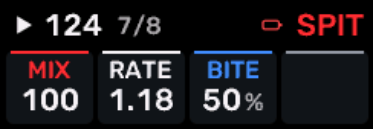



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose SPIT for the required slot, then open SEND FX 2.



## All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of SPIT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - BITE** | Character/intensity of SPIT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / ROOM

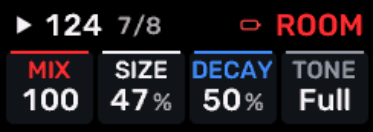



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose ROOM for the required slot, then open SEND FX 2.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / REVERB

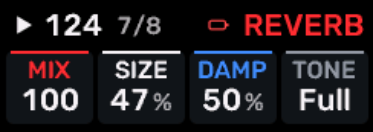



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose REVERB for the required slot, then open SEND FX 2.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DAMP** | High-frequency damping; darker reverberation or faster high-frequency decay as raised. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / CHORUS

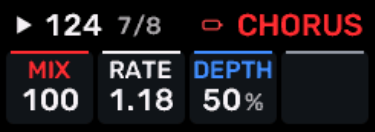



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CHORUS for the required slot, then open SEND FX 2.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / NOTE ECHO

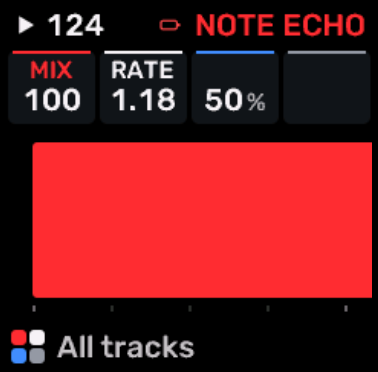


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open SEND FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of NOTE ECHO. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 2 / DRIVE




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose DRIVE for the required slot, then open SEND FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 30 to 16.0 kHz. |
| **KNOB 4 - SHAPE** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: SOFT / HARD / FOLD / FUZZ. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / CRUSH

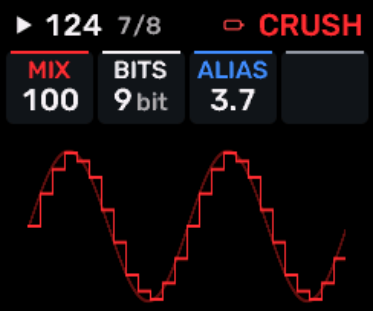


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CRUSH for the required slot, then open SEND FX 2.

All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - BITS** | Bit depth of the crusher. Lower settings add quantization distortion. Values: 16 to 1 bit. |
| **KNOB 3 - ALIAS** | Sample-hold rate of the bitcrusher. Lower effective rates introduce aliasing and a rough digital texture. Values: 44.1 to 689 Hz. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 2 / FLANGER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FLANGER for the required slot, then open SEND FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FLANGER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 2 / PEDAL PHASER

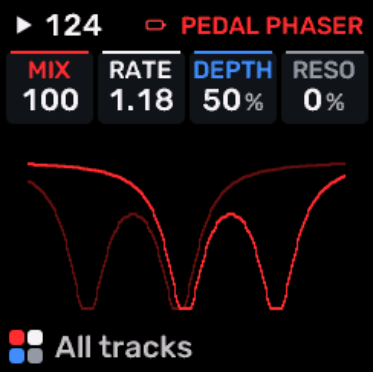


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL PHASER for the required slot, then open SEND FX 2.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 2 / PEDAL CHORUS

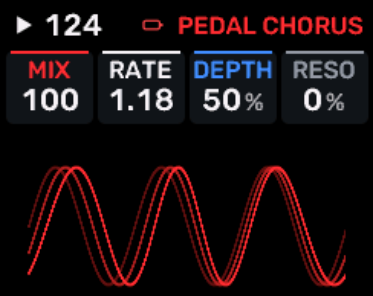



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL CHORUS for the required slot, then open SEND FX 2.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / PHASER

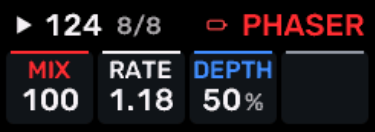



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PHASER for the required slot, then open SEND FX 3.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 3 / WIDTH

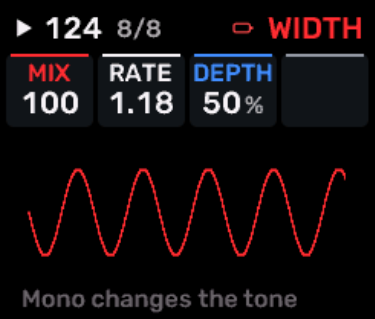


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose WIDTH for the required slot, then open SEND FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of WIDTH. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / FORMANT

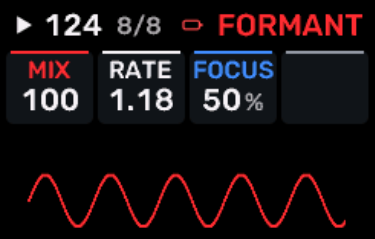



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FORMANT for the required slot, then open SEND FX 3.

All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FORMANT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - FOCUS** | Character/intensity of FORMANT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / TAPE

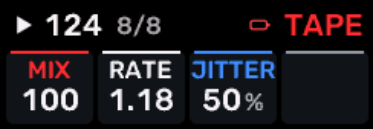



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose TAPE for the required slot, then open SEND FX 3.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of TAPE. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - JITTER** | Character/intensity of TAPE. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / SPIT

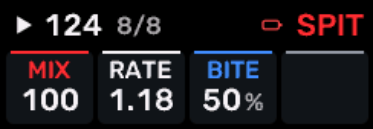



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose SPIT for the required slot, then open SEND FX 3.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of SPIT. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - BITE** | Character/intensity of SPIT. Adjust alongside MIX; the audible effect depends on the selected processor. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / ROOM

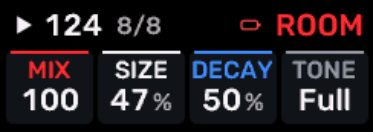



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose ROOM for the required slot, then open SEND FX 3.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DECAY** | Tail/decay length of this effect. Higher values generally keep the effect sounding longer. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / REVERB

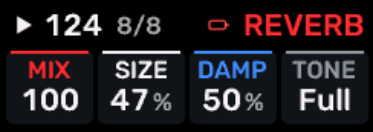



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose REVERB for the required slot, then open SEND FX 3.




All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - SIZE** | Reverb space size/decay character. Values: 0 to 100 %. |
| **KNOB 3 - DAMP** | High-frequency damping; darker reverberation or faster high-frequency decay as raised. Values: 0 to 100 %. |
| **KNOB 4 - TONE** | Tone or spectral balance of this sound/processor. Values: DARK to THIN. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / CHORUS

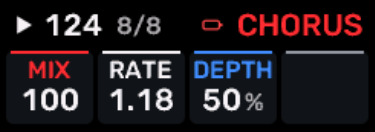



OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CHORUS for the required slot, then open SEND FX 3.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / NOTE ECHO

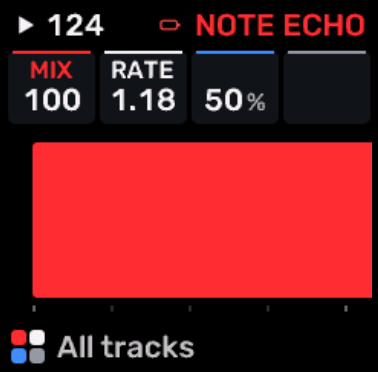


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose NOTE ECHO for the required slot, then open SEND FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of NOTE ECHO. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 3 / DRIVE




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose DRIVE for the required slot, then open SEND FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - DRIVE** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 3 - TONE** | Tone or spectral balance of this sound/processor. Values: 30 to 16.0 kHz. |
| **KNOB 4 - SHAPE** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: SOFT / HARD / FOLD / FUZZ. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / CRUSH

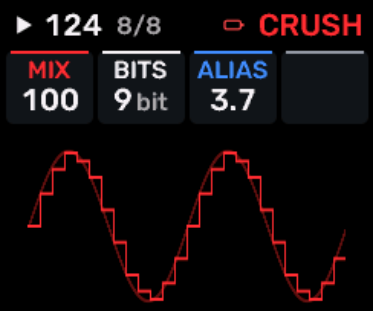


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose CRUSH for the required slot, then open SEND FX 3.

All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - BITS** | Bit depth of the crusher. Lower settings add quantization distortion. Values: 16 to 1 bit. |
| **KNOB 3 - ALIAS** | Sample-hold rate of the bitcrusher. Lower effective rates introduce aliasing and a rough digital texture. Values: 44.1 to 689 Hz. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 3 / FLANGER




OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose FLANGER for the required slot, then open SEND FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of FLANGER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# SEND FX 3 / PEDAL PHASER

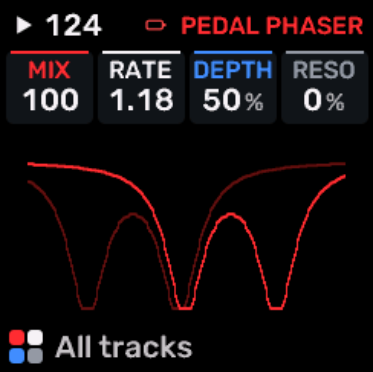


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL PHASER for the required slot, then open SEND FX 3.

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL PHASER. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# SEND FX 3 / PEDAL CHORUS

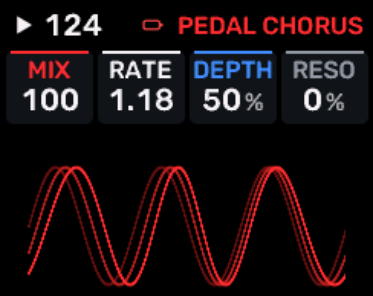


OPEN THIS SCREEN Tap FX, select the part or SHARED rack, choose PEDAL CHORUS for the required slot, then open SEND FX 3.



All tracks

| | |
|---|---|
| **KNOB 1 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 2 - RATE** | Rate/time control of PEDAL CHORUS. Use the displayed units: Hz denotes motion speed; note divisions follow tempo. Values: .05 to 40.0 Hz. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 100 %. |
| **KNOB 4 - RESO** | Resonance/feedback intensity in the selected modulation effect. Values: -98 to +98 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / EDIT 1




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach EDIT 1.

| | |
|---|---|
| **KNOB 1 - ALG** | FM/operator connection algorithm. Each choice changes which oscillators modulate or reach the output. Values: 33 named choices; browse the on-screen list.. |
| **KNOB 2 - FB** | FM feedback amount. Higher values feed operator output back into modulation and add brighter/noisier harmonics. Values: -7 to 7. |
| **KNOB 3 - MLVL** | Modulator level. Values: -100 to +98 %. |
| **KNOB 4 - MRAT** | Modulator frequency ratio. Values: -16 to 16. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / EDIT 2




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach EDIT 2.

| | |
|---|---|
| **KNOB 1 - MEG** | Model-dependent envelope/excitation shaping. Values: -100 to +98 %. |
| **KNOB 2 - VMOD** | Velocity modulation of model timbre/level. Values: -7 to 7. |
| **KNOB 3 - DTUN** | Detuning amount between oscillators/voices or FM operators, according to the selected engine. Values: 0 to 100 %. |
| **KNOB 4 - -** | Unused control position; turning this knob has no assigned sound parameter on this layout. Values: Action / no continuous value. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / STORE




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach STORE.

1 TINE EP

| | |
|---|---|
| **KNOB 1 - SLOT** | Select the destination USER sound slot (1-384). Values: 1 to 384. |
| **KNOB 2 - STORE** | Write the native voice into the chosen USER sound slot after confirmation. Stop playback before saving. Values: 0 to 1. |
| **KNOB 3 - SEND** | Enable supported parameter CC output. Values: 0 to 1. |
| **KNOB 4 - INIT** | Initialize the selected working sound. Save a copy before using it. Values: 0 to 1. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / ALGO




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach ALGO.

| | |
|---|---|
| **KNOB 1 - ALG** | FM/operator connection algorithm. Each choice changes which oscillators modulate or reach the output. Values: 32 named choices; browse the on-screen list.. |
| **KNOB 2 - FB** | FM feedback amount. Higher values feed operator output back into modulation and add brighter/noisier harmonics. Values: 0 to 7. |
| **KNOB 3 - SYNC** | Oscillator key synchronization: restart the FM oscillators at note-on when enabled. Values: OFF / ON. |
| **KNOB 4 - TRNS** | Transpose the native FM voice in semitones. Values: -24 to +24 st. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / FREQ




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach FREQ.

| | |
|---|---|
| **KNOB 1 - CRS** | Coarse frequency of the selected FM operator. Ratio mode follows note pitch; fixed mode uses an absolute frequency range. Values: 1 to 1. |
| **KNOB 2 - FINE** | Fine operator tuning within the selected ratio. Values: 1.00 to 1.00. |
| **KNOB 3 - DTN** | Detuning amount between oscillators/voices or FM operators, according to the selected engine. Values: -7 to +7. |
| **KNOB 4 - MODE** | RATIO follows the played note; FIXED uses absolute-frequency behavior. Values: RATIO / FIXED. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. PRESET selects the FM operator 1-6; edits apply only to that operator. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FM6 / OUT




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach OUT.

| | |
|---|---|
| **KNOB 1 - OUT** | Output level of the selected FM operator. Carrier level changes loudness; modulator level changes harmonic content. Values: 0 to 99. |
| **KNOB 2 - VEL** | Velocity sensitivity of the operator/modulation target. Values: 0 to 7. |
| **KNOB 3 - AMS** | Sensitivity of this operator to amplitude modulation from the native FM LFO. Values: 0 to 3. |
| **KNOB 4 - ON** | Enable this part in layered playback. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. PRESET selects the FM operator 1-6; edits apply only to that operator. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FM6 / EG RATE

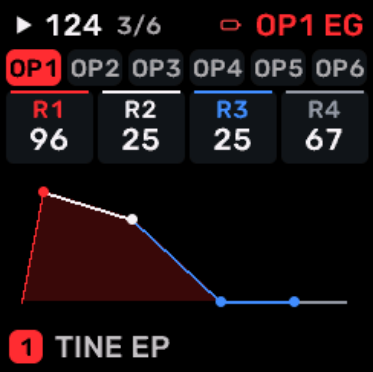


OPEN THIS SCREEN On HOME choose FM6, then ENV. Use its section/page navigation to reach EG RATE.

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward operator amplitude envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward operator amplitude envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward operator amplitude envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward operator amplitude envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. PRESET selects the FM operator 1-6; edits apply only to that operator. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / EG LVL

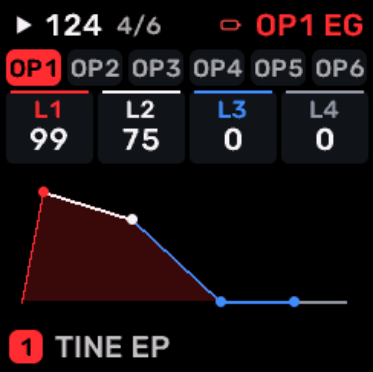


OPEN THIS SCREEN On HOME choose FM6, then ENV. Use its section/page navigation to reach EG LVL.

| | |
|---|---|
| **KNOB 1 - L1** | Target value at operator amplitude envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at operator amplitude envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at operator amplitude envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at operator amplitude envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. PRESET selects the FM operator 1-6; edits apply only to that operator. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / SCALE




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach SCALE.

| | |
|---|---|
| **KNOB 1 - BRK** | Keyboard breakpoint separating the left and right operator-level scaling regions. Values: A0 to C9. |
| **KNOB 2 - LDEP** | Depth of operator-level scaling below the breakpoint. Values: 0 to 99. |
| **KNOB 3 - RDEP** | Depth of operator-level scaling above the breakpoint. Values: 0 to 99. |
| **KNOB 4 - RSCL** | Keyboard rate scaling: changes FM envelope speed with played pitch. Values: 0 to 7. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. PRESET selects the FM operator 1-6; edits apply only to that operator. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FM6 / CURVE




OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach CURVE.

| | |
|---|---|
| **KNOB 1 - LCRV** | Operator-level scaling curve below the breakpoint: linear or exponential, rising or falling. Values: -LIN / -EXP / +EXP / +LIN. |
| **KNOB 2 - RCRV** | Operator-level scaling curve above the breakpoint: linear or exponential, rising or falling. Values: -LIN / -EXP / +EXP / +LIN. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. PRESET selects the FM operator 1-6; edits apply only to that operator. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / PITCH EG

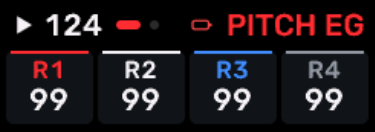



OPEN THIS SCREEN On HOME choose FM6, then ENV. Use its section/page navigation to reach PITCH EG.



1 TINE EP

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward pitch envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward pitch envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward pitch envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward pitch envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / PITCH LV

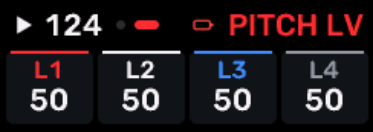


OPEN THIS SCREEN On HOME choose FM6, then ENV. Use its section/page navigation to reach PITCH LV.



1 TINE EP

| | |
|---|---|
| **KNOB 1 - L1** | Target value at pitch envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at pitch envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at pitch envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at pitch envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# FM6 / FM LFO




OPEN THIS SCREEN On HOME choose FM6, then LFO. Use its section/page navigation to reach FM LFO.

| | |
|---|---|
| **KNOB 1** | Edit the highlighted row. |
| **KNOB 2** | Move the row highlight; the list scrolls to reveal the remaining settings. |
| **KNOBS 3-4** | No direct row editing on this list screen. |
| **WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. TRI / SAWDN / SAWUP / SQR / SIN / S&H |
| **SPEED** | Rate of the native FM LFO. 0 to 99 |
| **DELAY** | Delay before the selected modulation begins; it does not move the played note itself. 0 to 99 |
| **KSYNC** | Restart native FM LFO phase on each note when enabled; OFF allows free-running phase. OFF / ON |
| **PMD** | Native FM LFO pitch-modulation depth. 0 to 99 |
| **AMD** | Amplitude-modulation depth of the native FM LFO; produces tremolo on operators with AMS enabled. 0 to 99 |
| **PMS** | Pitch-modulation sensitivity of the native FM voice. 0 to 7 |
| **BUTTONS AND NAVIGATION** | KNOB 2 selects a row and KNOB 1 changes it. OCT+ opens a choice list when available; OCT- returns to HOME. SELECT/family button moves between screens. PLAY/REC retain transport/recording roles. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# FM6 / FM BEND

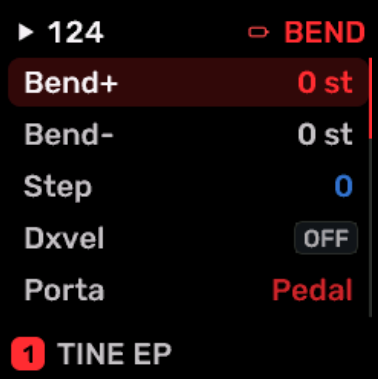


OPEN THIS SCREEN On HOME choose FM6, then EDIT. Use its section/page navigation to reach FM BEND.

| | |
|---|---|
| **KNOB 1** | Edit the highlighted row. |
| **KNOB 2** | Move the row highlight; the list scrolls to reveal the remaining settings. |
| **KNOBS 3-4** | No direct row editing on this list screen. |
| **BEND+** | Maximum upward pitch-bend interval in semitones. 0 to 12 st |
| **BEND-** | Maximum downward pitch-bend interval in semitones. 0 to 12 st |
| **STEP** | Pitch-bend step size; stepped bends move in discrete pitch intervals. 0 to 12 |
| **DXVEL** | DX7-style velocity normalization/response option. Changes how incoming velocity reaches the FM engine. OFF / ON |
| **PORTA** | Select the FM portamento behavior; TIME sets the transition duration. PEDAL / ON |
| **TIME** | Portamento transition time: higher values produce a slower glide between notes. PORTA and GLISS determine its behavior. 0 to 127 |
| **GLISS** | Quantize portamento into discrete semitone steps instead of a continuous slide. OFF / ON |
| **ENGIN** | FM rendering model. This changes the native FM implementation/character rather than selecting a different part. MODRN / MARK I / OPL |
| **WHEEL** | Response range/depth for the wheel MIDI performance controller. 0 to 99 |
| **W.DST** | Destination combination for this controller: pitch, amplitude and/or envelope bias, according to the displayed choice. - / P / A / PA / E / PE / AE / PAE |
| **FOOT** | Response range/depth for the foot MIDI performance controller. 0 to 99 |
| **F.DST** | Destination combination for this controller: pitch, amplitude and/or envelope bias, according to the displayed choice. - / P / A / PA / E / PE / AE / PAE |
| **BRTH** | Breath controller modulation range; B.DST selects its destination. 0 to 99 |
| **B.DST** | Destination combination for this controller: pitch, amplitude and/or envelope bias, according to the displayed choice. - / P / A / PA / E / PE / AE / PAE |
| **AFTER** | Response range/depth for the after MIDI performance controller. 0 to 99 |
| **A.DST** | Destination combination for this controller: pitch, amplitude and/or envelope bias, according to the displayed choice. - / P / A / PA / E / PE / AE / PAE |
| **BUTTONS AND NAVIGATION** | KNOB 2 selects a row and KNOB 1 changes it. OCT+ opens a choice list when available; OCT- returns to HOME. SELECT/family button moves between screens. PLAY/REC retain transport/recording roles. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ TOOLS





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ TOOLS.

| | |
|---|---|
| **KNOB 1 - NAME** | Edit the selected saved-program name. ALGORITHM chooses a character position; PRESET/KNOB 2 changes its character. Values: Action / no continuous value. |
| **KNOB 2 - 1 > 2** | Copy the first CZ synthesis line into the second line. This replaces line 2 settings. Values: Action / no continuous value. |
| **KNOB 3 - 2 > 1** | Copy the second CZ synthesis line into the first line. This replaces line 1 settings. Values: Action / no continuous value. |
| **KNOB 4 - COMP** | Compare the edited CZ tone against its original; use this to judge your edits. Values: Action / no continuous value. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ LINE





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ LINE.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - LINE** | Select CZ line combination: one line, both lines, or their supported mixed/modulated configuration. Values: LINE1 / LINE2 / 1+2 / 1+1. |
| **KNOB 2 - MOD** | Choose no line modulation, ring modulation or noise modulation between the CZ synthesis lines. Values: OFF / RING / NOISE. |
| **KNOB 3 - OCT** | CZ base-octave setting. Values: 0 to 2. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ DETUNE

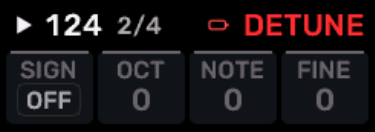



OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ DETUNE.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SIGN** | Direction of CZ detuning: positive or negative. Values: OFF to ON. |
| **KNOB 2 - OCT** | Octave component of line detuning; combine with NOTE, FINE and SIGN. Values: 0 to 3. |
| **KNOB 3 - NOTE** | Semitone detune component for the CZ line combination. Values: 0 to 11. |
| **KNOB 4 - FINE** | Fine operator tuning within the selected ratio. Values: 0 to 60. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ VIBRATO

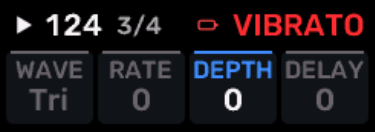


OPEN THIS SCREEN On HOME choose CZ-1, then LFO. Use its section/page navigation to reach CZ VIBRATO.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: TRI / SAW UP / SAW DN / SQR. |
| **KNOB 2 - RATE** | Speed of the selected oscillator/modulator/effect. The displayed unit identifies Hz or a tempo division. Values: 0 to 99. |
| **KNOB 3 - DEPTH** | Modulation/chorus depth. Values: 0 to 99. |
| **KNOB 4 - DELAY** | Delay before the selected modulation begins; it does not move the played note itself. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ WINDOW




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ WINDOW.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - LINE1** | CZ line 1 waveform-envelope window setting. Values: OFF / SAW DN / TRIANGLE / TRAPEZ / HALF SAW / 2 SAW UP / 2 SAW 6 / 2 SAW 7. |
| **KNOB 2 - LINE2** | CZ line 2 waveform-envelope window setting. Values: OFF / SAW DN / TRIANGLE / TRAPEZ / HALF SAW / 2 SAW UP / 2 SAW 6 / 2 SAW 7. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ1 WAVE




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ1 WAVE.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: SAW / SQUARE / PULSE / NULL / DBL SINE / SAW-PULS / MULTISIN / PULSE2. |
| **KNOB 2 - WAVE2** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: OFF / SAW / SQUARE / PULSE / NULL / DBL SINE / SAW-PULS / MULTISIN / PULSE2. |
| **KNOB 3 - W.KEY** | Keyboard scaling of the waveform envelope: changes its response across the keyboard. Values: 0 to 9. |
| **KNOB 4 - A.KEY** | Keyboard scaling of the amplitude envelope: changes envelope response across the keyboard. Values: 0 to 9. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ1 TOUCH





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ1 TOUCH.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - LEVEL** | Level of the selected part/operator/processor; use the page context to identify which one. A zero part level silences that part. Values: 1 to 15. |
| **KNOB 2 - V.PIT** | Velocity sensitivity of the CZ pitch envelope. Values: 0 to 15. |
| **KNOB 3 - V.WAV** | Velocity sensitivity of the CZ waveform envelope. Values: 0 to 15. |
| **KNOB 4 - V.AMP** | Velocity sensitivity of the CZ amplitude envelope. Values: 0 to 15. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 PIT R1-4

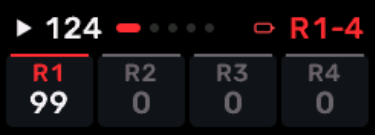


OPEN THIS SCREEN On HOME choose CZ-1, then ENV. Use its section/page navigation to reach C1 PIT R1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward pitch envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward pitch envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward pitch envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward pitch envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 PIT R5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 PIT R5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R5** | Speed toward pitch envelope stage 5. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R6** | Speed toward pitch envelope stage 6. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R7** | Speed toward pitch envelope stage 7. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R8** | Speed toward pitch envelope stage 8. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 PIT L1-4




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 PIT L1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L1** | Target value at pitch envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at pitch envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at pitch envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at pitch envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 PIT L5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 PIT L5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L5** | Target value at pitch envelope stage 5. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L6** | Target value at pitch envelope stage 6. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L7** | Target value at pitch envelope stage 7. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L8** | Target value at pitch envelope stage 8. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 PIT POINT





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 PIT POINT.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SUS** | Choose the envelope stage held while the key remains down; "-" disables the sustain point. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / -. |
| **KNOB 2 - END** | Final segment of the CZ envelope. Segments after END are not played. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 WAV R1-4

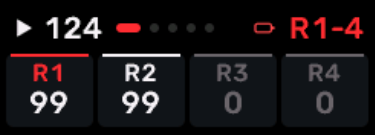


OPEN THIS SCREEN On HOME choose CZ-1, then ENV. Use its section/page navigation to reach C1 WAV R1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward waveform brightness envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward waveform brightness envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward waveform brightness envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward waveform brightness envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 WAV R5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 WAV R5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R5** | Speed toward waveform brightness envelope stage 5. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R6** | Speed toward waveform brightness envelope stage 6. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R7** | Speed toward waveform brightness envelope stage 7. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R8** | Speed toward waveform brightness envelope stage 8. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 WAV L1-4




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 WAV L1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L1** | Target value at waveform brightness envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at waveform brightness envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at waveform brightness envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at waveform brightness envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 WAV L5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 WAV L5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L5** | Target value at waveform brightness envelope stage 5. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L6** | Target value at waveform brightness envelope stage 6. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L7** | Target value at waveform brightness envelope stage 7. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L8** | Target value at waveform brightness envelope stage 8. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 WAV POINT





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 WAV POINT.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SUS** | Choose the envelope stage held while the key remains down; "-" disables the sustain point. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / -. |
| **KNOB 2 - END** | Final segment of the CZ envelope. Segments after END are not played. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 AMP R1-4

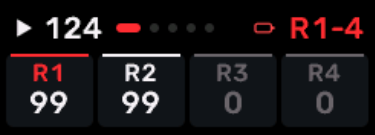


OPEN THIS SCREEN On HOME choose CZ-1, then ENV. Use its section/page navigation to reach C1 AMP R1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward amplitude envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward amplitude envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward amplitude envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward amplitude envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 AMP R5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 AMP R5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R5** | Speed toward amplitude envelope stage 5. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R6** | Speed toward amplitude envelope stage 6. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R7** | Speed toward amplitude envelope stage 7. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R8** | Speed toward amplitude envelope stage 8. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 AMP L1-4




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 AMP L1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L1** | Target value at amplitude envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at amplitude envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at amplitude envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at amplitude envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 AMP L5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 AMP L5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L5** | Target value at amplitude envelope stage 5. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L6** | Target value at amplitude envelope stage 6. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L7** | Target value at amplitude envelope stage 7. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L8** | Target value at amplitude envelope stage 8. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C1 AMP POINT




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C1 AMP POINT.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SUS** | Choose the envelope stage held while the key remains down; "-" disables the sustain point. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / -. |
| **KNOB 2 - END** | Final segment of the CZ envelope. Segments after END are not played. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ2 WAVE




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ2 WAVE.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: SAW / SQUARE / PULSE / NULL / DBL SINE / SAW-PULS / MULTISIN / PULSE2. |
| **KNOB 2 - WAVE2** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: OFF / SAW / SQUARE / PULSE / NULL / DBL SINE / SAW-PULS / MULTISIN / PULSE2. |
| **KNOB 3 - W.KEY** | Keyboard scaling of the waveform envelope: changes its response across the keyboard. Values: 0 to 9. |
| **KNOB 4 - A.KEY** | Keyboard scaling of the amplitude envelope: changes envelope response across the keyboard. Values: 0 to 9. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / CZ2 TOUCH





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach CZ2 TOUCH.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - LEVEL** | Level of the selected part/operator/processor; use the page context to identify which one. A zero part level silences that part. Values: 1 to 15. |
| **KNOB 2 - V.PIT** | Velocity sensitivity of the CZ pitch envelope. Values: 0 to 15. |
| **KNOB 3 - V.WAV** | Velocity sensitivity of the CZ waveform envelope. Values: 0 to 15. |
| **KNOB 4 - V.AMP** | Velocity sensitivity of the CZ amplitude envelope. Values: 0 to 15. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 PIT R1-4

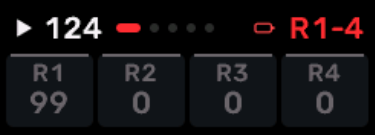


OPEN THIS SCREEN On HOME choose CZ-1, then ENV. Use its section/page navigation to reach C2 PIT R1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward pitch envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward pitch envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward pitch envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward pitch envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 PIT R5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 PIT R5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R5** | Speed toward pitch envelope stage 5. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R6** | Speed toward pitch envelope stage 6. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R7** | Speed toward pitch envelope stage 7. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R8** | Speed toward pitch envelope stage 8. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 PIT L1-4




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 PIT L1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L1** | Target value at pitch envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at pitch envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at pitch envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at pitch envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 PIT L5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 PIT L5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L5** | Target value at pitch envelope stage 5. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L6** | Target value at pitch envelope stage 6. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L7** | Target value at pitch envelope stage 7. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L8** | Target value at pitch envelope stage 8. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 PIT POINT





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 PIT POINT.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SUS** | Choose the envelope stage held while the key remains down; "-" disables the sustain point. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / -. |
| **KNOB 2 - END** | Final segment of the CZ envelope. Segments after END are not played. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 WAV R1-4

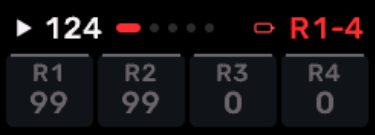


OPEN THIS SCREEN On HOME choose CZ-1, then ENV. Use its section/page navigation to reach C2 WAV R1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward waveform brightness envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward waveform brightness envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward waveform brightness envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward waveform brightness envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 WAV R5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 WAV R5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R5** | Speed toward waveform brightness envelope stage 5. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R6** | Speed toward waveform brightness envelope stage 6. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R7** | Speed toward waveform brightness envelope stage 7. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R8** | Speed toward waveform brightness envelope stage 8. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 WAV L1-4




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 WAV L1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L1** | Target value at waveform brightness envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at waveform brightness envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at waveform brightness envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at waveform brightness envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 WAV L5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 WAV L5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L5** | Target value at waveform brightness envelope stage 5. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L6** | Target value at waveform brightness envelope stage 6. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L7** | Target value at waveform brightness envelope stage 7. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L8** | Target value at waveform brightness envelope stage 8. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 WAV POINT





OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 WAV POINT.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SUS** | Choose the envelope stage held while the key remains down; "-" disables the sustain point. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / -. |
| **KNOB 2 - END** | Final segment of the CZ envelope. Segments after END are not played. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 AMP R1-4

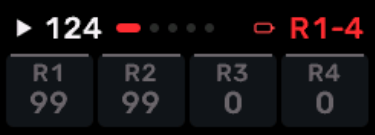


OPEN THIS SCREEN On HOME choose CZ-1, then ENV. Use its section/page navigation to reach C2 AMP R1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R1** | Speed toward amplitude envelope stage 1. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R2** | Speed toward amplitude envelope stage 2. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R3** | Speed toward amplitude envelope stage 3. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R4** | Speed toward amplitude envelope stage 4. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 AMP R5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 AMP R5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - R5** | Speed toward amplitude envelope stage 5. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 2 - R6** | Speed toward amplitude envelope stage 6. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 3 - R7** | Speed toward amplitude envelope stage 7. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **KNOB 4 - R8** | Speed toward amplitude envelope stage 8. Higher rates move faster; this is not a time in milliseconds. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 AMP L1-4




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 AMP L1-4.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L1** | Target value at amplitude envelope stage 1. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L2** | Target value at amplitude envelope stage 2. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L3** | Target value at amplitude envelope stage 3. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L4** | Target value at amplitude envelope stage 4. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 AMP L5-8




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 AMP L5-8.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - L5** | Target value at amplitude envelope stage 5. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 2 - L6** | Target value at amplitude envelope stage 6. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 3 - L7** | Target value at amplitude envelope stage 7. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **KNOB 4 - L8** | Target value at amplitude envelope stage 8. Levels define the envelope shape; rate settings determine how quickly it moves between them. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# CZ-1 / C2 AMP POINT




OPEN THIS SCREEN On HOME choose CZ-1, then EDIT. Use its section/page navigation to reach C2 AMP POINT.




## 1 INIT TONE

| | |
|---|---|
| **KNOB 1 - SUS** | Choose the envelope stage held while the key remains down; "-" disables the sustain point. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / -. |
| **KNOB 2 - END** | Final segment of the CZ envelope. Segments after END are not played. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / EDIT 1




OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach EDIT 1.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: -63 to 63. |
| **KNOB 2 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: -63 to 63. |
| **KNOB 3 - TUNA** | Performance tuning offset for oscillator A. Values: -24 to +24 st. |
| **KNOB 4 - TUNB** | Performance tuning offset for oscillator B. Values: -24 to +24 st. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / EDIT 2




OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach EDIT 2.



1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - PWA** | Pulse width of the named oscillator; changes its harmonic balance. On a routing page, enables modulation of that pulse width. Values: -63 to 63. |
| **KNOB 2 - PWB** | Pulse width of the named oscillator; changes its harmonic balance. On a routing page, enables modulation of that pulse width. Values: -63 to 63. |
| **KNOB 3 - MIXA** | Performance offset to oscillator A level; the native patch mixer remains the underlying setting. Values: -63 to 63. |
| **KNOB 4 - MIXB** | Performance offset to oscillator B level; the native patch mixer remains the underlying setting. Values: -63 to 63. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 STORE





OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 STORE.


1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - SLOT** | Select the destination USER sound slot (1-384). Values: 1 to 384. |
| **KNOB 2 - STORE** | Write the native voice into the chosen USER sound slot after confirmation. Stop playback before saving. Values: 0 to 1. |
| **KNOB 3 - SEND** | Enable supported parameter CC output. Values: 0 to 1. |
| **KNOB 4 - INIT** | Initialize the selected working sound. Save a copy before using it. Values: 0 to 1. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 OSC A

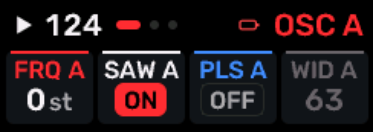



OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 OSC A.



## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - FREQ A** | Oscillator A pitch. In a modulation-routing page this is an on/off destination switch instead. Values: -12 to +36 st. |
| **KNOB 2 - SAW A** | Enable the saw a waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 3 - PULSE A** | Enable the pulse a waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 4 - WIDTH A** | Pulse width of the named oscillator; changes its harmonic balance. On a routing page, enables modulation of that pulse width. Values: 0 to 127. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 OSC B

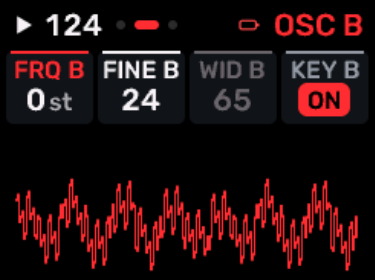



OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 OSC B.




## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - FREQ B** | Oscillator B pitch. In a modulation-routing page this is an on/off destination switch instead. Values: -12 to +36 st. |
| **KNOB 2 - FINE B** | Fine detuning of oscillator B relative to oscillator A. Values: 0 to 127. |
| **KNOB 3 - WIDTH B** | Pulse width of the named oscillator; changes its harmonic balance. On a routing page, enables modulation of that pulse width. Values: 0 to 127. |
| **KNOB 4 - KEY B** | Make oscillator B follow played keyboard pitch. OFF allows B to remain an independent modulation source. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 B WAVES

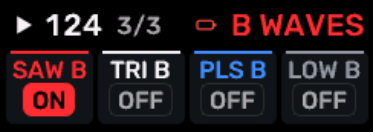


OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 B WAVES.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - SAW B** | Enable the saw b waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 2 - TRI B** | Enable the tri b waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 3 - PULSE B** | Enable the pulse b waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 4 - LOW B** | Switch oscillator B into its low-frequency range for modulation. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 MIXER





OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 MIXER.



## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - OSC A** | Oscillator A level in the synthesis mixer. Values: 0 to 127. |
| **KNOB 2 - OSC B** | Oscillator B level in the mixer, or its modulation-source amount on POLYMOD. Values: 0 to 127. |
| **KNOB 3 - NOISE** | Noise oscillator/texture level. Values: 0 to 127. |
| **KNOB 4 - SYNC** | Hard-sync oscillator A to B; tuning changes then alter the harmonic shape. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# PROPHET / P5 FILTER

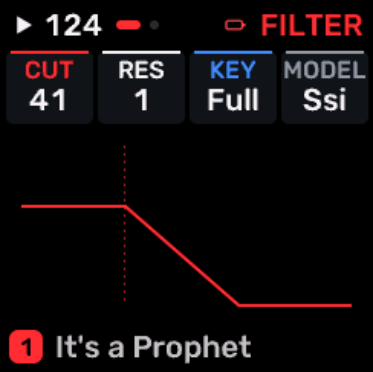



OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 FILTER.

| | |
|---|---|
| **KNOB 1 - CUTOFF** | Filter cutoff. Lower settings remove more high-frequency content; resonance emphasizes the cutoff region. Values: 0 to 127. |
| **KNOB 2 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 127. |
| **KNOB 3 - KEY** | Choose a chromatic key for tuning, or keyboard-tracking mode on a filter page, as identified above. Values: OFF / HALF / FULL. |
| **KNOB 4 - MODEL** | Select the filter model exposed by this engine. The capability map determines which controls actually operate. Values: SSI / CURTIS. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 FLT ENV

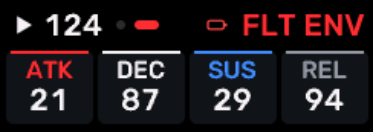



OPEN THIS SCREEN On HOME choose PROPHET, then ENV. Use its section/page navigation to reach P5 FLT ENV.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - ATK** | Attack time: how quickly the envelope rises after a note starts. Values: 0 to 127. |
| **KNOB 2 - DEC** | Decay time from the attack peak to the sustain level. Values: 0 to 127. |
| **KNOB 3 - SUS** | Sustain level while the key or gate remains held; this is a level, not a time. Values: 0 to 127. |
| **KNOB 4 - REL** | Release time after key-up; longer tails continue to consume voices. Values: 0 to 127. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 AMP ENV

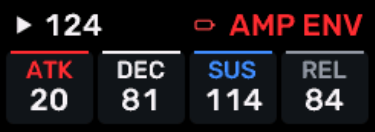


OPEN THIS SCREEN On HOME choose PROPHET, then ENV. Use its section/page navigation to reach P5 AMP ENV.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - ATK** | Attack time: how quickly the envelope rises after a note starts. Values: 0 to 127. |
| **KNOB 2 - DEC** | Decay time from the attack peak to the sustain level. Values: 0 to 127. |
| **KNOB 3 - SUS** | Sustain level while the key or gate remains held; this is a level, not a time. Values: 0 to 127. |
| **KNOB 4 - REL** | Release time after key-up; longer tails continue to consume voices. Values: 0 to 127. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 ENV MOD




OPEN THIS SCREEN On HOME choose PROPHET, then ENV. Use its section/page navigation to reach P5 ENV MOD.




## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - ENV AMT** | Amount of envelope modulation applied to the destination named by this page. Values: 0 to 127. |
| **KNOB 2 - VEL FLT** | Enable note velocity modulation of the Prophet filter envelope. Values: OFF / ON. |
| **KNOB 3 - VEL AMP** | Enable note velocity modulation of the Prophet amplifier envelope. Values: OFF / ON. |
| **KNOB 4 - RELEASE** | Enable the Prophet release stages after key-up. When OFF, release controls do not produce the expected tails. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 POLYMOD




OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 POLYMOD.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - ENV AMT** | Filter-envelope contribution to Poly-Mod destinations. Values: 0 to 127. |
| **KNOB 2 - OSC B** | Oscillator B contribution to Poly-Mod destinations; audio-rate settings create complex harmonics. Values: 0 to 127. |
| **KNOB 3 - FREQ A** | Enable this modulation source for freq a. OFF leaves that destination unaffected. Values: OFF / ON. |
| **KNOB 4 - PW A** | Enable this modulation source for pw a. OFF leaves that destination unaffected. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 MOD FLT




OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 MOD FLT.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - FILTER** | Enable the modulation source on filter cutoff. Values: OFF / ON. |
| **KNOB 2 - VINTAGE** | Analog-style variation between voices. Adds instability/character rather than a fixed tuning shift. Values: 0 to 127. |
| **KNOB 3 - AT FLT** | Enable channel-pressure control of filter cutoff. Press harder on an aftertouch-capable controller to brighten the sound. Values: OFF / ON. |
| **KNOB 4 - AT LFO** | Enable channel-pressure control of native LFO depth. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 LFO




OPEN THIS SCREEN On HOME choose PROPHET, then LFO. Use its section/page navigation to reach P5 LFO.




## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - RATE** | Speed of the selected oscillator/modulator/effect. The displayed unit identifies Hz or a tempo division. Values: 0 to 127. |
| **KNOB 2 - SAW** | Enable the saw waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 3 - TRI** | Enable the tri waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **KNOB 4 - SQUARE** | Enable the square waveform. Multiple enabled waveforms are combined. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 WHEEL




OPEN THIS SCREEN On HOME choose PROPHET, then LFO. Use its section/page navigation to reach P5 WHEEL.




## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - INITIAL** | Native LFO depth before any modulation-wheel input. Values: 0 to 127. |
| **KNOB 2 - N MIX** | Mix noise into wheel modulation. Low settings favor the native LFO; high settings favor noise. Values: 0 to 127. |
| **KNOB 3 - FREQ A** | Enable this modulation source for freq a. OFF leaves that destination unaffected. Values: OFF / ON. |
| **KNOB 4 - FREQ B** | Enable this modulation source for freq b. OFF leaves that destination unaffected. Values: OFF / ON. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 WHEEL 2




OPEN THIS SCREEN On HOME choose PROPHET, then LFO. Use its section/page navigation to reach P5 WHEEL 2.




## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - PW A** | Enable this modulation source for pw a. OFF leaves that destination unaffected. Values: OFF / ON. |
| **KNOB 2 - PW B** | Enable this modulation source for pw b. OFF leaves that destination unaffected. Values: OFF / ON. |
| **KNOB 3 - FILTER** | Enable this modulation source for filter. OFF leaves that destination unaffected. Values: OFF / ON. |
| **KNOB 4 - GLIDE** | Pitch-slide time between notes; most noticeable in mono/legato playing. Values: 0 to 127. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 UNISON




OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 UNISON.




## 1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - UNISON** | Stack voices on the same note. This uses additional points from the shared voice budget. Values: OFF / ON. |
| **KNOB 2 - VOICES** | Native Prophet unison voice count; actual allocation is still limited by the shared budget. Values: 1 to 5. |
| **KNOB 3 - DETUNE** | Pitch spread between voices or oscillators. Small values add width; large values sound deliberately out of tune. Values: 0 to 7. |
| **KNOB 4 - PRIORITY** | Native unison/retrigger note-priority behavior. Determines which held key drives the voice. Values: LOW / LOW RET / LAST / LAST RET. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# PROPHET / P5 BEND




OPEN THIS SCREEN On HOME choose PROPHET, then EDIT. Use its section/page navigation to reach P5 BEND.




1 It's a Prophet

| | |
|---|---|
| **KNOB 1 - BEND** | Pitch-bend range in semitones; AUTO follows supported configuration messages. Values: 1 to 12. |
| **KNOB 2** | No assigned parameter on this page. |
| **KNOB 3** | No assigned parameter on this page. |
| **KNOB 4** | No assigned parameter on this page. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# MIDI Track / EDIT 1





OPEN THIS SCREEN On HOME choose MIDI Track, then EDIT. Use its section/page navigation to reach EDIT 1.




## 1 MIDI Track

| | |
|---|---|
| **KNOB 1 - CH** | MIDI output channel for the MIDI-only track. This track controls external instruments rather than generating audio. Values: 1 to 16. |
| **KNOB 2 - TRS** | Enable MIDI output on the TRS connection for this MIDI-only track. Values: OFF / ON. |
| **KNOB 3 - -** | Unused control position; turning this knob has no assigned sound parameter on this layout. Values: Action / no continuous value. |
| **KNOB 4 - -** | Unused control position; turning this knob has no assigned sound parameter on this layout. Values: Action / no continuous value. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# HYBRID / EDIT 1

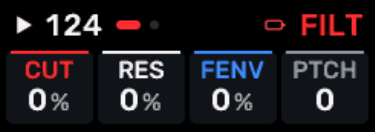



OPEN THIS SCREEN On HOME choose HYBRID, then EDIT. Use its section/page navigation to reach EDIT 1.




## 1 SYNTHMAVEN

| | |
|---|---|
| **KNOB 1 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: -100 to +98 %. |
| **KNOB 2 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: -100 to +98 %. |
| **KNOB 3 - FENV** | Filter-envelope amount; positive values open the filter with the envelope, negative values invert that movement where supported. Values: -100 to +98 %. |
| **KNOB 4 - PTCH** | Select an internal engine patch/model. Values: 0 to 99. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# HYBRID / EDIT 2

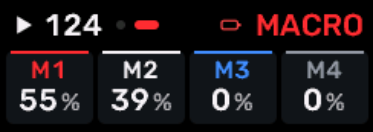


OPEN THIS SCREEN On HOME choose HYBRID, then EDIT. Use its section/page navigation to reach EDIT 2.




## 1 SYNTHMAVEN


| | |
|---|---|
| **KNOB 1 - M1** | One of four macro controls. HYBRID uses patch-defined macro assignments; other engines provide brightness, timbre, motion and space behavior. Values: 0 to 100 %. |
| **KNOB 2 - M2** | One of four macro controls. HYBRID uses patch-defined macro assignments; other engines provide brightness, timbre, motion and space behavior. Values: 0 to 100 %. |
| **KNOB 3 - M3** | One of four macro controls. HYBRID uses patch-defined macro assignments; other engines provide brightness, timbre, motion and space behavior. Values: 0 to 100 %. |
| **KNOB 4 - M4** | One of four macro controls. HYBRID uses patch-defined macro assignments; other engines provide brightness, timbre, motion and space behavior. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ANALOG / EDIT 1





OPEN THIS SCREEN On HOME choose ANALOG, then EDIT. Use its section/page navigation to reach EDIT 1.






| | |
|---|---|
| **KNOB 1 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: SAW / SQR / TRI / SIN / PWM. |
| **KNOB 2 - DTN** | Detuning amount between oscillators/voices or FM operators, according to the selected engine. Values: 0 to 127 ct. |
| **KNOB 3 - MIX** | Dry/wet balance or shared effect output level, as identified by the page. Values: 0 to 100 %. |
| **KNOB 4 - NOIS** | Noise oscillator/texture level. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ANALOG / EDIT 2

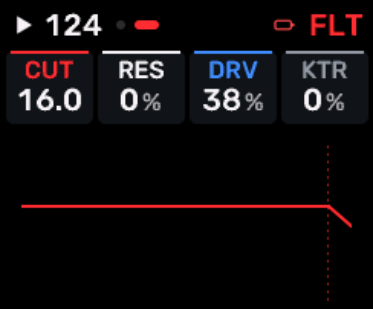



OPEN THIS SCREEN On HOME choose ANALOG, then EDIT. Use its section/page navigation to reach EDIT 2.


1 808 BOOM

| | |
|---|---|
| **KNOB 1 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 30 to 16.0 kHz. |
| **KNOB 2 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 100 %. |
| **KNOB 3 - DRV** | Drive into a saturation/filter stage. More drive can add harmonics and change level. Values: 0 to 100 %. |
| **KNOB 4 - KTR** | Keyboard tracking: changes the filter/model response with played pitch. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DIGITAL / EDIT 1

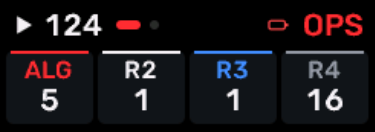



OPEN THIS SCREEN On HOME choose DIGITAL, then EDIT. Use its section/page navigation to reach EDIT 1.




1 RHODES

| | |
|---|---|
| **KNOB 1 - ALG** | FM/operator connection algorithm. Each choice changes which oscillators modulate or reach the output. Values: 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8. |
| **KNOB 2 - R2** | Additional oscillator/operator frequency ratio. Values: .5 / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 14 / 16. |
| **KNOB 3 - R3** | Additional oscillator/operator frequency ratio. Values: .5 / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 14 / 16. |
| **KNOB 4 - R4** | Additional oscillator/operator frequency ratio. Values: .5 / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / 11 / 12 / 14 / 16. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# DIGITAL / EDIT 2

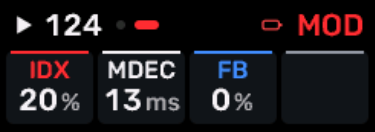


OPEN THIS SCREEN On HOME choose DIGITAL, then EDIT. Use its section/page navigation to reach EDIT 2.




## 1 RHODES

| | |
|---|---|
| **KNOB 1 - IDX** | FM/phase modulation index; higher values generally add sidebands. Values: 0 to 100 %. |
| **KNOB 2 - MDEC** | Modulator decay time. Values: 1.0 to 10.0 s. |
| **KNOB 3 - FB** | FM feedback amount. Higher values feed operator output back into modulation and add brighter/noisier harmonics. Values: 0 to 100 %. |
| **KNOB 4 - -** | Unused control position; turning this knob has no assigned sound parameter on this layout. Values: Action / no continuous value. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# VOICE / EDIT 1





OPEN THIS SCREEN On HOME choose VOICE, then EDIT. Use its section/page navigation to reach EDIT 1.




## 1 CHOIR AAH

| | |
|---|---|
| **KNOB 1 - VOWL** | Formant/vowel position; moving it changes the vocal resonance. Values: 0 to 127. |
| **KNOB 2 - VOWL2** | Formant/vowel position; moving it changes the vocal resonance. Values: 0 to 127. |
| **KNOB 3 - TALK** | Movement/amount of vocal formant articulation. Values: 1.0 to 10.0 s. |
| **KNOB 4 - SHIFT** | Shift the vocal formants without changing the played musical note. Values: -12 to +12 st. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# VOICE / EDIT 2

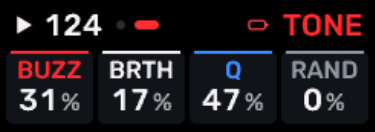



OPEN THIS SCREEN On HOME choose VOICE, then EDIT. Use its section/page navigation to reach EDIT 2.




## 1 CHOIR AAH

| | |
|---|---|
| **KNOB 1 - BUZZ** | Buzz/higher-partial content. Values: 0 to 100 %. |
| **KNOB 2 - BRTH** | Breathy noise contribution. Values: 0 to 100 %. |
| **KNOB 3 - Q** | Resonance/sharpness of the vocal formant filters. Values: 0 to 100 %. |
| **KNOB 4 - RAND** | Randomization depth/variation in this engine. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# STRINGS / EDIT 1

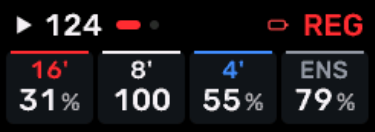



OPEN THIS SCREEN On HOME choose STRINGS, then EDIT. Use its section/page navigation to reach EDIT 1.



## 1 SOLINA

| | |
|---|---|
| **KNOB 1 - 16'** | Level of the 16' string register. Blend registers to change the ensemble voicing. Values: 0 to 100 %. |
| **KNOB 2 - 8'** | Level of the 8' string register. Blend registers to change the ensemble voicing. Values: 0 to 100 %. |
| **KNOB 3 - 4'** | Level of the 4' string register. Blend registers to change the ensemble voicing. Values: 0 to 100 %. |
| **KNOB 4 - ENS** | String ensemble/chorus amount. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# STRINGS / EDIT 2

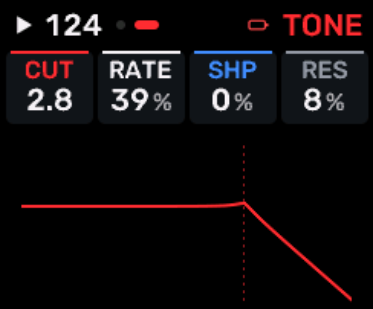



OPEN THIS SCREEN On HOME choose STRINGS, then EDIT. Use its section/page navigation to reach EDIT 2.

| | |
|---|---|
| **KNOB 1 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 30 to 16.0 kHz. |
| **KNOB 2 - RATE** | Speed of the selected oscillator/modulator/effect. The displayed unit identifies Hz or a tempo division. Values: 0 to 100 %. |
| **KNOB 3 - SHP** | Waveform/timbre shaping or the amount of envelope/LFO shaping, according to this page. Values: 0 to 100 %. |
| **KNOB 4 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# JUNO / EDIT 1

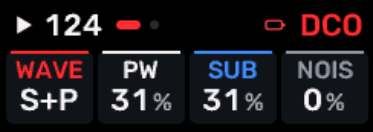



OPEN THIS SCREEN On HOME choose JUNO, then EDIT. Use its section/page navigation to reach EDIT 1.



## 1 JUNO 106 PAD

| | |
|---|---|
| **KNOB 1 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: SAW / PLS / S+P. |
| **KNOB 2 - PW** | Pulse width/duty cycle; changes harmonic balance. Values: 0 to 100 %. |
| **KNOB 3 - SUB** | Sub-oscillator level under the main oscillator. Values: 0 to 100 %. |
| **KNOB 4 - NOIS** | Noise oscillator/texture level. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# JUNO / EDIT 2

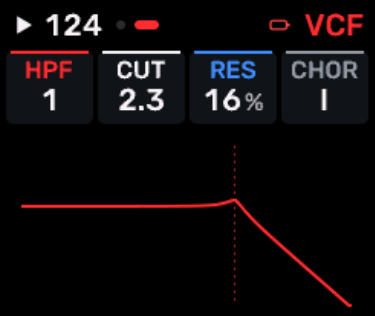



OPEN THIS SCREEN On HOME choose JUNO, then EDIT. Use its section/page navigation to reach EDIT 2.

## 1 JUNO 106 PAD

| | |
|---|---|
| **KNOB 1 - HPF** | High-pass cutoff; reduce unwanted low-frequency energy. Values: 0 / 1 / 2 / 3. |
| **KNOB 2 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 30 to 16.0 kHz. |
| **KNOB 3 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 100 %. |
| **KNOB 4 - CHOR** | Chorus amount/send; adds detuned movement and width. Values: OFF / I / II / I+II. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |


# ACID / EDIT 1

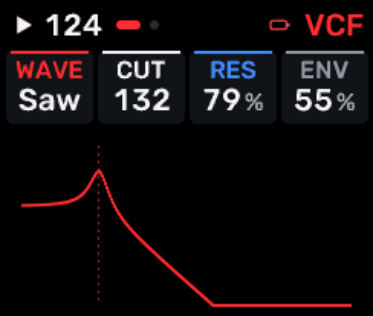



OPEN THIS SCREEN On HOME choose ACID, then EDIT. Use its section/page navigation to reach EDIT 1.

| | |
|---|---|
| **KNOB 1 - WAVE** | Select the oscillator or modulation waveform. Changing the shape changes its harmonic content or movement. Values: SAW / SQR. |
| **KNOB 2 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 30 to 16.0 kHz. |
| **KNOB 3 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 100 %. |
| **KNOB 4 - ENV** | Filter-envelope amount; positive values open the filter with the envelope, negative values invert that movement where supported. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# ACID / EDIT 2

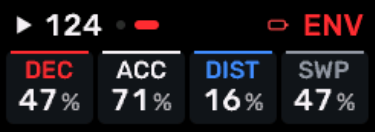


OPEN THIS SCREEN On HOME choose ACID, then EDIT. Use its section/page navigation to reach EDIT 2.




## 1 ACID LINE

| | |
|---|---|
| **KNOB 1 - DEC** | Decay time from the attack peak to the sustain level. Values: 0 to 100 %. |
| **KNOB 2 - ACC** | Accent sensitivity/amount. Values: 0 to 100 %. |
| **KNOB 3 - DIST** | Amount sent to distortion. Values: 0 to 100 %. |
| **KNOB 4 - SWP** | Sweep amount or rate of the selected engine. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# WSEQ / EDIT 1





OPEN THIS SCREEN On HOME choose WSEQ, then EDIT. Use its section/page navigation to reach EDIT 1.



## 1 WAVE STEPS

| | |
|---|---|
| **KNOB 1 - SEQ** | Wave-sequence selection/control. Values: STEPS / RHYTHM / SWEEP / FIFTHS / MINOR / MAJOR / OCTAVE / GATE / BELLS / 8BIT / MORPH / VOX / NOISY / DUB / DORIAN / PING. |
| **KNOB 2 - RATE** | Speed of the selected oscillator/modulator/effect. The displayed unit identifies Hz or a tempo division. Values: 1/32 to BAR. |
| **KNOB 3 - XFADE** | Crossfade between wave-sequence stages/sources. Values: 0 to 100 %. |
| **KNOB 4 - LOOP** | Repeat/loop behavior. On ENV 2, ONE is a single contour and LOOP repeats it; on SPICE/TURNG it repeats generated variation. Values: FWD / BACK / PING / ONCE. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# WSEQ / EDIT 2

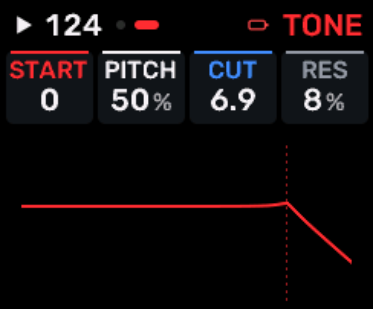



OPEN THIS SCREEN On HOME choose WSEQ, then EDIT. Use its section/page navigation to reach EDIT 2.


## 1 WAVE STEPS

| | |
|---|---|
| **KNOB 1 - START** | Position in a sample, wavetable, wave sequence or excitation, as indicated by the engine. Values: 0 to 127. |
| **KNOB 2 - PITCH** | Pitch or pitch modulation depth. In an envelope/LFO destination page this is an amount, not a tuning reference. Values: 0 to 100 %. |
| **KNOB 3 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 30 to 16.0 kHz. |
| **KNOB 4 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# VPS / EDIT 1

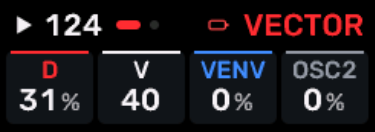



OPEN THIS SCREEN On HOME choose VPS, then EDIT. Use its section/page navigation to reach EDIT 1.



## 1 VPS LEAD

| | |
|---|---|
| **KNOB 1 - D** | VPS phase breakpoint; moves the point where the oscillator changes slope. Values: 0 to 100 %. |
| **KNOB 2 - V** | VPS phase slope; changes harmonic content independently of oscillator pitch. Values: 0 to 127. |
| **KNOB 3 - VENV** | Envelope amount applied to the VPS phase slope. Values: -100 to +98 %. |
| **KNOB 4 - OSC2** | Second oscillator setting/level. Use the engine description to distinguish oscillator type from mix. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# VPS / EDIT 2

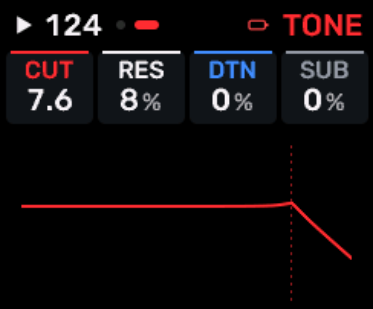



OPEN THIS SCREEN On HOME choose VPS, then EDIT. Use its section/page navigation to reach EDIT 2.

## 1 VPS LEAD


| | |
|---|---|
| **KNOB 1 - CUT** | Low-pass/filter cutoff: lower values remove more upper harmonics. Values: 30 to 16.0 kHz. |
| **KNOB 2 - RES** | Filter resonance emphasizes frequencies around cutoff. High values may change level or approach self-oscillation. Values: 0 to 100 %. |
| **KNOB 3 - DTN** | Detuning amount between oscillators/voices or FM operators, according to the selected engine. Values: 0 to 100 %. |
| **KNOB 4 - SUB** | Sub-oscillator level under the main oscillator. Values: 0 to 100 %. |
| **BUTTONS AND NAVIGATION** | HOME returns to the four-part display. SELECT navigates pages. The family button advances pages. PLAY starts/stops transport; REC arms the selected track. OCT- backs out and OCT+ confirms where an action or picker is offered. Native engine sections can be opened from the EDIT section map; PRESET navigates sections/pages rather than replacing the sound there. |
| **KEEP YOUR CHANGES** | Save the containing four-part PROGRAM to retain the sound and mix. Save a PROJECT for pattern banks and arrangements; export a USB backup for safekeeping. |
| **STEP BY STEP** | 1. Open this screen using the path above; check the selected part or row before turning a knob. 2. Change one setting at a time. Play a note or pattern and compare the result; inactive routes or muted parts may make a control inaudible. 3. Use HOME to leave, then save the appropriate program/project if you want a named version. |

# Editor / MIDI routing for layers and the drummer

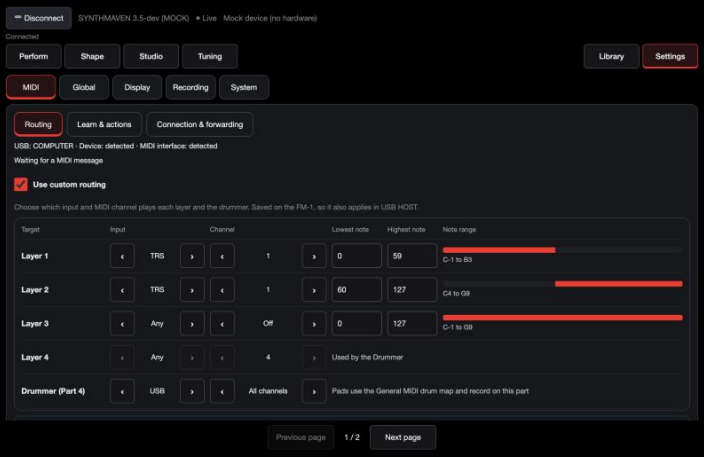



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Open Settings > MIDI > Routing and turn on Use custom routing. While it is on, it replaces SYSTEM > ROUT. |
| **Controls and workflow** | For each of layers 1-4 and the Drummer, choose an input (Any, USB or TRS) and a channel (Off, 1-16 or All channels). |
| **Controls and workflow** | To split or stack, give two layers the same input and channel, then set their lowest and highest notes. Separate ranges split the keyboard; overlapping ranges stack. Note ranges are saved with the program. |
| **Controls and workflow** | Set one part to the DRUM engine for the Drummer. Pads play and record on that part, so it is not available as a layer. A layer cannot share an input and channel with the Drummer. |
| **Controls and workflow** | Choose Save to FM-1 between songs: saving releases held notes. Routing is saved on the device and applies in COMPUTER and HOST. |
| **Controls and workflow** | To record from a pedal, use Learn & actions: Transport Play / Stop, Record (selected part) and Record (drummer). One part records at a time. |
| **Controls and workflow** | On a computer, Connection & forwarding sends each connected controller to a target on that target's channel. Forwarding stops when the editor closes, and is not available in HOST, where one USB controller is served. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Perform: quick edits

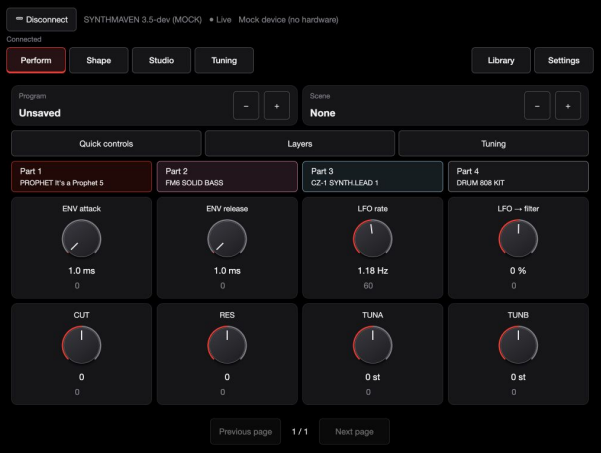



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select a part, adjust ENV or LFO and the engine controls, then use Program Up/Down or Scene Up/Down. |
| **Controls and workflow** | The names show the active selection. |
| **Controls and workflow** | Save edits in Programs before loading a different program. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Tone

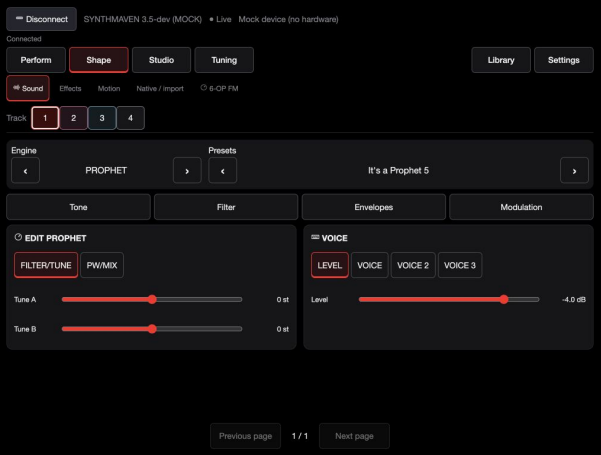



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Choose an engine and preset with the side arrows. |
| **Controls and workflow** | Select a card page to reach additional voice settings. |
| **Controls and workflow** | Each page changes the same selected part. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Filter

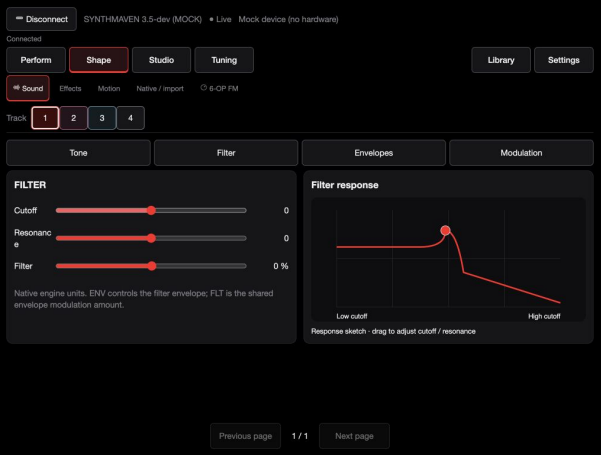



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select Filter, choose the supported model and adjust cutoff, resonance and envelope amount. |
| **Controls and workflow** | Drag the response sketch to change cutoff and resonance together. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Envelopes

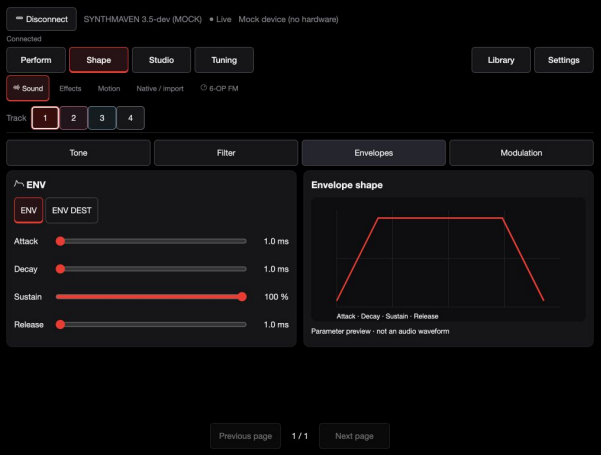



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Choose Envelopes. |
| **Controls and workflow** | Set attack, decay, sustain and release; use the card pages for further controls. |
| **Controls and workflow** | The adjacent graph previews those settings. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Modulation

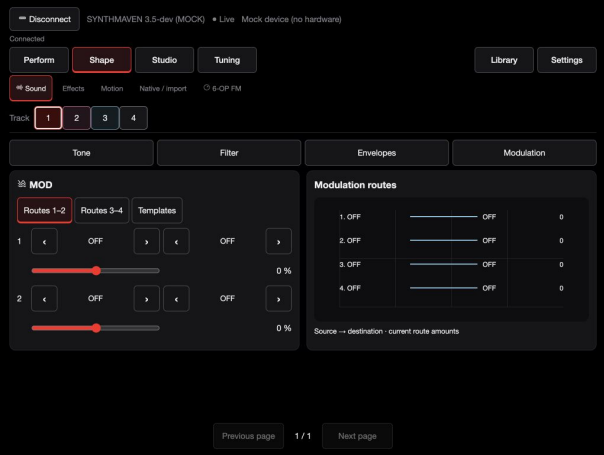



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Choose Routes 1-2 or Routes 3-4, then source, destination and amount. |
| **Controls and workflow** | Templates fill a free route. |
| **Controls and workflow** | Save the sound/program after applying a template. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Effects

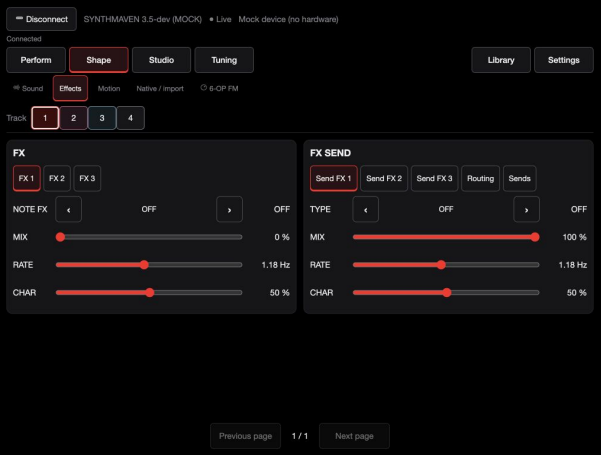



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select the effect slot and adjust its parameters. |
| **Controls and workflow** | For shared audio effects, select Send FX 1, 2 or 3, then Routing and Sends. |
| **Controls and workflow** | Raise the selected part’s send and shared return to hear the effect. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / LFO and arpeggiator

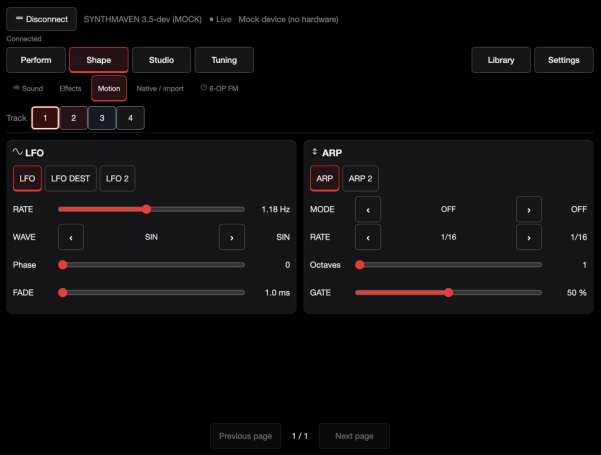



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Use LFO, LFO DEST and LFO 2 to set rate, waveform, destinations and synchronization. |
| **Controls and workflow** | Use ARP and ARP 2 for pattern, range, gate, swing, probability and hold. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Native patch import

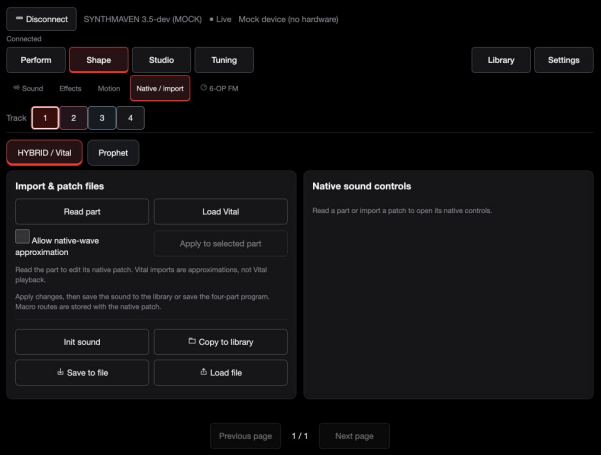



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select HYBRID / Vital or Prophet. |
| **Controls and workflow** | Read the selected part before editing, or import a compatible patch. |
| **Controls and workflow** | Review approximations, apply to the part and save. |
| **Controls and workflow** | Vital import is translation, not the Vital synthesizer running on the FM-1. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / DX7 / FM6

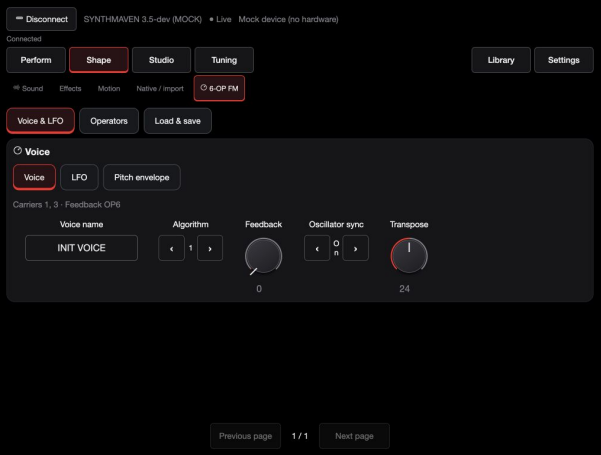



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Use Voice & LFO, Operators and Load & save. |
| **Controls and workflow** | Select an operator to edit its frequency and envelope. |
| **Controls and workflow** | Import a DX7 SysEx file, choose a voice, send it to the selected part and save the program. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Sequencer

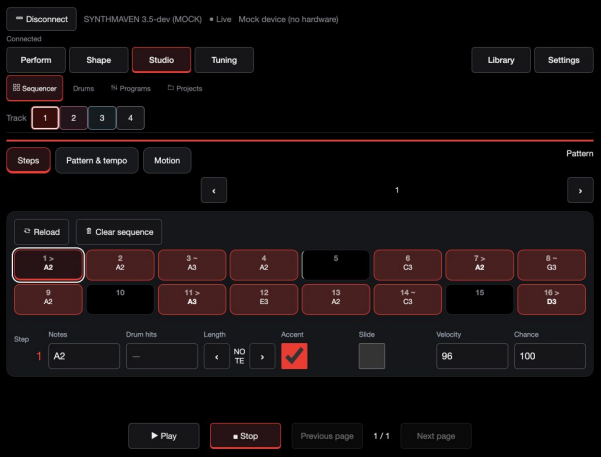



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select a track and pattern. |
| **Controls and workflow** | Tap a step, enter its note(s), length, velocity and chance, and toggle accent or slide. |
| **Controls and workflow** | Pattern & tempo sets loop behavior; Motion edits automation. |
| **Controls and workflow** | Play and Stop operate the connected FM-1. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Independent drum machine

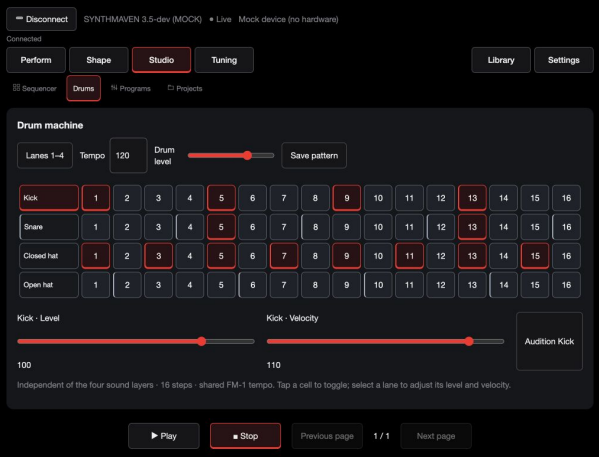



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Tap steps to enable hits. |
| **Controls and workflow** | Select a lane for level, velocity and audition; switch lane banks for the other four sounds. |
| **Controls and workflow** | Set tempo and overall drum level, use Play/Stop, and Save pattern to retain edits. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Programs, scenes and setlists

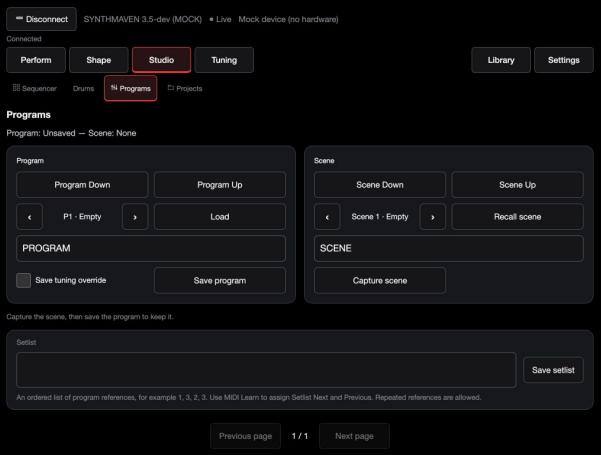


| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select P1-P8, name the program and Save program. |
| **Controls and workflow** | Enable Save tuning override only when this program should replace global tuning. |
| **Controls and workflow** | Capture each scene, then save the program. |
| **Controls and workflow** | Enter an ordered setlist such as 1, 3, 2, 3 and Save setlist. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |


# Editor / Projects and full backup

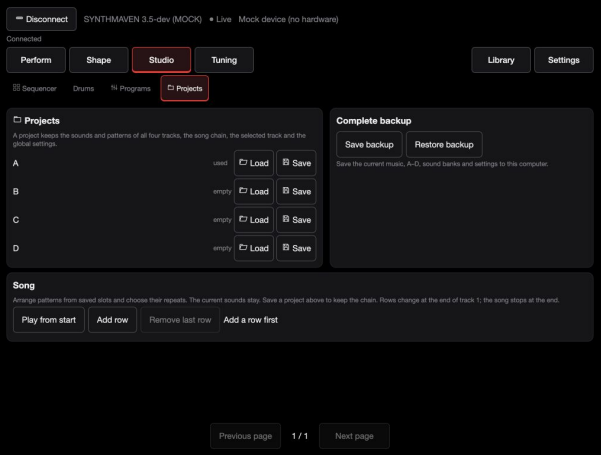


Previous page 1 / 1 Next page


| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Save an A-D project to preserve sounds, patterns and arrangement. |
| **Controls and workflow** | Load recalls that project. |
| **Controls and workflow** | Save backup downloads a full archive; Restore backup restores one. |
| **Controls and workflow** | Add song rows to arrange patterns and repeats, then save the project. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Global microtuning

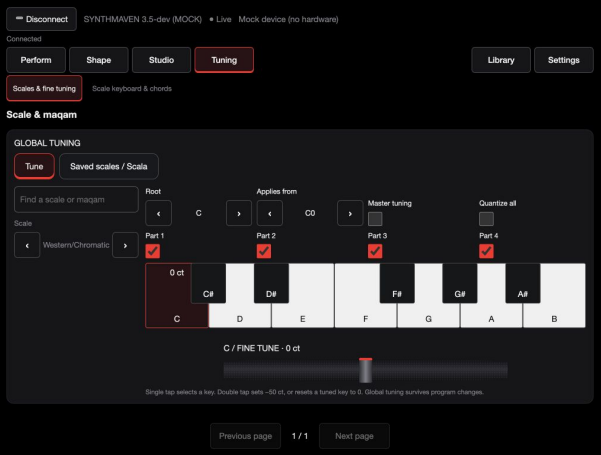



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Select scale, root and the first affected octave. |
| **Controls and workflow** | Enable Master tuning and the required parts. |
| **Controls and workflow** | Quantize all constrains notes to the selected scale. |
| **Controls and workflow** | Tap a key and drag the wheel in 1-cent steps; double-tap sets -50 cents or resets a tuned key. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Saved scales and Scala

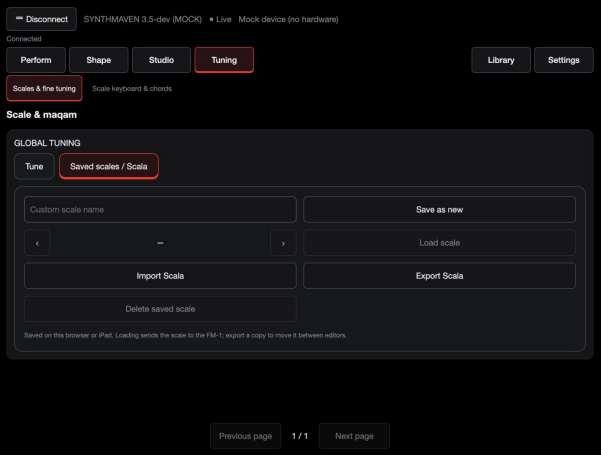



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Enter a custom-scale name and Save as new. |
| **Controls and workflow** | Select a saved scale and Load scale to send it to the FM-1. |
| **Controls and workflow** | Import Scala reads a compatible .scl file; Export Scala makes a portable copy. |
| **Controls and workflow** | Named scales are local to this browser/app. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Scale keyboard and chords

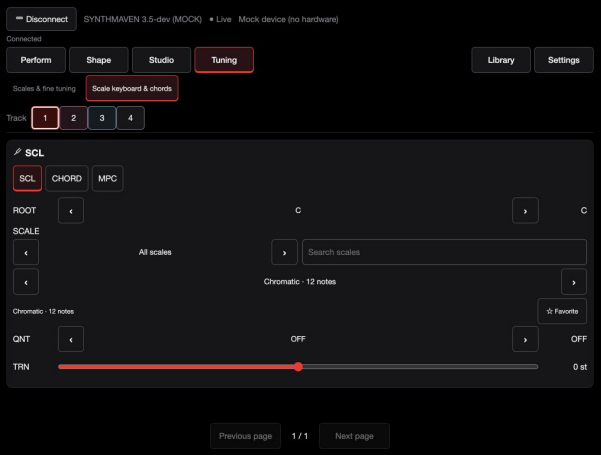



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Use the SCL card pages for quantization and transpose, CHORD for voicing and strum, and MPC for scale-degree pads. |
| **Controls and workflow** | Master microtuning takes precedence for scale-aware pitch generation when enabled. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Library

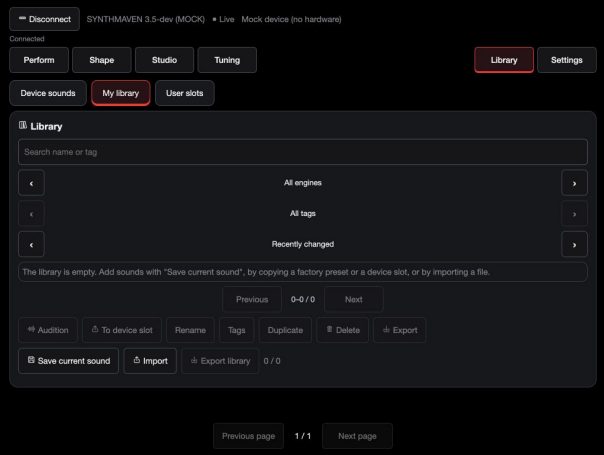


| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Use Device sounds to browse factory sounds, My library for local named entries, and User slots for device storage. |
| **Controls and workflow** | Save current sound adds a local entry. |
| **Controls and workflow** | Export library backs it up; To device slot writes a selected entry to the FM-1. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |


# Editor / Settings

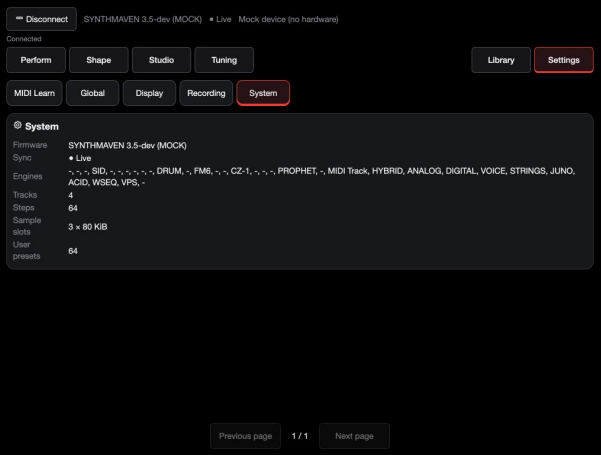





| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Choose Global, Display, Recording or System. |
| **Controls and workflow** | Global settings affect device behavior; System identifies the connected build and capabilities. |
| **Controls and workflow** | Screen pages expose additional controls without scrolling. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / MIDI Learn

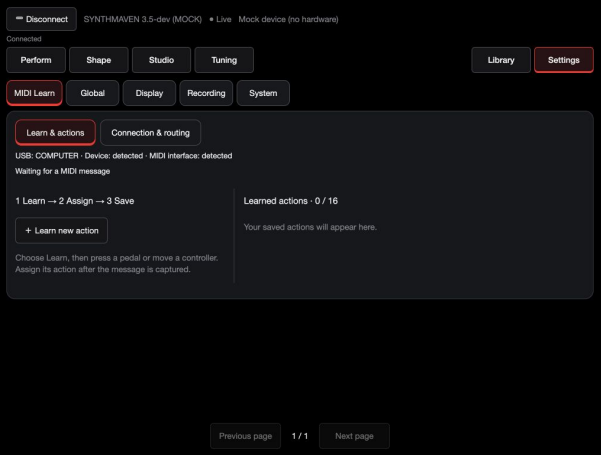



| | |
|---|---|
| **Open** | Open the matching editor page shown below. |
| **Controls and workflow** | Choose Learn new action and operate the controller. |
| **Controls and workflow** | After the message is captured, assign the action or parameter and Save action. |
| **Controls and workflow** | The learned grid supports Relearn and Unlearn. |
| **Controls and workflow** | Set repeat suppression only as needed to ignore duplicate messages without losing deliberate taps. |
| **STEP BY STEP** | 1. Connect the real FM-1 in COMPUTER USB role. Mock mode changes demonstration data only. 2. Choose the part and screen before editing. Touch arrows cycle choices; card tabs reveal the remaining controls. 3. Save the sound/program/project as appropriate; a browser library copy is separate. |

# Editor / Four-layer melodic sequencer

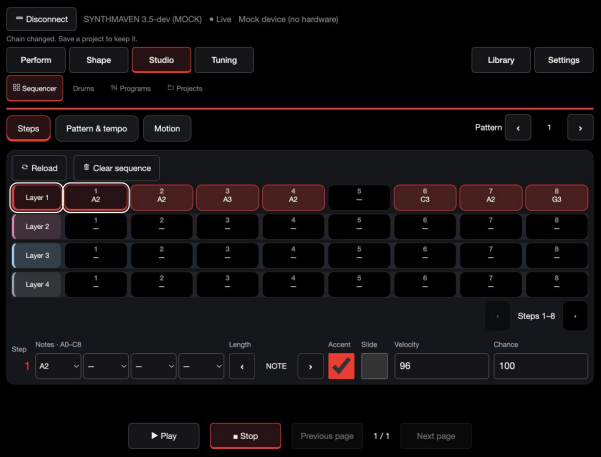


| | |
|---|---|
| **Open** | Studio > Sequencer > Steps. |
| **Four lanes** | Each visible lane belongs to the matching program layer. Tap a step to select its layer and edit that step. The selected lane and step have an outline. |
| **Steps** | Eight steps are visible at a time. Previous/next step arrows expose the remaining steps without changing the pattern. |
| **Notes A0-C8** | Choose from all 88 piano notes in each of four note selectors. Use the dash for an empty chord slot. Notes are selectable, not free text. |
| **Length / Accent / Slide** | NOTE triggers the selected pitches, TIE connects steps, REST leaves silence. Accent and slide retain the firmware behavior. |
| **Velocity / Chance** | Velocity sets note strength, from 0 to 127. Chance sets probability from 0 to 100 percent. |
| **Pattern / Play / Save** | Choose one of eight patterns for the selected layer. Play runs on the connected FM-1. Save the project to retain patterns and arrangement. |
| **STEP BY STEP** | 1. Select a layer and a pattern. Tap a step and choose one or more notes. 2. Set note length, velocity, chance, accent and slide as needed; repeat for other layers. 3. Open Projects > Song arranger, arrange the patterns, then save the project. Use Drums for independent drum patterns. |

# Editor / Four-track song arranger

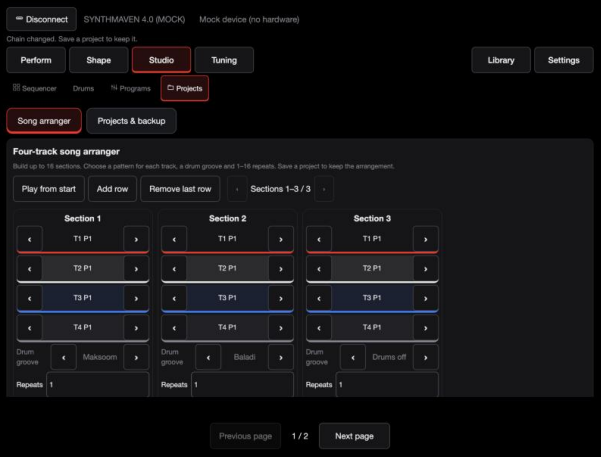


| | |
|---|---|
| **Open** | Studio > Projects > Song arranger. |
| **Timeline** | Read sections from left to right. Each column contains four color-coded layer patterns, a drum groove, a repeat count and reorder/copy/delete controls. |
| **Track 1-4 patterns** | Each section selects one of eight patterns independently for each track. Side arrows cycle the pattern number; track colors identify the four parts. |
| **Repeats** | Play this section 1-16 times before moving to the next. A song contains up to 16 ordered sections. |
| **Add / Copy / Move earlier / Delete** | Add a section, duplicate a section, move it earlier or remove it. Structural edits are disabled while the song is playing. |
| **Section pages** | Previous/next arrows show four sections at a time. They change only the view, never the order or sound. |
| **Play from start / Stop** | Play the arrangement on the connected FM-1. The current section and remaining repeats are reported by the device. |
| **Projects & backup** | Save the current project in A-D to retain the arrangement, then export a backup. Patterns must already contain melodic notes to produce sound; independent drums are edited on the Drums page. |
| **STEP BY STEP** | 1. Create patterns in Studio > Sequencer for each of the four tracks. 2. Open Studio > Projects > Song arranger; add sections and choose four patterns and repeats for each. 3. Play from start, stop to edit, then use Projects & backup to save. |