





## How to Configure Line Crossing in NVR GUI

|                 |                                           |                 |      |              |            |
|-----------------|-------------------------------------------|-----------------|------|--------------|------------|
| <b>Title:</b>   | How to Configure Line Crossing in NVR GUI | <b>Version:</b> | v1.0 | <b>Date:</b> | 07/06/2026 |
| <b>Product:</b> | NVR                                       |                 |      | <b>Page:</b> | 1 of 6     |

1. Click on 'Event Center'

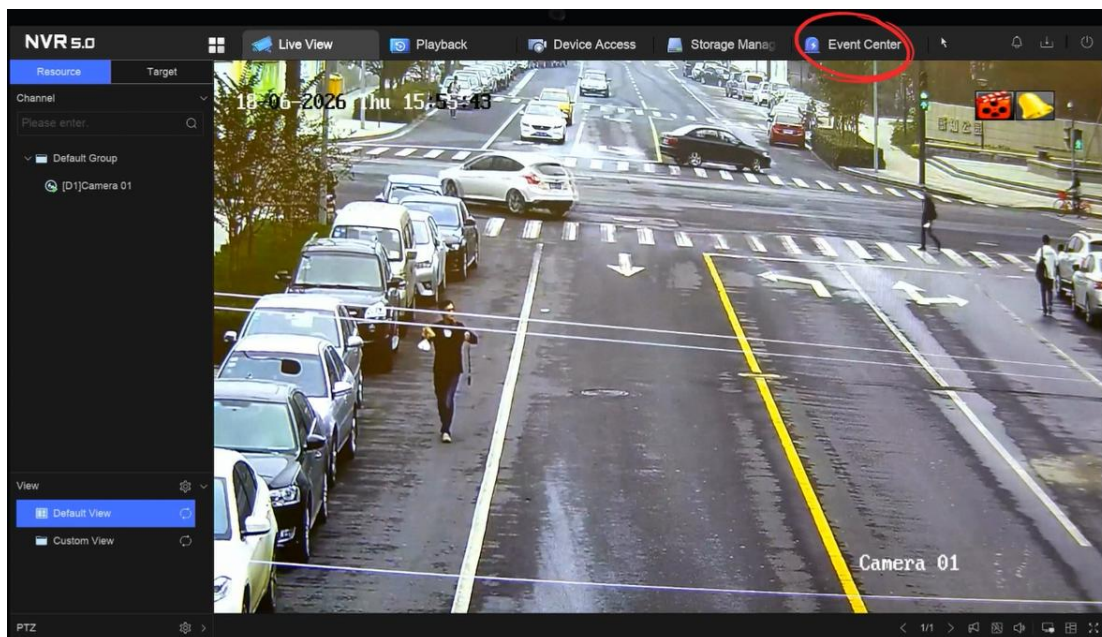


2. Click on 'Event Configuration', Confirm the channel that needs to be enabled, click on 'Enable'

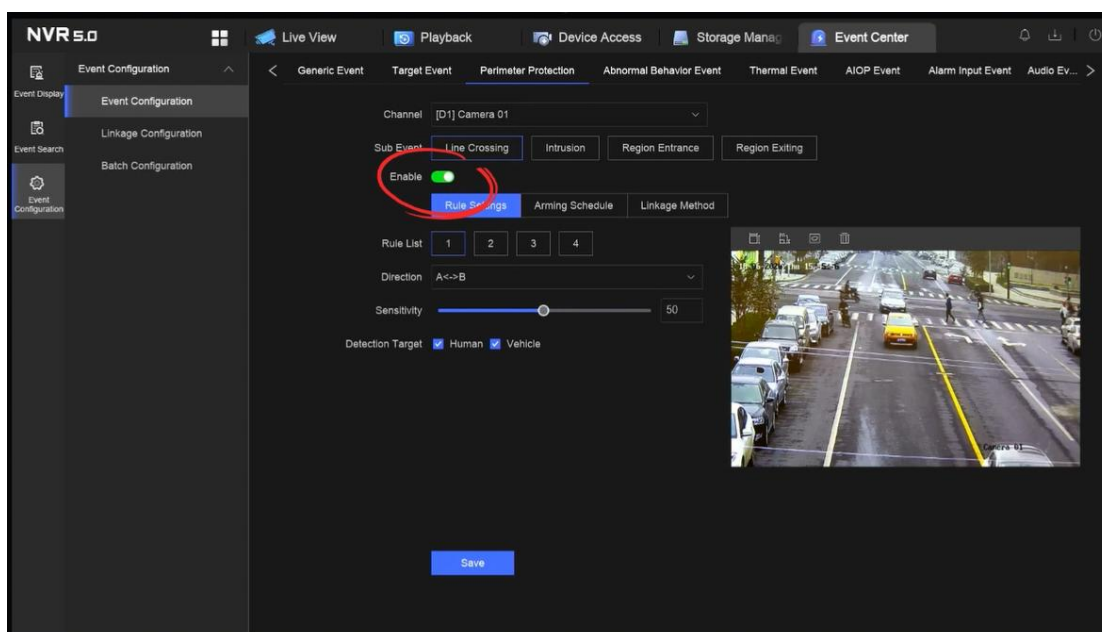


3. Click to configure maximum and minimum size.  
The event can only be triggered when the 'min size < target < max size'

|                 |                                           |                 |      |              |            |
|-----------------|-------------------------------------------|-----------------|------|--------------|------------|
| <b>Title:</b>   | How to Configure Line Crossing in NVR GUI | <b>Version:</b> | v1.0 | <b>Date:</b> | 07/06/2026 |
| <b>Product:</b> | NVR                                       |                 |      | <b>Page:</b> | 2 of 6     |

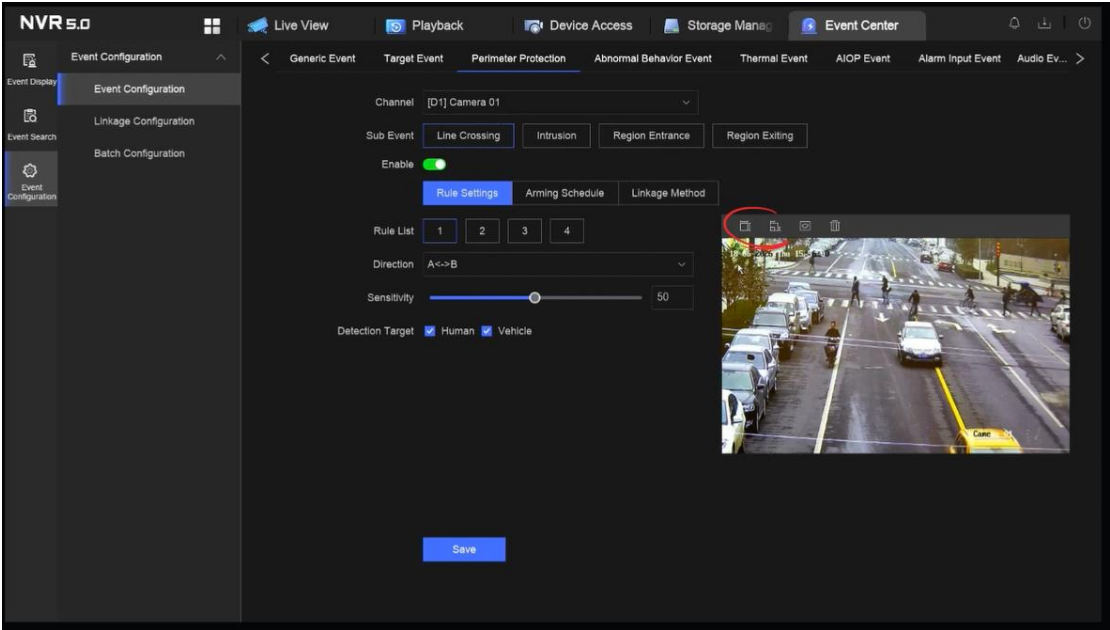


- Click on the configuration rule line  
click sequentially on the screen to draw the rule line

|                 |                                           |                 |      |              |            |
|-----------------|-------------------------------------------|-----------------|------|--------------|------------|
| <b>Title:</b>   | How to Configure Line Crossing in NVR GUI | <b>Version:</b> | v1.0 | <b>Date:</b> | 07/06/2026 |
| <b>Product:</b> | NVR                                       |                 |      | <b>Page:</b> | 3 of 6     |

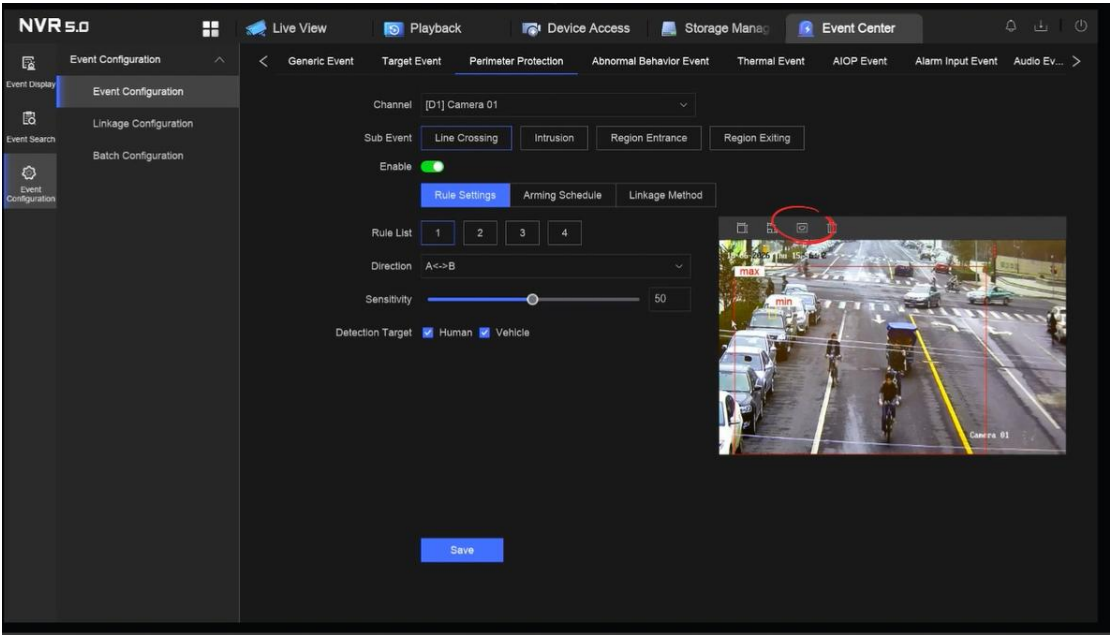


5. Check the target that needs to be triggered

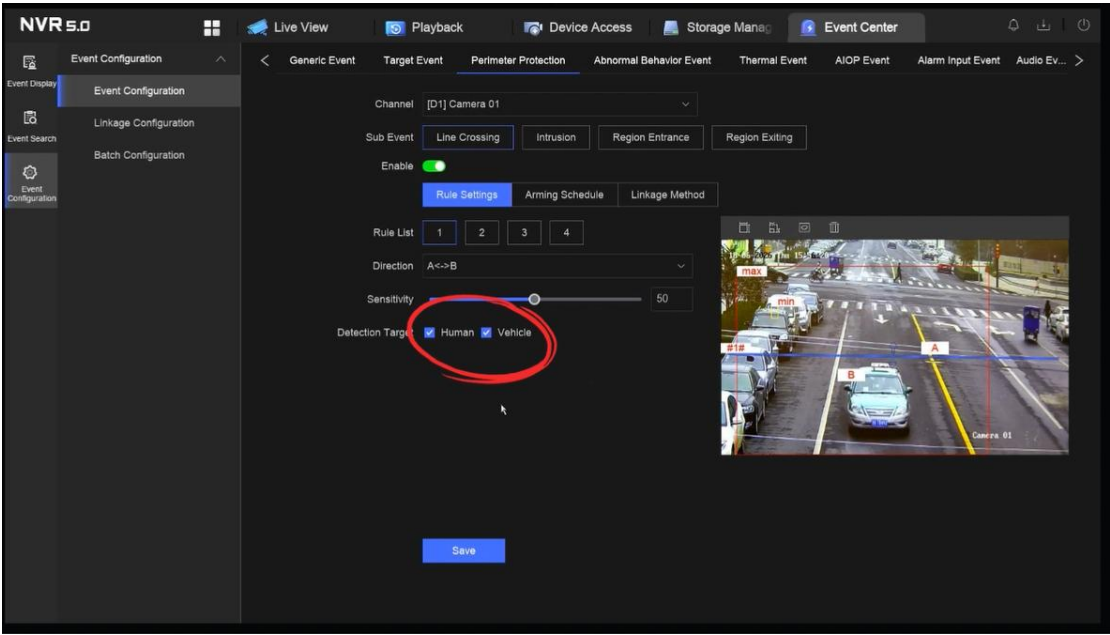


6. Event schedule can be configured here.

|                 |                                           |                 |      |              |            |
|-----------------|-------------------------------------------|-----------------|------|--------------|------------|
| <b>Title:</b>   | How to Configure Line Crossing in NVR GUI | <b>Version:</b> | v1.0 | <b>Date:</b> | 07/06/2026 |
| <b>Product:</b> | NVR                                       |                 |      | <b>Page:</b> | 4 of 6     |

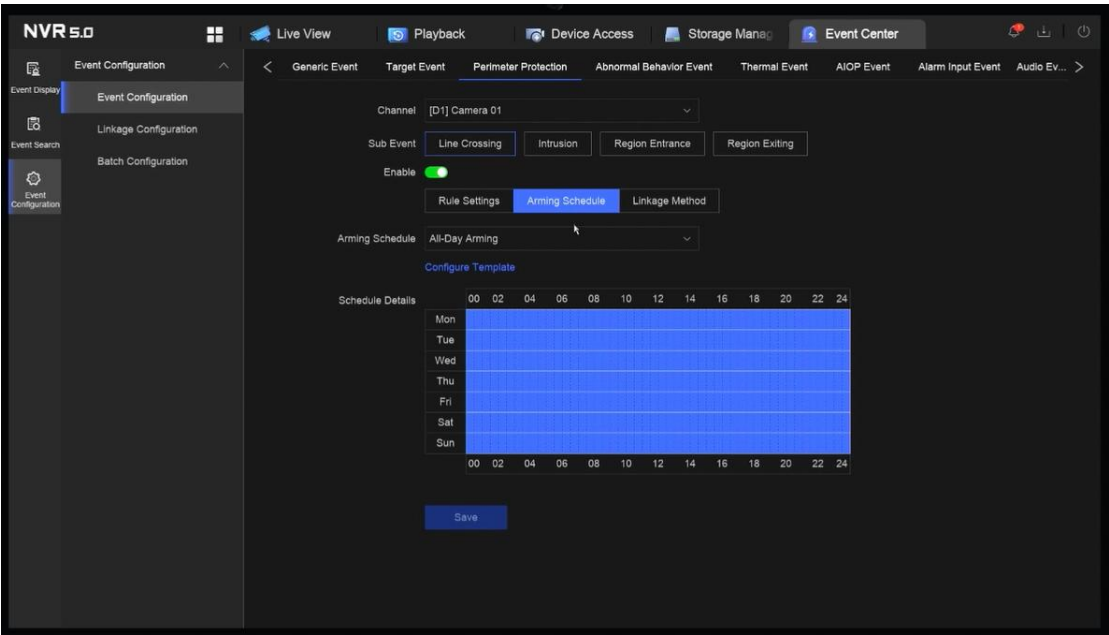


7. Multiple templates can also be configured as needed

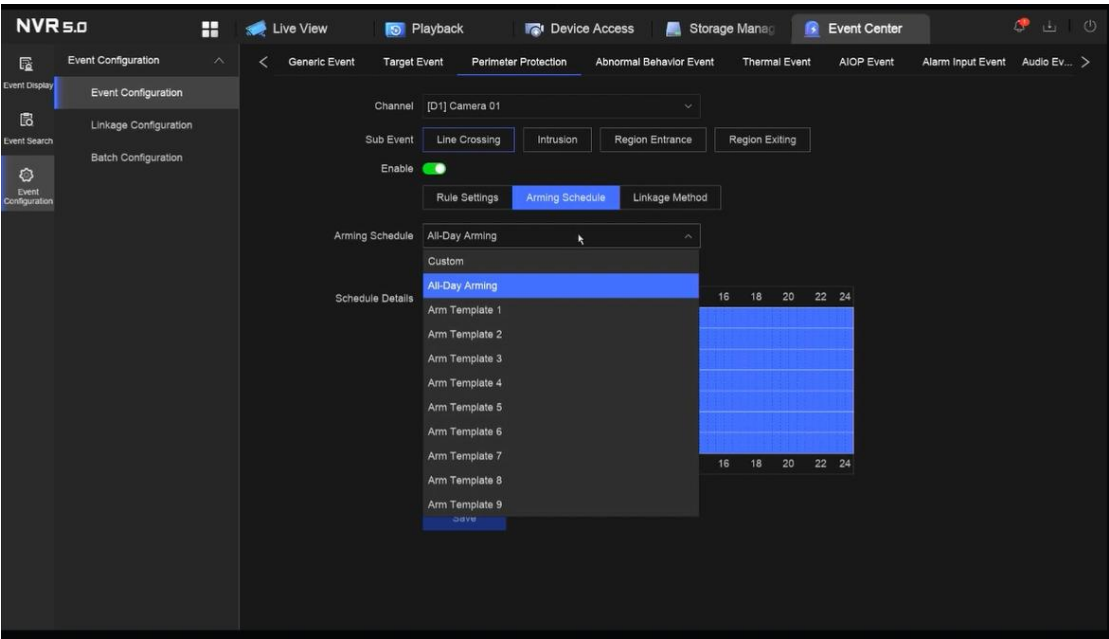


8. You can configure the required linkage configuration here  
If you need an alarm pop-up, you can enable here

|                 |                                           |                 |      |              |            |
|-----------------|-------------------------------------------|-----------------|------|--------------|------------|
| <b>Title:</b>   | How to Configure Line Crossing in NVR GUI | <b>Version:</b> | v1.0 | <b>Date:</b> | 07/06/2026 |
| <b>Product:</b> | NVR                                       |                 |      | <b>Page:</b> | 5 of 6     |

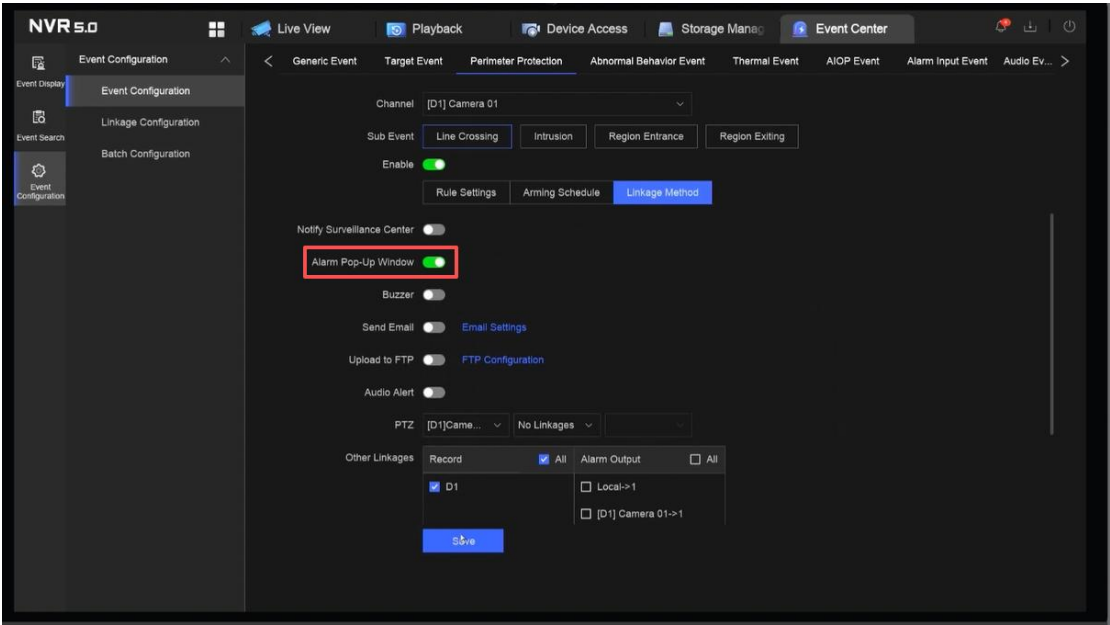


9. Check the alarm pop-up main switch here

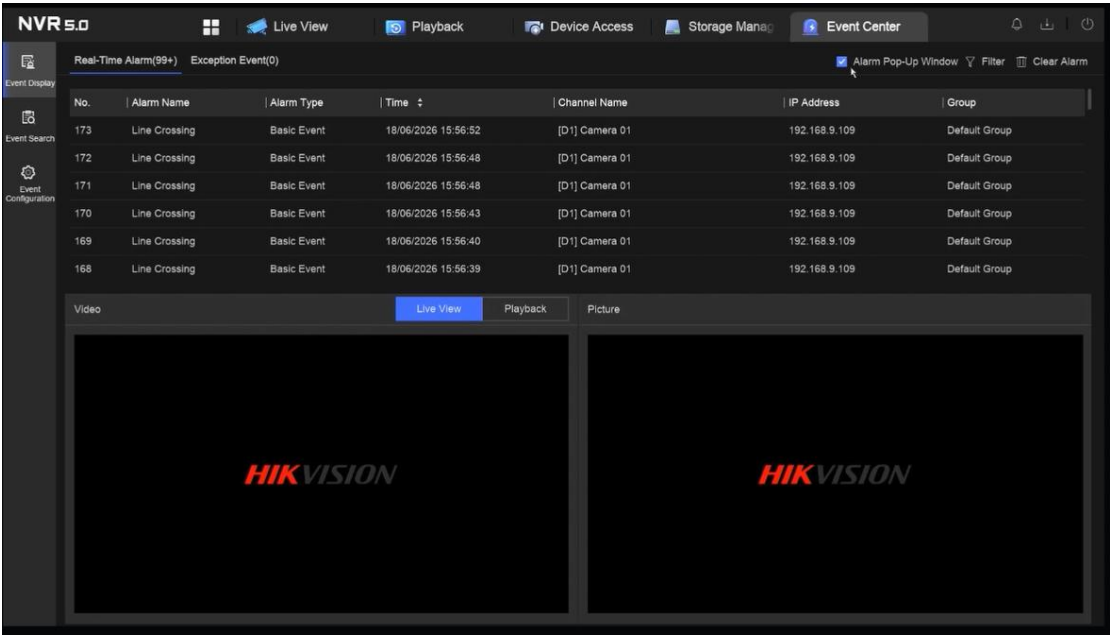


10. When an alarm is triggered, a pop-up window can be seen.



|                 |                                           |                 |      |              |            |
|-----------------|-------------------------------------------|-----------------|------|--------------|------------|
| <b>Title:</b>   | How to Configure Line Crossing in NVR GUI | <b>Version:</b> | v1.0 | <b>Date:</b> | 07/06/2026 |
| <b>Product:</b> | NVR                                       |                 |      | <b>Page:</b> | 6 of 6     |

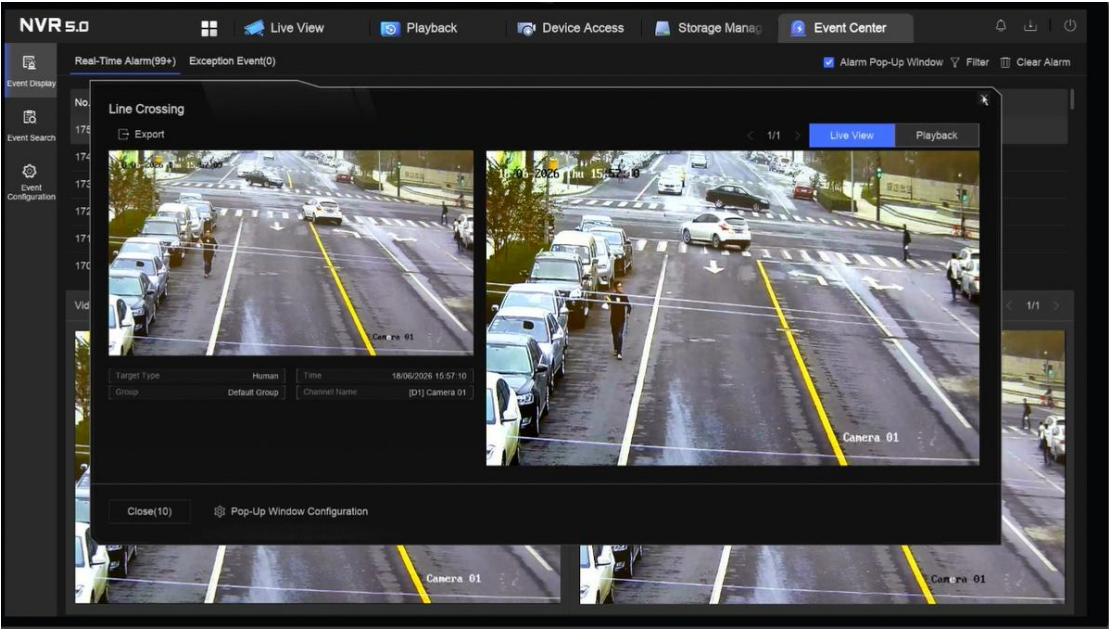

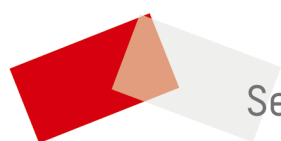

See Far, Go Further