




How to Capture Pictures and Upload to FTP

Title:	How to Capture Pictures and Upload to FTP	Version:	V2.0	Date:	19/12/2025
Product:	Cameras			Page:	1 of 4



How to Capture Pictures and Upload to FTP


1. Download a FTP server and create a user. The FTP server can be chosen as you like, we take Xlight FTP for example

1) Download a FTP server, click add button, input the IP address of your PC

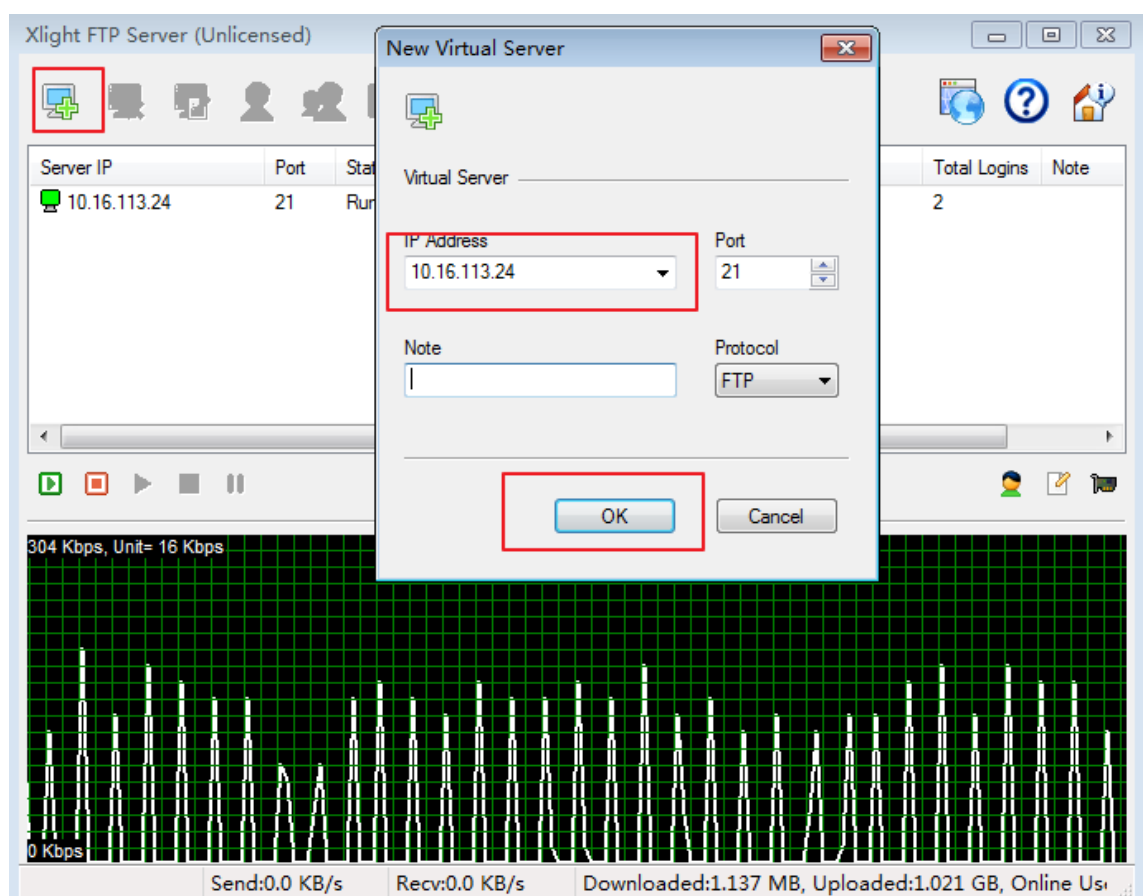

2) Click User list and Edit Button, create a user, specify the user path and the permission

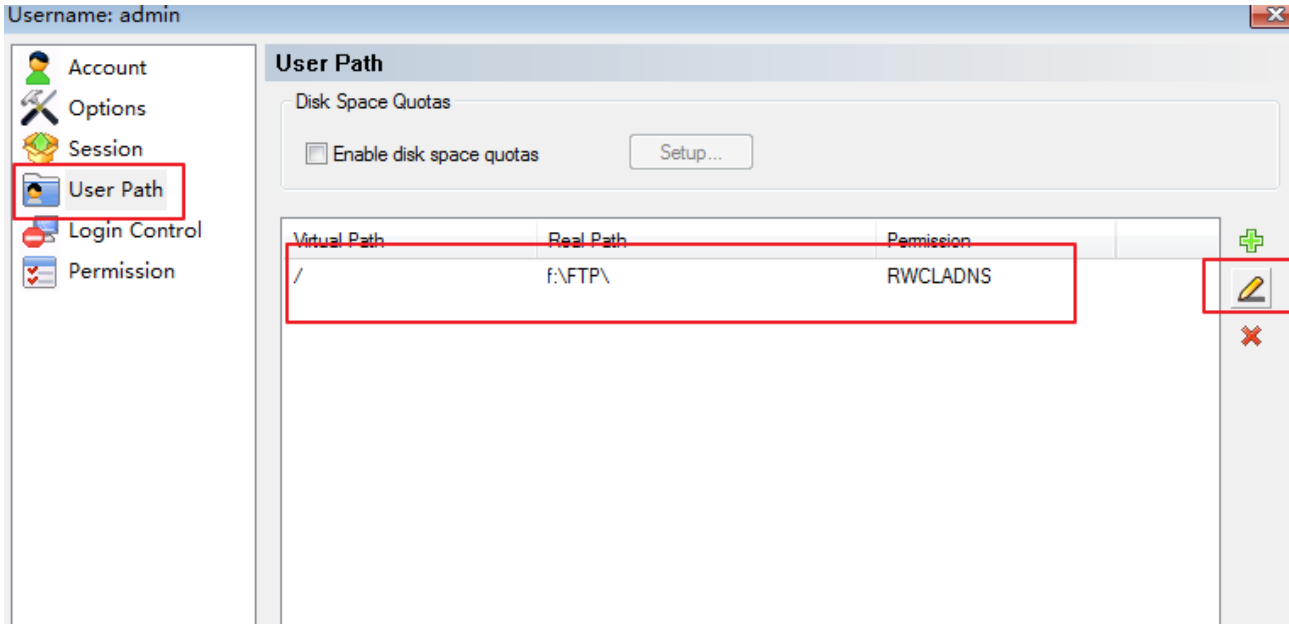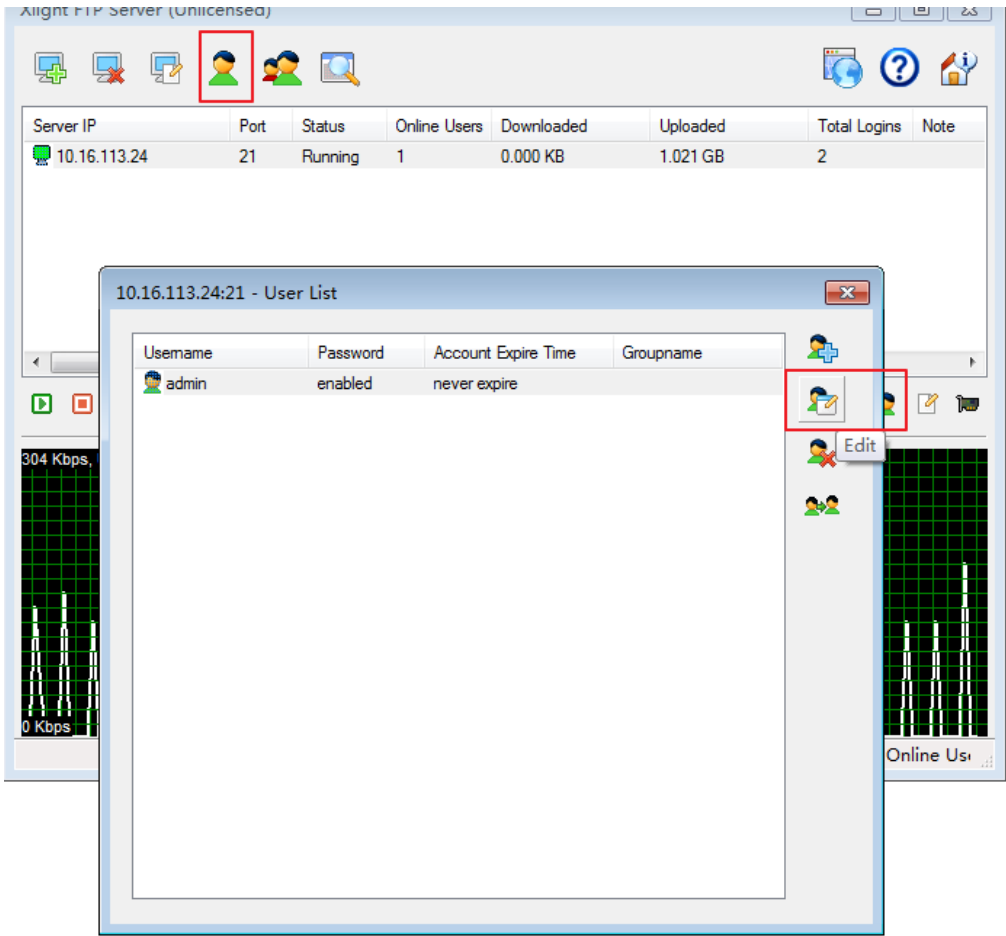

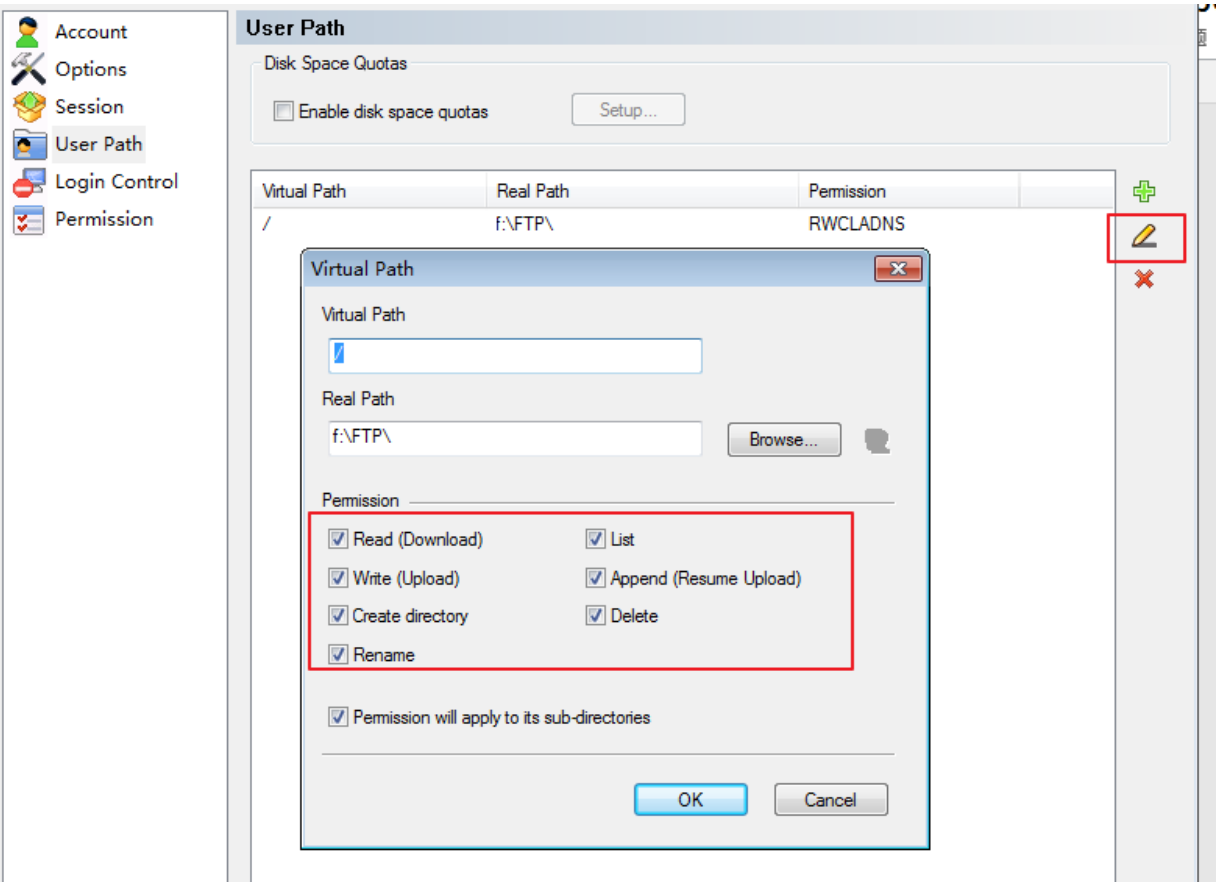

2. Configure FTP settings of the camera in [Configuration]-[Event]-[Alarm Setting]-[FTP]. The server address is the IP address of your PC, user name and password are consist with the settings in FTP server

Title:	How to Capture Pictures and Upload to FTP	Version:	V2.0	Date:	19/12/2025
Product:	Cameras			Page:	4 of 4

HIKVISION®

admin

Live View

Playback

VCA

Configuration

Maintenance and Security

Common Settings

Local

System

Network

Video/Audio

Image

Storage

Event

Event and Detection

Alarm Setting

FTP

Email

Alarm Output

Flashing Alarm Light Output

Audible Alarm Output

Alarm Server

FTP Protocol

FTP

*Server IP Address

10.9.96.55

*Port No.

21

Anonymous Login

*User Name

TEST2

*Password

Directory Structure

Save in the root directory

Upload Picture

Picture Filing Interval (day(s))

Off

Picture Name

Default

Enable Automatic Network Replenis...

Test

Save

3. Enable the event that you want to trigger capture, and click [Upload Picture] in the [linkage method], click [save]. You can see the captured pictures under the user path set before.

HIKVISION®

admin

Live View

Playback

VCA

Configuration

Maintenance and Security

Common Settings

Local

System

Network

Video/Audio

Image

Storage

Event

Event and Detection

Alarm Setting

Motion Detection

Video Tampering

Alarm Input

Exception

Scene Change Detection

Enable

Parameter Settings

Enable Dynamic Analysis for Motion

Configuration Mode

Normal Mode

Sensitivity

100

Detection Target

Human

Vehicle

Arming Schedule

Arming Schedule

Edit

Linkage Method

Audio Linkage

Send Email

Notify Surveillance Center


Upload to FTP/Memory Card/NAS

Flashing Alarm

Trigger Alarm Output

Select All

Save

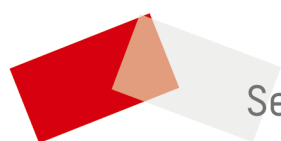

See Far, Go Further