



How to Configure Redundant Recording on NVR 5.0

Title:	How to Configure Redundant Recording on NVR 5.0	Version:	v1.0	Date:	03/25/2025
Product:	Network Video Recorder			Page:	1 of 5

How to Configure Redundant Recording on NVR 5.0

Preparation:

NVR model with 5.X version, as follows:

Model: iDS-NXI-M, DS-NI-M, DS-NXI-M/Vpro, DS-NXI-I(E)


HDD: at least 2 HDDs (NAS is also allowed)

1. Configuration on GUI 5.0

1) Configure Storage mode


Go to **Storage Management->Storage Mode**, set the storage mode to **Group mode** and set the property as **Redundancy** for HDD2.

Note: Redundancy HDD need to be in the same group with the working R/W HDD.

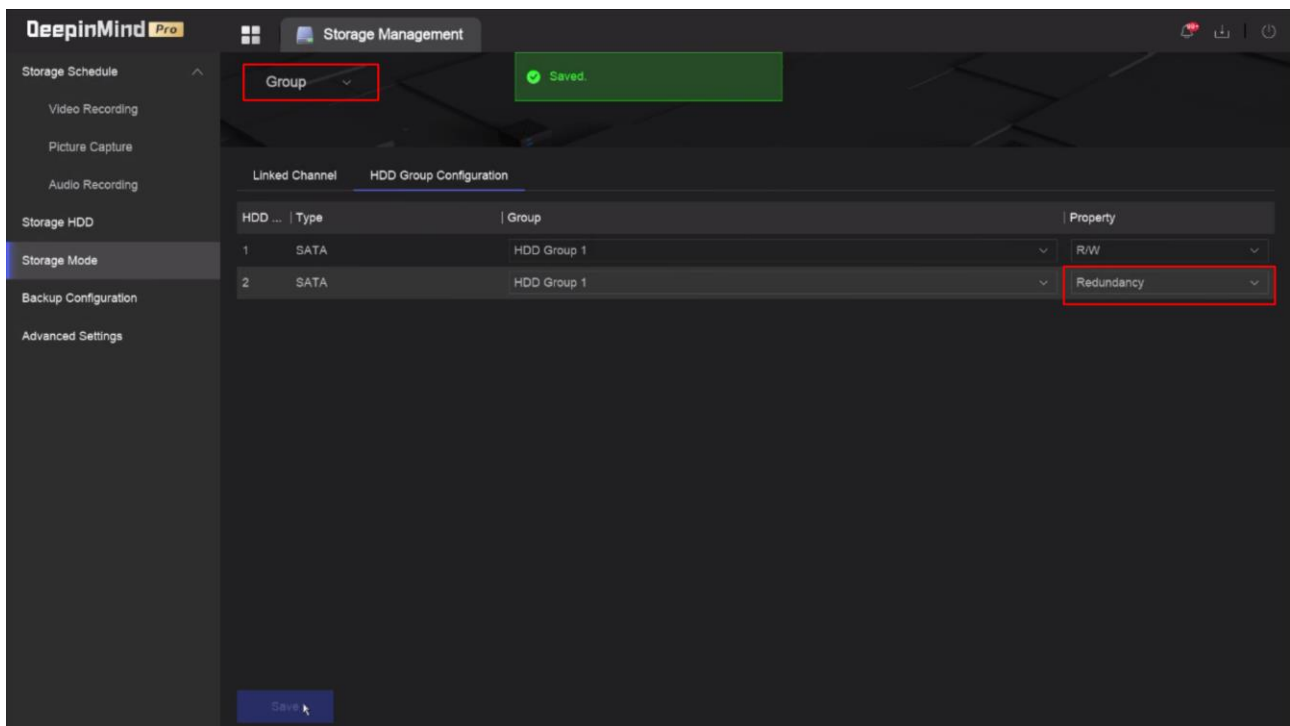


Double Check Storage HDD to see if HDD2 is using as Redundancy.

Title:	How to Configure Redundant Recording on NVR 5.0	Version:	v1.0	Date:	03/25/2025
Product:	Network Video Recorder			Page:	2 of 5

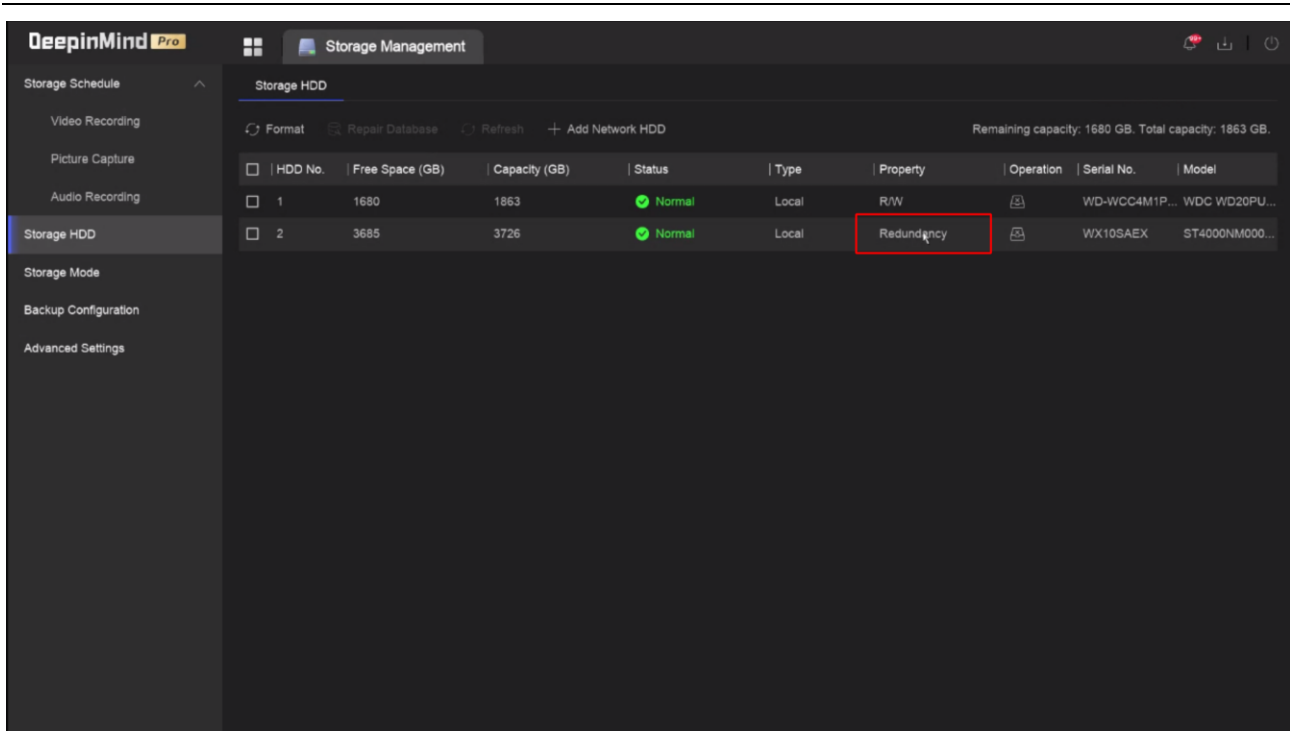


Set the corresponding channels to the groups, you can configure multiple groups. Here we set all the channels to HDD Group 1.

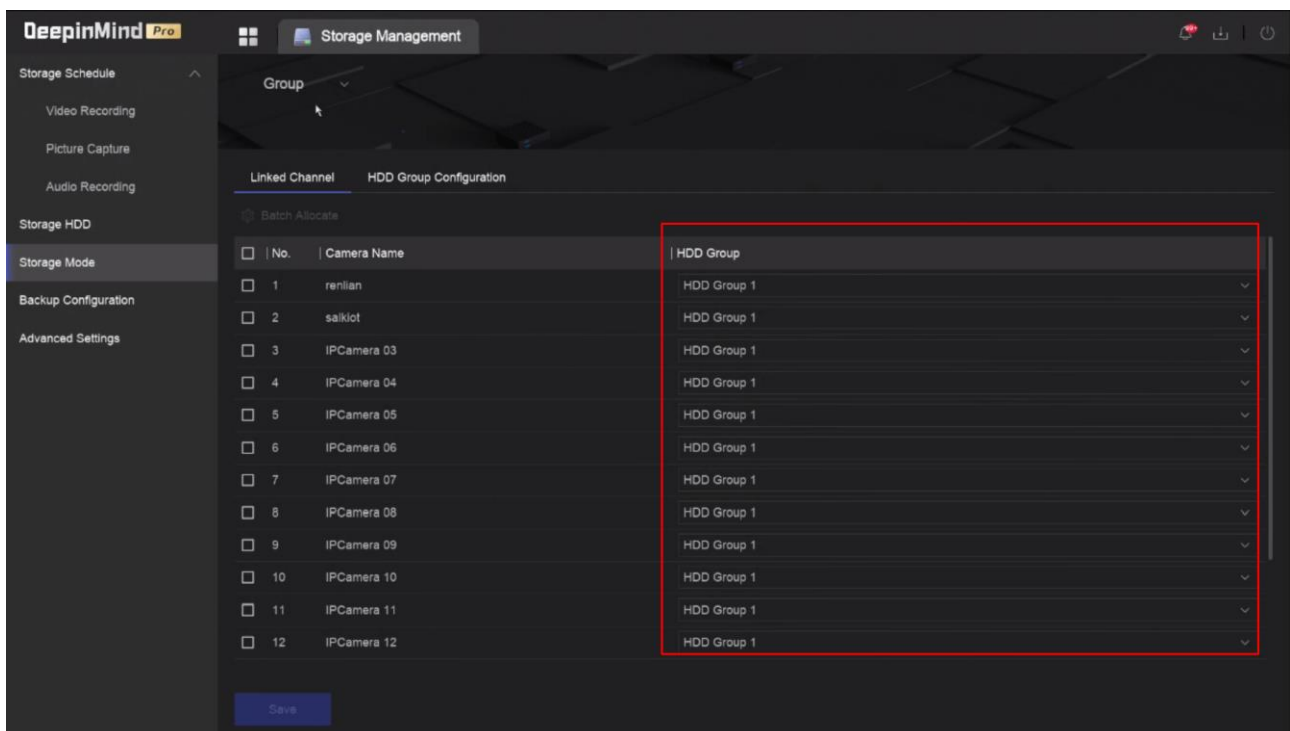


2) Configure Redundant Recording for channels

Go to **Storage Management->Video Recording**, select channel->**Advanced Settings**.

Title:	How to Configure Redundant Recording on NVR 5.0	Version:	v1.0	Date:	03/25/2025
Product:	Network Video Recorder			Page:	3 of 5

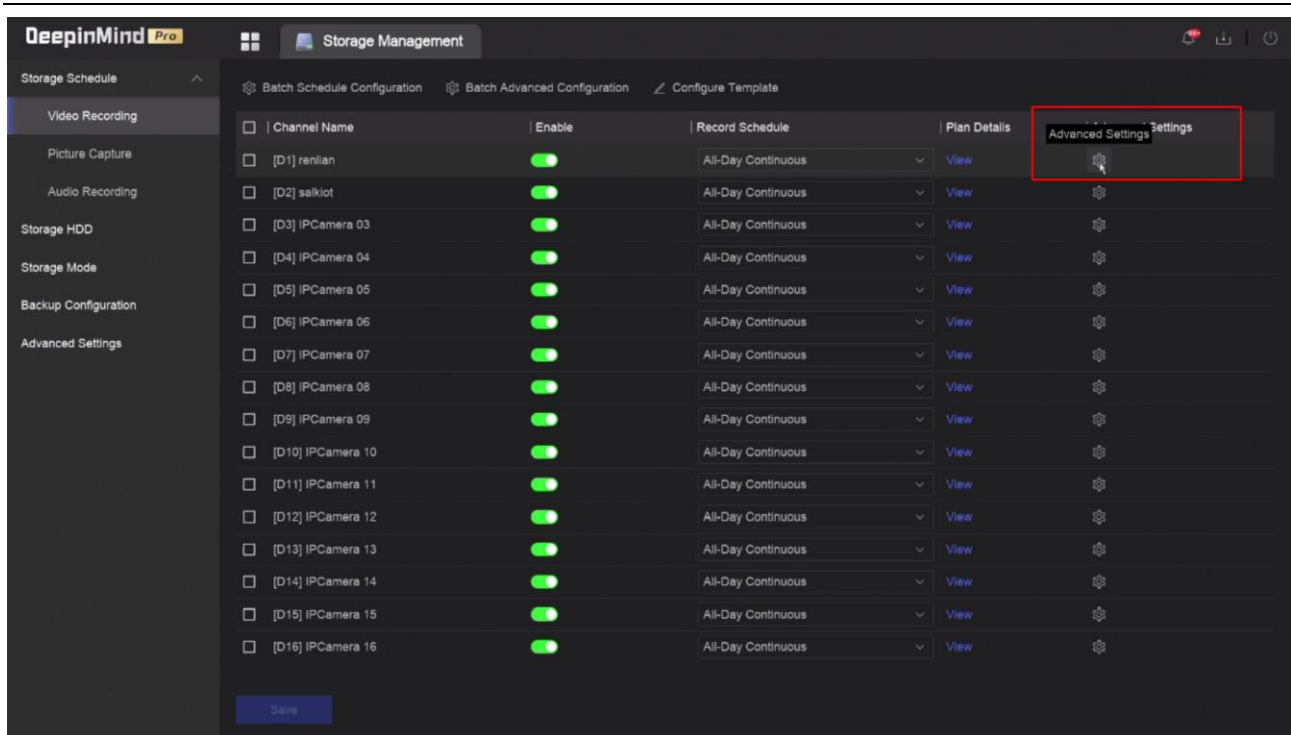


Configure **Redundant Recording** for this channel and save.

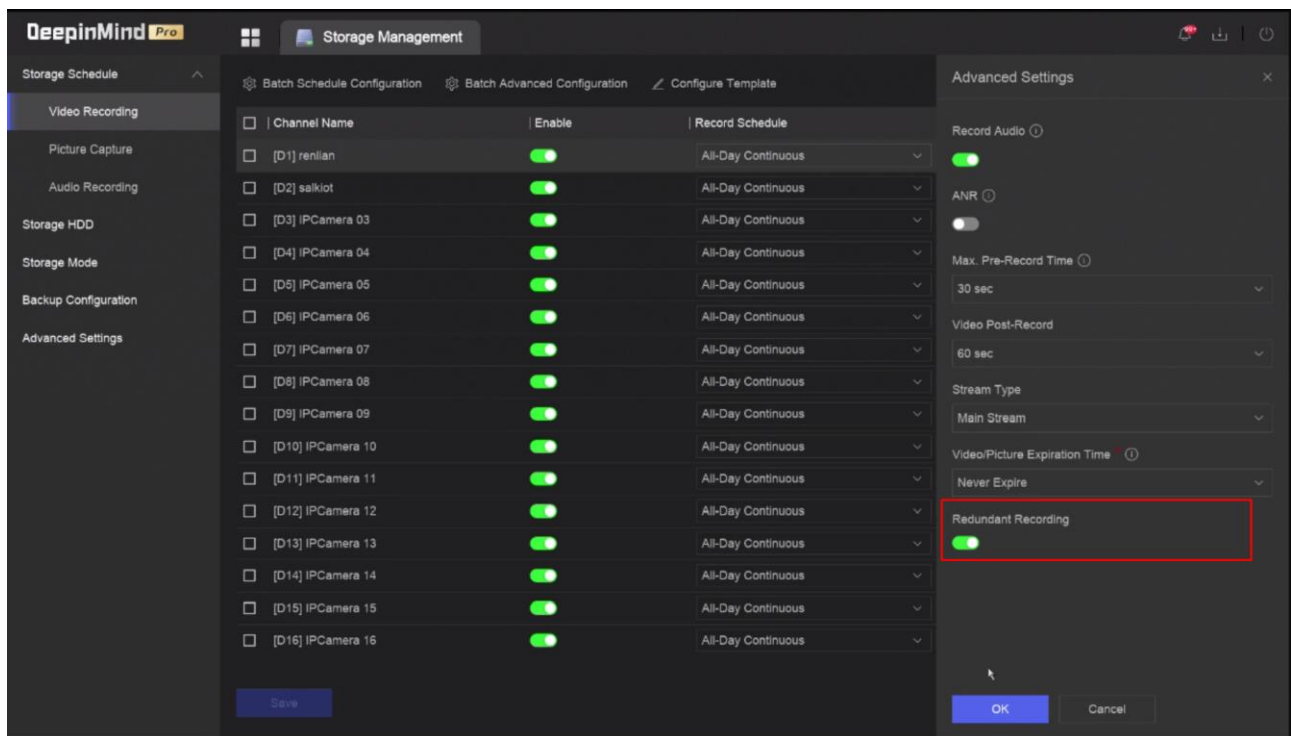

You can also batch configure the setting, select the channels and then click **Batch Advanced Configuration**, enable **Redundant Recording** and save, then all the channels will enable redundant recording.

Title:	How to Configure Redundant Recording on NVR 5.0	Version:	v1.0	Date:	03/25/2025
Product:	Network Video Recorder			Page:	4 of 5

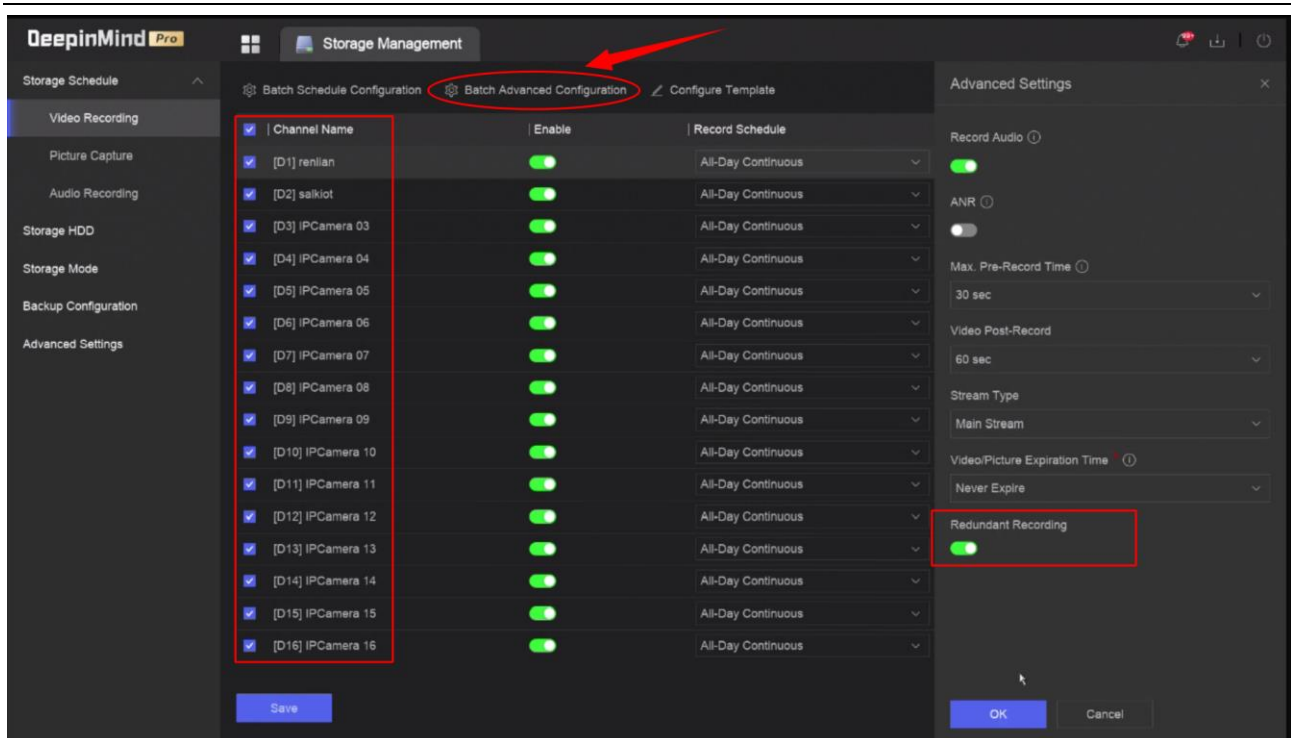


2. Configuration on Web 5.0

1) Configure Redundant HDD

Go to **Storage Management**->**Storage HDD** and set HDD2 to **Redundancy**, click **Operation** to save.


Note: web does not support storage mode configuration, before you configure redundant HDD on web, you need to make sure NVR is under Group storage mode first.

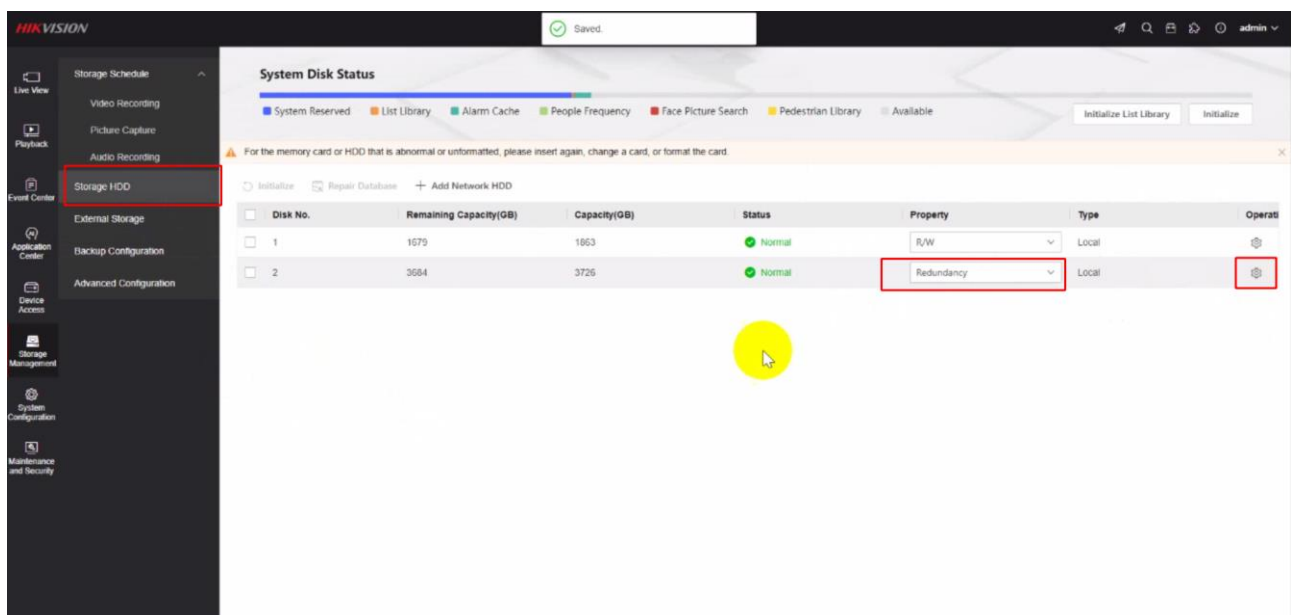


2) Configure Redundant Recording for channels

Title:	How to Configure Redundant Recording on NVR 5.0	Version:	v1.0	Date:	03/25/2025
Product:	Network Video Recorder			Page:	5 of 5

Go to **Video Recording** and select **Advanced Configuration**, enable **Redundant Recording** and save.

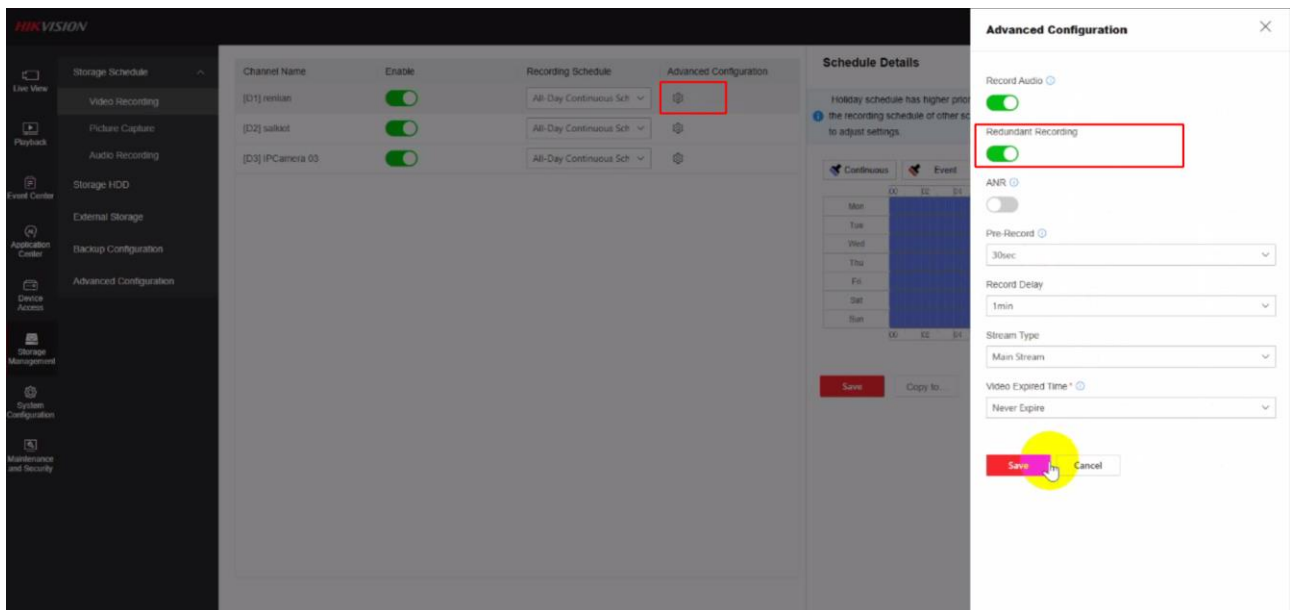

Note: NVR web does not support batch advanced configuration.

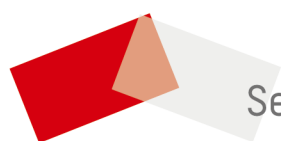

See Far, Go Further