



How to configure VCA of the NVR

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	1 of 3

Preparation


1. Deepinmind or Acusense NVR

How to configure VCA of the NVR

1. Video Struturalization


1) Configure Engine

Log in to the web, open “configuration”——“VCA configuration”——“Engine configuration”——select “video structuratiralization”

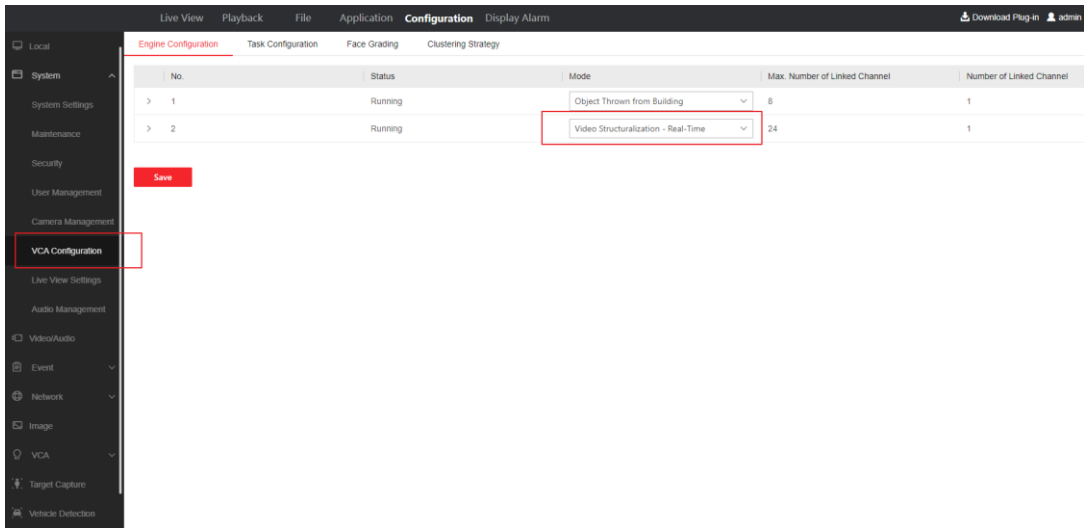


The local page is as follows:

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	2 of 3


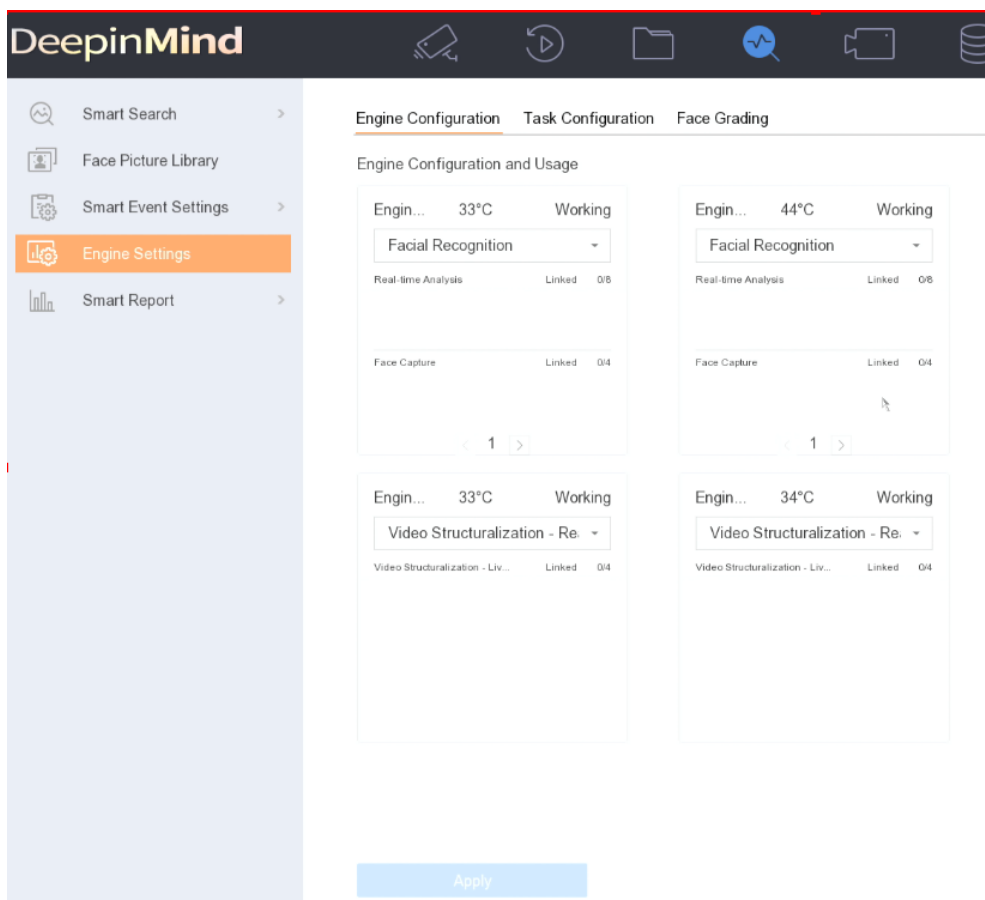


2) Configure Rule

Open “**Configuration**”——“**VCA**”——“**Multi-Target-Type Detection**”——select “**Enable AI by Device**”(It means using NVR's analytical ability), configure rule box, arming schedule and linkage method.

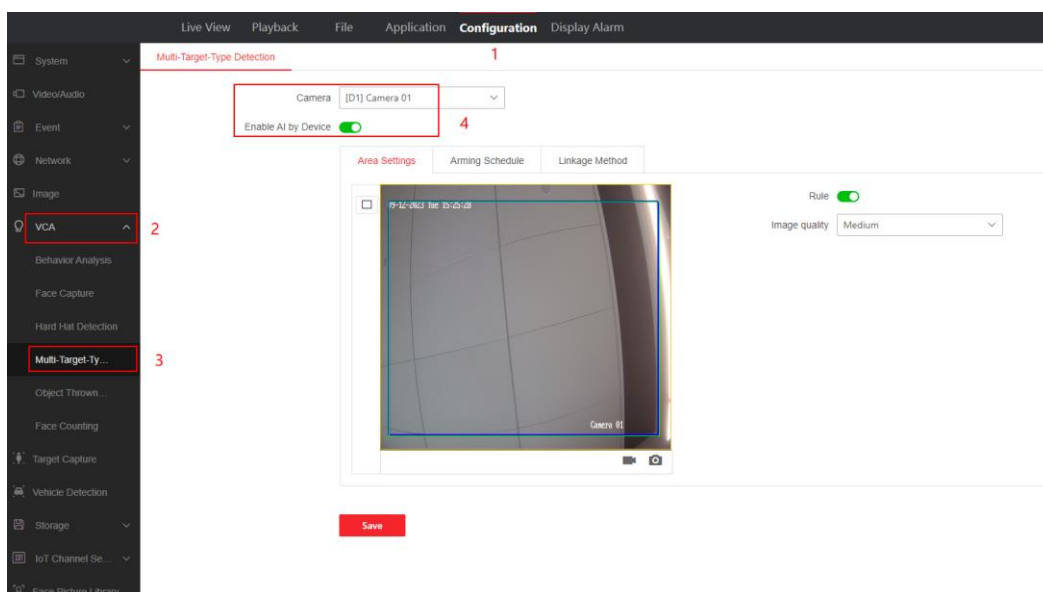


Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	3 of 3

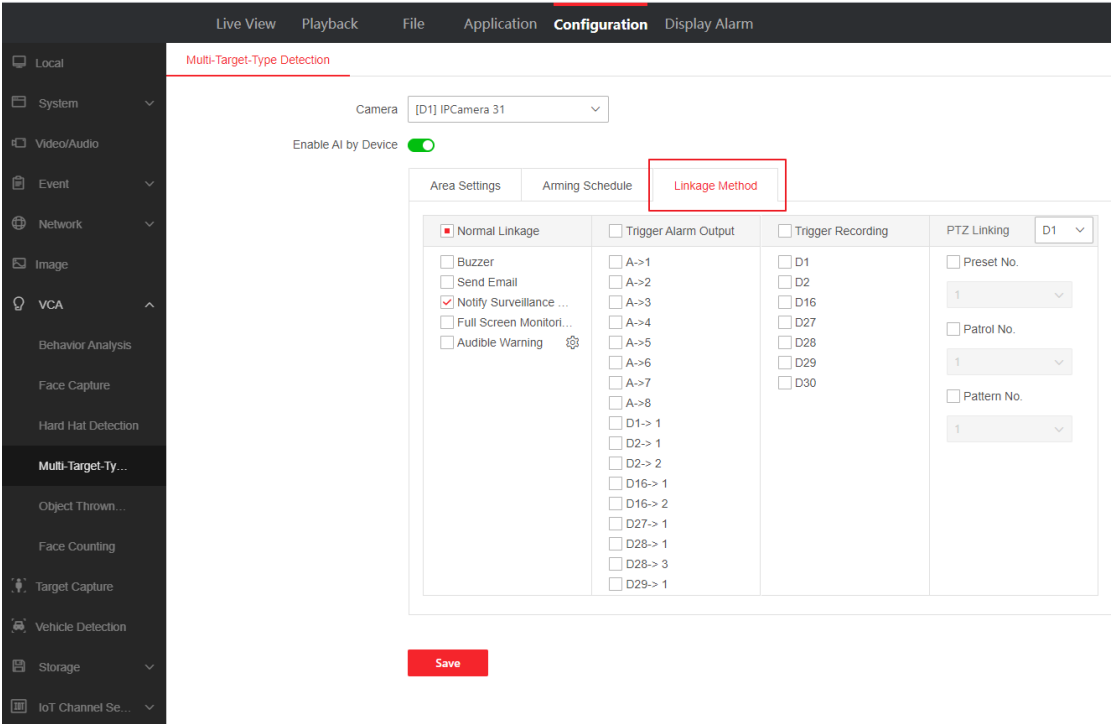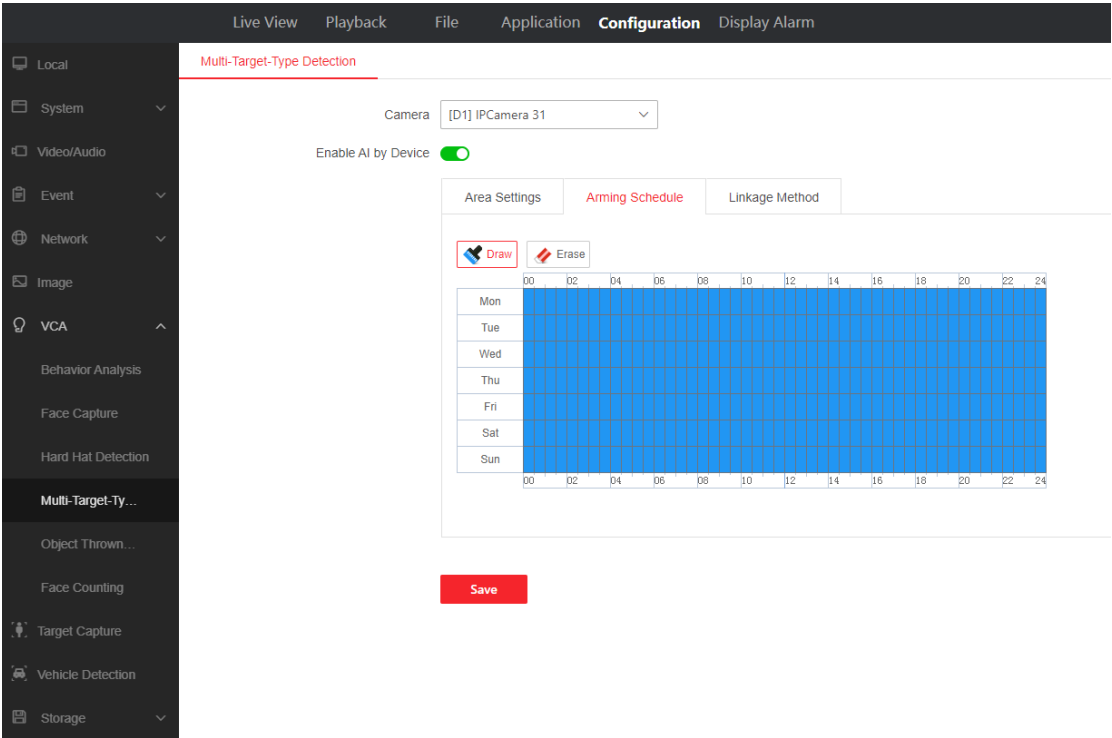

The local page is as follows:


Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	4 of 3

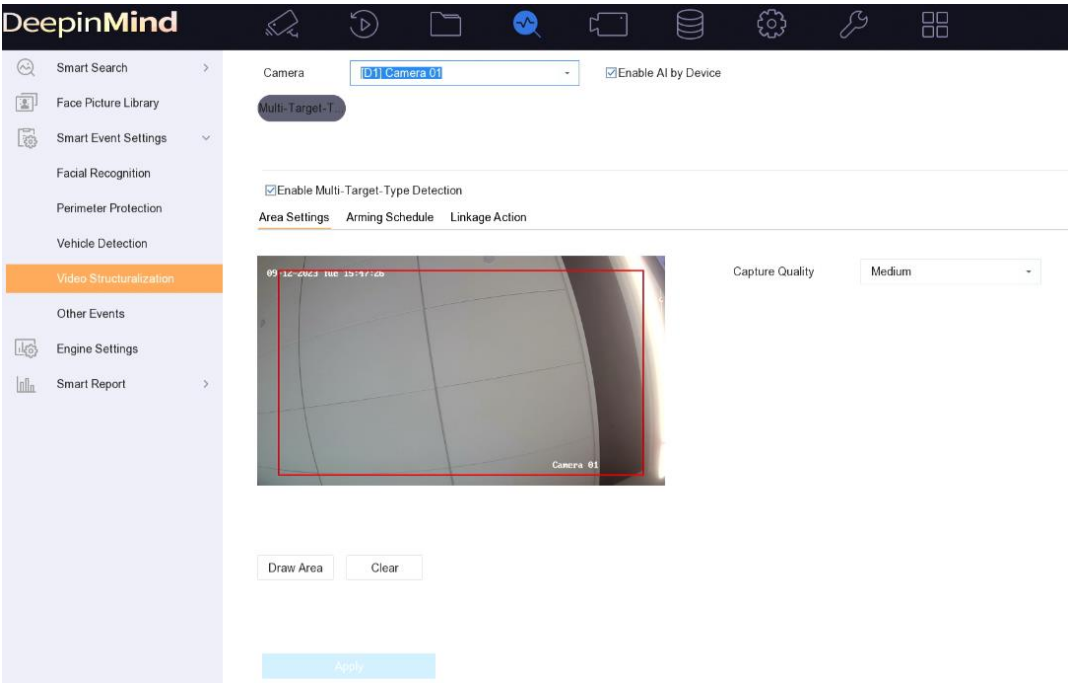



2. Face capture and recognition

1) Engine switch to face recognition


Open “Configuration”——“VCA”——“Face Capture”, Configure rule box, arming schedule and linkage method.

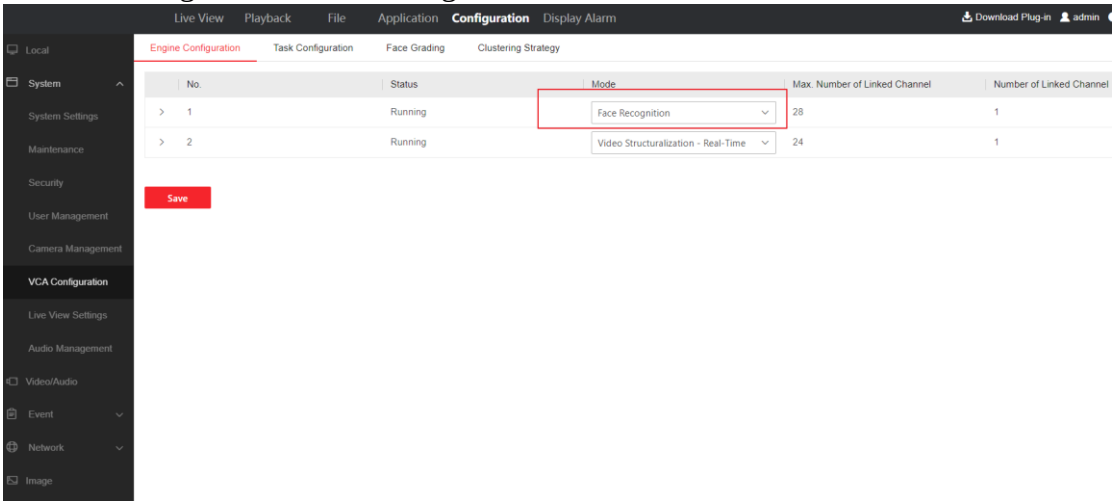

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	5 of 3

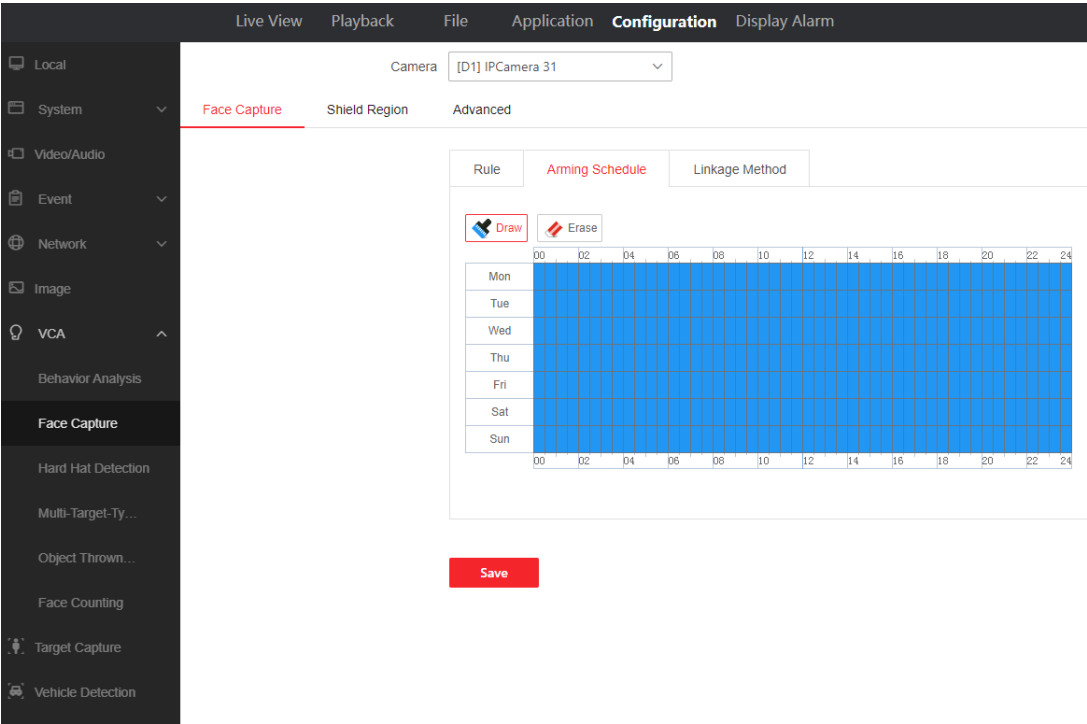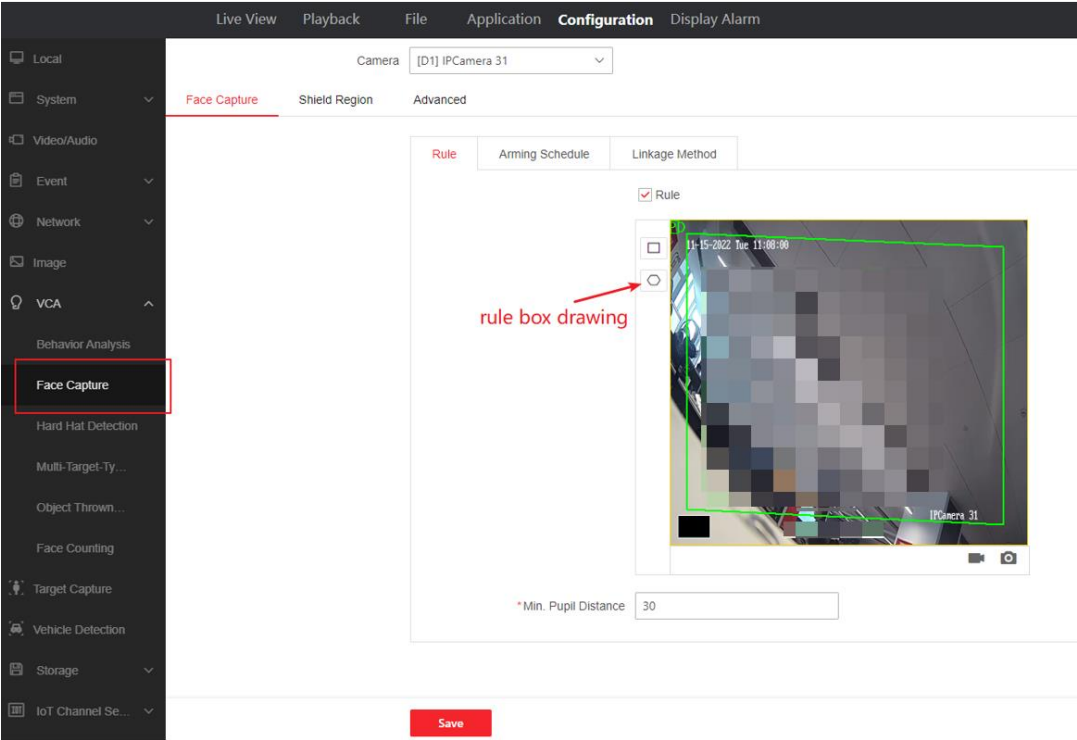


Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	6 of 3

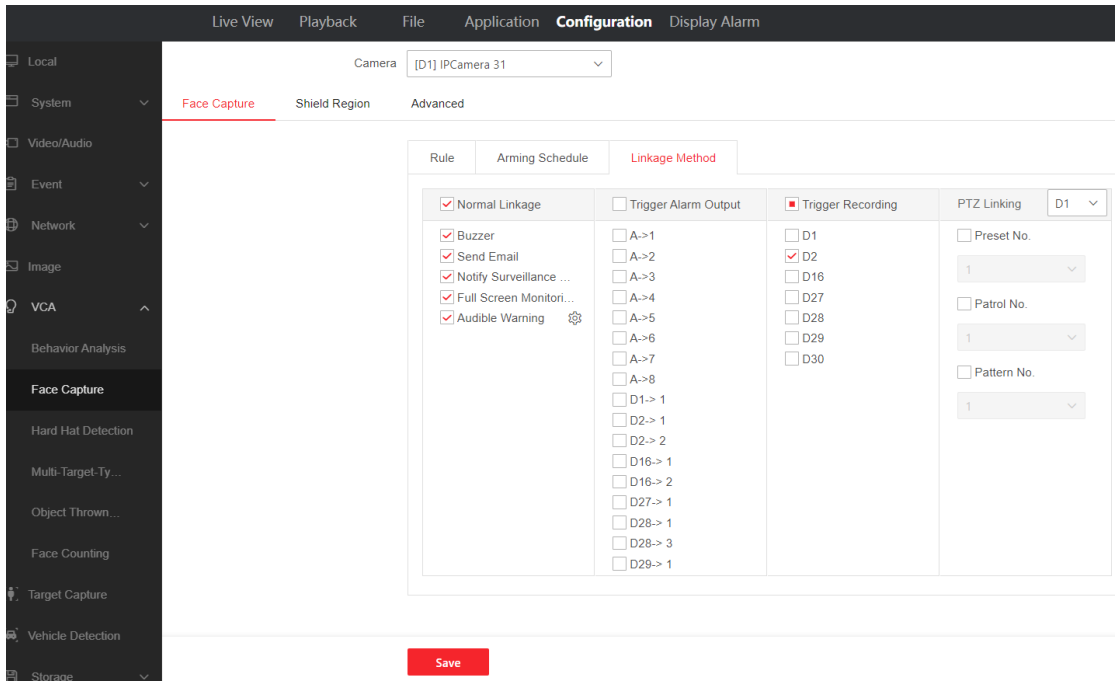


2) Configure Face Comparison

Compare and analyze the captured face picture and the picture in the face database to determine the similarity between the two pictures,


- a. Open “Configuration”—“face picture library”, configure face database and upload face pictures.

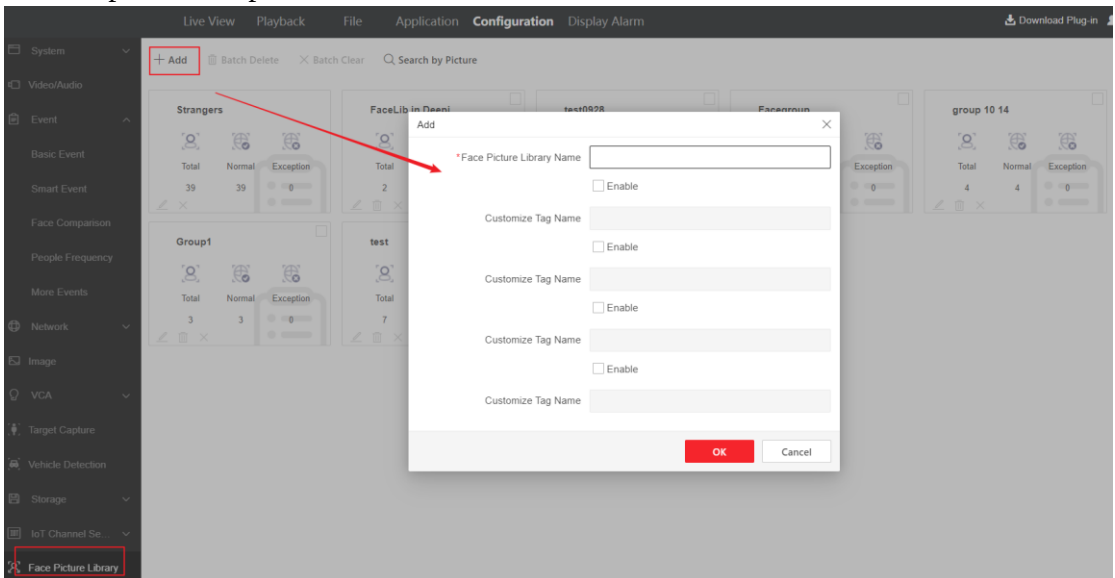

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	7 of 3

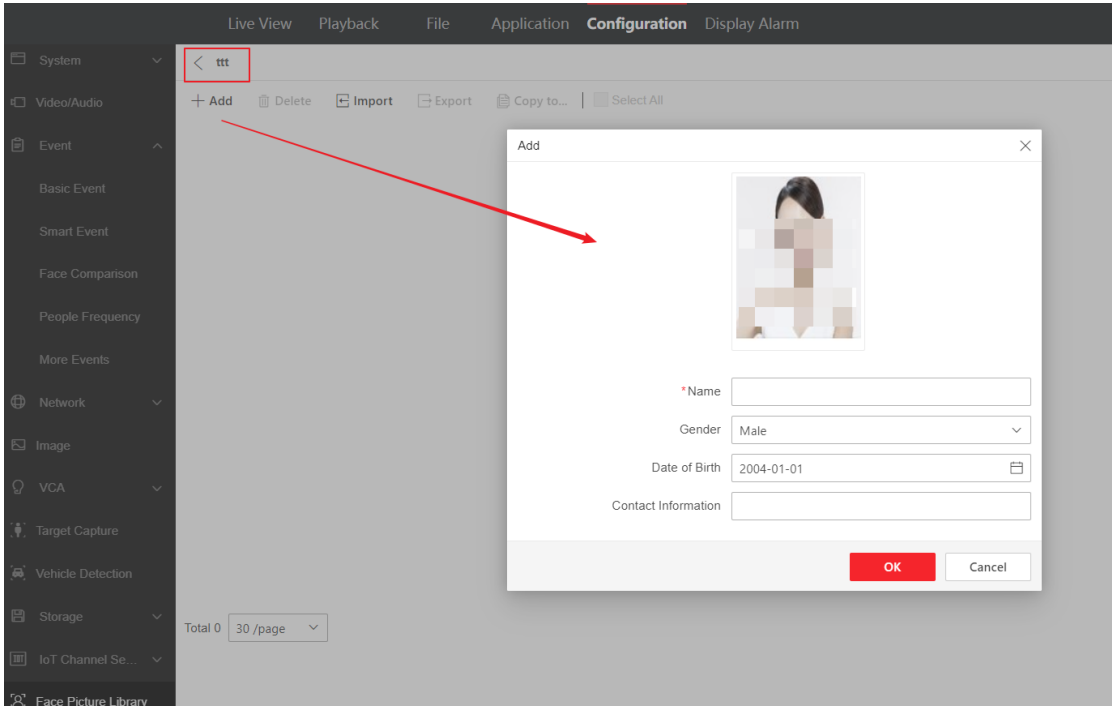

- b. Open “Configuration”——“Event”——“Face Comparison”, configure arming schedule, linkage method and linkage face database.
Note: Enable Non-Real-Time Face Comparison means that no comparison is made at present, and the comparison analysis will be made when the device engine resources are sufficient.

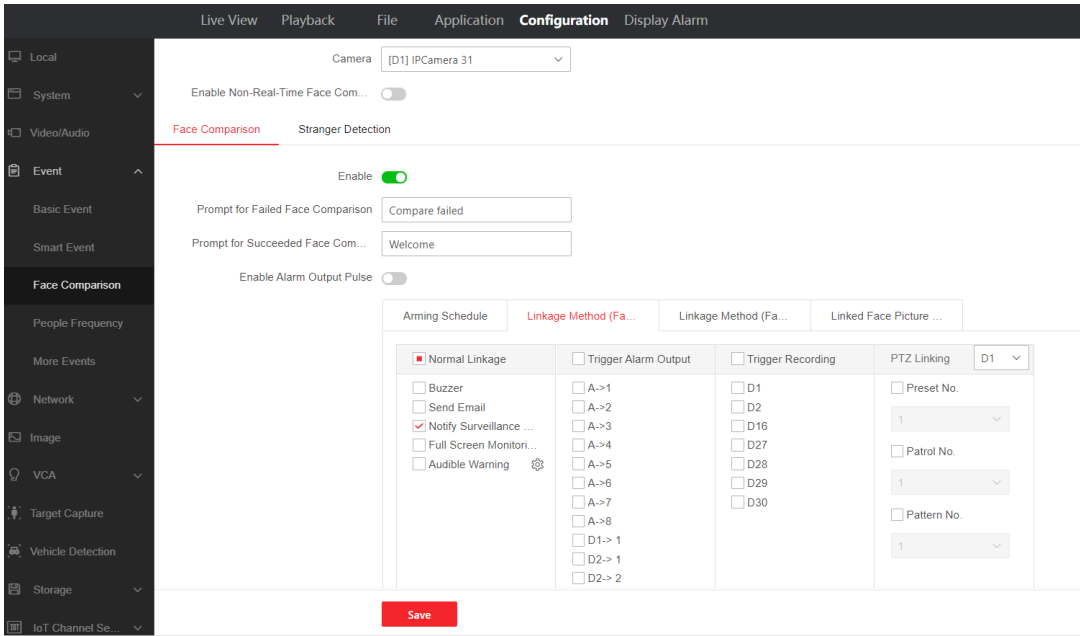

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	9 of 3

Frequently appear person, the device will automatically save the first stranger face snapshot of the stranger.

Notes:

a. Capture Interval: If someone appeared several times in the capture interval time, the NVR would only count that this person come once.

b. Frequency Threshold & Statistics Cycle: Frequency Threshold and Days trigger the alarm together. For example, if the same person appear 10 times during the latest 7 days, the alarm will be triggered.

c. Filter&alarm in face database: if the database is set to filter, the personnel in this database will not trigger frequency alarm.

The screenshot displays the 'Configuration' menu of an NVR interface. The 'Frequently Appeared Person' tab is selected, showing settings for enabling the feature and configuring capture interval, frequency threshold, and statistics cycle. A list of linked channels is shown with checkboxes for selection.

Configuration Menu: Live View, Playback, File, Application, **Configuration**, Display Alarm

Sub-menu: Frequently Appeared Person, Rarely Appeared Person

Enable: ☒

Capture Interval (minute(s)): 1

Frequency Threshold(≥Time): 2

Statistics Cycle(Day(s)): 1

Linked Channel:


- ☒ Select All
- ☐ IPCamera 31
- ☐ H7 Camera
- ☒ 7777
- ☒ IPCamera 01
- ☒ IPdome 01
- ☐ 111
- ☐ Camera 01

Buttons: Save

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	11 of 3

3. Perimeter protection configuration


Switch engine to primeter protection

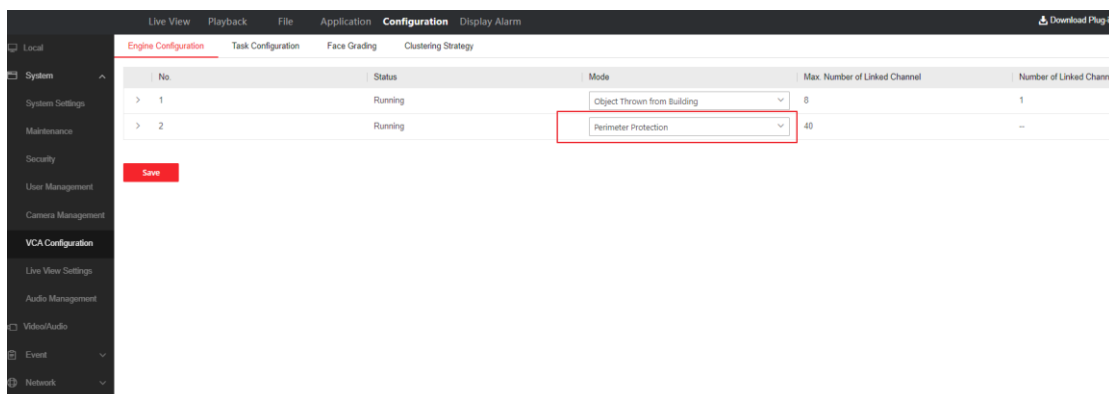


Open “Configuration”——“event”——“smart event”

1) Intrusion Detection

Enable “Enable AI by device” and “Enable intrusion detection”, configure the rule box and the maximum and minimum detection boxes (used to detect the target larger than the minimum box and smaller than the maximum box), and check the person and vehicle to filter out the non-person and vehicle alarms.

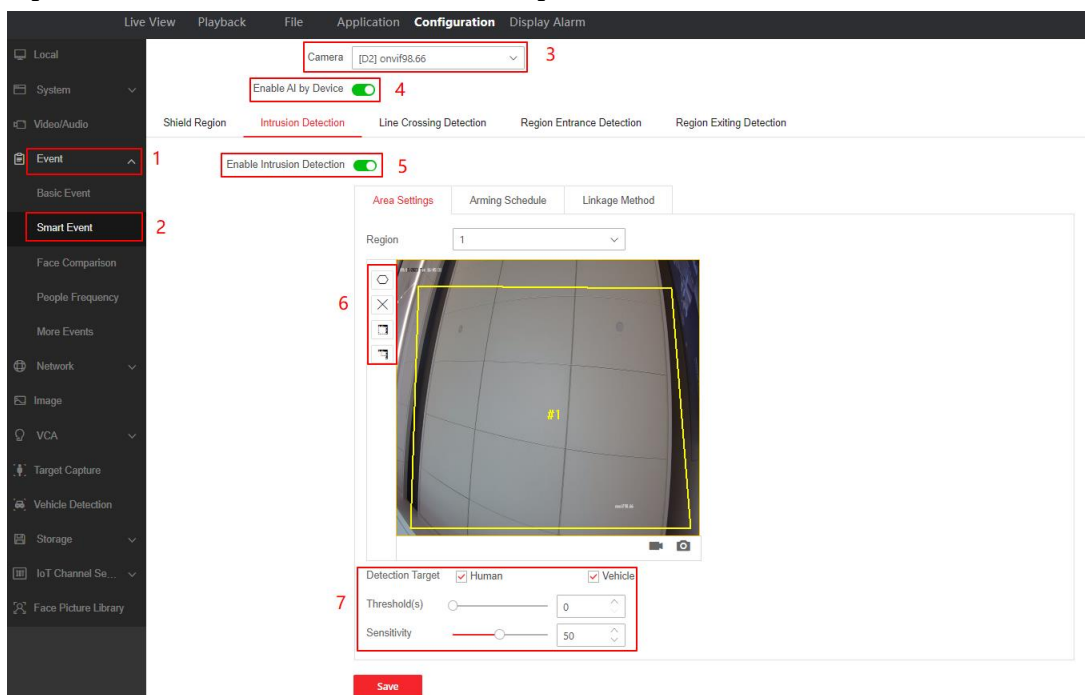


Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	12 of 3

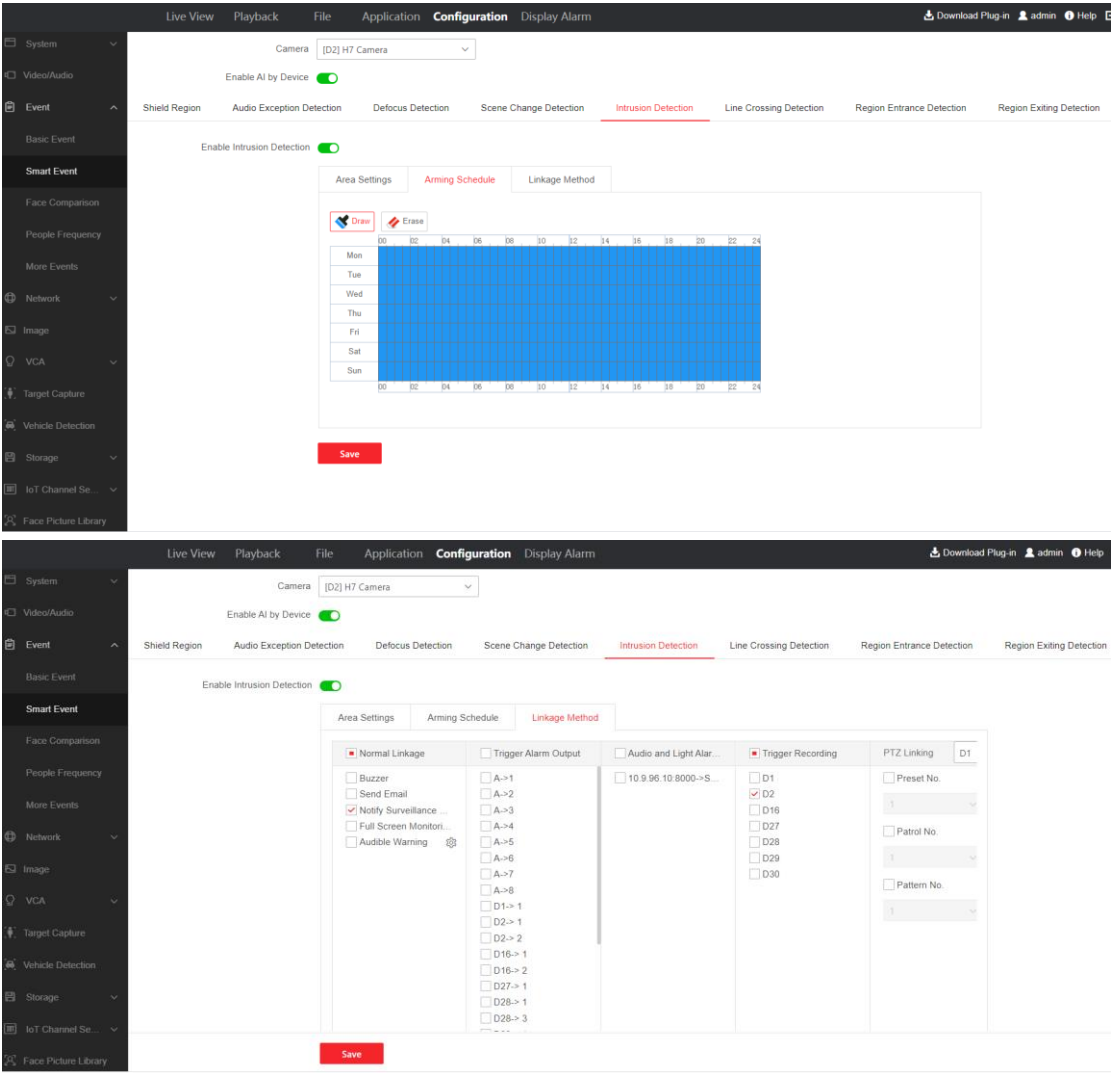

2) Line Crossing Detection


When crossing a regular line, an alarm will be triggered, and the direction of crossing the line can be set. The specific configuration is the same as above (intrusion detection).

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	13 of 3

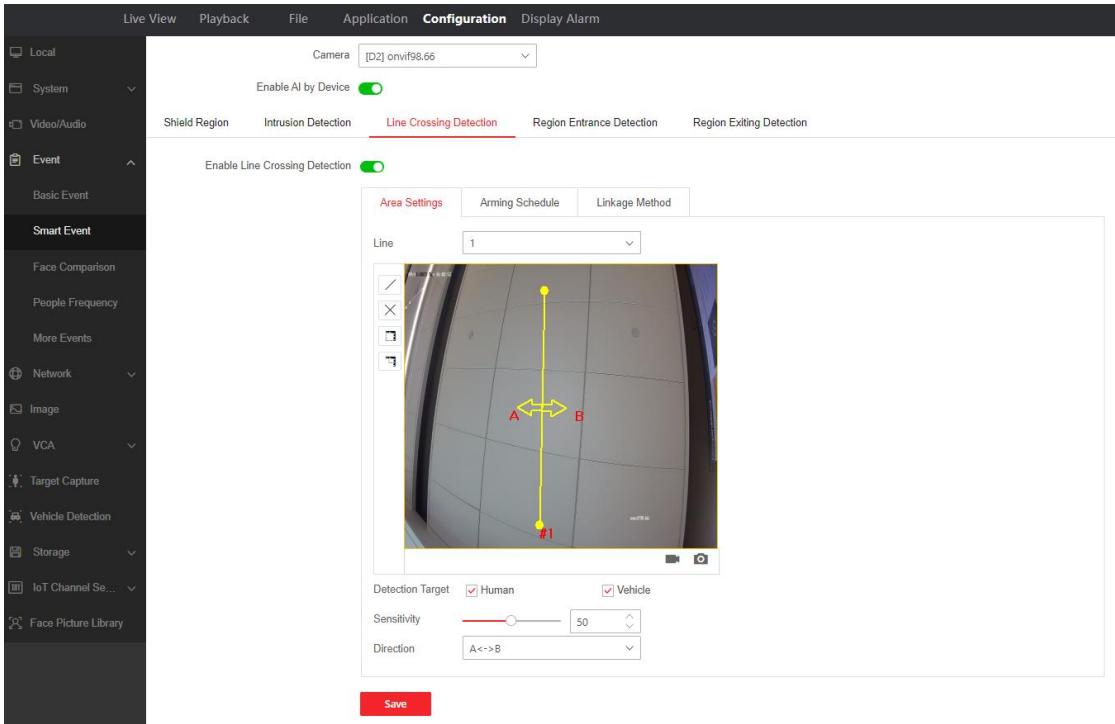

3) Region Entrance Detection

The alarm will only be triggered when entering the rule box from outside the rule box. Refer to intrusion detection the specific configuration.

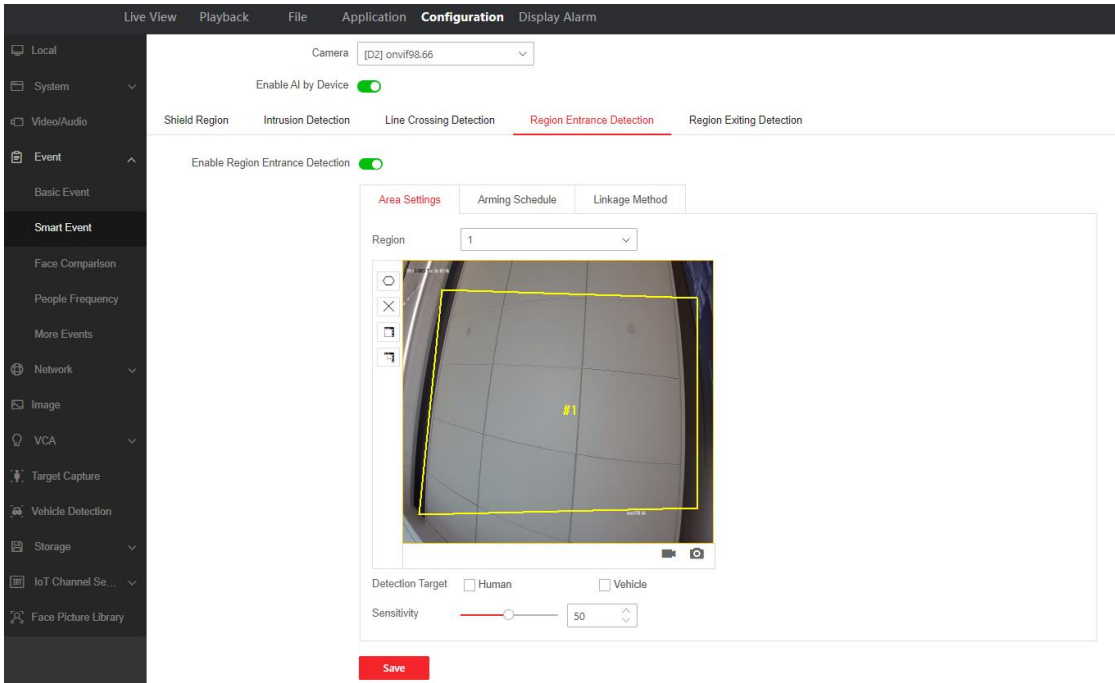



4) Region Exiting Detection

The alarm will be only triggered when you leave the rule box from the rule box.

Title:	How to configure VCA of the NVR	Version:	v1.0	Date:	11/09/2023
Product:	NVR			Page:	14 of 3

Refer to intrusion detection for specific configuration.

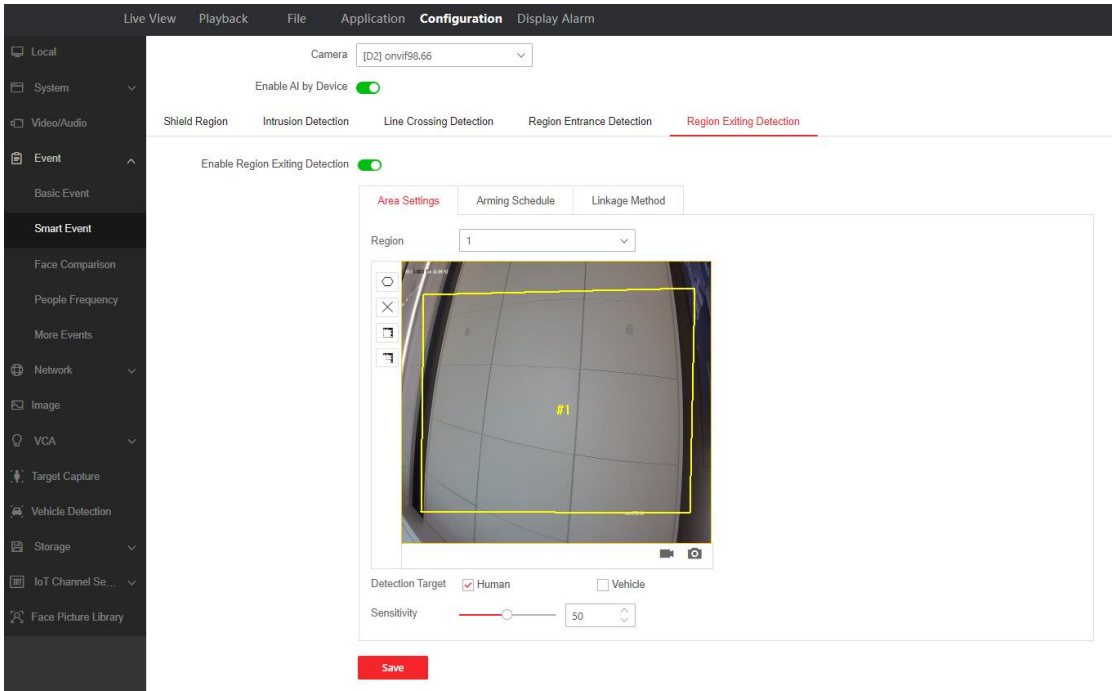

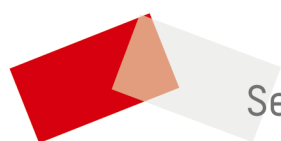

See Far, Go Further