



How to use the HDD Clone function on NVR5.0

Title:	How to use the HDD Clone function NVR5.0	Version:	v1.0	Date:	2026/3/20
Product:	NVR			Page:	1 of 4

How to use the HDD Clone function on NVR5.0

Description

This article shows how to use the HDD Clone function on NVR5.0, the HDD Clone function can be used to back up the hard disk data of the NVR.

Preparation

One eSATA cable, one HDD power cable and one clone HDD.

Note:


- 1) eSATA HDD capacity must be same with the HDD on NVR you want to clone;
- 2) You can use the special power supply tool for HDD to power the eSATA HDD, or use the power cable on the NVR motherboard to power the eSATA HDD.




Operation

1. Please use the eSATA cable to connect the clone HDD to the eSATA port on the rear panel of the NVR and use the HDD power cable to power the eSATA HDD;

Title:	How to use the HDD Clone function NVR5.0	Version:	v1.0	Date:	2026/3/20
Product:	NVR			Page:	2 of 4

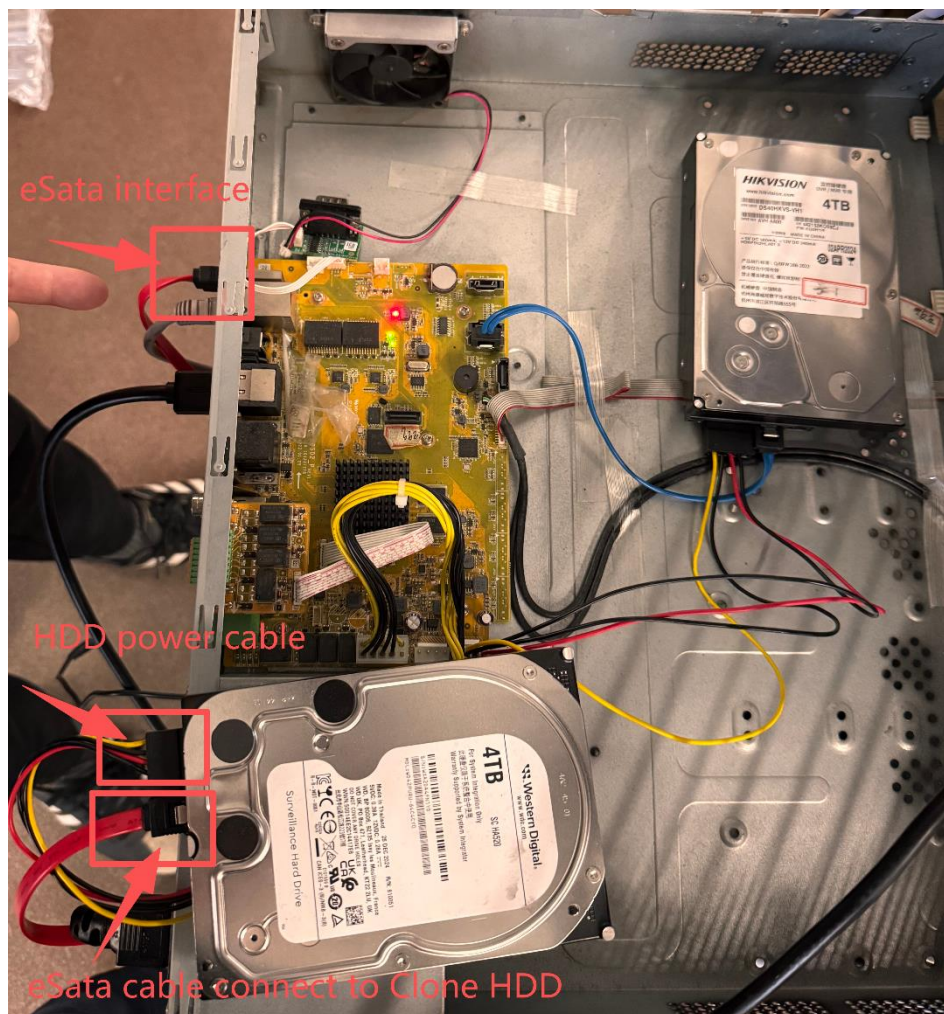


2. Login to local GUI, go to **Storage Management --- Advanced Settings** to change eSATA usage type to be **Backup**, and click **Save**;

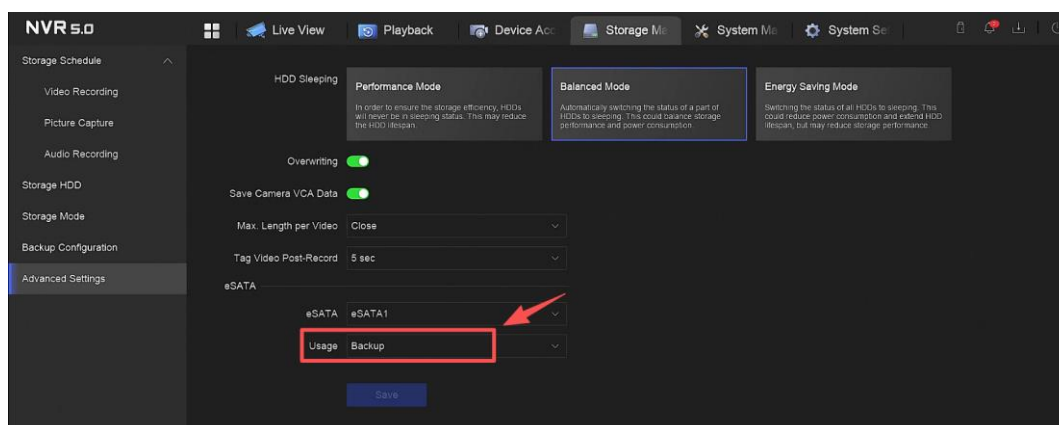

3. Then go to **System Maintenance --- Maintenance Tool --- HDD Clone**, choose the HDD you want to clone, set the **Clone Destination** to the correct eSATA interface, click **Start Clone** to do backup;

Note: The clone operation will stop the record task, lasting about 27 hours, we suggest customer to schedule the clone time before start.

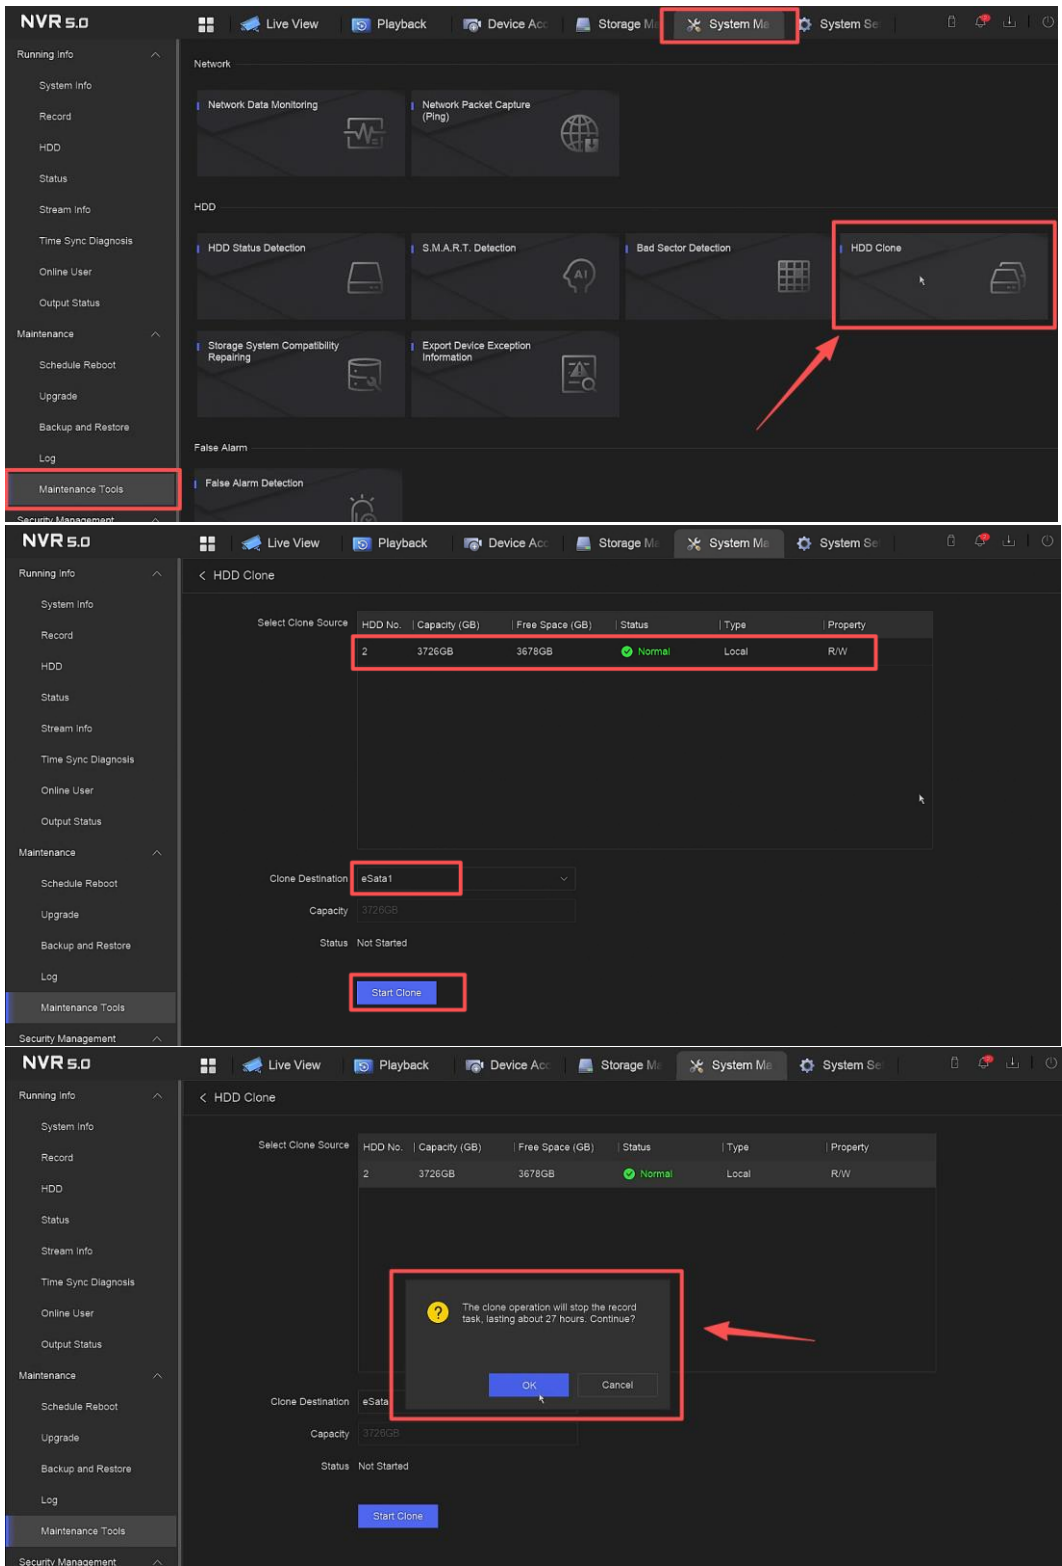

4. It takes a long time to complete the HDD Clone, you can refer to the percentage of the status to know the cloning progress.

