



How to Use Video Intercom Service on Hik-Connect for Teams

Contents

Chapter 1 How to Use Video Intercom Service on Hik-Connect for Teams1

1.1 Check Compatibility List 1

1.2 Configuration Flow 1

1.3 Service Related Configurations 6

1.4 Related Applications 11

1.5 Self-Service Features (Mobile Client) for Residents..... 14

Chapter 1 How to Use Video Intercom Service on Hik-Connect for Teams

1.1 Check Compatibility List

Before adding the corresponding device, you need to check the compatibility list. You can get the device compatibility list from the Help Center of the Hik-Connect for Teams Portal.

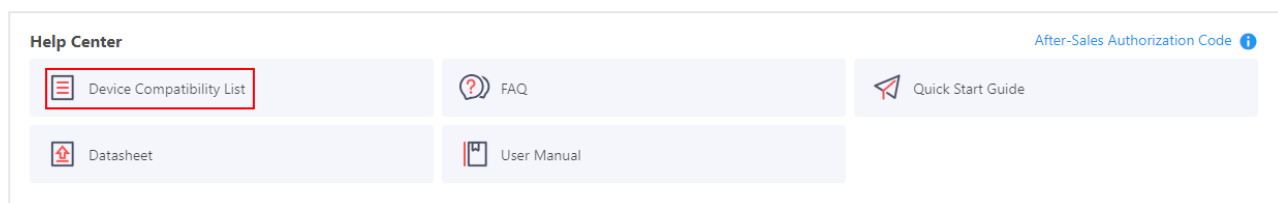


Figure 1-1 Check Compatibility List

Note

- If the firmware version of your device is lower than that listed in the document, a version upgrade is required, otherwise some of the functions may not be supported.
 - Devices NOT listed in the document may also be added to Hik-Connect for Teams, but if added, some of the Hik-Connect for Teams functions may be inaccessible. The service is available only when devices are added via Hik-Connect (P2P).
-

1.2 Configuration Flow

Steps

1. Configure local parameters for video intercom devices.
 - 1) Fill in the IP address in the browser address bar to enter the device configuration page.
 - 2) Go to **Configuration** → **Network** → **Advanced** → **Platform Access**.
 - 3) Set parameters as shown in the picture below.
-

Note

- Do not edit the default server address. The default server address is "litedev.hik-connect.com".
 - Make sure the Register Status is **Online**.
-

How to Use Video Intercom Service on Hik-Connect for Teams

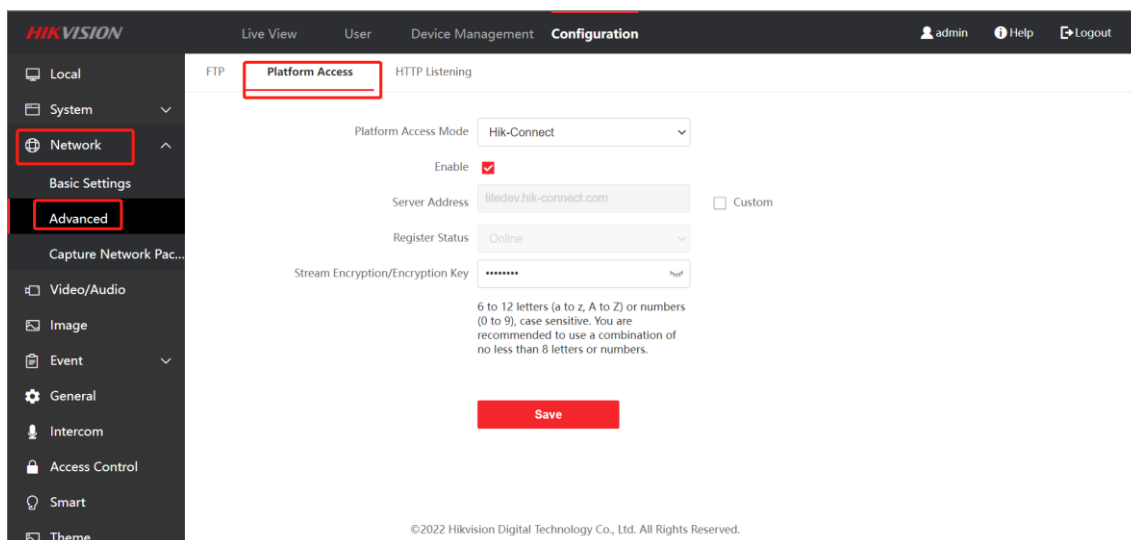


Figure 1-2 Set Device Parameters

2. Add devices to your Hik-Connect for Teams system.



Note

For the first-time login to the device, you need to activate the device. No operations are allowed before activation.

1) Go to **Device** → **Device** → **Video Intercom Device** and click **Add**.

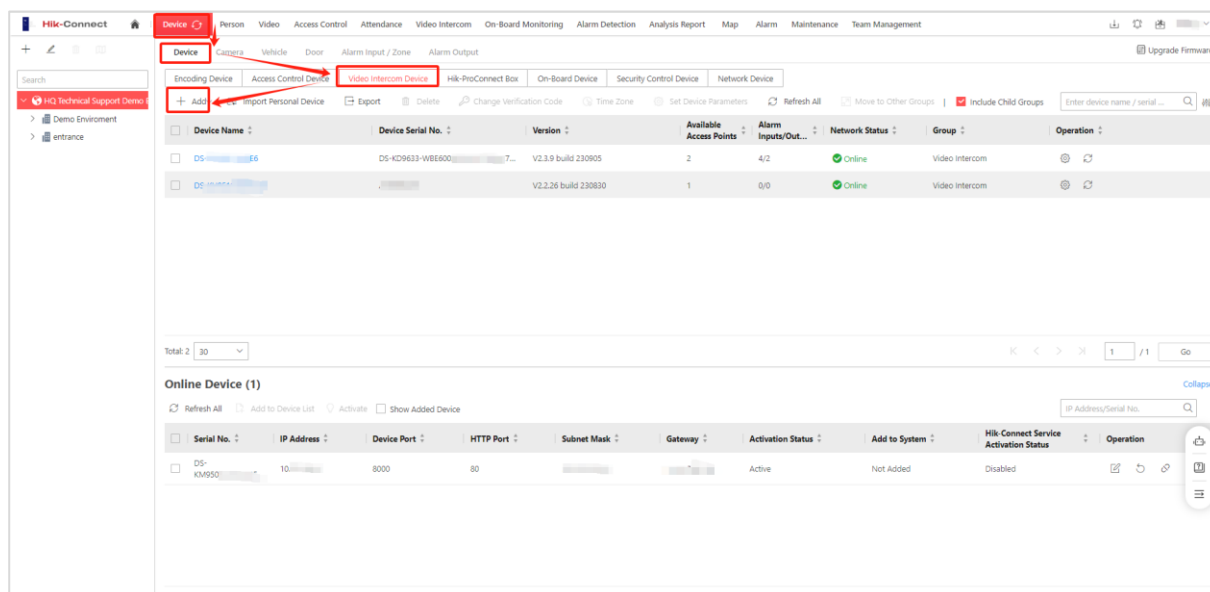


Figure 1-3 Add Device on Device Page

2) Find the serial No. of the device in one of the following ways.

- Open the web page of the device and go to **Configuration** → **System** → **System Settings** → **Basic Information**. Usually, the serial No. is the last 8 digits plus the previous letter or the last 9 digits of the character string displayed in the **Serial No.** field.

How to Use Video Intercom Service on Hik-Connect for Teams

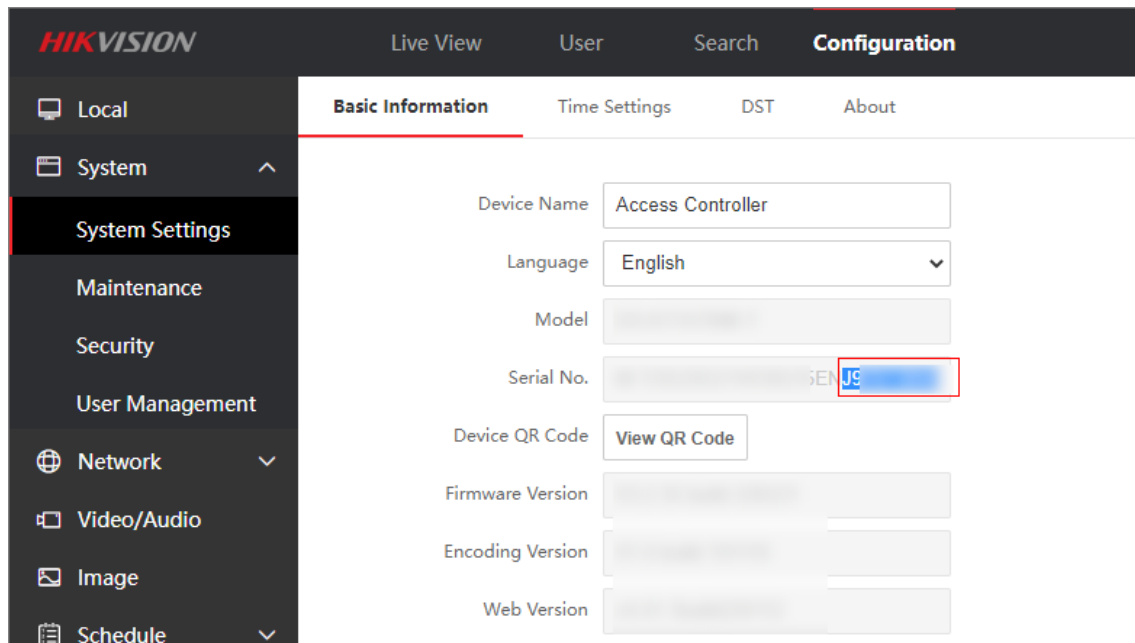


Figure 1-4 Find Serial No. on Device Web Page

- Check the label on the device itself or on its packaging. The serial No. is the string of 9 characters (letters/digits) that follows "SN".



Figure 1-5 Find Serial No. on Device Label



Figure 1-6 Find Serial No. on Device Packaging

- 3) Enter the device serial No. and device verification code, and set the device name, time zone and area.

A screenshot of the 'Add Device' form in the Hik-Connect for Teams interface. The form is titled 'Add Device' with a back arrow icon. It contains several input fields: '*Device Serial No.', '*Device Verification Code', '*Device Name', 'User Name', and 'Password' (with a lock icon and a toggle for visibility). Below these is a 'Time Zone' section with a dropdown menu labeled 'Time Zone of Device' showing '(UTC+08:00) Beijing, Chongqing, Hong Kong, Urumqi'. At the bottom, there are three buttons: 'Add' (highlighted in red), 'Add and Continue' (highlighted in red), and 'Cancel'.

Figure 1-7 Enter Device Information

- 4) Click **Add** to add the device to your Hik-Connect for Teams system.

Area Information

*Area ☐ Create Area by Device Name
☒ Existing Area

>

Area 1

Area 2

Area 3

Area 4

Area 5

Area 6

Area 7

Area 8

Area 9

Area 10

Area 11

Area 12

Area 13

Area 14

Area 15

Area 16

Area 17

Area 18

Area 19

Area 20

Area 21

Area 22

Area 23

Area 24

Area 25

Area 26

Area 27

Area 28

Area 29

Area 30

Area 31

Area 32

Area 33

Area 34

Area 35

Area 36

Area 37

Area 38

Area 39

Area 40

Area 41

Area 42

Area 43

Area 44

Area 45

Area 46

Area 47

Area 48

Area 49

Area 50

Area 51

Area 52

Area 53

Area 54

Area 55

Area 56

Area 57

Area 58

Area 59

Area 60

Area 61

Area 62

Area 63

Area 64

Area 65

Area 66

Area 67

Area 68

Area 69

Area 70

Area 71

Area 72

Area 73

Area 74

Area 75

Area 76

Area 77

Area 78

Area 79

Area 80

Area 81

Area 82

Area 83

Area 84

Area 85

Area 86

Area 87

Area 88

Area 89

Area 90

Area 91

Area 92

Area 93

Area 94

Area 95

Area 96

Area 97

Area 98

Area 99

Area 100

Area 101

Area 102

Area 103

Area 104

Area 105

Area 106

Area 107

Area 108

Area 109

Area 110

Area 111

Area 112

Area 113

Area 114

Area 115

Area 116

Area 117

Area 118

Area 119

Area 120

Area 121

Area 122

Area 123

Area 124

Area 125

Area 126

Area 127

Area 128

Area 129

Area 130

Area 131

Area 132

Area 133

Area 134

Area 135

Area 136

Area 137

Area 138

Area 139

Area 140

Area 141

Area 142

Area 143

Area 144

Area 145

Area 146

Area 147

Area 148

Area 149

Area 150

Area 151

Area 152

Area 153

Area 154

Area 155

Area 156

Area 157

Area 158

Area 159

Area 160

Area 161

Area 162

Area 163

Area 164

Area 165

Area 166

Area 167

Area 168

Area 169

Area 170

Area 171

Area 172

Area 173

Area 174

Area 175

Area 176

Area 177

Area 178

Area 179

Area 180

Area 181

Area 182

Area 183

Area 184

Area 185

Area 186

Area 187

Area 188

Area 189

Area 190

Area 191

Area 192

Area 193

Area 194

Area 195

Area 196

Area 197

Area 198

Area 199

Area 200

Area 201

Area 202

Area 203

Area 204

Area 205

Area 206

Area 207

Area 208

Area 209

Area 210

Area 211

Area 212

Area 213

Area 214

Area 215

Area 216

Area 217

Area 218

Area 219

Area 220

Area 221

Area 222

Area 223

Area 224

Area 225

Area 226

Area 227

Area 228

Area 229

Area 230

Area 231

Area 232

Area 233

Area 234

Area 235

Area 236

Area 237

Area 238

Area 239

Area 240

Area 241

Area 242

Area 243

Area 244

Area 245

Area 246

Area 247

Area 248

Area 249

Area 250

Area 251

Area 252

Area 253

Area 254

Area 255

Area 256

Area 257

Area 258

Area 259

Area 260

Area 261

Area 262

Area 263

Area 264

Area 265

Area 266

Area 267

Area 268

Area 269

Area 270

Area 271

Area 272

Area 273

Area 274

Area 275

Area 276

Area 277

Area 278

Area 279

Area 280

Area 281

Area 282

Area 283

Area 284

Area 285

Area 286

Area 287

Area 288

Area 289

Area 290

Area 291

Area 292

Area 293

Area 294

Area 29

Figure 1-8 Add Device to Hik-Connect for Teams System

Hik-Connect | **Device** | Person | Video | Access Control | Attendance | Video Intercom | On-Board Monitoring | Alarm Detection | Analysis Report | Map | Alarm | Maintenance | Team Management

Device | Camera | Vehicle | Door | Alarm Input / Zone | Alarm Output

Encoding Device | Access Control Device | **Video Intercom Device** | Hik-ProConnect Box | On-Board Device | Security Control Device | Network Device

+ Add | Import Personal Device | Export | Delete | Change Verification Code | Time Zone | Set Device Parameters | Refresh All | Move to Other Groups | Include Child Groups | Enter device name / serial ...

Device Name	Device Serial No.	Version	Available Access Points	Alarm Inputs/Out...	Network Status	Group	Operation
 DS-KZ9633-WE	DS-KZ9633-WE	V2.3.9 build 230905	2	4/2	Online	Video Intercom	 
 DS-KH951N	DS-KH951N	V2.2.6 build 230830	1	0/0	Online	Video Intercom	 

Figure 1-9 Video Intercom Device List

5) Optional: If you are in the same LAN with the device, you can add it directly (if it is online) to your Hik-Connect for Teams system by clicking **Add to Device List**, setting the time zone, password, and verification code, and testing the compatibility.

Hik-Connect

Device

Person

Video

Access Control

Attendance

Video Intercom

On-Board Monitoring

Alarm Detection

Analysis Report

Map

Alarm

Maintenance

Team Management

hikfy

Upgrade Firmware

Device

Camera

Vehicle

Door

Alarm Input / Zone

Alarm Output

Encoding Device

Access Control Device

Video Intercom Device

Hik-ProConnect Box

On-Board Device

Security Control Device

Network Device

+ Add

+ Import Personal Device

Export

Delete

Change Verification Code

Time Zone

Set Device Parameters

Refresh All

Move to Other Groups

Include Child Groups

Enter device name / serial...

Device Name	Device Serial No.	Version	Available Access Points	Alarm Inputs/Out...	Network Status	Group	Operation
☐ DS-K29633-WBE6	DS-K29633-WBE6X0020231217ENAX7...	V2.3.9 build 230905	2	4/2	Online	Video Intercom	
☐ DS-KH9510-WTE1	AV3085220	V2.2.26 build 230830	1	0/0	Online	Video Intercom	

Total: 2

30

1 / 1

Go

Online Device (1)

Refresh All

Add to Device List

Activate

Show Added Device

IP Address/Serial No.

Serial No.	IP Address	Device Port	HTTP Port	Subnet Mask	Gateway	Activation Status	Add to System	Hik Connect Service Activation Status	Operation
☐ DS-KH950332	192.168.1.61	8000	80	255.255.255.0	192.168.1.24	Active	Not Added	Disabled	

Figure 1-10 Add Detected Online Device

1.3 Service Related Configurations

After you add video intercom devices, to use features such as viewing call history and creating temporary passes, you need to add buildings, rooms, and residents first.

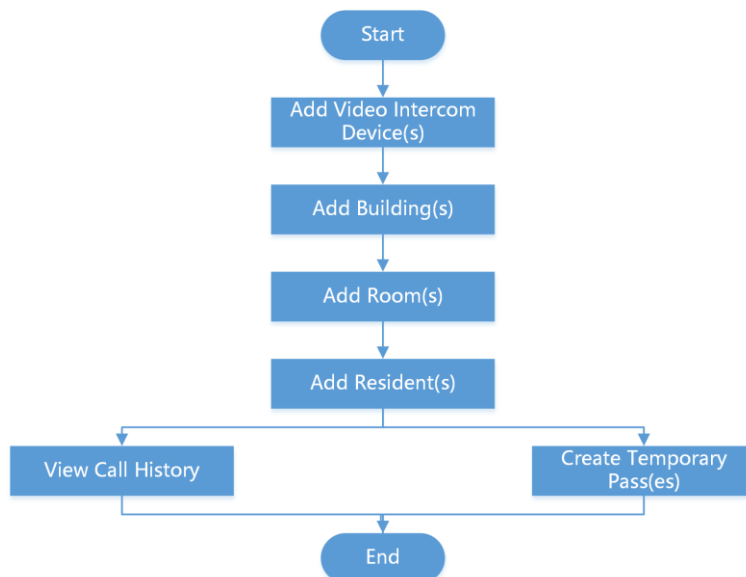


Figure 1-11 Flow Chart of Video Intercom Management

- Add Building and Room
- Add Resident

Add Building and Room

1. Go to **Video Intercom** → **Building** and click **Add** to add a building.

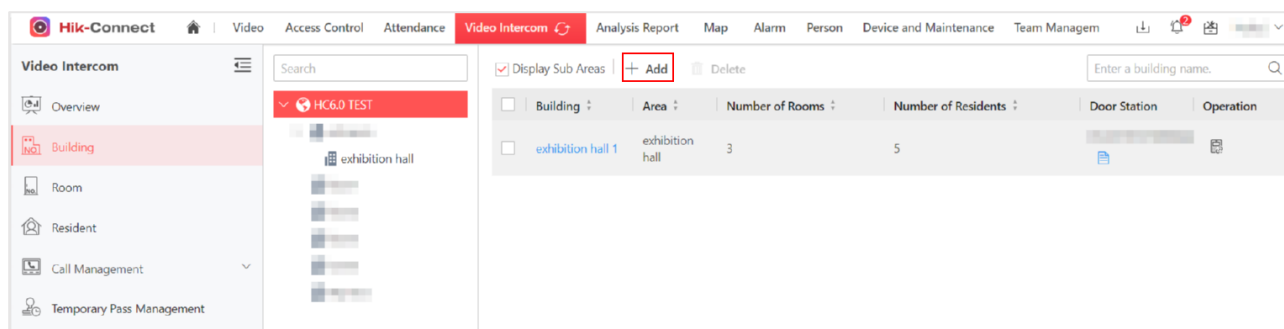


Figure 1-12 Path for Adding Building

2. Select the Group to which the building belongs to, enter the building name, and batch create rooms.

← Add Building

Building Information

*Group: HQ Technical Support Demo Environment
[Add New Group](#)

*Building No.:

*Building Name:

Batch Room Creation: ☒

Room Numbering Rule: Number the rooms with respect to the floor level (e.g., 101 is the first...)

*Number of Floors:

*Number of Rooms Per Floor:

[Preview Room Info](#)

Link to Device

Link to Device: + Add Delete

	Device Name	Device Model
☐		

No linked devices.

Add Cancel

Figure 1-13 Add Building Page

3. Link the building to the corresponding video intercom devices and click **Add** at the bottom of the page.

Link to Device: + Add Delete

	Device Name	Device Model
☐		
☐		
☐		

Add Cancel

Figure 1-14 Link to Device

4. You can view the added building on the Building page and the added rooms on the Room page.

How to Use Video Intercom Service on Hik-Connect for Teams

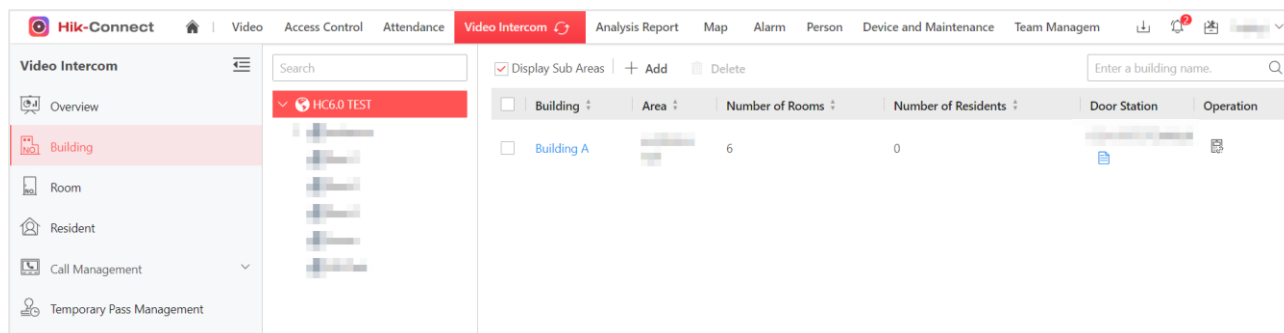


Figure 1-15 Building List

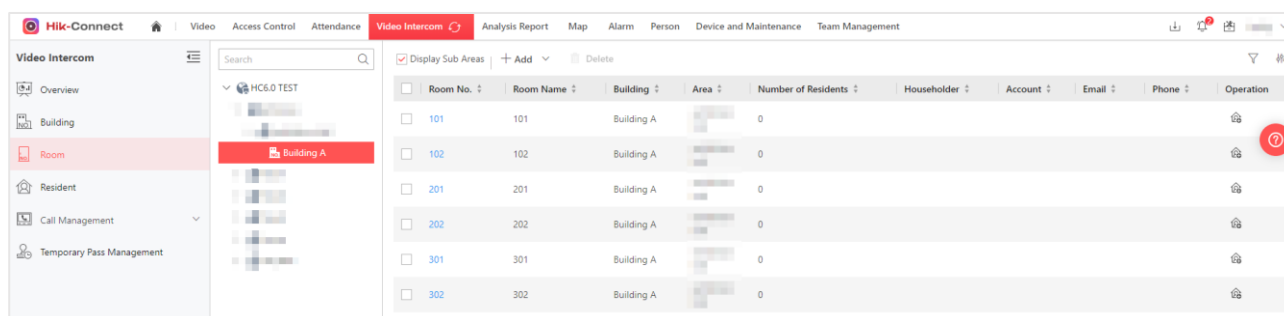


Figure 1-16 Room List

Add Resident

1. Go to **Video Intercom** → **Resident** and click **Add**.

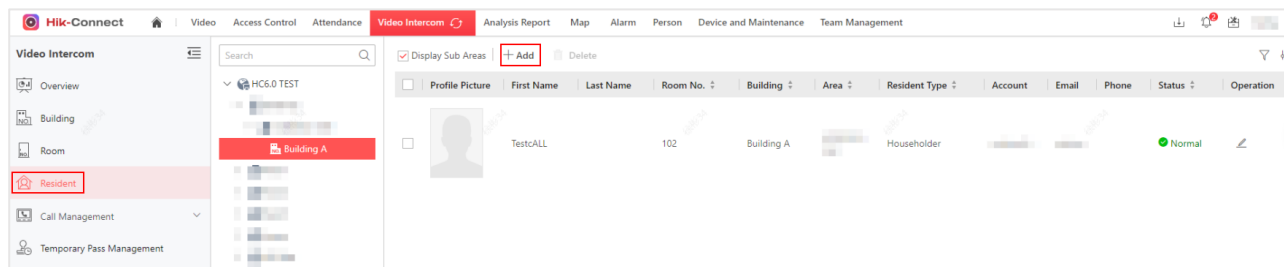


Figure 1-17 Path for Adding Resident

2. If the resident has been added to the Person list, select **Select from Existing Persons**, otherwise select **Create New Resident**.
After you select **Create New Resident**, set the resident name, effective period, email, etc.

How to Use Video Intercom Service on Hik-Connect for Teams

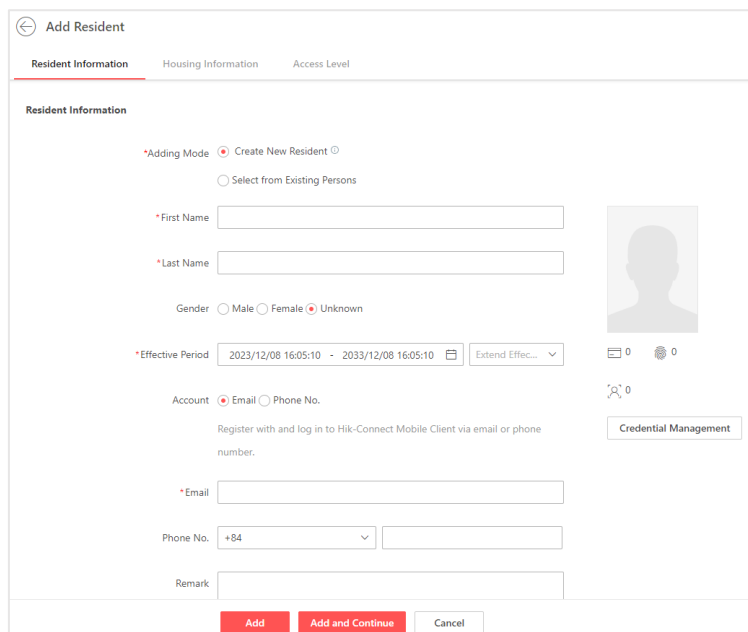


Figure 1-18 Create New Resident

Note

Once the email is set, it cannot be changed. After the resident is added, the **Self-Service Login** will be automatically enabled for the resident. A temporary password will be sent to this email, and the resident can log in to the Hik-Connect Mobile Client with the email and temporary password to use features related to video intercom.

- Click the profile photo to upload the face picture of the resident.
After the resident is added to a room, the face picture will be applied to the video intercom device linked to the corresponding building, and the resident can access the building via face recognition.

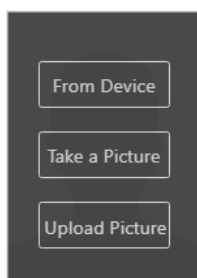


Figure 1-19 Upload Face Picture

- Click **Credential Management** to add a card and/or a fingerprint for the resident.

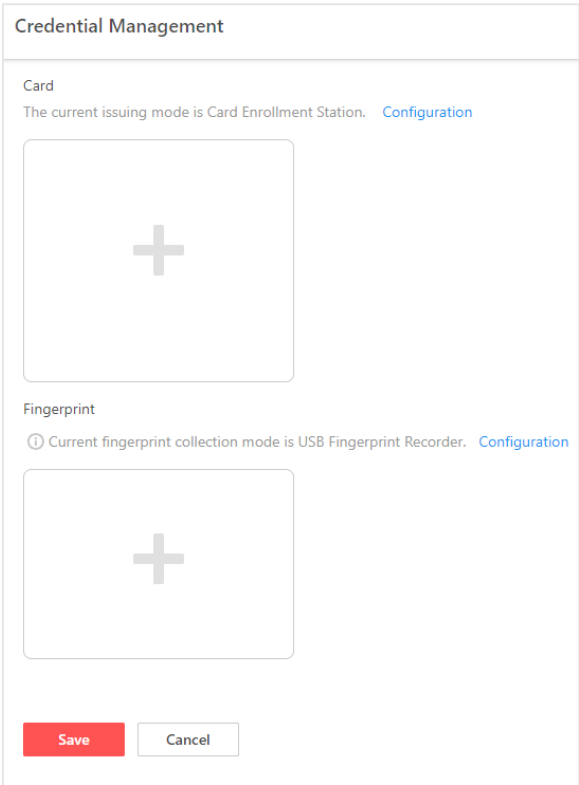


Figure 1-20 Credential Management

5. Select the Building where the room to which you are to add the resident is located, and select the (corresponding) room.
Click **Add** to add the resident to the corresponding room.

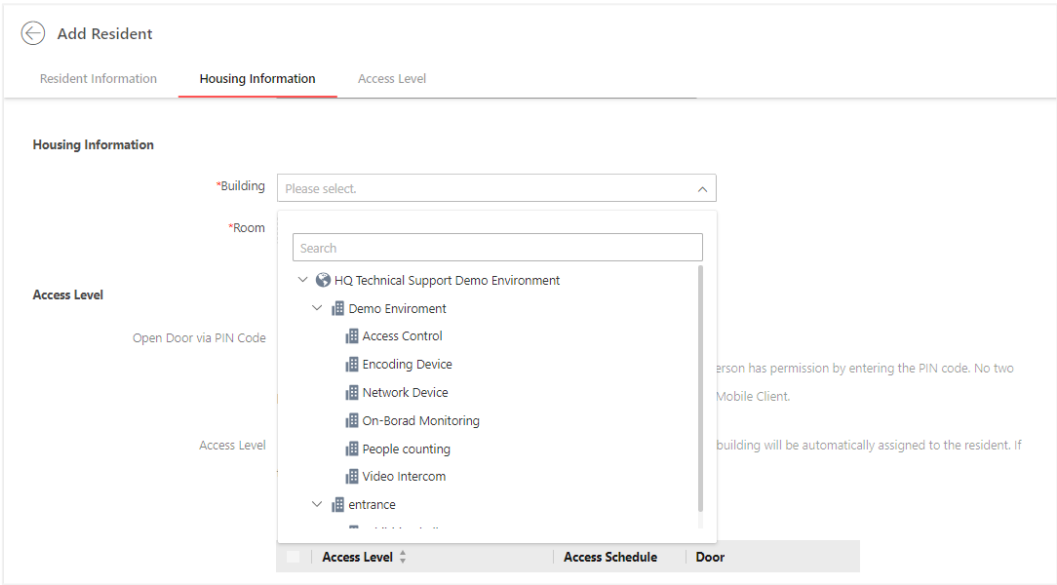


Figure 1-21 Set Housing Information

6. Optional: After the resident is added to the room, the permission to access the corresponding building will be assigned to the resident automatically. If the resident needs permission to

access other buildings or areas, you can add also add here.

Access Level

Open Door via PIN Code ☐

① If it is checked, the person should be able to access the doors for which the person has permission by entering the PIN code. No two persons can have the same PIN code. The resident can view this PIN code on the Mobile Client.

Access Level ① Once a resident is added to a room, permission to access the corresponding building will be automatically assigned to the resident. If there are other access levels needed, add below.

+ Add Delete

	Access Level	Access Schedule	Door
No Data			

Add Add and Continue Cancel

Figure 1-22 Add Access Level

1.4 Related Applications

Refer to the following sections for details.

- [View Call History](#)
- [Create Temporary Pass](#)

View Call History

Go to **Video Intercom** → **Call Management** → **Call History** to view and export the call history. The two call answer status are as follows.

- **Missed:** Someone calls from the video intercom device and the resident does not receive or answer.
- **Answered:** Someone calls from the video intercom device and the resident receives and answers.

How to Use Video Intercom Service on Hik-Connect for Teams

Capture	Device Name	Model	Building	Area	Start Time (Client Time)	End Time (Client Time)	Call Answer Status	Call Recipient	Visiting Purpose	Remarks
☐	[Image]	[Image]	[Image]	[Image]	2023-12-05 17:57:41	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-05 11:53:15	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-04 14:40:27	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-04 12:14:20	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-02 17:58:10	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-02 17:56:19	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-02 15:01:59	--	Missed	--	--	--
☐	[Image]	[Image]	[Image]	[Image]	2023-12-02 15:00:10	--	Missed	--	--	--

Figure 1-23 Call History

Create Temporary Pass

1. Go to Video Intercom → Temporary Pass Management and click Add.

Name	PIN Code	QR Code	Allowed Uses	Creator	Status	Start Time	End Time	Operation
[Image]	[Image]	[Image]	20	[Image]	Expired	2023/10/27 00:00:00	2023/11/02 23:59:00	[Image]
[Image]	[Image]	[Image]	200	[Image]	Expired	2023/11/03 00:00:00	2023/11/03 23:59:59	[Image]
[Image]	[Image]	[Image]	10	[Image]	Expired	2023/10/27 00:00:00	2023/10/27 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/10/27 00:00:00	2023/10/27 23:59:00	[Image]
[Image]	[Image]	[Image]	1	[Image]	Expired	2023/10/27 00:00:00	2023/10/27 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/10/30 00:00:00	2023/10/30 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/10/31 00:00:00	2023/10/31 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/02 00:00:00	2023/11/02 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/03 00:00:00	2023/11/03 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/03 00:00:00	2023/11/03 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/03 00:00:00	2023/11/03 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/03 14:09:47	2023/11/03 23:59:59	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/03 00:00:00	2023/11/03 23:59:00	[Image]
[Image]	[Image]	[Image]	3	[Image]	Expired	2023/11/03 00:00:00	2023/11/03 23:59:00	[Image]

Figure 1-24 Path for Creating Temporary Pass

2. Set the name, allowed uses, validity period, and access level, and click Add.

How to Use Video Intercom Service on Hik-Connect for Teams

Create Temporary Pass

Temporary passes are for persons with temporary access needs (e.g., delivery persons). The system will generate a corresponding password and QR code after you specify the access level(s) and set a validity period. Persons with access to a temporary pass will be able to unlock doors of the designated door stations by entering the password or scanning the QR code. For safety reasons, please take good care of the temporary passes.

*Name

*Allowed Uses

The number of times the temporary pass can be used to open each door.

*Validity Period

2023/12/08 16:28:33 - 2023/12/08 23:59:59

*Access Level

+ Add

Delete

Access Level

Access Schedule

Door

No Data

OK

Cancel

Figure 1-25 Create Temporary Pass

3. After creating a temporary pass, you can download the QR code on the temporary pass list and provide it to the visitor.

+ Add

Delete

Name

PIN Code

QR Code

Allowed Uses

Creator

20

QR Code

Download

Figure 1-26 Download QR Code

4. Click  on the temporary pass list to view the door unlock records.

13



Figure 1-27 Door Unlock Records

1.5 Self-Service Features (Mobile Client) for Residents

Refer to the following sections for details.

- **Open Door via Bluetooth / QR Code and Control Door Remotely**
- **Create Temporary Pass**
- **View Call History**

Open Door via Bluetooth / QR Code and Control Door Remotely

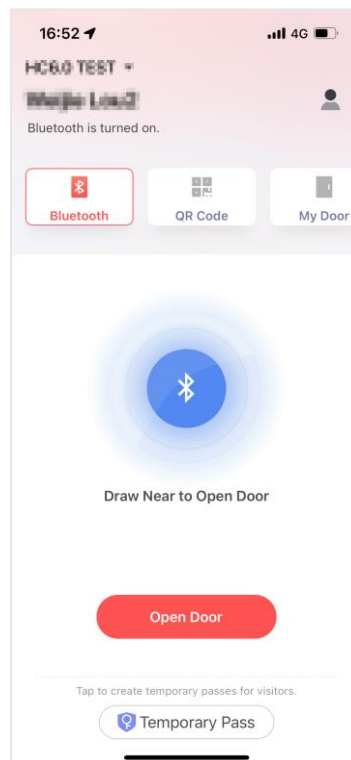


Figure 1-28 Open Door via Bluetooth (Manually)

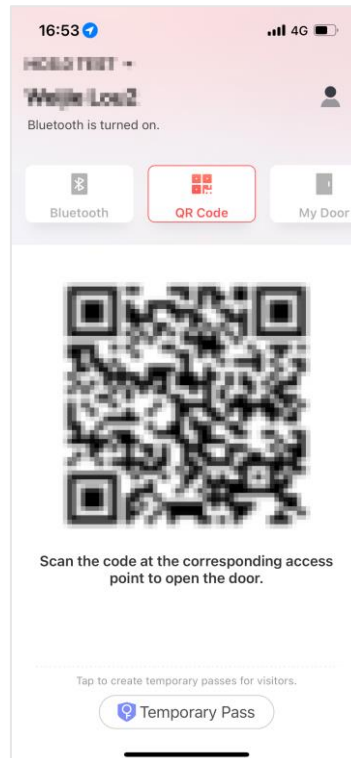


Figure 1-29 Open Door via QR Code

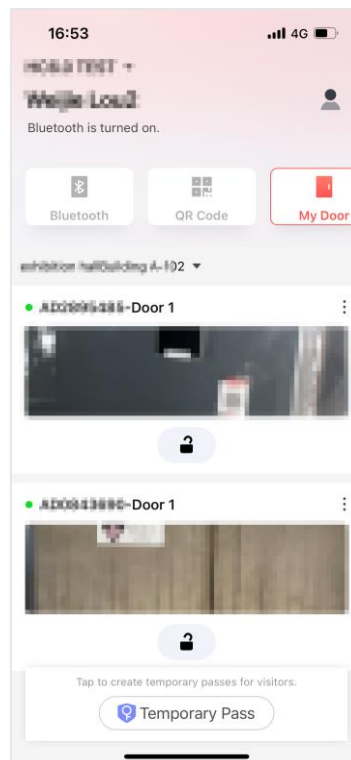


Figure 1-30 Control Doors Remotely

Create Temporary Pass

Tap  → **Temporary Pass** → **Add**, set the visitor information, allowed passes for each door, and the validity period to generate a temporary pass which contains a QR code and a password. The visitor can scan the QR code or enter the password on the video intercom device to open the door.

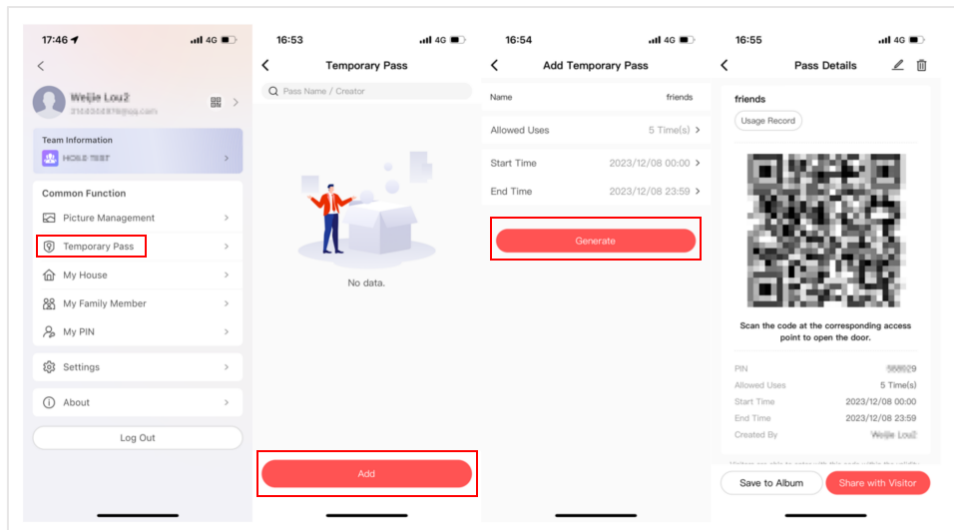


Figure 1-31 Create Temporary Pass

View Call History

Tap  to view the call history and filter the call history by setting the call answer status.


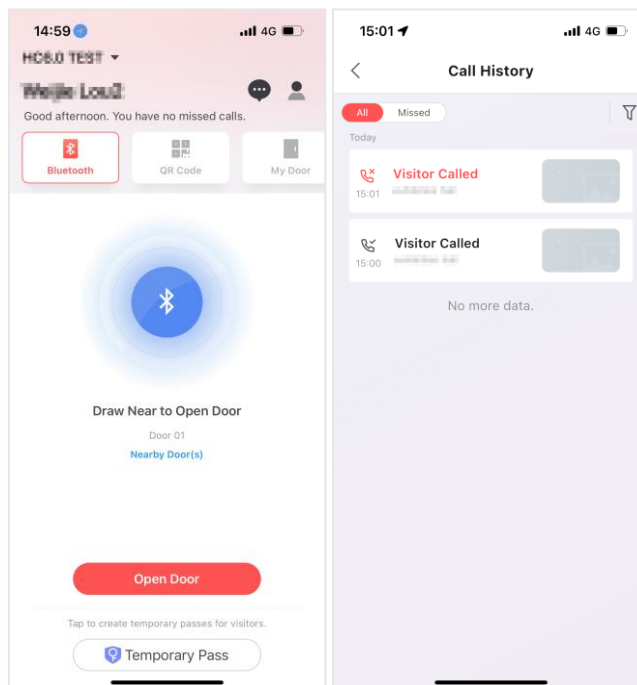


Figure 1-32 View Call History

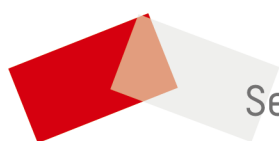

See Far, Go Further