



**How to configure people falling down detection on
AIOP DeepinMind NVR**

Title:	How to configure people falling down detection on AIOP DeepinMind NVR	Version:	v1.0	Date:	2026/3/19
Product:	NVR			Page:	1 of 4

How to configure people falling down detection on AIOP DeepinMind NVR

Description



This article shows how to configure people falling down detection on AIOP DeepinMind NVR.

Preparation


Update the AIOP DeepinMind NVR to firmware **V5.02.010_build250411**, and import the latest Abnormal_Street_Event_Detection algorithm model **V5.01.0**.

Operation



- Please go to **VCA --- Intelligent Management --- Algorithm Management**, choose the algorithm **Abnormal_Street_Event_Detection** you have updated, click to assign it an analysis engine, you can see the algorithm is running under **Engine Status** if assign succeed;

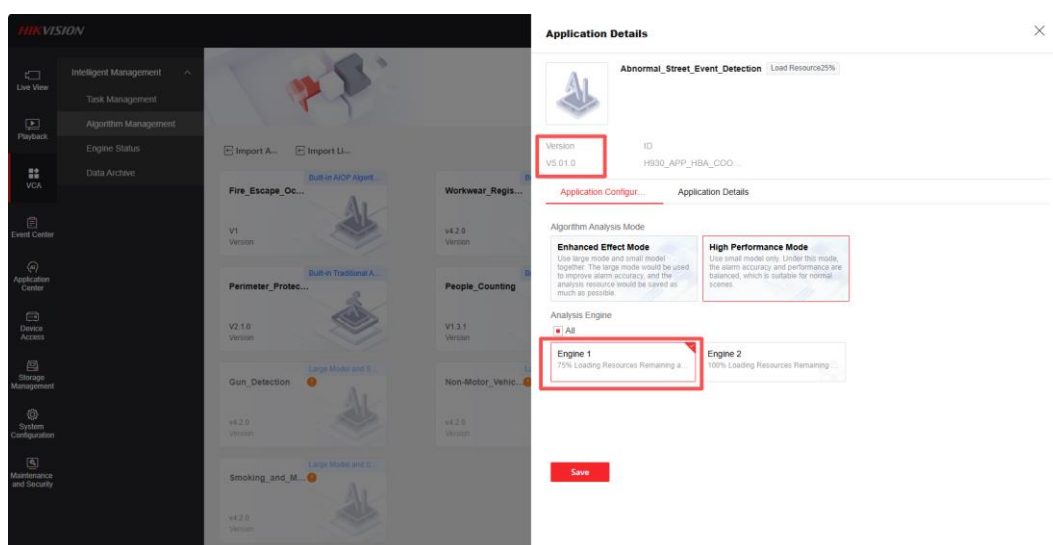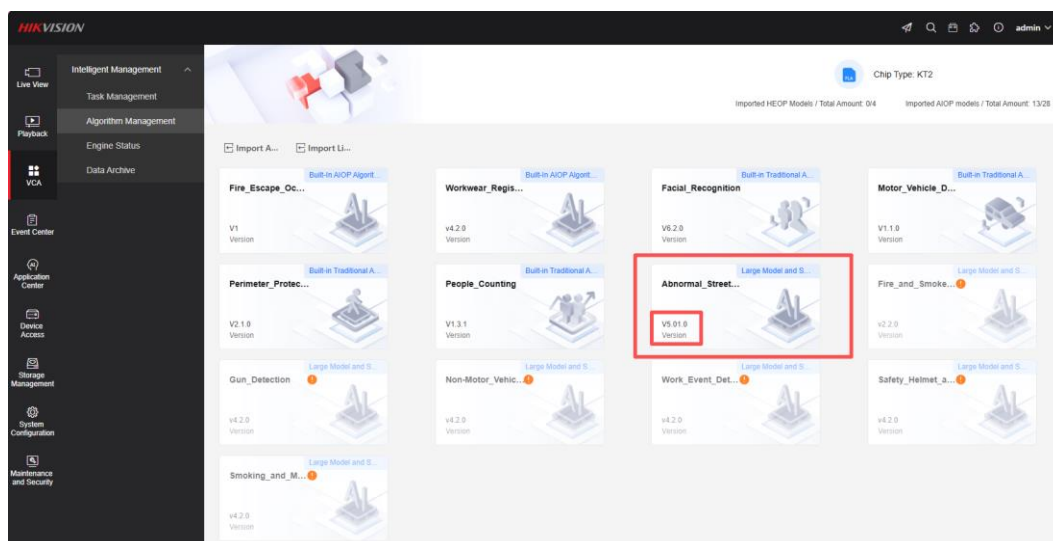

Title:	How to configure people falling down detection on AIOP DeepinMind NVR	Version:	v1.0	Date:	2026/3/19
Product:	NVR			Page:	2 of 4


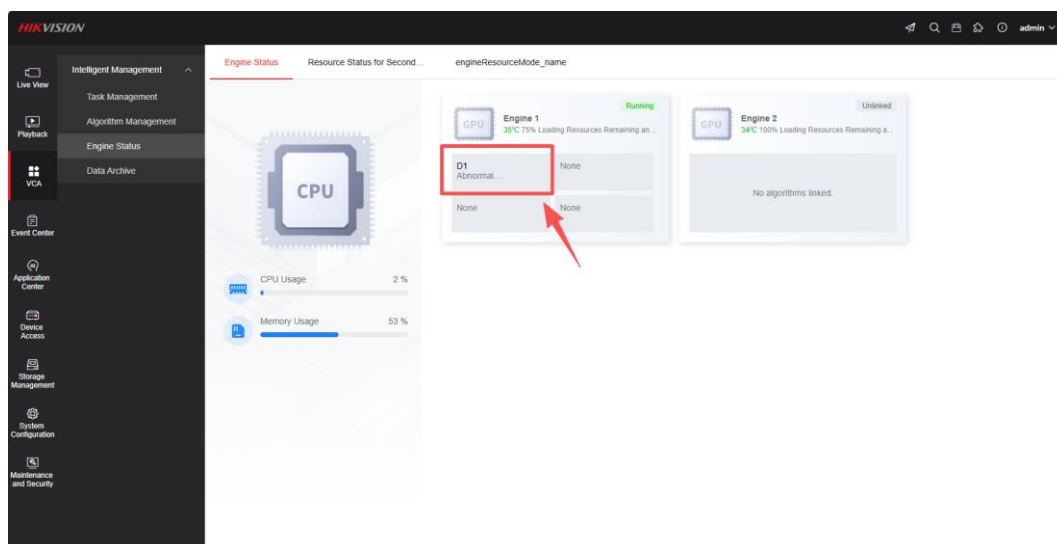


- Go to **Task Management** to configure **Live Video Analysis** task, click **Add** to create a task, , choose the channel, and click **Save**;

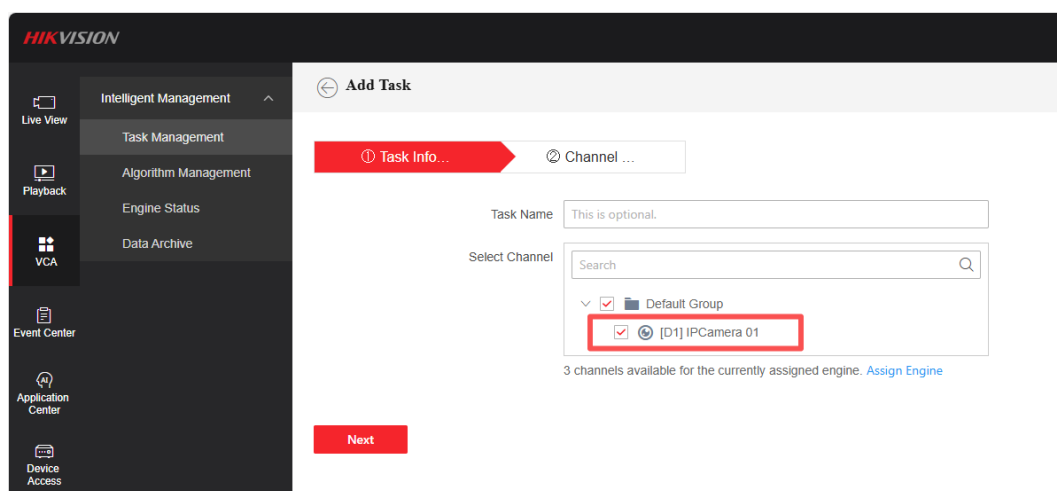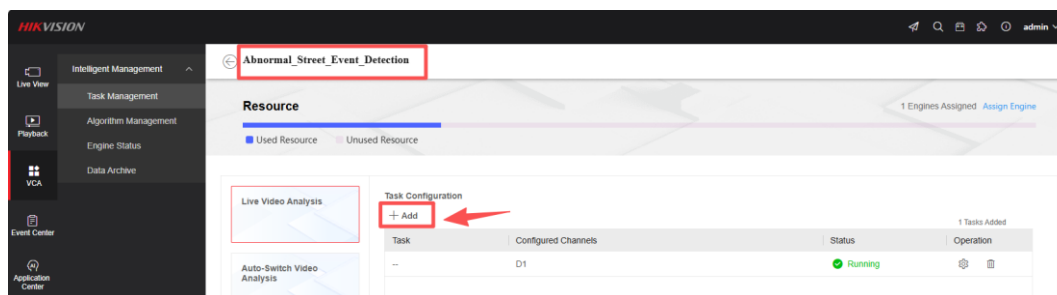


- Click **+Add** to create a rule, choose **Falling Down** as the **Event**, enable **Size Filtering Settings** and the other settings, then **Save**. You can also choose the linkage method as needed;

Title:	How to configure people falling down detection on AIOP DeepinMind NVR	Version:	v1.0	Date:	2026/3/19
Product:	NVR			Page:	3 of 4

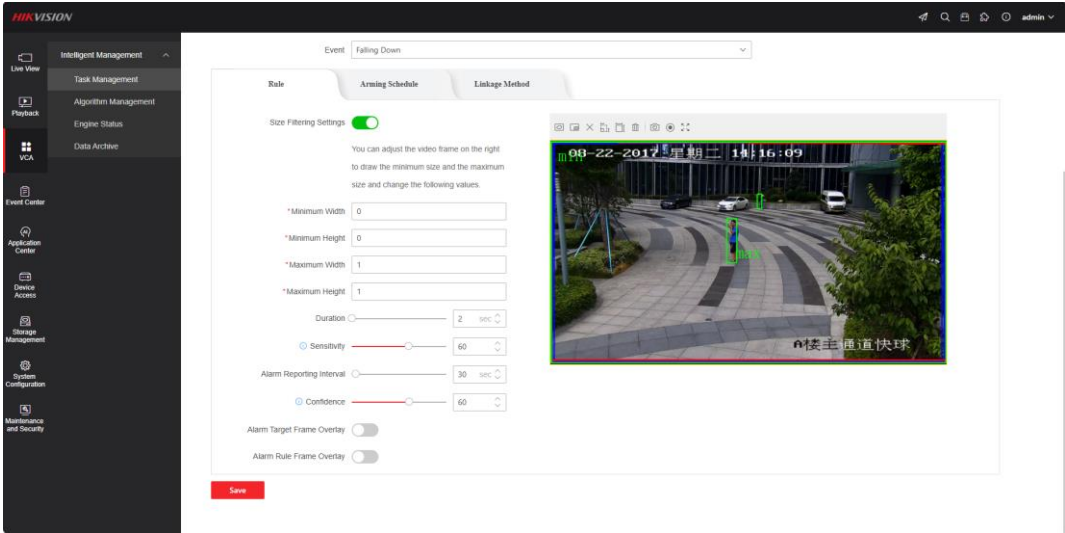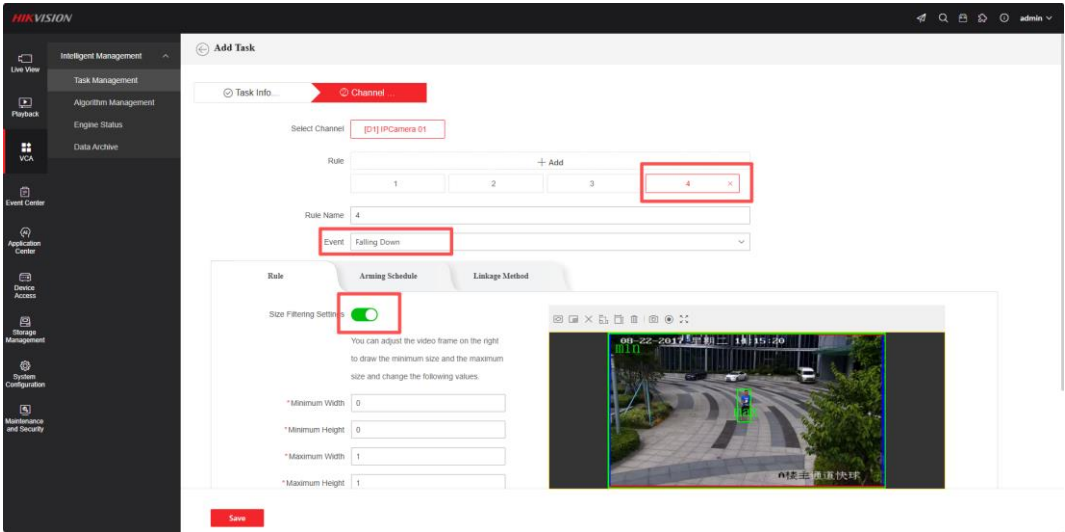

4. You can see the task is running on the channel (D1, like I just choose above) if you back to Engine Status;

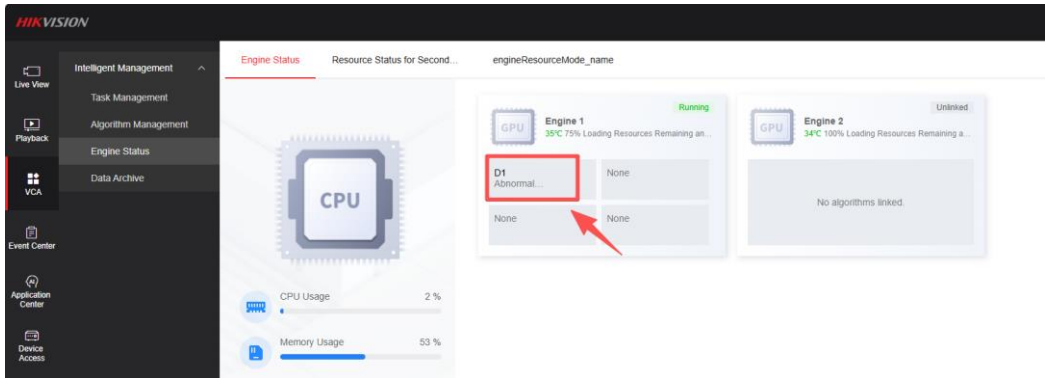

5. You can find alarms in **Event Center** – Event Search, please choose **Street Behavior** --- **Falling Down** to check the detailed alarms.

