MatSee Plus


tuya
Smart Life
zigbee 3.0

KWh
Power
Motion



Parameter



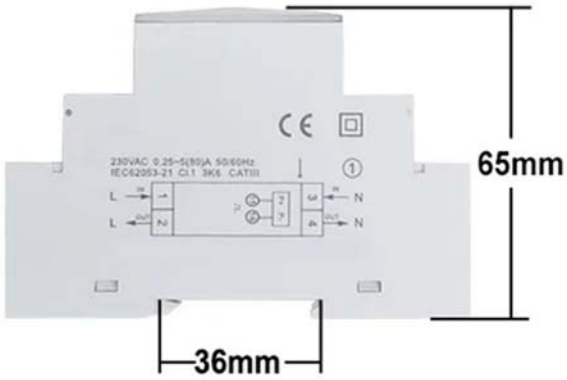

Input	AC 85-270V 45-65Hz
Output	AC 85-270V 45-65Hz
Max. Current	80A
Wireless Protocol	Zigbee 3.0
Wireless Frequency	2.4GHz
Working Temperature	-25℃ ~ +55℃
Size	100*36*65mm

Set alarm parameters

1.Set alarm threshold value
(Only two objects can be set)



Power



Voltage



Current

2.Set automatic reconnect time of relay



Manual Connection



LCD Display Instruction



Total Active Energy



Voltage



Power Factor



Active Power



Current



Frequency

Button Definition Description

Button	Definition	Click	Press 3 second
	Button 1: Esc / Scroll	Scroll the page of the displayed page	1. In the main display screen: enter or exit the auxiliary screen. 2. In the setting screen: exit or return to the previous screen.
	Button 2: Confirm / Shift	In the setting screen: right move the setting cursor.	1. In the main display screen: enter the setting mode. 2. In the setting screen: enter the setting state or carry out confirmation operation. 3. In the auxiliary screen: reset Zigbee

Network configuration operations

1.Long press the left button (button 1) for 3 seconds to enter the auxiliary interface.

2.Long press the right button (button 2) for 3 seconds to make the meter enter the network distribution mode(The red light will flash rapidly.).

3.Open the Smart Life App, and click '+' to select'Smart Meter(Zigbee)' in the 'Energy'category.

Main Display Screen

LCD display	Description
	Total active energy Example: Total active energy = 738.59kWh
	Voltage Example: Voltage = 230.0V is mean : The load is an inductive load
	Current Example: Current = 5.000A is mean : The load is an inductive load
	Active power Example: Active power = 1.618kW is mean : The load is an inductive load
	Power factor Example: Power factor = 0.986 is mean : The load is an inductive load. is mean : The power factor is negative.
	Frequency Example: Frequency = 50.03Hz is mean : The load is an capacitive load

Set Alarm Parameters

1. After entering the "Parameter Setting Menu" screen, select the setting screen (as shown in the figure below), and then press button 2 for 3 second to enter the alarm parameter setting screen.



Note: This series of products support up to 2 channels alarm parameter Settings.

2. Set alarm parameters for channel 1

	Alarm parameter setting menu for channel 1. Press button 2 for 3 second to enter the screen for selecting alarm parameters. Click button 1 to scroll the page and select the next setting screen. Press button 1 for 3 second to return to the previous level setup menu.

2.1 Set the alarm monitoring object of channel 1

	The setting screen of alarm monitoring object of channel 1. Press button 2 for 3 second to enter the setting state, and the character of the setting becomes the flashing state. Click button 1 to scroll the page and select the next setting screen. Press button 1 for 3 second to return to the previous level setup menu.
	Click button 1 to select the alarm monitoring object. Press button 2 for 3 second to confirm the setting. The meter will save the setting value and exit the setting state. Press button 1 for 3 second to exit the setting state without saving the setting parameters.

The corresponding character table of the alarm object

NULL is mean no alarm object is associated, that is, the alarm function is disabled.

U is mean voltage, I is mean current, P is mean active power, F is mean frequency.

2.2 Set the alarm threshold value of channel 1	
	The setting screen of alarm threshold value of channel 1. Press button 2 for 3 second to enter the setting state, and the digit of the setting becomes the flashing state. Click button 1 to scroll the page and select the next setting screen. Press button 1 for 3 second to return to the previous level setup menu.
	Click button 1 to increase or decrease the number of set bits. Click button 2 can be moved the set bits to the right. Press button 2 for 3 second to confirm the setting. The meter will save the setting value and exit the setting state. Press button 1 for 3 second to exit the setting state without saving the setting parameters.
3. Set alarm parameters for channel 1	
	Alarm parameter setting menu for channel 2. Note: For details, see parameter Settings of channel 1.
4. Set automatic reconnect time of relay	
	The setting screen of automatic reconnect time for relay. The value ranges from 0 to 90, unit: second. Press button 2 for 3 second to enter the setting state, and the digit of the setting becomes the flashing state. Click button 1 to scroll the page and select the next setting screen. Press button 1 for 3 second to return to the previous level setup menu.
	Click button 1 to increase or decrease the number of set bits. Click button 2 can be moved the set bits to the right. Press button 2 for 3 second to confirm the setting. The meter will save the setting value and exit the setting state. Press button 1 for 3 second to exit the setting state without saving the setting parameters. Note: If the automatic reconnect time for relay is 0, it means that the meter will not automatically reconnect after the alarm occurs, and it needs to be reconnect manually.