

1. Power On/Off: Tap the touch button once to turn the lamp on or off.
2. Dim the Light: Press and hold the touch button to gradually reduce the brightness.
3. Increase Brightness: After the light is dimmed, press and hold the button again to increase brightness.
4. Memory Function: The lamp remembers your last brightness setting when switched off.
5. Touch-Sensitive Control: The touch button responds to light touches for easy operation.

Power Book

FRONT

1550.00



MAGNETIC LOCK

WIRLESS CHARGING

Power Book

WIRLESS CHARGING

INSIDE



1550.00

Premium JD Black

FRONT

1350.00



Premium Black

INSIDE

Premium JD Black

1550.00



Premium Black

FRONT

Dual Shade premium Folder

1850.00



Luxury Dual Tone Italian Pu

Dual Shade premium Folder

INSIDE



Luxury Dual Tone Italian Pu

Brown Without Pendrive Lamp (Inside)

FRONT

1437.00



Power Book - With Wirless Charging

Brown Without Pendrive Lamp (Inside)

INSIDE

1437.00



lamp With Touch Button
Latest

1250.00



Premium Black

1250.00



Premium Blue

Power Book

WIRLESS CHARGING

Cork Material

Power Book with Wirless Charging

FRONT

1322.00



Power Book

INSIDE

1322.00

Cork Material Power Book



POCKETS

BLACK CLIP FOR PAPERS

BLACK POWER BANK

Felt Grey and Blue

Front

1322.00




Power Book Felt + Soft Pu

Felt Grey and Blue

INSIDE

1322.00

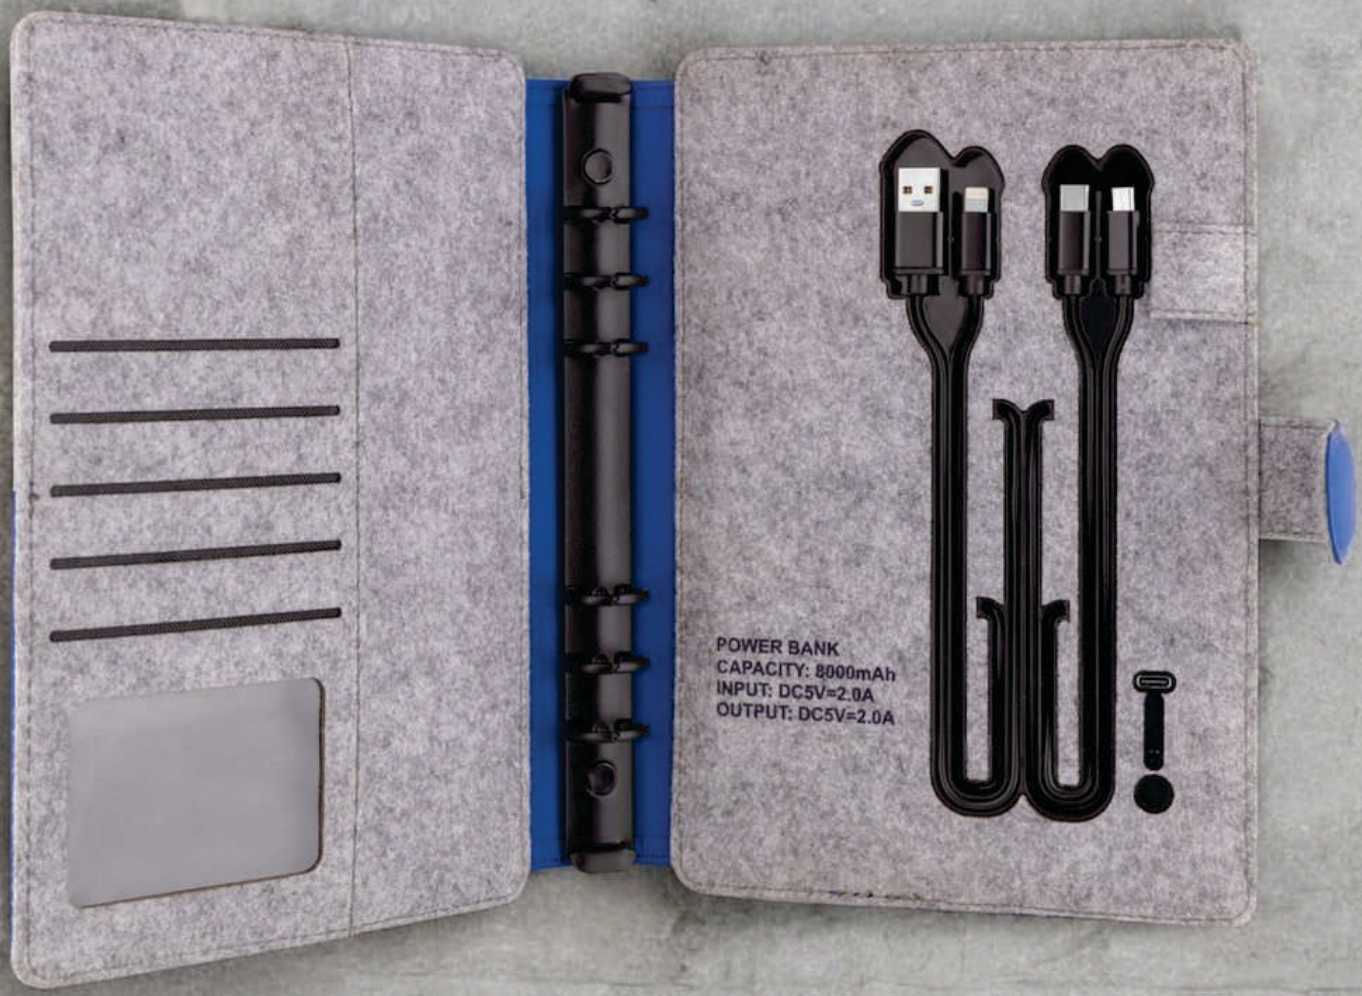

Power Book Felt + Soft Pu

Front

Felt Grey + Carry Bag (FELT)

1322.00




Power Book Felt

INSIDE

Felt Grey + Carry Bag (FELT)

1322.00

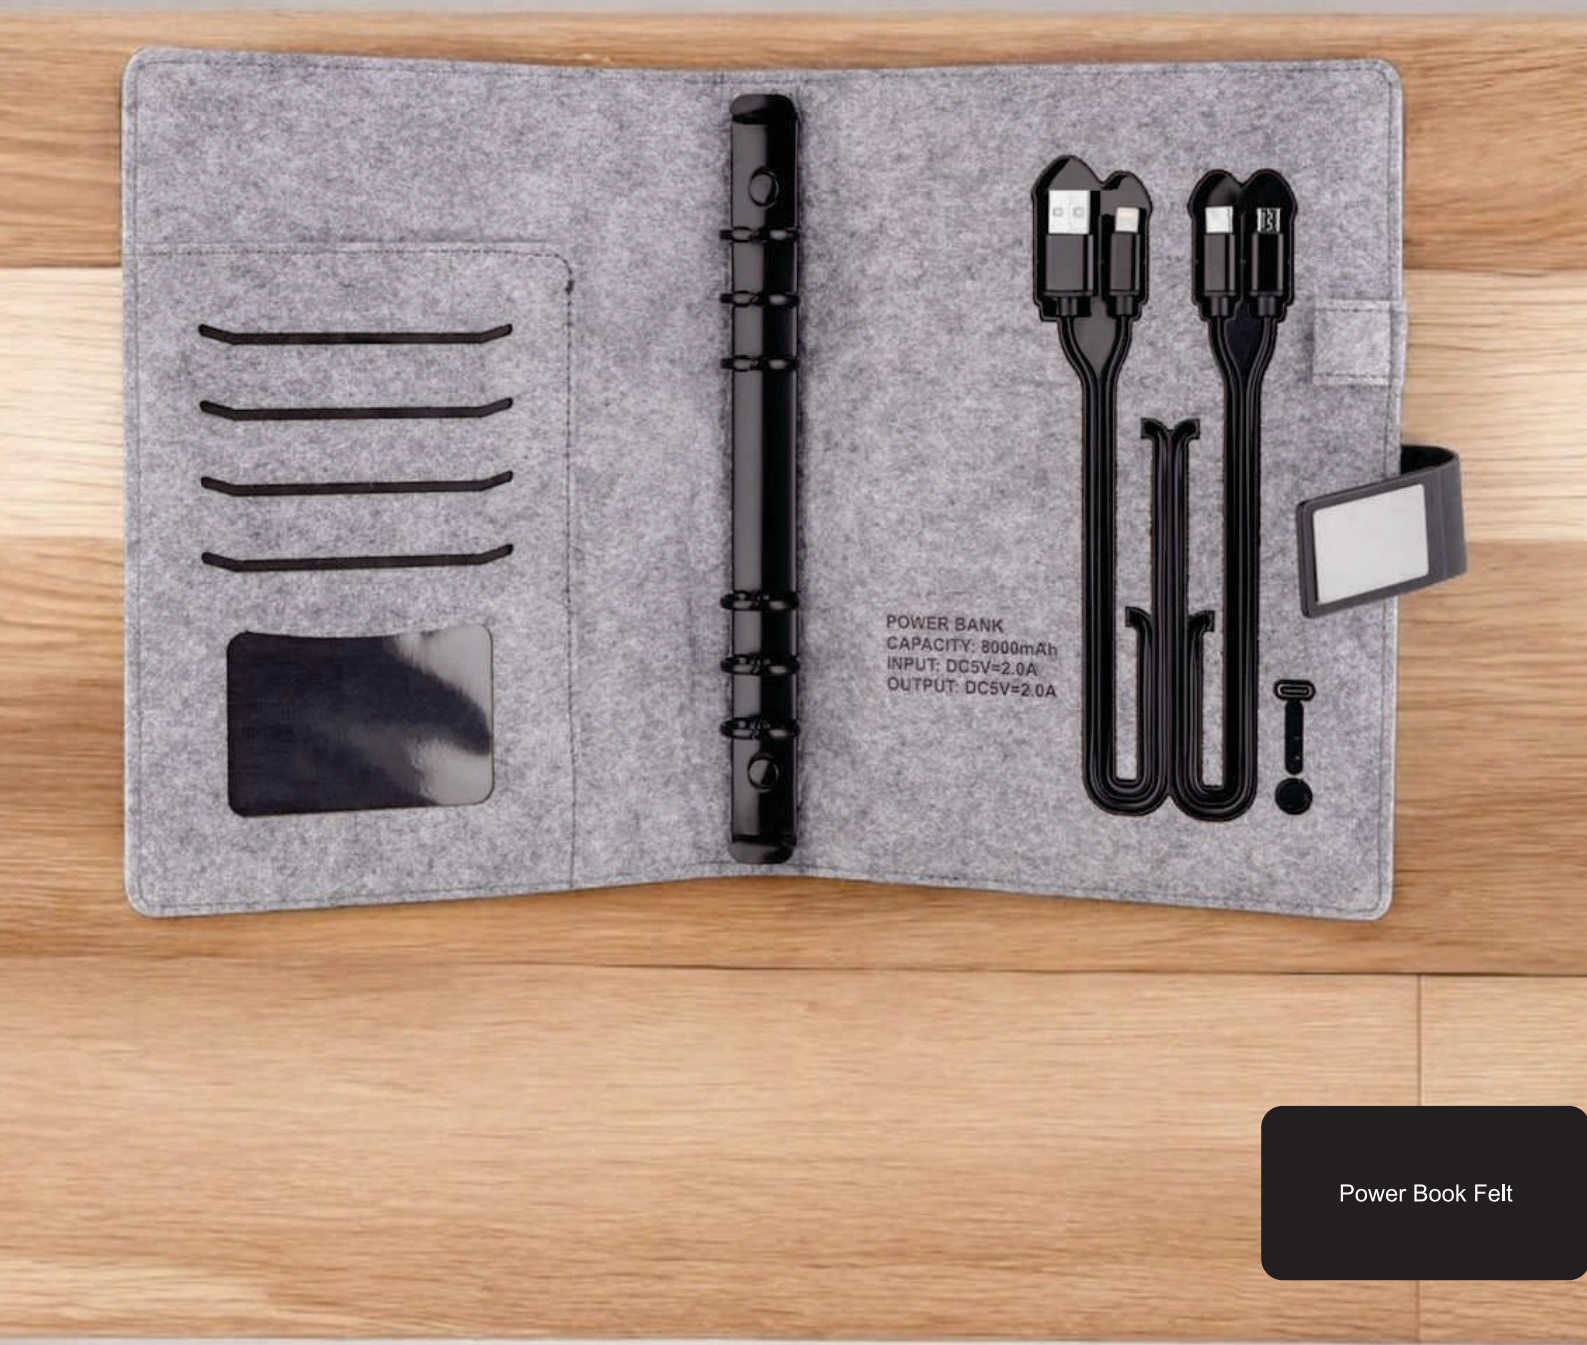

Power Book Felt

Felt Grey + Carry Bag (FELT)





Photo Frame | Wirless Charger | Mobile Stand | Coasters

Wirless Charging

Photo Frame

Coasters

Mobile Stand

POWER BOOK


SBI
2024
yono SBI
July
August
September
October
November
December


2024
January
February
March
April
May
June
24% Charged



810.00


PHOTO FRAME | WIRLESS CHARGER | MOBILE STAND | COASTERS



POWER BOOK

920.00

POWER BOOK

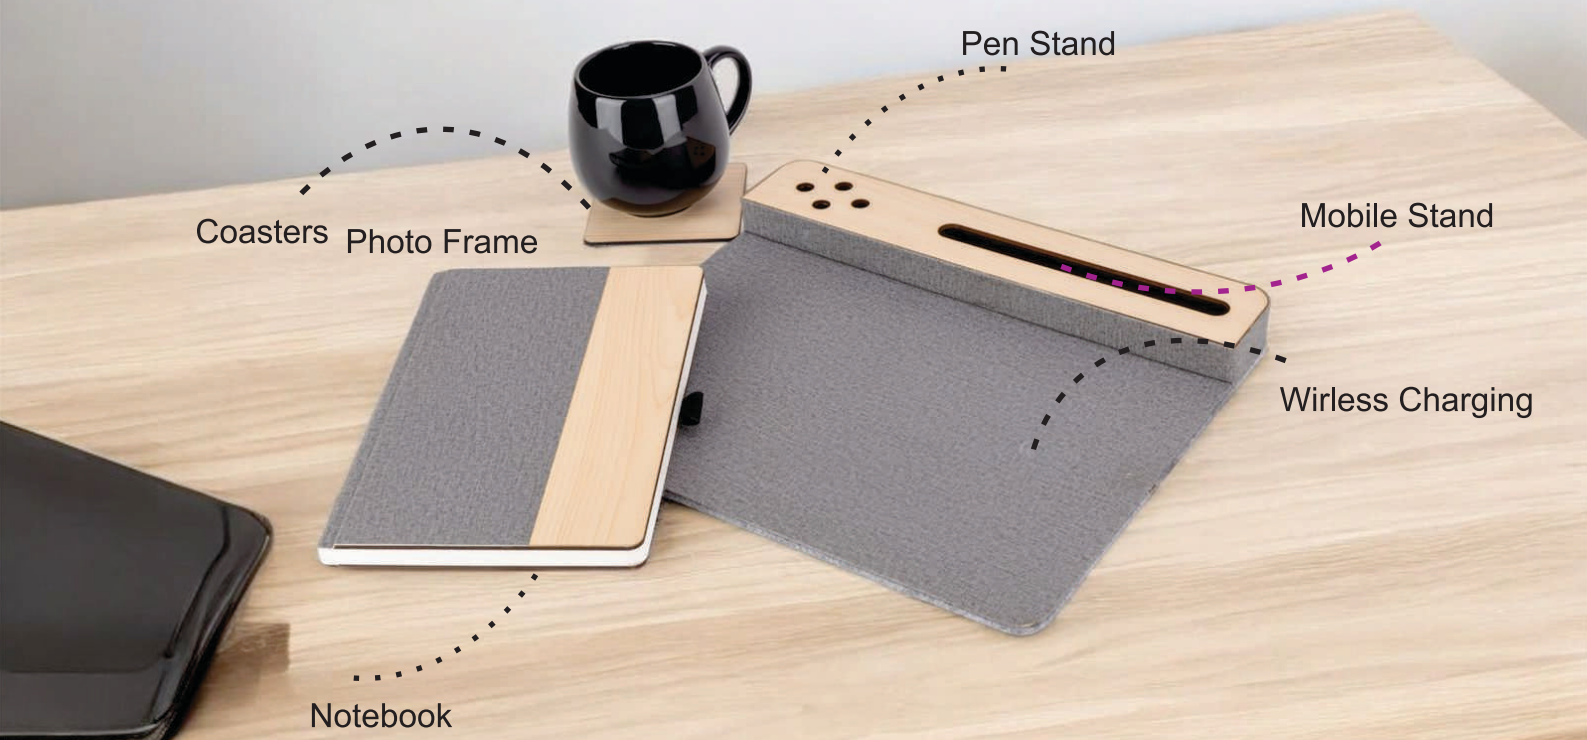

Desktop Organiser | Coasters | Coffee Mug | Wirless Charger | Notebook