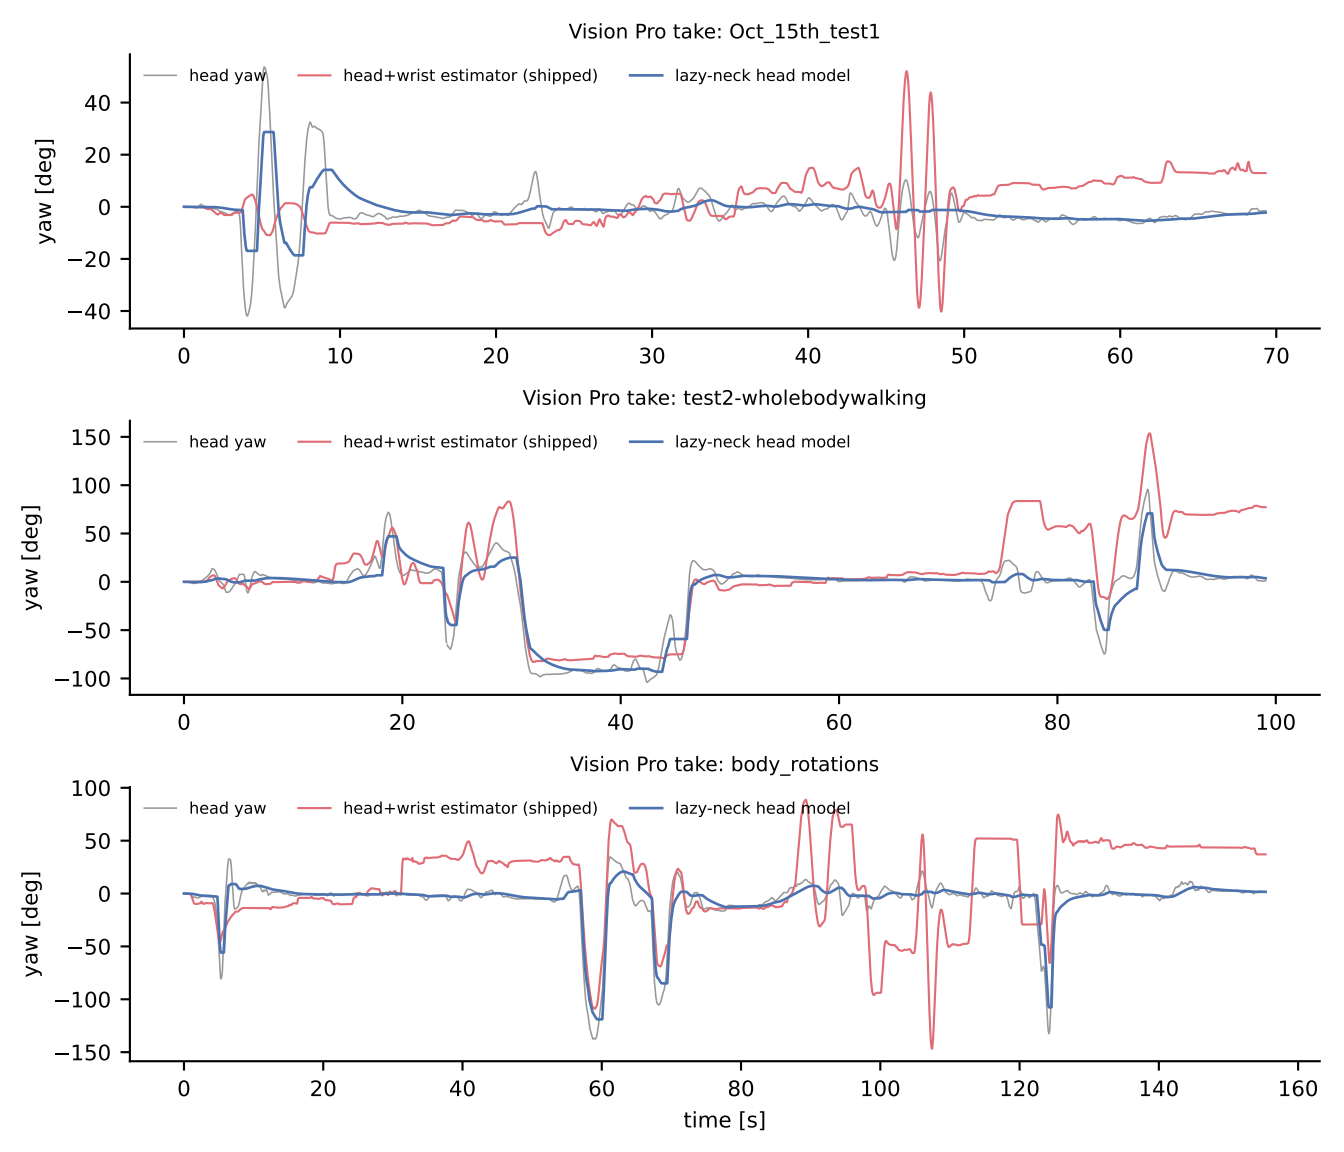

Vision Pro take: Oct_15th_test1
head yaw
head+wrist estimator (shipped)
lazy-neck head model
yaw [deg]
40
20
0
−20
−40
0
10
20
30
40
50
60
70
Vision Pro take: test2-wholebodywalking
head yaw
head+wrist estimator (shipped)
lazy-neck head model
yaw [deg]
150
100
50
0
−50
−100
0
20
40
60
80
100
Vision Pro take: body_rotations
head yaw
head+wrist estimator (shipped)
lazy-neck head model
yaw [deg]
100
50
0
−50
−100
−150
0
20
40
60
80
100
120
140
160
time [s]