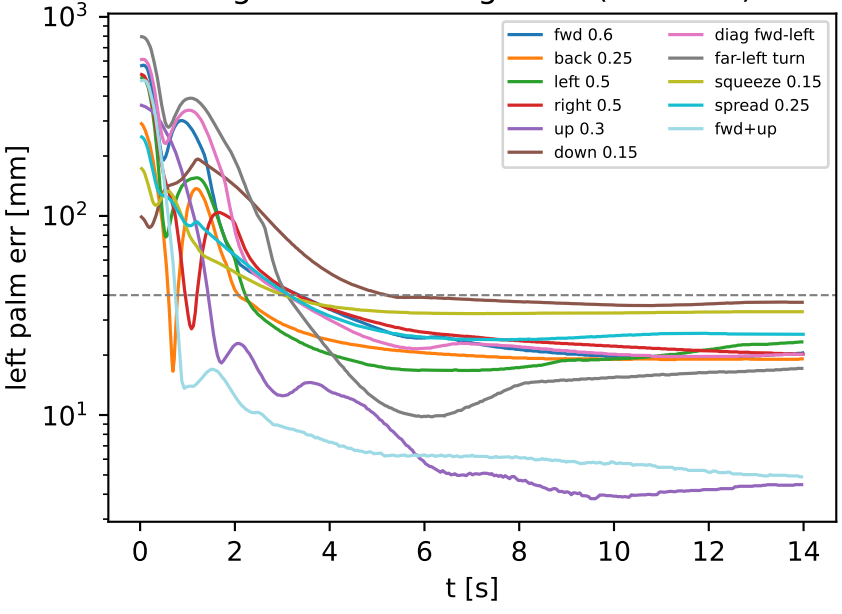
Edge-case tracking error (realtime)
left palm err [mm]
10^3
10^2
10^1
0
2
4
6
8
10
12
14
t [s]
fwd 0.6
back 0.25
left 0.5
right 0.5
up 0.3
down 0.15
diag fwd-left
far-left turn
squeeze 0.15
spread 0.25
fwd+up

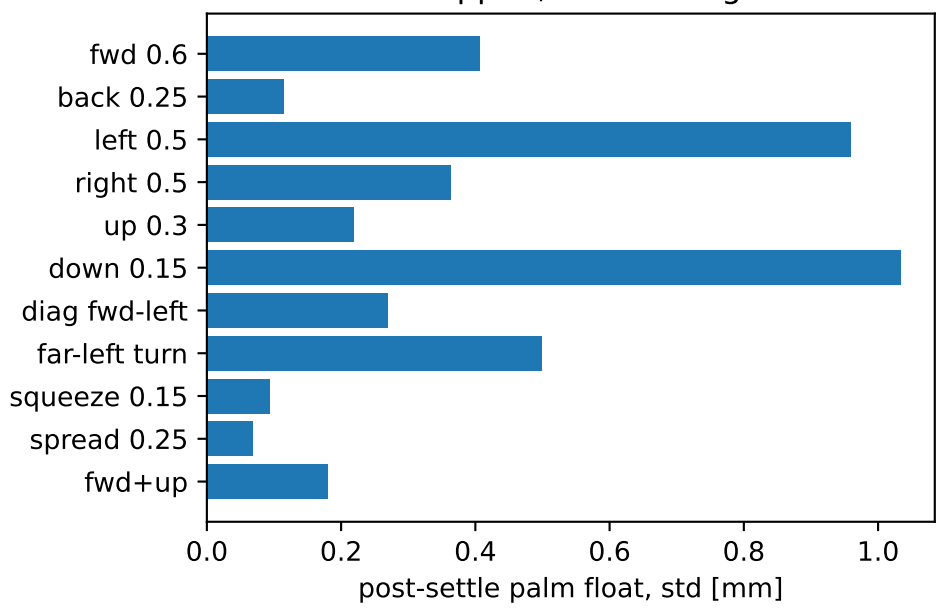
"snapped, not floating"
fwd 0.6
back 0.25
left 0.5
right 0.5
up 0.3
down 0.15
diag fwd-left
far-left turn
squeeze 0.15
spread 0.25
fwd+up
0.0
0.2
0.4
0.6
0.8
1.0
post-settle palm float, std [mm]