



Framework Laptop 16" Expansion Cards Replacement

Use this guide to replace an expansion card in...

Written By: Alex Diaz-Kokaisl



INTRODUCTION

Use this guide to replace an expansion card in your Framework 16" laptop.


Expansion cards come in the following types: USB-C, USB-A, HDMI, Display Port, Ethernet, MicroSD, 3.5 mm headphone jack, and 250 GB or 1 TB storage. Depending on the type, you can only place the cards in specific slots. Refer to [this chart](#) to avoid placing the cards in the wrong slot.

Step 1 — Unlock the expansion cards



- Flip your laptop over and find the locking tab under the expansion card(s) you want to replace.
- Pull the locking tab down to unlock the row of expansion cards above it.
 - ⓘ The locking tab will show red when it's unlocked.

Step 2 — Remove the expansion card

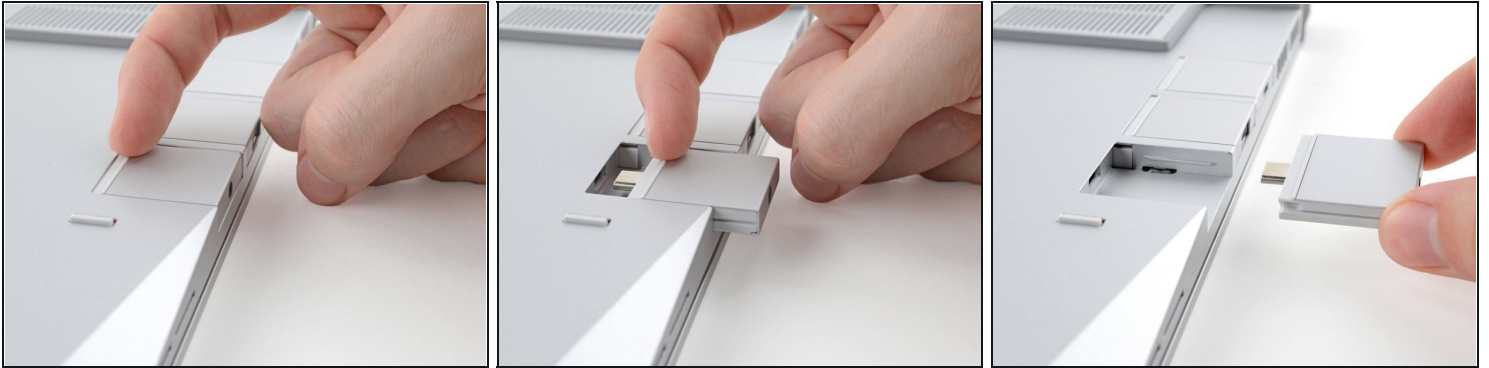

- Insert your fingernail over the white rubber lip along the inner edge of the expansion card.
 - Pull the card away from the laptop to disconnect it.
 - ⓘ This might take some initial force. If you're having trouble, make sure the locking tab is properly unlocked.
 - Slide the card completely off its rail and remove it.
- ★ During reassembly, align the new card on the rail and push it in until it sits evenly with the edge of the laptop.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers Community](#) for help.