



ModelSim® User's Manual

Software Version 6.4a

© 1991-2008 Mentor Graphics Corporation
All rights reserved.

This document contains information that is proprietary to Mentor Graphics Corporation. The original recipient of this document may duplicate this document in whole or in part for internal business purposes only, provided that this entire notice appears in all copies. In duplicating any part of this document, the recipient agrees to make every reasonable effort to prevent the unauthorized use and distribution of the proprietary information.

This document is for information and instruction purposes. Mentor Graphics reserves the right to make changes in specifications and other information contained in this publication without prior notice, and the reader should, in all cases, consult Mentor Graphics to determine whether any changes have been made.

The terms and conditions governing the sale and licensing of Mentor Graphics products are set forth in written agreements between Mentor Graphics and its customers. No representation or other affirmation of fact contained in this publication shall be deemed to be a warranty or give rise to any liability of Mentor Graphics whatsoever.

MENTOR GRAPHICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

MENTOR GRAPHICS SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS PUBLICATION OR THE INFORMATION CONTAINED IN IT, EVEN IF MENTOR GRAPHICS CORPORATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

RESTRICTED RIGHTS LEGEND 03/97

U.S. Government Restricted Rights. The SOFTWARE and documentation have been developed entirely at private expense and are commercial computer software provided with restricted rights. Use, duplication or disclosure by the U.S. Government or a U.S. Government subcontractor is subject to the restrictions set forth in the license agreement provided with the software pursuant to DFARS 227.7202-3(a) or as set forth in subparagraph (c)(1) and (2) of the Commercial Computer Software - Restricted Rights clause at FAR 52.227-19, as applicable.

Contractor/manufacturer is:

Mentor Graphics Corporation

8005 S.W. Boeckman Road, Wilsonville, Oregon 97070-7777.

Telephone: 503.685.7000

Toll-Free Telephone: 800.592.2210

Website: www.mentor.com

TRADEMARKS: The trademarks, logos and service marks ("Marks") used herein are the property of Mentor Graphics Corporation or other third parties. No one is permitted to use these Marks without the prior written consent of Mentor Graphics or the respective third-party owner. The use herein of a third-party Mark is not an attempt to indicate Mentor Graphics as a source of a product, but is intended to indicate a product from, or associated with, a particular third party. A current list of Mentor Graphics' trademarks may be viewed at: www.mentor.com/terms_conditions/trademarks.cfm.

Table of Contents

Chapter 1	
Introduction.....	25
Tool Structure and Flow	25
Simulation Task Overview	26
Basic Steps for Simulation.....	27
Step 1 — Collecting Files and Mapping Libraries	28
Step 2 — Compiling the Design (vlog, vcom, sccom).....	29
Step 3 — Loading the Design for Simulation.....	30
Step 4 — Simulating the Design.....	30
Step 5 — Debugging the Design	30
Modes of Operation	31
Command Line Mode.....	31
Batch Mode.....	32
What is an "Object"	32
Standards Supported	33
Assumptions.....	33
Sections In This Document	34
Text Conventions.....	35
Installation Directory Pathnames.....	35
Chapter 2	
Graphical User Interface	37
Design Object Icons and Their Meaning	39
Setting Fonts	39
Inline Search Bar for Text-Based Windows	40
User-Defined Radices	41
Using the radix define Command	41
Saving and Reloading Formats and Content	44
Main Window	44
Workspace.....	45
Multiple Document Interface (MDI) Frame.....	46
Organizing Windows with Tab Groups.....	47
Navigating in the Main Window	48
Main Window Status Bar	48
Main Window Toolbar	49
Process Window.....	67
Displaying the Process Window	68
Viewing Data in the Process Window	68
Post-Processing Mode.....	72
Create Textual Process Report	73
Call Stack Pane	74
Class Tree Window	75

Displaying the Class Tree Window	76
GUI Elements of the Class Tree Window	76
Class Graph Window	77
Displaying the Class Graph Window	78
GUI Elements of the Class Graph Window	79
Dataflow Window	79
List Window	81
Displaying the List Window	81
Viewing Data in the List Window	81
GUI Elements of the List Window	82
Locals Window	84
Displaying the Locals Window	84
Viewing Data in the Locals Window	85
GUI Elements of the Locals Window	85
Memory Panes	86
Associative Arrays in Verilog/SystemVerilog	88
Viewing Single and Multidimensional Memories	88
Viewing Packed Arrays	89
Viewing Memory Contents	89
Saving Memory Formats in a DO File	90
Direct Address Navigation	90
Splitting the Memory Contents Pane	90
Objects Pane	91
Filtering the Objects List	92
Filtering by Name	92
Filtering by Signal Type	93
Source Window	93
Opening Source Files	94
Displaying Multiple Source Files	94
Dragging and Dropping Objects into the Wave and List Windows	95
Setting your Context by Navigating Source Files	95
Using Language Templates	98
Setting File-Line Breakpoints with the GUI	100
Adding File-Line Breakpoints with the bp Command	101
Modifying File-Line Breakpoints	101
Checking Object Values and Descriptions	103
Marking Lines with Bookmarks	103
Performing Incremental Search for Specific Code	104
Customizing the Source Window	104
Transcript Window	105
Transcript Tab	106
Message Viewer Tab	108
Watch Pane	114
Adding Objects to the Watch Pane	115
Expanding Objects to Show Individual Bits	115
Grouping and Ungrouping Objects	116
Saving and Reloading Format Files	117
Wave Window	117
Wave Window Panes	119

Table of Contents

Objects You Can View in the Wave Window	126
Wave Window Toolbar.....	127
Chapter 3	
Protecting Your Source Code	129
Usage Models for Protecting Source Code	129
Delivering IP Code with Undefined Macros	130
Delivering IP Code with Vendor-Defined Macros	133
Delivering Protected IP with `protect Compiler Directives	136
Protecting Source Code Using -nodebug.....	138
Creating an Encryption Envelope	140
Protect Pragma Expressions	141
Compiling a Design with vlog +protect.....	143
Chapter 4	
Projects.....	145
What are Projects?	145
What are the Benefits of Projects?	145
Project Conversion Between Versions	146
Getting Started with Projects	146
Step 1 — Creating a New Project.....	147
Step 2 — Adding Items to the Project	148
Step 3 — Compiling the Files.....	149
Step 4 — Simulating a Design	152
Other Basic Project Operations.....	154
The Project Tab	154
Sorting the List	155
Creating a Simulation Configuration.....	155
Organizing Projects with Folders.....	157
Adding a Folder	157
Specifying File Properties and Project Settings.....	159
File Compilation Properties	159
Project Settings	161
Accessing Projects from the Command Line.....	162
Chapter 5	
Design Libraries	163
Design Library Overview	163
Design Unit Information.....	163
Working Library Versus Resource Libraries	163
Archives	164
Working with Design Libraries	164
Creating a Library.....	165
Managing Library Contents	165
Assigning a Logical Name to a Design Library	166
Moving a Library	168
Setting Up Libraries for Group Use	168
Specifying Resource Libraries.....	169

Verilog Resource Libraries	169
VHDL Resource Libraries	169
Predefined Libraries	169
Alternate IEEE Libraries Supplied	170
Regenerating Your Design Libraries	170
Importing FPGA Libraries	171
Protecting Source Code	172
Chapter 6	
VHDL Simulation	173
Basic VHDL Flow	173
Compiling VHDL Files	173
Creating a Design Library for VHDL	173
Invoking the VHDL Compiler	174
Dependency Checking	174
Range and Index Checking	174
Subprogram Inlining	174
Differences Between Language Versions	175
Simulating VHDL Designs	178
Simulator Resolution Limit (VHDL)	178
Default Binding	179
Delta Delays	180
Using the TextIO Package	183
Syntax for File Declaration	183
Using STD_INPUT and STD_OUTPUT Within the Tool	184
TextIO Implementation Issues	184
Writing Strings and Aggregates	184
Reading and Writing Hexadecimal Numbers	185
Dangling Pointers	185
The ENDLINE Function	186
The ENDFILE Function	186
Using Alternative Input/Output Files	186
Flushing the TEXTIO Buffer	186
Providing Stimulus	187
VITAL Specification and Source Code	187
VITAL Packages	187
VITAL Compliance	188
VITAL Compliance Checking	188
Compiling and Simulating with Accelerated VITAL Packages	188
Util Package	189
get_resolution	189
init_signal_driver()	189
init_signal_spy()	190
signal_force()	190
signal_release()	190
to_real()	190
to_time()	191
Modeling Memory	192

Table of Contents

VHDL87 and VHDL93 Example	194
VHDL02 example	197
Affecting Performance by Cancelling Scheduled Events	201
Converting an Integer Into a bit_vector	201
Chapter 7	
Verilog and SystemVerilog Simulation	203
Terminology	203
Basic Verilog Flow	203
Compiling Verilog Files	203
Creating a Working Library	204
Invoking the Verilog Compiler	204
Incremental Compilation	205
Library Usage	207
SystemVerilog Multi-File Compilation Issues	209
Verilog-XL Compatible Compiler Arguments	210
Verilog-XL uselib Compiler Directive	211
Verilog Configurations	214
Verilog Generate Statements	215
Simulating Verilog Designs	216
Simulator Resolution Limit (Verilog)	216
Event Ordering in Verilog Designs	219
Debugging Event Order Issues	222
Debugging Signal Segmentation Violations	224
Negative Timing Checks	226
Verilog-XL Compatible Simulator Arguments	235
Using Escaped Identifiers	235
Cell Libraries	236
SDF Timing Annotation	237
Delay Modes	237
System Tasks and Functions	238
IEEE Std 1364 System Tasks and Functions	238
SystemVerilog System Tasks and Functions	241
System Tasks and Functions Specific to the Tool	242
Verilog-XL Compatible System Tasks and Functions	246
Compiler Directives	249
IEEE Std 1364 Compiler Directives	249
Verilog-XL Compatible Compiler Directives	250
Verilog PLI/VPI and SystemVerilog DPI	251
Chapter 8	
Recording Simulation Results With Datasets	253
Saving a Simulation to a WLF File	254
WLF File Parameter Overview	255
Limiting the WLF File Size	256
Opening Datasets	257
Viewing Dataset Structure	258
Structure Tab Columns	259

Managing Multiple Datasets	259
GUI	259
Command Line	259
Restricting the Dataset Prefix Display	260
Saving at Intervals with Dataset Snapshot	261
Collapsing Time and Delta Steps	262
Virtual Objects	263
Virtual Signals	264
Virtual Functions	265
Virtual Regions	266
Virtual Types	266
Chapter 9	
Waveform Analysis	267
Objects You Can View	267
Wave Window Overview	267
List Window Overview	271
Adding Objects to the Wave or List Window	271
Adding Objects with Drag and Drop	272
Adding Objects with Menu Selections	272
Adding Objects with a Command	272
Adding Objects with a Window Format File	272
Measuring Time with Cursors in the Wave Window	273
Cursor and Timeline Toolbox	273
Working with Cursors	275
Understanding Cursor Behavior	276
Jumping to a Signal Transition	277
Linking Cursors	277
Setting Time Markers in the List Window	278
Working with Markers	279
Expanded Time in the Wave and List Windows	279
Expanded Time Terminology	279
Recording Expanded Time Information	280
Viewing Expanded Time Information in the Wave Window	281
Selecting the Expanded Time Display Mode	284
Switching Between Time Modes	286
Expanding and Collapsing Simulation Time	286
Expanded Time Viewing in the List Window	287
Expanded Time with examine and Other Commands	289
Zooming the Wave Window Display	289
Zooming with the Menu, Toolbar and Mouse	289
Saving Zoom Range and Scroll Position with Bookmarks	290
Searching in the Wave and List Windows	292
Finding Signal Names	292
Searching for Values or Transitions	293
Using the Expression Builder for Expression Searches	293
Formatting the Wave Window	296
Setting Wave Window Display Preferences	296

Table of Contents

Formatting Objects in the Wave Window	299
Dividing the Wave Window	300
Splitting Wave Window Panes	302
Wave Groups	303
Creating a Wave Group	304
Deleting or Ungrouping a Wave Group	305
Adding Items to an Existing Wave Group	305
Removing Items from an Existing Wave Group.....	305
Miscellaneous Wave Group Features	305
Formatting the List Window	306
Setting List Window Display Properties.....	306
Formatting Objects in the List Window	306
Saving the Window Format.....	308
Printing and Saving Waveforms in the Wave window	309
Saving a .eps Waveform File and Printing in UNIX	309
Printing from the Wave Window on Windows Platforms	310
Printer Page Setup.....	310
Saving List Window Data to a File	310
Combining Objects into Buses	310
Creating a Virtual Signal	311
Configuring New Line Triggering in the List Window.....	312
Using Gating Expressions to Control Triggering	315
Sampling Signals at a Clock Change	316
Miscellaneous Tasks	317
Examining Waveform Values.....	317
Displaying Drivers of the Selected Waveform.....	317
Sorting a Group of Objects in the Wave Window	317
Creating and Managing Breakpoints	317
Signal Breakpoints	317
File-Line Breakpoints	320
Saving and Restoring Breakpoints	321

Chapter 10 Debugging with the Dataflow Window..... 323

Dataflow Window Overview.....	323
Dataflow Usage Flow	323
Post-Simulation Debug Flow Details	324
Common Tasks for Dataflow Debugging	325
Adding Objects to the Dataflow Window.....	326
Exploring the Connectivity of the Design	326
Exploring Designs with the Embedded Wave Viewer.....	328
Tracing Events (Causality)	330
Tracing the Source of an Unknown State (StX)	330
Finding Objects by Name in the Dataflow Window.....	332
Dataflow Concepts.....	333
Symbol Mapping.....	333
Current vs. Post-Simulation Command Output	334
Window vs. Pane	334

Dataflow Window Graphic Interface Reference	335
What Can I View in the Dataflow Window?	336
How is the Dataflow Window Linked to Other Windows?	336
How Can I Print and Save the Display?	336
How Do I Configure Window Options?	338
How Do I Zoom and Pan the Display?	339
Chapter 11	
Signal Spy	341
Designed for Testbenches	342
SignalSpy Supported Types	342
disable_signal_spy	343
enable_signal_spy	345
init_signal_driver	347
init_signal_spy	351
signal_force	355
signal_release	359
Chapter 12	
Standard Delay Format (SDF) Timing Annotation.....	363
Specifying SDF Files for Simulation.....	363
Instance Specification.....	363
SDF Specification with the GUI.....	364
Errors and Warnings	364
VHDL VITAL SDF.....	365
SDF to VHDL Generic Matching.....	365
Resolving Errors	366
Verilog SDF.....	366
\$ssdf_annotate	367
SDF to Verilog Construct Matching.....	368
Optional Edge Specifications	371
Optional Conditions	372
Rounded Timing Values	373
SDF for Mixed VHDL and Verilog Designs.....	373
Interconnect Delays	373
Disabling Timing Checks	374
Troubleshooting	374
Specifying the Wrong Instance.....	374
Matching a Single Timing Check	375
Mistaking a Component or Module Name for an Instance Label.....	375
Forgetting to Specify the Instance	376
Chapter 13	
Value Change Dump (VCD) Files	377
Creating a VCD File	377
Flow for Four-State VCD File	377
Flow for Extended VCD File	378
Case Sensitivity	378

Table of Contents

Using Extended VCD as Stimulus.....	378
Simulating with Input Values from a VCD File.....	379
Replacing Instances with Output Values from a VCD File	380
VCD Commands and VCD Tasks	381
Using VCD Commands with SystemC.....	382
Compressing Files with VCD Tasks.....	384
VCD File from Source To Output	384
VHDL Source Code	384
VCD Simulator Commands	384
VCD Output	386
VCD to WLF	387
Capturing Port Driver Data	387
Driver States	387
Driver Strength	388
Identifier Code	388
Resolving Values	389

Chapter 14

Tcl and Macros (DO Files).....	393
Tcl Features	393
Tcl References	393
Tcl Commands	393
Tcl Command Syntax	394
If Command Syntax	397
Command Substitution	397
Command Separator	398
Multiple-Line Commands.....	398
Evaluation Order.....	398
Tcl Relational Expression Evaluation.....	398
Variable Substitution	399
System Commands	399
List Processing.....	400
Simulator Tcl Commands	400
Simulator Tcl Time Commands.....	401
Conversions.....	402
Relations	402
Arithmetic	403
Tcl Examples	403
Macros (DO Files).....	405
Creating DO Files	405
Using Parameters with DO Files.....	406
Deleting a File from a .do Script.....	406
Making Macro Parameters Optional.....	407
Useful Commands for Handling Breakpoints and Errors.....	408
Error Action in DO Files.....	409

Appendix A

Simulator Variables	411
Variable Settings Report	411
Environment Variables	411
Environment Variable Expansion.....	411
Setting Environment Variables.....	412
Creating Environment Variables	416
Referencing Environment Variables.....	417
Removing Temp Files (VSOUT)	418
Simulator Control Variables	418
Library Path Variables	418
VHDL Compiler Control Variables	420
Verilog Compiler Control Variables.....	425
Simulation Control Variables	428
Setting Simulator Control Variables With The GUI.....	443
Message System Variables	446
Commonly Used INI Variables	448
Variable Precedence.....	451
Simulator State Variables	451
Referencing Simulator State Variables.....	452
Special Considerations for the now Variable	453
 Appendix B	
Location Mapping.....	455
Referencing Source Files with Location Maps	455
Using Location Mapping	455
Pathname Syntax.....	456
How Location Mapping Works	456
Mapping with TCL Variables	456
 Appendix C	
Error and Warning Messages	457
Message System.....	457
Message Format	457
Getting More Information.....	457
Changing Message Severity Level	458
Suppressing Warning Messages	458
Suppressing VCOM Warning Messages	458
Suppressing VLOG Warning Messages	459
Suppressing VSIM Warning Messages	459
Exit Codes	460
Miscellaneous Messages	461
Enforcing Strict 1076 Compliance.....	464
 Appendix D	
Verilog Interfaces to C	467
Implementation Information	467
g++ Compiler Support for use with Interfaces	469
Registering PLI Applications.....	469

Table of Contents

Registering VPI Applications	471
Registering DPI Applications	472
DPI Use Flow	473
Integrating Export Wrappers into an Import Shared Object.....	475
When Your DPI Export Function is Not Getting Called	476
Troubleshooting a Missing DPI Import Function.....	476
Simplified Import of Library Functions	476
Use Model for Locked Work Libraries.....	477
Making Verilog Function Calls from non-DPI C Models	478
Calling C/C++ Functions Defined in PLI Shared Objects from DPI Code	478
Compiling and Linking C Applications for Interfaces	479
Windows Platforms — C	479
Compiling and Linking C++ Applications for Interfaces	481
Windows Platforms — C++	482
Specifying Application Files to Load	483
PLI and VPI File loading	483
DPI File Loading.....	484
Loading Shared Objects with Global Symbol Visibility	484
PLI Example	484
VPI Example	485
DPI Example	486
The PLI Callback reason Argument	487
The sizetf Callback Function.....	488
PLI Object Handles	489
Third Party PLI Applications.....	489
Support for VHDL Objects	490
IEEE Std 1364 ACC Routines.....	491
IEEE Std 1364 TF Routines.....	493
SystemVerilog DPI Access Routines.....	493
Verilog-XL Compatible Routines	494
64-bit Support for PLI	494
Using 64-bit ModelSim with 32-bit Applications	494
PLI/VPI Tracing.....	494
The Purpose of Tracing Files	495
Invoking a Trace	495
Debugging Interface Application Code	496
Appendix E	
Command and Keyboard Shortcuts	497
Command Shortcuts.....	497
Command History Shortcuts.....	497
Main and Source Window Mouse and Keyboard Shortcuts	498
List Window Keyboard Shortcuts	501
Wave Window Mouse and Keyboard Shortcuts	502
Appendix F	
Setting GUI Preferences	505
Customizing the Simulator GUI Layout	505

Layouts and Modes of Operation	505
Custom Layouts	505
Automatic Saving of Layouts	507
Resetting Layouts to Their Defaults	507
Navigating the Graphic User Interface	507
Manipulating Panes	507
Columnar Information Display	509
Quick Access Toolbars	510
Simulator GUI Preferences	510
Setting Preference Variables from the GUI	510
Saving GUI Preferences	513
The modelsim.tcl File	513
Appendix G System Initialization	515
Files Accessed During Startup	515
Initialization Sequence	515
Index	
Third-Party Information	
End-User License Agreement	

List of Examples

Example 2-1. Using the radix define Command	42
Example 2-2. Using radix define to Specify Color	43
Example 3-1. Using the Mentor Graphics Public Encryption Key	132
Example 3-2. Encryption Envelope Contains IP Code to be Protected.....	140
Example 3-3. Encryption Envelope Contains `include Compiler Directives	141
Example 3-4. Results After Compiling with vlog +protect.....	143
Example 7-1. Invocation of the Verilog Compiler	204
Example 7-2. Incremental Compilation Example	205
Example 7-3. Sub-Modules with Common Names	209
Example 13-1. Verilog Counter.....	379
Example 13-2. VHDL Adder.....	379
Example 13-3. Mixed-HDL Design.....	379
Example 13-4. Replacing Instances.....	380
Example 13-5. VCD Output from vcd dumpports.....	390
Example 14-1. Tcl while Loop	403
Example 14-2. Tcl for Command	403
Example 14-3. Tcl foreach Command.....	403
Example 14-4. Tcl break Command	404
Example 14-5. Tcl continue Command.....	404
Example 14-6. Access and Transfer System Information	404
Example 14-7. Tcl Used to Specify Compiler Arguments	405
Example 14-8. Tcl Used to Specify Compiler Arguments—Enhanced	405
Example 14-9. Specifying Files to Compile With argc Macro	407
Example 14-10. Specifying Compiler Arguments With Macro	407
Example 14-11. Specifying Compiler Arguments With Macro—Enhanced.....	407
Example D-1. VPI Application Registration	471
Example F-1. Configure Window Layouts Dialog Box	506

List of Figures

Figure 1-1. Tool Structure and Flow - ModelSim	26
Figure 2-1. Graphical User Interface	37
Figure 2-2. Inline Search Bar	40
Figure 2-3. User-Defined Radix “States” in the Wave Window	42
Figure 2-4. User-Defined Radix “States” in the List Window	43
Figure 2-5. Main Window	44
Figure 2-6. Tabs in the MDI Frame	46
Figure 2-7. Organizing Files in Tab Groups	47
Figure 2-8. Main Window Status Bar	48
Figure 2-9. Change Column Toolbar	49
Figure 2-10. Compile Toolbar	50
Figure 2-11. Coverage Toolbar	51
Figure 2-12. Dataflow Toolbar	52
Figure 2-13. Filter Toolbar	54
Figure 2-14. Help Toolbar	55
Figure 2-15. Layout Toolbar	55
Figure 2-16. Memory Toolbar	56
Figure 2-17. Process Toolbar	56
Figure 2-18. Profile Toolbar	57
Figure 2-19. Simulate Toolbar	58
Figure 2-20. Source Toolbar	59
Figure 2-21. Standard Toolbar	60
Figure 2-22. Wave Toolbar	61
Figure 2-23. Wave Bookmark Toolbar	62
Figure 2-24. Wave Compare Toolbar	63
Figure 2-25. Wave Cursor Toolbar	64
Figure 2-26. Wave Edit Toolbar	64
Figure 2-27. Wave Expand Time Toolbar	65
Figure 2-28. Zoom Toolbar	66
Figure 2-29. Process (Active) Window	67
Figure 2-30. Process Toolbar	68
Figure 2-31. Process (In Region) Window	68
Figure 2-32. Selecting Show Full Path from Process Menu	70
Figure 2-33. Column Heading Changes When States are Filtered	71
Figure 2-34. Process Window Display Options Dialog	72
Figure 2-35. Set Next Active RMB Menu Selection	73
Figure 2-36. Next Active Process Displayed in Order Column	73
Figure 2-37. Sample Process Report in the Transcript Window	74
Figure 2-38. Call Stack Pane	74
Figure 2-39. Class Tree Window	75

List of Figures

Figure 2-40. Class Graph Window	78
Figure 2-41. Dataflow Window - ModelSim.....	80
Figure 2-42. List Window	81
Figure 2-43. Locals Window	84
Figure 2-44. Change Selected Variable Dialog Box	86
Figure 2-45. Memory Panes.....	87
Figure 2-46. Viewing Multiple Memories.....	90
Figure 2-47. Split Screen View of Memory Contents	91
Figure 2-48. Objects Pane	91
Figure 2-49. Objects Filter	92
Figure 2-50. Filtering the Objects List by Name	92
Figure 2-51. Source Window Showing Language Templates	94
Figure 2-52. Displaying Multiple Source Files	95
Figure 2-53. Setting Context from Source Files	96
Figure 2-54. Language Templates	98
Figure 2-55. Create New Design Wizard.....	99
Figure 2-56. Inserting Module Statement from Verilog Language Template	99
Figure 2-57. Language Template Context Menus	100
Figure 2-58. Breakpoint in the Source Window	100
Figure 2-59. Modifying Existing Breakpoints	102
Figure 2-60. Source Window with Inline Search Bar	104
Figure 2-61. Preferences Dialog for Customizing Source Window	105
Figure 2-62. Transcript Window with Inline Search Bar	107
Figure 2-63. Message Viewer Tab.....	110
Figure 2-64. Message Viewer Filter Dialog Box.....	113
Figure 2-65. Watch Pane	114
Figure 2-66. Scrollable Hierarchical Display	115
Figure 2-67. Expanded Array	116
Figure 2-68. Grouping Objects in the Watch Pane	117
Figure 2-69. Wave Window Undock Button.....	118
Figure 2-70. Wave Window Dock Button.....	119
Figure 2-71. Pathnames Pane.....	120
Figure 2-72. Values Pane.....	120
Figure 2-73. Waveform Pane.....	121
Figure 2-74. Analog Sidebar Toolbox	121
Figure 2-75. Cursor Pane.....	122
Figure 2-76. Toolbox for Cursors and Timeline	123
Figure 2-77. Editing Grid and Timeline Properties	124
Figure 2-78. Cursor Properties Dialog.....	125
Figure 2-79. Wave Window - Message Bar.....	125
Figure 3-1. vencrypt Usage Flow.....	130
Figure 3-2. Delivering IP Code with Vendor-Defined Macros	134
Figure 3-3. Delivering IP with `protect Compiler Directives	136
Figure 4-1. Create Project Dialog	147
Figure 4-2. Project Tab in Workspace Pane	147

Figure 4-3. Add items to the Project Dialog	148
Figure 4-4. Create Project File Dialog.....	149
Figure 4-5. Add file to Project Dialog	149
Figure 4-6. Right-click Compile Menu in Project Tab of Workspace.....	150
Figure 4-7. Click Plus Sign to Show Design Hierarchy	150
Figure 4-8. Setting Compile Order	151
Figure 4-9. Grouping Files.....	152
Figure 4-10. Start Simulation Dialog.....	153
Figure 4-11. Structure Tab of the Workspace	153
Figure 4-12. Project Displayed in Workspace	154
Figure 4-13. Add Simulation Configuration Dialog	156
Figure 4-14. Simulation Configuration in the Project Tab	157
Figure 4-15. Add Folder Dialog.....	157
Figure 4-16. Specifying a Project Folder.....	158
Figure 4-17. Project Compiler Settings Dialog	159
Figure 4-18. Specifying File Properties.....	160
Figure 4-19. Project Settings Dialog	161
Figure 5-1. Creating a New Library.....	165
Figure 5-2. Design Unit Information in the Workspace	166
Figure 5-3. Edit Library Mapping Dialog	167
Figure 5-4. Import Library Wizard	172
Figure 6-1. VHDL Delta Delay Process	181
Figure 7-1. Fatal Signal Segmentation Violation (SIGSEGV)	225
Figure 7-2. Current Process Where Error Occurred	225
Figure 7-3. Blue Arrow Indicates Where Code Stopped Executing	225
Figure 7-4. null Values in the Locals Window	226
Figure 8-1. Displaying Two Datasets in the Wave Window	254
Figure 8-2. Open Dataset Dialog Box	257
Figure 8-3. Structure Tabs in Workspace Pane	258
Figure 8-4. The Dataset Browser.....	259
Figure 8-5. Dataset Snapshot Dialog	262
Figure 8-6. Virtual Objects Indicated by Orange Diamond.....	264
Figure 9-1. Undocking the Wave Window	268
Figure 9-2. Docking the Wave Window	269
Figure 9-3. Wave Window Object Pathnames Pane	269
Figure 9-4. Wave Window Object Values Pane	270
Figure 9-5. Wave Window Waveform Pane	270
Figure 9-6. Wave Window Cursor Pane	270
Figure 9-7. Wave Window Messages Bar	271
Figure 9-8. Tabular Format of the List Window	271
Figure 9-9. Original Names of Wave Window Cursors	273
Figure 9-10. Cursor and Timeline Toolbox	273
Figure 9-11. Grid and Timeline Properties	274
Figure 9-12. Cursor Properties Dialog Box	275
Figure 9-13. Find Previous and Next Transition Icons	277

List of Figures

Figure 9-14. Cursor Linking Menu	277
Figure 9-15. Configure Cursor Links Dialog.....	278
Figure 9-16. Time Markers in the List Window	278
Figure 9-17. Waveform Pane with Collapsed Event and Delta Time	282
Figure 9-18. Waveform Pane with Expanded Time at a Specific Time	282
Figure 9-19. Waveform Pane with Event Not Logged	283
Figure 9-20. Waveform Pane with Expanded Time Over a Time Range	283
Figure 9-21. List Window After write list -delta none Option is Used.....	288
Figure 9-22. List Window After write list -delta collapse Option is Used	288
Figure 9-23. List Window After write list -delta all Option is Used.....	288
Figure 9-24. List Window After write list -event Option is Used.....	289
Figure 9-25. Bookmark Properties Dialog.....	291
Figure 9-26. Find Signals by Name or Value	292
Figure 9-27. Wave Signal Search Dialog	293
Figure 9-28. Expression Builder Dialog Box	294
Figure 9-29. Selecting Signals for Expression Builder	295
Figure 9-30. Display Tab of the Wave Window Preferences Dialog Box.....	297
Figure 9-31. Grid & Timeline Tab of Wave Window Preferences Dialog Box	298
Figure 9-32. Clock Cycles in Timeline of Wave Window	299
Figure 9-33. Changing Signal Radix	299
Figure 9-34. Separate Signals with Wave Window Dividers	301
Figure 9-35. Splitting Wave Window Panes	303
Figure 9-36. Fill in the name of the group in the Group Name field.	304
Figure 9-37. Wave groups denoted by red diamond	304
Figure 9-38. Modifying List Window Display Properties.....	306
Figure 9-39. List Signal Properties Dialog	307
Figure 9-40. Changing the Radix in the List Window.....	308
Figure 9-41. Save Format Dialog.	309
Figure 9-42. Signals Combined to Create Virtual Bus	311
Figure 9-43. Virtual Expression Builder	312
Figure 9-44. Line Triggering in the List Window	313
Figure 9-45. Setting Trigger Properties	314
Figure 9-46. Trigger Gating Using Expression Builder.....	315
Figure 9-47. Modifying the Breakpoints Dialog	319
Figure 9-48. Signal Breakpoint Dialog	319
Figure 9-49. Breakpoints in the Source Window.....	320
Figure 9-50. File Breakpoint Dialog Box	321
Figure 10-1. The Dataflow Window (undocked) - ModelSim	323
Figure 10-2. Dataflow Debugging Usage Flow.....	324
Figure 10-3. Green Highlighting Shows Your Path Through the Design	328
Figure 10-4. Wave Viewer Displays Inputs and Outputs of Selected Process	329
Figure 10-5. Unknown States Shown as Red Lines in Wave Window	331
Figure 10-6. Find in Dataflow Dialog	332
Figure 10-7. Dataflow Window and Panes	335
Figure 10-8. The Print Postscript Dialog.....	337

Figure 10-9. The Print Dialog	337
Figure 10-10. The Dataflow Page Setup Dialog	338
Figure 10-11. Configuring Dataflow Options	339
Figure 12-1. SDF Tab in Start Simulation Dialog	364
Figure A-1. Runtime Options Dialog: Defaults Tab	444
Figure A-2. Runtime Options Dialog Box: Assertions Tab.	445
Figure A-3. Runtime Options Dialog Box, WLF Files Tab	446
Figure D-1. DPI Use Flow Diagram	474
Figure F-1. Save Current Window Layout Dialog Box	506
Figure F-2. GUI: Window Pane.	508
Figure F-3. GUI: Double Bar.	508
Figure F-4. GUI: Undock Button.	508
Figure F-5. GUI: Dock Button.	509
Figure F-6. GUI: Zoom Button	509
Figure F-7. GUI: Unzoom Button	509
Figure F-8. Toolbar Manipulation	510
Figure F-9. Change Text Fonts for Selected Windows	512
Figure F-10. Making Global Font Changes	512

List of Tables

Table 1-1. Simulation Tasks - ModelSim	27
Table 1-2. Use Modes	31
Table 1-3. Definition of Object by Language	33
Table 1-4. Text Conventions	35
Table 2-1. GUI Windows and Panes	38
Table 2-2. Design Object Icons	39
Table 2-3. Icon Shapes and Design Object Types	39
Table 2-4. Graphic Elements of Inline Search Bar	40
Table 2-5. Commands for Tab Groups	47
Table 2-6. Information Displayed in Status Bar	48
Table 2-7. Change Column Toolbar Buttons	50
Table 2-8. Compile Toolbar Buttons	51
Table 2-9. Coverage Toolbar Buttons	51
Table 2-10. Dataflow Toolbar Buttons	52
Table 2-11. Filter Toolbar Buttons	54
Table 2-12. Help Toolbar Buttons	55
Table 2-13. Layout Toolbar Buttons	56
Table 2-14. Memory Toolbar Buttons	56
Table 2-15. Process Toolbar Buttons	57
Table 2-16. Profile Toolbar Buttons	57
Table 2-17. Simulate Toolbar Buttons	58
Table 2-18. Source Toolbar Buttons	59
Table 2-19. Standard Toolbar Buttons	60
Table 2-20. Wave Toolbar Buttons	61
Table 2-21. Wave Bookmark Toolbar Buttons	62
Table 2-22. Wave Compare Toolbar Buttons	63
Table 2-23. Wave Cursor Toolbar Buttons	64
Table 2-24. Wave Edit Toolbar Buttons	65
Table 2-25. Wave Expand Time Toolbar Buttons	66
Table 2-26. Zoom Toolbar Buttons	66
Table 2-27. Class Tree Window Icons	76
Table 2-28. Memories	87
Table 2-29. Message Viewer Tasks	110
Table 2-30. Analog Sidebar Icons	122
Table 2-31. Icons and Actions	123
Table 3-1. Compile Options for the -nodebug Compiling	139
Table 7-1. Example Modules—With and Without Timescale Directive	217
Table 7-2. Evaluation 1 of always Statements	220
Table 7-3. Evaluation 2 of always Statement	221
Table 7-4. IEEE Std 1364 System Tasks and Functions - 1	239

Table 7-5. IEEE Std 1364 System Tasks and Functions - 2	239
Table 7-6. IEEE Std 1364 System Tasks	240
Table 7-7. IEEE Std 1364 File I/O Tasks	240
Table 7-8. SystemVerilog System Tasks and Functions - 1	241
Table 7-9. SystemVerilog System Tasks and Functions - 2	241
Table 7-10. SystemVerilog System Tasks and Functions - 4	242
Table 7-11. Tool-Specific Verilog System Tasks and Functions	242
Table 8-1. WLF File Parameters	255
Table 8-2. Structure Tab Columns	259
Table 8-3. vsim Arguments for Collapsing Time and Delta Steps	263
Table 9-1. Cursor and Timeline Toolbox Icons and Actions	273
Table 9-2. Actions for Cursors	275
Table 9-3. Actions for Time Markers	279
Table 9-4. Recording Delta and Event Time Information	280
Table 9-5. Menu Selections for Expanded Time Display Modes	285
Table 9-6. Actions for Bookmarks	291
Table 9-7. Actions for Dividers	302
Table 9-8. Triggering Options	314
Table 10-1. Icon and Menu Selections for Exploring Design Connectivity	327
Table 10-2. Dataflow Window Links to Other Windows and Panes	336
Table 11-1. Signal Spy Reference Comparison	341
Table 12-1. Matching SDF to VHDL Generics	365
Table 12-2. Matching SDF IOPATH to Verilog	368
Table 12-3. Matching SDF INTERCONNECT and PORT to Verilog	368
Table 12-4. Matching SDF PATHPULSE and GLOBALPATHPULSE to Verilog	369
Table 12-5. Matching SDF DEVICE to Verilog	369
Table 12-6. Matching SDF SETUP to Verilog	369
Table 12-7. Matching SDF HOLD to Verilog	369
Table 12-8. Matching SDF SETUPHOLD to Verilog	370
Table 12-9. Matching SDF RECOVERY to Verilog	370
Table 12-10. Matching SDF REMOVAL to Verilog	370
Table 12-11. Matching SDF RECREM to Verilog	370
Table 12-12. Matching SDF SKEW to Verilog	370
Table 12-13. Matching SDF WIDTH to Verilog	371
Table 12-14. Matching SDF PERIOD to Verilog	371
Table 12-15. Matching SDF NOCHANGE to Verilog	371
Table 12-16. Matching Verilog Timing Checks to SDF SETUP	371
Table 12-17. SDF Data May Be More Accurate Than Model	372
Table 12-18. Matching Explicit Verilog Edge Transitions to Verilog	372
Table 12-19. SDF Timing Check Conditions	372
Table 12-20. SDF Path Delay Conditions	373
Table 12-21. Disabling Timing Checks	374
Table 13-1. VCD Commands and SystemTasks	381
Table 13-2. VCD Dumpport Commands and System Tasks	382
Table 13-3. VCD Commands and System Tasks for Multiple VCD Files	382

List of Tables


Table 13-4. SystemC Types	383
Table 13-5. Driver States	387
Table 13-6. State When Direction is Unknown	387
Table 13-7. Driver Strength	388
Table 13-8. Values for file_format Argument	390
Table 13-9. Sample Driver Data	390
Table 14-1. Changes to ModelSim Commands	394
Table 14-2. Tcl Backslash Sequences	396
Table 14-3. Tcl List Commands	400
Table 14-4. Simulator-Specific Tcl Commands	400
Table 14-5. Tcl Time Conversion Commands	402
Table 14-6. Tcl Time Relation Commands	402
Table 14-7. Tcl Time Arithmetic Commands	403
Table 14-8. Commands for Handling Breakpoints and Errors in Macros	408
Table A-1. Add Library Mappings to modelsim.ini File	417
Table A-2. License Variable: License Options	433
Table A-3. MessageFormat Variable: Accepted Values	434
Table C-1. Severity Level Types	457
Table C-2. Exit Codes	460
Table D-1. VPI Compatibility Considerations	468
Table D-2. vsim Arguments for DPI Application	484
Table D-3. Supported VHDL Objects	490
Table D-4. Supported ACC Routines	491
Table D-5. Supported TF Routines	493
Table D-6. Values for <action> Argument	495
Table E-1. Command History Shortcuts	497
Table E-2. Mouse Shortcuts	498
Table E-3. Keyboard Shortcuts	498
Table E-4. List Window Keyboard Shortcuts	501
Table E-5. Wave Window Mouse Shortcuts	502
Table E-6. Wave Window Keyboard Shortcuts	502
Table F-1. Predefined GUI Layouts	505
Table F-2. Global Fonts	512
Table G-1. Files Accessed During Startup	515

Chapter 1 Introduction

This documentation was written for UNIX, Linux, and Microsoft Windows users. Not all versions of ModelSim are supported on all platforms. Contact your Mentor Graphics sales representative for details.

Tool Structure and Flow

The diagram below illustrates the structure of the ModelSim tool, and the flow of that tool as it is used to verify a design.

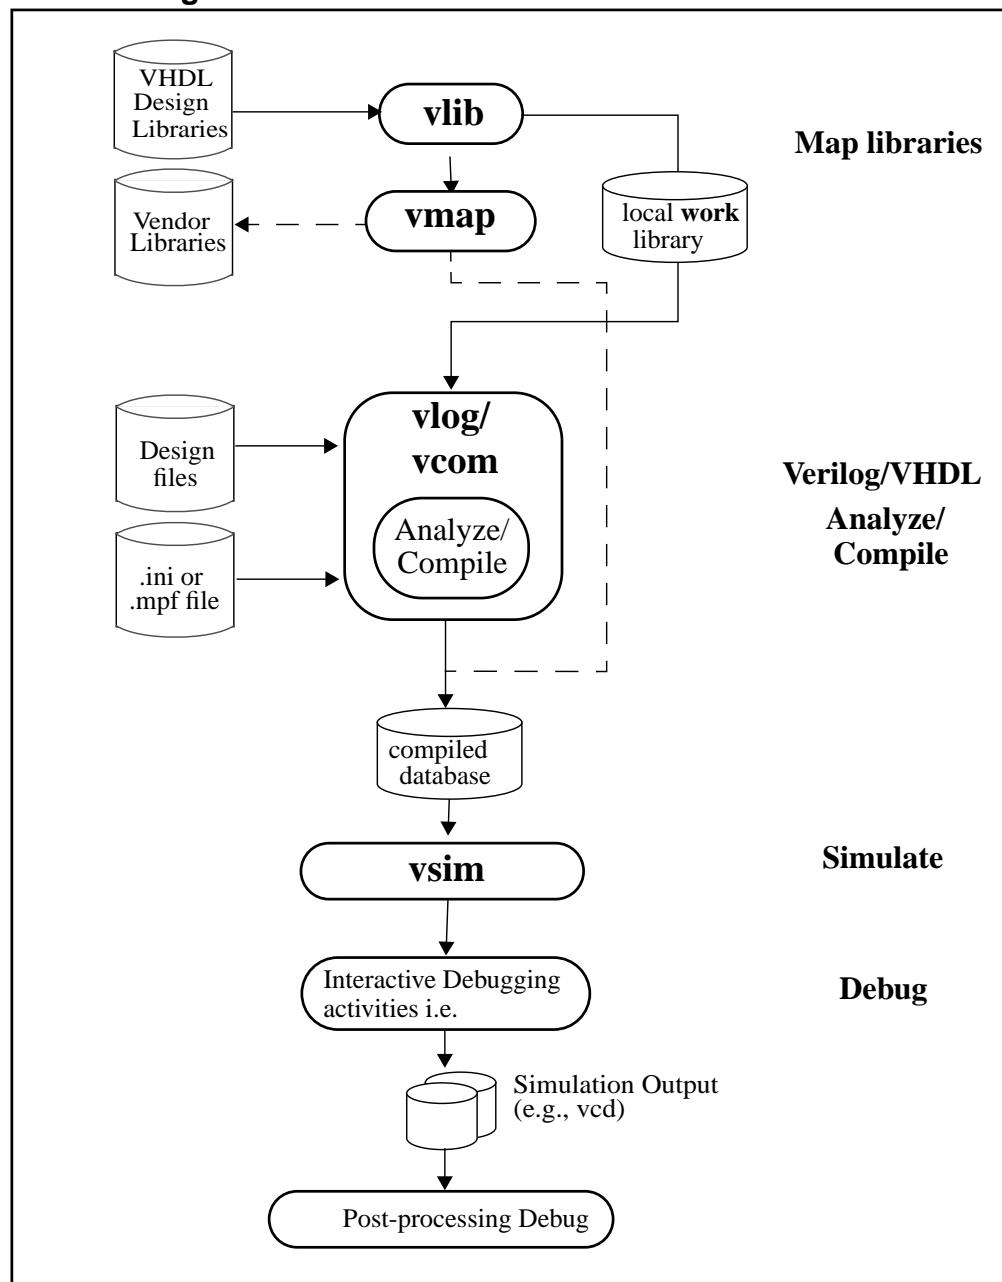Figure 1-1. Tool Structure and Flow - ModelSim

Simulation Task Overview

The following table provides a reference for the tasks required for compiling, loading, and simulating a design in ModelSim.

Table 1-1. Simulation Tasks - ModelSim

Task	Example Command Line Entry	GUI Menu Pull-down	GUI Icons
Step 1: Map libraries	vlib <library_name> vmap work <library_name>	a. File > New > Project b. Enter library name c. Add design files to project	N/A
Step 2: Compile the design	vlog file1.v file2.v ... (Verilog) vcom file1.vhd file2.vhd ... (VHDL)	a. Compile > Compile or Compile > Compile All	Compile or Compile All icons:  
Step 3: Load the design into the simulator	vsim <top> or vsim <opt_name>	a. Simulate > Start Simulation b. Click on top design module or optimized design unit name c. Click OK This action loads the design for simulation	Simulate icon: 
Step 4: Run the simulation	run step	Simulate > Run	Run, or Run continue, or Run -all icons:   
Step 5: Debug the design	Common debugging commands: bp describe drivers examine force log show	N/A	N/A

Basic Steps for Simulation

This section provides further detail related to each step in the process of simulating your design using ModelSim.

Step 1 — Collecting Files and Mapping Libraries

Files needed to run ModelSim on your design:

- design files (VHDL and/or Verilog), including stimulus for the design
- libraries, both working and resource
- modelsim.ini (automatically created by the library mapping command)

Providing Stimulus to the Design

You can provide stimulus to your design in several ways:

- Language based testbench
- Tcl-based ModelSim interactive command, `force`
- VCD files / commands
See [Creating a VCD File](#) and [Using Extended VCD as Stimulus](#)
- 3rd party testbench generation tools

What is a Library?

A library is a location where data to be used for simulation is stored. Libraries are ModelSim's way of managing the creation of data before it is needed for use in simulation. It also serves as a way to streamline simulation invocation. Instead of compiling all design data each and every time you simulate, ModelSim uses binary pre-compiled data from these libraries. So, if you make a changes to a single Verilog module, only that module is recompiled, rather than all modules in the design.

Working and Resource Libraries

Design libraries can be used in two ways: 1) as a local working library that contains the compiled version of your design; 2) as a resource library. The contents of your working library will change as you update your design and recompile. A resource library is typically unchanging, and serves as a parts source for your design. Examples of resource libraries might be: shared information within your group, vendor libraries, packages, or previously compiled elements of your own working design. You can create your own resource libraries, or they may be supplied by another design team or a third party (e.g., a silicon vendor).

For more information on resource libraries and working libraries, see [Working Library Versus Resource Libraries](#), [Managing Library Contents](#), [Working with Design Libraries](#), and [Specifying Resource Libraries](#).

Creating the Logical Library (**vlib**)

Before you can compile your source files, you must create a library in which to store the compilation results. You can create the logical library using the GUI, using **File > New > Library** (see [Creating a Library](#)), or you can use the **vlib** command. For example, the command:

```
vlib work
```

creates a library named **work**. By default, compilation results are stored in the **work** library.

Mapping the Logical Work to the Physical Work Directory (**vmap**)

VHDL uses logical library names that can be mapped to ModelSim library directories. If libraries are not mapped properly, and you invoke your simulation, necessary components will not be loaded and simulation will fail. Similarly, compilation can also depend on proper library mapping.

By default, ModelSim can find libraries in your current directory (assuming they have the right name), but for it to find libraries located elsewhere, you need to map a logical library name to the pathname of the library.

You can use the GUI ([Library Mappings with the GUI](#)), a command ([Library Mapping from the Command Line](#)), or a project ([Getting Started with Projects](#)) to assign a logical name to a design library.

The format for command line entry is:

```
vmap <logical_name> <directory_pathname>
```

This command sets the mapping between a logical library name and a directory.

Step 2 — Compiling the Design (**vlog**, **vcom**, **sccom**)

Designs are compiled with one of the three language compilers.

Compiling Verilog (**vlog**)

ModelSim's compiler for the Verilog modules in your design is **vlog**. Verilog files may be compiled in any order, as they are not order dependent. See [Compiling Verilog Files](#) for details.

Compiling VHDL (**vcom**)

ModelSim's compiler for VHDL design units is **vcom**. VHDL files must be compiled according to the design requirements of the design. Projects may assist you in determining the compile order: for more information, see [Auto-Generating Compile Order](#). See [Compiling VHDL Files](#) for details on VHDL compilation.

Step 3 — Loading the Design for Simulation

vsim topLevelModule

Your design is ready for simulation after it has been compiled. You may then invoke `vsim` with the names of the top-level modules (many designs contain only one top-level module). For example, if your top-level modules are "testbench" and "globals", then invoke the simulator as follows:

```
vsim testbench globals
```

After the simulator loads the top-level modules, it iteratively loads the instantiated modules and UDPs in the design hierarchy, linking the design together by connecting the ports and resolving hierarchical references.

Using SDF

You can incorporate actual delay values to the simulation by applying SDF back-annotation files to the design. For more information on how SDF is used in the design, see [Specifying SDF Files for Simulation](#).

Step 4 — Simulating the Design

Once the design has been successfully loaded, the simulation time is set to zero, and you must enter a `run` command to begin simulation. For more information, see [Verilog and SystemVerilog Simulation](#), and [VHDL Simulation](#).

The basic simulator commands are:

- [add wave](#)
- [force](#)
- [bp](#)
- [run](#)
- [step](#)

Step 5 — Debugging the Design

Numerous tools and windows useful in debugging your design are available from the ModelSim GUI. In addition, several basic simulation commands are available from the command line to assist you in debugging your design:

- [describe](#)
- [drivers](#)

- [examine](#)
- [force](#)
- [log](#)
- [show](#)

Modes of Operation

Many users run ModelSim interactively—pushing buttons and/or pulling down menus in a series of windows in the GUI (graphical user interface). But there are really three modes of ModelSim operation, the characteristics of which are outlined in the following table.:.

Table 1-2. Use Modes

ModelSim use mode	Characteristics	How ModelSim is invoked
GUI	interactive; has graphical windows, push-buttons, menus, and a command line in the transcript. Default mode	via a desktop icon or from the OS command shell prompt. Example: OS> vsim
Command-line	interactive command line; no GUI	with -c argument at the OS command prompt. Example: OS> vsim -c
Batch	non-interactive batch script; no windows or interactive command line	at OS command shell prompt using redirection of standard input. Example: C:\ vsim vfiles.v <infile >outfile

The ModelSim User's Manual focuses primarily on the GUI mode of operation. However, this section provides an introduction to the Command-line and Batch modes.

A command is available to help batch users access commands not available for use in batch mode. See the [batch_mode](#) command for more details.

Command Line Mode

In command line mode ModelSim executes any startup command specified by the [Startup](#) variable in the *modelsim.ini* file. If [vsim](#) is invoked with the **-do "command_string"** option, a DO file (macro) is called. A DO file executed in this manner will override any startup command in the *modelsim.ini* file.

During simulation a transcript file is created containing any messages to stdout. A transcript file created in command line mode may be used as a DO file if you invoke the [transcript on](#) command after the design loads (see the example below). The [transcript on](#) command writes all

of the commands you invoke to the transcript file. For example, the following series of commands results in a transcript file that can be used for command input if *top* is re-simulated (remove the **quit -f** command from the transcript file if you want to remain in the simulator).

```
vsim -c top
```

library and design loading messages... then execute:

```
transcript on
force clk 1 50, 0 100 -repeat 100
run 500
run @5000
quit -f
```

Rename transcript files that you intend to use as DO files. They will be overwritten the next time you run **vsim** if you don't rename them. Also, simulator messages are already commented out, but any messages generated from your design (and subsequently written to the transcript file) will cause the simulator to pause. A transcript file that contains only valid simulator commands will work fine; comment out anything else with a "#".

Stand-alone tools pick up project settings in command line mode if they are invoked in the project's root directory. If invoked outside the project directory, stand-alone tools pick up project settings only if you set the **MODELSIM** environment variable to the path to the project file (<Project_Root_Dir>/<Project_Name>.mpf).

Batch Mode

Batch mode is an operational mode that provides neither an interactive command line nor interactive windows. In a Windows environment, **vsim** is run from a Windows command prompt and standard input and output are redirected from and to files.

Here is an example of a batch mode simulation using redirection of std input and output:

```
vsim counter < yourfile > outfile
```

where "yourfile" is a script containing various ModelSim commands.

You can use the CTRL-C keyboard interrupt to break batch simulation in UNIX and Windows environments.

What is an "Object"

Because ModelSim works with so many languages (Verilog, VHDL, SystemVerilog,), an "object" refers to any valid design element in those languages. The word "object" is used

whenever a specific language reference is not needed. Depending on the context, “object” can refer to any of the following:

Table 1-3. Definition of Object by Language

Language	An object can be
VHDL	block statement, component instantiation, constant, generate statement, generic, package, signal, alias, or variable
Verilog	function, module instantiation, named fork, named begin, net, task, register, or variable
SystemVerilog	In addition to those listed above for Verilog: class, package, program, interface, array, directive, property, or sequence
PSL	property, sequence, directive, or endpoint

Standards Supported

ModelSim VHDL implements the VHDL language as defined by IEEE Standards 1076-1987, 1076-1993, and 1076-2002. ModelSim also supports the 1164-1993 *Standard Multivalue Logic System for VHDL Interoperability*, and the 1076.2-1996 *Standard VHDL Mathematical Packages* standards. Any design developed with ModelSim will be compatible with any other VHDL system that is compliant with the 1076 specs.

ModelSim Verilog implements the Verilog language as defined by the IEEE Std 1364-1995 and 1364-2005. ModelSim Verilog also supports a partial implementation of SystemVerilog P1800-2005 (see `<install_dir>/modeltech/docs/technotes/sysvlog.note` for implementation details). Both PLI (Programming Language Interface) and VCD (Value Change Dump) are supported for ModelSim users.

In addition, all products support SDF 1.0 through 4.0 (except the NETDELAY statement), VITAL 2.2b, VITAL'95 – IEEE 1076.4-1995, and VITAL 2000 – IEEE 1076.4-2000.

Assumptions

We assume that you are familiar with the use of your operating system and its graphical interface.

We also assume that you have a working knowledge of the design languages. Although ModelSim is an excellent tool to use while learning HDL concepts and practices, this document is not written to support that goal.

Finally, we assume that you have worked the appropriate lessons in the *ModelSim Tutorial* and are familiar with the basic functionality of ModelSim. The *ModelSim Tutorial* is available from the ModelSim **Help** menu.

Sections In This Document

In addition to this introduction, you will find the following major sections in this document:

[Chapter 4, Projects](#) — This chapter discusses ModelSim "projects", a container for design files and their associated simulation properties.

[Chapter 5, Design Libraries](#) — To simulate an HDL design using ModelSim, you need to know how to create, compile, maintain, and delete design libraries as described in this chapter.

[Chapter 6, VHDL Simulation](#) — This chapter is an overview of compilation and simulation for VHDL within the ModelSim environment.

[Chapter 7, Verilog and SystemVerilog Simulation](#) — This chapter is an overview of compilation and simulation for Verilog and SystemVerilog within the ModelSim environment.

[Chapter 8, Recording Simulation Results With Datasets](#) — This chapter describes datasets and virtuals - both methods for viewing and organizing simulation data in ModelSim.

[Chapter 9, Waveform Analysis](#) — This chapter describes how to perform waveform analysis with the ModelSim Wave and List windows.

[Chapter 10, Debugging with the Dataflow Window](#) — This chapter describes how to trace signals and assess causality using the ModelSim Dataflow window.

[Chapter 11, Signal Spy](#) — This chapter describes Signal Spy, a set of VHDL procedures and Verilog system tasks that let you monitor, drive, force, or release a design object from anywhere in the hierarchy of a VHDL or mixed design.

[Chapter 12, Standard Delay Format \(SDF\) Timing Annotation](#) — This chapter discusses ModelSim's implementation of SDF (Standard Delay Format) timing annotation. Included are sections on VITAL SDF and Verilog SDF, plus troubleshooting.

[Chapter 13, Value Change Dump \(VCD\) Files](#) — This chapter explains Model Technology's Verilog VCD implementation for ModelSim. The VCD usage is extended to include VHDL designs.

[Chapter 14, Tcl and Macros \(DO Files\)](#) — This chapter provides an overview of Tcl (tool command language) as used with ModelSim.

[Appendix A, Simulator Variables](#) — This appendix describes environment, system, and preference variables used in ModelSim.

Appendix [C, Error and Warning Messages](#) — This appendix describes ModelSim error and warning messages.

Appendix [D, Verilog Interfaces to C](#) — This appendix describes the ModelSim implementation of the Verilog PLI and VPI.

Appendix [E, Command and Keyboard Shortcuts](#) — This appendix describes ModelSim keyboard and mouse shortcuts.

Appendix [G, System Initialization](#) — This appendix describes what happens during ModelSim startup.

Text Conventions

Text conventions used in this manual include:

Table 1-4. Text Conventions

Text Type	Description
<i>italic text</i>	provides emphasis and sets off filenames, pathnames, and design unit names
bold text	indicates commands, command options, menu choices, package and library logical names, as well as variables, dialog box selections, and language keywords
monospace type	monospace type is used for program and command examples
The right angle (>)	is used to connect menu choices when traversing menus as in: File > Quit
UPPER CASE	denotes file types used by ModelSim (e.g., DO, WLF,INI, MPF, PDF, etc.)

Installation Directory Pathnames


When referring to installation paths, this manual uses “modeltech” as a generic representation of the installation directory for all versions of ModelSim. The actual installation directory on your system may contain version information.

Chapter 2

Graphical User Interface

ModelSim's graphical user interface (GUI) consists of various windows that give access to parts of your design and numerous debugging tools. Some of the windows display as panes within the ModelSim Main window and some display as windows in the Multiple Document Interface (MDI) frame.

Figure 2-1. Graphical User Interface

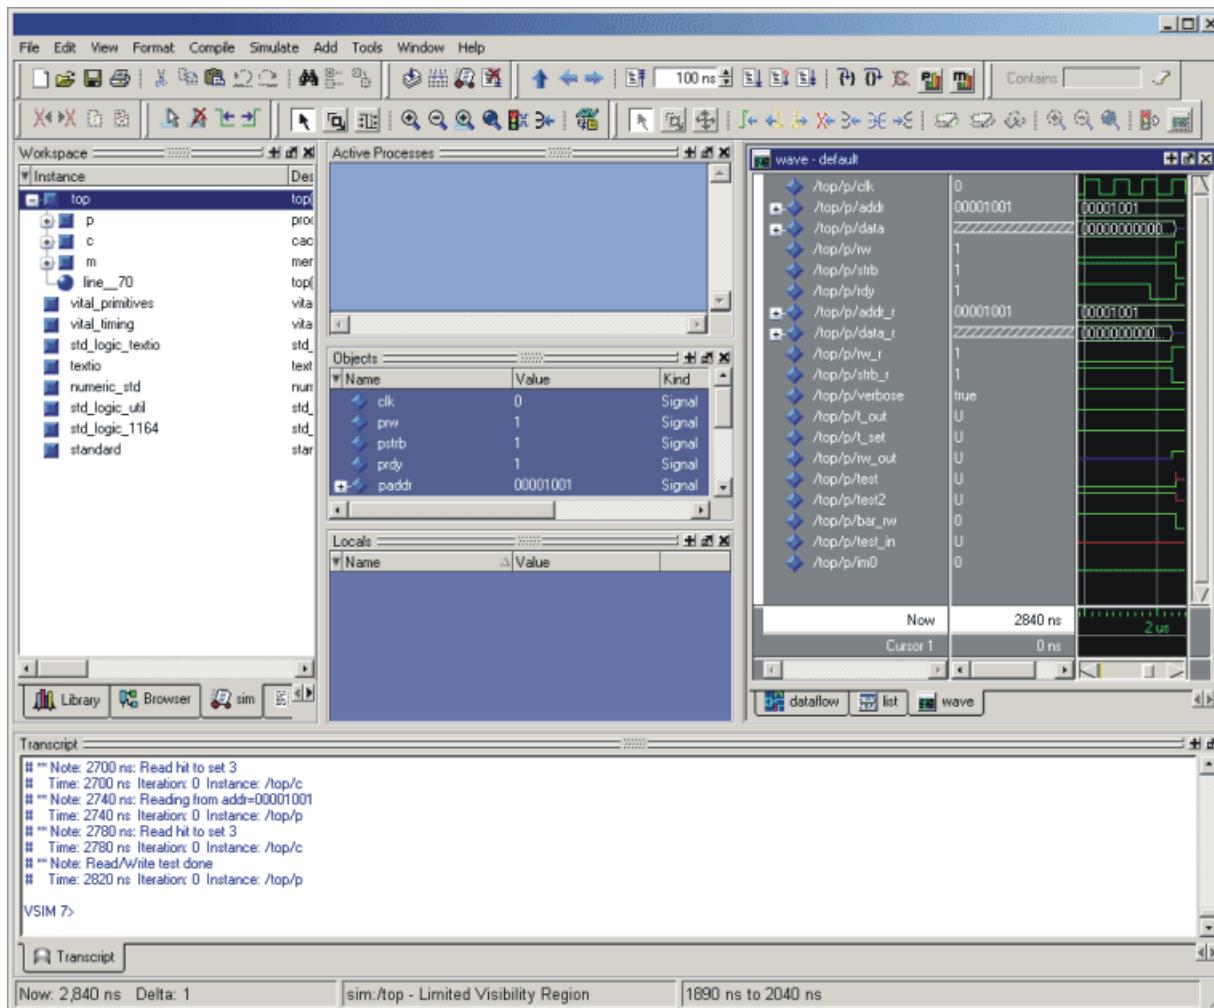

The following table summarizes all of the available windows and panes.

Table 2-1. GUI Windows and Panes

Window/pane name	Description	More details
Main	central GUI access point	Main Window
Process	displays all processes that are scheduled to run during the current simulation cycle	Process Window
Class Browsers	displays interactive relationships of SystemVerilog classes	Class Tree Window Class Graph Window
Dataflow	displays "physical" connectivity and lets you trace events (causality)	Dataflow Window
List	shows waveform data in a tabular format	List Window
Locals	displays data objects that are immediately visible at the current execution point of the selected process	Locals Window
Memory	a Workspace tab and MDI windows that show memories and their contents	Memory Panes
Watch	displays signal or variable values at the current simulation time	Watch Pane
Objects	displays all declared data objects in the current scope	Objects Pane
Source	a text editor for viewing and editing HDL, DO, etc. files	Source Window
Transcript	keeps a running history of commands and messages and provides a command-line interface	Transcript Window
Wave	displays waveforms	Wave Window
Workspace	provides easy access to projects, libraries, compiled design units, memories, etc.	Workspace

The windows and panes are customizable in that you can position and size them as you see fit, and ModelSim will remember your settings upon subsequent invocations. See [Navigating the Graphic User Interface](#) for more details.

Design Object Icons and Their Meaning

The color and shape of icons convey information about the language and type of a design object. **Table 2-2** shows the icon colors and the languages they indicate.

Table 2-2. Design Object Icons

Icon color	Design Language
light blue	Verilog or SystemVerilog
dark blue	VHDL
orange	virtual object

Here is a list of icon shapes and the design object types they indicate:

Table 2-3. Icon Shapes and Design Object Types

icon shape	example	design object type
square		any scope (VHDL block, Verilog named block, SC module, class, interface, task, function, etc.)
circle		process
diamond		valued object (signals, nets, registers, etc.)
caution sign		comparison object
diamond with red dot		an editable waveform created with the waveform editor
star		transaction; The color of the star for each transaction depends on the language of the region in which the transaction stream occurs: dark blue for VHDL, light blue for Verilog and SystemVerilog, green for SystemC.

Setting Fonts

You may need to adjust font settings to accommodate the aspect ratios of wide screen and double screen displays or to handle launching ModelSim from an X-session.

Font Scaling

To change font scaling, select the Transcript window, then **Transcript > Adjust Font Scaling**. You'll need a ruler to complete the instructions in the lower right corner of the dialog. When you have entered the pixel and inches information, click OK to close the dialog. Then, restart ModelSim to see the change. This is a one time setting; you shouldn't have to set it again unless you change display resolution or the hardware (monitor or video card). The font scaling applies

to Windows and UNIX operating systems. On UNIX systems, the font scaling is stored based on the \$DISPLAY environment variable.

Inline Search Bar for Text-Based Windows

The text-based windows of the graphic interface – Notepad, Source, and Transcript – include an inline search bar that supports incremental searching. When a text-based window is active, the inline search bar can be activated by doing any one of the following

- Select **Edit > Find** in the menu bar.
- Click the **Find** icon in the toolbar.
- Press **Ctrl f** on your Windows keyboard or **Control s** on your UNIX or Linux keyboard.

Figure 2-2. Inline Search Bar



Other hotkey actions include:

- Esc key — closes the Inline Search Bar
- Enter (Windows) or Return (UNIX or Linux) key — initiates a “Find Next” action

The graphic elements associated with the Inline Search Bar are shown in .

Table 2-4. Graphic Elements of Inline Search Bar

Graphic Element	Action
	opens the inline search bar for text-based windows (Notepad, Source, and Transcript)
	closes the inline search bar
	searches for the next occurrence of the text entered in the search field
	searches upward through the transcript or source code; default is to search down
	search must match the case of the text entered in the search field

Table 2-4. Graphic Elements of Inline Search Bar

Graphic Element	Action
	searches for a regular expression
	searches for whole words in the source code that match those entered in the search field (disables incremental searching)
	places a blue flag (bookmark) in the line number column of every line of code that contains an occurrence of the text entered in the search field (Source window only)

To remove the bookmarks (blue flags in line number column) placed by the Mark All Matches action in Source window, select **Source > Clear Bookmarks** from the menu bar.

User-Defined Radices

A user definable radix is used to map bit patterns to a set of enumeration labels. After defining a new radix, the radix will be available for use in the List, Watch, and Wave windows or with the **examine** command.

There are four commands used to manage user defined radices:

- [radix define](#)
- [radix names](#)
- [radix list](#)
- [radix delete](#)

Using the radix define Command

The **radix define** command is used to create or modify a radix. It must include a radix name and a definition body, which consists of a list of number pattern, label pairs. Optionally, it may include the -color argument for setting the radix color (see [Example 2-2](#)).

```
{
  <numeric-value> <enum-label>,
  <numeric-value> <enum-label>
  -default <radix>
}
```

A <numeric-value> is any legitimate HDL integer numeric literal. To be more specific:

```
<base>#<base-integer># --- <base> is 2, 8, 10, or 16
```

```
<base>"bit-value"      --- <base> is B, O, or X
<integer>
<size>'<base><number>  --- <size> is an integer, <base> is b, d, o, or h.
```

Check the Verilog and VHDL LRM for exact definitions of these numeric literals.

The comma (,) in the definition body is optional. The <enum-label> is any arbitrary string. It should be quoted (""), especially if it contains spaces.

The -default entry is optional. If present, it defines the radix to use if a match is not found for a given value. The -default entry can appear anywhere in the list, it does not have to be at the end.


[Example 2-1](#) shows the **radix define** command used to create a radix called “States,” which will display state values in the List, Watch, and Wave windows instead of numeric values.

Example 2-1. Using the **radix define** Command


```
radix define States {
    11'b000000000001 "IDLE",
    11'b000000000010 "CTRL",
    11'b0000000000100 "WT_WD_1",
    11'b000000001000 "WT_WD_2",
    11'b000000100000 "WT_BLK_1",
    11'b0000001000000 "WT_BLK_2",
    11'b000001000000 "WT_BLK_3",
    11'b000100000000 "WT_BLK_4",
    11'b001000000000 "WT_BLK_5",
    11'b010000000000 "RD_WD_1",
    11'b100000000000 "RD_WD_2",
    -default hex
}
```

[Figure 2-3](#) shows an FSM signal called */test-sm/sm_seq0/sm_0/state* in the Wave window with a binary radix and with the user-defined “States” radix (as defined in [Example 2-1](#)).

Figure 2-3. User-Defined Radix “States” in the Wave Window

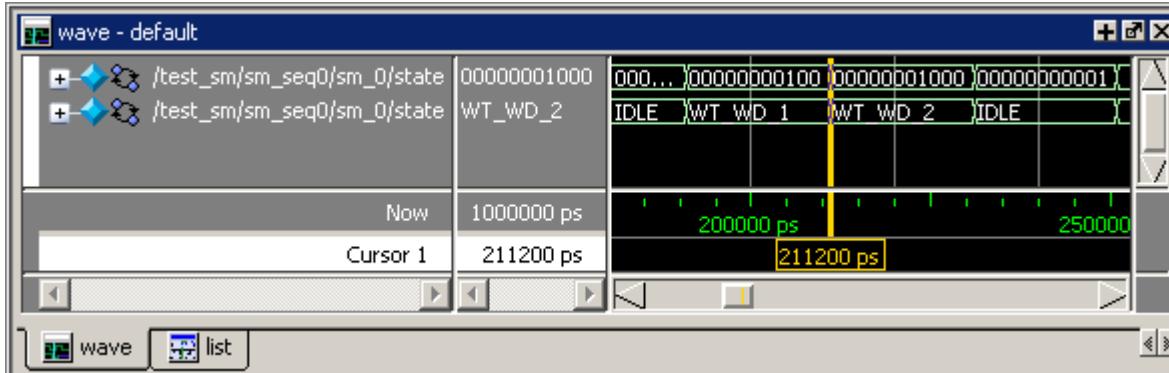

[Figure 2-4](#) shows an FSM signal called */test-sm/sm_seq0/sm_0/state* in the List window with a binary radix and with the user-defined “States” radix (as defined in [Example 2-1](#))

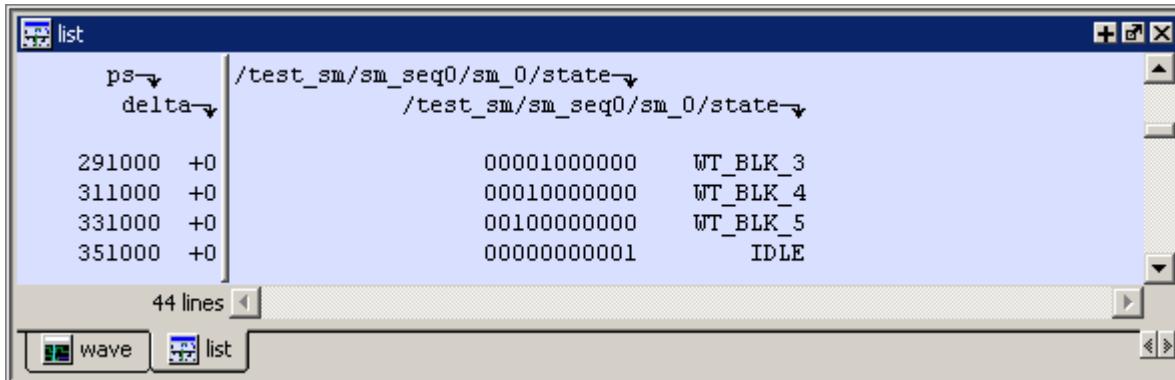Figure 2-4. User-Defined Radix “States” in the List Window

Using radix define to Specify Radix Color

The following example illustrates how to use the `radix define` command to specify the radix color:

Example 2-2. Using radix define to Specify Color

```
radix define States {
    11'b000000000001 "IDLE" -color yellow,
    11'b000000000010 "CTRL" -color #ffee00,
    11'b000000000100 "WT_WD_1" -color orange,
    11'b000000001000 "WT_WD_2" -color orange,
    11'b000000010000 "WT_BLK_1",
    11'b000000100000 "WT_BLK_2",
    11'b000001000000 "WT_BLK_3",
    11'b000100000000 "WT_BLK_4",
    11'b001000000000 "WT_BLK_5",
    11'b010000000000 "RD_WD_1" -color green,
    11'b100000000000 "RD_WD_2" -color green,
    -default hex
    -defaultcolor white
}
```

If a pattern/label pair does not specify a color, the normal wave window colors will be used. If the value of the waveform does not match any pattern, then the `-default radix` and `-defaultcolor` will be used.

To specify a range of values, wildcards may be specified for bits or characters of the value. The wildcard character is '?', similar to the iteration character in a Verilog UDP, for example:

```
radix define {
    6'b01??00 "Write" -color orange,
    6'b10??00 "Read" -color green
}
```

In this example, the first pattern will match "010000", "010100", "011000", and "011100". In case of overlaps, the first matching pattern is used, going from top to bottom.

Saving and Reloading Formats and Content

You can use the [write format restart](#) command to create a single *.do* file that will recreate all debug windows and breakpoints (see [Saving and Restoring Breakpoints](#)) when invoked with the [do](#) command in subsequent simulation runs. The syntax is:


```
write format restart <filename>
```

If the [ShutdownFile](#) *modelsim.ini* variable is set to this *.do* filename, it will call the [write format restart](#) command upon exit.

Main Window

The primary access point in the ModelSim GUI is called the Main window. It provides convenient access to design libraries and objects, source files, debugging commands, simulation status messages, etc. When you load a design, or bring up debugging tools, ModelSim adds panes or opens windows appropriate for your debugging environment (Figure 2-5).

Figure 2-5. Main Window

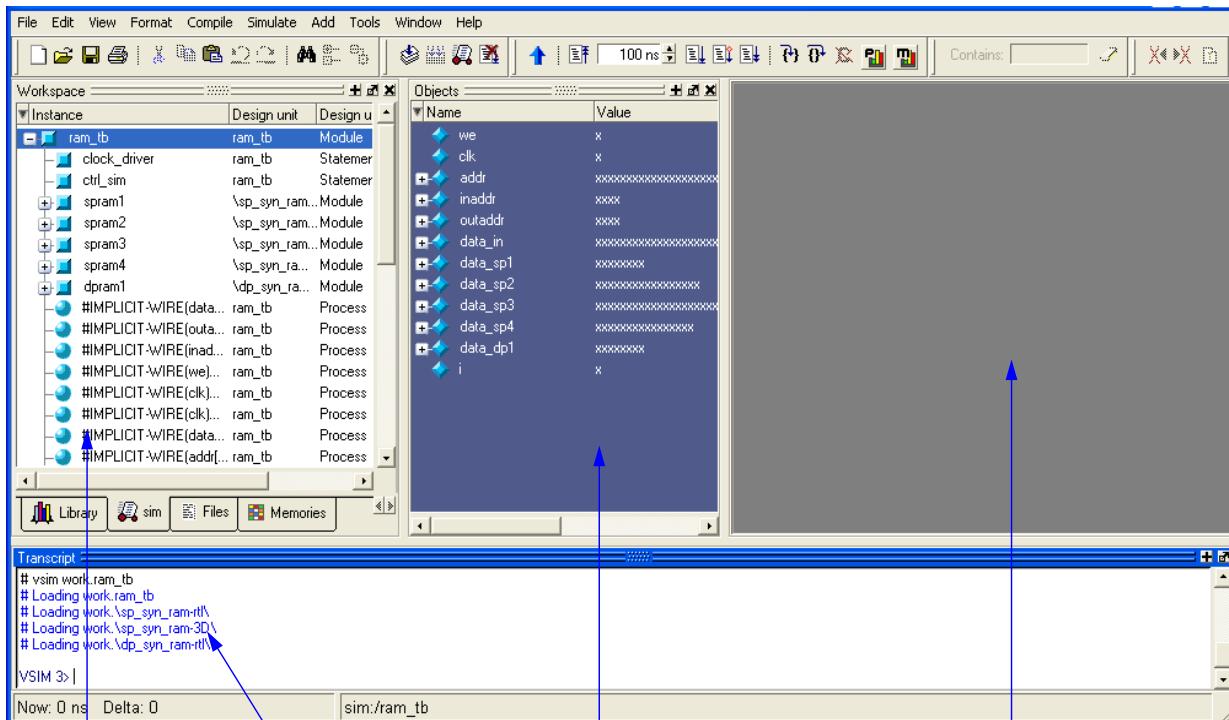

Workspace tabs organize design elements in a hierarchical tree structure

The Transcript pane reports status and provides a command-line interface

The Objects pane displays data objects in the current scope

Multiple document interface (MDI) pane

Notice some of the elements that appear:

- Workspace tabs organize and display design objects in a hierarchical tree format
- The Transcript pane tracks command history and messages and provides a command-line interface where you can enter ModelSim commands
- The Objects pane displays design objects such as signals, nets, generics, etc. in the current design scope

Workspace

The Workspace provides convenient access to projects, libraries, design files, compiled design units, simulation/dataset structures, and Waveform Comparison objects. It can be hidden or displayed by selecting **View > Workspace** menu item.

The Workspace can display the types of tabs listed below.

- **Project tab** — Shows all files that are included in the open project. Refer to [Projects](#) for details.
- **Library tab** — Shows design libraries and compiled design units. To update the current view of the library, select a library, and then Right click > Update. See [Managing Library Contents](#) for details on library management.
- **Structure tabs** — Shows a hierarchical view of the active simulation and any open datasets. There is one tab for the current simulation (named "sim") and one tab for each open dataset. See [Viewing Dataset Structure](#) for details.

An entry is created by each object within the design. When you select a region in a structure tab, it becomes the *current region* and is highlighted. The [Source Window](#) and [Objects Pane](#) change dynamically to reflect the information for the current region. This feature provides a useful method for finding the source code for a selected region because the system keeps track of the pathname where the source is located and displays it automatically, without the need for you to provide the pathname.

Also, when you select a region in the structure pane, the [Process Window](#) is updated. The Active Processes window will in turn update the [Locals Window](#).

Objects can be dragged from the structure tabs to the Dataflow, List and Wave windows.

You can toggle the display of processes by clicking in a Structure tab and selecting **View > Filter > Processes**.

You can also control implicit wire processes using a preference variable. By default Structure tabs suppress the display of implicit wire processes. To enable the display of implicit wire processes, set PrefMain(HideImplicitWires) to 0 (select **Tools > Edit Preferences**, By Name tab, and expand the Main object).

- **Files tab** — Shows the source files for the loaded design.


You can disable the display of this tab by setting the PrefMain(ShowFilePane) preference variable to 0. See [Simulator GUI Preferences](#) for information on setting preference variables.

- **Memories tab** — Shows a hierarchical list of all memories in the design. This tab is displayed whenever you load a design containing memories. When you double-click a memory on the tab, a memory contents page opens in the MDI frame. See [Memory Panes](#).

Multiple Document Interface (MDI) Frame

The MDI frame is an area in the Main window where the Dataflow, List, Memory, Source, and Wave windows display. The frame allows multiple windows to be displayed simultaneously, as shown below. A tab appears for each window.

Figure 2-6. Tabs in the MDI Frame

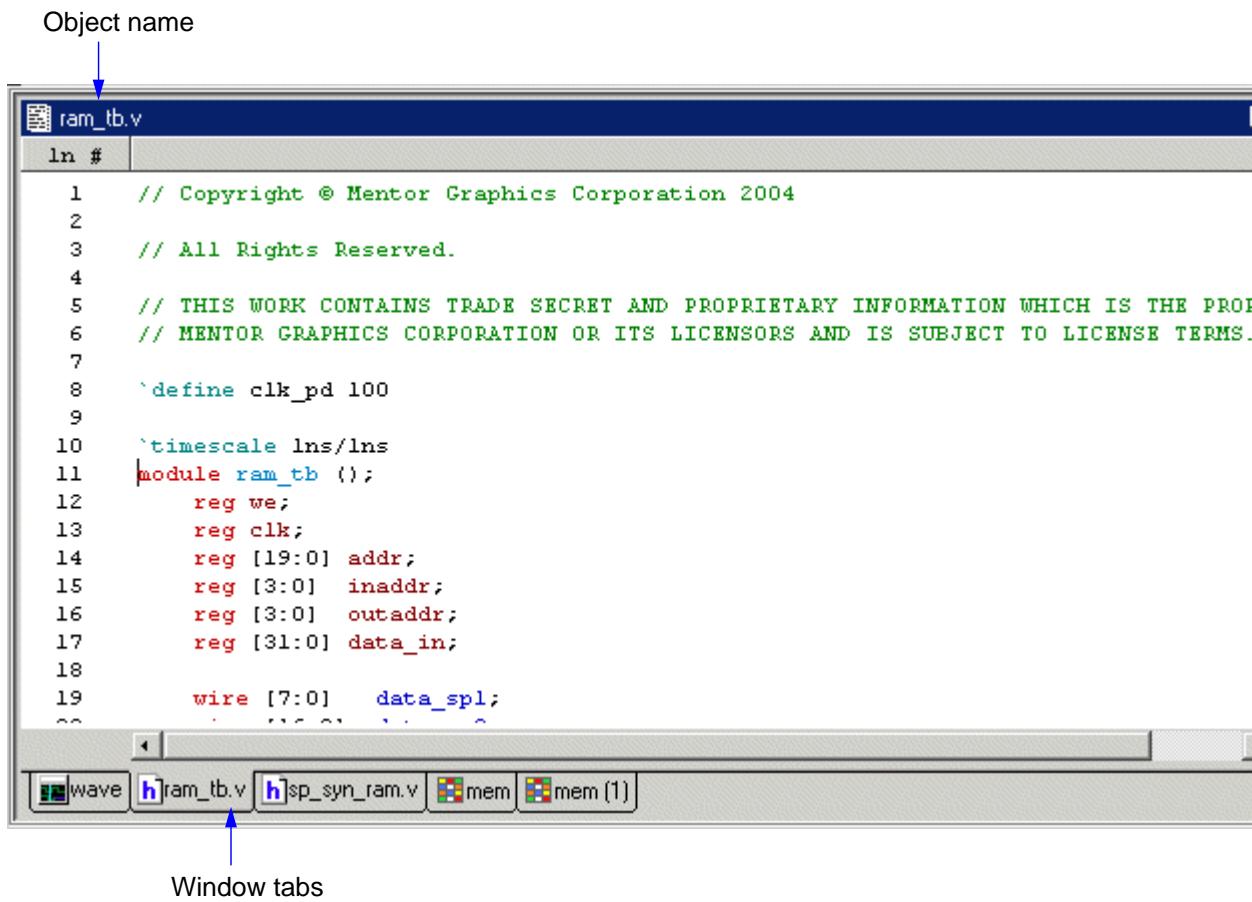


The object name is displayed in the title bar at the top of the window. You can switch between the windows by clicking on a tab.

Organizing Windows with Tab Groups

The MDI can quickly become unwieldy if many windows are open. You can create "tab groups" to help organize the windows. A tab group is a collection of tabs that are separated from other groups of tabs. [Figure 2-7](#) shows how the collection of files in [Figure 2-6](#) could be organized into two tab groups.

Figure 2-7. Organizing Files in Tab Groups

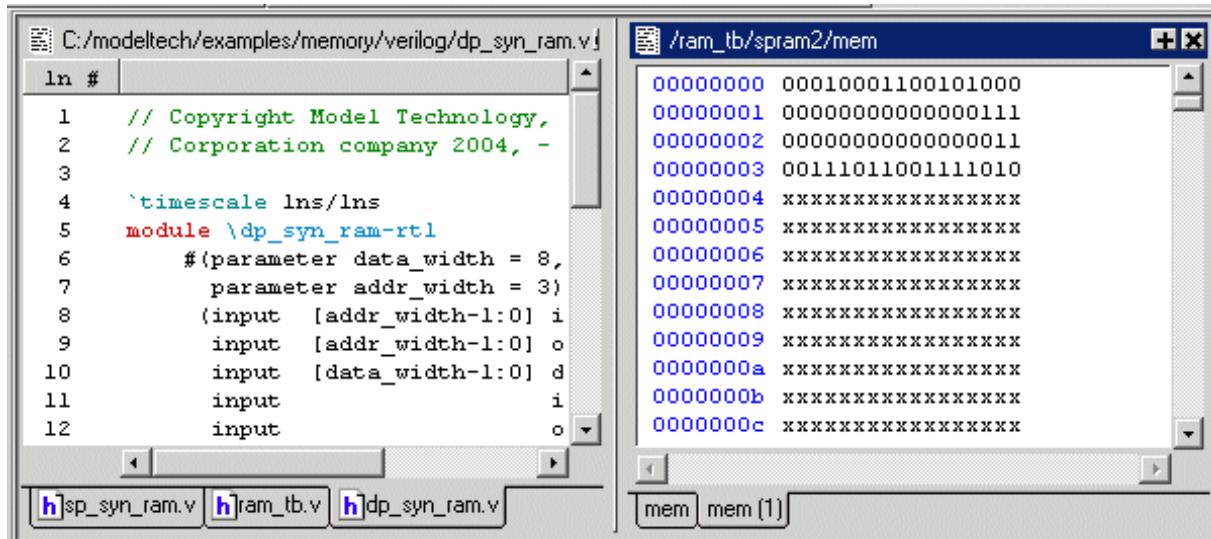

The commands for creating and organizing tab groups are accessed by right-clicking on any window tab. The table below describes the commands associated with tab groups:

Table 2-5. Commands for Tab Groups

Command	Description
New Tab Group	Creates a new tab group containing the selected tab
Move Next Group	Moves the selected tab to the next group in the MDI
Move Prev Group	Moves the selected tab to the previous group in the MDI
View > Vertical / Horizontal	Arranges tab groups top-to-bottom (vertical) or right-to-left (horizontal)

Note that you can also move the tabs within a tab group by dragging them with the middle mouse button.

Navigating in the Main Window

The Main window can contain of a number of "panes" and sub-windows that display various types of information about your design, simulation, or debugging session. Here are a few important points to keep in mind about the Main window interface:

- Windows/panes can be resized, moved, zoomed, undocked, etc. and the changes are persistent.

You have a number of options for re-sizing, re-positioning, undocking/redocking, and generally modifying the physical characteristics of windows and panes.

Windows and panes can be undocked from the main window by pressing the Undock button in the header or by using the **view -undock <window_name>** command. For example, **view -undock objects** will undock the Objects window. The default docked or undocked status of each window or pane can be set with the **PrefMain(ViewUnDocked) <window_name>** preference variable.

When you exit ModelSim, the current layout is saved so that it appears the same the next time you invoke the tool.


- Menus are context sensitive.

The menu items that are available and how certain menu items behave depend on which pane or window is active. For example, if the sim tab in the Workspace is active and you choose Edit from the menu bar, the Clear command is disabled. However, if you click in the Transcript pane and choose Edit, the Clear command is enabled. The active pane is denoted by a blue title bar.

For more information, see [Navigating the Graphic User Interface](#).

Main Window Status Bar

Figure 2-8. Main Window Status Bar

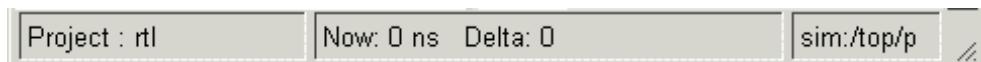

Fields at the bottom of the Main window provide the following information about the current simulation:

Table 2-6. Information Displayed in Status Bar

Field	Description
Project	name of the current project
Now	the current simulation time

Table 2-6. Information Displayed in Status Bar

Field	Description
Delta	the current simulation iteration number
Profile Samples	the number of profile samples collected during the current simulation
Memory	the total memory used during the current simulation
environment	name of the current context (object selected in the active Structure tab of the Workspace)
line/column	line and column numbers of the cursor in the active Source window

Main Window Toolbar

The Main window contains a toolbar frame that displays context-specific toolbars. The following sections describe the toolbars and their associated buttons.

Change Column Toolbar	Layout Toolbar	Wave Toolbar
Compile Toolbar	Memory Toolbar	Wave Bookmark Toolbar
Coverage Toolbar	Process Toolbar	Wave Compare Toolbar
Dataflow Toolbar	Profile Toolbar	Wave Cursor Toolbar
	Simulate Toolbar	Wave Edit Toolbar
Filter Toolbar	Source Toolbar	Wave Expand Time Toolbar
Help Toolbar	Standard Toolbar	Zoom Toolbar

Change Column Toolbar

The Change Column toolbar allows you to control aspects of the Verification Management Browser tab.

Figure 2-9. Change Column Toolbar



Table 2-7. Change Column Toolbar Buttons

Button	Name	Shortcuts	Description
	Column Layout	Menu: Test Browser > Configure Column Layout	A dropdown box that allows you to specify the column layout for the Verification Management Browser tab.
	Set Precision for VMgmt	Menu: Test Browser > Set Precision	A text entry box that allows you to control the precision of the data in the Verification Management Browser tab.
	Restore Default Precision		Restores the precision to the default value (2).

Change Column Toolbar Usage Information

The Change Column dropdown menu allows you to select pre-defined column layouts for the Browser tab of the Verification Management window.

- All Columns — displays all available columns.
- All Coverage / All Coverage Incr — displays all columns related to coverage statistics, where All Coverage Incr relates to ranking results.
- Code Coverage / Code Coverage Incr — displays all columns related to code coverage statistics, where All Coverage Incr relates to ranking results.
- Functional Coverage / Functional Coverage Incr — displays all columns related to functional coverage statistics, where All Coverage Incr relates to ranking results.
- Test — displays all columns containing data about the test, including information about how and when the coverage data was generated.

Compile Toolbar

The Compile toolbar provides access to compile and simulation actions.

Figure 2-10. Compile Toolbar



Table 2-8. Compile Toolbar Buttons

Button	Name	Shortcuts	Description
	Compile	Command: <code>vcom</code> or <code>vlog</code> Menu: Compile > Compile	Opens the Compile Source Files dialog box.
	Compile All	Command: <code>vcom</code> or <code>vlog</code> Menu: Compile > Compile all	Compiles all files in the open project.
	Simulate	Command: <code>vsim</code> Menu: Simulate > Start Simulation	Opens the Start Simulation dialog box.
	Break	Menu: Simulate > Break Hotkey: Break	Stop a compilation, elaboration, or the current simulation run.

Coverage Toolbar

The Coverage toolbar provides tools for filtering code coverage data in the Workspace and Instance Coverage windows.

Figure 2-11. Coverage Toolbar

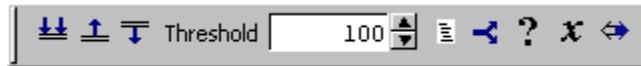


Table 2-9. Coverage Toolbar Buttons

Button	Name	Shortcuts	Description
	Enable Filtering	None	Enables display filtering of coverage statistics in the Workspace and Instance Coverage windows.
	Threshold Above	None	Displays all coverage statistics above the Filter Threshold for selected columns.
	Threshold Below	None	Displays all coverage statistics below the Filter Threshold for selected columns
	Filter Threshold	None	Specifies the display coverage percentage for the selected coverage columns

Table 2-9. Coverage Toolbar Buttons

Button	Name	Shortcuts	Description
	Statement	None	Applies the display filter to all Statement coverage columns in the Workspace and Instance Coverage windows.
	Branch	None	Applies the display filter to all Branch coverage columns in the Workspace and Instance Coverage windows.
	Condition	None	Applies the display filter to all Condition coverage columns in the Workspace and Instance Coverage windows.
	Expression	None	Applies the display filter to all Expression coverage columns in the Workspace and Instance Coverage windows.
	Toggle	None	Applies the display filter to all Toggle coverage columns in the Workspace and Instance Coverage windows.

Dataflow Toolbar

The Dataflow toolbar provides access to various tools to use in the Dataflow window.

Figure 2-12. Dataflow Toolbar



Table 2-10. Dataflow Toolbar Buttons

Button	Name	Shortcuts	Description
	Select Mode	Menu: Dataflow > Mouse Mode > Select Mode	Set the left mouse button to select mode and middle mouse button to zoom mode.
	Zoom Mode	Menu: Dataflow > Mouse Mode > Zoom Mode	Set left mouse button to zoom mode and middle mouse button to pan mode.

Table 2-10. Dataflow Toolbar Buttons

Button	Name	Shortcuts	Description
	Pan Mode	Menu: Dataflow > Mouse Mode > Pan Mode	Set left mouse button to pan mode and middle mouse button to zoom mode.
	Trace Input Net to Event	Menu: Tools > Trace > Trace next event	Move the next event cursor to the next input event driving the selected output.
	Trace Set	Menu: Tools > Trace > Trace event set	Jump to the source of the selected input event.
	Trace Reset	Menu: Tools > Trace > Trace event reset	Return the next event cursor to the selected output.
	Trace Net to Driver of X	Menu: Tools > Trace > TraceX	Step back to the last driver of an unknown value.
	Expand Net to all Drivers	None	Display driver(s) of the selected signal, net, or register.
	Expand Net to all Drivers and Readers	None	Display driver(s) and reader(s) of the selected signal, net, or register.
	Expand Net to all Readers	None	Display reader(s) of the selected signal, net, or register.
	Erase Highlight	Menu: Dataflow > Erase highlight	Clear the green highlighting which identifies the path you've traversed through the design.
	Erase All	Menu: Dataflow > Erase all	Clear the window.
	Regenerate	Menu: Dataflow > Regenerate	Clear and redraw the display using an optimal layout.
	Stop Drawing	None	Halt any drawing currently happening in the window.
	Show Wave	Menu: Dataflow > Show Wave	Display the embedded wave viewer pane.

Filter Toolbar

The Filter toolbar item allows you to filter information in the following windows:

Analysis (all tabs)	Class Tree
Objects	Message Viewer
Process	Verification Management (all tabs)
Workspace (Structure and Files tabs)	

By entering a string in the text entry box, you can filter the view of the selected window down to the specific information you are looking for.

Figure 2-13. Filter Toolbar

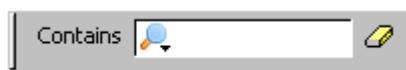


Table 2-11. Filter Toolbar Buttons

Button	Name	Shortcuts	Description
	Filter Regular Expression	None	A drop down menu that allows you to set the wildcard mode. A text entry box for your filter string.
	Clear Filter	None	Clears the text entry box and removes the filter from the active window.

Filter Toolbar Usage

There are three wildcard modes:

- **glob-style** — Allows you to use the following special wildcard characters:
 - * — matches any sequence of characters in the string
 - ? — matches any single character in the string
 - [<chars>] — matches any character in the set <chars>.
 - \<x> — matches the single character <x>, which allows you to match on any special characters (*, ?, [], and \)

For more information refer to the Tcl documentation:

Help > Tcl Man Pages
Tcl Commands > string > string match

- **regular-expression** — allows you to use wildcard characters based on Tcl regular expressions. For more information refer to the Tcl documentation:

Help > Tcl Man Pages
Tcl Commands > re_syntax

- **exact** — indicates that no characters have special meaning, thus disabling wildcard features.

The text entry box of the Contains toolbar item is case-insensitive. If you need to search for case-sensitive strings use “regular-expression” and prepend the string with (?c)

Help Toolbar

The Help toolbar provides a way for you to search the HTML documentation for a specified string. The HTML documentation will be displayed in a web browser.

Figure 2-14. Help Toolbar



Table 2-12. Help Toolbar Buttons

Button	Name	Shortcuts	Description
	Search Documentation	None	A text entry box for your search string.
	Search Documentation	Hotkey: Enter	Activates the search for the term you entered into the text entry box.

Layout Toolbar

The Layout toolbar allows you to select a predefined or user-defined layout of the graphical user interface. Refer to the section “Customizing the Simulator GUI Layout” for more information.

Figure 2-15. Layout Toolbar



Table 2-13. Layout Toolbar Buttons

Button	Name	Shortcuts	Description
	Change Layout	Menu: Layout > <i>layoutName</i>	A dropdown box that allows you to select a GUI layout.

Memory Toolbar

The Memory toolbar provides access to common functions. This toolbar only appears when you have a Memory tab undocked.

Figure 2-16. Memory Toolbar



Table 2-14. Memory Toolbar Buttons

Button	Name	Shortcuts	Description
	Find		Displays the Find in <i>memory</i> dialog box.
	Split Screen	Memory > Split Screen	Splits the memory window.
	Goto Address		Highlights the first element of the specified address.

Process Toolbar

The Process toolbar contains three toggle buttons (only one can be active at any time) that controls the view of the Process window.

Figure 2-17. Process Toolbar



Table 2-15. Process Toolbar Buttons

Button	Name	Shortcuts	Description
	View Active Processes	Menu: Process > Active	Changes the view of the Process Window to only show active processes.
	View Processes in Region	Menu: Process > In Region	Changes the view of the Process window to only show processes in the active region.
	View Processes for the Design	Menu: Process > Design	Changes the view of the Process window to show processes in the design.

Profile Toolbar

The Profile toolbar provides access to tools related to the Profile window.

Figure 2-18. Profile Toolbar



Table 2-16. Profile Toolbar Buttons

Button	Name	Shortcuts	Description
	Collapse Sections	Tools > Profile > Collapse Sections	Toggle the reporting for collapsed processes and functions.
	Profile Cutoff	None	Display performance and memory profile data equal to or greater than set percentage.
	Refresh Profile Data	None	Refresh profile performance and memory data after changing profile cutoff.
	Save Profile Results	Tools > Profile > Profile Report	Save profile data to output file (prompts for file name).
	Profile Find	None	Search for the named string in the Profile window.

Simulate Toolbar

The Simulate toolbar provides various tools for controlling your active simulation.

Figure 2-19. Simulate Toolbar



Table 2-17. Simulate Toolbar Buttons

Button	Name	Shortcuts	Description
	Environment Up	Command: env .. Menu: File > Environment	Changes your environment up one level of hierarchy.
	Environment Back	Command: env -back Menu: File > Environment	Change your environment to its previous location.
	Environment Forward	Command: env -forward Menu: File > Environment	Change your environment forward to a previously selected environment.
	Restart	Command: restart Menu: Simulate > Run > Restart	Reload the design elements and reset the simulation time to zero, with the option of maintaining various settings and objects.
	Run Length	Command: run Menu: Simulate > Runtime Options	Specify the run length for the current simulation.
	Run	Command: run Menu: Simulate > Run > Run <i>default_run_length</i>	Run the current simulation for the specified run length.
	Continue Run	Command: run -continue Menu: Simulate > Run > Continue	Continue the current simulation run until the end of the specified run length or until it hits a breakpoint or specified break event.
	Run All	Command: run -all Menu: Simulate > Run > Run -All	Run the current simulation forever, or until it hits a breakpoint or specified break event.

Table 2-17. Simulate Toolbar Buttons

Button	Name	Shortcuts	Description
	Break	Menu: Simulate > Break Hotkey: Break	Stop a compilation, elaboration, or the current simulation run.
	Step	Command: step Menu: Simulate > Run > Step	Step the current simulation to the next statement.
	Step Over	Command: step -over Menu: Simulate > Run > Step -Over	Execute HDL statements, treating them as simple statements instead of entered and traced line by line.
	Step Out	Command: step -out	Step the current simulation out of the current function or procedure.
	C Interrupt	Command: cdbg interrupt Menu: Tools > C Debug > C Interrupt	Reactivate the C debugger when stopped in HDL code.
	Performance Profiling	Menu: Tools > Profile > Performance	Enable collection of statistical performance data.
	Memory Profiling	Menu: Tools > Profile > Memory	Enable collection of memory usage data.
	Edit Breakpoints	Menu: Tools > Breakpoint	Enable breakpoint editing, loading, and saving.

Source Toolbar

The Source toolbar allows you to perform several activities on open source windows.

Figure 2-20. Source Toolbar



Table 2-18. Source Toolbar Buttons

Button	Name	Shortcuts	Description
	Previous Zero Hits	None	Jump to previous line with zero coverage.

Table 2-18. Source Toolbar Buttons

Button	Name	Shortcuts	Description
	Next Zero Hits	None	Jump to next line with zero coverage.
	Show Language Templates	Menu: Source > Show Language Templates	Display language templates in the left hand side of every open source file.
	Source Annotation	Menu: Source > Show Annotation	Allows Debugging with Source Annotation in every open source file.
	Clear Bookmarks	Menu: Source > Clear Bookmarks	Removes any bookmarks in the active source file.

Standard Toolbar

The Standard toolbar contains common buttons that apply to most windows.

Figure 2-21. Standard Toolbar



Table 2-19. Standard Toolbar Buttons

Button	Name	Shortcuts	Description
	New File	Menu: File > New > Source	Opens a new Source text file.
	Open	Menu: File > Open	Opens the Open File dialog
	Save	Menu: File > Save	Saves the contents of the active window or Saves the current wave window display and signal preferences to a macro file (DO fie).
	Reload	Command: Dataset Restart Menu: File > Datasets	Reload the current dataset.

Table 2-19. Standard Toolbar Buttons

Button	Name	Shortcuts	Description
	Print	Menu: File > Print	Opens the Print dialog box.
	Cut	Menu: Edit > Cut Hotkey: Ctrl-x	-
	Copy	Menu: Edit > Copy Hotkey: Ctrl-c	-
	Paste	Menu: Edit > Paste Hotkey: Ctrl-v	-
	Undo	Menu: Edit > Undo Hotkey: Ctrl-z	-
	Redo	Menu: Edit > Redo Hotkey: Ctrl-y	-
	Find	Menu: Edit > Find Hotkey: Ctrl-f (Windows) or Ctrl-s (UNIX)	Opens the Find dialog box or Opens the Inline Search Bar for Text-Based Windows
	Collapse All	Menu: Edit > Expand > Collapse All	-
	Expand All	Menu: Edit > Expand > Expand All	-

Wave Toolbar

The Wave toolbar allows you to perform specific actions in the Wave window.

Figure 2-22. Wave Toolbar



Table 2-20. Wave Toolbar Buttons

Button	Name	Shortcuts	Description
	Select Mode	Menu: Wave or Dataflow > Mouse Mode > Select Mode	Set mouse to Select Mode, where you click the left mouse button to select and drag the middle mouse button to zoom.

Table 2-20. Wave Toolbar Buttons

Button	Name	Shortcuts	Description
	Zoom Mode	Menu: Wave or Dataflow > Mouse Mode > Zoom Mode	Set mouse to Zoom Mode, where you drag the left mouse button to zoom and click the middle mouse button to select.
	Edit Mode	Menu: Wave or Dataflow > Mouse Mode > Edit Mode	Set mouse to Edit Mode, where you drag the left mouse button to select a range and drag the middle mouse button to zoom.
	Stop Wave Drawing	None	Halts any waves currently being drawn in the Wave window
	Show Drivers	None	Display driver(s) of the selected signal, net, or register in the Dataflow or Wave window.
	Export Waveform	Menu: File > Export > Waveform	Export a created waveform.

Wave Bookmark Toolbar

The Wave Bookmark toolbar allows you to manage your bookmarks of the Wave window

Figure 2-23. Wave Bookmark Toolbar



Table 2-21. Wave Bookmark Toolbar Buttons

Button	Name	Shortcuts	Description
	Add Bookmark	Command: Bookmark Add Wave Menu: Add > To Wave > Bookmark	Clicking this button bookmarks the current view of the Wave window. Click and hold the button to access an additional option to create a custom bookmark.

Table 2-21. Wave Bookmark Toolbar Buttons

Button	Name	Shortcuts	Description
	Delete All Bookmarks	Command: Bookmark Delete Wave -all	Removes all bookmarks, after prompting for your confirmation.
	Manage Bookmarks		Displays the Bookmark Selection dialog box for managing your bookmarks.
	Jump to Bookmark	Command: Bookmark Goto Wave <name>	Displays a selection group for you to pick which bookmark you want to display.

Wave Compare Toolbar

The Wave Compare toolbar allows you to quickly find differences in a waveform comparison.

Figure 2-24. Wave Compare Toolbar



Table 2-22. Wave Compare Toolbar Buttons

Button	Name	Shortcuts	Description
	Find First Difference	None	Find the first difference in a waveform comparison
	Find Previous Annotated Difference	None	Find the previous annotated difference in a waveform comparison
	Find Previous Difference	None	Find the previous difference in a waveform comparison
	Find Next Difference	None	Find the next difference in a waveform comparison
	Find Next Annotated Difference	None	Find the next annotated difference in a waveform comparison
	Find Last Difference	None	Find the last difference in a waveform comparison

Wave Cursor Toolbar

The Wave Cursor toolbar provides various tools for manipulating cursors in the Wave window.

Figure 2-25. Wave Cursor Toolbar



Table 2-23. Wave Cursor Toolbar Buttons

Button	Name	Shortcuts	Description
	Insert Cursor	None	Adds a new cursor to the active Wave window.
	Delete Cursor	Menu: Wave > Delete Cursor	Deletes the active cursor.
	Find Previous Transition	Menu: Edit > Signal Search Hotkey: Shift + Tab	Moves the active cursor to the previous signal value change for the selected signal.
	Find Next Transition	Menu: Edit > Signal Search Hotkey: Tab	Moves the active cursor to the next signal value change for the selected signal.
	Find Previous Falling Edge	Menu: Edit > Signal Search	Moves the active cursor to the previous falling edge for the selected signal.
	Find Next Falling Edge	Menu: Edit > Signal Search	Moves the active cursor to the next falling edge for the selected signal.
	Find Previous Rising Edge	Menu: Edit > Signal Search	Moves the active cursor to the previous rising edge for the selected signal.
	Find Next Rising Edge	Menu: Edit > Signal Search	Moves the active cursor to the next rising edge for the selected signal.

Wave Edit Toolbar

The Wave Edit toolbar provides easy access to tools for modifying an editable wave.

Figure 2-26. Wave Edit Toolbar



Table 2-24. Wave Edit Toolbar Buttons

Button	Name	Shortcuts	Description
	Insert Pulse	Menu: Wave > Wave Editor > Insert Pulse Command: wave edit insert_pulse	Insert a transition at the selected time.
	Delete Edge	Menu: Wave > Wave Editor > Delete Edge Command: wave edit delete	Delete the selected transition.
	Invert	Menu: Wave > Wave Editor > Invert Command: wave edit invert	Invert the selected section of the waveform.
	Mirror	Menu: Wave > Wave Editor > Mirror Command: wave edit mirror	Mirror the selected section of the waveform.
	Change Value	Menu: Wave > Wave Editor > Value Command: wave edit change_value	Change the value of the selected section of the waveform.
	Stretch Edge	Menu: Wave > Wave Editor > Stretch Edge Command: wave edit stretch	Move the selected edge by increasing/decreasing waveform duration.
	Move Edge	Menu: Wave > Wave Editor > Move Edge Command: wave edit move	Move the selected edge without increasing/decreasing waveform duration.
	Extend All Waves	Menu: Wave > Wave Editor > Extend All Waves Command: wave edit extend	Increase the duration of all editable waves.

Wave Expand Time Toolbar

The Wave Expand Time toolbar provides access to enabling and controlling wave expansion features.

Figure 2-27. Wave Expand Time Toolbar



Table 2-25. Wave Expand Time Toolbar Buttons

Button	Name	Shortcuts	Description
	Expanded Time Off	Menu: Wave > Expanded Time > Off	turns off the expanded time display (default mode)
	Expanded Time Deltas Mode	Menu: Wave > Expanded Time > Deltas Mode	displays delta time steps
	Expanded Time Events Mode	Menu: Wave > Expanded Time > Events Mode	displays event time steps
	Expand All Time	Menu: Wave > Expanded Time > Expand All	expands simulation time over the entire simulation time range, from 0 to current time
	Expand Time at Active Cursor	Menu: Wave > Expanded Time > Expand Cursor	expands simulation time at the simulation time of the active cursor
	Collapse All Time	Menu: Wave > Expanded Time > Collapse All	collapses simulation time over entire simulation time range
	Collapse Time at Active Cursor	Menu: Wave > Expanded Time > Collapse Cursor	collapses simulation time at the simulation time of the active cursor

Zoom Toolbar

The Zoom toolbar allows you to change the view of the Wave window.

Figure 2-28. Zoom Toolbar



Table 2-26. Zoom Toolbar Buttons

Button	Name	Shortcuts	Description
	Zoom In	Menu: Wave > Zoom > Zoom In Hotkey: i, I, or +	Zooms in by a factor of 2x


Table 2-26. Zoom Toolbar Buttons

Button	Name	Shortcuts	Description
	Zoom Out	Menu: Wave > Zoom > Zoom Out Hotkey: o, O, or -	Zooms out by a factor of 2x
	Zoom Full	Menu: Wave > Zoom > Zoom Full Hotkey: f or F	Zooms to show the full length of the simulation.
	Zoom in on Active Cursor	Menu: Wave > Zoom > Zoom Cursor Hotkey: c or C	Zooms in by a factor of 2x, centered on the active cursor

Process Window

The Process window displays a list of HDL processes in one of three viewing modes – Active, In Region, and Design. You can elect to view all active processes, all process in the current region, or all processes in the design. The Design view mode is intended for primary navigation of ESL (Electronic System Level) designs where processes are a foremost consideration.

By default, the Process window displays the active processes in your simulation (Active view mode). The title bar of the window displays “Process (Active)” ([Figure 2-29](#)).

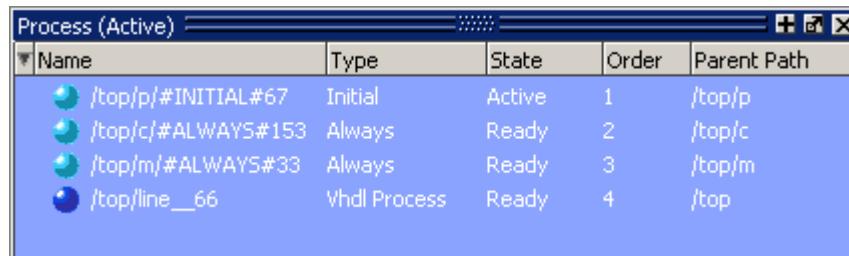Figure 2-29. Process (Active) Window

You can change the display to show all the processes in a region ([Figure 2-31](#)) or in the entire design by doing any one of the following:

- Select **Process > In Region** or **Process > Design** from the Main window menu when the Process window is docked. The Process window must be selected (active) for the Process menu selection to appear in the Main window menu bar.
- Select **View > In Region** or **View > Design** from the Process window menu when the Process window is undocked.
- Click (LMB) the **View Processes In Region** or the **View Processes in the Design** button in the **Process Toolbar** ([Figure 2-30](#)).

Figure 2-30. Process Toolbar



- Right-click (RMB) in the Process window and select **In Region** or **Design** from the popup context menu.

Figure 2-31. Process (In Region) Window

Name	Type	State	Order	Parent Path
/top/p/#ASSIGN#25	Assign	Wait	-	/top/p
/top/p/#ASSIGN#24	Assign	Wait	-	/top/p
/top/p/#ASSIGN#26#1	Assign	Wait	-	/top/p
/top/p/#ASSIGN#26	Assign	Wait	-	/top/p
/top/p/#INITIAL#67	Initial	Active	1	/top/p

The In Region view mode allows you to display all processes recursively or non-recursively inside the currently selected context. The non-recursive mode is the default.

The view mode you select is persistent and is “remembered” when you exit the simulation. The next time you bring up the tool, the Process window will initialize in the last view mode used.

Displaying the Process Window

To display the Process window, do either of the following:

- Select **View > Process** in the Main menu.
- Use the command:

view process

When undocked, the Process Window contains the following toolbars:

- [Process Toolbar](#)
- [Filter Toolbar](#)

These toolbars are included in the Main window when the Process window is docked.

Viewing Data in the Process Window

The Process window is populated when you select a view mode (Active, In Region, or Design). When you select the In Region view mode, the processes shown in the Process window will change according to the region you select in the structure tabs (i.e., the **sim** tab) of the Workspace window. In addition, the data in the Process window will change as you run your simulation and processes change states or become inactive.

Column Descriptions

- Name — The name of the process.
- State — The process state.
- Type — The process type, according to the language used.
- Order — The execution order of all processes in the Active and Ready states.
- Parent Path — The hierarchical parent pathname of the process.

Each process in the window is identified according to its process state, as shown in the **State** column. The different process states are defined as follows:

- **Idle** — Indicates an inactive SystemC Method, or a process that has never been active.
- **Wait** — Indicates the process is waiting for a wake up trigger (change in VHDL signal, Verilog net, SystemC signal, or a time period).
- **Ready** — Indicates the process is scheduled to be executed in current simulation phase (or in active simulation queue) of current delta cycle.
- **Active** — Indicates the process is currently active and being executed.
- **Queued** — Indicates the process is scheduled to be executed in current delta cycle, but not in current simulation phase (or in active simulation queue).
- **Done** — Indicates the process has been terminated, and will never restart during current simulation run.

Processes in the Idle and Wait states are distinguished as follows. Idle processes (except for ScMethods) have never been executed before in the simulation, and therefore have never been suspended. Idle processes will become Active, Ready, or Queued when a trigger occurs. A process in the Wait state has been executed before but has been suspended, and is now waiting for a trigger.

SystemC methods can have one of the four states: Active, Ready, Idle or Queued. When ScMethods are not being executed (Active), or scheduled (Ready or Queued), they are inactive (Idle). ScMethods execute in 0 time, whenever they get triggered. They are never suspended or terminated.

The Idle state will occur only for SC processes or methods. It will never occur for HDL processes.

The **Type** column displays the process type according to the language used. It includes the following types:

- Always
- Assign

- Final
- Fork-Join (dynamic process like fork-join, sc_spawn, etc.)
- Initial
- Implicit (internal processes created by simulator like Implicit wires, etc.)
- Primitive (UDP, Gates, etc.)
- ScMethod
- ScThread (SC Thread and SC CThread processes)
- VHDL Process

The **Order** column displays the execution order of all processes in the Active and Ready states in the active kernel queue. Processes that are not in the Active or Ready states do not yet have any order. The Order column displays a '-' for such processes. The Process window updates the execution order automatically as simulation proceeds.


By default, all Process window data is sorted according to the Order column. You can sort by another column by simply clicking a column heading. You can also change the sort mode using the Process Display Options dialog (next section). Four sort modes are available: by process name, type, state, or order.

Process Window Display Options

By default, all processes are displayed without the full hierarchical context (path). You can display processes with the full path by doing any of the following:

- Select **Process > Show Full Path** from the Main window menus when the Process window is docked ([Figure 2-32](#)).

Figure 2-32. Selecting Show Full Path from Process Menu

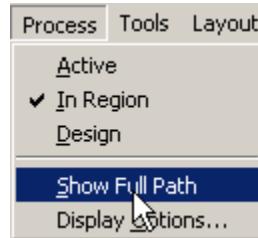

- Select **View > Show Full Path** when the Process window is undocked.
- Right-click (RMB) anywhere in the Process window and select **Show Full Path** from the popup context menu.

The Process window also displays data based on the display options you select from the Process Display Options dialog. You can open this by doing one of the following:

- Select **Process > Display Options** from the Main window menu when the Process window is docked.
- Select **View > Display Options** when the Process window is undocked.
- Right-click (RMB) anywhere in the Process window and select **Display Options** from the popup context menu.

With the Process Display Options dialog you can:


- Select which process mode to display (Active is the default). When the In Region display mode is selected you can elect to view the region recursively.
- Sort the displayed process by Name, Type, State, or Order (Order is the default).
- Display All process states (the default) or selected process states. When you filter the display according to specific process states, the heading of the State column changes to “State (filtered)” as shown in [Figure 2-33](#).

Figure 2-33. Column Heading Changes When States are Filtered

Name	Type (filtered)	State (filtered)	Order	Parent Path
#ALWAYS#35	Always	Ready	3	/top/m
#ALWAYS#155	Always	Ready	2(Next Active)	/top/c

- Select the process type to be displayed (“No Implicit & Primitive” is the default). The default “No Implicit & Primitive” selection causes the Process window to display all process types except implicit and primitive types. When you filter the display according to specific process types, the heading of the Type column becomes “Type (filtered)”, as shown in [Figure 2-33](#).

Figure 2-34. Process Window Display Options Dialog

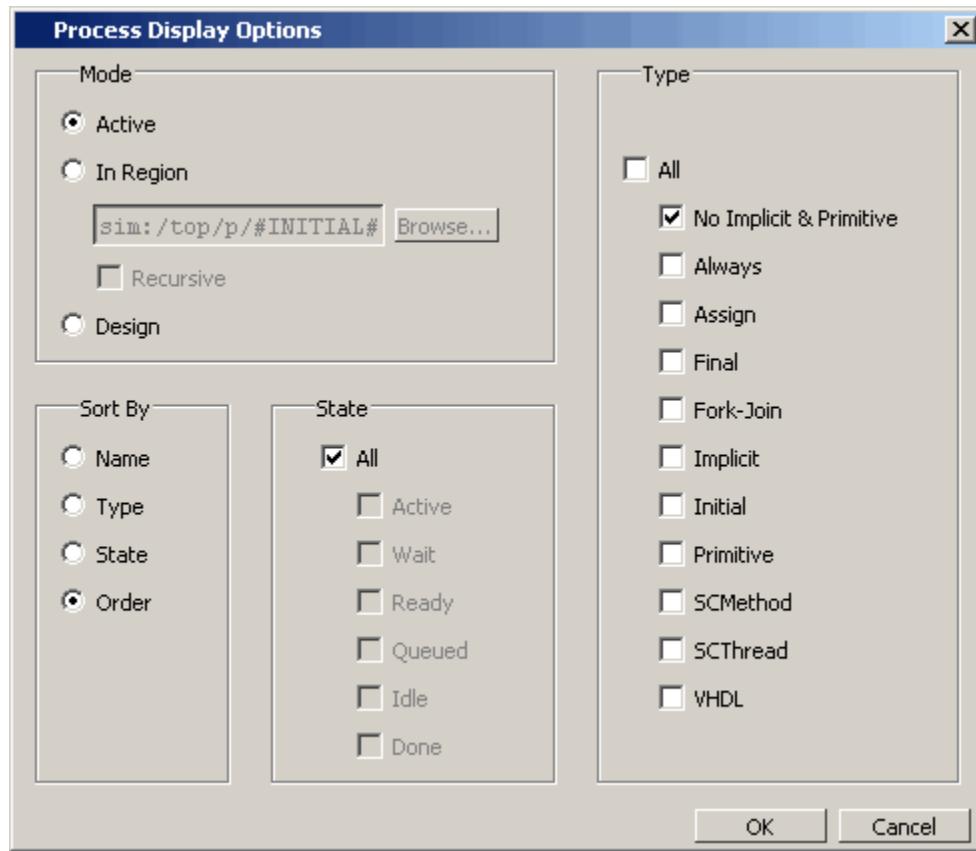

Once you select the options, data in the Process window will update as the simulation runs and processes change their states. When the In Region view mode is selected, data in the Process window will update according to the region selected in the structure (sim) tab of Workspace window.

Post-Processing Mode

The Process window also shows data in the post-processing (WLF view or Coverage view) mode. You will need to log processes in the simulation mode to be able to view them in post-processing mode.

In the post-processing mode, the Process window's default selection values will be same as the default values in the live simulation mode.

Things to remember about the post-processing mode:

- There are no active processes, so the Active view mode selection will not show anything.
- All processes will have same 'Done' state in the post-processing mode.

- There is no order information, so the Order column will show ‘-’ for all processes.

Set Ready Process as Next Active Process

You can select any “Ready” process and set it to be the next Active process executed by the simulator, ahead of any other queued processes. To do this, simply right-click (RMB) any “Ready” process and select **Set Next Active** from the popup context menu (Figure 2-35).

Figure 2-35. Set Next Active RMB Menu Selection



When you set a process as the next active process, you will see “(Next Active)” in the Order column of that process (Figure 2-36).

Figure 2-36. Next Active Process Displayed in Order Column

Name	Type (filtered)	State	Order	Parent Path
#ALWAYS#35	Always	Ready	3	/top/m
#ALWAYS#155	Always	Ready	2(Next Active)	/top/c
#INITIAL#69	Initial	Active	1	/top/p
#ASSIGN#25	Assign	Wait	-	/top/p
#ASSIGN#24	Assign	Wait	-	/top/p
#ASSIGN#23	Assign	Wait	-	/top/p
#ASSIGN#21	Assign	Wait	-	/top/c/s3

Create Textual Process Report


You can create a textual report of all processes in the Process Window by entering the [process report](#) command at the command line.

Syntax

```
process report [-file <filename>] [-append]
```

If <filename> is not given, then the output is redirected to stdout (Figure 2-37). If the -append option is used, the process report will be appended into the file instead of overwriting it.

Figure 2-37. Sample Process Report in the Transcript Window

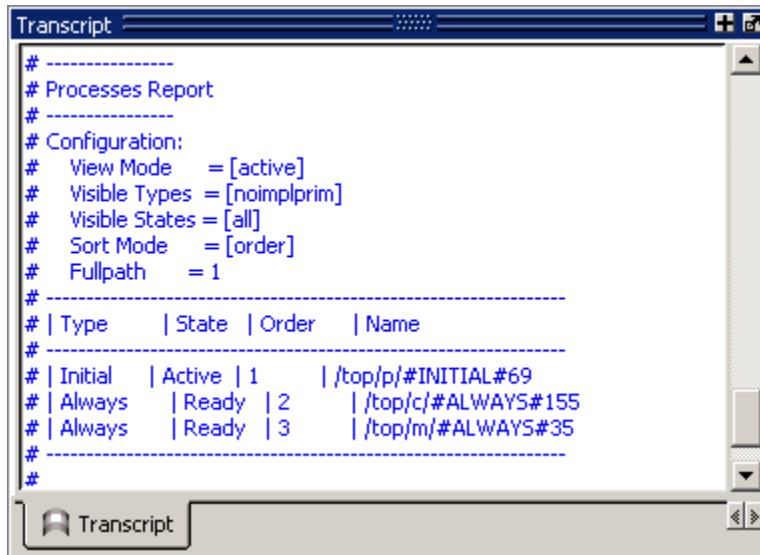

The screenshot shows the Transcript window with the title bar "Transcript". The content displays a "# Processes Report" section with configuration details like View Mode, Visible Types, and Sort Mode. Below this is a table with columns Type, State, Order, and Name, listing three processes: Initial, Always, and Always.

#	Type	State	Order	Name
#	Initial	Active	1	/top/p/#INITIAL#69
#	Always	Ready	2	/top/c/#ALWAYS#155
#	Always	Ready	3	/top/m/#ALWAYS#35


Call Stack Pane

The Call Stack pane displays the current call stack when you single step your simulation, when the simulation has encountered a breakpoint, or when you select any process in either the Workspace pane or the Process window. When debugging your design you can use the call stack data to analyze the depth of function calls, which include Verilog functions and tasks, VHDL functions and procedures, SystemC methods and threads, and C/C++ functions that led up to the current point of the simulation.

Accessing the Call Stack Pane

View > Call Stack

Figure 2-38. Call Stack Pane

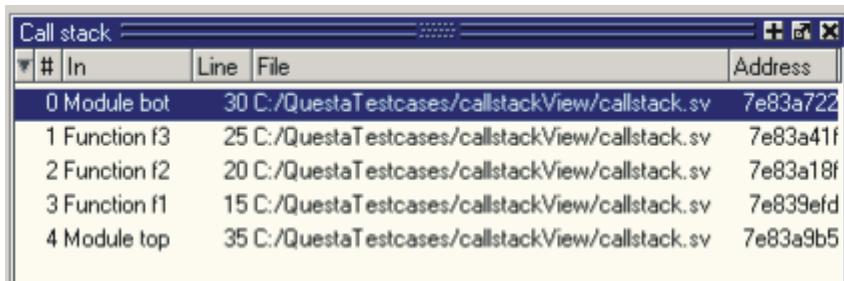

The screenshot shows the Call stack pane with the title bar "Call stack". It displays a list of five function calls with columns for Depth (#), Line, File, and Address.

#	In	Line	File	Address
0	Module bot	30	C:/QuestaTestcases/callstackView/callstack.sv	7e83a722
1	Function f3	25	C:/QuestaTestcases/callstackView/callstack.sv	7e83a41f
2	Function f2	20	C:/QuestaTestcases/callstackView/callstack.sv	7e83a18f
3	Function f1	15	C:/QuestaTestcases/callstackView/callstack.sv	7e839efd
4	Module top	35	C:/QuestaTestcases/callstackView/callstack.sv	7e83a9b5

Using the Call Stack Pane

The Call Stack pane contains five columns of information to assist you in debugging your design:

- # — indicates the depth of the function call, with the most recent at the top.

- In — indicates the function.
- Line — indicates the line number containing the function call.
- File — indicates the location of the file containing the function call.
- Address — indicates the address of the execution in a foreign subprogram, such as C.

The Call Stack pane allows you to perform the following actions within the pane:

- Double-click on the line of any function call:
 - Displays the local variables at that level in the [Locals Window](#).
 - Displays the corresponding source code in the [Source Window](#).
- Right-click in the column headings
 - Displays a pop-up window that allows you to show or hide columns.

Class Tree Window

This window provides a hierarchical view of your SystemVerilog classes, including any extensions of other classes, related methods and properties, as well as any covergroups.

Figure 2-39. Class Tree Window

Class	Type	File	Unique Id	Scope
+ wb_request	Class	wishbone_transac..		
+ wb_response	Class	wishbone_transac..		
+ wb_transaction	Class	wishbone_transac..		
- wishbone_driver	Class	wishbone_driver....		
- Extends avm_threaded_comp... Class	Class	avm_threaded_c...		
+ Extends avm_named_com... Class	Class	avm_named_com...		
+ Methods				
+ Properties				
+ Methods				
+ Properties				
- Covergroups	Covergroup			/top/cop2mac_wbttarget_cov
- wishbone_cv				
+ Methods				
+ Properties				
- $x = op$	SVCoverpoint			
- $x = cti$	SVCoverpoint			
- $x = incr$	SVCoverpoint			
- $x = status$	SVCoverpoint			
+ ...	SVCoverpoint			

Displaying the Class Tree Window

- Select **View > Class Browser > Class Tree**
- Use the command:
view classtree

GUI Elements of the Class Tree Window

This section describes the GUI elements specific to the Class Tree window.

Icons

Table 2-27. Class Tree Window Icons

Icon	Description
	Class
	Parameterized Class
	Function
	Task
	Variable
	Virtual Interface
	Covergroup
	Structure

Column Descriptions

- Class — The name of the item.
- Type — The type of item.
- File — The source location of item.
- Unique Id — (only parameterized classes) The internal name of the parameterized class.
- Scope — (only covergroups) The scope of the covergroup.

Menu Items

- View Declaration — Highlights the line of code where the item is declared, opening the source file if necessary.

- View as Graph — (only available for classes) Displays the class and any dependent classes in the Class Graph window.
- Filter — allows you to filter out methods and or properties
- Organize by Base Class — reorganizes the Class Tree window so that the base classes are at the top of the hierarchy.
- Organize by Extended Class — (default view) reorganizes the Class Tree window so that the extended classes are at the top of the hierarchy.

Toolbar Items


When undocked, the Class Tree window contains the following toolbars:

- [Filter Toolbar](#)
- [Standard Toolbar](#)

Class Graph Window

This window provides a graphical view of your SystemVerilog classes, including any extensions of other classes and related methods and properties.

Figure 2-40. Class Graph Window

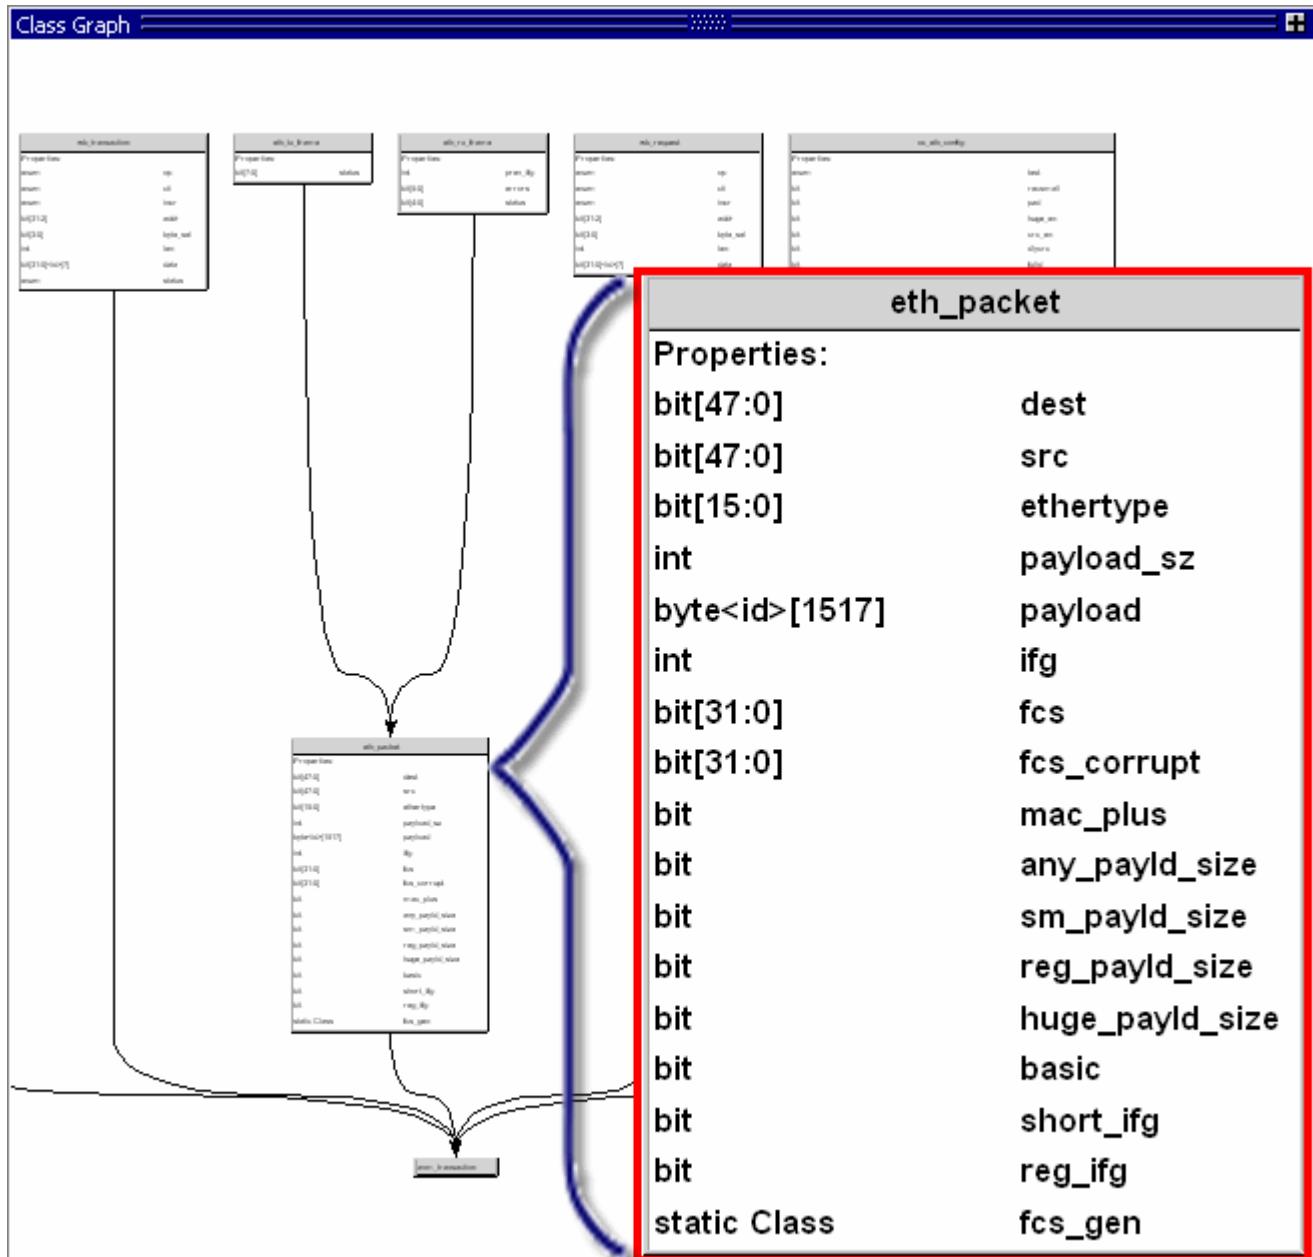

Displaying the Class Graph Window

- Select **View > Class Browser > Class Graph**
- Use the command:
view classgraph

GUI Elements of the Class Graph Window

This section describes the GUI elements specific to the Class Graph window.

Navigation

- Left click-drag — allows you to move the contents around in the window.
- Middle Mouse scroll — zooms in and out.
- Middle mouse button strokes:
 - Upper left — zoom full
 - Upper right — zoom out. The length of the stroke changes the zoom factor.
 - Lower right — zoom area.
- Arrow Keys — scrolls the window in the specified direction.
 - Unmodified — scrolls by a small amount.
 - Ctrl+<arrow key> — scrolls by a larger amount
 - Shift+<arrow key> — shifts the view to the edge of the display

Menu Items

- Filter — allows you to filter out methods and or properties
- Organize by Base Class — reorganizes the Class Tree window so that the base classes are at the top of the hierarchy.
- Organize by Extended Class — (default view) reorganizes the Class Tree window so that the extended classes are at the top of the hierarchy.

Toolbars

When undocked, the Class Graph window contains the following toolbar:

- [Zoom Toolbar](#)

Dataflow Window


The Dataflow window allows you to explore the "physical" connectivity of your design.

Note



OEM versions of ModelSim have limited Dataflow functionality. Many of the features described below will operate differently. The window will show only one process and its attached signals or one signal and its attached processes, as displayed in [Figure 2-41](#).

Figure 2-41. Dataflow Window - ModelSim

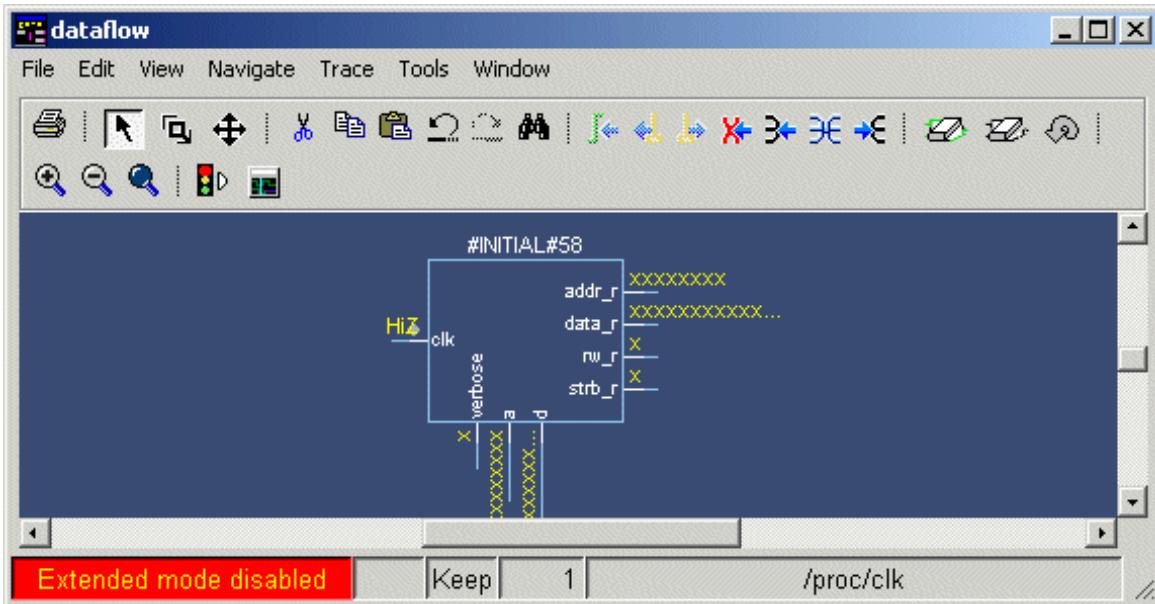

The Dataflow window displays:

- processes
- signals, nets, and registers

The window has built-in mappings for all Verilog primitive gates (i.e., AND, OR, PMOS, NMOS, etc.). For components other than Verilog primitives, you can define a mapping between processes and built-in symbols. See [Symbol Mapping](#) for details.

When undocked, the Dataflow window contains the following toolbars:

- [Standard Toolbar](#)
- [Compile Toolbar](#)
- [Simulate Toolbar](#)
- [Wave Cursor Toolbar](#)
- [Dataflow Toolbar](#)
- [Wave Toolbar](#)
- [Zoom Toolbar](#)


List Window

The List window displays a textual representation of waveforms, which you can configure to show events and delta events for the signals or objects you have added to the window.

You can view the following object types in the List window:

- VHDL — signals, aliases, process variables, and shared variables
- Verilog — nets, registers, and variables
- Virtuals — Virtual signals and functions

Figure 2-42. List Window

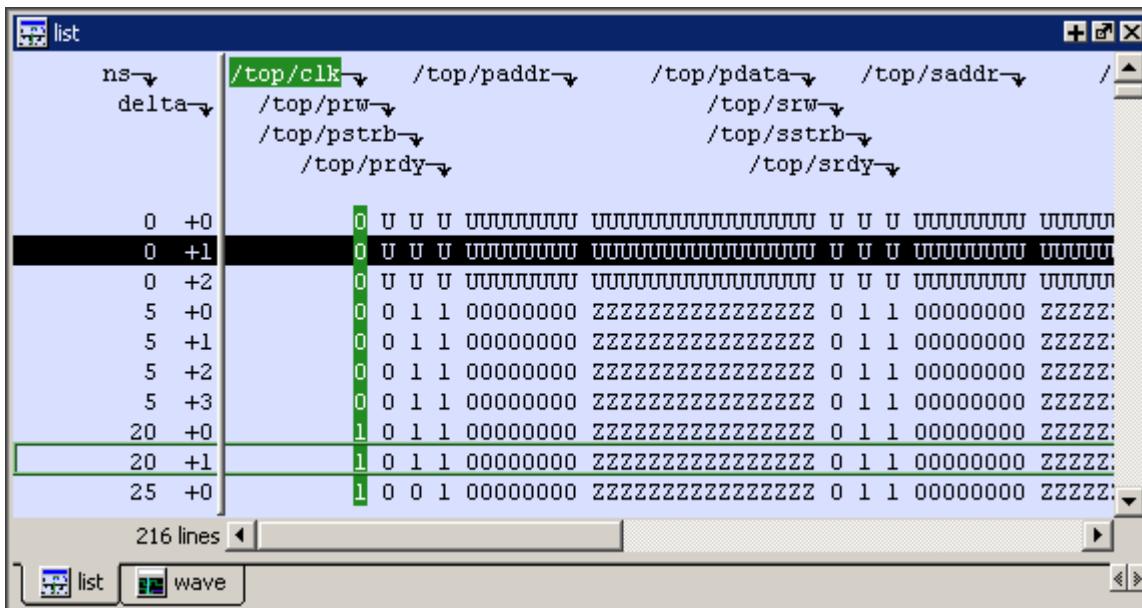

Displaying the List Window

- Select **View > List**
- Use the command:

view list

Viewing Data in the List Window

You can add information to the List window by right-clicking on signals and objects in the Objects window or the Structure tab of the Workspace window and selecting Add to List. You can also use the **add list** command.

Selecting Multiple Signals

To create a larger group of signals and assign a new name to this group, do the following:

1. Select a group of signals
 - Shift-click on signal columns to select a range of signals.
 - Control-click on signal columns to select a group of specific signals.
2. Select **List > Combine Signals**
3. Complete the Combine Selected Signals dialog box
 - Name — Specify the name you want to appear as the name of the new signal.
 - Order of Indexes — Specify the order of the new signal as ascending or descending.
 - Remove selected signals after combining — Specify whether the grouped signals should remain in the List window.

This process creates virtual signals. For more information, refer to the section [Virtual Signals](#).

GUI Elements of the List Window

This section describes the GUI elements specific to the List window.

Column Descriptions

The window is divided into two adjustable columns, which allow you to scroll horizontally through the listing on the right, while keeping time and delta visible on the left.

- The left column shows the time and any deltas that exist for a given time.
- The right column contains the data for the signals and objects you have added for each time shown in the left column. The top portion of the window contains the names of the signals. The bottom portion shows the signal values for the related time.

Note



The display of time values in the left column is limited to 10 characters. Any time value of more than 10 characters is replaced with the following:

too narrow

Markers

The markers in the List window are analogous to cursors in the Wave window. You can add, delete and move markers in the List window similarly to the Wave window. You will notice two different types of markers:

- Active Marker — The most recently selected marker shows as a black highlight.

- Non-active Marker — Any markers you have added that are not active are shown with a green border.

You can manipulate the markers in the following ways:

- Setting a marker — When you click in the right-hand portion of the List window, you will highlight a given time (black horizontal highlight) and a given signal or object (green vertical highlight).
- Moving the active marker — List window markers behave the same as Wave window cursors. There is one active marker which is where you click along with inactive markers generated by the Add Marker command. Markers move based on where you click. The closest marker (either active or inactive) will become the active marker, and the others remain inactive.
- Adding a marker — You can add an additional marker to the List window by right-clicking at a location in the right-hand side and selecting Add Marker.
- Deleting a marker — You can delete a marker by right-clicking in the List window and selecting Delete Marker. The marker closest to where you clicked is the marker that will be deleted.

Menu Items

The following menu items are available from the right-click menu within the List window:

- Examine — Displays the value of the signal over which you used the right mouse button, at the time selected with the Active Marker
- Add Marker — Adds a marker at the location of the Active Marker.
- Delete Marker — Deletes the closest marker to your mouse location.

The following menu items are available when the List window is active:

- List > Add Marker — Adds a marker at the location of the Active Marker.
- List > Delete Marker — Deletes the closest marker to your mouse location.
- List > Combine Signals — Combines the signals you've selected in the List window.
- List > List Preferences — Allows you to specify the preferences of the List window.
- File > Export > Tabular List — Exports the information in the List window to a file in tabular format. Equivalent to the command:

```
write list <filename>
```

- File > Export > Event List — Exports the information in the List window to a file in print-on-change format. Equivalent to the command:

```
write list -event <filename>
```

- File > Export > TSSI List — Exports the information in the List window to a file in TSSI. Equivalent to the command:

```
write tssi -event <filename>
```

- Edit > Signal Search — Allows you to search the List window for activity on the selected signal.

Menu Items


When undocked, the List window contains the following toolbar:

- Standard Toolbar

Locals Window

The Locals window displays data objects declared in the current, or local, scope of the active process. These data objects are immediately visible from the statement that will be executed next, which is denoted by a blue arrow in the Source editor window. The contents of the window change from one statement to the next.

Figure 2-43. Locals Window

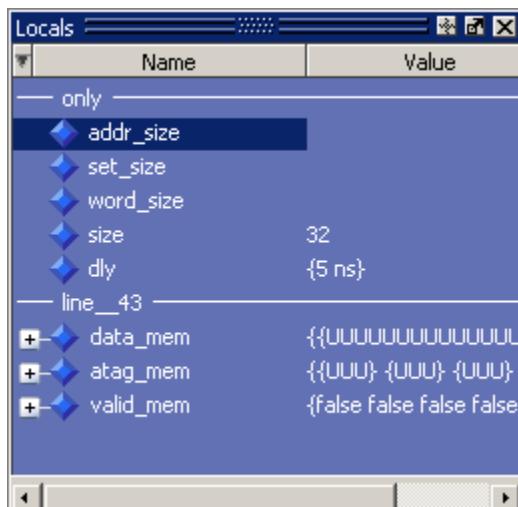

Displaying the Locals Window

- Select **View > Locals**
- Use the command:

```
view locals
```

Viewing Data in the Locals Window

You cannot actively place information in the Locals window, it is updated as you go through your simulation. However, there are several ways you can trigger the Locals window to be updated.

- Run your simulation while debugging.
- Select a Process from the [Process Window](#).
- Select a Verilog function or task or VHDL function or procedure from the [Call Stack Pane](#).

GUI Elements of the Locals Window

This section describes the GUI elements specific to the Locals Window.

Column Descriptions

- **Name** — lists the names of the immediately visible data objects. This column also includes design object icons for the objects, refer to the section “[Design Object Icons and Their Meaning](#)” for more information.
- **Value** — lists the current value(s) associated with each name.
- **State Count** — Not shown by default. This column, State Hits, and State % are all specific to coverage analysis
- **State Hits** — Not shown by default.
- **State %** — Not shown by default.

Menu Items

- **View Declaration** — Displays, in the Source window, the declaration of the object.
You can access this feature from the Locals menu of the Main window or the right-click menu in the Locals window.
- **Add** — Adds the selected object(s) to the specified window (Wave, List, Log, Dataflow).
You can access this feature from the Add menu of the Main window, the right-click menu of the Locals window, or the Add menu of the undocked Locals window.
- **Change** — Displays the [Change Selected Variable Dialog Box](#), which allows you to alter the value of the object.
You can access this feature from the Locals menu of the Main window or the right-click menu in the Locals window.


Menu Items

When undocked, the Locals window contains a subset of the [Standard Toolbar](#).

Change Selected Variable Dialog Box

This dialog box allows you to change the value of the object you selected. When you click Change, the tool executes the [change](#) command on the object.

Figure 2-44. Change Selected Variable Dialog Box

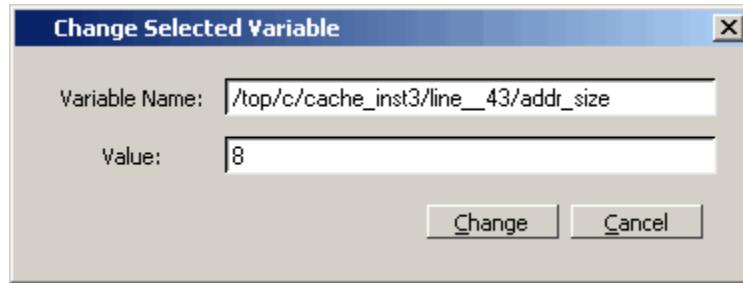

The Change Selected Variable dialog is prepopulated with the following information about the object you had selected in the Locals window:


- Variable Name — contains the complete name of the object.
- Value — contains the current value of the object.

When you change the value of the object, you can enter any value that is valid for the variable. An array value must be specified as a string (without surrounding quotation marks). To modify the values in a record, you need to change each field separately.

Memory Panes

The Main window lists all memories in your design in the Memories tab of the Main window Workspace and displays the contents of a selected memory in the Main window MDI frame.

Figure 2-45. Memory Panes

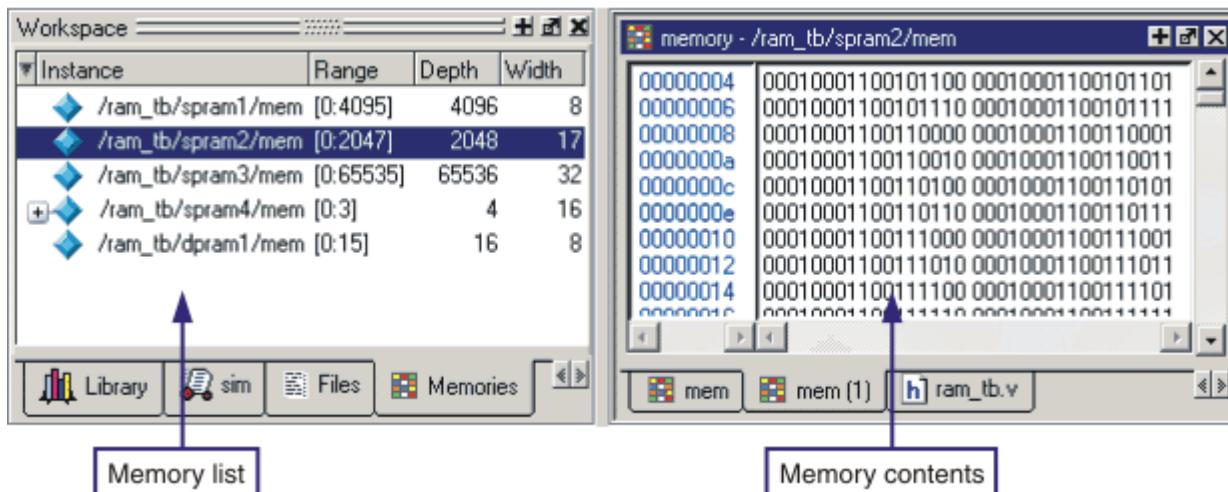

The memory list is from the top-level of the design. In other words, it is not sensitive to the context selected in the Structure tab.

When undocked, the Memory tab allows access to the [Memory Toolbar](#).

ModelSim identifies certain kinds of arrays in various scopes as memories. Memory identification depends on the array element kind as well as the overall array kind (i.e. associative array, unpacked array, etc.).

Table 2-28. Memories

	VHDL	Verilog/SystemVerilog	SystemC
Element Kind¹	enum ² , bit_vector, floating point type, std_logic_vector, std_ulogic_vector, or integer type	any integral type (i.e. integer_type): shortint, int, longint, byte, bit (2 state), logic, reg, integer, time (4 state), packed_struct / packed_union (2 state), packed_struct / packed_union (4 state), packed_array (single-Dim, multi-D, 2 state and 4 state), enum or string.	unsigned char, unsigned short, unsigned int, unsigned long, unsigned long long, char, short, int, float double, enum sc_bigint sc_biguint sc_int sc_uint sc_signed sc_unsigned
Scope: Recognizable in	architecture, process, or record	module, interface, package, compilation unit, struct, or static variables within a task / function / named block / class	sc_module

Table 2-28. Memories

	VHDL	Verilog/SystemVerilog	SystemC
Array Kind	single-dimensional or multi-dimensional	any combination of unpacked, dynamic and associative arrays ³ ; real/shortreal and float	single-dimensional or multi-dimensional

1. The element can be "bit" or "std_ulogic" if the array has dimensionality ≥ 2 .
2. These enumerated types must have at least one enumeration literal that is not a character literal. The listed width is the number of entries in the enumerated type definition and the depth is the size of the array itself.
3. Any combination of unpacked, dynamic, and associative arrays is considered a memory, provided the leaf level of the data structure is a string or an integral type.

Associative Arrays in Verilog/SystemVerilog

For an associative array to be recognized as a memory, the index must be of an integral type (see above) or wildcard type.

For associative arrays, the element kind can be any type allowed for fixed-size arrays.

Viewing Single and Multidimensional Memories

For single and multi-dimensional VHDL arrays to be considered memories, the following rules apply:

- Any one-dimensional array whose element type is:
 - an integer type (including type INTEGER),
 - a floating point type (including REAL), or
 - an enumeration subtype whose enumeration literals include at least one non-character literal (this requirement disqualifies any one-dimensional array of BIT or STD_ULOGIC in particular).
- Any one-dimensional array of:
 - BIT_VECTOR,
 - STD_LOGIC_VECTOR, or
 - STD_ULOGIC_VECTOR.
- Any multidimensional ($N \geq 2$) array of:
 - an integer type,
 - a floating point type, or

- an enumeration type whose enumeration literal includes at least one non-character literal.

Single dimensional arrays of integers are interpreted as 2D memory arrays. In these cases, the word width listed in the Memory List pane is equal to the integer size, and the depth is the size of the array itself.

Memories with three or more dimensions display with a plus sign '+' next to their names in the Memory List. Click the '+' to show the array indices under that level. When you finally expand down to the 2D level, you can double-click on the index, and the data for the selected 2D slice of the memory will appear in a memory contents pane in the MDI frame.

Viewing Packed Arrays

By default packed dimensions are treated as single vectors in the memory contents pane. To expand packed dimensions of packed arrays, select **View > Memory Contents > Expand Packed Memories**.

To change the permanent default, edit the PrefMemory(ExpandPackedMem) variable. This variable affects only packed arrays. If the variable is set to 1, the packed arrays are treated as unpacked arrays and are expanded along the packed dimensions such that they appear as a linearized bit vector. See [Simulator GUI Preferences](#) for details on setting preference variables.


Viewing Memory Contents

When you double-click an instance on the Memory tab, ModelSim automatically displays a memory contents pane in the MDI frame (see [Multiple Document Interface \(MDI\) Frame](#)), where the name used on the tab is taken from the name of the instance, as seen in the Memory list. You can also enter the command **add mem <instance>** at the **vsim** command prompt.

Viewing Multiple Memory Instances

You can view multiple memory instances simultaneously. A memory tab appears in the MDI frame for each instance you double-click in the Memory list. When you open more than one tab for the same memory, the name of the tab receives an numerical identifier after the name, such as "(2)".

Figure 2-46. Viewing Multiple Memories

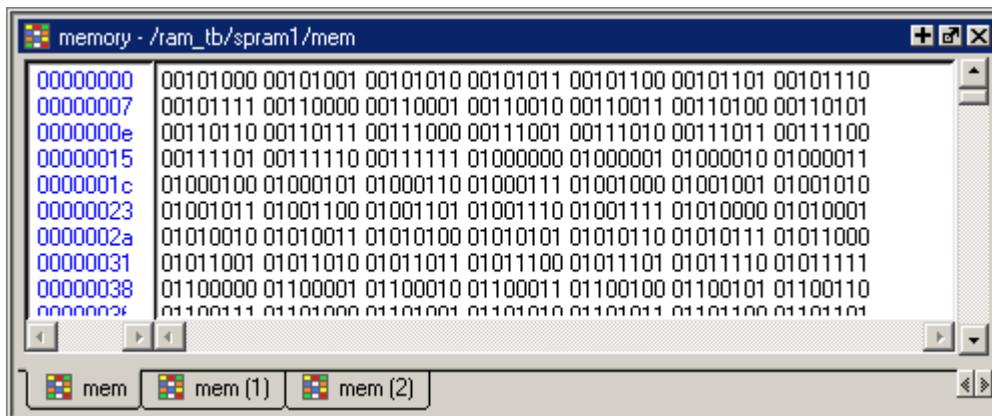

See [Organizing Windows with Tab Groups](#) for more information on tabs.

Saving Memory Formats in a DO File

You can save all open memory instances and their formats (e.g., address radix, data radix, etc.) by creating a DO file. With the memory tab active, select **File > Save As**. The Save memory format dialog box opens, where you can specify the name for the saved file. By default it is named *mem.do*. The file will contain all open memory instances and their formats. To load it at a later time, select **File > Load**.

Direct Address Navigation

You can navigate to any address location directly by editing the address in the address column. Double-click on any address, type in the desired address, and hit **Enter**. The address display scrolls to the specified location.


Splitting the Memory Contents Pane

To split a memory contents window into two screens displaying the contents of a single memory instance, so any one of the following:

- select **Memories > Split Screen** if the Memory Contents Pane is docked in the Main window,
- select **View > Split Screen** if the Memory Contents Pane is undocked,
- right-click in the pane and select **Split Screen** from the pop-up menu.

This allows you to view different address locations within the same memory instance simultaneously.

Figure 2-47. Split Screen View of Memory Contents

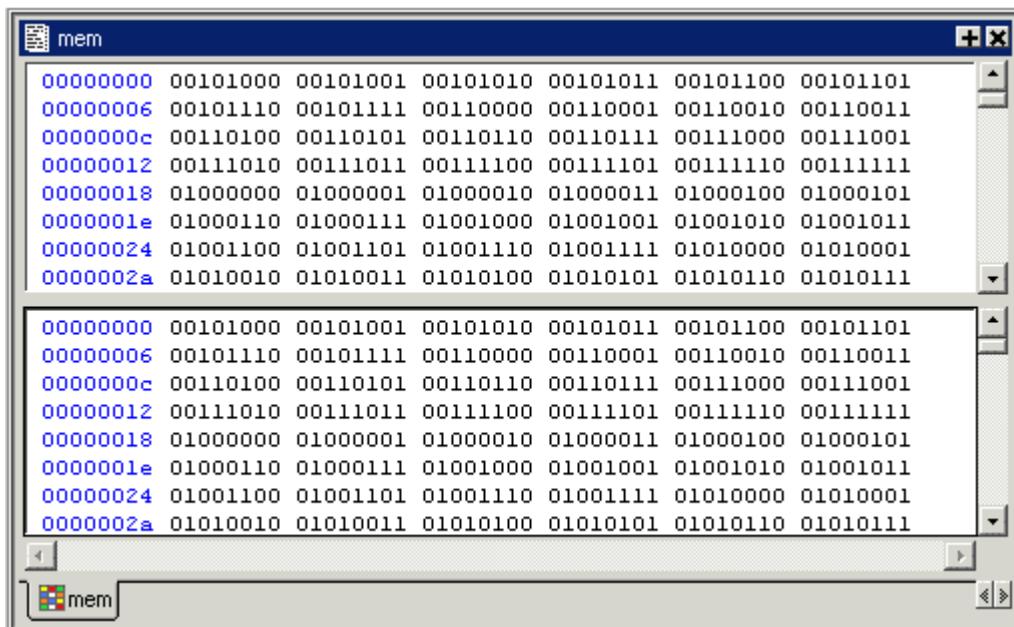

Objects Pane

The Objects pane shows the names and current values of declared data objects in the current region (selected in the structure tabs of the Workspace). Data objects include signals, nets, registers, constants and variables not declared in a process, generics, parameters.

Clicking an entry in the window highlights that object in the Dataflow and Wave windows. Double-clicking an entry highlights that object in a Source editor window (opening a Source editor window if one is not open already). You can also right click an object name and add it to the List or Wave window, or the current log file.

Figure 2-48. Objects Pane

Objects	
Name	Value
[+] data_in	0000000000000000
[+] data_sp1	01111010
[+] data_sp2	001110110011110
[+] data_sp3	0000000000000000
[+] data_sp4	011101100111101
[+] data_dp1	01111010
[7]	S10
[6]	S11
[5]	S11
[4]	S11
[3]	S11
[2]	S10

Filtering the Objects List

You can filter the objects list by name or by object type.

Filtering by Name


To filter by name, undock the Objects pane from the Main window and start typing letters in the **Contains** field in the toolbar.

Figure 2-49. Objects Filter



As you type, the objects list filters to show only those signals that contain those letters.

Figure 2-50. Filtering the Objects List by Name

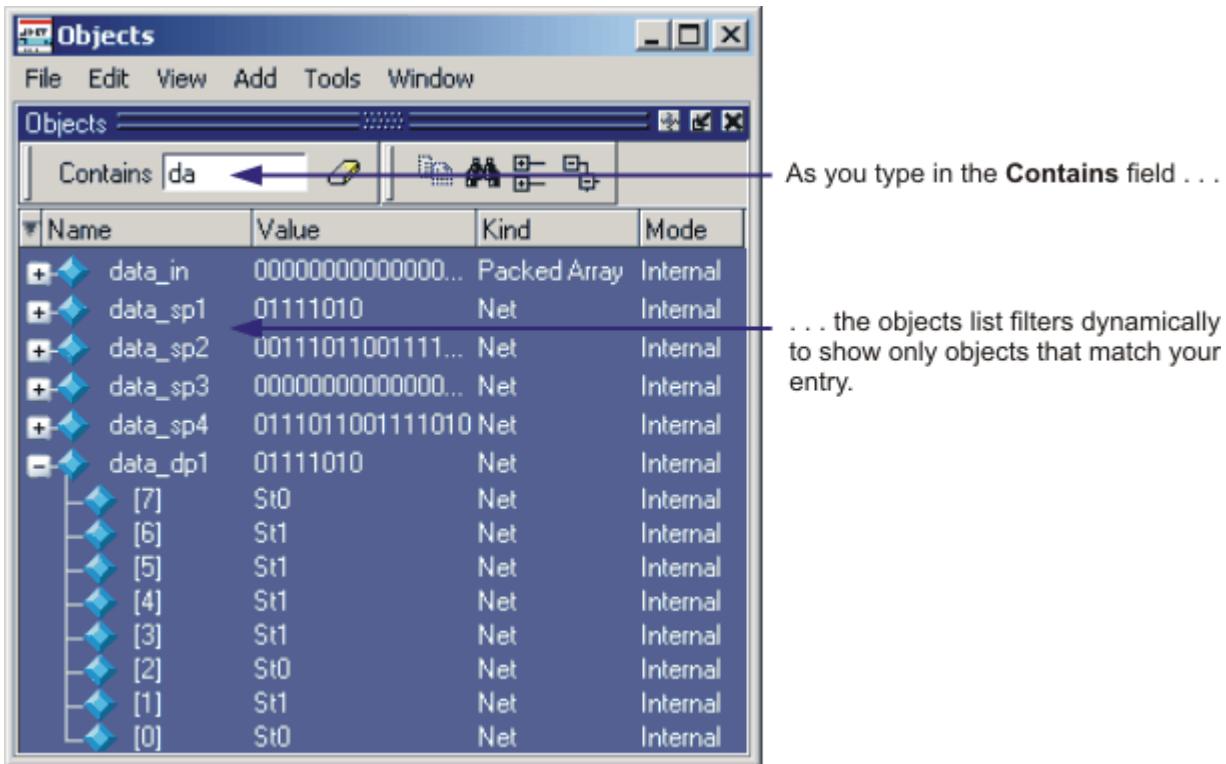

To display all objects again, click the Eraser icon to clear the entry.

Filters are stored relative to the region selected in the Structure window. If you re-select a region that had a filter applied, that filter is restored. This allows you to apply different filters to different regions.

Filtering by Signal Type

The **View > Filter** menu selection allows you to specify which signal types to display in the Objects window. Multiple options can be selected.

Source Window

Source files display by default in the MDI frame of the Main window. The Source window can be undocked from the Main window by clicking the Undock icon in the window header or by using the [view -undock source](#) command.

You can edit source files as well as set breakpoints, step through design files, and view code coverage statistics.

By default, the Source window displays your source code with line numbers. You may also see the following graphic elements:

- Red line numbers — denote executable lines, where you can set a breakpoint
- Blue arrow — denotes the currently active line or a process that you have selected in the [Process Window](#)
- Red ball in line number column — denotes file-line breakpoints; gray ball denotes breakpoints that are currently disabled
- Blue flag in line number column — denotes line bookmarks
- Language Templates pane — displays templates for writing code in VHDL, Verilog, SystemC, Verilog 95, and SystemVerilog ([Figure 2-51](#)). See [Using Language Templates](#).

When undocked, the Source window provides access to the following toolbars:

- [Standard Toolbar](#)
- [Compile Toolbar](#)
- [Simulate Toolbar](#)
- [Coverage Toolbar](#)
- [Source Toolbar](#)

Figure 2-51. Source Window Showing Language Templates

The screenshot shows the ModelSim Source window titled 'C:/Tutorial/examples/tutorials/verilog/basicSimulation/tcounter.v'. The left pane displays a tree view of 'Language Templates' for VHDL and Verilog. Under VHDL, 'New Design' and 'Create Testbench' are shown. Under 'Language Constructs', 'Library Definitions' is expanded, revealing 'Entity', 'Architecture', 'Package', 'Configuration', 'Declarations', and 'Statements'. Under 'Stimulus Generators', 'Verilog', 'SystemC', 'Verilog 95', and 'SystemVerilog' are listed. The right pane shows the source code for 'tcounter.v' with line numbers 17 through 30. Line 25 is highlighted with a dark blue background, indicating it is selected or being edited. The code includes initial clock generation logic, test stimulus logic with variable 'reset', and an initial block.

```
initial // Clock generator
begin
    clk = 0;
    forever #10 clk = !clk;
end

initial // Test stimulus
begin
    reset = 0;
    #5 reset = 1;
    #4 reset = 0;
end

initial
```


Opening Source Files

You can open source files using the **File > Open** command or by clicking the **Open** icon. Alternatively, you can open source files by double-clicking objects in other windows. For example, if you double-click an item in the Objects window or in the structure tab (**sim** tab) of the Workspace, the underlying source file for the object will open in the Source window and scroll to the line where the object is defined.

By default, files you open from within the design (such as when you double-click an object in the Objects pane) open in Read Only mode. To make the file editable, right-click in the Source window and select (uncheck) Read Only. To change this default behavior, set the **PrefSource(ReadOnly)** variable to 0. See [Simulator GUI Preferences](#) for details on setting preference variables.

Displaying Multiple Source Files

By default each file you open or create is marked by a window tab, as shown in the graphic below.

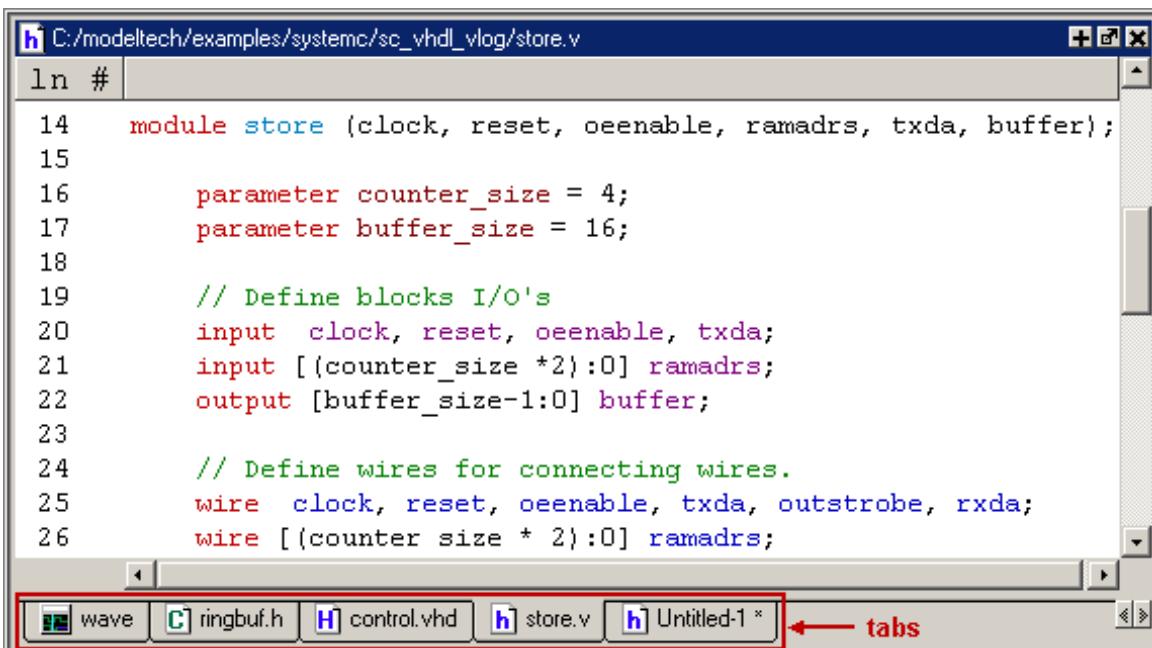Figure 2-52. Displaying Multiple Source Files

The screenshot shows the ModelSim Source window with the title bar "C:/modeltech/examples/systemc/sc_vhdl_vlog/store.v". The main area displays VHDL code for a module named "store". Below the code, several tabs are visible at the bottom of the window, each representing a different source file or window. The tabs are labeled: "wave", "ringbuf.h", "control.vhd", "store.v", and "Untitled-1 *". A red arrow points to the "store.v" tab, which is highlighted. To the right of the tabs, there are icons for zooming in and out.

```
14  module store (clock, reset, oenable, ramadrs, txdः, buffer);
15
16      parameter counter_size = 4;
17      parameter buffer_size = 16;
18
19      // Define blocks I/O's
20      input  clock, reset, oenable, txdः;
21      input  [(counter_size * 2):0] ramadrs;
22      output [buffer_size-1:0] buffer;
23
24      // Define wires for connecting wires.
25      wire  clock, reset, oenable, txdः, outstrobe, rxdः;
26      wire  [(counter size * 2):0] ramadrs;
```

See [Organizing Windows with Tab Groups](#) for more information on these tabs.


Dragging and Dropping Objects into the Wave and List Windows

ModelSim allows you to drag and drop objects from the Source window to the Wave and List windows. Double-click an object to highlight it, then drag the object to the Wave or List window. To place a group of objects into the Wave and List windows, drag and drop any section of highlighted code.

Setting your Context by Navigating Source Files

When debugging your design from within the GUI, you can change your context while analyzing your source files. [Figure 2-53](#) shows the pop-up menu the tool displays after you select then right-click an instance name in a source file.

Figure 2-53. Setting Context from Source Files

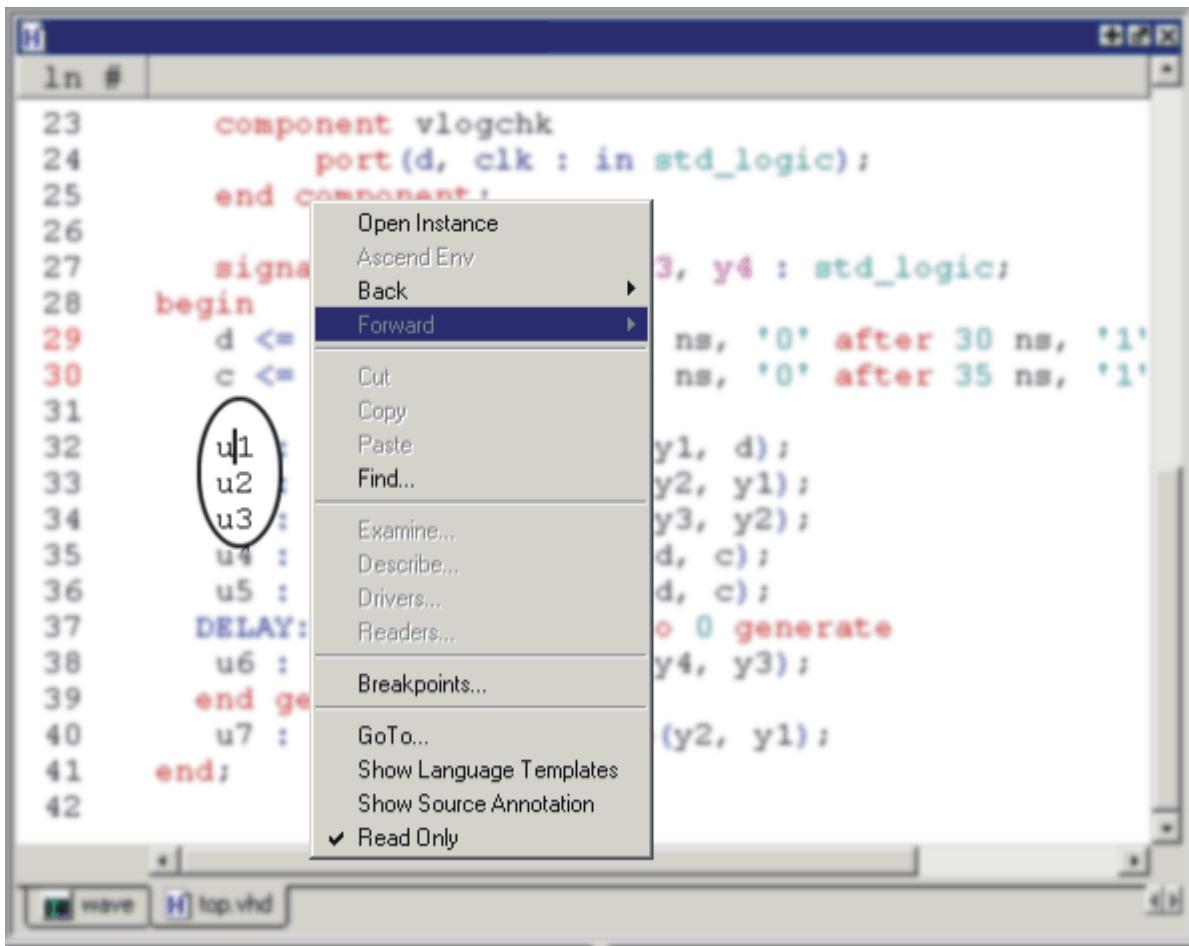

This functionality allows you to easily navigate your design for debugging purposes by remembering where you have been, similar to the functionality in most web browsers. The navigation options in the pop-up menu function as follows:

- **Open Instance** — changes your context to the instance you have selected within the source file. This is not available if you have not placed your cursor in, or highlighted the name of, an instance within your source file.
If any ambiguities exists, most likely due to generate statements, this option opens a dialog box allowing you to choose from all available instances.
- **Ascend Env** — changes your context to the next level up within the design. This is not available if you are at the top-level of your design.
- **Forward/Back** — allows you to change to previously selected contexts. This is not available if you have not changed your context.

The Open Instance option is essentially executing an **environment** command to change your context, therefore any time you use this command manually at the command prompt, that information is also saved for use with the Forward/Back options.

Highlighted Text in a Source Window

The Source window can display text that is highlighted as a result of various conditions or operations, such as the following:

- Double-clicking an error message in the transcript shown during a compile
- Using "Goto Driver"

In these cases, the relevant text in the source code is shown with a persistent highlighting. To remove this highlighted display, choose Clear Highlights from the popup menu of the Source window. You can display this popup menu from the main menu, the docked Source window, or the undocked Source window, as follows:

Main menu: Source > More > Clear Highlights

Docked: (right-click) More > Clear Highlights

Undocked: (right-click) Edit > Advanced > Clear Highlights

Note



Clear Highlights does not affect text that you have selected with the mouse cursor.

Example

To produce a compile error that displays highlighted text in the Source window, do the following:

1. Choose Compile > Compile Options...
2. In the Compiler Options dialog box, click either the VHDL tab or the Verilog & System Verilog tab.
3. Enable Show source lines with errors and click OK.
4. Open a design file and create a known compile error (such as changing the word “entity” to “entry” or “module” to “nodule”).
5. Choose Compile > Compile... and then complete the Compile Source Files dialog box to finish compiling the file.
6. When the compile error appears in the Transcript window, double-click on it.
7. The source window is opened (if needed), and the text containing the error is highlighted.
8. To remove the highlighting, choose Source > More > Clear Highlights.

Using Language Templates

ModelSim language templates help you write code. They are a collection of wizards, menus, and dialogs that produce code for new designs, testbenches, language constructs, logic blocks, etc.


Note



The language templates are not intended to replace thorough knowledge of coding. They are intended as an interactive "reference" for creating small sections of code. If you are unfamiliar with a particular language, you should attend a training class or consult one of the many available books.


To use the templates, either open an existing file, or select **File > New > Source** to create a new file. Once the file is open, select **Source > Show Language Templates** if the Source window is docked in the Main window; select **View > Show Language Templates** of the Source window is undocked. This displays a pane that shows the available templates.

Figure 2-54. Language Templates

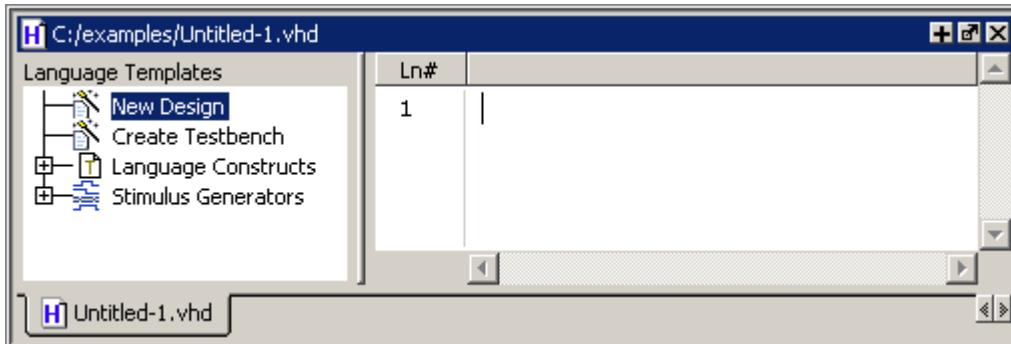


The templates that appear depend on the type of file you create. For example Module and Primitive templates are available for Verilog files, and Entity and Architecture templates are available for VHDL files.

Double-click an object in the list to open a wizard or to begin creating code. Some of the objects bring up wizards while others insert code into your source file. The dialog below is part of the wizard for creating a new design. Simply follow the directions in the wizards.

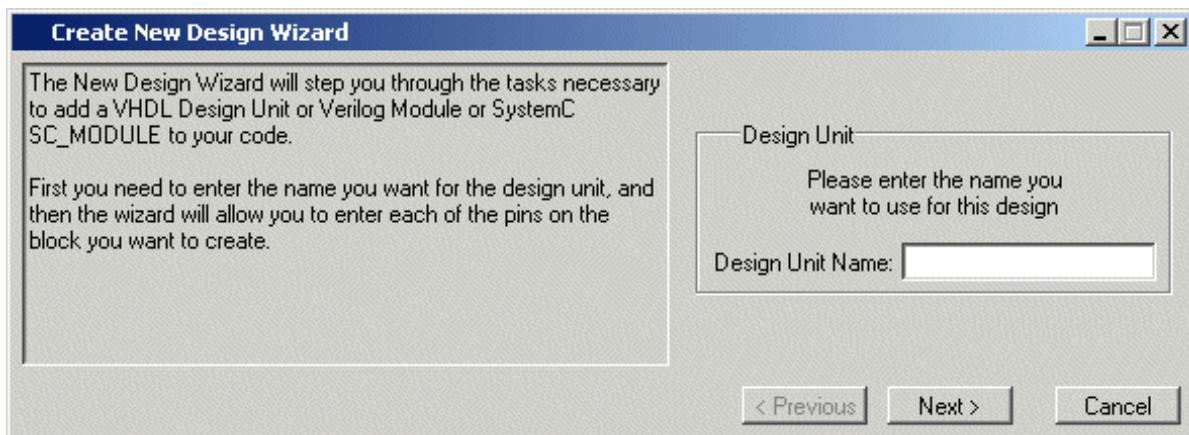
Figure 2-55. Create New Design Wizard

Code inserted into your source contains a variety of highlighted fields. The example below shows a module statement inserted from the Verilog template.

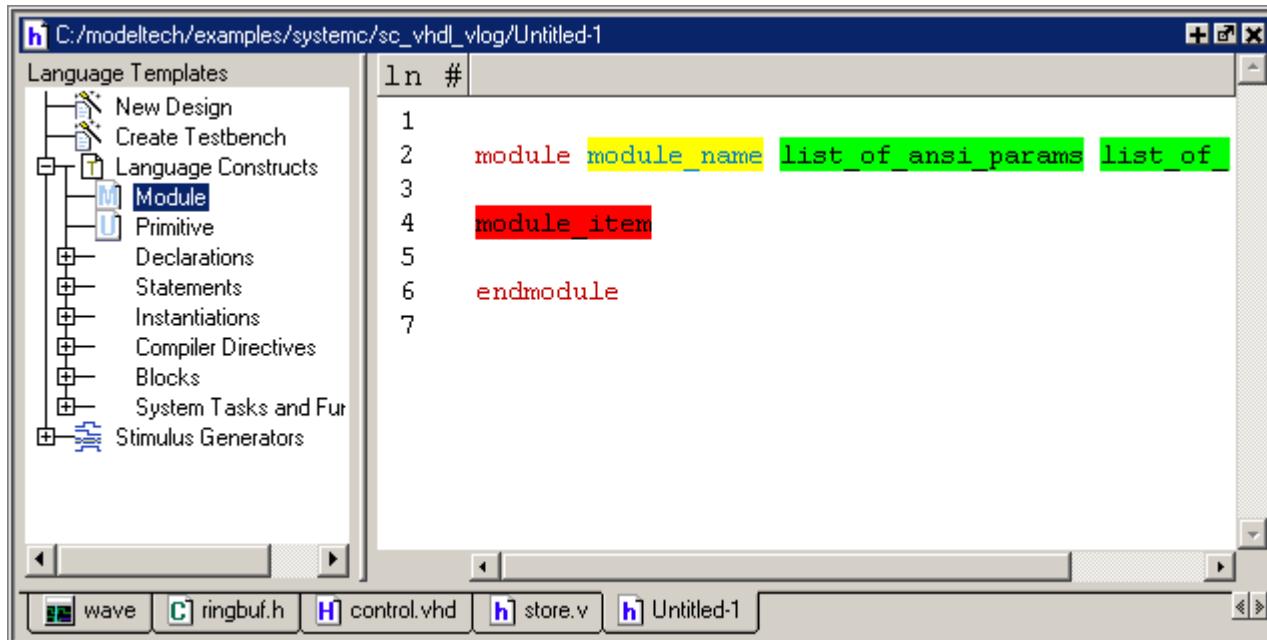Figure 2-56. Inserting Module Statement from Verilog Language Template

Some of the fields, such as *module_name* in the example above, are to be replaced with names you type. Other fields can be expanded by double-clicking and still others offer a context menu of options when double-clicked. The example below shows the menu that appears when you double-click *module_item* then select *gate_instantiation*.


Figure 2-57. Language Template Context Menus

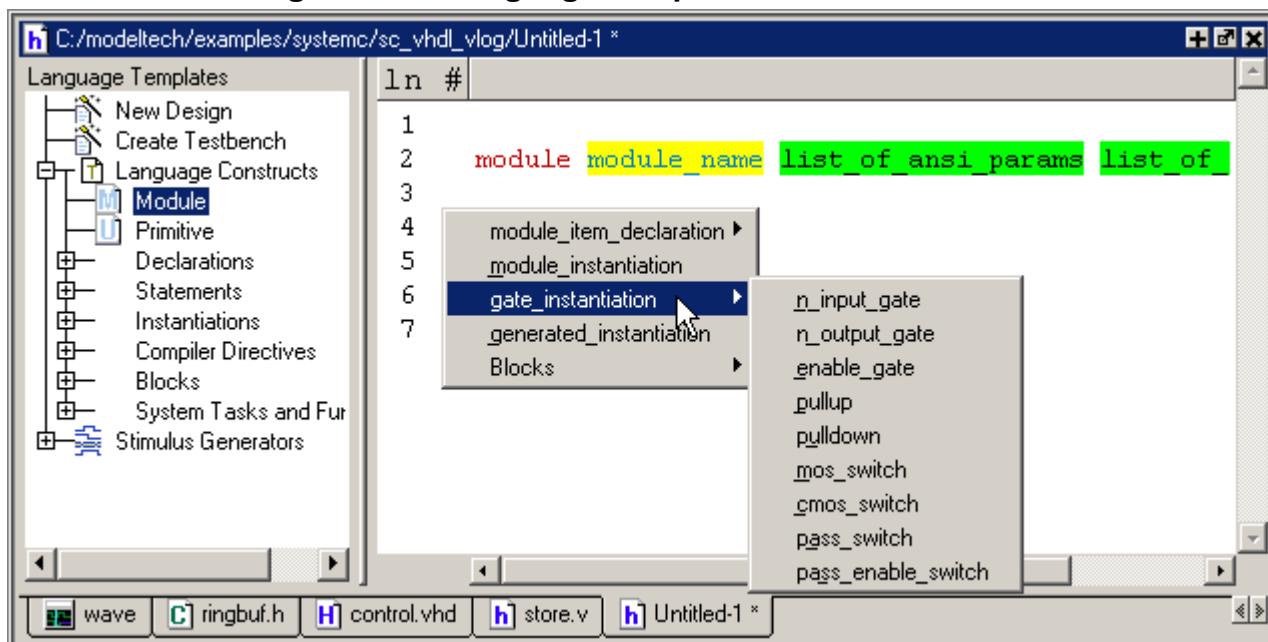

Setting File-Line Breakpoints with the GUI

You can easily set file-line breakpoints in your source code by clicking your mouse cursor in the line number column of a Source window. Click the left mouse button in the line number column next to a red line number and a red ball denoting a breakpoint will appear (Figure 2-58).

Figure 2-58. Breakpoint in the Source Window

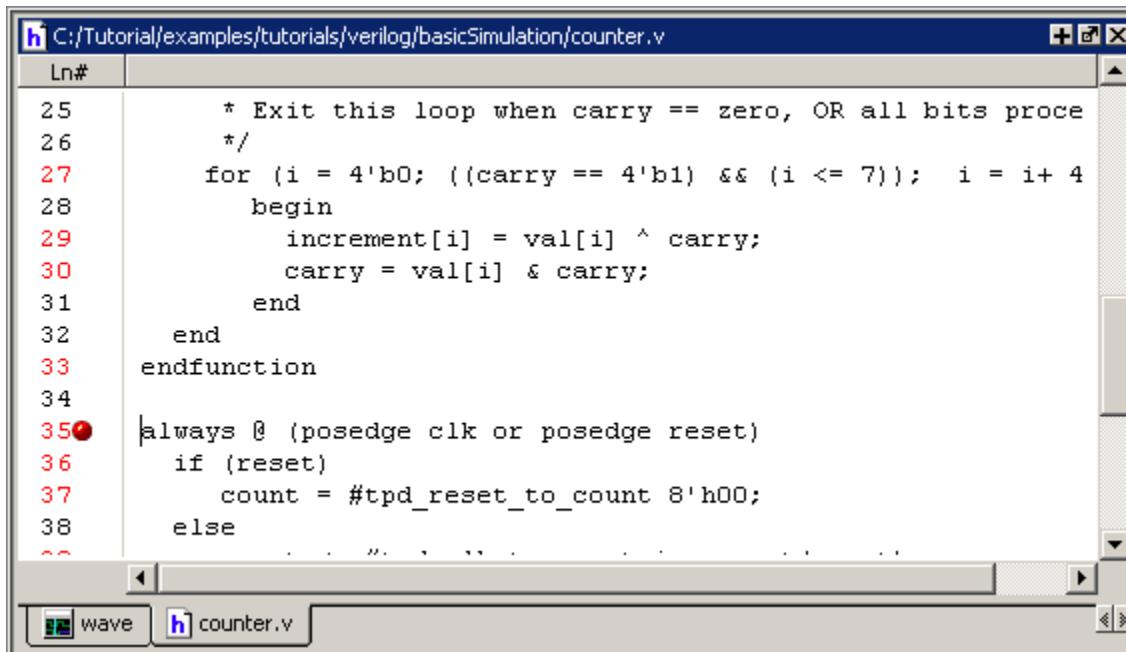

The breakpoint markers are toggles. Click once to create the breakpoint; click again to disable or enable the breakpoint.

To delete the breakpoint completely, right click the red breakpoint marker, and select **Remove Breakpoint**. Other options on the context menu include:

- **Disable Breakpoint** — Deactivate the selected breakpoint.
- **Edit Breakpoint** — Open the File Breakpoint dialog to change breakpoint arguments.
- **Edit All Breakpoints** — Open the Modify Breakpoints dialog
- **Add/Remove Bookmark** — Add or remove a file-line bookmark.

Adding File-Line Breakpoints with the bp Command

Use the **bp** command to add a file-line breakpoint from the VSIM> prompt.

For example:

```
bp top.vhd 147
```

sets a breakpoint in the source file *top.vhd* at line 147.


Modifying File-Line Breakpoints

To modify (or add) a breakpoint according to the line number in a source file, do any one of the following:

- Select **Tools > Breakpoints** from the Main menu.
- Right-click a breakpoint and select **Edit All Breakpoints** from the popup menu.
- Click the **Edit Breakpoints** toolbar button. See [Simulate Toolbar](#).

This displays the Modify Breakpoints dialog box shown in [Figure 2-59](#).

Figure 2-59. Modifying Existing Breakpoints

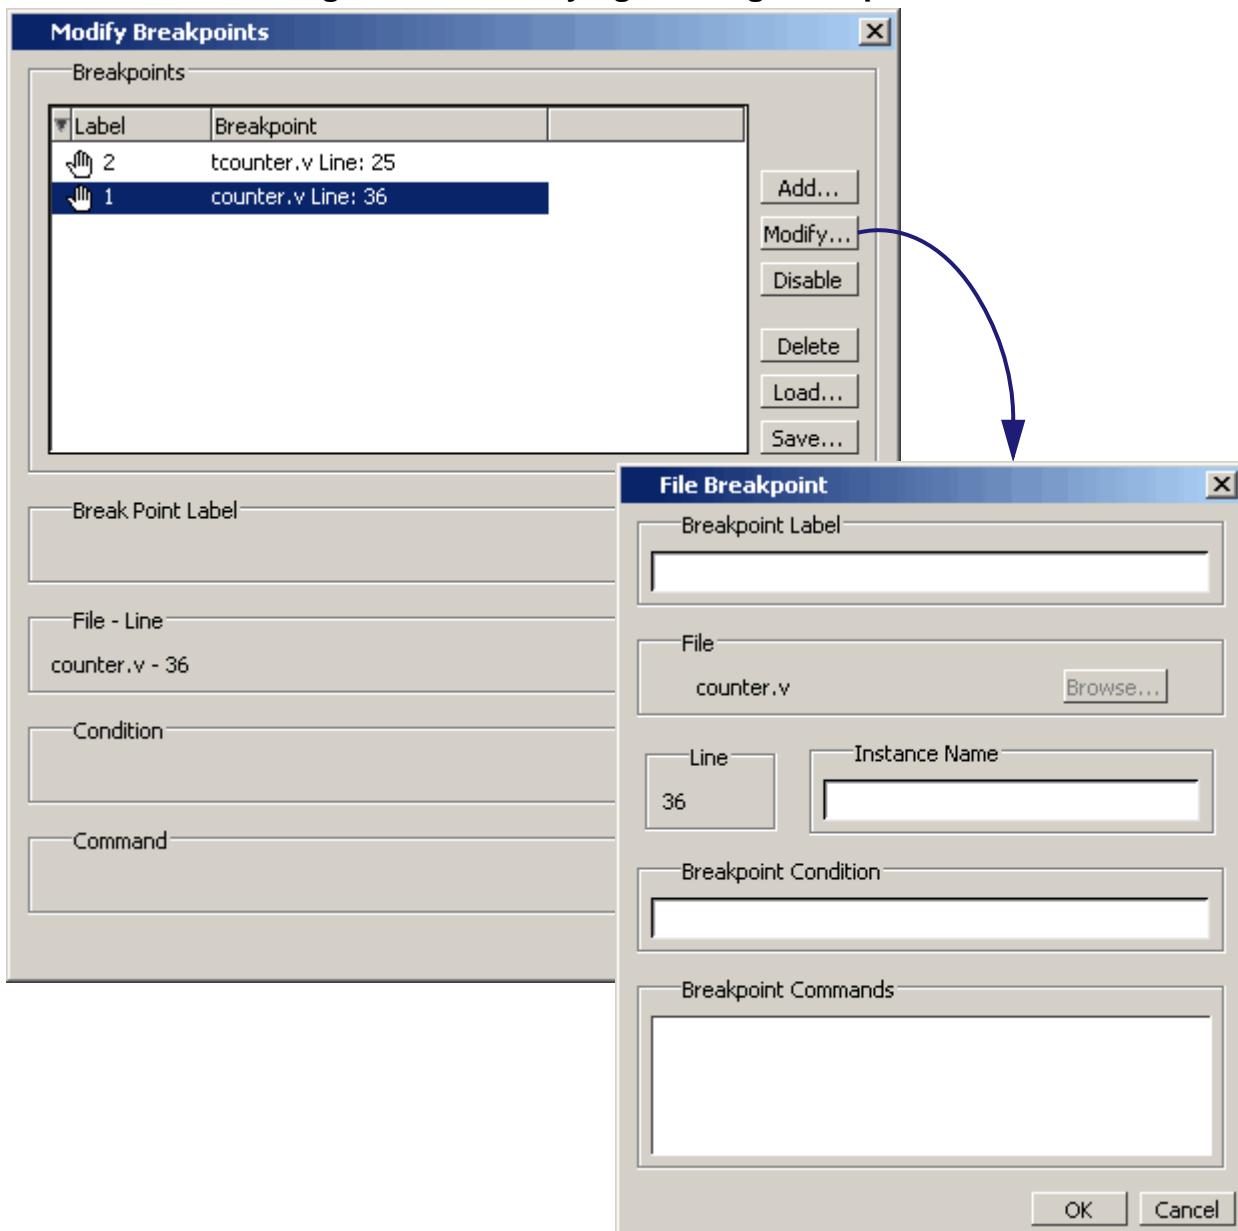

The Modify Breakpoints dialog box provides a list of all breakpoints in the design. To modify a breakpoint, do the following:

1. Select a file-line breakpoint from the list.
2. Click Modify, which opens the File Breakpoint dialog box shown in [Figure 2-59](#).
3. Fill out any of the following fields to modify the selected breakpoint:
 - Breakpoint Label — Designates a label for the breakpoint.

- Instance Name — The full pathname to an instance that sets a SystemC breakpoint so it applies only to that specified instance.
- Breakpoint Condition — One or more conditions that determine whether the breakpoint is observed. You must enclose the condition expression within quotation marks (""). If the condition is true, the simulation stops at the breakpoint. If false, the simulation bypasses the breakpoint. A condition cannot refer to a VHDL variable (only a signal).
- Breakpoint Command — A string, enclosed in braces ({}) that specifies one or more commands to be executed at the breakpoint. Use a semicolon (;) to separate multiple commands.



These fields in the File Breakpoint dialog box use the same syntax and format as the -inst switch, the -condition switch, and the command string of the [bp](#) command. For more information on these command options, refer to the [bp](#) command in the [Reference Manual](#).

4. Click OK to close the File Breakpoints dialog box.
5. Click OK to close the Modify Breakpoints dialog box.

Loading and Saving Breakpoints

The Modify Breakpoints dialog ([Figure 2-59](#)) includes Load and Save buttons that allow you to load or save breakpoints.

Checking Object Values and Descriptions

There are two quick methods to determine the value and description of an object displayed in the Source window:

- select an object, then right-click and select **Examine** or **Describe** from the context menu
- pause over an object with your mouse pointer to see an examine pop-up

Select **Tools > Options > Examine Now** or **Tools > Options > Examine Current Cursor** to choose at what simulation time the object is examined or described.

You can also invoke the [examine](#) and/or [describe](#) commands on the command line or in a macro.

Marking Lines with Bookmarks

Source window bookmarks are blue flags that mark lines in a source file. These graphical icons may ease navigation through a large source file by "highlighting" certain lines.

As noted above in the discussion about finding text in the Source window, you can insert bookmarks on any line containing the text for which you are searching. The other method for inserting bookmarks is to right-click a line number and select **Add/Remove Bookmark**. To remove a bookmark, right-click the line number and select Add/Remove Bookmark again.


Performing Incremental Search for Specific Code

The Source window includes an inline search feature that allows you to do an incremental search for specific code. To activate the inline search bar (Figure 2-60) select **Edit > Find** from the menus or click the **Find** icon in the toolbar.



For details, see [Inline Search Bar for Text-Based Windows](#).


Figure 2-60. Source Window with Inline Search Bar

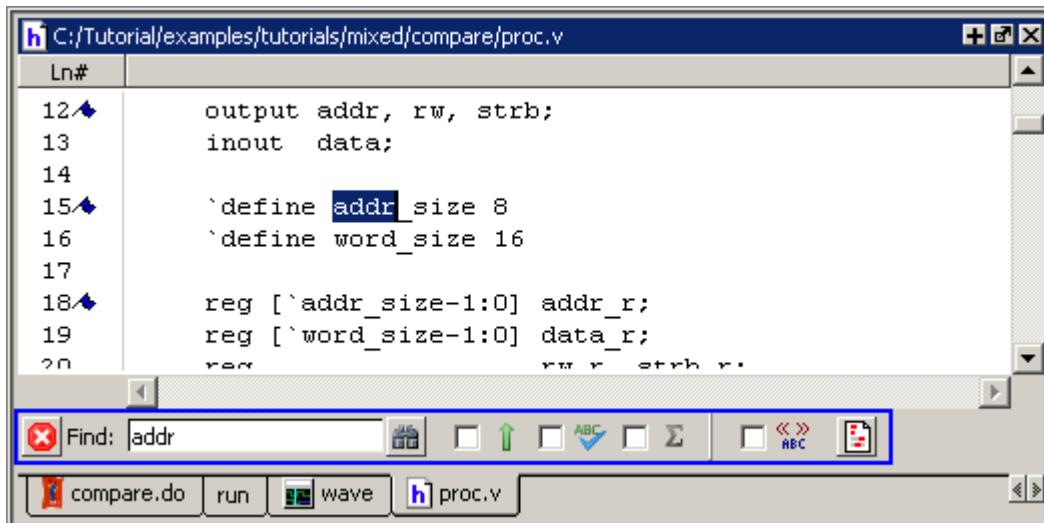

Customizing the Source Window

You can customize a variety of settings for Source windows. For example, you can change fonts, spacing, colors, syntax highlighting, and so forth. To customize Source window settings, select **Tools > Edit Preferences**. This opens the Preferences dialog. Select **Source Windows** from the Window List.

Figure 2-61. Preferences Dialog for Customizing Source Window

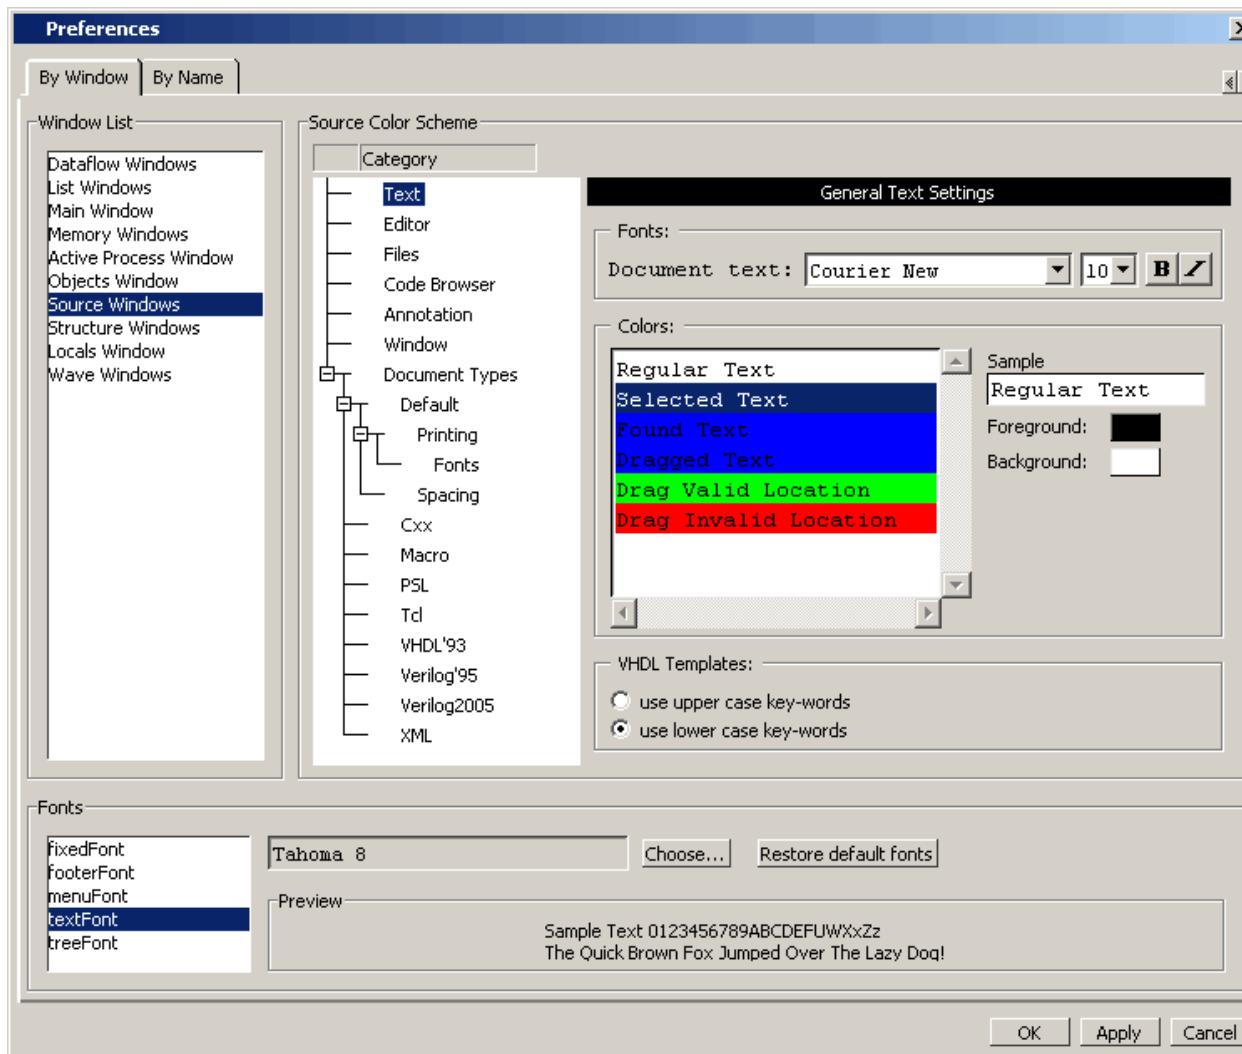

Select an item from the Category list and then edit the available properties on the right. Click OK or Apply to accept the changes.

The changes will be active for the next Source window you open. The changes are saved automatically when you quit ModelSim. See [Setting Preference Variables from the GUI](#) for details.

Transcript Window

The Transcript window contains the following tabs:

- **Transcript Tab** — maintains a running history of commands that are invoked and messages that occur as you use the tool.

- **Message Viewer Tab** — allows you to easily access, organize, and analyze any messages written to the transcript during the simulation run

The Transcript window is always open and part of the Main window.

Transcript Tab

The Transcript portion of the Main window maintains a running history of commands that are invoked and messages that occur as you work with ModelSim. When a simulation is running, the Transcript displays a VSIM prompt, allowing you to enter command-line commands from within the graphic interface.

You can scroll backward and forward through the current work history by using the vertical scrollbar. You can also use arrow keys to recall previous commands, or copy and paste using the mouse within the window (see [Main and Source Window Mouse and Keyboard Shortcuts](#) for details).

Displaying the Transcript Tab

The Transcript window, including the Transcript tab, is always open in the Main window and cannot be closed.

Viewing Data in the Transcript Tab

The Transcript tab contains the command line interface, identified by the ModelSim prompt, and the simulation interface, identified by the VSIM prompt.

Transcript Tab Tasks

This section introduces you to several tasks you can perform, related to the Transcript tab.

Saving the Transcript File

Variable settings determine the filename used for saving the transcript. If either **PrefMain(file)** in the *.modelsim* file or **TranscriptFile** in the *modelsim.ini* file is set, then the transcript output is logged to the specified file. By default the **TranscriptFile** variable in *modelsim.ini* is set to *transcript*. If either variable is set, the transcript contents are always saved and no explicit saving is necessary.

If you would like to save an additional copy of the transcript with a different filename, click in the Transcript pane and then select **File > Save As**, or **File > Save**. The initial save must be made with the **Save As** selection, which stores the filename in the Tcl variable **PrefMain(saveFile)**. Subsequent saves can be made with the **Save** selection. Since no automatic saves are performed for this file, it is written only when you invoke a **Save** command. The file is written to the specified directory and records the contents of the transcript at the time of the save.

Using the Saved Transcript as a Macro (DO file)

Saved transcript files can be used as macros (DO files). Refer to the [do](#) command for more information.

Changing the Number of Lines Saved in the Transcript Window

By default, the Transcript window retains the last 5000 lines of output from the transcript. You can change this default by selecting **Transcript > Saved Lines**. Setting this variable to 0 instructs the tool to retain all lines of the transcript.

Disabling Creation of the Transcript File

You can disable the creation of the transcript file by using the following ModelSim command immediately after ModelSim starts:


```
transcript file ""
```

Performing an Incremental Search

The Transcript tab includes an inline search feature ([Figure 2-62](#)) that allows you to do an incremental search for specific text. To activate the inline search bar select **Edit > Find** from the menus or click the **Find** icon in the toolbar.

For details, see [Inline Search Bar for Text-Based Windows](#).

Figure 2-62. Transcript Window with Inline Search Bar

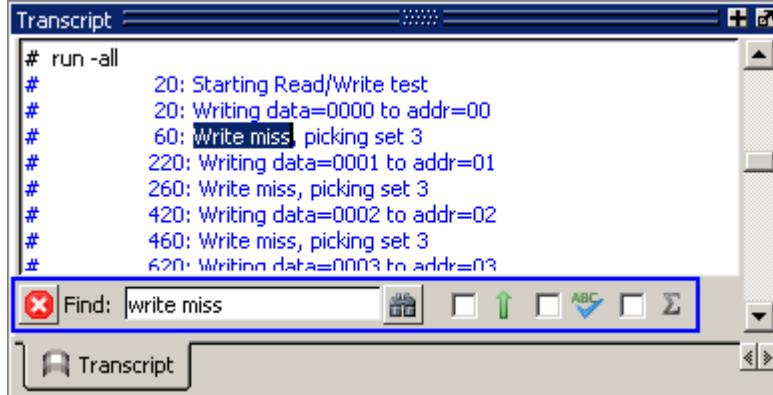

GUI Elements of the Transcript Pane

This section describes the GUI elements specific to the Transcript tab.

Automatic Command Help

When you start typing a command at the prompt, a dropdown box appears which lists the available commands matching what has been typed so far. You may use the Up and Down

arrow keys or the mouse to select the desired command. When a unique command has been entered, the command usage is presented in the drop down box.

You can toggle this feature on and off by selecting **Help > Command Completion**.

Transcript Menu Items

- Adjust Font Scaling — Displays the Adjust Scaling dialog box, which allows you to adjust how fonts appear for your display environment. Directions are available in the dialog box.
- Transcript File — Allows you to change the default name used when saving the transcript file. The saved transcript file will contain all the text in the current transcript file.
- Command History — Allows you to change the default name used when saving command history information. This file is saved at the same time as the transcript file.
- Save File — Allows you to change the default name used when selecting File > Save As.
- Saved Lines — Allows you to change how many lines of text are saved in the transcript window. Setting this value to zero (0) saves all lines.
- Line Prefix — Allows you to change the character(s) that precedes the lines in the transcript.
- Update Rate — Allows you to change the length of time (in ms) between transcript refreshes the transcript refreshes/
- ModelSim Prompt — Allows you to change the string used for the command line prompt.
- VSIM Prompt — Allows you to change the string used for the simulation prompt.
- Paused Prompt — Allows you to change the string used for when the simulation is paused.

Transcript Toolbar Items

When undocked, the Transcript window allows access to the following toolbars:

- [Standard Toolbar](#)
- [Help Toolbar](#)
- [Filter Toolbar](#)

Message Viewer Tab

The Message Viewer tab, found in the Transcript window, allows you to easily access, organize, and analyze any Note, Warning, Error or other elaboration and runtime messages written to the transcript during the simulation run.

Displaying the Message Viewer Tab

- Select **View > Message Viewer**

- Use the command:

```
view msgviewer
```

- Open a dataset:

```
dataset open <WLF_file>
```

Viewing Data in the Message Viewer Tab

By default, the tool writes transcribed messages during elaboration and runtime to both the transcript and the WLF file. By writing messages to the WLF file, the Message Viewer tab is able to organize the messages for your analysis during the current simulation as well as during post simulation.

You can control what messages are available in the transcript, WLF file, or both with the following switches:

- **displaymsgmode** messages — User generated messages resulting from calls to Verilog Display System Tasks and PLI/FLI print function calls. By default, these messages are written only to the transcript, which means you cannot access them through the Message Viewer tab. In many cases, these user generated messages are intended to be output as a group of transcribed messages, thus the default of transcript only. The Message Viewer treats each message individually, therefore you could lose the context of these grouped messages by modifying the view or sort order of the Message Viewer.

To change this default behavior you can use the **-displaymsgmode** argument to **vsim**.

The syntax is:

```
vsim -displaymsgmode {both | tran | wlf}
```

You can also use the **displaymsgmode** variable in the modelsim.ini file.

The message transcripting methods that are controlled by **-displaymsgmode** include:

- Verilog Display System Tasks — \$write, \$display, \$monitor, and \$strobe. The following also apply if they are sent to STDOUT: \$fwrite, \$fdisplay, \$fmonitor, and \$fstrobe.
- FLI Print Function Calls — mti_PrintFormatted and mti_PrintMessage.
- PLI Print Function Calls — io_printf and vpi_printf.
- **msgmode** messages — All elaboration and runtime messages not part of the **displaymsgmode** messages. By default, these messages are written to the transcript and the WLF file, which provides access to the messages through the Message Viewer tab.

To change this default behavior you can use the `-msgmode` argument to `vsim`. The syntax is:

```
vsim -msgmode {both | tran | wlf}
```

You can also use the `msgmode` variable in the `modelsim.ini` file.

Message Viewer Tab Tasks

Figure 2-63 and Table 2-29 provide an overview of the Message Viewer and several tasks you can perform.

Figure 2-63. Message Viewer Tab

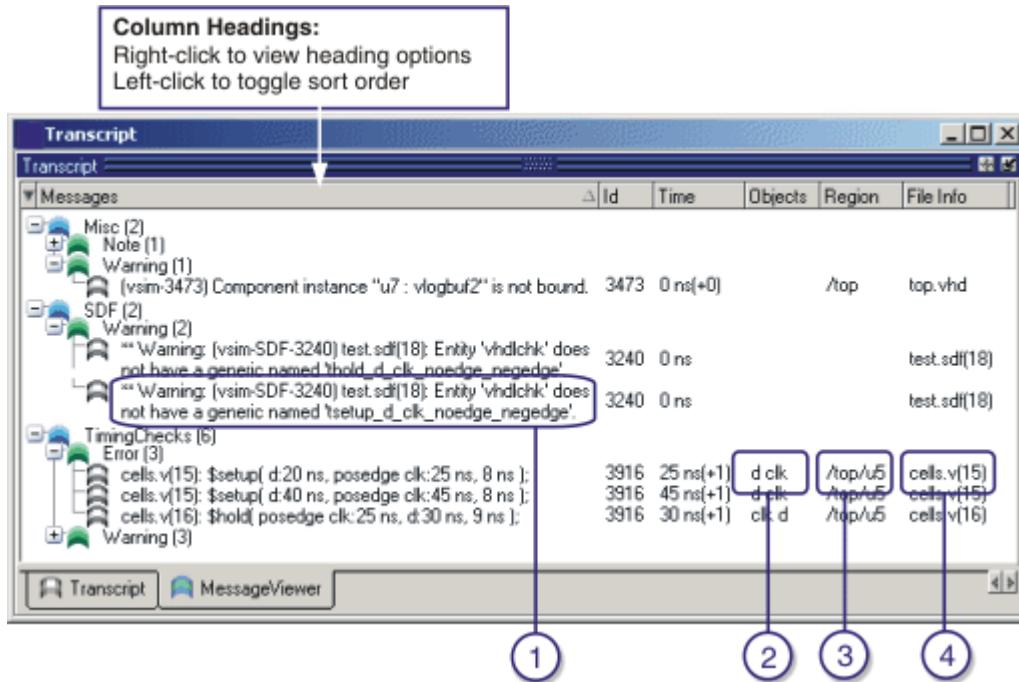


Table 2-29. Message Viewer Tasks

Icon	Task	Action
1	Display a detailed description of the message.	right click the message text then select View Verbose Message .
2	Open the source file and add a bookmark to the location of the object(s).	double click the object name(s).
3	Change the focus of the Workspace and Objects panes.	double click the hierarchical reference.
4	Open the source file and set a marker at the line number.	double click the file name.

GUI Elements of the Message Viewer Tab

This section describes the GUI elements specific to the Message Viewer tab.

Column Descriptions

- Messages — contains the organized tree-structure of the sorted messages, as well as, when expanded, the text of the messages.
- Time — displays the time of simulation when the message was issued.
- Objects — displays the object(s) related to the message, if any.
- Region — displays the hierarchical region related to the message, if any.
- File Info — displays the filename related to the cause of the message, and in some cases the line number in parentheses.
- Category — displays a keyword for the various categories of messages, which are as follows:

Display ¹	SDF	VITAL
FLI	Timing Check (TCHK)	WLF
PA	User ²	Misc (MISC)
PLI	VCD	

1. Related to Verilog display system tasks.
2. Related to \$messagelog system tasks.

- Severity — displays the message severity, such as Warning, Note or Error.
- Timing Check Kind — displays additional information about timing checks
- Assertion Start Time
- Assertion Name
- Verbosity — displays verbosity information from \$messagelog system tasks.
- Id — displays the message number

Message Viewer Menu Items

Right-click anywhere in the Message Viewer to open a popup menu that contains the following selections:

- **Source** — opens the source file in the MDI window, and in some cases takes you to the associated line number.
- **Verbose Message** — displays the Verbose Message dialog box containing further details about the selected message.

- **Object Declaration** — opens and highlights the object declaration related to the selected message.
- **Filter** — displays the [Message Viewer Filter Dialog Box](#), which allows you to create specialized rules for filtering the Message Viewer.
- **Clear Filter** — restores the Message Viewer to an unfiltered view by issuing the messages clearfilter command.
- **Display Reset** — resets the display of the Message Viewer tab.
- **Display Options** — displays the Message Viewer Display Options dialog box, which allows you to further control which messages appear in the Message Viewer tab.

Related GUI Features

- The [Messages Bar](#) in the Wave window provides indicators as to when a message occurred.

Message Viewer Display Options Dialog Box

This dialog box allows you to control display options for the message viewer tab of the transcript window.

- **Hierarchy Selection** — This field allows you to control the appearance of message hierarchy, if any.
 - **Display with Hierarchy** — enables or disables a hierarchical view of messages.
 - **First by, Then by** — specifies the organization order of the hierarchy, if enabled.
- **Time Range** — Allows you to filter which messages appear according to simulation time. The default is to display messages for the complete simulation time.
- **Displayed Objects** — Allows you to filter which messages appear according to the values in the Objects column. The default is to display all messages, regardless of the values in the Objects column. The Objects in the list text entry box allows you to specify filter strings, where each string must be on a new line.

Message Viewer Filter Dialog Box

This dialog box allows you to create filter rules that specify which messages should be shown in the message viewer. It contains a series of dropdown and text entry boxes for creating the filter rules and supports the addition of additional rule (rows) to create logical groupings .


From left to right, each filter rule is made up of the following:

- **Add and Remove buttons** — either add a rule filter row below the current row or remove that rule filter row.

- Logic field — specifies a logical argument for combining adjacent rules. Your choices are: AND, OR, NAND, and NOR. This field is greyed out for the first rule filter row.
- Open Parenthesis field — controls rule groupings by specifying, if necessary, any open parentheses. The up and down arrows increase or decrease the number of parentheses in the field.
- Column field — specifies that your filter value applies to a specific column of the Message Viewer.
- Inclusion field — specifies whether the Column field should or should not contain a given value.
 - For text-based filter values your choices are: Contains, Doesn't Contain, or Exact.
 - For numeric- and time-based filter values your choices are: ==, !=, <, <=, >, and >=.
- Case Sensitivity field — specifies whether your filter rule should treat your filter value as Case Sensitive or Case Insensitive. This field only applies to text-based filter values.
- Filter Value field — specifies the filter value associated with your filter rule.
- Time Unit field — specifies the time unit. Your choices are: fs, ps, ns, us, ms. This field only applies to the Time selection from the Column field.
- Closed Parenthesis field — controls rule groupings by specifying, if necessary, any closed parentheses. The up and down arrows increase or decrease the number of parentheses in the field.

[Figure 2-64](#) shows an example where you want to show all messages, either errors or warnings, that reference the 15th line of the file *cells.v*.

Figure 2-64. Message Viewer Filter Dialog Box

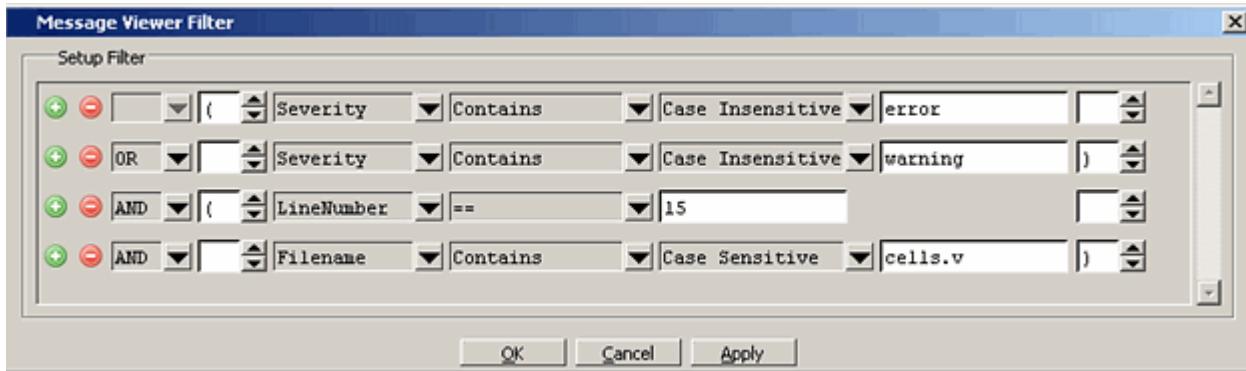

When you select OK or Apply, the Message Viewer is updated to contain only those messages that meet the criteria defined in the Message Viewer Filter dialog box.

Also, when selecting OK or Apply, the transcript pane will contain an echo of the messages setfilter command, where the argument is a Tcl definition of the filter. You can then cut/paste this command for reuse at another time.

Watch Pane


The Watch pane shows values for signals and variables at the current simulation time, allows you to explore the hierarchy of object oriented designs. Unlike the Objects or Locals pane, the Watch pane allows you to view any signal or variable in the design regardless of the current context. You can view the following objects in the Watch pane.

- VHDL objects — signals, aliases, generics, constants, and variables
- Verilog objects — nets, registers, variables, named events, and module parameters
- Virtual objects — virtual signals and virtual functions

The address of an object, if one can be obtained, is displayed in the title in parentheses as shown in [Figure 2-65](#).


Items displayed in red are values that have changed during the previous Run command. You can change the radix of displayed values by selecting an item, right-clicking to open a popup context menu, then selecting **Properties**.

Figure 2-65. Watch Pane

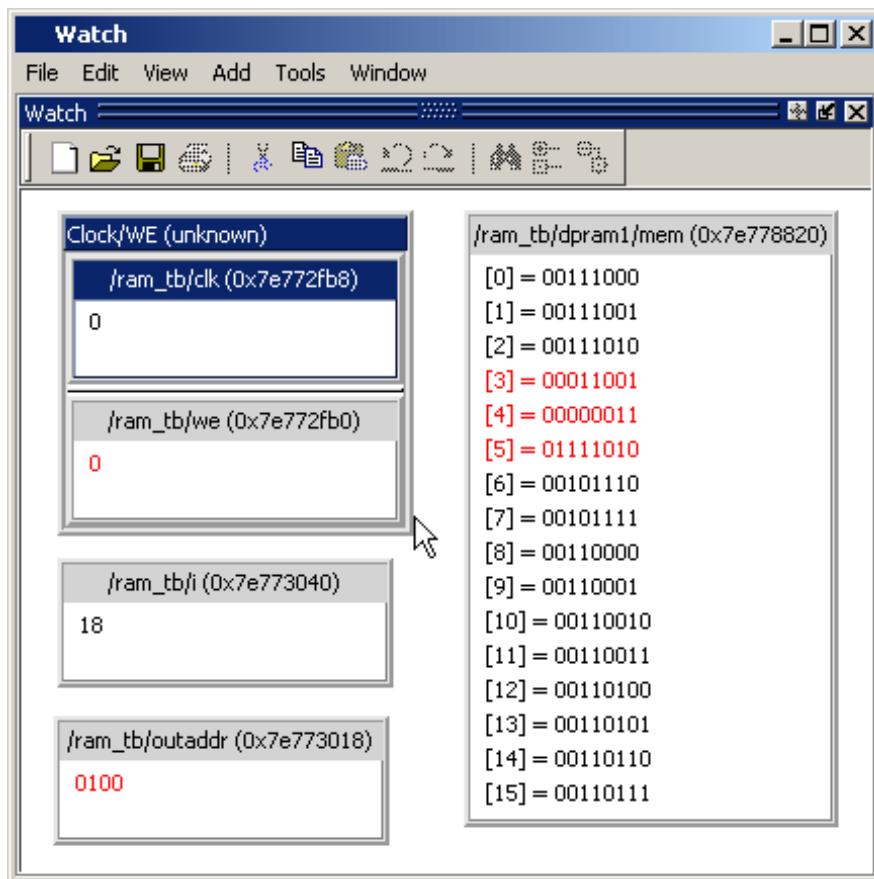

Items are displayed in a scrollable, hierarchical list, such as in [Figure 2-66](#) where extended SystemVerilog classes hierarchically display their super members.

Figure 2-66. Scrollable Hierarchical Display

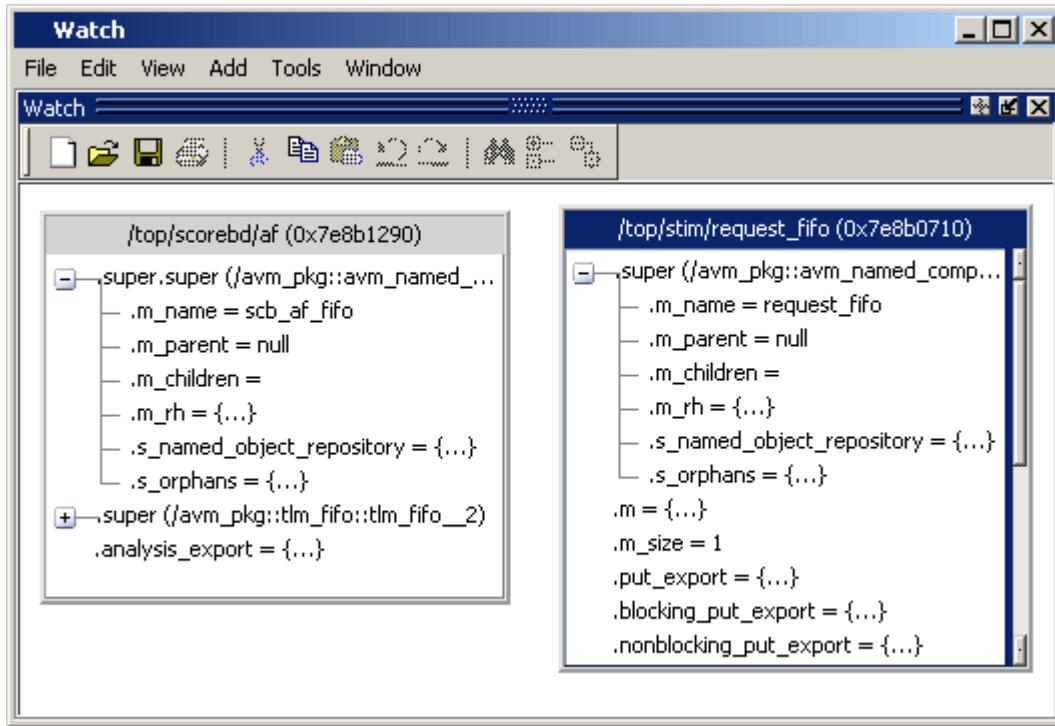

Two Ref handles that refer to the same object will point to the same Watch pane box, even if the name used to reach the object is different. This means circular references will be drawn as circular in the Watch pane.

Selecting a line item in the Watch pane adds the item's full name to the global selection. This allows you to past the full name in the Transcript (by simply clicking the middle mouse button) or other external application that accepts text from the global selection.

Adding Objects to the Watch Pane


To add objects to the Watch pane, drag-and-drop objects from the Structure tab in the Workspace or from any of the following panes: List, Locals, Objects, Source, and Wave.

Alternatively, you can use the [add watch](#) command to add objects to the Watch pane.

Expanding Objects to Show Individual Bits

If you add an array or record to the Watch pane, you can view individual bit values by double-clicking the array or record. As shown in [Figure 2-67](#), /ram_tb/spram4/mem has been expanded to show all the individual bit values. Notice the arrow that "ties" the array to the individual bit display.

Figure 2-67. Expanded Array

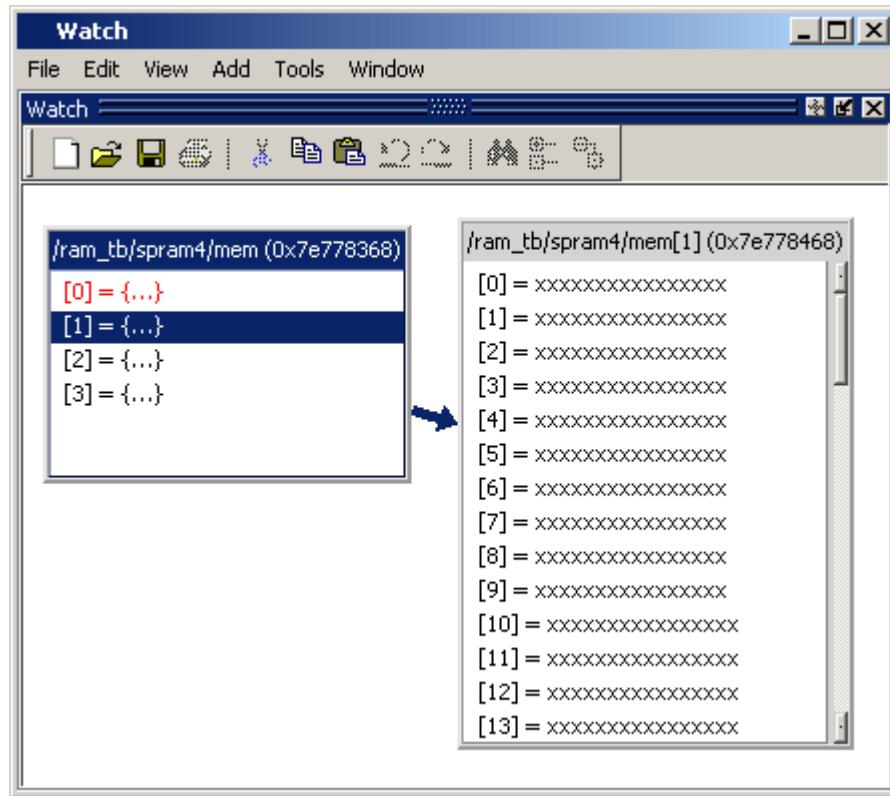


Grouping and Ungrouping Objects

You can group objects in the Watch pane so they display and move together. Select the objects, then right click one of the objects and choose **Group**.

In [Figure 2-68](#), two different sets of objects have been grouped together.

Figure 2-68. Grouping Objects in the Watch Pane

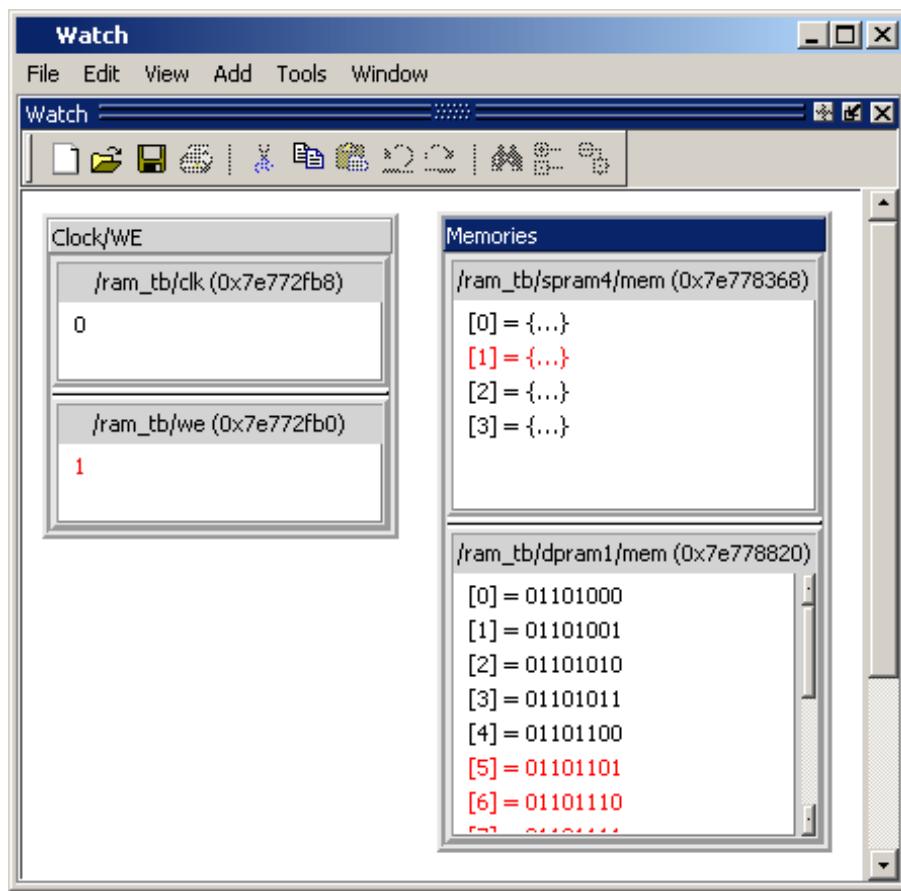

To ungroup them, right-click the group and select **Ungroup**.

Saving and Reloading Format Files

You can save a format file (a DO file, actually) that will redraw the contents of the Watch pane. Right-click anywhere in the pane and select **Save Format**. The default name of the format file is *watch.do*.

Once you have saved the file, you can reload it by right-clicking and selecting **Load Format**.

Wave Window

The Wave window, like the List window, allows you to view the results of your simulation. In the Wave window, however, you can see the results as waveforms and their values.


The Wave window opens by default in the MDI frame of the Main window as shown below. The window can be undocked from the main window by clicking the Undock button in the window header or by using the **view -undock wave** command. The preference variable

Graphical User Interface

Wave Window


PrefMain(ViewUndocked) wave can be used to control this default behavior. Setting this variable will open the Wave window undocked each time you start ModelSim.

Figure 2-69. Wave Window Undock Button

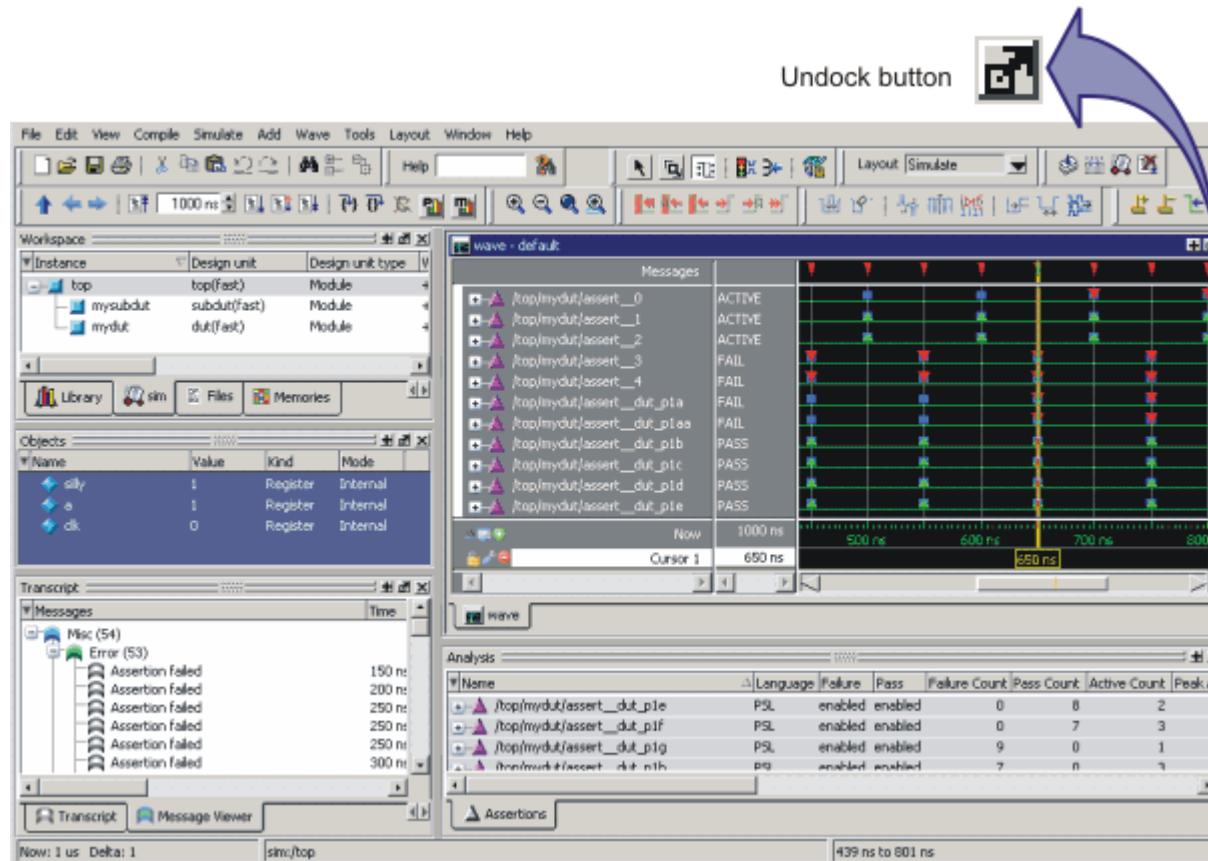

Here is an example of a Wave window that is undocked from the MDI frame. All menus and icons associated with Wave window functions now appear in the menu and toolbar areas of the Wave window.

Figure 2-70. Wave Window Dock Button

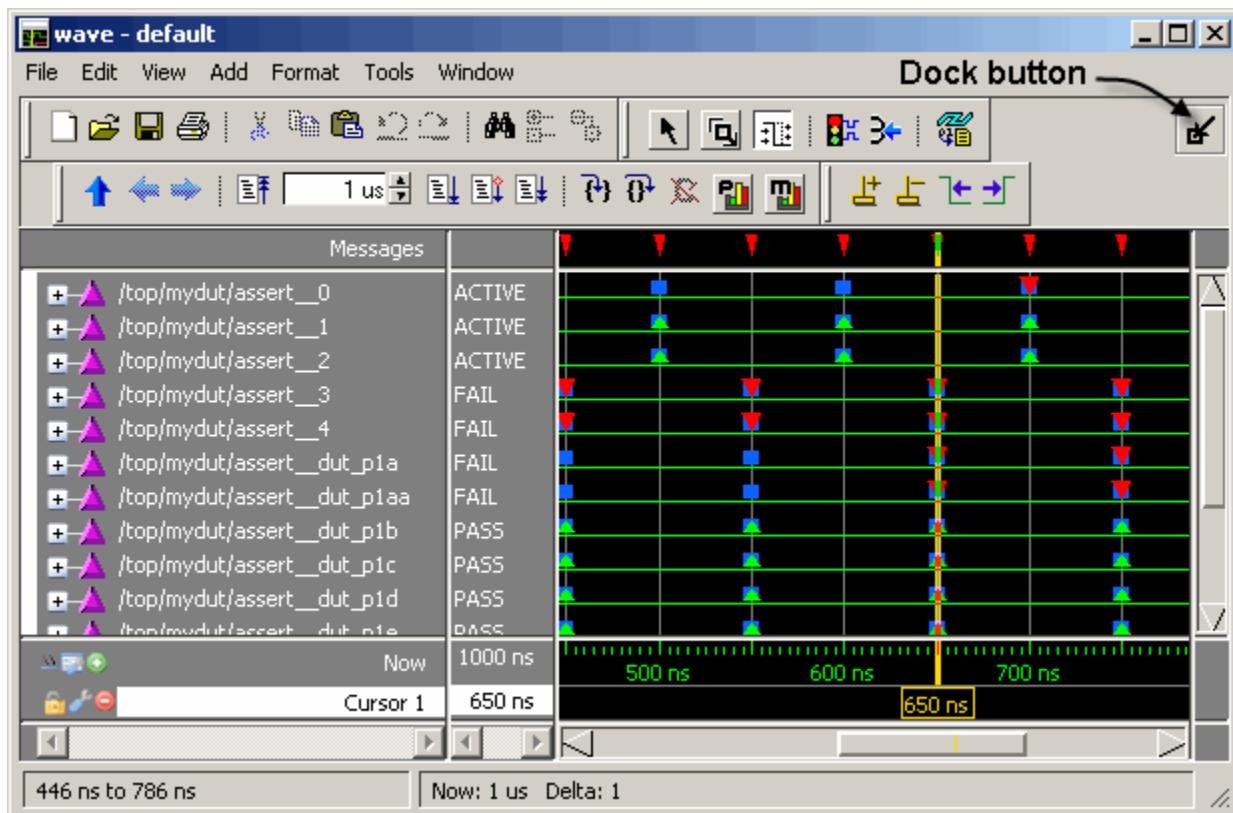

If the Wave window is docked into the Main window MDI frame, all menus and icons that were in the standalone version of the Wave window move into the Main window menu bar and toolbar.

Wave Window Panes


The Wave window is divided into a number of window panes. All window panes in the Wave window can be resized by clicking and dragging the bar between any two panes.

Pathname Pane

The pathname pane displays signal pathnames. Signals can be displayed with full pathnames, as shown here, or with only the leaf element displayed. You can increase the size of the pane by clicking and dragging on the right border. The selected signal is highlighted.

The white bar along the left margin indicates the selected dataset (see [Splitting Wave Window Panes](#)).

Figure 2-71. Pathnames Pane

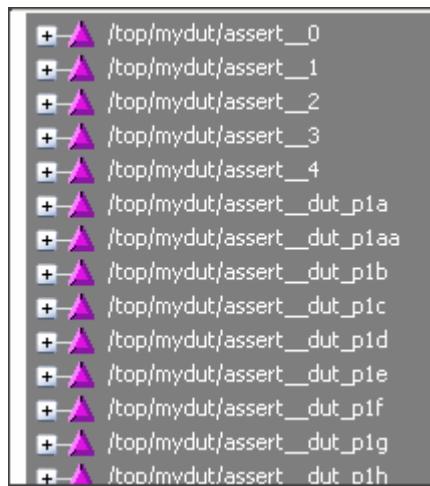

Values Pane

The values pane displays the values of the displayed signals.

The radix for each signal can be symbolic, binary, octal, decimal, unsigned, hexadecimal, ASCII, or default. The default radix can be set by selecting **Simulate > Runtime Options**.


Note



When the symbolic radix is chosen for SystemVerilog reg and integer types, the values are treated as binary. When the symbolic radix is chosen for SystemVerilog bit and int types, the values are considered to be decimal.

The data in this pane is similar to that shown in the [Objects Pane](#), except that the values change dynamically whenever a cursor in the waveform pane is moved.

Figure 2-72. Values Pane

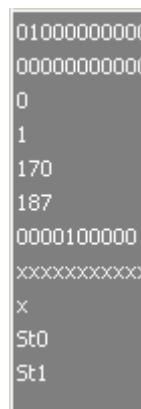


Waveform Pane

Figure 2-73 shows waveform pane, which displays waveforms that correspond to the displayed signal pathnames. It can also display as many as 20 user-defined cursors. Signal values can be displayed in analog step, analog interpolated, analog backstep, literal, logic, and event formats. You can set the radix of each signal individually by right-clicking the signal and choosing Radix > format (the default radix is Logic).

If you place your mouse pointer on a signal in the waveform pane, a popup menu displays with information about the signal. You can toggle this popup on and off in the **Wave Window Properties** dialog box.

Figure 2-73. Waveform Pane

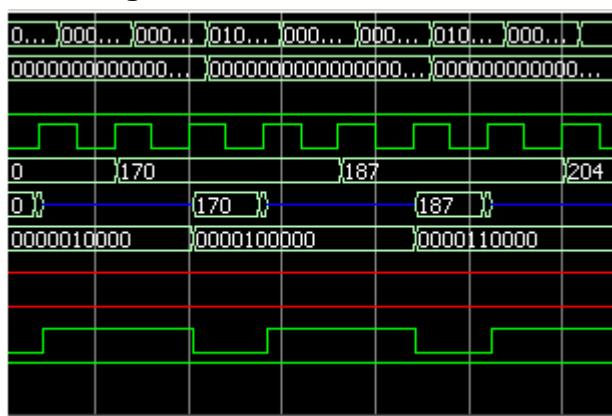

Analog Sidebar Toolbox

When the waveform pane contains an analog waveform, you can hover your mouse pointer over the left edge of the waveform to display the Analog Sidebar toolbox (see Figure 2-74). This toolbox shows a group of icons that gives you quick access to actions you can perform on the waveform display, as described in Table 2-30.

Figure 2-74. Analog Sidebar Toolbox




Table 2-30. Analog Sidebar Icons

Icon	Action	Description
	Open Wave Properties	Opens the Format tab of the Wave Properties dialog box, with the Analog format already selected. This dialog box duplicates the Wave Analog dialog box displayed by choosing Format > Format... > Analog (custom) from the main menu.
	Toggle Row Height	Changes the height of the row that contains the analog waveform. Toggles the height between the Min and Max values (in pixels) you specified in the Open Wave Properties dialog box under Analog Display.
	Rescale to fit Y data	Changes the waveform height so that it fits top-to-bottom within the current height of the row.
	Show menu of other actions	Displays <ul style="list-style-type: none"> • View Min Y • View Max Y • Overlay Above • Overlay Below • Colorize All • Colorize Selected
	Drag to resize waveform height	Creates an up/down dragging arrow that you can use to temporarily change the height of the row containing the analog waveform.

Cursor Pane

Figure 2-75 shows the Cursor Pane, which displays cursor names, cursor values and the cursor locations on the timeline. You can link cursors so that they move across the timeline together. See [Linking Cursors](#) in the [Waveform Analysis](#) chapter.

Figure 2-75. Cursor Pane

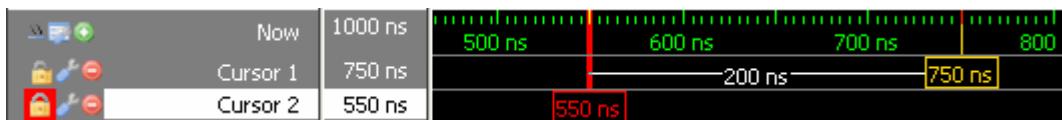


On the left side of this pane is a group of icons called the Cursor and Timeline Toolbox (see [Figure 2-76](#)). This toolbox gives you quick access to cursor and timeline features and configurations. See [Measuring Time with Cursors in the Wave Window](#) for more information.

Cursors and Timeline Toolbox

The Cursor and Timeline Toolbox displays several icons that give you quick access to cursor and timeline features.

Figure 2-76. Toolbox for Cursors and Timeline

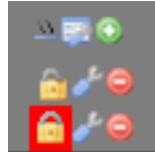

The action for each toolbox icon is shown in [Table 2-31](#).


Table 2-31. Icons and Actions

Icon	Action
	Toggle short names <-> full names
	Edit grid and timeline properties
	Insert cursor
	Toggle lock on cursor to prevent it from moving
	Edit this cursor
	Remove this cursor

The **Toggle short names <-> full names** icon allows you to switch from displaying full pathnames (the default) in the Pathnames Pane to displaying short pathnames.

The **Edit grid and timeline properties** icon opens the Wave Window Properties dialog to the Grid & Timeline tab ([Figure 2-77](#)).

Figure 2-77. Editing Grid and Timeline Properties

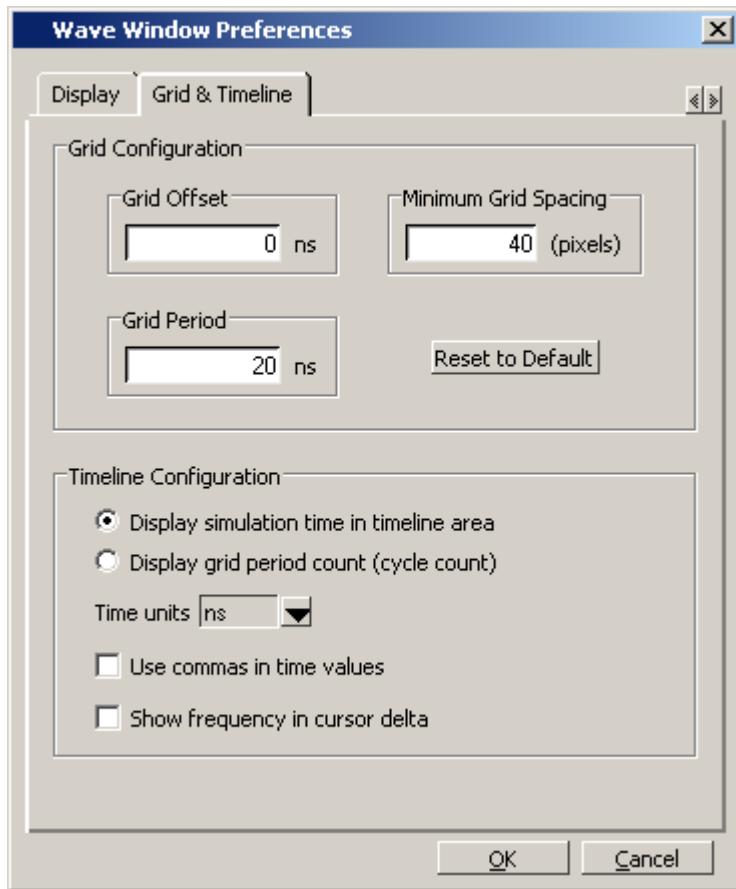


The Grid Configuration selections allow you to set grid offset, minimum grid spacing, and grid period; or you can reset the grid configuration to default values.

The Timeline Configuration selections give you a user-definable time scale. You can display simulation time on the timeline or a clock cycle count. The time value is scaled appropriately for the selected unit.

By default, the timeline will display time delta between any two adjacent cursors. By clicking the **Show frequency in cursor delta** box, you can display the cursor delta as a frequency instead.

You can add cursors when the Wave window is active by clicking the Insert Cursor icon, or by choosing **Add > Wave > Cursor** from the menu bar. Each added cursor is given a default cursor name (Cursor 2, Cursor 3, etc.) which you can change by right-clicking the cursor name, then typing in a new name, or by clicking the **Edit this cursor** icon. The Edit this cursor icon opens the Cursor Properties dialog box (Figure 2-78), where you assign a cursor name and time. You can also lock the cursor to the specified time.

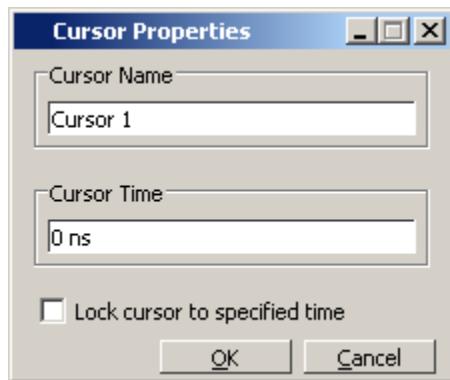Figure 2-78. Cursor Properties Dialog

Messages Bar

The messages bar, located at the top of the Wave window, contains indicators pointing to the times at which a message was output from the simulator.

Figure 2-79. Wave Window - Message Bar

The message indicators (the down-pointing arrows) are color-coded as follows:

- Red — indicates an error or an assertion failure
- Yellow — indicates a warning
- Green — indicates a note
- Grey — indicates any other type of message

You can use the Message bar in the following ways.

- Move the cursor to the next message — You can do this in two ways:
 - Click on the word “Messages” in the message bar to cycle the cursor to the next message after the current cursor location.
 - Click anywhere in the message bar, then use Tab or Shift+Tab to cycle the cursor between error messages either forward or backward, respectively.
- Display the **Message Viewer Tab** — Double-click anywhere amongst the message indicators.
- Display, in the Message Viewer tab, the message entry related to a specific indicator — Double-click on any message indicator.

This function only works if you are using the Message Viewer in flat mode. To display your messages in flat mode:

- a. Right-click in the Message viewer and select Display Options
- b. In the Message Viewer Display Options dialog box, deselect Display with Hierarchy.

Objects You Can View in the Wave Window

The following types of objects can be viewed in the Wave window

- VHDL objects (indicated by a dark blue diamond) — signals, aliases, process variables, and shared variables
- Verilog objects (indicated by a light blue diamond) — nets, registers, variables, and named events

The GUI displays inout variables of a clocking block separately, where the output of the inout variable is appended with “_o”, for example you would see following two objects:

```
clock1.c1           /input portion of the inout c1
clock1.c1_o         /output portion of the inout c1
```

This display technique also applies to the Objects window

- Verilog transactions (indicated by a blue four point star)
- Virtual objects (indicated by an orange diamond) — virtual signals, buses, and functions, see; [Virtual Objects](#) for more information

The data in the object values pane is very similar to the Objects window, except that the values change dynamically whenever a cursor in the waveform pane is moved.

At the bottom of the waveform pane you can see a time line, tick marks, and the time value of each cursor's position. As you click and drag to move a cursor, the time value at the cursor location is updated at the bottom of the cursor.

You can resize the window panes by clicking on the bar between them and dragging the bar to a new location.

Waveform and signal-name formatting are easily changed via the Format menu. You can reuse any formatting changes you make by saving a Wave window format file (see [Saving the Window Format](#)).

Wave Window Toolbar

The Wave window (in the undocked Wave window) gives you quick access to the following toolbars:

- [Standard Toolbar](#)
- [Compile Toolbar](#)
- [Simulate Toolbar](#)
- [Wave Cursor Toolbar](#)
- [Wave Edit Toolbar](#)
- [Wave Toolbar](#)
- [Wave Compare Toolbar](#)
- [Zoom Toolbar](#)
- [Wave Expand Time Toolbar](#)

Chapter 3

Protecting Your Source Code

As today's IC designs increase in complexity, silicon manufacturers are leveraging third-party intellectual property (IP) to maintain or shorten design cycle times. This third-party IP is often sourced from several IP vendors, each of whom may require different levels of protection in EDA tool flows. The number of protection/encryption schemes developed by IP vendors has complicated the use of protected IP in design flows made up of tools from several EDA providers.

ModelSim's encryption solution allows IP vendors to deliver encrypted IP code that can be used in a wide range of EDA tools and design flows. This enables usage scenarios such as making module ports, parameters, and specify blocks publicly visible while keeping the implementation private.

ModelSim supports encryption of Verilog and SystemVerilog IP code in protected envelopes as defined by the IEEE Standard 1364-2005 section 28 (titled “Protected envelopes”) and Annex H, section H.3 (titled “Digital envelopes”). The protected envelopes usage model, as presented in Annex H section H.3, is the recommended methodology for users of Verilog's **`pragma protect** compiler directives. We recommend that you obtain these specifications for reference.

ModelSim also supports encryption of VHDL files using the [vcom -nodebug](#) command.

Usage Models for Protecting Source Code

ModelSim's encryption capabilities support the following usage models for IP vendors and their customers.

- IP vendors may use the [vencrypt](#) utility to deliver Verilog and SystemVerilog code containing undefined macros and `directives. The IP user can then define the macros and `directives and use the code in a wide range of EDA tools and design flows. See [Delivering IP Code with Undefined Macros](#).
- IP vendors may use **protect** pragmas to protect Verilog and SystemVerilog code containing vendor-defined macros and `directives. The IP code can be delivered to IP customers for use in a wide range of EDA tools and design flows. See [Delivering IP Code with Vendor-Defined Macros](#).
- IP vendors and IP users may use the ModelSim-specific **`protect` / `endprotect** compiler directives to define regions of Verilog and SystemVerilog code to be protected. The code is then compiled with the [vlog +protect](#) command and simulated with ModelSim. The [vencrypt](#) utility may be used if the code contains undefined macros or `directives,

but the code must then be compiled and simulated with ModelSim. See [Delivering Protected IP with `protect Compiler Directives](#).

- Verilog and VHDL IP vendors or IP users may use the vlog -nodebug or vcom -nodebug command, respectively, to protect entire files. See [Protecting Source Code Using -nodebug](#).

Note




While ModelSim supports both **`protect** and **`pragma protect** encryption directives, these two approaches to encryption are incompatible. Code encrypted by one type of directive cannot be decoded by another.

Delivering IP Code with Undefined Macros

The **vencrypt** utility enables IP vendors to deliver Verilog and SystemVerilog IP code that contains undefined macros and **`directives**. The resulting encrypted IP code can then be used in a wide range of EDA tools and design flows. The recommended **vencrypt** usage flow is shown in [Figure 3-1](#).

Figure 3-1. vencrypt Usage Flow

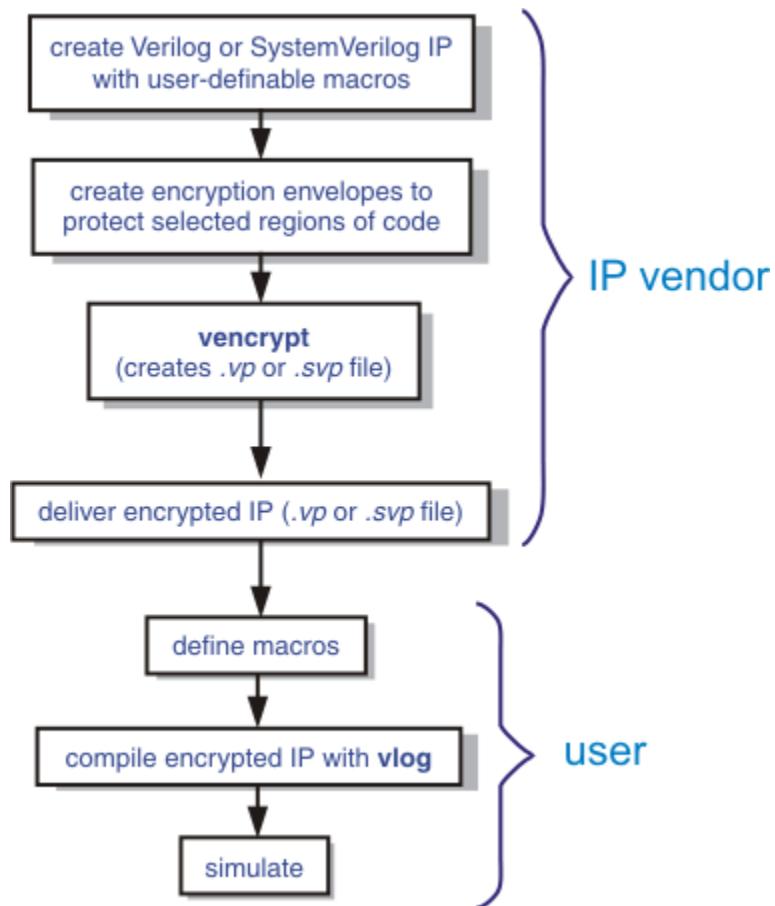

1. The IP vendor creates Verilog or SystemVerilog IP that contains undefined macros and `directives.
2. The IP vendor creates encryption envelopes with `pragma protect expressions to protect selected regions of code or entire files (see [Protect Pragma Expressions](#)).
3. The IP vendor uses ModelSim's [vencrypt](#) utility to encrypt Verilog and SystemVerilog IP code contained within encryption envelopes. The resulting code is not pre-processed before encryption so macros and other `directives are unchanged.

The [vencrypt](#) utility produces a file with a *.vp* or a *.svp* extension to distinguish it from other non-encrypted Verilog and SystemVerilog files, respectively. The file extension may be changed for use with simulators other than ModelSim. The original file extension is preserved if the -directive=<path> argument is used with [vencrypt](#), or if a `directive is used in the file to be encrypted.

With the -h <filename> argument for [vencrypt](#), the IP vendor may specify a header file that can be used to encrypt a large number of files that do not contain the `pragma protect or `protect information about how to encrypt the file. Instead, encryption information is provided in the <filename> specified by -h <filename>. This argument essentially concatenates the header file onto the beginning of each file and saves the user from having to edit hundreds of files in order to add in the same `pragma protect to every file. For example,

```
vencrypt -h encrypt_head top.v cache.v gates.v memory.v
```

concatenates the information in the *encrypt_head* file into each verilog file listed. The *encrypt_head* file may look like the following:

```
`pragma protect data_method = "aes128-cbc"  
`pragma protect author = "IP Provider"  
`pragma protect key_keyowner = "Mentor Graphics Corporation"  
`pragma protect key_method = "rsa"  
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"  
`pragma protect encoding = (enctype = "base64")  
`pragma protect begin
```

Notice, there is no `pragma protect end expression in the header file, just the header block that starts the encryption. The `pragma protect end expression is implied by the end of the file.

4. The IP vendor delivers encrypted IP with undefined macros and `directives.
5. The IP user defines macros and `directives.
6. The IP user compiles the design with [vlog](#).
7. Simulation can be performed with ModelSim or other simulation tools.

Using Public Encryption Keys

In ModelSim, the vencrypt utility will recognize the Mentor Graphics public key in the following pragmas:

```
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
```

But if users want to encrypt for third party EDA tools, other public keys need to be specified with the key_public_key directive as follows:

```
`pragma protect key_keyowner="Acme"
`pragma protect key_keyname="AcmeKeyName"
`pragma protect key_public_key
MIGfMA0GCSqGSIB3DQEBAQUAA4GNADCBiQKBgQC38SzR8u6xw1MKRDQPrZ0yQMAX
ID+/1BTN7Dl2bl25++tbKUcQkVMo6ZkCnt1WZ/wT22X7I5aTkagn6vpAXR8XQBu3
san+chVulnr2p1Qxe1GVm5tt4jCgCfr0BWNfHXWLwE0yBXR9+zvaatCWb0WpS1UN
5eqofIisn8Hj2ToOdQIDAQAB
```

This defines a new key named "AcmeKeyName" with a key owner of "Acme". The data block following key_public_key directive is an example of a base64 encoded version of a public key that should be provided by a tool vendor.

Using the Mentor Graphics Public Encryption Key

The Mentor Graphics base64 encoded RSA public key is:

```
MIGfMA0GCSqGSIB3DQEBAQUAA4GNADCBiQKBgQC38SzR8u6xw1MKRDQPrZ0yQ
MAXID+/1BTN7Dl2bl25++tbKUcQkVMo6ZkCnt1WZ/wT22X7I5aTkagn6vpAXR8XQBu3sa
n+chVulnr2p1Qxe1GVm5tt4jCgCfr0BWNfHXWLwE0yBXR9+zvaatCWb0WpS1UN5eqoflis
n8Hj2ToOdQIDAQAB
```

The following **`pragma protect** statement identifies this key:

```
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
```

Example 3-1 illustrates the encryption envelope methodology for using this key. With this methodology you can collect the public keys from the various companies whose tools process your IP, then create a template that can be included into the files you want encrypted. During the encryption phase a new key is created for the encryption algorithm each time the source is compiled and also for each separate segment of encrypted code. These keys are never seen by a human. They are encrypted using the supplied RSA public keys.

Example 3-1. Using the Mentor Graphics Public Encryption Key

```
//
// Copyright 1991-2007 Mentor Graphics Corporation // // All Rights
Reserved.
```

```

// THIS WORK CONTAINS TRADE SECRET AND PROPRIETARY INFORMATION WHICH IS
// THE PROPERTY OF // MENTOR GRAPHICS CORPORATION OR ITS LICENSORS AND IS
// SUBJECT TO LICENSE TERMS.
//

`timescale 1ns / 1ps
`celldefine

module dff (q, d, clear, preset, clock); output q; input d, clear, preset,
clock; reg q;

`pragma protect data_method = "aes128-cbc"
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
MIGfMA0GCSqGSIB3DQEBAQUAA4GNADCBiQKBgQC38SzR8u6xw1MKRDQPrZ0yQMAXID+/1BTN7
D12b125++tbKUcQkVMo6ZkCnt1WZ/wT22X7I5aTkagn6vpAXR8XQBu3san+chVulnr2p1Qxe1
GVm5tt4jCgCfr0BWNfHXWLwE0yBXR9+zvaatCWB0WpS1UN5eqofIisn8Hj2ToOdQIDAQAB

`pragma protect key_keyowner = "XYZ inc"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "XYZ-keyPublicKey"
`pragma protect key_public_key
MIGfMA0GCSqGSIB3DQEBAQUAA4GNADCBiQKBgQC38SzR8u6xw1MKRDQPrZ0yQMAXID+/1BTN7
D12b125++tbKUcQkVMo6ZkCnt1WZ/wT22X7I5aTkagn6vpAXR8XQBu3san+chVulnr2p1Qxe1
GVm5tt4jCgCfr0BWNfHXWLwE0yBXR9+zvaatCWB0WpS1UN5eqofIisn8Hj2ToOdQIDAQAB

`pragma protect begin
always @(clear or preset)
  if (!clear)
    assign q = 0;
  else if (!preset)
    assign q = 1;
  else
    deassign q;
`pragma protect end
always @(posedge clock)
  q = d;

endmodule


`endcelldefine

```

Delivering IP Code with Vendor-Defined Macros

IP vendors may use **protect** pragmas to protect Verilog and SystemVerilog code containing vendor-defined macros and `directives. The resulting encrypted IP code can be delivered to IP customers for use in a wide range of EDA tools and design flows. The recommended usage flow is shown in [Figure 3-2](#).

Figure 3-2. Delivering IP Code with Vendor-Defined Macros

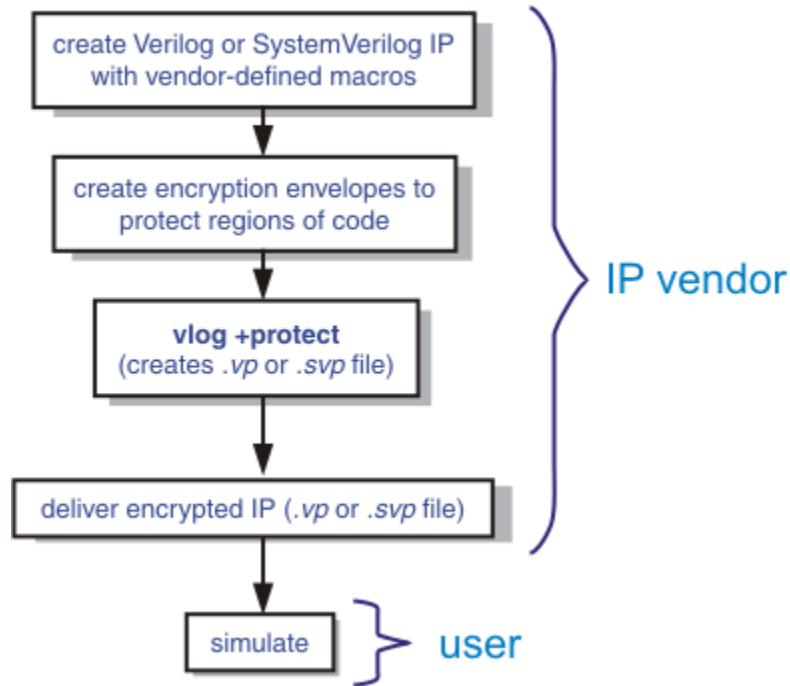

1. The IP vendor creates Verilog or SystemVerilog IP that contains vendor-defined macros and `directives.
2. The IP vendor creates encryption envelopes with **`pragma protect** expressions to protect regions of code or entire files. See [Protect Pragma Expressions](#).
3. The IP vendor uses the **vlog +protect** command to encrypt IP code contained within encryption envelopes. The **`pragma protect** expressions are ignored unless the **+protect** argument is used with **vlog**.
The **vlog +protect** command produces a **.vp** or a **.svp** extension to distinguish it from other non-encrypted Verilog and SystemVerilog files, respectively. The file extension may be changed for use with simulators other than ModelSim. The original file extension is preserved if a `directive is used in the file to be encrypted. For more information, see [Compiling a Design with vlog +protect](#).
4. The IP vendor delivers the encrypted IP.
5. The IP user simulates the code like any other Verilog file.

When encrypting Verilog source text, any macros without parameters defined on the command line are substituted (not expanded) into the encrypted Verilog file. This makes certain Verilog macros unavailable in the encrypted source text.

ModelSim takes every simple macro that is defined with the **vlog** command and substitutes it into the encrypted text. This prevents third party users of the encrypted blocks from having access to or modifying these macros.

 **Note**

Macros not specified with `vlog` via the `+define+` option are unmodified in the encrypted block.

For example, the code below is an example of an file that might be delivered by an IP provider. The filename for this module is `example00.sv`.

```
`pragma protect data_method = "aes128-cbc"
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
`pragma protect author = "Mentor", author_info = "Mentor_author"
`pragma protect begin
`timescale 1 ps / 1 ps

module example00 ();
    `ifdef IPPROTECT
        reg `IPPROTECT ;
        reg otherReg ;
        initial begin
            `IPPROTECT = 1;
            otherReg = 0;

            $display("ifdef defined as true");

            `define FOO "BAR"
            $display("FOO is defined as: ", `FOO);
            $display("reg IPPROTECT has the value: ", `IPPROTECT );
        end
    `else
        initial begin
            $display("ifdef defined as false");
        end
    `endif
endmodule

`pragma protect end
```

We encrypt the `example00.sv` module with the `vlog` command as follows:

```
vlog +define+IPPROTECT=ip_value +protect=encrypted00.sv example00.sv
```

This creates an encrypted file called `encrypted00.sv`. We can then compile this file with a macro override for the macro “FOO” as follows:


```
vlog +define+FOO='Boulder' encrypted00.sv
```

The macro FOO can be overridden by a customer while the macro IPPROTECT retains the value specified at the time of encryption, and the macro IPPROTECT no longer exists in the encrypted file.

Delivering Protected IP with `protect Compiler Directives

The **`protect** and **`endprotect** compiler directives are specific to ModelSim and are not compatible with other simulators. Though other simulators have a **`protect** directive, the algorithm ModelSim uses to encrypt source files is different. Hence, even though an uncompiled source file with **`protect** is compatible with another simulator, once the source is compiled in ModelSim, the resulting **.vp** or **.svp** source file is not compatible.

Figure 3-3. Delivering IP with `protect Compiler Directives

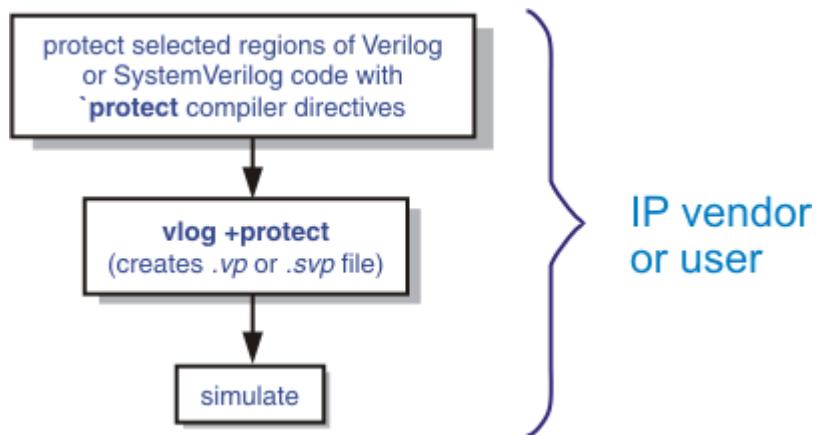

1. The IP vendor protects selected regions of Verilog or SystemVerilog IP with the **`protect` / `endprotect`** directive pair. The code in **`protect` / `endprotect`** encryption envelopes has all debug information stripped out. This behaves exactly as if using

```
vlog -nodebug=ports+pli
```

except that it applies to selected regions of code rather than the whole file.

2. The IP vendor uses the **vlog +protect** command to encrypt IP code contained within encryption envelopes. The **`protect` / `endprotect`** directives are ignored by default unless the **+protect** argument is used with **vlog**.

Once compiled, the original source file is copied to a new file in the current work directory. The **vlog +protect** command produces a **.vp** or a **.svp** extension to distinguish it from other non-encrypted Verilog and SystemVerilog files, respectively. For example, "*top.v*" becomes "*top.vp*" and "*cache.sv*" becomes "*cache.svp*." This new file can be delivered and used as a replacement for the original source file.

Note

The **vencrypt** utility may be used if the code also contains undefined macros or `directives, but the code must then be compiled and simulated with ModelSim.

You can use **vlog +protect=<filename>** to create an encrypted output file, with the designated filename, in the current directory (not in the *work* directory, as in the default case where [=<filename>] is not specified). For example:

```
vlog test.v +protect=test.vp
```

If the filename is specified in this manner, all source files on the command line will be concatenated together into a single output file. Any *'include* files will also be inserted into the output file.

'protect and *'endprotect* directives cannot be nested.

If errors are detected in a protected region, the error message always reports the first line of the protected block.

Using the *'include* Compiler Directive

If any *'include* directives occur within a protected region and you use **vlog +protect** to compile, the compiler generates a copy of the include file with a ".vp" or a ".svp" extension and encrypts the entire contents of the include file. For example, if we have a header file, *header.v*, with the following source code:

```
initial begin
    a <= b;
    b <= c;
end
```

and the file we want to encrypt, *top.v*, contains the following source code:

```
module top;
    `protect
    `include "header.v"
    `endprotect
endmodule
```

then, when we use the **vlog +protect** command to compile, the source code of the header file will be encrypted. If we could decrypt the resulting *work/top.vp* file it would look like:

```
module top;
    `protect
    initial begin
        a <= b;
        b <= c;
    end
    `endprotect
endmodule
```

In addition, **vlog +protect** creates an encrypted version of *header.v* in *work/header.vp*.

In the **vencrypt** flow (see [Delivering IP Code with Undefined Macros](#)), any *'include* statements will be treated as text just like any other source code and will be encrypted with the other source

code. So, if we used the vencrypt utility on the *top.v* file above, the resulting *work/top.vp* file would look like the following (if we could decrypt it):

```
module top;
  `protect
  `include "header.v"
  `endprotect
endmodule
```

The vencrypt utility will not create an encrypted version of header.h.

When you use **vlog +protect** to generate encrypted files, the original source files must all be complete Verilog or SystemVerilog modules or packages. Compiler errors will result if you attempt to perform compilation of a set of parameter declarations within a module.

You can avoid such errors by creating a dummy module that includes the parameter declarations. For example, if you have a file that contains your parameter declarations and a file that uses those parameters, you can do the following:

```
module dummy;
  `protect
  `include "params.v" // contains various parameters
  `include "tasks.v" // uses parameters defined in params.v
  `endprotect
endmodule
```

Then, compile the dummy module with the **+protect** switch to generate an encrypted output file with no compile errors.

vlog +protect dummy.v

After compilation, the work library will contain encrypted versions of *params.v* and *tasks.v*, called *params.vp* and *tasks.vp*. You may then copy these encrypted files out of the work directory to more convenient locations. These encrypted files can be included within your design files; for example:

```
module main
  'include "params.vp"
  'include "tasks.vp"
  ...

```

Protecting Source Code Using -nodebug

The **-nodebug** argument for both **vcom** and **vlog** hides internal model data. This allows a model supplier to provide pre-compiled libraries without providing source code and without revealing internal model variables and structure.

Note

 -nodebug encrypts entire files. The Verilog `protect compiler directive allows you to encrypt regions within a file. Refer to [Compiler Directives](#) for details.

When you compile with **-nodebug**, all source text, identifiers, and line number information are stripped from the resulting compiled object, so ModelSim cannot locate or display any information of the model except for the external pins. Specifically, this means that:

- a Source window will not display the design units' source code
- a structure pane will not display the internal structure
- the Objects pane will not display internal signals
- the Active Processes pane will not display internal processes
- the Locals pane will not display internal variables
- none of the hidden objects may be accessed through the Dataflow window or with ModelSim commands

You can access the design units comprising your model via the library, and you may invoke [vsim](#) directly on any of these design units and see the ports. To restrict even this access in the lower levels of your design, you can use the following -nodebug options when you compile:

Table 3-1. Compile Options for the -nodebug Compiling

Command and Switch	Result
vcom -nodebug=ports	makes the ports of a VHDL design unit invisible
vlog -nodebug=ports	makes the ports of a Verilog design unit invisible
vlog -nodebug=pli	prevents the use of PLI functions to interrogate the module for information
vlog -nodebug=ports+pli	combines the functions of -nodebug=ports and -nodebug=pli

Don't use the =ports option on a design without hierarchy, or on the top level of a hierarchical design. If you do, no ports will be visible for simulation. Rather, compile all lower portions of the design with -nodebug=ports first, then compile the top level with -nodebug alone.

Design units or modules compiled with -nodebug can only instantiate design units or modules that are also compiled -nodebug.

Creating an Encryption Envelope

Encryption envelopes specify a region of Verilog source code to be encrypted. These regions are delimited by protection pragmas that specify the encryption algorithm, key, and envelope attributes. The encryption envelope may be configured two ways:

- The encryption envelope contains the textual design data to be encrypted ([Example 3-2](#)).
- The encryption envelope contains `include compiler directives that point to files containing the textual design data to be encrypted ([Example 3-3](#)).

Note

 Source code that incorporates `include compiler directives cannot be used in `vencrypt` usage flow.

Example 3-2. Encryption Envelope Contains IP Code to be Protected

```
module test_dff4(output [3:0] q, output err);
    parameter WIDTH = 4;
    parameter DEBUG = 0;
    reg [3:0] d;
    reg     clk;

    dff4 d4(q, clk, d);

    assign   err = 0;

    initial
        begin
            $dump_all_vpi;
            $dump_tree_vpi(test_dff4);
            $dump_tree_vpi(test_dff4.d4);
            $dump_tree_vpi("test_dff4");
            $dump_tree_vpi("test_dff4.d4");
            $dump_tree_vpi("test_dff4.d", "test_dff4.clk", "test_dff4.q");
            $dump_tree_vpi("test_dff4.d4.d0", "test_dff4.d4.d3");
            $dump_tree_vpi("test_dff4.d4.q", "test_dff4.d4.clk");
        end
    endmodule

module dff4(output [3:0] q, input clk, input [3:0] d);
`pragma protect data_method = "aes128-cbc"
`pragma protect author = "IP Provider"
`pragma protect author_info = "Widget 5 version 3.2"
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
`pragma protect begin
    dff_gate d0(q[0], clk, d[0]);
    dff_gate d1(q[1], clk, d[1]);
    dff_gate d2(q[2], clk, d[2]);
    dff_gate d3(q[3], clk, d[3]);
endmodule // dff4
```

```

module dff_gate(output q, input clk, input d);
    wire preset = 1;
    wire clear = 1;

    nand #5
        g1(l1,preset,l4,l2),
        g2(l2,l1,clear,clk),
        g3(l3,l2,clk,l4),
        g4(l4,l3,clear,d),
        g5(q,preset,l2,qbar),
        g6(qbar,q,clear,l3);
endmodule
`pragma protect end

```

Example 3-3. Encryption Envelope Contains `include Compiler Directives

```

`timescale 1ns / 1ps
`cell define

module dff (q, d, clear, preset, clock);
output q;
input d, clear, preset, clock;
reg q;

`pragma protect data_method = "aes128-cbc"
`pragma protect author = "IP Provider", author_info = "Widget 5 v3.2"
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
`pragma protect begin

`include diff.v
`include prim.v
`include top.v

`pragma protect end

always @(posedge clock)
    q = d;

endmodule
`endcelldefine

```

In both examples, the code to be encrypted follows the **`pragma protect begin** expression and ends with the **`pragma protect end** expression. In [Example 3-3](#), the entire contents of diff.v, prim.v, and top.v will be encrypted.

Protect Pragma Expressions

The protection envelope contains a number of **`pragma protect** expressions. The following **`pragma protect** expressions are expected when creating an encryption envelope:

- **data_method** — defines the encryption algorithm that will be used to encrypt the designated source text. ModelSim supports the following encryption algorithms: des-cbc, 3des-cbc, aes128-cbc, aes256-cbc, blowfish-cbc, cast128-cbc, and rsa.
- **key_keyowner** — designates the owner of the encryption key.
- **key_keyname** — specifies the keyowner's key name.
- **key_method** — specifies an encryption algorithm that will be used to encrypt the key.

Note



The combination of key_keyowner, key_keyname, and key_method expressions uniquely identify a key.

- **begin** — designates the beginning of the source code to be encrypted.
- **end** — designates the end of the source code to be encrypted

Note



Encryption envelopes cannot be nested. A `pragma protect begin/end pair cannot bracket another `pragma protect begin/end pair.

Optional `pragma protect expressions that may be included are as follows:

- **author** — designates the IP provider.
- **author_info** — designates optional author information.
- **encoding** — specifies an encoding method. The default encoding method, if none is specified, is “base 64.”

If a number of pragma expressions occur in a single protection pragma, the expressions are evaluated in sequence from left to right. In addition, the interpretation of protected envelopes is not dependent on this sequence occurring in a single protection pragma or a sequence of protection pragmas. However, the most recent value assigned to a protection pragma keyword will be the one used.

Unsupported Protection Pragma Expressions

Optional `pragma protect expressions that are not currently supported include:

- any digest_* expression
- decrypt_license
- runtime_license
- viewpoint

Compiling a Design with vlog +protect

To encrypt IP code with ModelSim, the **+protect** argument must be used with the [vlog](#) command. For example, if the source code file containing encryption envelopes is named *encrypt.v*, it would be compiled as follows:

```
vlog +protect encrypt.v
```

When [vlog +protect](#) is used, encryption envelope pragma expressions are transformed into decryption envelope pragma expressions and decryption content pragma expressions. Source text within encryption envelopes is encrypted using the specified key and is recorded in the decryption envelope within a `data_block`. And the file is renamed with a `.vp` extension – it becomes *encrypt.vp*.

[Example 3-4](#) shows the resulting source code when the IP code used in [Example 3-2](#) is compiled with [vlog +protect](#).

Example 3-4. Results After Compiling with vlog +protect

```
module test_dff4(output [3:0] q, output err);
    parameter WIDTH = 4;
    parameter DEBUG = 0;
    reg [3:0] d;
    reg     clk;

    dff4 d4(q, clk, d);

    assign   err = 0;

    initial
        begin
            $dump_all_vpi;
            $dump_tree_vpi(test_dff4);
            $dump_tree_vpi(test_dff4.d4);
            $dump_tree_vpi("test_dff4");
            $dump_tree_vpi("test_dff4.d4");
            $dump_tree_vpi("test_dff4.d", "test_dff4.clk", "test_dff4.q");
            $dump_tree_vpi("test_dff4.d4.d0", "test_dff4.d4.d3");
            $dump_tree_vpi("test_dff4.d4.q", "test_dff4.d4.clk");
        end
    endmodule

module dff4(output [3:0] q, input clk, input [3:0] d);
`pragma protect data_method = "aes128-cbc"
`pragma protect author = "IP Provider"
`pragma protect author_info = "Widget 5 version 3.2"
`pragma protect key_keyowner = "Mentor Graphics Corporation"
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
`pragma protect begin_protected
`pragma protect encrypt_agent = "Mentor Graphics Corporation"
`pragma protect encrypt_agent_info = "DEV"
`pragma protect data_method = "aes128-cbc"
`pragma protect key_keyowner = "Mentor Graphics Corporation"
```

Protecting Your Source Code

Compiling a Design with vlog +protect

```
`pragma protect key_method = "rsa"
`pragma protect key_keyname = "MGC-VERIF-SIM-RSA-1"
`pragma protect key_block encoding = (enctype = "base64")
RKFpQLpt/2PEyyIkeR8c5fhZi/QTachzLFh2iCMuWJtVVd17ggjjfiCanXaBtpT3
xzgIx4frhkcZD2L6DphLZ0s6m9fIfi808Ccs2V5uO25U7Q2hpfcgLvsD80Xljo/g
yxRAi2FdMyfJE31Bcoje+RGY2yv9kJePt6w7Qjdxm3o=
`pragma protect data_block encoding = ( enctype = "base64", bytes = 389
)
xH0W19CUbo98hGy+6TWfMFwXc7T9T82m07WNv+CqsJtjm6PiI4Iif6N7oDBLJdqP
3QuIlZhwb1M8kZFAyDHSS66qKJe5yLjGvezfrj/GJp57vIKkAhaVAFl6LwPJJu
Ogr0hhj2Wrfdwx4yCeZ4c00MUj2knUvs60ymXeAEzpNWGhpOMf2BhcjUC55/M/C
nspNi0t2xSYtSMLIPpnOe8hIxT+EYB9G66Nvr33A3kfQEf4+0+B4ksRRkGVFlMDN
s9CQIpcezvQo369q7at6nKhqA+LuHhdCGsXGr1nsX0hMQ2Rg9LR1+HJSP5q/I3g7
JEn103Bk8C9FAw0Sjk573trT+MSwQZkx/+SCSIql80kYaWg/TDVPC7KLMkrRnaLx
C5R1KwTkkZbeqGW31FDyWb1uK9MiAx13f0tWgGpOMbNpdJM33URFMk6dDKWSePTn
ZvE4RbYJhdA7arTO16XCFpOgU4BiaD3ihg78uysv3/FB0sN81MugtMVY+AYAmdZQ
E9xjlwhTpHEMMycw6Tln8A==
`pragma protect end_protected
```

In this example, the **`pragma protect data_method** expression designates the encryption algorithm used to encrypt IP code. The key for this encryption algorithm is also encrypted. In this cases, the key is encrypted with the RSA public key. The key is recorded in the **key_block** of the protected envelope. The encrypted IP code is recorded in the **data_block** of the envelope. ModelSim allows more than one key_block to be included so that a single protected envelope can be decrypted by tools from different users.

Chapter 4

Projects

Projects simplify the process of compiling and simulating a design and are a great tool for getting started with ModelSim.

What are Projects?

Projects are collection entities for designs under specification or test. At a minimum, projects have a root directory, a work library, and "metadata" which are stored in a *.mpf* file located in a project's root directory. The metadata include compiler switch settings, compile order, and file mappings. Projects may also include:

- Source files or references to source files
- other files such as READMEs or other project documentation
- local libraries
- references to global libraries
- Simulation Configurations (see [Creating a Simulation Configuration](#))
- Folders (see [Organizing Projects with Folders](#))

Note



Project metadata are updated and stored *only* for actions taken within the project itself. For example, if you have a file in a project, and you compile that file from the command line rather than using the project menu commands, the project will not update to reflect any new compile settings.

What are the Benefits of Projects?

Projects offer benefits to both new and advanced users. Projects

- simplify interaction with ModelSim; you don't need to understand the intricacies of compiler switches and library mappings
- eliminate the need to remember a conceptual model of the design; the compile order is maintained for you in the project. Compile order is maintained for HDL-only designs.
- remove the necessity to re-establish compiler switches and settings at each session; these are stored in the project metadata as are mappings to source files

- allow users to share libraries without copying files to a local directory; you can establish references to source files that are stored remotely or locally
- allow you to change individual parameters across multiple files; in previous versions you could only set parameters one file at a time
- enable "what-if" analysis; you can copy a project, manipulate the settings, and rerun it to observe the new results
- reload the initial settings from the project .mpf file every time the project is opened

Project Conversion Between Versions

Projects are generally not backwards compatible for either number or letter releases. When you open a project created in an earlier version, you will see a message warning that the project will be converted to the newer version. You have the option of continuing with the conversion or cancelling the operation.

As stated in the warning message, a backup of the original project is created before the conversion occurs. The backup file is named *<project name>.mpf.bak* and is created in the same directory in which the original project is located.

Language templates have been added for SystemVerilog support and the SystemVerilog syntax radio button was removed from the Verilog tab in the project compiler settings dialog box. Old projects with Verilog files that had the SystemVerilog syntax selected will automatically convert to SystemVerilog type. Customers may need to remove the .hte directory from their home directory in order for the new templates to load properly.

Getting Started with Projects

This section describes the four basic steps to working with a project.

- [Step 1 — Creating a New Project](#)

This creates a .mpf file and a working library.

- [Step 2 — Adding Items to the Project](#)

Projects can reference or include source files, folders for organization, simulations, and any other files you want to associate with the project. You can copy files into the project directory or simply create mappings to files in other locations.

- [Step 3 — Compiling the Files](#)

This checks syntax and semantics and creates the pseudo machine code ModelSim uses for simulation.


- [Step 4 — Simulating a Design](#)

This specifies the design unit you want to simulate and opens a structure tab in the Workspace pane.

Step 1 — Creating a New Project


Select **File > New > Project** to create a new project. This opens the **Create Project** dialog where you can specify a project name, location, and default library name. You can generally leave the **Default Library Name** set to "work." The name you specify will be used to create a working library subdirectory within the Project Location. This dialog also allows you to reference library settings from a selected .ini file or copy them directly into the project.

Figure 4-1. Create Project Dialog

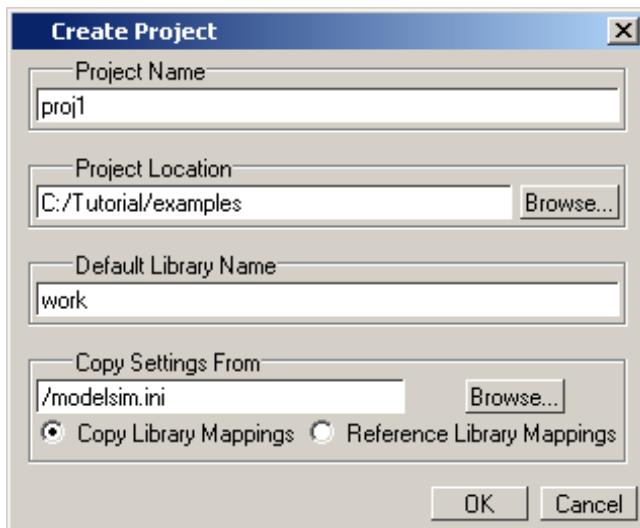


After selecting OK, you will see a blank Project tab in the Workspace pane of the Main window ([Figure 4-2](#))

Figure 4-2. Project Tab in Workspace Pane

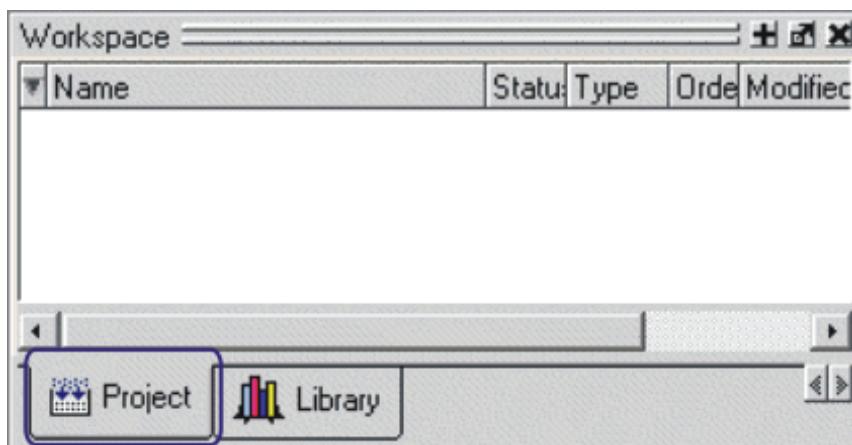

and the **Add Items to the Project** dialog ([Figure 4-3](#)).

Figure 4-3. Add items to the Project Dialog

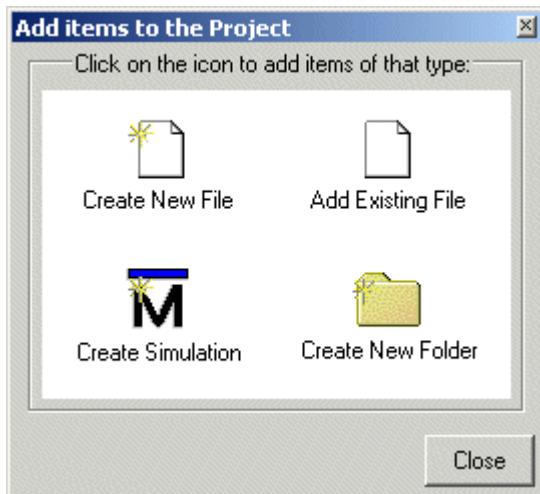

The name of the current project is shown at the bottom left corner of the Main window.

Step 2 — Adding Items to the Project


The **Add Items to the Project** dialog includes these options:

- **Create New File** — Create a new VHDL, Verilog, Tcl, or text file using the Source editor. See below for details.
- **Add Existing File** — Add an existing file. See below for details.
- **Create Simulation** — Create a Simulation Configuration that specifies source files and simulator options. See [Creating a Simulation Configuration](#) for details.
- **Create New Folder** — Create an organization folder. See [Organizing Projects with Folders](#) for details.

Create New File

The **File > New > Source** menu selections allow you to create a new VHDL, Verilog, Tcl, or text file using the Source editor.

You can also create a new project file by selecting **Project > Add to Project > New File** (the Project tab in the Workspace must be active) or right-clicking in the Project tab and selecting **Add to Project > New File**. This will open the Create Project File dialog ([Figure 4-4](#)).

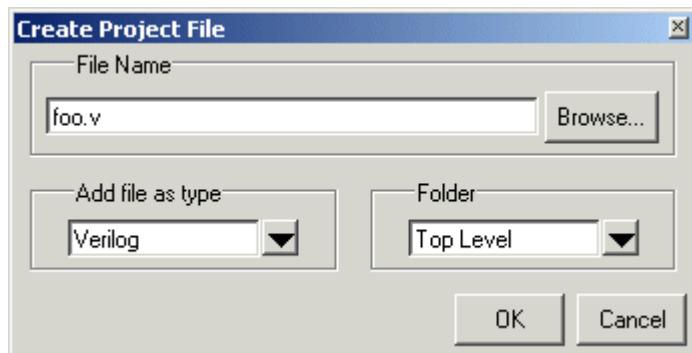
Figure 4-4. Create Project File Dialog

Specify a name, file type, and folder location for the new file.

When you select OK, the file is listed in the Project tab. Double-click the name of the new file and a Source editor window will open, allowing you to create source code.

Add Existing File

You can add an existing file to the project by selecting **Project > Add to Project > Existing File** or by right-clicking in the Project tab and selecting **Add to Project > Existing File**.

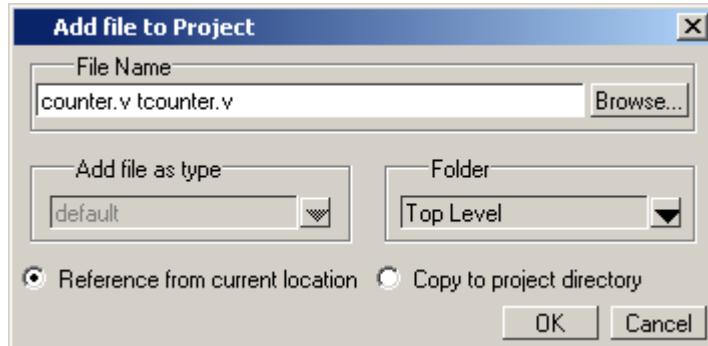
Figure 4-5. Add file to Project Dialog

When you select OK, the file(s) is added to the Project tab.

Step 3 — Compiling the Files


The question marks in the Status column in the Project tab denote either the files haven't been compiled into the project or the source has changed since the last compile. To compile the files, select **Compile > Compile All** or right click in the Project tab and select **Compile > Compile All** (Figure 4-6).

Figure 4-6. Right-click Compile Menu in Project Tab of Workspace

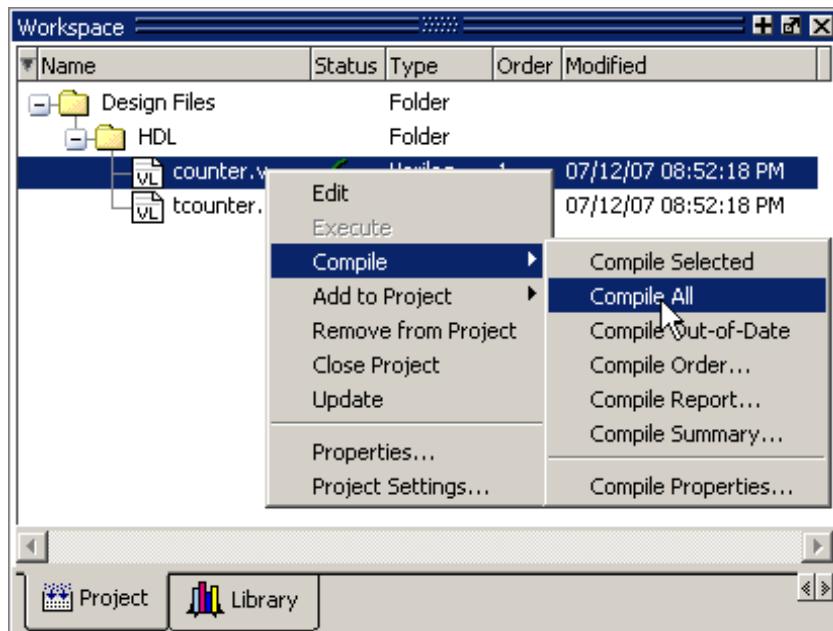

Once compilation is finished, click the Library tab, expand library *work* by clicking the "+", and you will see the compiled design units.

Figure 4-7. Click Plus Sign to Show Design Hierarchy

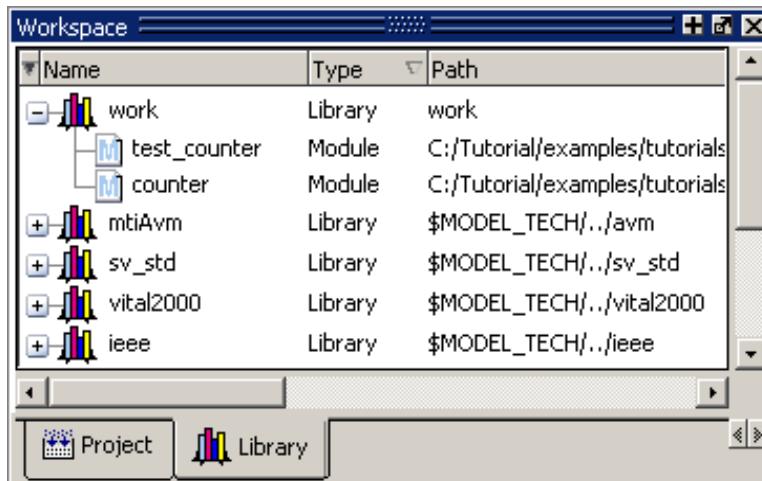


Changing Compile Order

The Compile Order dialog box is functional for HDL-only designs. When you compile all files in a project, ModelSim by default compiles the files in the order in which they were added to the project. You have two alternatives for changing the default compile order: 1) select and compile each file individually; 2) specify a custom compile order.

To specify a custom compile order, follow these steps:

1. Select **Compile > Compile Order** or select it from the context menu in the Project tab.

Figure 4-8. Setting Compile Order

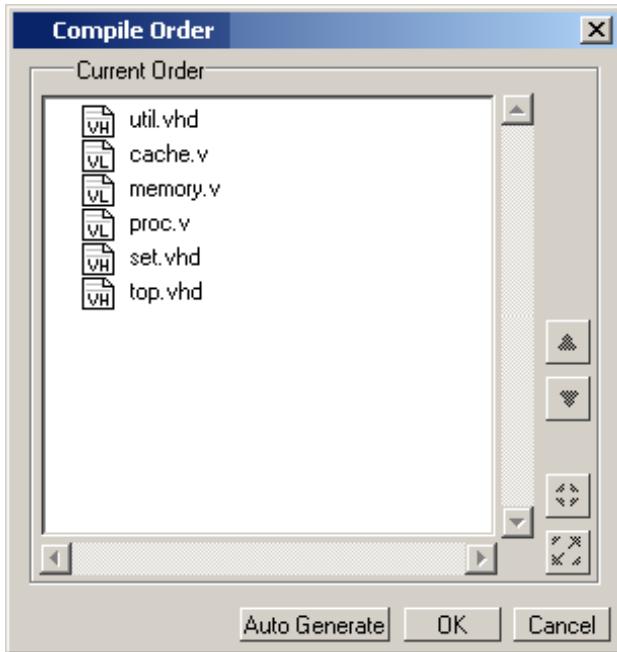

2. Drag the files into the correct order or use the up and down arrow buttons. Note that you can select multiple files and drag them simultaneously.

Auto-Generating Compile Order

Auto Generate is supported for HDL-only designs. The **Auto Generate** button in the Compile Order dialog (see above) "determines" the correct compile order by making multiple passes over the files. It starts compiling from the top; if a file fails to compile due to dependencies, it moves that file to the bottom and then recompiles it after compiling the rest of the files. It continues in this manner until all files compile successfully or until a file(s) can't be compiled for reasons other than dependency.

Files can be displayed in the Project tab in alphabetical or compile order (by clicking the column headings). Keep in mind that the order you see in the Project tab is not necessarily the order in which the files will be compiled.


Grouping Files

You can group two or more files in the Compile Order dialog so they are sent to the compiler at the same time. For example, you might have one file with a bunch of Verilog define statements and a second file that is a Verilog module. You would want to compile these two files together.

To group files, follow these steps:

1. Select the files you want to group.

Figure 4-9. Grouping Files

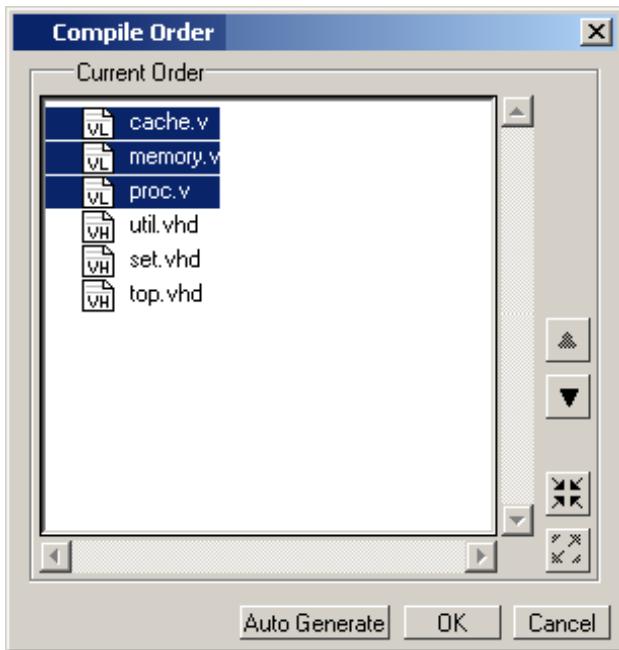


2. Click the Group button.

To ungroup files, select the group and click the Ungroup button.


Step 4 — Simulating a Design

To simulate a design, do one of the following:

- double-click the Name of an appropriate design object (such as a testbench module or entity) in the Library tab of the Workspace
- right-click the Name of an appropriate design object and select **Simulate** from the popup menu
- select **Simulate > Start Simulation** from the menus to open the Start Simulation dialog ([Figure 4-10](#)). Select a design unit in the Design tab. Set other options in the VHDL, Verilog, Libraries, SDF, and Others tabs. Then click OK to start the simulation.

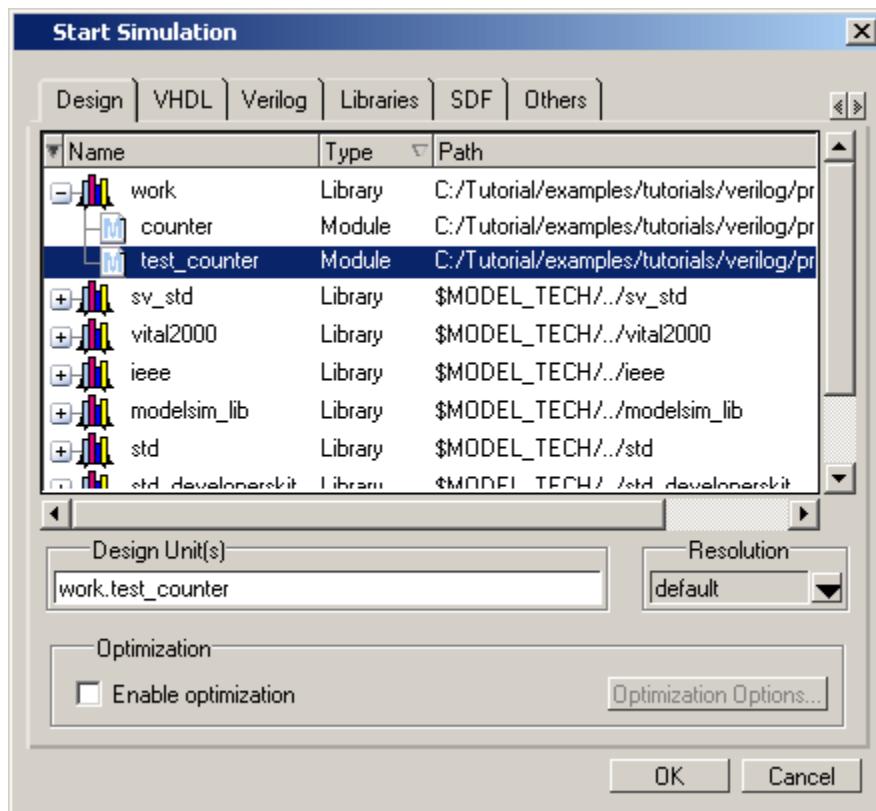Figure 4-10. Start Simulation Dialog

A new tab named *sim* appears that shows the structure of the active simulation (Figure 4-11).

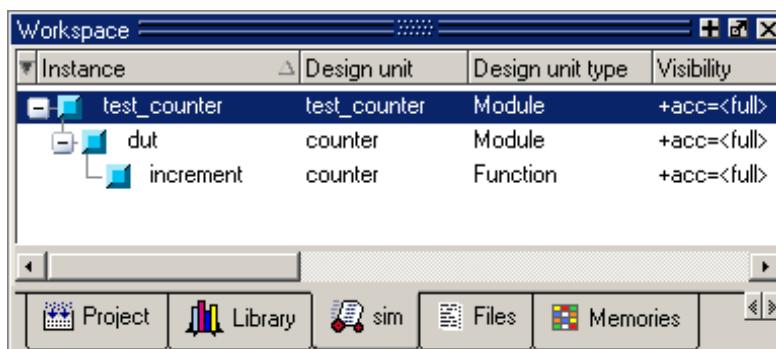Figure 4-11. Structure Tab of the Workspace

At this point you are ready to run the simulation and analyze your results. You often do this by adding signals to the Wave window and running the simulation for a given period of time. See the *ModelSim Tutorial* for examples.

Other Basic Project Operations

Open an Existing Project

If you previously exited ModelSim with a project open, ModelSim automatically will open that same project upon startup. You can open a different project by selecting **File > Open** and choosing Project Files from the **Files of type** drop-down.

Close a Project

Right-click in the Project tab and select **Close Project**. This closes the Project tab but leaves the Library tab open in the workspace. Note that you cannot close a project while a simulation is in progress.

The Project Tab

The Project tab contains information about the objects in your project. By default the tab is divided into five columns.

Figure 4-12. Project Displayed in Workspace

The screenshot shows the ModelSim workspace window titled "Workspace". The main area is a table with columns: Name, Status, Type, Order, and Modified. The table lists the following items:

Name	Status	Type	Order	Modified
VHDL files	Folder			
adder.vhd	?	VHDL	3	06/07/06 07:35:46 PM
testadder.vhd	?	VHDL	2	06/07/06 07:36:26 PM
Verilog files	Folder			
tcounter.v	✓	Verilog	0	06/07/06 07:36:21 PM
counter.v	✓	Verilog	1	06/07/06 07:35:56 PM
verilog_sim		Simulation		

At the bottom of the workspace window, there are two tabs: "Project" and "Library". The "Project" tab is currently selected.

- **Name** – The name of a file or object.
- **Status** – Identifies whether a source file has been successfully compiled. Applies only to VHDL or Verilog files. A question mark means the file hasn't been compiled or the source file has changed since the last successful compile; an X means the compile failed; a check mark means the compile succeeded; a checkmark with a yellow triangle behind it means the file compiled but there were warnings generated.
- **Type** – The file type as determined by registered file types on Windows or the type you specify when you add the file to the project.
- **Order** – The order in which the file will be compiled when you execute a Compile All command.

- **Modified** – The date and time of the last modification to the file.

You can hide or show columns by right-clicking on a column title and selecting or deselecting entries.

Sorting the List


You can sort the list by any of the five columns. Click on a column heading to sort by that column; click the heading again to invert the sort order. An arrow in the column heading indicates which field the list is sorted by and whether the sort order is descending (down arrow) or ascending (up arrow).

Creating a Simulation Configuration

A Simulation Configuration associates a design unit(s) and its simulation options. For example, assume you routinely load a particular design and you also have to specify the simulator resolution limit, generics, and SDF timing files. Ordinarily you would have to specify those options each time you load the design. With a Simulation Configuration, you would specify the design and those options and then save the configuration with a name (e.g., *top_config*). The name is then listed in the Project tab and you can double-click it to load the design along with its options.


To create a Simulation Configuration, follow these steps:

1. Select **Project > Add to Project > Simulation Configuration** from the main menu, or right-click the Project tab and select **Add to Project > Simulation Configuration** from the popup context menu in the Project tab.

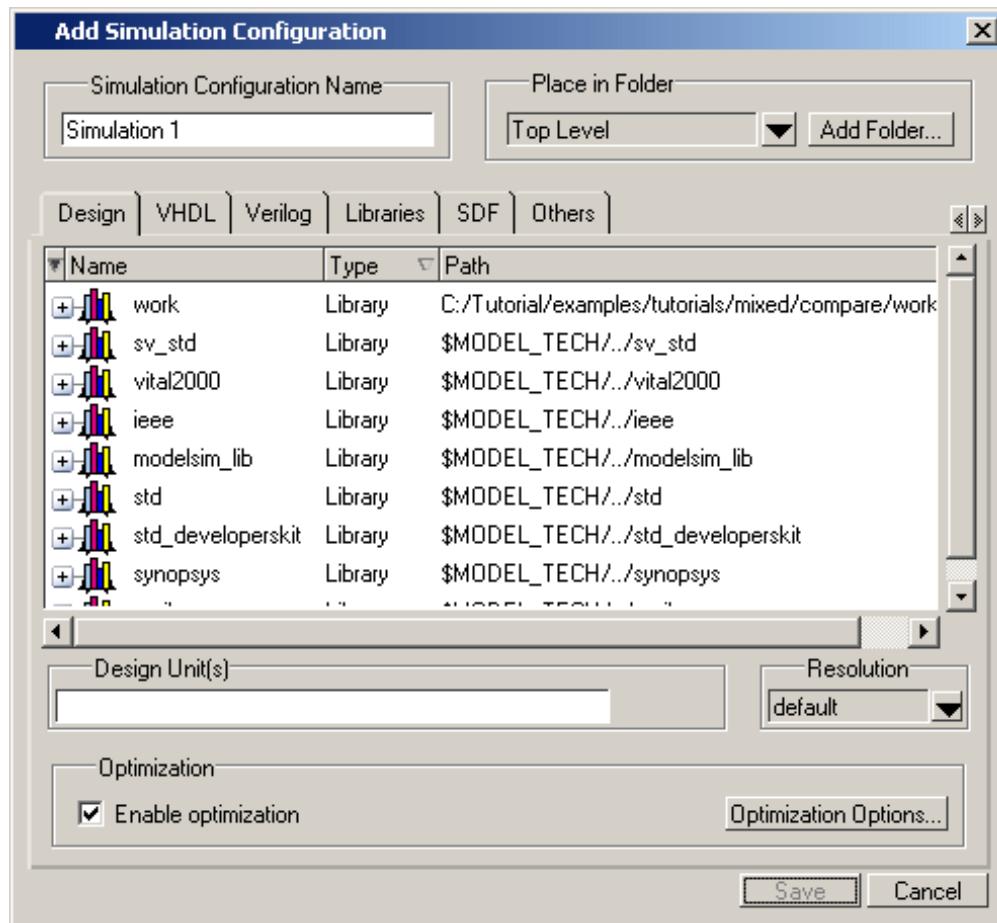Figure 4-13. Add Simulation Configuration Dialog

2. Specify a name in the **Simulation Configuration Name** field.
3. Specify the folder in which you want to place the configuration (see [Organizing Projects with Folders](#)).
4. Select one or more design unit(s). Use the Control and/or Shift keys to select more than one design unit. The design unit names appear in the **Simulate** field when you select them.
5. Use the other tabs in the dialog to specify any required simulation options.

Click **OK** and the simulation configuration is added to the Project tab.

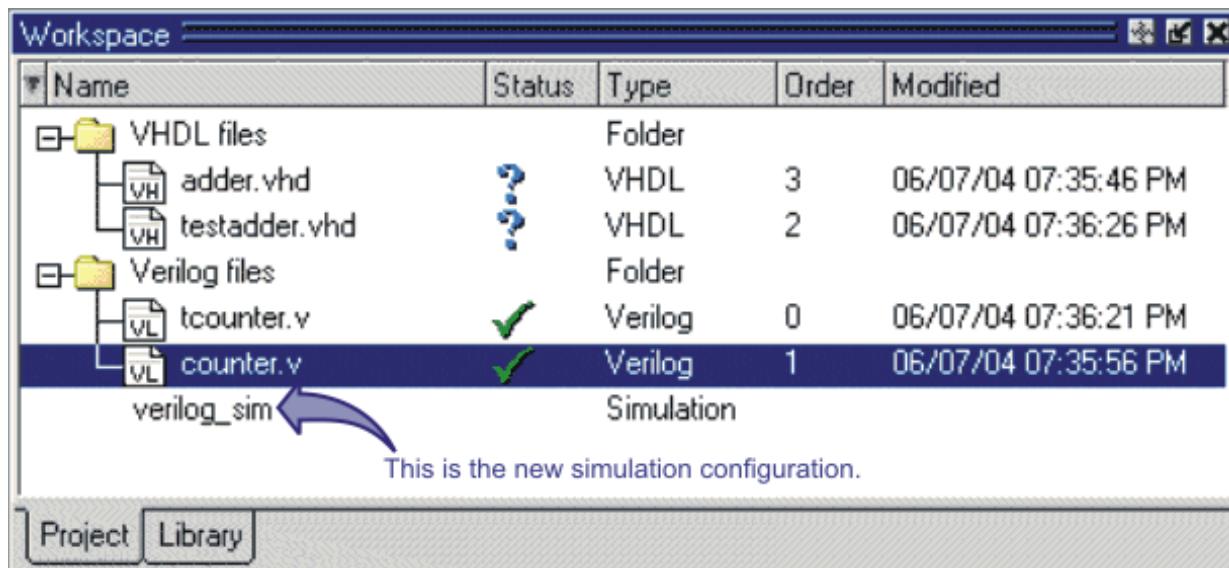Figure 4-14. Simulation Configuration in the Project Tab

Double-click the Simulation Configuration *verilog_sim* to load the design.

Organizing Projects with Folders

The more files you add to a project, the harder it can be to locate the item you need. You can add "folders" to the project to organize your files. These folders are akin to directories in that you can have multiple levels of folders and sub-folders. However, no actual directories are created via the file system—the folders are present only within the project file.

Adding a Folder


To add a folder to your project, select **Project > Add to Project > Folder** or right-click in the Project tab and select **Add to Project > Folder** (Figure 4-15).

Figure 4-15. Add Folder Dialog


Specify the Folder Name, the location for the folder, and click **OK**. The folder will be displayed in the Project tab.

You use the folders when you add new objects to the project. For example, when you add a file, you can select which folder to place it in.

Figure 4-16. Specifying a Project Folder

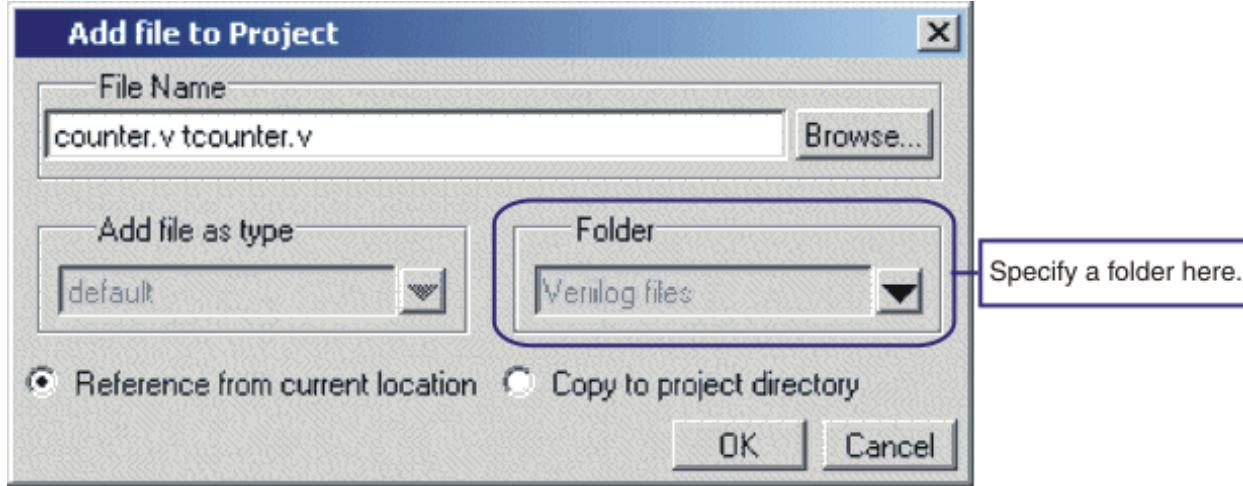

If you want to move a file into a folder later on, you can do so using the Properties dialog for the file. Simply right-click on the filename in the Project tab and select Properties from the context menu that appears. This will open the Project Compiler Settings Dialog (Figure 4-17). Use the Place in Folder field to specify a folder.

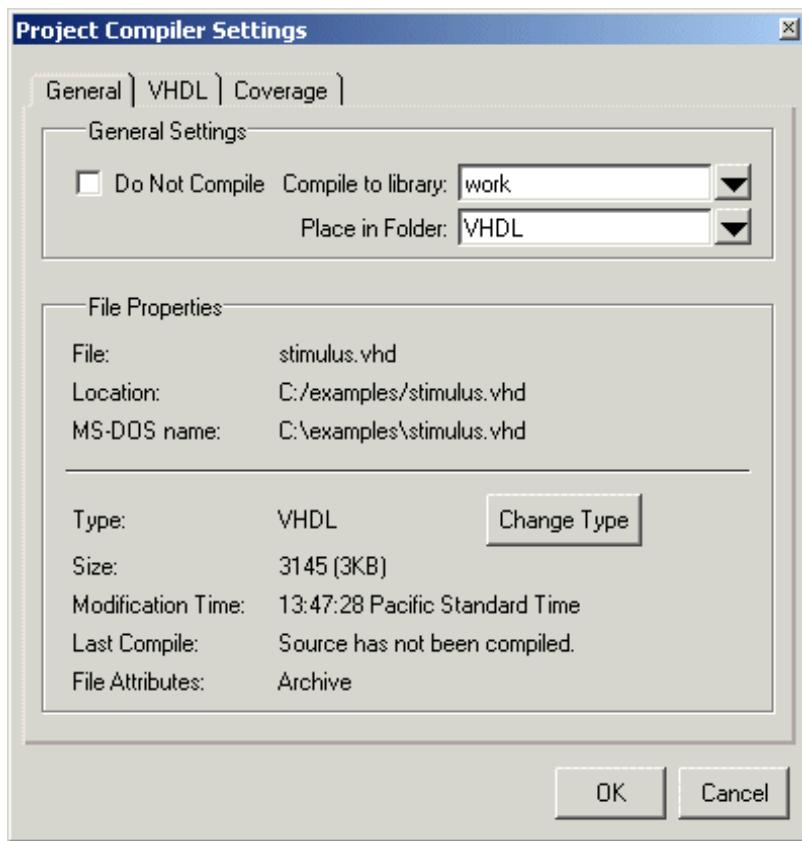Figure 4-17. Project Compiler Settings Dialog

On Windows platforms, you can also just drag-and-drop a file into a folder.

Specifying File Properties and Project Settings

You can set two types of properties in a project: file properties and project settings. File properties affect individual files; project settings affect the entire project.

File Compilation Properties


The VHDL and Verilog compilers (**vcom** and **vlog**, respectively) have numerous options that affect how a design is compiled and subsequently simulated. You can customize the settings on individual files or a group of files.

Note

Any changes you make to the compile properties outside of the project, whether from the command line, the GUI, or the *modelsim.ini* file, *will not* affect the properties of files already in the project.

To customize specific files, select the file(s) in the Project tab, right click on the file names, and select **Properties**. The resulting Project Compiler Settings dialog (Figure 4-18) varies depending on the number and type of files you have selected. If you select a single VHDL or Verilog file, you will see the General tab, Coverage tab, and the VHDL or Verilog tab, respectively. On the General tab, you will see file properties such as Type, Location, and Size. If you select multiple files, the file properties on the General tab are not listed. Finally, if you select both a VHDL file and a Verilog file, you will see all tabs but no file information on the General tab.

Figure 4-18. Specifying File Properties

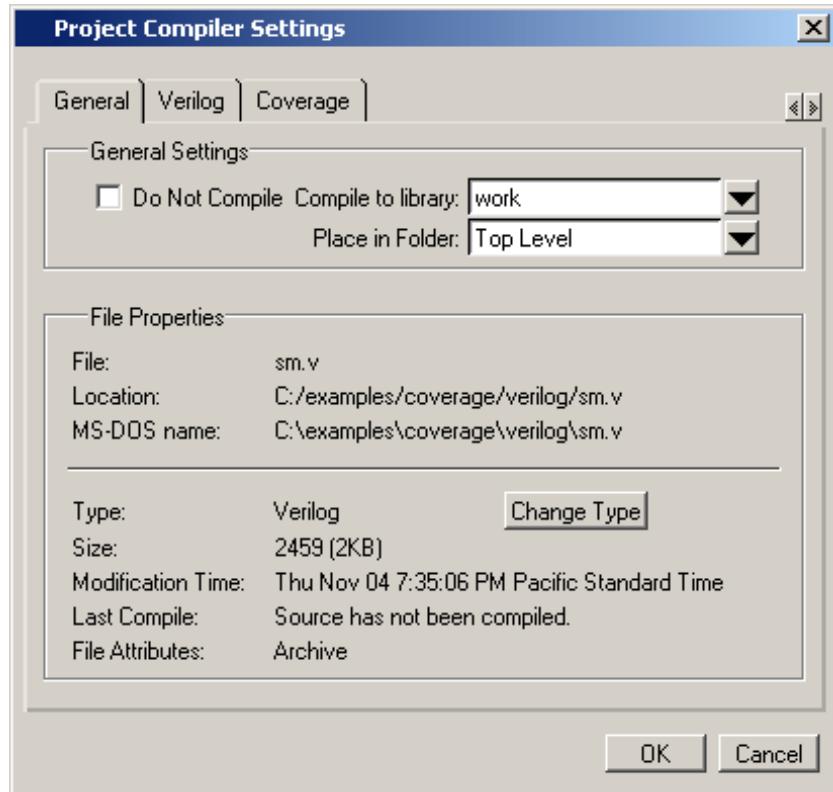


When setting options on a group of files, keep in mind the following:

- If two or more files have different settings for the same option, the checkbox in the dialog will be "grayed out." If you change the option, you cannot change it back to a "multi- state setting" without cancelling out of the dialog. Once you click OK, ModelSim will set the option the same for all selected files.
- If you select a combination of VHDL and Verilog files, the options you set on the VHDL and Verilog tabs apply only to those file types.

Project Settings

To modify project settings, right-click anywhere within the Project tab and select **Project Settings**.

Figure 4-19. Project Settings Dialog

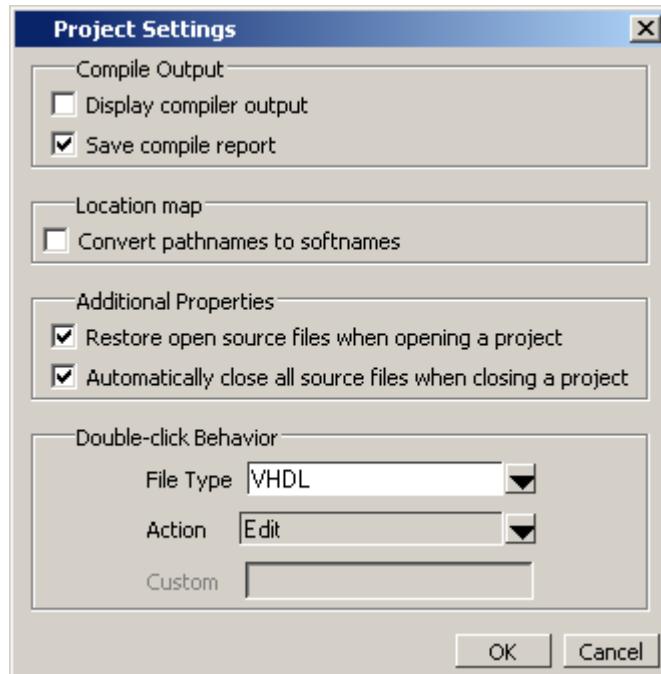

Converting Pathnames to Softnames for Location Mapping

If you are using location mapping, you can convert the following into a soft pathname:

- a relative pathname
- full pathname
- pathname with an environment variable



Tip: A softname is a term for a pathname that uses location mapping with MGC_LOCATION_MAP. The soft pathname looks like a pathname containing an environment variable, it locates the source using the location map rather than the environment.

To convert the pathname to a softname for projects using location mapping, follow these steps:

1. Right-click anywhere within the Project tab and select **Project Settings**
2. Enable the **Convert pathnames to softnames** within the Location map area of the **Project Settings** dialog box ([Figure 4-19](#)).

Once enabled, all pathnames currently in the project and any that are added later are then converted to softnames.

During conversion, if there is no softname in the mgc location map matching the entry, the pathname is converted in to a full (hardened) pathname. A pathname is hardened by removing the environment variable or the relative portion of the path. If this happens, any existing pathnames that are either relative or use environment variables are also changed: either to softnames if possible, or to hardened pathnames if not.

For more information on location mapping and pathnames, see [Using Location Mapping](#).

Accessing Projects from the Command Line

Generally, projects are used from within the ModelSim GUI. However, standalone tools will use the project file if they are invoked in the project's root directory. If you want to invoke outside the project directory, set the **MODELSIM** environment variable with the path to the project file (*<Project_Root_Dir>/<Project_Name>.mpf*).

You can also use the [project](#) command from the command line to perform common operations on projects.

Chapter 5

Design Libraries

VHDL designs are associated with libraries, which are objects that contain compiled design units. Verilog and SystemVerilog designs simulated within ModelSim are compiled into libraries as well.

Design Library Overview

A *design library* is a directory or archive that serves as a repository for compiled design units. The design units contained in a design library consist of VHDL entities, packages, architectures, and configurations; Verilog modules and UDPs (user-defined primitives). The design units are classified as follows:

- **Primary design units** — Consist of entities, package declarations, configuration declarations, modulesUDPs. Primary design units within a given library must have unique names.
- **Secondary design units** — Consist of architecture bodiespackage bodies. Secondary design units are associated with a primary design unit. Architectures by the same name can exist if they are associated with different entities or modules.

Design Unit Information

The information stored for each design unit in a design library is:

- retargetable, executable code
- debugging information
- dependency information

Working Library Versus Resource Libraries

Design libraries can be used in two ways:

1. as a local working library that contains the compiled version of your design;
2. as a resource library.

The contents of your working library will change as you update your design and recompile. A resource library is typically static and serves as a parts source for your design. You can create

your own resource libraries or they may be supplied by another design team or a third party (e.g., a silicon vendor).

Only one library can be the working library.

Any number of libraries can be resource libraries during a compilation. You specify which resource libraries will be used when the design is compiled, and there are rules to specify in which order they are searched (refer to [Specifying Resource Libraries](#)).

A common example of using both a working library and a resource library is one in which your gate-level design and testbench are compiled into the working library and the design references gate-level models in a separate resource library.

The Library Named "work"

The library named "work" has special attributes within ModelSim — it is predefined in the compiler and need not be declared explicitly (i.e. **library work**). It is also the library name used by the compiler as the default destination of compiled design units (i.e., it does not need to be mapped). In other words, the **work** library is the default *working* library.

Archives

By default, design libraries are stored in a directory structure with a sub-directory for each design unit in the library. Alternatively, you can configure a design library to use archives. In this case, each design unit is stored in its own archive file. To create an archive, use the -archive argument to the **vlib** command.

Generally you would do this only in the rare case that you hit the reference count limit on I-nodes due to the ".." entries in the lower-level directories (the maximum number of sub-directories on UNIX and Linux is 65533). An example of an error message that is produced when this limit is hit is:

```
mkdir: cannot create directory `65534': Too many links
```

Archives may also have limited value to customers seeking disk space savings.

Note

 GMAKE won't work with these archives on the IBM platform.

Working with Design Libraries

The implementation of a design library is not defined within standard VHDL or Verilog. Within ModelSim, design libraries are implemented as directories and can have any legal name allowed by the operating system, with one exception: extended identifiers are not supported for library names.

Creating a Library


When you create a project (refer to [Getting Started with Projects](#)), ModelSim automatically creates a working design library. If you don't create a project, you need to create a working design library before you run the compiler. This can be done from either the command line or from the ModelSim graphic interface.

From the ModelSim prompt or a UNIX/DOS prompt, use this **vlib** command:

```
vlib <directory_pathname>
```

To create a new library with the graphic interface, select **File > New > Library**.

Figure 5-1. Creating a New Library

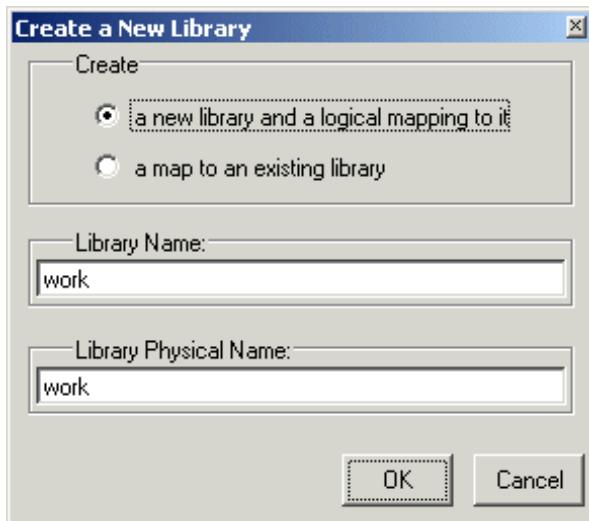

When you click **OK**, ModelSim creates the specified library directory and writes a specially-formatted file named `_info` into that directory. The `_info` file must remain in the directory to distinguish it as a ModelSim library.

The new map entry is written to the `modelsim.ini` file in the [Library] section. Refer to [Library Path Variables](#) for more information.

Note




Remember that a design library is a special kind of directory. The **only** way to create a library is to use the ModelSim GUI or the **vlib** command. Do not try to create libraries using UNIX, DOS, or Windows commands.

Managing Library Contents

Library contents can be viewed, deleted, recompiled, edited and so on using either the graphic interface or command line.

The Library tab in the Workspace pane provides access to design units (configurations, modules, packages, entities/architectures) in a library. Various information about the design units is displayed in columns to the right of the design unit name.

Figure 5-2. Design Unit Information in the Workspace

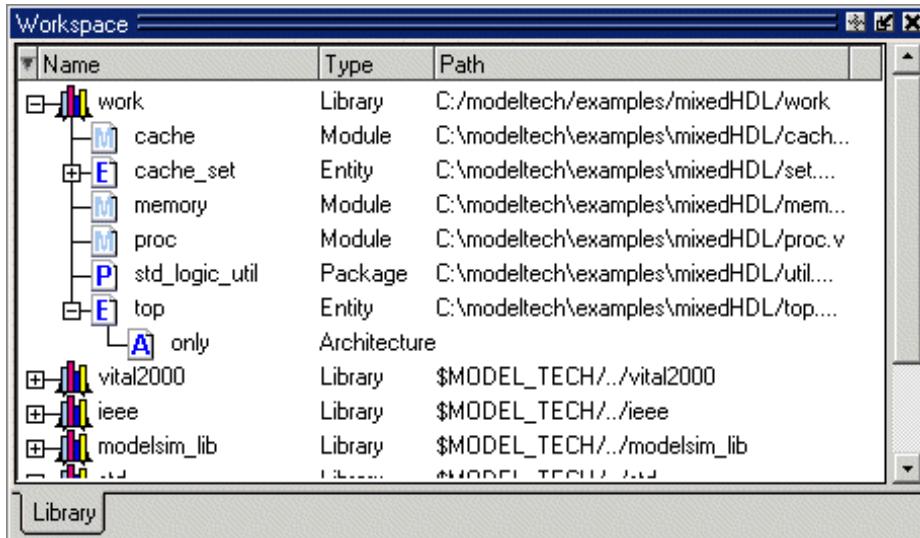

The Library tab has a context menu with various commands that you access by clicking your right mouse button (Windows—2nd button, UNIX—3rd button) in the Library tab.

The context menu includes the following commands:

- **Simulate** — Loads the selected design unit and opens structure and Files tabs in the workspace. Related command line command is `vsim`.
- **Edit** — Opens the selected design unit in the Source window; or, if a library is selected, opens the Edit Library Mapping dialog (refer to [Library Mappings with the GUI](#)).
- **Refresh** — Rebuilds the library image of the selected library without using source code. Related command line command is `vcom` or `vlog` with the `-refresh` argument.
- **Recompile** — Recompiles the selected design unit. Related command line command is `vcom` or `vlog`.
- **Update** — Updates the display of available libraries and design units.

Assigning a Logical Name to a Design Library


VHDL uses logical library names that can be mapped to ModelSim library directories. By default, ModelSim can find libraries in your current directory (assuming they have the right name), but for it to find libraries located elsewhere, you need to map a logical library name to the pathname of the library.

You can use the GUI, a command, or a project to assign a logical name to a design library.

Library Mappings with the GUI

To associate a logical name with a library, select the library in the workspace, right-click you mouse, and select **Edit** from the context menu that appears. This brings up a dialog box that allows you to edit the mapping.

Figure 5-3. Edit Library Mapping Dialog

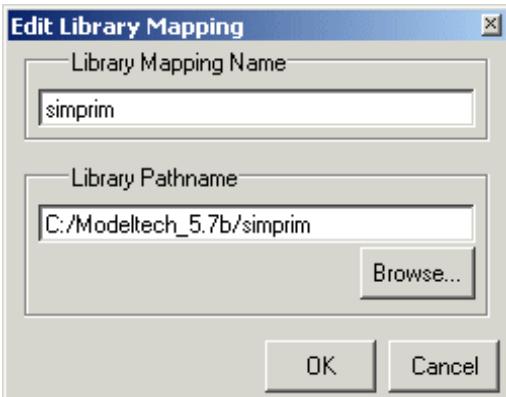

The dialog box includes these options:

- **Library Mapping Name** — The logical name of the library.
- **Library Pathname** — The pathname to the library.

Library Mapping from the Command Line

You can set the mapping between a logical library name and a directory with the [vmap](#) command using the following syntax:

```
vmap <logical_name> <directory_pathname>
```

You may invoke this command from either a UNIX/DOS prompt or from the command line within ModelSim.

The [vmap](#) command adds the mapping to the library section of the *modelsim.ini* file. You can also modify *modelsim.ini* manually by adding a mapping line. To do this, use a text editor and add a line under the [Library] section heading using the syntax:

```
<logical_name> = <directory_pathname>
```

More than one logical name can be mapped to a single directory. For example, suppose the *modelsim.ini* file in the current working directory contains following lines:

```
[Library]
work = /usr/rick/design
my_asic = /usr/rick/design
```

This would allow you to use either the logical name **work** or **my_asic** in a **library** or **use** clause to refer to the same design library.

Unix Symbolic Links

You can also create a UNIX symbolic link to the library using the host platform command:

ln -s <directory.pathname> <logical_name>

The **vmap** command can also be used to display the mapping of a logical library name to a directory. To do this, enter the shortened form of the command:

vmap <logical_name>

Library Search Rules

The system searches for the mapping of a logical name in the following order:

- First the system looks for a *modelsim.ini* file.
- If the system doesn't find a *modelsim.ini* file, or if the specified logical name does not exist in the *modelsim.ini* file, the system searches the current working directory for a subdirectory that matches the logical name.

An error is generated by the compiler if you specify a logical name that does not resolve to an existing directory.

Moving a Library

Individual design units in a design library cannot be moved. An *entire* design library can be moved, however, by using standard operating system commands for moving a directory or an archive.

Setting Up Libraries for Group Use

By adding an "others" clause to your *modelsim.ini* file, you can have a hierarchy of library mappings. If the tool does not find a mapping in the *modelsim.ini* file, then it will search the [library] section of the initialization file specified by the "others" clause. For example:

```
[library]
asic_lib = /cae/asic_lib
work = my_work
others = /usr/modeltech/modelsim.ini
```

You can specify only one "others" clause in the library section of a given *modelsim.ini* file.

The others clause only instructs the tool to look in the specified *modelsim.ini* file for a library, it does not load any other part of the specified file.

Specifying Resource Libraries

Verilog Resource Libraries

ModelSim supports separate compilation of distinct portions of a Verilog design. The [vlog](#) compiler is used to compile one or more source files into a specified library. The library thus contains pre-compiled modules and UDPs that are referenced by the simulator as it loads the design.

Resource libraries are specified differently for Verilog and VHDL. For Verilog you use either the -L or -Lf argument to [vlog](#). Refer to [Library Usage](#) for more information.

The [LibrarySearchPath](#) variable in the *modelsim.ini* file (in the [vlog] section) can be used to define a space-separated list of resource library paths. This is identical behavior with the -L argument for the [vlog](#) command.

```
LibrarySearchPath = <path>/lib1 <path>/lib2 <path>/lib3
```

The default for [LibrarySearchPath](#) is \$MODEL_TECH/../avm.

VHDL Resource Libraries

Within a VHDL source file, you use the **VHDL library** clause to specify logical names of one or more resource libraries to be referenced in the subsequent design unit. The scope of a **library** clause includes the text region that starts immediately after the **library** clause and extends to the end of the declarative region of the associated design unit. *It does not extend to the next design unit in the file.*

Note that the **library** clause is not used to specify the working library into which the design unit is placed after compilation. The [vcom](#) command adds compiled design units to the current working library. By default, this is the library named **work**. To change the current working library, you can use [vcom -work](#) and specify the name of the desired target library.

Predefined Libraries

Certain resource libraries are predefined in standard VHDL. The library named **std** contains the packages **standard**, **env**, and **textio**, which should not be modified. The contents of these packages and other aspects of the predefined language environment are documented in the *IEEE Standard VHDL Language Reference Manual, Std 1076*. Refer also to, [Using the TextIO Package](#).

A VHDL **use** clause can be specified to select particular declarations in a library or package that are to be visible within a design unit during compilation. A **use** clause references the compiled version of the package—not the source.

By default, every VHDL design unit is assumed to contain the following declarations:

```
LIBRARY std, work;  
USE std.standard.all
```

To specify that all declarations in a library or package can be referenced, add the suffix *.all* to the library/package name. For example, the **use** clause above specifies that all declarations in the package *standard*, in the design library named *std*, are to be visible to the VHDL design unit immediately following the **use** clause. Other libraries or packages are not visible unless they are explicitly specified using a **library** or **use** clause.

Another predefined library is **work**, the library where a design unit is stored after it is compiled as described earlier. There is no limit to the number of libraries that can be referenced, but only one library is modified during compilation.

Alternate IEEE Libraries Supplied

The installation directory may contain two or more versions of the IEEE library:

- *ieepure* — Contains only IEEE approved packages (accelerated for ModelSim).
- *ieee* — Contains precompiled Synopsys and IEEE arithmetic packages which have been accelerated by Model Technology including *math_complex*, *math_real*, *numeric_bit*, *numeric_std*, *std_logic_1164*, *std_logic_misc*, *std_logic_textio*, *std_logic_arith*, *std_logic_signed*, *std_logic_unsigned*, *vital_primitives*, and *vital_timing*.

You can select which library to use by changing the mapping in the *modelsim.ini* file. The *modelsim.ini* file in the installation directory defaults to the *ieee* library.

Regenerating Your Design Libraries

Depending on your current ModelSim version, you may need to regenerate your design libraries before running a simulation. Check the installation README file to see if your libraries require an update. You can regenerate your design libraries using the **Refresh** command from the Library tab context menu (refer to [Managing Library Contents](#)), or by using the **-refresh** argument to **vcom** and **vlog**.

From the command line, you would use **vcom** with the **-refresh** argument to update VHDL design units in a library, and **vlog** with the **-refresh** argument to update Verilog design units. By default, the **work** library is updated. Use either **vcom** or **vlog** with the **-work <library>** argument to update a different library. For example, if you have a library named *mylib* that contains both VHDL and Verilog design units:

```
vcom -work mylib -refresh  
vlog -work mylib -refresh
```

Note



You may specify a specific design unit name with the **-refresh** argument to [vcom](#) and [vlog](#) in order to regenerate a library image for only that design, but you may not specify a file name.

An important feature of **-refresh** is that it rebuilds the library image without using source code. This means that models delivered as compiled libraries without source code can be rebuilt for a specific release of ModelSim. In general, this works for moving forwards or backwards on a release. Moving backwards on a release may not work if the models used compiler switches, directives, language constructs, or features that do not exist in the older release.

Note



You don't need to regenerate the *std*, *ieee*, *vital22b*, and *verilog* libraries. Also, you cannot use the **-refresh** option to update libraries that were built before the 4.6 release.

Importing FPGA Libraries

ModelSim includes an import wizard for referencing and using vendor FPGA libraries. The wizard scans for and enforces dependencies in the libraries and determines the correct mappings and target directories.


Note



The FPGA libraries you import must be pre-compiled. Most FPGA vendors supply pre-compiled libraries configured for use with ModelSim.

To import an FPGA library, select **File > Import > Library**.

Figure 5-4. Import Library Wizard

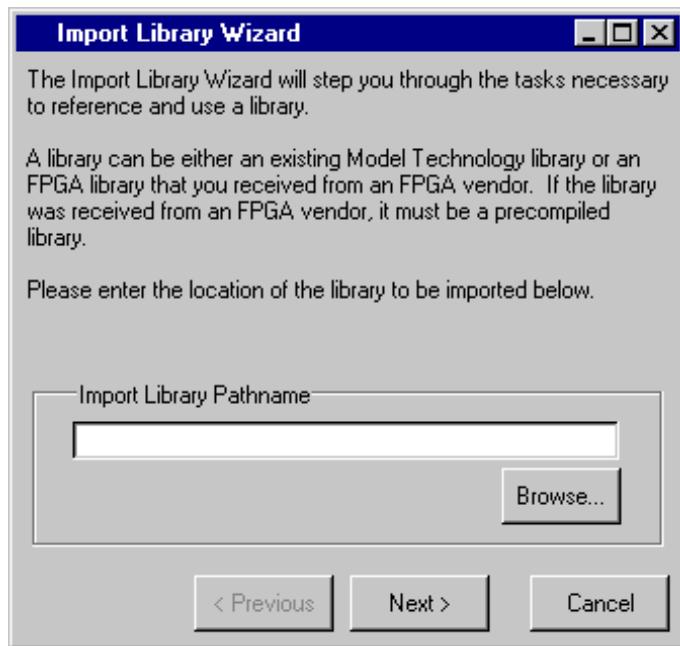

Follow the instructions in the wizard to complete the import.

Protecting Source Code

The [Protecting Your Source Code](#) chapter provides details about protecting your internal model data. This allows a model supplier to provide pre-compiled libraries without providing source code and without revealing internal model variables and structure.

Chapter 6

VHDL Simulation

This chapter describes how to compile, optimize, and simulate VHDL designs in ModelSim. It also discusses using the TextIO package with ModelSim; ModelSim's implementation of the VITAL (VHDL Initiative Towards ASIC Libraries) specification for ASIC modeling; and ModelSim's special built-in utilities package.

The TextIO package is defined within the *VHDL Language Reference Manual, IEEE Std 1076*; it allows human-readable text input from a declared source within a VHDL file during simulation.

Basic VHDL Flow

Simulating VHDL designs with ModelSim includes four general steps:

1. Compile your VHDL code into one or more libraries using the [vcom](#) command. See [Compiling VHDL Files](#) for details.
2. Load your design with the [vsim](#) command. See [Simulating VHDL Designs](#) for details.
3. Run and debug your design.

Compiling VHDL Files

Creating a Design Library for VHDL

Before you can compile your source files, you must create a library in which to store the compilation results. Use [vlib](#) to create a new library. For example:

```
vlib work
```

This creates a library named **work**. By default, compilation results are stored in the **work** library.

The **work** library is actually a subdirectory named *work*. This subdirectory contains a special file named *_info*. Do not create libraries using UNIX, MS Windows, or DOS commands – always use the [vlib](#) command.

See [Design Libraries](#) for additional information on working with libraries.

Invoking the VHDL Compiler

ModelSim compiles one or more VHDL design units with a single invocation of [vcom](#), the VHDL compiler. The design units are compiled in the order that they appear on the command line. For VHDL, the order of compilation is important – you must compile any entities or configurations before an architecture that references them.

You can simulate a design containing units written with 1076-1987, 1076-1993, and 1076-2002 versions of VHDL. To do so you will need to compile units from each VHDL version separately. The [vcom](#) command compiles using 1076-2002 rules by default; use the **-87** or **-93** argument to [vcom](#) to compile units written with version 1076-1987 or 1076-1993, respectively. You can also change the default by modifying the VHDL93 variable in the *modelsim.ini* file (see [Simulator Control Variables](#) for more information).

Dependency Checking

Dependent design units must be reanalyzed when the design units they depend on are changed in the library. [vcom](#) determines whether or not the compilation results have changed. For example, if you keep an entity and its architectures in the same source file and you modify only an architecture and recompile the source file, the entity compilation results will remain unchanged and you will not have to recompile design units that depend on the entity.

Range and Index Checking

A range check verifies that a scalar value defined with a range subtype is always assigned a value within its range. An index check verifies that whenever an array subscript expression is evaluated, the subscript will be within the array's range.

Range and index checks are performed by default when you compile your design. You can disable range checks (potentially offering a performance advantage) and index checks using arguments to the [vcom](#) command. Or, you can use the **NoRangeCheck** and **NoIndexCheck** variables in the *modelsim.ini* file to specify whether or not they are performed. See [Simulator Control Variables](#).

Range checks in ModelSim are slightly more restrictive than those specified by the VHDL LRM. ModelSim requires any assignment to a signal to also be in range whereas the LRM requires only that range checks be done whenever a signal is updated. Most assignments to signals update the signal anyway, and the more restrictive requirement allows ModelSim to generate better error messages.

Subprogram Inlining

ModelSim attempts to inline subprograms at compile time to improve simulation performance. This happens automatically and should be largely transparent. However, you can disable automatic inlining two ways:

- Invoke `vcom` with the `-O0` or `-O1` argument
- Use the `mti_inhibit_inline` attribute as described below

Single-stepping through a simulation varies slightly depending on whether inlining occurred. When single-stepping to a subprogram call that has not been inlined, the simulator stops first at the line of the call, and then proceeds to the line of the first executable statement in the called subprogram. If the called subprogram has been inlined, the simulator does not first stop at the subprogram call, but stops immediately at the line of the first executable statement.

mti_inhibit_inline Attribute

You can disable inlining for individual design units (a package, architecture, or entity) or subprograms with the `mti_inhibit_inline` attribute. Follow these rules to use the attribute:

- Declare the attribute within the design unit's scope as follows:

```
attribute mti_inhibit_inline : boolean;
```

- Assign the value true to the attribute for the appropriate scope. For example, to inhibit inlining for a particular function (e.g., "foo"), add the following attribute assignment:

```
attribute mti_inhibit_inline of foo : procedure is true;
```

To inhibit inlining for a particular package (e.g., "pack"), add the following attribute assignment:

```
attribute mti_inhibit_inline of pack : package is true;
```

Do similarly for entities and architectures.

Differences Between Language Versions

There are three versions of the IEEE VHDL 1076 standard: VHDL-1987, VHDL-1993, and VHDL-2002. The default language version for ModelSim is VHDL-2002. If your code was written according to the '87 or '93 version, you may need to update your code or instruct ModelSim to use the earlier versions' rules.

To select a specific language version, do one of the following:

- Select the appropriate version from the compiler options menu in the GUI
- Invoke `vcom` using the argument `-87`, `-93`, or `-2002`
- Set the `VHDL93` variable in the `[vcom]` section of the `modelsim.ini` file. Appropriate values for `VHDL93` are:
 - 0, 87, or 1987 for VHDL-1987
 - 1, 93, or 1993 for VHDL-1993

- 2, 02, or 2002 for VHDL-2002

The following is a list of language incompatibilities that may cause problems when compiling a design.

- VHDL-93 and VHDL-2002 — The only major problem between VHDL-93 and VHDL-2002 is the addition of the keyword "PROTECTED". VHDL-93 programs which use this as an identifier should choose a different name.
All other incompatibilities are between VHDL-87 and VHDL-93.
- VITAL and SDF — It is important to use the correct language version for VITAL. VITAL2000 must be compiled with VHDL-93 or VHDL-2002. VITAL95 must be compiled with VHDL-87. A typical error message that indicates the need to compile under language version VHDL-87 is:

```
"VITALPathDelay DefaultDelay parameter must be locally static"
```

- Purity of NOW — In VHDL-93 the function "now" is impure. Consequently, any function that invokes "now" must also be declared to be impure. Such calls to "now" occur in VITAL. A typical error message:

```
"Cannot call impure function 'now' from inside pure function  
'<name>' "
```

- Files — File syntax and usage changed between VHDL-87 and VHDL-93. In many cases vcom issues a warning and continues:

```
"Using 1076-1987 syntax for file declaration."
```

In addition, when files are passed as parameters, the following warning message is produced:

```
"Subprogram parameter name is declared using VHDL 1987 syntax."
```

This message often involves calls to endfile(<name>) where <name> is a file parameter.

- Files and packages — Each package header and body should be compiled with the same language version. Common problems in this area involve files as parameters and the size of type CHARACTER. For example, consider a package header and body with a procedure that has a file parameter:

```
procedure proc1 ( out_file : out std.textio.text) ...
```

If you compile the package header with VHDL-87 and the body with VHDL-93 or VHDL-2002, you will get an error message such as:

```
*** Error: mixed_package_b.vhd(4): Parameter kinds do not conform  
between declarations in package header and body: 'out_file'."
```

- Direction of concatenation — To solve some technical problems, the rules for direction and bounds of concatenation were changed from VHDL-87 to VHDL-93. You won't see any difference in simple variable/signal assignments such as:

```
v1 := a & b;
```

But if you (1) have a function that takes an unconstrained array as a parameter, (2) pass a concatenation expression as a formal argument to this parameter, and (3) the body of the function makes assumptions about the direction or bounds of the parameter, then you will get unexpected results. This may be a problem in environments that assume all arrays have "downto" direction.

- **xnor** — "xnor" is a reserved word in VHDL-93. If you declare an xnor function in VHDL-87 (without quotes) and compile it under VHDL-2002, you will get an error message like the following:

```
** Error: xnor.vhd(3): near "xnor": expecting: STRING IDENTIFIER
```

- **'FOREIGN** attribute — In VHDL-93 package STANDARD declares an attribute 'FOREIGN'. If you declare your own attribute with that name in another package, then ModelSim issues a warning such as the following:

```
-- Compiling package foopack
```

```
** Warning: foreign.vhd(9): (vcom-1140) VHDL-1993 added a definition
of the attribute foreign to package std.standard. The attribute is
also defined in package 'standard'. Using the definition from
package 'standard'.
```

- **Size of CHARACTER type** — In VHDL-87 type CHARACTER has 128 values; in VHDL-93 it has 256 values. Code which depends on this size will behave incorrectly. This situation occurs most commonly in test suites that check VHDL functionality. It's unlikely to occur in practical designs. A typical instance is the replacement of warning message:

```
"range nul downto del is null"
```

by

```
"range nul downto 'ÿ' is null" -- range is nul downto y(umlaut)
```

- **bit string literals** — In VHDL-87 bit string literals are of type bit_vector. In VHDL-93 they can also be of type STRING or STD_LOGIC_VECTOR. This implies that some expressions that are unambiguous in VHDL-87 now become ambiguous in VHDL-93. A typical error message is:

```
** Error: bit_string_literal.vhd(5): Subprogram '=' is ambiguous.
Suitable definitions exist in packages 'std_logic_1164' and
'standard'.
```

- **Sub-element association** — In VHDL-87 when using individual sub-element association in an association list, associating individual sub-elements with NULL is discouraged. In VHDL-93 such association is forbidden. A typical message is:

```
"Formal '<name>' must not be associated with OPEN when subelements
are associated individually."
```

Simulating VHDL Designs

A VHDL design is ready for simulation after it has been compiled with **vcom**. The simulator may then be invoked with the name of the configuration or entity/architecture pair.

Note



This section discusses simulation from the UNIX or Windows/DOS command line. You can also use a project to simulate (see [Getting Started with Projects](#)) or the **Start Simulation** dialog box (open with **Simulate > Start Simulation** menu selection).

This example invokes **vsim** on the entity **my_asic** and the architecture **structure**:

```
vsim my_asic structure
```

vsim is capable of annotating a design using VITAL compliant models with timing data from an SDF file. You can specify the min:typ:max delay by invoking **vsim** with the -sdfmin, -sdftyp, or -sdfmax options. Using the SDF file *f1.sdf* in the current work directory, the following invocation of **vsim** annotates maximum timing values for the design unit *my_asic*:

```
vsim -sdfmax /my_asic=f1.sdf my_asic
```

By default, the timing checks within VITAL models are enabled. They can be disabled with the **+notimingchecks** option. For example:

```
vsim +notimingchecks topmod
```

If **+notimingchecks** is set on the **vsim** command line, the generic **TimingChecksOn** is set to FALSE for all VHDL Vital models with the **Vital_level0** or **Vital_level1** attribute. Setting this generic to FALSE disables the actual calls to the timing checks along with anything else that is present in the model's timing check block. In addition, if these models use the generic **TimingChecksOn** to control behavior beyond timing checks, this behavior will not occur. This can cause designs to simulate differently and provide different results.

Simulator Resolution Limit (VHDL)

The simulator internally represents time as a 64-bit integer in units equivalent to the smallest unit of simulation time, also known as the simulator resolution limit. The default resolution limit is set to the value specified by the **Resolution** variable in the *modelsim.ini* file. You can view the current resolution by invoking the **report** command with the **simulator state** option.

Note



In Verilog, this representation of time units is referred to as precision or timescale.

Overriding the Resolution

To override the default resolution of ModelSim, specify a value for the **-t** option of the **vsim** command line or select a different Simulator Resolution in the **Simulate** dialog box. Available values of simulator resolution are:

1 fs, 10 fs, 100 fs
1 ps, 10 ps, 100 ps
1 ns, 10 ns, 100 ns
1 us, 10 us, 100 us
1 ms, 10 ms, 100 ms
1 s, 10 s, 100 s

For example, the following command sets resolution to 10 ps:

```
vsim -t 10ps topmod
```

Note that you need to take care in specifying a resolution value larger than a delay value in your design—delay values in that design unit are rounded to the closest multiple of the resolution. In the example above, a delay of 4 ps would be rounded down to 0 ps.

Choosing the Resolution for VHDL

You should specify the coarsest value for time resolution that does not result in undesired rounding of your delay times. The resolution value should not be unnecessarily small because it decreases the maximum simulation time limit and can cause longer simulations.

Default Binding

By default, ModelSim performs binding when you load the design with **vsim**. The advantage of this default binding at load time is that it provides more flexibility for compile order. Namely, VHDL entities don't necessarily have to be compiled before other entities/architectures that instantiate them.

However, you can force ModelSim to perform default binding at compile time instead. This may allow you to catch design errors (e.g., entities with incorrect port lists) earlier in the flow. Use one of these two methods to change when default binding occurs:

- Specify the **-bindAtCompile** argument to **vcom**
- Set the **BindAtCompile** variable in the *modelsim.ini* to 1 (true)

Default Binding Rules

When searching for a VHDL entity to bind with, ModelSim searches the currently visible libraries for an entity with the same name as the component. ModelSim does this because IEEE 1076-1987 contained a flaw that made it almost impossible for an entity to be directly visible if

it had the same name as the component. In short, if a component was declared in an architecture, any like-named entity above that declaration would be hidden because component/entity names cannot be overloaded. As a result we implemented the following rules for determining default binding:

- If performing default binding at load time, search the libraries specified with the **-Lf** argument to **vsim**.
- If a directly visible entity has the same name as the component, use it.
- If an entity would be directly visible in the absence of the component declaration, use it.
- If the component is declared in a package, search the library that contained the package for an entity with the same name.

If none of these methods is successful, ModelSim will also do the following:

- Search the work library.
- Search all other libraries that are currently visible by means of the **library** clause.
- If performing default binding at load time, search the libraries specified with the **-L** argument to **vsim**.

Note that these last three searches are an extension to the 1076 standard.

Disabling Default Binding


If you want default binding to occur only via configurations, you can disable ModelSim's normal default binding methods by setting the [RequireConfigForAllDefaultBinding](#) variable in the *modelsim.ini* to 1 (true).

Delta Delays

Event-based simulators such as ModelSim may process many events at a given simulation time. Multiple signals may need updating, statements that are sensitive to these signals must be executed, and any new events that result from these statements must then be queued and executed as well. The steps taken to evaluate the design without advancing simulation time are referred to as "delta times" or just "deltas."

The diagram below represents the process for VHDL designs. This process continues until the end of simulation time.

Figure 6-1. VHDL Delta Delay Process

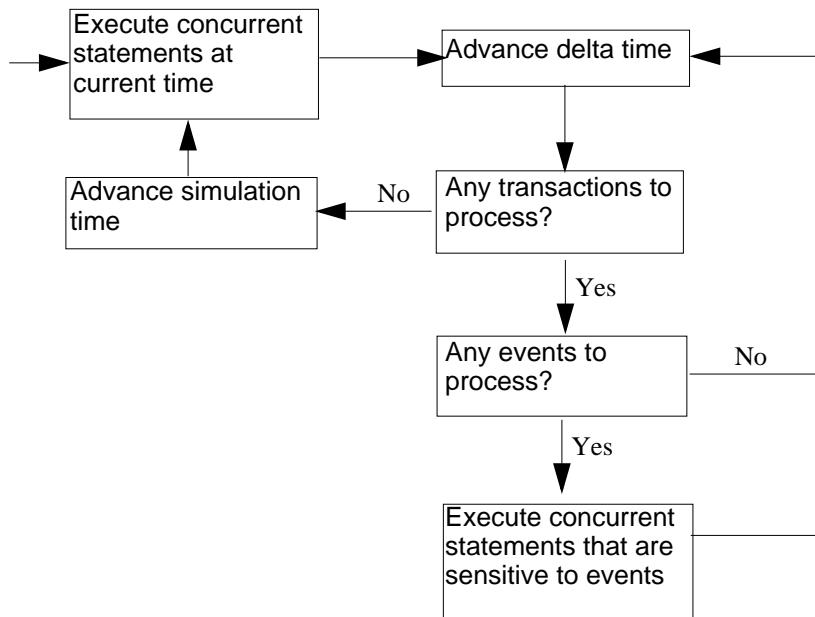

This mechanism in event-based simulators may cause unexpected results. Consider the following code snippet:

```

clk2 <= clk;

process (rst, clk)
begin
  if(rst = '0')then
    s0 <= '0';
  elsif(clk'event and clk='1') then
    s0 <= inp;
  end if;
end process;

process (rst, clk2)
begin
  if(rst = '0')then
    s1 <= '0';
  elsif(clk2'event and clk2='1') then
    s1 <= s0;
  end if;
end process;

```

In this example you have two synchronous processes, one triggered with *clk* and the other with *clk2*. To your surprise, the signals change in the *clk2* process on the same edge as they are set in the *clk* process. As a result, the value of *inp* appears at *s1* rather than *s0*.

During simulation an event on *clk* occurs (from the testbench). From this event ModelSim performs the "*clk2 <= clk*" assignment and the process which is sensitive to *clk*. Before advancing the simulation time, ModelSim finds that the process sensitive to *clk2* can also be

run. Since there are no delays present, the effect is that the value of *inp* appears at *s1* in the same simulation cycle.

In order to get the expected results, you must do one of the following:

- Insert a delay at every output
- Make certain to use the same clock
- Insert a delta delay

To insert a delta delay, you would modify the code like this:

```
process (rst, clk)
begin
  if(rst = '0')then
    s0 <= '0';
  elsif(clk'event and clk='1') then
    s0 <= inp;
    s0_delayed <= s0;
  end if;
end process;

process (rst, clk2)
begin
  if(rst = '0')then
    s1 <= '0';
  elsif(clk2'event and clk2='1') then
    s1 <= s0_delayed;
  end if;
end process;
```

The best way to debug delta delay problems is observe your signals in the List window. There you can see how values change at each delta time.

Detecting Infinite Zero-Delay Loops

If a large number of deltas occur without advancing time, it is usually a symptom of an infinite zero-delay loop in the design. In order to detect the presence of these loops, ModelSim defines a limit, the “iteration limit”, on the number of successive deltas that can occur. When ModelSim reaches the iteration limit, it issues a warning message.

The iteration limit default value is 1000. If you receive an iteration limit warning, first increase the iteration limit and try to continue simulation. You can set the iteration limit from the **Simulate > Runtime Options** menu or by modifying the **IterationLimit** variable in the *modelsim.ini*. See [Simulator Control Variables](#) for more information on modifying the *modelsim.ini* file.

If the problem persists, look for zero-delay loops. Run the simulation and look at the source code when the error occurs. Use the step button to step through the code and see which signals

or variables are continuously oscillating. Two common causes are a loop that has no exit, or a series of gates with zero delay where the outputs are connected back to the inputs.

Using the TextIO Package

To access the routines in TextIO, include the following statement in your VHDL source code:

```
USE std.textio.all;
```

A simple example using the package TextIO is:

```
USE std.textio.all;
ENTITY simple_textio IS
END;

ARCHITECTURE simple_behavior OF simple_textio IS
BEGIN
PROCESS
    VARIABLE i: INTEGER:= 42;
    VARIABLE LLL: LINE;
BEGIN
    WRITE (LLL, i);
    WRITELINE (OUTPUT, LLL);
    WAIT;
END PROCESS;
END simple_behavior;
```

Syntax for File Declaration

The VHDL'87 syntax for a file declaration is:

```
file identifier : subtype_indication is [ mode ] file_logical_name ;
```

where "file_logical_name" must be a string expression.

In newer versions of the 1076 spec, syntax for a file declaration is:

```
file identifier_list : subtype_indication [ file_open_information ] ;
```

where "file_open_information" is:

```
[open file_open_kind_expression] is file_logical_name
```

You can specify a full or relative path as the file_logical_name; for example (VHDL'87):

Normally if a file is declared within an architecture, process, or package, the file is opened when you start the simulator and is closed when you exit from it. If a file is declared in a subprogram, the file is opened when the subprogram is called and closed when execution RETURNS from the subprogram. Alternatively, the opening of files can be delayed until the first read or write by setting the **DelayFileOpen** variable in the *modelsim.ini* file. Also, the number of concurrently

open files can be controlled by the **ConcurrentFileLimit** variable. These variables help you manage a large number of files during simulation. See [Simulator Variables](#) for more details.

Using STD_INPUT and STD_OUTPUT Within the Tool

The standard VHDL'87 TextIO package contains the following file declarations:

```
file input: TEXT is in "STD_INPUT";
file output: TEXT is out "STD_OUTPUT";
```

Updated versions of the TextIO package contain these file declarations:

```
file input: TEXT open read_mode is "STD_INPUT";
file output: TEXT open write_mode is "STD_OUTPUT";
```

STD_INPUT is a file_logical_name that refers to characters that are entered interactively from the keyboard, and STD_OUTPUT refers to text that is displayed on the screen.

In ModelSim, reading from the STD_INPUT file allows you to enter text into the current buffer from a prompt in the Transcript pane. The lines written to the STD_OUTPUT file appear in the Transcript.

TextIO Implementation Issues

Writing Strings and Aggregates

A common error in VHDL source code occurs when a call to a WRITE procedure does not specify whether the argument is of type STRING or BIT_VECTOR. For example, the VHDL procedure:

```
WRITE (L, "hello");
```

will cause the following error:

```
ERROR: Subprogram "WRITE" is ambiguous.
```

In the TextIO package, the WRITE procedure is overloaded for the types STRING and BIT_VECTOR. These lines are reproduced here:

```
procedure WRITE(L: inout LINE; VALUE: in BIT_VECTOR;
    JUSTIFIED: in SIDE:= RIGHT; FIELD: in WIDTH := 0);

procedure WRITE(L: inout LINE; VALUE: in STRING;
    JUSTIFIED: in SIDE:= RIGHT; FIELD: in WIDTH := 0);
```

The error occurs because the argument "hello" could be interpreted as a string or a bit vector, but the compiler is not allowed to determine the argument type until it knows which function is being called.

The following procedure call also generates an error:

```
WRITE (L, "010101");
```

This call is even more ambiguous, because the compiler could not determine, even if allowed to, whether the argument "010101" should be interpreted as a string or a bit vector.

There are two possible solutions to this problem:

- Use a qualified expression to specify the type, as in:

```
WRITE (L, string'("hello"));
```

- Call a procedure that is not overloaded, as in:

```
WRITE_STRING (L, "hello");
```

The WRITE_STRING procedure simply defines the value to be a STRING and calls the WRITE procedure, but it serves as a shell around the WRITE procedure that solves the overloading problem. For further details, refer to the WRITE_STRING procedure in the io_utils package, which is located in the file *<install_dir>/modeltech/examples/misc/io_utils.vhd*.

Reading and Writing Hexadecimal Numbers

The reading and writing of hexadecimal numbers is not specified in standard VHDL. The Issues Screening and Analysis Committee of the VHDL Analysis and Standardization Group (ISAC-VASG) has specified that the TextIO package reads and writes only decimal numbers.

To expand this functionality, ModelSim supplies hexadecimal routines in the package io_utils, which is located in the file *<install_dir>/modeltech/examples/misc/io_utils.vhd*. To use these routines, compile the io_utils package and then include the following use clauses in your VHDL source code:

```
use std.textio.all;
use work.io_utils.all;
```

Dangling Pointers

Dangling pointers are easily created when using the TextIO package, because WRITELINE de-allocates the access type (pointer) that is passed to it. Following are examples of good and bad VHDL coding styles:

Bad VHDL (because L1 and L2 both point to the same buffer):

```
READLINE (infile, L1);      -- Read and allocate buffer
L2 := L1;                  -- Copy pointers
WRITELINE (outfile, L1);   -- Deallocate buffer
```

Good VHDL (because L1 and L2 point to different buffers):

```
READLINE (infile, L1);      -- Read and allocate buffer
L2 := new string'(L1.all);  -- Copy contents
WRITELINE (outfile, L1);   -- Deallocate buffer
```

The ENDLINE Function

The ENDLINE function described in the *IEEE Standard VHDL Language Reference Manual, IEEE Std 1076-1987* contains invalid VHDL syntax and cannot be implemented in VHDL. This is because access values must be passed as variables, but functions do not allow variable parameters.

Based on an ISAC-VASG recommendation the ENDLINE function has been removed from the TextIO package. The following test may be substituted for this function:

```
(L = NULL) OR (L'LENGTH = 0)
```

The ENDFILE Function

In the *VHDL Language Reference Manuals*, the ENDFILE function is listed as:

```
-- function ENDFILE (L: in TEXT) return BOOLEAN;
```

As you can see, this function is commented out of the standard TextIO package. This is because the ENDFILE function is implicitly declared, so it can be used with files of any type, not just files of type TEXT.

Using Alternative Input/Output Files

You can use the TextIO package to read and write to your own files. To do this, just declare an input or output file of type TEXT. For example, for an input file:

The VHDL'87 declaration is:

```
file myinput : TEXT is in "pathname.dat";
```

The VHDL'93 declaration is:

```
file myinput : TEXT open read_mode is "pathname.dat";
```

Then include the identifier for this file ("myinput" in this example) in the READLINE or WRITELINE procedure call.

Flushing the TEXTIO Buffer

Flushing of the TEXTIO buffer is controlled by the [UnbufferedOutput](#) variable in the *modelsim.ini* file.

Providing Stimulus

You can stimulate and test a design by reading vectors from a file, using them to drive values onto signals, and testing the results. A VHDL test bench has been included with the ModelSim install files as an example. Check for this file:

```
<install_dir>/modeltech/examples/misc/stimulus.vhd
```

VITAL Specification and Source Code

VITAL ASIC Modeling Specification

The IEEE 1076.4 VITAL ASIC Modeling Specification is available from the Institute of Electrical and Electronics Engineers, Inc.:

IEEE Customer Service
445 Hoes Lane
Piscataway, NJ 08854-1331

Tel: (732) 981-0060
Fax: (732) 981-1721
home page: <http://www.ieee.org>

VITAL source code

The source code for VITAL packages is provided in the directories:

```
/<install_dir>/vhdl_src/vital22b  
    /vital95  
    /vital2000
```

VITAL Packages

VITAL 1995 accelerated packages are pre-compiled into the **ieee** library in the installation directory. VITAL 2000 accelerated packages are pre-compiled into the **vital2000** library. If you need to use the newer library, you either need to change the ieee library mapping or add a **use** clause to your VHDL code to access the VITAL 2000 packages.

To change the ieee library mapping, issue the following command:

```
vmap ieee <modeltech>/vital2000
```

Or, alternatively, add use clauses to your code:

```
LIBRARY vital2000;
USE vital2000.vital_primitives.all;
USE vital2000.vital_timing.all;
USE vital2000.vital_memory.all;
```

Note that if your design uses two libraries -one that depends on vital95 and one that depends on vital2000 - then you will have to change the references in the source code to vital2000. Changing the library mapping will not work.

VITAL Compliance

A simulator is VITAL compliant if it implements the SDF mapping and if it correctly simulates designs using the VITAL packages, as outlined in the VITAL Model Development Specification. ModelSim is compliant with the IEEE 1076.4 VITAL ASIC Modeling Specification. In addition, ModelSim accelerates the VITAL_Timing, VITAL_Primitives, and VITAL_memory packages. The optimized procedures are functionally equivalent to the IEEE 1076.4 VITAL ASIC Modeling Specification (VITAL 1995 and 2000).

VITAL Compliance Checking

If you are using VITAL 2.2b, you must turn off the compliance checking either by not setting the attributes, or by invoking vcom with the option **-novitalcheck**.

Compiling and Simulating with Accelerated VITAL Packages

vcom automatically recognizes that a VITAL function is being referenced from the **ieee** library and generates code to call the optimized built-in routines.

Invoke with the **-novital** option if you do not want to use the built-in VITAL routines (when debugging for instance). To exclude all VITAL functions, use **-novital all**:

```
vcom -novital all design.vhd
```

To exclude selected VITAL functions, use one or more **-novital <fname>** options:

```
vcom -novital VitalTimingCheck -novital VitalAND design.vhd
```

The **-novital** switch only affects calls to VITAL functions from the design units currently being compiled. Pre-compiled design units referenced from the current design units will still call the built-in functions unless they too are compiled with the **-novital** option.

ModelSim VITAL built-ins will be updated in step with new releases of the VITAL packages.

Util Package

The util package contains various VHDL utilities that you can run as commands. The package is part of the modelsim_lib library, which is located in the /modeltech tree and is mapped in the default *modelsim.ini* file.

To include the utilities in this package, add the following lines similar to your VHDL code:

```
library modelsim_lib;
use modelsim_lib.util.all;
```

get_resolution

The get_resolution utility returns the current simulator resolution as a real number. For example, a resolution of 1 femtosecond (1 fs) corresponds to 1e-15.

Syntax

```
resval := get_resolution;
```

Returns

Name	Type	Description
resval	real	The simulator resolution represented as a real

Arguments

None

Related functions

- [to_real\(\)](#)
- [to_time\(\)](#)

Example

If the simulator resolution is set to 10ps, and you invoke the command:

```
resval := get_resolution;
```

the value returned to resval would be 1e-11.

init_signal_driver()

The init_signal_driver() utility drives the value of a VHDL signal or Verilog net onto an existing VHDL signal or Verilog net. This allows you to drive signals or nets at any level of the design hierarchy from within a VHDL architecture (e.g., a testbench).

See [init_signal_driver](#) for complete details.

init_signal_spy()

The init_signal_spy() utility mirrors the value of a VHDL signal or Verilog register/net onto an existing VHDL signal or Verilog register. This allows you to reference signals, registers, or nets at any level of hierarchy from within a VHDL architecture (such as a testbench).

See [init_signal_spy](#) for complete details.

signal_force()

The signal_force() utility forces the value specified onto an existing VHDL signal or Verilog register or net. This allows you to force signals, registers, or nets at any level of the design hierarchy from within a VHDL architecture (e.g., a testbench). A signal_force works the same as the [force](#) command with the exception that you cannot issue a repeating force.

See [signal_force](#) for complete details.

signal_release()

The signal_release() utility releases any force that was applied to an existing VHDL signal or Verilog register or net. This allows you to release signals, registers, or nets at any level of the design hierarchy from within a VHDL architecture (e.g., a testbench). A signal_release works the same as the [noforce](#) command.

See [signal_release](#) for complete details.

to_real()

The to_real() utility converts the physical type time value into a real value with respect to the current value of simulator resolution. The precision of the converted value is determined by the simulator resolution. For example, if you were converting 1900 fs to a real and the simulator resolution was ps, then the real value would be rounded to 2.0 (i.e., 2 ps).

Syntax

```
realval := to_real(timeval);
```

Returns

Name	Type	Description
realval	real	The time value represented as a real with respect to the simulator resolution

Arguments

Name	Type	Description
timeval	time	The value of the physical type time

Related functions

- [get_resolution](#)
- [to_time\(\)](#)

Example

If the simulator resolution is set to ps, and you enter the following function:

```
realval := to_real(12.99 ns);
```

then the value returned to realval would be 12990.0. If you wanted the returned value to be in units of nanoseconds (ns) instead, you would use the [get_resolution](#) function to recalculate the value:

```
realval := 1e+9 * (to_real(12.99 ns)) * get_resolution();
```

If you wanted the returned value to be in units of femtoseconds (fs), you would enter the function this way:

```
realval := 1e+15 * (to_real(12.99 ns)) * get_resolution();
```

to_time()

The `to_time()` utility converts a real value into a time value with respect to the current simulator resolution. The precision of the converted value is determined by the simulator resolution. For example, if you converted 5.9 to a time and the simulator resolution was 1 ps, then the time value would be rounded to 6 ps.

Syntax

```
timeval := to_time(realval);
```

Returns

Name	Type	Description
timeval	time	The real value represented as a physical type time with respect to the simulator resolution

Arguments

Name	Type	Description
realval	real	The value of the type real

Related functions

- [get_resolution](#)
- [to_real\(\)](#)

Example

If the simulator resolution is set to 1 ps, and you enter the following function:

```
timeval := to_time(72.49);
```

then the value returned to timeval would be 72 ps.

Modeling Memory

As a VHDL user, you might be tempted to model a memory using signals. Two common simulator problems are the likely result:

- You may get a "memory allocation error" message, which typically means the simulator ran out of memory and failed to allocate enough storage.
- Or, you may get very long load, elaboration, or run times.

These problems are usually explained by the fact that signals consume a substantial amount of memory (many dozens of bytes per bit), all of which needs to be loaded or initialized before your simulation starts.

Modeling memory with variables or protected types instead provides some excellent performance benefits:

- storage required to model the memory can be reduced by 1-2 orders of magnitude
- startup and run times are reduced
- associated memory allocation errors are eliminated

In the VHDL example below, we illustrate three alternative architectures for entity *memory*:

- Architecture *bad_style_87* uses a vhdl signal to store the ram data.
- Architecture *style_87* uses variables in the *memory* process
- Architecture *style_93* uses variables in the architecture.

For large memories, architecture *bad_style_87* runs many times longer than the other two, and uses much more memory. This style should be avoided.

Architectures *style_87* and *style_93* work with equal efficiency. However, VHDL 1993 offers additional flexibility because the ram storage can be shared between multiple processes. For example, a second process is shown that initializes the memory; you could add other processes to create a multi-ported memory.

To implement this model, you will need functions that convert vectors to integers. To use it you will probably need to convert integers to vectors.

Example functions are provided below in package "conversions".

For completeness sake we also show an example using VHDL 2002 protected types, though in this example, protected types offer no advantage over shared variables.

VHDL87 and VHDL93 Example

```
library ieee;
use ieee.std_logic_1164.all;
use work.conversions.all;

entity memory is
    generic(add_bits : integer := 12;
            data_bits : integer := 32);
    port(add_in : in std_ulogic_vector(add_bits-1 downto 0);
          data_in : in std_ulogic_vector(data_bits-1 downto 0);
          data_out : out std_ulogic_vector(data_bits-1 downto 0);
          cs, mwrite : in std_ulogic;
          do_init : in std_ulogic);
    subtype word is std_ulogic_vector(data_bits-1 downto 0);
    constant nwords : integer := 2 ** add_bits;
    type ram_type is array(0 to nwords-1) of word;
end;

architecture style_93 of memory is
-----
shared variable ram : ram_type;
-----
begin
memory:
process (cs)
    variable address : natural;
begin
    if rising_edge(cs) then
        address := sulp_to_natural(add_in);
        if (mwrite = '1') then
            ram(address) := data_in;
        end if;
        data_out <= ram(address);
    end if;
end process memory;
-- illustrates a second process using the shared variable
initialize:
process (do_init)
    variable address : natural;
begin
    if rising_edge(do_init) then
        for address in 0 to nwords-1 loop
            ram(address) := data_in;
        end loop;
    end if;
end process initialize;
end architecture style_93;

architecture style_87 of memory is
begin
memory:
process (cs)
-----
variable ram : ram_type;
-----
variable address : natural;
```

```

begin
    if rising_edge(cs) then
        address := sulv_to_natural(add_in);
        if (mwrite = '1') then
            ram(address) := data_in;
        end if;
        data_out <= ram(address);
    end if;
end process;
end style_87;

architecture bad_style_87 of memory is
-----
begin
memory:
process (cs)
    variable address : natural := 0;
    begin
        if rising_edge(cs) then
            address := sulv_to_natural(add_in);
            if (mwrite = '1') then
                ram(address) <= data_in;
                data_out <= data_in;
            else
                data_out <= ram(address);
            end if;
        end if;
    end process;
end bad_style_87;

-----
library ieee;
use ieee.std_logic_1164.all;

package conversions is
    function sulv_to_natural(x : std_ulogic_vector) return
        natural;
    function natural_to_sulv(n, bits : natural) return
        std_ulogic_vector;
end conversions;

package body conversions is

    function sulv_to_natural(x : std_ulogic_vector) return
        natural is
        variable n : natural := 0;
        variable failure : boolean := false;
    begin
        assert (x'high - x'low + 1) <= 31
            report "Range of sulv_to_natural argument exceeds
                natural range"
            severity error;
        for i in x'range loop
            n := n * 2;
            case x(i) is

```

```
        when '1' | 'H' => n := n + 1;
        when '0' | 'L' => null;
        when others      => failure := true;
    end case;
end loop;
assert not failure
    report "sulv_to_natural cannot convert indefinite
        std_ulogic_vector"
    severity error;

if failure then
    return 0;
else
    return n;
end if;
end sulv_to_natural;

function natural_to_sulv(n, bits : natural) return
    std_ulogic_vector is
    variable x : std_ulogic_vector(bits-1 downto 0) :=
        (others => '0');
    variable tempn : natural := n;
begin
    for i in x'reverse_range loop
        if (tempn mod 2) = 1 then
            x(i) := '1';
        end if;
        tempn := tempn / 2;
    end loop;
    return x;
end natural_to_sulv;

end conversions;
```

VHDL02 example

```
-----
-- Source:      sp_syn_ram_protected.vhd
-- Component:   VHDL synchronous, single-port RAM
-- Remarks:    Various VHDL examples: random access memory (RAM)
-----

LIBRARY ieee;
USE ieee.std_logic_1164.ALL;
USE ieee.numeric_std.ALL;

ENTITY sp_syn_ram_protected IS
  GENERIC (
    data_width : positive := 8;
    addr_width : positive := 3
  );
  PORT (
    inclk      : IN  std_logic;
    outclk     : IN  std_logic;
    we         : IN  std_logic;
    addr       : IN  unsigned(addr_width-1 DOWNTO 0);
    data_in    : IN  std_logic_vector(data_width-1 DOWNTO 0);
    data_out   : OUT std_logic_vector(data_width-1 DOWNTO 0)
  );
END sp_syn_ram_protected;

ARCHITECTURE intarch OF sp_syn_ram_protected IS

  TYPE mem_type IS PROTECTED
    PROCEDURE write ( data : IN std_logic_vector(data_width-1 downto 0);
                      addr : IN unsigned(addr_width-1 DOWNTO 0));
    IMPURE FUNCTION read   ( addr : IN unsigned(addr_width-1 DOWNTO 0))
  RETURN
    std_logic_vector;
  END PROTECTED mem_type;

  TYPE mem_type IS PROTECTED BODY
    TYPE mem_array IS ARRAY (0 TO 2**addr_width-1) OF
      std_logic_vector(data_width-1 DOWNTO 0);
    VARIABLE mem : mem_array;

    PROCEDURE write ( data : IN std_logic_vector(data_width-1 downto 0);
                      addr : IN unsigned(addr_width-1 DOWNTO 0)) IS
    BEGIN
      mem(to_integer(addr)) := data;
    END;

    IMPURE FUNCTION read   ( addr : IN unsigned(addr_width-1 DOWNTO 0))
  RETURN
    std_logic_vector IS
    BEGIN
      return mem(to_integer(addr));
    END;

  END PROTECTED BODY mem_type;
```

```
SHARED VARIABLE memory : mem_type;

BEGIN

    ASSERT data_width <= 32
        REPORT "### Illegal data width detected"
        SEVERITY failure;

    control_proc : PROCESS (inclk, outclk)

    BEGIN
        IF (inclk'event AND inclk = '1') THEN
            IF (we = '1') THEN
                memory.write(data_in, addr);
            END IF;
        END IF;

        IF (outclk'event AND outclk = '1') THEN
            data_out <= memory.read(addr);
        END IF;
    END PROCESS;

END intarch;

-----
-- Source:      ram_tb.vhd
-- Component:   VHDL testbench for RAM memory example
-- Remarks:     Simple VHDL example: random access memory (RAM)
-----

LIBRARY ieee;
USE ieee.std_logic_1164.ALL;
USE ieee.numeric_std.ALL;

ENTITY ram_tb IS
END ram_tb;

ARCHITECTURE testbench OF ram_tb IS

    -----
    -- Component declaration single-port RAM
    -----
COMPONENT sp_syn_ram_protected
    GENERIC (
        data_width : positive := 8;
        addr_width : positive := 3
    );
    PORT (
        inclk      : IN  std_logic;
        outclk     : IN  std_logic;
        we         : IN  std_logic;
        addr       : IN  unsigned(addr_width-1 DOWNTO 0);
        data_in    : IN  std_logic_vector(data_width-1 DOWNTO 0);
        data_out   : OUT std_logic_vector(data_width-1 DOWNTO 0)
    );
END COMPONENT;
```

```

-- Intermediate signals and constants
-----
SIGNAL    addr      : unsigned(19 DOWNTO 0);
SIGNAL    inaddr    : unsigned(3 DOWNTO 0);
SIGNAL    outaddr   : unsigned(3 DOWNTO 0);
SIGNAL    data_in   : unsigned(31 DOWNTO 0);
SIGNAL    data_in1  : std_logic_vector(7 DOWNTO 0);
SIGNAL    data_spl  : std_logic_vector(7 DOWNTO 0);
SIGNAL    we        : std_logic;
SIGNAL    clk       : std_logic;
CONSTANT clk_pd   : time := 100 ns;

BEGIN

-----  

-- instantiations of single-port RAM architectures.  

-- All architectures behave equivalently, but they  

-- have different implementations. The signal-based  

-- architecture (rtl) is not a recommended style.
-----  

spram1 : entity work.sp_syn_ram_protected
  GENERIC MAP (
    data_width => 8,
    addr_width => 12)
  PORT MAP (
    inclk     => clk,
    outclk    => clk,
    we        => we,
    addr      => addr(11 downto 0),
    data_in   => data_in1,
    data_out  => data_spl);

-----  

-- clock generator
-----  

clock_driver : PROCESS
BEGIN
  clk <= '0';
  WAIT FOR clk_pd / 2;
  LOOP
    clk <= '1', '0' AFTER clk_pd / 2;
    WAIT FOR clk_pd;
  END LOOP;
END PROCESS;

-----  

-- data-in process
-----  

datain_drivers : PROCESS(data_in)
BEGIN
  data_in1 <= std_logic_vector(data_in(7 downto 0));
END PROCESS;

-----  

-- simulation control process
-----  

ctrl_sim : PROCESS

```

```
BEGIN
    FOR i IN 0 TO 1023 LOOP
        we      <= '1';
        data_in <= to_unsigned(9000 + i, data_in'length);
        addr    <= to_unsigned(i, addr'length);
        inaddr  <= to_unsigned(i, inaddr'length);
        outaddr <= to_unsigned(i, outaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        data_in <= to_unsigned(7 + i, data_in'length);
        addr    <= to_unsigned(1 + i, addr'length);
        inaddr  <= to_unsigned(1 + i, inaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        data_in <= to_unsigned(3, data_in'length);
        addr    <= to_unsigned(2 + i, addr'length);
        inaddr  <= to_unsigned(2 + i, inaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        data_in <= to_unsigned(30330, data_in'length);
        addr    <= to_unsigned(3 + i, addr'length);
        inaddr  <= to_unsigned(3 + i, inaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        we      <= '0';
        addr    <= to_unsigned(i, addr'length);
        outaddr <= to_unsigned(i, outaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        addr    <= to_unsigned(1 + i, addr'length);
        outaddr <= to_unsigned(1 + i, outaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        addr    <= to_unsigned(2 + i, addr'length);
        outaddr <= to_unsigned(2 + i, outaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

        addr    <= to_unsigned(3 + i, addr'length);
        outaddr <= to_unsigned(3 + i, outaddr'length);
        WAIT UNTIL clk'EVENT AND clk = '0';
        WAIT UNTIL clk'EVENT AND clk = '0';

    END LOOP;
    ASSERT false
        REPORT "### End of Simulation!"
        SEVERITY failure;
END PROCESS;

END testbench;
```

Affecting Performance by Cancelling Scheduled Events

Performance will suffer if events are scheduled far into the future but then cancelled before they take effect. This situation will act like a memory leak and slow down simulation.

In VHDL this situation can occur several ways. The most common are waits with time-out clauses and projected waveforms in signal assignments.

The following code shows a wait with a time-out:

```

signals synch : bit := '0';
...
p: process
begin
    wait for 10 ms until synch = 1;
end process;

synch <= not synch after 10 ns;

```

At time 0, process *p* makes an event for time 10ms. When *synch* goes to 1 at 10 ns, the event at 10 ms is marked as cancelled but not deleted, and a new event is scheduled at 10ms + 10ns. The cancelled events are not reclaimed until time 10ms is reached and the cancelled event is processed. As a result there will be 500000 (10ms/20ns) cancelled but un-deleted events. Once 10ms is reached, memory will no longer increase because the simulator will be reclaiming events as fast as they are added.

For projected waveforms the following would behave the same way:

```

signals synch : bit := '0';
...
p: process(synch)
begin
    output <= '0', '1' after 10ms;
end process;

synch <= not synch after 10 ns;

```

Converting an Integer Into a bit_vector

The following code demonstrates how to convert an integer into a bit_vector.

```
library ieee;
use ieee.numeric_bit.ALL;

entity test is
end test;

architecture only of test is
    signal s1 : bit_vector(7 downto 0);
    signal int : integer := 45;
begin
    p:process
    begin
        wait for 10 ns;
        s1 <= bit_vector(to_signed(int,8));
    end process p;
end only;
```

Chapter 7

Verilog and SystemVerilog Simulation

This chapter describes how to compile and simulate Verilog and SystemVerilog designs with ModelSim. ModelSim implements the Verilog language as defined by the IEEE Standards 1364-1995 and 1364-2005.

The following functionality is partially implemented in ModelSim:

- Verilog Procedural Interface (VPI) (see `/<install_dir>/modeltech/docs/technotes/Verilog_VPI.note` for details)
- IEEE Std P1800-2005 SystemVerilog (see `/<install_dir>/modeltech/docs/technotes/sysvlog.note` for implementation details)

Terminology

This chapter uses the term “Verilog” to represent both Verilog and SystemVerilog, unless otherwise noted.

Basic Verilog Flow

Simulating Verilog designs with ModelSim includes four general steps:

1. Compile your Verilog code into one or more libraries using the [vlog](#) command. See [Compiling Verilog Files](#) for details.
2. Load your design with the [vsim](#) command. See [Simulating Verilog Designs](#) for details.
3. Run and debug your design.

Compiling Verilog Files

The first time you compile a design there is a two-step process:

1. Create a working library with [vlib](#) or select **File > New > Library**.
2. Compile the design using [vlog](#) or select **Compile > Compile**.

Creating a Working Library

Before you can compile your design, you must create a library in which to store the compilation results. Use the **vlib** command or select **File > New > Library** to create a new library. For example:

```
vlib work
```

This creates a library named **work**. By default compilation results are stored in the **work** library.

The **work** library is actually a subdirectory named *work*. This subdirectory contains a special file named *_info*. Do not create libraries using UNIX commands – always use the **vlib** command.

See [Design Libraries](#) for additional information on working with libraries.

Invoking the Verilog Compiler

The Verilog compiler, **vlog**, compiles Verilog source code into retargetable, executable code. The library format is compatible across all supported platforms, and you can simulate your design on any platform without having to recompile your design.

As the design compiles, the resulting object code for modules and UDPs is generated into a library. As noted above, the compiler places results into the work library by default. You can specify an alternate library with the **-work** argument.

Example 7-1. Invocation of the Verilog Compiler

Here is a sample invocation of **vlog**:

```
vlog top.v +libext+.v+.u -y vlog_lib
```

After compiling *top.v*, **vlog** scans the *vlog_lib* library for files with modules with the same name as primitives referenced, but undefined in *top.v*. The use of **+libext+.v+.u** implies filenames with a *.v* or *.u* suffix (any combination of suffixes may be used). Only referenced definitions are compiled.

Parsing SystemVerilog Keywords

With standard Verilog files (*<filename>.v*), **vlog** will not automatically parse SystemVerilog keywords. SystemVerilog keywords are parsed when any of the following situations exists:

- any file within the design contains the *.sv* file extension;
- or, the **-sv** argument is used with the **vlog** command.

Here are two examples of the `vlog` command that enable SystemVerilog features and keywords in ModelSim:

```
vlog testbench.sv top.v memory.v cache.v
vlog -sv testbench.v proc.v
```

In the first example, the `.sv` extension for *testbench* automatically instructs ModelSim to parse SystemVerilog keywords. The `-sv` option used in the second example enables SystemVerilog features and keywords.

Though a primary goal of the SystemVerilog standardization efforts has been to ensure full backward compatibility with the Verilog standard, there is an issue with keywords.

SystemVerilog adds several new keywords to the Verilog language (see Table B-1 in Appendix B of the P1800 SystemVerilog standard). If your design uses one of these keywords as a regular identifier for a variable, module, task, function, etc., your design will not compile in ModelSim.

Incremental Compilation

ModelSim Verilog supports incremental compilation of designs. Unlike other Verilog simulators, there is no requirement that you compile the entire design in one invocation of the compiler.

You are not required to compile your design in any particular order (unless you are using SystemVerilog packages; see note below) because all module and UDP instantiations and external hierarchical references are resolved when the design is loaded by the simulator.

Note



Compilation order may matter when using SystemVerilog packages. As stated in the IEEE std p1800-2005 LRM, section entitled *Referencing data in packages*, which states: "Packages must exist in order for the items they define to be recognized by the scopes in which they are imported."

Incremental compilation is made possible by deferring these bindings, and as a result some errors cannot be detected during compilation. Commonly, these errors include: modules that were referenced but not compiled, incorrect port connections, and incorrect hierarchical references.

Example 7-2. Incremental Compilation Example

Contents of `testbench.sv`

```
module testbench;
    timeunit 1ns;
    timeprecision 10ps;
    bit d=1, clk = 0;
    wire q;
    initial
        for (int cycles=0; cycles < 100; cycles++)
            #100 clk = !clk;

    design dut(q, d, clk);
endmodule
```

Contents of design.v:

```
module design(output bit q, input bit d, clk);
    timeunit 1ns;
    timeprecision 10ps;
    always @(posedge clk)
        q = d;
endmodule
```

Compile the design incrementally as follows:

```
ModelSim> vlog testbench.sv
.
# Top level modules:
#      testbench
ModelSim> vlog -sv test1.v
.
# Top level modules:
#      dut
```

Note that the compiler lists each module as a top-level module, although, ultimately, only *testbench* is a top-level module. If a module is not referenced by another module compiled in the same invocation of the compiler, then it is listed as a top-level module. This is just an informative message and can be ignored during incremental compilation.

The message is more useful when you compile an entire design in one invocation of the compiler and need to know the top-level module names for the simulator. For example,

```
% vlog top.v and2.v or2.v
-- Compiling module top
-- Compiling module and2
-- Compiling module or2
Top level modules:
top
```

Automatic Incremental Compilation with -incr

The most efficient method of incremental compilation is to manually compile only the modules that have changed. However, this is not always convenient, especially if your source files have compiler directive interdependencies (such as macros). In this case, you may prefer to compile

your entire design along with the **-incr** argument. This causes the compiler to automatically determine which modules have changed and generate code only for those modules.

The following is an example of how to compile a design with automatic incremental compilation:

```
% vlog -incr top.v and2.v or2.v
-- Compiling module top
-- Compiling module and2
-- Compiling module or2

Top level modules:
    top
```

Now, suppose that you modify the functionality of the *or2* module:

```
% vlog -incr top.v and2.v or2.v
-- Skipping module top
-- Skipping module and2
-- Compiling module or2

Top level modules:
    top
```

The compiler informs you that it skipped the modules *top* and *and2*, and compiled *or2*.

Automatic incremental compilation is intelligent about when to compile a module. For example, changing a comment in your source code does not result in a recompile; however, changing the compiler command line arguments results in a recompile of all modules.

Note



Changes to your source code that do not change functionality but that do affect source code line numbers (such as adding a comment line) *will* cause all affected modules to be recompiled. This happens because debug information must be kept current so that ModelSim can trace back to the correct areas of the source code.

Library Usage

All modules and UDPs in a Verilog design must be compiled into one or more libraries. One library is usually sufficient for a simple design, but you may want to organize your modules into various libraries for a complex design. If your design uses different modules having the same name, then you are required to put those modules in different libraries because design unit names must be unique within a library.

The following is an example of how you may organize your ASIC cells into one library and the rest of your design into another:

```
% vlib work
% vlib asiclib
% vlog -work asiclib and2.v or2.v
-- Compiling module and2
-- Compiling module or2

Top level modules:
    and2
    or2
% vlog top.v
-- Compiling module top

Top level modules:
    top
```

Note that the first compilation uses the **-work asiclib** argument to instruct the compiler to place the results in the **asiclib** library rather than the default **work** library.

Library Search Rules for vlog

Since instantiation bindings are not determined at compile time, you must instruct the simulator to search your libraries when loading the design. The top-level modules are loaded from the library named **work** unless you prefix the modules with the **<library>**. option. All other Verilog instantiations are resolved in the following order:


- Search libraries specified with **-Lf** arguments in the order they appear on the command line.
- Search the library specified in the [Verilog-XL uselib Compiler Directive](#) section.
- Search libraries specified with **-L** arguments in the order they appear on the command line.
- Search the **work** library.
- Search the library explicitly named in the special escaped identifier instance name.

Handling Sub-Modules with Common Names

Sometimes in one design you need to reference two different modules that have the same name. This situation can occur if you have hierarchical modules organized into separate libraries, and you have commonly-named sub-modules in the libraries that have different definitions. This may happen if you are using vendor-supplied libraries.

For example, say you have the following design configuration:

Example 7-3. Sub-Modules with Common Names

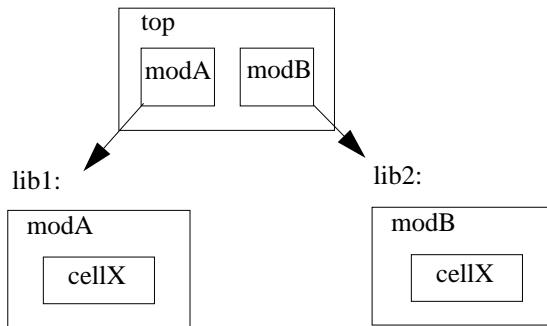

The normal library search rules fail in this situation. For example, if you load the design as follows:

```
vsim -L lib1 -L lib2 top
```

both instantiations of *cellX* resolve to the *lib1* version of *cellX*. On the other hand, if you specify **-L lib2 -L lib1**, both instantiations of *cellX* resolve to the *lib2* version of *cellX*.

To handle this situation, ModelSim implements a special interpretation of the expression **-L work**. When you specify **-L work** first in the search library arguments you are directing **vsim** to search for the instantiated module or UDP in the library that contains the module that does the instantiation.

In the example above you would invoke **vsim** as follows:

```
vsim -L work -L lib1 -L lib2 top
```

SystemVerilog Multi-File Compilation Issues

Declarations in Compilation Unit Scope

SystemVerilog allows the declaration of types, variables, functions, tasks, and other constructs in compilation unit scope (**\$unit**). The visibility of declarations in **\$unit** scope does not extend outside the current compilation unit. Thus, it is important to understand how compilation units are defined by the tool during compilation.

By default, **vlog** operates in Single File Compilation Unit mode (SFCU). This means the visibility of declarations in **\$unit** scope terminates at the end of each source file. Visibility does not carry forward from one file to another, except when a module, interface, or package declaration begins in one file and ends in another file. In that case, the compilation unit spans from the file containing the beginning of the declaration to the file containing the end of the declaration.

vlog also supports a non-default behavior called Multi File Compilation Unit mode (MFCU). In MFCU mode, **vlog** compiles all files given on the command line into one compilation unit. You can invoke **vlog** in MFCU mode as follows:

- For a specific compilation -- with the `-mfcu` argument to **vlog**.
- For all compilations -- by setting the variable **MultiFileCompilationUnit = 1** in the *modelsim.ini* file.

By using either of these methods, you allow declarations in **\$unit** scope to remain in effect throughout the compilation of all files.

In case you have made MFCU the default behavior by setting **MultiFileCompilationUnit = 1** in your *modelsim.ini* file, it is possible to override the default behavior on specific compilations by using the `-sfcu` argument to **vlog**.

Macro Definitions and Compiler Directives in Compilation Unit Scope

According to the SystemVerilog IEEE Std p1800-2005 LRM, the visibility of macro definitions and compiler directives span the lifetime of a single compilation unit. By default, this means the definitions of macros and settings of compiler directives terminate at the end of each source file. They do not carry forward from one file to another, except when a module, interface, or package declaration begins in one file and ends in another file. In that case, the compilation unit spans from the file containing the beginning of the definition to the file containing the end of the definition.

See [Declarations in Compilation Unit Scope](#) for instructions on how to control **vlog**'s handling of compilation units.

Note

 Compiler directives revert to their default values at the end of a compilation unit.

If a compiler directive is specified as an option to the compiler, this setting is used for all compilation units present in the current compilation.

Verilog-XL Compatible Compiler Arguments

The compiler arguments listed below are equivalent to Verilog-XL arguments and may ease the porting of a design to ModelSim. See the **vlog** command for a description of each argument.

```
+define+<macro_name>[=<macro_text>]
+delay_mode_distributed
+delay_mode_path
+delay_mode_unit
+delay_mode_zero
-f <filename>
+incdir+<directory>
+mindelays
+maxdelays
+nowarn<mnemonic>
+typdelays
-u
```

Arguments Supporting Source Libraries

The compiler arguments listed below support source libraries in the same manner as Verilog-XL. See the [vlog](#) command for a description of each argument.

Note that these source libraries are very different from the libraries that the ModelSim compiler uses to store compilation results. You may find it convenient to use these arguments if you are porting a design to ModelSim or if you are familiar with these arguments and prefer to use them.

Source libraries are searched after the source files on the command line are compiled. If there are any unresolved references to modules or UDPs, then the compiler searches the source libraries to satisfy them. The modules compiled from source libraries may in turn have additional unresolved references that cause the source libraries to be searched again. This process is repeated until all references are resolved or until no new unresolved references are found. Source libraries are searched in the order they appear on the command line.

```
-v <filename>
-y <directory>
+libext+<suffix>
+librescan
+nolibcell
-R [<simargs>]
```

Verilog-XL uselib Compiler Directive

The `uselib compiler directive is an alternative source library management scheme to the **-v**, **-y**, and **+libext** compiler arguments. It has the advantage that a design may reference different modules having the same name. You compile designs that contain `uselib directive statements using the **-compile_uselibs** argument (described below) to [vlog](#).

The syntax for the `uselib directive is:

```
`uselib <library_reference>...
```

where <library_reference> can be one or more of the following:

- **dir=<library_directory>**, which is equivalent to the command line argument:
`-y <library_directory>`
- **file=<library_file>**, which is equivalent to the command line argument:
`-v <library_file>`
- **libext=<file_extension>**, which is equivalent to the command line argument:
`+libext+<file_extension>`
- **lib=<library_name>**, which references a library for instantiated objects. This behaves similarly to a LIBRARY/USE clause in VHDL. You must ensure the correct mappings are set up if the library does not exist in the current working directory. The **-compile_uselibs** argument does not affect this usage of **`uselib`**.

For example, the following directive

```
`uselib dir=/h/vendorA libext=.v
```

is equivalent to the following command line arguments:

```
-y /h/vendorA +libext+.v
```

Since the **`uselib`** directives are embedded in the Verilog source code, there is more flexibility in defining the source libraries for the instantiations in the design. The appearance of a **`uselib`** directive in the source code explicitly defines how instantiations that follow it are resolved, completely overriding any previous **`uselib`** directives.

An important feature of ‘uselib’ is to allow a design to reference multiple modules having the same name, therefore independent compilation of the source libraries referenced by the ‘uselib’ directives is required.

Each source library should be compiled into its own object library. The compilation of the code containing the ‘uselib’ directives only records which object libraries to search for each module instantiation when the design is loaded by the simulator.

Because the ‘uselib’ directive is intended to reference source libraries, the simulator must infer the object libraries from the library references. The rule is to assume an object library named `work` in the directory defined in the library reference:

```
dir=<library_directory>
```

or the directory containing the file in the library reference

```
file=<library_file>
```

The simulator will ignore a library reference `libext=<file_extension>`. For example, the following ‘uselib’ directives infer the same object library:

```
'uselib dir=/h/vendorA
'uselib file=/h/vendorA/libcells.v
```

In both cases the simulator assumes that the library source is compiled into the object library:

```
/h/vendorA/work
```

The simulator also extends the ‘uselib directive to explicitly specify the object library with the library reference lib=<library_name>. For example:

```
'uselib lib=/h/vendorA/work
```

The library name can be a complete path to a library, or it can be a logical library name defined with the vmap command.

-compile_uselibs Argument

Use the **-compile_uselibs** argument to [vlog](#) to reference `uselib directives. The argument finds the source files referenced in the directive, compiles them into automatically created object libraries, and updates the *modelsim.ini* file with the logical mappings to the libraries.

When using **-compile_uselibs**, ModelSim determines into which directory to compile the object libraries by choosing, in order, from the following three values:

- The directory name specified by the **-compile_uselibs** argument. For example,

```
-compile_uselibs=./mydir
```
- The directory specified by the MTI_USELIB_DIR environment variable (see [Environment Variables](#))
- A directory named *mti_uselibs* that is created in the current working directory

The following code fragment and compiler invocation show how two different modules that have the same name can be instantiated within the same design:

```
module top;
  `uselib dir=/h/vendorA libext=.v
  NAND2 u1(n1, n2, n3);
  `uselib dir=/h/vendorB libext=.v
  NAND2 u2(n4, n5, n6);
endmodule
```

```
vlog -compile_uselibs top
```

This allows the NAND2 module to have different definitions in the vendorA and vendorB libraries.

uselib is Persistent

As mentioned above, the appearance of a `uselib directive in the source code explicitly defines how instantiations that follow it are resolved. This may result in unexpected consequences. For example, consider the following compile command:

```
vlog -compile_uselibs dut.v srtr.v
```

Assume that *dut.v* contains a `uselib directive. Since *srtr.v* is compiled after *dut.v*, the `uselib directive is still in effect. When *srtr* is loaded it is using the `uselib directive from *dut.v* to decide where to locate modules. If this is not what you intend, then you need to put an empty `uselib at the end of *dut.v* to "close" the previous `uselib statement.

Verilog Configurations

The Verilog 2001 specification added configurations. Configurations specify how a design is "assembled" during the elaboration phase of simulation. Configurations actually consist of two pieces: the library mapping and the configuration itself. The library mapping is used at compile time to determine into which libraries the source files are to be compiled. Here is an example of a simple library map file:

```
library work      ../../top.v;
library rtlLib    lrm_ex_top.v;
library gateLib   lrm_ex_adder.vg;
library aLib       lrm_ex_adder.v;
```

Here is an example of a library map file that uses **-inmdir**:

```
library lib1 src_dir/*.v -inmdir ../../include_dir2, ..., my_inmdir;
```

The name of the library map file is arbitrary. You specify the library map file using the **-libmap** argument to the **vlog** command. Alternatively, you can specify the file name as the first item on the **vlog** command line, and the compiler reads it as a library map file.

The library map file must be compiled along with the Verilog source files. Multiple map files are allowed but each must be preceded by the **-libmap** argument.

The library map file and the configuration can exist in the same or different files. If they are separate, only the map file needs the **-libmap** argument. The configuration is treated as any other Verilog source file.

Configurations and the Library Named work

The library named "work" is treated specially by ModelSim (see [The Library Named "work"](#) for details) for Verilog configurations. Consider the following code example:

```
config cfg;
  design top;
  instance top.u1 use work.u1;
endconfig
```

In this case, *work.u1* indicates to load *u1* from the current library.

Verilog Generate Statements

ModelSim implements the rules adopted for Verilog 2005, because the Verilog 2001 rules for generate statements had numerous inconsistencies and ambiguities. Most of the 2005 rules are backwards compatible, but there is one key difference related to name visibility.

Name Visibility in Generate Statements

Consider the following code example:

```
module m;
  parameter p = 1;

  generate
    if (p)
      integer x = 1;
    else
      real x = 2.0;
  endgenerate

  initial $display(x);
endmodule
```

This example is legal under 2001 rules. However, it is illegal under the 2005 rules and causes an error in ModelSim. Under the new rules, you cannot hierarchically reference a name in an anonymous scope from outside that scope. In the example above, *x* does not propagate its visibility upwards, and each condition alternative is considered to be an anonymous scope.

For this example to simulate properly in ModelSim, change it to the following:

```
module m;
  parameter p = 1;

  if (p) begin:s
    integer x = 1;
  end
  else begin:s
    real x = 2.0;
  end

  initial $display(s.x);
endmodule
```

Because the scope is named in this example (*begin:s*), normal hierarchical resolution rules apply and the code runs without error.

In addition, note that the keyword pair `generate` - `endgenerate` is optional under the 2005 rules and are excluded in the second example.

Simulating Verilog Designs

A Verilog design is ready for simulation after it has been compiled with **vlog**. The simulator may then be invoked with the names of the top-level modules (many designs contain only one top-level module). For example, if your top-level modules are "testbench" and "globals", then invoke the simulator as follows:

vsim testbench globals

After the simulator loads the top-level modules, it iteratively loads the instantiated modules and UDPs in the design hierarchy, linking the design together by connecting the ports and resolving hierarchical references. By default all modules and UDPs are loaded from the library named **work**. Modules and UDPs from other libraries can be specified using the **-L** or **-Lf** arguments to **vsim** (see [Library Usage](#) for details).

On successful loading of the design, the simulation time is set to zero, and you must enter a **run** command to begin simulation. Commonly, you enter **run -all** to run until there are no more simulation events or until **\$finish** is executed in the Verilog code. You can also run for specific time periods (e.g., run 100 ns). Enter the **quit** command to exit the simulator.

Simulator Resolution Limit (Verilog)

The simulator internally represents time as a 64-bit integer in units equivalent to the smallest unit of simulation time (also known as the simulator resolution limit). The resolution limit defaults to the smallest time units that you specify among all of the **`timescale** compiler directives in the design.

Here is an example of a **`timescale** directive:

```
`timescale 1 ns / 100 ps
```

The first number (1 ns) is the time units; the second number (100 ps) is the time precision, which is the rounding factor for the specified time units. The directive above causes time values to be read as nanoseconds and rounded to the nearest 100 picoseconds.

Time units and precision can also be specified with SystemVerilog keywords as follows:

```
timeunit 1 ns
timeprecision 100 ps
```

Modules Without Timescale Directives

Unexpected behavior may occur if your design contains some modules with timescale directives and others without. The time units for modules without a timescale directive default to the simulator resolution.

Example

Assume you have the two modules shown in Table 7-1.

Table 7-1. Example Modules—With and Without Timescale Directive

Module 1 (with directive)	Module 2 (without directive)
<pre>`timescale 1 ns / 10 ps module mod1 (set); output set; reg set; parameter d = 1.55; initial begin set = 1'bz; #d set = 1'b0; #d set = 1'b1; end endmodule</pre>	<pre>module mod2 (set); output set; reg set; parameter d = 1.55; initial begin set = 1'bz; #d set = 1'b0; #d set = 1'b1; end endmodule</pre>

Case 1 — Run the **vsim** command in the following order:

vsim mod2 mod1

Module 1 sets the simulator resolution to 10 ps. Module 2 has no timescale directive, so the time units default to the simulator resolution, in this case 10 ps. If you looked at */mod1/set* and */mod2/set* in the Wave window, you would see that Module 1 transitions every 1.55 ns as expected (because of the 1 ns time unit in the timescale directive). However, in Module 2, *set* transitions every 20 ps. That is because the delay of 1.55 in Module 2 is read as 15.5 ps, which is rounded up to 20 ps.

ModelSim issues the following warning message during elaboration:

```
** Warning: (vsim-3010) [TSCALE] - Module 'mod1' has a `timescale
directive in effect, but previous modules do not.
```

Case 2 — Run the **vsim** command in the following order:

vsim mod1 mod2

Module 2 sets the simulator resolution to its default (10 ps), so the simulation results would be the same. However, ModelSim issues a different warning message:

```
** Warning: (vsim-3009) [TSCALE] - Module 'mod2' does not have a
`timescale directive in effect, but previous modules do.
```

Note

You should always investigate these warning messages to make sure that the timing of your design operates as intended.

Case 3 — If the design consists of modules with no `timescale directives, then the time units default to the value specified by the [Resolution](#) variable in the *modelsim.ini* file. (The variable is set to 1 ps by default.)

-timescale Option

The **-timescale** option can be used with the [vlog](#) command to specify the default timescale in effect during compilation for modules that do not have an explicit `timescale directive. The format of the **-timescale** argument is the same as that of the `timescale directive:

```
-timescale <time_units>/<time_units>
```

where *<time_units>* is *<n> <units>*. The value of *<n>* must be 1, 10, or 100. The value of *<units>* must be fs, ps, ns, us, ms, or s. In addition, the *<time_units>* must be greater than or equal to the *<time_precision>*.

For example:

```
-timescale "1ns / 1ps"
```

The argument above needs quotes because it contains white space.

Multiple Timescale Directives

As alluded to above, your design can have multiple timescale directives. The timescale directive takes effect where it appears in a source file and applies to all source files which follow in the same [vlog](#) command. Separately compiled modules can also have different timescales. The simulator determines the smallest timescale of all the modules in a design and uses that as the simulator resolution.

timescale, -t, and Rounding

The optional [vsim](#) argument **-t** sets the simulator resolution limit for the overall simulation. If the resolution set by **-t** is larger than the precision set in a module, the time values in that module are rounded up. If the resolution set by **-t** is smaller than the precision of the module, the precision of that module remains whatever is specified by the `timescale directive. Consider the following code:

```
`timescale 1 ns / 100 ps

module foo;

initial
#12.536 $display
```

The list below shows three possibilities for **-t** and how the delays in the module are handled in each case:

- **-t** not set

The delay is rounded to 12.5 as directed by the module's 'timescale directive.

- **-t** is set to 1 fs

The delay is rounded to 12.5. Again, the module's precision is determined by the 'timescale directive. ModelSim does not override the module's precision.

- **-t** is set to 1 ns

The delay will be rounded to 13. The module's precision is determined by the **-t** setting. ModelSim can only round the module's time values because the entire simulation is operating at 1 ns.

Choosing the Resolution for Verilog

You should choose the coarsest resolution limit possible that does not result in undesired rounding of your delays. The time precision should not be unnecessarily small because it limits the maximum simulation time limit, and it degrades performance in some cases.

Event Ordering in Verilog Designs

Event-based simulators such as ModelSim may process multiple events at a given simulation time. The Verilog language is defined such that you cannot explicitly control the order in which simultaneous events are processed. Unfortunately, some designs rely on a particular event order, and these designs may behave differently than you expect.

Event Queues

Section 11 of the IEEE Std 1364-2005 LRM defines several event queues that determine the order in which events are evaluated. At the current simulation time, the simulator has the following pending events:

- active events
- inactive events
- non-blocking assignment update events

- monitor events
- future events
 - inactive events
 - non-blocking assignment update events

The LRM dictates that events are processed as follows – 1) all active events are processed; 2) the inactive events are moved to the active event queue and then processed; 3) the non-blocking events are moved to the active event queue and then processed; 4) the monitor events are moved to the active queue and then processed; 5) simulation advances to the next time where there is an inactive event or a non-blocking assignment update event.

Within the active event queue, the events can be processed in any order, and new active events can be added to the queue in any order. In other words, you *cannot* control event order within the active queue. The example below illustrates potential ramifications of this situation.

Say you have these four statements:

1. always@(q) p = q;
2. always @ (q) p2 = not q;
3. always @(p or p2) clk = p and p2;
4. always @(posedge clk)

and current values as follows: q = 0, p = 0, p2=1

The tables below show two of the many valid evaluations of these statements. Evaluation events are denoted by a number where the number is the statement to be evaluated. Update events are denoted <*name*>(old->new) where <*name*> indicates the reg being updated and *new* is the updated value.\

Table 7-2. Evaluation 1 of always Statements

Event being processed	Active event queue
	q(0 -> 1)
q(0 -> 1)	1, 2
1	p(0 -> 1), 2
p(0 -> 1)	3, 2
3	clk(0 -> 1), 2
clk(0 -> 1)	4, 2
4	2
2	p2(1 -> 0)

Table 7-2. Evaluation 1 of always Statements (cont.)

Event being processed	Active event queue
p2(1 -> 0)	3
3	clk(1 -> 0)
clk(1 -> 0)	<empty>

Table 7-3. Evaluation 2 of always Statement

Event being processed	Active event queue
	q(0 -> 1)
q(0 -> 1)	1, 2
1	p(0 -> 1), 2
2	p2(1 -> 0), p(0 -> 1)
p(0 -> 1)	3, p2(1 -> 0)
p2(1 -> 0)	3
3	<empty> (clk doesn't change)

Again, both evaluations are valid. However, in Evaluation 1, *clk* has a glitch on it; in Evaluation 2, *clk* doesn't. This indicates that the design has a zero-delay race condition on *clk*.

Controlling Event Queues with Blocking or Non-Blocking Assignments

The only control you have over event order is to assign an event to a particular queue. You do this by using blocking or non-blocking assignments.

Blocking Assignments

Blocking assignments place an event in the active, inactive, or future queues depending on what type of delay they have:

- a blocking assignment without a delay goes in the active queue
- a blocking assignment with an explicit delay of 0 goes in the inactive queue
- a blocking assignment with a non-zero delay goes in the future queue

Non-Blocking Assignments

A non-blocking assignment goes into either the non-blocking assignment update event queue or the future non-blocking assignment update event queue. (Non-blocking assignments with no delays and those with explicit zero delays are treated the same.)

Non-blocking assignments should be used only for outputs of flip-flops. This insures that all outputs of flip-flops do not change until after all flip-flops have been evaluated. Attempting to use non-blocking assignments in combinational logic paths to remove race conditions may only cause more problems. (In the preceding example, changing all statements to non-blocking assignments would not remove the race condition.) This includes using non-blocking assignments in the generation of gated clocks.

The following is an example of how to properly use non-blocking assignments.

```
gen1: always @(master)
      clk1 = master;

gen2: always @(clk1)
      clk2 = clk1;

f1 : always @ (posedge clk1)
begin
    q1 <= d1;
end

f2:   always @ (posedge clk2)
begin
    q2 <= q1;
end
```

If written this way, a value on *d1* always takes two clock cycles to get from *d1* to *q2*. If you change *clk1 = master* and *clk2 = clk1* to non-blocking assignments or *q2 <= q1* and *q1 <= d1* to blocking assignments, then *d1* may get to *q2* in less than two clock cycles.

Debugging Event Order Issues

Since many models have been developed on Verilog-XL, ModelSim tries to duplicate Verilog-XL event ordering to ease the porting of those models to ModelSim. However, ModelSim does not match Verilog-XL event ordering in all cases, and if a model ported to ModelSim does not behave as expected, then you should suspect that there are event order dependencies.

ModelSim helps you track down event order dependencies with the following compiler arguments: **-compat**, **-hazards**, and **-keep_delta**.

See the [vlog](#) command for descriptions of -compat and -hazards.

Hazard Detection

The `-hazards` argument to `vsim` detects event order hazards involving simultaneous reading and writing of the same register in concurrently executing processes. `vsim` detects the following kinds of hazards:

- **WRITE/WRITE** — Two processes writing to the same variable at the same time.
- **READ/WRITE** — One process reading a variable at the same time it is being written to by another process. ModelSim calls this a READ/WRITE hazard if it executed the read first.
- **WRITE/READ** — Same as a READ/WRITE hazard except that ModelSim executed the write first.

`vsim` issues an error message when it detects a hazard. The message pinpoints the variable and the two processes involved. You can have the simulator break on the statement where the hazard is detected by setting the **break on assertion** level to **Error**.

To enable hazard detection you must invoke `vlog` with the `-hazards` argument when you compile your source code and you must also invoke `vsim` with the `-hazards` argument when you simulate.

Note



Enabling `-hazards` implicitly enables the `-compat` argument. As a result, using this argument may affect your simulation results.

Hazard Detection and Optimization Levels

In certain cases hazard detection results are affected by the optimization level used in the simulation. Some optimizations change the read/write operations performed on a variable if the transformation is determined to yield equivalent results. Since the hazard detection algorithm doesn't know whether or not the read/write operations can affect the simulation results, the optimizations can result in different hazard detection results. Generally, the optimizations reduce the number of false hazards by eliminating unnecessary reads and writes, but there are also optimizations that can produce additional false hazards.

Limitations of Hazard Detection

- Reads and writes involving bit and part selects of vectors are not considered for hazard detection. The overhead of tracking the overlap between the bit and part selects is too high.
- A WRITE/WRITE hazard is flagged even if the same value is written by both processes.
- A WRITE/READ or READ/WRITE hazard is flagged even if the write does not modify the variable's value.

- Glitches on nets caused by non-guaranteed event ordering are not detected.
- A non-blocking assignment is not treated as a WRITE for hazard detection purposes. This is because non-blocking assignments are not normally involved in hazards. (In fact, they should be used to avoid hazards.)
- Hazards caused by simultaneous forces are not detected.

Debugging Signal Segmentation Violations

Attempting to access a SystemVerilog object that has not been constructed with the **new** operator will result in a fatal error called a signal segmentation violation (SIGSEGV). For example, the following code will produce a SIGSEGV fatal error:

```
class C;
    int x;
endclass

C obj;
initial obj.x = 5;
```

The code attempts to initialize a property of *obj*, but *obj* has not been constructed. The code is missing the following:

```
C obj = new;
```


The **new** operator performs three distinct operations:

1. it allocates storage for an object of type C;
2. it calls the “new” method in the class or uses a default method if the class doesn’t define “new”; and,
3. it assigns the handle of the newly constructed object to “*obj*”.

If the object handle *obj* is not initialized with **new** there will be nothing to reference. The variable will be set to the value **null** and the SIGSEGV fatal error will occur.

To debug a SIGSEGV error, first look in the transcript. [Figure 7-1](#) shows an example of a SIGSEGV error message in the Transcript pane.


Figure 7-1. Fatal Signal Segmentation Violation (SIGSEGV)

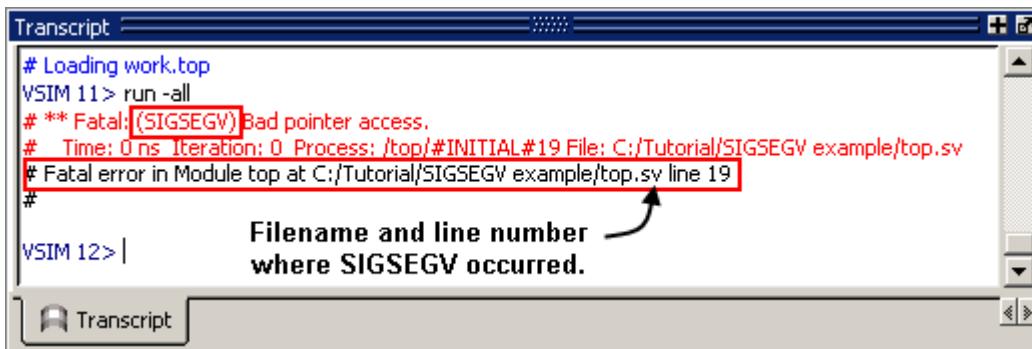

The Fatal error message identifies the filename and line number where the code violation occurred (in this example, the file is *top.sv* and the line number is 19).


ModelSim sets the active scope to the location where the error occurred. In the Active Processes window, the current process is highlighted (Figure 7-2).

Figure 7-2. Current Process Where Error Occurred

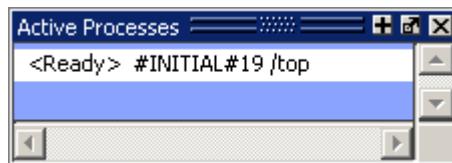


Double-click the highlighted process to open a Source editor window. A blue arrow will point to the statement where the simulation stopped executing (Figure 7-3).

Figure 7-3. Blue Arrow Indicates Where Code Stopped Executing

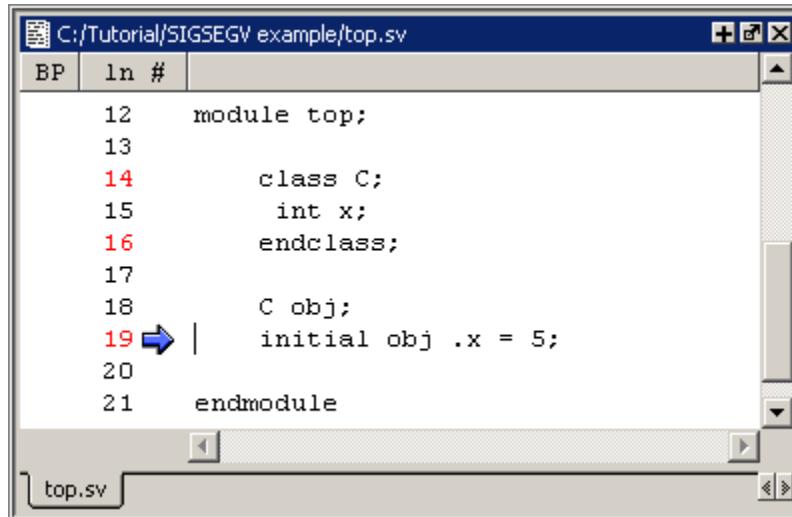

You may then look for **null** values in the ModelSim Locals window (Figure 7-4), which displays data objects declared in the current, or local, scope of the active process.

Figure 7-4. null Values in the Locals Window

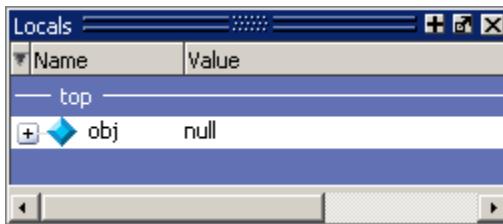

The **null** value in Figure 7-4 indicates that the object handle for *obj* was not properly constructed with the **new** operator.

Negative Timing Checks

ModelSim automatically detects optimized cells with negative timing checks and causes timing checks to be performed on the delayed versions of input ports (used when there are negative timing check limits). This is the equivalent of applying the **+delayed_timing_checks** switch with the **vsim** command.

vsim +delayed_timing_checks

Appropriately applying **+delayed_timing_checks** will significantly improve simulation performance.

To turn off this feature, specify **+no_autodtc** with **vsim**.

Negative Timing Check Limits

By default, ModelSim supports negative timing check limits in Verilog **\$setuphold** and **\$recrem** system tasks. Using the **+no_neg_tcheck** argument with the **vsim** command causes all negative timing check limits to be set to zero.

Models that support negative timing check limits must be written properly if they are to be evaluated correctly. These timing checks specify delayed versions of the input ports, which are used for functional evaluation. The correct syntax for **\$setuphold** and **\$recrem** is as follows.

\$setuphold

Syntax

```
$setuphold(clk_event, data_event, setup_limit, hold_limit, [notifier], [tstamp_cond],  
[tcheck_cond], [delayed_clk], [delayed_data])
```

Arguments

- The **clk_event** argument is required. It is a transition in a clock signal that establishes the reference time for tracking timing violations on the **data_event**. Since **\$setuphold** combines the functionality of the **\$setup** and **\$hold** system tasks, the **clk_event** sets the lower bound event for **\$hold** and the upper bound event for **\$setup**.

- The ***data_event*** argument is required. It is a transition of a data signal that initiates the timing check. The *data_event* sets the upper bound event for \$hold and the lower bound limit for \$setup.
- The ***setup_limit*** argument is required. It is a constant expression or specparam that specifies the minimum interval between the *data_event* and the *clk_event*. Any change to the data signal within this interval results in a timing violation.
- The ***hold_limit*** argument is required. It is a constant expression or specparam that specifies the interval between the *clk_event* and the *data_event*. Any change to the data signal within this interval results in a timing violation.
- The ***notifier*** argument is optional. It is a register whose value is updated whenever a timing violation occurs. The *notifier* can be used to define responses to timing violations.
- The ***tstamp_cond*** argument is optional. It conditions the *data_event* for the setup check and the *clk_event* for the hold check. This alternate method of conditioning precludes specifying conditions in the *clk_event* and *data_event* arguments.
- The ***tcheck_cond*** argument is optional. It conditions the *data_event* for the hold check and the *clk_event* for the setup check. This alternate method of conditioning precludes specifying conditions in the *clk_event* and *data_event* arguments.
- The ***delayed_clk*** argument is optional. It is a net that is continuously assigned the value of the net specified in the *clk_event*. The delay is determined by the simulator and may be non-zero depending on all the timing check limits.
- The ***delayed_data*** argument is optional. It is a net that is continuously assigned the value of the net specified in the *data_event*. The delay is determined by the simulator and may be non-zero depending on all the timing check limits.

You can specify negative times for either the *setup_limit* or the *hold_limit*, but the sum of the two arguments must be zero or greater. If this condition is not met, ModelSim zeroes the negative limit during elaboration or SDF annotation. To see messages about this kind of problem, use the **+ntc_warn** argument with the **vsim** command. A typical warning looks like the following:

```
** Warning: (vsim-3616) cells.v(x): Instance 'dff0' - Bad $setuphold
constraints: 5 ns and -6 ns. Negative limit(s) set to zero.
```

The *delayed_clk* and *delayed_data* arguments are provided to ease the modeling of devices that may have negative timing constraints. The model's logic should reference the *delayed_clk* and *delayed_data* nets in place of the normal *clk* and *data* nets. This ensures that the correct data is latched in the presence of negative constraints. The simulator automatically calculates the delays for *delayed_clk* and *delayed_data* such that the correct data is latched as long as a timing constraint has not been violated. See [Using Delayed Inputs for Timing Checks](#) for more information.

Optional arguments not included in the task must be indicated as null arguments by using commas. For example:

```
$setuphold(posedge CLK, D, 2, 4, , , tcheck_cond);
```

The \$setuphold task does not specify *notifier* or *tstamp_cond* but does include a *tcheck_cond* argument. Notice that there are no commas after the *tcheck_cond* argument. Using one or more commas after the last argument results in an error.

Note



Do not condition a \$setuphold timing check using the *tstamp_cond* or *tcheck_cond* arguments and a conditioned event. If this is attempted, only the parameters in the *tstamp_cond* or *tcheck_cond* arguments will be effective, and a warning will be issued.

\$recrem

Syntax

```
$recrem(control_event, data_event, recovery_limit, removal_limit, [notifier], [tstamp_cond],  
[tcheck_cond], [delayed_ctrl], [delayed_data])
```

Arguments

- The *control_event* argument is required. It is an asynchronous control signal with an edge identifier to indicate the release from an active state.
- The *data_event* argument is required. It is clock or gate signal with an edge identifier to indicate the active edge of the clock or the closing edge of the gate.
- The *recovery_limit* argument is required. It is the minimum interval between the release of the asynchronous control signal and the active edge of the clock event. Any change to a signal within this interval results in a timing violation.
- The *removal_limit* argument is required. It is the minimum interval between the active edge of the clock event and the release of the asynchronous control signal. Any change to a signal within this interval results in a timing violation.
- The *notifier* argument is optional. It is a register whose value is updated whenever a timing violation occurs. The *notifier* can be used to define responses to timing violations.
- The *tstamp_cond* argument is optional. It conditions the *data_event* for the removal check and the *control_event* for the recovery check. This alternate method of conditioning precludes specifying conditions in the *control_event* and *data_event* arguments.
- The *tcheck_cond* argument is optional. It conditions the *data_event* for the recovery check and the *clk_event* for the removal check. This alternate method of conditioning precludes specifying conditions in the *control_event* and *data_event* arguments.

- The ***delayed_ctrl*** argument is optional. It is a net that is continuously assigned the value of the net specified in the *control_event*. The delay is determined by the simulator and may be non-zero depending on all the timing check limits.
- The ***delayed_data*** argument is optional. It is a net that is continuously assigned the value of the net specified in the *data_event*. The delay is determined by the simulator and may be non-zero depending on all the timing check limits.

You can specify negative times for either the *recovery_limit* or the *removal_limit*, but the sum of the two arguments must be zero or greater. If this condition is not met, ModelSim zeroes the negative limit during elaboration or SDF annotation. To see messages about this kind of problem, use the **+ntc_warn** argument with the **vsim** command.

The *delayed_clk* and *delayed_data* arguments are provided to ease the modeling of devices that may have negative timing constraints. The model's logic should reference the *delayed_clk* and *delayed_data* nets in place of the normal *control* and *data* nets. This ensures that the correct data is latched in the presence of negative constraints. The simulator automatically calculates the delays for *delayed_clk* and *delayed_data* such that the correct data is latched as long as a timing constraint has not been violated.

Optional arguments not included in the task must be indicated as null arguments by using commas. For example:

```
$recem(posedge CLK, D, 2, 4, , , tcheck_cond);
```

The \$recem task does not specify *notifier* or *tstamp_cond* but does include a *tcheck_cond* argument. Notice that there are no commas after the *tcheck_cond* argument. Using one or more commas after the last argument results in an error.

Negative Timing Constraint Algorithm

The ModelSim negative timing constraint algorithm attempts to find a set of delays such that the data net is valid when the clock or control nets transition and the timing checks are satisfied. The algorithm is iterative because a set of delays that satisfies all timing checks for a pair of inputs can cause misordering of another pair (where both pairs of inputs share a common input). When a set of delays that satisfies all timing checks is found, the delays are said to converge.

When none of the delay sets cause convergence, the algorithm pessimistically changes the timing check limits to force convergence. Basically, the algorithm zeroes the smallest negative \$setup/\$recovery limit. If a negative \$setup/\$recovery doesn't exist, then the algorithm zeros the smallest negative \$hold/\$removal limit. After zeroing a negative limit, the delay calculation procedure is repeated. If the delays do not converge, the algorithm zeros another negative limit, repeating the process until convergence is found.

For example, in this timing check,


```
$setuphold(posedge CLK, D, -10, 20, notifier,,, dCLK, dD);
```

dCLK is the delayed version of the input *CLK* and *dD* is the delayed version of *D*. By default, the timing checks are performed on the inputs while the model's functional evaluation uses the delayed versions of the inputs. This posedge D-Flipflop module has a negative setup limit of -10 time units, which allows posedge *CLK* to occur up to 10 time units before the stable value of *D* is latched.



Without delaying *CLK* by 11, an old value for *D* could be latched. Note that an additional time unit of delay is added to prevent race conditions.

The inputs look like this:

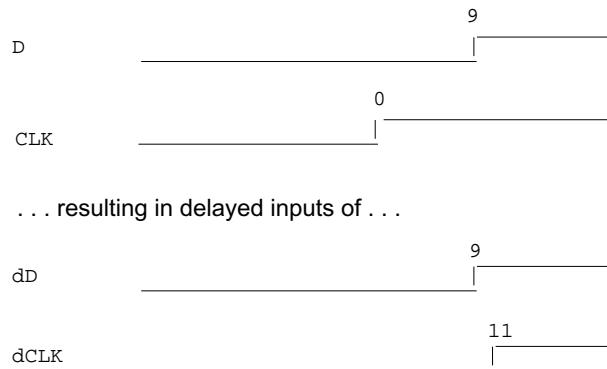


Because the posedge *CLK* transition is delayed by the amount of the negative setup limit (plus one time unit to prevent race conditions) no timing violation is reported and the new value of *D* is latched.

However, the effect of this delay could also affect other inputs with a specified timing relationship to *CLK*. The simulator is responsible for calculating the delay between all inputs and their delayed versions. The complete set of delays (delay solution convergence) must consider all timing check limits together so that whenever timing is met the correct data value is latched.

Consider the following timing checks specified relative to *CLK*:

```
$setuphold(posedge CLK, D, -10, 20, notifier,,, dCLK, dD);
$setuphold(posedge CLK, negedge RST, -40, 50, notifier,,, dCLK, dRST);
```

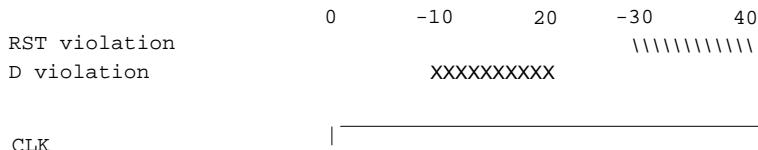

To solve the timing checks specified relative to *CLK* the following delay values are necessary:

	Rising	Falling
<i>dCLK</i>	31	31
<i>dD</i>	20	20
<i>dRST</i>	0	0

The simulator's intermediate delay solution shifts the violation regions to overlap the reference events.




Notice that no timing is specified relative to negedge *CLK*, but the *dCLK* falling delay is set to the *dCLK* rising delay to minimize pulse rejection on *dCLK*. Pulse rejection that occurs due to delayed input delays is reported by:

```
"WARNING[3819] : Scheduled event on delay net dCLK was cancelled"
```

Now, consider the following case where a new timing check is added between *D* and *RST* and the simulator cannot find a delay solution. Some timing checks are set to zero. In this case, the new timing check is not annotated from an SDF file and a default \$setuphold limit of 1, 1 is used:


```
$setuphold(posedge CLK, D, -10, 20, notifier,, dCLK, dD);
$setuphold(posedge CLK, negedge RST, -40, 50, notifier,, dCLK, dRST);
$setuphold(negedge RST, D, 1, 1, notifier,, dRST, dD);
```

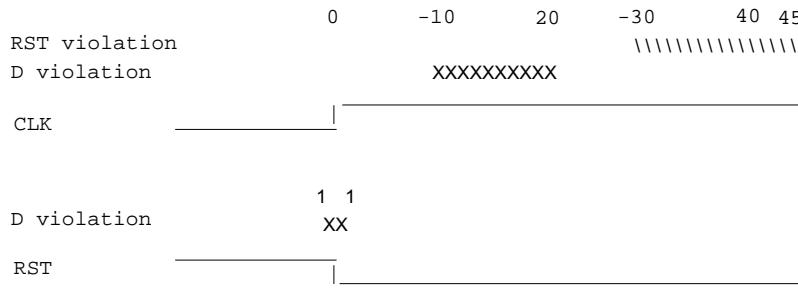

As illustrated earlier, to solve timing checks on *CLK*, delays of 20 and 31 time units were necessary on *dD* and *dCLK*, respectively.


	Rising	Falling
<i>dCLK</i>	31	31
<i>dD</i>	20	20
<i>dRST</i>	0	0

The simulator's intermediate delay solution is:

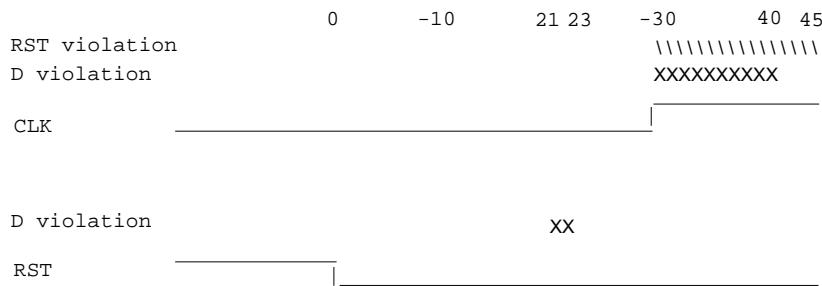

But this is not consistent with the timing check specified between *RST* and *D*. The falling *RST* signal can be delayed by additional 10, but that is still not enough for the delay solution to converge.

	Rising	Falling
<i>dCLK</i>	31	31
<i>dD</i>	20	20
<i>dRST</i>	0	10

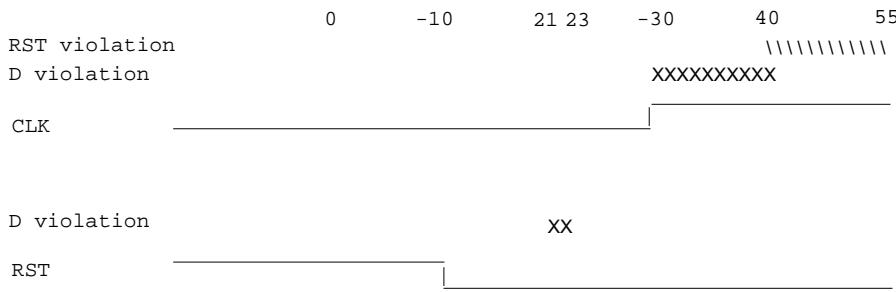

As stated above, if a delay solution cannot be determined with the specified timing check limits the smallest negative \$setup/\$recovery limit is zeroed and the calculation of delays repeated. If no negative \$setup/\$recovery limits exist, then the smallest negative \$hold/\$removal limit is zeroed. This process is repeated until a delay solution is found.


If a timing check in the design was zeroed because a delay solution was not found, a summary message like the following will be issued:

```
# ** Warning: (vsim-3316) No solution possible for some delayed timing
check nets. 1 negative limits were zeroed. Use +ntc_warn for more info.
```

Invoking **vsim** with the **+ntc_warn** option identifies the timing check that is being zeroed.


Finally consider the case where the *RST* and *D* timing check is specified on the posedge *RST*.

```
$setuphold(posedge CLK, D, -10, 20, notifier,, dCLK, dD);
$setuphold(posedge CLK, negedge RST, -40, 50, notifier,, dCLK, dRST);
$setuphold(posedge RST, D, 1, 1, notifier,, dRST, dD);
```

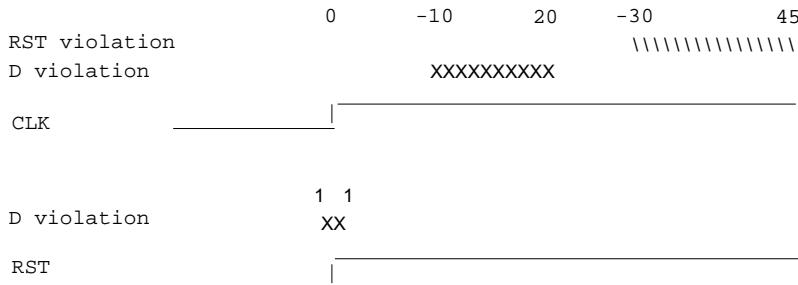

In this case the delay solution converges when an rising delay on *dRST* is used.

	Rising	Falling
<i>dCLK</i>	31	31

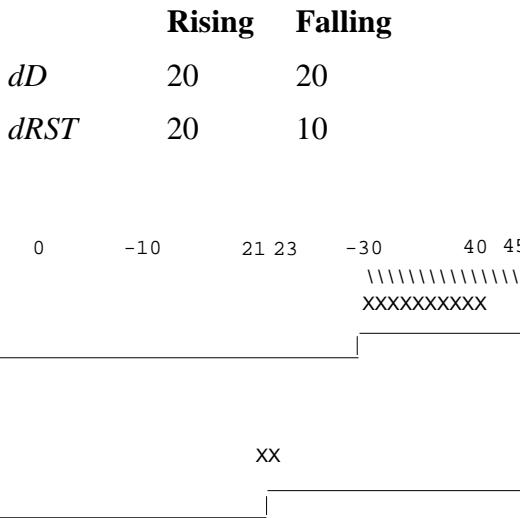


Using Delayed Inputs for Timing Checks

By default ModelSim performs timing checks on inputs specified in the timing check. If you want timing checks performed on the delayed inputs, use the **+delayed_timing_checks** argument to **vsim**.


Consider an example. This timing check:

```
$setuphold(posedge clk, posedge t, 20, -12, NOTIFIER,,, clk_dly, t_dly);
```

reports a timing violation when posedge *t* occurs in the violation region:

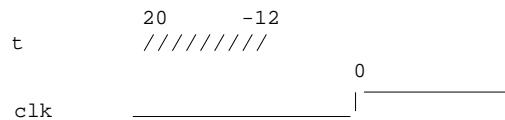

With the **+delayed_timing_checks** argument, the violation region between the delayed inputs is:

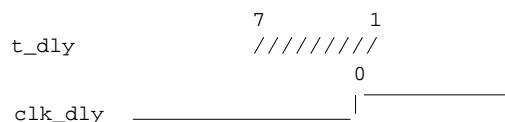

Although the check is performed on the delayed inputs, the timing check violation message is adjusted to reference the undelayed inputs. Only the report time of the violation message is noticeably different between the delayed and undelayed timing checks.

By far the greatest difference between these modes is evident when there are conditions on a delayed check event because the condition is not implicitly delayed. Also, timing checks

specified without explicit delayed signals are delayed, if necessary, when they reference an input that is delayed for a negative timing check limit.

Other simulators perform timing checks on the delayed inputs. To be compatible, ModelSim supports both methods.

Verilog-XL Compatible Simulator Arguments

The simulator arguments listed below are equivalent to Verilog-XL arguments and may ease the porting of a design to ModelSim. See the [vsim](#) command for a description of each argument.

```
+alt_path_delays
-l <filename>
+maxdelays
+mindelays
+multisource_int_delays
+no_cancelled_e_msg
+no_neg_tchk
+no_notifier
+no_path_edge
+no_pulse_msg
-no_risefall_delaynets
+no_show_cancelled_e
+nosdfwarn
+nowarn<mnemonic>
+ntc_warn
+pulse_e/<percent>
+pulse_e_style_ondetect
+pulse_e_style_onevent
+pulse_int_e/<percent>
+pulse_int_r/<percent>
+pulse_r/<percent>
+sdf_nocheck_celltype
+sdf_verbose
+show_cancelled_e
+transport_int_delays
+transport_path_delays
+typdelays
```

Using Escaped Identifiers

ModelSim recognizes and maintains Verilog escaped identifier syntax. Prior to version 6.3, Verilog escaped identifiers were converted to VHDL-style extended identifiers with a backslash at the end of the identifier. Verilog escaped identifiers then appeared as VHDL extended identifiers in tool output and command line interface (CLI) commands. For example, a Verilog escaped identifier like the following:

```
\/top/dut/03
```

had to be displayed as follows:

```
\/top/dut/03\
```

Starting in version 6.3, all object names inside the simulator appear identical to their names in original HDL source files.

Sometimes, in mixed language designs, hierarchical identifiers might refer to both VHDL extended identifiers and Verilog escaped identifiers in the same fullpath. For example, top\VHDL*ext\|Vlog*ext /bottom (assuming the PathSeparator variable is set to '/'), or top.\VHDL*ext.\|Vlog*ext .bottom (assuming the PathSeparator variable is set to '.'). Any fullpath that appears as user input to the simulator (e.g. on the **vsim** command line, in a *.do* file etc.) should be composed of components with escaped identifier syntax appropriate to its language kind.

A *modelsim.ini* variable called [GenerousIdentifierParsing](#) can control parsing of identifiers. input to the tool. If this variable is on (the variable is on by default: value = 1), either VHDL extended identifiers or Verilog escaped identifier syntax may be used for objects of either language kind. This provides backward compatibility with older *.do* files, which often contain pure VHDL extended identifier syntax, even for escaped identifiers in Verilog design regions.

Note that SDF files are always parsed in "generous mode." SignalSpy function arguments are also parsed in "generous mode."

Tcl and Escaped Identifiers

In Tcl, the backslash is one of a number of characters that have a special meaning. For example,

\n

creates a new line.

When a Tcl command is used in the command line interface, the TCL backslash should be escaped by adding another backslash. For example:

```
force -freeze /top/ix/iy\\lyw[1]\\ 10 0, 01 {50 ns} -r 100
```

The Verilog identifier, in this example, is `lyw[1]`. Here, backslashes are used to escape the square brackets ([]), which have a special meaning in Tcl.

For a more detailed description of special characters in Tcl and how backslashes should be used with those characters, click **Help > Tcl Syntax** in the menu bar, or simply open the *docs/tcl_help_html/TclCmd* directory in your QuestaSim installation.

Cell Libraries

Model Technology passed the ASIC Council's Verilog test suite and achieved the "Library Tested and Approved" designation from Si2 Labs. This test suite is designed to ensure Verilog timing accuracy and functionality and is the first significant hurdle to complete on the way to

achieving full ASIC vendor support. As a consequence, many ASIC and FPGA vendors' Verilog cell libraries are compatible with ModelSim Verilog.

The cell models generally contain Verilog "specify blocks" that describe the path delays and timing constraints for the cells. See section 14 in the IEEE Std 1364-2005 for details on specify blocks, and section 15 for details on timing constraints. ModelSim Verilog fully implements specify blocks and timing constraints as defined in IEEE Std 1364 along with some Verilog-XL compatible extensions.

SDF Timing Annotation

ModelSim Verilog supports timing annotation from Standard Delay Format (SDF) files. See [Standard Delay Format \(SDF\) Timing Annotation](#) for details.

Delay Modes

Verilog models may contain both distributed delays and path delays. The delays on primitives, UDPs, and continuous assignments are the distributed delays, whereas the port-to-port delays specified in specify blocks are the path delays. These delays interact to determine the actual delay observed. Most Verilog cells use path delays exclusively, with the distributed delays set to zero. For example,

```
module and2(y, a, b);
    input a, b;
    output y;
    and(y, a, b);
    specify
        (a => y) = 5;
        (b => y) = 5;
    endspecify
endmodule
```

In the above two-input "and" gate cell, the distributed delay for the "and" primitive is zero, and the actual delays observed on the module ports are taken from the path delays. This is typical for most cells, but a complex cell may require non-zero distributed delays to work properly. Even so, these delays are usually small enough that the path delays take priority over the distributed delays. The rule is that if a module contains both path delays and distributed delays, then the larger of the two delays for each path shall be used (as defined by the IEEE Std 1364). This is the default behavior, but you can specify alternate delay modes with compiler directives and arguments. These arguments and directives are compatible with Verilog-XL. Compiler delay mode arguments take precedence over delay mode directives in the source code.

Distributed Delay Mode

In distributed delay mode the specify path delays are ignored in favor of the distributed delays. Select this delay mode with the **+delay_mode_distributed** compiler argument or the **`delay_mode_distributed** compiler directive.

Path Delay Mode

In path delay mode the distributed delays are set to zero in any module that contains a path delay. Select this delay mode with the **+delay_mode_path** compiler argument or the **`delay_mode_path** compiler directive.

Unit Delay Mode

In unit delay mode the non-zero distributed delays are set to one unit of simulation resolution (determined by the minimum time_precision argument in all ‘timescale directives in your design or the value specified with the -t argument to vsim), and the specify path delays and timing constraints are ignored. Select this delay mode with the **+delay_mode_unit** compiler argument or the **`delay_mode_unit** compiler directive.

Zero Delay Mode

In zero delay mode the distributed delays are set to zero, and the specify path delays and timing constraints are ignored. Select this delay mode with the **+delay_mode_zero** compiler argument or the **`delay_mode_zero** compiler directive.

System Tasks and Functions

ModelSim supports system tasks and functions as follows:

- All system tasks and functions defined in IEEE Std 1364
- Some system tasks and functions defined in SystemVerilog IEEE std p1800-2005 LRM
- Several system tasks and functions that are specific to ModelSim
- Several non-standard, Verilog-XL system tasks

The system tasks and functions listed in this section are built into the simulator, although some designs depend on user-defined system tasks implemented with the Programming Language Interface (PLI), Verilog Procedural Interface (VPI), or the SystemVerilog DPI (Direct Programming Interface). If the simulator issues warnings regarding undefined system tasks or functions, then it is likely that these tasks or functions are defined by a PLI/VPI application that must be loaded by the simulator.

IEEE Std 1364 System Tasks and Functions

The following supported system tasks and functions are described in detail in the IEEE Std 1364.

Note

 The [change](#) command can be used to modify local variables in Verilog and SystemVerilog tasks and functions.

Table 7-4. IEEE Std 1364 System Tasks and Functions - 1

Timescale tasks	Simulator control tasks	Simulation time functions	Command line input
\$printtimescale	\$finish	\$realtime	\$test\$plusargs
\$timeformat	\$stop	\$stime \$time	\$value\$plusargs

Table 7-5. IEEE Std 1364 System Tasks and Functions - 2

Probabilistic distribution functions	Conversion functions	Stochastic analysis tasks	Timing check tasks
\$dist_chi_square	\$bitstoreal	\$q_add	\$hold
\$dist_erlang	\$itor	\$q_exam	\$nochange
\$dist_exponential	\$realtobits	\$q_full	\$period
\$dist_normal	\$rtoi	\$q_initialize	\$recovery
\$dist_poisson	\$signed	\$q_remove	\$setup
\$dist_t	\$unsigned		\$setuphold
\$dist_uniform			\$skew
\$random			\$width ¹ \$removal \$recrem

1. Verilog-XL ignores the threshold argument even though it is part of the Verilog spec. ModelSim does not ignore this argument. Be careful that you do not set the threshold argument greater-than-or-equal to the limit argument as that essentially disables the \$width check. Also, note that you cannot override the threshold argument by using SDF annotation.

Table 7-6. IEEE Std 1364 System Tasks

Display tasks	PLA modeling tasks	Value change dump (VCD) file tasks
\$display	\$async\$and\$array	\$dumpall
\$displayb	\$async\$nand\$array	\$dumpfile
\$displayh	\$async\$or\$array	\$dumpflush
\$displayo	\$async\$nor\$array	\$dumplimit
\$monitor	\$async\$and\$plane	\$dumpoff
\$monitorb	\$async\$nand\$plane	\$dumpon
\$monitorh	\$async\$or\$plane	\$dumpvars
\$monitoro	\$async\$nor\$plane	
\$monitoroff	\$sync\$and\$array	
\$monitoron	\$sync\$nand\$array	
\$strobe	\$sync\$or\$array	
\$strobeb	\$sync\$nor\$array	
\$strobeh	\$sync\$and\$plane	
\$strobeo	\$sync\$nand\$plane	
\$write	\$sync\$or\$plane	
\$writeb	\$sync\$nor\$plane	
\$writeh		
\$writeo		

Table 7-7. IEEE Std 1364 File I/O Tasks

File I/O tasks

\$fclose	\$fmonitoro	\$fwriteh
\$fdisplay	\$fopen	\$fwriteo
\$fdisplayb	\$fread	\$readmemb
\$fdisplayh	\$fscanf	\$readmemh
\$fdisplayo	\$fseek	\$rewind
\$feof	\$fstrobe	\$sdf_annotation

Table 7-7. IEEE Std 1364 File I/O Tasks (cont.)**File I/O tasks**

\$ferror	\$fstrobeb	\$sformat
\$fflush	\$fstrobeh	\$sscanf
\$fgetc	\$fstrobeo	\$swrite
\$fgets	\$ftell	\$swriteb
\$fmonitor	\$fwrite	\$swriteh
\$fmonitorb	\$fwriteb	\$swriteo
\$fmonitorh		\$ungetc

SystemVerilog System Tasks and Functions

The following ModelSim-supported system tasks and functions are described in detail in the SystemVerilog IEEE Std p1800-2005 LRM.

Table 7-8. SystemVerilog System Tasks and Functions - 1

Expression size function	Range function
\$bits	\$isunbounded

Table 7-9. SystemVerilog System Tasks and Functions - 2

Shortreal conversions	Array querying functions
\$shortrealbits	\$dimensions
\$bitstoshortreal	\$left
	\$right
	\$low
	\$high
	\$increment
	\$size

Table 7-10. SystemVerilog System Tasks and Functions - 4

Reading packed data functions	Writing packed data functions	Other functions
\$readmemb	\$writememb	\$root
\$readmemh	\$writememh	\$unit

System Tasks and Functions Specific to the Tool

The following system tasks and functions are specific to ModelSim. They are not included in the IEEE Std 1364, nor are they likely supported in other simulators. Their use may limit the portability of your code.

Table 7-11. Tool-Specific Verilog System Tasks and Functions

	\$disable_signal_spy
\$messagelog	\$enable_signal_spy
\$psprintf()	\$init_signal_driver
\$sdf_done	\$init_signal_spy
	\$signal_force
	\$signal_release

\$messagelog

Syntax

```
$messagelog({ "<message>", <value>... }[,...]);
```

Arguments

- <message> — Your message, enclosed in quotes ("), using text and specifiers to define the output.
- <value> — A scope, object, or literal value that corresponds to the specifiers in the <message>. You must specify one <value> for each specifier in the <message>.

Specifiers

The \$messagelog task supports all specifiers available with the \$display system task. For more information about \$display, refer to section 17.1 of the IEEE std 1364-2005.

The following specifiers are specific to \$messagelog.

 **Note**

The format of these custom specifiers differ from the \$display specifiers. Specifically, “%:” denotes a \$messagelog specifier and the letter denotes the type of specifier.

- %:C — Group/Category

A string argument, enclosed in quotes (""). This attribute defines a group or category used by the message system. If you do not specify %:C, the message system logs **User** as the default.

- %:F — Filename

A string argument specifying a simple filename, relative path to a filename, or a full path to a filename. In the case of a simple filename or relative path to a filename, the tool uses what you specify in the message output, but internally uses the current directory to complete these paths to form a full path: this allows the message viewer to link to the specified file.

If you do not include %:F, the tool automatically logs the value of the filename in which the \$messagelog is called.

If you do include %:R, %:F, or %:L, or a combination of any two of these, the tool does not automatically log values for the undefined specifier(s).

- %:I — Message ID

A string argument. The Message Viewer displays this value in the ID column. This attribute is not used internally, therefore you do not need to be concerned about uniqueness or conflict with other message IDs.

- %:L — Line number

An integer argument.

If you do not include %:L, the tool automatically logs the value of the line number on which the \$messagelog is called.

If you do include %:R, %:F, or %:L, or a combination of any two of these, the tool does not automatically log values for the undefined specifier(s).

- %:O — Object/Signal Name

A hierarchical reference to a variable or net, such as *sig1* or *top.sigx[0]*. You can specify multiple %:O for each \$messagelog, which effectively forms a list of attributes of that kind, for example:

```
$messagelog("The signals are %:O, %:O, and %:O.",  
           sig1, top.sigx[0], ar [3].sig);
```

- %:R — Instance/Region name

A hierarchical reference to a scope, such as *top.sub1* or *sub1*. You can also specify a string argument, such as “*top.mychild*”, where the identifier inside the quotes does not need to correlate with an actual scope, it can be an artificial scope.

If you do not include %:R, the tool automatically logs the instance or region in which the \$messagelog is called.

If you do include %:R, %:F, or %:L, or a combination of any two of these, the tool does not automatically log values for the undefined specifier(s).

- %:S — Severity Level

A case-insensitive string argument, enclosed in quotes (""), that is one of the following:

Note — This is the default if you do not specify %:S

Warning

Error

Fatal

Info — The error message system recognizes this as a Note

Message — The error message system recognizes this as a Note

- %:V — Verbosity Rating

An integer argument, where the default is zero (0). The verbosity rating allows you to specify a field you can use to sort or filter messages in the Message Viewer. In most cases you specify that this attribute is not printed, using the tilde (~) character.

Description

- Non-printing attributes (~) — You can specify that an attribute value is not to be printed in the transcribed message by placing the tilde (~) character after the percent (%) character, for example:

```
$messagelog("%:~S Do not print the Severity Level", "Warning");
```

However, the value of %:S is logged for use in the Message Viewer.

- Logging of simulation time — For each call to \$messagelog, the simulation time is logged, however the simulation time is not considered an attribute of the message system. This time is available in the Message Viewer.
- Minimum field-width specifiers — are accepted before each specifier character, for example:

```
%:0I  
%:10I
```

- Left-right justification specifier (-) — is accepted as it is for \$display.
- Macros — You can use the macros ‘__LINE__’ (returns line number information) and ‘__FILE__’ (returns filename information) when creating your \$messagelog tasks. For example:

```
module top;  
  
function void wrapper(string file, int line);  
    $messagelog("Hello: The caller was at %:F,%:0L", file, line);  
endfunction
```

```

initial begin
    wrapper(`__FILE__, `__LINE__);
    wrapper(`__FILE__, `__LINE__);
end

endmodule

```

which would produce the following output

```

# Hello: The caller was at test.sv,7
# Hello: The caller was at test.sv,8

```

Examples

- The following \$messagelog task:

```
$messagelog("hello world");
```

transcripts the message:

```
hello world
```

while logging all default attributes, but does not log a category.

- The following \$messagelog task:

```
$messagelog("%:~S%0t: PCI-X burst read started in transactor %:R",
           "Note", $time - 50, top.sysfixture.pcix);
```

transcripts the message:

```
150: PCI-X burst read started in transactor top.sysfixture.pcix
```

while silently logging the severity level of “Note”, and uses a direct reference to the Verilog scope for the %:R specifier, and does not log any attributes for %:F (filename) or %:L (line number).

- The following \$messagelog task:

```
$messagelog("%:~V%:S %:C-%:I,%:L: Unexpected AHB interrupt received
           in transactor %:R", 1, "Error", "AHB", "UNEXPINTRPT", `__LINE__,
           ahbtop.c190);
```

transcripts the message:

```
** Error: AHB-UNEXPINTRPT,238: Unexpected AHB interrupt received in
transactor ahbtop.c190
```

where the verbosity level (%:V) is “1”, severity level (%:S) is “Error”, the category (%:C) is “AHB”, and the message identifier (%:I) is “UNEXPINTRPT”. There is a direct reference for the region (%:R) and the macro ‘__LINE__’ is used for line number (%:L), resulting in no attribute logged for %:F (filename).

\$psprintf()

Syntax

```
$psprintf()
```

Description

The \$psprintf() system function behaves like the \$sformat() file I/O task except that the string result is passed back to the user as the function return value for \$psprintf(), not placed in the first argument as for \$sformat(). Thus \$psprintf() can be used where a string is valid. Note that at this time, unlike other system tasks and functions, \$psprintf() cannot be overridden by a user-defined system function in the PLI.

\$sdf_done

Syntax

```
$sdf_done
```

Description

This task is a "cleanup" function that removes internal buffers, called MIPDs, that have a delay value of zero. These MIPDs are inserted in response to the -v2k_int_delay argument to the [vsim](#) command. In general, the simulator automatically removes all zero delay MIPDs. However, if you have \$sdf_annotate() calls in your design that are not getting executed, the zero-delay MIPDs are not removed. Adding the \$sdf_done task after your last \$sdf_annotate() removes any zero-delay MIPDs that have been created.

Verilog-XL Compatible System Tasks and Functions

ModelSim supports a number of Verilog-XL specific system tasks and functions.

Supported Tasks and Functions Mentioned in IEEE Std 1364

The following supported system tasks and functions, though not part of the IEEE standard, are described in an annex of the IEEE Std 1364.

```
$coundrivers  
$getpattern  
$sreadmemb  
$sreadmemh
```

Supported Tasks and Functions Not Described in IEEE Std 1364

The following system tasks are also provided for compatibility with Verilog-XL, though they are not described in the IEEE Std 1364.

```
$deposit(variable, value);
```

This system task sets a Verilog register or net to the specified value. **variable** is the register or net to be changed; **value** is the new value for the register or net. The value remains until there is a subsequent driver transaction or another \$deposit task for the same register or net. This system task operates identically to the ModelSim **force -deposit** command.

```
$disable_warnings("<keyword>"[,<module_instance>...]);
```

This system task instructs ModelSim to disable warnings about timing check violations or triregs that acquire a value of 'X' due to charge decay. <keyword> may be **decay** or **timing**. You can specify one or more module instance names. If you do not specify a module instance, ModelSim disables warnings for the entire simulation.

```
$enable_warnings("<keyword>"[,<module_instance>...]);
```

This system task enables warnings about timing check violations or triregs that acquire a value of 'X' due to charge decay. <keyword> may be **decay** or **timing**. You can specify one or more module instance names. If you do not specify a module_instance, ModelSim enables warnings for the entire simulation.

```
$system("command");
```

This system function takes a literal string argument, executes the specified operating system command, and displays the status of the underlying OS process. Double quotes are required for the OS command. For example, to list the contents of the working directory on Unix:

```
$system( "ls -l" );
```

Return value of the **\$system** function is a 32-bit integer that is set to the exit status code of the underlying OS process.

Note



There is a known issue in the return value of this system function on the win32 platform. If the OS command is built with a cygwin compiler, the exit status code may not be reported correctly when an exception is thrown, and thus the return code may be wrong. The workaround is to avoid building the application using cygwin or to use the switch **-mno-cygwin** in cygwin the gcc command line.

```
$systemf(list_of_args)
```

This system function can take any number of arguments. The list_of_args is treated exactly the same as with the \$display() function. The OS command that runs is the final output from \$display() given the same list_of_args. Return value of the \$systemf function is a 32-bit integer that is set to the exit status code of the underlying OS process.

Note

 There is a known issue in the return value of this system function on the win32 platform. If the OS command is built with a cygwin compiler, the exit status code may not be reported correctly when an exception is thrown, and thus the return code may be wrong. The workaround is to avoid building the application using cygwin or to use the switch **-mno-cygwin** in cygwin the gcc command line.

Supported Tasks that Have Been Extended

The \$setuphold and \$recrem system tasks have been extended to provide additional functionality for negative timing constraints and an alternate method of conditioning, as in Verilog-XL. See [Negative Timing Check Limits](#).

Unsupported Verilog-XL System Tasks

The following system tasks are Verilog-XL system tasks that are not implemented in ModelSim Verilog, but have equivalent simulator commands.

\$input("filename")

This system task reads commands from the specified filename. The equivalent simulator command is **do <filename>**.

\$list[(hierarchical_name)]

This system task lists the source code for the specified scope. The equivalent functionality is provided by selecting a module in the structure pane of the Workspace. The corresponding source code is displayed in a Source window.

\$reset

This system task resets the simulation back to its time 0 state. The equivalent simulator command is **restart**.

\$restart("filename")

This system task sets the simulation to the state specified by filename, saved in a previous call to \$save. The equivalent simulator command is **restore <filename>**.

\$save("filename")

This system task saves the current simulation state to the file specified by filename. The equivalent simulator command is **checkpoint <filename>**.

\$scope(hierarchical_name)

This system task sets the interactive scope to the scope specified by hierarchical_name. The equivalent simulator command is **environment <pathname>**.

\$showscopes

This system task displays a list of scopes defined in the current interactive scope. The equivalent simulator command is **show**.

\$showvars

This system task displays a list of registers and nets defined in the current interactive scope. The equivalent simulator command is **show**.

Compiler Directives

ModelSim Verilog supports all of the compiler directives defined in the IEEE Std 1364, some Verilog-XL compiler directives, and some that are proprietary.

Many of the compiler directives (such as `timescale) take effect at the point they are defined in the source code and stay in effect until the directive is redefined or until it is reset to its default by a `resetall directive. The effect of compiler directives spans source files, so the order of source files on the compilation command line could be significant. For example, if you have a file that defines some common macros for the entire design, then you might need to place it first in the list of files to be compiled.

The `resetall directive affects only the following directives by resetting them back to their default settings (this information is not provided in the IEEE Std 1364):

```
'celldefine
`default_decay_time
`default_netttype
`delay_mode_distributed
`delay_mode_path
`delay_mode_unit
`delay_mode_zero
`protect
`timescale
`unconnected_drive
`uselib
```

ModelSim Verilog implicitly defines the following macro:

```
`define MODEL_TECH
```

IEEE Std 1364 Compiler Directives

The following compiler directives are described in detail in the IEEE Std 1364.

```
'celldefine
`default_nettype
`define
`else
`elsif
`endcelldefine
`endif
`ifdef
`ifndef
`include
`line
`nounconnected_drive
`resetall
`timescale
`unconnected_drive
`undef
```

Verilog-XL Compatible Compiler Directives

The following compiler directives are provided for compatibility with Verilog-XL.

'default_decay_time <time>

This directive specifies the default decay time to be used in trireg net declarations that do not explicitly declare a decay time. The decay time can be expressed as a real or integer number, or as "infinite" to specify that the charge never decays.

`delay_mode_distributed

This directive disables path delays in favor of distributed delays. See [Delay Modes](#) for details.

`delay_mode_path

This directive sets distributed delays to zero in favor of path delays. See [Delay Modes](#) for details.

`delay_mode_unit

This directive sets path delays to zero and non-zero distributed delays to one time unit. See [Delay Modes](#) for details.

`delay_mode_zero

This directive sets path delays and distributed delays to zero. See [Delay Modes](#) for details.

`uselib

This directive is an alternative to the **-v**, **-y**, and **+libext** source library compiler arguments. See [Verilog-XL uselib Compiler Directive](#) for details.

The following Verilog-XL compiler directives are silently ignored by ModelSim Verilog. Many of these directives are irrelevant to ModelSim Verilog, but may appear in code being ported from Verilog-XL.

```
`accelerate
`autoexpand_vectornets
`disable_portfaults
`enable_portfaults
`expand_vectornets
`noaccelerate
`noexpand_vectornets
`noremove_gatenames
`noremove_netnames
`nosuppress_faults
`remove_gatenames
`remove_netnames
`suppress_faults
```

The following Verilog-XL compiler directives produce warning messages in ModelSim Verilog. These are not implemented in ModelSim Verilog, and any code containing these directives may behave differently in ModelSim Verilog than in Verilog-XL.

```
`default_trireg_strength
`sIGNED
`UNSIGNED
```

Verilog PLI/VPI and SystemVerilog DPI

ModelSim supports the use of the Verilog PLI (Programming Language Interface) and VPI (Verilog Procedural Interface) and the SystemVerilog DPI (Direct Programming Interface). These three interfaces provide a mechanism for defining tasks and functions that communicate with the simulator through a C procedural interface. For more information on the ModelSim implementation, see [Verilog Interfaces to C](#).

Chapter 8

Recording Simulation Results With Datasets

This chapter describes how to save the results of a ModelSim simulation and use them in your simulation flow. In general, any previously recorded simulation data that has been loaded into ModelSim is called a *dataset*.

One common example of a dataset is a wave log format (WLF) file that has been reopened for viewing. In particular, you can save any ModelSim simulation to a wave log format (WLF) file for future viewing or comparison to a current simulation.


A WLF file is a recording of a simulation run that is written as an archive file in binary format and used to drive the debug windows at a later time. The files contain data from logged objects (such as signals and variables) and the design hierarchy in which the logged objects are found. You can record the entire design or choose specific objects.

A WLF file provides you with precise in-simulation and post-simulation debugging capability. You can reload any number of WLF files for viewing or comparing to the active simulation.

You can also create *virtual signals* that are simple logical combinations or functions of signals from different datasets. Each dataset has a logical name to indicate the dataset to which a command applies. This logical name is displayed as a prefix. The current, active simulation is prefixed by "sim:" WLF datasets are prefixed by the name of the WLF file by default.

Figure 8-1 shows two datasets in the Wave window. The current simulation is shown in the top pane along the left side and is indicated by the “sim” prefix. A dataset from a previous simulation is shown in the bottom pane and is indicated by the “gold” prefix.

Figure 8-1. Displaying Two Datasets in the Wave Window

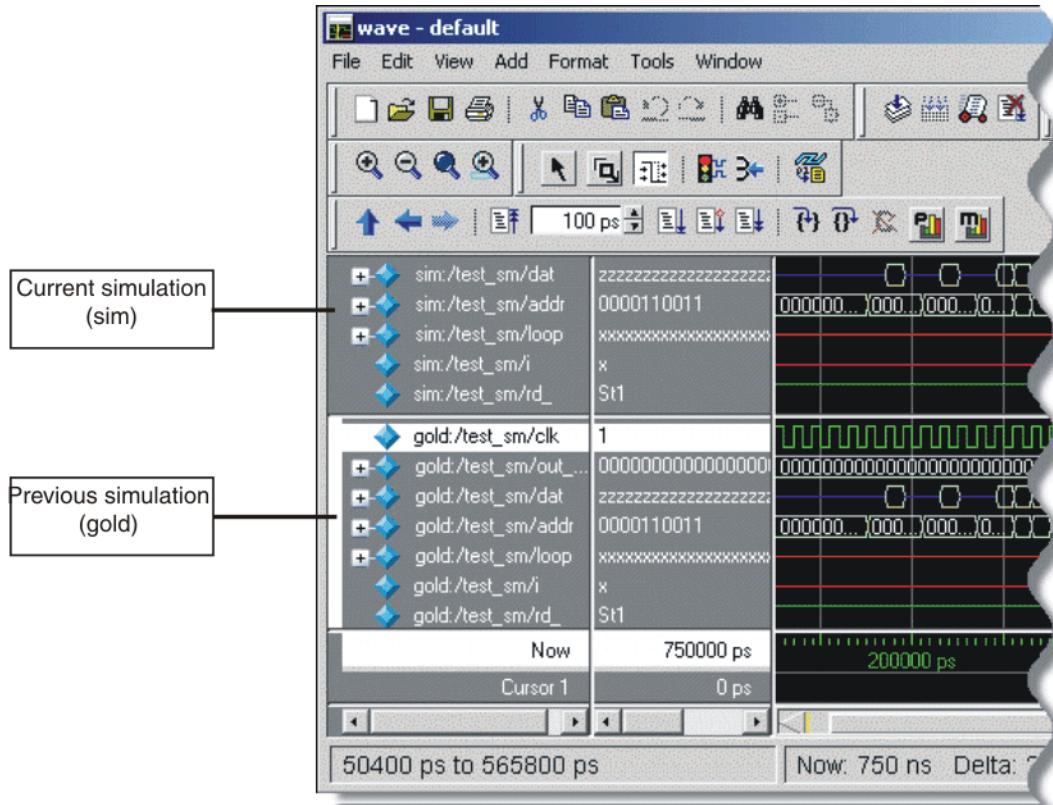

The simulator resolution (see [Simulator Resolution Limit \(Verilog\)](#) or [Simulator Resolution Limit \(VHDL\)](#)) must be the same for all datasets you are comparing, including the current simulation. If you have a WLF file that is in a different resolution, you can use the `wlfman` command to change it.

Saving a Simulation to a WLF File

If you add objects to the Dataflow, List, or Wave windows, or log objects with the `log` command, the results of each simulation run are automatically saved to a WLF file called `vsim.wlf` in the current directory. If you then run a new simulation in the same directory, the `vsim.wlf` file is overwritten with the new results.

If you want to save the WLF file and not have it be overwritten, select the dataset tab in the Workspace and then select **File > Save**. Or, you can use the `-wlf <filename>` argument to the `vsim` command or the `dataset save` command.

Note

If you do not use **dataset save** or **dataset snapshot**, you must end a simulation session with a **quit** or **quit -sim** command in order to produce a valid WLF file. If you don't end the simulation in this manner, the WLF file will not close properly, and ModelSim may issue the error message "bad magic number" when you try to open an incomplete dataset in subsequent sessions. If you end up with a "damaged" WLF file, you can try to "repair" it using the **wlfrecover** command.

WLF File Parameter Overview

There are a number of WLF file parameters that you can control via the *modelsim.ini* file or a simulator argument. This section summarizes the various parameters.

Table 8-1. WLF File Parameters

Feature	vsim argument	modelsim.ini	Default
WLF Filename	-wlf <filename>	WLFFilename=<filename>	<i>vsim.wlf</i>
WLF Size Limit	-wlflslim <n>	WLFSIZELIMIT = <n>	no limit
WLF Time Limit	-wlftlim <t>	WLFTIMELIMIT = <t>	no limit
WLF Compression	-wlfc compress -wlfnocompress	WLFCOMPRESS = 0 1	1 (-wlfc compress)
WLF Optimization ¹	-wlfopt -wlfnoot	WLFOPTIMIZE = 0 1	1 (-wlfopt)
WLF Delete on Quit ^a	-wlfdelteonquit -wlfnodelteonquit	WLFDLTDELETEONQUIT = 0 1	0
WLF Cache Size ^a	-wlfcachesize <n>	WLFCACHESIZE = <n>	0 (no reader cache)
WLF Sim Cache Size	-wlfsimcachesize <n>	WLFSIMCACHESIZE = <n>	0 (no reader cache)
WLF Collapse Mode	-wlfnocollapse -wlfcollapsedelta -wlfcollapsetime	WLFCOLLAPSEMODEL = 0 1 2	1

1. These parameters can also be set using the [dataset config](#) command.

- **WLF Filename** — Specify the name of the WLF file.
- **WLF Size Limit** — Limit the size of a WLF file to <n> megabytes by truncating from the front of the file as necessary.
- **WLF Time Limit** — Limit the size of a WLF file to <t> time by truncating from the front of the file as necessary.

- WLF Compression — Compress the data in the WLF file.
- WLF Optimization — Write additional data to the WLF file to improve draw performance at large zoom ranges. Optimization results in approximately 15% larger WLF files. Disabling WLF optimization also prevents ModelSim from reading a previously generated WLF file that contains optimized data.
- WLF Delete on Quit — Delete the WLF file automatically when the simulation exits. Valid for current simulation dataset (`vsim.wlf`) only.
- WLF Cache Size — Specify the size in megabytes of the WLF reader cache. WLF reader cache size is zero by default. This feature caches blocks of the WLF file to reduce redundant file I/O. If the cache is made smaller or disabled, least recently used data will be freed to reduce the cache to the specified size.
- WLFSimCacheSize — Specify the size in megabytes of the WLF reader cache for the current simulation dataset only. This makes it easier to set different sizes for the WLF reader cache used during simulation and those used during post-simulation debug. If neither `-wlfsimcachesize` nor `WLFSimCacheSize` are specified, the `-wlfcachesize` or `WLFCacheSize` settings will be used.
- WLF Collapse Mode —WLF event collapsing has three settings: disabled, delta, time:
 - When disabled, all events and event order are preserved.
 - Delta mode records an object's value at the end of a simulation delta (iteration) only. Default.
 - Time mode records an object's value at the end of a simulation time step only.

Limiting the WLF File Size

The WLF file size can be limited with the [WLFSizeLimit](#) simulation control variable in the *modelsim.ini* file or with the `-wlfslim` switch for the [vsim](#) command. Either method specifies the number of megabytes for WLF file recording. A WLF file contains event, header, and symbol portions. The size restriction is placed on the event portion only. When ModelSim exits, the entire header and symbol portion of the WLF file is written. Consequently, the resulting file will be larger than the size specified with `-wlfslim`. If used in conjunction with `-wlftlim`, the more restrictive of the limits takes precedence.

The WLF file can be limited by time with the [WLFTimeLimit](#) simulation control variable in the *modelsim.ini* file or with the `-wlftlim` switch for the [vsim](#) command. Either method specifies the duration of simulation time for WLF file recording. The duration specified should be an integer of simulation time at the current resolution; however, you can specify a different resolution if you place curly braces around the specification. For example,

```
vsim -wlftlim {5000 ns}
```

sets the duration at 5000 nanoseconds regardless of the current simulator resolution.

The time range begins at the current simulation time and moves back in simulation time for the specified duration. In the example above, the last 5000ns of the current simulation is written to the WLF file.

If used in conjunction with -wlfslim, the more restrictive of the limits will take effect.


The -wlfslim and -wlftlim switches were designed to help users limit WLF file sizes for long or heavily logged simulations. When small values are used for these switches, the values may be overridden by the internal granularity limits of the WLF file format. The WLF file saves data in a record-like format. The start of the record (checkpoint) contains the values and is followed by transition data. This continues until the next checkpoint is written. When the WLF file is limited with the -wlfslim and -wlftlim switches, only whole records are truncated. So if, for example, you are logging only a couple of signals and the amount of data is so small there is only one record in the WLF file, the record cannot be truncated; and the data for the entire run is saved in the WLF file.

Opening Datasets

To open a dataset, do one of the following:

- Select **File > Open** to open the Open File dialog and set the “Files of type” field to Log Files (*.wlf). Then select the .wlf file you want and click the Open button.
- Select **File > Datasets** to open the Dataset Browser; then click the Open button to open the Open Dataset dialog ([Figure 8-2](#)).

Figure 8-2. Open Dataset Dialog Box

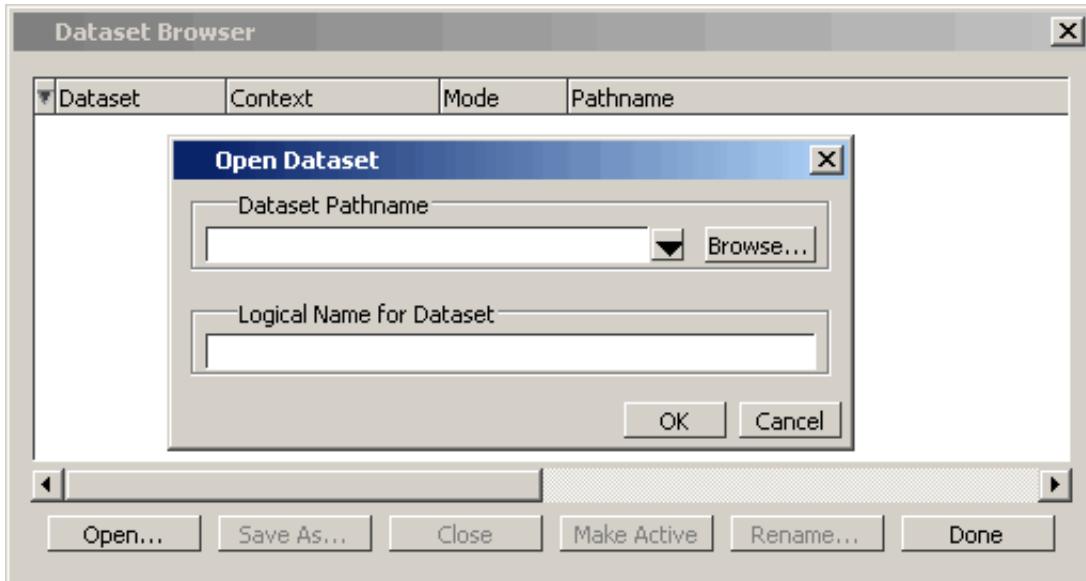

- Use the [dataset open](#) command.

The Open Dataset dialog includes the following options:

- **Dataset Pathname** — Identifies the path and filename of the WLF file you want to open.
- **Logical Name for Dataset** — This is the name by which the dataset will be referred. By default this is the name of the WLF file.

Viewing Dataset Structure

Each dataset you open creates a structure tab in the Main window workspace. The tab is labeled with the name of the dataset and displays a hierarchy of the design units in that dataset.

The graphic below shows three structure tabs: one for the active simulation (*sim*) and one each for two datasets (*test* and *gold*).

Figure 8-3. Structure Tabs in Workspace Pane

Instance	Design unit	Design unit type	Visibility
test_ringbuf	test_ringbuf	ScModule	acc=<full>
clock	sc_clock	ScModule	acc=<full>
ring_INST	ringbuf	ScModule	acc=<full>
block1	control(rtl)	Architecture	+acc=<none>
block2	store	Module	+acc=<full>
block3	retrieve	Module	+acc=<full>
standard	standard	Package	+acc=v
std_logic_1164	std_logic_1...	Package	+acc=v
std_logic_arith	std_logic_arith	Package	+acc=v
std_logic_unsigned	std_logic_un...	Package	+acc=v
reset_generator	test_ringbuf	ScMethod	
generate_data	test_ringbuf	ScMethod	
compare_data	test_ringbuf	ScMethod	
print_error	test_ringbuf	ScMethod	
print_restore	test_ringbuf	ScMethod	

If you have too many tabs to display in the available space, you can scroll the tabs left or right by clicking the arrow icons at the bottom right-hand corner of the window.

Structure Tab Columns

Each structure tab displays three columns by default:

Table 8-2. Structure Tab Columns

Column name	Description
Instance	the name of the instance
Design unit	the name of the design unit
Design unit type	the type (e.g., Module, Entity, etc.) of the design unit


You can hide or show columns by right-clicking a column name and selecting the name on the list.

Managing Multiple Datasets

GUI

When you have one or more datasets open, you can manage them using the **Dataset Browser**. To open the browser, select **File > Datasets**.

Figure 8-4. The Dataset Browser

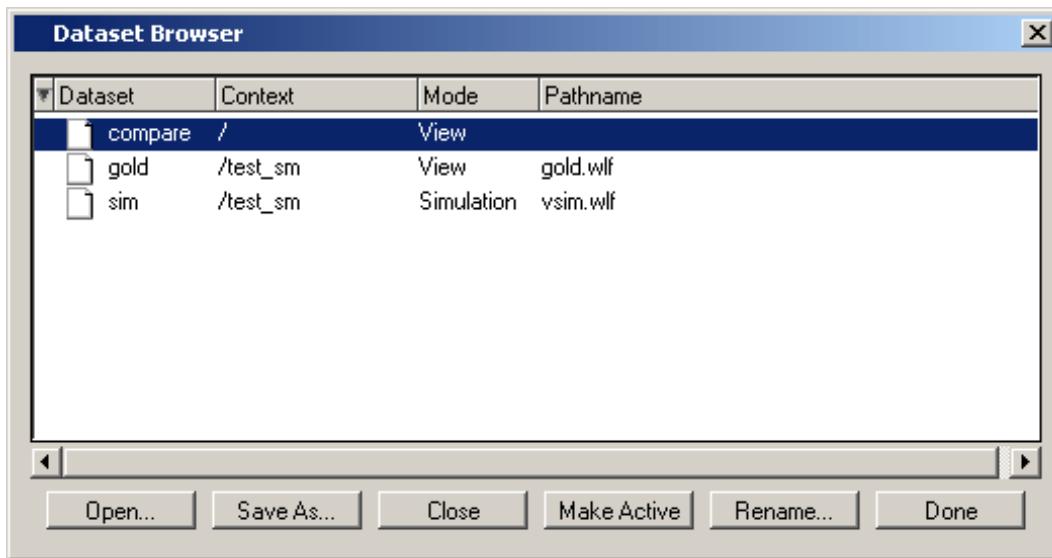

Command Line

You can open multiple datasets when the simulator is invoked by specifying more than one **vsm -view <filename>** option. By default the dataset prefix will be the filename of the WLF

file. You can specify a different dataset name as an optional qualifier to the **vsim -view** switch on the command line using the following syntax:

```
-view <dataset>=<filename>
```

For example:

```
vsim -view foo=vsim.wlf
```

ModelSim designates one of the datasets to be the "active" dataset, and refers all names without dataset prefixes to that dataset. The active dataset is displayed in the context path at the bottom of the Main window. When you select a design unit in a dataset's structure tab, that dataset becomes active automatically. Alternatively, you can use the Dataset Browser or the [environment](#) command to change the active dataset.

Design regions and signal names can be fully specified over multiple WLF files by using the dataset name as a prefix in the path. For example:

```
sim:/top/alu/out
view:/top/alu/out
golden:.top.alu.out
```

Dataset prefixes are not required unless more than one dataset is open, and you want to refer to something outside the active dataset. When more than one dataset is open, ModelSim will automatically prefix names in the Wave and List windows with the dataset name. You can change this default by selecting **Tools > Window Preferences** (Wave and List windows).

ModelSim also remembers a "current context" within each open dataset. You can toggle between the current context of each dataset using the [environment](#) command, specifying the dataset without a path. For example:

```
env foo:
```

sets the active dataset to **foo** and the current context to the context last specified for **foo**. The context is then applied to any unlocked windows.

The current context of the current dataset (usually referred to as just "current context") is used for finding objects specified without a path.

The Objects pane can be locked to a specific context of a dataset. Being locked to a dataset means that the pane will update only when the content of that dataset changes. If locked to both a dataset and a context (e.g., test: /top/foo), the pane will update only when that specific context changes. You specify the dataset to which the pane is locked by selecting **File > Environment**.

Restricting the Dataset Prefix Display

The default for dataset prefix viewing is set with a variable in *pref.tcl*, **PrefMain(DisplayDatasetPrefix)**. Setting the variable to 1 will display the prefix, setting it to

0 will not. It is set to 1 by default. Either edit the *pref.tcl* file directly or use the **Tools > Edit Preferences** command to change the variable value.


Additionally, you can restrict display of the dataset prefix if you use the **environment -nodataset** command to view a dataset. To display the prefix use the **environment** command with the **-dataset** option (you won't need to specify this option if the variable noted above is set to 1). The **environment** command line switches override the *pref.tcl* variable.

Saving at Intervals with Dataset Snapshot

Dataset Snapshot lets you periodically copy data from the current simulation WLF file to another file. This is useful for taking periodic "snapshots" of your simulation or for clearing the current simulation WLF file based on size or elapsed time.

Once you have logged the appropriate objects, select **Tools > Dataset Snapshot** (Wave window).

Figure 8-5. Dataset Snapshot Dialog

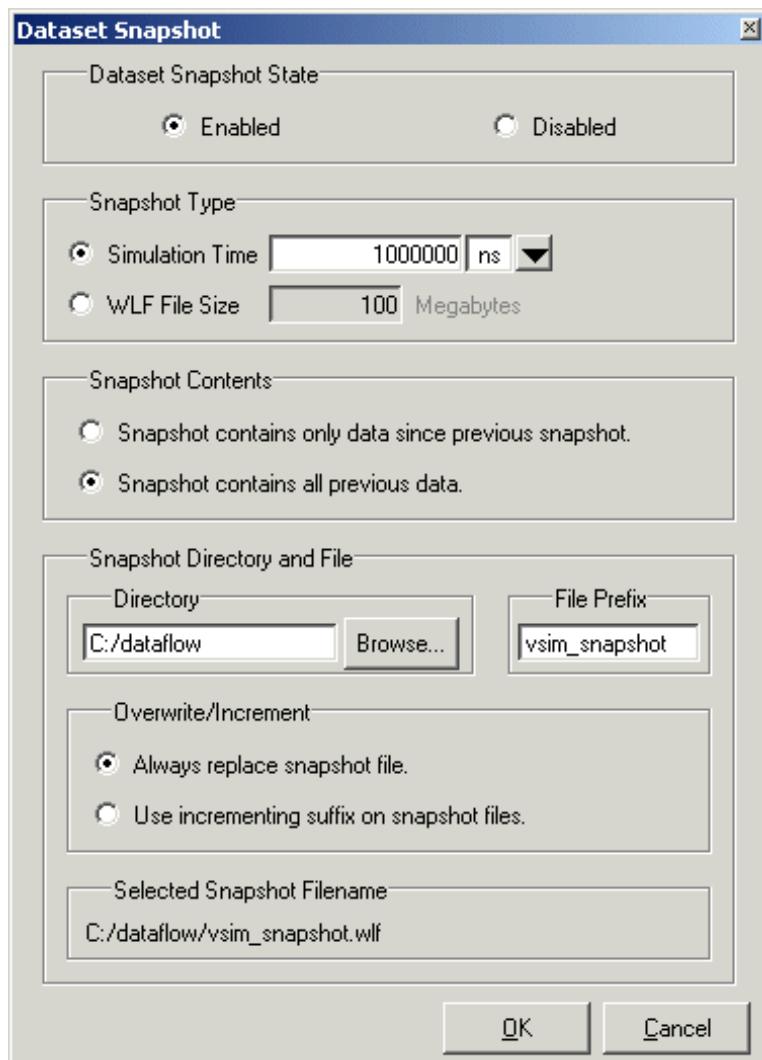

Collapsing Time and Delta Steps

By default ModelSim collapses delta steps. This means each logged signal that has events during a simulation delta has its final value recorded to the WLF file when the delta has expired. The event order in the WLF file matches the order of the first events of each signal.

You can configure how ModelSim collapses time and delta steps using arguments to the `vsim` command or by setting the `WLFCollapseMode` variable in the `modelsim.ini` file. The table below summarizes the arguments and how they affect event recording.

Table 8-3. vsim Arguments for Collapsing Time and Delta Steps

vsim argument	effect	modelsim.ini setting
<code>-wlfnocollapse</code>	All events for each logged signal are recorded to the WLF file in the exact order they occur in the simulation.	<code>WLFCollapseMode = 0</code>
<code>-wlfcollapsesdelta</code>	Each logged signal which has events during a simulation delta has its final value recorded to the WLF file when the delta has expired. Default.	<code>WLFCollapseMode = 1</code>
<code>-wlfcollapsetime</code>	Same as delta collapsing but at the timestep granularity.	<code>WLFCollapseMode = 2</code>

When a run completes that includes single stepping or hitting a breakpoint, all events are flushed to the WLF file regardless of the time collapse mode. It's possible that single stepping through part of a simulation may yield a slightly different WLF file than just running over that piece of code. If particular detail is required in debugging, you should disable time collapsing.


Virtual Objects

Virtual objects are signal-like or region-like objects created in the GUI that do not exist in the ModelSim simulation kernel. ModelSim supports the following kinds of virtual objects:

- [Virtual Signals](#)
- [Virtual Functions](#)
- [Virtual Regions](#)
- [Virtual Types](#)

Virtual objects are indicated by an orange diamond as illustrated by *bus* in [Figure 8-6](#):

Figure 8-6. Virtual Objects Indicated by Orange Diamond

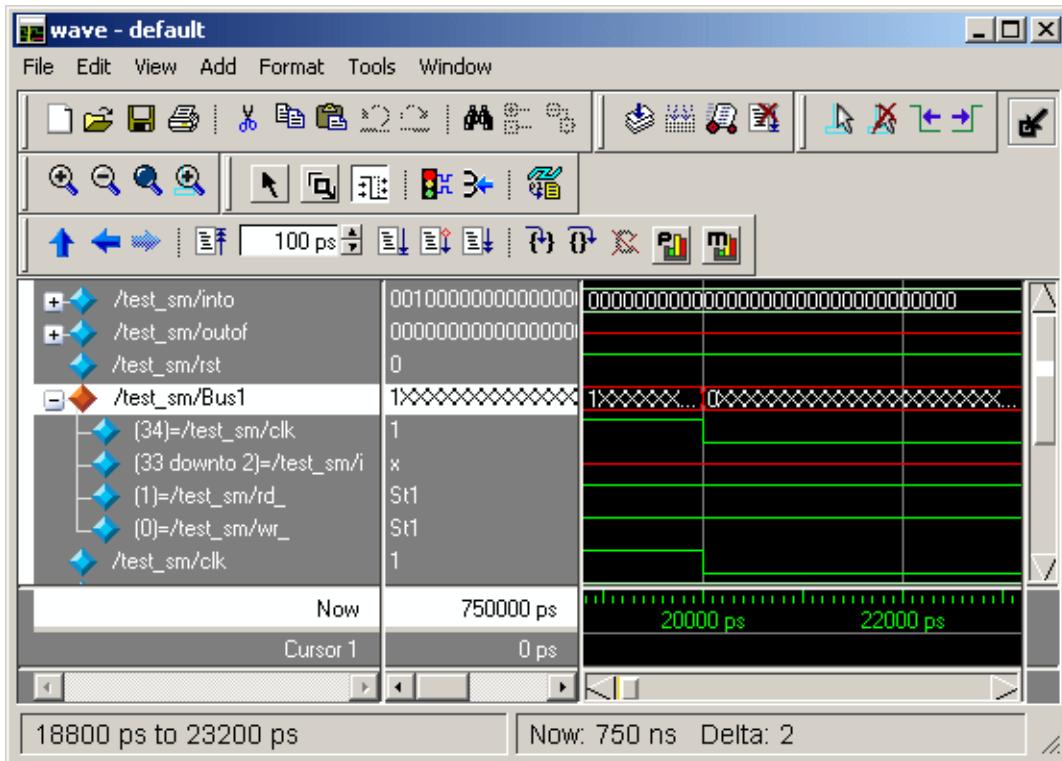

Virtual Signals

Virtual signals are aliases for combinations or subelements of signals written to the WLF file by the simulation kernel. They can be displayed in the Objects, List, and Wave windows, accessed by the **examine** command, and set using the **force** command. You can create virtual signals using the **Tools > Combine Signals** (Wave and List windows) menu selections or by using the **virtual signal** command. Once created, virtual signals can be dragged and dropped from the Objects pane to the Wave and List windows. In addition, you can create virtual signals for the Wave window using the Virtual Signal Builder (see [Creating a Virtual Signal](#)).

Virtual signals are automatically attached to the design region in the hierarchy that corresponds to the nearest common ancestor of all the elements of the virtual signal. The **virtual signal** command has an **-install <region>** option to specify where the virtual signal should be installed. This can be used to install the virtual signal in a user-defined region in order to reconstruct the original RTL hierarchy when simulating and driving a post-synthesis, gate-level implementation.

A virtual signal can be used to reconstruct RTL-level design buses that were broken down during synthesis. The **virtual hide** command can be used to hide the display of the broken-down bits if you don't want them cluttering up the Objects pane.

If the virtual signal has elements from more than one WLF file, it will be automatically installed in the virtual region *virtuals:/Signals*.

Virtual signals are not hierarchical – if two virtual signals are concatenated to become a third virtual signal, the resulting virtual signal will be a concatenation of all the scalar elements of the first two virtual signals.

The definitions of virtuals can be saved to a macro file using the [virtual save](#) command. By default, when quitting, ModelSim will append any newly-created virtuals (that have not been saved) to the *virtuals.do* file in the local directory.

If you have virtual signals displayed in the Wave or List window when you save the Wave or List format, you will need to execute the *virtuals.do* file (or some other equivalent) to restore the virtual signal definitions before you re-load the Wave or List format during a later run. There is one exception: "implicit virtuals" are automatically saved with the Wave or List format.

Implicit and Explicit Virtuals

An implicit virtual is a virtual signal that was automatically created by ModelSim without your knowledge and without you providing a name for it. An example would be if you expand a bus in the Wave window, then drag one bit out of the bus to display it separately. That action creates a one-bit virtual signal whose definition is stored in a special location, and is not visible in the Objects pane or to the normal virtual commands.

All other virtual signals are considered "explicit virtuals".

Virtual Functions

Virtual functions behave in the GUI like signals but are not aliases of combinations or elements of signals logged by the kernel. They consist of logical operations on logged signals and can be dependent on simulation time. They can be displayed in the Objects, Wave, and List windows and accessed by the [examine](#) command, but cannot be set by the [force](#) command.

Examples of virtual functions include the following:

- a function defined as the inverse of a given signal
- a function defined as the exclusive-OR of two signals
- a function defined as a repetitive clock
- a function defined as "the rising edge of CLK delayed by 1.34 ns"

Virtual functions can also be used to convert signal types and map signal values.

The result type of a virtual function can be any of the types supported in the GUI expression syntax: integer, real, boolean, std_logic, std_logic_vector, and arrays and records of these types.

Verilog types are converted to VHDL 9-state std_logic equivalents and Verilog net strengths are ignored.

Virtual functions can be created using the [virtual function](#) command.

Virtual functions are also implicitly created by ModelSim when referencing bit-selects or part-selects of Verilog registers in the GUI, or when expanding Verilog registers in the Objects, Wave, or List window. This is necessary because referencing Verilog register elements requires an intermediate step of shifting and masking of the Verilog "vreg" data structure.

Virtual Regions

User-defined design hierarchy regions can be defined and attached to any existing design region or to the virtuals context tree. They can be used to reconstruct the RTL hierarchy in a gate-level design and to locate virtual signals. Thus, virtual signals and virtual regions can be used in a gate-level design to allow you to use the RTL test bench.

Virtual regions are created and attached using the [virtual region](#) command.

Virtual Types

User-defined enumerated types can be defined in order to display signal bit sequences as meaningful alphanumeric names. The virtual type is then used in a type conversion expression to convert a signal to values of the new type. When the converted signal is displayed in any of the windows, the value will be displayed as the enumeration string corresponding to the value of the original signal.

Virtual types are created using the [virtual type](#) command.

Chapter 9

Waveform Analysis

When your simulation finishes, you will often want to analyze waveforms to assess and debug your design. Designers typically use the Wave window for waveform analysis. However, you can also look at waveform data in a textual format in the List window.

To analyze waveforms in ModelSim, follow these steps:

1. Compile your files.
2. Load your design.
3. Add objects to the Wave or List window.

```
add wave <object_name>
add list <object_name>
```

4. Run the design.

Objects You Can View

The list below identifies the types of objects can be viewed in the Wave or List window.

- **VHDL objects** — (indicated by dark blue diamond in the Wave window)
signals, aliases, process variables, and shared variables
- **Verilog and SystemVerilog objects** — (indicated by light blue diamond in the Wave window)
nets, registers, variables, named events, and classes
- **Virtual objects** — (indicated by an orange diamond in the Wave window)
virtual signals, buses, and functions, see; [Virtual Objects](#) for more information

Wave Window Overview

The Wave window opens in the MDI frame of the Main window as shown [Figure 9-1](#). The window can be undocked from the main window by clicking the Undock button in the window header or by using the **view -undock wave** command. Setting the **PrefMain(ViewUnDocked)** **wave** preference variable will change the default behavior so that the Wave window will open undocked each time you start ModelSim.

Figure 9-1. Undocking the Wave Window

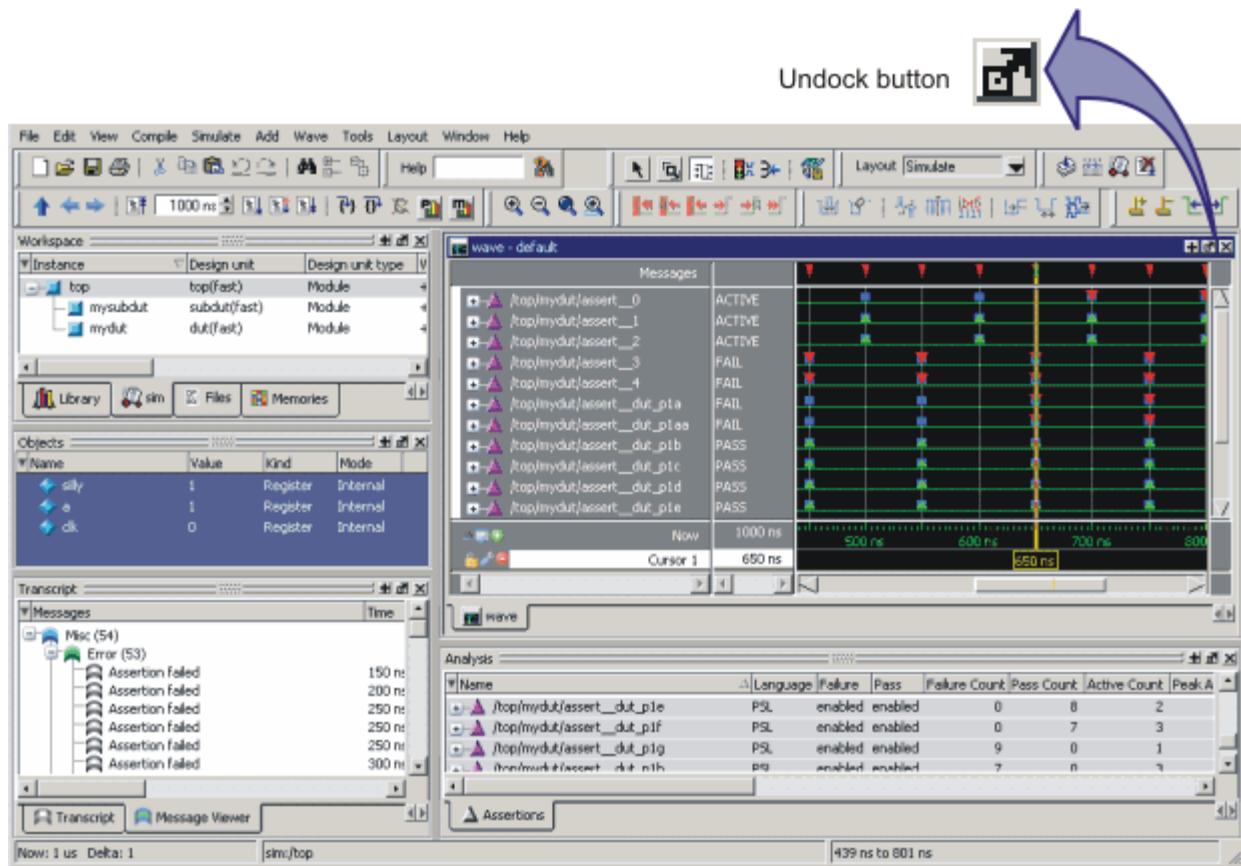
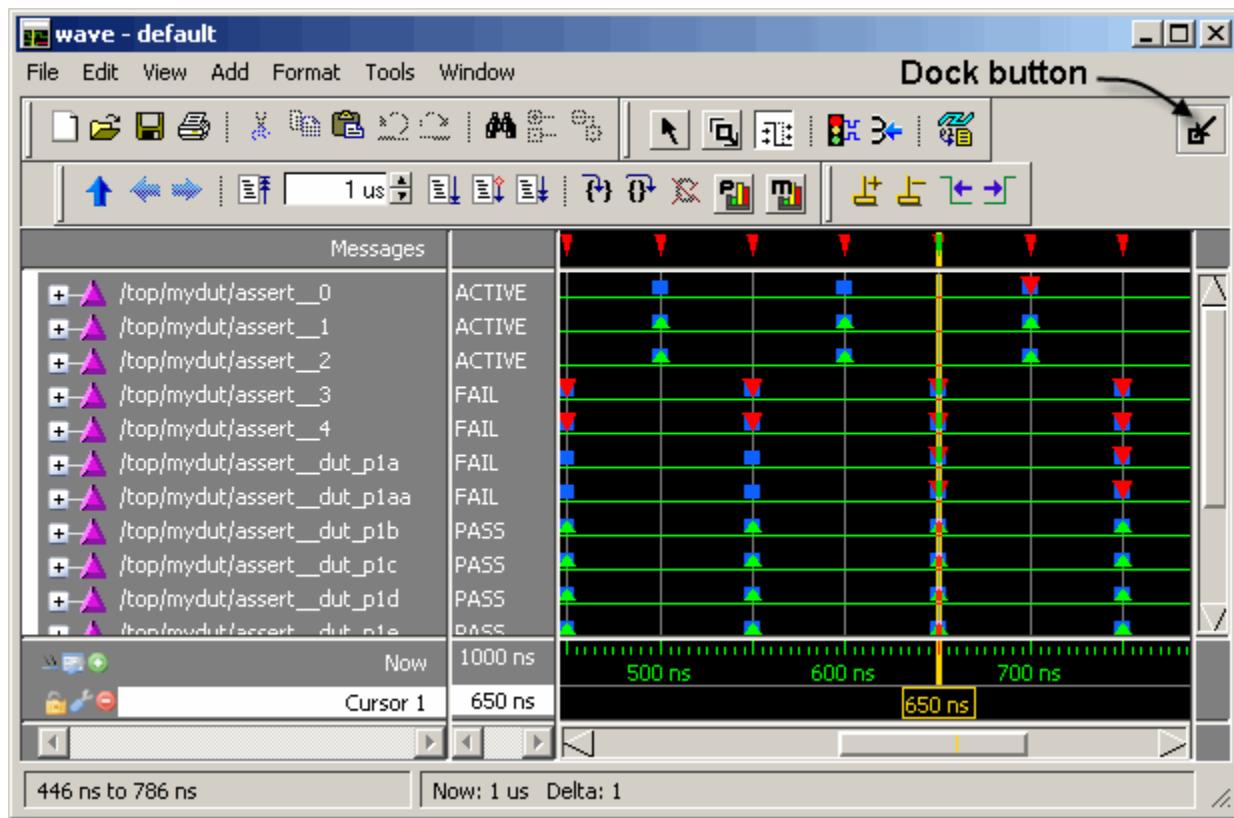



Figure 9-2 is an example of a Wave window that is undocked from the MDI frame. To dock the Wave window in the Main window, click the Dock button.

When the Wave window is undocked, all menus and icons associated with Wave window functions will appear in the menu and toolbar areas.

Figure 9-2. Docking the Wave Window

When the Wave window is docked in the Main window, all menus and icons that were in the undocked Wave window move into the Main window menu bar and toolbar.

The Wave window is divided into a number of window panes. The Object Pathnames Pane displays object paths.

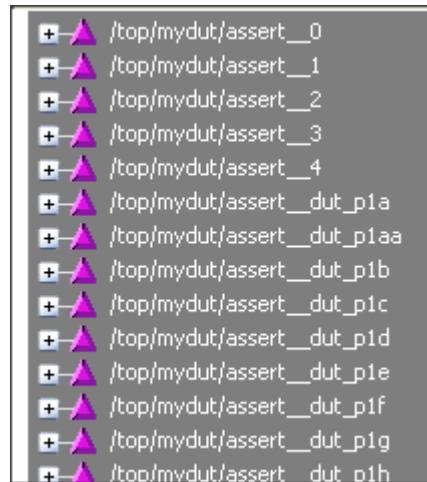Figure 9-3. Wave Window Object Pathnames Pane


The Object Values Pane displays the value of each object in the pathnames pane at the time of the selected cursor.

Figure 9-4. Wave Window Object Values Pane

010000000000
000000000000
0
1
170
187
0000100000
xxxxxxxxxxxx
x
St0
St1


The Waveform Pane displays the object waveforms over the time of the simulation.

Figure 9-5. Wave Window Waveform Pane

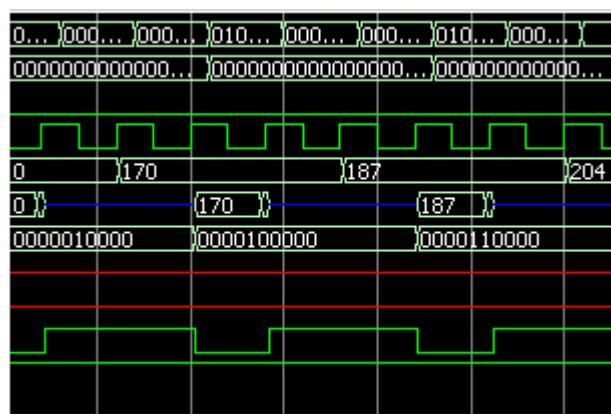

The Cursor Pane displays cursor names, cursor values and the cursor locations on the timeline. This pane also includes a toolbox that gives you quick access to cursor and timeline features and configurations.

Figure 9-6. Wave Window Cursor Pane

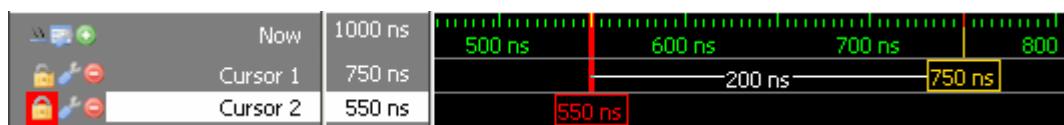

All of these panes can be resized by clicking and dragging the bar between any two panes.

In addition to these panes, the Wave window also contains a Messages bar at the top of the window. The Messages bar contains indicators pointing to the times at which a message was output from the simulator.

Figure 9-7. Wave Window Messages Bar

List Window Overview

The List window displays simulation results in tabular format. Common tasks that people use the window for include:

- Using gating expressions and trigger settings to focus in on particular signals or events. See [Configuring New Line Triggering in the List Window](#).
- Debugging delta delay issues. See [Delta Delays](#) for more information.

The window is divided into two adjustable panes, which allows you to scroll horizontally through the listing on the right, while keeping time and delta visible on the left.

Figure 9-8. Tabular Format of the List Window

A screenshot of the ModelSim List window titled "list". The window has a menu bar with File, Edit, View, Add, Tools, and Window. Below the menu is a toolbar with various icons. The main area is a table with two columns. The left column shows time values (490000 to 529000) and delta values (+0 to +1). The right column shows signal names and their corresponding binary values. A specific row at the bottom is highlighted in black, showing time 511000, delta +2, signal /test_sm/out_wire, and binary value 00000000 171 0 1. The table has a scrollbar on the right side.

ps	delta	/test_sm/into	/test_sm/outof	/test_sm/rst	/test_sm/clk	/test_sm/out_wire
490000	+0	00000000	171 0 1	0000000000000000000000000000000010101011		
491000	+1	00000000	171 0 1	0000000000000000000000000000000010111011		
495000	+0	00000000	171 0 1	0000000000000000000000000000000010111011		
500000	+0	00000000	171 0 0	0000000000000000000000000000000010111011		
510000	+0	00000000	171 0 1	0000000000000000000000000000000010111011		
511000	+1	00000000	171 0 1	0000000000000000000000000000000010111011		
511000	+2	00000000	171 0 1	0000000000000000000000000000000010111011		
515000	+0	40000000	187 0 1	0000000000000000000000000000000010111011		
520000	+0	40000000	187 0 0	0000000000000000000000000000000010111011		
529000	+1	40000000	187 0 0	0000000000000000000000000000000010111011		

Adding Objects to the Wave or List Window

You can add objects to the Wave or List window in several ways.

Adding Objects with Drag and Drop

You can drag and drop objects into the Wave or List window from the Workspace, Active Processes, Memory, Objects, Source, or Locals panes. You can also drag objects from the Wave window to the List window and vice versa.

Select the objects in the first window, then drop them into the Wave window. Depending on what you select, all objects or any portion of the design can be added.

Adding Objects with Menu Selections

The **Add** menu in the Main windows let you add objects to the Wave window, List window, or Log file. You can also add objects using right-click context menus. For example, if you want to add all signals in a design to the Wave window you can do one of the following:

- Right-click a design unit in a structure view (i.e., the sim tab of the Workspace pane) and select **Add > Add All Signals to Wave** from the popup context menu.
- Right-click anywhere in the Objects pane and select **Add to Wave > Signals in Design** from the popup context menu.

Adding Objects with a Command

Use the [add list](#) or [add wave](#) commands to add objects from the command line. For example:

VSIM> add wave /proc/a

Adds signal */proc/a* to the Wave window.

VSIM> add list *

Adds all the objects in the current region to the List window.

VSIM> add wave -r /*

Adds all objects in the design to the Wave window.

Adding Objects with a Window Format File


Select **File > Load** and specify a previously saved format file. See [Saving the Window Format](#) for details on how to create a format file.

Measuring Time with Cursors in the Wave Window

ModelSim uses cursors to measure time in the Wave window. Cursors extend a vertical line over the waveform display and identify a specific simulation time. Multiple cursors can be used to measure time intervals, as shown in the graphic below.

When the Wave window is first drawn it contains two cursors — the **Now** cursor, and **Cursor 1** (Figure 9-9).

Figure 9-9. Original Names of Wave Window Cursors

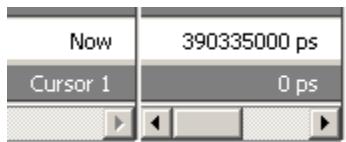


The **Now** cursor is always locked to the current simulation time and it is not manifested as a graphical object (vertical cursor bar) in the Wave window.

Cursor 1 is located at time zero. Clicking anywhere in the waveform display moves the **Cursor 1** vertical cursor bar to the mouse location and makes this cursor the selected cursor. The selected cursor is drawn as a bold solid line; all other cursors are drawn with thin lines.

Cursor and Timeline Toolbox

The Cursor and Timeline Toolbox on the left side of the cursor pane gives you quick access to cursor and timeline features.

Figure 9-10. Cursor and Timeline Toolbox

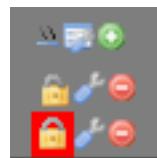

The action for each toolbox icon is shown in Table 9-1.

Table 9-1. Cursor and Timeline Toolbox Icons and Actions

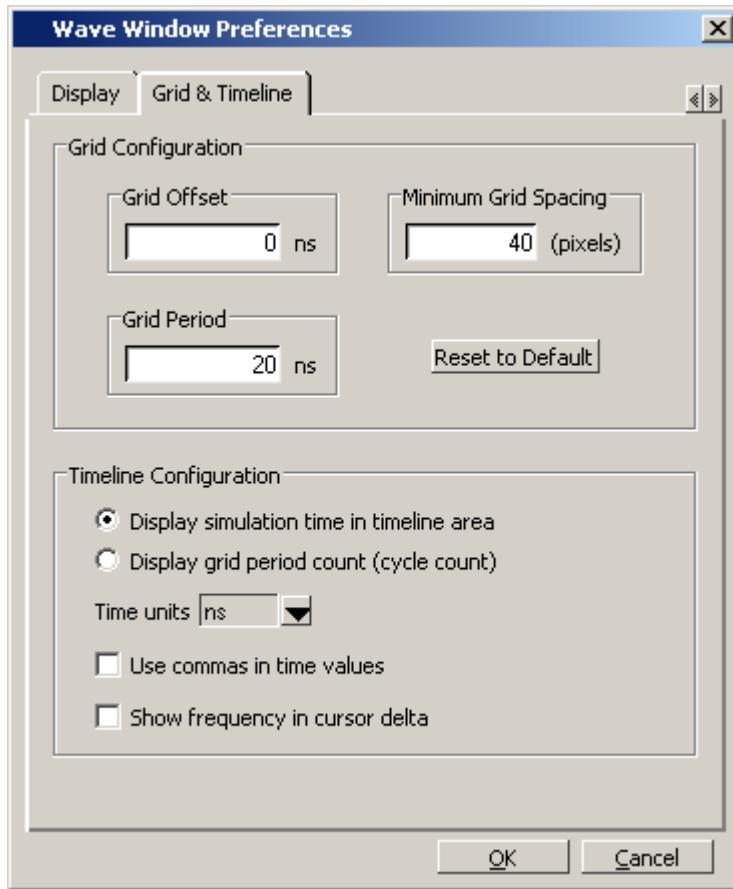
Icon	Action
	Toggle short names <-> full names
	Edit grid and timeline properties
	Insert cursor

Table 9-1. Cursor and Timeline Toolbox Icons and Actions

Icon	Action
	Toggle lock on cursor to prevent it from moving
	Edit this cursor
	Remove this cursor

The **Toggle short names <-> full names** icon allows you to switch from displaying full pathnames (the default) in the Pathnames Pane to displaying short pathnames.

The **Edit grid and timeline properties** icon opens the Wave Window Properties dialog to the Grid & Timeline tab ([Figure 9-11](#)).

Figure 9-11. Grid and Timeline Properties

- The Grid Configuration selections allow you to set grid offset, minimum grid spacing, and grid period. You can also reset these grid configuration settings to their default values.

- The Timeline Configuration selections give you a user-definable time scale. You can display simulation time on a timeline or a clock cycle count. If you select Display simulation time in timeline area, use the Time Units dropdown list to select one of the following as the timeline unit:

fs, ps, ns, us, ms, sec, min, hr

Note


 The time unit displayed in the Wave window does not affect the simulation time that is currently defined.

The current configuration is saved with the wave format file so you can restore it later.

The **Show frequency in cursor delta** box causes the timeline to display the difference (delta) between adjacent cursors as frequency. By default, the timeline displays the delta between adjacent cursors as time.

To add cursors when the Wave window is active, click the Insert Cursor icon, or choose **Add > Wave > Cursor** from the menu bar. Each added cursor is given a default cursor name (Cursor 2, Cursor 3, etc.) which can be changed by simply right-clicking the cursor name, then typing in a new name, or by clicking the **Edit this cursor** icon. The Edit this cursor icon will open the Cursor Properties dialog (Figure 9-12), where you assign a cursor name and time. You can also lock the cursor to the specified time.

Figure 9-12. Cursor Properties Dialog Box

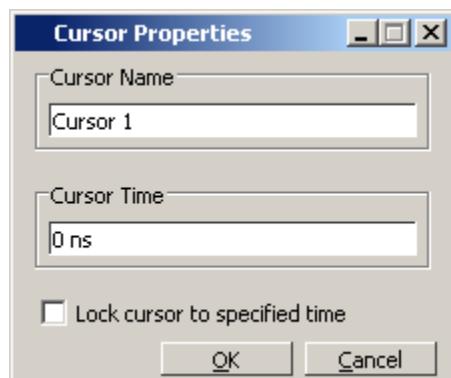

Working with Cursors

The table below summarizes common cursor actions.

Table 9-2. Actions for Cursors

Action	Menu command (Wave window docked)	Menu command (Wave window undocked)	Icon
Add cursor	Add > Wave > Cursor	Add > Cursor	

Table 9-2. Actions for Cursors (cont.)

Action	Menu command (Wave window docked)	Menu command (Wave window undocked)	Icon
Edit cursor	Wave > Edit Cursor	Edit > Edit Cursor	
Delete cursor	Wave > Delete Cursor	Edit > Delete Cursor	
Zoom In on Active Cursor	Wave > Zoom > Zoom Cursor	View > Zoom > Zoom Cursor	NA
Lock cursor	Wave > Edit Cursor	Edit > Edit Cursor	
Select a cursor	Wave > Cursors	View > Cursors	NA

Shortcuts for Working with Cursors

There are a number of useful keyboard and mouse shortcuts related to the actions listed above:

- Select a cursor by clicking the cursor name.
- Jump to a hidden cursor (one that is out of view) by double-clicking the cursor name.
- Name a cursor by right-clicking the cursor name and entering a new value. Press **<Enter>** on your keyboard after you have typed the new name.
- Move a locked cursor by holding down the **<shift>** key and then clicking-and-dragging the cursor.
- Move a cursor to a particular time by right-clicking the cursor value and typing the value to which you want to scroll. Press **<Enter>** on your keyboard after you have typed the new value.

Understanding Cursor Behavior

The following list describes how cursors behave when you click in various panes of the Wave window:

- If you click in the waveform pane, the closest unlocked cursor to the mouse position is selected and then moved to the mouse position.
- Clicking in a horizontal track in the cursor pane selects that cursor and moves it to the mouse position.
- Cursors snap to the nearest waveform edge to the left if you click or drag a cursor along the selected waveform to within ten pixels of a waveform edge. You can set the snap distance in the Display tab of the Window Preferences dialog. Select **Tools > Options > Wave Preferences** when the Wave window is docked in the Main window MDI frame.


Select **Tools > Window Preferences** when the Wave window is a stand-alone, undocked window.

- You can position a cursor without snapping by dragging in the cursor pane below the waveforms.

Jumping to a Signal Transition

You can move the active (selected) cursor to the next or previous transition on the selected signal using these two toolbar icons shown in [Figure 9-13](#).

Figure 9-13. Find Previous and Next Transition Icons

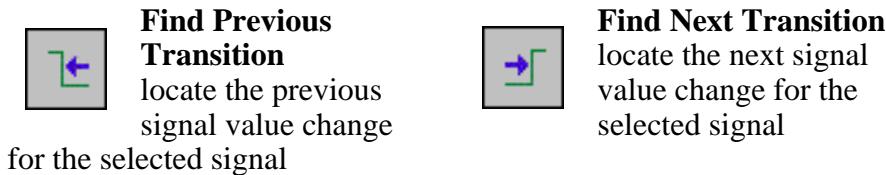


These actions will not work on locked cursors.


Linking Cursors

Cursors within the Wave window can be linked together, allowing you to move two or more cursors together across the simulation timeline. You simply click one of the linked cursors and drag it left or right on the timeline. The other linked cursors will move by the same amount of time. You can link all displayed cursors by right-clicking the time value of any cursor in the timeline, as shown in [Figure 9-14](#), and selecting **Cursor Linking > Link All**.

Figure 9-14. Cursor Linking Menu

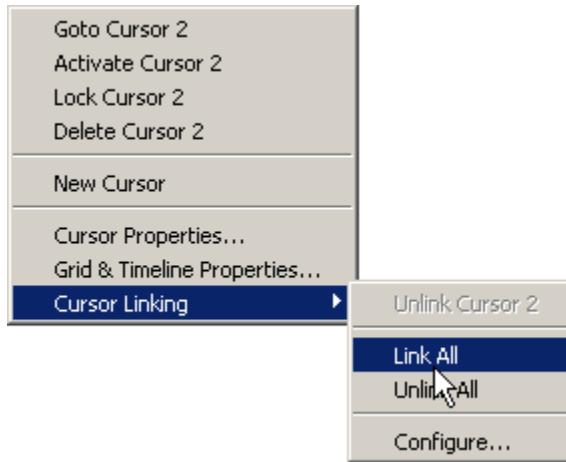


You can link and unlink selected cursors by selecting **Cursor Linking > Configure** to open the **Configure Cursor Links** dialog ([Figure 9-15](#)).

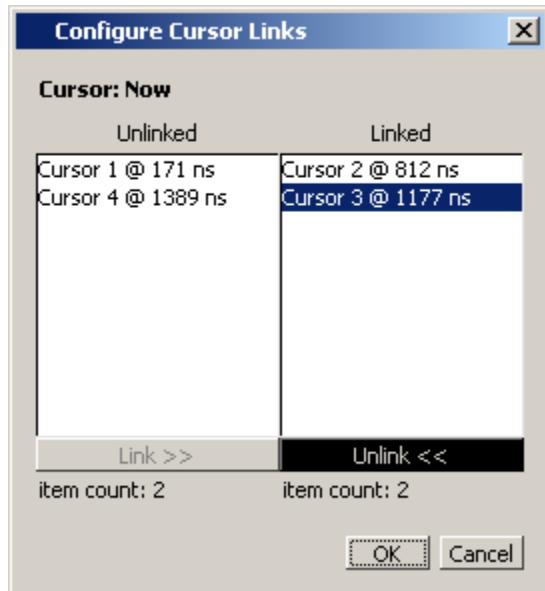Figure 9-15. Configure Cursor Links Dialog

Setting Time Markers in the List Window

Time markers in the List window are similar to cursors in the Wave window. Time markers tag lines in the data table so you can quickly jump back to that time. Markers are indicated by a thin box surrounding the marked line.

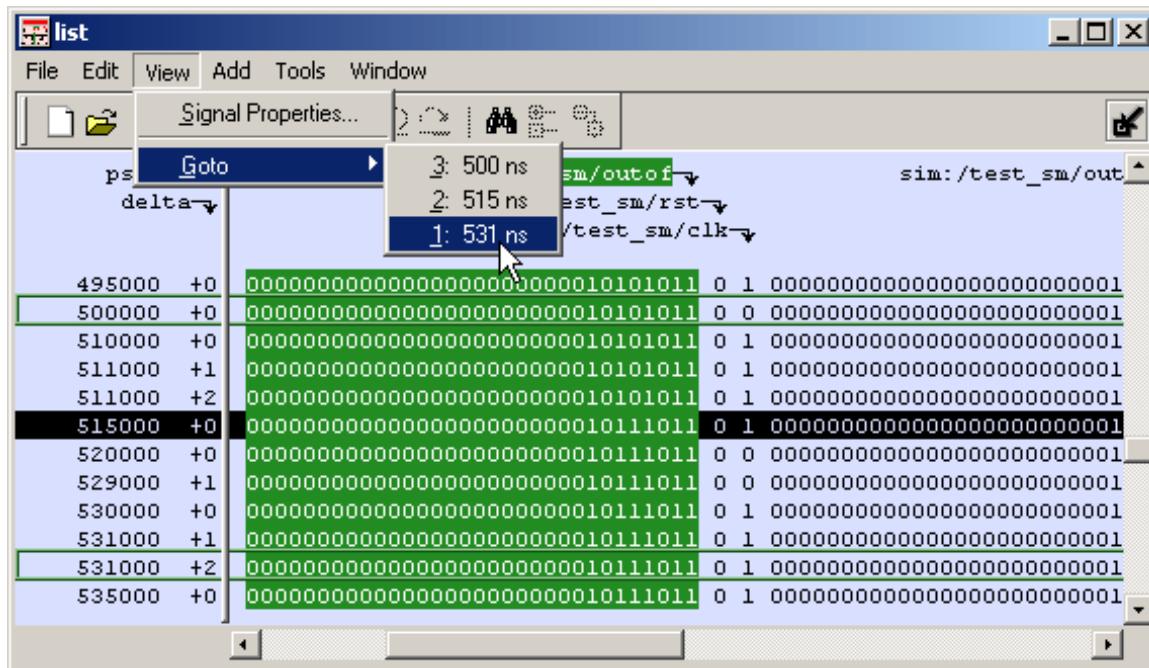Figure 9-16. Time Markers in the List Window

Working with Markers

The table below summarizes actions you can take with markers.

Table 9-3. Actions for Time Markers

Action	Method
Add marker	Select a line and then select Edit > Add Marker
Delete marker	Select a tagged line and then select Edit > Delete Marker
Goto marker	Select View > Goto > <time>

Expanded Time in the Wave and List Windows

When analyzing a design using ModelSim, you can see a value for each object at any time step in the simulation. If logged in the *.wlf* file, the values at any time step prior to and including the current simulation time are displayed in the Wave and List windows, or by using the [examine](#) command.

Some objects, however, can change values more than once in a given time step. These intermediate values are of interest when debugging glitches on clocked objects or race conditions. With a few exceptions (viewing delta time steps with the List window and [examine](#) command), the values prior to the final value in a given time step cannot be observed.

The expanded time function makes these intermediate values visible in the Wave window. Expanded time shows the actual order in which objects change values and shows all transitions of each object within a given time step.

Expanded Time Terminology

- **Simulation Time** — the basic time step of the simulation. The final value of each object at each simulation time is what is currently displayed in the Wave window.
- **Delta Time** — the time intervals or steps taken to evaluate the design without advancing simulation time. Object values at each delta time step are viewed in the List window or by using the `-delta` argument of the [examine](#) command. Refer to [Delta Delays](#) for more information.
- **Event Time** — the time intervals that show each object value change as a separate event and that shows the relative order in which these changes occur

During a simulation, events on different objects in a design occur in a particular order or sequence. Typically, this order is not important and only the final value of each object for each simulation time step is important. However, in situations like debugging glitches on clocked objects or race conditions, the order of events is important. Unlike simulation time steps and delta time steps, only one object can have a single value

change at any one event time. Object values, while not currently viewable, are saved in the *.wlf* file.

- **Expanded Time** — the Wave window feature that expands single simulation time steps to make them wider, allowing you to see object values at the end of each delta cycle or at each event time within the simulation time.
- **Expand** — causes the normal simulation time view in the Wave window to show additional detailed information about when events occurred during a simulation.
- **Collapse** — hides the additional detailed information in the Wave window about when events occurred during a simulation.

Recording Expanded Time Information

You can use the [vsim](#) command, or the WLFCollapseMode variable in the *modelsim.ini* file, to control recording of expanded time information in the *.wlf* file.

Table 9-4. Recording Delta and Event Time Information

vsim command argument	modelsim.ini setting	effect
-wlfnocollapse	WLFCollapseMode = 0	All events for each logged signal are recorded to the <i>.wlf</i> file in the exact order they occur in the simulation.
-wlfcollapsedelta	WLFCollapseMode = 1 (Default)	Each logged signal that has events during a simulation delta has its final value recorded in the <i>.wlf</i> file when the delta has expired.
-wlfcollapsetime	WLFCollapseMode = 2	Similar to delta collapsing but at the simulation time step granularity.

Recording Delta Time

Delta time information is recorded in the *.wlf* file using the **-wlfcollapsedelta** argument of [vsim](#) or by setting the WLFCollapseMode *modelsim.ini* variable to 1. This is the default behavior.

Recording Event Time

To save multiple value changes of an object during a single time step or single delta cycle, use the **-wlfnocollapse** argument with [vsim](#), or set WLFCollapseMode to 0. Unlike delta times (which are explicitly saved in the *.wlf* file), event time information exists implicitly in the *.wlf* file. That is, the order in which events occur in the simulation is the same order in which they are logged to the *.wlf* file, but explicit event time step value is logged.

Choosing Not to Record Delta or Event Time


You can choose not to record event time or delta time information to the *.wlf* file by using the **-wlfcollapsetime** argument with [vsim](#), or by setting WLCollapseMode to 2. This will prevent detailed debugging but may reduce the size of the *.wlf* file and speed up the simulation.

Viewing Expanded Time Information in the Wave Window


Expanded time information is displayed in the Wave window toolbar, the right portion of the Messages bar, the Waveform pane, the time axis portion of the Cursor pane, and the Waveform pane horizontal scroll bar as described below.

- **Expanded Time Toolbar** — The Expanded Time toolbar can (optionally) be displayed in the toolbar area of the undocked Wave window or the toolbar area of the Main window when the Wave window is docked. It contains three exclusive toggle buttons for selecting the Expanded Time mode (see [Toolbar Selections for Expanded Time Modes](#)) and four buttons for expanding and collapsing simulation time.
- **Messages Bar** — The right portion of the Messages Bar is scaled horizontally to align properly with the Waveform pane and the time axis portion of the Cursor pane.
- **Waveform Pane Horizontal Scroll Bar** — The position and size of the thumb in the Waveform pane horizontal scroll bar is adjusted to correctly reflect the current state of the Waveform pane and the time axis portion of the Cursor pane.
- **Waveform Pane and the Time Axis Portion of the Cursor Pane** — By default, the Expanded Time is off and simulation time is collapsed for the entire time range in the Waveform pane. When the Delta Time mode is selected (see [Recording Delta Time](#)), simulation time remains collapsed for the entire time range in the Waveform pane. A red dot is displayed in the middle of all waveforms at any simulation time where multiple value changes were logged for that object.

[Figure 9-17](#) illustrates the appearance of the Waveform pane when viewing collapsed event time or delta time. It shows a simulation with three signals, s1, s2, and s3. The red dots indicate multiple transitions for s1 and s2 at simulation time 3ns.

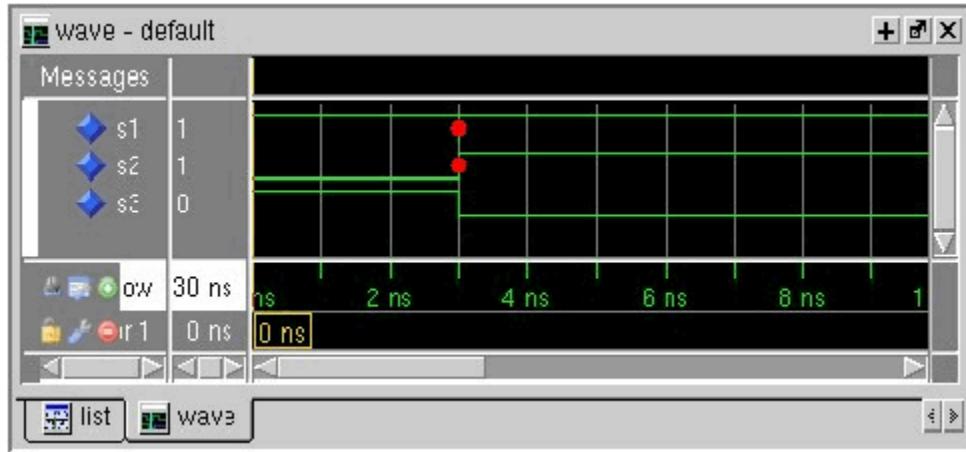Figure 9-17. Waveform Pane with Collapsed Event and Delta Time

[Figure 9-18](#) shows the Waveform pane and the timescale from the Cursors pane after expanding simulation time at time 3ns. The background color is MidnightBlue instead of black for expanded sections in Delta Time mode or is DarkSlateGray for expanded sections in Event Time mode.

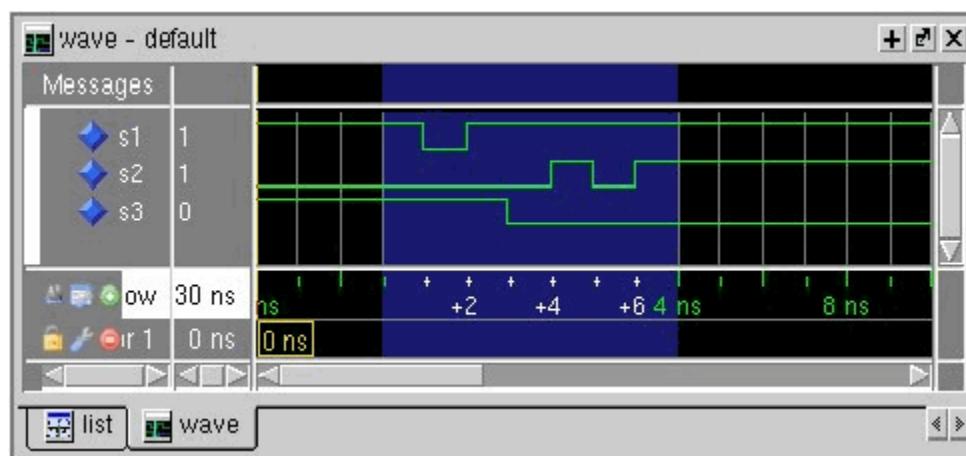Figure 9-18. Waveform Pane with Expanded Time at a Specific Time


In Delta Time mode, more than one object may have an event at the same delta time step. The labels on the time axis in the expanded section indicate the delta time steps within the given simulation time.

In Event Time mode, only one object may have an event at a given event time. The exception to this is for objects that are treated atomically in the simulator and logged atomically. The individual bits of a SystemC vector, for example, could change at the same event time.

Labels on the time axis in the expanded section indicate the order of events from all of the logged objects. If an object that had an event at a particular time but it is not in the viewable area of the Waveform panes, then there will appear to be no events at that time.

Depending on which objects are logged, a specific event may happen at a different event time. For example, if s3 shown in [Figure 9-18](#), had not been logged, the result would be as shown in [Figure 9-19](#).


Figure 9-19. Waveform Pane with Event Not Logged

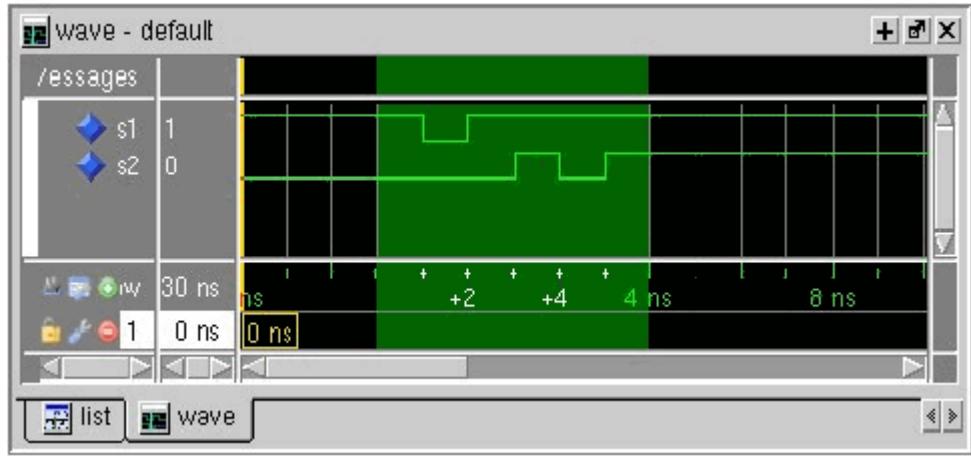

Now the first event on s2 occurs at event time 3ns + 2 instead of event time 3ns + 3. If s3 had been logged, but was not visible, the event on s2 would still be at 3ns + 3, with no event visible at 3ns + 2.

[Figure 9-20](#) shows an example of expanded time over the range from 3ns to 5ns. The expanded time range displays Delta Time mode or Event Time mode depending on the background color of the expanded section.

Figure 9-20. Waveform Pane with Expanded Time Over a Time Range

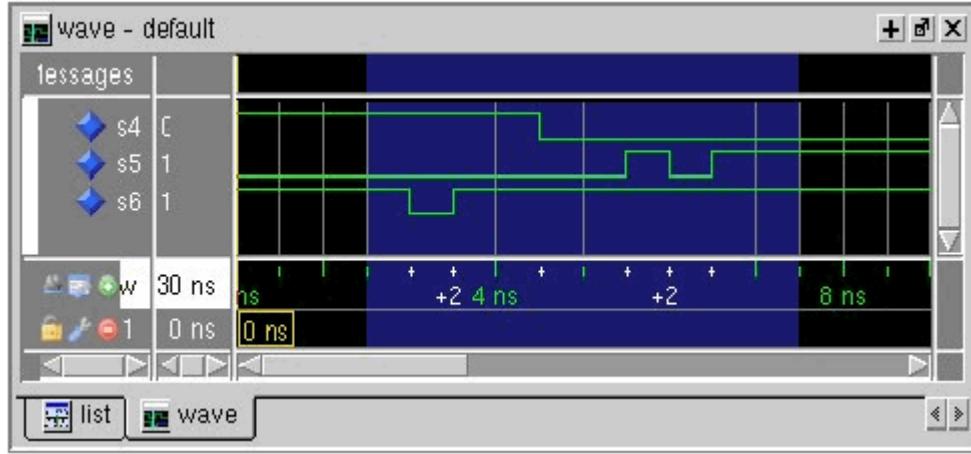

There is a fixed ratio between the horizontal size of a event (or delta) time step and the horizontal size that represents the simulator resolution time in an unexpanded section of the Waveform pane. When scrolling horizontally, expanded sections remain expanded until you collapse them, even when scrolled out of the visible area. The left or right edges of the Waveform pane are viewed in either expanded or collapsed sections.

Since the event order time steps are the sequence of all logged signals (and not just those currently visible in the Wave window), vertical scrolling behaves as expected with no readjustment of the horizontal time steps for expanded time sections required.

Expanded event order or delta time sections appears in all panes when multiple Waveform panes exist for a Wave window. When multiple Wave windows are used, sections of expanded event or delta time are specific to the Wave window where they were created.

For expanded event order time sections when multiple datasets are loaded, the event order time of an event will indicate the order of that event relative to all other events for objects that are logged for that objects dataset only. That means, for example, that signal sim:s1 and gold:s2 could both have events at time 1ns+3.

Note

The order of events for a given design will differ for optimized vs. unoptimized simulations, and between different versions of ModelSim. The order of events will be consistent between the Wave window and the List window for a given simulation of a particular design, but the event numbering may differ. See [Expanded Time Viewing in the List Window](#).

You may display any number of disjoint expanded times or expanded ranges of times.

Customizing the Expanded Time Wave Window Display

As noted above, the Wave window background color is MidnightBlue instead of black for expanded sections in Delta Time mode or is DarkSlateGray for expanded sections in Event Time mode.

The background colors for sections of expanded event time are changed as follows:

1. Select **Tools > Edit Preferences** from the menus. This opens the Preferences dialog.
2. Select the By Name tab.
3. Scroll down to the Wave selection and click the plus sign (+) for Wave.
4. Change the values of the Wave Window variables waveDeltaBackground and waveEventBackground.

Selecting the Expanded Time Display Mode

There are three Wave window expanded time display modes: Event Time mode, Delta Time mode, and Expanded Time off. These display modes are initiated by menu selections, toolbar selections, or via the command line.

Menu Selections for Expanded Time Display Modes

Table 9-5 shows the menu selections for initiating expanded time display modes.

Table 9-5. Menu Selections for Expanded Time Display Modes

action	menu selection with Wave window docked or undocked
select Delta Time mode	docked: Wave > Expanded Time > Delta Time Mode undocked: View > Expanded Time > Delta Time Mode
select Event Time mode	docked: Wave > Expanded Time > Event Time Mode undocked: View > Expanded Time > Event Time Mode
disable Expanded Time	docked: Wave > Expanded Time > Expanded Time Off undocked: View > Expanded Time > Expanded Time Off

Select Delta Time Mode or Event Time Mode from the appropriate menu according to Table 9-5 to have expanded simulation time in the Wave window show delta time steps or event time steps respectively. Select Expanded Time Off for standard behavior (which is the default).

Toolbar Selections for Expanded Time Modes

There are three exclusive toggle buttons in the [Wave Expand Time Toolbar](#) for selecting the time mode used to display expanded simulation time in the Wave window.

- The "Expanded Time Deltas Mode" button displays delta time steps.
- The "Expanded Time Events Mode" button displays event time steps.
- The "Expanded Time Off" button turns off the expanded time display in the Wave window.

Clicking any one of these buttons on toggles the other buttons off. This serves as an immediate visual indication about which of the three modes is currently being used. Choosing one of these modes from the menu bar or command line also results in the appropriate resetting of these three buttons. The "Expanded Time Off" button is selected by default.

In addition, there are four buttons in the [Wave Expand Time Toolbar](#) for expanding and collapsing simulation time.

- The “Expand All Time” button expands simulation time over the entire simulation time range, from time 0 to the current simulation time.
- The “Expand Time At Active Cursor” button expands simulation time at the simulation time of the active cursor.
- The “Collapse All Time” button collapses simulation time over enire simulation time range.

- The “Collapse Time At Active Cursor” button collapses simulation time at the simulation time of the active cursor.

Command Selection of Expanded Time Mode

The command syntax for selecting the time mode used to display objects in the Wave window is:

wave expand mode [-window <win>] none | deltas | events

Use the wave expand mode command to select which mode is used to display expanded time in the wave window. This command also results in the appropriate resetting of the three toolbar buttons.

Switching Between Time Modes

If one or more simulation time steps have already been expanded to view event time or delta time, then toggling the Time mode by any means will cause all of those time steps to be redisplayed in the newly selected mode.

Expanding and Collapsing Simulation Time

Simulation time may be expanded to view delta time steps or event time steps at a single simulation time or over a range of simulation times. Simulation time may be collapsed to hide delta time steps or event time steps at a single simulation time or over a range of simulation times. You can expand or collapse the simulation time with menu selections, toolbar selections, via commands, or with the mouse cursor.

- Expanding/Collapsing Simulation Time with Menu Selections — Select **Wave > Expanded Time** when the Wave window is docked, and **View > Expanded Time** when the Wave window is undocked. You can expand/collapse over the full simulation time range, over a specified time range, or at the time of the active cursor.,
- Expanding/Collapsing Simulation Time with Toolbar Selections — There are four buttons in the toolbar for expanding and collapsing simulation time in the Wave window: Expand Full, Expand Cursor, Collapse Full, and Collapse Cursor.
- Expanding/Collapsing Simulation Time with Commands — There are six commands for expanding and collapsing simulation time in the Wave window.

[wave expand all](#)

[wave expand range](#)

[wave expand cursor](#)

[wave collapse all](#)

[wave collapse range](#)

wave collapse cursor

These commands have the same behavior as the corresponding menu and toolbar selections. If valid times are not specified, for [wave expand range](#) or [wave collapse range](#), no action is taken. These commands effect all Waveform panes in the Wave window to which the command applies.

- Expanding/Collapsing Simulation Time with Mouse Cursor — When in Delta Time mode or Event time mode, clicking and dragging in the Waveform pane while holding down the <Control> key and the <Shift> key will result in expand or collapse operations over the time range covered by the drag as follows:

Right: expand simulation time over the selected range

Left: collapse simulation time over the selected range

Expanded Time Viewing in the List Window

Event time may be shown in the List window in the same manner as delta time by using the **-delta events** option to the [configure list](#) command. The **-delta events** option displays an "event" column rather than a "delta" column and sorts the List window data by event.

When the List window displays event times, the event time is relative to events on the other logged signals that are also being displayed in the List window. This may be misleading, as it may not correspond to event times displayed in the Wave window for the same events if different signals are added to the Wave and List windows.

List Window Expanded Time Output Using write list Command

The [write list](#) command will correctly output event time when it is chosen. There is no difference between the [write tssi](#) command or the [write list](#) command when the **-events** option is used.

Using the [write list](#) command with the [configure list -delta events](#) setting will write a list file in a tabular format with a line for every event. Please note that this is different from using the [write list](#) command with the “-events” option, which will write a non-tabular file using a print-on-change format.

The following examples illustrate the appearance of the List window when the [write list](#) command is used with the event option (or other delta options).

[Figure 9-21](#) shows the List window when the **-delta none** option is used with the [write list](#) command. No column is shown for deltas.

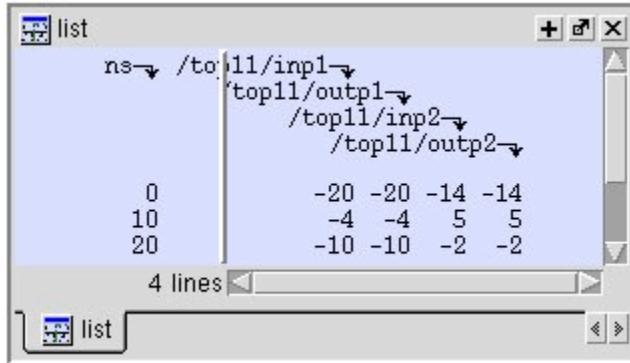
Figure 9-21. List Window After write list -delta none Option is Used

Figure 9-22 shows the List window when the **-delta collapse** option is used with the [write list](#) command. There is a column for delta time, and only the final delta value and the final value for each signal for each simulation time step (at which any events have occurred) is shown.


Figure 9-22. List Window After write list -delta collapse Option is Used

Figure 9-23 shows the List window the **-delta all** option is used with the [write list](#) command. There is a column for delta time and each delta time step value is shown on a separate line along with the final value for each signal for that delta time step.



Figure 9-23. List Window After write list -delta all Option is Used

Figure 9-24 shows the List window when the **-event** option is used with the `write list` command. There is a column for event time and each event time step value is shown on a separate line along with the final value for each signal for that event time step. Since each event corresponds to a new event time step, only one signal will change values between two consecutive lines.

Figure 9-24. List Window After write list -event Option is Used

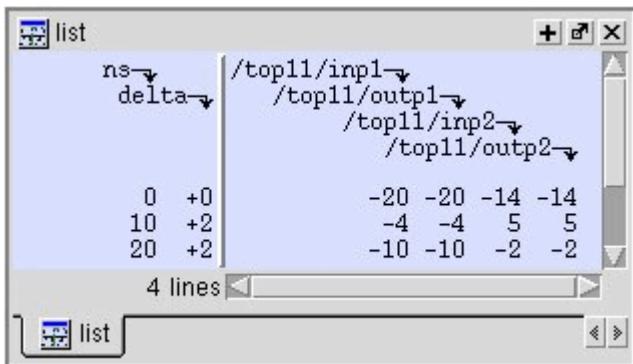

The screenshot shows a ModelSim List window titled "list". The window displays a table of data with columns for "ns" (event time), "event", and four signal names: "/top11/inp1", "/top11/outp1", "/top11/inp2", and "/top11/outp2". The data is organized by event time, with each event step showing the final value for each signal. The window has scroll bars and a status bar at the bottom indicating "4 lines".

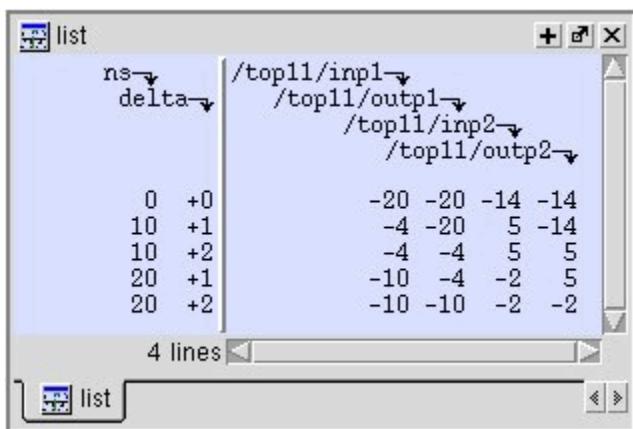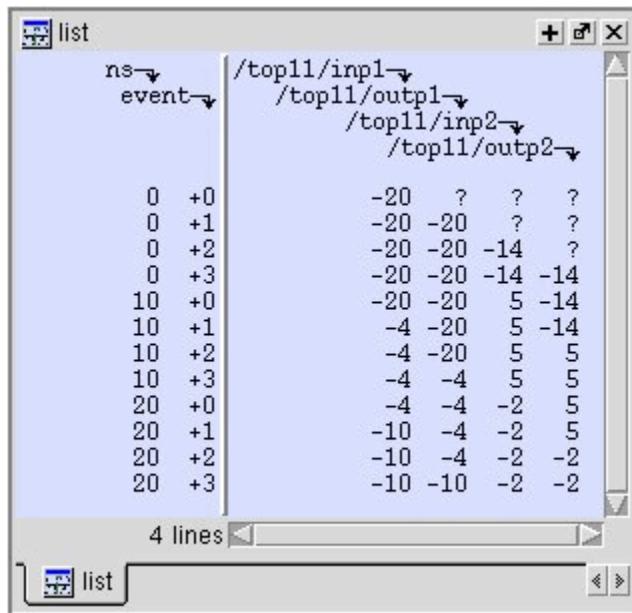ns	event	/top11/inp1	/top11/outp1	/top11/inp2	/top11/outp2
0	+0		-20	?	?
0	+1		-20	-20	?
0	+2		-20	-20	-14
0	+3		-20	-20	-14
10	+0		-20	-20	5
10	+1		-4	-20	5
10	+2		-4	-20	5
10	+3		-4	-4	5
20	+0		-4	-4	-2
20	+1		-10	-4	-2
20	+2		-10	-4	-2
20	+3		-10	-10	-2

Expanded Time with examine and Other Commands

- **examine** — The **-event <event>** option to the `examine` command behaves in the same manner as the **-delta <delta>** option. When the **-event** option is used, the event time given will refer to the event time relative to events for all signals in the objects dataset at the specified time. This may be misleading as it may not correspond to event times displayed in the List or Wave windows.
- **searchlog** — The **-event <event>** option to the `searchlog` command behaves in the same manner as the **-delta <delta>** option.

Zooming the Wave Window Display

Zooming lets you change the simulation range in the waveform pane. You can zoom using the context menu, toolbar buttons, mouse, keyboard, or commands.

Zooming with the Menu, Toolbar and Mouse

You can access Zoom commands from the **View** menu in the Wave window when it is undocked, from the **Wave > Zoom** menu selections in the Main window when the Wave

window is docked, or by clicking the right mouse button in the waveform pane of the Wave window.

These zoom buttons are available on the toolbar:

**Zoom In 2x**

zoom in by a factor of two from the current view

**Zoom Out 2x**

zoom out by a factor of two from current view

**Zoom In on Active Cursor**

centers the active cursor in the waveform display and zooms in

**Zoom Full**

zoom out to view the full range of the simulation from time 0 to the current time

**Zoom Mode**

change mouse pointer to zoom mode; see below

To zoom with the mouse, first enter zoom mode by selecting **View > Zoom > Mouse Mode > Zoom Mode**. The left mouse button then offers 3 zoom options by clicking and dragging in different directions:

- Down-Right or Down-Left: Zoom Area (In)
- Up-Right: Zoom Out
- Up-Left: Zoom Fit

Also note the following about zooming with the mouse:

- The zoom amount is displayed at the mouse cursor. A zoom operation must be more than 10 pixels to activate.
- You can enter zoom mode temporarily by holding the <Ctrl> key down while in select mode.
- With the mouse in the Select Mode, the middle mouse button will perform the above zoom operations.

Saving Zoom Range and Scroll Position with Bookmarks

Bookmarks save a particular zoom range and scroll position. This lets you return easily to a specific view later. You save the bookmark with a name and then access the named bookmark from the Bookmark menu. Bookmarks are saved in the Wave format file (see [Adding Objects with a Window Format File](#)) and are restored when the format file is read.

Managing Bookmarks

The table below summarizes actions you can take with bookmarks.

Table 9-6. Actions for Bookmarks


Action	Menu commands (Wave window docked)	Menu commands (Wave window undocked)	Command
Add bookmark	Add > Wave > Bookmark	Add > Bookmark	bookmark add wave
View bookmark	Wave > Bookmarks > <bookmark_name>	View > Bookmarks > <bookmark_name>	bookmark goto wave
Delete bookmark	Wave > Bookmarks > Bookmarks > <select bookmark then Delete>	View > Bookmarks > Bookmarks > <select bookmark then Delete>	bookmark delete wave

Adding Bookmarks

To add a bookmark, follow these steps:

1. Zoom the Wave window as you see fit using one of the techniques discussed in [Zooming the Wave Window Display](#).
2. If the Wave window is docked, select **Add > Wave > Bookmark**. If the Wave window is undocked, select **Add > Bookmark**.

Figure 9-25. Bookmark Properties Dialog

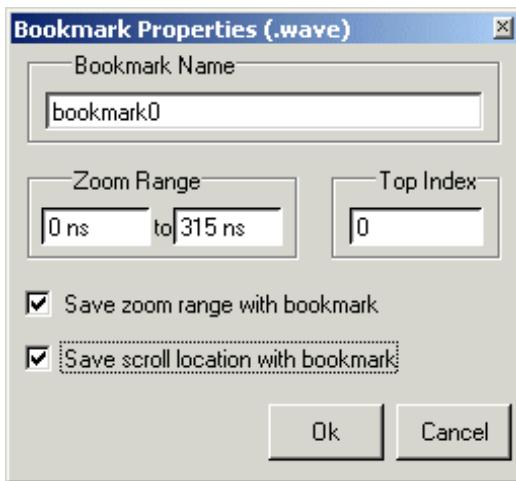

3. Give the bookmark a name and click OK.

Editing Bookmarks

Once a bookmark exists, you can change its properties by selecting **Wave > Bookmarks > Bookmarks** if the Wave window is docked; or by selecting **Tools > Bookmarks** if the Wave window is undocked.

Searching in the Wave and List Windows

The Wave and List windows provide two methods for locating objects:


- Finding signal names – Select **Edit > Find**, click the Find toolbar button, or use the [find](#) command to search for the name of a signal.
- Search for values or transitions – Select **Edit > Signal Search** or click the Find toolbar button to locate transitions or signal values. The search feature is not available in all versions of ModelSim.

Wave window searches can be stopped by clicking the “Stop Wave Drawing” or “Break” toolbar buttons.

Finding Signal Names

The Find command is used to locate a signal name or value in the Wave or List window. When you select **Edit > Find**, the Find dialog appears.

Figure 9-26. Find Signals by Name or Value

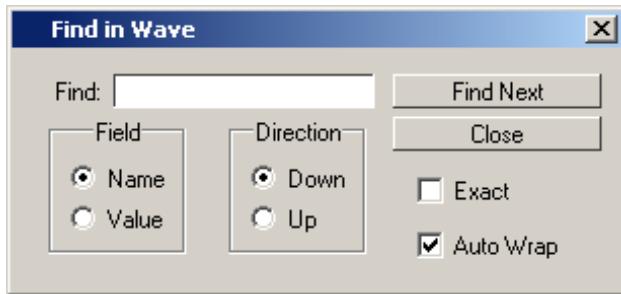

One option of note is the "Exact" checkbox. Check **Exact** if you only want to find objects that match your search exactly. For example, searching for "clk" without **Exact** will find */top/clk* and *clk1*.


There are two differences between the Wave and List windows as it relates to the Find feature:

- In the Wave window you can specify a value to search for in the values pane.
- The find operation works only within the active pane in the Wave window.

Searching for Values or Transitions

Available in some versions of ModelSim, the Search command lets you search for transitions or values on selected signals. When you select **Edit > Signal Search**, the Signal Search dialog (Figure 9-27) appears.

Figure 9-27. Wave Signal Search Dialog

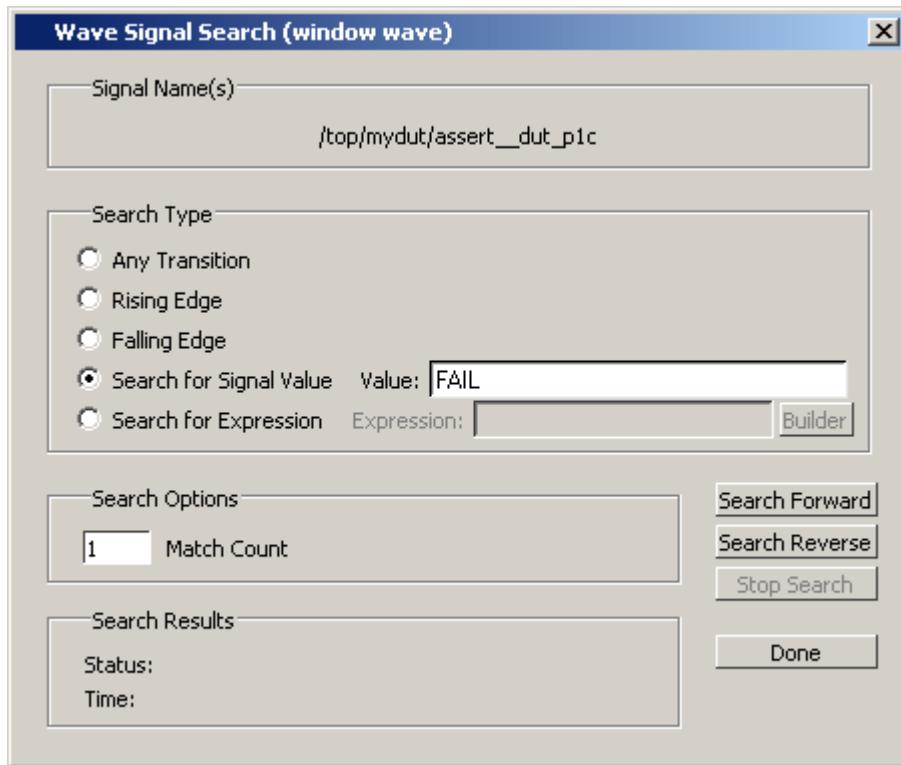

One option of note is **Search for Expression**. The expression can involve more than one signal but is limited to signals currently in the window. Expressions can include constants, variables, and DO files. See [Expression Syntax](#) for more information.

Using the Expression Builder for Expression Searches


The Expression Builder is a feature of the Wave and List Signal Search dialog boxes and the List trigger properties dialog box. You can use it to create a search expression that follows the [GUI_expression_format](#).

To display the Expression Builder dialog box, do the following:

1. Choose **Edit > Signal Search...** from the main menu. This displays the Wave Signal Search dialog box.
2. Select **Search for Expression**.


3. Click the **Builder** button. This displays the Expression Builder dialog box shown in [Figure 9-28](#)

Figure 9-28. Expression Builder Dialog Box

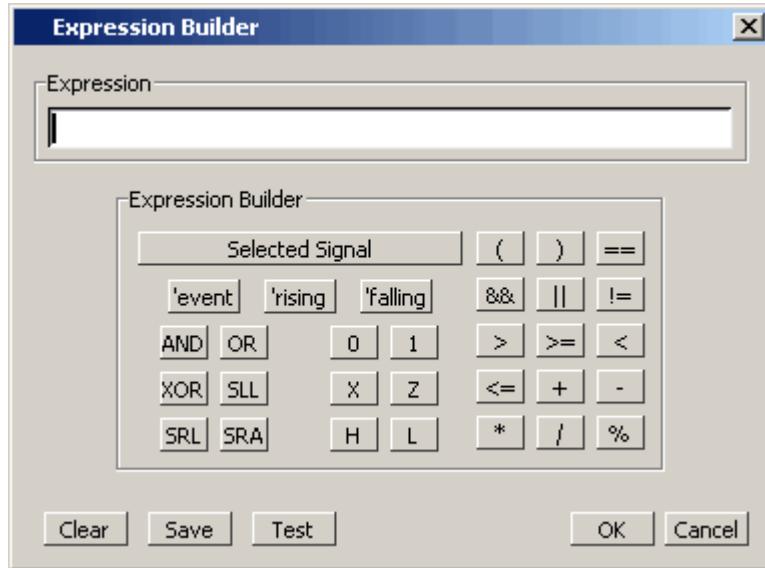

You click the buttons in the Expression Builder dialog box to create a GUI expression. Each button generates a corresponding element of [Expression Syntax](#) and is displayed in the [Expression field](#). In addition, you can use the **Selected Signal** button to create an expression from signals you select from the associated Wave or List window.

For example, instead of typing in a signal name, you can select signals in a Wave or List window and then click **Selected Signal** in the Expression Builder. This displays the Select Signal for Expression dialog box shown in [Figure 9-29](#).

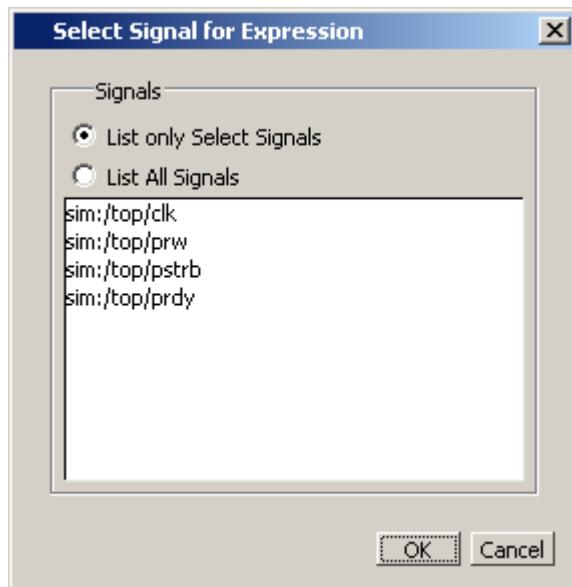Figure 9-29. Selecting Signals for Expression Builder

Note that the buttons in this dialog box allow you to determine the display of signals you want to put into an expression:

- List only Select Signals — list only those signals that are currently selected in the parent window.
- List All Signals — list all signals currently available in the parent window.

Once you have selected the signals you want displayed in the Expression Builder, click OK.

Saving an Expression to a Tcl Variable

Clicking the **Save** button will save the expression to a Tcl variable. Once saved this variable can be used in place of the expression. For example, say you save an expression to the variable "foo". Here are some operations you could do with the saved variable:

- Read the value of *foo* with the set command:
set foo
- Put \$foo in the Expression: entry box for the Search for Expression selection.
- Issue a searchlog command using foo:
searchlog -expr \$foo 0

Searching for when a Signal Reaches a Particular Value

Select the signal in the Wave window and click **Insert Selected Signal** and **==**. Then, click the value buttons or type a value.

Evaluating Only on Clock Edges

Click the **&&** button to AND this condition with the rest of the expression. Then select the clock in the Wave window and click **Insert Selected Signal** and ‘**rising**’. You can also select the falling edge or both edges.


Operators

Other buttons will add operators of various kinds (see [Expression Syntax](#)), or you can type them in.

Formatting the Wave Window

Setting Wave Window Display Preferences

You can set Wave window display preferences by selecting **Tools > Options > Wave Preferences** (when the window is docked in the MDI frame) or **Tools > Window Preferences** (when the window is undocked). These commands open the Wave Window Preferences dialog ([Figure 9-30](#)).

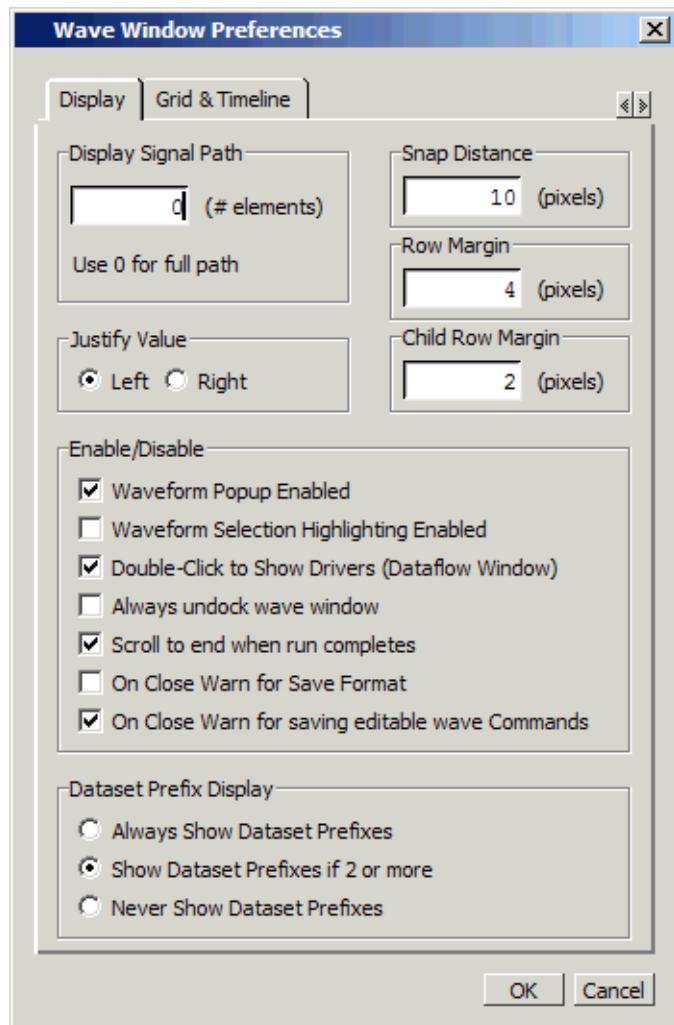Figure 9-30. Display Tab of the Wave Window Preferences Dialog Box


Hiding/Showing Path Hierarchy

You can set how many elements of the object path display by changing the Display Signal Path value in the Wave Window Preferences dialog (Figure 9-30). Zero indicates the full path while a non-zero number indicates the number of path elements to be displayed.


Setting the Timeline to Count Clock Cycles

You can set the timeline of the Wave window to count clock cycles rather than elapsed time. If the Wave window is docked in the MDI frame, open the Wave Window Preferences dialog by selecting **Tools > Options > Wave Preferences** from the Main window menus. If the Wave window is undocked, select **Tools > Window Preferences** from the Wave window menus. This opens the Wave Window Preferences dialog. In the dialog, select the Grid & Timeline tab (Figure 9-31).

Figure 9-31. Grid & Timeline Tab of Wave Window Preferences Dialog Box

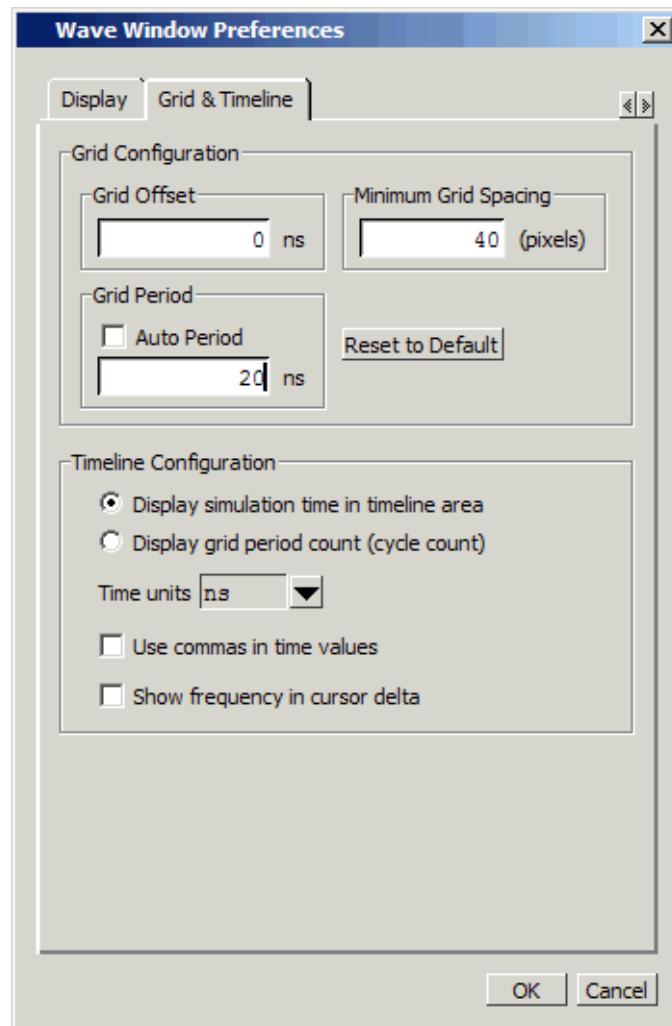

Enter the period of your clock in the Grid Period field and select “Display grid period count (cycle count).” The timeline will now show the number of clock cycles, as shown in [Figure 9-32](#).

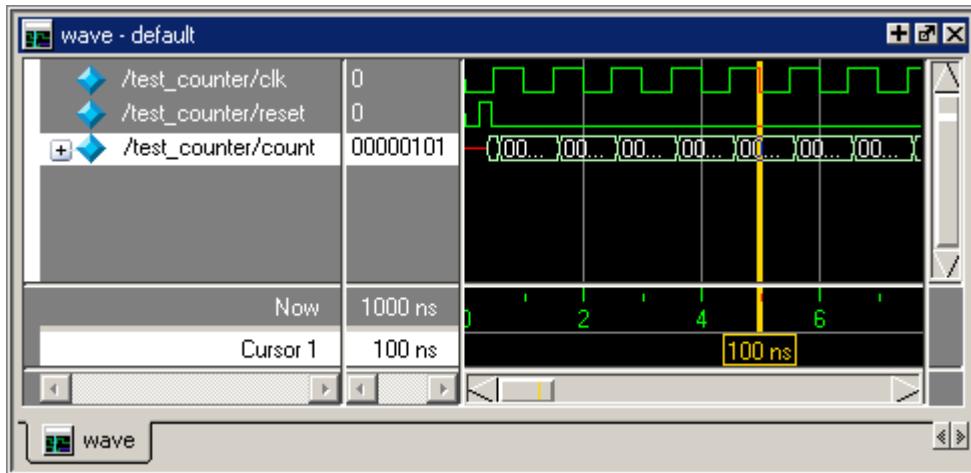
Figure 9-32. Clock Cycles in Timeline of Wave Window

Formatting Objects in the Wave Window

You can adjust various object properties to create the view you find most useful. Select one or more objects and then select **View > Properties** or use the selections in the **Format** menu.

Changing Radix (base) for the Wave Window

One common adjustment is changing the radix (base) of an object. When you select **View > Properties**, the Wave Signal Properties dialog appears.

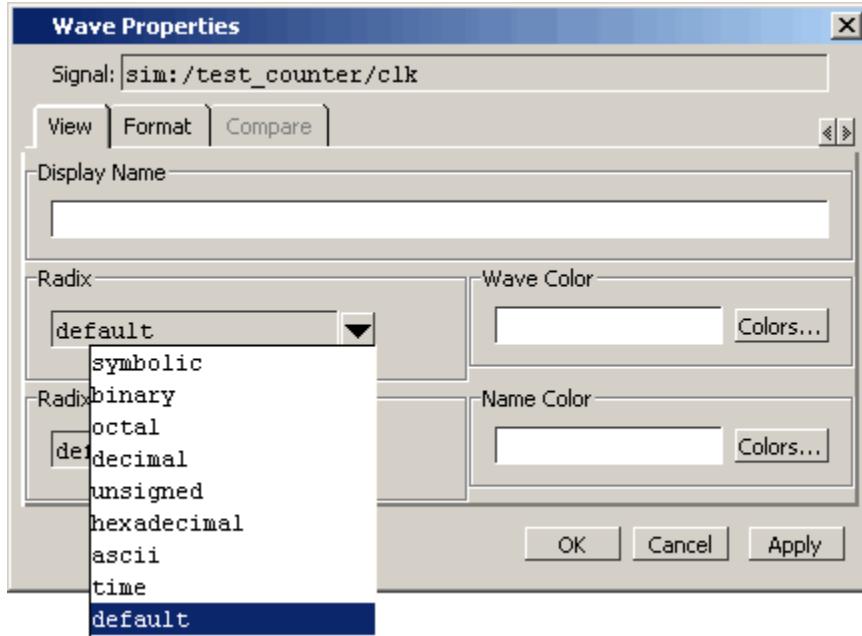Figure 9-33. Changing Signal Radix

The default radix is symbolic, which means that for an enumerated type, the value pane lists the actual values of the enumerated type of that object. For the other radices - binary, octal, decimal, unsigned, hexadecimal, or ASCII - the object value is converted to an appropriate representation in that radix.

Note


When the symbolic radix is chosen for SystemVerilog reg and integer types, the values are treated as binary. When the symbolic radix is chosen for SystemVerilog bit and int types, the values are considered to be decimal.

Aside from the Wave Signal Properties dialog, there are three other ways to change the radix:

- Change the default radix for the current simulation using **Simulate > Runtime Options** (Main window)
- Change the default radix for the current simulation using the `radix` command.
- Change the default radix permanently by editing the `DefaultRadix` variable in the `modelsim.ini` file.

Dividing the Wave Window

Dividers serve as a visual aid for debugging, allowing you to separate signals and waveforms for easier viewing. In the graphic below, a bus is separated from the two signals above it with a divider called "Bus."

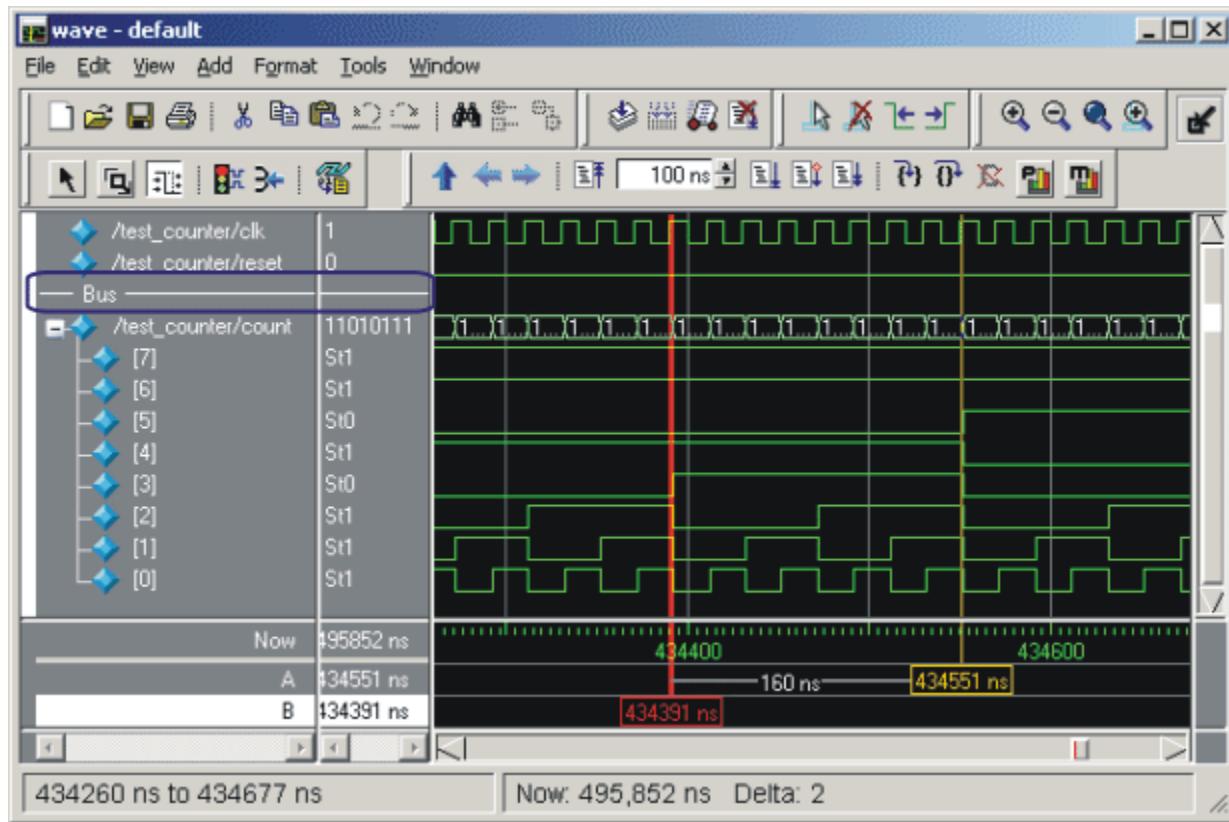Figure 9-34. Separate Signals with Wave Window Dividers

To insert a divider, follow these steps:

1. Select the signal above which you want to place the divider.
2. If the Wave pane is docked in MDI frame of the Main window, select **Add > Wave > Divider** from the Main window menu bar. If the Wave window stands alone, undocked from the Main window, select **Add > Divider** from the Wave window menu bar.
3. Specify the divider name in the Wave Divider Properties dialog. The default name is New Divider. Unnamed dividers are permitted. Simply delete "New Divider" in the Divider Name field to create an unnamed divider.
4. Specify the divider height (default height is 17 pixels) and then click OK.

You can also insert dividers with the **-divider** argument to the **add wave** command.

Working with Dividers

The table below summarizes several actions you can take with dividers:

Table 9-7. Actions for Dividers


Action	Method
Move a divider	Click-and-drag the divider to the desired location
Change a divider's name or size	Right-click the divider and select Divider Properties
Delete a divider	Right-click the divider and select Delete

Splitting Wave Window Panes

The pathnames, values, and waveform panes of the Wave window display can be split to accommodate signals from one or more datasets. For more information on viewing multiple simulations, see [Recording Simulation Results With Datasets](#).

To split the window, select **Add > Window Pane**.

In the illustration below, the top split shows the current active simulation with the prefix "sim," and the bottom split shows a second dataset with the prefix "gold".

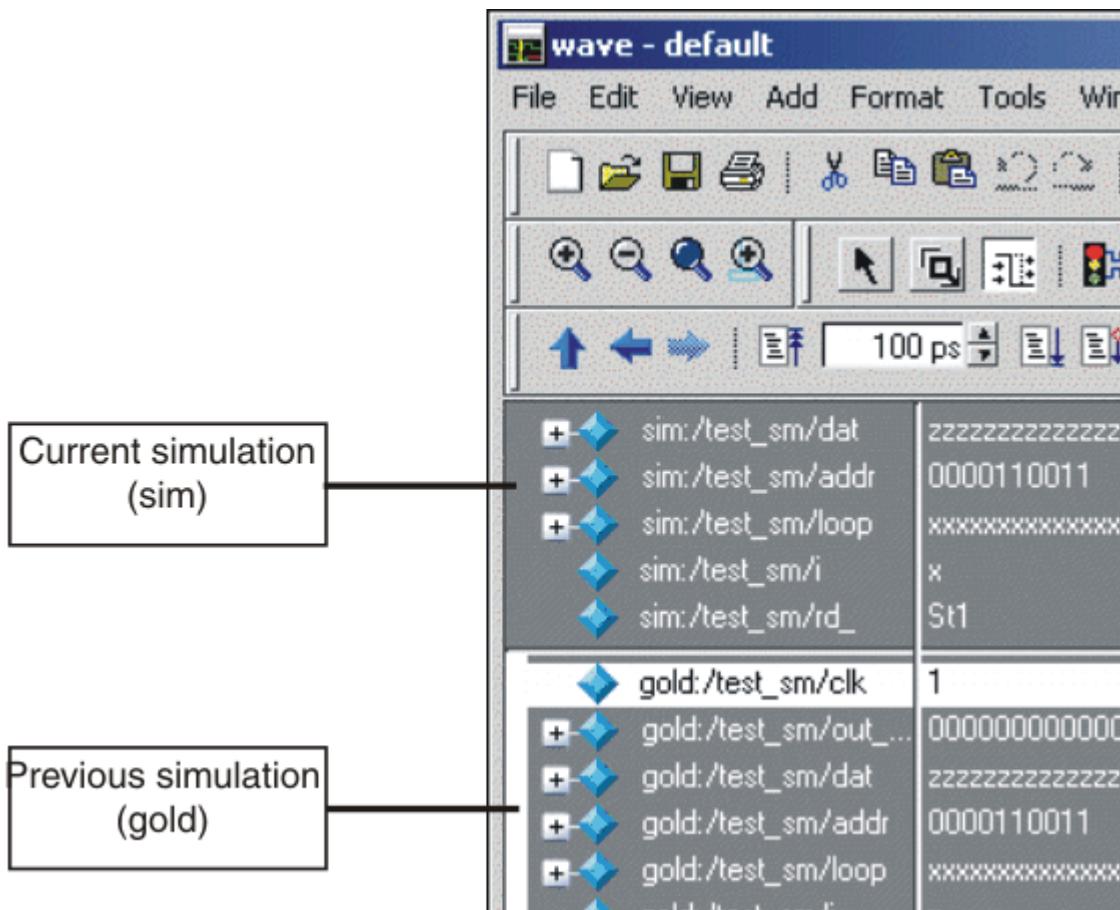Figure 9-35. Splitting Wave Window Panes

The Active Split

The active split is denoted with a solid white bar to the left of the signal names. The active split becomes the target for objects added to the Wave window.

Wave Groups

You can create a wave group to collect arbitrary groups of items in the Wave window. Wave groups have the following characteristics:

- A wave group may contain 0, 1, or many items.
- You can add or remove items from groups either by using a command or by dragging and dropping.
- You can drag a group around the Wave window or to another Wave window.
- You can nest multiple wave groups, either from the command line or by dragging and dropping. Nested groups are saved or restored from a wave.do format file, restart and checkpoint/restore.

Creating a Wave Group

There are two ways to create a wave group.


1. Use the **Tools > Group** menu selection.
 - a. Select a set of signals in the Wave window.
 - b. Select the **Tools > Group** menu item. The Wave Group Create dialog will appear.

Figure 9-36. Fill in the name of the group in the Group Name field.



- c. Click Ok. The new wave group will be denoted by a red diamond in the Wave window pathnames.

Figure 9-37. Wave groups denoted by red diamond

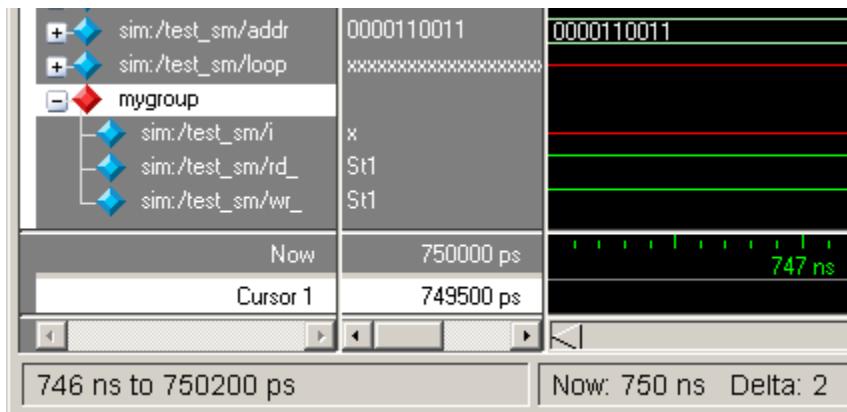

2. Use the -group argument to the **add wave** command.

Example 1 — The following command will create a group named *mygroup* containing three items:

```
add wave -group mygroup sig1 sig2 sig3
```

Example 2 — The following command will create an empty group named *mygroup*:

```
add wave -group mygroup
```

Deleting or Ungrouping a Wave Group

If a wave group is selected and cut or deleted the entire group and all its contents will be removed from the Wave window. Likewise, the **delete** wave command will remove the entire group if the group name is specified.

If a wave group is selected and the **Wave > Ungroup** menu item is selected the group will be removed and all of its contents will remain in the Wave window in existing order.

Adding Items to an Existing Wave Group

There are three ways to add items to an existing wave group.

1. Using the drag and drop capability to move items outside of the group or from other windows within ModelSim into the group. The insertion indicator will show the position the item will be dropped into the group. If the cursor is moved over the lower portion of the group item name a box will be drawn around the group name indicating the item will be dropped into the last position in the group.
2. The cut/copy/paste functions may be used to paste items into a group.
3. Use the **add wave -group** command.

The following example adds two more signals to an existing group called *mygroup*.

```
add wave -group mygroup sig4 sig5
```

Removing Items from an Existing Wave Group

You can use any of the following methods to remove an item from a wave group.

1. Use the drag and drop capability to move an item outside of the group.
2. Use menu or icon selections to cut or delete an item or items from the group.
3. Use the **delete** wave command to specify a signal to be removed from the group.



Note

The **delete** wave command removes all occurrences of a specified name from the Wave window, not just an occurrence within a group.

Miscellaneous Wave Group Features

Dragging a wave group from the Wave window to the List window will result in all of the items within the group being added to the List window.


Dragging a group from the Wave window to the Transcript window will result in a list of all of the items within the group being added to the existing command line, if any.

Formatting the List Window

Setting List Window Display Properties

Before you add objects to the List window, you can set the window's display properties. To change when and how a signal is displayed in the List window, select **Tools > List Preferences** from the List window menu bar (when the window is undocked).

Figure 9-38. Modifying List Window Display Properties

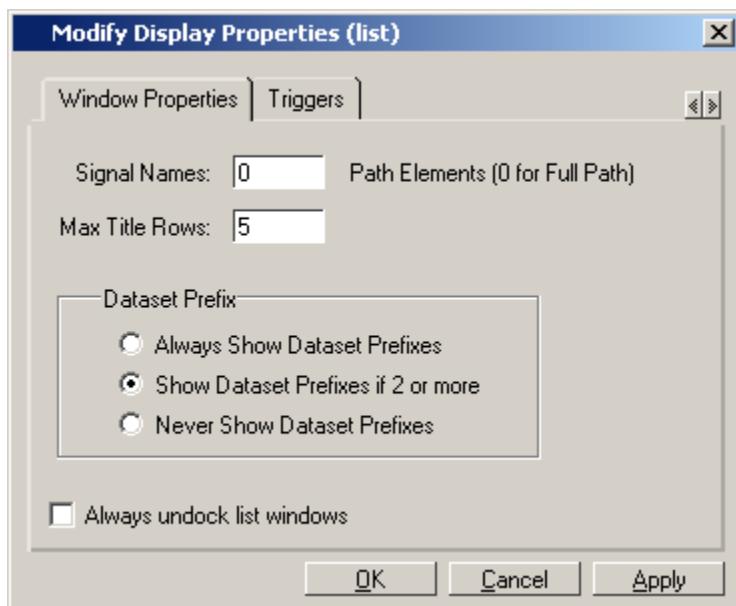


Formatting Objects in the List Window

You can adjust various properties of objects to create the view you find most useful. Select one or more objects and then select **View > Signal Properties** from the List window menu bar (when the window is undocked).

Changing Radix (base) for the List Window


One common adjustment you can make to the List window display is to change the radix (base) of an object. To do this, choose **View > Signal Properties** from the main menu, which displays the List Signal Properties dialog box. [Figure 9-39](#) shows the list of radix types you can select in this dialog box.

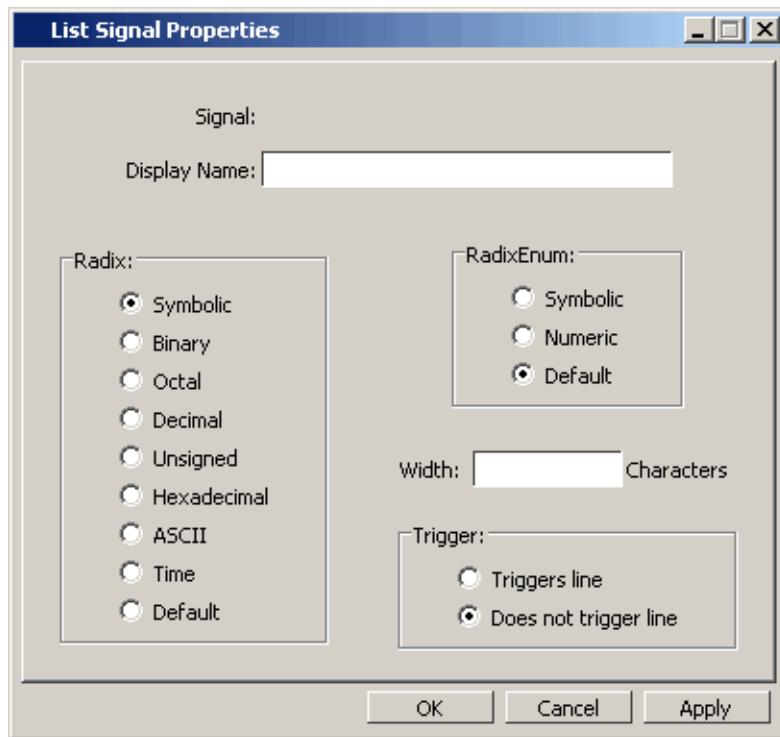Figure 9-39. List Signal Properties Dialog

The default radix type is symbolic, which means that for an enumerated type, the window lists the actual values of the enumerated type of that object. For the other radix types (binary, octal, decimal, unsigned, hexadecimal, ASCII, time), the object value is converted to an appropriate representation in that radix.

Changing the radix can make it easier to view information in the List window. Compare the image below (with decimal values) with the image in the section [List Window Overview](#) (with symbolic values).

Figure 9-40. Changing the Radix in the List Window

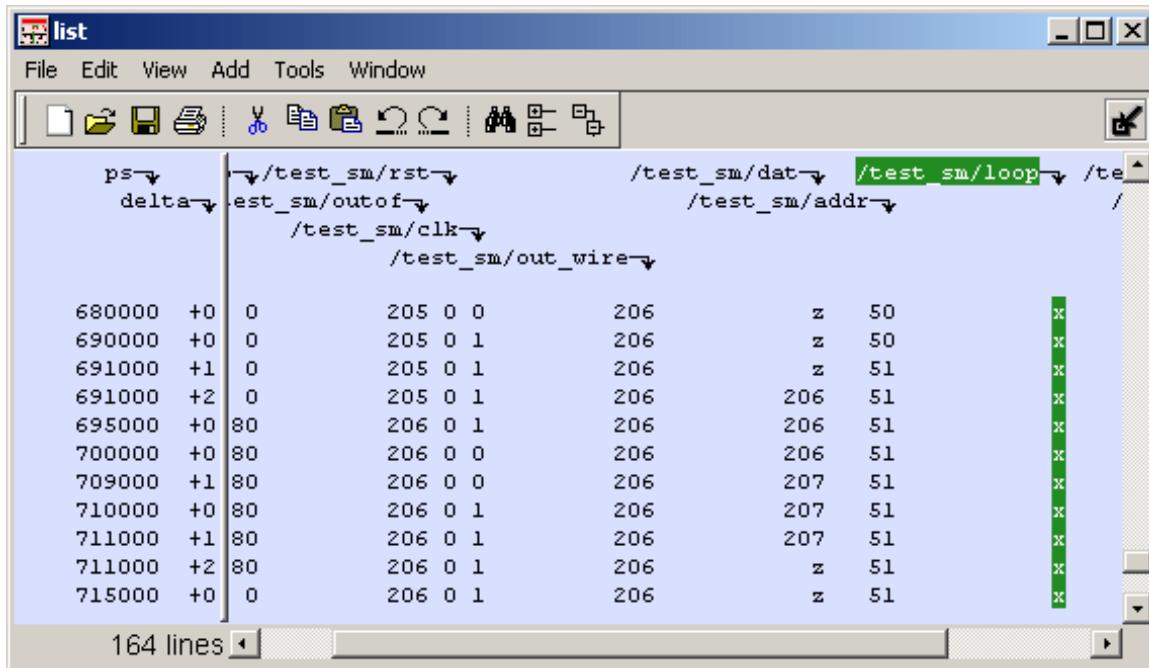


In addition to the List Signal Properties dialog box, you can also change the radix:

- Change the default radix for the current simulation using **Simulate > Runtime Options** (Main window)
- Change the default radix for the current simulation using the [radix](#) command.
- Change the default radix permanently by editing the [DefaultRadix](#) variable in the *modelsim.ini* file.

Saving the Window Format

By default all Wave and List window information is forgotten once you close the windows. If you want to restore the windows to a previously configured layout, you must save a window format file. Follow these steps:

1. Add the objects you want to the Wave or List window.
2. Edit and format the objects to create the view you want.
3. Save the format to a file by selecting **File > Save**. This opens the Save Format dialog, which allows you to save waveform formats in a *.do* file.

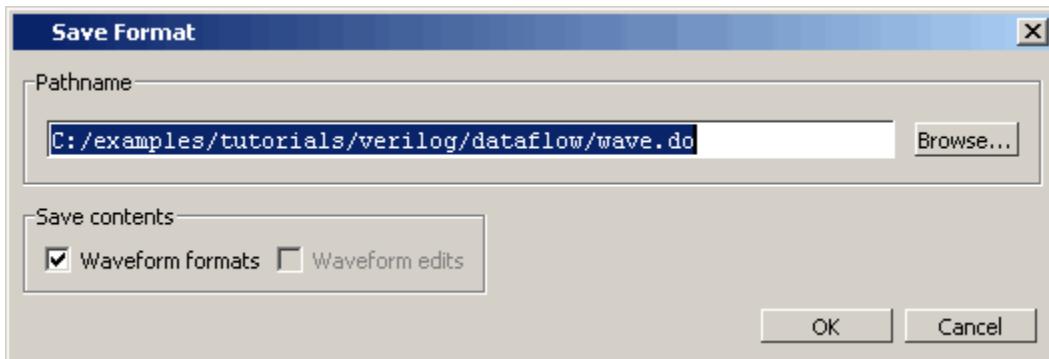Figure 9-41. Save Format Dialog

To use the format file, start with a blank Wave or List window and run the DO file in one of two ways:

- Invoke the **do** command from the command line:

VSIM> do <my_format_file>

- Select **File > Load**.

Note

Window format files are design-specific. Use them only with the design you were simulating when they were created.

In addition, you can use the **write format restart <filename>** command to create a single .do file that will recreate all debug windows and breakpoints (see [Saving and Restoring Breakpoints](#)) when invoked with the **do** command in subsequent simulation runs. The syntax is:

write format restart <filename>

If the **ShutdownFile modelsim.ini** variable is set to this .do filename, it will call the **write format restart** command upon exit.

Printing and Saving Waveforms in the Wave window

You can print the waveform display or save it as an encapsulated postscript (EPS) file.

Saving a .eps Waveform File and Printing in UNIX

Select **File > Print Postscript** (Wave window) to print all or part of the waveform in the current Wave window in UNIX, or save the waveform as a .eps file on any platform (see also the **write wave** command).

Printing from the Wave Window on Windows Platforms

Select **File > Print** (Wave window) to print all or part of the waveform in the current Wave window, or save the waveform as a printer file (a Postscript file for Postscript printers).

Printer Page Setup

Select **File > Page setup** or click the Setup button in the Write Postscript or Print dialog box to define how the printed page will appear.

Saving List Window Data to a File

Select **File > Write List** in the List window to save the data in one of these formats:

- **Tabular** — writes a text file that looks like the window listing

ns	delta	/a	/b	/cin	/sum	/cout
0	+0	X	X	U	X	U
0	+1	0	1	0	X	U
2	+0	0	1	0	X	U

- **Events** — writes a text file containing transitions during simulation

```
@0 +0
/a X
/b X
/cin U
/sum X
/cout U
@0 +1
/a 0
/b 1
/cin 0
```

- **TSSI** — writes a file in standard TSSI format; see also, the [write tssi](#) command.

```
0 000000000000000010?????????
2 000000000000000010?????????1?
3 000000000000000010??????010
4 0000000000000000100000000010
100 00000010000000100000000010
```

You can also save List window output using the [write list](#) command.

Combining Objects into Buses


You can combine signals in the Wave or List window into buses. A bus is a collection of signals concatenated in a specific order to create a new virtual signal with a specific value. A virtual compare signal (the result of a comparison simulation) is not supported for combination with any other signal.

To combine signals into a bus, use one of the following methods:

- Select two or more signals in the Wave or List window and then choose **Tools > Combine Signals** from the menu bar. A virtual signal that is the result of a comparison simulation is not supported for combining with any other signal.
- Use the [virtual signal](#) command at the Main window command prompt.


In the illustration below, three signals have been combined to form a new bus called "Bus1". Note that the component signals are listed in the order in which they were selected in the Wave window. Also note that the value of the bus is made up of the values of its component signals, arranged in a specific order.

Figure 9-42. Signals Combined to Create Virtual Bus

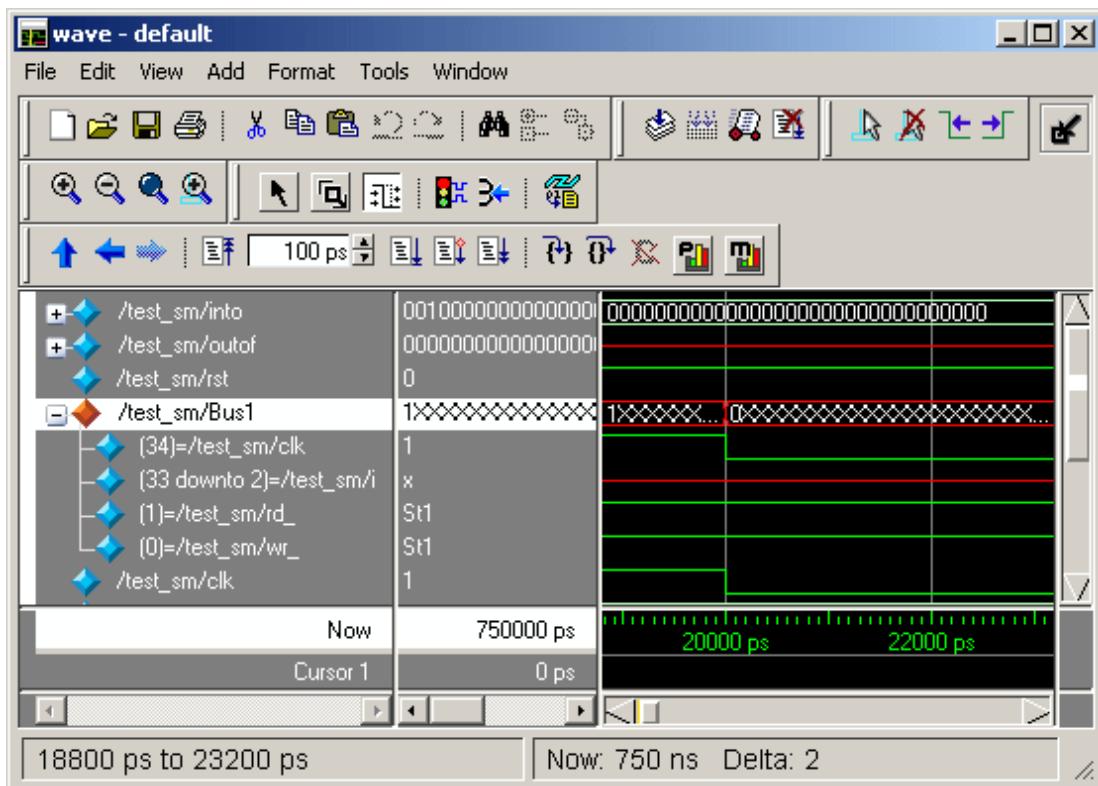

Creating a Virtual Signal

The Wave window allows you to build Virtual Signals with the Virtual Signal Builder. The Virtual Signal Builder is accessed by selecting **Wave > Virtual Builder** when the Wave window is docked or selecting **Tools > Virtual Builder** when the Wave window is undocked.

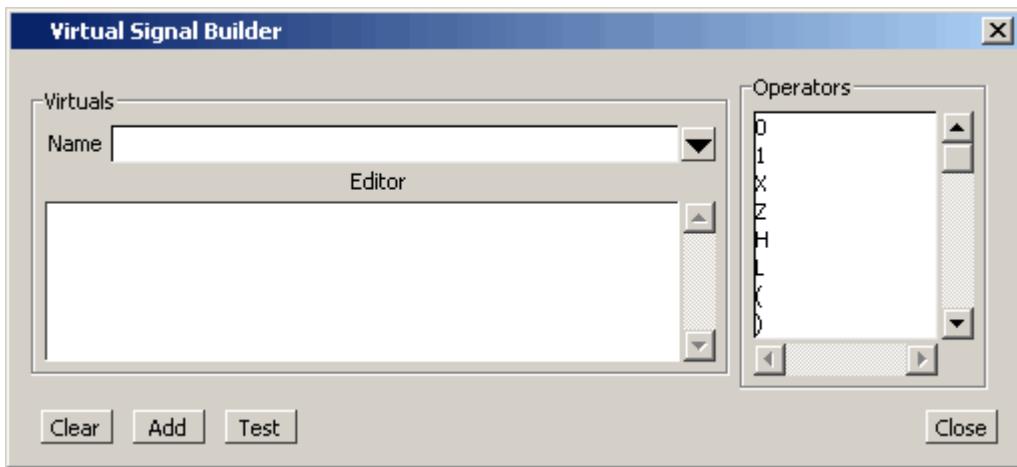Figure 9-43. Virtual Expression Builder


- The Name field allows you to enter the name of the new virtual signal.
- The Editor field is simply a regular text box. You can write directly to it, copy and paste or drag a signal from the Objects window, Locals window or the Wave window and drop it in the Editor field.
- The Operators field allows you to select from a list of operators. Simply double-click an operator to add it to the Editor field.
- The Clear button will clear the Editor field.
- The Add button will add the virtual signal to the wave window
- The Test button will test your virtual signal for proper operation.

Configuring New Line Triggering in the List Window


New line triggering refers to what events cause a new line of data to be added to the List window. By default ModelSim adds a new line for any signal change including deltas within a single unit of time resolution.

You can set new line triggering on a signal-by-signal basis or for the whole simulation. To set for a single signal, select **View > Signal Properties** from the List window menu bar (when the window is undocked) and select the **Triggers line** setting. Individual signal settings override global settings.

Figure 9-44. Line Triggering in the List Window

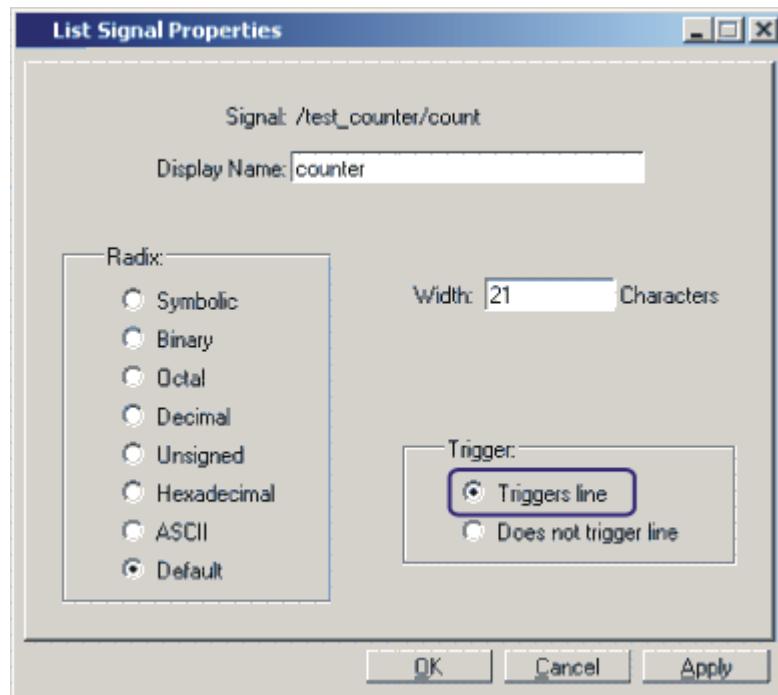

To modify new line triggering for the whole simulation, select **Tools > List Preferences** from the List window menu bar (when the window is undocked), or use the [configure](#) command. When you select **Tools > List Preferences**, the Modify Display Properties dialog appears:

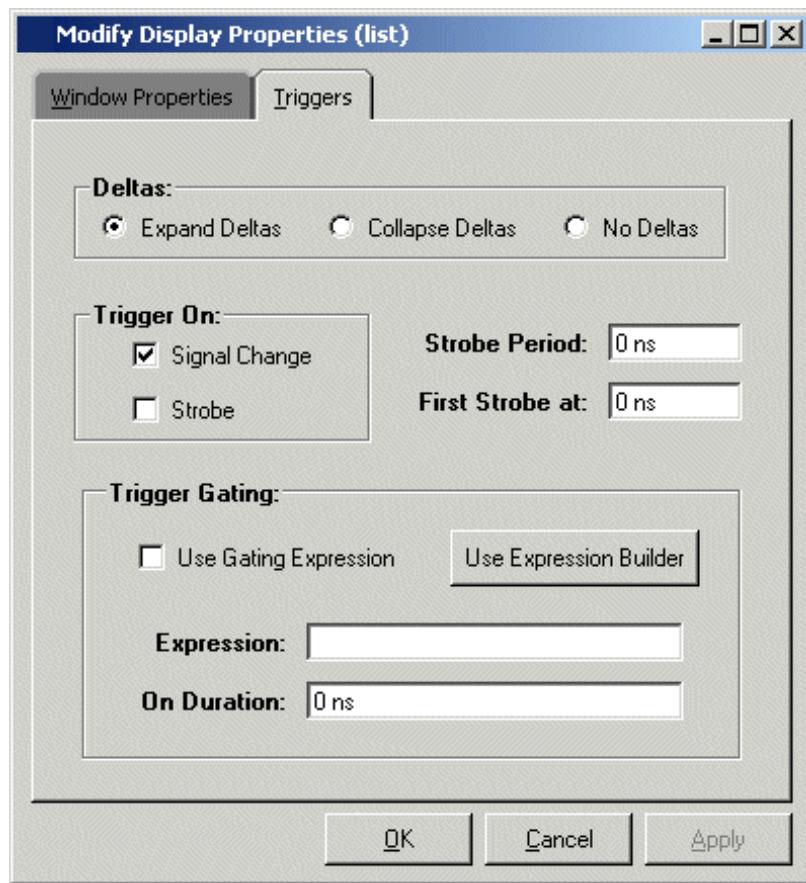Figure 9-45. Setting Trigger Properties

The following table summarizes the triggering options:

Table 9-8. Triggering Options

Option	Description
Deltas	Choose between displaying all deltas (Expand Deltas), displaying the value at the final delta (Collapse Delta). You can also hide the delta column all together (No Delta), however this will display the value at the final delta.
Strobe trigger	Specify an interval at which you want to trigger data display
Trigger gating	Use a gating expression to control triggering; see Using Gating Expressions to Control Triggering for more details

Using Gating Expressions to Control Triggering

Trigger gating controls the display of data based on an expression. Triggering is enabled once the gating expression evaluates to true. This setup behaves much like a hardware signal analyzer that starts recording data on a specified setup of address bits and clock edges.

Here are some points about gating expressions:


- Gating expressions affect the display of data but not acquisition of the data.
- The expression is evaluated when the List window would normally have displayed a row of data (given the other trigger settings).
- The duration determines for how long triggering stays enabled after the gating expression returns to false (0). The default of 0 duration will enable triggering only while the expression is true (1). The duration is expressed in x number of default timescale units.
- Gating is level-sensitive rather than edge-triggered.

Trigger Gating Example Using the Expression Builder

This example shows how to create a gating expression with the ModelSim Expression Builder. Here is the procedure:

1. Select **Tools > Window Preferences** from the List window menu bar (when the window is undocked) and select the Triggers tab.
2. Click the **Use Expression Builder** button.

Figure 9-46. Trigger Gating Using Expression Builder

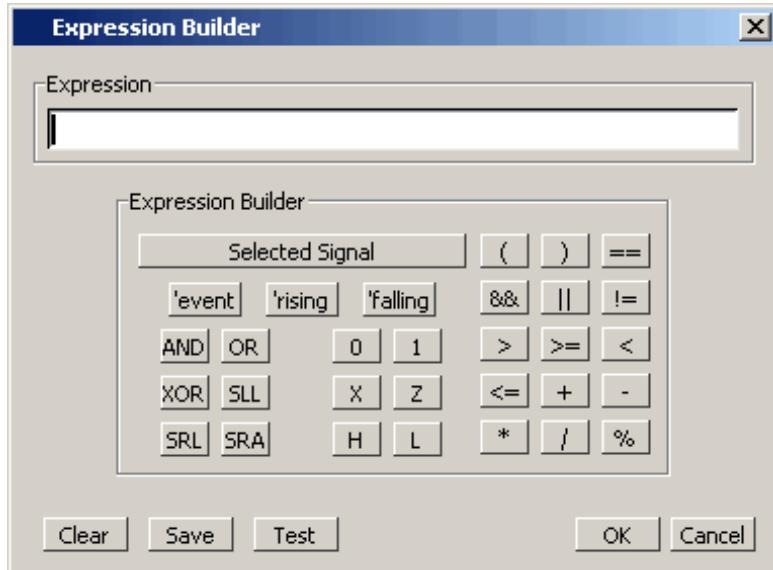

3. Select the signal in the List window that you want to be the enable signal by clicking on its name in the header area of the List window.
4. Click **Insert Selected Signal** and then **'rising'** in the Expression Builder.
5. Click OK to close the Expression Builder.
You should see the name of the signal plus "rising" added to the Expression entry box of the Modify Display Properties dialog box.
6. Click **OK** to close the dialog.

If you already have simulation data in the List window, the display should immediately switch to showing only those cycles for which the gating signal is rising. If that isn't quite what you want, you can go back to the expression builder and play with it until you get it the way you want it.

If you want the enable signal to work like a "One-Shot" that would display all values for the next, say 10 ns, after the rising edge of enable, then set the **On Duration** value to **10 ns**.

Trigger Gating Example Using Commands

The following commands show the gating portion of a trigger configuration statement:

```
configure list -usegating 1
configure list -gateduration 100
configure list -gateexpr {/test_delta/iom_dd'rising}
```

See the [configure](#) command for more details.

Sampling Signals at a Clock Change

You easily can sample signals at a clock change using the [add list](#) command with the **-notrigger** argument. The **-notrigger** argument disables triggering the display on the specified signals. For example:

```
add list clk -notrigger a b c
```

When you run the simulation, List window entries for *clk*, *a*, *b*, and *c* appear only when *clk* changes.

If you want to display on rising edges only, you have two options:

1. Turn off the List window triggering on the clock signal, and then define a repeating strobe for the List window.
2. Define a "gating expression" for the List window that requires the clock to be in a specified state. See above.

Miscellaneous Tasks

Examining Waveform Values

You can use your mouse to display a dialog that shows the value of a waveform at a particular time. You can do this two ways:

- Rest your mouse pointer on a waveform. After a short delay, a dialog will pop-up that displays the value for the time at which your mouse pointer is positioned. If you'd prefer that this popup not display, it can be toggled off in the display properties. See [Setting Wave Window Display Preferences](#).
- Right-click a waveform and select **Examine**. A dialog displays the value for the time at which you clicked your mouse. This method works in the List window as well.

Displaying Drivers of the Selected Waveform

You can automatically display in the Dataflow window the drivers of a signal selected in the Wave window. You can do this three ways:

- Select a waveform and click the Show Drivers button on the toolbar. 
- Select a waveform and select Show Drivers from the shortcut menu
- Double-click a waveform edge (you can enable/disable this option in the display properties dialog; see [Setting Wave Window Display Preferences](#))

This operation opens the Dataflow window and displays the drivers of the signal selected in the Wave window. The Wave pane in the Dataflow window also opens to show the selected signal with a cursor at the selected time. The Dataflow window shows the signal(s) values at the current cursor position.

Sorting a Group of Objects in the Wave Window

Select **View > Sort** to sort the objects in the pathname and values panes.

Creating and Managing Breakpoints

ModelSim supports both signal (i.e., when conditions) and file-line breakpoints. Breakpoints can be set from multiple locations in the GUI or from the command line.

Signal Breakpoints

Signal breakpoints (“when” conditions) instruct ModelSim to perform actions when the specified conditions are met. For example, you can break on a signal value or at a specific

simulator time (see the [when](#) command for additional details). When a breakpoint is hit, a message in the Main window transcript identifies the signal that caused the breakpoint.

Setting Signal Breakpoints with the when Command

Use the [when](#) command to set a signal breakpoint from the VSIM> prompt. For example,

```
when {errorFlag = '1' OR $now = 2 ms} {stop}
```


adds 2 ms to the simulation time at which the “when” statement is first evaluated, then stops. The white space between the value and time unit is required for the time unit to be understood by the simulator. See the [when](#) command in the Command Reference for more examples.

Setting Signal Breakpoints with the GUI


Signal breakpoints are most easily set in the [Objects Pane](#) and the Wave window. Right-click a signal and select **Insert Breakpoint** from the context menu. A breakpoint is set on that signal and will be listed in the **Modify Breakpoints** dialog accessible by selecting **Tools > Breakpoints** from the Main menu bar.

Modifying Signal Breakpoints

You can modify signal breakpoints by selecting **Tools > Breakpoints** from the Main menus. This will open the Modify Breakpoints dialog ([Figure 9-47](#)), which displays a list of all breakpoints in the design.

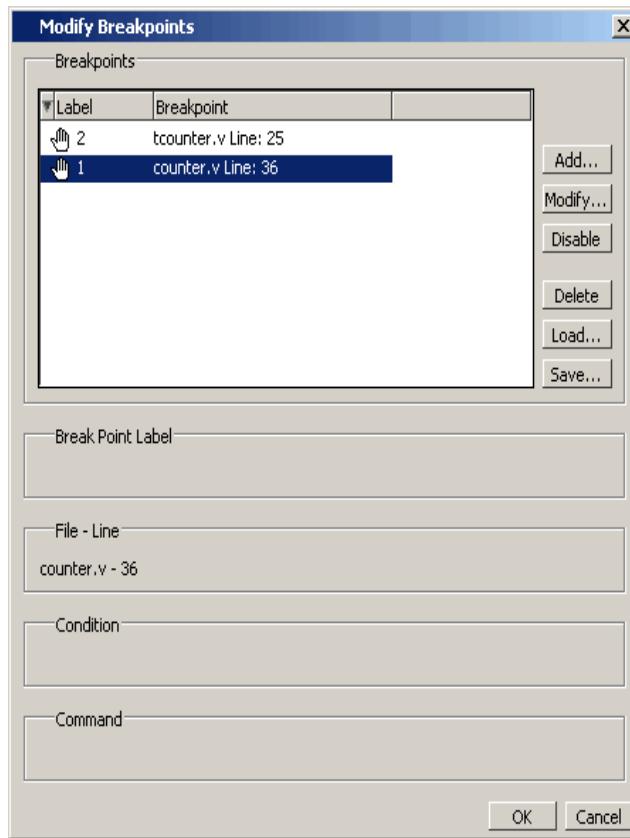Figure 9-47. Modifying the Breakpoints Dialog

When you select a signal breakpoint from the list and click the Modify button, the Signal Breakpoint dialog (Figure 9-48) opens, allowing you to modify the breakpoint.

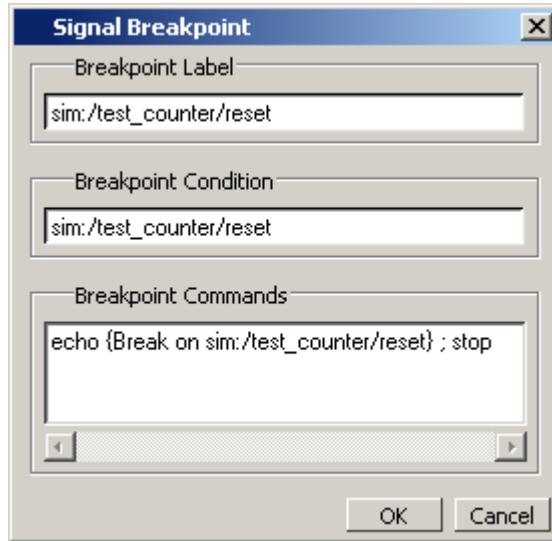Figure 9-48. Signal Breakpoint Dialog

File-Line Breakpoints

File-line breakpoints are set on executable lines in your source files. When the line is hit, the simulator stops and the Source window opens to show the line with the breakpoint. You can change this behavior by editing the PrefSource(OpenOnBreak) variable. See [Simulator GUI Preferences](#) for details on setting preference variables.

Setting File-Line Breakpoints Using the bp Command

Use the **bp** command to set a file-line breakpoint from the VSIM> prompt. For example:

```
bp top.vhd 147
```

sets a breakpoint in the source file *top.vhd* at line 147.

Setting File-Line Breakpoints Using the GUI

File-line breakpoints are most easily set using your mouse in the [Source Window](#). Position your mouse cursor in the line number column next to a red line number (which indicates an executable line) and click the left mouse button. A red ball denoting a breakpoint will appear (Figure 9-49).

Figure 9-49. Breakpoints in the Source Window

```
C:/Tutorial/examples/tutorials/verilog/basicSimulation/counter.v
Ln#           * Exit this loop when carry == zero, OR all bits proce
25           */
26           */
27           for (i = 4'b0; ((carry == 4'b1) && (i <= 7)); i = i + 4
28           begin
29               increment[i] = val[i] ^ carry;
30               carry = val[i] & carry;
31           end
32       end
33   endfunction
34
35●   always @ (posedge clk or posedge reset)
36       if (reset)
37           count = #tpd_reset_to_count 8'h00;
38       else
39           count = count + 1;
40
41   initial
42       begin
43           $dumpvars(0, counter);
44       end
45
46   endmodule
```

The breakpoints are toggles. Click the left mouse button on the red breakpoint marker to disable the breakpoint. A disabled breakpoint will appear as a black ball. Click the marker again to enable it.


Right-click the breakpoint marker to open a context menu that allows you to **Enable/Disable**, **Remove**, or **Edit** the breakpoint. Create the colored diamond; click again to disable or enable the breakpoint.

Modifying a File-Line Breakpoint

You can modify a file-line breakpoint by selecting **Tools > Breakpoints** from the Main menus. This will open the Modify Breakpoints dialog (Figure 9-47), which displays a list of all breakpoints in the design.

When you select a file-line breakpoint from the list and click the **Modify** button, the File Breakpoint dialog (Figure 9-50) opens, allowing you to modify the breakpoint.

Figure 9-50. File Breakpoint Dialog Box

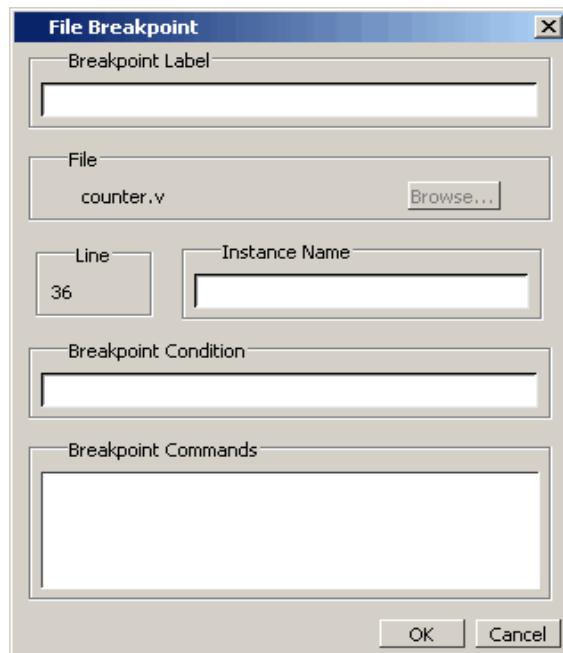

Saving and Restoring Breakpoints

The **write format restart <filename>** command creates a single *.do* file that will recreate all debug windows, all file/line breakpoints, and all signal breakpoints created using the **when** command. The syntax is:

```
write format restart <filename>
```

If the **ShutdownFile modelsim.ini** variable is set to this *.do* filename, it will call the **write format restart** command upon exit.

The file created is primarily a list of **add list** or **add wave** commands, though a few other commands are included. This file may be invoked with the **do** command to recreate the window format on a subsequent simulation run.

Chapter 10

Debugging with the Dataflow Window

This chapter discusses how to use the Dataflow window for tracing signal values, browsing the physical connectivity of your design, and performing post-simulation debugging operations.


Dataflow Window Overview

The Dataflow window allows you to explore the "physical" connectivity of your design.

Note

 OEM versions of ModelSim have limited Dataflow functionality. Many of the features described below will operate differently. The window will show only one process and its attached signals or one signal and its attached processes, as displayed in [Figure 10-1](#).

Figure 10-1. The Dataflow Window (undocked) - ModelSim

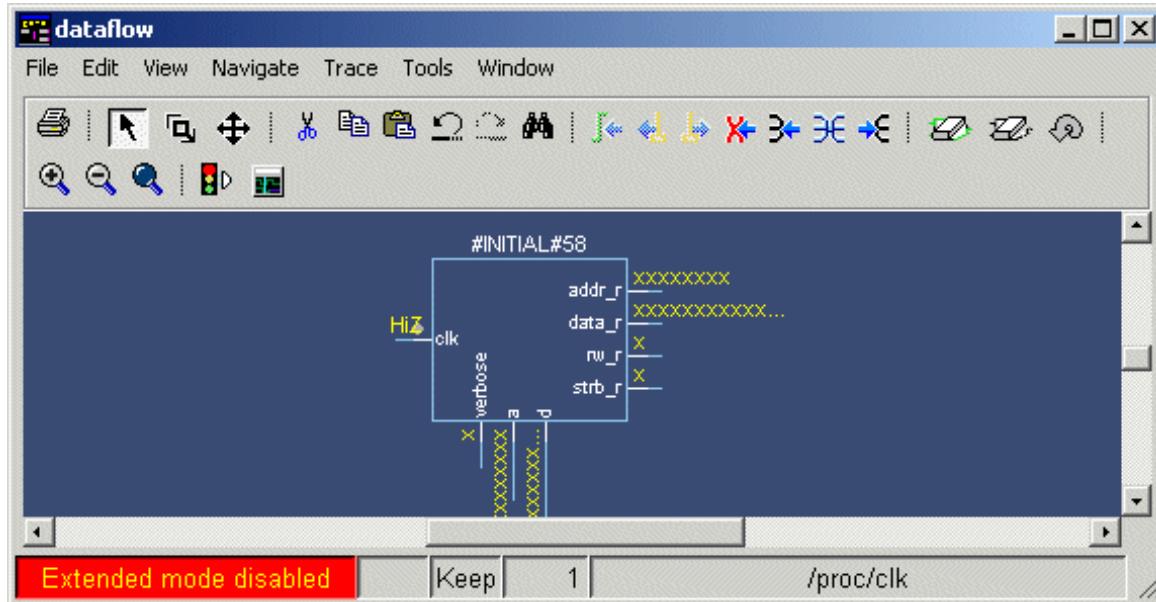


Dataflow Usage Flow

The Dataflow window can be used to debug the design currently being simulated, or to perform post-simulation debugging of a design. ModelSim is able to create a database for use with post-

simulation debugging. The database is created at design load time, immediately after elaboration, and used later.

Figure 10-2 illustrates the current and post-sim usage flows for Dataflow debugging.

Figure 10-2. Dataflow Debugging Usage Flow

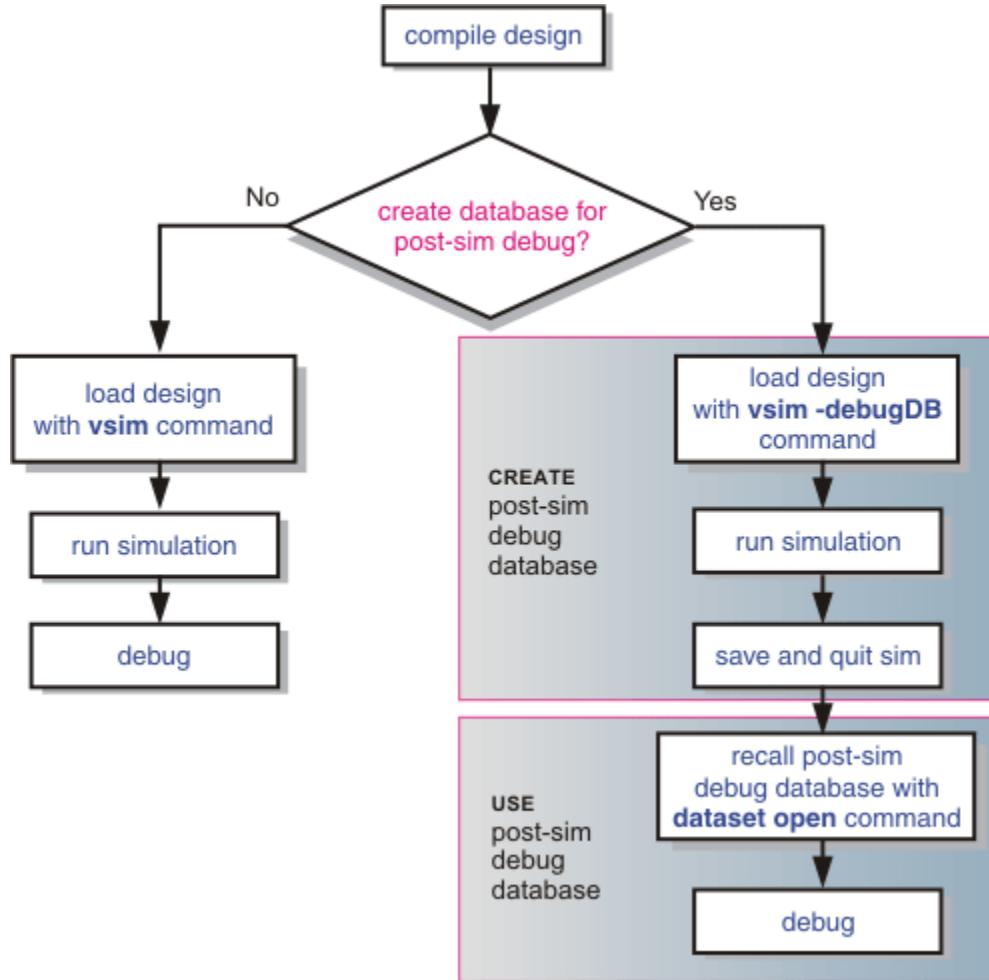

Post-Simulation Debug Flow Details

The post-sim debug flow for Dataflow analysis is most commonly used when performing simulations of large designs in simulation farms, where simulation results are gathered over extended periods and saved for analysis at a later date. In general, the process consists of two steps: creating the database and then using it. The details of each step are as follows:

Create the Post-Sim Debug Database

1. Compile the design using the `vlog` and/or `vcom` commands.
2. Load the design with the following commands:

```
vsim -debugDB=<db_pathname.dbg> -wlf <db_pathname.wlf> <design_name>
add log -r /*
```

Specify the post-simulation database file name with the **-debugDB=<db_pathname>** argument to the **vsim** command. If a database pathname is not specified, ModelSim creates a database with the file name *vsim.dbg* in the current working directory. This database contains dataflow connectivity information.

Specify the dataset that will contain the database with **-wlf <db_pathname>**. If a dataset name is not specified, the default name will be *vsim.wlf*.

The debug database and the dataset that contains it should have the same base name (**db_pathname**).

The add log -r /* command instructs ModelSim to save all signal values generated when the simulation is run.

3. Run the simulation.
4. Quit the simulation.

The **-debugDB=<db_pathname>** argument to the **vsim** command only needs to be used once after any structural changes to a design. After that, you can reuse the *vsim.dbg* file along with updated waveform files (*vsim.wlf*) to perform post simulation debug.

A structural change is any change that adds or removes nets or instances in the design, or changes any port/net associations. This also includes processes and primitive instances. Changes to behavioral code are not considered structural changes. ModelSim does not automatically detect structural changes. This must be done by the user.

Use the Post-Simulation Debug Database

1. Start ModelSim by typing **vsim** at a UNIX shell prompt; or double-click a ModelSim icon in Windows.
2. Select **File > Change Directory** and change to the directory where the post-simulation debug database resides.
3. Recall the post-simulation debug database with the following:

```
dataset open <db_pathname.wlf>
```

ModelSim opens the *.wlf* dataset and its associated debug database (*.dbg* file with the same basename), if it can be found. If ModelSim cannot find *db_pathname.dbg*, it will attempt to open *vsim.dbg*.

Common Tasks for Dataflow Debugging

Common tasks for current and post-simulation Dataflow debugging include:

- [Adding Objects to the Dataflow Window](#)
- [Exploring the Connectivity of the Design](#)
- [Exploring Designs with the Embedded Wave Viewer](#)
- [Tracing Events \(Causality\)](#)
- [Tracing the Source of an Unknown State \(StX\)](#)
- [Finding Objects by Name in the Dataflow Window](#)

Adding Objects to the Dataflow Window

You can use any of the following methods to add objects to the Dataflow window:

- drag and drop objects from other windows
- use the Navigate menu options in the Dataflow window
- use the [add dataflow](#) command
- double-click any waveform in the Wave window display

The **Navigate** menu offers four commands that will add objects to the window:

- **View region** — clear the window and display all signals from the current region
- **Add region** — display all signals from the current region without first clearing the window
- **View all nets** — clear the window and display all signals from the entire design
- **Add ports** — add port symbols to the port signals in the current region

When you view regions or entire nets, the window initially displays only the drivers of the added objects. You can easily view readers as well by selecting an object and invoking **Navigate > Expand net to readers**.

A small circle above an input signal on a block denotes a trigger signal that is on the process' sensitivity list.

Exploring the Connectivity of the Design

A primary use of the Dataflow window is exploring the "physical" connectivity of your design. One way of doing this is by expanding the view from process to process. This allows you to see the drivers/readers of a particular signal, net, or register.

You can expand the view of your design using menu commands or your mouse. To expand with the mouse, simply double click a signal, register, or process. Depending on the specific object

you click, the view will expand to show the driving process and interconnect, the reading process and interconnect, or both.

Alternatively, you can select a signal, register, or net, and use one of the toolbar buttons or menu commands described in [Table 10-1](#).

Table 10-1. Icon and Menu Selections for Exploring Design Connectivity

	Expand net to all drivers display driver(s) of the selected signal, net, or register	Navigate > Expand net to drivers
	Expand net to all drivers and readers display driver(s) and reader(s) of the selected signal, net, or register	Navigate > Expand net
	Expand net to all readers display reader(s) of the selected signal, net, or register	Navigate > Expand net to readers

As you expand the view, the layout of the design may adjust to show the connectivity more clearly. For example, the location of an input signal may shift from the bottom to the top of a process.

Limiting the Display of Readers

Some nets (such as a clock) in a design can have many readers. This can cause the display to draw numerous processes that you do not want to see when expanding the selected signal, net, or register. The dataflow display tests for the number of readers to be drawn and compares that number to a limit that you set in Dataflow Preferences (`outputquerylimit`). The default value of this limit is 100 (if you set `outputquerylimit` to 0, the test is not done). If this limit is exceeded, a dialog box asks whether you want all readers to be drawn. If you choose No, then no readers are displayed.

Note




This limit does not affect the display of drivers.

Tracking Your Path Through the Design

You can quickly traverse through many components in your design. To help mark your path, the objects that you have expanded are highlighted in green.

Figure 10-3. Green Highlighting Shows Your Path Through the Design

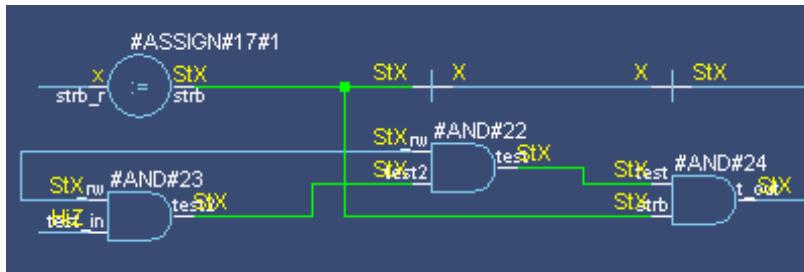

You can clear this highlighting using the **Edit > Erase highlight** command or by clicking the **Erase highlight** icon in the toolbar.



Exploring Designs with the Embedded Wave Viewer


Another way of exploring your design is to use the Dataflow window's embedded wave viewer. This viewer closely resembles, in appearance and operation, the stand-alone Wave window (see [Waveform Analysis](#) for more information).

The wave viewer is opened using the **View > Show Wave** menu selection or by clicking the **Show Wave** icon.



One common scenario is to place signals in the wave viewer and the Dataflow panes, run the design for some amount of time, and then use time cursors to investigate value changes. In other words, as you place and move cursors in the wave viewer pane (see [Measuring Time with Cursors in the Wave Window](#) for details), the signal values update in the Dataflow pane.

Figure 10-4. Wave Viewer Displays Inputs and Outputs of Selected Process

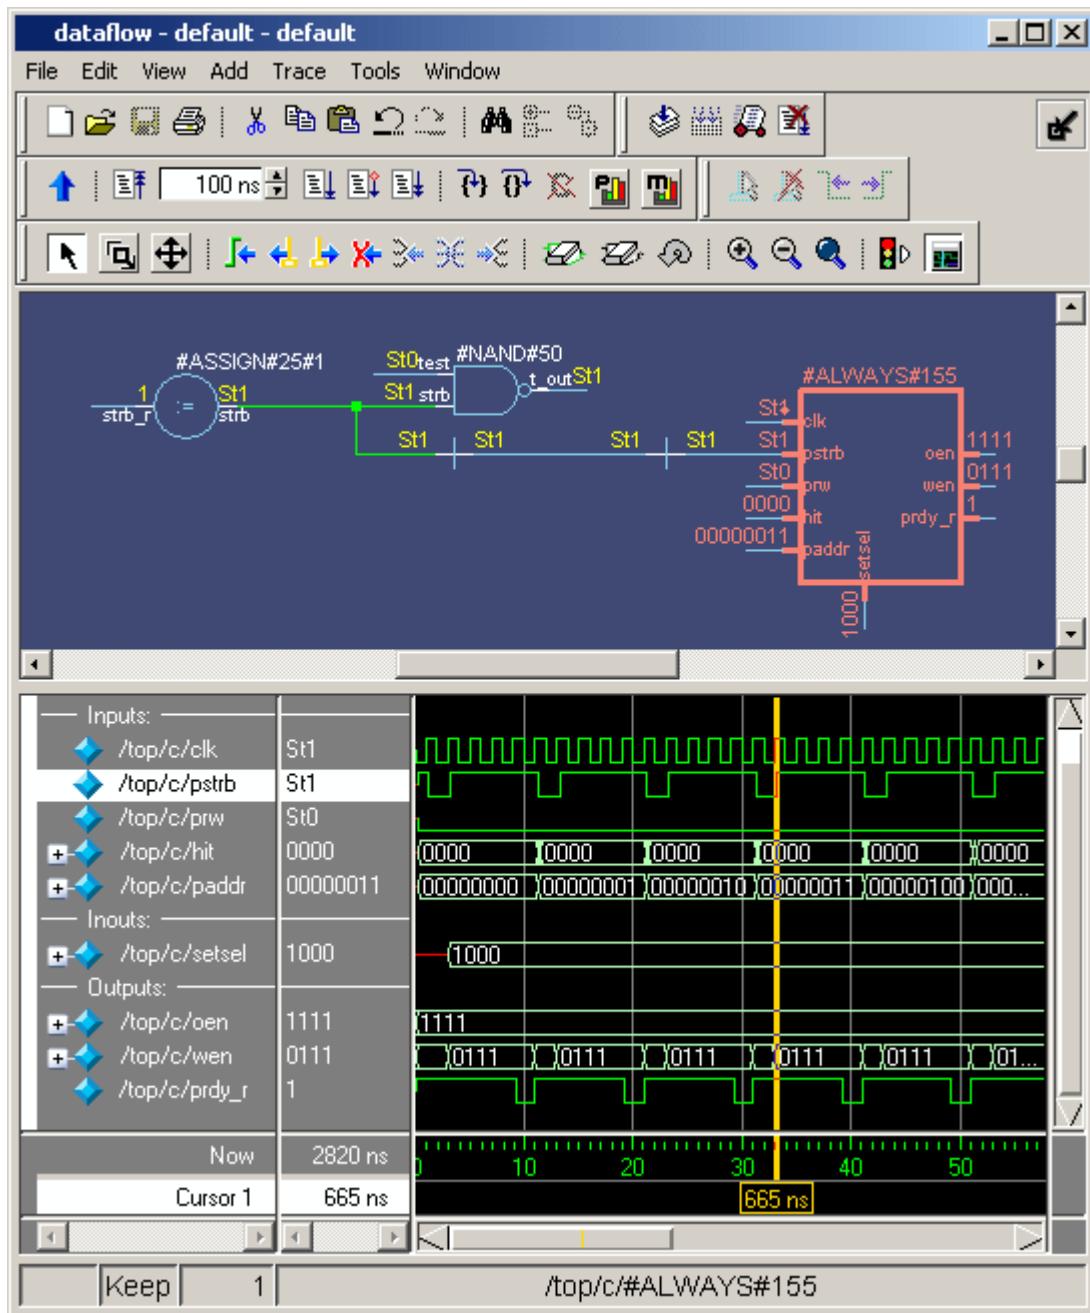

Another scenario is to select a process in the Dataflow pane, which automatically adds to the wave viewer pane all signals attached to the process.

See [Tracing Events \(Causality\)](#) for another example of using the embedded wave viewer.

Tracing Events (Causality)

You can use the Dataflow window to trace an event to the cause of an unexpected output. This feature uses the Dataflow window's embedded wave viewer (see [Exploring Designs with the Embedded Wave Viewer](#) for more details). First, you identify an output of interest in the dataflow pane, then use time cursors in the wave viewer pane to identify events that contribute to the output.

The process for tracing events is as follows:


1. Log all signals before starting the simulation (**add log -r /***).
2. After running a simulation for some period of time, open the Dataflow window and the wave viewer pane.
3. Add a process or signal of interest into the dataflow pane (if adding a signal, find its driving process). Select the process and all signals attached to the selected process will appear in the wave viewer pane.
4. Place a time cursor on an edge of interest; the edge should be on a signal that is an output of the process.
5. Select **Trace > Trace input net to event**. 
A second cursor is added at the most recent input event.
6. Keep selecting **Trace > Trace next event** until you've reached an input event of interest. Note that the signals with the events are selected in the wave viewer pane.
7. Now select **Trace > Trace Set**. 
The Dataflow display "jumps" to the source of the selected input event(s). The operation follows all signals selected in the wave viewer pane. You can change which signals are followed by changing the selection.
8. To continue tracing, go back to step 5 and repeat.

If you want to start over at the originally selected output, select **Trace > Trace event reset**.

Tracing the Source of an Unknown State (StX)

Another useful Dataflow window debugging tool is the ability to trace an unknown state (StX) back to its source. Unknown values are indicated by red lines in the Wave window ([Figure 10-5](#)) and in the wave viewer pane of the Dataflow window.

Figure 10-5. Unknown States Shown as Red Lines in Wave Window

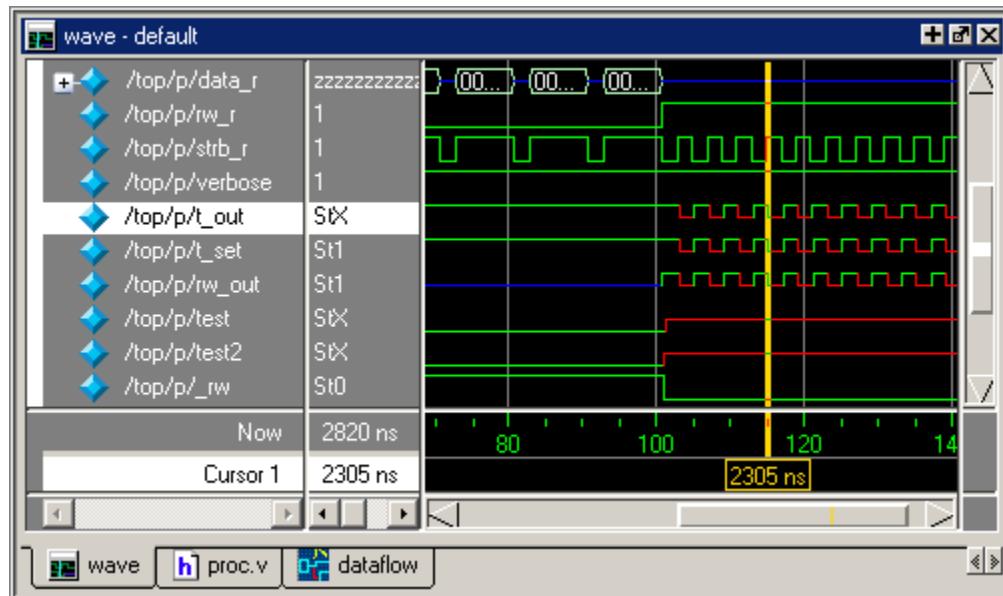

The procedure for tracing to the source of an unknown state in the Dataflow window is as follows:

1. Load your design.
2. Log all signals in the design or any signals that may possibly contribute to the unknown value (**log -r /*** will log all signals in the design).
3. Add signals to the Wave window or wave viewer pane, and run your design the desired length of time.
4. Put a Wave window cursor on the time at which the signal value is unknown (StX). In [Figure 10-5](#), Cursor 1 at time 2305 shows an unknown state on signal *t_out*.
5. Add the signal of interest to the Dataflow window by doing one of the following:
 - o double-click on the signal's waveform in the Wave window,
 - o right-click the signal in the Objects window and select **Add to Dataflow > Selected Signals** from the popup menu,
 - o select the signal in the Objects window and select **Add > Dataflow > Selected Signals** from the menu bar.
6. In the Dataflow window, make sure the signal of interest is selected.
7. Trace to the source of the unknown by doing one of the following:
 - o If the Dataflow window is docked, make one of the following menu selections:
Tools > Trace > TraceX,
Tools > Trace > TraceX Delay,

Tools > Trace > ChaseX, or
Tools > Trace > ChaseX Delay.

- If the Dataflow window is undocked, make one of the following menu selections:
Trace > TraceX,
Trace > TraceX Delay,
Trace > ChaseX, or
Trace > ChaseX Delay.

These commands behave as follows:


- **TraceX / TraceX Delay**— **TraceX** steps back to the last driver of an X value. **TraceX Delay** works similarly but it steps back in time to the last driver of an X value. **TraceX** should be used for RTL designs; **TraceX Delay** should be used for gate-level netlists with back annotated delays.
- **ChaseX / ChaseX Delay** — **ChaseX** jumps through a design from output to input, following X values. **ChaseX Delay** acts the same as **ChaseX** but also moves backwards in time to the point where the output value transitions to X. **ChaseX** should be used for RTL designs; **ChaseX Delay** should be used for gate-level netlists with back annotated delays.

Finding Objects by Name in the Dataflow Window

Select **Edit > Find** from the menu bar, or click the Find icon in the toolbar, to search for signal, net, or register names or an instance of a component. This opens the Find in Dataflow dialog (Figure 10-6).



Figure 10-6. Find in Dataflow Dialog

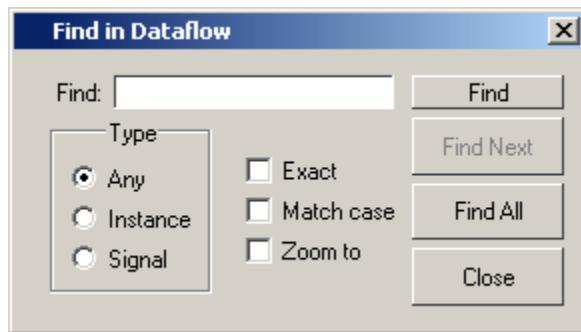

With the Find in Dataflow dialog you can limit the search by type to instances or signals. You select **Exact** to find an item that exactly matches the entry you've typed in the **Find** field. The **Match case** selection will enforce case-sensitive matching of your entry. And the **Zoom to** selection will zoom in to the item in the **Find** field.

The **Find All** button allows you to find and highlight all occurrences of the item in the **Find** field. If **Zoom to** is checked, the view will change such that all selected items are viewable. If **Zoom to** is not selected, then no change is made to zoom or scroll state.

Dataflow Concepts

This section provides an introduction to the following important Dataflow concepts:

- [Symbol Mapping](#)
- [Current vs. Post-Simulation Command Output](#)
- [Window vs. Pane](#)

Symbol Mapping

The Dataflow window has built-in mappings for all Verilog primitive gates (i.e., AND, OR, etc.). For components other than Verilog primitives, you can define a mapping between processes and built-in symbols. This is done through a file containing name pairs, one per line, where the first name is the concatenation of the design unit and process names, (DName.Processname), and the second name is the name of a built-in symbol. For example:

```
xorg(only).p1 XOR
org(only).p1 OR
andg(only).p1 AND
```

Entities and modules are mapped the same way:

```
AND1 AND
AND2 AND # A 2-input and gate
AND3 AND
AND4 AND
AND5 AND
AND6 AND
xnor(test) XNOR
```

Note that for primitive gate symbols, pin mapping is automatic.

The Dataflow window looks in the current working directory and inside each library referenced by the design for the file *dataflow.bsm* (.bsm stands for "Built-in Symbol Map"). It will read all files found.

User-Defined Symbols

You can also define your own symbols using an ASCII symbol library file format for defining symbol shapes. This capability is delivered via Concept Engineering's Nlview™ widget Symlib format.

The Dataflow window will search the current working directory, and inside each library referenced by the design, for the file *dataflow.sym*. Any and all files found will be given to the Nlview widget to use for symbol lookups. Again, as with the built-in symbols, the DU name and optional process name is used for the symbol lookup. Here's an example of a symbol for a full adder:

```
symbol adder(structural) * DEF \
port a in -loc -12 -15 0 -15 \
pinattrdsp @name -cl 2 -15 8 \
port b in -loc -12 15 0 15 \
pinattrdsp @name -cl 2 15 8 \
port cin in -loc 20 -40 20 -28 \
pinattrdsp @name -uc 19 -26 8 \
port cout out -loc 20 40 20 28 \
pinattrdsp @name -lc 19 26 8 \
port sum out -loc 63 0 51 0 \
pinattrdsp @name -cr 49 0 8 \
path 10 0 0 7 \
path 0 7 0 35 \
path 0 35 51 17 \
path 51 17 51 -17 \
path 51 -17 0 -35 \
path 0 -35 0 -7 \
path 0 -7 10 0
```

Port mapping is done by name for these symbols, so the port names in the symbol definition must match the port names of the Entity|Module|Process (in the case of the process, it's the signal names that the process reads/writes).

Note



When you create or modify a symlib file, you must generate a file index. This index is how the NIview widget finds and extracts symbols from the file. To generate the index, select **Tools > Create symlib index** (Dataflow window) and specify the symlib file. The file will be rewritten with a correct, up-to-date index.

Current vs. Post-Simulation Command Output


ModelSim includes **drivers** and **readers** commands that can be invoked from the command line to provide information about signals displayed in the Dataflow window. In live simulation mode, the **drivers** and **readers** commands will provide both topological information and signal values. In post-simulation mode, however, these commands will provide only topological information. Driver and reader values are not saved in the post-simulation debug database.

Window vs. Pane

In this chapter we use the terms “window” and “pane.” “Window” is used when referring to the entire Dataflow window — whether docked in the Main window MDI frame or undocked, “Pane” is used when referring to either the dataflow pane or the wave viewer pane, as shown in [Figure 10-7](#).

Figure 10-7. Dataflow Window and Panes

Dataflow window

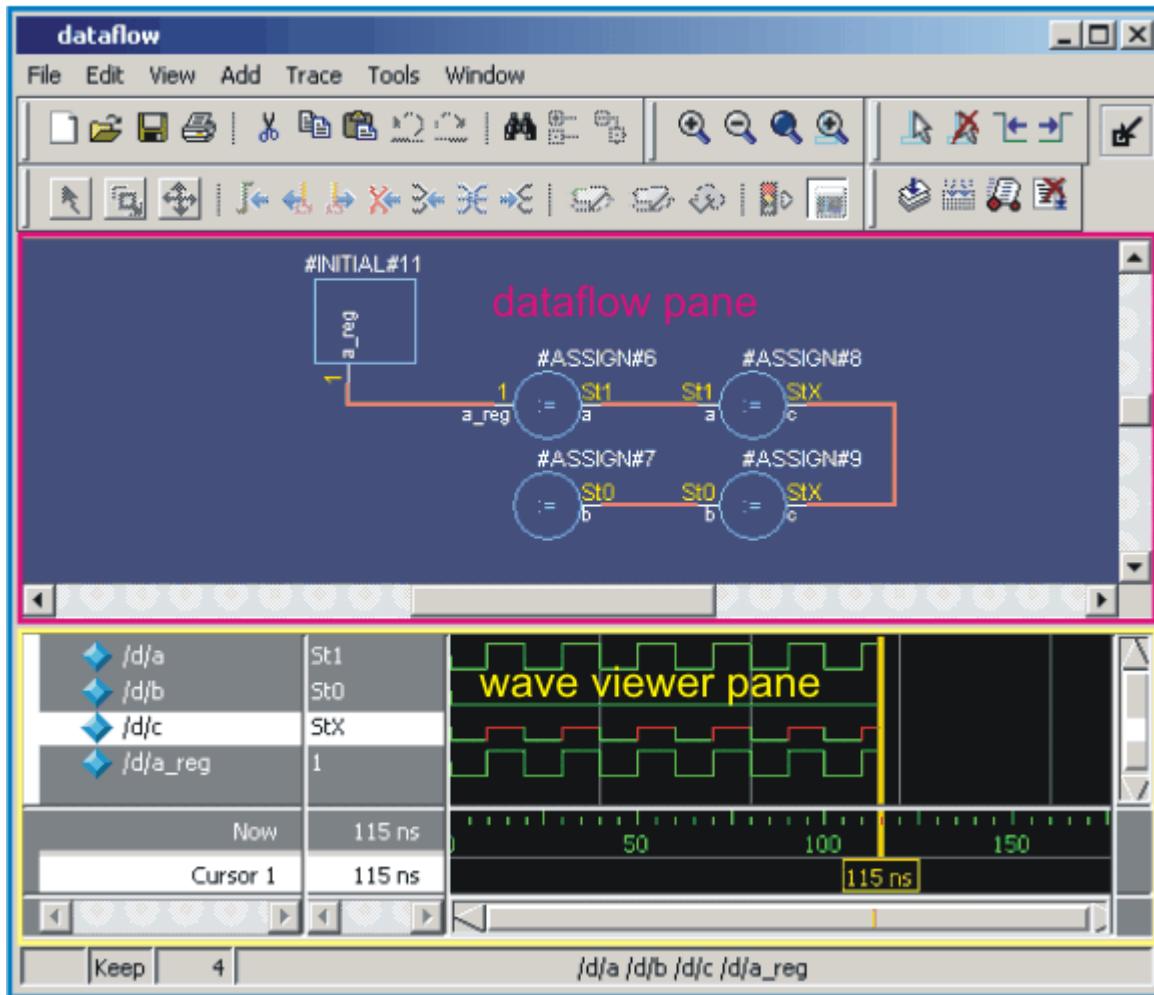

Dataflow Window Graphic Interface Reference

This section answers the following common questions about using the Dataflow window's graphic user interface:

- [What Can I View in the Dataflow Window?](#)
- [How is the Dataflow Window Linked to Other Windows?](#)
- [How Can I Print and Save the Display?](#)
- [How Do I Configure Window Options?](#)
- [How Do I Zoom and Pan the Display?](#)

What Can I View in the Dataflow Window?

The Dataflow window displays:

- processes
- signals, nets, and registers

The window has built-in mappings for all Verilog primitive gates (i.e., AND, OR, etc.). For components other than Verilog primitives, you can define a mapping between processes and built-in symbols. See [Symbol Mapping](#) for details.

How is the Dataflow Window Linked to Other Windows?

The Dataflow window is dynamically linked to other debugging windows and panes as described in [Table 10-2](#).

Table 10-2. Dataflow Window Links to Other Windows and Panes

Window	Link
Main Window	select a signal or process in the Dataflow window, and the structure tab updates if that object is in a different design unit
Process Window	select a process in either window, and that process is highlighted in the other
Objects Pane	select a design object in either window, and that object is highlighted in the other
Wave Window	trace through the design in the Dataflow window, and the associated signals are added to the Wave window
	move a cursor in the Wave window, and the values update in the Dataflow window
Source Window	select an object in the Dataflow window, and the Source window updates if that object is in a different source file


How Can I Print and Save the Display?

You can print the Dataflow window display from a saved .eps file in the UNIX realm, or by simple menu selections in Windows. The Dataflow Page Setup dialog allows you to configure the display for printing.

Saving a .eps File and Printing the Dataflow Display from UNIX

With the dataflow pane in the Dataflow window active, select **File > Print Postscript** to setup and print the Dataflow display in UNIX, or save the waveform as a .eps file on any platform ([Figure 10-8](#)).


Figure 10-8. The Print Postscript Dialog

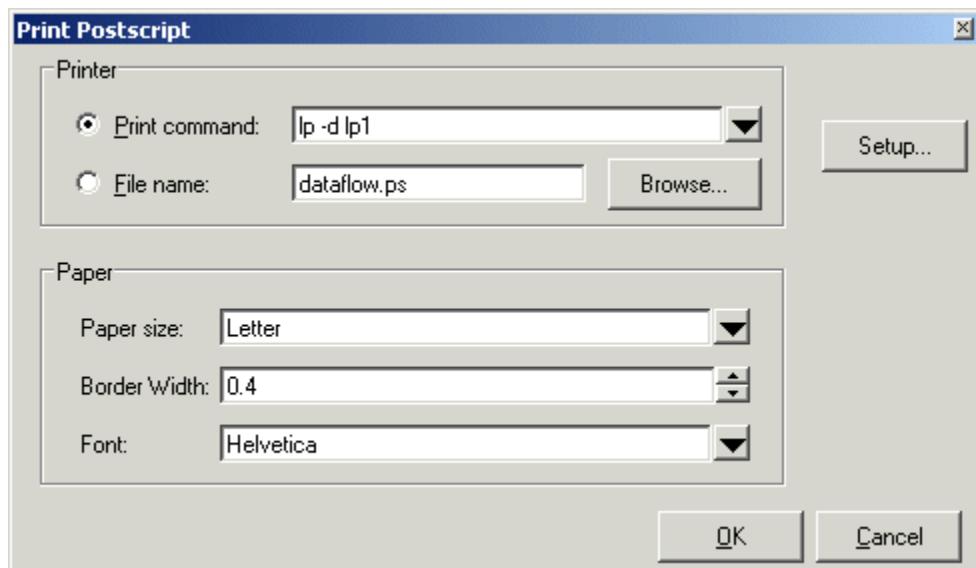

Printing from the Dataflow Display on Windows Platforms

With the dataflow pane in the Dataflow window active, select **File > Print** to print the Dataflow display or to save the display to a file (Figure 10-9).


Figure 10-9. The Print Dialog

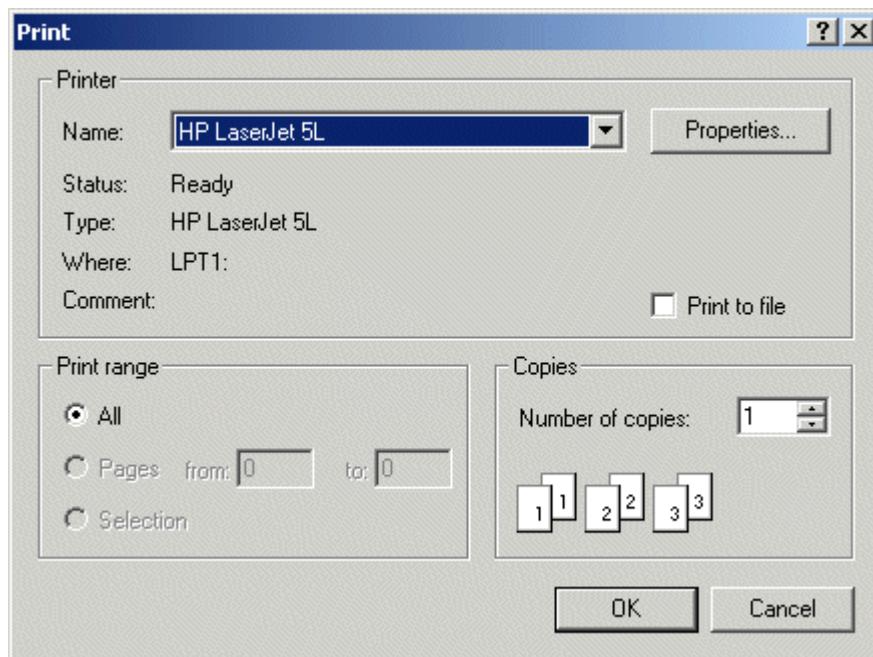

Configure Page Setup

With the dataflow pane in the Dataflow window active, select **File > Page setup** to open the Dataflow Page Setup dialog (Figure 10-10). You can also open this dialog by clicking the Setup button in the Print Postscript dialog (Figure 10-8). This dialog allows you to configure page view, highlight, color mode, orientation, and paper options.

Figure 10-10. The Dataflow Page Setup Dialog

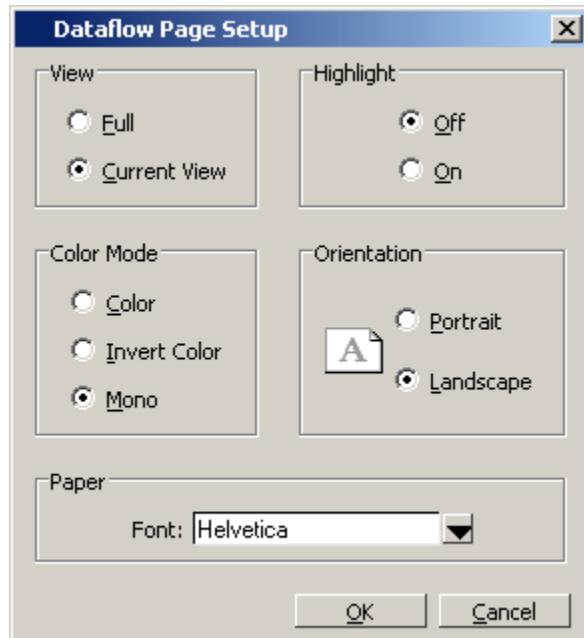


How Do I Configure Window Options?

You can configure several options that determine how the Dataflow window behaves. The settings affect only the current session.

Select **Tools > Options** to open the Dataflow Options dialog box.

Figure 10-11. Configuring Dataflow Options

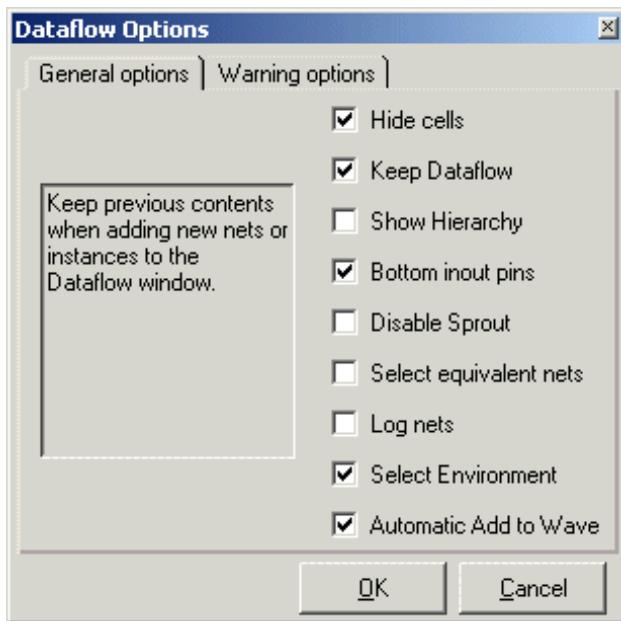

How Do I Zoom and Pan the Display?

The Dataflow window offers tools for zooming and panning the display.

These zoom buttons are available on the toolbar:



Zoom In
zoom in by a factor
of two from the
current view



Zoom Out
zoom out by a
factor of two from
current view



Zoom Full
zoom out to view
the entire schematic

To zoom with the mouse, you can either use the middle mouse button or enter Zoom Mode by selecting **View > Zoom** and then use the left mouse button.

Four zoom options are possible by clicking and dragging in different directions:

- Down-Right: Zoom Area (In)
- Up-Right: Zoom Out (zoom amount is displayed at the mouse cursor)
- Down-Left: Zoom Selected
- Up-Left: Zoom Full

The zoom amount is displayed at the mouse cursor. A zoom operation must be more than 10 pixels to activate.

Panning with the Mouse

You can pan with the mouse in two ways: 1) enter Pan Mode by selecting **View > Pan** and then drag with the left mouse button to move the design; 2) hold down the **<Ctrl>** key and drag with the middle mouse button to move the design.

Panning with the Keyboard

- Arrow Keys — pans the window in the specified direction.
 - Unmodified — pans by a small amount.
 - Ctrl+<arrow key> — pans by a larger amount
 - Shift+<arrow key> — pans the view to the edge of the display

Chapter 11

Signal Spy

The Verilog language allows access to any signal from any other hierarchical block without having to route it via the interface. This means you can use hierarchical notation to either assign or determine the value of a signal in the design hierarchy from a testbench. This capability fails when a Verilog testbench attempts to reference a signal in a VHDL block or reference a signal in a Verilog block through a VHDL level of hierarchy.

This limitation exists because VHDL does not allow hierarchical notation. In order to reference internal hierarchical signals, you have to resort to defining signals in a global package and then utilize those signals in the hierarchical blocks in question. But, this requires that you keep making changes depending on the signals that you want to reference.

The Signal Spy procedures and system tasks overcome the aforementioned limitations. They allow you to monitor (spy), drive, force, or release hierarchical objects in a VHDL or mixed design.

The VHDL procedures are provided via the [Util Package](#) within the *modelsim_lib* library. To access the procedures you would add lines like the following to your VHDL code:

```
library modelsim_lib;
use modelsim_lib.util.all;
```

The Verilog tasks and SystemC functions are available as built-in [System Tasks and Functions](#).

Table 11-1. Signal Spy Reference Comparison

Refer to:	VHDL procedures	Verilog system tasks	SystemC function
disable_signal_spy	disable_signal_spy()	\$disable_signal_spy()	disable_signal_spy()
enable_signal_spy	enable_signal_spy()	\$enable_signal_spy()	enable_signal_spy()
init_signal_driver	init_signal_driver()	\$init_signal_driver()	init_signal_driver()
init_signal_spy	init_signal_spy()	\$init_signal_spy()	init_signal_spy()
signal_force	signal_force()	\$signal_force()	signal_force()
signal_release	signal_release()	\$signal_release()	signal_release()

Designed for Testbenches

Signal Spy limits the portability of your code. HDL code with Signal Spy procedures or tasks works only in Questa and Modelsim. We therefore recommend using Signal Spy only in testbenches, where portability is less of a concern, and the need for such a tool is more applicable.

SignalSpy Supported Types

SignalSpy supports the following SystemVerilog types and user-defined SystemC types.

- SystemVerilog types
 - All scalar and integer SV types (bit, logic, int, shortint, longint, integer, byte, both signed and unsigned variations of these types)
 - Real and Shortreal
 - User defined types (packed/unpacked structures including nested structures, packed/unpacked unions, enums)
 - Arrays and Multi-D arrays of all supported types.
- SystemC types
 - Primitive C floating point types (double, float)
 - User defined types (structures including nested structures, unions, enums)

Cross-language type-checks and mappings have been implemented to support these types across all the possible language combinations:

- SystemC-SystemVerilog
- SystemC-SystemC
- SystemC-VHDL
- VHDL-SystemVerilog
- SystemVerilog-SystemVerilog

In addition to referring to the complete signal, you can also address the bit-selects, field-selects and part-selects of the supported types. For example:

```
/top/myInst/my_record[2].my_field1[4].my_vector[8]
```

disable_signal_spy

This reference section describes the following:

- VHDL Procedure — disable_signal_spy()
- Verilog Task — \$disable_signal_spy()
- SystemC Function— disable_signal_spy()

The disable_signal_spy call disables the associated init_signal_spy. The association between the disable_signal_spy call and the init_signal_spy call is based on specifying the same *src_object* and *dest_object* arguments to both. The disable_signal_spy call can only affect init_signal_spy calls that had their *control_state* argument set to "0" or "1".

By default this command uses a backslash (\) as a path separator. You can change this behavior with the [SignalSpyPathSeparator](#) variable in the *modelsim.ini* file.

VHDL Syntax

```
disable_signal_spy(<src_object>, <dest_object>, <verbose>)
```

Verilog Syntax

```
$disable_signal_spy(<src_object>, <dest_object>, <verbose>)
```

SystemC Syntax

```
disable_signal_spy(<src_object>, <dest_object>, <verbose>)
```

Returns

Nothing

Arguments

- **src_object**
Required string. A full hierarchical path (or relative downward path with reference to the calling block) to a VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal. This path should match the path that was specified in the init_signal_spy call that you wish to disable.
- **dest_object**
Required string. A full hierarchical path (or relative downward path with reference to the calling block) to a VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal. This path should match the path that was specified in the init_signal_spy call that you wish to disable.
- **verbose**
Optional integer. Specifies whether you want a message reported in the transcript stating that a disable occurred and the simulation time that it occurred.
 - 0 — Does not report a message. Default.

Signal Spy
[disable_signal_spy](#)

1 — Reports a message.

Related procedures

[init_signal_spy](#), [enable_signal_spy](#)

Example

See [init_signal_spy Example](#) or [\\$init_signal_spy Example](#)

enable_signal_spy

This reference section describes the following:

- VHDL Procedure — enable_signal_spy()
- Verilog Task — \$enable_signal_spy()
- SystemC Function— enable_signal_spy()

The enable_signal_spy() call enables the associated init_signal_spy call. The association between the enable_signal_spy call and the init_signal_spy call is based on specifying the same src_object and dest_object arguments to both. The enable_signal_spy call can only affect init_signal_spy calls that had their control_state argument set to "0" or "1".

By default this command uses a backslash (\) as a path separator. You can change this behavior with the [SignalSpyPathSeparator](#) variable in the *modelsim.ini* file.

VHDL Syntax

```
enable_signal_spy(<src_object>, <dest_object>, <verbose>)
```

Verilog Syntax

```
$enable_signal_spy(<src_object>, <dest_object>, <verbose>)
```

SystemC Syntax

```
enable_signal_spy(<src_object>, <dest_object>, <verbose>)
```

Returns

Nothing

Arguments

- src_object
 - Required string. A full hierarchical path (or relative downward path with reference to the calling block) to a VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal. This path should match the path that was specified in the init_signal_spy call that you wish to enable.
- dest_object
 - Required string. A full hierarchical path (or relative downward path with reference to the calling block) to a VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal. This path should match the path that was specified in the init_signal_spy call that you wish to enable.
- verbose
 - Optional integer. Possible values are 0 or 1. Specifies whether you want a message reported in the transcript stating that an enable occurred and the simulation time that it occurred.
 - 0 — Does not report a message. Default.

Signal Spy
enable_signal_spy

1 — Reports a message.

Related tasks

[init_signal_spy](#), [disable_signal_spy](#)

Example

See [\\$init_signal_spy Example](#) or [init_signal_spy Example](#)

init_signal_driver

This reference section describes the following:

- VHDL Procedure — init_signal_driver()
- Verilog Task — \$init_signal_driver()
- SystemC Function— init_signal_driver()

The init_signal_driver() call drives the value of a VHDL signal, Verilog net, or SystemC (called the src_object) onto an existing VHDL signal or Verilog net (called the dest_object). This allows you to drive signals or nets at any level of the design hierarchy from within a VHDL architecture or Verilog or SystemC module(e.g., a testbench).

Note

Destination SystemC signals are not supported.

The init_signal_driver procedure drives the value onto the destination signal just as if the signals were directly connected in the HDL code. Any existing or subsequent drive or force of the destination signal, by some other means, will be considered with the init_signal_driver value in the resolution of the signal.

By default this command uses a backslash (\) as a path separator. You can change this behavior with the [SignalSpyPathSeparator](#) variablie in the *modelsim.ini* file.

Call only once

The init_signal_driver procedure creates a persistent relationship between the source and destination signals. Hence, you need to call init_signal_driver only once for a particular pair of signals. Once init_signal_driver is called, any change on the source signal will be driven on the destination signal until the end of the simulation.

For VHDL, we recommend that you place all init_signal_driver calls in a VHDL process. You need to code the VHDL process correctly so that it is executed only once. The VHDL process should not be sensitive to any signals and should contain only init_signal_driver calls and a simple wait statement. The process will execute once and then wait forever. See the example below.

For Verilog we recommend that you place all \$init_signal_driver calls in a Verilog initial block. See the example below.

VHDL Syntax

init_signal_driver(<src_object>, <dest_object>, <delay>, <delay_type>, <verbose>)

Verilog Syntax

\$init_signal_driver(<src_object>, <dest_object>, <delay>, <delay_type>, <verbose>)

SystemC Syntax

```
init_signal_driver(<src_object>, <dest_object>, <delay>, <delay_type>, <verbose>)
```

Returns

Nothing

Arguments

- **src_object**

Required string. A full hierarchical path (or relative downward path with reference to the calling block) to a VHDL signal, Verilog net, or SystemC signal. Use the path separator to which your simulation is set (i.e., "/" or "."). A full hierarchical path must begin with a "/" or ".". The path must be contained within double quotes.

- **dest_object**

Required string. A full hierarchical path (or relative downward path with reference to the calling block) to an existing VHDL signal or Verilog net. Use the path separator to which your simulation is set (i.e., "/" or "."). A full hierarchical path must begin with a "/" or ".". The path must be contained within double quotes.

- **delay**

Optional time value. Specifies a delay relative to the time at which the src_object changes. The delay can be an inertial or transport delay. If no delay is specified, then a delay of zero is assumed.

- **delay_type**

Optional del_mode or integer. Specifies the type of delay that will be applied.

For the VHDL init_signal_driver Procedure, The value must be either:

mti_inertial (default)

mti_transport

For the Verilog \$init_signal_driver Task, The value must be either:

0 — inertial (default)

1 — transport

For the SystemC init_signal_driver Function, The value must be either:

0 — inertial (default)

1 — transport

- **verbose**

Optional integer. Possible values are 0 or 1. Specifies whether you want a message reported in the Transcript stating that the src_object is driving the dest_object.

0 — Does not report a message. Default.

1 — Reports a message.

Related procedures

[init_signal_spy](#), [signal_force](#), [signal_release](#)

Limitations

- For the VHDL init_signal_driver procedure, when driving a Verilog net, the only *delay_type* allowed is inertial. If you set the delay type to *mti_transport*, the setting will be ignored and the delay type will be *mti_inertial*.
- For the Verilog \$init_signal_driver task, when driving a Verilog net, the only *delay_type* allowed is inertial. If you set the delay type to 1 (transport), the setting will be ignored, and the delay type will be inertial.
- For the SystemC init_signal_driver function, when driving a Verilog net, the only *delay_type* allowed is inertial. If you set the delay type to 1 (transport), the setting will be ignored, and the delay type will be inertial.
- Any delays that are set to a value less than the simulator resolution will be rounded to the nearest resolution unit; no special warning will be issued.
- Verilog memories (arrays of registers) are not supported.

\$init_signal_driver Example

This example creates a local clock (*clk0*) and connects it to two clocks within the design hierarchy. The .../blk1/clk will match local *clk0* and a message will be displayed. The .../blk2/clk will match the local *clk0* but be delayed by 100 ps. For the second call to work, the .../blk2/clk must be a VHDL based signal, because if it were a Verilog net a 100 ps inertial delay would consume the 40 ps clock period. Verilog nets are limited to only inertial delays and thus the setting of 1 (transport delay) would be ignored.

```
`timescale 1 ps / 1 ps

module testbench;

reg clk0;

initial begin
    clk0 = 1;
    forever begin
        #20 clk0 = ~clk0;
    end
end

initial begin
    $init_signal_driver("clk0", "/testbench/uut/blk1/clk", , , 1);
    $init_signal_driver("clk0", "/testbench/uut/blk2/clk", 100, 1);
end

...
endmodule
```

init_signal_driver Example

This example creates a local clock (*clk0*) and connects it to two clocks within the design hierarchy. The .../blk1/clk will match local *clk0* and a message will be displayed. The *open* entries allow the default delay and delay_type while setting the verbose parameter to a 1. The .../blk2/clk will match the local *clk0* but be delayed by 100 ps.

```
library IEEE, modelsim_lib;
use IEEE.std_logic_1164.all;
use modelsim_lib.util.all;

entity testbench is
end;

architecture only of testbench is
    signal clk0 : std_logic;
begin
    gen_clk0 : process
    begin
        clk0 <= '1' after 0 ps, '0' after 20 ps;
        wait for 40 ps;
    end process gen_clk0;

    drive_sig_process : process
    begin
        init_signal_driver("clk0", "/testbench/uut/blk1/clk", open, open, 1);
        init_signal_driver("clk0", "/testbench/uut/blk2/clk", 100 ps,
                           mti_transport);
        wait;
    end process drive_sig_process;
    ...
end;
```

init_signal_spy

This reference section describes the following:

- VHDL Procedure — init_signal_spy()
- Verilog Task — \$init_signal_spy()
- SystemC Function— init_signal_spy()

The init_signal_spy() call mirrors the value of a VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal (called the `src_object`) onto an existing VHDL signal, Verilog register, or SystemC signal (called the `dest_object`). This allows you to reference signals, registers, or nets at any level of hierarchy from within a VHDL architecture or Verilog or SystemC module (e.g., a testbench).

The init_signal_spy call only sets the value onto the destination signal and does not drive or force the value. Any existing or subsequent drive or force of the destination signal, by some other means, will override the value that was set by init_signal_spy.

By default this command uses a backslash (\) as a path separator. You can change this behavior with the [SignalSpyPathSeparator](#) variable in the *modelsim.ini* file.

Call only once

The init_signal_spy call creates a persistent relationship between the source and destination signals. Hence, you need to call init_signal_spy once for a particular pair of signals. Once init_signal_spy is called, any change on the source signal will mirror on the destination signal until the end of the simulation unless the control_state is set.

However, you can place simultaneous read/write calls on the same signal using multiple init_signal_spy calls, for example:

```
init_signal_spy ( "/sc_top/sc_sig", "/top/hdl_INST/hdl_sig");
init_signal_spy ( "/top/hdl_INST/hdl_sig", "/sc_top/sc_sig");
```

The control_state determines whether the mirroring of values can be enabled/disabled and what the initial state is. Subsequent control of whether the mirroring of values is enabled/disabled is handled by the enable_signal_spy and disable_signal_spy calls.

For VHDL procedures, we recommend that you place all init_signal_spy calls in a VHDL process. You need to code the VHDL process correctly so that it is executed only once. The VHDL process should not be sensitive to any signals and should contain only init_signal_spy calls and a simple wait statement. The process will execute once and then wait forever, which is the desired behavior. See the example below.

For Verilog tasks, we recommend that you place all \$init_signal_spy tasks in a Verilog initial block. See the example below.

VHDL Syntax

```
init_signal_spy(<src_object>, <dest_object>, <verbose>, <control_state>)
```

Verilog Syntax

`$init_signal_spy(<src_object>, <dest_object>, <verbose>, <control_state>)`

SystemC Syntax

`init_signal_spy(<src_object>, <dest_object>, <verbose>, <control_state>)`

Returns

Nothing

Arguments

- `src_object`

Required string. A full hierarchical path (or relative downward path with reference to the calling block) to a VHDL signal or SystemVerilog or Verilog register/net. Use the path separator to which your simulation is set (i.e., "/" or "."). A full hierarchical path must begin with a "/" or ".". The path must be contained within double quotes.

- `dest_object`

Required string. A full hierarchical path (or relative downward path with reference to the calling block) to an existing VHDL signal or Verilog register. Use the path separator to which your simulation is set (i.e., "/" or "."). A full hierarchical path must begin with a "/" or ".". The path must be contained within double quotes.

- `verbose`

Optional integer. Possible values are 0 or 1. Specifies whether you want a message reported in the Transcript stating that the `src_object`'s value is mirrored onto the `dest_object`.

0 — Does not report a message. Default.

1 — Reports a message.

- `control_state`

Optional integer. Possible values are -1, 0, or 1. Specifies whether or not you want the ability to enable/disable mirroring of values and, if so, specifies the initial state.

-1 — no ability to enable/disable and mirroring is enabled. (default)

0 — turns on the ability to enable/disable and initially disables mirroring.

1 — turns on the ability to enable/disable and initially enables mirroring.

Related procedures

[init_signal_driver](#), [signal_force](#), [signal_release](#), [enable_signal_spy](#), [disable_signal_spy](#)

Limitations

- When mirroring the value of a SystemVerilog or Verilog register/net onto a VHDL signal, the VHDL signal must be of type bit, bit_vector, std_logic, or std_logic_vector.
- Verilog memories (arrays of registers) are not supported.

init_signal_spy Example

In this example, the value of */top/uut/inst1/sig1* is mirrored onto */top/top_sig1*. A message is issued to the transcript. The ability to control the mirroring of values is turned on and the *init_signal_spy* is initially enabled.

The mirroring of values will be disabled when *enable_sig* transitions to a '0' and enable when *enable_sig* transitions to a '1'.

```
library ieee;
library modelsim_lib;
use ieee.std_logic_1164.all;
use modelsim_lib.util.all;
entity top is
end;
architecture only of top is
    signal top_sig1 : std_logic;
begin
    ...
    spy_process : process
    begin
        init_signal_spy("/top/uut/inst1/sig1","/top/top_sig1",1,1);
        wait;
    end process spy_process;
    ...
    spy_enable_disable : process(enable_sig)
    begin
        if (enable_sig = '1') then
            enable_signal_spy("/top/uut/inst1/sig1","/top/top_sig1",0);
        elseif (enable_sig = '0')
            disable_signal_spy("/top/uut/inst1/sig1","/top/top_sig1",0);
        end if;
    end process spy_enable_disable;
    ...
end;
```

\$init_signal_spy Example

In this example, the value of *.top.uut.inst1.sig1* is mirrored onto *.top.top_sig1*. A message is issued to the transcript. The ability to control the mirroring of values is turned on and the *init_signal_spy* is initially enabled.

The mirroring of values will be disabled when *enable_reg* transitions to a '0' and enabled when *enable_reg* transitions to a '1'.

```
module top;
    ...
    reg top_sig1;
    reg enable_reg;
    ...
    initial
        begin
            $init_signal_spy(".top.uut.inst1.sig1",".top.top_sig1",1,1);
        end
    end
```

Signal Spy

init_signal_spy

```
always @ (posedge enable_reg)
begin
$enable_signal_spy(".top.uut.inst1.sig1",".top.top_sig1",0);
end
always @ (negedge enable_reg)
begin
$disable_signal_spy(".top.uut.inst1.sig1",".top.top_sig1",0);
end
...
endmodule
```

signal_force

This reference section describes the following:

- VHDL Procedure — signal_force()
- Verilog Task — \$signal_force()
- SystemC Function— signal_force()

The signal_force() call forces the value specified onto an existing VHDL signal, Verilog register or net, or SystemC signal (called the dest_object). This allows you to force signals, registers, or nets at any level of the design hierarchy from within a VHDL architecture or Verilog or SystemC module (e.g., a testbench).

A signal_force works the same as the [force](#) command with the exception that you cannot issue a repeating force. The force will remain on the signal until a signal_release, a force or release command, or a subsequent signal_force is issued. Signal_force can be called concurrently or sequentially in a process.

This command displays any signals using your [radix](#) setting (either the default, or as you specify) unless you specify the radix in the *value* you set.

By default this command uses a backslash (\) as a path separator. You can change this behavior with the [SignalSpyPathSeparator](#) variable in the *modelsim.ini* file.

VHDL Syntax

```
signal_force(<dest_object>, <value>, <rel_time>, <force_type>, <cancel_period>, <verbose>)
```

Verilog Syntax

```
$signal_force(<dest_object>, <value>, <rel_time>, <force_type>, <cancel_period>,
               <verbose>)
```

SystemC Syntax

```
signal_force(<dest_object>, <value>, <rel_time>, <force_type>, <cancel_period>, <verbose>)
```

Returns

Nothing

Arguments

- dest_object

Required string. A full hierarchical path (or relative downward path with reference to the calling block) to an existing VHDL signal, SystemVerilog or Verilog register/net or SystemC signal. Use the path separator to which your simulation is set (i.e., "/" or "."). A full hierarchical path must begin with a "/" or ".". The path must be contained within double quotes.

- **value**

Required string. Specifies the value to which the dest_object is to be forced. The specified value must be appropriate for the type. The *value* can be a sequence of character literals or as a based number with a radix of 2, 8, 10 or 16. For example, the following values are equivalent for a signal of type bit_vector (0 to 3):

- 1111 — character literal sequence
- 2#1111 —binary radix
- 10#15— decimal radix
- 16#F — hexadecimal radix
- **rel_time**
Optional time. Specifies a time relative to the current simulation time for the force to occur. The default is 0.
- **force_type**
Optional forcetype or integer. Specifies the type of force that will be applied.
For the VHDL procedure, the value must be one of the following;

default — which is "freeze" for unresolved objects or "drive" for resolved objects
deposit
drive
freeze.

For the Verilog task, the value must be one of the following;

0 — default, which is "freeze" for unresolved objects or "drive" for resolved objects
1 — deposit
2 — drive
3 — freeze

For the SystemC function, the value must be one of the following;

0 — default, which is "freeze" for unresolved objects or "drive" for resolved objects
1 — deposit
2 — drive
3 — freeze

See the force command for further details on force type.

- **cancel_period**

Optional time or integer. Cancels the signal_force command after the specified period of time units. Cancellation occurs at the last simulation delta cycle of a time unit.

For the VHDL procedure, a value of zero cancels the force at the end of the current time period. Default is -1 ms. A negative value means that the force will not be cancelled.

For the Verilog task, A value of zero cancels the force at the end of the current time period. Default is -1. A negative value means that the force will not be cancelled.

For the SystemC function, A value of zero cancels the force at the end of the current time period. Default is -1. A negative value means that the force will not be cancelled.

- **verbose**

Optional integer. Possible values are 0 or 1. Specifies whether you want a message reported in the Transcript stating that the value is being forced on the dest_object at the specified time.

0 — Does not report a message. Default.

1 — Reports a message.

Related procedures

[init_signal_driver](#), [init_signal_spy](#), [signal_release](#)

Limitations

- You cannot force bits or slices of a register; you can force only the entire register.
- Verilog memories (arrays of registers) are not supported.

\$signal_force Example

This example forces *reset* to a "1" from time 0 ns to 40 ns. At 40 ns, *reset* is forced to a "0", 200000 ns after the second \$signal_force call was executed.

```
'timescale 1 ns / 1 ns

module testbench;

initial
begin
    $signal_force("/testbench/uut/blkl/reset", "1", 0, 3, , 1);
    $signal_force("/testbench/uut/blkl/reset", "0", 40, 3, 200000, 1);
end

...
endmodule
```

signal_force Example

This example forces *reset* to a "1" from time 0 ns to 40 ns. At 40 ns, *reset* is forced to a "0", 2 ms after the second signal_force call was executed.

If you want to skip parameters so that you can specify subsequent parameters, you need to use the keyword "open" as a placeholder for the skipped parameter(s). The first signal_force

procedure illustrates this, where an "open" for the cancel_period parameter means that the default value of -1 ms is used.

```
library IEEE, modelsim_lib;
use IEEE.std_logic_1164.all;
use modelsim_lib.util.all;

entity testbench is
end;

architecture only of testbench is
begin

    force_process : process
    begin
        signal_force("/testbench/uut/blk1/reset", "1", 0 ns, freeze, open, 1);
        signal_force("/testbench/uut/blk1/reset", "0", 40 ns, freeze, 2 ms,
1);
        wait;
    end process force_process;

    ...

end;
```

signal_release

This reference section describes the following:

- VHDL Procedure — signal_release()
- Verilog Task — \$signal_release()
- SystemC Function— signal_release()

The signal_release() call releases any force that was applied to an existing VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal (called the dest_object). This allows you to release signals, registers or nets at any level of the design hierarchy from within a VHDL architecture or Verilog or SystemC module (e.g., a testbench).

A signal_release works the same as the [noforce](#) command. Signal_release can be called concurrently or sequentially in a process.

By default this command uses a backslash (\) as a path separator. You can change this behavior with the [SignalSpyPathSeparator](#) variable in the *modelsim.ini* file.

VHDL Syntax

```
signal_release(<dest_object>, <verbose>)
```

Verilog Syntax

```
$signal_release(<dest_object>, <verbose>)
```

SystemC Syntax

```
signal_release(<dest_object>, <verbose>)
```

Returns

Nothing

Arguments

- dest_object

Required string. A full hierarchical path (or relative downward path with reference to the calling block) to an existing VHDL signal, SystemVerilog or Verilog register/net, or SystemC signal. Use the path separator to which your simulation is set (i.e., "/" or "."). A full hierarchical path must begin with a "/" or ".". The path must be contained within double quotes.

- verbose

Optional integer. Possible values are 0 or 1. Specifies whether you want a message reported in the Transcript stating that the signal is being released and the time of the release.

0 — Does not report a message. Default.

1 — Reports a message.

Related procedures

[init_signal_driver](#), [init_signal_spy](#), [signal_force](#)

Limitations

- You cannot release a bit or slice of a register; you can release only the entire register.

signal_release Example

This example releases any forces on the signals *data* and *clk* when the signal *release_flag* is a "1". Both calls will send a message to the transcript stating which signal was released and when.

```
library IEEE, modelsim_lib;
use IEEE.std_logic_1164.all;
use modelsim_lib.util.all;

entity testbench is
end;

architecture only of testbench is

    signal release_flag : std_logic;

begin

    stim_design : process
    begin
        ...
        wait until release_flag = '1';
        signal_release("/testbench/dut/blk1/data", 1);
        signal_release("/testbench/dut/blk1/clk", 1);
        ...
    end process stim_design;

    ...
end;
```

\$signal_release Example

This example releases any forces on the signals *data* and *clk* when the register *release_flag* transitions to a "1". Both calls will send a message to the transcript stating which signal was released and when.

```
module testbench;  
reg release_flag;  
  
always @(posedge release_flag) begin  
    $signal_release("/testbench/dut/blk1/data", 1);  
    $signal_release("/testbench/dut/blk1/clk", 1);  
end  
  
...  
endmodule
```


Chapter 12

Standard Delay Format (SDF) Timing Annotation

This chapter covers the ModelSim implementation of SDF (Standard Delay Format) timing annotation. Included are sections on VITAL SDF and Verilog SDF, plus troubleshooting.

Verilog and VHDL VITAL timing data can be annotated from SDF files by using the simulator's built-in SDF annotator.

Note

 SDF timing annotations can be applied only to your FPGA vendor's libraries; all other libraries will simulate without annotation.

Specifying SDF Files for Simulation

ModelSim supports SDF versions 1.0 through 4.0 (except the NETDELAY statement). The simulator's built-in SDF annotator automatically adjusts to the version of the file. Use the following **vsim** command line options to specify the SDF files, the desired timing values, and their associated design instances:

```
-sdfmin [<instance>=<filename>
-sdftyp [<instance>=<filename>
-sdfmax [<instance>=<filename>
```

Any number of SDF files can be applied to any instance in the design by specifying one of the above options for each file. Use **-sdfmin** to select minimum, **-sdftyp** to select typical, and **-sdfmax** to select maximum timing values from the SDF file.

Instance Specification

The instance paths in the SDF file are relative to the instance to which the SDF is applied. Usually, this instance is an ASIC or FPGA model instantiated under a testbench. For example, to annotate maximum timing values from the SDF file *myasic.sdf* to an instance *u1* under a top-level named *testbench*, invoke the simulator as follows:

```
vsim -sdfmax /testbench/u1=myasic.sdf testbench
```


If the instance name is omitted then the SDF file is applied to the top-level. *This is usually incorrect* because in most cases the model is instantiated under a testbench or within a larger system level simulation. In fact, the design can have several models, each having its own SDF file. In this case, specify an SDF file for each instance. For example,

```
vsim -sdfmax /system/u1=asic1.sdf -sdfmax /system/u2=asic2.sdf system
```

SDF Specification with the GUI

As an alternative to the command line options, you can specify SDF files in the **Start Simulation** dialog box under the SDF tab.

Figure 12-1. SDF Tab in Start Simulation Dialog

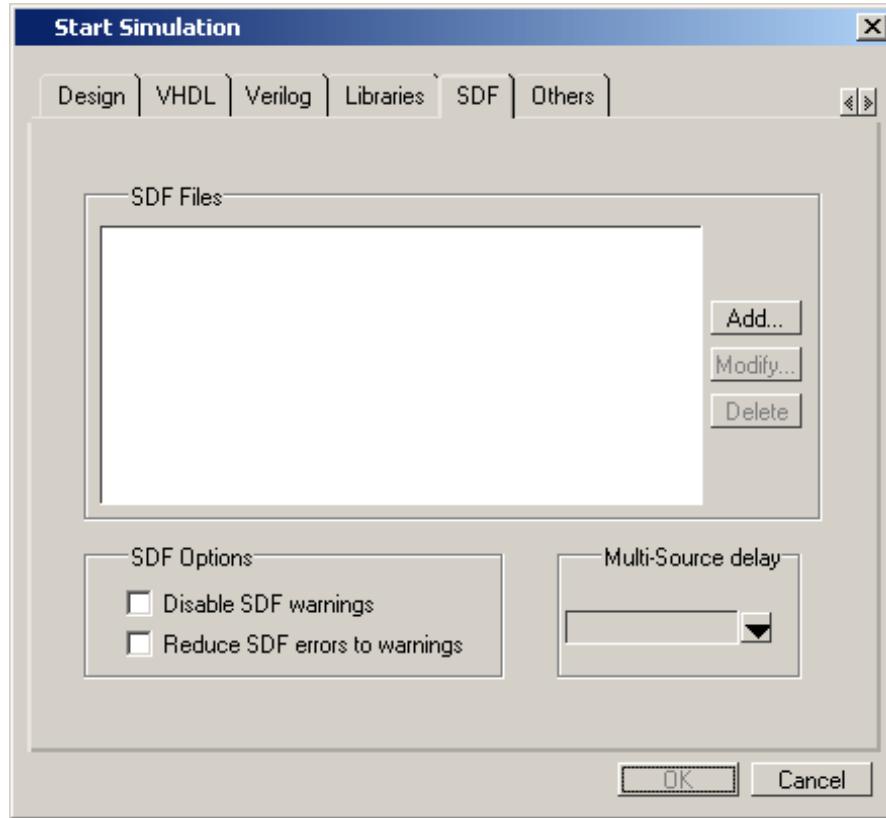

You can access this dialog by invoking the simulator without any arguments or by selecting **Simulate > Start Simulation**. See the [Graphical User Interface](#) chapter for a description of this dialog.

For Verilog designs, you can also specify SDF files by using the \$sdf_annotate system task. See [\\$sdf_annotate](#) for more details.

Errors and Warnings

Errors issued by the SDF annotator while loading the design prevent the simulation from continuing, whereas warnings do not.

- Use either the -sdfnoerror or the +nosdferror option with **vsim** to change SDF errors to warnings so that the simulation can continue.

- Use either the `-sdfnowarn` or the `+nosdfwarn` option with `vsim` to suppress warning messages.

Another option is to use the **SDF** tab from the **Start Simulation** dialog box (Figure 12-1). Select **Disable SDF warnings** (`-sdfnowarn +nosdfwarn`) to disable warnings, or select **Reduce SDF errors to warnings** (`-sdfnoerror`) to change errors to warnings.

See [Troubleshooting](#) for more information on errors and warnings and how to avoid them.

VHDL VITAL SDF

VHDL SDF annotation works on VITAL cells only. The IEEE 1076.4 VITAL ASIC Modeling Specification describes how cells must be written to support SDF annotation. Once again, the designer does not need to know the details of this specification because the library provider has already written the VITAL cells and tools that create compatible SDF files. However, the following summary may help you understand simulator error messages. For additional VITAL specification information, see [VITAL Specification and Source Code](#).

SDF to VHDL Generic Matching

An SDF file contains delay and timing constraint data for cell instances in the design. The annotator must locate the cell instances and the placeholders (VHDL generics) for the timing data. Each type of SDF timing construct is mapped to the name of a generic as specified by the VITAL modeling specification. The annotator locates the generic and updates it with the timing value from the SDF file. It is an error if the annotator fails to find the cell instance or the named generic. The following are examples of SDF constructs and their associated generic names:

Table 12-1. Matching SDF to VHDL Generics

SDF construct	Matching VHDL generic name
(IOPATH a y (3))	<code>tpd_a_y</code>
(IOPATH (posedge clk) q (1) (2))	<code>tpd_clk_q_posedge</code>
(INTERCONNECT u1/y u2/a (5))	<code>tipd_a</code>
(SETUP d (posedge clk) (5))	<code>tsetup_d_clk_noedge_posedge</code>
(HOLD (negedge d) (posedge clk) (5))	<code>thold_d_clk_negedge_posedge</code>
(SETUPHOLD d clk (5) (5))	<code>tsetup_d_clk & thold_d_clk</code>
(WIDTH (COND (reset==1'b0) clk) (5))	<code>tpw_clk_reset_eq_0</code>

The SDF statement CONDELSE, when targeted for Vital cells, is annotated to a **tpd** generic of the form **tpd_<inputPort>_<outputPort>**.

Resolving Errors

If the simulator finds the cell instance but not the generic then an error message is issued. For example,

```
** Error (vsim-SDF-3240) myasic.sdf(18):  
Instance '/testbench/dut/u1' does not have a generic named 'tpd_a_y'
```

In this case, make sure that the design is using the appropriate VITAL library cells. If it is, then there is probably a mismatch between the SDF and the VITAL cells. You need to find the cell instance and compare its generic names to those expected by the annotator. Look in the VHDL source files provided by the cell library vendor.

If none of the generic names look like VITAL timing generic names, then perhaps the VITAL library cells are not being used. If the generic names do look like VITAL timing generic names but don't match the names expected by the annotator, then there are several possibilities:

- The vendor's tools are not conforming to the VITAL specification.
- The SDF file was accidentally applied to the wrong instance. In this case, the simulator also issues other error messages indicating that cell instances in the SDF could not be located in the design.
- The vendor's library and SDF were developed for the older VITAL 2.2b specification. This version uses different name mapping rules. In this case, invoke `vsim` with the `-vital2.2b` option:

```
vsim -vital2.2b -sdfmax /testbench/u1=myasic.sdf testbench
```

For more information on resolving errors see [Troubleshooting](#).

Verilog SDF

Verilog designs can be annotated using either the simulator command line options or the **\$sdf_annotation** system task (also commonly used in other Verilog simulators). The command line options annotate the design immediately after it is loaded, but before any simulation events take place. The **\$sdf_annotation** task annotates the design at the time it is called in the Verilog source code. This provides more flexibility than the command line options.

\$sdf_annotation

Syntax

```
$sdf_annotation
(["<sdf_file>"], [<instance>], ["<config_file>"], ["<log_file>"], ["<mtm_spec>"],
["<scale_factor>"], ["<scale_type>"]);
```

Arguments

- "<sdf_file>"
String that specifies the SDF file. Required.
- <instance>
Hierarchical name of the instance to be annotated. Optional. Defaults to the instance where the \$sdf_annotation call is made.
- "<config_file>"
String that specifies the configuration file. Optional. Currently not supported, this argument is ignored.
- "<log_file>"
String that specifies the logfile. Optional. Currently not supported, this argument is ignored.
- "<mtm_spec>"
String that specifies the delay selection. Optional. The allowed strings are "minimum", "typical", "maximum", and "tool_control". Case is ignored and the default is "tool_control". The "tool_control" argument means to use the delay specified on the command line by +mindelays, +typdelays, or +maxdelays (defaults to +typdelays).
- "<scale_factor>"
String that specifies delay scaling factors. Optional. The format is "<min_mult>:<typ_mult>:<max_mult>". Each multiplier is a real number that is used to scale the corresponding delay in the SDF file.
- "<scale_type>"
String that overrides the <mtm_spec> delay selection. Optional. The <mtm_spec> delay selection is always used to select the delay scaling factor, but if a <scale_type> is specified, then it will determine the min/typ/max selection from the SDF file. The allowed strings are "from_min", "from_minimum", "from_typ", "from_typical", "from_max", "from_maximum", and "from_mtm". Case is ignored, and the default is "from_mtm", which means to use the <mtm_spec> value.

Examples

Optional arguments can be omitted by using commas or by leaving them out if they are at the end of the argument list. For example, to specify only the SDF file and the instance to which it applies:

```
$sdf_annotation( "myasic.sdf", testbench.u1 );
```

To also specify maximum delay values:

```
$sdf_annotation( "myasic.sdf", testbench.u1, , , "maximum" );
```

SDF to Verilog Construct Matching

The annotator matches SDF constructs to corresponding Verilog constructs in the cells. Usually, the cells contain path delays and timing checks within specify blocks. For each SDF construct, the annotator locates the cell instance and updates each specify path delay or timing check that matches. An SDF construct can have multiple matches, in which case each matching specify statement is updated with the SDF timing value. SDF constructs are matched to Verilog constructs as follows.

- **IOPATH** is matched to specify path delays or primitives:

Table 12-2. Matching SDF IOPATH to Verilog

SDF	Verilog
(IOPATH (posedge clk) q (3) (4))	(posedge clk => q) = 0;
(IOPATH a y (3) (4))	buf u1 (y, a);

The IOPATH construct usually annotates path delays. If ModelSim can't locate a corresponding specify path delay, it returns an error unless you use the +sdf_iopath_to_prim_ok argument to **vsim**. If you specify that argument and the module contains no path delays, then all primitives that drive the specified output port are annotated.

- **INTERCONNECT** and **PORT** are matched to input ports:

Table 12-3. Matching SDF INTERCONNECT and PORT to Verilog

SDF	Verilog
(INTERCONNECT u1.y u2.a (5))	input a;
(PORT u2.a (5))	inout a;

Both of these constructs identify a module input or inout port and create an internal net that is a delayed version of the port. This is called a Module Input Port Delay (MIPD). All primitives, specify path delays, and specify timing checks connected to the original port are reconnected to the new MIPD net.

- **PATHPULSE** and **GLOBALPATHPULSE** are matched to specify path delays:

Table 12-4. Matching SDF PATHPULSE and GLOBALPATHPULSE to Verilog

SDF	Verilog
(PATHPULSE a y (5) (10))	(a => y) = 0;
(GLOBALPATHPULSE a y (30) (60))	(a => y) = 0;

If the input and output ports are omitted in the SDF, then all path delays are matched in the cell.

- **DEVICE** is matched to primitives or specify path delays:

Table 12-5. Matching SDF DEVICE to Verilog

SDF	Verilog
(DEVICE y (5))	and u1(y, a, b);
(DEVICE y (5))	(a => y) = 0; (b => y) = 0;

If the SDF cell instance is a primitive instance, then that primitive's delay is annotated. If it is a module instance, then all specify path delays are annotated that drive the output port specified in the DEVICE construct (all path delays are annotated if the output port is omitted). If the module contains no path delays, then all primitives that drive the specified output port are annotated (or all primitives that drive any output port if the output port is omitted).

SETUP is matched to \$setup and \$setuphold:

Table 12-6. Matching SDF SETUP to Verilog

SDF	Verilog
(SETUP d (posedge clk) (5))	\$setup(d, posedge clk, 0);
(SETUP d (posedge clk) (5))	\$setuphold(posedge clk, d, 0, 0);

- **HOLD** is matched to \$hold and \$setuphold:

Table 12-7. Matching SDF HOLD to Verilog

SDF	Verilog
(HOLD d (posedge clk) (5))	\$hold(posedge clk, d, 0);
(HOLD d (posedge clk) (5))	\$setuphold(posedge clk, d, 0, 0);

- **SETUPHOLD** is matched to \$setup, \$hold, and \$setuphold:

Table 12-8. Matching SDF SETUPHOLD to Verilog

SDF	Verilog
(SETUPHOLD d (posedge clk) (5) (5))	\$setup(d, posedge clk, 0);
(SETUPHOLD d (posedge clk) (5) (5))	\$hold(posedge clk, d, 0);
(SETUPHOLD d (posedge clk) (5) (5))	\$setuphold(posedge clk, d, 0, 0);

- **RECOVERY** is matched to \$recovery:

Table 12-9. Matching SDF RECOVERY to Verilog

SDF	Verilog
(RECOVERY (negedge reset) (posedge clk) (5))	\$recovery(negedge reset, posedge clk, 0);

- **REMOVAL** is matched to \$removal:

Table 12-10. Matching SDF REMOVAL to Verilog

SDF	Verilog
(REMOVAL (negedge reset) (posedge clk) (5))	\$removal(negedge reset, posedge clk, 0);

- **RECREM** is matched to \$recovery, \$removal, and \$recrem:

Table 12-11. Matching SDF RECREM to Verilog

SDF	Verilog
(RECREM (negedge reset) (posedge clk) (5) (5))	\$recovery(negedge reset, posedge clk, 0);
(RECREM (negedge reset) (posedge clk) (5) (5))	\$removal(negedge reset, posedge clk, 0);
(RECREM (negedge reset) (posedge clk) (5) (5))	\$recrem(negedge reset, posedge clk, 0);

- **SKEW** is matched to \$skew:

Table 12-12. Matching SDF SKEW to Verilog

SDF	Verilog
(SKEW (posedge clk1) (posedge clk2) (5))	\$skew(posedge clk1, posedge clk2, 0);

- **WIDTH** is matched to \$width:

Table 12-13. Matching SDF WIDTH to Verilog

SDF	Verilog
(WIDTH (posedge clk) (5))	\$width(posedge clk, 0);

- **PERIOD** is matched to \$period:

Table 12-14. Matching SDF PERIOD to Verilog

SDF	Verilog
(PERIOD (posedge clk) (5))	\$period(posedge clk, 0);

- **NOCHANGE** is matched to \$nochage:

Table 12-15. Matching SDF NOCHANGE to Verilog

SDF	Verilog
(NOCHANGE (negedge write) addr (5) (5))	\$nochage(negedge write, addr, 0, 0);

To see complete mappings of SDF and Verilog constructs, please consult IEEE Standard 1364-2005, Chapter 16 - Back Annotation Using the Standard Delay Format (SDF).

Optional Edge Specifications

Timing check ports and path delay input ports can have optional edge specifications. The annotator uses the following rules to match edges:

- A match occurs if the SDF port does not have an edge.
- A match occurs if the specify port does not have an edge.
- A match occurs if the SDF port edge is identical to the specify port edge.
- A match occurs if explicit edge transitions in the specify port edge overlap with the SDF port edge.

These rules allow SDF annotation to take place even if there is a difference between the number of edge-specific constructs in the SDF file and the Verilog specify block. For example, the Verilog specify block may contain separate setup timing checks for a falling and rising edge on data with respect to clock, while the SDF file may contain only a single setup check for both edges:

Table 12-16. Matching Verilog Timing Checks to SDF SETUP

SDF	Verilog
(SETUP data (posedge clock) (5))	\$setup(posedge data, posedge clk, 0);
(SETUP data (negedge clock) (5))	\$setup(negedge data, posedge clk, 0);

In this case, the cell accommodates more accurate data than can be supplied by the tool that created the SDF file, and both timing checks correctly receive the same value.

Likewise, the SDF file may contain more accurate data than the model can accommodate.

Table 12-17. SDF Data May Be More Accurate Than Model

SDF	Verilog
(SETUP (posedge data) (posedge clock) (4))	<code>\$setup(data, posedge clk, 0);</code>
(SETUP (negedge data) (posedge clock) (6))	<code>\$setup(data, posedge clk, 0);</code>

In this case, both SDF constructs are matched and the timing check receives the value from the last one encountered.

Timing check edge specifiers can also use explicit edge transitions instead of posedge and negedge. However, the SDF file is limited to posedge and negedge. For example,

Table 12-18. Matching Explicit Verilog Edge Transitions to Verilog

SDF	Verilog
(SETUP data (posedge clock) (5))	<code>\$setup(data, edge[01, 0x] clk, 0);</code>

The explicit edge specifiers are 01, 0x, 10, 1x, x0, and x1. The set of [01, 0x, x1] is equivalent to posedge, while the set of [10, 1x, x0] is equivalent to negedge. A match occurs if any of the explicit edges in the specify port match any of the explicit edges implied by the SDF port.

Optional Conditions

Timing check ports and path delays can have optional conditions. The annotator uses the following rules to match conditions:

- A match occurs if the SDF does not have a condition.
- A match occurs for a timing check if the SDF port condition is semantically equivalent to the specify port condition.
- A match occurs for a path delay if the SDF condition is lexically identical to the specify condition.

Timing check conditions are limited to very simple conditions, therefore the annotator can match the expressions based on semantics. For example,

Table 12-19. SDF Timing Check Conditions

SDF	Verilog
(SETUP data (COND (reset!=1) (posedge clock)) (5))	<code>\$setup(data, posedge clk && (reset==0),0);</code>

The conditions are semantically equivalent and a match occurs. In contrast, path delay conditions may be complicated and semantically equivalent conditions may not match. For example,

Table 12-20. SDF Path Delay Conditions

SDF	Verilog
(COND (r1 r2) (IOPATH clk q (5)))	if (r1 r2) (clk => q) = 5; // matches
(COND (r1 r2) (IOPATH clk q (5)))	if (r2 r1) (clk => q) = 5; // does not match

The annotator does not match the second condition above because the order of r1 and r2 are reversed.

Rounded Timing Values

The SDF **TIMESCALE** construct specifies time units of values in the SDF file. The annotator rounds timing values from the SDF file to the time precision of the module that is annotated. For example, if the SDF TIMESCALE is 1ns and a value of .016 is annotated to a path delay in a module having a time precision of 10ps (from the timescale directive), then the path delay receives a value of 20ps. The SDF value of 16ps is rounded to 20ps. Interconnect delays are rounded to the time precision of the module that contains the annotated MIPD.

SDF for Mixed VHDL and Verilog Designs

Annotation of a mixed VHDL and Verilog design is very flexible. VHDL VITAL cells and Verilog cells can be annotated from the same SDF file. This flexibility is available only by using the simulator's SDF command line options. The Verilog \$sdf_annotation system task can annotate Verilog cells only. See the [vsim](#) command for more information on SDF command line options.

Interconnect Delays

An interconnect delay represents the delay from the output of one device to the input of another. ModelSim can model single interconnect delays or multisource interconnect delays for Verilog, VHDL/VITAL, or mixed designs. See the [vsim](#) command for more information on the relevant command line arguments.

Timing checks are performed on the interconnect delayed versions of input ports. This may result in misleading timing constraint violations, because the ports may satisfy the constraint while the delayed versions may not. If the simulator seems to report incorrect violations, be sure to account for the effect of interconnect delays.

Disabling Timing Checks

ModelSim offers a number of options for disabling timing checks on a global basis. The table below provides a summary of those options. See the command and argument descriptions in the Reference Manual for more details.

Table 12-21. Disabling Timing Checks

Command and argument	Effect
vlog +notimingchecks	disables timing check system tasks for all instances in the specified Verilog design
vlog +nospecify	disables specify path delays and timing checks for all instances in the specified Verilog design
vsim +no_neg_tchk	disables negative timing check limits by setting them to zero for all instances in the specified design
vsim +no_notifier	disables the toggling of the notifier register argument of the timing check system tasks for all instances in the specified design
vsim +no_tchk_msg	disables error messages issued by timing check system tasks when timing check violations occur for all instances in the specified design
vsim +notimingchecks	disables Verilog and VITAL timing checks for all instances in the specified design; sets generic TimingChecksOn to FALSE for all VHDL Vital models with the Vital_level0 or Vital_level1 attribute. Setting this generic to FALSE disables the actual calls to the timing checks along with anything else that is present in the model's timing check block.
vsim +nospecify	disables specify path delays and timing checks for all instances in the specified design

Troubleshooting

Specifying the Wrong Instance

By far, the most common mistake in SDF annotation is to specify the wrong instance to the simulator's SDF options. The most common case is to leave off the instance altogether, which is the same as selecting the top-level design unit. This is generally wrong because the instance paths in the SDF are relative to the ASIC or FPGA model, which is usually instantiated under a top-level testbench. See [Instance Specification](#) for an example.

Simple examples for both a VHDL and a Verilog testbench are provided below. For simplicity, these testbench examples do nothing more than instantiate a model that has no ports.

VHDL Testbench

```
entity testbench is end;
architecture only of testbench is
  component myasic
    end component;
begin
  dut : myasic;
end;
```

Verilog Testbench

```
module testbench;
  myasic dut();
endmodule
```

The name of the model is *myasic* and the instance label is *dut*. For either testbench, an appropriate simulator invocation might be:

```
vsim -sdfmax /testbench/dut=myasic.sdf testbench
```

Optionally, you can leave off the name of the top-level:

```
vsim -sdfmax /dut=myasic.sdf testbench
```

The important thing is to select the instance for which the SDF is intended. If the model is deep within the design hierarchy, an easy way to find the instance name is to first invoke the simulator without SDF options, view the structure pane, navigate to the model instance, select it, and enter the [environment](#) command. This command displays the instance name that should be used in the SDF command line option.

Matching a Single Timing Check

SDF annotation of RECREM or SETUPHOLD matching only a single setup, hold, recovery, or removal timing check will result in a Warning message.

Mistaking a Component or Module Name for an Instance Label

Another common error is to specify the component or module name rather than the instance label. For example, the following invocation is wrong for the above testbenches:

```
vsim -sdfmax /testbench/myasic=myasic.sdf testbench
```

This results in the following error message:

```
** Error (vsim-SDF-3250) myasic.sdf(0):
Failed to find INSTANCE '/testbench/myasic'.
```

Forgetting to Specify the Instance

If you leave off the instance altogether, then the simulator issues a message for each instance path in the SDF that is not found in the design. For example,

```
vsim -sdfmax myasic.sdf testbench
```

Results in:

```
** Error (vsim-SDF-3250) myasic.sdf(0):
Failed to find INSTANCE '/testbench/u1'
** Error (vsim-SDF-3250) myasic.sdf(0):
Failed to find INSTANCE '/testbench/u2'
** Error (vsim-SDF-3250) myasic.sdf(0):
Failed to find INSTANCE '/testbench/u3'
** Error (vsim-SDF-3250) myasic.sdf(0):
Failed to find INSTANCE '/testbench/u4'
** Error (vsim-SDF-3250) myasic.sdf(0):
Failed to find INSTANCE '/testbench/u5'
** Warning (vsim-SDF-3432) myasic.sdf:
This file is probably applied to the wrong instance.
** Warning (vsim-SDF-3432) myasic.sdf:
Ignoring subsequent missing instances from this file.
```

After annotation is done, the simulator issues a summary of how many instances were not found and possibly a suggestion for a qualifying instance:

```
** Warning (vsim-SDF-3440) myasic.sdf:
Failed to find any of the 358 instances from this file.
** Warning (vsim-SDF-3442) myasic.sdf:
Try instance '/testbench/dut'. It contains all instance paths from this
file.
```

The simulator recommends an instance only if the file was applied to the top-level and a qualifying instance is found one level down.

Also see [Resolving Errors](#) for specific VHDL VITAL SDF troubleshooting.

Chapter 13

Value Change Dump (VCD) Files

This chapter describes how to use VCD files in ModelSim. The VCD file format is specified in the IEEE 1364 standard. It is an ASCII file containing header information, variable definitions, and variable value changes.

VCD is in common use for Verilog designs, and is controlled by VCD system task calls in the Verilog source code. ModelSim provides command equivalents for these system tasks and extends VCD support to SystemC and VHDL designs. The ModelSim commands can be used on VHDL, Verilog, SystemC, or mixed designs.

If you need vendor-specific ASIC design-flow documentation that incorporates VCD, please contact your ASIC vendor.

Creating a VCD File

There are two flows in ModelSim for creating a VCD file.

- One flow produces a four-state VCD file with variable changes in 0, 1, x, and z with no strength information.
- The other flow produces an extended VCD file with variable changes in all states and strength information and port driver data.

Both flows will also capture port driver changes unless filtered out with optional command-line arguments.

Flow for Four-State VCD File

First, compile and load the design:

```
% cd <installDir>/examples/tutorials/verilog/basicSimulation  
% vlib work  
% vlog counter.v tcounter.v  
% vopt test_counter +acc -o test_counter_opt  
% vsim test_counter_opt
```

Next, with the design loaded, specify the VCD file name with the [vcd file](#) command and add objects to the file with the [vcd add](#) command:

```
VSIM 1> vcd file myvcdfiile.vcd  
VSIM 2> vcd add /test_counter/dut/*  
VSIM 3> run  
VSIM 4> quit -f
```

Upon quitting the simulation, there will be a VCD file in the working directory.

Flow for Extended VCD File

First, compile and load the design:

```
% cd <installDir>/examples/tutorials/verilog/basicSimulation
% vlib work
% vlog counter.v tcounter.v
% vopt test_counter +acc -o test_counter_opt
% vsim test_counter_opt
```

Next, with the design loaded, specify the VCD file name and objects to add with the [vcd dumpports](#) command:

```
VSIM 1> vcd dumpports -file myvcdfiile.vcd /test_counter/dut/*
VSIM 3> run
VSIM 4> quit -f
```

Upon quitting the simulation, there will be an extended VCD file called *myvcdfiile.vcd* in the working directory.

Note

 There is an internal limit to the number of ports that can be listed with the [vcd dumpports](#) command. If that limit is reached, use the [vcd add](#) command with the -dumpports option to name additional ports.

By default ModelSim uses strength ranges for resolving conflicts as specified by IEEE 1364-2005. You can ignore strength ranges using the -no_strength_range argument to the [vcd dumpports](#) command. See [Resolving Values](#) for more details.

Case Sensitivity

VHDL is not case sensitive so ModelSim converts all signal names to lower case when it produces a VCD file. Conversely, Verilog designs are case sensitive so ModelSim maintains case when it produces a VCD file.

Using Extended VCD as Stimulus

You can use an extended VCD file as stimulus to re-simulate your design. There are two ways to do this:

1. Simulate the top level of a design unit with the input values from an extended VCD file.
2. Specify one or more instances in a design to be replaced with the output values from the associated VCD file.

Simulating with Input Values from a VCD File

When simulating with inputs from an extended VCD file, you can simulate only one design unit at a time. In other words, you can apply the VCD file inputs only to the top level of the design unit for which you captured port data.

The general procedure includes two steps:

1. Create a VCD file for a single design unit using the **vcd dumpports** command.
2. Resimulate the single design unit using the **-vcdstim** argument to **vsim**. Note that **-vcdstim** works only with VCD files that were created by a ModelSim simulation.

Example 13-1. Verilog Counter

First, create the VCD file for the single instance using **vcd dumpports**:

```
% cd <installDir>/examples/tutorials/verilog/basicSimulation
% vlib work
% vlog counter.v tcounter.v
% vopt test_counter +acc -o test_counter_opt
% vsim test_counter_opt +dumpports+nocollapse
VSIM 1> vcd dumpports -file counter.vcd /test_counter/dut/*
VSIM 2> run
VSIM 3> quit -f
```

Next, rerun the counter without the testbench, using the **-vcdstim** argument:

```
% vsim -vcdstim counter.vcd counter
VSIM 1> add wave /*
VSIM 2> run 200
```

Example 13-2. VHDL Adder

First, create the VCD file using **vcd dumpports**:

```
% cd <installDir>/examples/misc
% vlib work
% vcom gates.vhd adder.vhd stimulus.vhd
% vopt testbench2 +acc -o testbench2_opt
% vsim testbench2_opt +dumpports+nocollapse
VSIM 1> vcd dumpports -file addern.vcd /testbench2/uut/*
VSIM 2> run 1000
VSIM 3> quit -f
```

Next, rerun the adder without the testbench, using the **-vcdstim** argument:

```
% vsim -vcdstim addern.vcd addern -gn=8 -do "add wave /*; run 1000"
```

Example 13-3. Mixed-HDL Design

First, create three VCD files, one for each module:

```
% cd <installDir>/examples/tutorials/mixed/projects
% vlib work
% vlog cache.v memory.v proc.v
% vcom util.vhd set.vhd top.vhd
% vopt top +acc -o top_opt
% vsim top_opt +dumpports+nocollapse
VSIM 1> vcd dumpports -file proc.vcd /top/p/*
VSIM 2> vcd dumpports -file cache.vcd /top/c/*
VSIM 3> vcd dumpports -file memory.vcd /top/m/*
VSIM 4> run 1000
VSIM 5> quit -f
```

Next, rerun each module separately, using the captured VCD stimulus:

```
% vsim -vcdstim proc.vcd proc -do "add wave /*; run 1000"
VSIM 1> quit -f

% vsim -vcdstim cache.vcd cache -do "add wave /*; run 1000"
VSIM 1> quit -f

% vsim -vcdstim memory.vcd memory -do "add wave /*; run 1000"
VSIM 1> quit -f
```

Note



When using VCD files as stimulus, the VCD file format does not support recording of delta delay changes – delta delays are not captured and any delta delay ordering of signal changes is lost. Designs relying on this ordering may produce unexpected results.

Replacing Instances with Output Values from a VCD File

Replacing instances with output values from a VCD file lets you simulate without the instance's source or even the compiled object. The general procedure includes two steps:

1. Create VCD files for one or more instances in your design using the [vcd dumpports](#) command. If necessary, use the [-vcdstim](#) switch to handle port order problems (see below).
2. Re-simulate your design using the [-vcdstim <instance>=<filename>](#) argument to [vsim](#). Note that this works only with VCD files that were created by a ModelSim simulation.

Example 13-4. Replacing Instances

In the following example, the three instances */top/p*, */top/c*, and */top/m* are replaced in simulation by the output values found in the corresponding VCD files.

First, create VCD files for all instances you want to replace:

```
vcd dumpports -vcdstim -file proc.vcd /top/p/*
vcd dumpports -vcdstim -file cache.vcd /top/c/*
vcd dumpports -vcdstim -file memory.vcd /top/m/*
run 1000
```

Next, simulate your design and map the instances to the VCD files you created:

```
vsim top_opt -vcdstim /top/p=proc.vcd -vcdstim /top/c=cache.vcd
-vcdstim /top/m=memory.vcd
quit -f
```

Note

 When using VCD files as stimulus, the VCD file format does not support recording of delta delay changes – delta delays are not captured and any delta delay ordering of signal changes is lost. Designs relying on this ordering may produce unexpected results.

Port Order Issues

The -vcdstim argument to the [vcd dumpports](#) command ensures the order that port names appear in the VCD file matches the order that they are declared in the instance's module or entity declaration. Consider the following module declaration:

```
module proc(clk, addr, data, rw, strb, rdy);
    input clk, rdy;
    output addr, rw, strb;
    inout data;
```

The order of the ports in the module line (clk, addr, data, ...) does not match the order of those ports in the input, output, and inout lines (clk, rdy, addr, ...). In this case the -vcdstim argument to the [vcd dumpports](#) command needs to be used.

In cases where the order is the same, you do not need to use the -vcdstim argument to [vcd dumpports](#). Also, module declarations of the form:

```
module proc(input clk, output addr, inout data, ...)
```

do not require use of the argument.

VCD Commands and VCD Tasks

ModelSim VCD commands map to IEEE Std 1364 VCD system tasks and appear in the VCD file along with the results of those commands. The table below maps the VCD commands to their associated tasks.

Table 13-1. VCD Commands and SystemTasks

VCD commands	VCD system tasks
vcd add	\$dumpvars
vcd checkpoint	\$dumpall
vcd file	\$dumpfile
vcd flush	\$dumpflush

Table 13-1. VCD Commands and SystemTasks (cont.)

VCD commands	VCD system tasks
vcd limit	\$dumplimit
vcd off	\$dumpoff
vcd on	\$dumpon

ModelSim also supports extended VCD (dumports system tasks). The table below maps the VCD dumports commands to their associated tasks.

Table 13-2. VCD Dumport Commands and System Tasks

VCD dumports commands	VCD system tasks
vcd dumports	\$dumports
vcd dumportsall	\$dumportsall
vcd dumportsflush	\$dumportsflush
vcd dumportslimit	\$dumportslimit
vcd dumportsoff	\$dumportsoff
vcd dumportson	\$dumportson

ModelSim supports multiple VCD files. This functionality is an extension of the IEEE Std 1364 specification. The tasks behave the same as the IEEE equivalent tasks such as \$dumpfile, \$dumpvar, etc. The difference is that \$fdumpfile can be called multiple times to create more than one VCD file, and the remaining tasks require a filename argument to associate their actions with a specific file.

Table 13-3. VCD Commands and System Tasks for Multiple VCD Files

VCD commands	VCD system tasks
vcd add -file <filename>	\$fdumpvars
vcd checkpoint <filename>	\$fdumpall
vcd files <filename>	\$fdumpfile
vcd flush <filename>	\$fdumpflush
vcd limit <filename>	\$fdumplimit
vcd off <filename>	\$fdumpoff
vcd on <filename>	\$fdumpon

Using VCD Commands with SystemC

VCD commands are supported for the following SystemC signals:

sc_signal<T>
sc_signal_resolved
sc_signal_rv<N>

VCD commands are supported for the following SystemC signal ports:

sc_in<T>
sc_out<T>
sc_inout<T>
sc_in_resolved
sc_out_resolved
sc_inout_resolved
sc_in_rv<N>
sc_out_rv<N>
sc_inout_rv<N>

<T> can be any of types shown in [Table 13-4](#).

Table 13-4. SystemC Types

unsigned char	char	sc_int
unsigned short	short	sc_uint
unsigned int	int	sc_bigint
unsigned long	float	sc_biguint
unsigned long long	double	sc_signed
	enum	sc_unsigned
		sc_logic
		sc_bit
		sc_bv
		sc_lv

Unsupported types are the SystemC fixed point types, class, structures and unions.

Compressing Files with VCD Tasks

ModelSim can produce compressed VCD files using the **gzip** compression algorithm. Since we cannot change the syntax of the system tasks, we act on the extension of the output file name. If you specify a **.gz** extension on the filename, ModelSim will compress the output.

VCD File from Source To Output

The following example shows the VHDL source, a set of simulator commands, and the resulting VCD output.

VHDL Source Code

The design is a simple shifter device represented by the following VHDL source code:

```
library IEEE;
use IEEE.STD_LOGIC_1164.all;

entity SHIFTER_MOD is
    port (CLK, RESET, data_in    : IN STD_LOGIC;
          Q : inout STD_LOGIC_VECTOR(8 downto 0));
END SHIFTER_MOD ;

architecture RTL of SHIFTER_MOD is
begin
    process (CLK,RESET)
    begin
        if (RESET = '1') then
            Q <= (others => '0') ;
        elsif (CLK'event and CLK = '1') then
            Q <= Q(Q'left - 1 downto 0) & data_in ;
        end if ;
    end process ;
end ;
```

VCD Simulator Commands

At simulator time zero, the designer executes the following commands:

```
vcd file output.vcd
vcd add -r *
force reset 1 0
force data_in 0 0
force clk 0 0
run 100
force clk 1 0, 0 50 -repeat 100
run 100
vcd off
force reset 0 0
force data_in 1 0
run 100
vcd on
run 850
force reset 1 0
run 50
vcd checkpoint
quit -sim
```

VCD Output

The VCD file created as a result of the preceding scenario would be called *output.vcd*. The following pages show how it would look.

```
$date $end #700
    Thu Sep 18 #100 1!
11:07:43 2003 1! 1(
$end #150 #750
$version 0! 0!
    <Tool> Version #200 #800
<version> 1! 1!
$end $dumpoff 1' 1'
$timescale x! #850
    1ns x" 0!
$end x# #900
$scope module x$ 1!
shifter_mod $end x% 1&
$var wire 1 ! clk x& #950
$end x' 0!
$var wire 1 " reset x( #1000
$end x) 1!
$var wire 1 # data_in x* 1%
$end x+ #1050
$var wire 1 $ q [8] x, 0!
$end $end #1100
$var wire 1 % q [7] #300 1!
$end $dumpon 1$ #1150
$var wire 1 & q [6] 1! 0!
$end 0" 0!
$var wire 1 ' q [5] 1# 1"
$end 0$ 0,
$var wire 1 ( q [4] 0% 0+
$end 0& 0*
$var wire 1 ) q [3] 0' 0)
$end 0( 0(
$var wire 1 * q [2] 0) 0'
$end 0* 0&
$var wire 1 + q [1] 0+ 0%
$end 1, 0$
$var wire 1 , q [0] $end #1200
$end #350 1!
$upscope $end 0! $dumpall
$Enddefinitions $end #400 1!
#0 1! 1"
$dumpvars 1+ 1#
0! #450 0$ 0%
1" 0! 0%
0# #500 0&
0$ 1! 0'
0% 1* 0(
0& #550 0)
0' 0! 0*
0( #600 0+
0) 1! 0,
0* 1) $end
0+ #650 0!
0,
```

VCD to WLF

The ModelSim [vcd2wlf](#) command is a utility that translates a *.vcd* file into a *.wlf* file that can be displayed in ModelSim using the **vsim -view** argument. This command only works on VCD files containing positive time values.

Capturing Port Driver Data

Some ASIC vendors' toolkits read a VCD file format that provides details on port drivers. This information can be used, for example, to drive a tester. For more information on a specific toolkit, refer to the ASIC vendor's documentation.

In ModelSim use the [vcd dumpports](#) command to create a VCD file that captures port driver data. Each time an external or internal port driver changes values, a new value change is recorded in the VCD file with the following format:

```
p<state> <0 strength> <1 strength> <identifier_code>
```

Driver States

The driver states are recorded as TSSI states if the direction is known, as detailed in this table:

Table 13-5. Driver States

Input (testfixture)	Output (dut)
D low	L low
U high	H high
N unknown	X unknown
Z tri-state	T tri-state
d low (two or more drivers active)	l low (two or more drivers active)
u high (two or more drivers active)	h high (two or more drivers active)

If the direction is unknown, the state will be recorded as one of the following:

Table 13-6. State When Direction is Unknown

Unknown direction
0 low (both input and output are driving low)
1 high (both input and output are driving high)
? unknown (both input and output are driving unknown)

Table 13-6. State When Direction is Unknown (cont.)

Unknown direction
F three-state (input and output unconnected)
A unknown (input driving low and output driving high)
a unknown (input driving low and output driving unknown)
B unknown (input driving high and output driving low)
b unknown (input driving high and output driving unknown)
C unknown (input driving unknown and output driving low)
c unknown (input driving unknown and output driving high)
f unknown (input and output three-stated)

Driver Strength

The recorded 0 and 1 strength values are based on Verilog strengths:

Table 13-7. Driver Strength

Strength	VHDL std_logic mappings
0 highz	'Z'
1 small	
2 medium	
3 weak	
4 large	
5 pull	'W','H','L'
6 strong	'U','X','0','1','-'
7 supply	

Identifier Code

The <identifier_code> is an integer preceded by < that starts at zero and is incremented for each port in the order the ports are specified. Also, the variable type recorded in the VCD header is "port".

Resolving Values

The resolved values written to the VCD file depend on which options you specify when creating the file.

Default Behavior

By default ModelSim generates output according to IEEE 1364-2005. The standard states that the values 0 (both input and output are active with value 0) and 1 (both input and output are active with value 1) are conflict states. The standard then defines two strength ranges:

- Strong: strengths 7, 6, and 5
- Weak: strengths 4, 3, 2, 1

The rules for resolving values are as follows:

- If the input and output are driving the same value with the same range of strength, the resolved value is 0 or 1, and the strength is the stronger of the two.
- If the input is driving a strong strength and the output is driving a weak strength, the resolved value is D, d, U or u, and the strength is the strength of the input.
- If the input is driving a weak strength and the output is driving a strong strength, the resolved value is L, l, H or h, and the strength is the strength of the output.

Ignoring Strength Ranges

You may wish to ignore strength ranges and have ModelSim handle each strength separately. Any of the following options will produce this behavior:

- Use the `-no_strength_range` argument to the [vcd dumpports](#) command
- Use an optional argument to `$dumpports` (see [Extended \\$dumpports Syntax](#) below)
- Use the `+dumpports+no_strength_range` argument to [vsim](#) command

In this situation, ModelSim reports strengths for both the zero and one components of the value if the strengths are the same. If the strengths are different, ModelSim reports only the “winning” strength. In other words, the two strength values either match (e.g., pA 5 5 !) or the winning strength is shown and the other is zero (e.g., pH 0 5 !).

Extended \$dumpports Syntax

ModelSim extends the `$dumpports` system task in order to support exclusion of strength ranges. The extended syntax is as follows:

```
$dumpports (scope_list, file_pathname, ncsim_file_index, file_format)
```

The nc_sim_index argument is required yet ignored by ModelSim. It is required only to be compatible with NCSim's argument list.

The file_format argument accepts the following values or an ORed combination thereof (see examples below):

Table 13-8. Values for file_format Argument

File_format value	Meaning
0	Ignore strength range
2	Use strength ranges; produces IEEE 1364-compliant behavior
4	Compress the EVCD output
8	Include port direction information in the EVCD file header; same as using -direction argument to vcd dumpports

Here are some examples:

```
// ignore strength range
$dumports(top, "filename", 0, 0)
// compress and ignore strength range
$dumports(top, "filename", 0, 4)
// print direction and ignore strength range
$dumports(top, "filename", 0, 8)
// compress, print direction, and ignore strength range
$dumports(top, "filename", 0, 12)
```

Example 13-5. VCD Output from vcd dumpports

This example demonstrates how **vcd dumpports** resolves values based on certain combinations of driver values and strengths and whether or not you use strength ranges. **Table 13-9** is sample driver data.

Table 13-9. Sample Driver Data

time	in value	out value	in strength value (range)	out strength value (range)
0	0	0	7 (strong)	7 (strong)
100	0	0	6 (strong)	7 (strong)
200	0	0	5 (strong)	7 (strong)
300	0	0	4 (weak)	7 (strong)
900	1	0	6 (strong)	7 (strong)
27400	1	1	5 (strong)	4 (weak)

Table 13-9. Sample Driver Data

time	in value	out value	in strength value (range)	out strength value (range)
27500	1	1	4 (weak)	4 (weak)
27600	1	1	3 (weak)	4 (weak)

Given the driver data above and use of 1364 strength ranges, here is what the VCD file output would look like:

```
#0
p0 7 0 <0
#100
p0 7 0 <0
#200
p0 7 0 <0
#300
pL 7 0 <0
#900
pB 7 6 <0
#27400
pU 0 5 <0
#27500
p1 0 4 <0
#27600
p1 0 4 <0
```


Chapter 14

Tcl and Macros (DO Files)

Tcl is a scripting language for controlling and extending ModelSim. Within ModelSim you can develop implementations from Tcl scripts without the use of C code. Because Tcl is interpreted, development is rapid; you can generate and execute Tcl scripts on the fly without stopping to recompile or restart ModelSim. In addition, if ModelSim does not provide the command you need, you can use Tcl to create your own commands.

Tcl Features

Using Tcl with ModelSim gives you these features:

- command history (like that in C shells)
- full expression evaluation and support for all C-language operators
- a full range of math and trig functions
- support of lists and arrays
- regular expression pattern matching
- procedures
- the ability to define your own commands
- command substitution (that is, commands may be nested)
- robust scripting language for macros

Tcl References

Two books about Tcl are *Tcl and the Tk Toolkit* by John K. Ousterhout, published by Addison-Wesley Publishing Company, Inc., and *Practical Programming in Tcl and Tk* by Brent Welch published by Prentice Hall. You can also consult the following online references:

- Select **Help > Tcl Man Pages**.

Tcl Commands

For complete information on Tcl commands, select **Help > Tcl Man Pages**. Also see [Simulator GUI Preferences](#) for information on Tcl preference variables.

ModelSim command names that conflict with Tcl commands have been renamed or have been replaced by Tcl commands, as shown in [Table 14-1](#).

Table 14-1. Changes to ModelSim Commands

Previous ModelSim command	Command changed to (or replaced by)
continue	run with the -continue option
format list wave	write format with either list or wave specified
if	replaced by the Tcl if command, see If Command Syntax for more information
list	add list
nolist nowave	delete with either list or wave specified
set	replaced by the Tcl set command
source	vsource
wave	add wave

Tcl Command Syntax

The following eleven rules define the syntax and semantics of the Tcl language. Additional details on [If Command Syntax](#).

1. A Tcl script is a string containing one or more commands. Semi-colons and newlines are command separators unless quoted as described below. Close brackets ("]") are command terminators during command substitution (see below) unless quoted.
2. A command is evaluated in two steps. First, the Tcl interpreter breaks the command into words and performs substitutions as described below. These substitutions are performed in the same way for all commands. The first word is used to locate a command procedure to carry out the command, then all of the words of the command are passed to the command procedure. The command procedure is free to interpret each of its words in any way it likes, such as an integer, variable name, list, or Tcl script. Different commands interpret their words differently.
3. Words of a command are separated by white space (except for newlines, which are command separators).
4. If the first character of a word is a double-quote ("") then the word is terminated by the next double-quote character. If semi-colons, close brackets, or white space characters (including newlines) appear between the quotes then they are treated as ordinary characters and included in the word. Command substitution, variable substitution, and backslash substitution are performed on the characters between the quotes as described below. The double-quotes are not retained as part of the word.

5. If the first character of a word is an open brace ({}) then the word is terminated by the matching close brace ({}). Braces nest within the word: for each additional open brace there must be an additional close brace (however, if an open brace or close brace within the word is quoted with a backslash then it is not counted in locating the matching close brace). No substitutions are performed on the characters between the braces except for backslash-newline substitutions described below, nor do semi-colons, newlines, close brackets, or white space receive any special interpretation. The word will consist of exactly the characters between the outer braces, not including the braces themselves.
6. If a word contains an open bracket ([]) then Tcl performs command substitution. To do this it invokes the Tcl interpreter recursively to process the characters following the open bracket as a Tcl script. The script may contain any number of commands and must be terminated by a close bracket (]). The result of the script (i.e. the result of its last command) is substituted into the word in place of the brackets and all of the characters between them. There may be any number of command substitutions in a single word. Command substitution is not performed on words enclosed in braces.
7. If a word contains a dollar-sign (\$) then Tcl performs variable substitution: the dollar-sign and the following characters are replaced in the word by the value of a variable. Variable substitution may take any of the following forms:
 - o \$name
Name is the name of a scalar variable; the name is terminated by any character that isn't a letter, digit, or underscore.
 - o \$name(index)
Name gives the name of an array variable and index gives the name of an element within that array. Name must contain only letters, digits, and underscores. Command substitutions, variable substitutions, and backslash substitutions are performed on the characters of index.
 - o \${name}
Name is the name of a scalar variable. It may contain any characters whatsoever except for close braces.
There may be any number of variable substitutions in a single word. Variable substitution is not performed on words enclosed in braces.
8. If a backslash (\) appears within a word then backslash substitution occurs. In all cases but those described below the backslash is dropped and the following character is treated as an ordinary character and included in the word. This allows characters such as double quotes, close brackets, and dollar signs to be included in words without

triggering special processing. [Table 14-2](#) lists the backslash sequences that are handled specially, along with the value that replaces each sequence.

Table 14-2. Tcl Backslash Sequences

Sequence	Value
\a	Audible alert (bell) (0x7)
\b	Backspace (0x8)
\f	Form feed (0xc).
\n	Newline (0xa)
\r	Carriage-return (0xd)
\t	Tab (0x9)
\v	Vertical tab (0xb)
\<newline>whiteSpace	A single space character replaces the backslash, newline, and all spaces and tabs after the newline. This backslash sequence is unique in that it is replaced in a separate pre-pass before the command is actually parsed. This means that it will be replaced even when it occurs between braces, and the resulting space will be treated as a word separator if it isn't in braces or quotes.
\\	Backslash ("\\")
\ooo	The digits ooo (one, two, or three of them) give the octal value of the character.
\xhh	The hexadecimal digits hh give the hexadecimal value of the character. Any number of digits may be present.

Backslash substitution is not performed on words enclosed in braces, except for backslash-newline as described above.

9. If a pound sign (#) appears at a point where Tcl is expecting the first character of the first word of a command, then the pound sign and the characters that follow it, up through the next newline, are treated as a comment and ignored. The # character denotes a comment only when it appears at the beginning of a command.
10. Each character is processed exactly once by the Tcl interpreter as part of creating the words of a command. For example, if variable substitution occurs then no further substitutions are performed on the value of the variable; the value is inserted into the word verbatim. If command substitution occurs then the nested command is processed entirely by the recursive call to the Tcl interpreter; no substitutions are performed before making the recursive call and no additional substitutions are performed on the result of the nested script.

11. Substitutions do not affect the word boundaries of a command. For example, during variable substitution the entire value of the variable becomes part of a single word, even if the variable's value contains spaces.

If Command Syntax

The Tcl **if** command executes scripts conditionally. Note that in the syntax below the question mark (?) indicates an optional argument.

Syntax

```
if expr1 ?then? body1 elseif expr2 ?then? body2 elseif ... ?else? ?bodyN?
```

Description

The **if** command evaluates *expr1* as an expression. The value of the expression must be a boolean (a numeric value, where 0 is false and anything else is true, or a string value such as **true** or **yes** for true and **false** or **no** for false); if it is true then *body1* is executed by passing it to the Tcl interpreter. Otherwise *expr2* is evaluated as an expression and if it is true then *body2* is executed, and so on. If none of the expressions evaluates to true then *bodyN* is executed. The **then** and **else** arguments are optional "noise words" to make the command easier to read. There may be any number of **elseif** clauses, including zero. *BodyN* may also be omitted as long as **else** is omitted too. The return value from the command is the result of the body script that was executed, or an empty string if none of the expressions was non-zero and there was no *bodyN*.

Command Substitution

Placing a command in square brackets ([]) will cause that command to be evaluated first and its results returned in place of the command. An example is:

```
set a 25
set b 11
set c 3
echo "the result is [expr ($a + $b)/$c]"
```

will output:

```
"the result is 12"
```

This feature allows VHDL variables and signals, and Verilog nets and registers to be accessed using:

```
[examine -<radix> name]
```

The %name substitution is no longer supported. Everywhere %name could be used, you now can use [examine -value -<radix> name] which allows the flexibility of specifying command options. The radix specification is optional.

Command Separator

A semicolon character (;) works as a separator for multiple commands on the same line. It is not required at the end of a line in a command sequence.

Multiple-Line Commands

With Tcl, multiple-line commands can be used within macros and on the command line. The command line prompt will change (as in a C shell) until the multiple-line command is complete.

In the example below, note the way the opening brace '{' is at the end of the if and else lines. This is important because otherwise the Tcl scanner won't know that there is more coming in the command and will try to execute what it has up to that point, which won't be what you intend.

```
if {[exa sig_a] == "0011ZZ"} {  
    echo "Signal value matches"  
    do macro_1.do  
} else {  
    echo "Signal value fails"  
    do macro_2.do  
}
```

Evaluation Order

An important thing to remember when using Tcl is that anything put in braces ({}) is not evaluated immediately. This is important for if-then-else statements, procedures, loops, and so forth.

Tcl Relational Expression Evaluation

When you are comparing values, the following hints may be useful:

- Tcl stores all values as strings, and will convert certain strings to numeric values when appropriate. If you want a literal to be treated as a numeric value, don't quote it.

```
if {[exa var_1] == 345}...
```

The following will also work:

```
if {[exa var_1] == "345"}...
```

- However, if a literal cannot be represented as a number, you *must* quote it, or Tcl will give you an error. For instance:

```
if {[exa var_2] == 001Z}...
```

will give an error.

```
if {[exa var_2] == "001Z"}...
```

will work okay.

- Don't quote single characters in single quotes:

```
if {[exa var_3] == 'x'}...
```

will give an error

```
if {[exa var_3] == "x"}...
```

will work okay.

- For the equal operator, you must use the C operator (==). For not-equal, you must use the C operator (!=).

Variable Substitution

When a \$<var_name> is encountered, the Tcl parser will look for variables that have been defined either by ModelSim or by you, and substitute the value of the variable.

Note



Tcl is case sensitive for variable names.

To access environment variables, use the construct:

```
$env(<var_name>
echo My user name is $env(USER)
```

Environment variables can also be set using the env array:

```
set env(SHELL) /bin/csh
```

See [Simulator State Variables](#) for more information about ModelSim-defined variables.

System Commands

To pass commands to the UNIX shell or DOS window, use the Tcl **exec** command:

```
echo The date is [exec date]
```

List Processing

In Tcl a "list" is a set of strings in curly braces separated by spaces. Several Tcl commands are available for creating lists, indexing into lists, appending to lists, getting the length of lists and shifting lists, as shown in [Table 14-3](#).

Table 14-3. Tcl List Commands

Command syntax	Description
lappend var_name val1 val2 ...	appends val1, val2, etc. to list var_name
lindex list_name index	returns the index-th element of list_name; the first element is 0
linsert list_name index val1 val2 ...	inserts val1, val2, etc. just before the index-th element of list_name
list val1, val2 ...	returns a Tcl list consisting of val1, val2, etc.
llength list_name	returns the number of elements in list_name
lrange list_name first last	returns a sublist of list_name, from index first to index last; first or last may be "end", which refers to the last element in the list
lreplace list_name first last val1, val2, ...	replaces elements first through last with val1, val2, etc.

Two other commands, **lsearch** and **lsort**, are also available for list manipulation. See the Tcl man pages ([Help > Tcl Man Pages](#)) for more information on these commands.

Simulator Tcl Commands

These additional commands enhance the interface between Tcl and ModelSim. Only brief descriptions are provided in [Table 14-4](#). For more information and command syntax see [Commands](#).

Table 14-4. Simulator-Specific Tcl Commands

Command	Description
alias	creates a new Tcl procedure that evaluates the specified commands; used to create a user-defined alias
find	locates incrTcl classes and objects
lshift	takes a Tcl list as argument and shifts it in-place one place to the left, eliminating the 0th element
lsublist	returns a sublist of the specified Tcl list that matches the specified Tcl glob pattern

Table 14-4. Simulator-Specific Tcl Commands

Command	Description
printenv	echoes to the Transcript pane the current names and values of all environment variables

Simulator Tcl Time Commands

ModelSim Tcl time commands make simulator-time-based values available for use within other Tcl procedures.

Time values may optionally contain a units specifier where the intervening space is also optional. If the space is present, the value must be quoted (e.g. 10ns, "10 ns"). Time values without units are taken to be in the UserTimeScale. Return values are always in the current Time Scale Units. All time values are converted to a 64-bit integer value in the current Time Scale. This means that values smaller than the current Time Scale will be truncated to 0.

Conversions

Table 14-5. Tcl Time Conversion Commands

Command	Description
intToTime <intHi32> <intLo32>	converts two 32-bit pieces (high and low order) into a 64-bit quantity (Time in ModelSim is a 64-bit integer)
RealToTime <real>	converts a <real> number to a 64-bit integer in the current Time Scale
scaleTime <time> <scaleFactor>	returns the value of <time> multiplied by the <scaleFactor> integer

Relations

Table 14-6. Tcl Time Relation Commands

Command	Description
eqTime <time> <time>	evaluates for equal
neqTime <time> <time>	evaluates for not equal
gtTime <time> <time>	evaluates for greater than
gteTime <time> <time>	evaluates for greater than or equal
ltTime <time> <time>	evaluates for less than
lteTime <time> <time>	evaluates for less than or equal

All relation operations return 1 or 0 for true or false respectively and are suitable return values for TCL conditional expressions. For example,

```
if {[eqTime $Now 1750ns]} {  
    ...  
}
```

Arithmetic

Table 14-7. Tcl Time Arithmetic Commands

Command	Description
addTime <time> <time>	add time
divTime <time> <time>	64-bit integer divide
mulTime <time> <time>	64-bit integer multiply
subTime <time> <time>	subtract time

Tcl Examples

[Example 14-1](#) uses the Tcl **while** loop to copy a list from variable *a* to variable *b*, reversing the order of the elements along the way:

Example 14-1. Tcl while Loop

```
set b [list]
set i [expr {[llength $a] - 1}]
while {$i >= 0} {
    lappend b [lindex $a $i]
    incr i -1
}
```

[Example 14-2](#) uses the Tcl **for** command to copy a list from variable *a* to variable *b*, reversing the order of the elements along the way:

Example 14-2. Tcl for Command

```
set b [list]
for {set i [expr {[llength $a] - 1}]} {$i >= 0} {incr i -1} {
    lappend b [lindex $a $i]
}
```

[Example 14-3](#) uses the Tcl **foreach** command to copy a list from variable *a* to variable *b*, reversing the order of the elements along the way (the foreach command iterates over all of the elements of a list):

Example 14-3. Tcl foreach Command

```
set b [list]
foreach i $a { set b [linsert $b 0 $i] }
```

[Example 14-4](#) shows a list reversal as above, this time aborting on a particular element using the Tcl **break** command:

Example 14-4. Tcl break Command

```
set b [list]
foreach i $a {
    if {$i = "zzz"} break
    set b [linsert $b 0 $i]
}
```

Example 14-5 is a list reversal that skips a particular element by using the Tcl **continue** command:

Example 14-5. Tcl continue Command

```
set b [list]
foreach i $a {
    if {$i = "zzz"} continue
    set b [linsert $b 0 $i]
}
```

Example 14-6 works in UNIX only. In a Windows environment, the Tcl **exec** command will execute compiled files only, not system commands.) The example shows how you can access system information and transfer it into VHDL variables or signals and Verilog nets or registers. When a particular HDL source breakpoint occurs, a Tcl function is called that gets the date and time and deposits it into a VHDL signal of type STRING. If a particular environment variable (DO_ECHO) is set, the function also echoes the new date and time to the transcript file by examining the VHDL variable.

Example 14-6. Access and Transfer System Information

(in VHDL source):

```
signal datime : string(1 to 28) := " " ;# 28 spaces
```

(on VSIM command line or in macro):

```
proc set_date {} {
    global env
    set do_the_echo [set env(DO_ECHO)]
    set s [clock format [clock seconds]]
    force -deposit datime $s
    if {do_the_echo} {
        echo "New time is [examine -value datime]"
    }
}
bp src/waveadd.vhd 133 {set_date; continue}
--sets the breakpoint to call set_date
```

Example 14-7 specifies the compiler arguments and lets you compile any number of files.

Example 14-7. Tcl Used to Specify Compiler Arguments

```
set Files [list]
set nbrArgs $argc
for {set x 1} {$x <= $nbrArgs} {incr x} {
    set lappend Files $1
    shift
}
eval vcom -93 -explicit -noaccel $Files
```

Example 14-8 is an enhanced version of the last one. The additional code determines whether the files are VHDL or Verilog and uses the appropriate compiler and arguments depending on the file type. Note that the macro assumes your VHDL files have a .vhd file extension.

Example 14-8. Tcl Used to Specify Compiler Arguments—Enhanced

```
set vhdfFiles [list]
set vFiles [list]
set nbrArgs $argc
for {set x 1} {$x <= $nbrArgs} {incr x} {
    if {[string match *.vhd $1]} {
        lappend vhdfFiles $1
    } else {
        lappend vFiles $1
    }
    shift
}
if {[llength $vhdfFiles] > 0} {
    eval vcom -93 -explicit -noaccel $vhdfFiles
}
if {[llength $vFiles] > 0} {
    eval vlog $vFiles
}
```

Macros (DO Files)

ModelSim macros (also called DO files) are simply scripts that contain ModelSim and, optionally, Tcl commands. You invoke these scripts with the **Tools > TCL > Execute Macro** menu selection or the [do](#) command.

Creating DO Files

You can create DO files, like any other Tcl script, by typing the required commands in any editor and saving the file. Alternatively, you can save the transcript as a DO file (see [Saving the Transcript File](#)).

All "event watching" commands (e.g. [onbreak](#), [onerror](#), etc.) must be placed before [run](#) commands within the macros in order to take effect.

The following is a simple DO file that was saved from the transcript. It is used in the dataset exercise in the ModelSim Tutorial. This DO file adds several signals to the Wave window, provides stimulus to those signals, and then advances the simulation.

```
add wave ld
add wave rst
add wave clk
add wave d
add wave q
force -freeze clk 0 0, 1 {50 ns} -r 100
force rst 1
force rst 0 10
force ld 0
force d 1010
onerror {cont}
run 1700
force ld 1
run 100
force ld 0
run 400
force rst 1
run 200
force rst 0 10
run 1500
```

Using Parameters with DO Files

You can increase the flexibility of DO files by using parameters. Parameters specify values that are passed to the corresponding parameters \$1 through \$9 in the macro file. For example say the macro "testfile" contains the line **bp \$1 \$2**. The command below would place a breakpoint in the source file named *design.vhd* at line 127:

```
do testfile design.vhd 127
```

There is no limit on the number of parameters that can be passed to macros, but only nine values are visible at one time. You can use the **shift** command to see the other parameters.

Deleting a File from a .do Script

To delete a file from a .do script, use the Tcl **file** command as follows:

```
file delete myfile.log
```

This will delete the file "myfile.log."

You can also use the **transcript file** command to perform a deletion:

```
transcript file ()
transcript file my file.log
```

The first line will close the current log file. The second will open a new log file. If it has the same name as an existing file, it will replace the previous one.

Making Macro Parameters Optional

If you want to make macro parameters optional (i.e., be able to specify fewer parameter values with the do command than the number of parameters referenced in the macro), you must use the **argc** simulator state variable. The **argc** simulator state variable returns the number of parameters passed. The examples below show several ways of using **argc**.

Example 14-9. Specifying Files to Compile With argc Macro

This macro specifies the files to compile and handles 0-2 compiler arguments as parameters. If you supply more arguments, ModelSim generates a message.

```
switch $argc {  
    0 {vcom file1.vhd file2.vhd file3.vhd }  
    1 {vcom $1 file1.vhd file2.vhd file3.vhd }  
    2 {vcom $1 $2 file1.vhd file2.vhd file3.vhd }  
    default {echo Too many arguments. The macro accepts 0-2 args. }  
}
```

Example 14-10. Specifying Compiler Arguments With Macro

This macro specifies the compiler arguments and lets you compile any number of files.

```
variable Files ""  
set nbrArgs $argc  
for {set x 1} {$x <= $nbrArgs} {incr x} {  
    set Files [concat $Files $1]  
    shift  
}  
eval vcom -93 -explicit -noaccel $Files
```

Example 14-11. Specifying Compiler Arguments With Macro—Enhanced

This macro is an enhanced version of the one shown in example 2. The additional code determines whether the files are VHDL or Verilog and uses the appropriate compiler and arguments depending on the file type. Note that the macro assumes your VHDL files have a *.vhd* file extension.

```
variable vhdFiles ""
variable vFiles ""
set nbrArgs $argc
set vhdFilesExist 0
set vFilesExist 0
for {set x 1} {$x <= $nbrArgs} {incr x} {
    if {[string match *.vhd $1]} {
        set vhdFiles [concat $vhdFiles $1]
        set vhdFilesExist 1
    } else {
        set vFiles [concat $vFiles $1]
        set vFilesExist 1
    }
    shift
}
if {$vhdFilesExist == 1} {
    eval vcom -93 -explicit -noaccel $vhdFiles
}
if {$vFilesExist == 1} {
    eval vlog $vFiles
}
```

Useful Commands for Handling Breakpoints and Errors

If you are executing a macro when your simulation hits a breakpoint or causes a run-time error, ModelSim interrupts the macro and returns control to the command line. The commands in [Table 14-8](#) may be useful for handling such events. (Any other legal command may be executed as well.)

Table 14-8. Commands for Handling Breakpoints and Errors in Macros

command	result
run -continue	continue as if the breakpoint had not been executed, completes the run that was interrupted
onbreak	specify a command to run when you hit a breakpoint within a macro
onElabError	specify a command to run when an error is encountered during elaboration
onerror	specify a command to run when an error is encountered within a macro
status	get a traceback of nested macro calls when a macro is interrupted
abort	terminate a macro once the macro has been interrupted or paused
pause	cause the macro to be interrupted; the macro can be resumed by entering a resume command via the command line

You can also set the OnErrorDefaultAction Tcl variable to determine what action ModelSim takes when an error occurs. To set the variable on a permanent basis, you must define the variable in a *modelsim.tcl* file (see [The modelsim.tcl File](#) for details).

Error Action in DO Files

If a command in a macro returns an error, ModelSim does the following:

1. If an `onerror` command has been set in the macro script, ModelSim executes that command. The `onerror` command must be placed prior to the `run` command in the DO file to take effect.
2. If no `onerror` command has been specified in the script, ModelSim checks the `OnErrorDefaultAction` variable. If the variable is defined, its action will be invoked.
3. If neither 1 or 2 is true, the macro aborts.

Using the Tcl Source Command with DO Files

Either the `do` command or Tcl source command can execute a DO file, but they behave differently.

With the Tcl source command, the DO file is executed exactly as if the commands in it were typed in by hand at the prompt. Each time a breakpoint is hit, the Source window is updated to show the breakpoint. This behavior could be inconvenient with a large DO file containing many breakpoints.

When a `do` command is interrupted by an error or breakpoint, it does not update any windows, and keeps the DO file "locked". This keeps the Source window from flashing, scrolling, and moving the arrow when a complex DO file is executed. Typically an `onbreak` resume command is used to keep the macro running as it hits breakpoints. Add an `onbreak` abort command to the DO file if you want to exit the macro and update the Source window.

Appendix A

Simulator Variables

This appendix documents the following types of variables:

- **Environment Variables** — Variables referenced and set according to operating system conventions. Environment variables prepare the ModelSim environment prior to simulation.
- **Simulator Control Variables** — Variables used to control compiler, simulator, and various other functions.
- **Simulator State Variables** — Variables that provide feedback on the state of the current simulation.

Variable Settings Report

The `report` command returns a list of current settings for either the simulator state or simulator control variables. Use the following commands at either the ModelSim or VSIM prompt:

```
report simulator state
report simulator control
```

Environment Variables

Environment Variable Expansion

The shell commands `vcom`, `vlog`, `vsim`, and `vmap`, no longer expand environment variables in filename arguments and options. Instead, variables should be expanded by the shell beforehand, in the usual manner. The `-f` switch that most of these commands support now performs environment variable expansion throughout the file.

Environment variable expansion is still performed in the following places:

- Pathname and other values in the `modelsim.ini` file
- Strings used as file pathnames in VHDL and Verilog
- VHDL Foreign attributes
- The `PLIOBJJS` environment variable may contain a path that has an environment variable.
- Verilog `uselib file and dir directives

- Anywhere in the contents of a -f file

The recommended method for using flexible pathnames is to make use of the MGC Location Map system (see [Using Location Mapping](#)). When this is used, then pathnames stored in libraries and project files (.mpf) will be converted to logical pathnames.

If a file or path name contains the dollar sign character (\$), and must be used in one of the places listed above that accepts environment variables, then the explicit dollar sign must be escaped by using a double dollar sign (\$\$).

Setting Environment Variables

Before compiling or simulating, several environment variables may be set to provide the functions described below. You set the variables as follows:

- Windows — through the System control panel, refer to “[Creating Environment Variables in Windows](#)” for more information.
- Linux/UNIX — typically through the *.login* script.

The LM_LICENSE_FILE variable is required; all others are optional.

DOPATH

The toolset uses the DOPATH environment variable to search for DO files (macros). DOPATH consists of a colon-separated (semi-colon for Windows) list of paths to directories. You can override this environment variable with the DOPATH Tcl preference variable.

The DOPATH environment variable isn't accessible when you invoke vsim from a UNIX shell or from a Windows command prompt. It is accessible once ModelSim or vsim is invoked. If you need to invoke from a shell or command line and use the DOPATH environment variable, use the following syntax:

```
vsim -do "do <dofile_name>" <design_unit>
```

EDITOR

The EDITOR environment variable specifies the editor to invoke with the [edit](#) command

HOME

The toolset uses the HOME environment variable to look for an optional graphical preference file and optional location map file. Refer to [Simulator Control Variables](#) for additional information.

HOME_0IN

The HOME_0IN environment variable identifies the location of the 0-In executables directory. Refer to the 0-In documentation for more information.

ITCL_LIBRARY

Identifies the pathname of the [incr]Tcl library; set by ModelSim to the same path as MODEL_TECH_TCL; must point to libraries supplied by Mentor Graphics.

ITK_LIBRARY

Identifies the pathname of the [incr]Tk library; set by ModelSim to the same pathname as MODEL_TECH_TCL; must point to libraries supplied by Mentor Graphics.

LD_LIBRARY_PATH

A UNIX shell environment variable setting the search directories for shared libraries. It instructs the OS where to search for the shared libraries for FLI/PLI/VPI/DPI. This variable is used for both 32-bit and 64-bit shared libraries on Solaris/Linux systems.

LD_LIBRARY_PATH_32

A UNIX shell environment variable setting the search directories for shared libraries. It instructs the OS where to search for the shared libraries for FLI/PLI/VPI/DPI. This variable is used only for 32-bit shared libraries on Solaris/Linux systems.

LD_LIBRARY_PATH_64

A UNIX shell environment variable setting the search directories for shared libraries. It instructs the OS where to search for the shared libraries for FLI/PLI/VPI/DPI. This variable is used only for 64-bit shared libraries on Solaris/Linux systems.

LM_LICENSE_FILE

The toolset's file manager uses the LM_LICENSE_FILE environment variable to find the location of the license file. The argument may be a colon-separated (semi-colon for Windows) set of paths, including paths to other vendor license files. The environment variable is required.

MGC_AMS_HOME

Specifies whether vcom adds the declaration of REAL_VECTOR to the STANDARD package. This is useful for designers using VHDL-AMS to test digital parts of their model.

MGC_HOME

Identifies the pathname of the MGC tool suite.

MGC_LOCATION_MAP

The toolset uses the MGC_LOCATION_MAP environment variable to find source files based on easily reallocated "soft" paths.

MGC_WD

Identifies the Mentor Graphics working directory. This variable is used in the initialization sequence.

MODEL_TECH

Do not set this variable. The toolset automatically sets the MODEL_TECH environment variable to the directory in which the binary executable resides.

MODEL_TECH_OVERRIDE

Provides an alternative directory path for the binary executables. Upon initialization, the product sets MODEL_TECH to this path, if set.

MODEL_TECH_TCL

Specifies the directory location of Tcl libraries for Tcl/Tk and vsim, and may also be used to specify a startup DO file. This variable defaults to <installDIR>/tcl, however you may set it to an alternate path.

MODELSIM

The toolset uses the MODELSIM environment variable to find the *modelsim.ini* file. The argument consists of a path including the file name.

An alternative use of this variable is to set it to the path of a project file (<Project_Root_Dir>/<Project_Name>.mpf). This allows you to use project settings with command line tools. However, if you do this, the .mpf file will replace *modelsim.ini* as the initialization file for all tools.

MODELSIM_PREFERENCES

The MODELSIM_PREFERENCES environment variable specifies the location to store user interface preferences. Setting this variable with the path of a file instructs the toolset to use this file instead of the default location (your HOME directory in UNIX or in the registry in Windows). The file does not need to exist beforehand, the toolset will initialize it. Also, if this file is read-only, the toolset will not update or otherwise modify the file. This variable may contain a relative pathname – in which case the file will be relative to the working directory at the time the tool is started.

MODELSIM_TCL

identifies the pathname to a user preference file (e.g., C:\questasim\modelsim.tcl); can be a list of file pathnames, separated by semicolons (Windows) or colons (UNIX); note that user preferences are now stored in the .modelsim file (Unix) or registry (Windows); QuestaSim will still read this environment variable but it will then save all the settings to the .modelsim file when you exit the tool

MTI_COSIM_TRACE

The MTI_COSIM_TRACE environment variable creates an *mti_trace_cosim* file containing debugging information about FLI/PLI/VPI function calls. You should set this variable to any value before invoking the simulator.

MTI_LIB_DIR

Identifies the path to all Tcl libraries installed with ModelSim.

MTI_TF_LIMIT

The MTI_TF_LIMIT environment variable limits the size of the VSOUT temp file (generated by the toolset's kernel). Set the argument of this variable to the size of k-bytes

The environment variable TMPDIR controls the location of this file, while STDOUT controls the name. The default setting is 10, and a value of 0 specifies that there is no limit. This variable does *not* control the size of the transcript file.

MTI_RELEASE_ON_SUSPEND

The MTI_RELEASE_ON_SUSPEND environment variable allows you to turn off or modify the delay for the functionality of releasing all licenses when the tool is suspended. The default setting is 10 (in seconds), which means that if you do not set this variable your licenses will be released 10 seconds after your run is suspended. If you set this environment variable with an argument of 0 (zero) the tool will not release the licenses after being suspended. You can change the default length of time (number of seconds) by setting this environment variable to an integer greater than 0 (zero).

MTI_USELIB_DIR

The MTI_USELIB_DIR environment variable specifies the directory into which object libraries are compiled when using the **-compile_uselibs** argument to the **vlog** command

NOMMAP

When set to 1, the NOMMAP environment variable disables memory mapping in the toolset. You should only use this variable when running on Linux 7.1 because it will decrease the speed with which the tool reads files.

PLIOBJ\$

The toolset uses the PLIOBJ\$ environment variable to search for PLI object files for loading. The argument consists of a space-separated list of file or path names

STDOUT

The argument to the STDOUT environment variable specifies a filename to which the simulator saves the VSOUT temp file information. Typically this information is deleted when the simulator exits. The location for this file is set with the TMPDIR variable, which allows you to find and delete the file in the event of a crash, because an unnamed VSOUT file is not deleted after a crash.

TCL_LIBRARY

Identifies the pathname of the Tcl library; set by ModelSim to the same pathname as MODEL_TECH_TCL; must point to libraries supplied by Mentor Graphics.

TK_LIBRARY

Identifies the pathname of the Tk library; set by ModelSim to the same pathname as MODEL_TECH_TCL; must point to libraries supplied by Mentor Graphics.

TMP

(Windows environments) The TMP environment variable specifies the path to a tempnam() generated file (VSOUT) containing all stdout from the simulation kernel.

TMPDIR

(UNIX environments) The TMPDIR environment variable specifies the path to a tempnam() generated file (VSOUT) containing all stdout from the simulation kernel.

VSIM_LIBRARY

Identifies the pathname of the Tcl files that are used by ModelSim; set by ModelSim to the same pathname as MODEL_TECH_TCL; must point to libraries supplied by Mentor Graphics.

Creating Environment Variables in Windows

In addition to the predefined variables shown above, you can define your own environment variables. This example shows a user-defined library path variable that can be referenced by the vmap command to add library mapping to the *modelsim.ini* file.

1. From your desktop, right-click your **My Computer** icon and select **Properties**
2. In the System Properties dialog box, select the Advanced tab

3. Click Environment Variables
4. In the Environment Variables dialog box and User variables for <user> pane, select New:
5. In the New User Variable dialog box, add the new variable with this data


```
Variable name: MY_PATH
Variable value:\temp\work
```
6. OK (New User Variable, Environment Variable, and System Properties dialog boxes)

Library Mapping with Environment Variables

Once the **MY_PATH** variable is set, you can use it with the **vmap** command to add library mappings to the current *modelsim.ini* file.

Table A-1. Add Library Mappings to modelsim.ini File

Prompt Type	Command	Result added to <i>modelsim.ini</i>
DOS prompt	vmap MY_VITAL %MY_PATH%	MY_VITAL = c:\temp\work
ModelSim or vsim prompt	vmap MY_VITAL \\$MY_PATH ¹	MY_VITAL = \$MY_PATH

1. The dollar sign (\$) character is Tcl syntax that indicates a variable. The backslash (\) character is an escape character that prevents the variable from being evaluated during the execution of **vmap**.

You can easily add additional hierarchy to the path. For example,

```
vmap MORE_VITAL %MY_PATH%\more_path\and_more_path
vmap MORE_VITAL \$MY_PATH\more_path\and_more_path
```

Referencing Environment Variables

There are two ways to reference environment variables within ModelSim. Environment variables are allowed in a **FILE** variable being opened in VHDL. For example,

```
use std.textio.all;
entity test is end;
architecture only of test is
begin
  process
    FILE in_file : text is in "$ENV_VAR_NAME";
  begin
    wait;
  end process;
end;
```

Environment variables may also be referenced from the ModelSim command line or in macros using the Tcl **env** array mechanism:

```
echo "$env(ENV_VAR_NAME)"
```

Note

Environment variable expansion *does not* occur in files that are referenced via the **-f** argument to **vcom**, **vlog**, or **vsim**.

Removing Temp Files (VSOUT)

The **VSOUT** temp file is the communication mechanism between the simulator kernel and the Graphical User Interface. In normal circumstances the file is deleted when the simulator exits. If the tool crashes, however, the temp file must be deleted manually. Specifying the location of the temp file with **TMPDIR** (above) will help you locate and remove the file.

Simulator Control Variables

Initialization (INI) files contain control variables that specify reference library paths and compiler and simulator settings. The default initialization file is *modelsim.ini* and is located in your install directory.



Tip: When a design is loaded, you can use the **where** command to display which *modelsim.ini* or ModelSim Project File (.mpf) file is in use.

To set these variables, edit the initialization file directly with any text editor. The syntax for variables in the file is:

<variable> = <value>

Comments within the file are preceded with a semicolon (;).

The following sections contain information about the variables:

- [Library Path Variables](#)
- [VHDL Compiler Control Variables](#)
- [Verilog Compiler Control Variables](#)
- [Simulation Control Variables](#)

Library Path Variables

You can find these variables under the heading [Library] in the *modelsim.ini* file.

ieee

This variable sets the path to the library containing IEEE and Synopsys arithmetic packages.

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./ieee

modelsim_lib

This variable sets the path to the library containing Model Technology VHDL utilities such as Signal Spy.

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./modelsim_lib

std

This variable sets the path to the VHDL STD library.

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./std

std_developerskit

This variable sets the path to the libraries for MGC standard developer's kit.

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./std_developerskit

synopsys

This variable sets the path to the accelerated arithmetic packages.

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./synopsis

sv_std

This variable sets the path to the SystemVerilog STD library.

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./sv_std

verilog

This variable sets the path to the library containing VHDL/Verilog type mappings.

- **Value Range:** any valid path; may include environment variables

- **Default:** \$MODEL_TECH/./verilog

vital2000

This variable sets the path to the VITAL 2000 library

- **Value Range:** any valid path; may include environment variables
- **Default:** \$MODEL_TECH/./vital2000

others

This variable points to another *modelsim.ini* file whose library path variables will also be read; the pathname must include "modelsim.ini"; only one others variable can be specified in any *modelsim.ini* file.

- **Value Range:** any valid path; may include environment variables
- **Default:** none

VHDL Compiler Control Variables

You can find these variables under the heading [vcom].

AmsStandard

Specifies whether vcom adds the declaration of REAL_VECTOR to the STANDARD package. This is useful for designers using VHDL-AMS to test digital parts of their model.

- **Value Range:** 0, 1
- **Default:** off (0)

BindAtCompile

This variable instructs the tool to perform VHDL default binding at compile time rather than load time. Refer to [Default Binding](#) for more information.

- **Value Range:** 0, 1
- **Default:** off (0)

CheckSynthesis

This variable turns on limited synthesis rule compliance checking, which includes checking only signals used (read) by a process and understanding only combinational logic, not clocked logic.

- **Value Range:** 0, 1

- **Default:** off (0)

As an alternative to setting this variable to 0 — if you are not using 'H' and 'L' values and don't want the additional UDP rows that are difficult to cover — you can either:

- change your VHDL expressions of the form (a = '1') to (to_x01(a) = '1') or to std_match(a,'1'). These functions are recognized and used to simplify the UDP tables.
- use the -nocoverrespecthandl argument to vcom.

DisableOpt

This variable disables all optimizations enacted by the compiler, similar to using the **-O0** argument to [vcom](#).

- **Value Range:** 0, 1
- **Default:** off (0)

Explicit

This variable enables the resolving of ambiguous function overloading in favor of the "explicit" function declaration (not the one automatically created by the compiler for each type declaration).

- **Value Range:** 0, 1
- **Default:** on (1)

IgnoreVitalErrors

This variable instructs the tool to ignore VITAL compliance checking errors.

- **Value Range:** 0, 1
- **Default:** off (0)

NoCaseStaticError

This variable changes case statement static errors to warnings.

- **Value Range:** 0, 1
- **Default:** off (0)

NoDebug

This variable disables turns off inclusion of debugging info within design units.

- **Value Range:** 0, 1

- **Default:** off (0)

NoIndexCheck

This variable disables run time index checks.

- **Value Range:** 0, 1
- **Default:** off (0)

NoOthersStaticError

This variable disables errors caused by aggregates that are not locally static.

- **Value Range:** 0, 1
- **Default:** off (0)

NoRangeCheck

This variable disables run time range checking.

- **Value Range:** 0, 1
- **Default:** off (0)

NoVital

This variable disables acceleration of the VITAL packages.

- **Value Range:** 0, 1
- **Default:** off (0)

NoVitalCheck

This variable disables VITAL compliance checking.

- **Value Range:** 0, 1
- **Default:** off (0)

Optimize_1164

This variable disables optimization for the IEEE std_logic_1164 package.

- **Value Range:** 0, 1
- **Default:** on (1)

PedanticErrors

This variable overrides NoCaseStaticError and NoOthersStaticError

- **Value Range:** 0, 1
- **Default:** off(0)

Quiet

This variable disables the “loading...” messages.

- **Value Range:** 0, 1
- **Default:** off (0)

RequireConfigForAllDefaultBinding

This variable instructs the compiler not to generate a default binding during compilation.

- **Value Range:** 0, 1
- **Default:** off (0)

Show_Lint

This variable enables lint-style checking.

- **Value Range:** 0, 1
- **Default:** off (0)

Show_source

This variable shows source line containing error.

- **Value Range:** 0, 1
- **Default:** off (0)

Show_VitalChecksOpt

This variable enables VITAL optimization warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_VitalChecksWarnings

This variable enables VITAL compliance-check warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning1

This variable enables unbound-component warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning2

This variable enables process-without-a-wait-statement warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning3

This variable enables null-range warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning4

This variable enables no-space-in-time-literal warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning5

This variable enables multiple-drivers-on-unresolved-signal warnings.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning9

This variable enables warnings about signal value dependency at elaboration.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_Warning10

This variable enables warnings about VHDL-1993 constructs in VHDL-1987 code.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_WarnLocallyStaticError

This variable enables warnings about locally static errors deferred until run time.

- **Value Range:** 0, 1
- **Default:** on (1)

VHDL93

This variable enables support for VHDL-1987, where “1” enables support for VHDL-1993 and “2” enables support for VHDL-2002.

- **Value Range:** 0, 1, 2
- **Default:** 2

Verilog Compiler Control Variables

You can find these variables under the heading [vlog] in the *modelsim.ini* file.

DisableOpt

This variable, when on, disables all optimizations enacted by the compiler; same as the **-O0** argument to **vlog**.

- **Value Range:** 0, 1
- **Default:** off (0)

GenerateLoopterationMax

This variable specifies the maximum number of iterations permitted for a generate loop; restricting this permits the implementation to recognize infinite generate loops.

- **Value Range:** natural integer (≥ 0)
- **Default:** 100000

GenerateRecursionDepthMax

This variable specifies the maximum depth permitted for a recursive generate instantiation; restricting this permits the implementation to recognize infinite recursions.

- **Value Range:** natural integer (≥ 0)
- **Default:** 200

Hazard

This variable turns on Verilog hazard checking (order-dependent accessing of global variables).

- **Value Range:** 0, 1
- **Default:** off (0)

Incremental

This variable activates the incremental compilation of modules.

- **Value Range:** 0, 1
- **Default:** off (0)

LibrarySearchPath

This variable defines a space separated list of path entries which describe where to find a resource library containing a precompiled package. The behavior of this variable is identical to using the -L argument with the [vlog](#) command.

- **Value Range:** any library path
- **Default:** \$MODEL_TECH/./avm

MultiFileCompilationUnit

Controls how Verilog files are compiled into compilation units. Valid arguments:

- 1 -- (On) Compiles all files on command line into a single compilation unit. This behavior is called Multi File Compilation Unit (MFCU) mode; same as -mfcu argument to
- 0 -- (Off) Default value. Compiles each file in the compilation command line into separate compilation units. This behavior is called Single File Compilation Unit (SFCU) mode.

Refer to [SystemVerilog Multi-File Compilation Issues](#) for details on the implications of these settings.

Note



The default behavior in versions prior to 6.1 was opposite of the current default behavior.

NoDebug

This variable, when on, disables the inclusion of debugging info within design units.

- **Value Range:** 0, 1
- **Default:** off (0)

Quiet

This variable turns off "loading..." messages.

- **Value Range:** 0, 1
- **Default:** off (0)

Show_BadOptionWarning

This variable instructs the tool to generate a warning whenever an unknown plus argument is encountered.

- **Value Range:** 0, 1
- **Default:** off (0)

Show_Lint

This variable instructs the tool to display lint warning messages.

- **Value Range:** 0, 1
- **Default:** off (0)

Show_WarnMatchCadence

This variable instructs the tool to display warning messages about non-LRM compliance in order to match Cadence behavior.

- **Value Range:** 0, 1
- **Default:** on (1)

Show_source

This variable instructs the tool to show any source line containing an error.

- **Value Range:** 0, 1
- **Default:** off (0)

Svlog

This variable instructs the vlog compiler to compile in SystemVerilog mode. This variable does not exist in the default *modelsim.ini* file, but is added when you select Use SystemVerilog in the Compile Options dialog box > Verilog and SystemVerilog tab.

- **Value Range:** 0, 1
- **Default:** off (0)

vlog95compat

This variable instructs the tool to disable SystemVerilog and Verilog 2001 support, making the compiler compatible with IEEE Std 1364-1995.

- **Value Range:** 0, 1
- **Default:** off (0)

DpiOutOfTheBlue

This variable enables DPI “out of the blue” calls from C functions (must not be declared as import tasks or functions). For more information, see [Making Verilog Function Calls from non-DPI C Models](#).

- **Value Range:** 0, 1
- **Default:** 0 - Support for “out of the blue” DPI calls is disabled.

Simulation Control Variables

You can find these variables under the heading [vsim] in the *modelsim.ini* file.

AssertFile

This variable specifies an alternative file for storing VHDLassertion messages. By default, assertion messages are output to the file specified by the [TranscriptFile](#) variable in the *modelsim.ini* file (refer to “[Creating a Transcript File](#)”). If the AssertFile variable is specified, all assertion messages will be stored in the specified file, not in the transcript.

- **Value Range:** any valid filename
- **Default filename:** *assert.log*

AssertionDebug

This variable specifies that SVA assertion passes are reported.

- **Value Range:** 0, 1
- **Default:** off (0)

BreakOnAssertion

This variable defines the severity of VHDL assertions that cause a simulation break. It also controls any messages in the source code that use *assertion_failure_**. For example, since most runtime messages use some form of *assertion_failure_**, any runtime error will cause the simulation to break if the user sets BreakOnAssertion to 2.

- **Value Range:** 0 (note), 1 (warning), 2 (error), 3 (failure), 4 (fatal)
- **Default:** 3 (failure)

CheckPlusargs

This variable defines the simulator's behavior when encountering unrecognized plusargs.

- **Value Range:** 0 (ignores), 1 (issues warning, simulates while ignoring), 2 (issues error, exits)
- **Default:** 0 (ignores)

CheckpointCompressMode

This variable specifies that checkpoint files are written in compressed format

- **Value Range:** 0, 1
- **Default:** on (1)

CommandHistory

This variable specifies the name of a file in which to store the Main window command history.

- **Value Range:** any valid filename
- **Default:** commented out (;

ConcurrentFileLimit

This variable controls the number of VHDL files open concurrently. This number should be less than the current limit setting for max file descriptors.

- **Value Range:** any positive integer or 0 (unlimited)

- **Default:** 40

DatasetSeparator

This variable specifies the dataset separator for fully-rooted contexts, for example:

```
sim:/top
```

The argument to DatasetSeparator must not be the same character as [PathSeparator](#).

- **Value Range:** any character except those with special meaning, such as \, {, }, etc.
- **Default:** :

DefaultForceKind

This variable defines the kind of force used when not otherwise specified.

- **Value Range:** freeze, drive, or deposit
- **Default:** drive, for resolved signals; freeze, for unresolved signals

DefaultRadix

This variable specifies a numeric radix may be specified as a name or number. For example, you can specify binary as “binary” or “2” or octal as “octal” or “8”.

- **Value Range:** symbolic, binary, octal, decimal, unsigned, hexadecimal, ascii
- **Default:** symbolic

DefaultRestartOptions

This variable sets the default behavior for the restart command

- **Value Range:** one or more of: -force, -noassertions, -nobreakpoint, -nofcovers, -nolist, -nolog, -nowave
- **Default:** commented out (;

DelayFileOpen

This variable instructs the tool to open VHDL87 files on first read or write, else open files when elaborated.

- **Value Range:** 0, 1
- **Default:** off (0)

DumpportsCollapse

This variable collapses vectors (VCD id entries) in dumpports output.

- **Value Range:** 0, 1
- **Default:** collapsed (1)

ErrorFile

This variable specifies an alternative file for storing error messages. By default, error messages are output to the file specified by the [TranscriptFile](#) variable in the *modelsim.ini* file (refer to “[Creating a Transcript File](#)”). If the ErrorFile variable is specified, all error messages will be stored in the specified file, not in the transcript.

- **Value Range:** any valid filename
- **Default filename:** *error.log*

ExpandedTimeDisplayRatio

This variable controls the fixed ratio between the horizontal size of a event (or delta) time step and the horizontal size that represents the simulator resolution time in an unexpanded section of the Waveforms pane.

- **Value Range:**
- **Default:** 10

GenerateFormat

This variable controls the format of a generate statement label. Do not enclose the argument in quotation marks.

- **Value Range:** Any non-quoted string containing at a minimum a %s followed by a %d
- **Default:** %s__%d

GenerousIdentifierParsing

Controls parsing of identifiers input to the simulator. If this variable is on (value = 1), either VHDL extended identifiers or Verilog escaped identifier syntax may be used for objects of either language kind. This provides backward compatibility with older .do files, which often contain pure VHDL extended identifier syntax, even for escaped identifiers in Verilog design regions.

- **Value Range:** 0, 1
- **Default:** 1 (on)

GlobalSharedObjectsList

This variable instruct the tool to load the specified PLI/FLI shared objects with global symbol visibility.

- **Value Range:** comma separated list of filenames
- **Default:** commented out (;

IgnoreError

This variable instructs the tool to disable runtime error messages.

- **Value Range:** 0,1
- **Default:** off (0)

IgnoreFailure

This variable instructs the tool to disable runtime failure messages.

- **Value Range:** 0,1
- **Default:** off (0)

IgnoreNote

This variable instructs the tool to disable runtime note messages.

- **Value Range:** 0,1
- **Default:** off (0)

IgnoreWarning

This variable instructs the tool to disable runtime warning messages.

- **Value Range:** 0,1
- **Default:** off (0)

IterationLimit

This variable specifies a limit on simulation kernel iterations allowed without advancing time.

- **Value Range:** positive integer
- **Default:** 5000

License

This variable controls the license file search.

- **Value Range:** one or more of the following <license_option>, separated by spaces if using multiple entries. Refer also to the [vsim <license_option>](#).

Table A-2. License Variable: License Options

license_option	Description
lnlonly	only use msimhdlsim and hdlsim
mixedonly	exclude single language licenses
nomgc	exclude MGC licenses
nolnl	exclude language neutral licenses
nomix	exclude msimhdlmix and hdlmix
nomti	exclude MTI licenses
noqueue	do not wait in license queue if no licenses are available
noslvhdl	exclude qhsimvh and vsim
noslvlog	exclude qhsimvl and vsimvlog
plus	only use PLUS license
vlog	only use VLOG license
vhdl	only use VHDL license

- **Default:** search all licenses

MaxReportRhsCrossProducts

This variable specifies a limit on number of Cross (bin) products which are listed against a Cross when a XML or UCDB report is generated. The warning reports when any instance of unusually high number of Cross (bin) product and truncation of Cross (bin) product list for a Cross.

- **Value Range:** positive integer
- **Default:** 1000

.MaxValueLen

This variable controls the length, in characters, of all values in the GUI.

You can set this variable interactively in the GUI; refer to [Setting Simulator Control Variables With The GUI](#).

- **Value Range:** 0 or positive integer, where zero (0) sets means the length is unlimited.
- **Default:** 30000

MessageFormat

This variable defines the format of VHDL assertion messages as well as normal error messages.

- **Value Range:**

Table A-3. MessageFormat Variable: Accepted Values

Variable	Description
%S	severity level
%R	report message
%T	time of assertion
%D	delta
%I	instance or region pathname (if available)
%i	instance pathname with process
%O	process name
%K	kind of object path points to; returns Instance, Signal, Process, or Unknown
%P	instance or region path without leaf process
%F	file
%L	line number of assertion, or if from subprogram, line from which call is made
%%	print '%' character

- Default: "*** %S: %R\n Time: %T Iteration: %D%I\n"

MessageFormatBreak

This variable defines the format of messages for VHDL assertions that trigger a breakpoint.

- **Value Range:** Refer to [Table A-3](#)
- **Default:** "*** %S: %R\n Time: %T Iteration: %D %K: %i File: %F\n"

MessageFormatBreakLine

This variable defines the format of messages for VHDL assertions that trigger a breakpoint.

- **Value Range:** Refer to [Table A-3](#)

- **Default:** "*** %S: %R\n Time: %T Iteration: %D %K: %i File: %F Line: %L\n"

MessageFormatError

This variable defines the format of all error messages.

If undefined, MessageFormat is used unless the error causes a breakpoint in which case MessageFormatBreak is used.

- **Value Range:** Refer to [Table A-3](#)
- **Default:** "*** %S: %R\n Time: %T Iteration: %D %K: %i File: %F\n"

MessageFormatFail

This variable defines the format of messages for VHDL Fail assertions.

If undefined, MessageFormat is used unless assertion causes a breakpoint in which case MessageFormatBreak is used

- **Value Range:** Refer to [Table A-3](#)
- **Default:** "*** %S: %R\n Time: %T Iteration: %D %K: %i File: %F\n"

MessageFormatFatal

This variable defines the format of messages for VHDL Fatal assertions

If undefined, MessageFormat is used unless assertion causes a breakpoint in which case MessageFormatBreak is used.

- **Value Range:** Refer to [Table A-3](#)
- **Default:** "*** %S: %R\n Time: %T Iteration: %D %K: %i File: %F\n"

MessageFormatNote

This variable defines the format of messages for VHDL Note assertions

If undefined, MessageFormat is used unless assertion causes a breakpoint in which case MessageFormatBreak is used

- **Value Range:** Refer to [Table A-3](#)
- **Default:** "*** %S: %R\n Time: %T Iteration: %D%I\n"

MessageFormatWarning

This variable defines the format of messages for VHDL Warning assertions

If undefined, MessageFormat is used unless assertion causes a breakpoint in which case MessageFormatBreak is used

- **Value Range:** Refer to [Table A-3](#)
- **Default:** "*** %S: %R\n Time: %T Iteration: %D%D\n"

NumericStdNoWarnings

This variable disables warnings generated within the accelerated numeric_std and numeric_bit packages.

- **Value Range:** 0, 1
- **Default:** off (0)

OnFinish

This variable controls the behavior of the tool when it encounters either an assertion failure, a \$finish, in the design code.

- **Value Range:**
 - **ask** —
 - In batch mode, the simulation exits.
 - In GUI mode, a dialog box pops up and asks for user confirmation on whether to quit the simulation.
 - **stop** — Causes the simulation to stay loaded in memory. This can make some post-simulation tasks easier.
 - **exit** — The simulation exits without asking for any confirmation.
- **Default:** **ask** — Exits in batch mode; prompts user in GUI mode.

PathSeparator

This variable specifies the character used for hierarchical boundaries of HDL modules. This variable does not affect file system paths. The argument to PathSeparator must not be the same character as DatasetSeparator.

This variable is used by the vsim command.

Note



When creating a virtual bus, the PathSeparator variable must be set to either a period (.) or a forward slash (/). For more information on creating virtual buses, refer to the section “[Combining Objects into Buses](#)”.

- **Value Range:** any character except those with special meaning, such as \, {, }, etc.
- **Default:** /

PliCompatDefault

This variable specifies the VPI object model behavior within vsim.

- **Value Range:**
 - **latest** — This is equivalent to the "2005" argument. This is the default behavior if you do not specify this switch or if you specify the switch without an argument.
 - **2005** — Instructs vsim to use the object models as defined in IEEE Std 1800-2005 and IEEE Std 1364-2005. Aliases include:


```
05
1800v2005
1800V2005
SV2005
VPI_COMPATIBILITY_VERSION_1800v2005
```
 - **2001** — Instructs vsim to use the object models as defined in IEEE Std 1364-2001. When you specify this argument, SystemVerilog objects will not be accessible. Aliases include:


```
01
1364v2001
1364V2001
VL2001
VPI_COMPATIBILITY_VERSION_1364v2001
```
 - **1995** — Instructs vsim to use the object models as defined in IEEE Std 1364-1995. When you specify this argument, SystemVerilog objects will not be accessible. Aliases include:


```
95
1364v1995
1364V1995
VL1995
VPI_COMPATIBILITY_VERSION_1364v1995
```
- **Default: latest**

You can also control this behavior with the -plicompatdefault switch to the [vsim](#) command, where the -plicompatdefault argument will override the PliCompatDefault variable.

You should note that there are a few cases where the 2005 VPI object model is incompatible with the 2001 model, which is inherent in the specifications.

Refer to the appendix "[Verilog Interfaces to C](#)" in the User's Manual for more information.

PrintSimStats

This variable instructs the simulator to print out simulation statistics at the end of the simulation before it exits. You can set this variable interactively with the **-printsimstats** argument to the [vsim](#) command.

- **Value Range:** 0, 1
- **Default:** 0

Resolution

This variable specifies the simulator resolution. The argument must be less than or equal to the [UserTimeUnit](#) and must not contain a space between value and units, for example:

```
Resolution = 10fs
```

You can override this value with the **-t** argument to [vsim](#). You should set a smaller resolution if your delays get truncated.

- **Value Range:** fs, ps, ns, us, ms, or sec with optional prefix of 1, 10, or 100
- **Default:** ps

RunLength

This variable specifies the default simulation length in units specified by the [UserTimeUnit](#) variable.

- **Value Range:** positive integer
- **Default:** 100

ShowFunctions

This variable sets the format for Breakpoint and Fatal error messages. When set to 1 (the default value), messages will display the name of the function, task, subprogram, module, or architecture where the condition occurred, in addition to the file and line number. Set to 0 to revert messages to previous format.

- **Value Range:** 0, 1
- **Default:** 1

SignalSpyPathSeparator

This variable specifies a unique path separator for the Signal Spy functions. The argument to SignalSpyPathSeparator must not be the same character as DatasetSeparator.

- **Value Range:** any character except those with special meaning, such as \, {, }, etc.

- **Default:** /

ShutdownFile

This variable calls the [write format restart](#) command upon exit and executes the .do file created by that command. This variable should be set to the name of the file to be written, or the value "--disable-auto-save" to disable this feature. If the filename contains the pound sign character (#), then the filename will be sequenced with a number replacing the #. For example, if the file is "restart#.do", then the first time it will create the file "restart1.do" and the second time it will create "restart2.do", etc.

- **Value Range:** name of file to be written | --disable-auto-save
- **Default:** none

Startup

This variable specifies a simulation startup macro. Refer to the [do](#) command

- **Value Range:** = do <DO filename>; any valid macro (do) file
- **Default:** commented out (;

StdArithNoWarnings

This variable suppresses warnings generated within the accelerated Synopsys std_arith packages.

- **Value Range:** 0, 1
- **Default:** off (0)

ToggleCountLimit

This variable limits the toggle coverage count for a toggle node. After the limit is reached, further activity on the node will be ignored for toggle coverage. All possible transition edges must reach this count for the limit to take effect. For example, if you are collecting toggle data on 0->1 and 1->0 transitions, both transition counts must reach the limit. If you are collecting "full" data on 6 edge transitions, all 6 must reach the limit. If the limit is set to zero, then it is treated as unlimited.

- **Value Range:** 0 or positive integer (up to max positive value of 32-bit signed integer)
- **Default:** 1

ToggleMaxIntValues

This variable sets the maximum number of VHDL integer values to record with toggle coverage.

- **Value Range:** positive integer
- **Default:** 100

ToggleVlogIntegers

This variable controls toggle coverage for Verilog integer types (except for enumeration types).

- **Value Range:** 0, 1
- **Default:** off (0)

ToggleWidthLimit

This variable limits the width of signals that are automatically added to toggle coverage with the `+cover t` argument for [vcom](#) or [vlog](#). The limit applies to Verilog registers and VHDL arrays. A value of 0 is taken as unlimited.

- **Value Range:** 0 or positive integer (up to max positive value of 32-bit signed integer)
- **Default:** 128

TranscriptFile

This variable specifies a file for saving command transcript. You can specify environment variables in the pathname.

- **Value Range:** any valid filename
- **Default:** transcript

UI_VVMode

UnbufferedOutput

This variable controls VHDL and Verilog files open for write.

- **Value Range:** 0 (buffered), 1 (unbuffered)
- **Default:** 0

UserTimeUnit

This variable specifies the multiplier for simulation time units and the default time units for commands such as [force](#) and [run](#). Generally, you should set this variable to default, in which case it takes the value of the Resolution variable.

Note



The value you specify for UserTimeUnit does not affect the display in the Wave window. To change the time units for the X-axis in the Wave window, choose Wave > Wave Preferences > Grid & Timeline from the main menu and specify a value for Grid Period.

- **Value Range:** fs, ps, ns, us, ms, sec, or default
- **Default:** default

Veriuser

This variable specifies a list of dynamically loadable objects for Verilog PLI/VPI applications.

- **Value Range:** one or more valid shared object names
- **Default:** commented out (;

WarnConstantChange

This variable controls whether a warning is issued when the change command changes the value of a VHDL constant or generic.

- **Value Range:** 0, 1
- **Default:** on (1)

WaveSignalNameWidth

This variable controls the number of visible hierarchical regions of a signal name shown in the **Wave Window**.

- **Value Range:** 0 (display full name), positive integer (display corresponding level of hierarchy)
- **Default:** 0

WLFCacheSize

This variable sets the number of megabytes for the WLF reader cache. WLF reader caching caches blocks of the WLF file to reduce redundant file I/O.

- **Value Range:** positive integer
- **Default:** 0

WLFCollapseMode

This variable controls when the WLF file records values.

- **Value Range:** 0 (every change of logged object), 1 (end of each delta step), 2 (end of simulator time step)
- **Default:** 1

WLFCompress

This variable enables WLF file compression.

- **Value Range:** 0, 1
- **Default:** 1 (on)

WLFDelOnQuit

This variable specifies whether a WLF file should be deleted when the simulation ends.

- **Value Range:** 0, 1
- **Default:** 0 (do not delete)

WLFFilename

This variable specifies the default WLF file name.

- **Value Range:** filename
- **Default:** vsim.wlf

WLFOptimize

This variable specifies whether the viewing of waveforms is optimized.

- **Value Range:** 0, 1
- **Default:** 1 (on)

WLFSaveAllRegions

This variable specifies the regions to save in the WLF file.

- **Value Range:** 0 (only regions containing logged signals), 1 (all design hierarchy)
- **Default:** 0

WLFSimCacheSize

This variable sets the number of megabytes for the WLF reader cache for the current simulation dataset only. The default value is zero. WLF reader caching caches blocks of the WLF file to reduce redundant file I/O. This makes it easier to set different sizes for the WLF reader cache

used during simulation and those used during post-simulation debug. If neither the `-wlfsimcachesize` option for `vsim` nor the `WLFSimCacheSize` is specified, the `WLFCacheSize` setting will be used.

- **Value Range:** positive integer
- **Default:** 0

WLFSizeLimit

This variable limits the WLF file by size (as closely as possible) to the specified number of megabytes; if both size and time limits are specified the most restrictive is used. (See [Limiting the WLF File Size](#)).

- **Value Range:** any positive integer in units of MB or 0 (unlimited)
- **Default:** 0 (unlimited)

WLFTimeLimit

This variable limits the WLF file by time (as closely as possible) to the specified amount of time. If both time and size limits are specified the most restrictive is used. (See [Limiting the WLF File Size](#)).

- **Value Range:** any positive integer or 0 (unlimited)
- **Default:** 0 (unlimited)

WLFUseThreads

This variable specifies whether the logging of information to the WLF file is performed using multithreading.

This behavior is on by default on Solaris and Linux platforms where there are more than one processor on the system. If there is only one processor available, or you are running on a Windows system, this behavior is off by default.

When this behavior is enabled, the logging of information is performed on the secondary processor while the simulation and other tasks are performed on the primary processor.

- **Value Range:** 0, 1
- **Default:** 1 (on) — Only for Linux or Solaris systems with more than one processor.


Setting Simulator Control Variables With The GUI

Changes made in the **Runtime Options** dialog are written to the active `modelsim.ini` file, if it is writable, and affect the current session as well as all future sessions. If the file is read-only, the

changes affect only the current session. The **Runtime Options** dialog is accessible by selecting **Simulate > Runtime Options** in the Main window. The dialog contains three tabs - Defaults, Assertions, and WLF Files.

The Defaults tab includes these options:

Figure A-1. Runtime Options Dialog: Defaults Tab

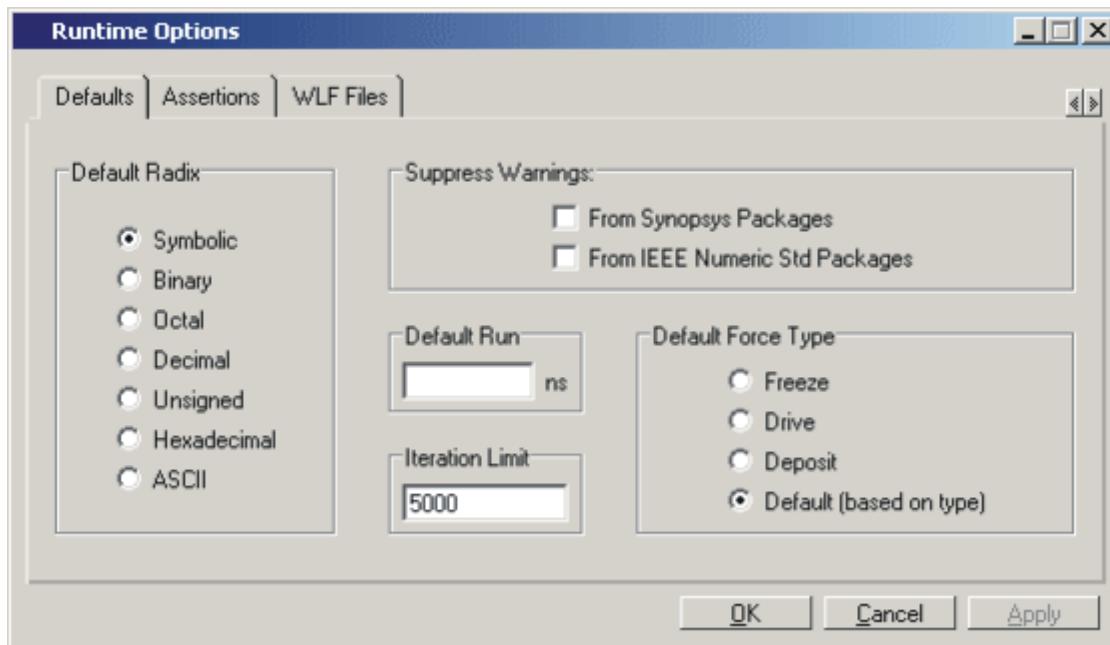


- **Default Radix** — Sets the default radix for the current simulation run. You can also use the [radix](#) command to set the same temporary default. The chosen radix is used for all commands ([force](#), [examine](#), [change](#) are examples) and for displayed values in the Objects, Locals, Dataflow, List, and Wave windows. The corresponding *modelsim.ini* variable is [DefaultRadix](#).
- **Suppress Warnings**
 - Selecting **From Synopsys Packages** suppresses warnings generated within the accelerated Synopsys std_arith packages. The corresponding *modelsim.ini* variable is [StdArithNoWarnings](#).
 - Selecting **From IEEE Numeric Std Packages** suppresses warnings generated within the accelerated numeric_std and numeric_bit packages. The corresponding *modelsim.ini* variable is [NumericStdNoWarnings](#).
- **Default Run** — Sets the default run length for the current simulation. The corresponding *modelsim.ini* variable is [RunLength](#).
- **Iteration Limit** — Sets a limit on the number of deltas within the same simulation time unit to prevent infinite looping. The corresponding *modelsim.ini* variable is [IterationLimit](#).

- **Default Force Type** — Selects the default force type for the current simulation. The corresponding *modelsim.ini* variable is [DefaultForceKind](#).


The Assertions tab includes these options:

Figure A-2. Runtime Options Dialog Box: Assertions Tab

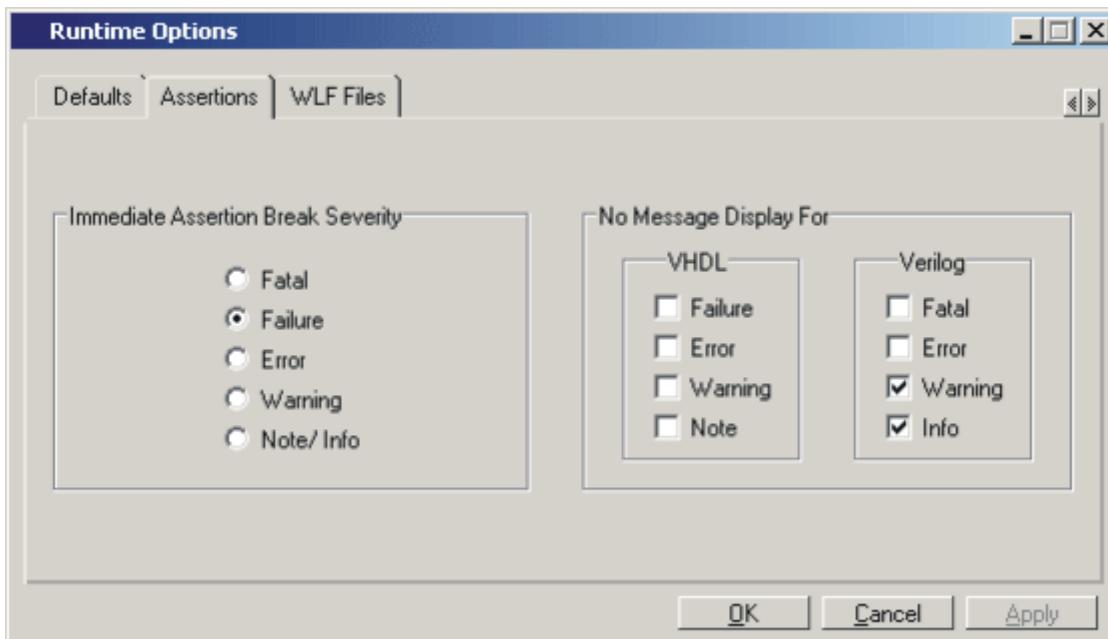

- **No Message Display For -VHDL** — Selects the VHDL assertion severity for which messages will not be displayed (even if break on assertion is set for that severity). Multiple selections are possible. The corresponding *modelsim.ini* variables are [IgnoreFailure](#), [IgnoreError](#), [IgnoreWarning](#), and [IgnoreNote](#).

The WLF Files tab includes these options:

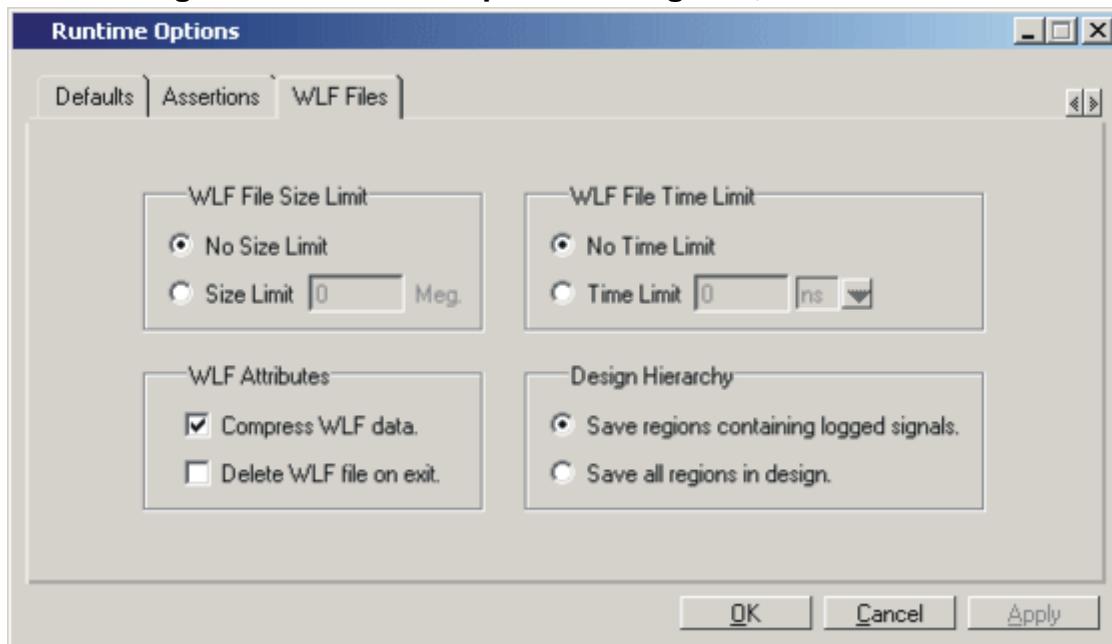Figure A-3. Runtime Options Dialog Box, WLF Files Tab

- **WLF File Size Limit** — Limits the WLF file by size (as closely as possible) to the specified number of megabytes. If both size and time limits are specified, the most restrictive is used. Setting it to 0 results in no limit. The corresponding *modelsim.ini* variable is [WLFSIZELIMIT](#).
- **WLF File Time Limit** — Limits the WLF file by size (as closely as possible) to the specified amount of time. If both time and size limits are specified, the most restrictive is used. Setting it to 0 results in no limit. The corresponding *modelsim.ini* variable is [WLFTIMELIMIT](#).
- **WLF Attributes** — Specifies whether to compress WLF files and whether to delete the WLF file when the simulation ends. You would typically only disable compression for troubleshooting purposes. The corresponding *modelsim.ini* variables are [WLFCOMPRESS](#) for compression and [WLFDLETEONQUIT](#) for WLF file deletion.
- **Design Hierarchy** — Specifies whether to save all design hierarchy in the WLF file or only regions containing logged signals. The corresponding *modelsim.ini* variable is [WLFSAVEALLREGIONS](#).

Message System Variables

The message system variables (located under the [msg_system] heading) help you identify and troubleshoot problems while using the application. See also [Message System](#).

error

This variable changes the severity of the listed message numbers to "error". Refer to [Changing Message Severity Level](#) for more information.

- **Value Range:** list of message numbers
- **Default:** none

fatal

This variable changes the severity of the listed message numbers to "fatal". Refer to [Changing Message Severity Level](#) for more information.

- **Value Range:** list of message numbers
- **Default:** none

note

This variable changes the severity of the listed message numbers to "note". Refer to [Changing Message Severity Level](#) for more information

- **Value Range:** list of message numbers
- **Default:** none

suppress

This variable suppresses the listed message numbers. Refer to [Changing Message Severity Level](#) for more information

- **Value Range:** list of message numbers
- **Default:** none

warning

This variable changes the severity of the listed message numbers to "warning". Refer to [Changing Message Severity Level](#) for more information

- **Value Range:** list of message numbers
- **Default:** none

msgmode

This variable controls where the simulator outputs elaboration and runtime messages. Refer to the section "[Message Viewer Tab](#)" for more information.

- Value Range: tran (transcript only), wlf (wlf file only), both
- Default: both

displaymsgmode

This variable controls where the simulator outputs system task messages. Refer to the section “[Message Viewer Tab](#)” for more information and [vsim](#) for information about -displaymsgmode. The display system tasks displayed with this functionality include: \$display, \$strobe, \$monitor, \$fwrite as well as the analogous file I/O tasks that write to STDOUT, such as \$fwrite or \$fdisplay.

- Value Range: tran (transcript only), wlf (wlf file only), both
- Default: tran

Commonly Used INI Variables

Several of the more commonly used *modelsim.ini* variables are further explained below.

Common Environment Variables

You can use environment variables in your initialization files. Use a dollar sign (\$) before the environment variable name. For example:

```
[Library]
work = ${HOME}/work_lib
test_lib = ./${TESTNUM}/work
...
[vsim]
IgnoreNote = ${IGNORE_ASSERTS}
IgnoreWarning = ${IGNORE_ASSERTS}
IgnoreError = 0
IgnoreFailure = 0
```

There is one environment variable, MODEL_TECH, that you cannot — and should not — set. MODEL_TECH is a special variable set by Model Technology software. Its value is the name of the directory from which the VCOM or VLOG compilers or VSIM simulator was invoked. MODEL_TECH is used by the other Model Technology tools to find the libraries.

Hierarchical Library Mapping

By adding an "others" clause to your *modelsim.ini* file, you can have a hierarchy of library mappings. If the ModelSim tools don't find a mapping in the *modelsim.ini* file, then they will search only the library section of the initialization file specified by the "others" clause. For example:

```
[Library]
asic_lib = /cae/asic_lib
work = my_work
others = /install_dir/modeltech/modelsim.ini
```

Since the file referred to by the "others" clause may itself contain an "others" clause, you can use this feature to chain a set of hierarchical INI files for library mappings.

Creating a Transcript File

A feature in the system initialization file allows you to keep a record of everything that occurs in the transcript: error messages, assertions, commands, command outputs, etc. To do this, set the value for the TranscriptFile line in the *modelsim.ini* file to the name of the file in which you would like to record the ModelSim history.

```
; Save the command window contents to this file
TranscriptFile = trnscrpt
```

You can disable the creation of the transcript file by using the following ModelSim command immediately after ModelSim starts:

```
transcript file ""
```

Using a Startup File

The system initialization file allows you to specify a command or a *do* file that is to be executed after the design is loaded. For example:

```
; VSIM Startup command
Startup = do mystartup.do
```

The line shown above instructs ModelSim to execute the commands in the macro file named *mystartup.do*.

```
; VSIM Startup command
Startup = run -all
```

The line shown above instructs VSIM to run until there are no events scheduled.

See the [do](#) command for additional information on creating do files.

Turning Off Assertion Messages

You can turn off assertion messages from your VHDL code by setting a switch in the *modelsim.ini* file. This option was added because some utility packages print a huge number of warnings.

```
[vsim]
IgnoreNote = 1
IgnoreWarning = 1
IgnoreError = 1
IgnoreFailure = 1
```

Turning off Warnings from Arithmetic Packages

You can disable warnings from the Synopsys and numeric standard packages by adding the following lines to the [vsim] section of the *modelsim.ini* file.

```
[vsim]
NumericStdNoWarnings = 1
StdArithNoWarnings = 1
```

Force Command Defaults

The **force** command has **-freeze**, **-drive**, and **-deposit** options. When none of these is specified, then **-freeze** is assumed for unresolved signals and **-drive** is assumed for resolved signals. But if you prefer **-freeze** as the default for both resolved and unresolved signals, you can change the defaults in the *modelsim.ini* file.

```
[vsim]
; Default Force Kind
; The choices are freeze, drive, or deposit
DefaultForceKind = freeze
```

Restart Command Defaults

The **restart** command has **-force**, **-nobreakpoint**, **-nofcovers**, **-nolist**, **-nolog**, and **-nowave** options. You can set any of these as defaults by entering the following line in the *modelsim.ini* file:

DefaultRestartOptions = <options>

where <options> can be one or more of -force, -nobreakpoint, -nofcovers, -nolist, -nolog, and -nowave.

Example:

DefaultRestartOptions = -nolog -force

VHDL Standard

You can specify which version of the 1076 Std ModelSim follows by default using the VHDL93 variable:

```
[vcom]
; VHDL93 variable selects language version as the default.
; Default is VHDL-2002.
; Value of 0 or 1987 for VHDL-1987.
; Value of 1 or 1993 for VHDL-1993.
; Default or value of 2 or 2002 for VHDL-2002.
VHDL93 = 2002
```

Opening VHDL Files

You can delay the opening of VHDL files with an entry in the *INI* file if you wish. Normally VHDL files are opened when the file declaration is elaborated. If the **DelayFileOpen** option is enabled, then the file is not opened until the first read or write to that file.

```
[vsim]
DelayFileOpen = 1
```

Variable Precedence

Note that some variables can be set in a *.modelsim* file (Registry in Windows) or a *.ini* file. A variable set in the *.modelsim* file takes precedence over the same variable set in a *.ini* file. For example, assume you have the following line in your *modelsim.ini* file:

TranscriptFile = transcript

And assume you have the following line in your *.modelsim* file:

```
set PrefMain(file) {}
```

In this case the setting in the *.modelsim* file overrides that in the *modelsim.ini* file, and a transcript file will not be produced.

Simulator State Variables

Unlike other variables that must be explicitly set, simulator state variables return a value relative to the current simulation. Simulator state variables can be useful in commands, especially when used within ModelSim DO files (macros). The variables are referenced in commands by prefixing the name with a dollar sign (\$).

argc

This variable returns the total number of parameters passed to the current macro.

architecture

This variable returns the name of the top-level architecture currently being simulated; for a configuration or Verilog module, this variable returns an empty string.

configuration

This variable returns the name of the top-level configuration currently being simulated; returns an empty string if no configuration.

delta

This variable returns the number of the current simulator iteration.

entity

This variable returns the name of the top-level VHDL entity or Verilog module currently being simulated.

library

This variable returns the library name for the current region.

MacroNestingLevel

This variable returns the current depth of macro call nesting.

n

This variable represents a macro parameter, where n can be an integer in the range 1-9.

Now

This variable always returns the current simulation time with time units (e.g., 110,000 ns) Note: will return a comma between thousands.

now

This variable when time resolution is a unary unit (i.e., 1ns, 1ps, 1fs): returns the current simulation time without time units (e.g., 100000) when time resolution is a multiple of the unary unit (i.e., 10ns, 100ps, 10fs): returns the current simulation time with time units (e.g. 110000 ns) Note: will not return comma between thousands.

resolution

This variable returns the current simulation time resolution.

Referencing Simulator State Variables

Variable values may be referenced in simulator commands by preceding the variable name with a dollar sign (\$). For example, to use the **now** and **resolution** variables in an **echo** command type:

```
echo "The time is $now $resolution."
```

Depending on the current simulator state, this command could result in:

The time is 12390 ps 10ps.

If you do not want the dollar sign to denote a simulator variable, precede it with a "\". For example, \\$now will not be interpreted as the current simulator time.

Special Considerations for the now Variable

For the [when](#) command, special processing is performed on comparisons involving the **now** variable. If you specify "when {\$now=100}...", the simulator will stop at time 100 regardless of the multiplier applied to the time resolution.

You must use 64-bit time operators if the time value of **now** will exceed 2147483647 (the limit of 32-bit numbers). For example:

```
if { [gtTime $now 2us] } {  
    .  
    .  
}
```

See [Simulator Tcl Time Commands](#) for details on 64-bit time operators.

Appendix B

Location Mapping

Pathnames to source files are recorded in libraries by storing the working directory from which the compile is invoked and the pathname to the file as specified in the invocation of the compiler. The pathname may be either a complete pathname or a relative pathname.

Referencing Source Files with Location Maps

ModelSim tools that reference source files from the library locate a source file as follows:

- If the pathname stored in the library is complete, then this is the path used to reference the file.
- If the pathname is relative, then the tool looks for the file relative to the current working directory. If this file does not exist, then the path relative to the working directory stored in the library is used.

This method of referencing source files generally works fine if the libraries are created and used on a single system. However, when multiple systems access a library across a network, the physical pathnames are not always the same and the source file reference rules do not always work.

Using Location Mapping

Location maps are used to replace prefixes of physical pathnames in the library with environment variables. The location map defines a mapping between physical pathname prefixes and environment variables.

ModelSim tools open the location map file on invocation if the [MGC_LOCATION_MAP](#) environment variable is set. If MGC_LOCATION_MAP is not set, ModelSim will look for a file named "*mgc_location_map*" in the following locations, in order:

- the current directory
- your home directory
- the directory containing the ModelSim binaries
- the ModelSim installation directory

Use these two steps to map your files:

1. Set the environment variable MGC_LOCATION_MAP to the path of your location map file.
2. Specify the mappings from physical pathnames to logical pathnames:

```
$SRC  
/home/vhdl/src  
/usr/vhdl/src  
  
$IEEE  
/usr/modeltech/ieee
```

Pathname Syntax

The logical pathnames must begin with \$ and the physical pathnames must begin with /. The logical pathname is followed by one or more equivalent physical pathnames. Physical pathnames are equivalent if they refer to the same physical directory (they just have different pathnames on different systems).

How Location Mapping Works

When a pathname is stored, an attempt is made to map the physical pathname to a path relative to a logical pathname. This is done by searching the location map file for the first physical pathname that is a prefix to the pathname in question. The logical pathname is then substituted for the prefix. For example, "/usr/vhdl/src/test.vhd" is mapped to "\$SRC/test.vhd". If a mapping can be made to a logical pathname, then this is the pathname that is saved. The path to a source file entry for a design unit in a library is a good example of a typical mapping.

For mapping from a logical pathname back to the physical pathname, ModelSim expects an environment variable to be set for each logical pathname (with the same name). ModelSim reads the location map file when a tool is invoked. If the environment variables corresponding to logical pathnames have not been set in your shell, ModelSim sets the variables to the first physical pathname following the logical pathname in the location map. For example, if you don't set the SRC environment variable, ModelSim will automatically set it to "/home/vhdl/src".

Mapping with TCL Variables

Two Tcl variables may also be used to specify alternative source-file paths; SourceDir and SourceMap. You would define these variables in a *modelsim.tcl* file. See the [The modelsim.tcl File](#) for details.

Appendix C

Error and Warning Messages

Message System

The ModelSim message system helps you identify and troubleshoot problems while using the application. The messages display in a standard format in the Transcript pane. Accordingly, you can also access them from a saved transcript file (see [Saving the Transcript File](#) for more details).

Message Format

The format for the messages is:

```
** <SEVERITY LEVEL>: ( [ <Tool>[ -<Group> ] ]-<MsgNum> ) <Message>
```

- **SEVERITY LEVEL** — may be one of the following:

Table C-1. Severity Level Types

severity level	meaning
Note	This is an informational message.
Warning	There may be a problem that will affect the accuracy of your results.
Error	The tool cannot complete the operation.
Fatal	The tool cannot complete execution.

- **Tool** — indicates which ModelSim tool was being executed when the message was generated. For example tool could be vcom, vdel, vsim, etc.
- **Group** — indicates the topic to which the problem is related. For example group could be FLI, PLI, VCD, etc.

Example

```
# ** Error: (vsim-PLI-3071) ./src/19/testfile(77): $fdumplimit : Too few arguments.
```

Getting More Information

Each message is identified by a unique MsgNum id. You can access additional information about a message using the unique id and the **verror** command. For example:

```
% verror 3071
Message # 3071:
Not enough arguments are being passed to the specified system task or
function.
```

Changing Message Severity Level

You can suppress or change the severity of notes, warnings, and errors that come from **vcom**, **vlog**, and **vsim**. You cannot change the severity of or suppress Fatal or Internal messages.

There are three ways to modify the severity of or suppress notes, warnings, and errors:

- Use the -error, -fatal, -note, -suppress, and -warning arguments to **vcom**, **vlog**, or **vsim**. See the command descriptions in the Reference Manual for details on those arguments.
- Use the **suppress** command.
- Set a permanent default in the [msg_system] section of the *modelsim.ini* file. See [Simulator Control Variables](#) for more information.

Suppressing Warning Messages

You can suppress some warning messages. For example, you may receive warning messages about unbound components about which you are not concerned.

Suppressing VCOM Warning Messages

Use the **-nowarn <category_number>** argument with the [vcom command](#) to suppress a specific warning message. For example:

```
vcom -nowarn 1
```

suppresses unbound component warning messages.

Alternatively, warnings may be disabled for all compiles via the Main window **Compile > Compile Options** menu selectons or the *modelsim.ini* file (see [Verilog Compiler Control Variables](#)).

The warning message category numbers are:

```
1 = unbound component
2 = process without a wait statement
3 = null range
4 = no space in time literal
5 = multiple drivers on unresolved signal
6 = VITAL compliance checks ("VitalChecks" also works)
7 = VITAL optimization messages
8 = lint checks
9 = signal value dependency at elaboration
10 = VHDL-1993 constructs in VHDL-1987 code
13 = constructs that coverage can't handle
14 = locally static error deferred until simulation run
```

These numbers are unrelated to `vcom` arguments that are specified by numbers, such as `vcom -87` – which disables support for VHDL-1993 and 2002.

Suppressing VLOG Warning Messages

As with the `vcom` command, you can use the `-nowarn <category_number>` argument with the `vlog` command to suppress a specific warning message. The warning message category numbers for `vlog` are:

```
12 = non-LRM compliance in order to match Cadence behavior
13 = constructs that coverage can't handle
```

Or, you can use the `+nowarn<CODE>` argument with the `vlog` command to suppress a specific warning message. Warnings that can be disabled include the `<CODE>` name in square brackets in the warning message. For example:

```
vlog +nowarnDECAY
```

suppresses decay warning messages.

Suppressing VSIM Warning Messages

Use the `+nowarn<CODE>` argument to `vsim` to suppress a specific warning message. Warnings that can be disabled include the `<CODE>` name in square brackets in the warning message. For example:

```
vsim +nowarnTFMPC
```

suppresses warning messages about too few port connections.

Exit Codes

The table below describes exit codes used by ModelSim tools.

Table C-2. Exit Codes

Exit code	Description
0	Normal (non-error) return
1	Incorrect invocation of tool
2	Previous errors prevent continuing
3	Cannot create a system process (execv, fork, spawn, etc.)
4	Licensing problem
5	Cannot create/open/find/read/write a design library
6	Cannot create/open/find/read/write a design unit
7	Cannot open/read/write/dup a file (open, lseek, write, mmap, munmap, fopen, fdopen, fread, dup2, etc.)
8	File is corrupted or incorrect type, version, or format of file
9	Memory allocation error
10	General language semantics error
11	General language syntax error
12	Problem during load or elaboration
13	Problem during restore
14	Problem during refresh
15	Communication problem (Cannot create/read/write/close pipe/socket)
16	Version incompatibility
19	License manager not found/unreadable/unexecutable (vlm/mgvlm)
42	Lost license
43	License read/write failure
44	Modeltech daemon license checkout failure #44
45	Modeltech daemon license checkout failure #45
90	Assertion failure (SEVERITY_QUIT)
99	Unexpected error in tool
100	GUI Tcl initialization failure

Table C-2. Exit Codes

Exit code	Description
101	GUI Tk initialization failure
102	GUI IncrTk initialization failure
111	X11 display error
202	Interrupt (SIGINT)
204	Illegal instruction (SIGILL)
205	Trace trap (SIGTRAP)
206	Abort (SIGABRT)
208	Floating point exception (SIGFPE)
210	Bus error (SIGBUS)
211	Segmentation violation (SIGSEGV)
213	Write on a pipe with no reader (SIGPIPE)
214	Alarm clock (SIGALRM)
215	Software termination signal from kill (SIGTERM)
216	User-defined signal 1 (SIGUSR1)
217	User-defined signal 2 (SIGUSR2)
218	Child status change (SIGCHLD)
230	Exceeded CPU limit (SIGXCPU)
231	Exceeded file size limit (SIGXFSZ)

Miscellaneous Messages

This section describes miscellaneous messages which may be associated with ModelSim.

Compilation of DPI Export TFs Error

```
# ** Fatal: (vsim-3740) Can't locate a C compiler for compilation of
#          DPI export tasks/functions.
```

- Description — ModelSim was unable to locate a C compiler to compile the DPI exported tasks or functions in your design.
- Suggested Action — Make sure that a C compiler is visible from where you are running the simulation.

Empty port name warning

```
# ** WARNING: [8] <path/file_name>: empty port name in port list.
```

- Description — ModelSim reports these warnings if you use the **-lint** argument to [vlog](#). It reports the warning for any NULL module ports.
- Suggested action — If you wish to ignore this warning, do not use the **-lint** argument.

Lock message

```
waiting for lock by user@user. Lockfile is <library_path>/_lock
```

- Description — The *_lock* file is created in a library when you begin a compilation into that library, and it is removed when the compilation completes. This prevents simultaneous updates to the library. If a previous compile did not terminate properly, ModelSim may fail to remove the *_lock* file.
- Suggested action — Manually remove the *_lock* file after making sure that no one else is actually using that library.

Metavalue detected warning

```
Warning: NUMERIC_STD. ">": metavalue detected, returning FALSE
```

- Description — This warning is an assertion being issued by the IEEE **numeric_std** package. It indicates that there is an 'X' in the comparison.
- Suggested action — The message does not indicate which comparison is reporting the problem since the assertion is coming from a standard package. To track the problem, note the time the warning occurs, restart the simulation, and run to one time unit before the noted time. At this point, start stepping the simulator until the warning appears. The location of the blue arrow in a Source window will be pointing at the line following the line with the comparison.

These messages can be turned off by setting the **NumericStdNoWarnings** variable to 1 from the command line or in the *modelsim.ini* file.

Sensitivity list warning

```
signal is read by the process but is not in the sensitivity list
```

- Description — ModelSim outputs this message when you use the **-check_synthesis** argument to [vcom](#). It reports the warning for any signal that is read by the process but is not in the sensitivity list.
- Suggested action — There are cases where you may purposely omit signals from the sensitivity list even though they are read by the process. For example, in a strictly sequential process, you may prefer to include only the clock and reset in the sensitivity

list because it would be a design error if any other signal triggered the process. In such cases, your only option is to not use the **-check_synthesis** argument.

Tcl Initialization error 2

```
Tcl_Init Error 2 : Can't find a usable Init.tcl in the following
    directories :
        ../../tcl/tcl8.3 .
```

- Description — This message typically occurs when the base file was not included in a Unix installation. When you install ModelSim, you need to download and install 3 files from the ftp site. These files are:

```
modeltech-base.tar.gz
modeltech-docs.tar.gz
modeltech-<platform>.exe.gz
```

If you install only the <platform> file, you will not get the Tcl files that are located in the base file.

This message could also occur if the file or directory was deleted or corrupted.

- Suggested action — Reinstall ModelSim with all three files.

Too few port connections

```
# ** Warning (vsim-3017): foo.v(1422): [TFMPC] - Too few port
                                connections. Expected 2, found 1.
# Region: /foo/tb
```

- Description — This warning occurs when an instantiation has fewer port connections than the corresponding module definition. The warning doesn't necessarily mean anything is wrong; it is legal in Verilog to have an instantiation that doesn't connect all of the pins. However, someone that expects all pins to be connected would like to see such a warning.

Here are some examples of legal instantiations that will and will not cause the warning message.

Module definition:

```
module foo (a, b, c, d);
```

Instantiation that does not connect all pins but will not produce the warning:

```
foo inst1(e, f, g, ); // positional association
foo inst1(.a(e), .b(f), .c(g), .d()); // named association
```

Instantiation that does not connect all pins but will produce the warning:

```
foo inst1(e, f, g); // positional association
foo inst1(.a(e), .b(f), .c(g)); // named association
```

Any instantiation above will leave pin *d* unconnected but the first example has a placeholder for the connection. Here's another example:

```
foo inst1(e, , g, h);  
foo inst1(.a(e), .b(), .c(g), .d(h));
```

- Suggested actions —
 - Check that there is not an extra comma at the end of the port list. (e.g., model(a,b,)). The extra comma is legal Verilog and implies that there is a third port connection that is unnamed.
 - If you are purposefully leaving pins unconnected, you can disable these messages using the **+nowarnTFMPC** argument to vsim.

VSIM license lost

```
Console output:  
Signal 0 caught... Closing vsim vlm child.  
vsim is exiting with code 4  
FATAL ERROR in license manager  
  
transcript/vsim output:  
# ** Error: VSIM license lost; attempting to re-establish.  
#   Time: 5027 ns  Iteration: 2  
# ** Fatal: Unable to kill and restart license process.  
#   Time: 5027 ns  Iteration: 2
```

- Description — ModelSim queries the license server for a license at regular intervals. Usually these "License Lost" error messages indicate that network traffic is high, and communication with the license server times out.
- Suggested action — Anything you can do to improve network communication with the license server will probably solve or decrease the frequency of this problem.

Enforcing Strict 1076 Compliance

The optional **-pedanticerrors** argument to **vcom** enforces strict compliance to the IEEE 1076 Language Reference Manual (LRM) in the cases listed below. The default behavior for these cases is to issue an insuppressible warning message. If you compile with **-pedanticerrors**, the warnings change to an error, unless otherwise noted. Descriptions in quotes are actual warning/error messages emitted by **vcom**. As noted, in some cases you can suppress the warning using **-nowarn [level]**.

- Type conversion between array types, where the element subtypes of the arrays do not have identical constraints.
- "Extended identifier terminates at newline character (0xa)."
- "Extended identifier contains non-graphic character 0x%x."

- "Extended identifier \"%s\" contains no graphic characters."
- "Extended identifier \"%s\" did not terminate with backslash character."
- "An abstract literal and an identifier must have a separator between them."

This is for forming physical literals, which comprise an optional numeric literal, followed by a separator, followed by an identifier (the unit name). Warning is level 4, which means "-nowarn 4" will suppress it.

- In VHDL 1993 or 2002, a subprogram parameter was declared using VHDL 1987 syntax (which means that it was a class VARIABLE parameter of a file type, which is the only way to do it in VHDL 1987 and is illegal in later VHDLs). Warning is level 10.
- "Shared variables must be of a protected type." Applies to VHDL 2002 only.
- Expressions evaluated during elaboration cannot depend on signal values. Warning is level 9.
- "Non-standard use of output port '%s' in PSL expression." Warning is level 11.
- "Non-standard use of linkage port '%s' in PSL expression." Warning is level 11.
- Type mark of type conversion expression must be a named type or subtype, it can't have a constraint on it.
- When the actual in a PORT MAP association is an expression, it must be a (globally) static expression. The port must also be of mode IN.
- The expression in the CASE and selected signal assignment statements must follow the rules given in Section 8.8 of the 2002 VHDL LRM. In certain cases we can relax these rules, but **-pedanticerrors** forces strict compliance.
- A CASE choice expression must be a locally static expression. We allow it to be only globally static, but **-pedanticerrors** will check that it is locally static. Same rule for selected signal assignment statement choices. Warning level is 8.
- When making a default binding for a component instantiation, ModelSim's non-standard search rules found a matching entity. Section 5.2.2 of the 2002 VHDL LRM describes the standard search rules. Warning level is 1.
- Both FOR GENERATE and IF GENERATE expressions must be globally static. We allow non-static expressions unless **-pedanticerrors** is present.
- When the actual part of an association element is in the form of a conversion function call [or a type conversion], and the formal is of an unconstrained array type, the return type of the conversion function [type mark of the type conversion] must be of a constrained array subtype. We relax this (with a warning) unless **-pedanticerrors** is present when it becomes an error.
- OTHERS choice in a record aggregate must refer to at least one record element.

- In an array aggregate of an array type whose element subtype is itself an array, all expressions in the array aggregate must have the same index constraint, which is the element's index constraint. No warning is issued; the presence of **-pedanticerrors** will produce an error.
- Non-static choice in an array aggregate must be the only choice in the only element association of the aggregate.
- The range constraint of a scalar subtype indication must have bounds both of the same type as the type mark of the subtype indication.
- The index constraint of an array subtype indication must have index ranges each of whose both bounds must be of the same type as the corresponding index subtype.
- When compiling VHDL 1987, various VHDL 1993 and 2002 syntax is allowed. Use **-pedanticerrors** to force strict compliance. Warnings are all level 10.
- For a FUNCTION having a return type mark that denotes a constrained array subtype, a RETURN statement expression must evaluate to an array value with the same index range(s) and direction(s) as that type mark. This language requirement (Section 8.12 of the 2002 VHDL LRM) has been relaxed such that ModelSim displays only a compiler warning and then performs an implicit subtype conversion at run time.

To enforce the prior compiler behavior, use vcom -pedanticerrors.

Appendix D

Verilog Interfaces to C

This appendix describes the ModelSim implementation of the Verilog interfaces:

- Verilog PLI (Programming Language Interface)
- VPI (Verilog Procedural Interface)
- SystemVerilog DPI (Direct Programming Interface).

These three interfaces provide a mechanism for defining tasks and functions that communicate with the simulator through a C procedural interface. There are many third party applications available that interface to Verilog simulators through the PLI (see [Third Party PLI Applications](#)). In addition, you may write your own PLI/VPI/DPI applications.

Implementation Information

This chapter describes only the details of using the PLI/VPI/DPI with ModelSim Verilog and SystemVerilog.

- ModelSim SystemVerilog implements DPI as defined in IEEE Std P1800-2005.
- PLI Implementation — Verilog implements the PLI as defined in the IEEE Std 1364-2001, with the exception of the **acc_handle_datapath()** routine.
The **acc_handle_datapath()** routine is not implemented because the information it returns is more appropriate for a static timing analysis tool.
- VPI Implementation — The VPI is partially implemented as defined in the IEEE Std 1364-2005 and IEEE Std 1800-2005. The list of currently supported functionality can be found in the following file:

```
<install_dir>/docs/technotes/Verilog_VPI.note
```

The simulator allows you to specify whether it runs in a way compatible with the IEEE Std 1364-2001 object model or the combined IEEE Std 1364-2005/IEEE Std 1800-2005 object models. By default, the simulator uses the combined 2005 object models. This control is accessed through the **vsim -plicompatdefault** switch or the **PliCompatDefault** variable in the *modelsim.ini* file.

The following table outlines information you should know about when performing a simulation with VPI and HDL files using the two different object models.

Table D-1. VPI Compatibility Considerations

Simulator Compatibility: -plicompatdefault	VPI Files	HDL Files	Notes
2001	2001	2001	When your VPI and HDL are written based on the 2001 standard, be sure to specify, as an argument to vsim, “-plicompatdefault 2001”.
2005	2005	2005	When your VPI and HDL are written based on the 2005 standard, you do not need to specify any additional information to vsim because this is the default behavior
2001	2001	2005	New SystemVerilog objects in the HDL will be completely invisible to the application. This may be problematic, for example, for a delay calculator, which will not see SystemVerilog objects with delay on a net.
2001	2005	2001	It is possible to write a 2005 VPI that is backwards-compatible with 2001 behavior by using mode-neutral techniques. The simulator will reject 2005 requests if it is running in 2001 mode, so there may be VPI failures.
2001	2005	2005	You should only use this setup if there are other VPI libraries in use for which it is absolutely necessary to run the simulator in 2001-mode. This combination is not recommended when the simulator is capable of supporting the 2005 constructs.
2005	2001	2001	This combination is not recommended. You should change the -plicompatdefault argument to 2001.
2005	2001	2005	This combination is most likely to result in errors generated from the VPI as it encounters objects in the HDL that it does not understand.
2005	2005	2001	This combination should function without issues, as SystemVerilog is a superset of Verilog. All that is happening here is that the HDL design is not using the full subset of objects that both the simulator and VPI ought to be able to handle.

g++ Compiler Support for use with Interfaces

You must acquire the g++ compiler for your given platform as defined in the sections [Compiling and Linking C Applications for Interfaces](#) and [Compiling and Linking C++ Applications for Interfaces](#).

Registering PLI Applications

Each PLI application must register its system tasks and functions with the simulator, providing the name of each system task and function and the associated callback routines. Since many PLI applications already interface to Verilog-XL, ModelSim Verilog PLI applications make use of the same mechanism to register information about each system task and function in an array of s_tfcell structures. This structure is declared in the veriuser.h include file as follows:

```
typedef int (*p_tffn)();  
typedef struct t_tfcell {  
    short type; /* USERTASK, USERFUNCTION, or USERREALFUNCTION */  
    short data; /* passed as data argument of callback function */  
    p_tffn checktf; /* argument checking callback function */  
    p_tffn sizetf; /* function return size callback function */  
    p_tffn calltf; /* task or function call callback function */  
    p_tffn misctf; /* miscellaneous reason callback function */  
    char *tfname; /* name of system task or function */  
    /* The following fields are ignored by ModelSim Verilog */  
    int forwref;  
    char *tfveritool;  
    char *tferrmessage;  
    int hash;  
    struct t_tfcell *left_p;  
    struct t_tfcell *right_p;  
    char *namecell_p;  
    int warning_printed;  
} s_tfcell, *p_tfcell;
```

The various callback functions (checktf, sizetf, calltf, and misctf) are described in detail in the IEEE Std 1364. The simulator calls these functions for various reasons. All callback functions are optional, but most applications contain at least the calltf function, which is called when the system task or function is executed in the Verilog code. The first argument to the callback functions is the value supplied in the data field (many PLI applications don't use this field). The type field defines the entry as either a system task (USERTASK) or a system function that returns either a register (USERFUNCTION) or a real (USERREALFUNCTION). The tfname field is the system task or function name (it must begin with \$). The remaining fields are not used by ModelSim Verilog.

On loading of a PLI application, the simulator first looks for an init_usertfs function, and then a veriusertfs array. If init_usertfs is found, the simulator calls that function so that it can call mti_RegisterUserTF() for each system task or function defined. The mti_RegisterUserTF() function is declared in veriuser.h as follows:

```
void mti_RegisterUserTF(p_tfcell usertf);
```

The storage for each usertf entry passed to the simulator must persist throughout the simulation because the simulator de-references the usertf pointer to call the callback functions. We recommend that you define your entries in an array, with the last entry set to 0. If the array is named veriusertfs (as is the case for linking to Verilog-XL), then you don't have to provide an init_usertfs function, and the simulator will automatically register the entries directly from the array (the last entry must be 0). For example,

```
s_tfcell veriusertfs[] = {
    {usertask, 0, 0, 0, abc_calltf, 0, "$abc"},  

    {usertask, 0, 0, 0, xyz_calltf, 0, "$xyz"},  

    {0} /* last entry must be 0 */  
};
```

Alternatively, you can add an init_usertfs function to explicitly register each entry from the array:

```
void init_usertfs()  
{  
    p_tfcell usertf = veriusertfs;  
    while (usertf->type)  
        mti_RegisterUserTF(usertf++);  
}
```

It is an error if a PLI shared library does not contain a veriusertfs array or an init_usertfs function.

Since PLI applications are dynamically loaded by the simulator, you must specify which applications to load (each application must be a dynamically loadable library, see [Compiling and Linking C Applications for Interfaces](#)). The PLI applications are specified as follows (note that on a Windows platform the file extension would be .dll):

- As a list in the Veriuser entry in the *modelsim.ini* file:

Veriuser = pliapp1.so pliapp2.so pliappn.so

- As a list in the PLIOBJS environment variable:

% setenv PLIOBJS "pliapp1.so pliapp2.so pliappn.so"

- As a -pli argument to the simulator (multiple arguments are allowed):

-pli pliapp1.so -pli pliapp2.so -pli pliappn.so

The various methods of specifying PLI applications can be used simultaneously. The libraries are loaded in the order listed above. Environment variable references can be used in the paths to the libraries in all cases.

Registering VPI Applications

Each VPI application must register its system tasks and functions and its callbacks with the simulator. To accomplish this, one or more user-created registration routines must be called at simulation startup. Each registration routine should make one or more calls to `vpi_register_systf()` to register user-defined system tasks and functions and `vpi_register_cb()` to register callbacks. The registration routines must be placed in a table named `vlog_startup_routines` so that the simulator can find them. The table must be terminated with a 0 entry.

Example D-1. VPI Application Registration

```
PLI_INT32 MyFuncCalltf( PLI_BYTE8 *user_data )
{ ... }
PLI_INT32 MyFuncComplet tf( PLI_BYTE8 *user_data )
{ ... }
PLI_INT32 MyFuncSizetf( PLI_BYTE8 *user_data )
{ ... }
PLI_INT32 MyEndOfCompCB( p_cb_data cb_data_p )
{ ... }
PLI_INT32 MyStartOfSimCB( p_cb_data cb_data_p )
{ ... }
void RegisterMySystfs( void )
{
    vpiHandle tmpH;
    s_cb_data callback;
    s_vpi_systf_data systf_data;

    systf_data.type      = vpiSysFunc;
    systf_data.sysfunctype = vpiSizedFunc;
    systf_data.tfname   = "$myfunc";
    systf_data.calltf   = MyFuncCalltf;
    systf_data.complet tf = MyFuncComplet tf;
    systf_data.sizetf   = MyFuncSizetf;
    systf_data.user_data = 0;
    tmpH = vpi_register_systf( &systf_data );
    vpi_free_object(tmpH);

    callback.reason     = cbEndOfCompile;
    callback.cb_rtn     = MyEndOfCompCB;
    callback.user_data = 0;
    tmpH = vpi_register_cb( &callback );
    vpi_free_object(tmpH);

    callback.reason     = cbStartOfSimulation;
    callback.cb_rtn     = MyStartOfSimCB;
    callback.user_data = 0;
    tmpH = vpi_register_cb( &callback );
    vpi_free_object(tmpH);
}
```

```
void (*vlog_startup_routines[ ] ) () = {  
    RegisterMySystfs,  
    0      /* last entry must be 0 */  
};
```

Loading VPI applications into the simulator is the same as described in [Registering PLI Applications](#).

Using PLI and VPI Together

PLI and VPI applications can co-exist in the same application object file. In such cases, the applications are loaded at startup as follows:

- If an init_usertfs() function exists, then it is executed and only those system tasks and functions registered by calls to mti_RegisterUserTF() will be defined.
- If an init_usertfs() function does not exist but a veriusertfs table does exist, then only those system tasks and functions listed in the veriusertfs table will be defined.
- If an init_usertfs() function does not exist and a veriusertfs table does not exist, but a vlog_startup_routines table does exist, then only those system tasks and functions and callbacks registered by functions in the vlog_startup_routines table will be defined.

As a result, when PLI and VPI applications exist in the same application object file, they must be registered in the same manner. VPI registration functions that would normally be listed in a vlog_startup_routines table can be called from an init_usertfs() function instead.

Registering DPI Applications

DPI applications do not need to be registered. However, each DPI imported or exported task or function must be identified using SystemVerilog ‘import “DPI-C”’ or ‘export “DPI-C”’ syntax. Examples of the syntax follow:

```
export "DPI-C" task t1;  
task t1(input int i, output int o);  
. . .  
end task  
import "DPI-C" function void f1(input int i, output int o);
```

Your code must provide imported functions or tasks, compiled with an external compiler. An imported task must return an int value, "1" indicating that it is returning due to a disable, or "0" indicating otherwise.

These imported functions or objects may then be loaded as a shared library into the simulator with either the command line option **-sv_lib <lib>** or **-sv_liblist <bootstrap_file>**. For example,

```
vlog dut.v
gcc -shared -Bsymbolic -o imports.so imports.c
vsim -sv_lib imports top -do <do_file>
```


The **-sv_lib** option specifies the shared library name, without an extension. A file extension is added by the tool, as appropriate to your platform. For a list of file extensions accepted by platform, see [DPI File Loading](#).

You can also use the command line options **-sv_root** and **-sv_liblist** to control the process for loading imported functions and tasks. These options are defined in the IEEE Std P1800-2005 LRM.

DPI Use Flow

Correct use of ModelSim DPI depends on the flow presented in this section.

Figure D-1. DPI Use Flow Diagram

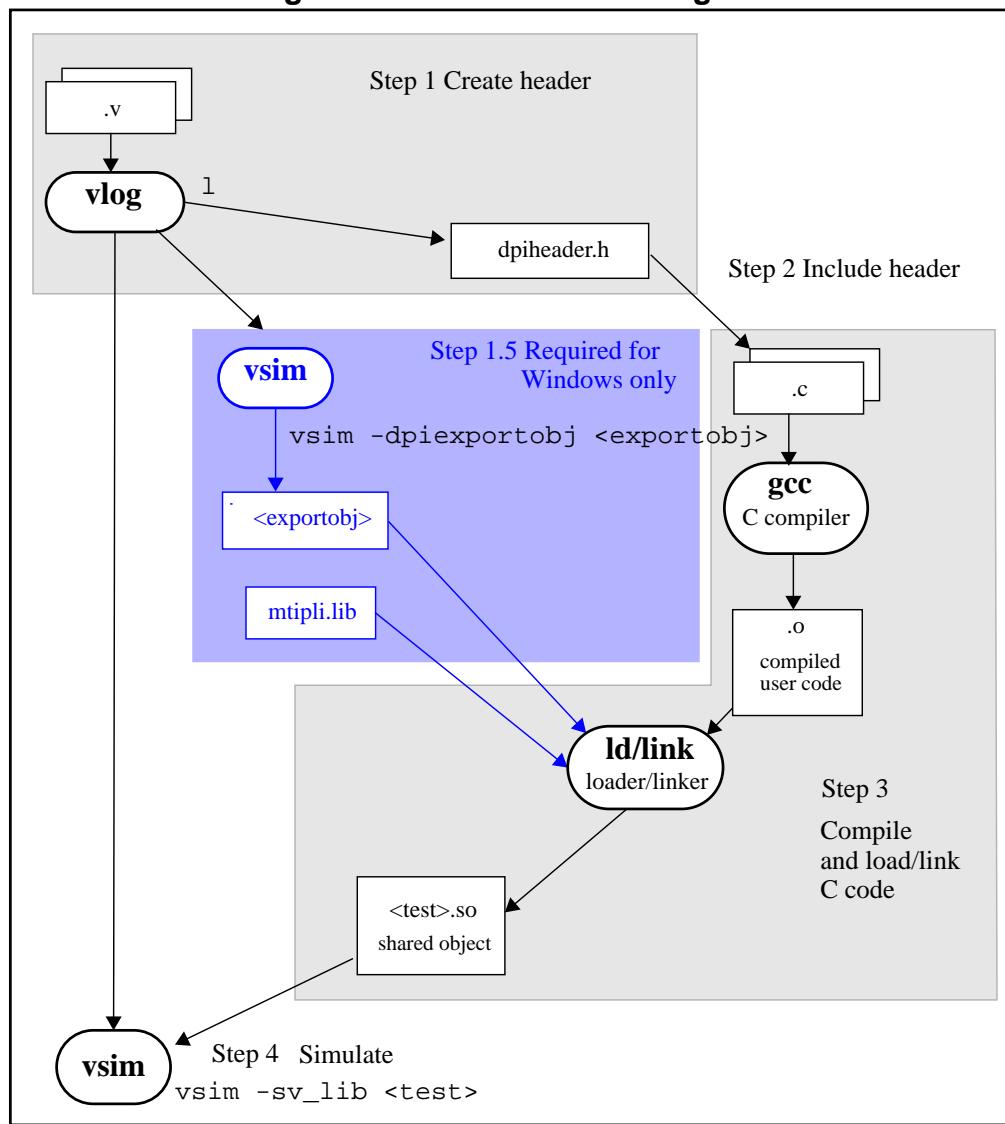

1. Run **vlog** to generate a *dpiheader.h* file.

This file defines the interface between C and ModelSim for exported and imported tasks and functions. Though the *dpiheader.h* is a user convenience file rather than a requirement, including *dpiheader.h* in your C code can immediately solve problems caused by an improperly defined interface. An example command for creating the header file would be:

vlog -dpiheader <dpiheader>.h files.v

2. **Required for Windows only;** Run a preliminary invocation of **vsim** with the **-dpiexportobj** switch.

Because of limitations with the linker/loader provided on Windows, this additional step is required. You must create the exported task/function compiled object file (*exportobj*) by running a preliminary vsim command, such as:

```
vsim -dpiexportobj exportobj top
```

3. Include the *dpiheader.h* file in your C code.

ModelSim recommends that any user DPI C code that accesses exported tasks/functions, or defines imported tasks/functions, should include the *dpiheader.h* file. This allows the C compiler to verify the interface between C and ModelSim.

4. Compile the C code into a shared object.

Compile your code, providing any *.a* or other *.o* files required.

For Windows users — In this step, the object file needs to be bound together with the *.obj* that you created using the **-dpiexportobj** switch, into a single *.dll* file.

5. Simulate the design.

When simulating, specify the name of the imported DPI C shared object (according to the SystemVerilog LRM). For example:

```
vsim -sv_lib <test> top
```

Integrating Export Wrappers into an Import Shared Object

Some workflows require you to generate export tf wrappers ahead of time with:

```
vsim -dpiexportobj <export_object_file>
```

In this case, you must manually integrate the resulting object code into the simulation by non-standard means, described as follows:

- Link the exportwrapper object file (*export_object_file*) directly into a shared object containing the DPI import code, and then load the shared object with **-sv_lib**. This process can only work in simple scenarios, specifically when there is only one **-sv_lib** library that calls exported SystemVerilog tasks or functions.
- Use the vsim **-gblso** switch to load the *export_object_file* before any import shared objects are loaded. This is the more general approach.

When you manually integrate the DPI *export_object_file* into the simulation database, the normal automatic integration flow must be disabled by using the vsim **-nodpiexports** option.

Another reason you may want to use this process is to simplify the set of shared objects that the OS is required to keep track of.

When Your DPI Export Function is Not Getting Called

This issue can arise in your C code due to the way the C linker resolves symbols. It happens if a name you choose for a SystemVerilog export function happens to match a function name in a custom, or even standard C library. In this case, your C compiler will bind calls to the function in that C library, rather than to the export function in the SystemVerilog simulator.

The symptoms of such a misbinding can be difficult to detect. Generally, the misbound function silently returns an unexpected or incorrect value.

To determine if you have this type of name aliasing problem, consult the C library documentation (either the online help or man pages) and look for function names that match any of your export function names. You should also review any other shared objects linked into your simulation and look for name aliases there. To get a comprehensive list of your export functions, you can use `vsim -dpiheader` option and review the generated header file.

Troubleshooting a Missing DPI Import Function

DPI uses C function linkage. If your DPI application is written in C++, it is important to remember to use `extern "C"` declaration syntax appropriately. Otherwise the C++ compiler will produce a mangled C++ name for the function, and the simulator is not able to locate and bind the DPI call to that function.

Also, if you do not use the **-Bsymbolic** argument on the command line for specifying a link, the system may bind to an incorrect function, resulting in unexpected behavior. For more information, see [Correct Linking of Shared Libraries with -Bsymbolic](#).

Simplified Import of Library Functions

In addition to the traditional method of importing FLI, PLI, and C library functions, a simplified method can be used: you can declare VPI and FLI functions as DPI-C imports. When you declare VPI and FLI functions as DPI-C imports, the DPI shared object is loaded at runtime automatically. Neither the C implementation of the import tf, nor the **-sv_lib** argument is required.

Also, on most platforms (see [Platform Specific Information](#)), you can declare most standard C library functions as DPI-C imports.

The following example is processed directly, without DPI C code:

```
package cmath;
    import "DPI-C" function real sin(input real x);
    import "DPI-C" function real sqrt(input real x);
endpackage

package fli;
    import "DPI-C" function mti_Cmd(input string cmd);
```

```

endpackage

module top;
    import cmath::*;
    import fli::*;
    int status, A;
    initial begin
        $display("sin(0.98) = %f", sin(0.98));
        $display("sqrt(0.98) = %f", sqrt(0.98));
        status = mti_Cmd("change A 123");
        $display("A = %ld, status = %ld", A, status);
    end
endmodule

```

To simulate, you would simply enter a command such as: **vsim top**.

Precompiled packages are available with that contain import declarations for certain commonly used C calls.

```
<installDir>/verilog_src/dpi_cpack/dpi_cpackages.sv
```

You do not need to compile this file, it is automatically available as a built-in part of the SystemVerilog simulator.

Platform Specific Information

On Windows, only FLI and PLI commands may be imported in this fashion. C library functions are not automatically importable. They must be wrapped in user DPI C functions, which are brought into the simulator using the **-sv_lib** argument.

Use Model for Locked Work Libraries

You may want to create the work library as a locked entity, which enables multiple users to simultaneously share the design library at runtime.

The **vsim** switch **-locklib** allows you to create a library that prevents compilers from recompiling or refreshing a target library.

To prevent **vsim** from creating objects in the library at runtime, the **vsim -dpiexportobj** flow is available on all platforms. Use this flow after compilation, but before you start simulation using the design library.

An example command sequence would be:

```

vlib work
vlog -dpiheader dpiheader.h test.sv
gcc -shared -Bsymbolic -o test.so test.c
vlib -locklib work
vsim -c -dpiexportobj work/_dpi/exportwrapper top

```

The work/_dpi/exportwrapper argument provides a basename for the shared object.

The library is now ready for simulation by multiple simultaneous users, as follows:

vsim top -sv_lib test

At runtime, **vsim** automatically checks to see if the file *work/_dpi/exportwrapper.so* is up-to-date with respect to its C source code. If it is out of date, an error message is issued and elaboration stops.

Making Verilog Function Calls from non-DPI C Models

Working in certain FLI or PLI C applications, you might want to interact with the simulator by directly calling Verilog DPI export functions. Such applications may include complex 3rd party integrations, or multi-threaded C testbenches. Normally calls to export functions from PLI or FLI code are illegal. These calls are referred to as "out-of-the-blue" calls, since they do not originate in the controlled environment of a DPI import tf.

You can set the ModelSim tool to allow "out-of-the-blue" Verilog function calls either for all simulations ([DpiOutOfTheBlue = 1](#) in *modelsim.ini* file), or for a specific simulation (**vsim -dplioutoftheblue 1**).

One restriction applies: only Verilog functions may be called out of the blue. It is illegal to call Verilog tasks in this way. The simulator issues an error if it detects such a call.

Calling C/C++ Functions Defined in PLI Shared Objects from DPI Code

In some instances you may need to share C/C++ code across different shared objects that contain PLI and/or DPI code. There are two ways you can achieve this goal:

- The easiest is to include the shared code in an object containing PLI code, and then make use of the **vsim -gblso** option.
- Another way is to define a standalone shared object that only contains shared function definitions, and load that using **vsim -gblso**. In this case, the process does not require PLI or DPI loading mechanisms, such as **-pli** or **-sv_lib**.

You should also take into consideration what happens when code in one global shared object needs to call code in another global shared object. In this case, place the **-gblso** argument for the calling code on the **vsim** command line *after* you place the **-gblso** argument for the called code. This is because **vsim** loads the files in the specified order and you must load called code before calling code in all cases.

Circular references aren't possible to achieve. If you have that kind of condition, you are better off combining the two shared objects into a single one.

For more information about this topic please refer to the section "[Loading Shared Objects with Global Symbol Visibility](#)".

Compiling and Linking C Applications for Interfaces

The following platform-specific instructions show you how to compile and link your PLI/VPI/DPI C applications so that they can be loaded by ModelSim. Various native C/C++ compilers are supported on different platforms. The gcc compiler is supported on all platforms.

The following PLI/VPI/DPI routines are declared in the include files located in the ModelSim `<install_dir>/include` directory:

- `acc_user.h` — declares the ACC routines
- `veriuser.h` — declares the TF routines
- `vpi_user.h` — declares the VPI routines
- `svdpi.h` — declares DPI routines

The following instructions assume that the PLI, VPI, or DPI application is in a single source file. For multiple source files, compile each file as specified in the instructions and link all of the resulting object files together with the specified link instructions.

Although compilation and simulation switches are platform-specific, loading shared libraries is the same for all platforms. For information on loading libraries for PLI/VPI see [PLI and VPI File loading](#). For DPI loading instructions, see [DPI File Loading](#).

Correct Linking of Shared Libraries with **-Bs symbolicic**

In the examples shown throughout this appendix, the **-Bs symbolicic** linker option is used with the compilation (`gcc` or `g++`) or link (`ld`) commands to correctly resolve symbols. This option instructs the linker to search for the symbol within the local shared library and bind to that symbol if it exists. If the symbol is not found within the library, the linker searches for the symbol within the `vsimk` executable and binds to that symbol, if it exists.

When using the **-Bs symbolicic** option, the linker may warn about symbol references that are not resolved within the local shared library. It is safe to ignore these warnings, provided the symbols are present in other shared libraries or the `vsimk` executable. (An example of such a warning would be a reference to a common API call such as `vpi_printf()`).

Windows Platforms — C

- Microsoft Visual C 4.1 or Later

```
cl -c -I<install_dir>\modeltech\include app.c
link -dll -export:<init_function> app.obj <install_dir>\win32\mtipli.lib -out:app.dll
```

For the Verilog PLI, the <init_function> should be "init_usertfs". Alternatively, if there is no init_usertfs function, the <init_function> specified on the command line should be "veriusertfs". For the Verilog VPI, the <init_function> should be "vlog_startup_routines". These requirements ensure that the appropriate symbol is exported, and thus ModelSim can find the symbol when it dynamically loads the DLL.

When executing **cl** commands in a DO file, use the **/NOLOGO** switch to prevent the Microsoft C compiler from writing the logo banner to stderr. Writing the logo causes Tcl to think an error occurred.

If you have Cygwin installed, make sure that the Cygwin *link.exe* executable is not in your search path ahead of the Microsoft Visual C *link* executable. If you mistakenly bind your dll's with the Cygwin *link.exe* executable, the *.dll* will not function properly. It may be best to rename or remove the Cygwin *link.exe* file to permanently avoid this scenario.

- MinGW gcc 3.2.3

```
gcc -c -I<install_dir>\include app.c
gcc -shared -Bsymbolic -o app.dll app.o -L<install_dir>\win32 -lmtipli
```

The ModelSim tool requires the use of the MinGW gcc compiler rather than the Cygwin gcc compiler. MinGW gcc is available on the ModelSim FTP site. Remember to add the path to your gcc executable in the Windows environment variables.

DPI Imports on Windows Platforms — C

When linking the shared objects, be sure to specify one “link -export” option for each DPI imported task or function in your linking command line. You can use the **-isymfile** argument from the [vlog](#) command to obtain a complete list of all imported tasks/functions expected by ModelSim.

As an alternative to specifying one -export option for each imported task or function, you can make use of the `__declspec(dllexport)` macro supported by Visual C. You can place this macro before every DPI import task or function declaration in your C source. All the marked functions will be available for use by [vsim](#) as DPI import tasks and functions.

DPI Flow for Exported Tasks and Functions on Windows Platforms

Since the Windows platform lacks the necessary runtime linking capabilities, you must perform an additional manual step in order to prepare shared objects containing calls to exported SystemVerilog tasks or functions. You need to invoke a special run of [vsim](#). The command is as follows:

```
vsim <top du list> -dpiexportobj <objname> <other args>
```

The **-dpiellexportobj** generates an object file <objname>.obj that contains "glue" code for exported tasks and functions. You must add that object file to the link line for your .dll, listed after the other object files. For example, a link line for MinGW would be:

```
gcc -shared -Bsymbolic -o app.dll app.obj <objname>.obj
-L<install_dir>\modeltech\win32 -lmtipli
```

and a link line for Visual C would be:

```
link -dll -export:<init_function> app.obj <objname>.obj \
<install_dir>\modeltech\win32\mtipli.lib -out:app.dll
```

Compiling and Linking C++ Applications for Interfaces

ModelSim does not have direct support for any language other than standard C; however, C++ code can be loaded and executed under certain conditions.

Since ModelSim's PLI/VPI/DPI functions have a standard C prototype, you must prevent the C++ compiler from mangling the PLI/VPI/DPI function names. This can be accomplished by using the following type of extern:

```
extern "C"
{
    <PLI/VPI/DPI application function prototypes>
}
```

The header files *veriuser.h*, *acc_user.h*, and *vpi_user.h*, *svdpi.h*, and *dpiheader.h* already include this type of extern. You must also put the PLI/VPI/DPI shared library entry point (*veriusertfs*, *init_usertfs*, or *vlog_startup_routines*) inside of this type of extern.

You must also place an ‘extern “C”’ declaration immediately before the body of every import function in your C++ source code, for example:

```
extern "C"
int myimport(int i)
{
    vpi_printf("The value of i is %d\n", i);
}
```

The following platform-specific instructions show you how to compile and link your PLI/VPI/DPI C++ applications so that they can be loaded by ModelSim.

Although compilation and simulation switches are platform-specific, loading shared libraries is the same for all platforms. For information on loading libraries, see [DPI File Loading](#).

For PLI/VPI only

If *app.so* is not in your current directory you must tell Solaris where to search for the shared object. You can do this one of two ways:

- Add a path before *app.so* in the foreign attribute specification. (The path may include environment variables.)
- Put the path in a UNIX shell environment variable:
LD_LIBRARY_PATH_32= <library path without filename> (32-bit)
or
LD_LIBRARY_PATH_64= <library path without filename> (64-bit)

Windows Platforms — C++

- Microsoft Visual C++ 4.1 or Later

```
cl -c [-GX] -I<install_dir>\modeltech\include app.cxx
link -dll -export:<init_function> app.obj
                           <install_dir>\modeltech\win32\mtipli.lib /out:app.dll
```

The **-GX** argument enables exception handling.

For the Verilog PLI, the **<init_function>** should be "init_usertfs". Alternatively, if there is no init_usertfs function, the **<init_function>** specified on the command line should be "veriusertfs". For the Verilog VPI, the **<init_function>** should be "vlog_startup_routines". These requirements ensure that the appropriate symbol is exported, and thus ModelSim can find the symbol when it dynamically loads the DLL.

When executing **cl** commands in a DO file, use the **/NOLOGO** switch to prevent the Microsoft C compiler from writing the logo banner to stderr. Writing the logo causes Tcl to think an error occurred.

If you have Cygwin installed, make sure that the Cygwin *link.exe* executable is not in your search path ahead of the Microsoft Visual C *link* executable. If you mistakenly bind your dll's with the Cygwin *link.exe* executable, the *.dll* will not function properly. It may be best to rename or remove the Cygwin *link.exe* file to permanently avoid this scenario.

- MinGW C++ Version 3.2.3

```
g++ -c -I<install_dir>\modeltech\include app.cpp
g++ -shared -Bsymbolic -o app.dll app.o -L<install_dir>\modeltech\win32 -lmtipli
```

ModelSim requires the use of the MinGW gcc compiler rather than the Cygwin gcc compiler.

DPI Imports on Windows Platforms — C++

When linking the shared objects, be sure to specify one -export option for each DPI imported task or function in your linking command line. You can use Verilog's **-isymfile** option to obtain a complete list of all imported tasks and functions expected by ModelSim.

DPI Special Flow for Exported Tasks and Functions

Since the Windows platform lacks the necessary runtime linking capabilities, you must perform an additional manual step in order to compile the HDL source files into the shared object file. You need to invoke a special run of vsim. The command is as follows:

```
vsim <top du list> -dpiexportobj <objname> <other args>
```

The -dpiexportobj generates the object file <objname>.obj that contains "glue" code for exported tasks and functions. You must add that object file to the link line, listed after the other object files. For example, if the object name was *dpi1*, the link line for MinGW would be:

```
g++ -shared -Bsymbolic -o app.dll app.obj <objname>.obj  
-L<install_dir>\modeltech\win32 -lmtipli
```

Specifying Application Files to Load

PLI and VPI file loading is identical. DPI file loading uses switches to the **vsim** command.

PLI and VPI File loading

The PLI/VPI applications are specified as follows:

- As a list in the Veriuser entry in the *modelsim.ini* file:

```
Veriuser = pliapp1.so pliapp2.so pliappn.so
```

- As a list in the PLIOBJJS environment variable:

```
% setenv PLIOBJJS "pliapp1.so pliapp2.so pliappn.so"
```

- As a **-pli** argument to the simulator (multiple arguments are allowed):

```
-pli pliapp1.so -pli pliapp2.so -pli pliappn.so
```

Note

On Windows platforms, the file names shown above should end with *.dll* rather than *.so*.

The various methods of specifying PLI/VPI applications can be used simultaneously. The libraries are loaded in the order listed above. Environment variable references can be used in the paths to the libraries in all cases.

See also [Simulator Variables](#) for more information on the *modelsim.ini* file.

DPI File Loading

DPI applications are specified to **vsim** using the following SystemVerilog arguments:

Table D-2. vsim Arguments for DPI Application

Argument	Description
-sv_lib <name>	specifies a library name to be searched and used. No filename extensions must be specified. (The extensions ModelSim expects are: <i>.dll</i> for Win32, <i>.so</i> for all other platforms.)
-sv_root <name>	specifies a new prefix for shared objects as specified by -sv_lib
-sv_liblist	specifies a “bootstrap file” to use

When the simulator finds an imported task or function, it searches for the symbol in the collection of shared objects specified using these arguments.

For example, you can specify the DPI application as follows:

```
vsim -sv_lib dpiapp1 -sv_lib dpiapp2 -sv_lib dpiappn top
```

It is a mistake to specify DPI import tasks and functions (tf) inside PLI/VPI shared objects. However, a DPI import tf can make calls to PLI/VPI C code, providing that **vsim -gblso** was used to mark the PLI/VPI shared object with global symbol visibility. See [Loading Shared Objects with Global Symbol Visibility](#).

Loading Shared Objects with Global Symbol Visibility

On Unix platforms you can load shared objects such that all symbols in the object have global visibility. To do this, use the **-gblso** argument to **vsim** when you load your PLI/VPI application. For example:

```
vsim -pli obj1.so -pli obj2.so -gblso obj1.so top
```

The **-gblso** argument works in conjunction with the *GlobalSharedObjectList* variable in the *modelsim.ini* file. This variable allows user C code in other shared objects to refer to symbols in a shared object that has been marked as global. All shared objects marked as global are loaded by the simulator earlier than any non-global shared objects.

PLI Example

The following example is a trivial, but complete PLI application.

```
hello.c:
```

```

#include "veriuser.h"
static PLI_INT32 hello()
{
    io_printf("Hi there\n");
    return 0;
}
s_tfcell veriusertfs[] = {
    {usertask, 0, 0, 0, hello, 0, "$hello"},
    {0} /* last entry must be 0 */
};
hello.v:
module hello;
    initial $hello;
endmodule
Compile the PLI code for the Solaris operating system:
% cc -c -I<install_dir>/modeltech/include hello.c
% ld -G -Bsymbolic -o hello.sl hello.o
Compile the Verilog code:
% vlib work
% vlog hello.v
Simulate the design:
% vsim -c -pli hello.sl hello
# Loading work.hello
# Loading ./hello.sl
VSIM 1> run -all
# Hi there
VSIM 2> quit

```

VPI Example

The following example is a trivial, but complete VPI application. A general VPI example can be found in `<install_dir>/modeltech/examples/verilog/vpi`.

hello.c:

```

#include "vpi_user.h"
static PLI_INT32 hello(PLI_BYTE8 * param)
{
    vpi_printf( "Hello world!\n" );
    return 0;
}
void RegisterMyTfs( void )
{
    s_vpi_systf_data systf_data;
    vpiHandle systf_handle;
    systf_data.type      = vpiSysTask;
    systf_data.sysfunctype = vpiSysTask;
    systf_data.tfname     = "$hello";
    systf_data.calltf     = hello;
    systf_data.compiletf   = 0;
    systf_data.sizetf     = 0;
    systf_data.user_data   = 0;
    systf_handle = vpi_register_systf( &systf_data );
    vpi_free_object( systf_handle );
}

```

```
void (*vlog_startup_routines[])( ) = {  
    RegisterMyTfs,  
    0  
};  
hello.v:  
module hello;  
    initial $hello;  
endmodule  
Compile the VPI code for the Solaris operating system:  
% gcc -c -I<install_dir>/include hello.c  
% gcc -shared -Bsymbolic -o hello.sl hello.o  
Compile the Verilog code:  
% vlib work  
% vlog hello.v  
Simulate the design:  
% vsim -c -pli hello.sl hello  
# Loading work.hello  
# Loading ./hello.sl  
VSIM 1> run -all  
# Hello world!  
VSIM 2> quit
```

DPI Example

The following example is a trivial but complete DPI application. For win32 platforms an additional step is required. For additional examples, see the *<install_dir>/modeltech/examples/systemverilog/dpi* directory.

```
hello_c.c:  
#include "svdpi.h"  
#include "dpiheader.h"  
int c_task(int i, int *o)  
{  
    printf("Hello from c_task()\n");  
    verilog_task(i, o); /* Call back into Verilog */  
    *o = i;  
    return(0); /* Return success (required by tasks) */  
}  
hello.v:  
module hello_top;  
    int ret;  
    export "DPI-C" task verilog_task;  
    task verilog_task(input int i, output int o);  
        #10;  
        $display("Hello from verilog_task()");  
    endtask  
    import "DPI-C" context task c_task(input int i, output int o);  
    initial  
    begin  
        c_task(1, ret); // Call the c task named 'c_task()'  
    end  
endmodule  
Compile the Verilog code:  
% vlib work  
% vlog -sv -dpiheader dpiheader.h hello.v
```

```

Compile the DPI code for the Solaris operating system:
% gcc -c -I<install_dir>/include hello_c.c
% gcc -shared -Bsymbolic -o hello_c.so hello_c.o

Simulate the design:
% vsim -c -sv_lib hello_c hello_top -do "run -all; quit -f"
# Loading work.hello_c
# Loading ./hello_c.so
VSIM 1> run -all
# Hello from c_task()
# Hello from verilog_task()
VSIM 2> quit

```

The PLI Callback reason Argument

The second argument to a PLI callback function is the reason argument. The values of the various reason constants are defined in the *veriuser.h* include file. See IEEE Std 1364 for a description of the reason constants. The following details relate to ModelSim Verilog, and may not be obvious in the IEEE Std 1364. Specifically, the simulator passes the reason values to the miscf callback functions under the following circumstances:

`reason_endofcompile`

For the completion of loading the design.

`reason_finish`

For the execution of the \$finish system task or the **quit** command.

`reason_startofsave`

For the start of execution of the **checkpoint** command, but before any of the simulation state has been saved. This allows the PLI application to prepare for the save, but it shouldn't save its data with calls to `tf_write_save()` until it is called with `reason_save`.

`reason_save`

For the execution of the **checkpoint** command. This is when the PLI application must save its state with calls to `tf_write_save()`.

`reason_startofrestart`

For the start of execution of the **restore** command, but before any of the simulation state has been restored. This allows the PLI application to prepare for the restore, but it shouldn't restore its state with calls to `tf_read_restart()` until it is called with `reason_restart`. The `reason_startofrestart` value is passed only for a restore command, and not in the case that the simulator is invoked with `-restore`.

`reason_restart`

For the execution of the **restore** command. This is when the PLI application must restore its state with calls to `tf_read_restart()`.

`reason_reset`

For the execution of the **restart** command. This is when the PLI application should free its memory and reset its state. We recommend that all PLI applications reset their internal state during a restart as the shared library containing the PLI code might not be

reloaded. (See the **-keeploaded** and **-keeploadedrestart** arguments to **vsim** for related information.)

`reason_endofreset`

For the completion of the **restart** command, after the simulation state has been reset but before the design has been reloaded.

`reason_interactive`

For the execution of the `$stop` system task or any other time the simulation is interrupted and waiting for user input.

`reason_scope`

For the execution of the **environment** command or selecting a scope in the structure window. Also for the call to `acc_set_interactive_scope()` if the `callback_flag` argument is non-zero.

`reason_paramvc`

For the change of value on the system task or function argument.

`reason_synch`

For the end of time step event scheduled by `tf_synchronize()`.

`reason_rosynch`

For the end of time step event scheduled by `tf_rosynchronize()`.

`reason_reactivate`

For the simulation event scheduled by `tf_setdelay()`.

`reason_paramdrc`

Not supported in ModelSim Verilog.

`reason_force`

Not supported in ModelSim Verilog.

`reason_release`

Not supported in ModelSim Verilog.

`reason_disable`

Not supported in ModelSim Verilog.

The **sizetf** Callback Function

A user-defined system function specifies the width of its return value with the `sizetf` callback function, and the simulator calls this function while loading the design. The following details on the `sizetf` callback function are not found in the IEEE Std 1364:

- If you omit the `sizetf` function, then a return width of 32 is assumed.
- The `sizetf` function should return 0 if the system function return value is of Verilog type "real".
- The `sizetf` function should return -32 if the system function return value is of Verilog type "integer".

PLI Object Handles

Many of the object handles returned by the PLI ACC routines are pointers to objects that naturally exist in the simulation data structures, and the handles to these objects are valid throughout the simulation, even after the acc_close() routine is called. However, some of the objects are created on demand, and the handles to these objects become invalid after acc_close() is called. The following object types are created on demand in ModelSim Verilog:

```
accOperator (acc_handle_condition)
accWirePath (acc_handle_path)
accTerminal (acc_handle_terminal, acc_next_cell_load, acc_next_driver, and
            acc_next_load)
accPathTerminal (acc_next_input and acc_next_output)
accTchkTerminal (acc_handle_tchkarg1 and acc_handle_tchkarg2)
accPartSelect (acc_handle_conn, acc_handle_pathin, and acc_handle_pathout)
```

If your PLI application uses these types of objects, then it is important to call acc_close() to free the memory allocated for these objects when the application is done using them.

If your PLI application places value change callbacks on accRegBit or accTerminal objects, *do not* call acc_close() while these callbacks are in effect.

Third Party PLI Applications

Many third party PLI applications come with instructions on using them with ModelSim Verilog. Even without the instructions, it is still likely that you can get it to work with ModelSim Verilog as long as the application uses standard PLI routines. The following guidelines are for preparing a Verilog-XL PLI application to work with ModelSim Verilog.

Generally, a Verilog-XL PLI application comes with a collection of object files and a veriuser.c file. The veriuser.c file contains the registration information as described above in [Registering PLI Applications](#). To prepare the application for ModelSim Verilog, you must compile the veriuser.c file and link it to the object files to create a dynamically loadable object (see [Compiling and Linking C Applications for Interfaces](#)). For example, if you have a *veriuser.c* file and a library archive *libapp.a* file that contains the application's object files, then the following commands should be used to create a dynamically loadable object for the Solaris operating system:

```
% cc -c -I<install_dir>/modeltech/include veriuser.c
% /usr/ccs/bin/ld -G -Bsymbolic -o app.sl veriuser.o libapp.a
```

The PLI application is now ready to be run with ModelSim Verilog. All that's left is to specify the resulting object file to the simulator for loading using the **Veriuser** entry in the *modesim.ini* file, the **-pli** simulator argument, or the PLIOBJ\$ environment variable (see [Registering PLI Applications](#)).

Support for VHDL Objects

The PLI ACC routines also provide limited support for VHDL objects in either an all VHDL design or a mixed VHDL/Verilog design. The following table lists the VHDL objects for which handles may be obtained and their type and fulltype constants:

Table D-3. Supported VHDL Objects

Type	Fulltype	Description
accArchitecture	accArchitecture	instantiation of an architecture
accArchitecture	accEntityVitalLevel0	instantiation of an architecture whose entity is marked with the attribute VITAL_Level0
accArchitecture	accArchVitalLevel0	instantiation of an architecture which is marked with the attribute VITAL_Level0
accArchitecture	accArchVitalLevel1	instantiation of an architecture which is marked with the attribute VITAL_Level1
accArchitecture	accForeignArch	instantiation of an architecture which is marked with the attribute FOREIGN and which does not contain any VHDL statements or objects other than ports and generics
accArchitecture	accForeignArchMixed	instantiation of an architecture which is marked with the attribute FOREIGN and which contains some VHDL statements or objects besides ports and generics
accBlock	accBlock	block statement
accForLoop	accForLoop	for loop statement
accForeign	accShadow	foreign scope created by mti_CreateRegion()
accGenerate	accGenerate	generate statement
accPackage	accPackage	package declaration
accSignal	accSignal	signal declaration

The type and fulltype constants for VHDL objects are defined in the *acc_vhdl.h* include file. All of these objects (except signals) are scope objects that define levels of hierarchy in the structure window. Currently, the PLI ACC interface has no provision for obtaining handles to generics, types, constants, variables, attributes, subprograms, and processes.

IEEE Std 1364 ACC Routines

ModelSim Verilog supports the following ACC routines:

Table D-4. Supported ACC Routines

Routines		
acc_append_delays	acc_free	acc_next
acc_append_pulsere	acc_handle_by_name	acc_next_bit
acc_close	acc_handle_calling_mod_m	acc_next_cell
acc_collect	acc_handle_condition	acc_next_cell_load
acc_compare_handles	acc_handle_conn	acc_next_child
acc_configure	acc_handle_hiconn	acc_next_driver
acc_count	acc_handle_interactive_scope	acc_next_hiconn
acc_fetch_argc	acc_handle_loconn	acc_next_input
acc_fetch_argv	acc_handle_modpath	acc_next_load
acc_fetch_attribute	acc_handle_notifier	acc_next_loconn
acc_fetch_attribute_int	acc_handle_object	acc_next_modpath
acc_fetch_attribute_str	acc_handle_parent	acc_next_net
acc_fetch_defname	acc_handle_path	acc_next_output
acc_fetch_delay_mode	acc_handle_pathin	acc_next_parameter
acc_fetch_delays	acc_handle_pathout	acc_next_port
acc_fetch_direction	acc_handle_port	acc_next_portout
acc_fetch_edge	acc_handle_scope	acc_next_primitive
acc_fetch_fullname	acc_handle_simulated_net	acc_next_scope
acc_fetch_fulltype	acc_handle_tchk	acc_next_specparam
acc_fetch_index	acc_handle_tchkarg1	acc_next_tchk
acc_fetch_location	acc_handle_tchkarg2	acc_next_terminal
acc_fetch_name	acc_handle_terminal	acc_next_topmod
acc_fetch_paramtype	acc_handle_tfarg	acc_object_in_typelist
acc_fetch_paramval	acc_handle_itfarg	acc_object_of_type
acc_fetch_polarity	acc_handle_tfinst	acc_product_type
acc_fetch_precision	acc_initialize	acc_product_version
acc_fetch_pulsere		acc_release_object
acc_fetch_range		acc_replace_delays
acc_fetch_size		acc_replace_pulsere
acc_fetch_tfarg		acc_reset_buffer
acc_fetch_itfarg		acc_set_interactive_scope
acc_fetch_tfarg_int		acc_set_pulsere
acc_fetch_itfarg_int		acc_set_scope
acc_fetch_tfarg_str		acc_set_value
acc_fetch_itfarg_str		acc_vcl_add
acc_fetch_timescale_info		acc_vcl_delete
acc_fetch_type		acc_version
acc_fetch_type_str		
acc_fetch_value		

`acc_fetch_paramval()` cannot be used on 64-bit platforms to fetch a string value of a parameter. Because of this, the function `acc_fetch_paramval_str()` has been added to the PLI for this use. `acc_fetch_paramval_str()` is declared in `acc_user.h`. It functions in a manner similar to `acc_fetch_paramval()` except that it returns a `char *`. `acc_fetch_paramval_str()` can be used on all platforms.

IEEE Std 1364 TF Routines

ModelSim Verilog supports the following TF (task and function) routines;

Table D-5. Supported TF Routines

Routines		
io_mcdprintf	tf_getrealtime	tf_scale_longdelay
io_printf	tf_igetrealtime	tf_scale_realdelay
mc_scan_plusargs	tf_gettime	tf_setdelay
tf_add_long	tf_igettime	tf_isetdelay
tf_asynchoff	tf_gettimeprecision	tf_setlongdelay
tf_iasyntchoff	tf_igettimeprecision	tf_isetlongdelay
tf_asynchon	tf_gettimeunit	tf_setrealdelay
tf_iasyntchon	tf_igettimeunit	tf_isetrealdelay
tf_clearalldelays	tf_getworkarea	tf_setworkarea
tf_iclearalldelays	tf_igetworkarea	tf_isetworkarea
tf_compare_long	tf_long_to_real	tf_sizep
tf_copypvc_flag	tf_longtime_tosr	tf_isizep
tf_icopypvc_flag	tf_message	tf_spname
tf_divide_long	tf_mipname	tf_ispname
tf_dofinish	tf_imipname	tf_strdelputp
tf_dostop	tf_movepvc_flag	tf_istrdelputp
tf_error	tf_imovepvc_flag	tf_strgetp
tf_evaluatep	tf_multiply_long	tf_istrgetp
tf_ievaluatep	tf_nodeinfo	tf_strgettme
tf_exprinfo	tf_inodeinfo	tf_strlongdelputp
tf_iexprinfo	tf_nump	tf_istrlongdelputp
tf_getcstringp	tf_inump	tf_strrealdelputp
tf_igetcstringp	tf_propagatep	tf_istrrealdelputp
tf_getinstance	tf_ipropagatep	tf_subtract_long
tf_getlongp	tf_putstrgp	tf_synchronize
tf_igetlongp	tf_iputlongp	tf_isynchronize
tf_getlongtime	tf_putp	tf_testpvc_flag
tf_igetlongtime	tf_iputp	tf_itestpvc_flag
tf_getnextlongtime	tf_putrealp	tf_text
tf_getp	tf_iputrealp	tf_typep
tf_igetp	tf_read_restart	tf_itypep
tf_getpchange	tf_real_to_long	tf_unscale_longdelay
tf_igetpchange	tf_rosynchronize	tf_unscale_realdelay
tf_getrealp	tf_irosynchronize	tf_warning
tf_igetrealp		tf_write_save

SystemVerilog DPI Access Routines

ModelSim SystemVerilog supports all routines defined in the "svdpi.h" file defined in the IEEE Std 1800-2005.

Verilog-XL Compatible Routines

The following PLI routines are not defined in IEEE Std 1364, but ModelSim Verilog provides them for compatibility with Verilog-XL.

```
char *acc_decompile_exp(handle condition)
```

This routine provides similar functionality to the Verilog-XL **acc_decompile_expr** routine. The condition argument must be a handle obtained from the **acc_handle_condition** routine. The value returned by **acc_decompile_exp** is the string representation of the condition expression.

```
char *tf_dumpfilename(void)
```

This routine returns the name of the VCD file.

```
void tf_dumpflush(void)
```

A call to this routine flushes the VCD file buffer (same effect as calling **\$dumpflush** in the Verilog code).

```
int tf_getlongsimtime(int *aof_hightime)
```

This routine gets the current simulation time as a 64-bit integer. The low-order bits are returned by the routine, while the high-order bits are stored in the **aof_hightime** argument.

64-bit Support for PLI

The PLI function **acc_fetch_paramval()** cannot be used on 64-bit platforms to fetch a string value of a parameter. Because of this, the function **acc_fetch_paramval_str()** has been added to the PLI for this use. **acc_fetch_paramval_str()** is declared in **acc_user.h**. It functions in a manner similar to **acc_fetch_paramval()** except that it returns a **char ***. **acc_fetch_paramval_str()** can be used on all platforms.

Using 64-bit ModelSim with 32-bit Applications

If you have 32-bit PLI/VPI/DPI applications and wish to use 64-bit ModelSim, you will need to port your code to 64 bits by moving from the ILP32 data model to the LP64 data model. We strongly recommend that you consult the 64-bit porting guides for Sun.

PLI/VPI Tracing

The foreign interface tracing feature is available for tracing PLI and VPI function calls. Foreign interface tracing creates two kinds of traces: a human-readable log of what functions were called, the value of the arguments, and the results returned; and a set of C-language files that can be used to replay what the foreign interface code did.

The Purpose of Tracing Files

The purpose of the logfile is to aid you in debugging PLI or VPI code. The primary purpose of the replay facility is to send the replay files to support for debugging co-simulation problems, or debugging PLI/VPI problems for which it is impractical to send the PLI/VPI code. We still need you to send the VHDL/Verilog part of the design to actually execute a replay, but many problems can be resolved with the trace only.

Invoking a Trace

To invoke the trace, call `vsim` with the `-trace_foreign` argument:

Syntax

```
vsim
  -trace_foreign <action> [-tag <name>]
```

Arguments

`<action>`

Can be either the value 1, 2, or 3. Specifies one of the following actions:

Table D-6. Values for `<action>` Argument

Value	Operation	Result
1	create log only	writes a local file called "mti_trace_<tag>"
2	create replay only	writes local files called "mti_data_<tag>.c", "mti_init_<tag>.c", "mti_replay_<tag>.c" and "mti_top_<tag>.c"
3	create both log and replay	writes all above files

`-tag <name>`

Used to give distinct file names for multiple traces. Optional.

Examples

```
vsim -trace_foreign 1 mydesign
Creates a logfile.
```

```
vsim -trace_foreign 3 mydesign
Creates both a logfile and a set of replay files.
```

```
vsim -trace_foreign 1 -tag 2 mydesign
Creates a logfile with a tag of "2".
```

The tracing operations will provide tracing during all user foreign code-calls, including PLI/VPI user tasks and functions (calltf, checktf, sizetf and misctf routines), and Verilog VCL callbacks.

Debugging Interface Application Code

In order to debug your PLI/VPI/DPI application code in a debugger, you must first:

1. Compile the application code with debugging information (using the **-g** option) and without optimizations (for example, don't use the **-O** option).
2. Load **vsim** into a debugger.

Even though **vsim** is stripped, most debuggers will still execute it. You can invoke the debugger directly on **vsimk**, the simulation kernel where your application code is loaded (for example, "ddd `which vsimk`"), or you can attach the debugger to an already running **vsim** process. In the second case, you must attach to the PID for **vsimk**, and you must specify the full path to the **vsimk** executable (for example, "gdb \$MTI_HOME/sunos5/vsimk 1234").

On Solaris and Linux systems you can use either **gdb** or **ddd**.

3. Set an entry point using breakpoint.

Since initially the debugger recognizes only **vsim**'s PLI/VPI/DPI function symbols, when invoking the debugger directly on **vsim** you need to place a breakpoint in the first PLI/VPI/DPI function that is called by your application code. An easy way to set an entry point is to put a call to `acc_product_version()` as the first executable statement in your application code. Then, after **vsim** has been loaded into the debugger, set a breakpoint in this function. Once you have set the breakpoint, run **vsim** with the usual arguments.

When the breakpoint is reached, the shared library containing your application code has been loaded.

4. In some debuggers, you must use the **share** command to load the application's symbols.

At this point all of the application's symbols should be visible. You can now set breakpoints in and single step through your application code.

Appendix E

Command and Keyboard Shortcuts

This appendix is a collection of the keyboard and command shortcuts available in the ModelSim GUI.

Command Shortcuts

- You may abbreviate command syntax, but there's a catch — the minimum number of characters required to execute a command are those that make it unique. Remember, as we add new commands some of the old shortcuts may not work. For this reason ModelSim does not allow command name abbreviations in macro files. This minimizes your need to update macro files as new commands are added.
- Multiple commands may be entered on one line if they are separated by semi-colons (;). For example:

```
vlog -nodebug=ports level3.v level2.v ; vlog -nodebug top.v
```

The return value of the last function executed is the only one printed to the transcript. This may cause some unexpected behavior in certain circumstances. Consider this example:

```
vsim -c -do "run 20 ; simstats ; quit -f" top
```

You probably expect the **simstats** results to display in the Transcript window, but they will not, because the last command is **quit -f**. To see the return values of intermediate commands, you must explicitly print the results. For example:

```
vsim -do "run 20 ; echo [simstats]; quit -f" -c top
```

Command History Shortcuts

You can review the simulator command history, or reuse previously entered commands with the following shortcuts at the ModelSim/VSIM prompt:

Table E-1. Command History Shortcuts

Shortcut	Description
!!	repeats the last command
!n	repeats command number n; n is the VSIM prompt number (e.g., for this prompt: VSIM 12>, n =12)
!abc	repeats the most recent command starting with "abc"

Table E-1. Command History Shortcuts (cont.)

Shortcut	Description
<code>^xyz^ab^</code>	replaces "xyz" in the last command with "ab"
up arrow and down arrow keys	scrolls through the command history
click on prompt	left-click once on a previous ModelSim or VSIM prompt in the transcript to copy the command typed at that prompt to the active cursor
his or history	shows the last few commands (up to 50 are kept)

Main and Source Window Mouse and Keyboard Shortcuts

The following mouse actions and special keystrokes can be used to edit commands in the entry region of the Main window. They can also be used in editing the file displayed in the Source window and all **Notepad** windows (enter the **notepad** command within ModelSim to open the Notepad editor).

Table E-2. Mouse Shortcuts

Mouse - UNIX and Windows	Result
Click the left mouse button	relocate the cursor
Click and drag the left mouse button	select an area
Shift-click the left mouse button	extend selection
Double-click the left mouse button	select a word
Double-click and drag the left mouse button	select a group of words
Ctrl-click the left mouse button	move insertion cursor without changing the selection
Click the left mouse button on a previous ModelSim or VSIM prompt	copy and paste previous command string to current prompt
Click the middle mouse button	paste selection to the clipboard
Click and drag the middle mouse button	scroll the window

Table E-3. Keyboard Shortcuts

Keystrokes - UNIX and Windows	Result
Left Arrow Right Arrow	move cursor left or right one character

Table E-3. Keyboard Shortcuts (cont.)

Keystrokes - UNIX and Windows	Result
Ctrl + Left Arrow Ctrl + Right Arrow	move cursor left or right one word
Shift + Any Arrow	extend text selection
Ctrl + Shift + Left Arrow Ctrl + Shift + Right Arrow	extend text selection by one word
Up Arrow Down Arrow	Transcript Pane: scroll through command history Source Window: move cursor one line up or down
Ctrl + Up Arrow Ctrl + Down Arrow	Transcript Pane: moves cursor to first or last line Source Window: moves cursor up or down one paragraph
Ctrl + Home	move cursor to the beginning of the text
Ctrl + End	move cursor to the end of the text
Backspace Ctrl + h (UNIX only)	delete character to the left
Delete Ctrl + d (UNIX only)	delete character to the right
Esc (Windows only)	cancel
Alt	activate or inactivate menu bar mode
Alt-F4	close active window
Home Ctrl + a	move cursor to the beginning of the line
Ctrl + Shift + a	select all contents of active window
Ctrl + b	move cursor left
Ctrl + d	delete character to the right
End Ctrl + e	move cursor to the end of the line
Ctrl + f (UNIX) Right Arrow (Windows)	move cursor right one character
Ctrl + k	delete to the end of line
Ctrl + n	move cursor one line down (Source window only under Windows)
Ctrl + o (UNIX only)	insert a new line character at the cursor
Ctrl + p	move cursor one line up (Source window only under Windows)

Table E-3. Keyboard Shortcuts (cont.)

Keystrokes - UNIX and Windows	Result
Ctrl + s (UNIX) Ctrl + f (Windows)	find
Ctrl + t	reverse the order of the two characters on either side of the cursor
Ctrl + u	delete line
Page Down Ctrl + v (UNIX only)	move cursor down one screen
Ctrl + w (UNIX) Ctrl + x (Windows)	cut the selection
Ctrl + s Ctrl + x (UNIX Only)	save
Ctrl + y (UNIX) Ctrl + v (Windows)	paste the selection
Ctrl + a (Windows Only)	select the entire contents of the widget
Ctrl + \	clear any selection in the widget
Ctrl + - (UNIX) Ctrl + / (UNIX) Ctrl + z (Windows)	undoes previous edits in the Source window
Meta + < (UNIX only)	move cursor to the beginning of the file
Meta + > (UNIX only)	move cursor to the end of the file
Page Up Meta + v (UNIX only)	move cursor up one screen
Meta + w (UNIX) Ctrl + c (Windows)	copy selection
F3	Performs a Find Next action in the Source Window.
F4 Shift+F4	Change focus to next pane in main window Change focus to previous pane in main window
F5 Shift+F5	Toggle between expanding and restoring size of pane to fit the entire main window Toggle on/off the pane headers.
F8	search for the most recent command that matches the characters typed (Main window only)
F9	run simulation
F10	continue simulation
F11 (Windows only)	single-step

Table E-3. Keyboard Shortcuts (cont.)

Keystrokes - UNIX and Windows	Result
F12 (Windows only)	step-over

The Main window allows insertions or pastes only after the prompt; therefore, you don't need to set the cursor when copying strings to the command line.

List Window Keyboard Shortcuts

Using the following keys when the mouse cursor is within the List window will cause the indicated actions:

Table E-4. List Window Keyboard Shortcuts

Key - UNIX and Windows	Action
Left Arrow	scroll listing left (selects and highlights the item to the left of the currently selected item)
Right Arrow	scroll listing right (selects and highlights the item to the right of the currently selected item)
Up Arrow	scroll listing up
Down Arrow	scroll listing down
Page Up Ctrl + Up Arrow	scroll listing up by page
Page Down Ctrl + Down Arrow	scroll listing down by page
Tab	searches forward (down) to the next transition on the selected signal
Shift + Tab	searches backward (up) to the previous transition on the selected signal
Shift + Left Arrow Shift + Right Arrow	extends selection left/right
Ctrl + f (Windows) Ctrl + s (UNIX)	opens the Find dialog box to find the specified item label within the list display

Wave Window Mouse and Keyboard Shortcuts

The following mouse actions and keystrokes can be used in the Wave window.

Table E-5. Wave Window Mouse Shortcuts

Mouse action ¹	Result
Ctrl + Click left mouse button and drag	zoom area (in)
Ctrl + Click left mouse button and drag	zoom out
Ctrl + Click left mouse button and drag	zoom fit
Click left mouse button and drag	moves closest cursor
Ctrl + Click left mouse button on a scroll bar arrow	scrolls window to very top or bottom (vertical scroll) or far left or right (horizontal scroll)
Click middle mouse button in scroll bar (UNIX only)	scrolls window to position of click

1. If you choose **Wave > Mouse Mode > Zoom Mode**, you do not need to press the Ctrl key.

Table E-6. Wave Window Keyboard Shortcuts

Keystroke	Action
s	bring into view and center the currently active cursor
i Shift + i +	zoom in (mouse pointer must be over the cursor or waveform panes)
o Shift + o -	zoom out (mouse pointer must be over the cursor or waveform panes)
f Shift + f	zoom full (mouse pointer must be over the cursor or waveform panes)
l Shift + l	zoom last (mouse pointer must be over the cursor or waveform panes)
r Shift + r	zoom range (mouse pointer must be over the cursor or waveform panes)

Table E-6. Wave Window Keyboard Shortcuts

Keystroke	Action
Up Arrow Down Arrow	scrolls entire window up or down one line, when mouse pointer is over waveform pane scrolls highlight up or down one line, when mouse pointer is over pathname or values pane
Left Arrow	scroll pathname, values, or waveform pane left
Right Arrow	scroll pathname, values, or waveform pane right
Page Up	scroll waveform pane up by a page
Page Down	scroll waveform pane down by a page
Tab	search forward (right) to the next transition on the selected signal - finds the next edge
Shift + Tab	search backward (left) to the previous transition on the selected signal - finds the previous edge
Ctrl + f (Windows) Ctrl + s (UNIX)	open the find dialog box; searches within the specified field in the pathname pane for text strings
Ctrl + Left Arrow Ctrl + Right Arrow	scroll pathname, values, or waveform pane left or right by a page

Appendix F Setting GUI Preferences

The ModelSim GUI is programmed using Tcl/Tk. It is highly customizable. You can control everything from window size, position, and color to the text of window prompts, default output filenames, and so forth.

Most user GUI preferences are stored as Tcl variables in the *.modelsim* file on Unix/Linux platforms or the Registry on Windows platforms. The variable values save automatically when you exit ModelSim. Some of the variables are modified by actions you take with menus or windows (e.g., resizing a window changes its geometry variable). Or, you can edit the variables directly either from the ModelSim> prompt or the Preferences dialog.

Customizing the Simulator GUI Layout

You can customize the layout of panes, windows, toolbars, etc. This section discusses layouts and how they are used in ModelSim.

Layouts and Modes of Operation

ModelSim ships with four default layouts that correspond to three modes of operation.

Table F-1. Predefined GUI Layouts

Layout	Mode
NoDesign	a design is not yet loaded
Simulate	a design is loaded
Coverage	a design is loaded with code coverage enabled
VMgmt	an option to use when working with Verification Management

As you load and unload designs, ModelSim switches between the layouts.

Custom Layouts


You can create custom layouts or modify the three default layouts.

Creating Custom Layouts

To create a custom layout or modify one of the default layouts, follow these steps:

1. Rearrange the GUI as you see fit (see [Navigating the Graphic User Interface](#) for details).
2. Select **Layout > Save**.

Figure F-1. Save Current Window Layout Dialog Box

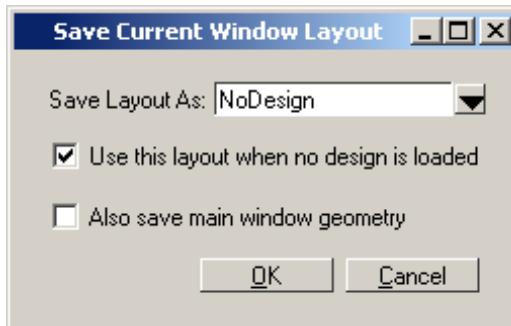

3. Specify a new name or use an existing name to overwrite that layout.
4. Click OK.


The layout is saved to the *.modelsim* file (or Registry on Windows).

Assigning Layouts to Modes

You can assign which layout appears in each mode (no design loaded, design loaded, design loaded with coverage). Follow these steps:

1. Create your custom layouts as described above.
2. Select **Layout > Configure**.

Example F-1. Configure Window Layouts Dialog Box

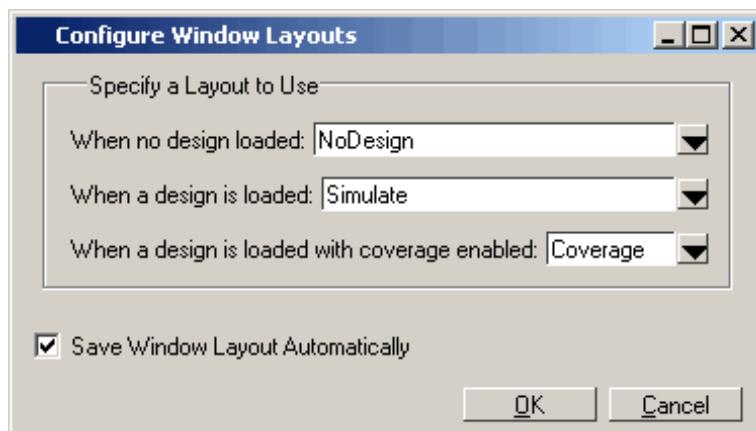

3. Select a layout for each mode.
4. Click OK.

The layout assignment is saved to the *.modelsim* file (Registry on Windows).

Automatic Saving of Layouts

By default any changes you make to a layout are saved automatically when you exit the tool or when you change modes. For example, if you load a design with code coverage, rearrange some windows, and then quit the simulation, the changes are saved to whatever layout was assigned to the "load with coverage" mode.

To disable automatic saving of layouts, select **Layout > Configure** and uncheck **Save Window Layout Automatically**.

Resetting Layouts to Their Defaults

You can reset the layouts for the three modes to their original defaults. Select **Layout > Reset**. This command does not delete custom layouts.


Navigating the Graphic User Interface

This section discusses how to rearrange various elements of the GUI.

Manipulating Panes

Window panes (e.g., Workspace) can be positioned at various places within the parent window or they can be dragged out ("undocked") of the parent window altogether.

Figure F-2. GUI: Window Pane

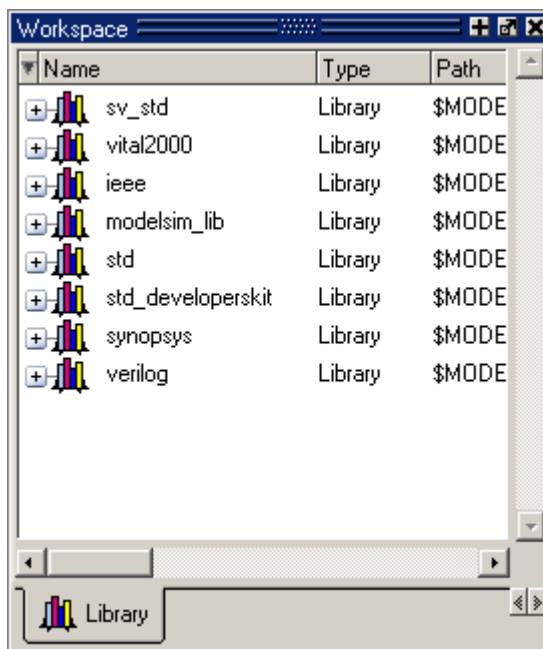

Moving Panes

When you see a double bar at the top edge of a pane, it means you can modify the pane position.

Figure F-3. GUI: Double Bar



Click-and drag the pane handle in the middle of a double bar (your mouse pointer will change to a four-headed arrow when it is in the correct location) to reposition the pane inside the parent window. As you move the mouse to various parts of the main window, a gray outline will show you valid locations to drop the pane.

Or, drag the pane outside of the parent window, and when you let go of the mouse button, the pane becomes a free-floating window.

Docking and Undocking Panes

You can undock a pane by clicking the undock button in the heading of a pane.

Figure F-4. GUI: Undock Button



To redock a floating pane, click on the pane handle at the top of the window and drag it back into the parent window, or click the dock icon.


Figure F-5. GUI: Dock Button



Zooming Panes

You can expand panes to fill the entire Main window by clicking the zoom icon in the heading of the pane.

Figure F-6. GUI: Zoom Button

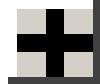

To restore the pane to its original size and position click the unzoom button in the heading of the pane.

Figure F-7. GUI: Unzoom Button



Columnar Information Display


Many panes (e.g., Objects, Workspace, etc.) display information in a columnar format. You can perform a number of operations on columnar formats:

- Click and drag on a column heading to rearrange columns
- Click and drag on a border between column names to increase/decrease column size
- Sort columns by clicking once on the column heading to sort in ascending order; clicking twice to sort in descending order; and clicking three times to sort in default order.
- Hide or show columns by either right-clicking a column heading and selecting an object from the context menu or by clicking the column-list drop down arrow and selecting an object.

Quick Access Toolbars

Toolbar buttons provide access to commonly used commands and functions. Toolbars can be docked and undocked (moved to or from the main toolbar area) by clicking and dragging on the toolbar handle at the left-edge of a toolbar.

Figure F-8. Toolbar Manipulation

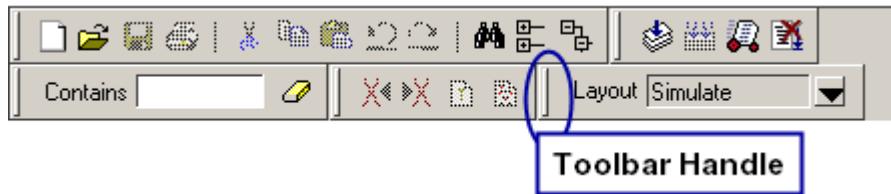

You can also hide/show the various toolbars. To hide or show a toolbar, right-click on a blank spot of the main toolbar area and select a toolbar from the list.

To reset toolbars to their original state, right-click on a blank spot of the main toolbar area and select **Reset**.

Simulator GUI Preferences


Simulator GUI preferences are stored by default either in the *.modelsim* file in your HOME directory on UNIX/Linux platforms or the Registry on Windows platforms.

Setting Preference Variables from the GUI


To edit a variable value from the GUI, select **Tools > Edit Preferences**.

The dialog organizes preferences into two tab groups: By Window and By Name. The By Window tab primarily allows you to change colors and fonts for various GUI objects. For example, if you want to change the color of the text in the Source window, do the following:


1. Select "Source window" from the Window List column.

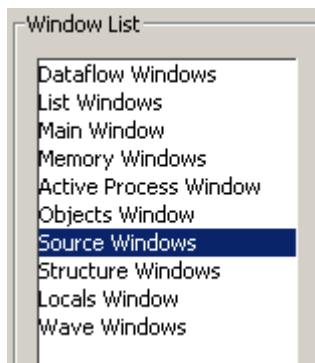


2. Select "Text" from the Source Color Scheme column.

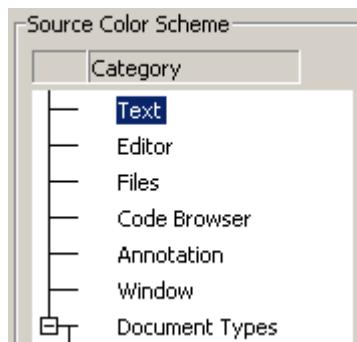

3. Click the type of text you want to change (Regular Text, Selected Text, Found Text, etc.) from the Colors area.

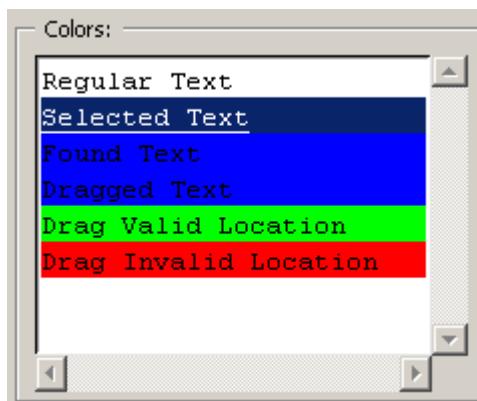


4. Click the “Foreground” or “Background” color block.

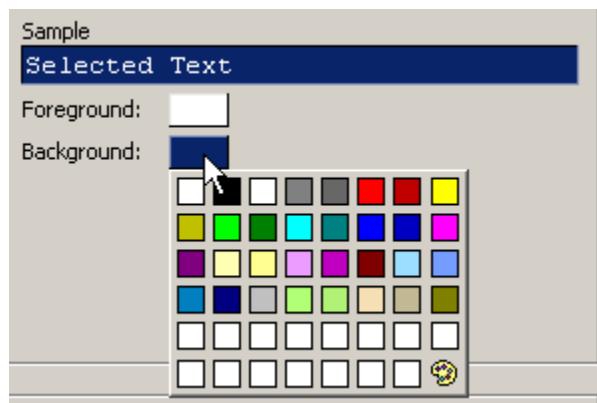

5. Select a color from the palette.

To change the font type and/or size of the window selected in the Windows List column, use the Fonts section of the By Window tab that appears under “General Text Settings” ([Figure F-9](#)).

Figure F-9. Change Text Fonts for Selected Windows

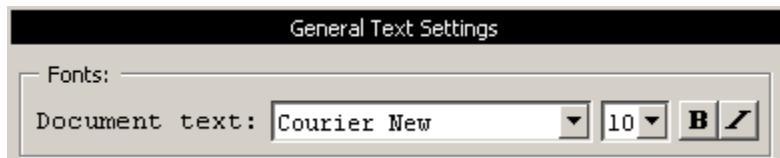

You can also make global font changes to all GUI windows with the Fonts section of the By Window tab (Figure F-10).

Figure F-10. Making Global Font Changes

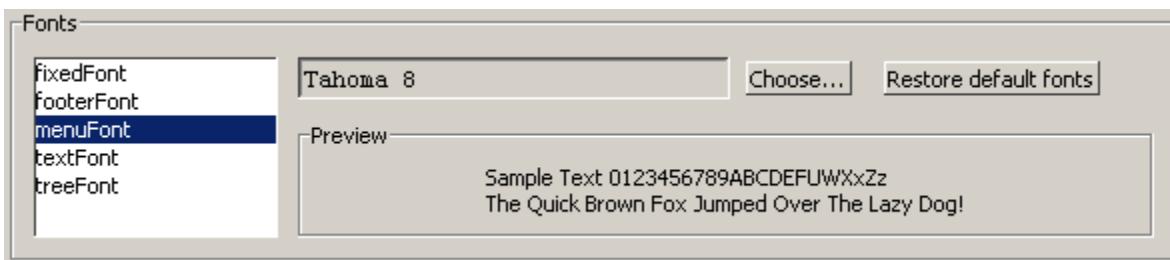


Table F-2. Global Fonts

Global Font Name	Description
fixedFont	for all text in Source window and Notepad display, and in all text entry fields or boxes
footerFont	for all footer text that appears in footer of Main window and all undoced windows
menuFont	for all menu text
textFont	for Transcript window text and text in list boxes
treeFont	for all text that appears in any window that displays a hierarchical tree

The By Name tab lists every Tcl variable in a tree structure. The procedure for changing a Tcl variable is:

1. Expand the tree.
2. Highlight a variable.
3. Click **Change Value** to edit the current value.

Clicking **OK** or **Apply** at the bottom of the Preferences dialog changes the variable, and the change is saved when you exit ModelSim.

Saving GUI Preferences

GUI preferences are saved automatically when you exit the tool.

If you prefer to store GUI preferences elsewhere, set the **MODELSIM_PREFERENCES** environment variable to designate where these preferences are stored. Setting this variable causes ModelSim to use a specified path and file instead of the default location. Here are some additional points to keep in mind about this variable setting:

- The file does not need to exist before setting the variable as ModelSim will initialize it.
- If the file is read-only, ModelSim will not update or otherwise modify the file.
- This variable may contain a relative pathname, in which case the file is relative to the working directory at the time the tool is started.

The **modelsim.tcl** File

Previous versions saved user GUI preferences into a *modelsim.tcl* file. Current versions will still read in a *modelsim.tcl* file if it exists. ModelSim searches for the file as follows:

- use **MODELSIM_TCL** environment variable if it exists (if MODELSIM_TCL is a list of files, each file is loaded in the order that it appears in the list); else
- use *./modelsim.tcl*; else
- use \$(HOME)/modelsim.tcl if it exists

Note that in versions 6.1 and later, ModelSim will save to the *.modelsim* file any variables it reads in from a *modelsim.tcl* file. The values from the *modelsim.tcl* file will override like variables in the *.modelsim* file.

Appendix G

System Initialization

ModelSim goes through numerous steps as it initializes the system during startup. It accesses various files and environment variables to determine library mappings, configure the GUI, check licensing, and so forth.

Files Accessed During Startup

The table below describes the files that are read during startup. They are listed in the order in which they are accessed.

Table G-1. Files Accessed During Startup

File	Purpose
<i>modelsim.ini</i>	contains initial tool settings; see Simulator Control Variables for specific details on the <i>modelsim.ini</i> file
location map file	used by ModelSim tools to find source files based on easily reallocated "soft" paths; default file name is <i>mgc_location_map</i>
<i>pref.tcl</i>	contains defaults for fonts, colors, prompts, window positions, and other simulator window characteristics
.modelsim (UNIX) or Windows registry	contains last working directory, project file, printer defaults, and other user-customized GUI characteristics
<i>modelsim.tcl</i>	contains user-customized settings for fonts, colors, prompts, other GUI characteristics; maintained for backwards compatibility with older versions (see The modelsim.tcl File)
<i><project_name>.mpf</i>	if available, loads last project file which is specified in the registry (Windows) or <i>\$(HOME)/.modelsim</i> (UNIX); see What are Projects? for details on project settings

Initialization Sequence

The following list describes in detail ModelSim's initialization sequence. The sequence includes a number of conditional structures, the results of which are determined by the existence of certain files and the current settings of environment variables.

In the steps below, names in uppercase denote environment variables (except MTI_LIB_DIR which is a Tcl variable). Instances of `$(NAME)` denote paths that are determined by an environment variable (except `$(MTI_LIB_DIR)` which is determined by a Tcl variable).

1. Determines the path to the executable directory `(./modeltech/<platform>)`. Sets MODEL_TECH to this path, *unless* MODEL_TECH_OVERRIDE exists, in which case MODEL_TECH is set to the same value as MODEL_TECH_OVERRIDE.

Environment Variables used: [MODEL_TECH](#), [MODEL_TECH_OVERRIDE](#)

2. Finds the `modelsim.ini` file by evaluating the following conditions:

- use `$MODELSIM` (which specifies the directory location and name of a `modelsim.ini` file) if it exists; else
- use `$(MGC_WD)/modelsim.ini`; else
- use `./modelsim.ini`; else
- use `$(MODEL_TECH)/modelsim.ini`; else
- use `$(MODEL_TECH)/../modelsim.ini`; else
- use `$(MGC_HOME)/lib/modelsim.ini`; else
- set path to `./modelsim.ini` even though the file doesn't exist

Environment Variables used: [MODELSIM](#), [MGC_WD](#), [MGC_HOME](#)

3. Finds the location map file by evaluating the following conditions:

- use MGC_LOCATION_MAP if it exists (if this variable is set to "no_map", ModelSim skips initialization of the location map); else
- use `mgc_location_map` if it exists; else
- use `$(HOME)/mgc/mgc_location_map`; else
- use `$(HOME)/mgc_location_map`; else
- use `$(MGC_HOME)/etc/mgc_location_map`; else
- use `$(MGC_HOME)/shared/etc/mgc_location_map`; else
- use `$(MODEL_TECH)/mgc_location_map`; else
- use `$(MODEL_TECH)/../mgc_location_map`; else
- use no map

Environment Variables used: [MGC_LOCATION_MAP](#), [HOME](#), [MGC_HOME](#), [MODEL_TECH](#)

4. Reads various variables from the [vsim] section of the `modelsim.ini` file. See [Simulation Control Variables](#) for more details.

5. Parses any command line arguments that were included when you started ModelSim and reports any problems.
6. Defines the following environment variables:
 - use MODEL_TECH_TCL if it exists; else
 - set MODEL_TECH_TCL=\$(MODEL_TECH_TCL)/..*tcl*
 - set TCL_LIBRARY=\$(MODEL_TECH_TCL)/*tcl8.4*
 - set TK_LIBRARY=\$(MODEL_TECH_TCL)/*tk8.4*
 - set ITCL_LIBRARY=\$(MODEL_TECH_TCL)/*itcl3.0*
 - set ITK_LIBRARY=\$(MODEL_TECH_TCL)/*itk3.0*
 - set VSIM_LIBRARY=\$(MODEL_TECH_TCL)/*vsim*

Environment Variables used: [MODEL_TECH_TCL](#), [TCL_LIBRARY](#), [TK_LIBRARY](#), [MODEL_TECH](#), [ITCL_LIBRARY](#), [ITK_LIBRARY](#), [VSIM_LIBRARY](#)

7. Initializes the simulator's Tcl interpreter.
8. Checks for a valid license (a license is not checked out unless specified by a *modelsim.ini* setting or command line option).
9. The next four steps relate to initializing the graphical user interface.
10. Sets Tcl variable MTI_LIB_DIR=\$(MODEL_TECH_TCL)

Environment Variables used: [MTI_LIB_DIR](#), [MODEL_TECH_TCL](#)

11. Loads \$(MTI_LIB_DIR)/*vsim/pref.tcl*.

Environment Variables used: [MTI_LIB_DIR](#)

12. Loads GUI preferences, project file, etc. from the registry (Windows) or \$(HOME)/.modelsim (UNIX).

Environment Variables used: [HOME](#)

13. Searches for the *modelsim.tcl* file by evaluating the following conditions:

- use MODELSIM_TCL environment variable if it exists (if MODELSIM_TCL is a list of files, each file is loaded in the order that it appears in the list); else
- use ./*modelsim.tcl*; else
- use \$(HOME)/*modelsim.tcl* if it exists

Environment Variables used: [HOME](#), [MODEL_TECH_TCL](#)

That completes the initialization sequence. Also note the following about the *modelsim.ini* file:

- When you change the working directory within ModelSim, the tool reads the [library], [vcom], and [vlog] sections of the local *modelsim.ini* file. When you make changes in the compiler or simulator options dialog or use the **vmap** command, the tool updates the appropriate sections of the file.
- The *pref.tcl* file references the default .ini file via the [GetPrivateProfileString] Tcl command. The .ini file that is read will be the default file defined at the time *pref.tcl* is loaded.

Index

— Symbols —

#, comment character, [396](#)
\$disable_signal_spy, [343](#)
\$enable_signal_spy, [345](#)
\$finish
 behavior, customizing, [436](#)
\$sdf_annotate system task, [366](#)
\$unit scope, visibility in SV declarations, [209](#)
.ini control variables
 AssertFile, [428](#)
 AssertionDebug, [429](#)
 BreakOnAssertion, [429](#)
 CheckPlusargs, [429](#)
 CheckpointCompressMode, [429](#)
 CommandHistory, [429](#)
 ConcurrentFileLimit, [429](#)
 DatasetSeparator, [430](#)
 DefaultForceKind, [430](#)
 DefaultRadix, [430](#)
 DefaultRestartOptions, [430](#)
 DelayFileOpen, [430](#)
 DumpportsCollapse, [431](#)
 ErrorFile, [431](#)
 ExpandedTimeDisplayRatio, [431](#)
 GenerateFormat, [431](#)
 GenerousIdentifierParsing, [431](#)
 GlobalSharedObjectList, [432](#)
 IgnoreError, [432](#)
 IgnoreFailure, [432](#)
 IgnoreNote, [432](#)
 IgnoreWarning, [432](#)
 IterationLimit, [432](#)
 License, [433](#)
 MessageFormat, [434](#)
 MessageFormatBreak, [434](#)
 MessageFormatBreakLine, [434](#)
 MessageFormatError, [435](#)
 MessageFormatFail, [435](#)
 MessageFormatFatal, [435](#)
 MessageFormatNote, [435](#)

MessageFormatWarning, [435](#)
NumericStdNoWarnings, [436](#)
PathSeparator, [436](#)
Resolution, [438](#)
RunLength, [438](#)
Startup, [439](#)
StdArithNoWarnings, [439](#)
ToggleCountLimit, [439](#)
ToggleMaxIntValues, [439](#)
ToggleVlogIntegers, [440](#)
ToggleWidthLimit, [440](#)
TranscriptFile, [440](#)
UnbufferedOutput, [440](#)
UserTimeUnit, [440](#)
Veriuser, [441](#)
WarnConstantChange, [441](#)
WaveSignalNameWidth, [441](#)
WLFCacheSize, [441](#)
WLFCollapseMode, [441](#)
WLFCompress, [442](#)
WLFDeleteOnQuit, [442](#)
WLFFilename, [442](#)
WLFOptimize, [442](#)
WLFSaveAllRegions, [442](#)
WLFSimCacheSize, [442](#)
WLFSIZELimit, [443](#)
WLFTimeLimit, [443](#)
.ini variables
 set simulator control with GUI, [443](#)
.modelsim file
 in initialization sequence, [517](#)
 purpose, [515](#)
.so, shared object file
 loading PLI/VPI/DPI C applications, [479](#)
 loading PLI/VPI/DPI C++ applications, [481](#)

— Numerics —

0-In tools
 setting environment variable, [413](#)

1076, IEEE Std, 33
differences between versions, 175
1364, IEEE Std, 33, 203
1364-2005
 IEEE std, 129, 371
64-bit time
 now variable, 453
 Tcl time commands, 401
64-bit vsim, using with 32-bit FLI apps, 494

— A —

ACC routines, 491
accelerated packages, 170
access
 hierarchical objects, 341
Active Processes pane, 67
 see also windows, Active Processes pane
Algorithm
 negative timing constraint, 229
AmsStandard .ini file variable, 420
analog sidebar, 121
architecture simulator state variable, 451
archives
 described, 164
argc simulator state variable, 451
arguments
 passing to a DO file, 406
arithmetic package warnings, disabling, 450
AssertFile .ini file variable, 428
AssertionDebug .ini variable, 429
assertions
 file and line number, 434
 message display, 445
 messages
 turning off, 449
 setting format of messages, 434
 warnings, locating, 434

— B —

bad magic number error message, 255
base (radix)
 List window, 306
 Wave window, 299
batch-mode simulations, 32
BindAtCompile .ini file variable, 420
binding, VHDL, default, 179

blocking assignments, 221
bookmarks
 Source window, 103
 Wave window, 290
break
 stop simulation run, 51, 59
BreakOnAssertion .ini file variable, 429
Breakpoints

 command execution, 103
 conditional, 103
 deleting, 101
 edit, 101
 load, 103
 saving/restoring, 321
 set with GUI, 100
breakpoints
 deleting, 321
 edit, 318, 321
 Source window, viewing in, 93
Breakpnts
 save, 103
.bsm file, 333
buffered/unbuffered output, 440
busses
 RTL-level, reconstructing, 264
 user-defined, 310

— C —

C applications
 compiling and linking, 479
C++ applications
 compiling and linking, 481
Call Stack pane, 74
cancelling scheduled events, performance, 201
causality, tracing in Dataflow window, 330
cell libraries, 236
change command
 modifying local variables, 239
chasing X, 330
-check_synthesis argument
 warning message, 462
CheckPlusargs .ini file variable (VLOG), 429
CheckpointCompressMode .ini file variable,
 429
CheckSynthesis .ini file variable, 420
clock change, sampling signals at, 316

clock cycles
 display in timeline, [297](#)
Clocking block inout display, [126](#)
collapsing time and delta steps, [262](#)
Color
 radix
 example, [43](#)
colorization, in Source window, [104](#)
columns
 hide/showing in GUI, [509](#)
 moving, [509](#)
 sorting by, [509](#)
Combine Selected Signals dialog box, [82](#)
combining signals, busses, [310](#)
CommandHistory .ini file variable, [429](#)
command-line mode, [31](#)
commands
 event watching in DO file, [405](#)
 system, [399](#)
 vcf2wlf, [387](#)
 VSIM Tcl commands, [400](#)
 where, [418](#)
comment character
 Tcl and DO files, [396](#)
compare signal, virtual
 restrictions, [310](#)
compare simulations, [253](#)
compilation
 multi-file issues (SystemVerilog), [209](#)
compilation unit scope, [209](#)
compile order
 auto generate, [151](#)
 changing, [150](#)
 SystemVerilog packages, [205](#)
Compiler Control Variable
 SystemC
 CppOptions, [428](#)
Compiler Control Variables
 Verilog
 DisableOpt, [425](#)
 GenerateLoopIterationMax, [425](#)
 GenerateRecursionDepthMax, [426](#)
 Hazard, [426](#)
 Incremental, [426](#)
 LibrarySearchPath, [426](#)
MultiFileCompilationUnit, [426](#)
NoDebug, [427](#)
Quiet, [427](#)
Show_WarnMatchCadence, [427](#)
Show_BadOptionWarning, [427](#)
Show_Lint, [427](#)
Show_source, [427](#)
vlog95compat, [428](#)
VHDL
 AmsStandard, [420](#)
 BindAtCompile, [420](#)
 CheckSynthesis, [420](#)
 DisableOpt, [421](#)
 Explicit, [421](#)
 IgnoreVitalErrors, [421](#)
 NoCaseStaticError, [421](#)
 NoDebug, [421](#)
 NoIndexCheck, [422](#)
 NoOthersStaticError, [422](#)
 NoRangeCheck, [422](#)
 NoVital, [422](#)
 NoVitalCheck, [422](#)
 Optimize_1164, [422](#)
 PedanticErrors, [423](#)
 Quiet, [423](#)
 RequireConfigForAllDefaultBinding, [423](#)
 Show_Lint, [423](#)
 Show_source, [423](#)
 Show_VitalChecksOpt, [423](#)
 Show_VitalChecksWarning, [423](#)
 Show_Warning1, [424](#)
 Show_Warning10, [425](#)
 Show_Warning2, [424](#)
 Show_Warning3, [424](#)
 Show_Warning4, [424](#)
 Show_Warning5, [424](#)
 Show_Warning9, [424](#)
 Show_WarnLocallyStaticError, [425](#)
 VHDL93, [425](#)
compiler directives, [249](#)
 IEEE Std 1364-2000, [249](#)
 XL compatible compiler directives, [250](#)
compiling
 overview, [29](#)

changing order in the GUI, 150
grouping files, 151
order, changing in projects, 150
properties, in projects, 159
range checking in VHDL, 174
Verilog, 204
 incremental compilation, 205
 XL 'uselib compiler directive, 211
 XL compatible options, 210
VHDL, 173, 174
 VITAL packages, 188
compiling C code, gcc, 480
component, default binding rules, 179
Compressing files
 VCD tasks, 384
ConcurrentFileLimit .ini file variable, 429
configuration simulator state variable, 452
configurations
 Verilog, 214
connectivity, exploring, 326
Constraint algorithm
 negative timing checks, 229
Contains, 54
context menus
 Library tab, 166
Convergence
 delay solution, 229
convert real to time, 191
convert time to real, 190
CppOptions .ini file variable (sccom), 428
create debug database, 324
Creating do file, 44, 309, 321
cursor linking, 122
cursors
 adding, deleting, locking, naming, 275
 link to Dataflow window, 336
 linking, 277
 measuring time with, 273
 trace events with, 330
 Wave window, 273
Customize GUI
 fonts, 512
customizing
 via preference variables, 510

— D —
deltas
 explained, 180
database
 post-sim debug, 324
Dataflow
 post-sim debug database
 create, 324
 post-sim debug flow, 324
Dataflow window, 79, 323
 extended mode, 323
 pan, 339
 zoom, 339
 see also windows, Dataflow window
dataflow.bsm file, 333
Dataset Browser, 259
Dataset Snapshot, 261
datasets, 253
 managing, 259
 opening, 257
 restrict dataset prefix display, 261
 view structure, 258
DatasetSeparator .ini file variable, 430
debug database
 create, 324
debug flow
 post-simulation, 324
debugging
 null value, 224
 SIGSEGV, 224
debugging the design, overview, 30
default binding
 BindAtCompile .ini file variable, 420
 disabling, 180
default binding rules, 179
Default editor, changing, 412
DefaultForceKind .ini file variable, 430
DefaultRadix .ini file variable, 430
DefaultRestartOptions .ini variable, 430
DefaultRestartOptions variable, 450
delay
 delta delays, 180
 modes for Verilog models, 237
Delay solution convergence, 229
DelayFileOpen .ini file variable, 430

deleting library contents, 165
delta collapsing, 262
delta simulator state variable, 452
Delta time
 recording
 for expanded time viewing, 280
deltas
 in List window, 314
 referencing simulator iteration
 as a simulator state variable, 452
dependent design units, 174
descriptions of HDL items, 103
design library
 creating, 165
 logical name, assigning, 166
 mapping search rules, 168
 resource type, 163
 VHDL design units, 173
 working type, 163
design object icons, described, 39
design units, 163
DEVICE
 matching to specify path delays, 369
dialogs
 Runtime Options, 443
Direct Programming Interface, 467
directories
 moving libraries, 168
disable_signal.spy, 343
DisableOpt.ini file variable, 421, 425
Display mode
 expanded time, 284
display preferences
 Wave window, 296
displaymsgmode.ini file variable, 448
distributed delay mode, 237
dividers
 Wave window, 300
DLL files, loading, 479, 481
DO files (macros)
 error handling, 409
 executing at startup, 414, 439
 parameters, passing to, 406
 Tcl source command, 409
docking
window panes, 507
DOPATH environment variable, 412
DPI
 export TFs, 461
 missing DPI import function, 476
 registering applications, 472
 use flow, 473
DPI access routines, 493
DPI export TFs, 461
DPI/VPI/PLI, 467
drivers
 Dataflow Window, 327
 show in Dataflow window, 317
 Wave window, 317
dumpports tasks, VCD files, 382
DumpportsCollapse.ini file variable, 431

— E —

edit
 breakpoints, 101, 318, 321
Editing
 in notepad windows, 498
 in the Main window, 498
 in the Source window, 498
EDITOR environment variable, 412
editor, default, changing, 412
embedded wave viewer, 328
empty port name warning, 462
enable_signal.spy, 345
encrypt
 IP code
 public keys, 132
 undefined macros, 130
 vendor-defined macros, 133
 IP source code, 129
 usage models, 129
 protect pragmas, 129
 vencrypt utility, 129
 vencrypt command
 header file, 131
 vlog +protect, 134, 136
encrypting IP code
 vencrypt utility, 129
Encryption
 using Mentor Graphics public key, 132
encryption

‘protect compiler directive, 136
securing pre-compiled libraries, 138
ENDFILE function, 186
ENDLINE function, 186
‘endprotect compiler directive, 136
entities
 default binding rules, 179
entity simulator state variable, 452
environment variables, 411
 expansion, 411
 referencing from command line, 417
 referencing with VHDL FILE variable, 417
 setting, 412
 setting in Windows, 416
TranscriptFile, specifying location of, 440
used in Solaris linking for FLI, 482
used in Solaris linking for
 PLI/VPI/DPI/FLI, 413
using with location mapping, 455
variable substitution using Tcl, 399
error
 can’t locate C compiler, 461
Error .ini file variable, 447
ErrorFile .ini file variable, 431
errors
 bad magic number, 255
 DPI missing import function, 476
 getting more information, 457
 severity level, changing, 458
 SystemVerilog, missing declaration, 426
 Tcl_init error, 463
 VSIM license lost, 464
escaped identifiers, 235
 Tcl considerations, 236
event order
 in Verilog simulation, 219
event queues, 219
Event time
 recording
 for expanded time viewing, 280
event watching commands, placement of, 405
events, tracing, 330
examine command
 expanded time, 289
exit codes, 460
existing tool on sc_stop or \$finish, 436
expand
 environment variables, 411
expand net, 326
Expanded Time
 customizing Wave window, 284
 examine command, 289
 expanding/collapsing sim time, 286
 with commands, 286
 with menu selections, 286
 with mouse cursor, 287
 with toolbar buttons, 286
 in Wave and List, 279
List window output
 write list command, 287
recording, 280
 delta time, 280
 even time, 280
searchlog command, 289
selecting display mode, 284
 with command, 286
 with menus, 285
 with toolbar buttons, 285
switching time mode, 286
terminology, 279
viewing in List window, 287
viewing in Wave window, 281
ExpandedTimeDisplayRatio .ini file variable,
 431
Explicit .ini file variable, 421
export TFs, in DPI, 461
Expression Builder, 293
 configuring a List trigger with, 315
 saving expressions to Tcl variable, 295
Extended system tasks
 Verilog, 248

— F —

F8 function key, 500
Fatal .ini file variable, 447
Fatal error
 SIGSEGV, 225
File compression
 VCD tasks, 384
file I/O
 TextIO package, 183

file-line breakpoints, 100
 edit, 101, 321
files
 .modelsim, 515
files, grouping for compile, 151
Filter, 54
filtering
 signals in Objects window, 92
Find
 stop, 292
find
 inline search bar, 40, 104, 107
folders, in projects, 157
Fonts
 make global changes, 512
fonts
 scaling, 39
force command
 defaults, 450
Format
 saving/restoring, 44, 309
format file, 308
 Wave window, 308
FPGA libraries, importing, 171
Function call, debugging, 74
functions
 virtual, 265

— G —

generate statements, Verilog, 215
GenerateFormat .ini file variable, 431
GenerateLoopIterationMax .ini file variable, 425
GenerateRecursionDepthMax .ini variable, 426
GenerousIdentifierParsing .ini file variable, 431
get_resolution() VHDL function, 189
Global GUI changes
 fonts, 512
global visibility
 PLI/FLI shared objects, 484
GLOBALPATHPULSE
 matching to specify path delays, 369
GlobalSharedObjectsList .ini file variable, 432
Glob-style, 54

graphic interface, 267, 323
grouping files for compile, 151
grouping objects, Monitor window, 116
groups
 in wave window, 303
GUI preferences
 fonts, 512
GUI_expression_format
 GUI expression builder, 293

— H —

Hazard .ini file variable, 426
hazards
 limitations on detection, 223
hierarchy
 driving signals in, 347
 forcing signals in, 190, 355
 referencing signals in, 190, 351
 releasing signals in, 190, 359
highlighting, in Source window, 104
highlights
 in Source window, 97

history
 of commands
 shortcuts for reuse, 497

HOLD

 matching to Verilog, 369
HOME environment variable, 412
HOME_0IN environment variable, 413

— I —

I/O
 TextIO package, 183
icons
 shapes and meanings, 39
identifiers
 escaped, 235
ieee .ini file variable, 418
IEEE libraries, 170
IEEE Std 1076, 33
 differences between versions, 175
IEEE Std 1364, 33, 203
IEEE Std 1364-2005, 129, 371
IgnoreError .ini file variable, 432
IgnoreFailure .ini file variable, 432
IgnoreNote .ini file variable, 432

IgnoreVitalErrors .ini file variable, 421

IgnoreWarning .ini file variable, 432

importing FPGA libraries, 171

Incremental .ini file variable, 426

incremental compilation

 automatic, 207

 manual, 206

 with Verilog, 205

index checking, 174

\$init_signal_driver, 347

init_signal_driver, 347

\$init_signal_spy, 351

init_signal_spy, 190, 351

init_userffs function, 469

initialization sequence, 515

inline search bar, 40, 104, 107

inlining

 VHDL subprograms, 174

input ports

 matching to INTERCONNECT, 368

 matching to PORT, 368

INTERCONNECT

 matching to input ports, 368

interconnect delays, 373

IOPATH

 matching to specify path delays, 368

IP code

 encrypt, 129

 public keys, 132

 undefined macros, 130

 vendor-defined macros, 133

 encryption usage models, 129

 using protect pragmas, 129

 vencrypt usage models, 129

iteration_limit, infinite zero-delay loops, 182

IterationLimit .ini file variable, 432

— K —

keyboard shortcuts

 List window, 501

 Main window, 498

 Source window, 498

 Wave window, 502

keywords

 SystemVerilog, 204

— L —

-L work, 208

language templates, 98

language versions, VHDL, 175

libraries

 creating, 165

 design libraries, creating, 165

 design library types, 163

 design units, 163

 group use, setting up, 168

 IEEE, 170

 importing FPGA libraries, 171

 mapping

 from the command line, 167

 from the GUI, 167

 hierarchically, 448

 search rules, 168

 modelsim_lib, 189

 moving, 168

 multiple libraries with common modules, 208

 naming, 166

 predefined, 169

 refreshing library images, 170

 resource libraries, 163

 std library, 169

 Synopsys, 170

 Verilog, 207

 VHDL library clause, 169

 working libraries, 163

 working vs resource, 28

 working with contents of, 165

library map file, Verilog configurations, 214

library mapping, overview, 29

library maps, Verilog 2001, 214

library simulator state variable, 452

library, definition, 28

LibrarySearchPath .ini file variable, 426

License .ini file variable, 433

licensing

 License variable in .ini file, 433

Limiting WLF file, 256

link cursors, 122, 277

List pane

see also pane, List pane

List window, 81, 271
expanded time viewing, 287
setting triggers, 315
see also windows, List window

List window output
expanded time, 287

LM_LICENSE_FILE environment variable, 413

Load
breakpoints, 103

loading the design, overview, 30

local variables
modifying with change command, 239

Locals window, 84
see also windows, Locals window

location maps, referencing source files, 455

locations maps
specifying source files with, 455

lock message, 462

locking cursors, 275

log file
overview, 253
see also WLF files

long simulations
saving at intervals, 261

— M —

MacroNestingLevel simulator state variable, 452

macros (DO files), 405
creating from a saved transcript, 107
depth of nesting, simulator state variable, 452
error handling, 409
parameters
as a simulator state variable (n), 452
passing, 406
total number passed, 451
startup macros, 449

Main window, 44
see also windows, Main window

mapping
libraries
from the command line, 167
hierarchically, 448

symbols

Dataflow window, 333

mapping libraries, library mapping, 167

math_complex package, 170

math_real package, 170

MDI frame, 46

MDI pane
tab groups, 47

memories
displaying the contents of, 86
navigation, 90
saving formats, 90
selecting memory instances, 89
viewing contents, 89
viewing multiple instances, 89

memory
modeling in VHDL, 192

memory leak, cancelling scheduled events, 201

Memory pane, 86

pane
Memory pane
see also Memory pane

memory tab
memories you can view, 87

Memory window, 86
see also windows, Memory window

message system, 457

Message Viewer Display Options dialog box, 112

Message Viewer tab, 108

MessageFormat .ini file variable, 434

MessageFormatBreak .ini file variable, 434

MessageFormatBreakLine .ini file variable, 434

MessageFormatError .ini file variable, 435

MessageFormatFail .ini file variable, 435

MessageFormatFatal .ini file variable, 435

MessageFormatNote .ini file variable, 435

MessageFormatWarning .ini file variable, 435

Messages, 108

messages, 457
bad magic number, 255
empty port name warning, 462
exit codes, 460
getting more information, 457
lock message, 462

- long description, 457
message system variables, 446
metavalue detected, 462
redirecting, 440
sensitivity list warning, 462
suppressing warnings from arithmetic packages, 450
Tcl_init error, 463
too few port connections, 463
turning off assertion messages, 449
VSIM license lost, 464
warning, suppressing, 458
metavalue detected warning, 462
MGC_LOCATION_MAP env variable, 455
MGC_LOCATION_MAP variable, 414
MinGW gcc, 480, 482
missing DPI import function, 476
MODEL_TECH environment variable, 414
MODEL_TECH_TCL environment variable, 414
modeling memory in VHDL, 192
MODELSIM environment variable, 414
modelsim.ini
 found by the tool, 516
 default to VHDL93, 450
 delay file opening with, 451
 environment variables in, 448
 force command default, setting, 450
 hierarchical library mapping, 448
 opening VHDL files, 451
 restart command defaults, setting, 450
 startup file, specifying with, 449
 transcript file created from, 449
 turning off arithmetic package warnings, 450
 turning off assertion messages, 449
modelsim.tcl, 513
modelsim_lib, 189
 path to, 419
MODELSIM_PREFERENCES variable, 414, 513
modes of operation, 31
Modified field, Project tab, 155
modify
 breakpoints, 101, 318, 321
modifying local variables, 239
modules
 handling multiple, common names, 208
Monitor window
 grouping/ungrouping objects, 116
monitor window, 114
mouse shortcuts
 Main window, 498
 Source window, 498
 Wave window, 502
.mpf file, 145
 loading from the command line, 162
 order of access during startup, 515
msgmode .ini file variable, 447
msgmode variable, 108
mti_cosim_trace environment variable, 415
mti_inhibit_inline attribute, 175
MTI_TF_LIMIT environment variable, 415
multi-file compilation issues, SystemVerilog, 209
MultiFileCompilationUnit .ini file variable, 426
multiple document interface, 46
Multiple simulations, 253
- N —
- n simulator state variable, 452
Name field
 Project tab, 154
name visibility in Verilog generates, 215
names, modules with the same, 208
Negative timing
 algorithm for calculating delays, 226
 check limits, 226
 constraint algorithm, 229
 constraints, 227
 delay solution convergence, 229
 syntax for \$recr, 228
 syntax for \$setuphold, 226
 using delayed inputs for checks, 234
Negative timing checks, 226
nets
 Dataflow window, displaying in, 79, 323
 values of
 displaying in Objects window, 91
 saving as binary log file, 253

waveforms, viewing, 117
new function
 initialize SV object handle, 224
Nlview widget Symlib format, 333
NoCaseStaticError .ini file variable, 421
NOCHANGE
 matching to Verilog, 371
NoDebug .ini file variable, 421, 427
NoIndexCheck .ini file variable, 422
NOMMAP environment variable, 415
non-blocking assignments, 221
NoOthersStaticError .ini file variable, 422
NoRangeCheck .ini file variable, 422
Note .ini file variable, 447
Notepad windows, text editing, 498
-notrigger argument, 316
NoVital .ini file variable, 422
NoVitalCheck .ini file variable, 422
Now simulator state variable, 452
now simulator state variable, 452
null value
 debugging, 224
numeric_bit package, 170
numeric_std package, 170
 disabling warning messages, 450
NumericStdNoWarnings .ini file variable, 436

— O —

object
 defined, 32
Object handle
 initialize with new function, 224
objects
 virtual, 263
Objects window, 91
 see also windows, Objects window
OnFinish .ini file variable, 436
operating systems supported, *See Installation Guide*
optimizations
 VHDL subprogram inlining, 174
Optimize_1164 .ini file variable, 422
ordering files for compile, 150
organizing projects with folders, 157
organizing windows, MDI pane, 47
others .ini file variable, 420

overview, simulation tasks, 26

— P —

packages
 standard, 169
 textio, 169
 util, 189
 VITAL 1995, 187
 VITAL 2000, 187
page setup
 Dataflow window, 338
 Wave window, 310
pan, Dataflow window, 339
panes
 docking and undocking, 507
 Memory panes, 86
parameters
 making optional, 407
 using with macros, 406
path delay mode, 238
path delays, matching to DEVICE statements, 369
path delays, matching to
 GLOBALPATHPULSE statements, 369
path delays, matching to IOPATH statements, 368
path delays, matching to PATHPULSE
 statements, 369
pathnames
 hiding in Wave window, 297
PATHPULSE
 matching to specify path delays, 369
PathSeparator .ini file variable, 436
PedanticErrors .ini file variable, 423
performance
 cancelling scheduled events, 201
PERIOD
 matching to Verilog, 371
platforms supported, *See Installation Guide*
PLI
 loading shared objects with global symbol
 visibility, 484
 specifying which apps to load, 470
 Veriuser entry, 470
PLI/VPI, 251

tracing, 494
PLI/VPI/DPI, 467
 registering DPIapplications, 472
 specifying the DPI file to load, 484
PLIOBJS environment variable, 416, 470
PORT
 matching to input ports, 368
Port driver data, capturing, 387
Postscript
 saving a waveform in, 309
 saving the Dataflow display in, 336
post-sim debug flow, 324
pragmas
 protecting IP code, 129
precedence of variables, 451
precision
 in timescale directive, 216
 simulator resolution, 216
preference variables
 .ini files, located in, 418
 editing, 510
 saving, 510
preferences
 saving, 510
 Wave window display, 296
PrefMain>ShowFilePane preference variable, 46
PrefMemory(ExpandPackedMem) variable, 89
primitives, symbols in Dataflow window, 333
printing
 Dataflow window display, 336
 waveforms in the Wave window, 309
printing simulation stats, 438
Programming Language Interface, 251, 467
project tab
 information in, 154
 sorting, 155
projects, 145
 accessing from the command line, 162
 adding files to, 148
 benefits, 145
 close, 154
 compile order, 150
 changing, 150
 compiler properties in, 159
compiling files, 149
creating, 147
 creating simulation configurations, 155
folders in, 157
grouping files in, 151
loading a design, 152
MODELSIM environment variable, 414
open and existing, 154
overview, 145
protect
 source code, 129
'protect compiler directive, 136
protect pragmas
 encrypting IP code, 129
protected types, 193
Public encryption key, 132
Public encryption keys, 132

— Q —

quick reference
 table of simulation tasks, 26
Quiet .ini file variable, 423, 427

— R —

race condition, problems with event order, 219
Radix
 change in Watch pane, 114
 color
 example, 43
radix
 List window, 306
 SystemVerilog types, 120, 300
 user-defined, 41
 definition body, 41
 Wave window, 299
Radix define command
 setting radix color, 43
range checking, 174
readers and drivers, 326
real type, converting to time, 191
Recall breakpoints, 321
reconstruct RTL-level design busses, 264
Recording
 expanded time, 280
RECOVERY
 matching to Verilog, 370

RECREM
 matching to Verilog, 370
redirecting messages, TranscriptFile, 440
refreshing library images, 170
regions
 virtual, 266
registers
 values of
 displaying in Objects window, 91
 saving as binary log file, 253
 waveforms, viewing, 117
regular-expression, 55
REMOVAL
 matching to Verilog, 370
report
 simulator control, 411
 simulator state, 411
RequireConfigForAllDefaultBinding variable, 423
resolution
 returning as a real, 189
 verilog simulation, 216
 VHDL simulation, 178
Resolution .ini file variable, 438
resolution simulator state variable, 452
resource libraries
 specifying, 169
restart command
 defaults, 450
Restore
 breakpoints, 321
Restoring
 window format, 44, 309
results, saving simulations, 253
return to VSIM prompt on sc_stop or \$finish, 436
RTL-level design busses
 reconstructing, 264
RunLength .ini file variable, 438
Runtime Options dialog, 443

— S —

Save
 breakpoints, 103
saveLines preference variable, 107
Saving
 window format, 44, 309
saving
 simulation options in a project, 155
 waveforms, 253
sc_stop()
 behavior, customizing, 436
scaling fonts, 39
SDF
 disabling timing checks, 374
 errors and warnings, 364
 instance specification, 363
 interconnect delays, 373
 mixed VHDL and Verilog designs, 373
 specification with the GUI, 364
 troubleshooting, 374
Verilog
 \$ sdf_annotation system task, 367
 optional conditions, 372
 optional edge specifications, 371
 rounded timing values, 373
 SDF to Verilog construct matching, 368
VHDL
 resolving errors, 366
 SDF to VHDL generic matching, 365
SDF annotate
 \$ sdf_annotation system task, 366
SDF annotation
 matching single timing check, 375
SDF DEVICE
 matching to Verilog constructs, 369
SDF GLOBALPATHPULSE
 matching to Verilog constructs, 369
SDF HOLD
 matching to Verilog constructs, 369
SDF INTERCONNECT
 matching to Verilog constructs, 368
SDF IOPATH
 matching to Verilog constructs, 368
SDF NOCHANGE
 matching to Verilog constructs, 371
SDF PATHPULSE
 matching to Verilog constructs, 369
SDF PERIOD
 matching to Verilog constructs, 371
SDF PORT

matching to Verilog constructs, 368
SDF RECOVERY
 matching to Verilog constructs, 370
SDF RECREM
 matching to Verilog constructs, 370
SDF REMOVAL
 matching to Verilog constructs, 370
SDF SETUPHOLD
 matching to Verilog constructs, 370
SDF SKEW
 matching to Verilog constructs, 370
SDF WIDTH
 matching to Verilog constructs, 371
\$sdf_done, 246
Search
 stop, 292
search
 inline search bar, 40
 Source window, 104
 Transcript, 107
searching
 Expression Builder, 293
 Verilog libraries, 208
searchlog command
 expanded time, 289
sensitivity list warning, 462
set simulator control with GUI, 443
SETUP
 matching to Verilog, 369
SETUPHOLD
 matching to Verilog, 370
severity, changing level for errors, 458
shared objects
 loading FLI applications
 see FLI Reference manual
 loading PLI/VPI/DPI C applications, 479
 loading PLI/VPI/DPI C++ applications,
 481
 loading with global symbol visibility, 484
Shortcuts
 text editing, 498
shortcuts
 command history, 497
 command line caveat, 497
 List window, 501
Main window, 498
Source window, 498
Wave window, 502
show drivers
 Dataflow window, 327
 Wave window, 317
Show_WarnMatchCadence .ini file variable,
 427
Show_BadOptionWarning .ini file variable,
 427
Show_Lint .ini file variable, 423, 427
Show_source .ini file variable, 423, 427
Show_VitalChecksOpt .ini file variable, 423
Show_VitalChecksWarning .ini file variable,
 423
Show_Warning1 .ini file variable, 424
Show_Warning10 .ini file variable, 425
Show_Warning2 .ini file variable, 424
Show_Warning3 .ini file variable, 424
Show_Warning4 .ini file variable, 424
Show_Warning5 .ini file variable, 424
Show_Warning9 .ini file variable, 424
Show_WarnLocallyStaticError variable, 425
Signal
 create virtual, 311
signal breakpoints
 edit, 318
signal groups
 in wave window, 303
Signal Segmentation Violations
 debugging, 224
Signal Spy, 190, 351
 disable, 343
 enable, 345
\$signal_force, 355
signal_force, 190, 355
\$signal_release, 359
signal_release, 190, 359
signals
 combining into a user-defined bus, 310
 Dataflow window, displaying in, 79, 323
 driving in the hierarchy, 347
 filtering in the Objects window, 92
 hierarchy
 driving in, 347

referencing in, 190, 351
releasing anywhere in, 359
releasing in, 190, 359
sampling at a clock change, 316
transitions, searching for, 289
types, selecting which to view, 92
values of
 displaying in Objects window, 91
 forcing anywhere in the hierarchy, 190, 355
 saving as binary log file, 253
virtual, 264
waveforms, viewing, 117
SIGSEGV
 fatal error message, 225
SIGSEGV error, 224
simulating
 batch mode, 31
 command-line mode, 31
 comparing simulations, 253
 default run length, 444
 iteration limit, 444
 saving dataflow display as a Postscript file, 336
 saving options in a project, 155
 saving simulations, 253
 saving waveform as a Postscript file, 309
Verilog, 216
 delay modes, 237
 hazard detection, 223
 resolution limit, 216
 XL compatible simulator options, 235
VHDL, 178
viewing results in List pane, 81
viewing results in List window, 271
VITAL packages, 188
simulating the design, overview, 30
simulation
 basic steps for, 27
Simulation Configuration
 creating, 155
simulation task overview, 26
simulations
 event order in, 219
 saving results, 253
saving results at intervals, 261
Simulator, 411
simulator control
 with .ini variables, 443
simulator resolution
 returning as a real, 189
Verilog, 216
 VHDL, 178
simulator state variables, 451
sizetf callback function, 488
SKEW
 matching to Verilog, 370
so, shared object file
 loading PLI/VPI/DPI C applications, 479
 loading PLI/VPI/DPI C++ applications, 481
source code, security, 136, 138
source files, referencing with location maps, 455
source files, specifying with location maps, 455
source highlighting, customizing, 104
source libraries
 arguments supporting, 211
Source window, 93
 clear highlights, 97
 colorization, 104
 inline search bar, 104
 tab stops in, 104
 see also windows, Source window
specify path delays
 matching to DEVICE construct, 369
 matching to GLOBALPATHPULSE
 construct, 369
 matching to IOPATH statements, 368
 matching to PATHPULSE construct, 369
standards supported, 33
startup
 files accessed during, 515
 macro in the modelsim.ini file, 439
 macros, 449
 startup macro in command-line mode, 31
 using a startup file, 449
Startup .ini file variable, 439
state variables, 451
status bar

Main window, 48
Status field
 Project tab, 154
std .ini file variable, 419
std_arith package
 disabling warning messages, 450
std_developerskit .ini file variable, 419
std_logic_arith package, 170
std_logic_signed package, 170
std_logic_textio, 170
std_logic_unsigned package, 170
StdArithNoWarnings .ini file variable, 439
STDOUT environment variable, 416
steps for simulation, overview, 27
Stop wave drawing, 292
subprogram inlining, 174
subprogram write is ambiguous error, fixing,
 184
Suppress .ini file variable, 447
sv_std .ini file variable, 419
symbol mapping
 Dataflow window, 333
symbolic link to design libraries (UNIX), 168
synopsys .ini file variable, 419
Synopsys libraries, 170
syntax highlighting, 104
synthesis
 rule compliance checking, 420, 421
system calls
 VCD, 382
 Verilog, 238
system commands, 399
system tasks
 proprietary, 242
 VCD, 382
 Verilog, 238
 Verilog-XL compatible, 246
SystemVerilog
 keyword considerations, 204
 multi-file compilation, 209
 object handle
 initialize with new function, 224
 supported implementation details, 33
SystemVerilog DPI
 specifying the DPI file to load, 484
SystemVerilog types
 radix, 120, 300
— T —
tab groups, 47
tab stops
 Source window, 104
Tcl, ?? to 403
 command separator, 398
 command substitution, 397
 command syntax, 394
 evaluation order, 398
 history shortcuts, 497
 preference variables, 510
 relational expression evaluation, 398
 time commands, 401
 variable
 substitution, 399
 VSIM Tcl commands, 400
 with escaped identifiers, 236
Tcl_init error message, 463
temp files, VSOUT, 418
terminology
 for expanded time, 279
testbench, accessing internal objects from, 341
Text
 filtering, 54
text and command syntax, 35
Text editing, 498
TEXTIO
 buffer, flushing, 186
TextIO package
 alternative I/O files, 186
 containing hexadecimal numbers, 185
 dangling pointers, 185
 ENDFILE function, 186
 ENDLINE function, 186
 file declaration, 183
 implementation issues, 184
 providing stimulus, 187
 standard input, 184
 standard output, 184
 WRITE procedure, 184
 WRITE_STRING procedure, 185
TF routines, 493
TFMPC

- explanation, 463
 - time
 - measuring in Wave window, 273
 - time resolution as a simulator state variable, 452
 - time collapsing, 262
 - Time mode switching
 - expanded time, 286
 - time resolution
 - in Verilog, 216
 - in VHDL, 178
 - time type
 - converting to real, 190
 - timeline
 - display clock cycles, 297
 - timescale directive warning
 - investigating, 217
 - timing
 - disabling checks, 374
 - Timing checks
 - delay solution convergence, 229
 - negative
 - constraint algorithm, 229
 - constraints, 227
 - syntax for \$recr, 228
 - syntax for \$setuphold, 226
 - using delayed inputs for checks, 234
 - negative check limits, 226
 - TMPDIR environment variable, 416
 - to_real VHDL function, 190
 - to_time VHDL function, 191
 - toggle coverage
 - count limit, 439
 - max VHDL integer values, 439
 - ToggleCountLimit .ini file variable, 439
 - ToggleVlogIntegers .ini file variable, 440
 - ToggleWidthLimit .ini file variable, 440
 - too few port connections, explanation, 463
 - tool structure, 25
 - Toolbar
 - filter, 54
 - toolbar
 - Main window, 49
 - tracing
 - events, 330
 - source of unknown, 330
 - Transcript
 - inline search bar, 107
 - transcript
 - disable file creation, 107, 449
 - file name, specified in modelsim.ini, 449
 - saving, 106
 - using as a DO file, 107
 - Transcript window
 - changing buffer size, 107
 - changing line count, 107
 - TranscriptFile .ini file variable, 440
 - triggers, in the List window, 315
 - triggers, in the List window, setting, 312
 - troubleshooting
 - DPI, missing import function, 476
 - TSSI
 - in VCD files, 387
 - type
 - converting real to time, 191
 - converting time to real, 190
 - Type field, Project tab, 154
 - types
 - virtual, 266
- U —**
- UnbufferedOutput .ini file variable, 440
 - ungrouping
 - in wave window, 305
 - ungrouping objects, Monitor window, 116
 - unit delay mode, 238
 - unknowns, tracing, 330
 - usage models
 - encrypting IP code, 129
 - vencrypt utility, 129
 - use clause, specifying a library, 169
 - use flow
 - DPI, 473
 - user-defined bus, 263, 310
 - user-defined radix, 41
 - definition body, 41
 - UserTimeUnit .ini file variable, 440
 - util package, 189
- V —**
- values

- of HDL items, 103
- variables, 443
 - environment, 411
 - expanding environment variables, 411
 - LM_LICENSE_FILE, 413
 - precedence between .ini and .tcl, 451
 - setting environment variables, 412
 - simulator state variables
 - current settings report, 411
 - iteration number, 452
 - name of entity or module as a variable, 452
 - resolution, 452
 - simulation time, 452
 - values of
 - displaying in Objects window, 91
 - saving as binary log file, 253
- VCD files
 - capturing port driver data, 387
 - case sensitivity, 378
 - creating, 377
 - dumports tasks, 382
 - from VHDL source to VCD output, 384
 - stimulus, using as, 378
 - supported TSSI states, 387
 - translate into WLF, 387
 - VCD system tasks, 382
- vcd2wlf command, 387
- vencrypt command
 - header file, 131
- Verilog
 - ACC routines, 491
 - capturing port driver data with -dumports, 387
 - cell libraries, 236
 - compiler directives, 249
 - compiling and linking PLI C applications, 479
 - compiling and linking PLI C++ applications, 481
 - compiling design units, 204
 - compiling with XL 'uselib compiler directive, 211
 - configurations, 214
 - DPI access routines, 493
- event order in simulation, 219
- extended system tasks, 248
- generate statements, 215
- language templates, 98
- library usage, 207
- resource libraries, 169
- sdf_annotate system task, 366
- simulating, 216
 - delay modes, 237
 - XL compatible options, 235
- simulation hazard detection, 223
- simulation resolution limit, 216
- source code viewing, 93
- standards, 33
- system tasks, 238
- TF routines, 493
- XL compatible compiler options, 210
- XL compatible routines, 494
- XL compatible system tasks, 246
- verilog .ini file variable, 419
- Verilog 2001
 - disabling support, 428
- Verilog PLI/VP/DPII
 - registering VPI applications, 471
- Verilog PLI/VPI
 - 64-bit support in the PLI, 494
 - debugging PLI/VPI code, 495
- Verilog PLI/VPI/DPI
 - compiling and linking PLI/VPI C++ applications, 481
 - compiling and linking PLI/VPI/CPI C applications, 479
 - PLI callback reason argument, 487
 - PLI support for VHDL objects, 490
 - registering PLI applications, 469
 - specifying the PLI/VPI file to load, 483
- Verilog-XL
 - compatibility with, 203
- Veriuser .ini file variable, 441, 470
- Veriuser, specifying PLI applications, 470
- veriuser.c file, 489
- VHDL
 - compiling design units, 173
 - creating a design library, 173
 - delay file opening, 451

- dependency checking, 174
file opening delay, 451
language templates, 98
language versions, 175
library clause, 169
object support in PLI, 490
optimizations
 Inlining, 174
resource libraries, 169
simulating, 178
source code viewing, 93
standards, 33
timing check disabling, 178
VITAL package, 170
VHDL utilities, 189, 190, 351
 get_resolution(), 189
 to_real(), 190
 to_time(), 191
VHDL-1987, compilation problems, 175
VHDL-1993
 enabling support for, 425
VHDL-2002
 enabling support for, 425
VHDL93 .ini file variable, 425
viewing, 108
 library contents, 165
 waveforms, 253
virtual compare signal, restrictions, 310
virtual hide command, 264
virtual objects, 263
 virtual functions, 265
 virtual regions, 266
 virtual signals, 264
 virtual types, 266
virtual region command, 266
virtual regions
 reconstruct RTL hierarchy, 266
virtual save command, 265
Virtual signal
 create, 311
virtual signal command, 264
virtual signals
 reconstruct RTL-level design busses, 264
 reconstruct the original RTL hierarchy, 264
 virtual hide command, 264
- visibility
 of declarations in \$unit, 209
VITAL
 compiling and simulating with accelerated
 VITAL packages, 188
 disabling optimizations for debugging, 188
 specification and source code, 187
 VITAL packages, 188
vital95 .ini file variable, 420
vlog command
 +protect argument, 134, 136
vlog95compat .ini file variable, 428
VPI, registering applications, 471
VPI/PLI, 251
VPI/PLI/DPI, 467
 compiling and linking C applications, 479
 compiling and linking C++ applications,
 481
VSIM license lost, 464
VSOUT temp file, 418
- W —
- WarnConstantChange .ini file variable, 441
Warning .ini file variable, 447
warnings
 empty port name, 462
 exit codes, 460
 getting more information, 457
 messages, long description, 457
 metavalue detected, 462
 severity level, changing, 458
 suppressing VCOM warning messages,
 458
 suppressing VLOG warning messages, 459
 suppressing VSIM warning messages, 459
 Tcl initialization error 2, 463
 too few port connections, 463
 turning off warnings from arithmetic
 packages, 450
 waiting for lock, 462
watching a signal value, 114
Wave drawing
 stop, 292
wave groups, 303
 add items to existing, 305
 creating, 304

deleting, 305
drag from Wave to List, 305
drag from Wave to Transcript, 305
removing items from existing, 305
ungrouping, 305
Wave Log Format (WLF) file, 253
wave log format (WLF) file
see also WLF files
wave viewer, Dataflow window, 328
Wave window, 117, 267
cursor linking, 277
customizing for expanded time, 284
docking and undocking, 118, 268
expanded time viewing, 279, 281
in the Dataflow window, 328
saving layout, 308
timeline
 display clock cycles, 297
see also windows, Wave window
waveform logfile
overview, 253
see also WLF files
waveforms, 253
optimize viewing of, 442
viewing, 117
WaveSignalNameWidth .ini file variable, 441
where command, 418
WIDTH
 matching to Verilog, 371
Window format
 saving/restoring, 44, 309
windows
 Active Processes pane, 67
 Dataflow window, 79, 323
 zooming, 339
 List window, 81, 271
 display properties of, 306
 formatting HDL items, 306
 saving data to a file, 310
 setting triggers, 312, 315
 Locals window, 84
 Main window, 44
 status bar, 48
 text editing, 498
 time and delta display, 48
 toolbar, 49
Memory window, 86
monitor, 114
Objects window, 91
Signals window
 VHDL and Verilog items viewed in, 91
Source window, 93
 text editing, 498
 viewing HDL source code, 93
Variables window
 VHDL and Verilog items viewed in, 84
Wave window, 117, 267
 adding HDL items to, 271
 cursor measurements, 273
 display preferences, 296
 display range (zoom), changing, 289
 format file, saving, 308
 path elements, changing, 441
 time cursors, 273
 zooming, 289
WLF file
 limiting, 256
WLF file parameters
 cache size, 256
 collapse mode, 256
 compression, 256
 delete on quit, 256
 filename, 255
 optimization, 256
 overview, 255
 size limit, 255
 time limit, 255
WLF files
 collapsing events, 262
 optimizing waveform viewing, 442
 saving, 254
 saving at intervals, 261
WLFCacheSize .ini file variable, 441
WLFCollapseMode .ini file variable, 441
WLFCompress .ini variable, 442
WLFDeleteOnQuit .ini variable, 442
WLFFilename .ini file variable, 442
WLFSaveAllRegions .ini variable, 442
WLFSimCacheSize .ini variable, 442
WLFSIZELIMIT .ini variable, 443

WLFTimeLimit .ini variable, [443](#)

work library, [164](#)

 creating, [165](#)

workspace, [45](#)

write format restart, [44](#), [309](#), [321](#)

write list command

 expanded time output, [287](#)

WRITE procedure, problems with, [184](#)

— X —

X

 tracing unknowns, [330](#)

— Z —

zero delay elements, [180](#)

zero delay mode, [238](#)

zero-delay loop, infinite, [182](#)

zero-delay oscillation, [182](#)

zero-delay race condition, [219](#)

zoom

 Dataflow window, [339](#)

 saving range with bookmarks, [290](#)

zooming window panes, [509](#)

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

Third-Party Information

This section provides information on third-party software that may be included in the ModelSim product, including any additional license terms.

- This product may include Valgrind third-party software.

©Julian Seward. All rights reserved.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- This software application may include MinGW gcc third-party software. MinGW gcc is licensed under the GNU GPL v. 2.

To obtain original source code of MinGW gcc, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the GPL is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU GPL v.2.

<install_directory>/docs/legal/gnu_gpl_2.0.pdf

- This software application may include MinGW gcc third-party software, portions of which are licensed under the GNU Free Documentation License v. 1.1.

To obtain original source code of MinGW gcc, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the Free Documentation License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU Free Documentation License.

<install_directory>/docs/legal/gnu_free_doc_1.1.pdf

- This software application may include MinGW gcc third-party software, portions of which are licensed under the GNU Library General Public License v. 2.

To obtain original source code of MinGW gcc, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the Library General Public License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU Library General Public License.

<install_directory>/docs/legal/gnu_library_gpl_2.0.pdf

- This software application may include MinGW gcc third-party software, portions of which are licensed under the GNU Lesser General Public License v. 2.1.

To obtain original source code of MinGW gcc, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the LGPL is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU Lesser General Public License.

<install_directory>/docs/legal/gnu_lgpl_2.1.pdf

- Copyright (c) 1982, 1986, 1992, 1993

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1987 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS'' AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1991 by AT&T.

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, NEITHER THE AUTHOR NOR AT&T MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

Copyright (c) 2001 Christopher G. Demetriou

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1999 Kungliga Tekniska Högskolan

(Royal Institute of Technology, Stockholm, Sweden).

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of KTH nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY KTH AND ITS CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL KTH OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2000, 2001 Alexey Zelkin <phantom@FreeBSD.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (C) 1997 by Andrey A. Chernov, Moscow, Russia.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1997-2002 FreeBSD Project.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT

SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1984,2000 S.L. Moshier

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, THE AUTHOR MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

Copyright (c)1999 Citrus Project,

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1998 Todd C. Miller <Todd.Miller@courtesan.com>

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR

PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1993 Intel Corporation

Intel hereby grants you permission to copy, modify, and distribute this software and its documentation. Intel grants this permission provided that the above copyright notice appears in all copies and that both the copyright notice and this permission notice appear in supporting documentation. In addition, Intel grants this permission provided that you prominently mark as "not part of the original" any modifications made to this software or documentation, and that the name of Intel Corporation not be used in advertising or publicity pertaining to distribution of the software or the documentation without specific, written prior permission.

Intel Corporation provides this AS IS, WITHOUT ANY WARRANTY, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Intel makes no guarantee or representations regarding the use of, or the results of the use of, the software and documentation in terms of correctness, accuracy, reliability, currentness, or otherwise; and you rely on the software, documentation and results solely at your own risk.

IN NO EVENT SHALL INTEL BE LIABLE FOR ANY LOSS OF USE, LOSS OF BUSINESS, LOSS OF PROFITS, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. IN NO EVENT SHALL INTEL'S TOTAL LIABILITY EXCEED THE SUM PAID TO INTEL FOR THE PRODUCT LICENSED HEREUNDER.

Copyright 1992, 1993, 1994 Henry Spencer. All rights reserved.

This software is not subject to any license of the American Telephone and Telegraph Company or of the Regents of the University of California.

Permission is granted to anyone to use this software for any purpose on any computer system, and to alter it and redistribute it, subject to the following restrictions:

1. The author is not responsible for the consequences of use of this software, no matter how awful, even if they arise from flaws in it.
2. The origin of this software must not be misrepresented, either by explicit claim or by omission. Since few users ever read sources, credits must appear in the documentation.
3. Altered versions must be plainly marked as such, and must not be misrepresented as being the original software. Since few users ever read sources, credits must appear in the documentation.
4. This notice may not be removed or altered.

Copyright (c) 2001 Mike Barcroft <mike@FreeBSD.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,

PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1999, 2000

Konstantin Chuguev. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2003, Artem B. Bityuckiy, SoftMine Corporation.

Rights transferred to Franklin Electronic Publishers.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Unless otherwise stated in each remaining newlib file, the remaining files in the newlib subdirectory default to the following copyright. It should be noted that Red Hat Incorporated now owns copyrights belonging to Cygnus Solutions and Cygnus Support.

Copyright (c) 1994, 1997, 2001, 2002, 2003, 2004 Red Hat Incorporated.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of Red Hat Incorporated may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL RED HAT INCORPORATED BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1994

Hewlett-Packard Company

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Hewlett-Packard Company makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

Copyright (c) 1996

Silicon Graphics Computer Systems, Inc.

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Silicon Graphics makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

- This product may include freeWrap open source software

© Dennis R. LaBelle All Rights Reserved.

Disclaimer of warranty: Licensee provides the software on an ``as is'' basis. Licensee does not warrant, guarantee, or make any representations regarding the use or results of the software with respect to its correctness, accuracy, reliability or performance. The entire risk of the use and performance of the software is assumed by licensee. ALL WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY ARE HEREBY EXCLUDED.

- This software application may include GNU gcc third-party software. GNU gcc is licensed under the GNU GPL v. 2.

To obtain original source code of GNU gcc, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the GPL is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU GPL v.2.

<install_directory>/docs/legal/gnu_gpl_2.0.pdf

- This software application may include MinGW GNU diffutils third-party software. MinGW GNU diffutils is licensed under the GNU GPL v. 2.

To obtain original source code of MinGW GNU diffutils, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the GPL is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU GPL v.2.

`<install_directory>/docs/legal/gnu_gpl_2.0.pdf`

- This software application may include MinGW GNU diffutils third-party software, portions of which are licensed under the GNU Free Documentation License v. 1.1.

To obtain original source code of MinGW GNU diffutils, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the Free Documentation License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU Free Documentation License.

`<install_directory>/docs/legal/gnu_free_doc_1.1.pdf`

- This software application may include MinGW GNU diffutils third-party software, portions of which are licensed under the GNU Library General Public License v. 2.

To obtain original source code of MinGW GNU diffutils, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the Library General Public License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU Library General Public License.

`<install_directory>/docs/legal/gnu_library_gpl_2.0.pdf`

- This software application may include MinGW GNU diffutils third-party software, portions of which are licensed under the GNU Lesser General Public License v. 2.1.

To obtain original source code of MinGW GNU diffutils, or modifications made, if any, send a request to request_sourcecode@mentor.com.

Software distributed under the LGPL is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

See the Legal Directory for the text of the GNU Lesser General Public License.

`<install_directory>/docs/legal/gnu_lgpl_2.1.pdf`

-

Copyright (c) 1982, 1986, 1992, 1993 The Regents of the University of California.

Copyright (c) 1983 Regents of the University of California.

Copyright (c) 1983, 1989, 1993 The Regents of the University of California.

Copyright (c) 1987, 1993, 1994, 1996 The Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1987 Regents of the University of California.

Copyright (c) 1987, 1993 The Regents of the University of California

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS'' AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1984, 2000 S.L. Moshier

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, THE AUTHOR MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

Copyright (c) 1991 by AT&T.

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, THE AUTHOR MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

Copyright (C) 1993 DJ Delorie

All rights reserved.

Redistribution and use in source and binary forms is permitted provided that the above copyright notice and following paragraph are duplicated in all such forms.

This file is distributed WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1993 Intel Corporation

Intel hereby grants you permission to copy, modify, and distribute this software and its documentation. Intel grants this permission provided that the above copyright notice appears in all copies and that both the copyright notice and this permission notice appear in supporting documentation. In addition, Intel grants this permission provided that you prominently mark as "not part of the original" any modifications made to this software or documentation, and that the name of Intel Corporation not be used in advertising or publicity pertaining to distribution of the software or the documentation without specific, written prior permission.

Intel Corporation provides this AS IS, WITHOUT ANY WARRANTY, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Intel makes no guarantee or representations regarding the use of, or the results of the use of, the software and documentation in terms of correctness, accuracy, reliability, currentness, or otherwise; and you rely on the software, documentation and results solely at your own risk.

IN NO EVENT SHALL INTEL BE LIABLE FOR ANY LOSS OF USE, LOSS OF BUSINESS, LOSS OF PROFITS, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. IN NO EVENT SHALL INTEL'S TOTAL LIABILITY EXCEED THE SUM PAID TO INTEL FOR THE PRODUCT LICENSED HEREUNDER.

Copyright (c) 1994 Cygnus Support.

Copyright (c) 1995, 1996 Cygnus Support.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed at Cygnus Support, Inc. Cygnus Support, Inc. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS'' AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1994 Winning Strategies, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by Winning Strategies, Inc.

4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (C) 1996-2000 Julian R Seward. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
3. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright 1989 Software Research Associates, Inc., Tokyo, Japan

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of Software Research Associates not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Software Research Associates makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

SOFTWARE RESEARCH ASSOCIATES DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS

SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS,

IN NO EVENT SHALL SOFTWARE RESEARCH ASSOCIATES BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright 1991 by the Massachusetts Institute of Technology

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific,

written prior permission. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

Copyright 1987, 1988 by Digital Equipment Corporation, Maynard, Massachusetts.

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of Digital not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

DIGITAL DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL DIGITAL BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

- This software application may include crypto third-party software.

© 1999 The OpenSSL Project. All rights reserved.

© 1999 Bodo Moeller. All rights reserved.

© 1995-1998 Eric Young. All rights reserved.

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgment:

"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.
(<http://www.OpenSSL.org/>)"

4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact licensing@OpenSSL.org.

5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.

6. Redistributions of any form whatsoever must retain the following acknowledgment:

"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit
(<http://www.OpenSSL.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,

OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

- This software application may include modified Expat 2.0 third-party software that may be subject to the following copyright(s):

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper

Copyright (c) 2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright © 2003-2005 Amiga, Inc.

Copyright © 2002 Daryle Walker

Copyright © 2002 Thomas Wegner

- This software application may include Tcl third-party software.

© 1996 Sun Microsystems, Inc.

© 2002 ActiveState Corporation.

© 1982, 1986, 1989 Regents of the University of California.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,

STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

© 1999 America Online, Inc.

© 1998 Paul Duffin.

© 2005 Tcl Core Team.

© 1996 Lucent Technologies and Jim Ingham

© 1995 Dave Nebinger.

© 1993-1994 Lockheed Missle & Space Company, AI Center

© 1995 Apple Computer, Inc.

© 2005 Daniel A. Steffen <das@users.sourceforge.net>

© 2001 Donal K. Fellows

© 2003-2006 Patrick Thoyts © 1998 Mark Harrison.

© 2001-2002 David Gravereaux.

© 1995, by General Electric Company. All rights reserved.

© 2000 Andreas Kupries.

© 1993-1997 Bell Labs Innovations for Lucent Technologies

© 2001 Vincent Darley

© 2002 by Kevin B. Kenny. All rights reserved.

© 1992-1995 Karl Lehenbauer and Mark Diekhans.

© 1998 Lucent Technologies, Inc.

© 2000 by Ajuba Solutions

© 1989-1993 The Regents of the University of California.

© 1994-1997 Sun Microsystems, Inc.

© 1998-1999 Scriptics Corporation

This software is copyrighted by the Regents of the University of California, Sun Microsystems, Inc., Scriptics Corporation, ActiveState Corporation and other parties. The following terms apply to all files associated with the software unless explicitly disclaimed in individual files.

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL THE AUTHORS OR DISTRIBUTORS BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES,

INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

GOVERNMENT USE: If you are acquiring this software on behalf of the U.S. government, the Government shall have only "Restricted Rights" in the software and related documentation as defined in the Federal Acquisition Regulations (FARs) in Clause 52.227.19 (c) (2). If you are acquiring the software on behalf of the Department of Defense, the software shall be classified as "Commercial Computer Software" and the Government shall have only "Restricted Rights" as defined in Clause 252.227-7013 (c) (1) of DFARs. Notwithstanding the foregoing, the authors grant the U.S. Government and others acting in its behalf permission to use and distribute the software in accordance with the terms specified in this license.

© 1995-1997 Roger E. Critchlow Jr

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL THE AUTHORS OR DISTRIBUTORS BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES,

INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

- This software application may include Tk third-party software.

© 1994 Software Research Associates, Inc.

© 2002 by Ludwig Callewaert.

© 1998 Paul Duffin.

© 1999 Jan Nijtmans.

© 2005, Tcl Core Team.

© 2005 Daniel A. Steffen <das@users.sourceforge.net>

© 1993-1994 Lockheed Missle & Space Company, AI Center

© Reed Wade (wade@cs.utk.edu), University of Tennessee

© 2000 Jeffrey Hobbs.

© 2003-2006 Patrick Thoys

© 2001-2002 David Gravereaux.

© 1987-1993 Adobe Systems Incorporated All Rights Reserved

© 1994 The Australian National University

© 2001 Donal K. Fellows

© 2002 ActiveState Corporation.

© 2000 Ajuba Solutions. All rights reserved.

© 1998-2000 by Scriptics Corporation. All rights reserved.

© 2001, Apple Computer, Inc.

© 1990-1993 The Regents of the University of California. All rights reserved.

© 1994-1998 Sun Microsystems, Inc. All rights reserved.

This software is copyrighted by the Regents of the University of California, Sun Microsystems, Inc., and other parties. The following terms apply to all files associated with the software unless explicitly disclaimed in individual files.

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL THE AUTHORS OR DISTRIBUTORS BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES,

INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

GOVERNMENT USE: If you are acquiring this software on behalf of the U.S. government, the Government shall have only "Restricted Rights" in the software and related documentation as defined in the Federal Acquisition Regulations (FARs) in Clause 52.227.19 (c) (2). If you are acquiring the software on behalf of the Department of Defense, the software shall be classified as "Commercial Computer Software" and the Government shall have only "Restricted Rights" as defined in Clause 252.227-7013 (c) (1) of DFARs. Notwithstanding the foregoing, the authors grant the U.S. Government and others acting in its behalf permission to use and distribute the software in accordance with the terms specified in this license.

© 1987 by Digital Equipment Corporation, Maynard, Massachusetts, and the Massachusetts Institute of Technology, Cambridge, Massachusetts. All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the names of Digital or MIT not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

DIGITAL DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL DIGITAL BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

© 1987 by Digital Equipment Corporation, Maynard, Massachusetts, and the Massachusetts Institute of Technology, Cambridge, Massachusetts. All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the names of Digital or MIT not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

DIGITAL DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL DIGITAL BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

© 1990, David Koblas.

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. This software is provided "as is" without express or implied warranty.

© 1998 Hutchison Avenue Software Corporation

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. This software is provided "AS IS." The Hutchison Avenue Software Corporation disclaims all warranties, either express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to this code and accompanying documentation.

© 2001, Apple Computer, Inc.

The following terms apply to all files originating from Apple Computer, Inc. ("Apple") and associated with the software unless explicitly disclaimed in individual files.

Apple hereby grants permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL APPLE, THE AUTHORS OR DISTRIBUTORS OF THE SOFTWARE BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF APPLE OR THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. APPLE, THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND APPLE, THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

GOVERNMENT USE: If you are acquiring this software on behalf of the U.S. government, the Government shall have only "Restricted Rights" in the software and related documentation as defined in the Federal Acquisition Regulations (FARs) in Clause 52.227.19 (c) (2). If you are acquiring the software on behalf of the Department of Defense, the software shall be classified as "Commercial Computer Software" and the Government shall have only "Restricted Rights" as defined in Clause 252.227-7013 (c) (1) of DFARs. Notwithstanding the foregoing, the authors grant the U.S. Government and others acting in its behalf permission to use and distribute the

software in accordance with the terms specified in this license. The following terms apply to all files originating from Apple Computer, Inc. ("Apple") and associated with the software unless explicitly disclaimed in individual files.

- This software application may include Advanced Verification Methodology third-party software.

Refer to the license file in your install directory:

<install_directory>/verilog_src/avm/LICENSE.txt

- This software application may include libtecla 1.6.1 third-party software that may be subject to the following terms of use and copyright(s):

Copyright (c) 2000, 2001, 2002, 2003, 2004 by Martin C. Shepherd.

All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the above copyright notice(s) and this permission notice appear in supporting documentation.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

- This software application may include third-party content (icons) from www.famfamfam.com, which is distributed under the Creative Commons Attribution License 2.5.

Attribution 2.5

CREATIVE COMMONS CORPORATION IS NOT A LAW FIRM AND DOES NOT PROVIDE LEGAL SERVICES. DISTRIBUTION OF THIS LICENSE DOES NOT CREATE AN ATTORNEY-CLIENT RELATIONSHIP. CREATIVE COMMONS PROVIDES THIS INFORMATION ON AN "AS-IS" BASIS. CREATIVE COMMONS MAKES NO WARRANTIES REGARDING THE INFORMATION PROVIDED, AND DISCLAIMS LIABILITY FOR DAMAGES RESULTING FROM ITS USE.

Refer to the license file in your install directory:

<install_directory>/docs/legal/cc2_5_license.pdf

- This software may include ZLib third-party software that may be subject to the following copyright:

© 1997 Christian Michelsen Research AS, Advanced Computing, Fantoftvegen 38, 5036 BERGEN, Norway,
<http://www.cmr.no>

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Christian Michelsen Research AS makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

- This software application may include MPICH2 third-party software that may be subject to the following copyrights:

© 2001-2003 The Trustees of Indiana University. All rights reserved.

© 1998-2001 University of Notre Dame. All rights reserved.

© 1994-1998 The Ohio State University. All rights reserved.

© 1991 by the Massachusetts Institute of Technology

Indiana University has the exclusive rights to license this product under the following license.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1) All redistributions of source code must retain the above copyright notice, the list of authors in the original source code, this list of conditions and the disclaimer listed in this license;
- 2) All redistributions in binary form must reproduce the above copyright notice, this list of conditions and the disclaimer listed in this license in the documentation and/or other materials provided with the distribution;
- 3) Any documentation included with all redistributions must include the following acknowledgement:

"This product includes software developed at the Ohio Supercomputer Center at The Ohio State University, the University of Notre Dame and the Pervasive Technology Labs at Indiana University with original ideas contributed from Cornell University. For technical information contact Andrew Lumsdaine at the Pervasive Technology Labs at Indiana University. For administrative and license questions contact the Advanced Research and Technology Institute at 351 West 10th St., Indianapolis, Indiana 46202, phone 317-274-5905, fax 317-274-5902."

Alternatively, this acknowledgement may appear in the software itself, and wherever such third-party acknowledgments normally appear.

- 4) The name "LAM" or "LAM/MPI" shall not be used to endorse or promote products derived from this software without prior written permission from Indiana University. For written permission, please contact Indiana University Advanced Research & Technology Institute.
- 5) Products derived from this software may not be called "LAM" or "LAM/MPI", nor may "LAM" or "LAM/MPI" appear in their name, without prior written permission of Indiana University Advanced Research & Technology Institute.

Indiana University provides no reassurances that the source code provided does not infringe the patent or any other intellectual property rights of any other entity. Indiana University disclaims any liability to any recipient for claims brought by any other entity based on infringement of intellectual property rights or otherwise.

LICENSEE UNDERSTANDS THAT SOFTWARE IS PROVIDED "AS IS" FOR WHICH NO

WARRANTIES AS TO CAPABILITIES OR ACCURACY ARE MADE. INDIANA UNIVERSITY GIVES NO WARRANTIES AND MAKES NO REPRESENTATION THAT SOFTWARE IS FREE OF INFRINGEMENT OF THIRD PARTY PATENT, COPYRIGHT, OR OTHER PROPRIETARY RIGHTS. INDIANA UNIVERSITY MAKES NO WARRANTIES THAT SOFTWARE IS FREE FROM "BUGS", "VIRUSES", "TROJAN HORSES", "TRAP DOORS", "WORMS", OR OTHER HARMFUL CODE. LICENSEE ASSUMES THE ENTIRE RISK AS TO THE PERFORMANCE OF SOFTWARE AND/OR ASSOCIATED MATERIALS, AND TO THE PERFORMANCE AND VALIDITY OF INFORMATION GENERATED USING SOFTWARE.

Indiana University has the exclusive rights to license this product under this license.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

- This software application may include Loki third-party software that may be subject to the following copyrights:

© 2000, 2001, 2005 by Andrei Alexandrescu

© 2001. Addison-Wesley.

© 2006 Richard Sposato

© 2005, 2006 Peter Kümmel

© 2000 Petru Marginean

© 2005 Joshua Lehrer

Permission to use, copy, modify, distribute and sell this software for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation.

The author or Addison-Wesley Longman makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

- This software application may include Perl third-party software that may be subject to the following copyrights:

© 1995-2007, Gisle Aas

© 1995, Martijn Koster

© 1999-2000, Michael A. Chase.

© 1997-2006 Tom Christiansen, Nathan Torkington, and other authors as noted. All rights reserved.

© 1998, 1999, 2000 The Perl Journal.

© 1994-2004 Tim Bunce Ireland. All rights reserved.

© 1996-1999 Malcolm Beattie

© 1991, 1992, 1993, 1995, 1996, 1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006 by Larry Wall and others

© 1997-2006 Jonathan Leffler, Jochen Wiedmann, Steffen Goeldner and Tim Bunce

© 2004 by Jeff Zucker <jzucker AT cpan.org >. All rights reserved.

© 2002 Jonathan Leffler

© 1997, 1998 by Jochen Wiedmann

© 2003 Mark Jason Dominus.

© 1990, 2002, 2003, 2005 by Johan Vromans.

© 2000, 1996, 1991 O'Reilly Media, Inc.

© 2001, 2002, by Larry Wall, Nick Ing-Simmons, and others

© 1997-2000, Damian Conway. All Rights Reserved.

© 1994-2000 Alligator Descartes,

© 1995-2005 Graham Barr. All rights reserved.

© 1998-2003 Stephen McCamant. All rights reserved.

© 1995-2004 Nick Ing-Simmons. All rights reserved.

© 1996, 1997, 1998, 2000, 2001, 2002, 2005 by Russ Allbery <rra@stanford.edu> and Zenin

© 2002 Sam Tregar

© 2002, 2004 Tim Jenness, Christian Soeller, Hugo van der Sanden. All Rights Reserved.

© 1997-2003, Damian Conway. All Rights Reserved.

© 2003 Enache Adrian. All rights reserved.

© 1995-2006 Paul Marquess. All rights reserved.

© 1994-2000 by Bradford Appleton. All rights reserved.

© 2001-2005, SADAHIRO Tomoyuki. Japan. All rights reserved.

© 1999, 2000, 2001, 2002, 2003 by Russ Allbery rra@stanford.edu

© 1997, 1999 Tom Phoenix

© 2002-2004, Neil Bowers.

© 1997-2001, Canon Research Centre Europe (CRE).

© 1996 by Charles Bailey.

© 2001 Michael Hennecke and Canon Research Centre Europe (CRE).

© 2004 by the Perl 5 Porters. All rights reserved.

© 2004-2005, Marcus Holland-Moritz.

© 1999, Kenneth Albanowski.

© 1998-2004 Sean M. Burke. All rights reserved.

© 1995-1996 Neil Winton.

© 1996-1998 Gurusamy Sarathy.

© 1999-2000 by Marek Rouchal

© 1995 Graham Barr & Nick Ing-Simmons. All rights reserved.

© 2000-2001 Paul Kulchenko (paulclinger@yahoo.com)]

© 1999 Greg London.

© 1996-2002 Douglas E. Wegscheid. All rights reserved.

© 2001, 2002, 2003, 2004, 2005 Jarkko Hietaniemi. All rights reserved.

© 1999 Slaven Rezic. All rights reserved.

© 2000-2004 Tim Jenness. All Rights Reserved.

© 2000 Clark Cooper. All rights reserved.

© 1990-1992 RSA Data Security, Inc.

© 1997-1998 Achim Bohnet. All rights reserved.

© 2002 Sreeji K. Das. All rights reserved.

© 1998, 1999, 2000, 2001 M-J. Dominus.

© 1996 - 1999, 2000-2003, Stephen O. Lidie. All rights reserved.

© 2002 James Tillman. All rights reserved.

© 2000 by Joe Smith <Joe.Smith@inwap.com>.

© 1998-2000 Larry Wall and Clark Cooper. All rights reserved.

© 1995-98 Ilya Zakharevich. All rights reserved.

© 1999, 2000 by Randal L. Schwartz and Stonehenge Consulting Services, Inc.

© 2000 Mark Kvale. All rights reserved.

© 1997, 1998, 1999 Tom Christiansen. All rights reserved.

© 2002-2003, Rob Brown. All rights reserved.

© 2001, Colin McMillen. All rights reserved.

© 1996 - 1998 Achim Bohnet and Mike Beller. All rights reserved.

© 2002-2003 Elizabeth Mattijsen. All rights reserved.

© 1997 Uwe Hollerbach.

© 2002 - 2004, Steve Lidie. All rights reserved.

© 2001, Lincoln Stein <lstein@cshl.org>.

© 1995-2000, Raphael Manfredi

© 2002 Jos Boumans E<lt>kane@cpn.orgE<gt>. All rights reserved.

© 1999-2005 Tim Jenness and the UK Particle Physics and Astronomy Research Council. All Rights Reserved.

© 1998-2000 Joshua Nathaniel Pritikin. All rights reserved.

© 2001-2002 Michael G. Schwern.

© 1999 Greg Bartels. All rights reserved.

© 2000-2004 Ned Konz. All rights reserved.

© 2005 Andy Lester

© 2006 Pete Krawczyk

© 2005 ActiveState. All rights reserved.

© 1999 Tuomas J. Lukka <lukka@iki.fi>. All rights reserved.

© 2005 Steve Peters. All rights reserved.

© 2006 Adam Kennedy. All rights reserved.

© 1998-2004 Tom Hughes <tom@compton.nu>.

© 1989, 1993 The Regents of the University of California. All rights reserved.

© 1991-2005 Unicode, Inc. All rights reserved. Distributed under the Terms of Use in
<http://www.unicode.org/copyright.html>

© 1990-2, RSA Data Security, Inc. All rights reserved.

You may distribute under the terms of either the GNU General Public License or the Artistic License, as specified in the Perl README file.

The Artistic License

August 15, 1997

Preamble

The intent of this document is to state the conditions under which a Package may be copied, such that the Copyright Holder maintains some semblance of artistic control over the development of the package, while giving the users of the package the right to use and distribute the Package in a more-or-less customary fashion, plus the right to make reasonable modifications.

Definitions

"Package" refers to the collection of files distributed by the Copyright Holder, and derivatives of that collection of files created through textual modification.

"Standard Version" refers to such a Package if it has not been modified, or has been modified in accordance with the wishes of the Copyright Holder as specified below.

"Copyright Holder" is whoever is named in the copyright or copyrights for the package.

"You" is you, if you're thinking about copying or distributing this Package.

"Reasonable copying fee" is whatever you can justify on the basis of media cost, duplication charges, time of people involved, and so on. (You will not be required to justify it to the Copyright Holder, but only to the computing community at large as a market that must bear the fee.)

"Freely Available" means that no fee is charged for the item itself, though there may be fees involved in handling the item. It also means that recipients of the item may redistribute it under the same conditions they received it.

1. You may make and give away verbatim copies of the source form of the Standard Version of this Package without restriction, provided that you duplicate all of the original copyright notices and associated disclaimers.

2. You may apply bug fixes, portability fixes and other modifications derived from the Public Domain or from the Copyright Holder. A Package modified in such a way shall still be considered the Standard Version.

3. You may otherwise modify your copy of this Package in any way, provided that you insert a prominent notice in each changed file stating how and when you changed that file, and provided that you do at least ONE of the following:

a. place your modifications in the Public Domain or otherwise make them Freely Available, such as by posting said modifications to Usenet or an equivalent medium, or placing the modifications on a major archive site such as uunet.uu.net, or by allowing the Copyright Holder to include your modifications in the Standard Version of the Package.

b. use the modified Package only within your corporation or organization.

c. rename any non-standard executables so the names do not conflict with standard executables, which must also be provided, and provide a separate manual page for each non-standard executable that clearly documents how it differs from the Standard Version.

d. make other distribution arrangements with the Copyright Holder.

4. You may distribute the programs of this Package in object code or executable form, provided that you do at least ONE of the following:

a. distribute a Standard Version of the executables and library files, together with instructions (in the manual page or equivalent) on where to get the Standard Version.

b. accompany the distribution with the machine-readable source of the Package with your modifications.

c. give non-standard executables non-standard names, and clearly document the differences in manual pages (or equivalent), together with instructions on where to get the Standard Version.

d. make other distribution arrangements with the Copyright Holder.

5. You may charge a reasonable copying fee for any distribution of this Package. You may charge any fee you choose for support of this Package. You may not charge a fee for this Package itself. However, you may distribute this Package in aggregate with other (possibly commercial) programs as part of a larger (possibly commercial) software distribution provided that you do not advertise this Package as a product of your own. You may embed this Package's interpreter within an executable of yours (by linking); this shall be construed as a mere form of aggregation, provided that the complete Standard Version of the interpreter is so embedded.

6. The scripts and library files supplied as input to or produced as output from the programs of this Package do not automatically fall under the copyright of this Package, but belong to whomever generated them, and may be sold commercially, and may be aggregated with this Package. If such scripts or library files are aggregated with this Package via the so-called "undump" or "unexec" methods of producing a binary executable image, then distribution of such an image shall neither be construed as a distribution of this Package nor shall it fall under the restrictions of Paragraphs 3 and 4, provided that you do not represent such an executable image as a Standard Version of this Package.

7. C subroutines (or comparably compiled subroutines in other languages) supplied by you and linked into this Package in order to emulate subroutines and variables of the language defined by this Package shall not be considered part of this Package, but are the equivalent of input as in Paragraph 6, provided these subroutines do not change the language in any way that would cause it to fail the regression tests for the language.

8. Aggregation of this Package with a commercial distribution is always permitted provided that the use of this Package is embedded; that is, when no overt attempt is made to make this Package's interfaces visible to the end user of the commercial distribution. Such use shall not be construed as a distribution of this Package.

9. The name of the Copyright Holder may not be used to endorse or promote products derived from this software without specific prior written permission.

10. THIS PACKAGE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The End

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Permission is hereby granted, free of charge, to any person obtaining a copy of the Unicode data files and any associated documentation (the "Data Files") or Unicode software and any associated documentation (the "Software") to deal in the Data Files or Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Data Files or Software, and to permit persons to whom the Data Files or Software are furnished to do so, provided that (a) the above copyright notice(s) and this permission notice appear with all copies of the Data Files or Software, (b) both the above copyright notice(s) and this permission notice appear in associated

documentation, and (c) there is clear notice in each modified Data File or in the Software as well as in the documentation associated with the Data File(s) or Software that the data or software has been modified.

THE DATA FILES AND SOFTWARE ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE DATA FILES OR SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in these Data Files or Software without prior written authorization of the copyright holder.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

This copyright does not prohibit distribution of any version of Perl containing this extension under the terms of the GNU or Artistic licenses.

- This software application may include MPICH2 third-party software that may be subject to the following copyrights:

© 2001-2003 The Trustees of Indiana University. All rights reserved.

© 1998-2001 University of Notre Dame. All rights reserved.

© 1994-1998 The Ohio State University. All rights reserved.

© 1991 by the Massachusetts Institute of Technology

Indiana University has the exclusive rights to license this product under the following license.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1) All redistributions of source code must retain the above copyright notice, the list of authors in the original source code, this list of conditions and the disclaimer listed in this license;
- 2) All redistributions in binary form must reproduce the above copyright notice, this list of conditions and the disclaimer listed in this license in the documentation and/or other materials provided with the distribution;
- 3) Any documentation included with all redistributions must include the following acknowledgement:

"This product includes software developed at the Ohio Supercomputer Center at The Ohio State University, the University of Notre Dame and the Pervasive Technology Labs at Indiana University with original ideas contributed from Cornell University. For technical information contact Andrew Lumsdaine at the Pervasive Technology Labs at Indiana University. For administrative and license questions contact the Advanced Research and Technology Institute at 351 West 10th St., Indianapolis, Indiana 46202, phone 317-274-5905, fax 317-274-5902."

Alternatively, this acknowledgement may appear in the software itself, and wherever such third-party acknowledgments normally appear.

4) The name "LAM" or "LAM/MPI" shall not be used to endorse or promote products derived from this software without prior written permission from Indiana University. For written permission, please contact Indiana University Advanced Research & Technology Institute.

5) Products derived from this software may not be called "LAM" or "LAM/MPI", nor may "LAM" or "LAM/MPI" appear in their name, without prior written permission of Indiana University Advanced Research & Technology Institute.

Indiana University provides no reassurances that the source code provided does not infringe the patent or any other intellectual property rights of any other entity. Indiana University disclaims any liability to any recipient for claims brought by any other entity based on infringement of intellectual property rights or otherwise.

LICENSEE UNDERSTANDS THAT SOFTWARE IS PROVIDED "AS IS" FOR WHICH NO

WARRANTIES AS TO CAPABILITIES OR ACCURACY ARE MADE. INDIANA UNIVERSITY GIVES NO WARRANTIES AND MAKES NO REPRESENTATION THAT SOFTWARE IS FREE OF INFRINGEMENT OF THIRD PARTY PATENT, COPYRIGHT, OR OTHER PROPRIETARY RIGHTS. INDIANA UNIVERSITY MAKES NO WARRANTIES THAT SOFTWARE IS FREE FROM "BUGS", "VIRUSES", "TROJAN HORSES", "TRAP DOORS", "WORMS", OR OTHER HARMFUL CODE. LICENSEE ASSUMES THE ENTIRE RISK AS TO THE PERFORMANCE OF SOFTWARE AND/OR ASSOCIATED MATERIALS, AND TO THE PERFORMANCE AND VALIDITY OF INFORMATION GENERATED USING SOFTWARE.

Indiana University has the exclusive rights to license this product under this license.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

- This software application may include GDB third-party software. GDB is distributed under the terms of the GNU GPL version 2. You can view the complete license at: [path to docs <mentor legal directory_GPL2>] To obtain a copy of the GDB source code, or to obtain a copy of changes made to the GDB source code, if any, send a request to request_sourcecode@mentor.com. This offer shall only be available for three years from the date Mentor Graphics Corporation first distributed the GDB source code.

Software distributed under the License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

Refer to the license file in your install directory:

<install_directory>/docs/legal/gnu_gpl_2.0.pdf

- This software application may include SystemC version 2.2 third-party software. To obtain a copy of the SystemC source code, send a request to request_sourcecode@mentor.com.

SystemC software is distributed under the SystemC Open Source License Agreement and is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

Refer to the license file in your install directory:

<install_directory>/docs/legal/open_source_V3.pdf

- This software application may include GNU GCC 4.1.2 third-party software.

GNU GCC 4.1.2 is distributed under the terms of the General Public License version 2 and is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the license for the specific language governing rights and limitations under the license. You can view a copy of the license at: <install_directory>/docs/legal/gnu_gpl_2.0.pdf. To obtain a copy of the source code to the files licensed under the GNU GPL v2, send a request to request_sourcecode@mentor.com. This offer shall only be available for three years from the date Mentor Graphics Corporation first distributed GNU GPL v2 covered source code.

- This software application may include MinGW gcc version 4.2.1 third-party software. MinGW gcc is distributed under the terms of the General Public License version 2.0 and is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied.

See the license for the specific language governing rights and limitations under the license. You can view a copy of the license at: <install_directory>/docs/legal/gnu_gpl_2.0.pdf. Portions of this software may be subject to the GNU Free Documentation License version 1.2. You can view a copy of the GNU Free Documentation License version 1.2 at: <install_directory>/docs/legal/gnu_free_doc_1.2.pdf. Portions of this software may be subject to the Lesser General Public License version 2.1. You can view a copy of the Lesser General Public License version 2.1 at: <install_directory>/docs/legal/gnu_lgpl_2.1.pdf. Portions of this software may be subject to the Library General Public License version 2.0. You can view a copy of the Library General Public License version 2.0 at: <install_directory>/docs/gnu_library_gpl_2.0.pdf. Portions of this software may be subject to the Boost Software License version 1.0. You can view a copy of the Boost Software License version 1.0 at: <install_directory>/docs/boost_1.0.pdf. To obtain a copy of the source code to MinGW gcc, send a request to request_sourcecode@mentor.com. This offer shall only be available for three years from the date Mentor Graphics Corporation first distributed MinGW gcc. MinGW gcc version 4.2.1 may be subject to the following copyright:

© 1995-2004 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly Mark Adler

jloup@gzip.org madler@alumni.caltech.edu

If you use the zlib library in a product, we would appreciate *not* receiving lengthy legal documents to sign. The sources are provided for free but without warranty of any kind. The library has been entirely written by Jean-loup Gailly and Mark Adler; it does not include third-party code.

If you redistribute modified sources, we would appreciate that you include in the file ChangeLog history information documenting your changes. Please read the FAQ for more information on the distribution of modified source versions.

© 1994 Hewlett-Packard Company

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Hewlett-Packard Company makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

© 1983, 1990, 1991 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. [rescinded 22 July 1999]

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

© 1987 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS'' AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

© 1991, 2000, 2006 by AT&T.

The author of this software is David M. Gay.

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, NEITHER THE AUTHOR NOR AT&T MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

© 1991 by AT&T.

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, NEITHER THE AUTHOR NOR AT&T MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

© 1993 by Sun Microsystems, Inc. All rights reserved.

Developed at SunPro, a Sun Microsystems, Inc. business. Permission to use, copy, modify, and distribute this software is freely granted, provided that this notice is preserved.

© The Internet Society (2000). All Rights Reserved.

This document and translations of it may be copied and furnished to others, and derivative works that comment on or otherwise explain it or assist in its implementation may be prepared, copied, published and distributed, in whole or in part, without restriction of any kind, provided that the above copyright notice and this paragraph are included on all such copies and derivative works. However, this document itself may not be modified in any way, such as by removing the copyright notice or references to the Internet Society or other Internet organizations, except as needed for the purpose of developing Internet standards in which case the procedures for copyrights defined in the Internet Standards process must be followed, or as required to translate it into languages other than English.

The limited permissions granted above are perpetual and will not be revoked by the Internet Society or its successors or assigns.

This document and the information contained herein is provided on an "AS IS" basis and THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

© 2004 World Wide Web Consortium,

(Massachusetts Institute of Technology, European Research Consortium for Informatics and Mathematics, Keio University). All Rights Reserved. This work is distributed under the W3C(r) Software License [1] in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

[1] <http://www.w3.org/Consortium/Legal/2002/copyright-software-20021231>

Permission to copy, modify, and distribute this software and its documentation, with or without modification, for any purpose and without fee or royalty is hereby granted, provided that you include the following on ALL copies of the software and documentation or portions thereof, including modifications:

1. The full text of this NOTICE in a location viewable to users of the redistributed or derivative work.
2. Any pre-existing intellectual property disclaimers, notices, or terms and conditions. If none exist, the W3C Software Short Notice should be included (hypertext is preferred, text is permitted) within the body of any redistributed or derivative code.
3. Notice of any changes or modifications to the files, including the date changes were made. (We recommend you provide URIs to the location from which the code is derived.)

THIS SOFTWARE AND DOCUMENTATION IS PROVIDED "AS IS," AND COPYRIGHT HOLDERS MAKE NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR THAT THE USE OF THE SOFTWARE OR DOCUMENTATION WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS.

COPYRIGHT HOLDERS WILL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF ANY USE OF THE SOFTWARE OR DOCUMENTATION.

The name and trademarks of copyright holders may NOT be used in advertising or publicity pertaining to the software without specific, written prior permission. Title to copyright in this software and any associated documentation will at all times remain with copyright holders.

© 1997, 1998 by Microstar Software Ltd.

AElfred is free for both commercial and non-commercial use and redistribution, provided that Microstar's copyright and disclaimer are retained intact. You are free to modify AElfred for your own use and to redistribute AElfred with your modifications, provided that the modifications are clearly documented.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of merchantability or fitness for a particular purpose. Please use it AT YOUR OWN RISK.

© 1991-2005 Unicode, Inc. All rights reserved. Distributed under the Terms of Use in <http://www.unicode.org/copyright.html>.

Permission is hereby granted, free of charge, to any person obtaining a copy of the Unicode data files and any associated documentation (the "Data Files") or Unicode software and any associated documentation (the "Software") to deal in the Data Files or Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Data Files or Software, and to permit persons to whom the Data Files or Software are furnished to do so, provided that (a) the above copyright notice(s) and this permission notice appear with all copies of the Data Files or Software, (b) both the above copyright notice(s) and this permission notice appear in associated documentation, and (c) there is clear notice in each modified Data File or in the Software as well as in the documentation associated with the Data File(s) or Software that the data or software has been modified.

THE DATA FILES AND SOFTWARE ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE DATA FILES OR SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in these Data Files or Software without prior written authorization of the copyright holder.

© 2004 Chris Cannam, Steve Harris and Sean Bolton.

Permission to use, copy, modify, distribute, and sell this software for any purpose is hereby granted without fee, provided that the above copyright notice and this permission notice are included in all copies or substantial portions of the software.

© 2001, Thai Open Source Software Center Ltd

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of the Thai Open Source Software Center Ltd nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

© 1996, 1997 by Doug Bell <dbell@shvn.com>. All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

© 1996-1997, 1996-1998

Silicon Graphics Computer Systems, Inc.

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Silicon Graphics makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

© 1994, 2002

Hewlett-Packard Company

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Hewlett-Packard Company makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

© 1997

Christian Michelsen Research AS

Advanced Computing

Fantoftvegen 38, 5036 BERGEN, Norway

<http://www.cmr.no>

Permission to use, copy, modify, distribute and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. Christian Michelsen Research AS makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

© 2000, 2003, 2004 World Wide Web Consortium,

(Massachusetts Institute of Technology, Institut National de Recherche en Informatique et en Automatique, Keio University). All Rights Reserved. This program is distributed under the W3C's Software Intellectual Property License. This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

See W3C License <http://www.w3.org/Consortium/Legal/> for more details.

Notice and Disclaimers

1. Unless otherwise noted, all materials contained in this Site are copyrighted and may not be used except as provided in these terms and conditions or in the copyright notice (documents and software) or other proprietary notice provided with the relevant materials.

2. The materials contained in the Site may be downloaded or copied provided that ALL copies retain the copyright and any other proprietary notices contained on the materials. No material may be modified, edited or taken out of context such that its use creates a false or misleading statement or impression as to the positions, statements or actions of W3C.

3. The name and trademarks of copyright holders may NOT be used in advertising or publicity pertaining to the Web site, its content, specifications, or software without specific, written prior permission. Title to copyright in Web site documents will at all times remain with copyright holders. Use of W3C trademarks and service marks is covered by the W3C Trademark and Servicemark License.

4. Caches of W3C materials should comply with the "maximum time to live" information provided with the materials. After such materials have expired they should not be served from caches without first validating the contents of the W3C Site. Organizations that want to mirror W3C content must abide by the W3C Mirroring Policy.

W3CTrademarks and Generic Terms

Trademarks owned by W3C host institutions on behalf of W3C and generic terms used by the W3C

5. The trademarks, logos, and service marks (collectively the "Trademarks") displayed on the Site are registered and unregistered Trademarks of the Massachusetts Institute of Technology (MIT), European Research Consortium for Informatics and Mathematics (ERCIM), or Keio University (Keio). All use of the W3C Trademarks is governed by the W3C Trademark and Servicemark License. No additional rights are granted by implication, estoppel, or otherwise. Terms which claimed as generic are not governed by any W3C license and are used as common descriptors by the W3C.

The following is a list of W3C terms claimed as a trademark or generic term by MIT, ERCIM, and/or Keio on behalf of the W3C:

W3C, World Wide Web Consortium (registered in numerous countries)

AmayaTM, a Web Browser/Editor

ACSS (generic), Aural Cascading Style Sheets

CSS (generic), Cascading Style Sheets Specification

DOM (generic), Document Object Model

DSig (generic), Digital Signature Initiative

HTML (generic), HyperText Markup Language

HTTP (generic), Hypertext Transfer Protocol

JEP (generic)I, Joint Electronic Payment Initiative

JigsawTM, Java Web Server

MathML (generic), Mathematical Markup Language

Metadata (generic)

P3P, Platform for Privacy Preferences Project

PICS (generic), Platform for Internet Content Selection

PICSRules (generic), Rules Language for PICS

RDF (generic), Resource Description Framework

SMIL (generic), Synchronized Multimedia Integration Language

SVG (generic), Scalable Vector Graphics

WAI™, Web Accessibility Initiative

WebFonts (generic)

XENC (generic), XML Encryption

XHTML (generic), The Extensible HyperText Markup Language

XML (generic), Extensible Markup Language

XMLDSIG (generic), XML Signatures

XSL (generic), Extensible Stylesheet Language

The absence of a product or service name or logo from this list does not constitute a waiver of MIT's, ERCIM's, or Keio's trademark, ability to use a generic term, or other intellectual rights concerning that name or logo.

Any questions concerning the use, status, or standing of W3C trademarks should be directed to: site-policy@w3.org or to W3C, Computer Science and Artificial Intelligence Laboratory, Massachusetts Institute of Technology, 77 Massachusetts Ave., Cambridge, MA 02139 USA.

Non-W3C Trademarks; Member Trademarks

The trademarks, logos, and service marks not owned on behalf of the W3C and that are displayed on the Site are the registered and unregistered marks of their respective owners. No rights are granted by the W3C to use such marks, whether by implication, estoppel, or otherwise.

"METADATA" is a trademark of the Metadata Company. W3C uses the term "metadata" in a descriptive sense, meaning "data about data". W3C is not in any way affiliated with the Metadata Company.

Legal Disclaimers

6. W3C has not reviewed any or all of the web sites linked to this Site and is not responsible for the content of any off-site pages or any other web sites linked to this Site. Please understand that any non-W3C web site is independent from W3C, and W3C has no control over the content on that web site. In addition, a link to a non-W3C web site does not mean that W3C endorses or accepts any responsibility for the content, or the use, of such site. It is the user's responsibility to take precautions to ensure that whatever is selected is free of such items as viruses, worms, Trojan horses and other items of a destructive nature.

7. Information W3C publishes on its Site may contain references or cross references to W3C specifications, projects, programs and services that are not announced or available in your country. Such references do not imply that W3C intends to announce such specifications, projects, programs or services in your country.

8. Information on this Site may contain technical inaccuracies or typographical errors. Information may be changed or updated without notice. W3C may make improvements and/or changes in the materials contained in or described on this site at any time without notice. W3C may also make changes in these Terms and Conditions without notice. User is bound by such revisions and should therefore periodically visit this page to review the then current Terms and Conditions.

9. Limitation on Warranties.

ALL MATERIALS ON THE W3C SITE ARE PROVIDED "AS IS." W3C, MIT, ERCIM, AND KEIO MAKE NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE OR NON-INFRINGEMENT. AS TO DOCUMENTS AND GRAPHICS PUBLISHED ON THIS SITE, W3C, MIT, ERCIM, AND KEIO MAKE NO REPRESENTATION OR WARRANTY THAT THE CONTENTS OF SUCH DOCUMENT OR GRAPHICS ARE FREE FROM ERROR OR SUITABLE FOR ANY PURPOSE; NOR THAT IMPLEMENTATION OF SUCH CONTENTS WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS.

Please note that some jurisdictions may not allow the exclusion of implied warranties, so some of the above exclusions may not apply to you.

10. Limitation on Liability.

IN NO EVENT WILL W3C, MIT, ERCIM, AND KEIO BE LIABLE TO ANY PARTY FOR ANY DIRECT, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES FOR ANY USE OF THIS SITE, OR ON ANY OTHER HYPERLINKED WEB SITE, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS, BUSINESS INTERRUPTION, LOSS OF PROGRAMS OR OTHER DATA ON YOUR INFORMATION HANDLING SYSTEM OR OTHERWISE, EVEN IF W3C, MIT, ERCIM, OR KEIO IS EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

© 2004 Ami Tavory and Vladimir Dreizin, IBM-HRL.

Permission to use, copy, modify, sell, and distribute this software is hereby granted without fee, provided that the above copyright notice appears in all copies, and that both that copyright notice and this permission notice appear in supporting documentation. None of the above authors, nor IBM Haifa Research Laboratories, make any representation about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

© Henrik Ravn 2004

Use, modification and distribution are subject to the Boost Software License, Version 1.0.

© 1999 Citrus Project,

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY

- This software application may include OVM version 1.1 third-party software. OVM version 1.1 is distributed under the terms of the Apache License version 2.0 and is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the license for the specific language governing rights and limitations under the license. You can view a copy of the license at: <install_directory>/docs/legal/apache_2.0.pdf. OVM version 1.1 may be subject to the following copyrights:

© 2007-2008 Mentor Graphics Corporation

© 2007-2008 Cadence Design Systems, Inc.

All Rights Reserved Worldwide

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

End-User License Agreement

The latest version of the End-User License Agreement is available on-line at:
www.mentor.com/terms_conditions/enduser.cfm

IMPORTANT INFORMATION

USE OF THIS SOFTWARE IS SUBJECT TO LICENSE RESTRICTIONS. CAREFULLY READ THIS LICENSE AGREEMENT BEFORE USING THE SOFTWARE. USE OF SOFTWARE INDICATES YOUR COMPLETE AND UNCONDITIONAL ACCEPTANCE OF THE TERMS AND CONDITIONS SET FORTH IN THIS AGREEMENT. ANY ADDITIONAL OR DIFFERENT PURCHASE ORDER TERMS AND CONDITIONS SHALL NOT APPLY.

END-USER LICENSE AGREEMENT (“Agreement”)

This is a legal agreement concerning the use of Software between you, the end user, as an authorized representative of the company acquiring the license, and Mentor Graphics Corporation and Mentor Graphics (Ireland) Limited acting directly or through their subsidiaries (collectively “Mentor Graphics”). Except for license agreements related to the subject matter of this license agreement which are physically signed by you and an authorized representative of Mentor Graphics, this Agreement and the applicable quotation contain the parties' entire understanding relating to the subject matter and supersede all prior or contemporaneous agreements. If you do not agree to these terms and conditions, promptly return or, if received electronically, certify destruction of Software and all accompanying items within five days after receipt of Software and receive a full refund of any license fee paid.

1. **GRANT OF LICENSE.** The software programs, including any updates, modifications, revisions, copies, documentation and design data (“Software”), are copyrighted, trade secret and confidential information of Mentor Graphics or its licensors who maintain exclusive title to all Software and retain all rights not expressly granted by this Agreement. Mentor Graphics grants to you, subject to payment of appropriate license fees, a nontransferable, nonexclusive license to use Software solely: (a) in machine-readable, object-code form; (b) for your internal business purposes; (c) for the license term; and (d) on the computer hardware and at the site authorized by Mentor Graphics. A site is restricted to a one-half mile (800 meter) radius. Mentor Graphics' standard policies and programs, which vary depending on Software, license fees paid or services purchased, apply to the following: (a) relocation of Software; (b) use of Software, which may be limited, for example, to execution of a single session by a single user on the authorized hardware or for a restricted period of time (such limitations may be technically implemented through the use of authorization codes or similar devices); and (c) support services provided, including eligibility to receive telephone support, updates, modifications, and revisions.
2. **EMBEDDED SOFTWARE.** If you purchased a license to use embedded software development (“ESD”) Software, if applicable, Mentor Graphics grants to you a nontransferable, nonexclusive license to reproduce and distribute executable files created using ESD compilers, including the ESD run-time libraries distributed with ESD C and C++ compiler Software that are linked into a composite program as an integral part of your compiled computer program, provided that you distribute these files only in conjunction with your compiled computer program. Mentor Graphics does NOT grant you any right to duplicate, incorporate or embed copies of Mentor Graphics' real-time operating systems or other embedded software products into your products or applications without first signing or otherwise agreeing to a separate agreement with Mentor Graphics for such purpose.
3. **BETA CODE.** Software may contain code for experimental testing and evaluation (“Beta Code”), which may not be used without Mentor Graphics' explicit authorization. Upon Mentor Graphics' authorization, Mentor Graphics grants to you a temporary, nontransferable, nonexclusive license for experimental use to test and evaluate the Beta Code without charge for a limited period of time specified by Mentor Graphics. This grant and your use of the Beta Code shall not be construed as marketing or offering to sell a license to the Beta Code, which Mentor Graphics may choose not to release commercially in any form. If Mentor Graphics authorizes you to use the Beta Code, you agree to evaluate and test the Beta Code under normal conditions as directed by Mentor Graphics. You will contact Mentor Graphics periodically during your use of the Beta Code to discuss any malfunctions or suggested improvements. Upon completion of your evaluation and testing, you will send to Mentor Graphics a written evaluation of the Beta Code, including its strengths, weaknesses and recommended improvements. You agree that any written evaluations and all inventions, product improvements, modifications or developments that Mentor Graphics conceived or made during or subsequent to this Agreement, including those based partly or wholly on your feedback, will be the exclusive property of Mentor Graphics. Mentor Graphics will have exclusive rights, title and interest in all such property. The provisions of this section 3 shall survive the termination or expiration of this Agreement.

4. RESTRICTIONS ON USE. You may copy Software only as reasonably necessary to support the authorized use. Each copy must include all notices and legends embedded in Software and affixed to its medium and container as received from Mentor Graphics. All copies shall remain the property of Mentor Graphics or its licensors. You shall maintain a record of the number and primary location of all copies of Software, including copies merged with other software, and shall make those records available to Mentor Graphics upon request. You shall not make Software available in any form to any person other than employees and on-site contractors, excluding Mentor Graphics' competitors, whose job performance requires access and who are under obligations of confidentiality. You shall take appropriate action to protect the confidentiality of Software and ensure that any person permitted access to Software does not disclose it or use it except as permitted by this Agreement. Except as otherwise permitted for purposes of interoperability as specified by applicable and mandatory local law, you shall not reverse-assemble, reverse-compile, reverse-engineer or in any way derive from Software any source code. You may not sublicense, assign or otherwise transfer Software, this Agreement or the rights under it, whether by operation of law or otherwise ("attempted transfer"), without Mentor Graphics' prior written consent and payment of Mentor Graphics' then-current applicable transfer charges. Any attempted transfer without Mentor Graphics' prior written consent shall be a material breach of this Agreement and may, at Mentor Graphics' option, result in the immediate termination of the Agreement and licenses granted under this Agreement. The terms of this Agreement, including without limitation, the licensing and assignment provisions shall be binding upon your successors in interest and assigns. The provisions of this section 4 shall survive the termination or expiration of this Agreement.

5. LIMITED WARRANTY.

5.1. Mentor Graphics warrants that during the warranty period Software, when properly installed, will substantially conform to the functional specifications set forth in the applicable user manual. Mentor Graphics does not warrant that Software will meet your requirements or that operation of Software will be uninterrupted or error free. The warranty period is 90 days starting on the 15th day after delivery or upon installation, whichever first occurs. You must notify Mentor Graphics in writing of any nonconformity within the warranty period. This warranty shall not be valid if Software has been subject to misuse, unauthorized modification or improper installation. MENTOR GRAPHICS' ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY SHALL BE, AT MENTOR GRAPHICS' OPTION, EITHER (A) REFUND OF THE PRICE PAID UPON RETURN OF SOFTWARE TO MENTOR GRAPHICS OR (B) MODIFICATION OR REPLACEMENT OF SOFTWARE THAT DOES NOT MEET THIS LIMITED WARRANTY, PROVIDED YOU HAVE OTHERWISE COMPLIED WITH THIS AGREEMENT. MENTOR GRAPHICS MAKES NO WARRANTIES WITH RESPECT TO: (A) SERVICES; (B) SOFTWARE WHICH IS LICENSED TO YOU FOR A LIMITED TERM OR LICENSED AT NO COST; OR (C) EXPERIMENTAL BETA CODE; ALL OF WHICH ARE PROVIDED "AS IS."

5.2. THE WARRANTIES SET FORTH IN THIS SECTION 5 ARE EXCLUSIVE. NEITHER MENTOR GRAPHICS NOR ITS LICENSORS MAKE ANY OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, WITH RESPECT TO SOFTWARE OR OTHER MATERIAL PROVIDED UNDER THIS AGREEMENT. MENTOR GRAPHICS AND ITS LICENSORS SPECIFICALLY DISCLAIM ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF INTELLECTUAL PROPERTY.

6. LIMITATION OF LIABILITY. EXCEPT WHERE THIS EXCLUSION OR RESTRICTION OF LIABILITY WOULD BE VOID OR INEFFECTIVE UNDER APPLICABLE LAW, IN NO EVENT SHALL MENTOR GRAPHICS OR ITS LICENSORS BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS) WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF MENTOR GRAPHICS OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL MENTOR GRAPHICS' OR ITS LICENSORS' LIABILITY UNDER THIS AGREEMENT EXCEED THE AMOUNT PAID BY YOU FOR THE SOFTWARE OR SERVICE GIVING RISE TO THE CLAIM. IN THE CASE WHERE NO AMOUNT WAS PAID, MENTOR GRAPHICS AND ITS LICENSORS SHALL HAVE NO LIABILITY FOR ANY DAMAGES WHATSOEVER. THE PROVISIONS OF THIS SECTION 6 SHALL SURVIVE THE EXPIRATION OR TERMINATION OF THIS AGREEMENT.

7. LIFE ENDANGERING ACTIVITIES. NEITHER MENTOR GRAPHICS NOR ITS LICENSORS SHALL BE LIABLE FOR ANY DAMAGES RESULTING FROM OR IN CONNECTION WITH THE USE OF SOFTWARE IN ANY APPLICATION WHERE THE FAILURE OR INACCURACY OF THE SOFTWARE MIGHT RESULT IN DEATH OR PERSONAL INJURY. THE PROVISIONS OF THIS SECTION 7 SHALL SURVIVE THE EXPIRATION OR TERMINATION OF THIS AGREEMENT.

8. INDEMNIFICATION. YOU AGREE TO INDEMNIFY AND HOLD HARMLESS MENTOR GRAPHICS AND ITS LICENSORS FROM ANY CLAIMS, LOSS, COST, DAMAGE, EXPENSE, OR LIABILITY, INCLUDING ATTORNEYS' FEES, ARISING OUT OF OR IN CONNECTION WITH YOUR USE OF SOFTWARE AS

DESCRIBED IN SECTION 7. THE PROVISIONS OF THIS SECTION 8 SHALL SURVIVE THE EXPIRATION OR TERMINATION OF THIS AGREEMENT.

9. INFRINGEMENT.

- 9.1. Mentor Graphics will defend or settle, at its option and expense, any action brought against you alleging that Software infringes a patent or copyright or misappropriates a trade secret in the United States, Canada, Japan, or member state of the European Patent Office. Mentor Graphics will pay any costs and damages finally awarded against you that are attributable to the infringement action. You understand and agree that as conditions to Mentor Graphics' obligations under this section you must: (a) notify Mentor Graphics promptly in writing of the action; (b) provide Mentor Graphics all reasonable information and assistance to defend or settle the action; and (c) grant Mentor Graphics sole authority and control of the defense or settlement of the action.
- 9.2. If an infringement claim is made, Mentor Graphics may, at its option and expense: (a) replace or modify Software so that it becomes noninfringing; (b) procure for you the right to continue using Software; or (c) require the return of Software and refund to you any license fee paid, less a reasonable allowance for use.
- 9.3. Mentor Graphics has no liability to you if infringement is based upon: (a) the combination of Software with any product not furnished by Mentor Graphics; (b) the modification of Software other than by Mentor Graphics; (c) the use of other than a current unaltered release of Software; (d) the use of Software as part of an infringing process; (e) a product that you make, use or sell; (f) any Beta Code contained in Software; (g) any Software provided by Mentor Graphics' licensors who do not provide such indemnification to Mentor Graphics' customers; or (h) infringement by you that is deemed willful. In the case of (h) you shall reimburse Mentor Graphics for its attorney fees and other costs related to the action upon a final judgment.
- 9.4. **THIS SECTION IS SUBJECT TO SECTION 6 ABOVE AND STATES THE ENTIRE LIABILITY OF MENTOR GRAPHICS AND ITS LICENSORS AND YOUR SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO ANY ALLEGED PATENT OR COPYRIGHT INFRINGEMENT OR TRADE SECRET MISAPPROPRIATION BY ANY SOFTWARE LICENSED UNDER THIS AGREEMENT.**
10. **TERM.** This Agreement remains effective until expiration or termination. This Agreement will immediately terminate upon notice if you exceed the scope of license granted or otherwise fail to comply with the provisions of Sections 1, 2, or 4. For any other material breach under this Agreement, Mentor Graphics may terminate this Agreement upon 30 days written notice if you are in material breach and fail to cure such breach within the 30 day notice period. If Software was provided for limited term use, this Agreement will automatically expire at the end of the authorized term. Upon any termination or expiration, you agree to cease all use of Software and return it to Mentor Graphics or certify deletion and destruction of Software, including all copies, to Mentor Graphics' reasonable satisfaction.
11. **EXPORT.** Software is subject to regulation by local laws and United States government agencies, which prohibit export or diversion of certain products, information about the products, and direct products of the products to certain countries and certain persons. You agree that you will not export any Software or direct product of Software in any manner without first obtaining all necessary approval from appropriate local and United States government agencies.
12. **RESTRICTED RIGHTS NOTICE.** Software was developed entirely at private expense and is commercial computer software provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the U.S. Government or a U.S. Government subcontractor is subject to the restrictions set forth in the license agreement under which Software was obtained pursuant to DFARS 227.7202-3(a) or as set forth in subparagraphs (c)(1) and (2) of the Commercial Computer Software - Restricted Rights clause at FAR 52.227-19, as applicable. Contractor/manufacturer is Mentor Graphics Corporation, 8005 SW Boeckman Road, Wilsonville, Oregon 97070-7777 USA.
13. **THIRD PARTY BENEFICIARY.** For any Software under this Agreement licensed by Mentor Graphics from Microsoft or other licensors, Microsoft or the applicable licensor is a third party beneficiary of this Agreement with the right to enforce the obligations set forth herein.
14. **AUDIT RIGHTS.** You will monitor access to, location and use of Software. With reasonable prior notice and during your normal business hours, Mentor Graphics shall have the right to review your software monitoring system and reasonably relevant records to confirm your compliance with the terms of this Agreement, an addendum to this Agreement or U.S. or other local export laws. Such review may include FLEXlm or FLEXnet report log files that you shall capture and provide at Mentor Graphics' request. Mentor Graphics shall treat as confidential information all of your information gained as a result of any request or review and shall only use or disclose such information as required by law or to enforce its rights under this Agreement or addendum to this Agreement. The provisions of this section 14 shall survive the expiration or termination of this Agreement.

15. **CONTROLLING LAW, JURISDICTION AND DISPUTE RESOLUTION.** THIS AGREEMENT SHALL BE GOVERNED BY AND CONSTRUED UNDER THE LAWS OF THE STATE OF OREGON, USA, IF YOU ARE LOCATED IN NORTH OR SOUTH AMERICA, AND THE LAWS OF IRELAND IF YOU ARE LOCATED OUTSIDE OF NORTH OR SOUTH AMERICA. All disputes arising out of or in relation to this Agreement shall be submitted to the exclusive jurisdiction of Portland, Oregon when the laws of Oregon apply, or Dublin, Ireland when the laws of Ireland apply. Notwithstanding the foregoing, all disputes in Asia (except for Japan) arising out of or in relation to this Agreement shall be resolved by arbitration in Singapore before a single arbitrator to be appointed by the Chairman of the Singapore International Arbitration Centre (“SIAC”) to be conducted in the English language, in accordance with the Arbitration Rules of the SIAC in effect at the time of the dispute, which rules are deemed to be incorporated by reference in this section 15. This section shall not restrict Mentor Graphics’ right to bring an action against you in the jurisdiction where your place of business is located. The United Nations Convention on Contracts for the International Sale of Goods does not apply to this Agreement.
16. **SEVERABILITY.** If any provision of this Agreement is held by a court of competent jurisdiction to be void, invalid, unenforceable or illegal, such provision shall be severed from this Agreement and the remaining provisions will remain in full force and effect.
17. **PAYMENT TERMS AND MISCELLANEOUS.** You will pay amounts invoiced, in the currency specified on the applicable invoice, within 30 days from the date of such invoice. Any past due invoices will be subject to the imposition of interest charges in the amount of one and one-half percent per month or the applicable legal rate currently in effect, whichever is lower. Some Software may contain code distributed under a third party license agreement that may provide additional rights to you. Please see the applicable Software documentation for details. This Agreement may only be modified in writing by authorized representatives of the parties. Waiver of terms or excuse of breach must be in writing and shall not constitute subsequent consent, waiver or excuse.

Rev. 060210, Part No. 227900