

4-head massager
360 ° Fat Massage

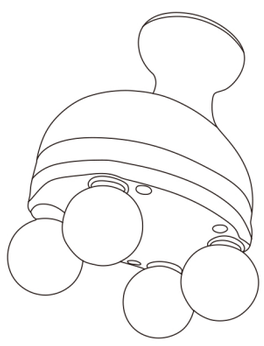


User manual

※ Our company reserves the right to make changes to product design without prior notice.
※ Kind reminder: (This product is not equipped with a 5V charger when leaving the factory)

Component Name

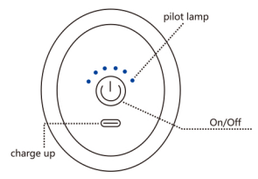



⚠ Please use a nationally certified CCC adapter, and the specification of the adapter is an adapter with an output voltage of 5V

Instructions for use

Charging method

Before using it for the first time or for a long time, please fully charge it.
1. The product is in a shutdown state, and the charging plug is inserted into the charging socket of the massage stick;
2. Insert the USB charging data cable into the charger and charge for about 3.5 hours;(Handheld massage stick - flashes while charging - stops flashing when fully charged)
(Handheld massage stick - Flashes during charging and displays on the digital screen. The current battery level increases by the status value, and when fully charged, the digital display shows 99, indicating that the charging is full.)
3. After charging, unplug the charger from the power socket and unplug the charging plug from the massage stick charging socket.

※A full charge can last for about 60 minutes.
※ It is normal for the charger to slightly heat up during charging.
※ This product cannot be used during charging and needs to be disconnected before use.
※ Please use a nationally certified CCC adapter, and the specification of the adapter is for charging with a charger with an output voltage of 5V.
Kind reminder: (This product is not equipped with a 5V charge

Key and display functions

1. Long press to power on
2. Long press to turn off
3. The default boot mode is 15 minutes

Pilot lamp

-The indicator light shows the gear size of the 4-piece massager.
-When one light is on, it is in first gear, and when two lights are on, it is in second gear
-When three lights are on, it is in third gear, and when four lights are on, it is in fourth gear
-When five lights are on, it is in fifth gear, and when six lights are on, it is in sixth gear.

quality assurance

We hereby guarantee that the product has excellent quality, reliable performance, and is safe and practical. To address customer concerns, our company implements quality responsibility and after-sales service, which can be processed with this card.
1. From the date of purchase, the user can enjoy a full free warranty with valid documents within the warranty scope (appearance is not within the warranty scope, if shipped for warranty, the user only needs to pay for round-trip shipping.)
2. When repairing, payment vouchers and warranty cards should be brought to determine the warranty period.
3. The product warranty period is one year. take care

1. Abnormal use and human damage are not covered by the warranty.
2. If the customer disassembles the machine on their own, the warranty qualification will be cancelled.

Purchase date: _____

Purchase location: _____

Certificate of conformity

Inspection result: qualified

Inspector: _____

Inspection date: _____ inspect 03

Shenlan Electric Appliances (Wenzhou) Co., Ltd

Production address: No. 66 Fenglian Road, Zhenglou Industrial Zone, Wanquan Town, Pingyang County, Zhejiang Province

Safety instructions

⚠ take care	● Please use a nationally certified CCC adapter, and the specification of the adapter is a charger with an output voltage of 5V ● If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department, or similar departments. ● When charging is complete or not charging, please disconnect the charger from this product and unplug the charger from the power outlet. ● Do not drop or collide with the charger. When the charger casing is damaged, please contact an authorized service center for replacement. ● Do not touch the power cord with wet hands or unplug the charger by pulling the power cord ● Do not touch the product or charger with wet hands to avoid product short circuits, malfunctions, or electric shock. ● When the charger is soaked in rain, liquid, or severely damp, please stop using it and contact an authorized service center for replacement.

Troubleshooting

If you encounter any problems during use, please refer to the following tips and possible solutions

Condition	Possible causes/handling methods
The slight noise emitted by the motor during operation	This is because the sound generated by the construction of the mechanical structure is not a fault phenomenon.
The motor does not rotate	The switch is not turned on or the battery is low,
Suddenly stop working during massage	Accidentally turning off the power switch; The internal setting of 15 minutes for products with automatic timing devices has expired: the battery level is low.

If the fault cannot be eliminated by following the above methods, please turn off the power and contact our company's relevant after-sales service department.

Safety precautions

Interpretation of logos

⚠ warning	Important information indicating that incorrect use may cause personal injury or property damage.		
⚠ take care	Indicates information that incorrect use may damage the machine or potentially cause injury.		
⊘	Indicates prohibition of use	⊘	Indicates that disassembly is prohibited

1. For the following individuals, please consult a doctor's opinion before use

⚠ warning	● Implantation of pacemaker ● Pregnant women or shortly after delivery ● Suffering from malignant tumors	● Suffering from heart disease and strain induced back disease ● Patients with fractures, osteoporosis, and joint diseases ● Individuals with skin trauma or eczema

2. Notes for use

⚠ take care	● This product is not intended for medical purposes and only provides personal massage and health benefits; ● Please do not allow children or individuals with no autonomy to operate or use this product. Please keep this product out of reach of children; ● After the product is plugged in, it must be accompanied by adults, especially children ● Do not use this product when the following situations occur: damaged power cord or charger plug, abnormal operation, falling to the ground or being damaged, or falling into water ● Please do not stand or sit directly on this product as it may cause a fall accident: ● Excessive use can cause overheating and shorten the lifespan of this product. When reusing, allow the product to cool for a period of time before reuse.
⊘ prohibit	● Do not use in damp environments such as bathrooms. Do not immerse the product in water or other liquids to avoid causing short circuits or electric shock; ● Do not place the product near the stove or in direct sunlight; ● Do not use during lightning strikes; ● Do not insert or drop items into any opening of the product: ● Please do not cover the massage stick during use to avoid motor malfunction caused by high temperature. ● Do not use or store the product in environments above 40 ℃.
⊘ Prohibition of disassembly	● Please do not disassemble the internal components of this product without authorization to avoid potential machine malfunctions ● Except for the repair technicians designated by our company, products must not be disassembled, repaired, or modified.

precautions

⚠take care

三、 Battery safety

1. Do not connect metal conductors to the two poles of the battery or come into contact with the endpoints of the battery to avoid short circuits and burns caused by overheating of the battery;
2. Do not expose the battery to high temperatures or around heating devices such as sunlight, heaters, microwaves, ovens, or water heaters, as overheating the battery may cause an explosion;
3. Do not disassemble or modify the battery, insert foreign objects, or immerse it in water or other liquids to avoid causing battery leakage, overheating, fire or explosion;
4. If the battery leaks liquid, do not let the skin or eyes come into contact with the leaked liquid. If it comes into contact with the skin or eyes, immediately rinse with water and seek medical treatment at the hospital;
5. If the battery undergoes discoloration, deformation, or abnormality during use, charging, or storage Heating and other abnormal phenomena, please stop using and replace the battery;
6. Do not throw the battery into the fire, otherwise it may cause the battery to catch fire and explode;
7. Please dispose of batteries according to local regulations and do not dispose of them as household waste. Improper disposal of batteries may lead to battery explosions;
8. Do not let children or pets swallow the battery to avoid injury or battery explosion;
9. Do not drop, squeeze or puncture the battery to avoid subjecting it to external pressure, which may cause internal short circuits and excessive heat;
10. Do not use damaged batteries;
11. When the product's usage time is significantly shorter than normal, please replace the battery.
12. Before disposing of the appliance, the battery must be removed from the appliance;
13. When removing the battery, the appliance must be powered off;
14. Batteries should be safely disposed of;

Environmental information

Environmental protection: The built-in rechargeable battery may contaminate the environment. Before discarding the massager, be sure to remove the battery or send the massager to the official designated recycling station for battery disposal; You can also send the discarded massager to the designated maintenance department of the company, which will decompose and recycle the battery.
Battery disassembly steps: Cut off the power, let the massager stop running, unscrew all screws of the massager, disassemble the massager, and then remove the battery.

⚠ The battery should only be removed when the cutting massager is lost

Frequently asked questions


— , Cannot start or does not start when turned on

Reason 1: The temperature is too low (long-term exposure to environments below 0 degrees Celsius can cause a decrease in battery activity, resulting in the inability of the entire machine to start up normally but not operate normally). Solution: Let it stand still for 2 hours in environments above 0 degrees Celsius, or use a hair dryer to quickly measure the body temperature.

Reason 2. Insufficient battery power (when the battery is at a low level, if it is not charged for a long time, the battery will enter a protective state. At this time, the fascia gun cannot work normally when the power is turned on again) Solution: Keep the power off, connect the charger, and ensure that the battery is fully charged

Product Name: 4-head massager
Product model:
Rated voltage: DC 5V
Rated power: 10W


4头按摩仪
360°推脂按摩

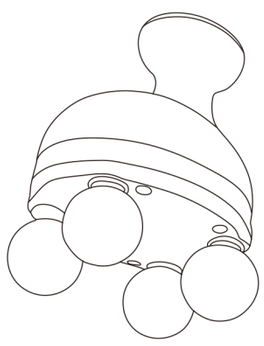

使用说明书

※本公司保留对产品设计变更权利，如有更改恕不另行通知。
※温馨提示：（本产品出厂是不配置5V充电器）

部件名称

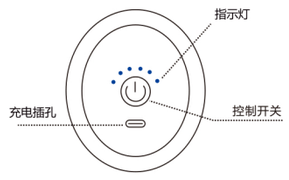



⚠ 请使用国家认证过的ccc适配器，并且适配器的规格是输出电压5V的适配器

使用操作说明

充电方法

初次使用或长时间未使用前，请先充足电。
1.产品处于关机状态，充电插头插入按摩棒充电插孔内;
2.USB充电数据线插入充电器，充电约3.5小时;
（手持按摩棒-充电时闪烁-充满时停止闪烁 ）
3.充电完成后，充电器拔出电源插座，充电插头从按摩棒充电插孔拔出。
※一次充满电可使用约60分钟。
※充电时充电器会稍微发热属正常现象。
※充电时本产品不可使用，需断开充电器后使用。
※请使用国家认证过的ccc适配器，并且适配器的规格是输出电压5V的充电器充电使用。
温馨提示：（本产品出产是不配置5V充电器）

按键及功能

1、开关机键
长按开机
长按关机
开机模式默认15分钟

2、指示灯
- 指示灯指示4头按摩仪档位大小。
- 亮一个灯时为一档,亮两个灯时为二档
- 亮三个灯时为三档,亮四个灯时为四档
- 亮五个灯时为五档,亮六个灯时为六档。

质量保证

兹保证产品品质优良，性能可靠，安全实用。为解决顾客后顾之忧，本公司实行质量负责，售后服务，凭此卡予以办理。
1、 自用户购机之日起在保修范围内凭有效单据可享受全免保修(外观不在保修范围内，如邮寄保修，用户仅需支付来回运费即可。)
2、 维修时应带收款凭证和保修卡，以便确定保修期限。
3、 产品保修期一年。
注意
1 、 不正常使用及人为损坏不属保修范围。
2 、 如顾客自行拆机将取消保修资格。
购买日期: _____
购买地点: _____

合格证

检验结果: 合格
检 验 员: _____
检验日期: _____ 检 03

安全须知

⚠ 注意	● 请使用国家认证过的ccc适配器，并且适配器的规格是输出电压5V的充电器 ● 如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。 ● 当充电完毕或者不充电时，请断开充电器与本产品的连接并从电源插座上拔掉充电器。 ● 请勿摔落或碰撞充电器。充电器外壳受损时请联系授权服务中心进行更换。 ● 请勿用湿手碰触电源线，或用拉电源线缆的方式拔出充电器。 ● 请勿用湿手碰触产品或充电器，以免发生产品短路、故障或触电。 ● 充电器被雨淋、液体浸湿或严重受潮时，请停止使用，并联系授权服务中心进行更换。

疑难解答

在使用过程中若遇到问题，请参照以下几点提示及可能解决的方法

状 况	可能原因/处理方式
工作时马达发出的轻微响声	这是由于机械结构的构造所产生的声响，并非是故障现象。
电机不转	开关未开或电池电量不足。
按摩进行时突然停止工作	不小心关闭电源开关； 带自动定时装置的产品内部设定的15分钟已到； 电池电量不足。

如果按照以上方法，故障仍无法排除，请关闭电源，并和我公司相关售后服务部门联系。

安全注意事项

标志解释

⚠ 警告	表示错误使用可能会导致人身伤害或财产损失的重要信息。		
⚠ 注意	表示错误使用可能会损坏机器或可能受伤的信息 。		
⊘	表示禁止使用	⊘	表示禁止拆卸

1、以下人士,请在使用前咨询医生的意见

⚠ 警告	●植入心脏起搏器 ●孕妇或分娩后不久 ●患有恶性肿瘤	●患有心脏病疾病、劳损性背病 ●骨折、骨质疏松、关节病患者 ●皮肤有创伤者或患有湿疹

2、使用时须知事项

⚠ 注意	●本产品不用于医疗用途，只提供个人按摩保健作用； ●请勿让儿童或无自主能力的人操作使用本产品，请将本产品放置在孩童无法够及处； ●产品插上电源后一定要有大人在旁边，特别是小孩在时； ●下列状况发生时，切勿使用本产品：电源线或充电器插头损坏、操作不正常、曾跌落地面或损伤，曾落入水中； ●请勿站立或直接坐在本产品上，可能引发跌倒事故； ●过度使用会导致本产品过热和缩短产品寿命。重复使用时，须让产品冷却一段时间后再用。
⊘ 禁止	●请勿在浴室等潮湿的环境下使用，请勿把产品浸入水中及其它液体里，以避免引起短路或触电； ●请勿将产品放置在靠近火炉或阳光直射的地方； ●请勿在雷击时使用； ●请勿将物品插入或者掉落产品的任何开口中； ●使用时请勿覆盖按摩棒,以免马达温度过高导致故障。 ●请勿将产品在高于40℃以上环境中使用和存放。
⊘ 禁止拆卸	●请勿私自拆卸本产品内部组件，以避免导致机器故障可能； ●除了本公司指定的修理技术人员之外，绝对不能对产品进行分解、修理和改装。

安全注意事项

⚠ 注意

三、电池安全

1.请勿将金属物导体与电池两极对接，或接触电池的端点，以免导致电池短路，以及因电池过热而引起的烧伤等身体伤害；
2.请勿将电池暴露在高温处或发热设备的周围，如日照、取暖器、微波炉、烤箱或热水器等，电池过热可能引发爆炸；
3.请勿拆解或改装电池、插入异物、或浸入水中或其他液体中，以免引起电池漏液、过热、起火或爆炸；
4.如果电池漏液，请勿使皮肤或眼睛接触到漏出的液体，若接触到皮肤或眼睛上，请立即用清水冲洗，并要医院进行医疗处理；
5.如果电池在使用、充电或保存过程中有变色、变形、异常发热等异常现象，请停止使用并更换电池；
6.请勿把电池扔到火里，否则会导致电池起火和爆炸；
7.请按当地规定处理电池，不可将电池作为生活垃圾处理，若电池处置不当可能会导致电池爆炸；
8.请勿让儿童或宠物吞咬电池，以免对其造成伤害或导致电池爆炸；
9.请勿跌落、挤压或穿刺电池，避免让电池遭受外部大的压力，从而导致电池内部短路和多热；
10.请勿使用已经损坏的电池；
11.当产品的使用时间明显比正常时间短时，请更换电池。
12.在废弃器具前，必须将电池从器具中取出；
13.在取出电池时，器具必须要断电；
14.电池应安全地处置；

环保信息

环保：内置充电电池包含可能污染环境。丢弃按摩器前，一定要将电池取出或将按摩器送至官方指定的回收站处理电池；您也可以将废弃的按摩器送往公司指定维修部门，由维修部门对电池进行分解和回收。
电池拆卸步骤：切断电源，让按摩器停止运转，拧下按摩器所有螺 丝，将按摩器拆开后取出电池。

⚠ 只有在丢切按摩器时才可取下电池

常见问题

一、不能开机或开机不启动

原因1,温度过低
(长期置于0摄氏度以下环境，会导致电池活性降低，无法正常整机表现为可以正常开机，但无法正常运转)解决方法: 在0摄氏度以上的环境静止2小时，或使用吹风机快计机体温度。

原因2.电池电量不足
(当电池处于低电量的时候，如果较长时间不充电，电池会进了保护状态，此时再进行开机操作，筋膜枪在无法正常工作)解决方法:保持关机状态，连接充电器，确保电量充满之后

产品名称：4头按摩仪
产品型号：
额定电压：DC 5V
额定功率：10W