Vacuum Steamer



If you experience any issues while using this product, please contact the seller. We will help you resolve them.

Introduction

The Vacuum Steamer is a flexible handheld appliance intended for convenient garment care. It pairs strong steam output with a unique suction system to eliminate wrinkles quickly, leaving clothing dry and ready to wear. This guide contains important information for safe and effective use.



Important Safety Information

This product is designed for use with a 110-120 V power supply and a Type B grounded plug.
Do not use this product with a 220-230 V power supply.

- Never use voltage converters or adapters.
- Keep it away from children and pets.
- Never submerge the steamer in water or any other liquid.
- Before use, make sure the water tank is firmly installed.
- To avoid burns, do not touch hot steam or the soleplate directly.
- Disconnect the power plug when the device is not in use, and before adding or removing water or cleaning it.
- Use distilled or purified water to help reduce limescale accumulation.
- Do not use the appliance if the power cord or plug is damaged.
- This product should not be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge (including children), unless they are supervised or instructed by a guardian to ensure safe use.
- Children must not operate this product or use it as a toy. Children must not clean or maintain this product.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not touch hot surfaces such as the steam outlet during operation or immediately after turning off the device to avoid burns.
- Do not touch the plug or other live parts with wet hands to prevent electric shock.
- Unplug the product before maintenance or repair.
- Do not twist or knot the power cord when storing the product to avoid damaging it.
- Keep the power cord away from heat sources and places where its insulation may be damaged.
- Do not use this product in areas where aerosol (spray) products are being used or where there are flammable sources.
- If the product operates abnormally or malfunctions, please contact the manufacturer for repair. Do not disassemble it yourself.
- For your safety, remain present while the product is powered on and operating.
- If you notice any visible damage or water leakage, stop using the product immediately.
- Avoid getting water on the product surface during use. For maintenance, simply wipe the product with a dry towel after disconnecting the power.

Controls and Parts



Product Parameters

Product Name: Vacuum Steamer
Suction Levels: Gentle / Standard / Powerful
Rated Power: 1000 W
Product Model: HY-GTJ2026
Heating Modes: Dry Ironing / Steam Ironing
Preheating Time: Approximately 30 seconds

Setup

1. Filling the Water Tank:
Press the release clip to remove the water tank from the main unit. Open the white cap, then fill the tank with distilled or purified water. Close the cap tightly. Align the slot on the bottom and push the water tank back into the steamer until it is securely in place.



2. Powering on and Preheating:
Plug the steamer into a 110-120 V power outlet. Press and hold the Power Button to turn on the device. During preheating, the indicator light will flash for about 30 seconds. Once preheating is complete, the steamer is ready to use.



Press and hold the Power Button

Short press the power button to switch between steam mode and dry ironing mode

Choose Suction Mode

After preheating, press the suction mode button (left button) briefly. Press the button repeatedly to select the required suction level. The Garment Icon Indicator turns on when suction is active. When the indicator is off, suction is disabled.

Suction On: Best for sturdy fabrics such as cotton, linen, and denim.
Suction Off: Ideal for delicate fabrics such as silk, wool, and synthetic fibers.


Press the left button briefly to switch suction modes



Maintenance

• Cleaning: Before cleaning, make sure the steamer is unplugged and has cooled down completely. Wipe the outer surfaces with a soft, damp cloth. Do not use abrasive cleaners.
• Descaling: Using distilled or purified water regularly helps reduce mineral buildup. If limescale appears, follow the manufacturer's descaling instructions, which usually involve a vinegar solution.
• Storage: Drain the water tank after every use. Keep the steamer in a cool, dry place. Its compact size makes it convenient to store or pack for travel.

Quick User Guide

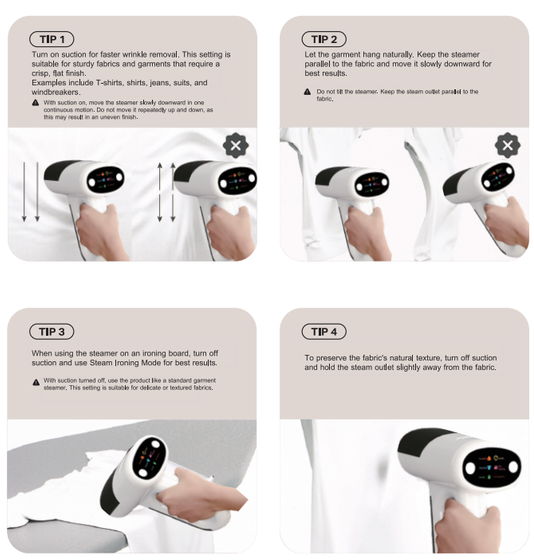

Troubleshooting

Problem	Possible Cause	Solution
No Steam	Water tank is empty; device has not finished preheating; steam outlet is blocked.	Refill the water tank; wait until the indicator is steady; clean the steam outlet and descale the steamer as instructed.
Water Leakage	Water tank is not installed securely; tank is overfilled; unsuitable water is being used.	Reinstall the water tank until it clicks into place; do not overfill; use distilled or purified water.
Wrinkles Remain	Fabric is not taut; the selected mode is unsuitable for the fabric.	Pull the fabric taut; use suction for sturdy fabrics; turn suction off for delicate fabrics.
Device Does Not Turn On	Power plug is disconnected; power outage; overheating protection is active; voltage is incorrect; device malfunction.	Check the power connection and outlet; allow the product to cool; confirm that the outlet supplies 110-120 V; contact the seller if the problem continues.