

How to Link the Static Library (.a) to an Atmel Studio 7.0 Project


The LCD panel static graphic libraries (.a) are located within the **KVB_LCD** project folder, alongside the **GUI** and evaluation files (.c and .h).

File Structure Overview

- **KVB_LCD.h** – Main **GUI** (Graphical User Interface) header file.
- **KVB_TEST.h** – Header file containing two evaluation/presentation functions tailored for different screen resolutions.
- **KVB_TEST.c** – Source file implementing the two resolution-dependent evaluation functions.
- **KVB_TEXT.h** – Header file dedicated to the text variables used in the evaluation code.
- **KVB_TEXT.c** – Source file containing the text variable definitions for the evaluation code.
- **libKVB_LCD_16bit_ATmega128_9325.a** – Static library file for the **ILI9325 LCD** panel (**320 x 240** resolution).
- **libKVB_LCD_16bit_ATmega128_9341.a** – Static library file for the **ILI9341 LCD** panel (**320 x 240** resolution).
- **libKVB_LCD_16bit_ATmega128_9481.a** – Static library file for the **ILI9481 LCD** panel (**480 x 320** resolution).
- **libKVB_LCD_16bit_ATmega128_9486.a** – Static library file for the **ILI9486 LCD** panel (**480 x 320** resolution).
- **libKVB_LCD_16bit_ATmega128_8009A.a** – Static library file for the **OTM8009A LCD** panel (**800 x 480** resolution).

Linker Configuration Steps

1. Open the target project's **Properties** by pressing **Alt + F7**.
2. Navigate to **Toolchain -> AVR/GNU Linker -> Libraries**.
3. In the upper window (**Libraries (-Wl,-l)**), click the **+** (**Add Item**) button and type the name of your library strictly **WITHOUT** the lib prefix and **WITHOUT** the .a extension. For instance, if your file is named **libKVB_LCD_16bit_ATmega128_9481.a**, enter exactly: **KVB_LCD_16bit_ATmega128_9481**. *Note: Only one graphic library must be added to the project configuration at a time.*
4. In the lower window (**Library search path (-L)**), click the **+** (**Add Item**) button and specify the directory path where your physical library file (e.g., **libKVB_LCD_16bit_ATmega128_9481.a**) is located.
5. Finally, navigate to your project's **main.c** file and uncomment one of the two evaluation functions depending on your display's resolution: **lcd_Test480x320Landscape()** or **lcd_Test320x240Landscape()**.

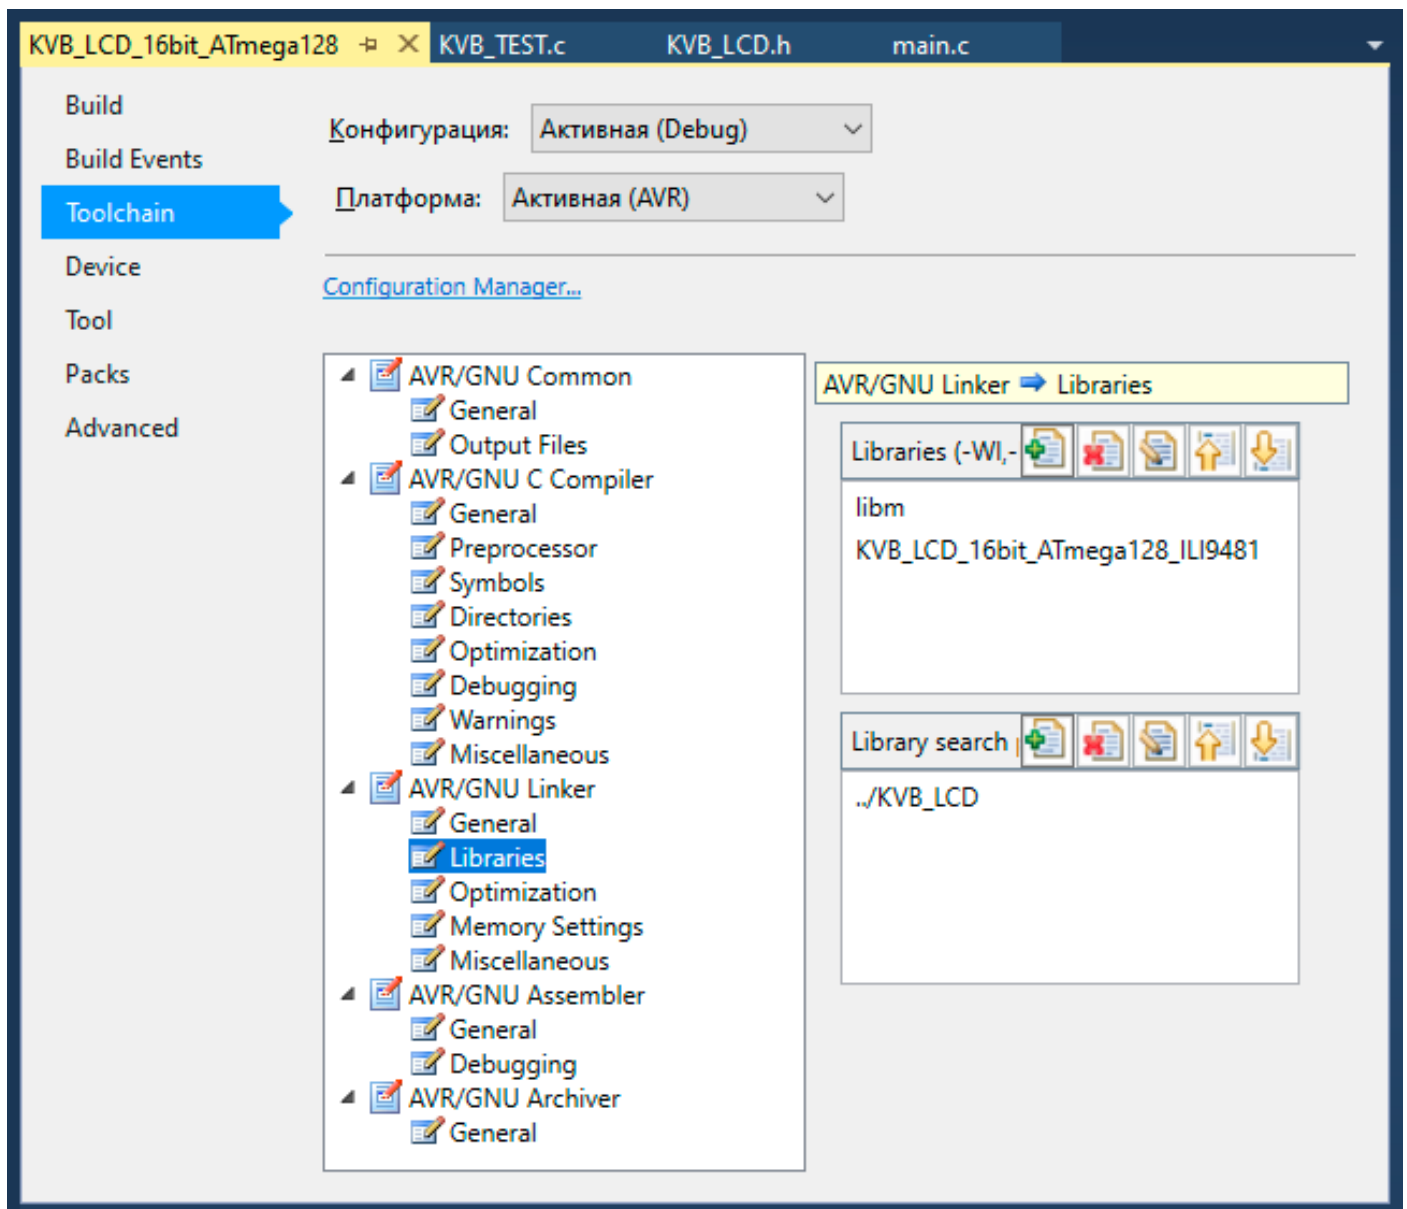

During the build process, **Atmel Studio 7.0** will automatically fetch and link the pre-compiled binary code from your specified library file (e.g., **libKVB_LCD_16bit_ATmega128_9481.a**).